



Form No. 3442-284 Rev B

**Count on it.**

# Parts Catalog

## **Greensmaster® eTriFlex 3370 Traction Unit**

Model No. 04590—Serial No. 408000000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


# Contents

|                                                      |    |
|------------------------------------------------------|----|
| Frame Assembly . . . . .                             | 4  |
| ROPS Assembly . . . . .                              | 5  |
| Platform Assembly . . . . .                          | 6  |
| Traction Pedal Assembly . . . . .                    | 7  |
| Brake Pedal Assembly . . . . .                       | 8  |
| Brake Actuator Assembly . . . . .                    | 9  |
| Brake Rod Assembly No. 137-2185 . . . . .            | 10 |
| Steering Assembly . . . . .                          | 11 |
| Wheel and Tire Assembly . . . . .                    | 12 |
| Wheel Spindle Assembly No. 119-4490 . . . . .        | 13 |
| Console Assembly . . . . .                           | 14 |
| Joystick Bracket Assembly No. 120-5280 . . . . .     | 15 |
| Seat Plate Assembly . . . . .                        | 16 |
| Top Battery Tray Assembly . . . . .                  | 17 |
| Side Battery Tray Assembly . . . . .                 | 18 |
| Traction Assembly . . . . .                          | 19 |
| RH Wheel Motor Assembly No. 127-1525 . . . . .       | 20 |
| Gearbox Assembly No. 127-1529 . . . . .              | 21 |
| LH Wheel Motor Assembly No. 127-1527 . . . . .       | 22 |
| Lift Assembly . . . . .                              | 23 |
| Suspension, Reel Motor and Basket Assembly . . . . . | 24 |
| Electric Reel Motor Assembly No. 138-8905 . . . . .  | 25 |
| Electric Motor Assembly . . . . .                    | 26 |
| Basket Assembly No. 132-9599 . . . . .               | 27 |
| Suspension Pin Position Assembly . . . . .           | 28 |
| Hood Assembly . . . . .                              | 29 |
| Hood Assembly No. 139-8317 . . . . .                 | 30 |
| Electrical Assembly . . . . .                        | 31 |
| Wire Harness Assembly No. 122-1620 . . . . .         | 33 |
| Controller Assembly . . . . .                        | 34 |
| Harness Bracket Assembly . . . . .                   | 35 |
| Suspension A-Arm Assembly . . . . .                  | 36 |
| Suspension Crossarm Assembly . . . . .               | 37 |
| Top Battery Installation Assembly . . . . .          | 38 |
| Battery Assembly No. 04070 . . . . .                 | 39 |
| Side Battery Installation Assembly . . . . .         | 40 |
| 1200 Watt Lithium Battery Charger Assembly . . . . . | 41 |
| Attachments and Accessories . . . . .                | 42 |

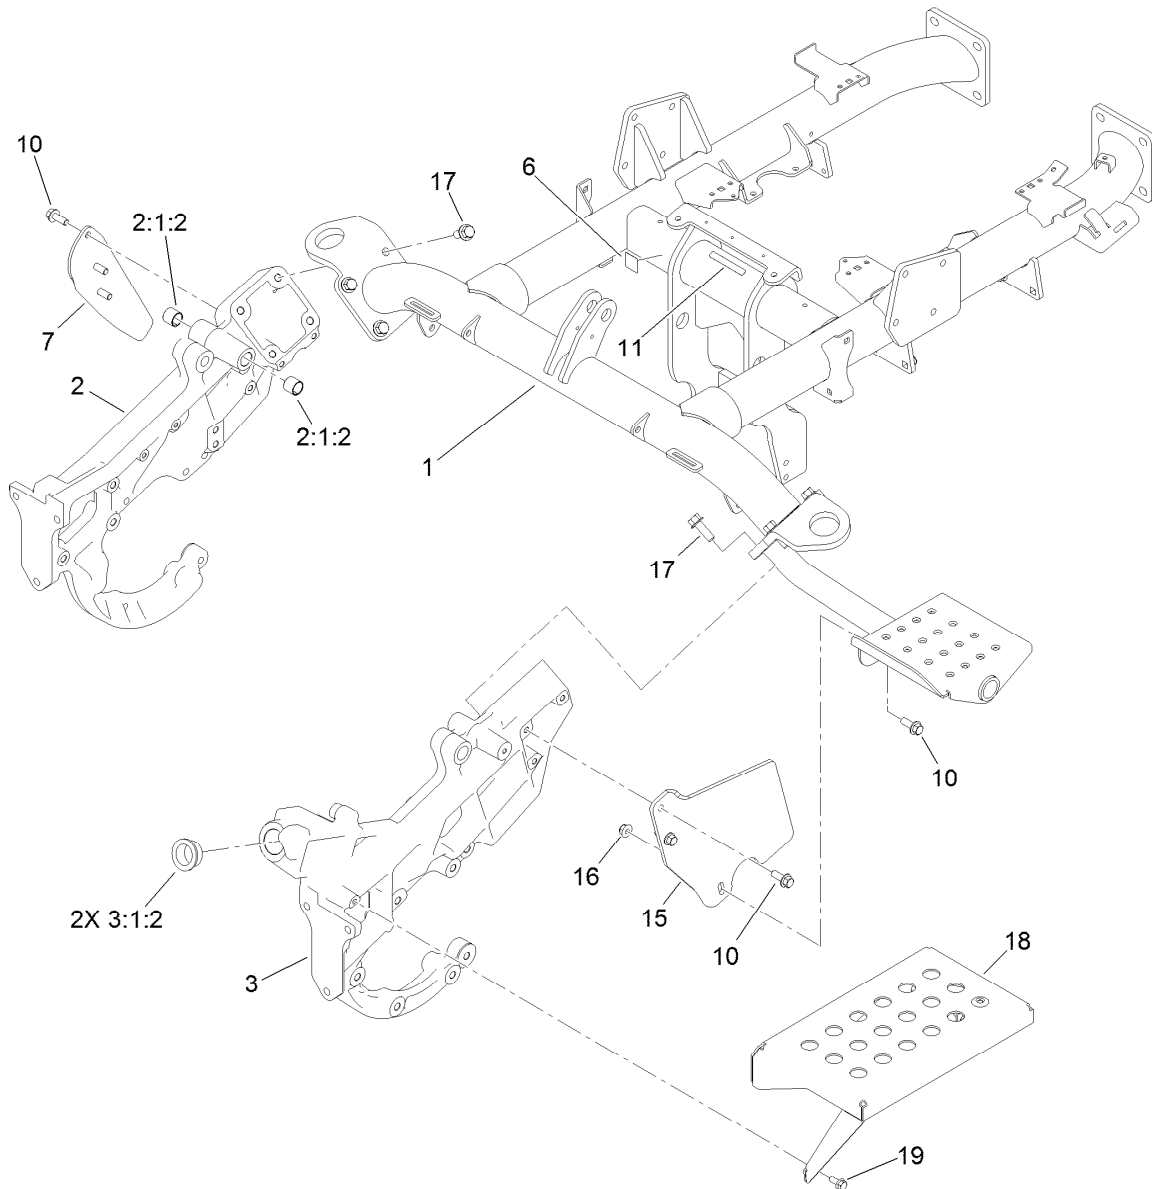


## Frame Assembly
 
| Ref.  | Part Number | Qty. | Description      |
|-------|-------------|------|------------------|
| 1     | 139-8585SP  | 1    | Frame ASM        |
| 2     | 139-8318    | 1    | Side Casting, RH |
| 2:1:2 | 94-9609     | 2    | Bushing-Straight |
| 3     | 139-8319    | 1    | Side Casting, LH |
| 3:1:2 | 60-0080     | 2    | Bushing          |
| 6     | 133-8095    | 1    | Decal-CE         |
| 7     | 133-0062-01 | 1    | Bracket-Jack     |
| 10    | 3234-42     | 6    | Screw-HHF        |
| 11    | 133-8061    | 1    | Decal-Warning    |
| 15    | 133-0004-01 | 1    | Bracket-Step     |
| 16    | 104-8301    | 1    | Nut-HF, NI       |
| 17    | 117-9035    | 8    | Screw-HHF        |
| 18    | 132-9994-01 | 1    | Step             |
| 19    | 3234-47     | 4    | Screw-HHF        |

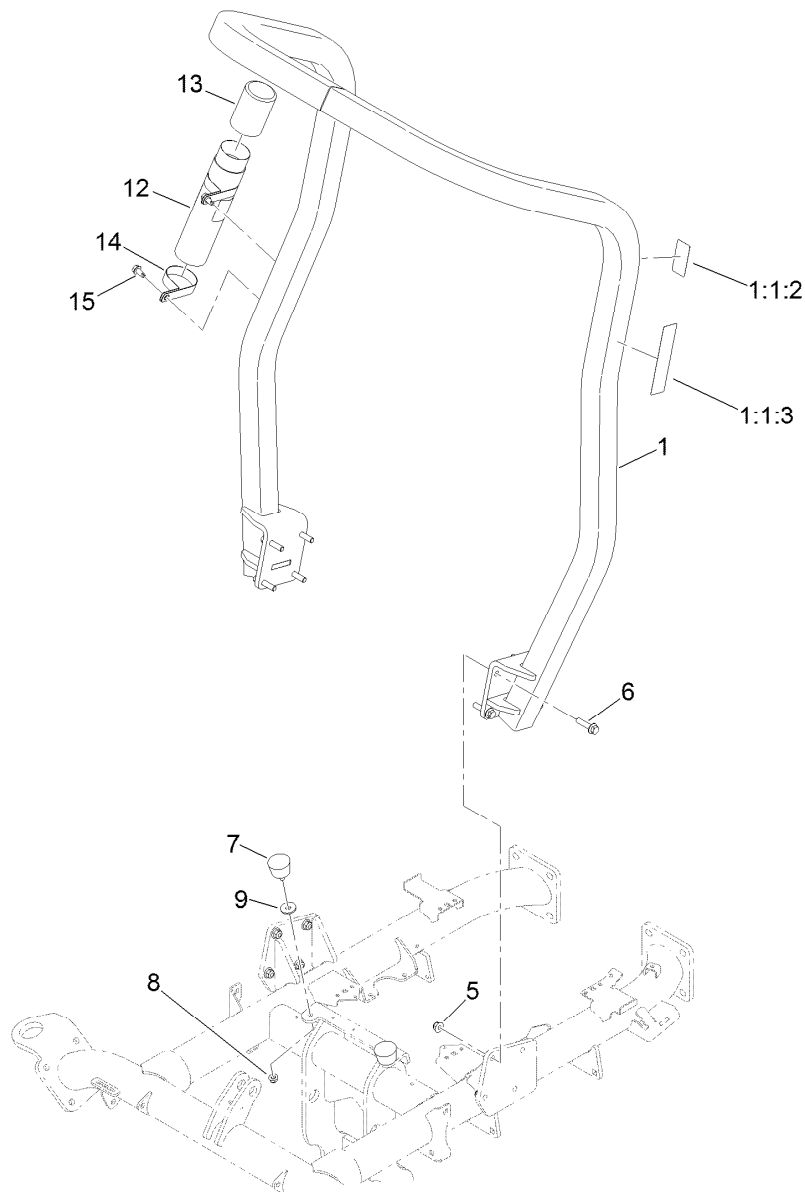

## ROPS Assembly

 
| Ref.  | Part Number | Qty. | Description   |
|-------|-------------|------|---------------|
| 1     | 139-8311    | 1    | ROPS ASM      |
| 1:1:2 | 115-8199    | 1    | Decal-ROPS    |
| 1:1:3 | 115-8226    | 1    | Decal-ROPS    |
| 5     | 104-8301    | 8    | Nut-HF, NI    |
| 6     | 137-7951    | 8    | Screw-HHF     |
| 7     | 68-3270     | 2    | Bumper-Rubber |
| 8     | 104-8300    | 2    | Nut-HF, NI    |
| 9     | 52-2861     | 2    | Washer        |
| 12    | 104-7050    | 1    | Tube-Manual   |
| 13    | 104-7048    | 1    | Cap-Housing   |
| 14    | 2412-133    | 2    | Clamp-R       |
| 15    | 32104-32    | 2    | Screw-HWH     |

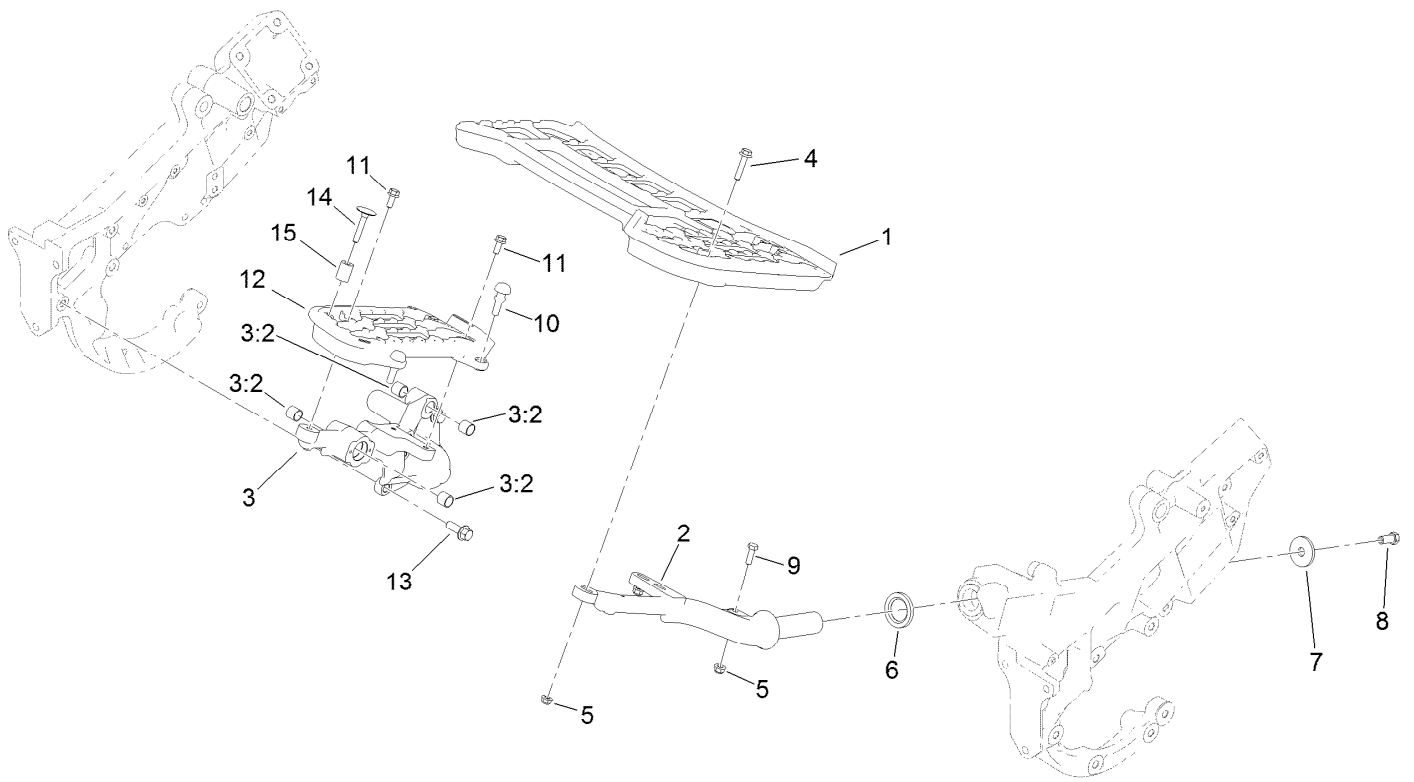

## Platform Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 137-7768    | 1    | Platform-LH          |
| 2    | 117-9006-01 | 1    | Support-Platform, LH |
| 3    | 132-9895    | 1    | Support-Platform, RH |
| 3:2  | 256-311     | 4    | Bushing-Split        |
| 4    | 115-1794    | 3    | Screw-HHF            |
| 5    | 104-8300    | 4    | Nut-HF, NI           |
| 6    | 94-8946     | 1    | Washer-Thrust        |
| 7    | 84-1560     | 1    | Washer-Thrust        |

 
| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 8    | 324-4       | 1    | Screw-HH       |
| 9    | 322-5       | 1    | Screw-HH       |
| 10   | 117-9072    | 2    | Bumper-Rubber  |
| 11   | 3234-47     | 3    | Screw-HHF      |
| 12   | 117-9008    | 1    | Platform-RH    |
| 13   | 117-9035    | 3    | Screw-HHF      |
| 14   | 115-8240    | 1    | Screw-Elevator |
| 15   | 119-0718    | 1    | Spacer         |

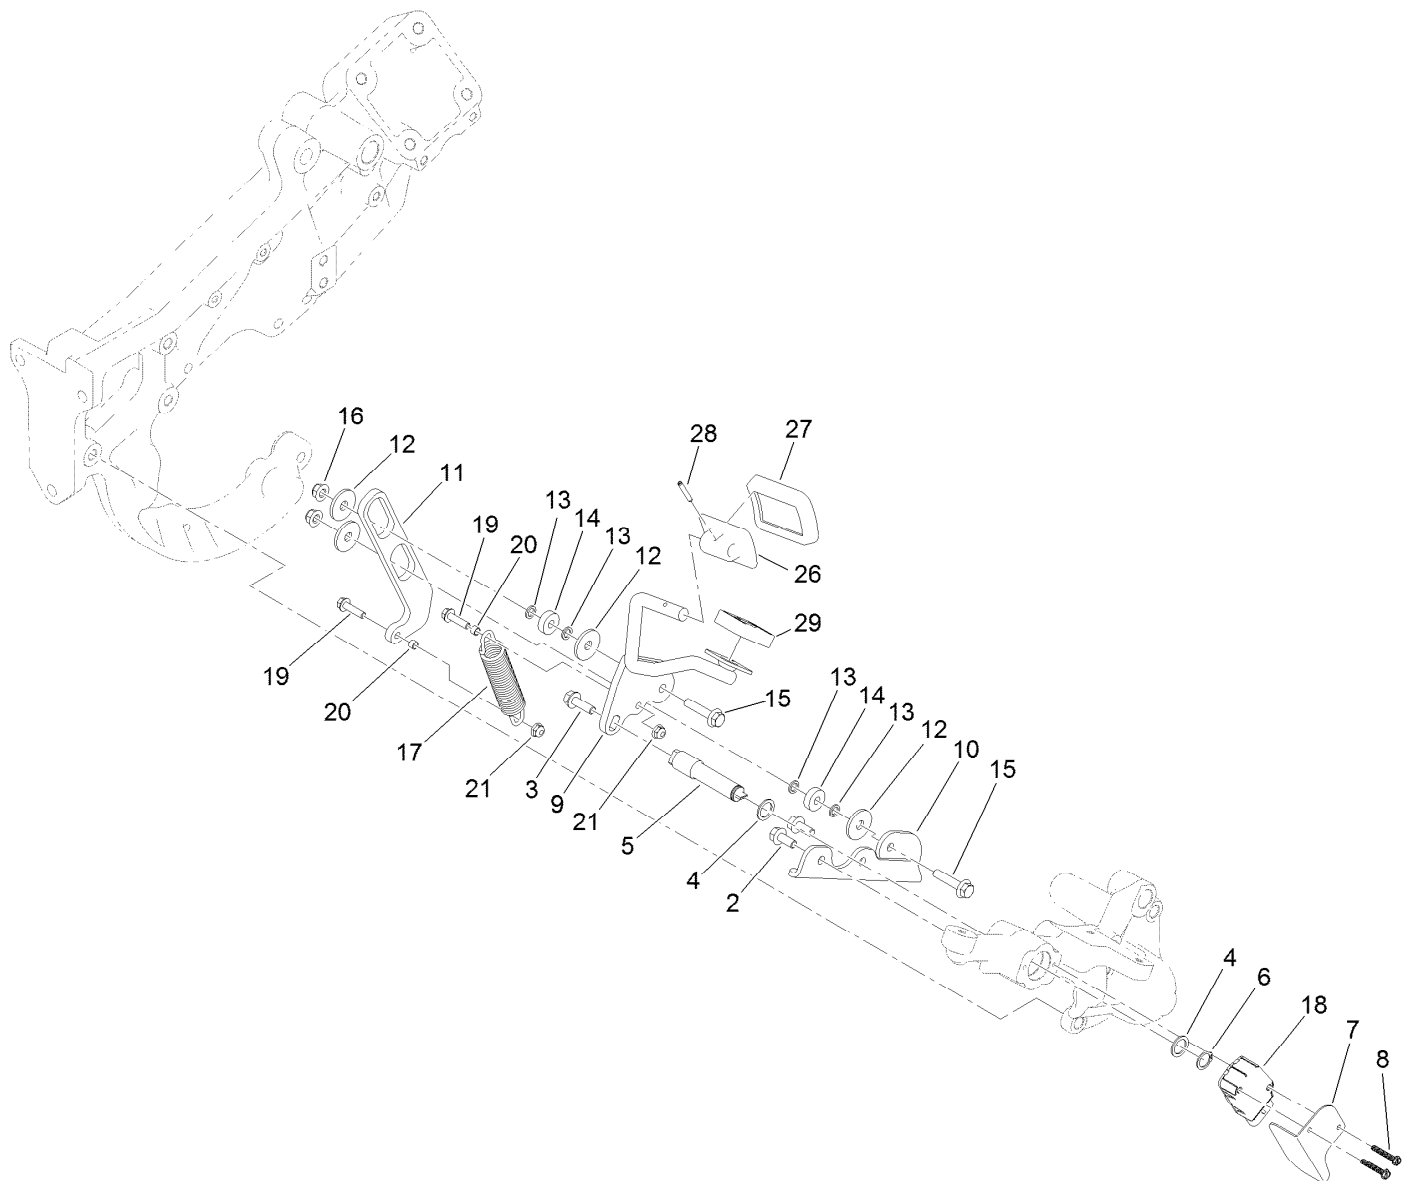

## Traction Pedal Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 2    | 98-9940     | 2    | Screw-HHF               |
| 3    | 115-5142    | 1    | Screw-HHF               |
| 4    | 7-3590      | 2    | Washer                  |
| 5    | 132-9852    | 1    | Shaft-Pedal             |
| 6    | 32151-62    | 1    | Ring-Retaining          |
| 7    | 121-7035    | 1    | Shield-Sensor           |
| 8    | 692501      | 2    | Screw-SHWH              |
| 9    | 137-7814-01 | 1    | Rod-Traction            |
| 10   | 137-7811-01 | 1    | Bracket-Control, Motion |
| 11   | 139-8405    | 1    | Link-Connecting         |
| 12   | 107675      | 4    | Washer                  |
| 13   | 75-5470     | 4    | Spacer-Bearing          |

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 14   | 251-259     | 2    | Bearing-Ball       |
| 15   | 115-1794    | 2    | Screw-HHF          |
| 16   | 104-8300    | 2    | Nut-HF, NI         |
| 17   | 137-7944    | 1    | Spring-Extension   |
| 18   | 122-0917    | 1    | Sensor-Position    |
| 19   | 120-4654    | 2    | Screw-HHF          |
| 20   | 121-2015    | 2    | Spacer             |
| 21   | 104-7201    | 2    | Nut-HF, NI         |
| 26   | 117-9507    | 1    | Pedal-Accelerator  |
| 27   | 74-9100     | 1    | Pad-Pedal, Forward |
| 28   | 32121-45    | 1    | Pin-Spring         |
| 29   | 74-9110     | 1    | Pad-Pedal, Reverse |

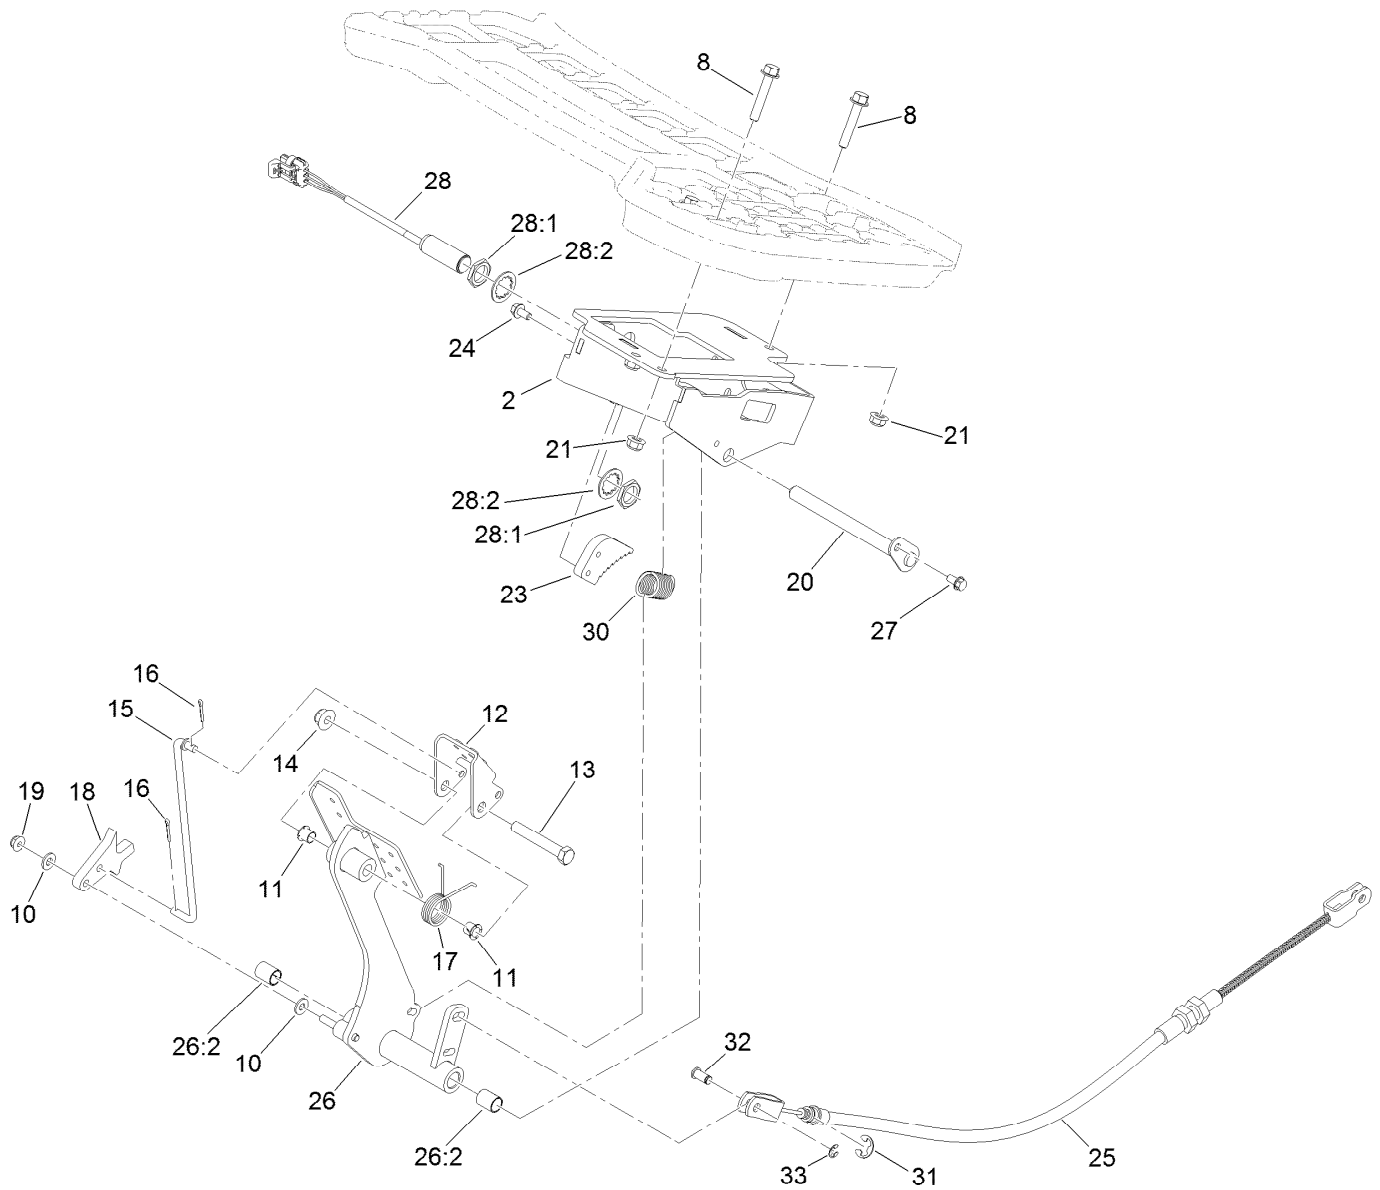

## Brake Pedal Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 2    | 132-9890-03 | 1    | Support-Pedal          |
| 8    | 94-5780     | 3    | Screw-HWH              |
| 10   | 3256-22     | 2    | Washer-Flat            |
| 11   | 52-2891     | 2    | Bushing-Flanged, Nylon |
| 12   | 99-7963-03  | 1    | Pedal-Park             |
| 13   | 323-12      | 1    | Screw-HH               |
| 14   | 104-8301    | 1    | Nut-HF, NI             |
| 15   | 115-0129    | 1    | Rod-Pawl, Brake        |
| 16   | 3272-6      | 2    | Pin-Cotter             |
| 17   | 99-7140     | 1    | Spring-Torsion         |
| 18   | 117-0238    | 1    | Detent                 |
| 19   | 104-7201    | 1    | Nut-HF, NI             |
| 20   | 133-0089    | 1    | Pivot-Pedals           |
| 21   | 104-8300    | 3    | Nut-HF, NI             |
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 23   | 99-7214     | 1    | Pawl-Brake                  |
| 24   | 119-1065    | 2    | Screw-HWH                   |
| 25   | 137-7770    | 1    | Cable-Brake                 |
| 26   | 137-8109    | 1    | Brake Pedal ASM             |
| 26:2 | 133-0090    | 2    | Bushing-Split               |
| 27   | 32144-4     | 1    | Screw-HWH                   |
| 28   | 115-5300    | 1    | Proximity Switch ASM        |
| 28:1 | 117-3207    | 2    | Nut-Hex                     |
| 28:2 | 117-3208    | 2    | Washer-Lock, Internal Tooth |
| 30   | 136-7316    | 1    | Spring-Extension            |
| 31   | 32120-47    | 1    | Ring-Retaining, External    |
| 32   | 109-6887    | 1    | Pin-Clevis                  |
| 33   | 701197      | 1    | E-Ring                      |

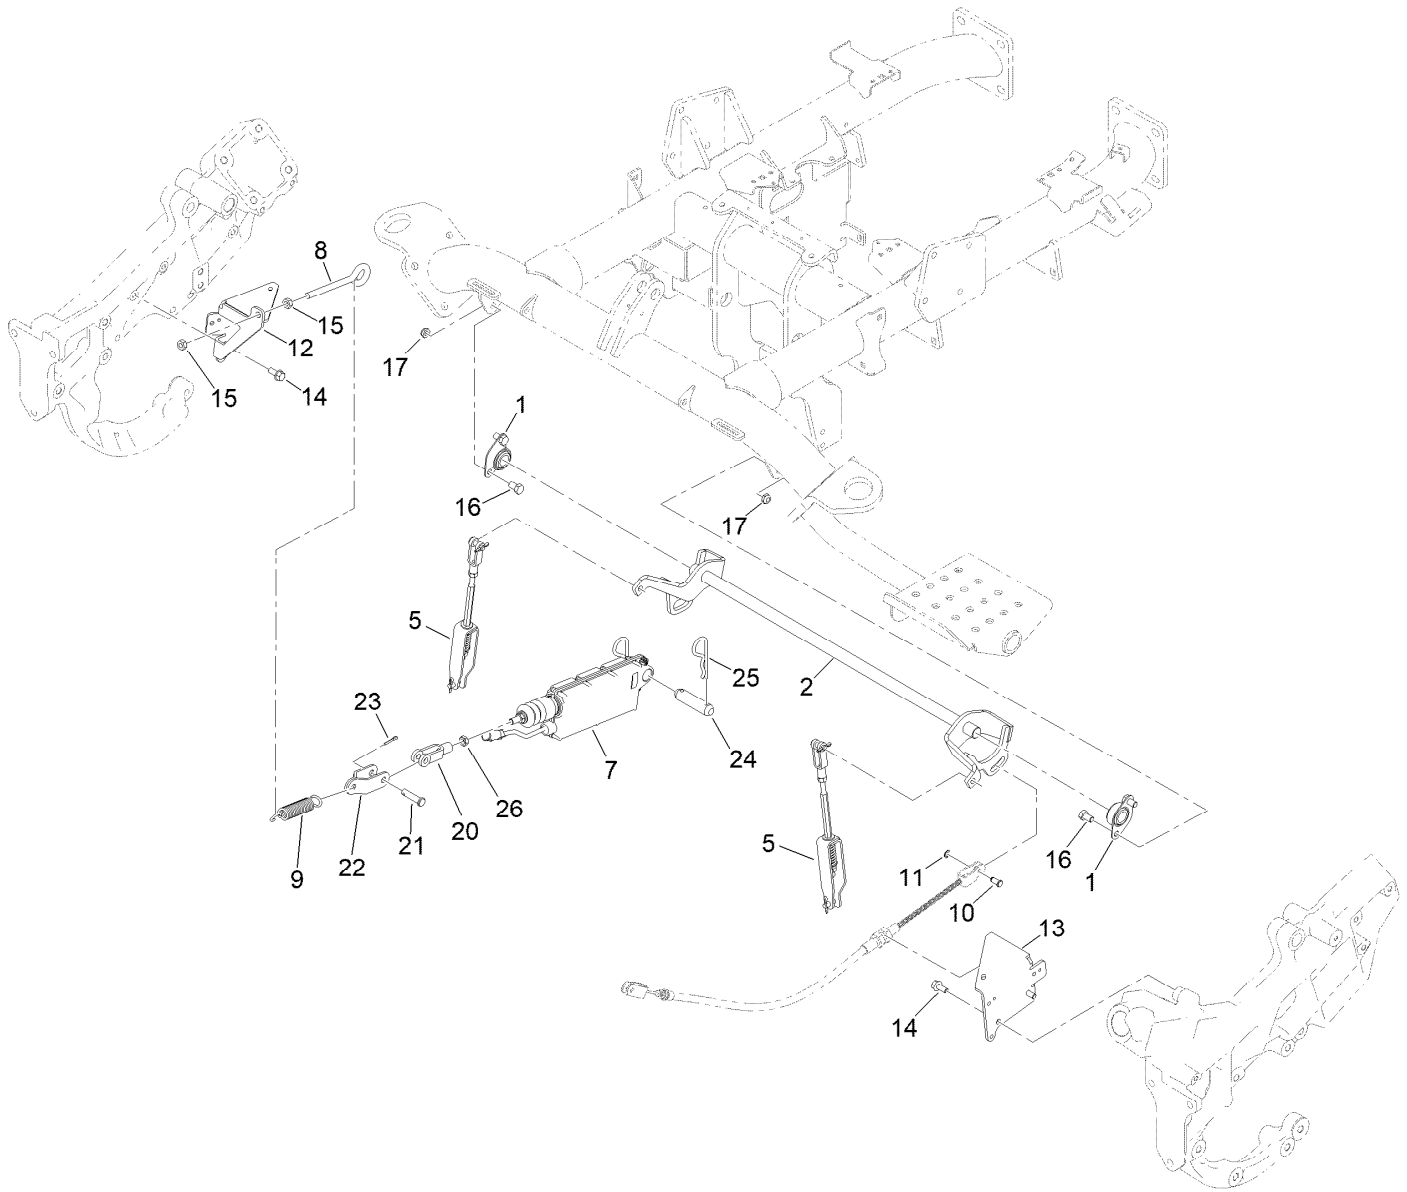


## Brake Actuator Assembly
 
| Ref. | Part Number | Qty. | Description          | Ref. | Part Number | Qty. | Description         |
|------|-------------|------|----------------------|------|-------------|------|---------------------|
| 1    | 1-633102    | 2    | Bearing-Flange, Side | 15   | 3217-7      | 2    | Nut-Hex             |
| 2    | 145-0060-03 | 1    | Cross Shaft-Brake    | 16   | 323-34      | 4    | Screw-HH            |
| 5    | 137-2185    | 2    | Brake Rod ASM        | 17   | 3296-59     | 4    | Nut-Lock, NI        |
| 7    | 137-2160    | 1    | Actuator-Brake       | 20   | 1-633131    | 1    | Yoke-Linkage, Brake |
| 8    | 137-8026    | 1    | Bolt-Eye             | 21   | 283-10      | 1    | Pin-Clevis          |
| 9    | 93-5985     | 1    | Spring-Extension     | 22   | 137-7838    | 1    | Link ASM            |
| 10   | 109-6887    | 1    | Pin-Clevis           | 23   | 3272-10     | 1    | Pin-Cotter          |
| 11   | 701197      | 1    | E-Ring               | 24   | 27-4240     | 1    | Pin-Cylinder        |
| 12   | 137-7790-03 | 1    | Bracket-Spring       | 25   | 3290-256    | 2    | Pin-Hair            |
| 13   | 137-7769-03 | 1    | Bracket-Cable        | 26   | 3220-3      | 1    | Nut-HJ              |
| 14   | 98-9940     | 4    | Screw-HHF            |      |             |      |                     |

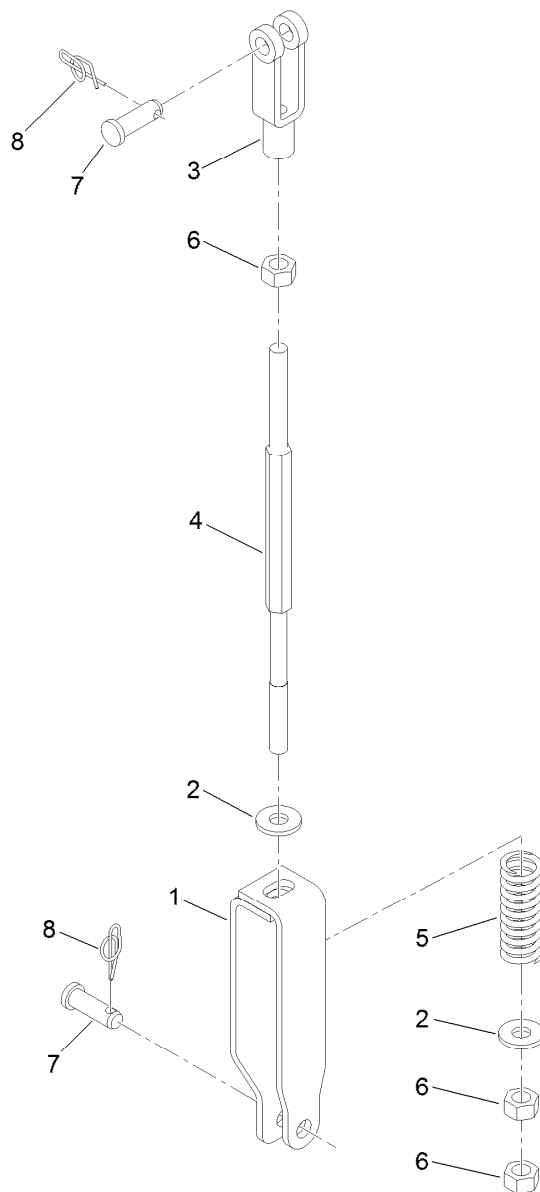

## Brake Rod Assembly No. 137-2185

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 137-2180    | 1    | Brake Clevis ASM         |
| 2    | 120-9646    | 2    | Washer-Flat              |
| 3    | 282-2       | 1    | Yoke                     |
| 4    | 137-8056    | 1    | Rod-Brake                |
| 5    | 137-8085    | 1    | Spring-Seat, Compression |
| 6    | 3219-2      | 3    | Nut-Hex                  |
| 7    | 283-1       | 2    | Pin-Clevis               |
| 8    | 116-6639    | 2    | Pin-Cotter, Locking      |

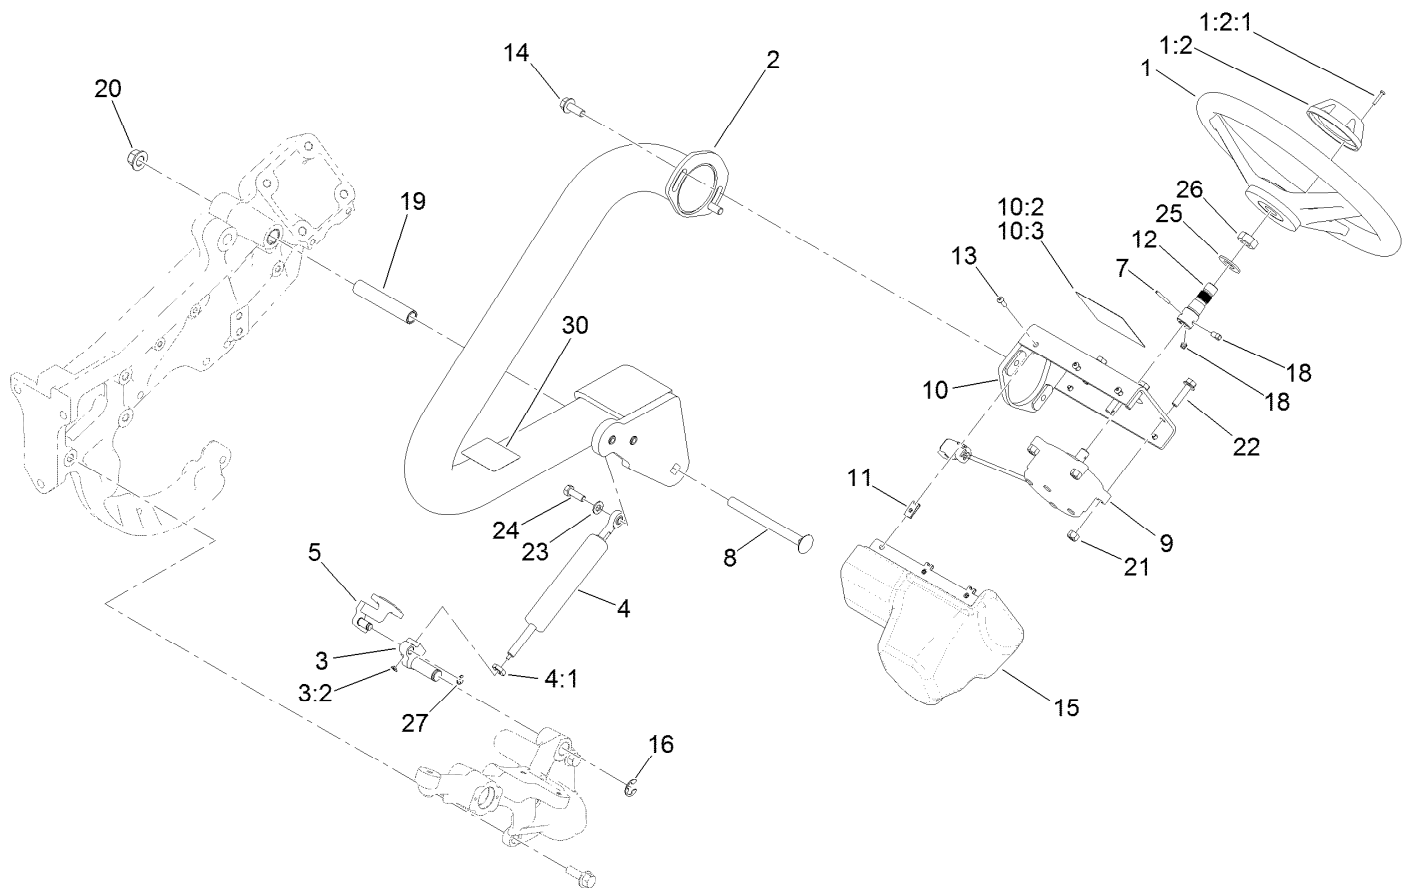

## Steering Assembly

| Ref.  | Part Number | Qty. | Description            |
|-------|-------------|------|------------------------|
| 1     | 75-0560     | 1    | Steering Wheel ASM     |
| 1:2   | 68-5140     | 1    | Cap-Wheel, Steering    |
| 1:2:1 | 32144-21    | 1    | Screw                  |
| 2     | 139-8582-01 | 1    | Steering Arm ASM [red] |
| 3     | 133-9030    | 1    | Pivot Lever ASM        |
| 3:2   | 133-8995    | 1    | Bushing                |
| 4     | 133-9036    | 1    | Cylinder-Gas           |
| 4:1   | 112-8617    | 1    | Nut-Hex                |
| 5     | 138-6456    | 1    | Lever (Mach)           |
| 7     | 933156      | 1    | Pin-Roll               |
| 8     | 114-7723    | 1    | Screw-CARR             |
| 9     | 132-9935    | 1    | Steering Unit          |
| 10    | 137-8092    | 1    | Steering Mount ASM     |
| 10:2  | 139-8320    | 1    | Decal-Danger           |
| 10:3  | 139-8321    | 1    | Decal-Danger, CE       |
| 11    | 3290-277    | 6    | Nut-Speed              |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 12   | 136-4262    | 1    | Shaft-Adapter, Steering |
| 13   | 3274-39     | 6    | Screw-HSBH              |
| 14   | 3234-42     | 2    | Screw-HHF               |
| 15   | 119-9300    | 1    | Cover-Valve, Steering   |
| 16   | 32120-19    | 1    | E-Ring                  |
| 18   | 126-3824    | 2    | Screw-Set, SQH          |
| 19   | 117-9002    | 1    | Spacer                  |
| 20   | 99-5107     | 1    | Nut-Lock                |
| 21   | 3296-29     | 4    | Nut-Lock, NI            |
| 22   | 119-4036    | 4    | Screw-HHF               |
| 23   | 3256-23     | 1    | Washer-Plain            |
| 24   | 322-5       | 1    | Screw-HH                |
| 25   | 3256-27     | 1    | Washer-Flat             |
| 26   | 3296-33     | 1    | Nut-Lock, NI            |
| 27   | 701197      | 1    | E-Ring                  |
| 30   | 119-9346    | 1    | Decal-Arm, Steering     |

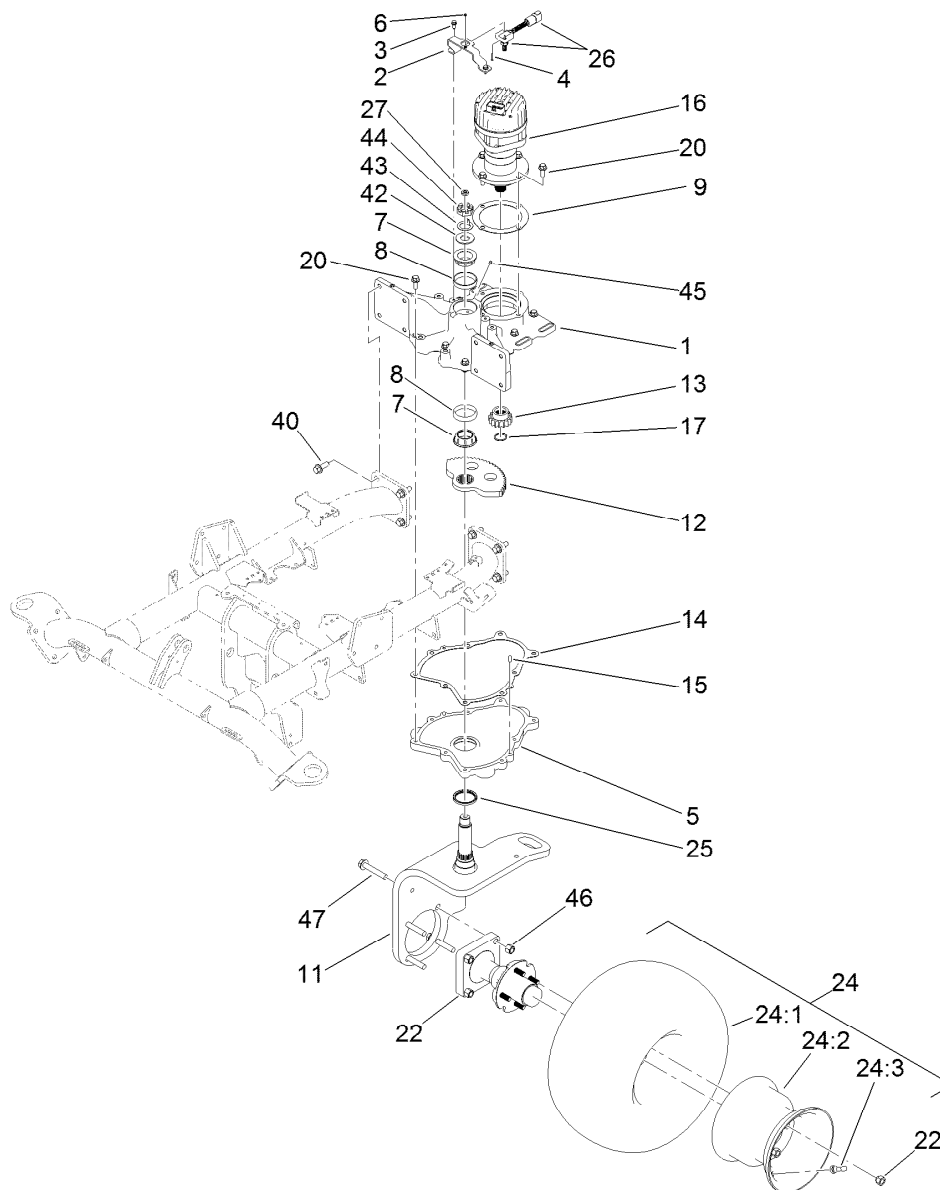

## Wheel and Tire Assembly


| Ref. | Part Number | Qty. | Description              | Ref. | Part Number | Qty. | Description                                  |
|------|-------------|------|--------------------------|------|-------------|------|----------------------------------------------|
| 1    | 139-8314    | 1    | Housing-Steering         | 22   | 119-4490    | 1    | Wheel Spindle ASM                            |
| 2    | 137-7868-03 | 1    | Bracket-Sensor, Steering | 24   |             | 1    | Wheel And Tire ASM ●                         |
| 3    | 32144-10    | 2    | Screw-HWH                | 24:1 | 120-2783    | 1    | Tire                                         |
| 4    | 3290-313    | 2    | Screw-SPH                | 24:2 | 217-60      | 1    | Rim                                          |
| 5    | 137-8166-03 | 1    | Housing                  | 24:3 | 232-27      | 1    | Stem-Valve                                   |
| 6    | 3296-52     | 2    | Nut-Lock, NI             | 25   | 108-7019    | 1    | Seal-Shaft                                   |
| 7    | 107-7589    | 2    | Cone-Bearing (W/ Seal)   | 26   | 122-0914    | 1    | Sensor-Rotary,<br>Body/Magnet Matched<br>Set |
| 8    | 107-7590    | 2    | Cup-Bearing              | 27   | 112-8617    | 1    | Nut-Hex                                      |
| 9    | 133-0347    | 1    | Gasket                   | 40   | 117-9035    | 8    | Screw-HHF                                    |
| 11   | 139-8313    | 1    | Fork-Caster              | 42   | 137-8171    | 1    | Washer                                       |
| 12   | 137-8170    | 1    | Gear-Spur, 64T           | 43   | 137-7943    | 1    | Washer-Tang                                  |
| 13   | 133-0346    | 1    | Pinion-16T               | 44   | 137-7942    | 1    | Nut-Castle                                   |
| 14   | 133-0348    | 1    | Gasket                   | 45   | 302-59      | 1    | Plug-EXT Hex Spl                             |
| 15   | 136-2667    | 2    | Pin-Dowel                | 46   | 3296-23     | 4    | Nut-Lock, NI                                 |
| 16   | 133-0349    | 1    | Steering Unit ASM        | 47   | 3234-40     | 4    | Screw-HF                                     |
| 17   | 32120-2     | 1    | Ring-Retaining           |      |             |      |                                              |
| 20   | 3234-42     | 13   | Screw-HHF                |      |             |      |                                              |

 ● Not serviced separately

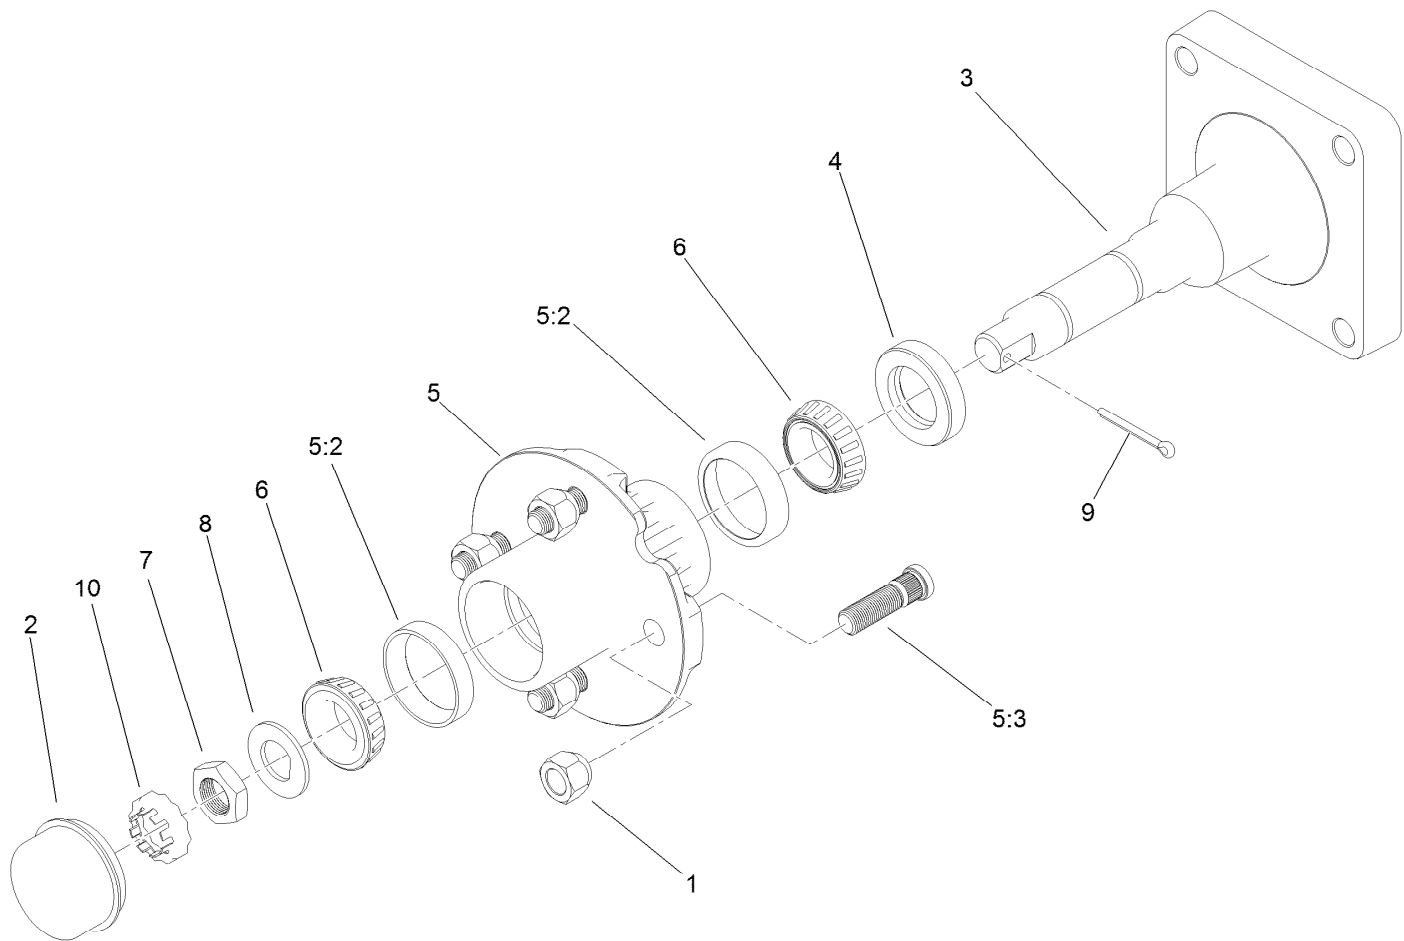


## Wheel Spindle Assembly No. 119-4490
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 242-50      | 4    | Nut-Lug              |
| 2    | 241-119     | 1    | Cap-Dust             |
| 3    | 112-7173    | 1    | Spindle              |
| 4    | 112-1690    | 1    | Seal-Oil             |
| 5    | 117-9093    | 1    | Hub ASM              |
| 5:2  | 254-72      | 2    | Bearing-Cup, Tapered |
| 5:3  | 114-3918    | 4    | Stud-Wheel           |
| 6    | 254-92      | 2    | Cone-Bearing, Outer  |
| 7    | 117-8260    | 1    | Nut                  |
| 8    | 117-8259    | 1    | Washer-Spindle       |
| 9    | 3272-18     | 1    | Pin-Cotter           |
| 10   | 93-0307     | 1    | Nut-Lock, Retainer   |

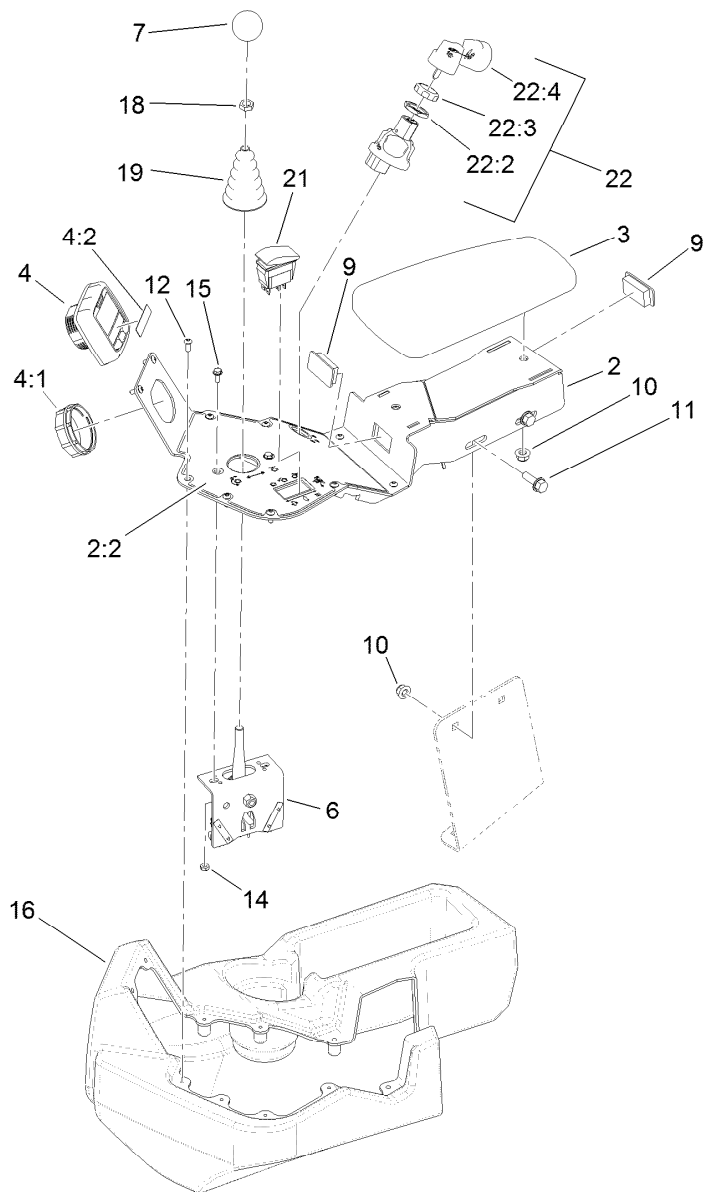


## Console Assembly
 
| Ref. | Part Number | Qty. | Description        | Ref. | Part Number | Qty. | Description             |
|------|-------------|------|--------------------|------|-------------|------|-------------------------|
| 2    | 137-8094    | 1    | Console ASM        | 12   | 115-9830    | 10   | Screw-HSBH              |
| 2:2  | 137-8058    | 1    | Decal-Console      | 14   | 3296-12     | 2    | Nut-Lock, NI            |
| 3    | 108-7602    | 1    | Rest-Arm           | 15   | 3290-321    | 2    | Screw-HWH               |
| 4    | 120-6310    | 1    | LCD Display ASM    | 16   | 132-9955    | 1    | Cover-Console           |
| 4:1  | 120-4630    | 1    | Nut-Display        | 18   | 3218-3      | 1    | Nut-Jam                 |
| 4:2  | 120-6311    | 1    | Decal-Display      | 19   | 93-5961     | 1    | Boot-Lever              |
| 6    | 120-5280    | 1    | Bracket-Joystick   | 21   | 112-3530    | 1    | Switch-Rocker, On-On-On |
| 7    | 120-9752    | 1    | Knob-Round, Yellow | 22   | 106-5269    | 1    | Ignition Switch ASM     |
| 9    | 99-7420     | 2    | Plug-Hole          | 22:2 | 108-8660    | 1    | Nut-Mounting            |
| 10   | 104-8300    | 4    | Nut-HF, NI         | 22:3 | 106-5270    | 1    | Ignition Key Set        |
| 11   | 3234-29     | 2    | Screw-HHF          | 22:4 | 108-8659    | 1    | Washer-Backup           |

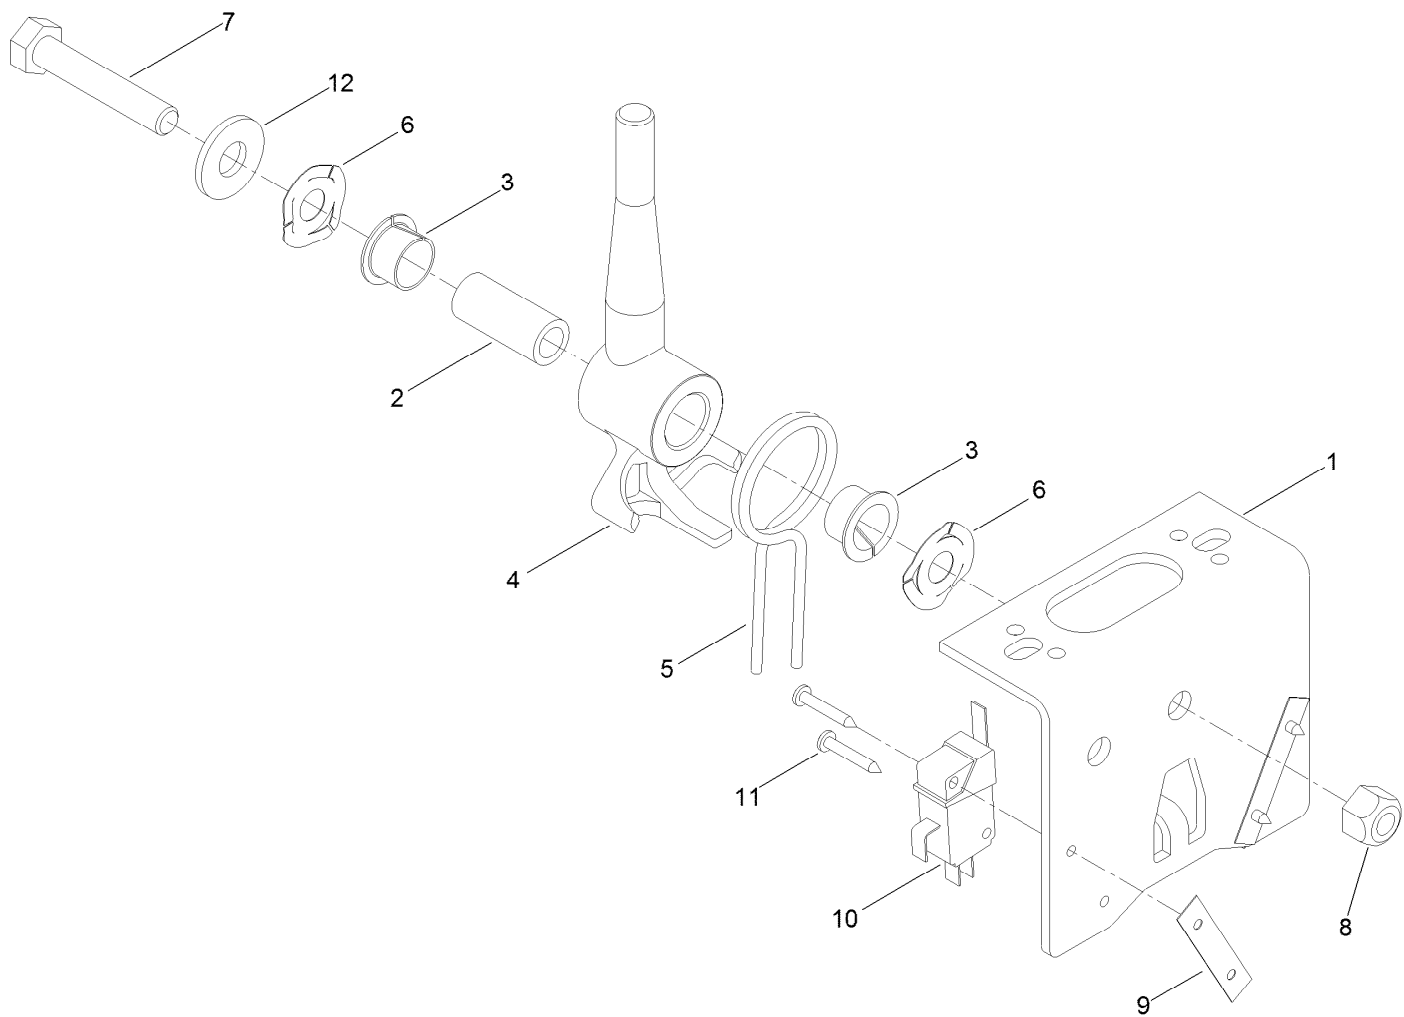


## Joystick Bracket Assembly No. 120-5280
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 115-5357-03 | 1    | Bracket-Joystick      |
| 2    | 106-4192    | 1    | Spacer                |
| 3    | 93-5547     | 2    | Bushing-Nylon         |
| 4    | 119-3540    | 1    | Hub-Pivot, Joystick   |
| 5    | 105-8289    | 1    | Spring-Torsion        |
| 6    | 106-4193    | 2    | Washer-Finger, Spring |
| 7    | 322-9       | 1    | Screw-HH              |
| 8    | 3296-29     | 1    | Nut-Lock, NI          |
| 9    | 3290-354    | 2    | Nut-Speed             |
| 10   | 108-6496    | 2    | Switch (W/Boot)       |
| 11   | 95-3003     | 4    | Screw-PPHTF           |
| 12   | 3256-3      | 1    | Washer-Flat           |

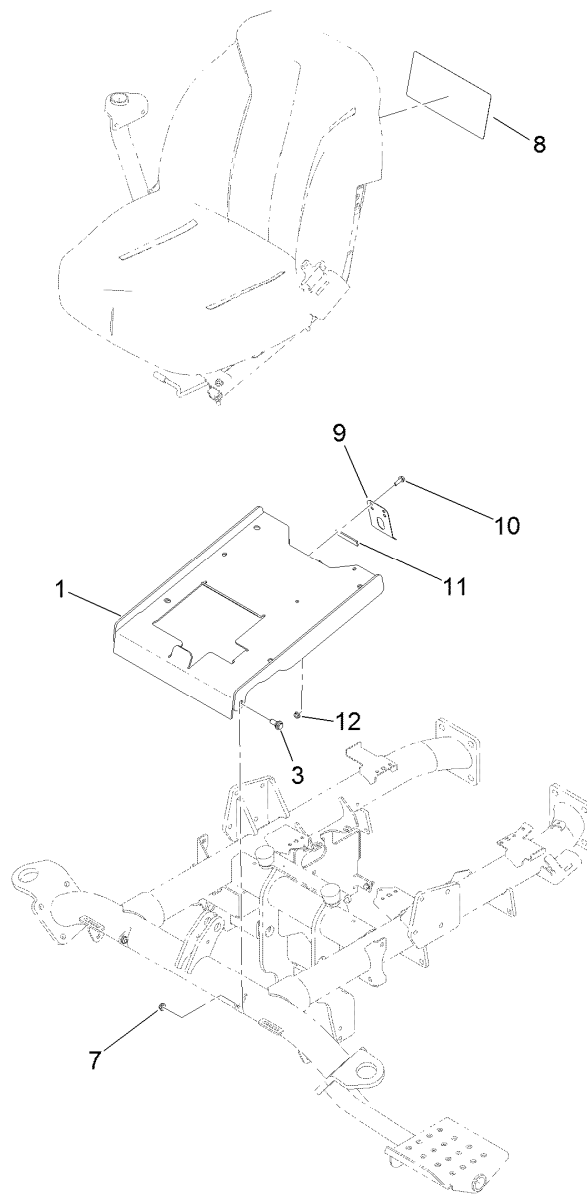

## Seat Plate Assembly

 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 139-8552-03 | 1    | Seat Plate ASM [black] |
| 3    | 94-7582     | 2    | Bolt-Shoulder          |
| 7    | 3296-59     | 2    | Nut-Lock, NI           |
| 8    | 137-8052    | 1    | Decal-Service          |
| 9    | 139-8557    | 1    | Latch-Seat             |
| 10   | 115-5103    | 2    | Screw-HHF              |
| 11   | 120-5753    | 1    | Strip-Foam             |
| 12   | 104-7201    | 2    | Nut-HF, NI             |

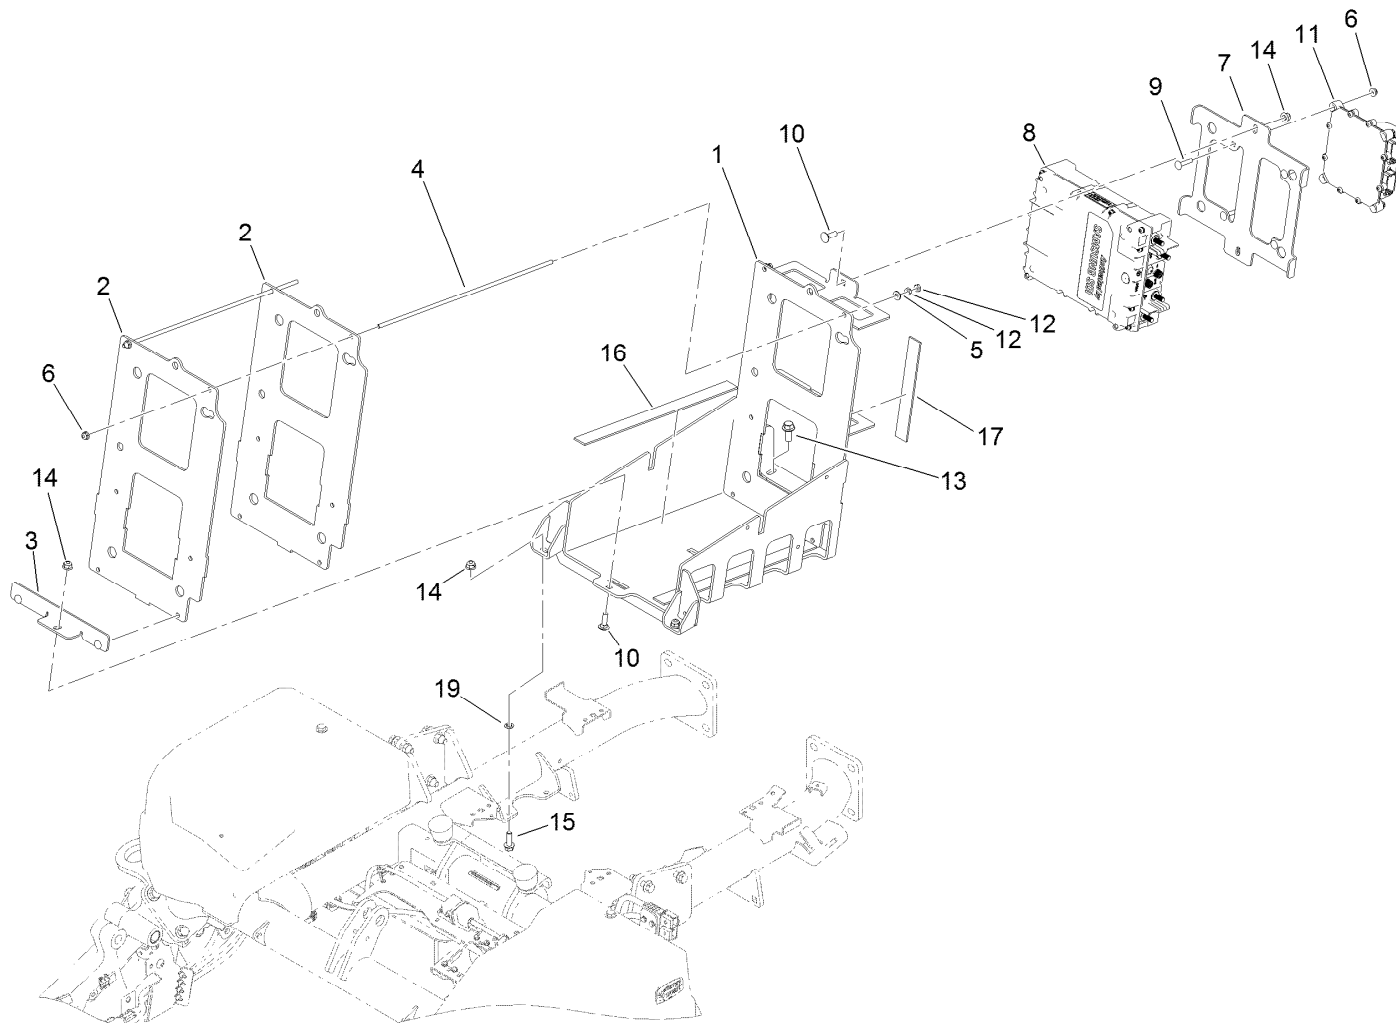

## Top Battery Tray Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 137-7996-03 | 1    | Main Battery ASM     |
| 2    | 137-8011-03 | 2    | Support-Battery      |
| 3    | 137-8192-03 | 1    | Clamp-Battery        |
| 4    | 137-8009    | 2    | Rod-Support, Battery |
| 5    | 3256-22     | 2    | Washer-Flat          |
| 6    | 104-7201    | 6    | Nut-HF, NI           |
| 7    | 137-8007-03 | 1    | Bracket-Controller   |
| 8    | 137-9651    | 1    | Controller           |
| 9    | 3229-3      | 4    | Screw-CARR           |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 3230-2      | 3    | Bolt-CARR           |
| 11   | 122-1683    | 1    | Controller-Tec 2402 |
| 12   | 3218-1      | 4    | Nut-Jam             |
| 13   | 3234-42     | 2    | Screw-HHF           |
| 14   | 104-8300    | 5    | Nut-HF, NI          |
| 15   | 3234-29     | 2    | Screw-HHF           |
| 16   | 137-8082    | 2    | Strip-Foam          |
| 17   | 137-8083    | 2    | Strip-Foam          |
| 19   | 109-5667    | 2    | Nut-Push            |

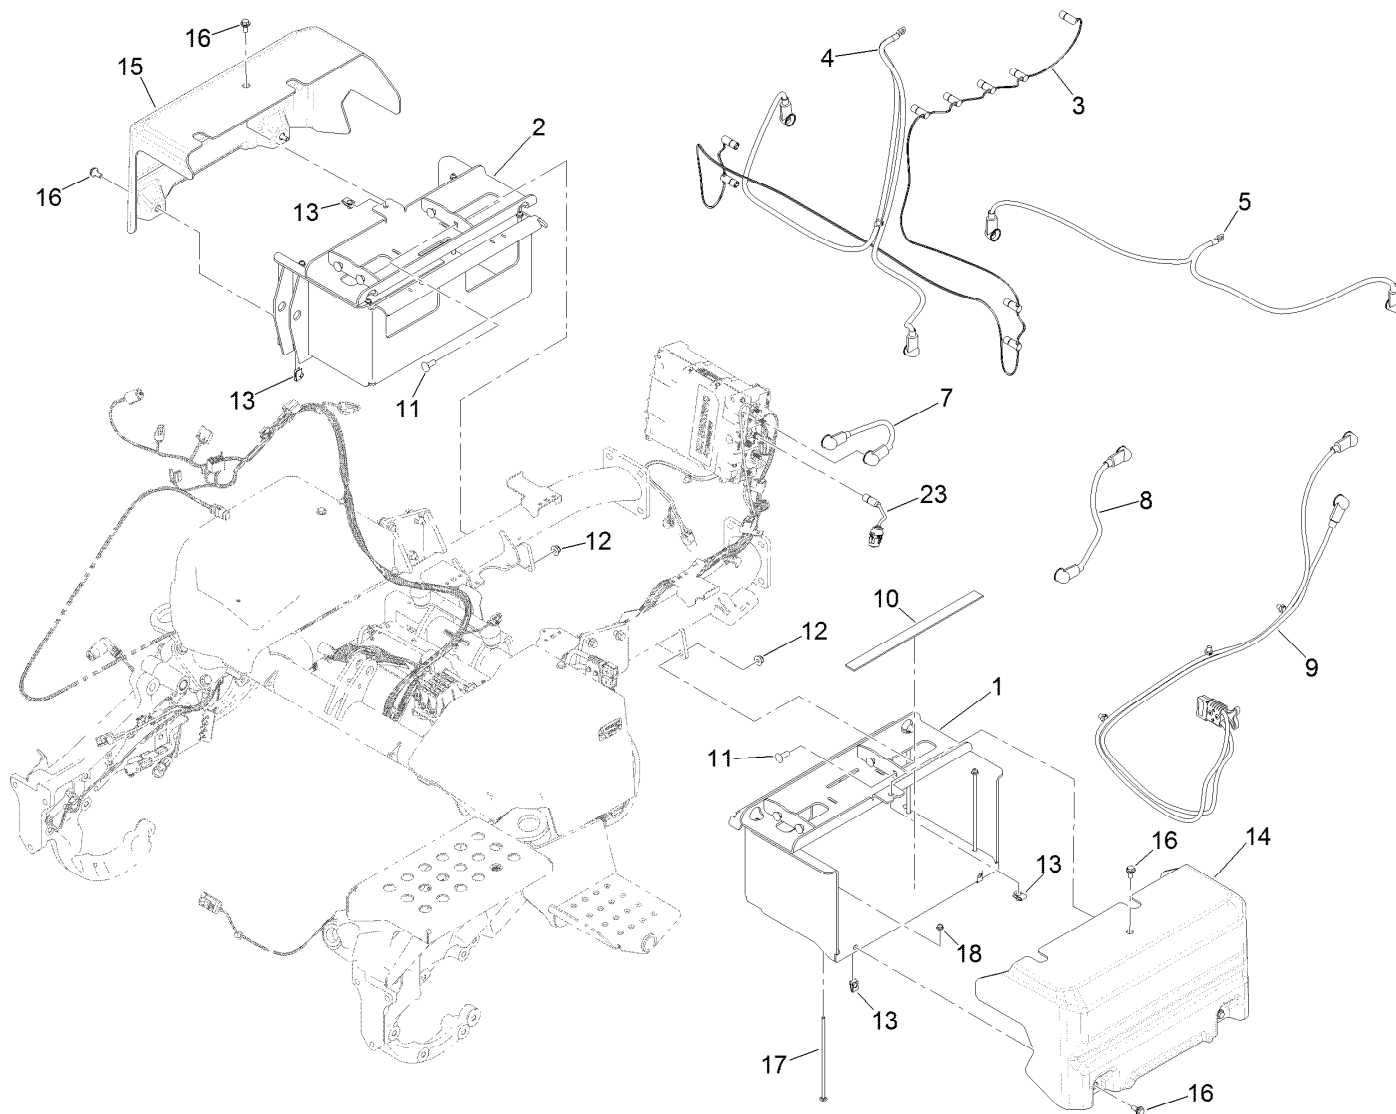

## Side Battery Tray Assembly

| Ref. | Part Number | Qty. | Description                          |
|------|-------------|------|--------------------------------------|
| 1    | 137-8104-01 | 1    | Tray-Battery                         |
| 2    | 137-8105-01 | 1    | Tray-Battery, RH                     |
| 3    | 122-1511    | 1    | Harness-Wire, Samsung Interface, M/S |
| 4    | 122-1517    | 1    | Cable-Battery, Positive              |
| 5    | 122-1518    | 1    | Cable-Battery, Negative              |
| 7    | 122-1664    | 1    | Cable-Battery, Positive              |
| 8    | 122-1564    | 1    | Cable-Battery, Negative              |
| 9    | 122-1565    | 1    | Cable-Battery, Pos And Neg           |
| 10   | 137-8082    | 2    | Strip-Foam                           |
 
| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 11   | 3231-22     | 8    | Screw-CARR                      |
| 12   | 104-8301    | 8    | Nut-HF, NI                      |
| 13   | 112-3306    | 6    | Nut                             |
| 14   | 137-8046    | 1    | Cover-Li, LH                    |
| 15   | 137-8169    | 1    | Cover-Li, RH                    |
| 16   | 19-1470     | 6    | Screw-Shoulder                  |
| 17   | 137-8106    | 8    | Screw-CARR                      |
| 18   | 104-7201    | 8    | Nut-HF, NI                      |
| 23   | 122-1335    | 1    | Harness-Wire, Interface(System) |

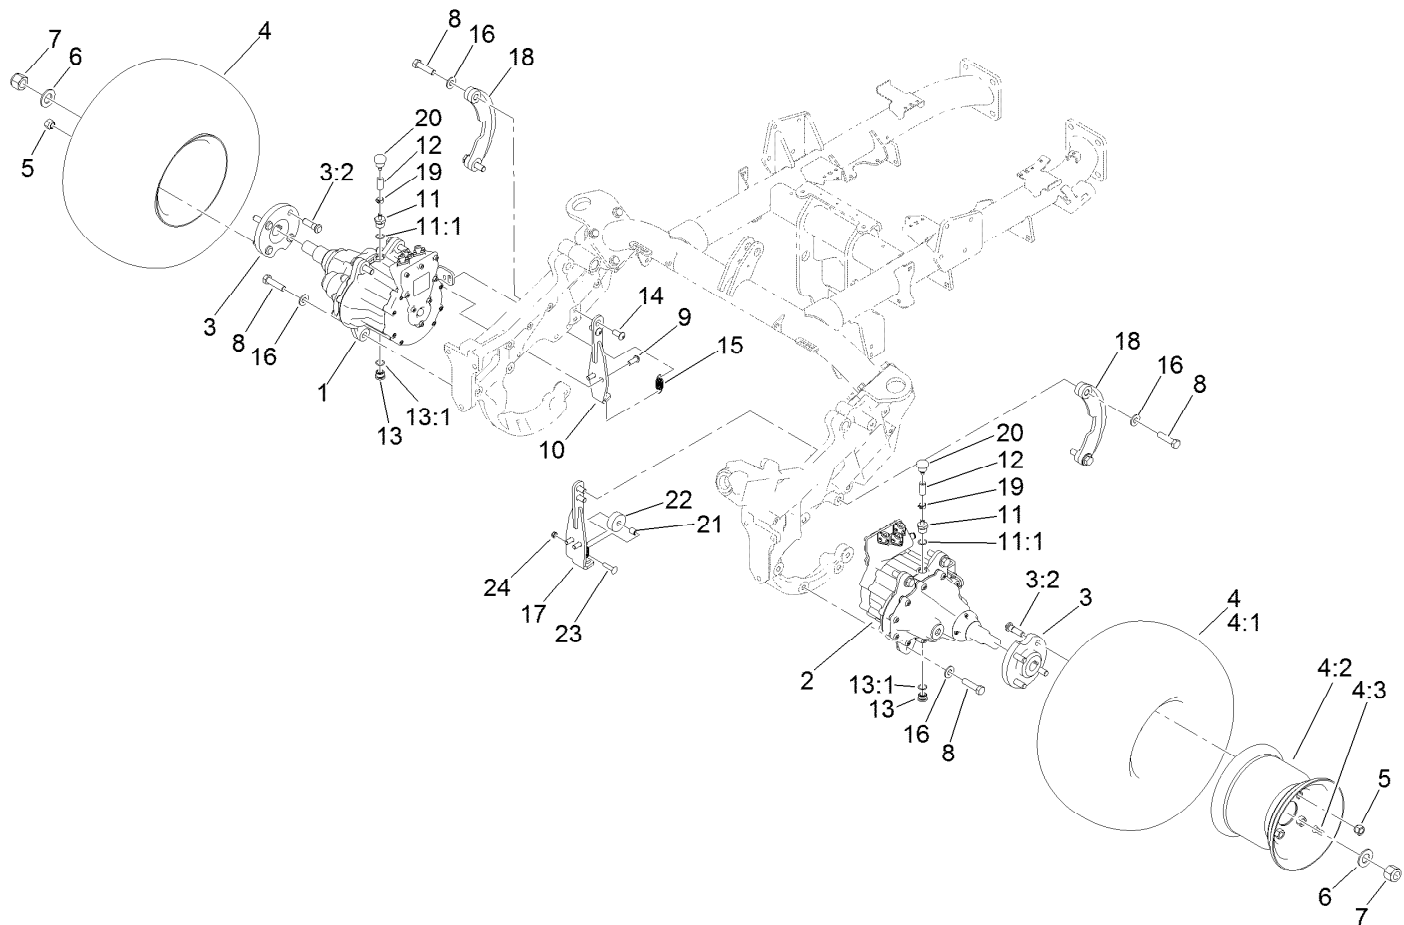


## Traction Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 127-1525    | 1    | RH Wheel Motor ASM   |
| 2    | 127-1527    | 1    | LH Wheel Motor ASM   |
| 3    | 121-9264    | 2    | Wheel Hub ASM        |
| 3:2  | 85-6540     | 4    | Stud-Drive           |
| 4    |             | 2    | Wheel And Tire ASM ● |
| 4:1  | 120-2783    | 1    | Tire                 |
| 4:2  | 117-9032    | 1    | Rim                  |
| 4:3  | 232-27      | 1    | Stem-Valve           |
| 5    | 242-50      | 8    | Nut-Lug              |
| 6    | AU496-11094 | 2    | Washer-Flat          |
| 7    | 137-7973    | 2    | Nut-Hex              |
| 8    | 325-8       | 12   | Screw-HH             |
| 9    | 3274-94     | 4    | Screw-HSBH           |
| 10   | 137-7727-01 | 1    | Gusset-Motor, RH     |
| 11   | 139-8331    | 2    | Fitting-Straight     |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 11:1 | 237-79      | 1    | O-Ring                |
| 12   | 139-8326    | 2    | Hose-Fuel             |
| 13   | 133-7659    | 2    | Plug ASM              |
| 13:1 | 237-79      | 1    | O-Ring                |
| 14   | 3274-105    | 4    | Screw-HSBH            |
| 15   | 136-7153    | 2    | Spring-Extension      |
| 16   | 87-7270     | 12   | Washer-Thrust         |
| 17   | 139-8348-01 | 1    | Gusset-LH             |
| 18   | 132-9996-01 | 2    | Link-Support          |
| 19   | 92-2379     | 2    | Clamp-Hose            |
| 20   | 139-8332    | 2    | Vent-Barb             |
| 21   | 88-7450     | 1    | Spacer-Lever, Control |
| 22   | 139-8346    | 1    | Roller                |
| 23   | 112-6950    | 1    | Screw-CARR            |
| 24   | 3296-47     | 1    | Nut-Lock,NI           |

 ● Not serviced separately

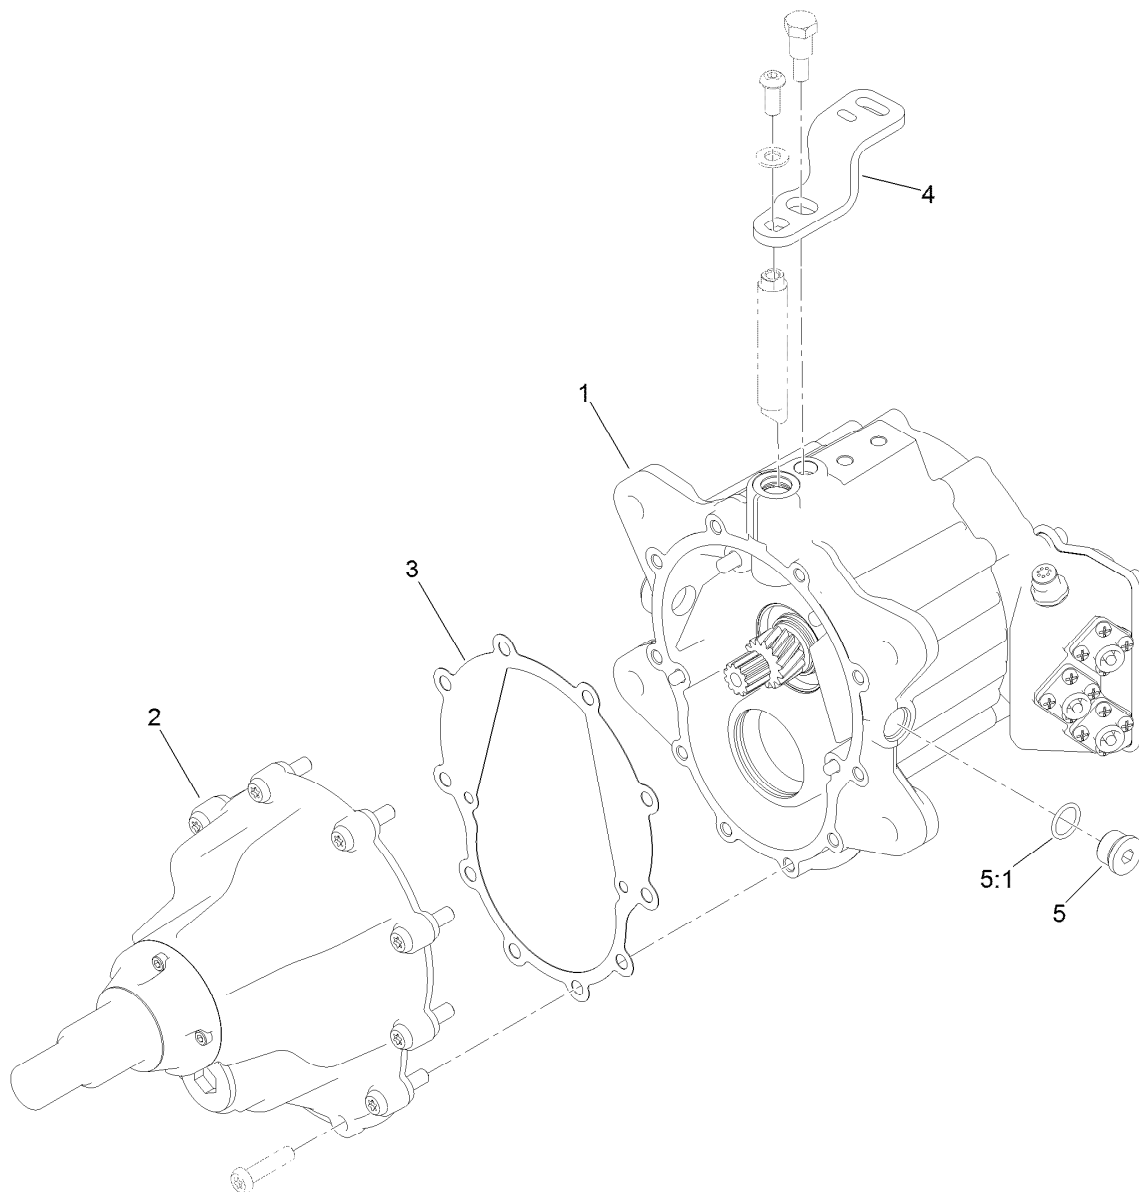

## RH Wheel Motor Assembly No. 127-1525

 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 127-1526    | 1    | RH Motor ASM    |
| 2    | 127-1529    | 1    | Gear Box ASM    |
| 3    | 121-9254    | 1    | Gasket-Gearbox  |
| 4    | 132-9873    | 1    | Lever-Brake, RH |
| 5    | 353-988     | 2    | Plug-Hex        |
| 5:1  | 237-79      | 1    | O-Ring          |

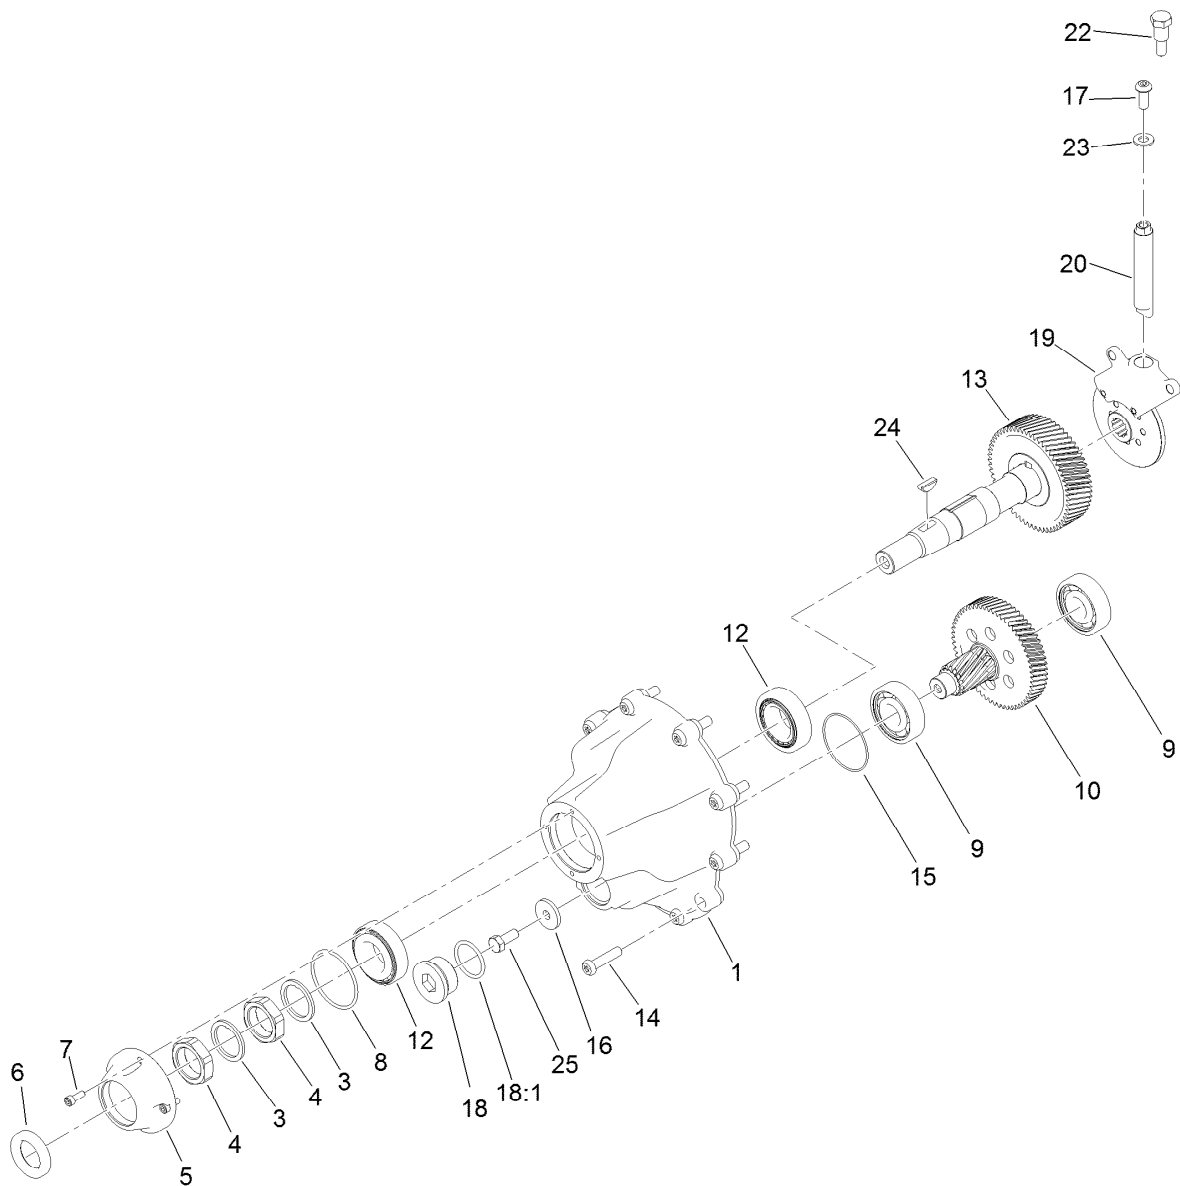

## Gearbox Assembly No. 127-1529


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 127-1559    | 1    | Cover-Motor, Axle     |
| 3    | 121-5235    | 2    | Washer-Special        |
| 4    | 121-9263    | 2    | Nut-Jam               |
| 5    | 127-1561    | 1    | Cover-Nose, Axle      |
| 6    | 137-7857    | 1    | Seal-Shaft            |
| 7    | 112-5181    | 4    | Screw -HSH            |
| 8    | 108-9919    | 1    | O-Ring                |
| 9    | 121-9266    | 2    | Bearing-Ball          |
| 10   | 132-9978    | 1    | Countershaft Gear ASM |
| 12   | 121-9256    | 2    | Bearing-Taper         |
| 13   | 132-9841    | 1    | Shaft ASM             |
| 14   | 127-1519    | 10   | Screw-BHCS            |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 15   | 121-9273    | 1    | O-Ring           |
| 16   | 132-9927    | 1    | Washer-Flat      |
| 17   | 3274-96     | 1    | Screw-HSBH       |
| 18   | 105-3921    | 1    | Fitting-Plug     |
| 18:1 | 237-146     | 1    | O-Ring           |
| 19   | 132-9974    | 1    | Brake ASM        |
| 20   | 121-9247    | 1    | Shaft-Brake      |
| 22   | 121-9250    | 1    | Pin-Lever, Stop  |
| 23   | 120-9683    | 1    | Washer-Plain     |
| 24   | 132-9904    | 1    | Key-Woodruff #91 |
| 25   | 137-7767    | 1    | Screw-HH         |

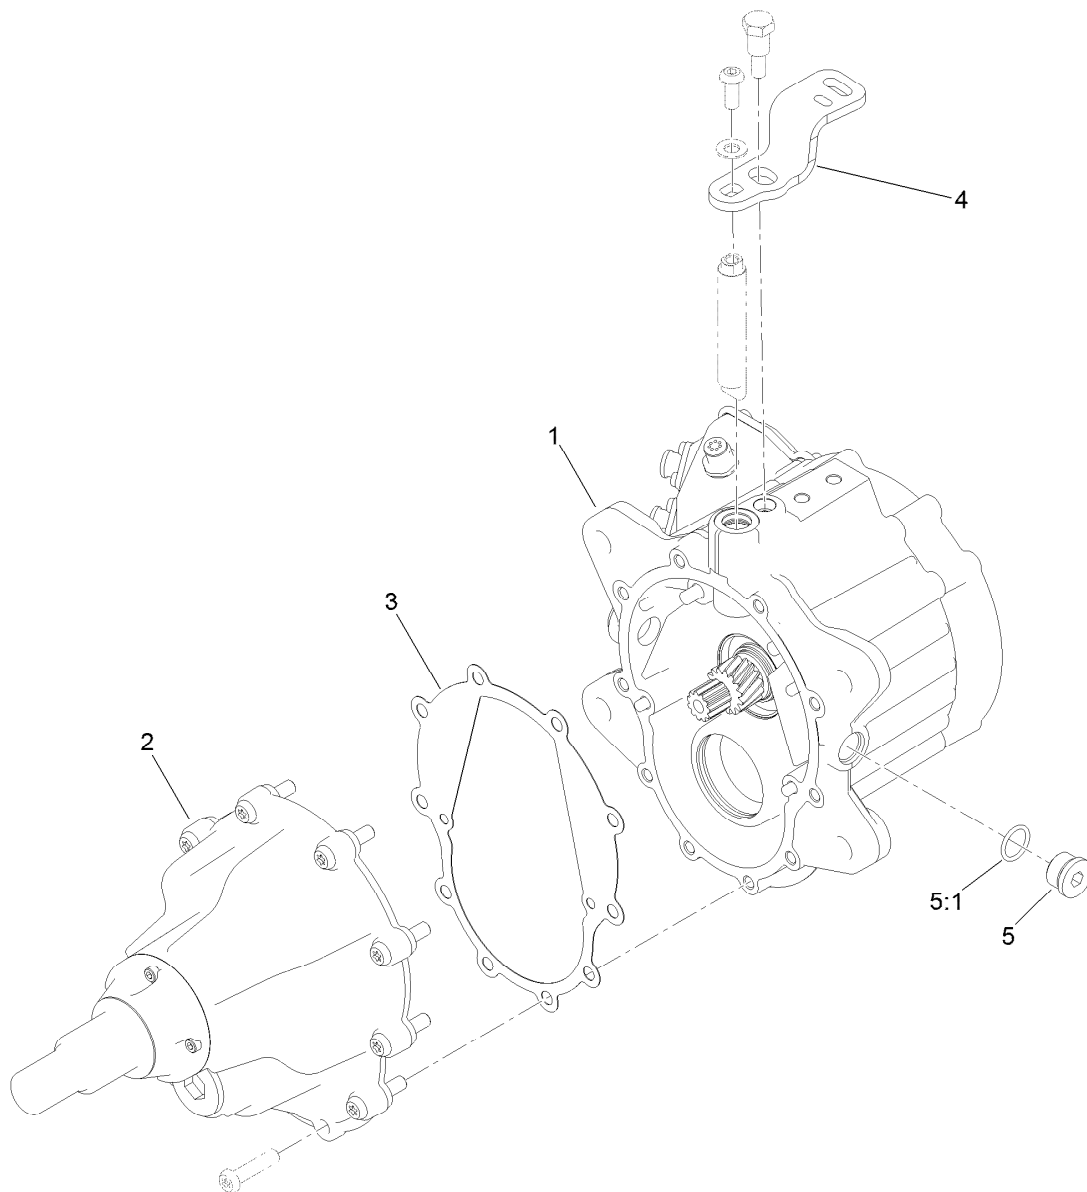


## LH Wheel Motor Assembly No. 127-1527
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 127-1528    | 1    | LH Motor ASM    |
| 2    | 127-1529    | 1    | Gear Box ASM    |
| 3    | 121-9254    | 1    | Gasket-Gearbox  |
| 4    | 132-9874    | 1    | Lever-Brake, LH |
| 5    | 353-988     | 2    | Plug-Hex        |
| 5:1  | 237-79      | 1    | O-Ring          |

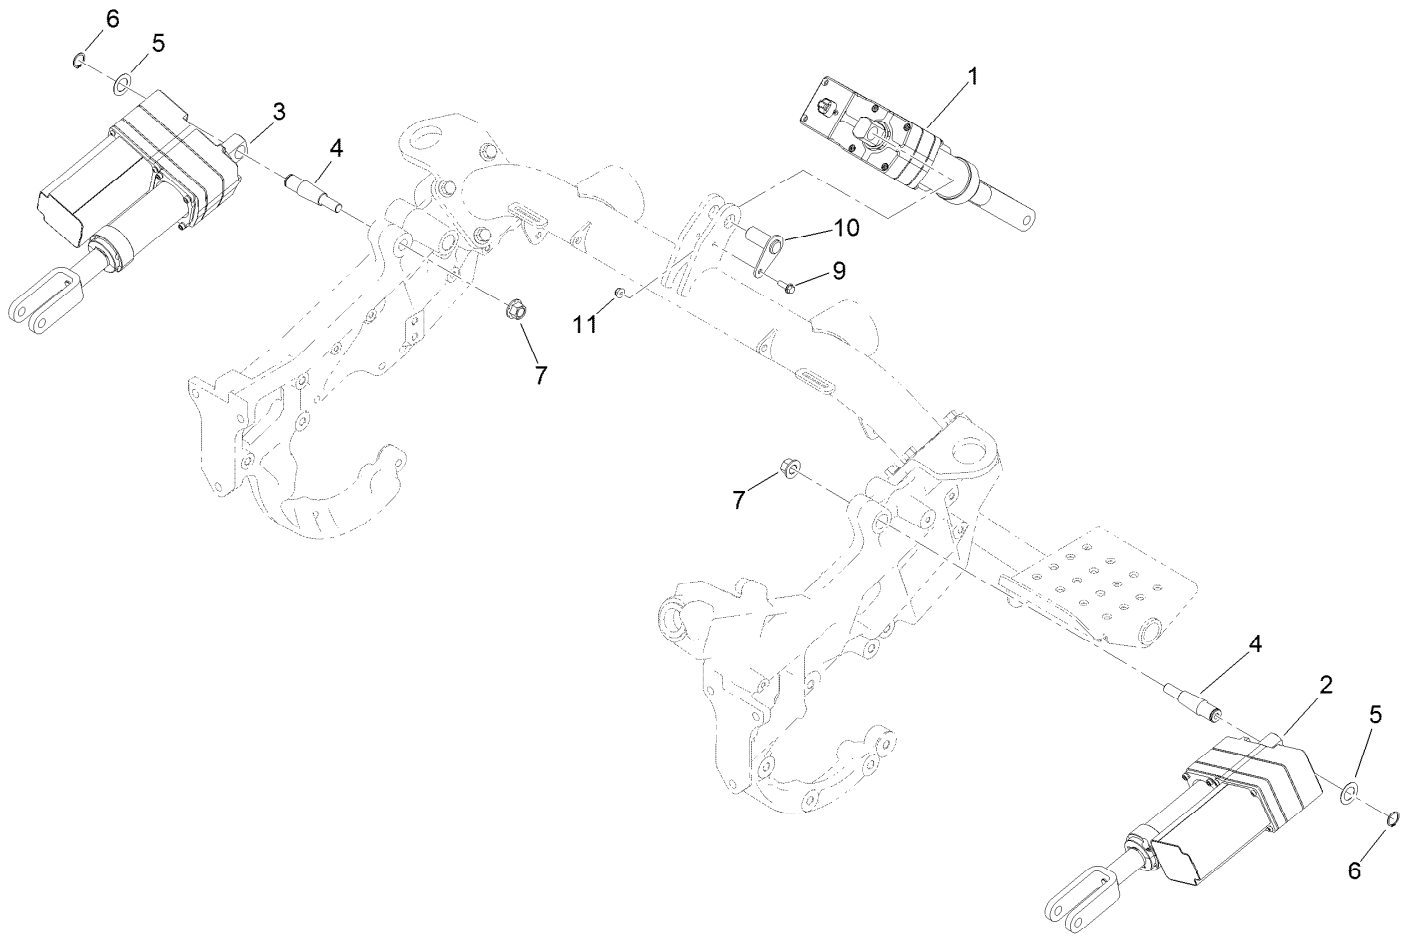

## Lift Assembly
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 137-7933    | 1    | Actuator-1 Crown |
| 2    | 137-7934    | 1    | Actuator-2 Crown |
| 3    | 137-7935    | 1    | Actuator-3 Crown |
| 4    | 136-2691    | 2    | Pin-Tapered      |
| 5    | 9202574     | 2    | Washer-Flat      |
| 6    | 32120-72    | 2    | Ring-Snap        |
| 7    | 99-5107     | 2    | Nut-Lock         |
| 9    | 115-5103    | 1    | Screw-HHF        |
| 10   | 137-7766    | 1    | Pin ASM          |
| 11   | 104-7201    | 1    | Nut-HF, NI       |

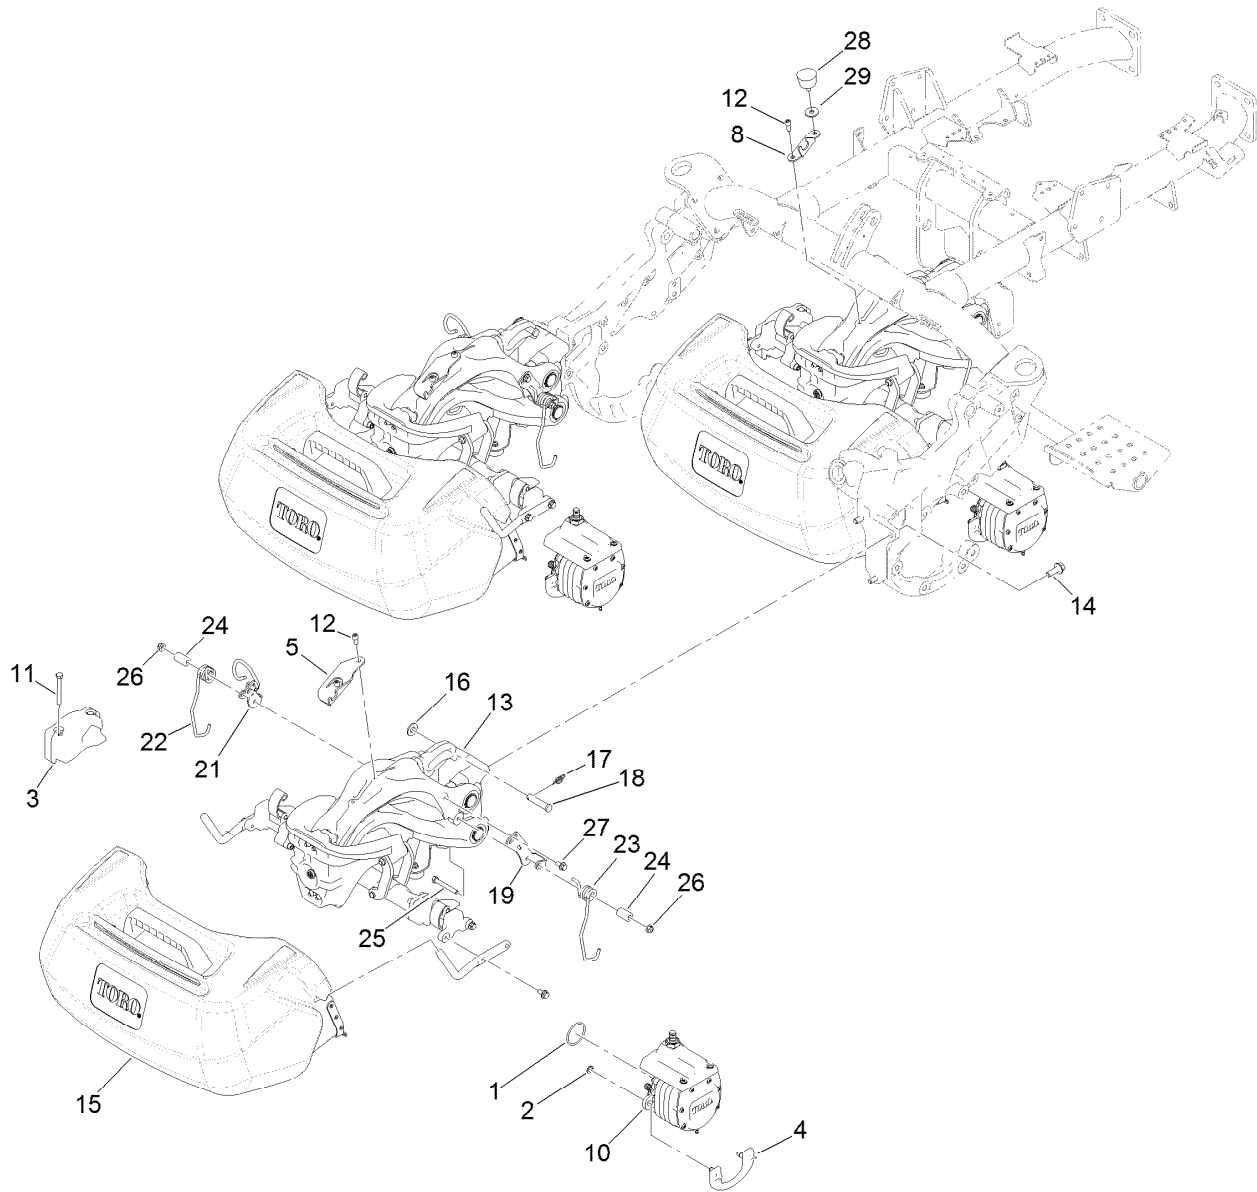


## Suspension, Reel Motor and Basket Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 115-3298    | 3    | O-Ring                  |
| 2    | 133-8926    | 6    | Ring-Retaining (Metric) |
| 3    | 117-6774-03 | 3    | Weight-Electric         |
| 4    | 115-5389    | 3    | Cam-Mount, Motor        |
| 5    | 119-7487    | 2    | Bracket-Clamp, Hose     |
| 8    | 119-7540    | 1    | Bracket-Hose, Rear      |
| 10   | 138-8905    | 3    | Electric Motor ASM      |
| 11   | 322-13      | 6    | Screw-HH                |
| 12   | 100-2401    | 5    | Screw-HSH               |
| 13   |             | 3    | Suspension ASM ●        |
| 14   | 117-9035    | 9    | Screw-HHF               |
| 15   | 132-9599    | 3    | Basket ASM              |
| 16   | 29-8910     | 3    | Washer                  |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 17   | 112-1491    | 3    | Pin-Cotter            |
| 18   | 92-2739     | 3    | Pin-Clevis            |
| 19   | 133-8998    | 3    | Retainer-Spring, LH   |
| 21   | 133-9025    | 3    | Bracket ASM           |
| 22   | 117-6826    | 3    | Spring-Stabilizer, RH |
| 23   | 117-6827    | 3    | Spring-Stabilizer, LH |
| 24   | 117-6825    | 6    | Spacer                |
| 25   | 322-12      | 6    | Screw-HH              |
| 26   | 104-8300    | 6    | Nut-HF, NI            |
| 27   | 114-7728    | 6    | Screw-HF              |
| 28   | 68-3270     | 1    | Bumper-Rubber         |
| 29   | 52-2861     | 1    | Washer                |

 ● Not serviced separately

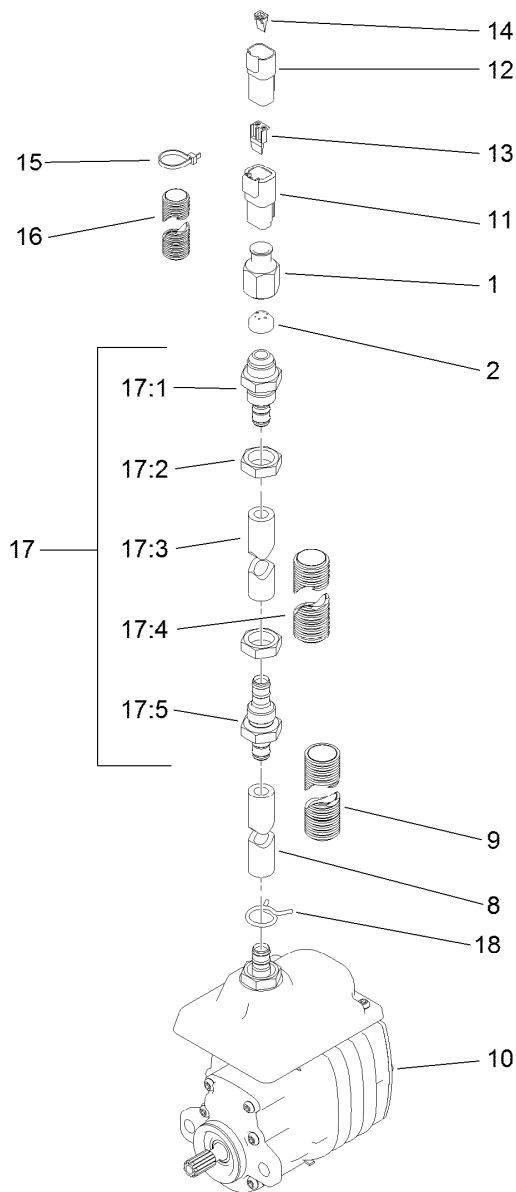


## Electric Reel Motor Assembly No. 138-8905

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 119-7481    | 1    | Nut-Ferrule            |
| 2    | 119-7480    | 1    | Ferrule                |
| 8    | 119-7476    | 1    | Hose                   |
| 9    | 119-7558    | 1    | Tubing-Convolutd, Slit |
| 10   |             | 1    | Motor-Electric ●       |
| 11   | 32160-245   | 1    | Connector              |
| 12   | 32160-315   | 1    | Connector              |
| 13   | 32180-083   | 1    | Wedge                  |
| 14   | 32180-084   | 1    | Wedge                  |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 15   | 3290-378    | 4    | Tie-Cable              |
| 16   | 120-3223    | 1    | Tubing-Convolutd, Slit |
| 17   | 120-4532    | 1    | Hose ASM               |
| 17:1 | 119-7545    | 1    | Fitting-Bulkhead       |
| 17:2 | 119-7457    | 2    | Nut                    |
| 17:3 | 119-7524    | 1    | Hose                   |
| 17:4 | 119-7559    | 1    | Tubing-Convolutd, Slit |
| 17:5 | 119-7544    | 1    | Fitting-Bulkhead       |
| 18   | 138-8924    | 1    | Clamp-Hose             |

 
● Not serviced separately

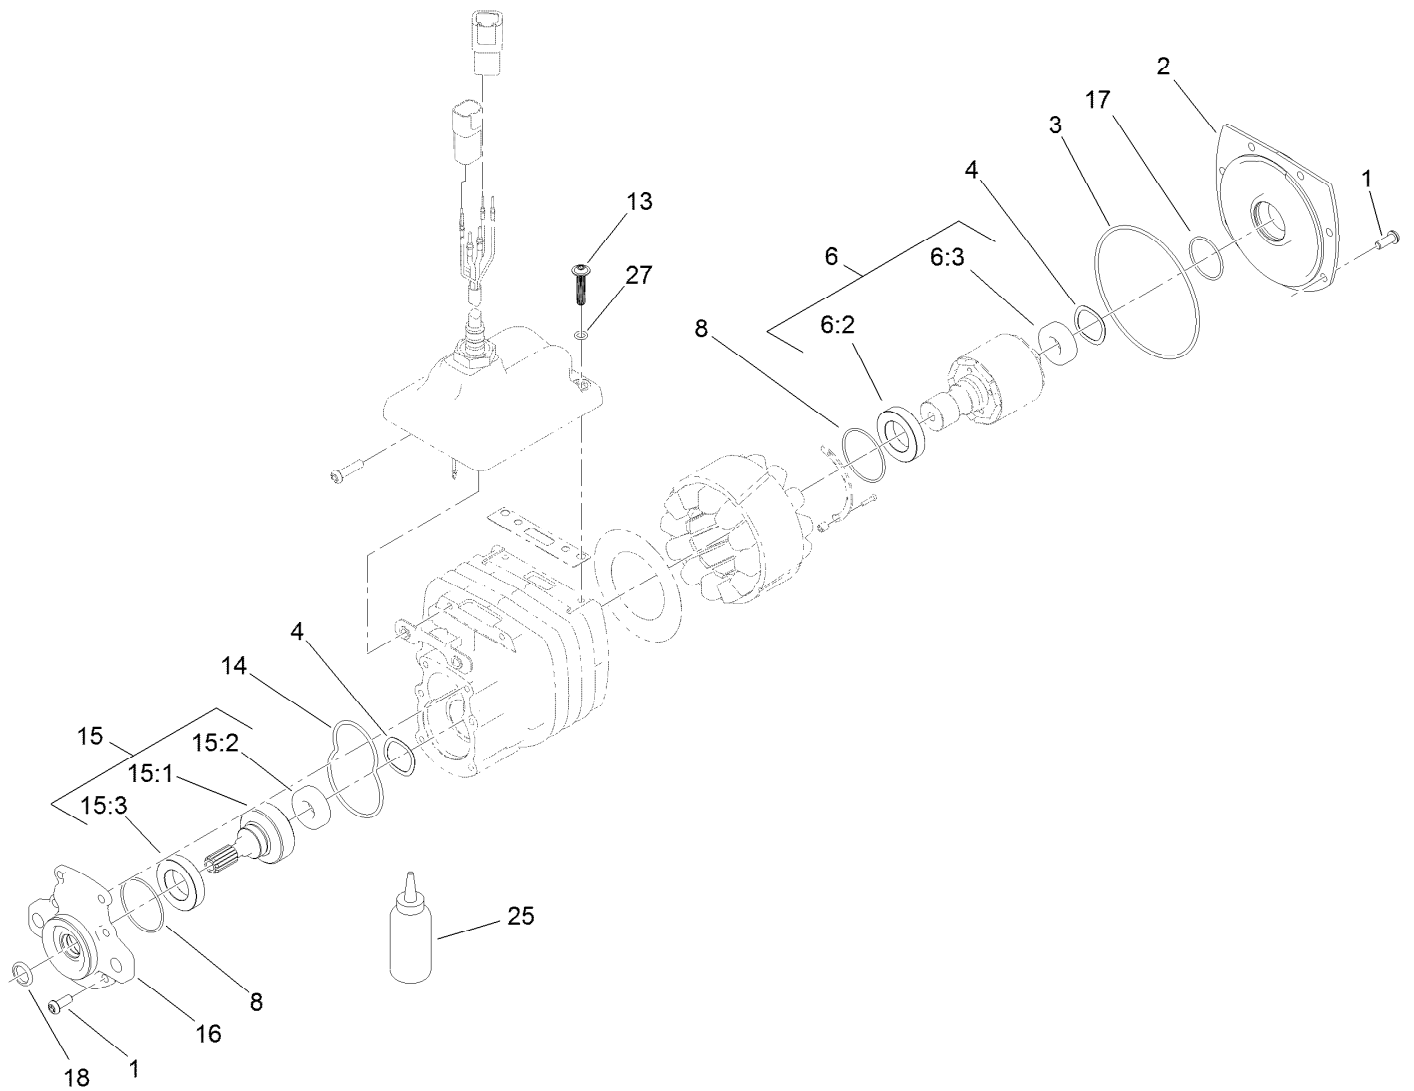

## Electric Motor Assembly


| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 120-4559    | 12   | Screw-BHCS   |
| 2    | 115-4779    | 1    | Cover-Motor  |
| 3    | 112-9609    | 1    | O-Ring       |
| 4    | 112-5163    | 2    | Washer-Wave  |
| 6    | 119-7450    | 1    | Rotor ASM    |
| 6:2  | 112-5158    | 1    | Bearing-Ball |
| 6:3  | 120-4557    | 1    | Bearing      |
| 8    | 112-9616    | 2    | O-Ring       |
| 13   | 138-8918    | 2    | Screw-Fbhcs  |
| 14   | 112-9611    | 1    | O-Ring       |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 15   | 115-4782    | 1    | Output Gear ASM  |
| 15:1 | 112-5153    | 1    | Gear-Output      |
| 15:2 | 120-4557    | 1    | Bearing          |
| 15:3 | 112-5158    | 1    | Bearing-Ball     |
| 16   | 115-4777    | 1    | Cover-Gearbox    |
| 17   | 119-1156    | 1    | O-Ring           |
| 18   | 119-7451    | 1    | Seal-Oil         |
| 25   | 136-8595    | 1    | Grease-Synthetic |
| 27   | 138-8916    | 2    | O-Ring           |

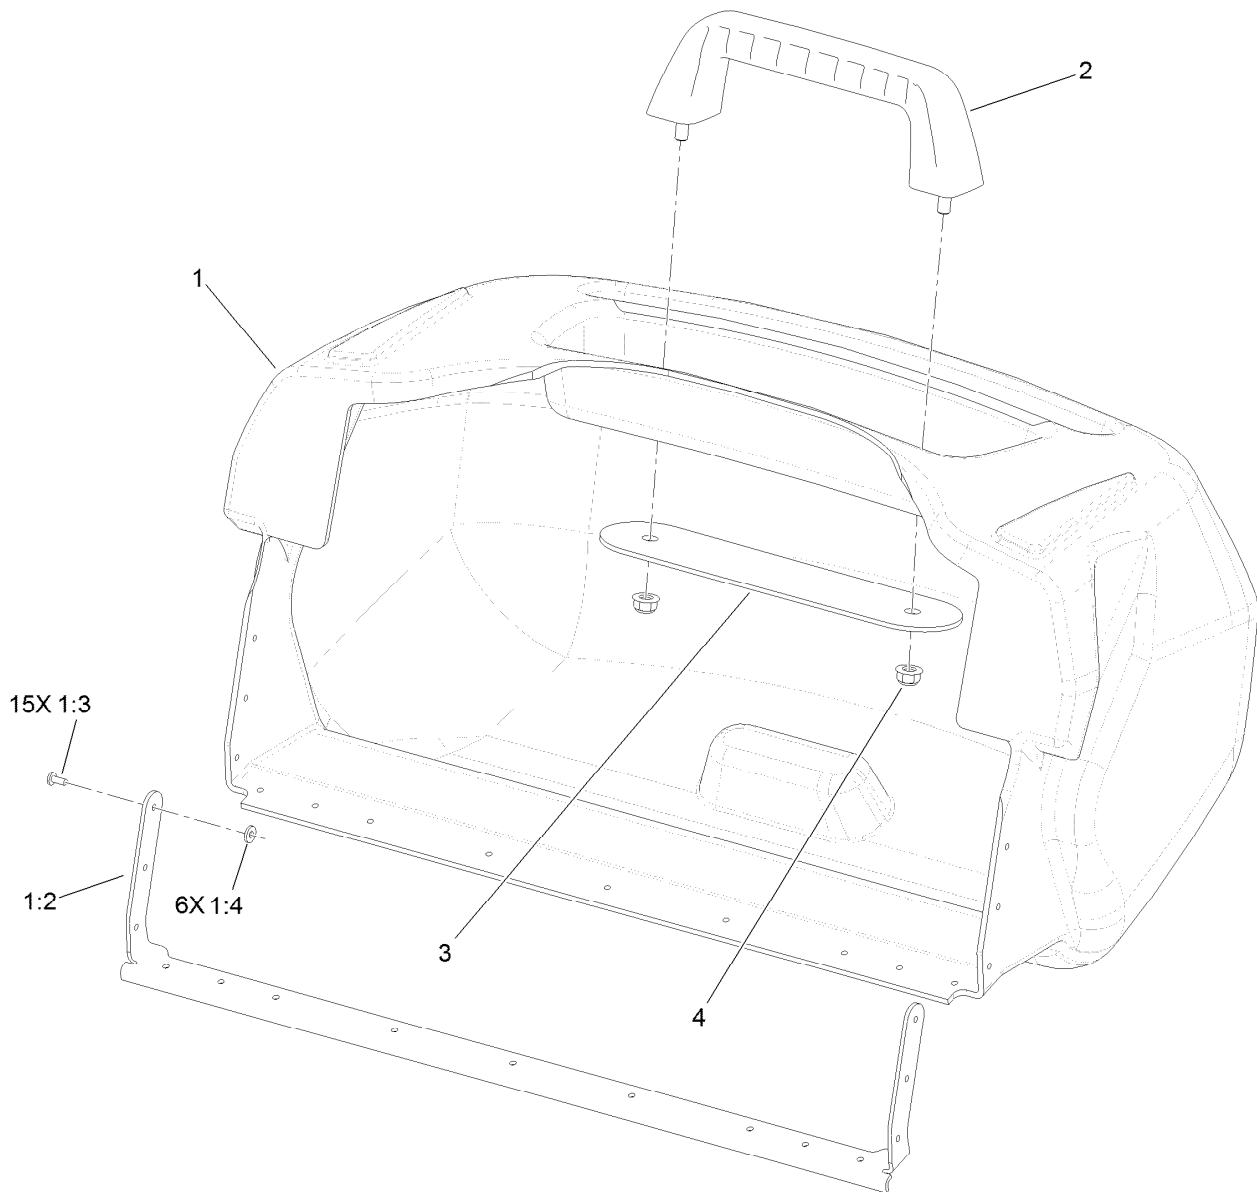


## Basket Assembly No. 132-9599
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 132-9510    | 1    | Basket Assembly |
| 1:2  | 132-3806    | 1    | Support-Basket  |
| 1:3  | 3269-25     | 15   | Rivet-Pop       |
| 1:4  | 3256-75     | 6    | Washer-Flat     |
| 2    | 117-8088    | 1    | Handle-Grab     |
| 3    | 117-8092-03 | 1    | Plate-Mounting  |
| 4    | 104-8300    | 2    | Nut-HF, NI      |

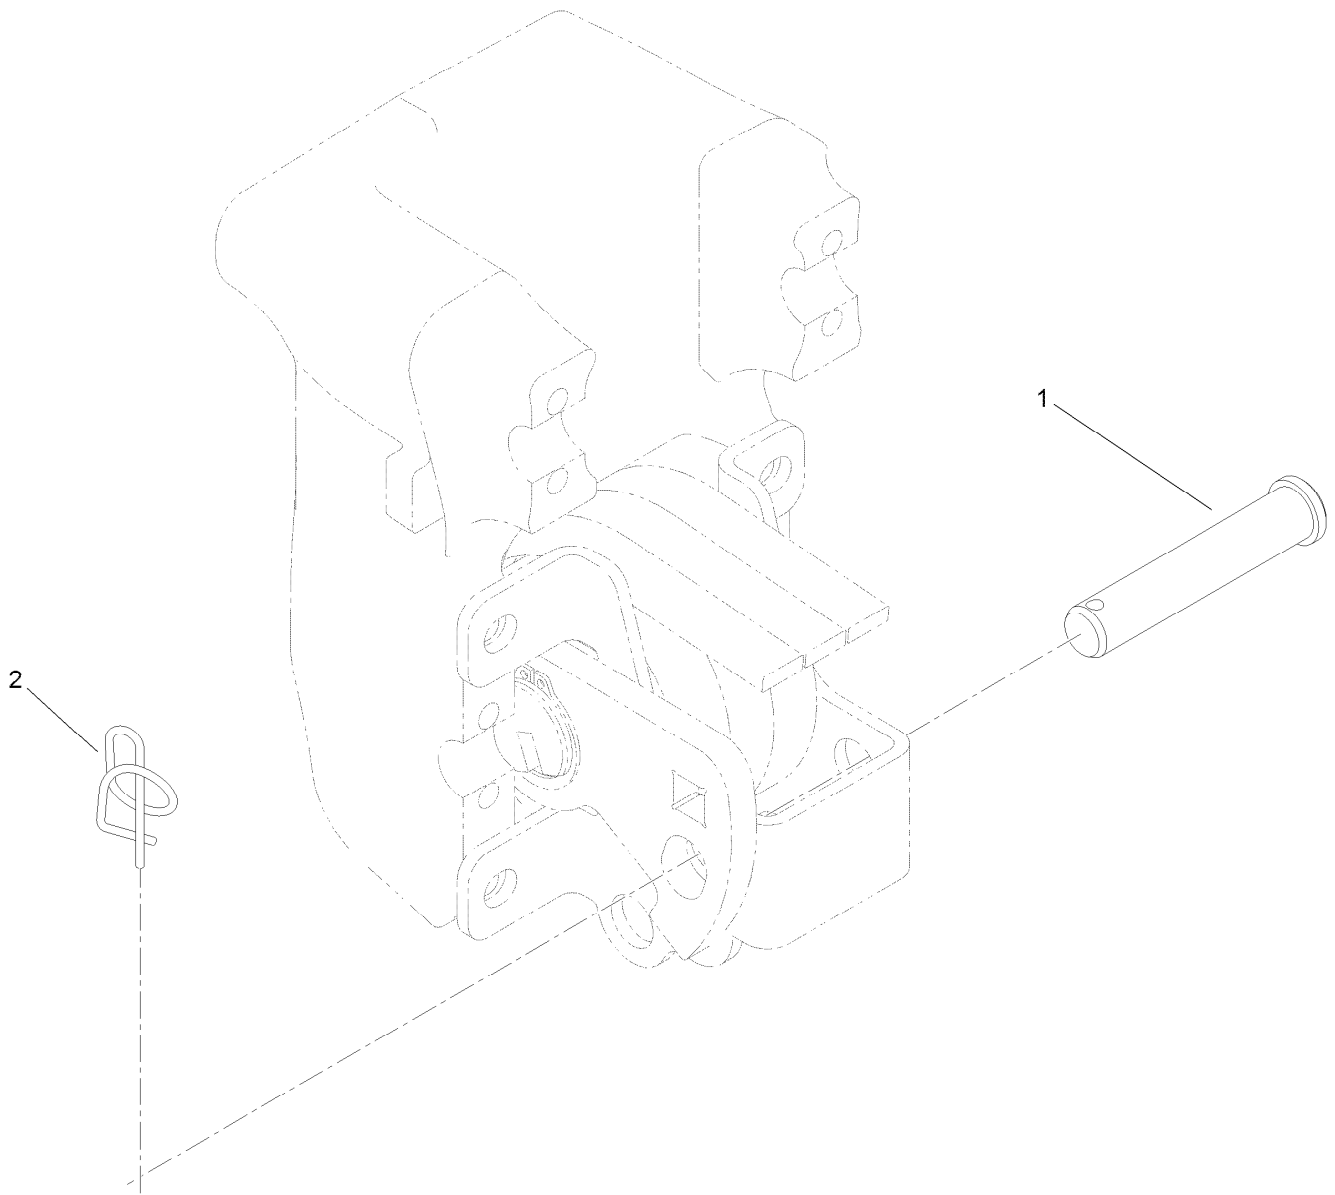


## Suspension Pin Position Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-6541           | 3           | Pin-Clevis         |
| 2           | 112-1491           | 3           | Pin-Cotter         |

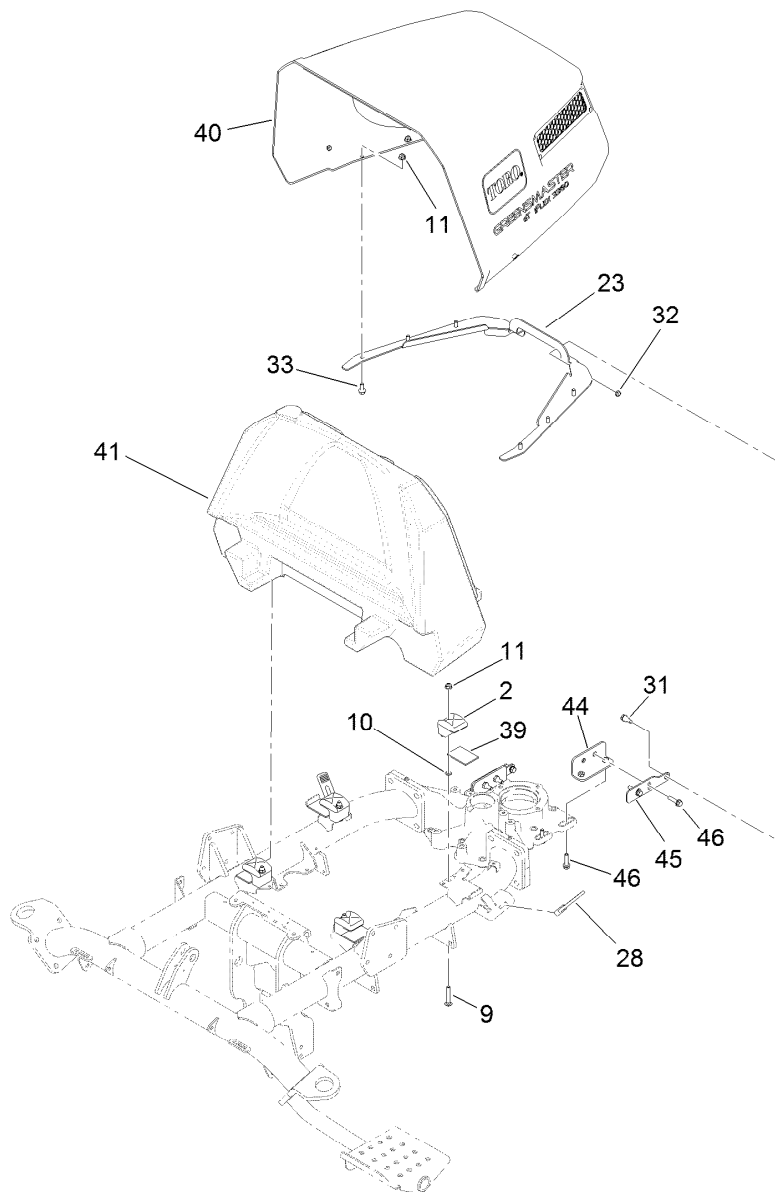


## Hood Assembly
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 2    | 107-4543    | 4    | Clamp                 |
| 9    | 3230-6      | 4    | Bolt-CARR             |
| 10   | 109-5667    | 4    | Nut-Push              |
| 11   | 104-8300    | 10   | Nut-HF, NI            |
| 23   | 137-2193-03 | 1    | Bracket-Hinge, Shroud |
| 28   | 131-8402    | 2    | Strap-Down, Hold      |
| 31   | 115-1958    | 2    | Bolt-Shoulder         |
| 32   | 99-6007     | 2    | Nut-Lock, NI          |
| 33   | 3234-47     | 6    | Screw-HHF             |
| 39   | 136-4259    | 4    | Foam-Strip, Tank      |
| 40   | 139-8317    | 1    | Battery Hood ASM      |
| 41   | 137-7829    | 1    | Cover-Battery         |
| 44   | 137-2242-03 | 2    | Bracket-Hood          |
| 45   | 137-7914    | 2    | Bracket-Hood          |
| 46   | 119-4036    | 8    | Screw-HHF             |

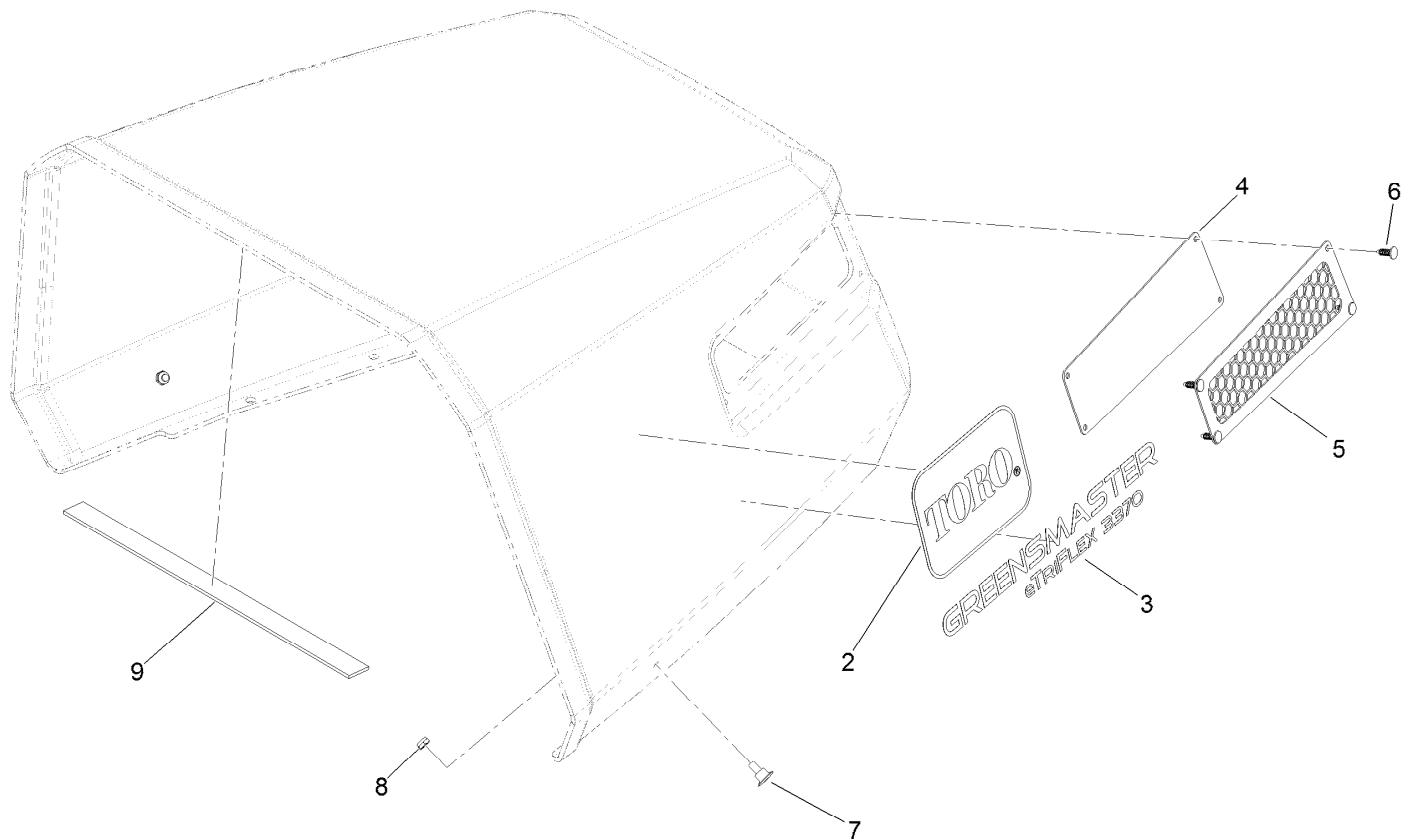

## Hood Assembly No. 139-8317

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 2    | 62-5550     | 2    | Decal               |
| 3    | 137-7928    | 2    | Decal-Etriflex 3370 |
| 4    | 137-7926-03 | 2    | Screen              |
| 5    | 137-7911-03 | 2    | Screen              |
| 6    | 120-6737    | 8    | Plug-Plastic        |
| 7    | 125-1122    | 2    | Screw               |
| 8    | 3296-56     | 2    | Nut-Lock, NI        |
| 9    | 137-8082    | 1    | Strip-Foam          |

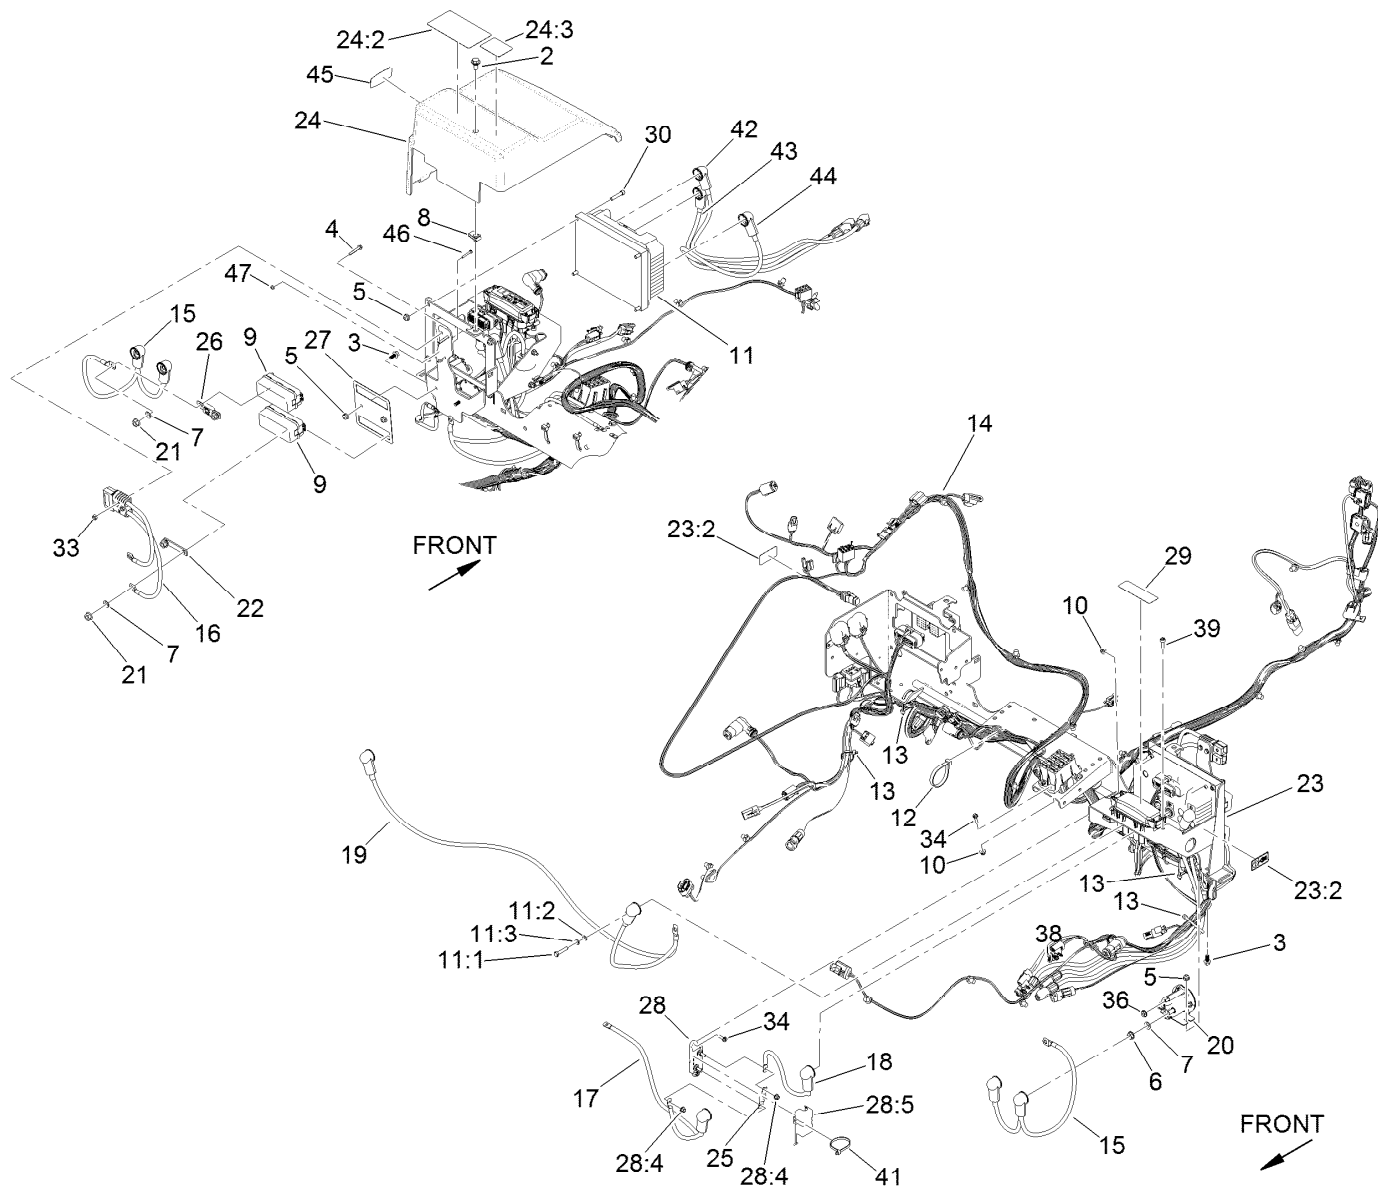

## Electrical Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 2    | 19-1470     | 1    | Screw-Shoulder             |
| 3    | 99-6810     | 6    | Screw-HHF                  |
| 4    | 100-4352    | 2    | Screw-HWH                  |
| 5    | 104-7201    | 10   | Nut-HF, NI                 |
| 6    | 107-0380    | 4    | Nut-HHF                    |
| 7    | 107-0394    | 8    | Washer-Flat                |
| 8    | 112-3306    | 1    | Nut                        |
| 9    | 114-3318    | 2    | Holder-Fuse, Mega          |
| 10   | 120-4578    | 6    | Nut-HF                     |
| 11   | 120-4780    | 1    | Controller-Motor, Traction |
| 11:1 | 33113-030   | 5    | Screw-HH                   |
| 11:2 | 33093-00    | 5    | Washer-Flat                |
| 11:3 | 43-5930     | 5    | Washer-Lock, Spring        |
| 12   | 3334-945    | 3    | Tie-Cable                  |
| 13   | 3290-379    | 4    | Tie-Cable                  |
| 14   | 122-1620    | 1    | Harness-Wire               |
| 15   | 122-1695    | 1    | Cable-Battery, Positive    |
| 16   | 122-1698    | 1    | Cable-Battery, Pos And Neg |
| 17   | 122-1108    | 1    | Cable-Battery, Positive    |
| 18   | 122-1112    | 1    | Cable-Battery, Positive    |
| 19   | 122-1115    | 1    | Cable-Battery, Negative    |

 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 20   | 122-1274    | 2    | Contactor-DC, 48V         |
| 21   | 127-2371    | 4    | Nut-HF                    |
| 22   | 132-9815    | 1    | Strap-Jumper              |
| 23   | 137-8196    | 1    | Bracket-Components        |
| 23:2 | 137-8127    | 2    | Decal-No Spray            |
| 24   | 139-8472    | 1    | Cover-LH                  |
| 24:2 | 139-8471    | 1    | Decal-Charging            |
| 24:3 | 139-8554    | 1    | Decal-Warning, Charger    |
| 25   | 137-7707    | 1    | Fuse-60 Amp               |
| 26   | 139-8414    | 1    | Fuse-175 Amp              |
| 27   | 137-7835    | 1    | Bracket-Fuses             |
| 28   | 137-7861    | 1    | Fuse Block ASM            |
| 28:4 | 120-4580    | 2    | Nut-HF                    |
| 28:5 | 137-7863    | 1    | Cover-Fuse                |
| 29   | 137-8037    | 1    | Decal-Fuses, Cutting Unit |
| 30   | 3274-51     | 4    | Screw-HSH                 |
| 33   | 3296-2      | 2    | Nut-Lock, NI              |
| 34   | 32105-13    | 6    | Screw-HWH                 |
| 36   | 32149-8     | 4    | Nut-Keps                  |
| 38   | 32180-103   | 2    | Clip-Connector            |
| 39   | 52-6290     | 2    | Screw-HSH                 |

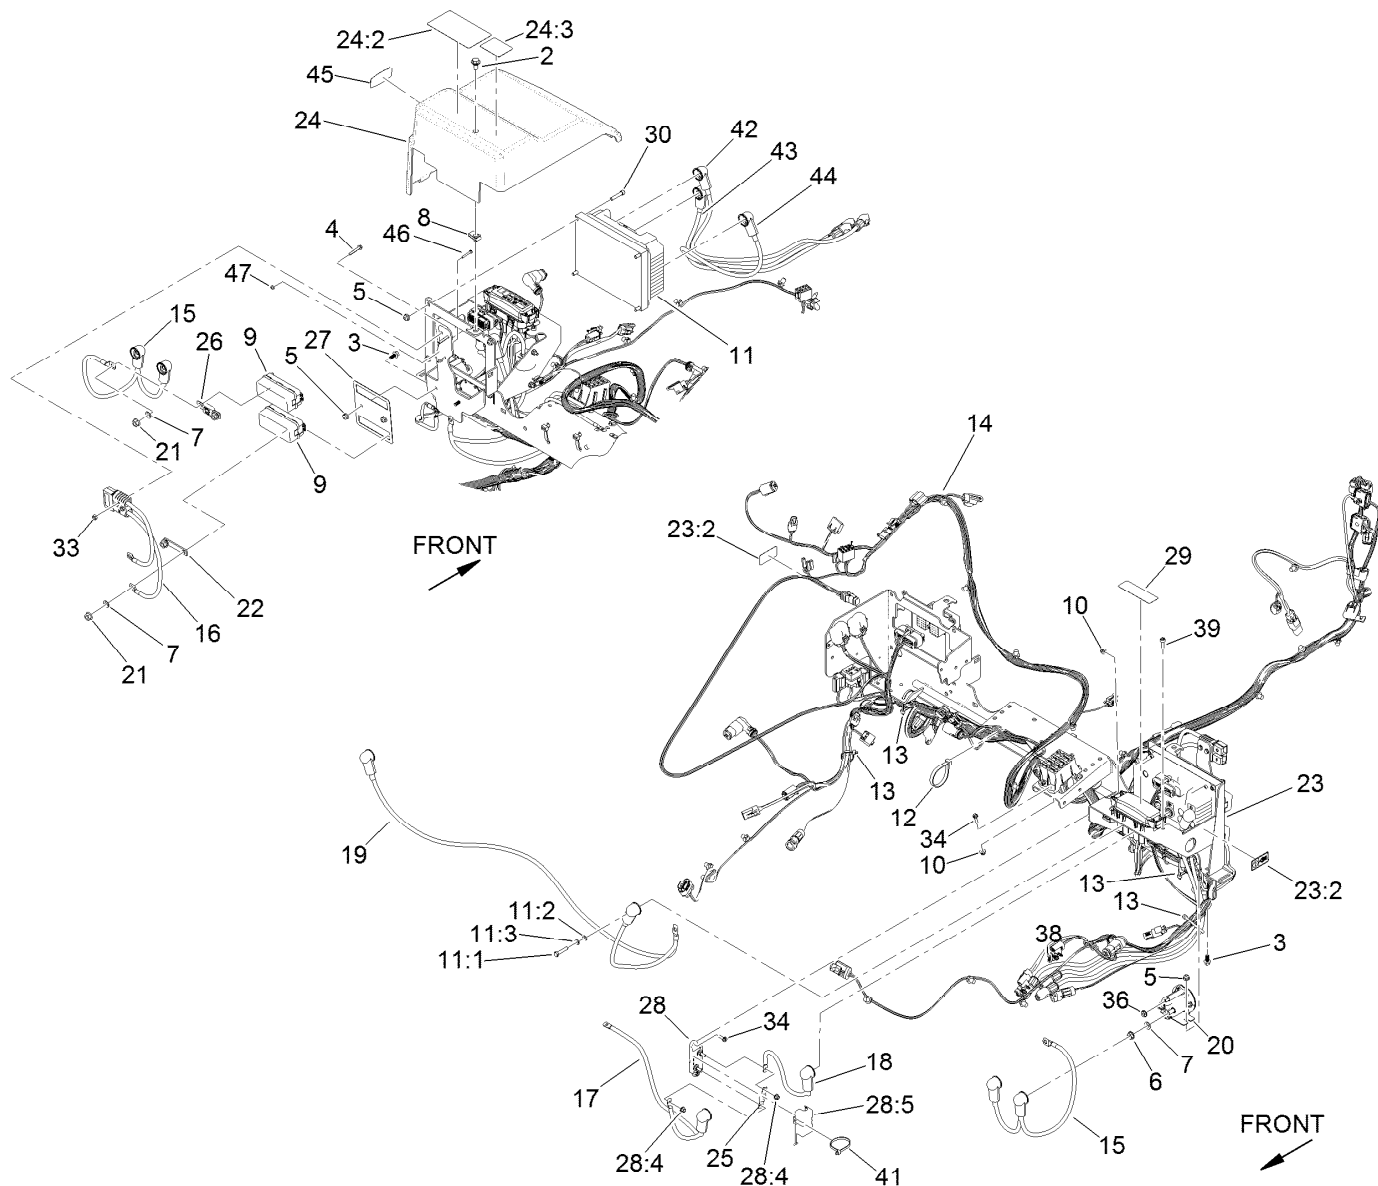

## Electrical Assembly (continued)

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 41   | 3290-378    | 1    | Tie-Cable               |
| 42   | 122-1611    | 1    | Cable-Battery, Positive |
| 43   | 122-1612    | 1    | Cable-Battery, Positive |
| 44   | 122-1613    | 1    | Cable-Battery, Positive |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 45   | 119-7580    | 1    | Decal-Smart, Energy |
| 46   | 32105-9     | 2    | Screw               |
| 47   | 120-9684    | 2    | Nut-Lock            |

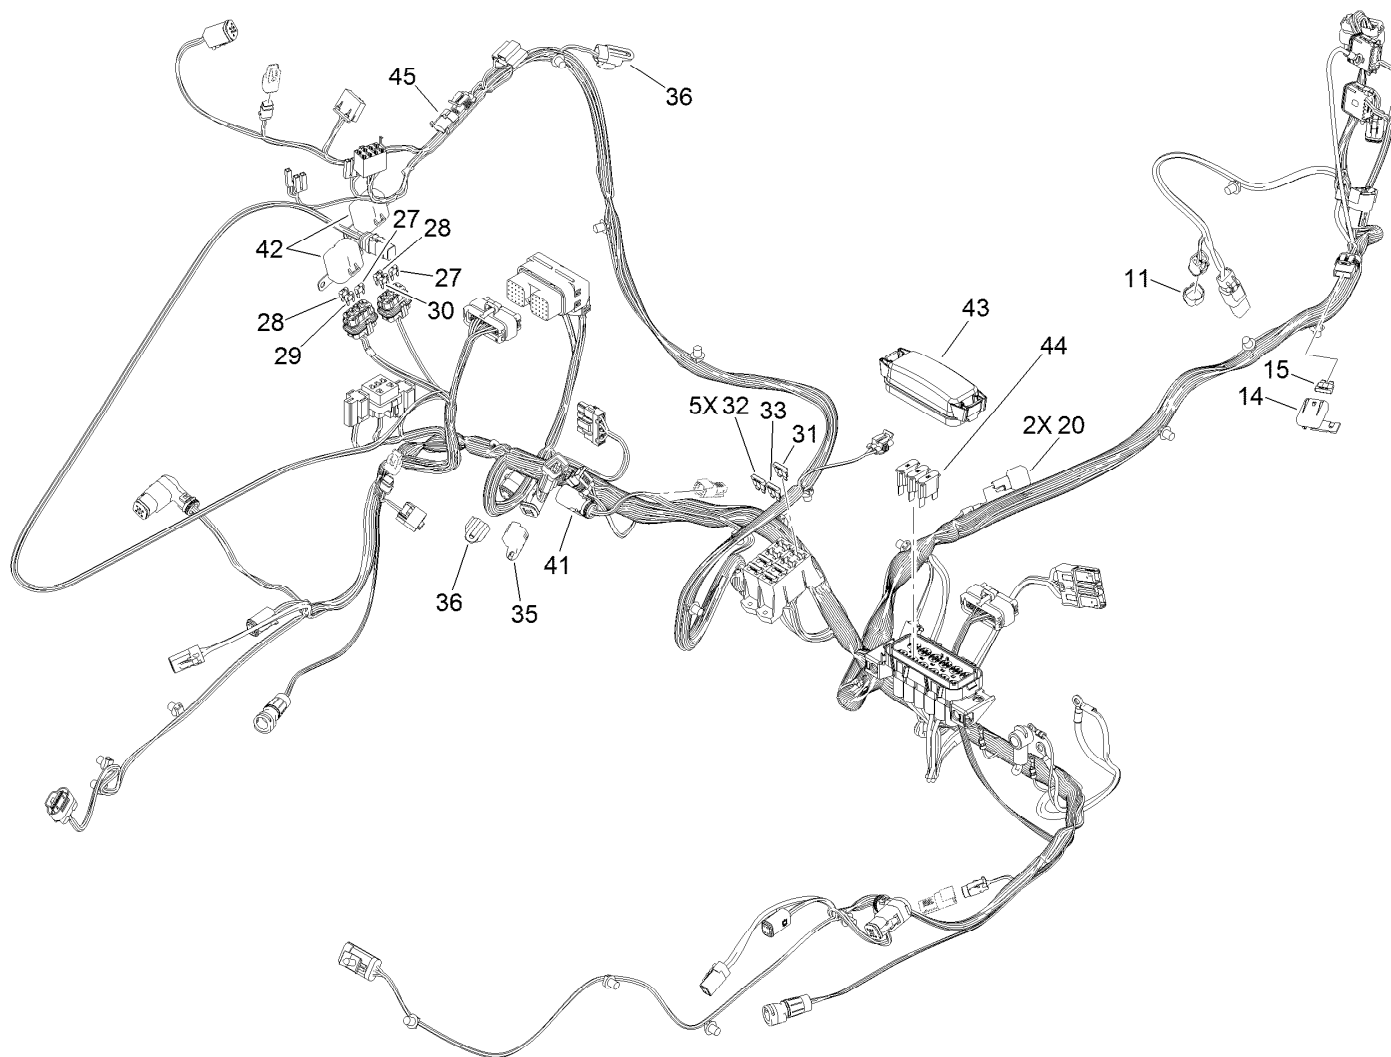


## Wire Harness Assembly No. 122-1620

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 11   | 32180-260   | 1    | Cap-Deutsch, Dust, 4 Way |
| 12   | 32180-091   | 1    | Cap-Dust, 2 Way ●        |
| 14   | 32180-019   | 1    | Cover-Fuse, Single       |
| 15   | 117-4720    | 1    | Fuse-Blade, 3A           |
| 20   | 100-4918    | 2    | Diode                    |
| 27   | 121-8861    | 2    | Fuse-Mini Blade, 2 Amp   |
| 28   | 121-8865    | 2    | Fuse-Mini Blade, 7.5 Amp |
| 29   | 121-8866    | 1    | Fuse-Mini Blade, 10 Amp  |
| 30   | 121-8867    | 1    | Fuse-Mini Blade, 15 Amp  |
| 31   | 117-4722    | 1    | Fuse-Blade, 5A           |

| Ref. | Part Number | Qty. | Description                        |
|------|-------------|------|------------------------------------|
| 32   | 117-4724    | 5    | Fuse-Blade, 10A                    |
| 33   | 117-4728    | 1    | Fuse-Blade, 30A                    |
| 35   | 32180-156   | 1    | Cap-Plug, 6 Way                    |
| 36   | 32180-089   | 2    | Cap-Plug, 3 Way                    |
| 41   | 32180-090   | 3    | Backshell-Deutsch, Dt06-06S 90 DEG |
| 42   | 32180-179   | 2    | Cover-Bussman                      |
| 43   | 32180-146   | 1    | Cover-Fuse                         |
| 44   | 122-0255    | 3    | Fuse-Maxi, 35 Amp-58V              |
| 45   | 32180-056   | 1    | Cap                                |

 
● Not illustrated

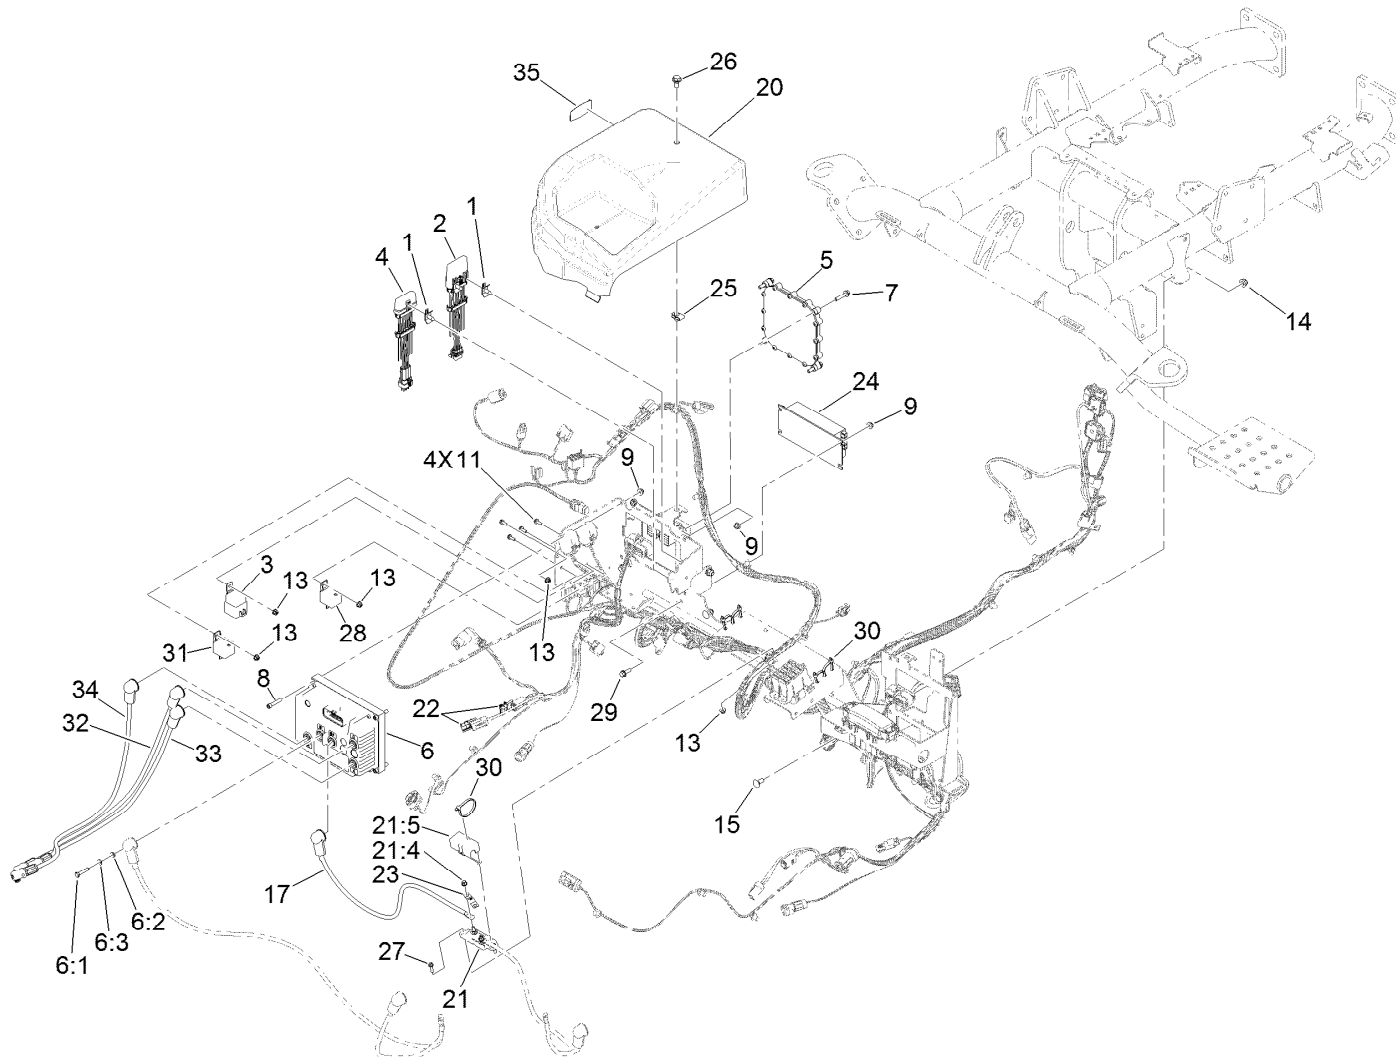

## Controller Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 32180-011   | 3    | Clip-Connector             |
| 2    | 119-4330    | 1    | Isolated Can Module ASM    |
| 3    | 99-7430     | 1    | Relay-Mini                 |
| 4    | 112-9630    | 1    | Module-Reel, I.D.          |
| 5    | 127-2770    | 1    | Controller                 |
| 6    | 120-4780    | 1    | Controller-Motor, Traction |
| 6:1  | 33113-030   | 5    | Screw-HH                   |
| 6:2  | 33093-00    | 5    | Washer-Flat                |
| 6:3  | 43-5930     | 5    | Washer-Lock, Spring        |
| 7    | 127-8639    | 4    | Screw-HHF                  |
| 8    | 3274-51     | 4    | Screw-HSH                  |
| 9    | 104-7201    | 10   | Nut-HF, NI                 |
| 11   | 32105-23    | 7    | Screw                      |
| 13   | 120-4578    | 9    | Nut-HF                     |
| 14   | 104-8300    | 4    | Nut-HF, NI                 |
| 15   | 3230-1      | 4    | Bolt-CARR                  |
| 17   | 122-1110    | 1    | Cable-Battery, Positive    |
| 20   | 133-0095    | 1    | Cover-RH                   |
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 21   | 137-7861    | 1    | Fuse Block ASM              |
| 21:4 | 120-4580    | 2    | Nut-HF                      |
| 21:5 | 137-7863    | 1    | Cover-Fuse                  |
| 22   | 32180-103   | 2    | Clip-Connector              |
| 23   | 137-7707    | 1    | Fuse-60 Amp                 |
| 24   | 107-0686    | 1    | Converter                   |
| 25   | 112-3306    | 1    | Nut                         |
| 26   | 19-1470     | 1    | Screw-Shoulder              |
| 27   | 32105-13    | 2    | Screw-HWH                   |
| 28   | 122-1487    | 1    | Relay                       |
| 29   | 3234-4      | 2    | Screw-HHF                   |
| 30   | 3290-378    | 3    | Tie-Cable                   |
| 31   | 122-1488    | 1    | Relay                       |
| 32   | 122-1614    | 1    | Cable-Battery, Positive ASM |
| 33   | 122-1615    | 1    | Cable-Battery, Positive ASM |
| 34   | 122-1616    | 1    | Cable-Battery, Positive ASM |
| 35   | 119-7580    | 1    | Decal-Smart, Energy         |

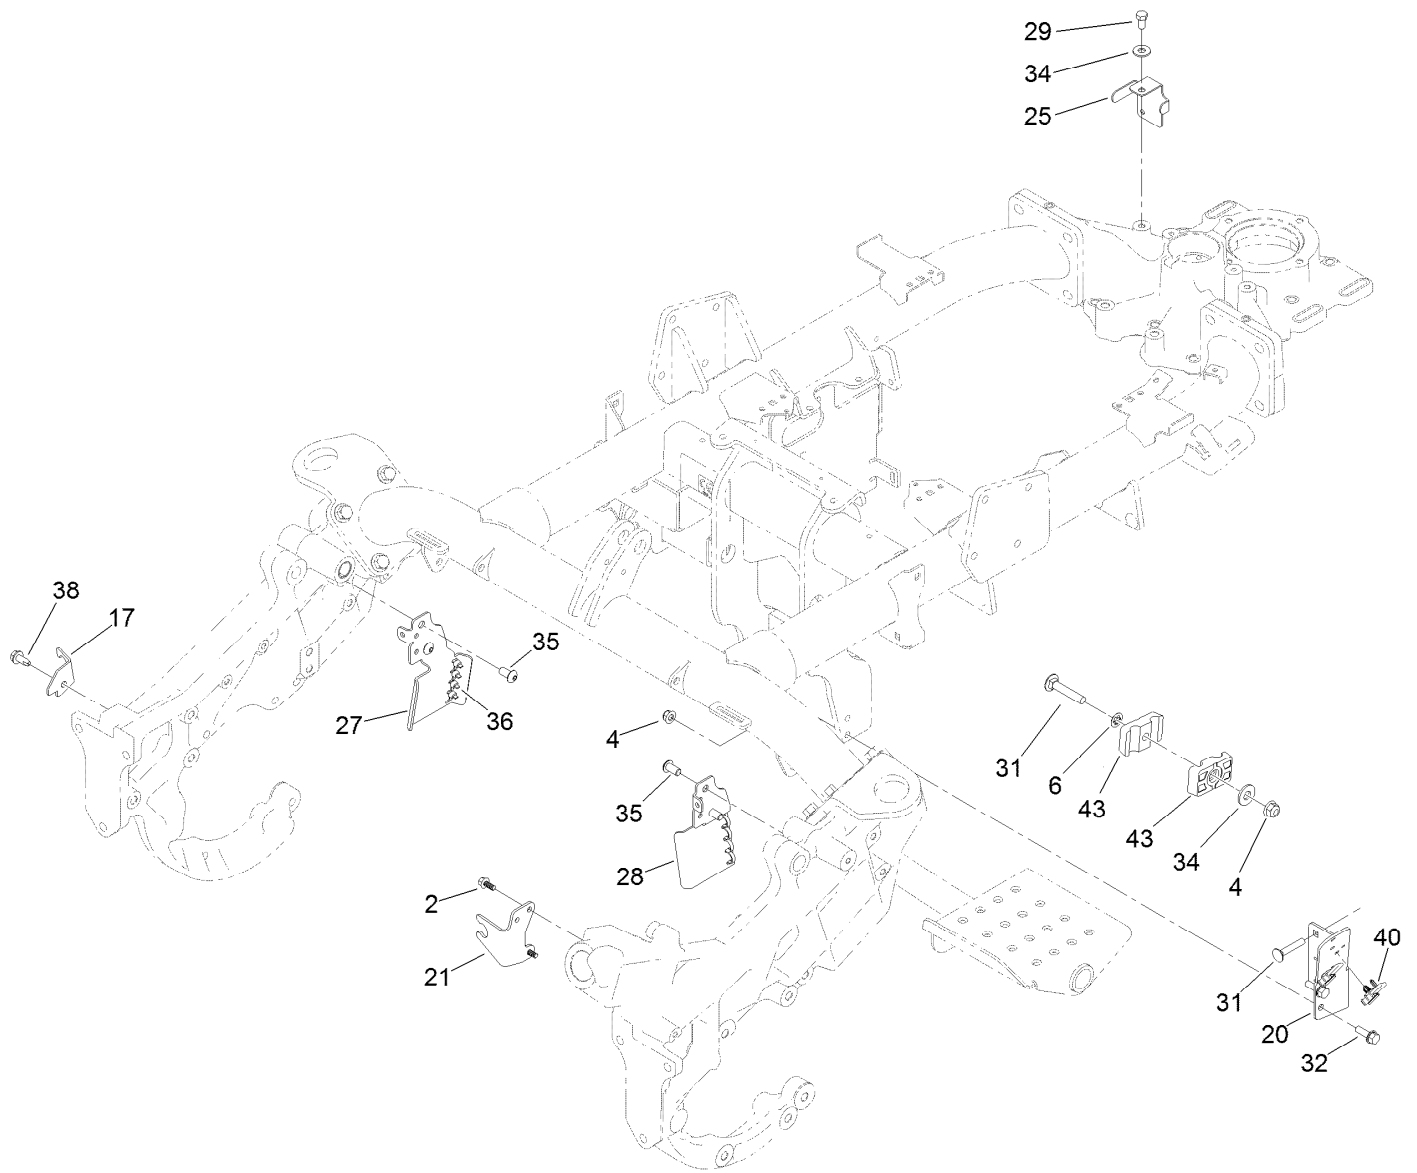

## Harness Bracket Assembly

 
| Ref. | Part Number | Qty. | Description         | Ref. | Part Number | Qty. | Description    |
|------|-------------|------|---------------------|------|-------------|------|----------------|
| 2    | 99-6810     | 2    | Screw-HHF           | 29   | 3210-2      | 1    | Screw-HH       |
| 4    | 104-8300    | 3    | Nut-HF, NI          | 31   | 3230-5      | 1    | Bolt-CARR      |
| 6    | 109-5667    | 1    | Nut-Push            | 32   | 3234-29     | 2    | Screw-HHF      |
| 17   | 139-8409    | 1    | Brkt-Hose           | 34   | 3256-3      | 2    | Washer-Flat    |
| 20   | 137-8146-03 | 1    | Bracket-Hose, Rear  | 35   | 3274-80     | 4    | Screw-HH       |
| 21   | 136-2697    | 1    | Bracket-Hose        | 36   | 3290-378    | 8    | Tie-Cable      |
| 25   | 137-7859    | 1    | Bracket-Harness     | 38   | 32104-32    | 1    | Screw-HWH      |
| 27   | 137-7905-01 | 1    | Bracket-Harness, RH | 40   | 32180-103   | 2    | Clip-Connector |
| 28   | 137-7906-01 | 1    | Bracket-Harness, LH | 43   | 56-7971     | 2    | Clamp-Tube     |

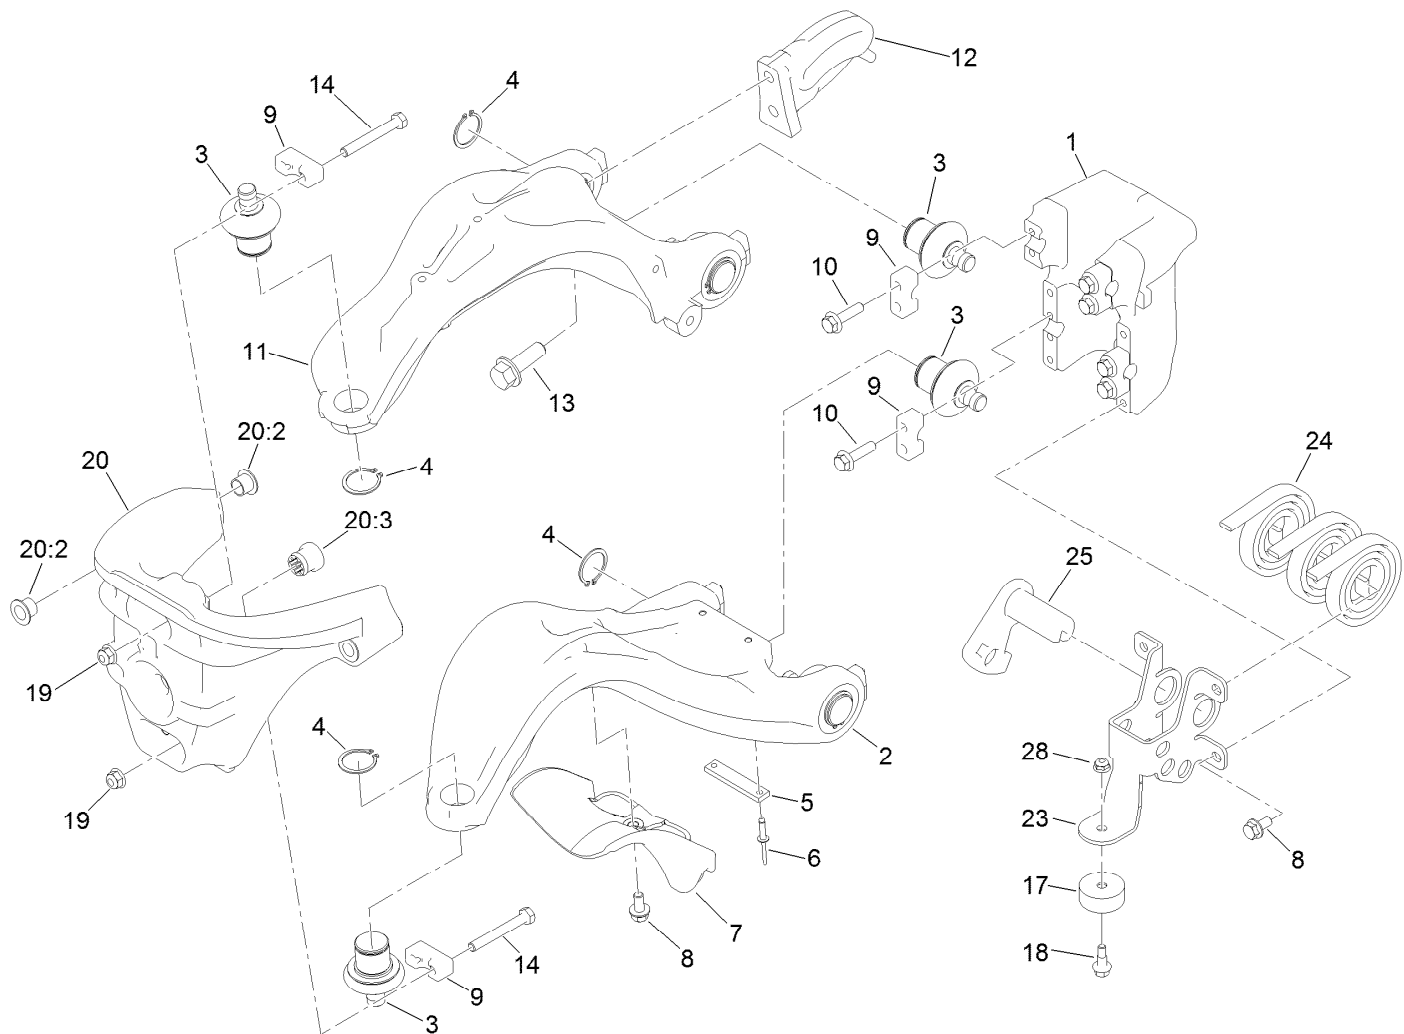

## Suspension A-Arm Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 117-9480    | 1    | Mount-Pivot, A-Arms |
| 2    | 117-6656    | 1    | A-Arm, Lower        |
| 3    | 132-6959    | 6    | Balljoint           |
| 4    | 120-3225    | 6    | Ring-Retaining, EXT |
| 5    | 117-6674    | 1    | Plate-Striker       |
| 6    | 3269-28     | 2    | Rivet-Pop           |
| 7    | 117-6755    | 1    | Stop-Steering       |
| 8    | 114-7728    | 5    | Screw-HF            |
| 9    | 112-5647    | 6    | Clamp               |
| 10   | 132-3837    | 8    | Screw-HHF           |
| 11   | 139-6452    | 1    | A-Arm, Upper        |
| 12   | 139-8407    | 1    | Plate-Lift          |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 13   | 100-6116    | 2    | Screw-HHF          |
| 14   | 132-3838    | 4    | Screw-HH           |
| 17   | 133-0308    | 1    | Bumper-Rubber      |
| 18   | 133-0315    | 1    | Screw-Shoulder, HF |
| 19   | 104-8300    | 4    | Nut-HF, NI         |
| 20   | 120-3216    | 1    | Steering Head ASM  |
| 20:2 | 125-5239    | 4    | Bushing-Flange     |
| 20:3 | 131-1836    | 1    | Grommet            |
| 23   | 140-5232    | 1    | C-Balance Mount    |
| 24   | 114-9306    | 3    | Spring             |
| 25   | 140-5234    | 1    | Tensioner          |
| 28   | 104-7201    | 1    | Nut-HF, NI         |

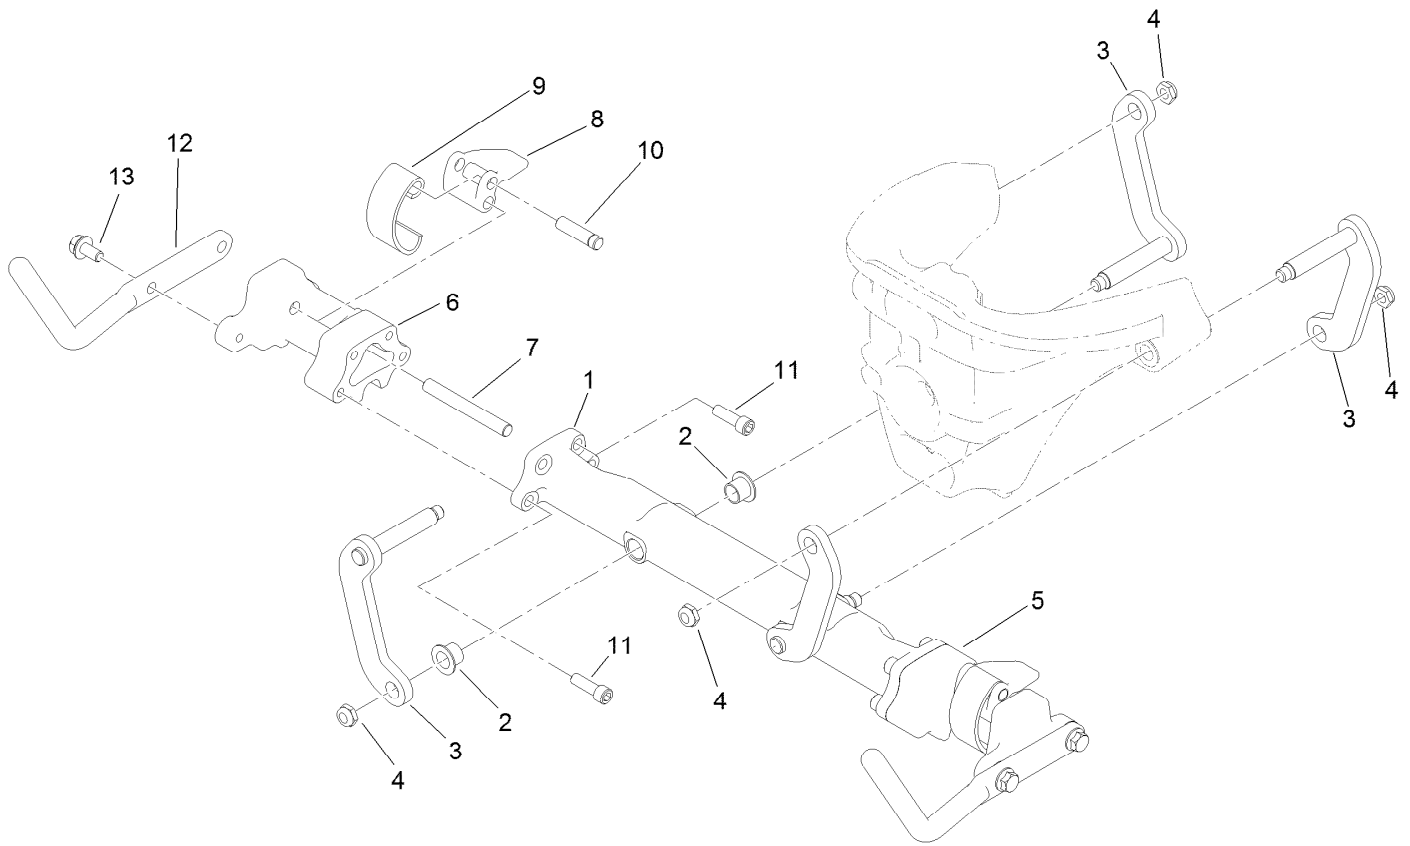


## Suspension Crossarm Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 120-3217    | 1    | Crossarm            |
| 2    | 125-5239    | 4    | Bushing-Flange      |
| 3    | 117-6654    | 4    | Link                |
| 4    | 3296-59     | 4    | Nut-Lock, NI        |
| 5    | 117-9482    | 1    | Mount-Cross Arm, LH |
| 6    | 117-9492    | 1    | Mount-Cross Arm, RH |
| 7    | 114-8051    | 2    | Pin-Pivot           |
| 8    | 114-8047    | 2    | Lever               |
| 9    | 114-8048    | 2    | Spring              |
| 10   | 114-8049    | 2    | Pin-Pivot           |
| 11   | 120-3227    | 8    | Screw-HSH           |
| 12   | 120-2784-01 | 2    | Horn-Basket         |
| 13   | 114-7728    | 4    | Screw-HF            |

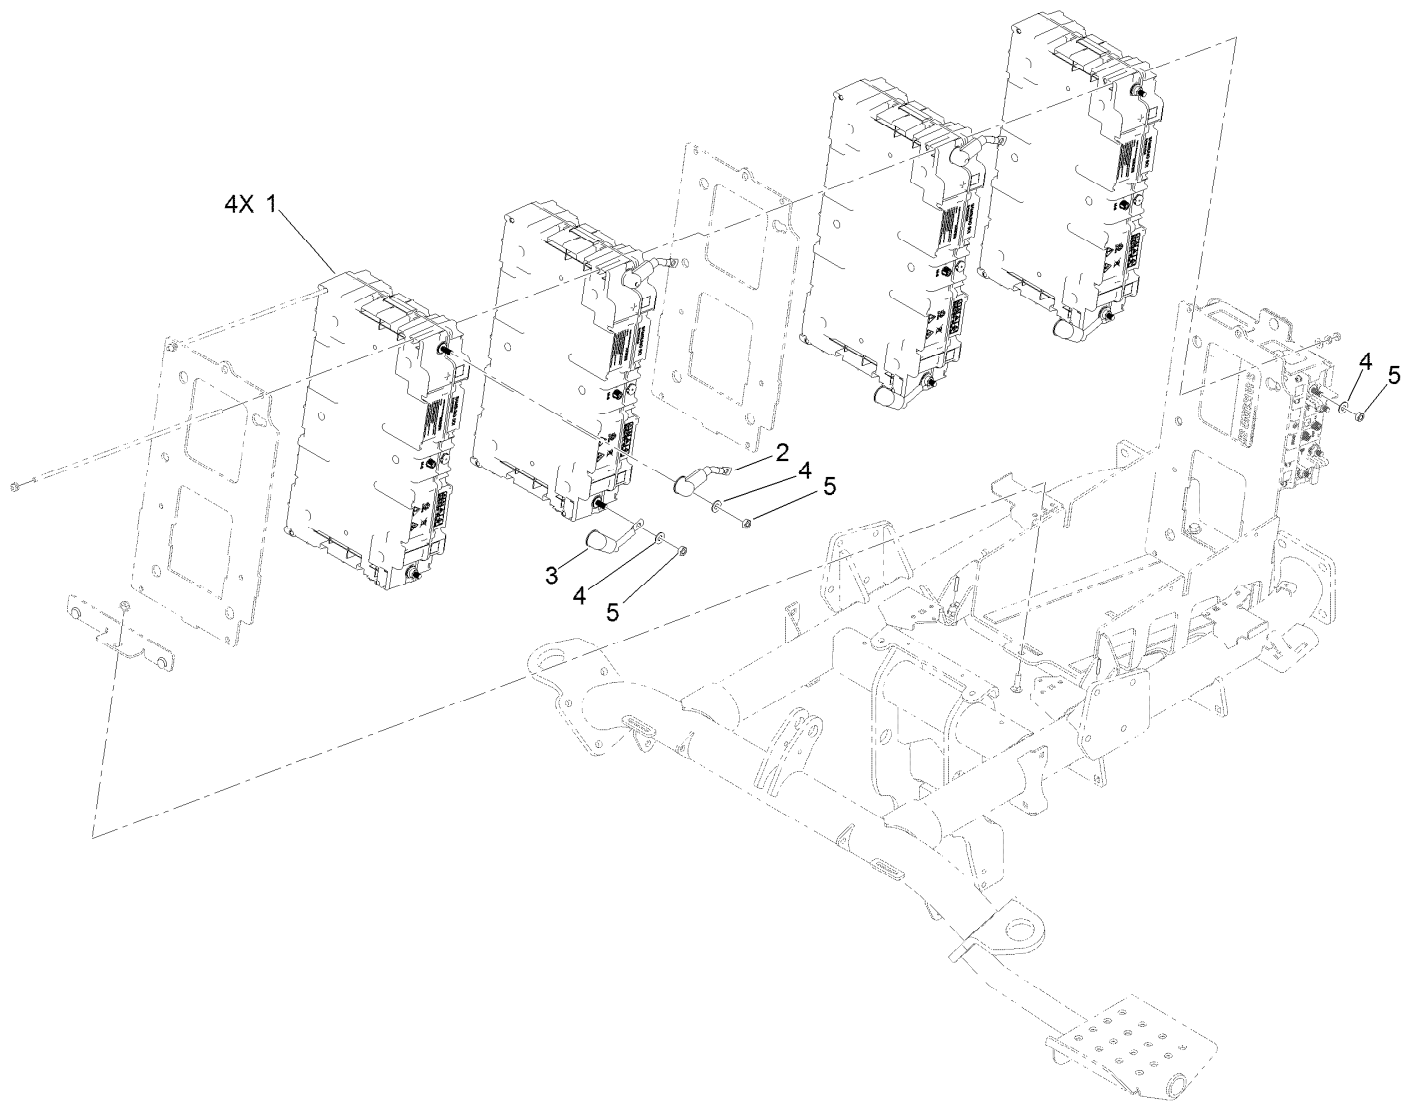

## Top Battery Installation Assembly

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 04070       | 4    | Battery                 |
| 2    | 122-1696    | 3    | Cable-Battery, Positive |
| 3    | 122-1697    | 3    | Cable-Battery, Negative |
| 4    | 107-0279    | 12   | Washer                  |
| 5    | 137-8088    | 12   | Nut-Hex                 |

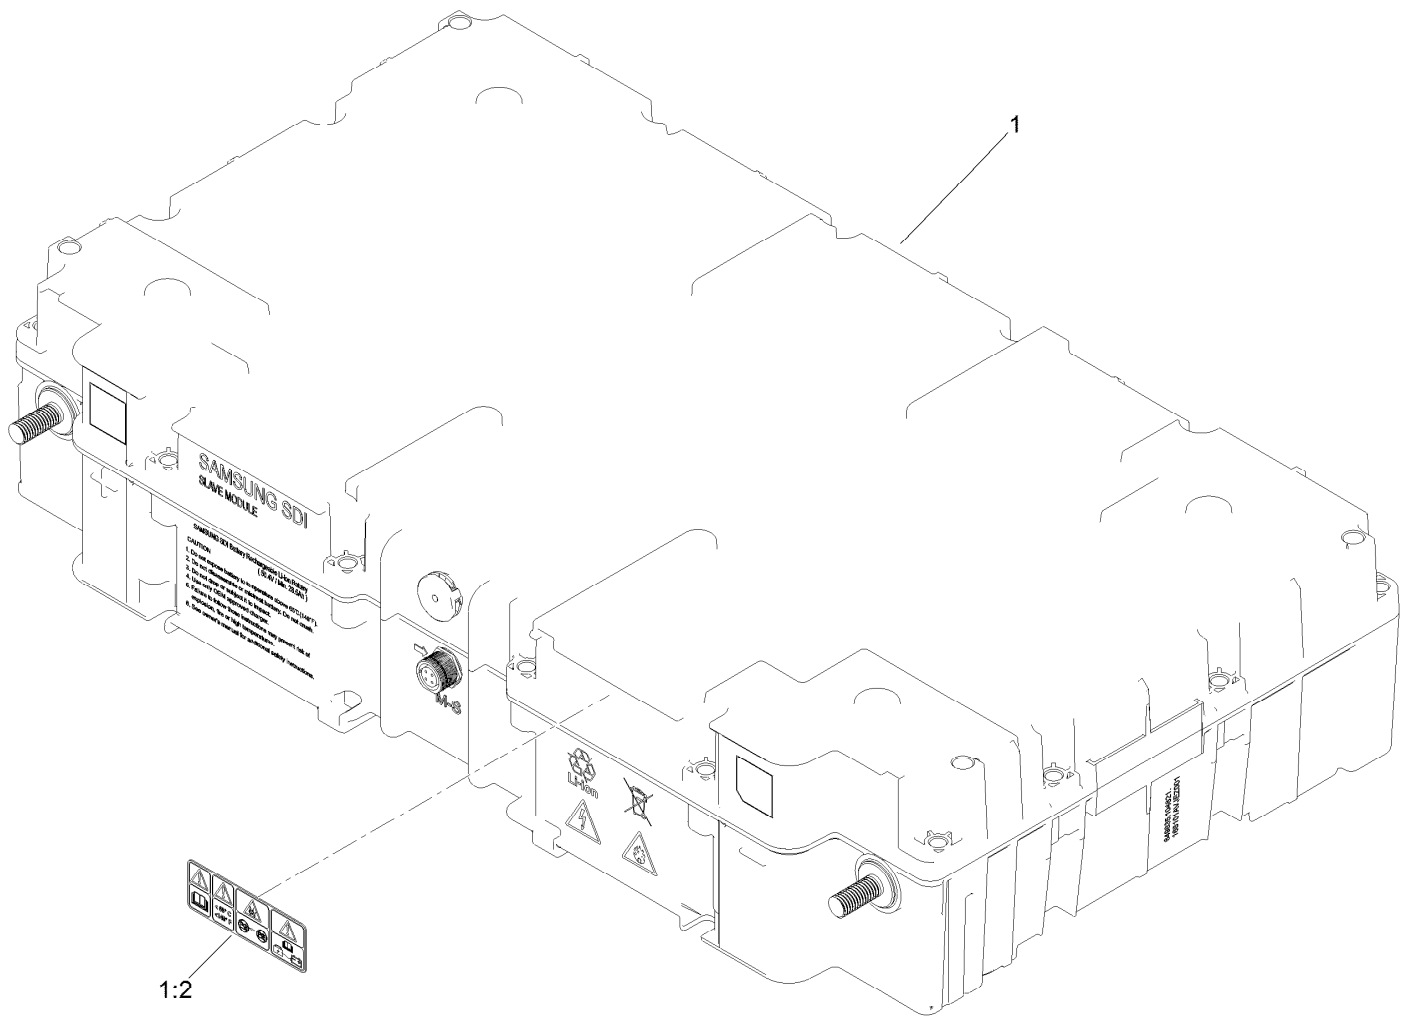

## Battery Assembly No. 04070


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    |             | 1    | Battery Service ASM ● |
| 1:2  | 137-9712    | 1    | Decal-Safety          |

 ● Not serviced separately

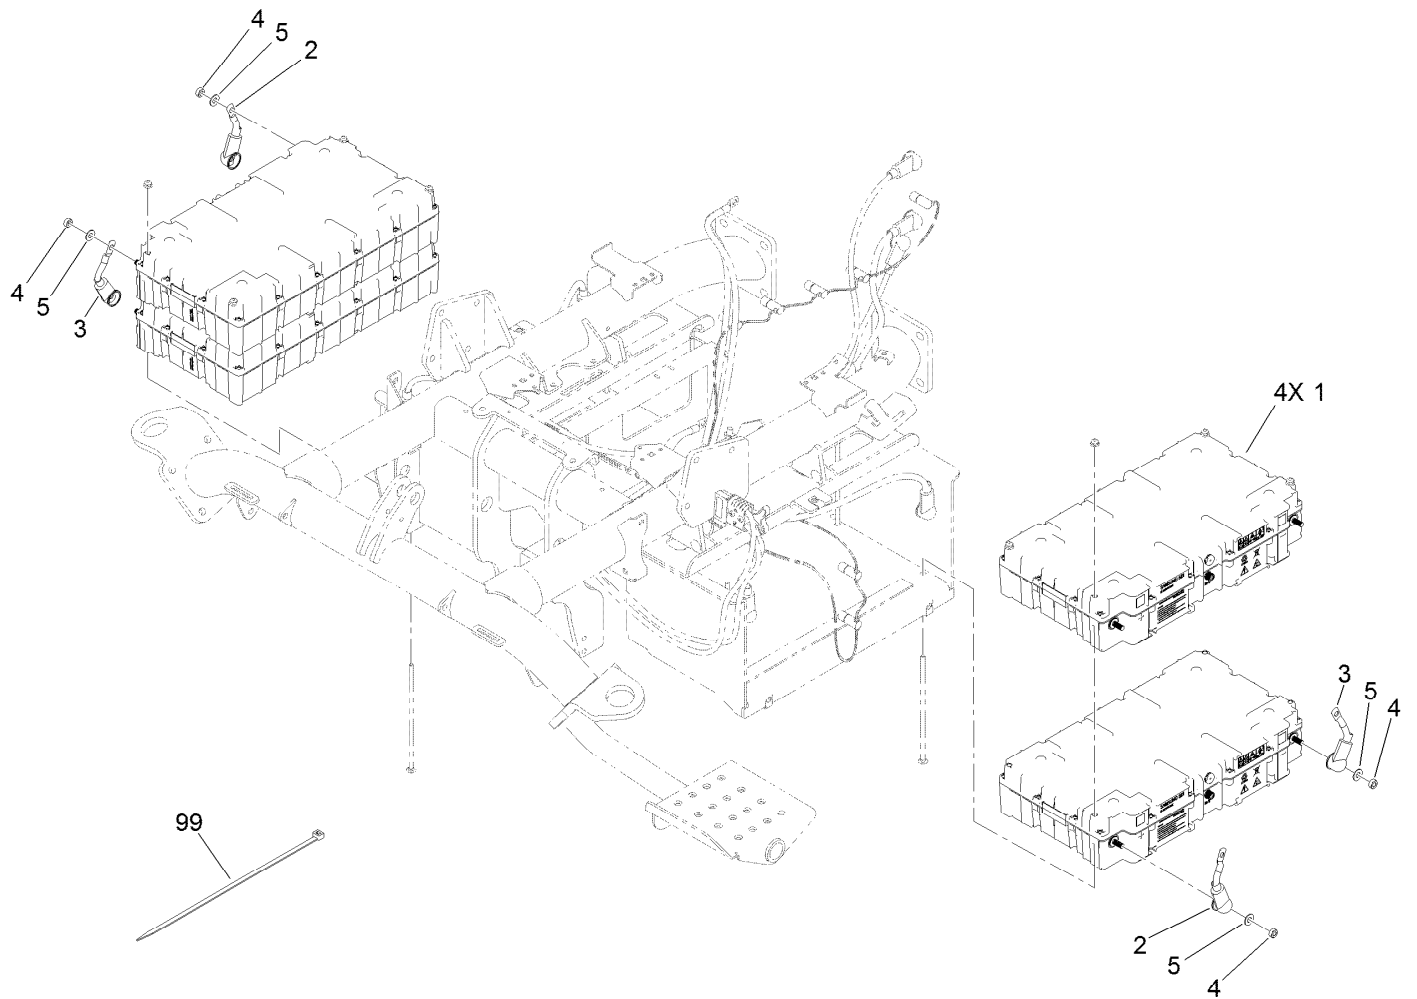

## Side Battery Installation Assembly
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 04070       | 4    | Battery                 |
| 2    | 122-1696    | 2    | Cable-Battery, Positive |
| 3    | 122-1697    | 2    | Cable-Battery, Negative |
| 4    | 137-8088    | 8    | Nut-Hex                 |
| 5    | 107-0279    | 8    | Washer                  |
| 99   | 1-809066    | 2    | Cable Tie-Plastic       |

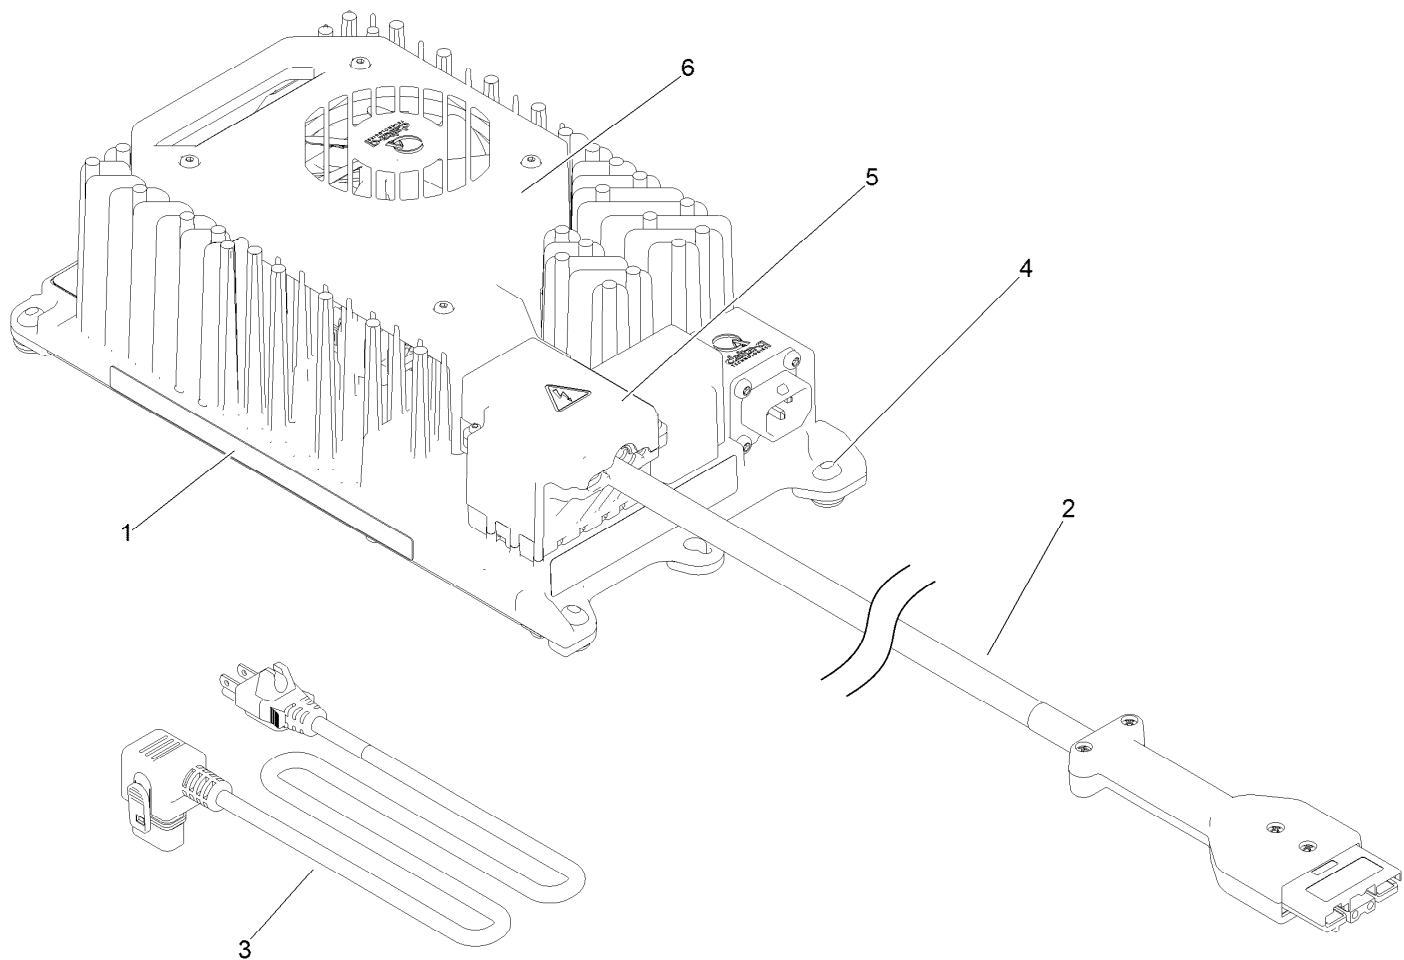

## 1200 Watt Lithium Battery Charger Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 137-9713    | 1    | Decal-Charger           |
| 2    | 137-9715    | 1    | Cord-DC W/Can Bus       |
| 3    | 107-0382    | 1    | Powercord-AC, Europe ●■ |
| 3    | 107-0383    | 1    | Powercord-AC, U.K. ●■   |
| 3    | 137-7983    | 1    | Cord-AC, 120V           |
| 4    | 137-7984    | 1    | Handle And Feet Kit     |
| 5    | 137-7985    | 1    | Cover-Plastic, DC Power |
| 6    | 139-8423    | 1    | Fan-Service             |

● Not illustrated

■ Optional Equipment

# Attachments and Accessories

## For 04590 Greensmaster eTriFlex 3370 Traction Unit

| Product Name                           | Model/Part |
|----------------------------------------|------------|
| 1200 Watt LI-ION Battery Charger ..... | 04012      |
| Turf Evaluator .....                   | 04399      |
| Light Kit.....                         | 04500      |
| 3WD Kit, Electric Triflex .....        | 04503      |
| Standard Greensmower Seat Kit .....    | 04508      |
| 8-Blade DPA Reel Mower .....           | 04651      |
| 11-Blade DPA Reel Mower .....          | 04653      |
| 14-Blade DPA Reel Mower .....          | 04655      |
| Anti-Bobbing Kit.....                  | 04716      |
| Tri-Roller .....                       | 04722      |
| Spiker .....                           | 04723      |
| Premium Seat.....                      | 04729      |
| Powercord-AC, Europe.....              | 107-0382   |
| Powercord-AC, U.K. ....                | 107-0383   |
| Wireless Hourmeter .....               | 115-4754   |
| Premium Armrest Kit.....               | 119-7105   |
| Weight Kit .....                       | 119-7129   |
| Armrest Kit.....                       | 121-3660   |
| Rear Light Kit.....                    | 137-7945   |
| Front Light Mount Kit .....            | 137-7947   |
| Bag Kit .....                          | 137-8130   |
| Bimini Shade Kit .....                 | 138-8579   |
| Kit-Fuses .....                        | 139-8482   |
| Height-of-Cut Bar.....                 | 94-9010    |
| Tire-TURFMATE .....                    | 99-4506    |

**Notes:**



**Count on it.**