



**Count on it.**

**Parts Catalog**

**Greensmaster® 3300 TriFlex®  
Traction Unit**

Model No. 04510—Serial No. 313000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


|                                                           |    |
|-----------------------------------------------------------|----|
| Roll-Over Protection System Assembly .....                | 4  |
| Brake Cable Grommet Assembly.....                         | 5  |
| Frame Assembly.....                                       | 6  |
| Platform Assembly.....                                    | 7  |
| Right Hand Support Platform Assembly .....                | 8  |
| Seatbase Assembly .....                                   | 9  |
| Steering Arm and Adjuster Assembly .....                  | 10 |
| Brake Cable and Lever Assembly .....                      | 11 |
| Back Wheel Assembly.....                                  | 12 |
| Hydraulic Cylinder Assembly No. 117-4480.....             | 13 |
| Front Wheel Assembly .....                                | 14 |
| Right Hand Brake Assembly No. 115-9441 .....              | 15 |
| Left Hand Brake Assembly No. 115-9440 .....               | 16 |
| Right Hand Wheel Motor Assembly No. 117-4302 .....        | 17 |
| Left Hand Wheel Motor Assembly No. 117-4303 .....         | 18 |
| Console and Reel Control Assembly.....                    | 19 |
| Traction Interface Control Assembly .....                 | 20 |
| Ignition, Throttle and Choke Control Assembly .....       | 21 |
| Console Cable Routing Assembly .....                      | 22 |
| Engine and Exhaust Assembly.....                          | 23 |
| Battery Assembly .....                                    | 24 |
| Wire Harness Assembly .....                               | 25 |
| Pump Coupling Assembly.....                               | 26 |
| Hydraulic Pump Assembly No. 121-9558.....                 | 27 |
| Neutral Centering Assembly.....                           | 29 |
| Traction Drive Hydraulic Line Assembly .....              | 30 |
| Traction Drive Hose Routing Assembly .....                | 31 |
| Hydraulic Mow Assembly .....                              | 32 |
| Hydraulic Mow Manifold Assembly .....                     | 33 |
| Hydraulic Mow Manifold Assembly No. 117-9858.....         | 34 |
| Hydraulic Mow Clamp Assembly .....                        | 35 |
| Hydraulic Mow Hose Routing Assembly.....                  | 36 |
| Hydraulic Mow Reel Motor Assembly .....                   | 37 |
| Hydraulic Reel Motor Assembly No. 115-3321 .....          | 38 |
| Hydraulic Mow Gear Pump Assembly.....                     | 39 |
| Hydraulic Gear Pump Assembly No. 114-9956.....            | 40 |
| Lift Circuit Assembly .....                               | 41 |
| Steering Valve Assembly No. 114-4672.....                 | 43 |
| Hydraulic Cylinder Assembly No. 119-8129.....             | 44 |
| Hydraulic Cylinder Assembly No. 119-8128.....             | 45 |
| Hydraulic Lift Manifold Assembly.....                     | 46 |
| Hydraulic Lift Manifold Assembly No. 125-5187 .....       | 47 |
| Steering Circuit Assembly.....                            | 48 |
| Fuel Line and Carbon Canister Hose Routing Assembly ..... | 49 |
| Fuel Tank Assembly.....                                   | 51 |
| Hydraulic Tank and Leak Detector Assembly.....            | 52 |
| Suspension and Basket Assembly .....                      | 53 |
| Suspension Pin Position Assembly .....                    | 54 |
| Suspension A-Arm Assembly.....                            | 55 |
| Suspension Crossarm Assembly.....                         | 56 |
| Attachments and Accessories .....                         | 57 |

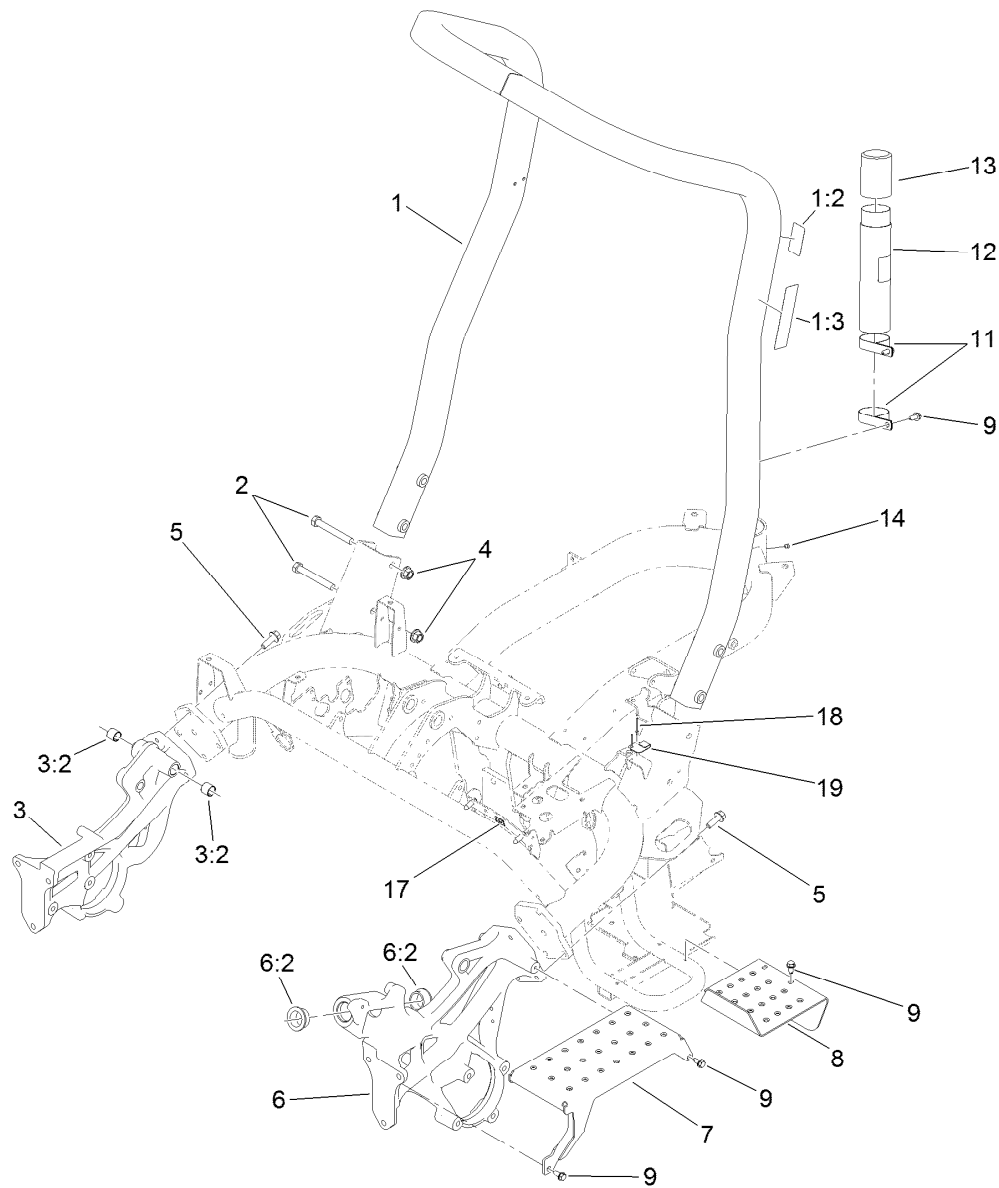

## Roll-Over Protection System Assembly


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 115-8206    | 1    | ROPS ASM         |
| 1:2  | 115-8199    | 1    | Decal-ROPS       |
| 1:3  | 115-8226    | 1    | Decal-ROPS       |
| 2    | 325-35      | 4    | Screw-HH         |
| 3    | 117-9023    | 1    | Casting-Side, RH |
| 3:2  | 94-9609     | 2    | Bushing-Straight |
| 4    | 99-5107     | 4    | Nut-Lock         |
| 5    | 117-9035    | 8    | Screw-HHF        |
| 6    | 117-9022    | 1    | Casting-Side, LH |
| 6:2  | 60-0080     | 2    | Bushing          |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 7    | 117-9051-01 | 1    | Step                  |
| 8    | 119-4468-01 | 1    | Plate-Step            |
| 9    | 32104-32    | 9    | Screw-HWH             |
| 11   | 2412-133    | 2    | Clamp-R               |
| 12   | 104-7050    | 1    | Tube-Manual           |
| 13   | 104-7048    | 1    | Cap-Housing           |
| 14   | 302-59      | 1    | Plug-EXT Hex Spl      |
| 17   | 119-1730    | 1    | Receptacle-Clip, Mini |
| 18   | 3269-32     | 2    | Rivet-Pop             |
| 19   | 121-5865    | 1    | Clip-Cover, Back      |

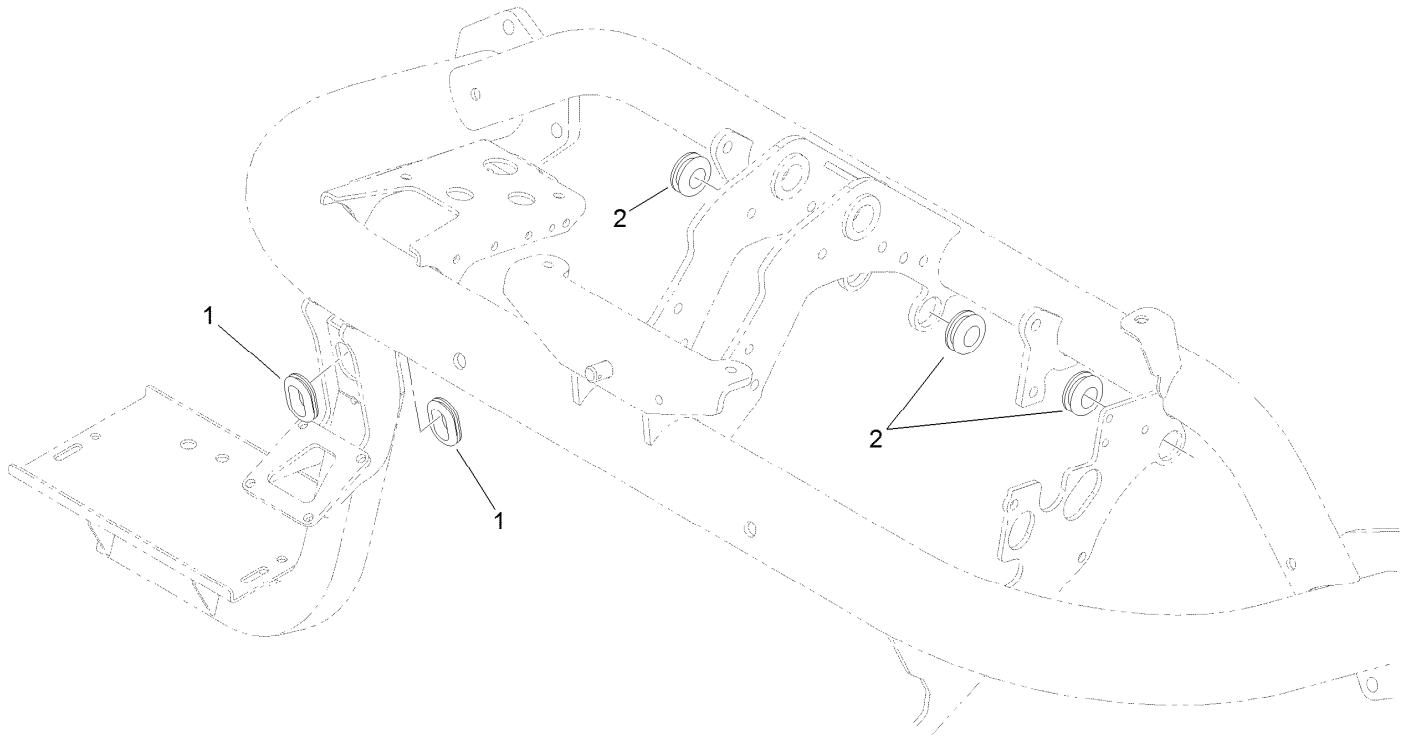

## Brake Cable Grommet Assembly

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 240-5              | 2           | Grommet            |
| 2           | 98-8529            | 3           | Grommet            |

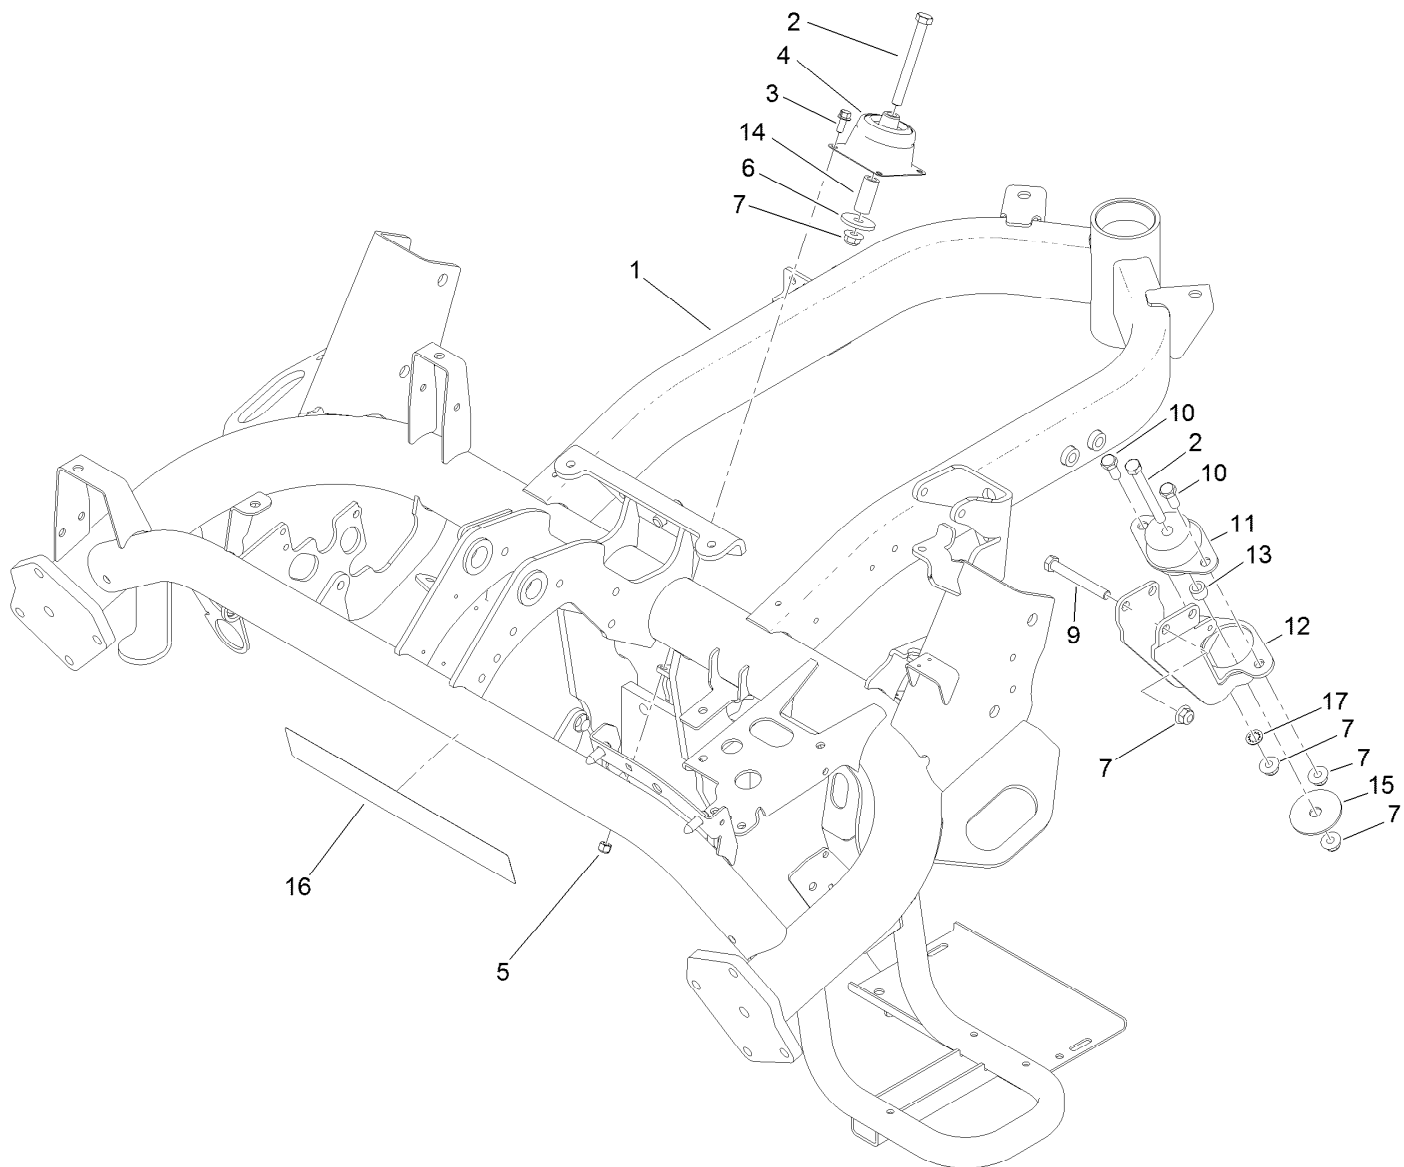

## Frame Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 121-5876-01 | 1    | Frame                |
| 2    | 323-15      | 3    | Screw-HH             |
| 3    | 3234-33     | 8    | Screw-HHF            |
| 4    | 112-5757    | 2    | Mount-Engine, Rubber |
| 5    | 3296-42     | 8    | Nut-Lock, NI         |
| 6    | 117-9330    | 2    | Spacer               |
| 7    | 104-8301    | 7    | Nut-HF, NI           |
| 9    | 323-14      | 2    | Screw-HH             |

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 323-5       | 2    | Screw-HH              |
| 11   | 53-9680     | 1    | Mount-Engine          |
| 12   | 117-9256-01 | 1    | Mount-Engine, Rear    |
| 13   | 52-2480     | 1    | Spacer-Wheel          |
| 14   | 104-0151    | 2    | Spacer                |
| 15   | 87-5100     | 1    | Washer-Snubbing       |
| 16   | 119-9348    | 1    | Decal                 |
| 17   | 3254-6      | 1    | Washer-Lock, Internal |

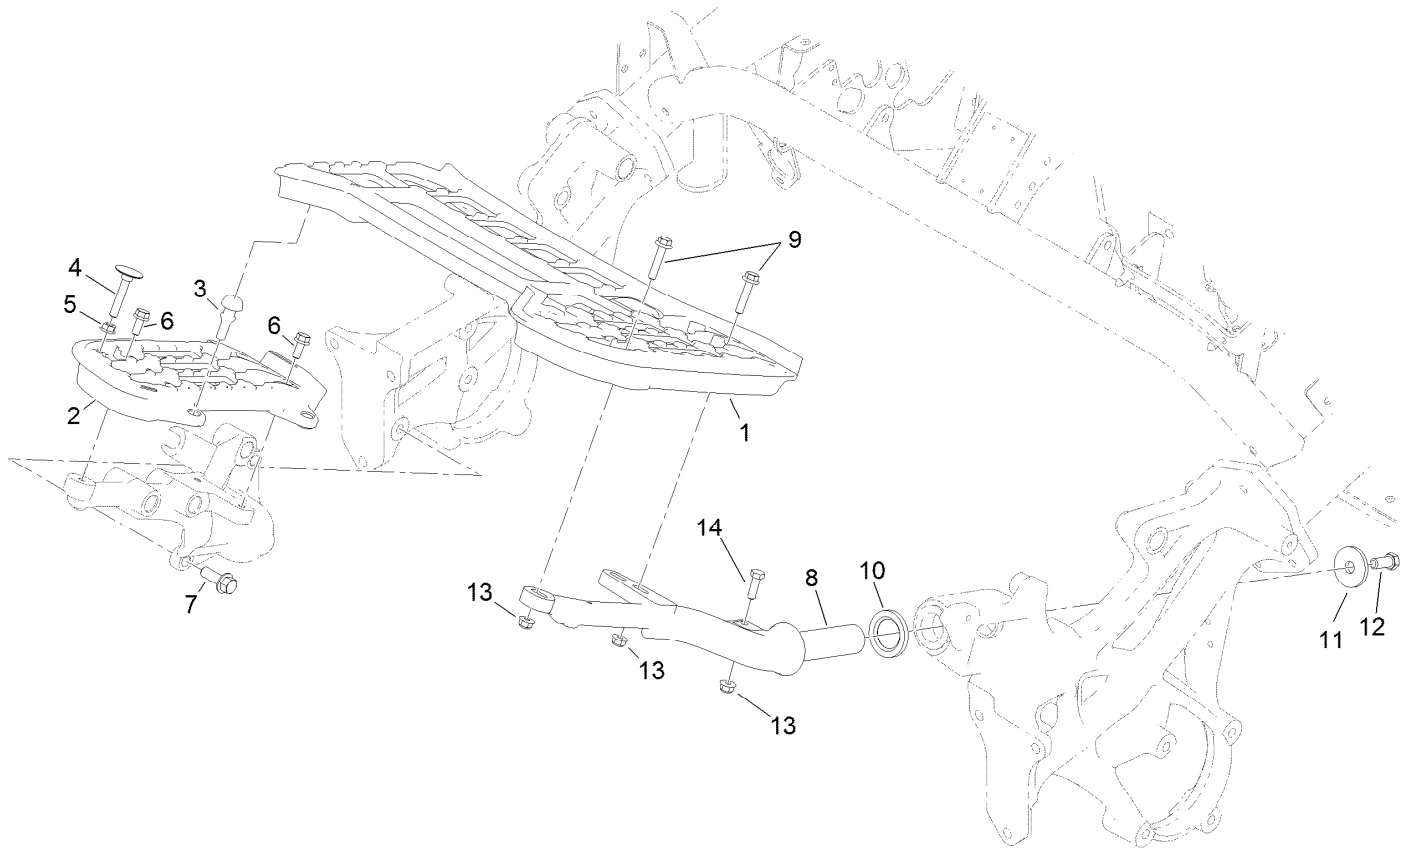

## Platform Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 117-9009    | 1    | Platform-LH          |
| 2    | 117-9008    | 1    | Platform-RH          |
| 3    | 117-9072    | 2    | Bumper-Rubber        |
| 4    | 115-8240    | 1    | Screw-Elevator       |
| 5    | 32128-20    | 1    | Nut-HF               |
| 6    | 3234-47     | 3    | Screw-HHF            |
| 7    | 117-9035    | 3    | Screw-HHF            |
| 8    | 117-9006-01 | 1    | Support-Platform, LH |
| 9    | 115-1794    | 3    | Screw-HHF            |
| 10   | 94-8946     | 1    | Washer-Thrust        |
| 11   | 84-1560     | 1    | Washer-Thrust        |
| 12   | 324-4       | 1    | Screw-HH             |
| 13   | 104-8300    | 4    | Nut-HF, NI           |
| 14   | 322-5       | 1    | Screw-HH             |

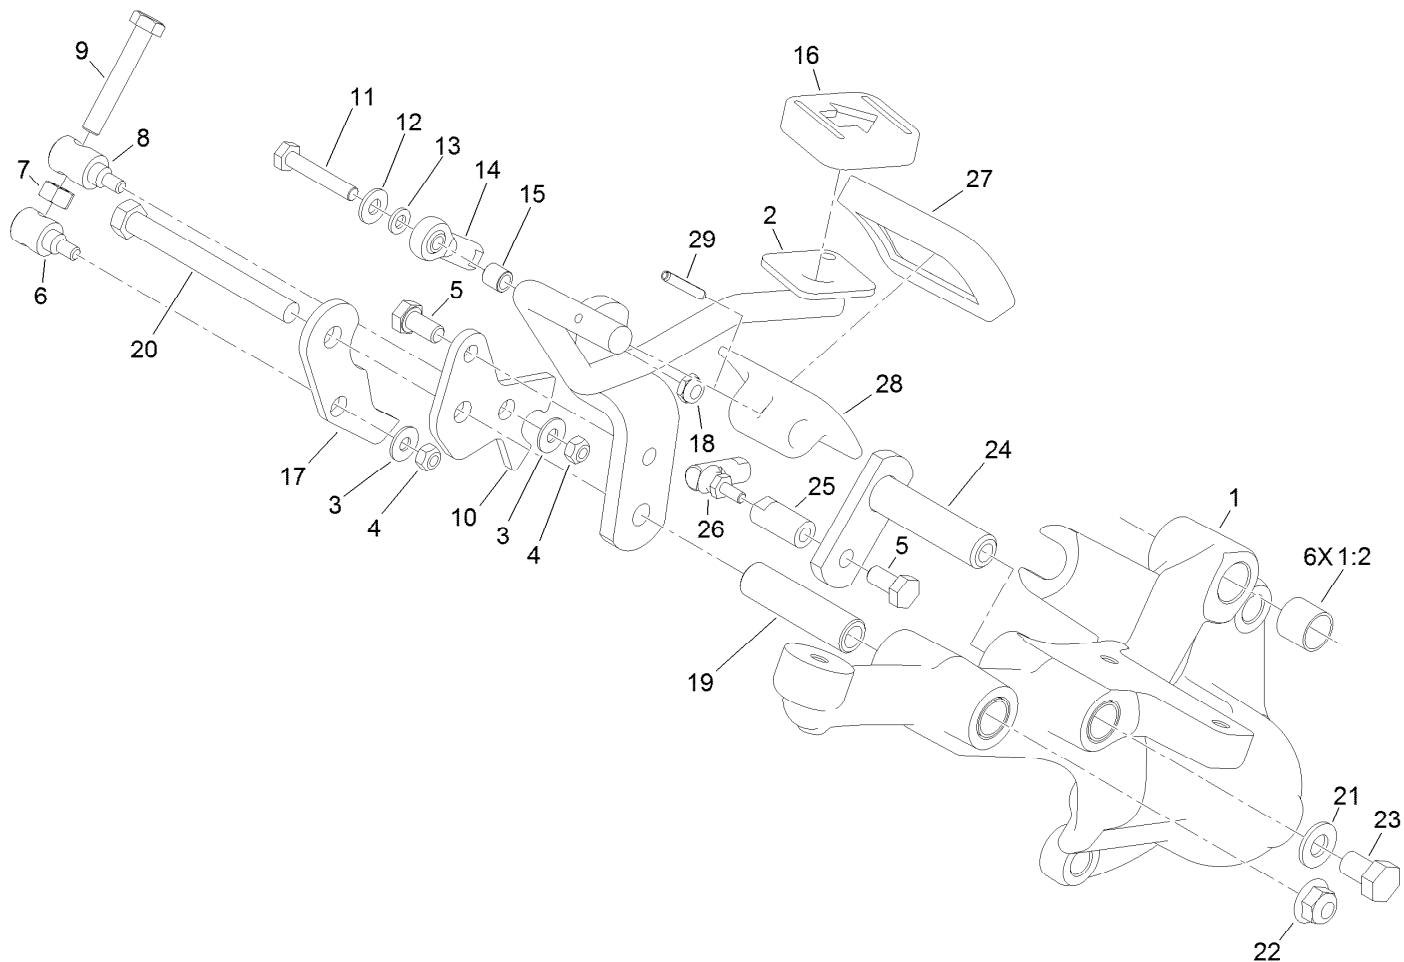

## Right Hand Support Platform Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 117-9019    | 1    | Support-Platform, RH   |
| 1:2  | 256-311     | 6    | Bushing-Split          |
| 2    | 119-1725-01 | 1    | Rod-Traction           |
| 3    | 3256-1      | 2    | Washer-Flat            |
| 4    | 33023-00    | 2    | Nut-Lock               |
| 5    | 33114-016   | 2    | Screw-HH               |
| 6    | 94-1374     | 1    | Trunnion-Bracket, Mow  |
| 7    | 33014-00    | 1    | Nut-Hex                |
| 8    | 94-1375     | 1    | Trunnion-Bracket, Lock |
| 9    | 94-3489     | 1    | Screw-HH               |
| 10   | 117-9021    | 1    | Bracket-Lock           |
| 11   | 321-9       | 1    | Screw-HH               |
| 12   | 3256-22     | 1    | Washer-Flat            |
| 13   | 33093-00    | 1    | Washer-Flat            |
| 14   | 2411-41     | 1    | Rod End-Ball Joint     |

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 15   | 99-3545     | 1    | Spacer             |
| 16   | 74-9110     | 1    | Pad-Pedal, Reverse |
| 17   | 125-3011    | 1    | Bracket-Mow        |
| 18   | 3296-56     | 1    | Nut-Lock, NI       |
| 19   | 94-1371     | 1    | Spacer             |
| 20   | 323-42      | 1    | Screw-HH           |
| 21   | 3256-24     | 1    | Washer-Flat        |
| 22   | 104-8301    | 1    | Nut-HF, NI         |
| 23   | 33115-016   | 1    | Screw-HH           |
| 24   | 94-1300     | 1    | Lock-Neutral       |
| 25   | 94-1386     | 1    | Shaft-Pedal        |
| 26   | 2411-38     | 1    | Joint-Ball         |
| 27   | 74-9100     | 1    | Pad-Pedal, Forward |
| 28   | 117-9507    | 1    | Pedal-Accelerator  |
| 29   | 32121-45    | 1    | Pin-Spring         |

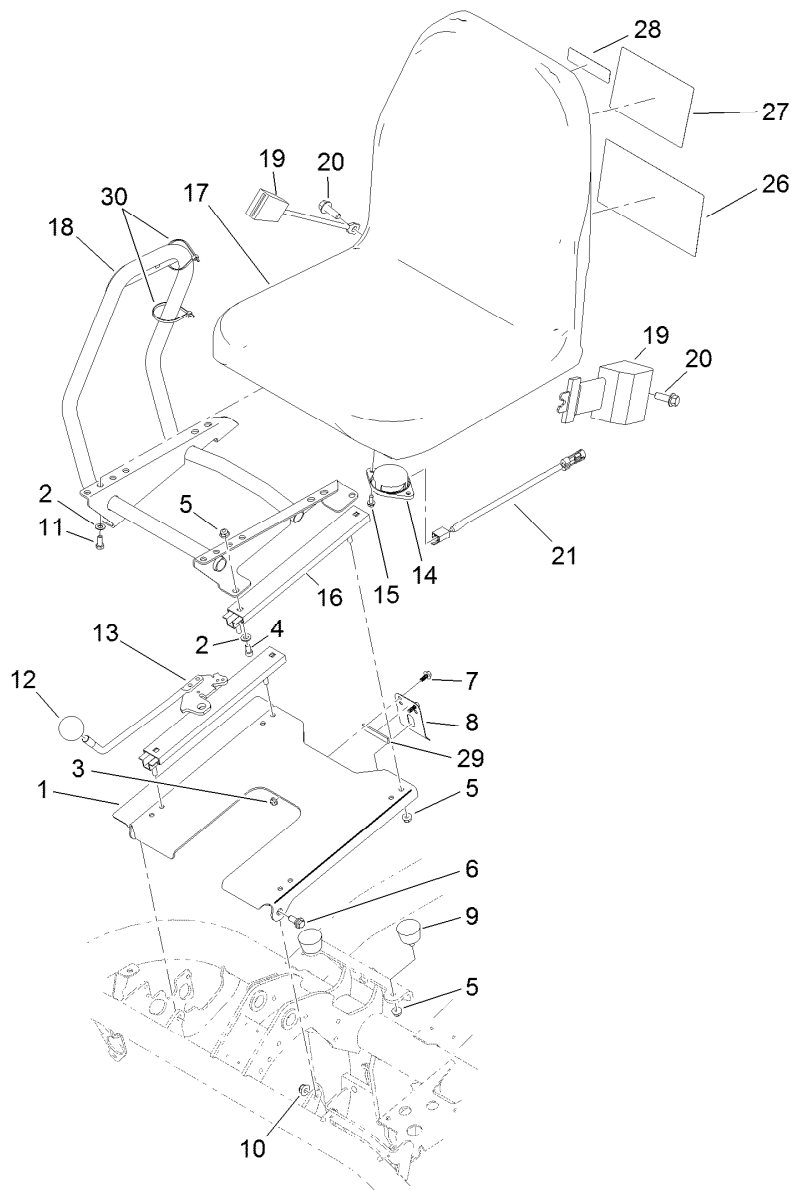

## Seatbase Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 117-4440-03 | 1    | Plate-Seat                 |
| 2    | 3256-23     | 8    | Washer-Plain               |
| 3    | 104-7201    | 2    | Nut-HF, NI                 |
| 4    | 3274-10     | 4    | Screw-HSH                  |
| 5    | 104-8300    | 10   | Nut-HF, NI                 |
| 6    | 94-7582     | 2    | Bolt-Shoulder              |
| 7    | 99-6810     | 2    | Screw-HHF                  |
| 8    | 66-2630     | 1    | Latch-Seat                 |
| 9    | 68-3270     | 2    | Bumper-Rubber              |
| 10   | 104-8301    | 2    | Nut-HF, NI                 |
| 11   | 322-3       | 4    | Screw-HH                   |
| 12   | 233-48      | 1    | Knob                       |
| 13   | 119-4483    | 1    | Seat Adjuster Lever ASM    |
| 14   | 92-6282     | 1    | Switch-Seat                |
| 15   | 32144-10    | 2    | Screw-HWH                  |
| 16   | 92-8990     | 1    | Adjuster-Seat, Non-Locking |
| 17   | 104-4620    | 1    | Seat                       |
| 18   | 121-5189-03 | 1    | Mount-Console              |
| 19   | 100-4928    | 1    | Belt-Seat                  |


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 20   | 117-9035    | 2    | Screw-HHF                  |
| 21   | 108-8657    | 1    | Harness-Wire, Seat         |
| 26   | 115-8159    | 1    | Decal-Service, Spanish     |
| 26   | 115-8160    | 1    | Decal-Service, French      |
| 26   | 115-8161    | 1    | Decal-Service, German      |
| 26   | 115-8162    | 1    | Decal-Service, Swedish     |
| 26   | 115-8163    | 1    | Decal-Service, Italian     |
| 26   | 115-8164    | 1    | Decal-Service, Portuguese  |
| 26   | 115-8165    | 1    | Decal-Service, Norwegian   |
| 26   | 115-8166    | 1    | Decal-Service, Finnish     |
| 26   | 115-8167    | 1    | Decal-Service, Danish      |
| 26   | 115-8168    | 1    | Decal-Service, Dutch       |
| 26   | 115-8169    | 1    | Decal-Service, Japanese    |
| 26   | 119-9345    | 1    | Decal-Aid, Quick Reference |
| 27   | 115-8156    | 1    | Decal-Speed, Clip          |
| 28   | 117-2718    | 1    | Decal-Arrester, Spark      |
| 29   | 120-5753    | 1    | Strip-Foam                 |
| 30   | 3290-379    | 2    | Tie-Cable                  |

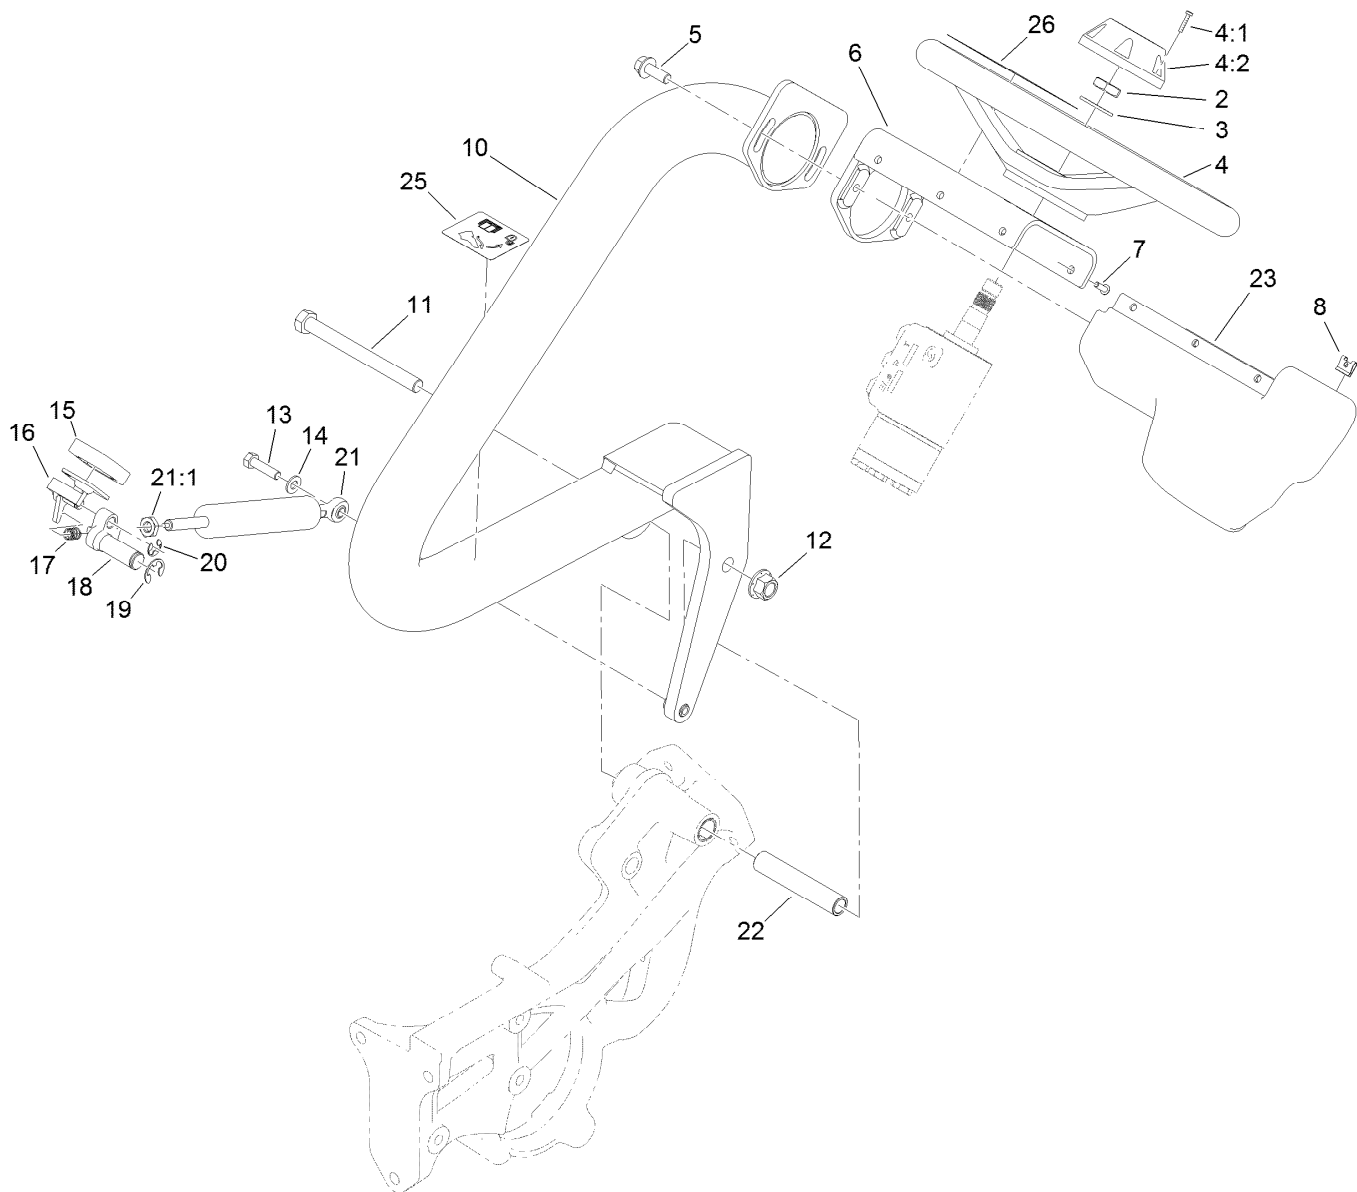

## Steering Arm and Adjuster Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 2    | 3296-33     | 1    | Nut-Lock, NI        |
| 3    | 3256-27     | 1    | Washer-Flat         |
| 4    | 75-0560     | 1    | Steering Wheel ASM  |
| 4:1  | 32144-21    | 1    | Screw               |
| 4:2  | 68-5140     | 1    | Cap-Wheel, Steering |
| 5    | 3234-42     | 2    | Screw-HHF           |
| 6    | 117-9346-03 | 1    | Mount-Steering      |
| 7    | 3274-39     | 6    | Screw-HSBH          |
| 8    | 3290-277    | 6    | Nut-Speed           |
| 10   | 117-4444-01 | 1    | Arm-Steering        |
| 11   | 325-22      | 1    | Screw-HH            |
| 12   | 99-5107     | 1    | Nut-Lock            |
| 13   | 322-47      | 1    | Screw-HH            |
| 14   | 3256-23     | 1    | Washer-Plain        |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 15   | 74-9110     | 1    | Pad-Pedal, Reverse    |
| 16   | 117-4457    | 1    | Lever                 |
| 17   | 106-9791    | 1    | Spring                |
| 18   | 117-9024    | 1    | Lever-Pivot           |
| 19   | 32120-19    | 1    | E-Ring                |
| 20   | 105-7004    | 1    | E-Ring                |
| 21   | 125-5181    | 1    | Cylinder-Gas          |
| 21:1 | 112-8617    | 1    | Nut-Hex               |
| 22   | 117-9002    | 1    | Spacer                |
| 23   | 119-9300    | 1    | Cover-Valve, Steering |
| 25   | 119-9346    | 1    | Decal-Arm, Steering   |
| 26   | 121-2640    | 1    | Decal-Danger, CE      |
| 26   | 121-2641    | 1    | Decal-Danger          |

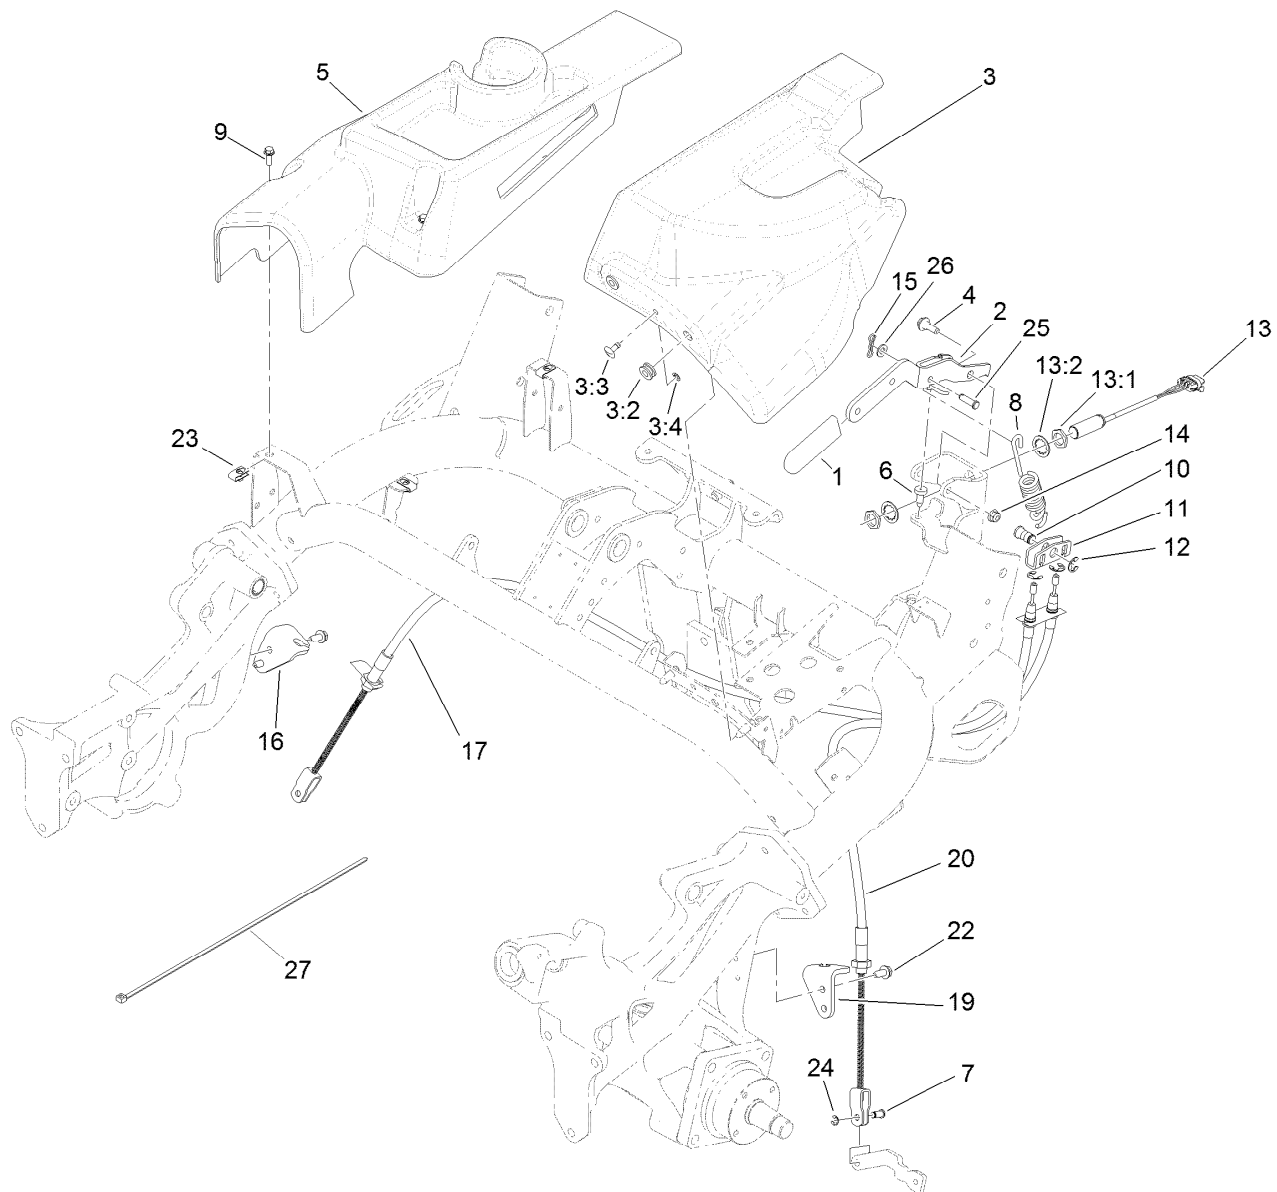

## Brake Cable and Lever Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 21-1880     | 1    | Grip-Handle              |
| 2    | 119-2149-03 | 1    | Lever-Brake              |
| 3    | 121-5868    | 1    | LH Cover ASM             |
| 3:2  | 92-5972     | 2    | Grommet-Rubber           |
| 3:3  | 119-1728    | 1    | Stud-1/4 Turn            |
| 3:4  | 119-1729    | 1    | Retainer-Stud            |
| 4    | 116-1297    | 2    | Screw-Shoulder           |
| 5    | 119-1678    | 1    | Cover-Side, RH           |
| 6    | 87-8460     | 1    | Bumper-Rubber            |
| 7    | 109-6887    | 2    | Pin-Clevis               |
| 8    | 119-2144    | 1    | Spring-Extention         |
| 9    | 115-5103    | 3    | Screw-HHF                |
| 10   | 119-2146    | 1    | Pin                      |
| 11   | 114-9994    | 1    | Bracket-Equalizer, Cable |
| 12   | 32120-47    | 3    | Ring-Retaining, External |

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 13   | 115-5300    | 1    | Proximity Switch ASM        |
| 13:1 | 117-3207    | 2    | Nut-Hex                     |
| 13:2 | 117-3208    | 2    | Washer-Lock, Internal Tooth |
| 14   | 104-8300    | 2    | Nut-HF, NI                  |
| 15   | 119-1415    | 1    | Pin-Cotter, Locking         |
| 16   | 115-5787    | 1    | Bracket-Brake Cable, RH     |
| 17   | 115-9412    | 1    | Cable-Brake, RH             |
| 19   | 114-9997    | 1    | Bracket-Brake Cable, LH     |
| 20   | 114-9996    | 1    | Cable-Brake, LH             |
| 22   | 32104-32    | 4    | Screw-HWH                   |
| 23   | 107069      | 3    | Clip                        |
| 24   | 701197      | 2    | E-Ring                      |
| 25   | 283-61      | 1    | Pin-Yoke                    |
| 26   | 3256-23     | 1    | Washer-Plain                |
| 27   | 3290-379    | 1    | Tie-Cable                   |

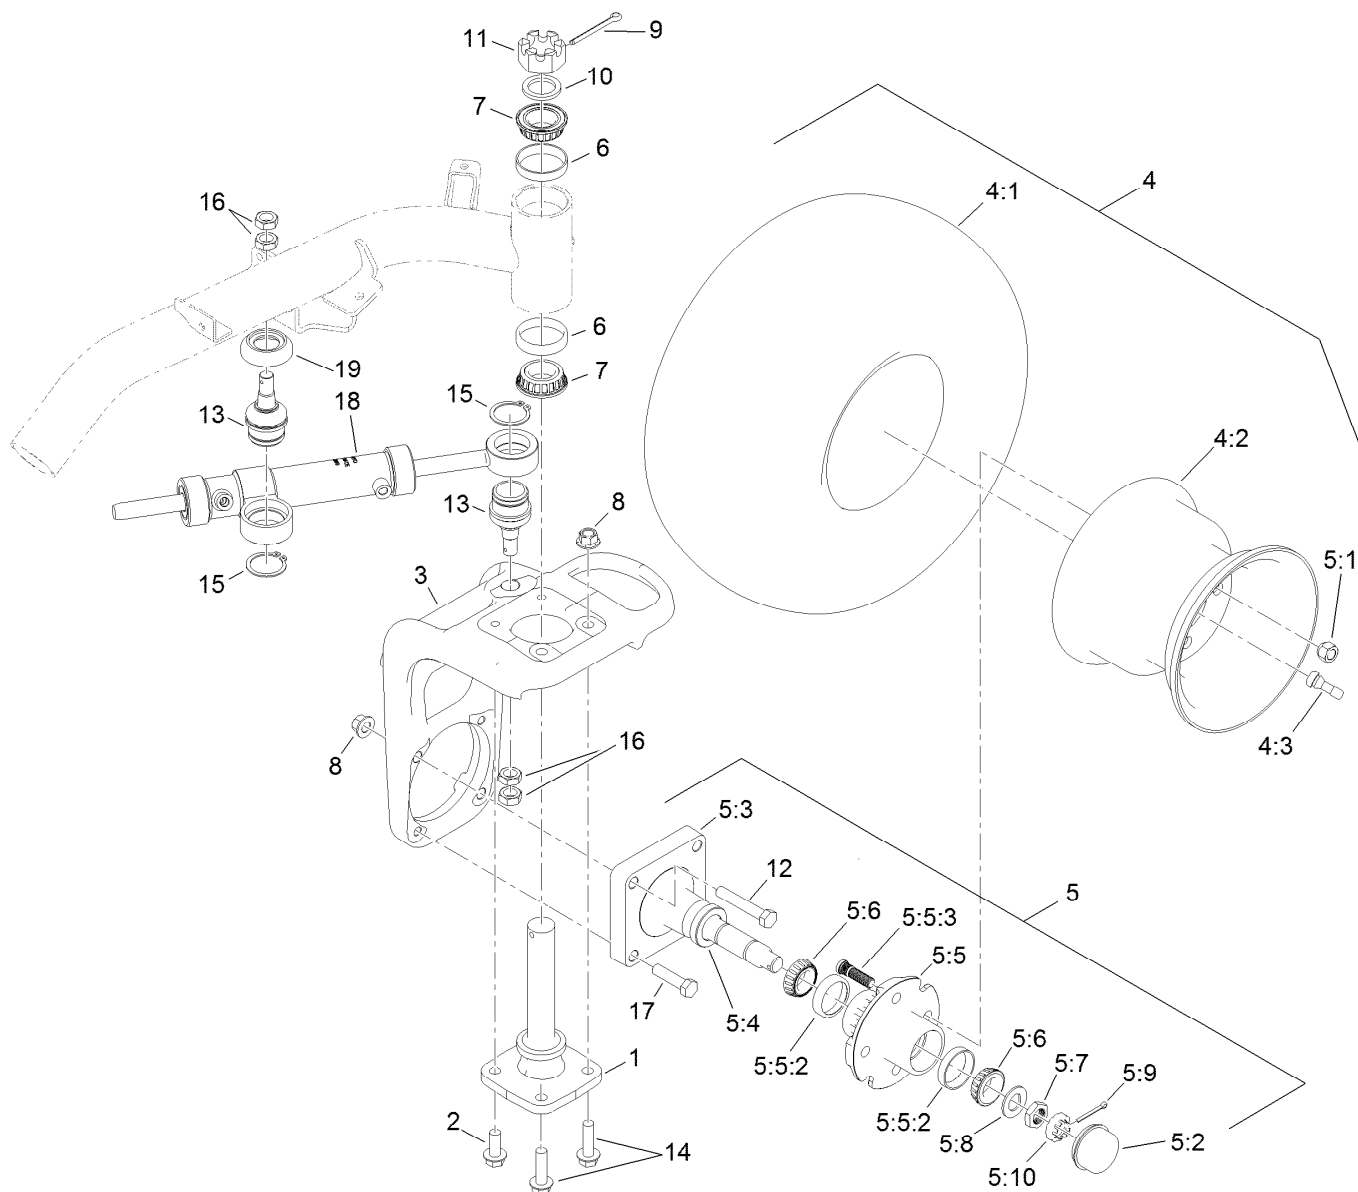

## Back Wheel Assembly

| Ref.  | Part Number | Qty. | Description           |
|-------|-------------|------|-----------------------|
| 1     | 115-2657    | 1    | Spindle-Steering      |
| 2     | 3234-38     | 2    | Screw-HHF             |
| 3     | 117-4366-01 | 1    | Base-Fork, Rear       |
| 4     |             | 1    | Wheel And Tire ASM ●  |
| 4:1   | 117-9031    | 1    | Tire                  |
| 4:2   | 217-60      | 1    | Rim                   |
| 4:3   | 232-27      | 1    | Stem-Valve            |
| 5     | 119-4490    | 1    | Wheel Spindle ASM     |
| 5:1   | 242-50      | 4    | Nut-Lug               |
| 5:2   | 241-119     | 1    | Cap-Dust              |
| 5:3   | 112-7173    | 1    | Spindle               |
| 5:4   | 112-1690    | 1    | Seal-Oil              |
| 5:5   | 117-9093    | 1    | Hub ASM               |
| 5:5:2 | 254-72      | 2    | Bearing-Cup, Tapered  |
| 5:5:3 | 114-3918    | 4    | Stud-Wheel            |
| 5:6   | 254-94      | 2    | Bearing-Cone, Tapered |
| 5:7   | 117-8260    | 1    | Nut                   |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 5:8  | 117-8259    | 1    | Washer-Spindle           |
| 5:9  | 3272-18     | 1    | Pin-Cotter               |
| 5:10 | 93-0307     | 1    | Nut-Lock, Retainer       |
| 6    | 115-9471    | 2    | Bearing-Cup              |
| 7    | 115-9472    | 2    | Bearing-Cone And Seal    |
| 8    | 99-5107     | 4    | Nut-Lock                 |
| 9    | 3272-37     | 1    | Pin-Cotter               |
| 10   | 18-6320     | 1    | Washer-Steering          |
| 11   | 32136-9     | 1    | Nut-Hex, Slotted         |
| 12   | 325-12      | 2    | Screw-HH                 |
| 13   | 117-9875    | 2    | Joint-Ball               |
| 14   | 3234-22     | 2    | Screw-HHF                |
| 15   | 32151-104   | 2    | Ring-Retaining, External |
| 16   | 3220-6      | 4    | Nut-Jam                  |
| 17   | 325-8       | 2    | Screw-HH                 |
| 18   | 117-4480    | 1    | HYD Cylinder ASM         |
| 19   | 120-2026    | 1    | Spacer-Cylinder          |

 
● Not serviced separately



## Hydraulic Cylinder Assembly No. 117-4480

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 119-7124    | 1    | Kit-Seal      |
| 1:1  |             | 2    | O-Ring ●      |
| 1:2  |             | 2    | Ring-Backup ● |
| 1:3  |             | 1    | Seal-Psp ●    |
| 1:4  |             | 2    | Ring-Wear ●   |
| 1:5  |             | 2    | Seal-Bs ●     |
| 1:6  |             | 2    | Seal-Dust ●   |
| 1:7  |             | 1    | O-Ring ●      |

● Not serviced separately

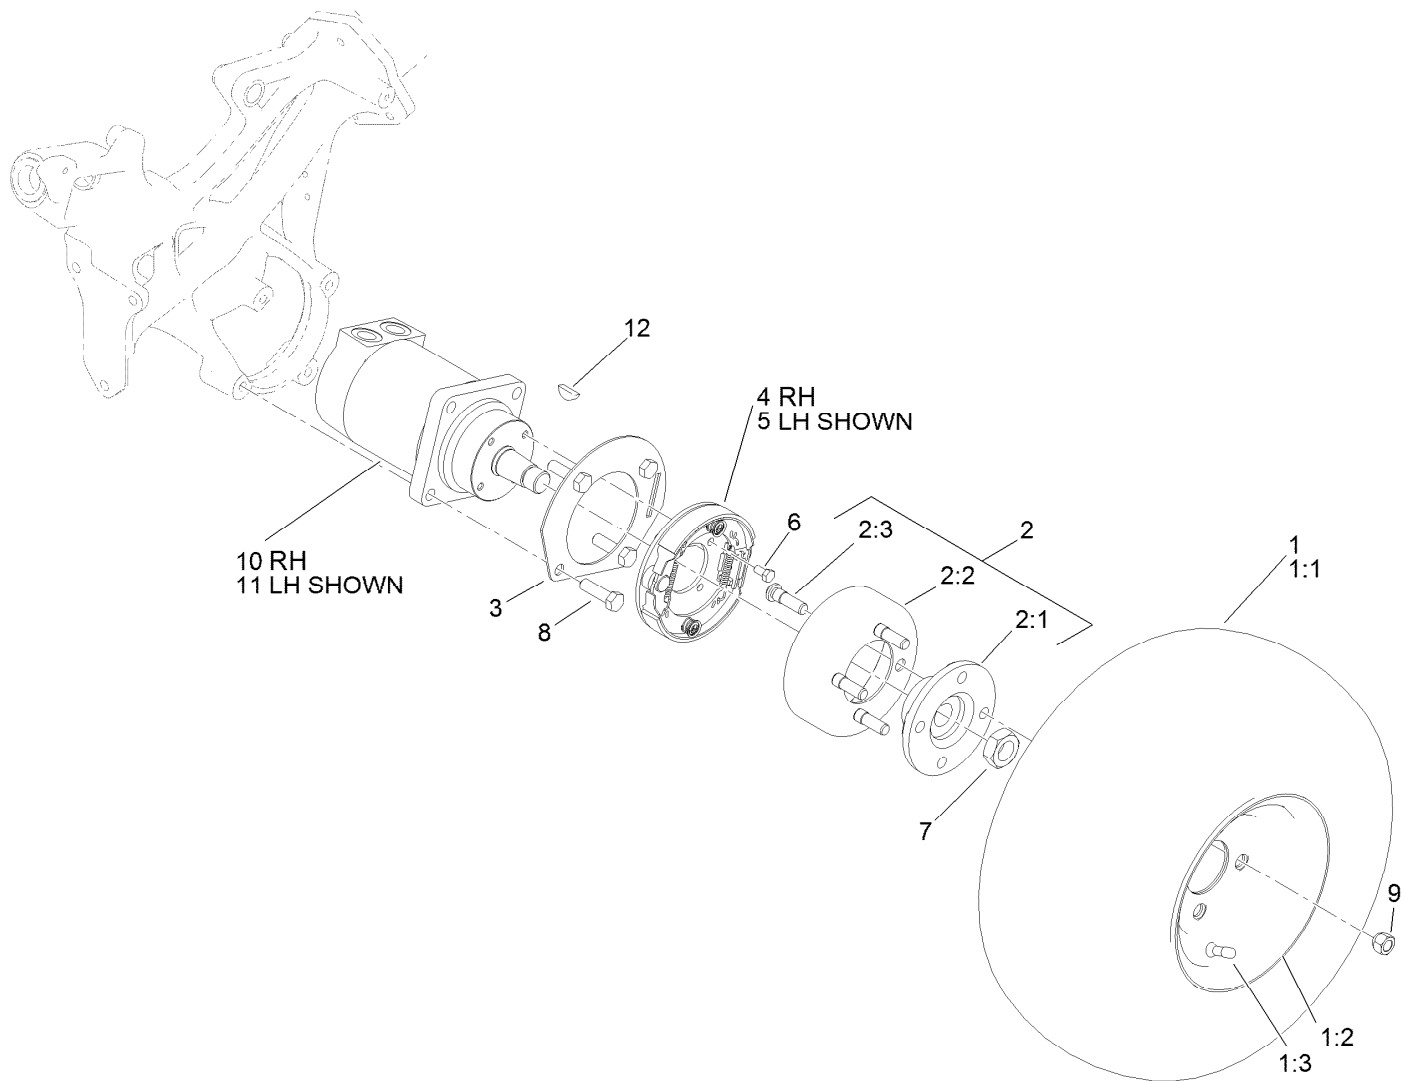


## Front Wheel Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    |             | 2    | Wheel And Tire ASM ● |
| 1:1  | 117-9031    | 1    | Tire                 |
| 1:2  | 117-9032    | 1    | Rim                  |
| 1:3  | 232-27      | 1    | Stem-Valve           |
| 2    | 115-2661    | 2    | Brake Drum ASM       |
| 2:1  | 115-2662-03 | 1    | Hub-Wheel            |
| 2:2  | 115-2663    | 1    | Drum-Brake           |
| 2:3  | 85-6540     | 4    | Stud-Drive           |
| 3    | 114-9998-03 | 2    | Tab-Lever, Brake     |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 4    | 115-9441    | 1    | RH Brake ASM       |
| 5    | 115-9440    | 1    | LH Brake ASM       |
| 6    | 322-2       | 8    | Screw-HH           |
| 7    | 26-3790     | 2    | Nut-Lock           |
| 8    | 325-7       | 8    | Screw-HH           |
| 9    | 242-50      | 8    | Nut-Lug            |
| 10   | 117-4302    | 1    | RH Wheel Motor ASM |
| 11   | 117-4303    | 1    | LH Wheel Motor ASM |
| 12   | 3257-42     | 1    | Key-Woodruff       |


● Not serviced separately

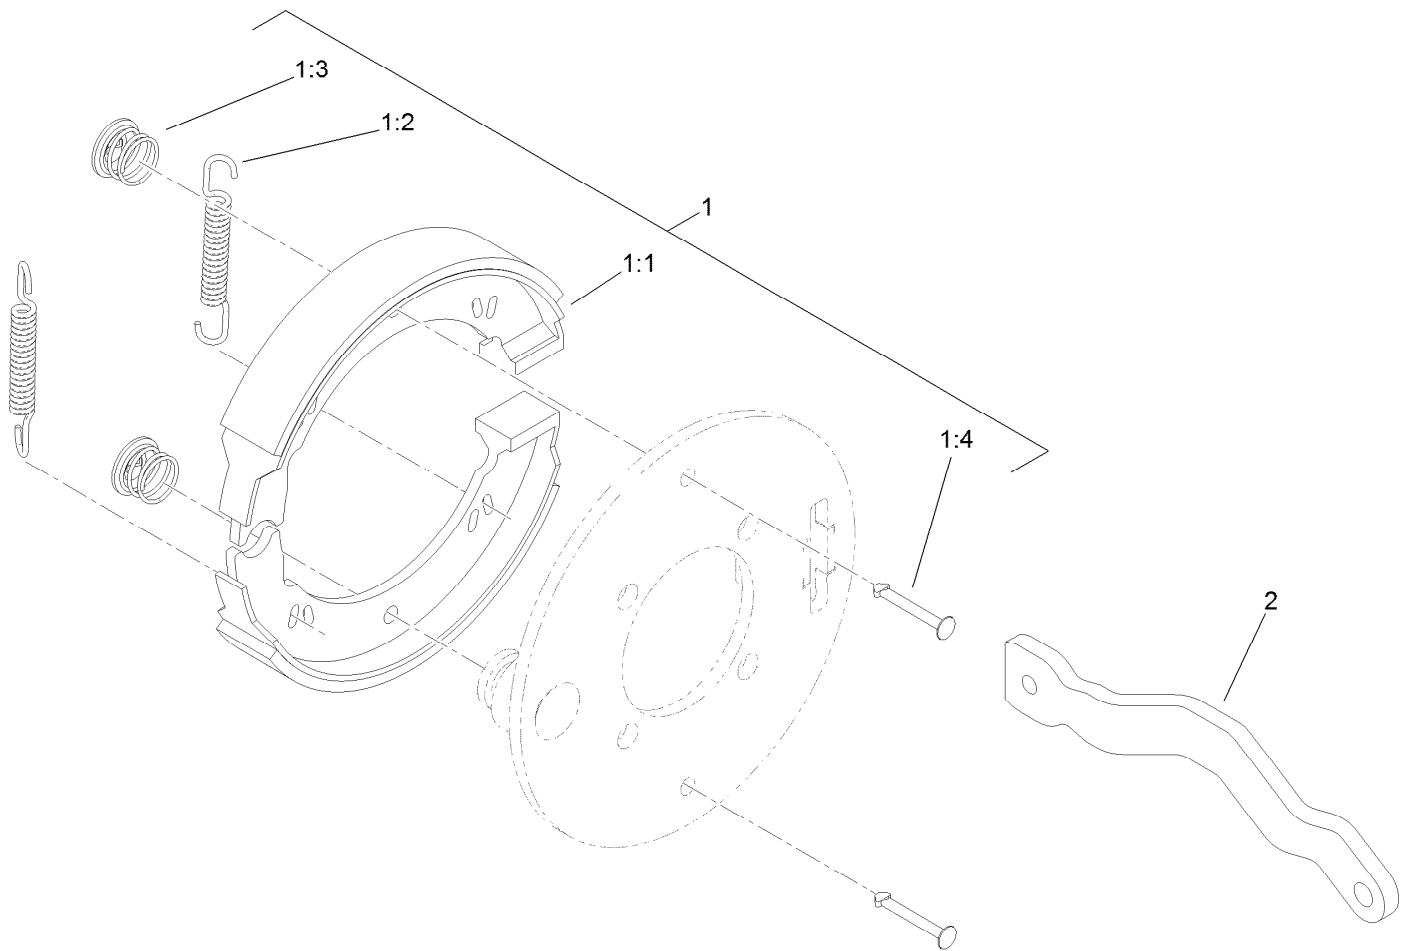

## Right Hand Brake Assembly No. 115-9441

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 119-7136    | 1    | Kit-Brake       |
| 1:1  |             | 2    | Shoe-Brake ●    |
| 1:2  |             | 2    | Spring ●        |
| 1:3  |             | 2    | Clip ●          |
| 1:4  |             | 2    | Pin-Retainer ●  |
| 2    | 115-5789    | 1    | Lever-Brake, RH |

 
● Not serviced separately

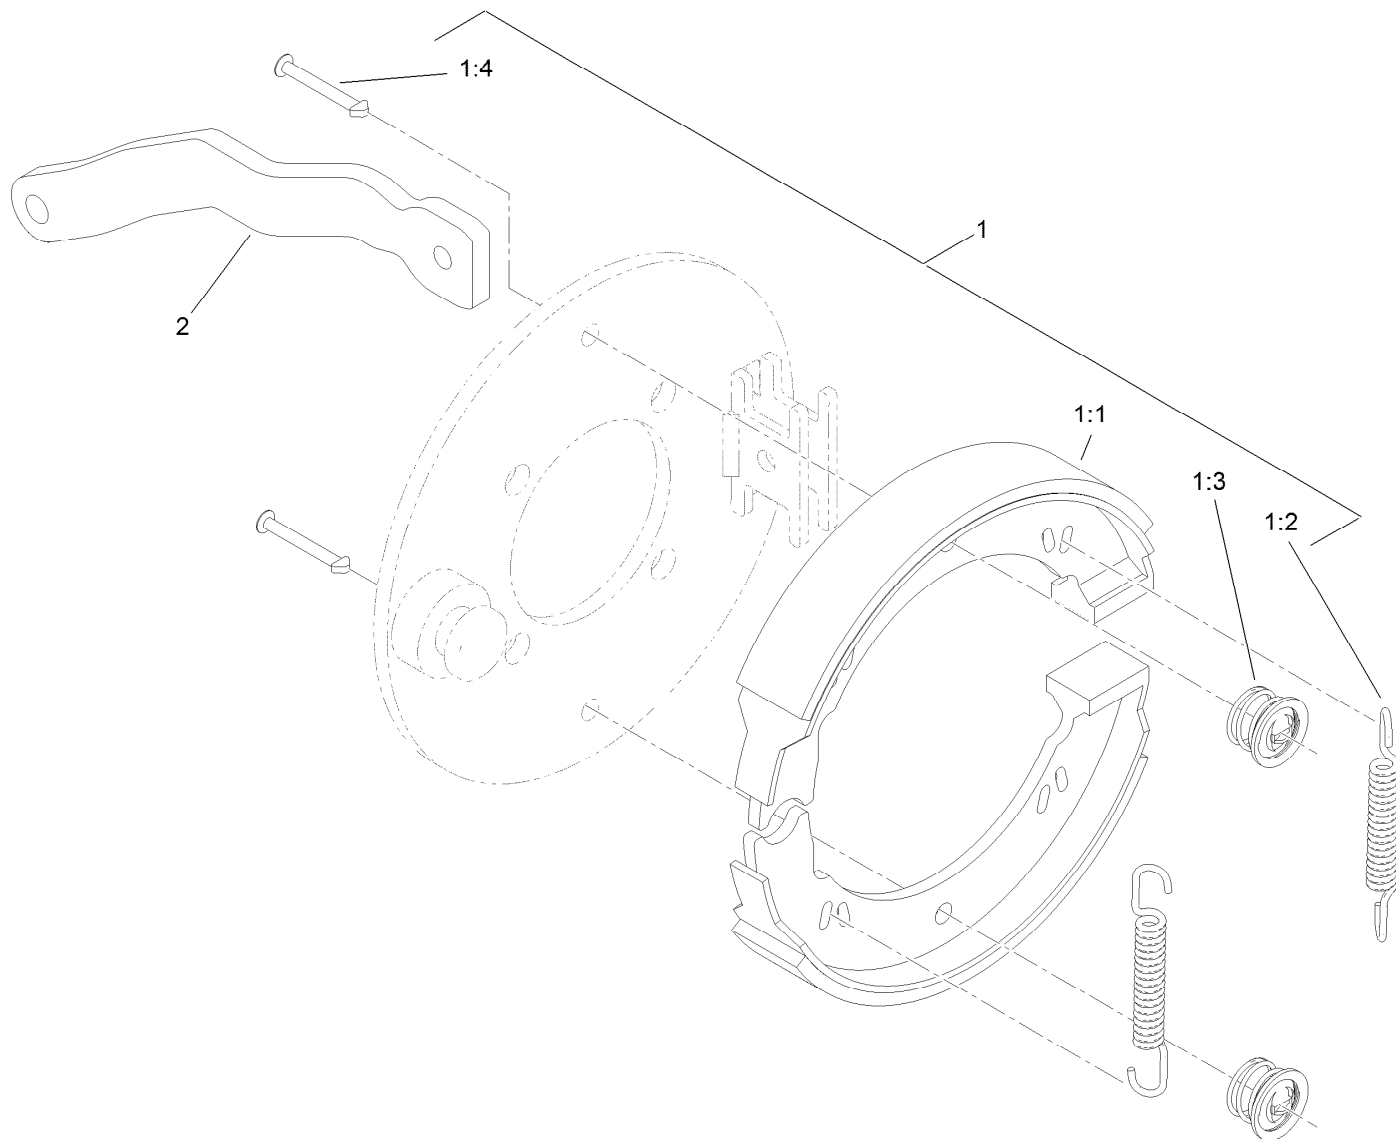

## Left Hand Brake Assembly No. 115-9440

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 119-7136    | 1    | Kit-Brake       |
| 1:1  |             | 2    | Shoe-Brake ●    |
| 1:2  |             | 2    | Spring ●        |
| 1:3  |             | 2    | Clip ●          |
| 1:4  |             | 2    | Pin-Retainer ●  |
| 2    | 115-2664    | 1    | Lever-Brake, LH |

 
● Not serviced separately

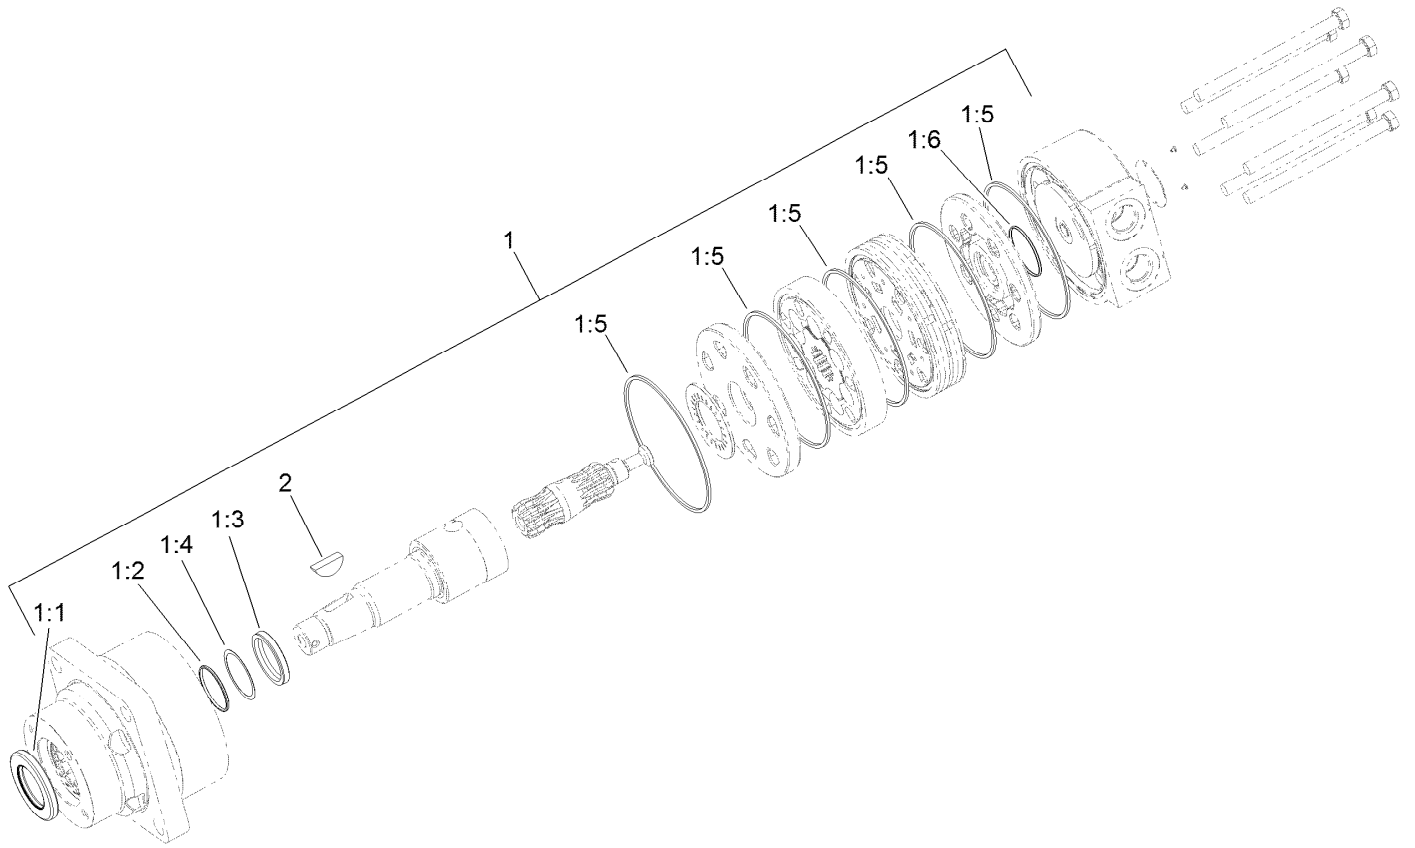

## Right Hand Wheel Motor Assembly No. 117-4302

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 94-8178     | 1    | Seal Kit                    |
| 1:1  |             | 1    | Seal-Dirt And Water ●       |
| 1:2  |             | 1    | Backup-Ring ●               |
| 1:3  |             | 1    | Seal-Shaft ●                |
| 1:4  |             | 1    | Washer-Backup ●             |
| 1:5  |             | 5    | Seal-Square, Ring (Inner) ● |
| 1:6  |             | 1    | Seal-Commutator ●           |
| 2    | 3257-42     | 1    | Key-Woodruff                |

 
● Not serviced separately

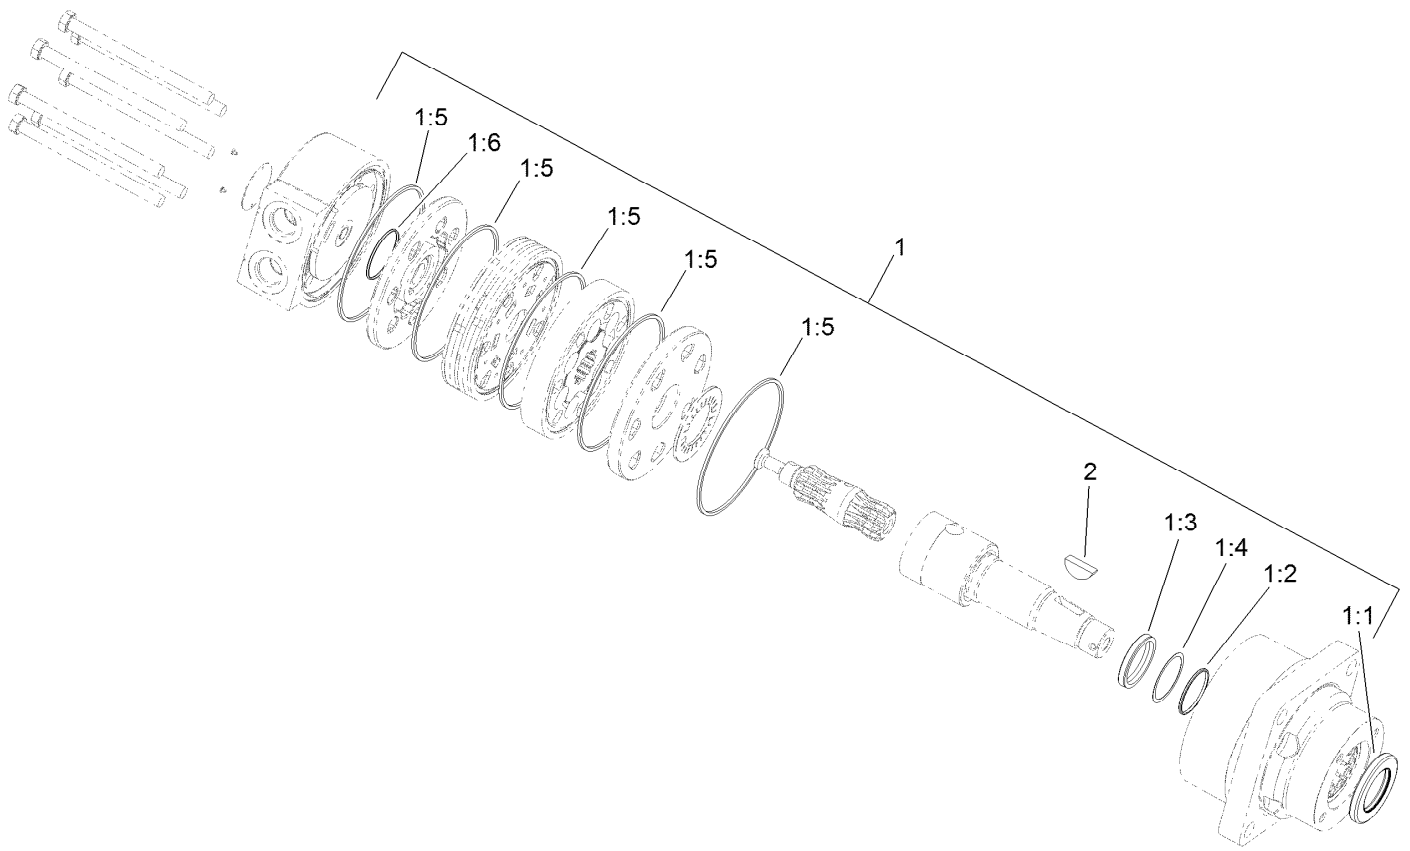

## Left Hand Wheel Motor Assembly No. 117-4303

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 94-8178     | 1    | Seal Kit                    |
| 1:1  |             | 1    | Seal-Dirt And Water ●       |
| 1:2  |             | 1    | Backup-Ring ●               |
| 1:3  |             | 1    | Seal-Shaft ●                |
| 1:4  |             | 1    | Washer-Backup ●             |
| 1:5  |             | 5    | Seal-Square, Ring (Inner) ● |
| 1:6  |             | 1    | Seal-Commutator ●           |
| 2    | 3257-42     | 1    | Key-Woodruff                |

 
● Not serviced separately

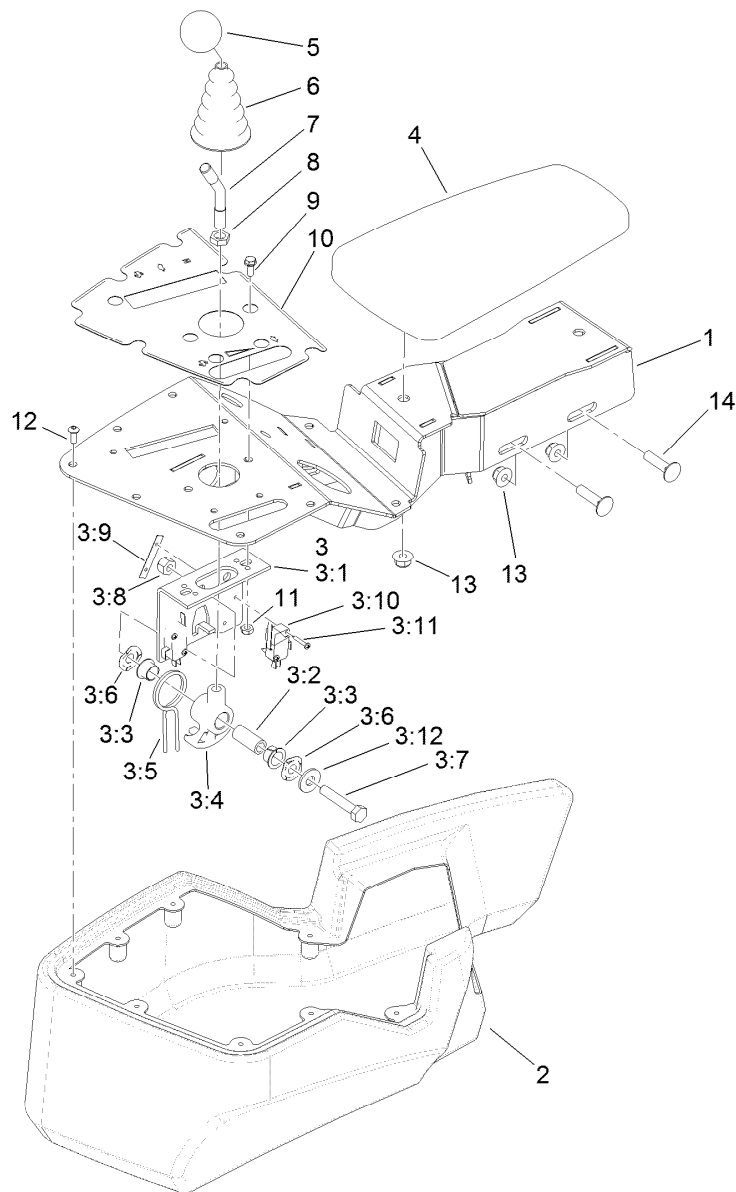

## Console and Reel Control Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 120-2049-03 | 1    | Console               |
| 2    | 121-5152    | 1    | Cover-Console         |
| 3    | 106-4167    | 1    | Joystick Bracket ASM  |
| 3:1  | 115-5357-03 | 1    | Bracket-Joystick      |
| 3:2  | 106-4192    | 1    | Spacer                |
| 3:3  | 93-5547     | 2    | Bushing-Nylon         |
| 3:4  | 105-7507    | 1    | Hub-Pivot, Joystick   |
| 3:5  | 105-8289    | 1    | Spring-Torsion        |
| 3:6  | 106-4193    | 2    | Washer-Finger, Spring |
| 3:7  | 322-9       | 1    | Screw-HH              |
| 3:8  | 3296-29     | 1    | Nut-Lock, NI          |
| 3:9  | 3290-354    | 2    | Nut-Speed             |
| 3:10 | 108-6496    | 2    | Switch (W/Boot)       |

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 3:11 | 95-3003     | 4    | Screw-PPHTF        |
| 3:12 | 3256-3      | 1    | Washer-Flat        |
| 4    | 108-7602    | 1    | Rest-Arm           |
| 5    | 120-9752    | 1    | Knob-Round, Yellow |
| 6    | 93-5961     | 1    | Boot-Lever         |
| 7    | 121-6681    | 1    | Stem-Joystick      |
| 8    | 3218-3      | 1    | Nut-Jam            |
| 9    | 3290-321    | 2    | Screw-HWH          |
| 10   | 121-5169    | 1    | Decal-Console      |
| 11   | 3296-12     | 2    | Nut-Lock, NI       |
| 12   | 115-9830    | 8    | Screw-HSBH         |
| 13   | 104-8300    | 4    | Nut-HF, NI         |
| 14   | 3230-3      | 2    | Screw-CARR         |

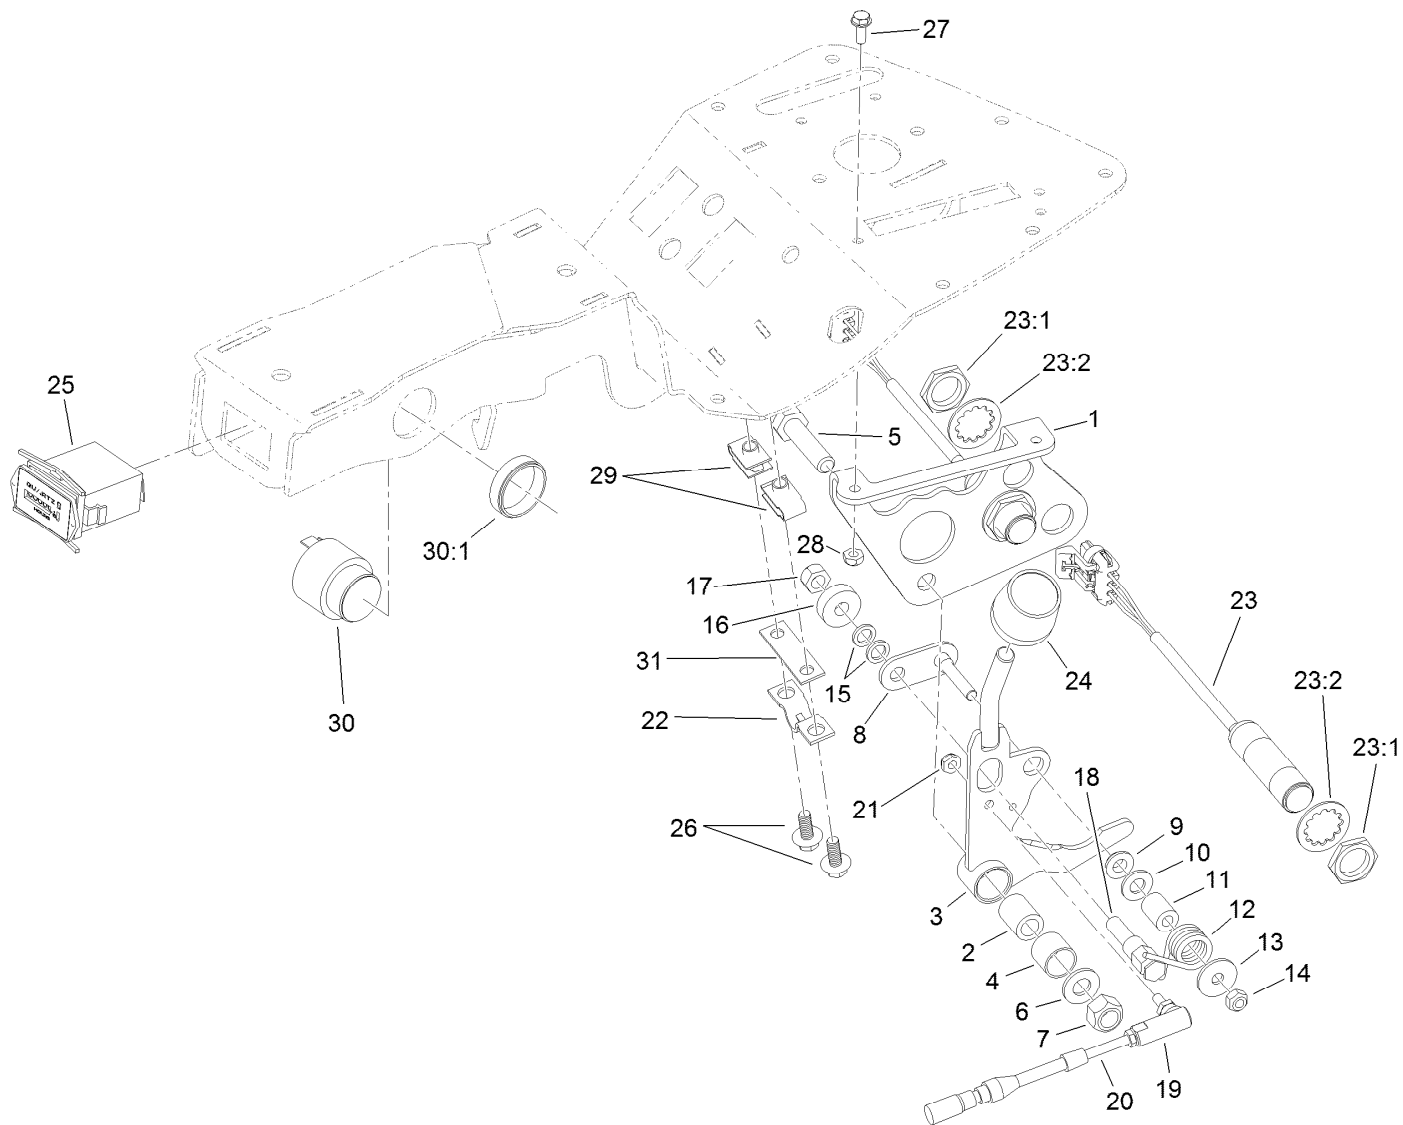

## Traction Interface Control Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 115-9774-03 | 1    | Bracket-Function, Lever |
| 2    | 94-1378     | 1    | Tube-Pivot, Handle      |
| 3    | 115-9772    | 1    | Handle ASM              |
| 4    | 256-311     | 1    | Bushing-Split           |
| 5    | 33115-040   | 1    | Screw-HH                |
| 6    | 3256-24     | 1    | Washer-Flat             |
| 7    | 33025-00    | 1    | Nut-Lock, NI            |
| 8    | 120-3198    | 1    | Roller-Pivot            |
| 9    | 94-9619     | 1    | Bushing                 |
| 10   | 3256-23     | 1    | Washer-Plain            |
| 11   | 94-9618     | 1    | Spacer-Spring           |
| 12   | 94-9620     | 1    | Spring-Torsion          |
| 13   | 3256-67     | 1    | Washer                  |
| 14   | 33023-00    | 1    | Nut-Lock                |
| 15   | 75-5470     | 2    | Spacer-Bearing          |
| 16   | 251-259     | 1    | Bearing-Ball            |
| 17   | 33024-00    | 1    | Nut-Lock, NI            |
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 18   | 94-9617     | 1    | Pin-Spring                  |
| 19   | 2411-38     | 1    | Joint-Ball                  |
| 20   | 119-1653    | 1    | Cable-Lock, Neutral         |
| 21   | 3296-27     | 1    | Nut-Lock, NI                |
| 22   | 93-2279     | 1    | Clamp-Cable                 |
| 23   | 115-5300    | 2    | Proximity Switch ASM        |
| 23:1 | 117-3207    | 2    | Nut-Hex                     |
| 23:2 | 117-3208    | 2    | Washer-Lock, Internal Tooth |
| 24   | 120-9753    | 1    | Knob-Cylindrical, Orange    |
| 25   | 1-513374    | 1    | Meter-Hour                  |
| 26   | 99-6810     | 2    | Screw-HHF                   |
| 27   | 3290-321    | 2    | Screw-HWH                   |
| 28   | 3296-12     | 2    | Nut-Lock, NI                |
| 29   | 107069      | 2    | Clip                        |
| 30   | 80-9330     | 1    | Audio Alarm ASM             |
| 30:1 | 104-5107    | 1    | Nut-Plastic, Knurled        |
| 31   | 125-5653    | 1    | Shim                        |

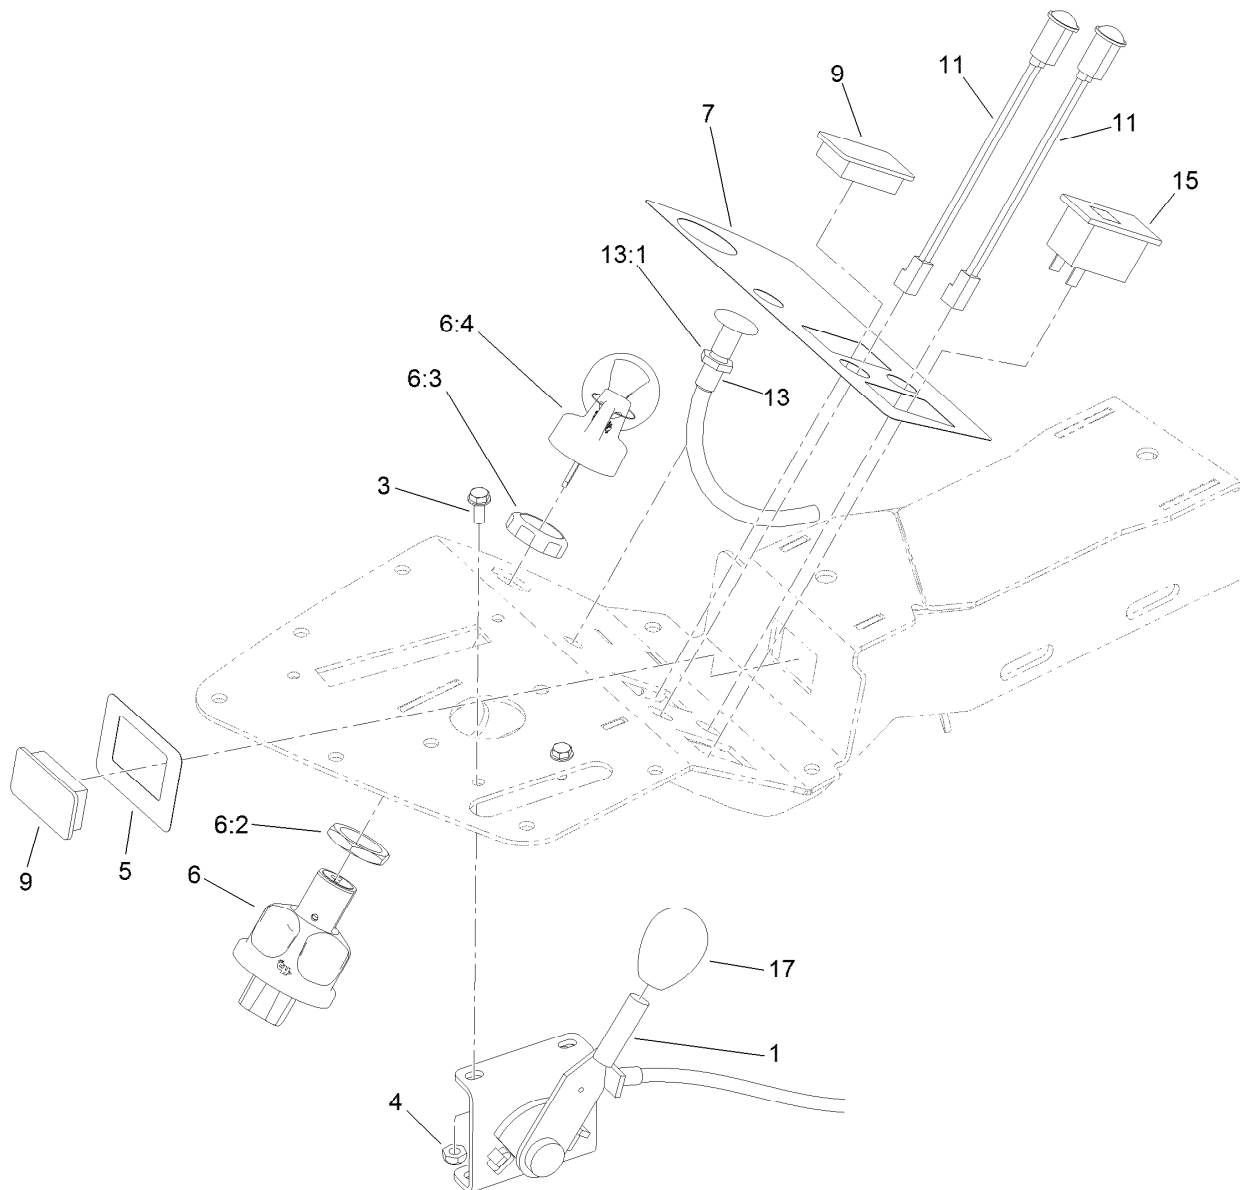


## Ignition, Throttle and Choke Control Assembly

| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 1    | 119-1652    | 1    | Throttle                          |
| 3    | 3290-321    | 2    | Screw-HWH                         |
| 4    | 3296-12     | 2    | Nut-Lock, NI                      |
| 5    | 121-5172    | 1    | Decal-Lights, Console             |
| 6    | 121-5159    | 1    | Ignition Switch ASM               |
| 6:2  | 121-5160    | 1    | Nut-Hex                           |
| 6:3  | 121-5161    | 1    | Nut-Face                          |
| 6:4  | 121-5162    | 1    | Set-Key, Ignition                 |
| 7    | 121-5170    | 1    | Decal-Console, HYD                |
| 9    | 99-7420     | 2    | Plug-Hole                         |
| 11   | 95-7652     | 2    | Light-Indicator                   |
| 13   | 119-1651    | 1    | Control-Choke                     |
| 13:1 | 3220-3      | 1    | Nut-HJ                            |
| 15   | 99-7410     | 1    | Indicator-Light, Low-Oil Pressure |
| 17   | 120-9751    | 1    | Knob-Oval, Black                  |

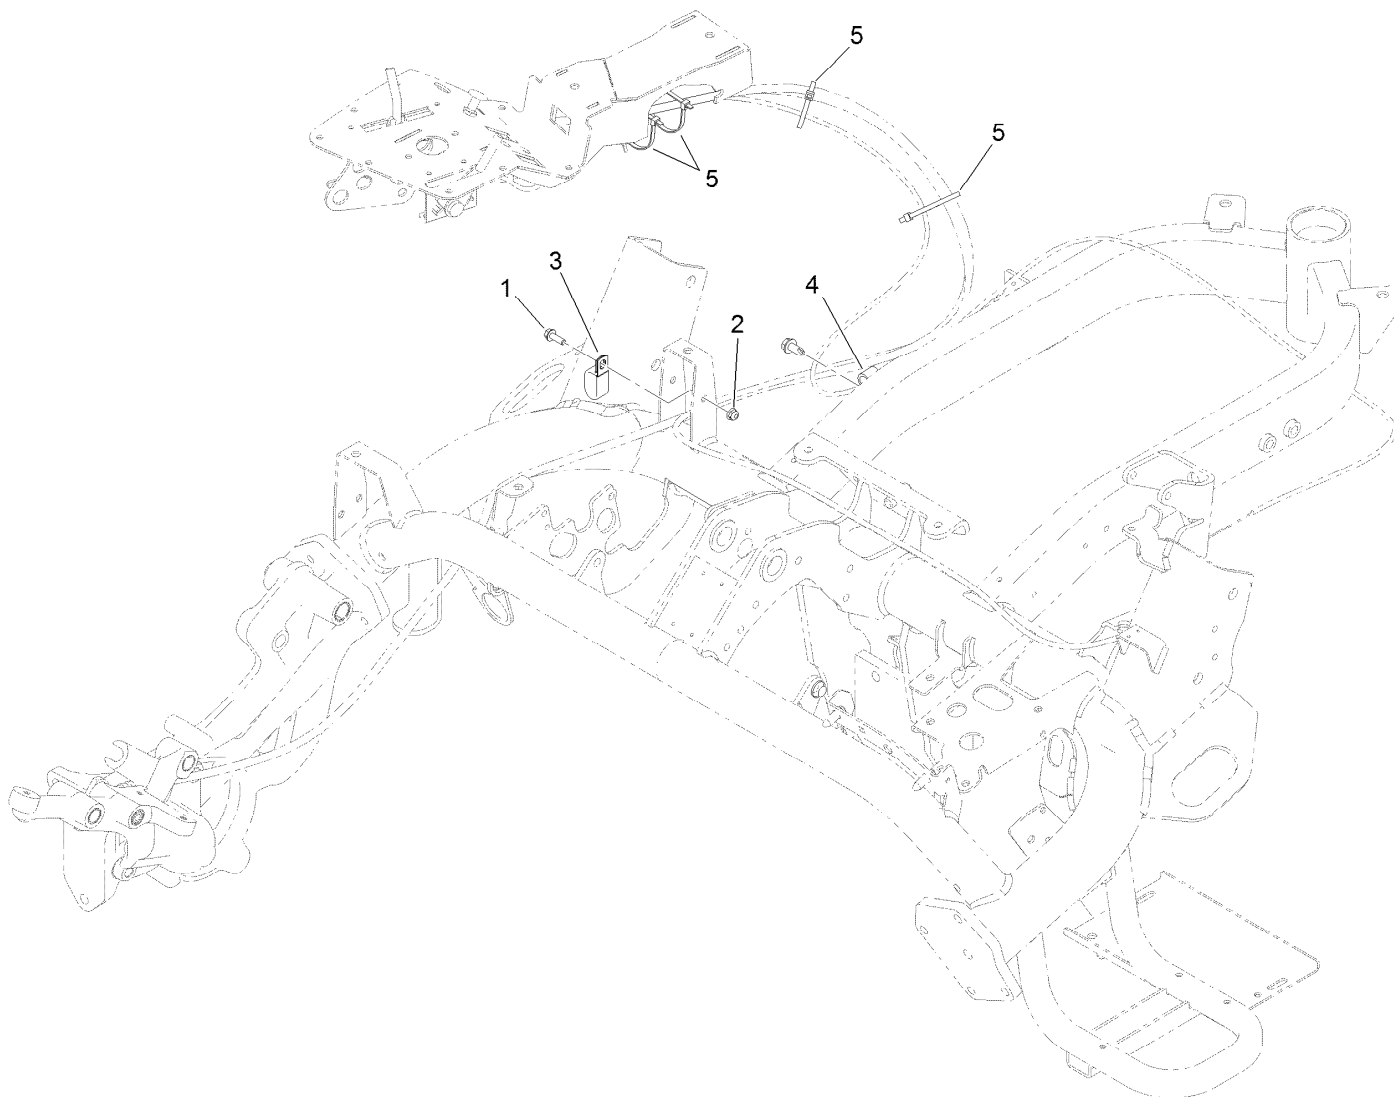

## Console Cable Routing Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 115-5103           | 1           | Screw-HHF            |
| 2           | 104-7201           | 1           | Nut-HF, NI           |
| 3           | 119-8153           | 1           | Clamp-R, Double Tube |
| 4           | 92-6064            | 1           | Clamp-R              |
| 5           | 3290-379           | 4           | Tie-Cable            |

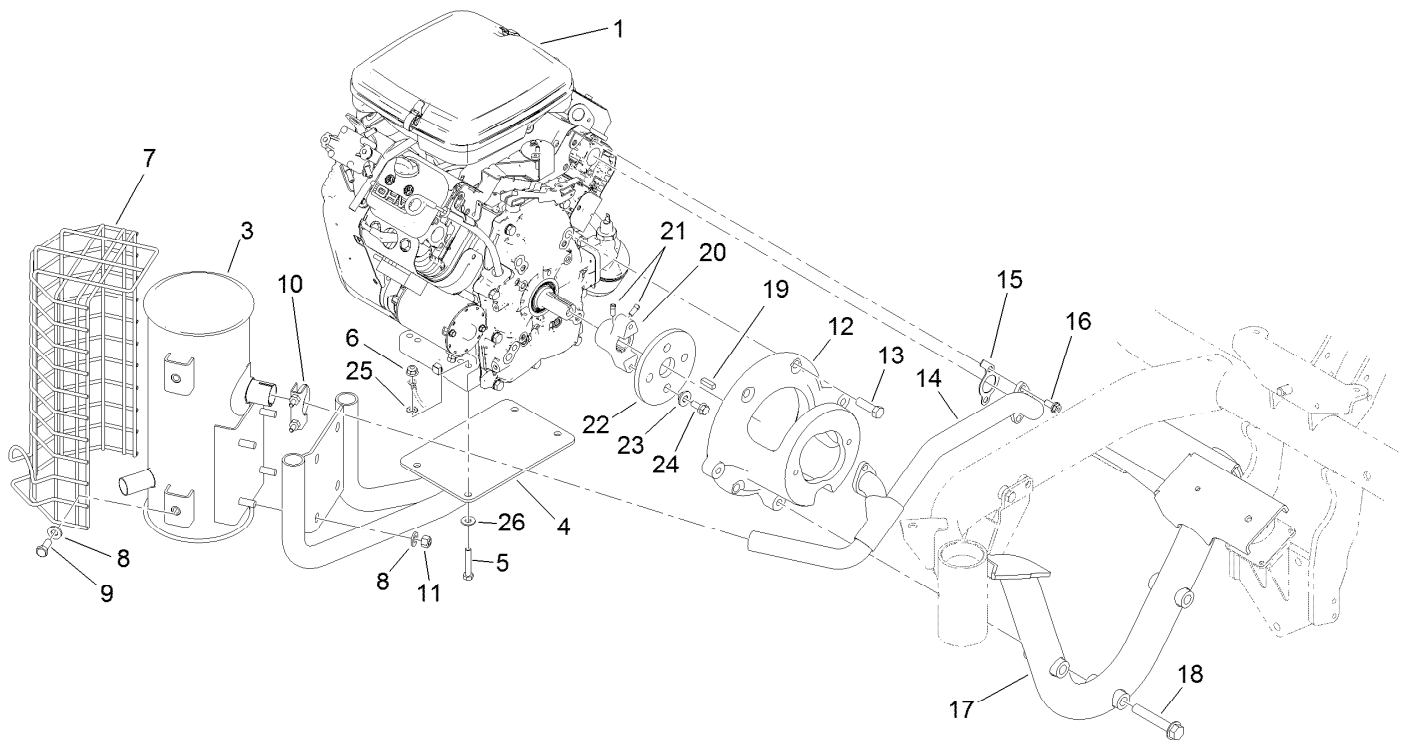


## Engine and Exhaust Assembly

| Ref. | Part Number | Qty. | Description                                |
|------|-------------|------|--------------------------------------------|
| 1    | 121-6662    | 1    | Engine-Briggs & Stratton, 385447-0208-G2 ■ |
| 1:1  | 107-7817    | 1    | Filter-Oil, Engine ●                       |
| 3    | 110-4001    | 1    | Muffler                                    |
| 4    | 117-4364-03 | 1    | Mount-Muffler                              |
| 5    | 322-10      | 4    | Screw-HH                                   |
| 6    | 104-8300    | 4    | Nut-HF, NI                                 |
| 7    | 112-0291    | 1    | Shield-Muffler                             |
| 8    | 100-4852    | 8    | Washer-Hardened                            |
| 9    | 323-5       | 4    | Screw-HH                                   |
| 10   | 2112-11     | 1    | Clamp-Muffler                              |
| 11   | 32152-2     | 4    | Nut-Lock, Cone                             |
| 12   | 117-4363-03 | 1    | Mount-Pump                                 |
| 13   | 324-32      | 4    | Screw-HH                                   |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 14   | 117-4379    | 1    | Manifold-Exhaust         |
| 15   | 115-8154    | 2    | Gasket-Manifold, Exhaust |
| 16   | 94-5300     | 4    | Screw-HHF                |
| 17   | 117-4442-03 | 1    | Frame-Engine             |
| 18   | 3234-40     | 3    | Screw-HF                 |
| 19   | 10-7070     | 1    | Key-Square               |
| 20   | 117-9278    | 1    | Hub-Engine               |
| 21   | 3241-7      | 2    | Screw-SQH                |
| 22   | 115-5129    | 1    | Coupling-Rubber          |
| 23   | 27-6600     | 2    | Spacer-Coupling          |
| 24   | 98-9940     | 2    | Screw-HHF                |
| 25   | 3255-8      | 1    | Washer-Lock              |
| 26   | 87-8640     | 4    | Washer-Flat              |

● Not illustrated

 
■ Obtain parts from [www.briggsandstratton.com](http://www.briggsandstratton.com)

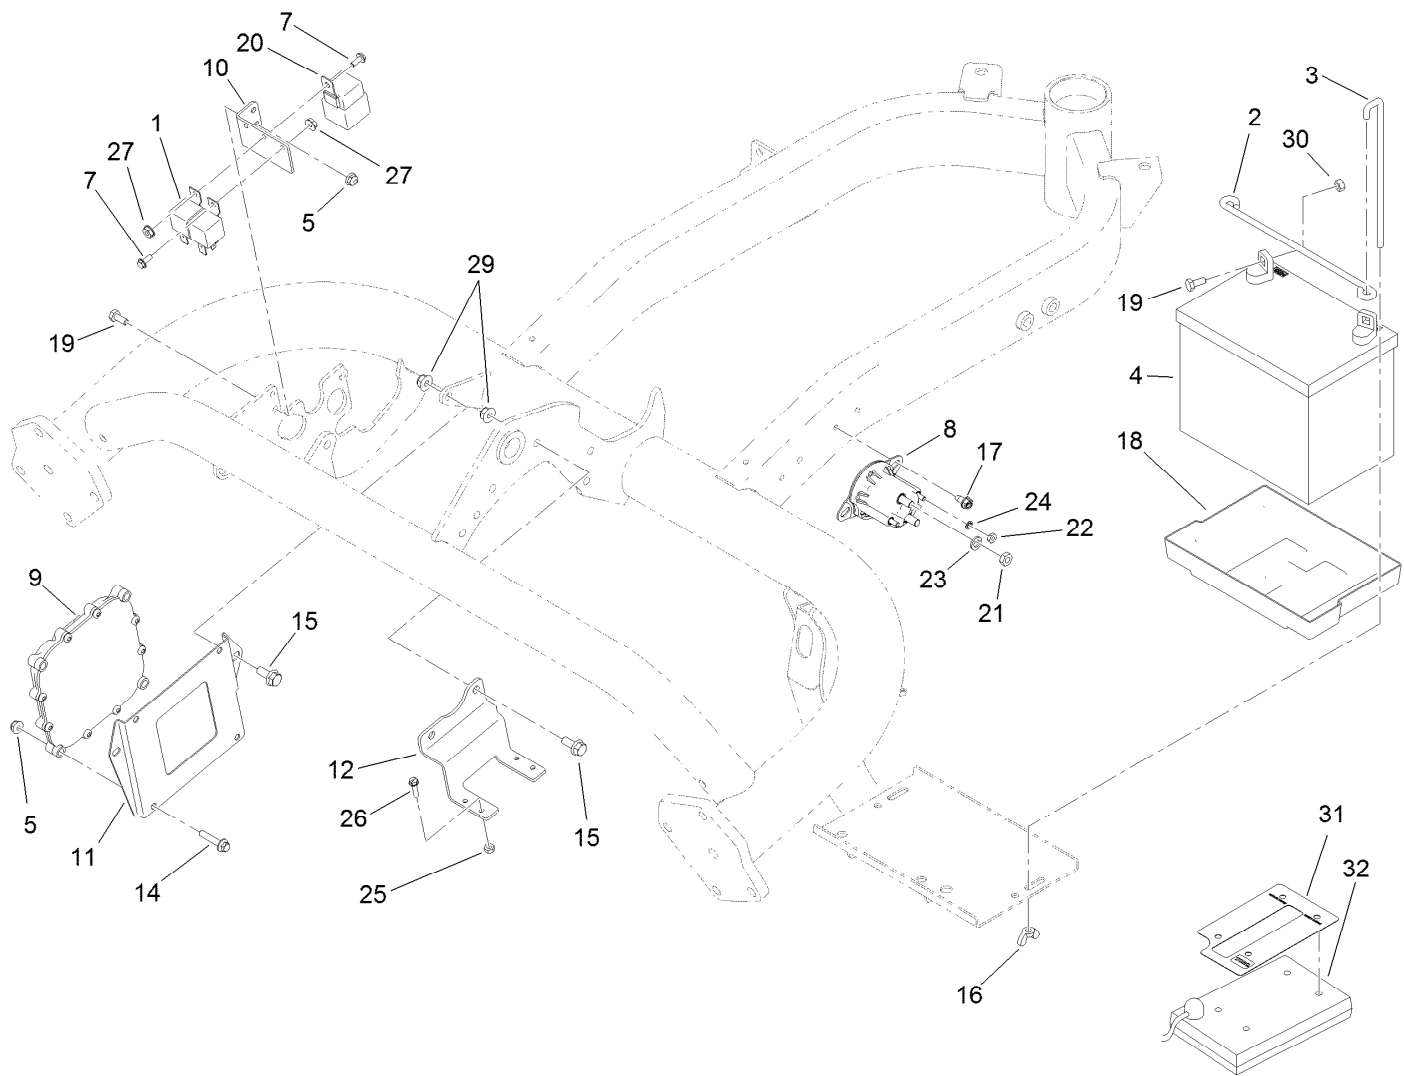

## Battery Assembly


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 99-7435     | 2    | Relay                      |
| 2    | 100-6434    | 1    | Rod-Hold Down, Battery     |
| 3    | 100-6435    | 2    | Post-Battery               |
| 4    | 104-8162    | 1    | Battery                    |
| 5    | 104-7201    | 6    | Nut-HF, NI                 |
| 7    | 112-6349    | 2    | Screw-HWH                  |
| 8    | 114-3315    | 1    | Solenoid                   |
| 9    | 115-1900    | 1    | Controller                 |
| 10   | 119-2097-01 | 1    | Bracket-Relay              |
| 11   | 119-2099-01 | 1    | Plate-Mounting, Controller |
| 12   | 119-2119-01 | 1    | Bracket-Block, Fuse        |
| 14   | 3234-21     | 4    | Screw-HHF                  |
| 15   | 3234-47     | 4    | Screw-HHF                  |
| 16   | 32103-22    | 2    | Nut-Wing                   |
| 17   | 32104-17    | 2    | Screw-HWH                  |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 18   | 106948      | 1    | Tray-Battery            |
| 19   | 321-3       | 2    | Screw-HH                |
| 20   | 99-7430     | 1    | Relay-Mini              |
| 21   | 3220-2      | 2    | Nut-Jam                 |
| 22   | 3219-14     | 2    | Nut-Hex                 |
| 23   | 3253-4      | 2    | Washer-Lock             |
| 24   | 3254-1      | 2    | Washer-Lock, Int        |
| 25   | 3296-2      | 4    | Nut-Lock, NI            |
| 26   | 32105-13    | 4    | Screw-HWH               |
| 27   | 32149-8     | 2    | Nut-Keps                |
| 29   | 104-8300    | 4    | Nut-HF, NI              |
| 30   | 3217-5      | 2    | Nut-Hex                 |
| 31   | 115-8227    | 1    | Decal-Controller        |
| 32   | 85-4750     | 1    | Box-Display, Diagnostic |

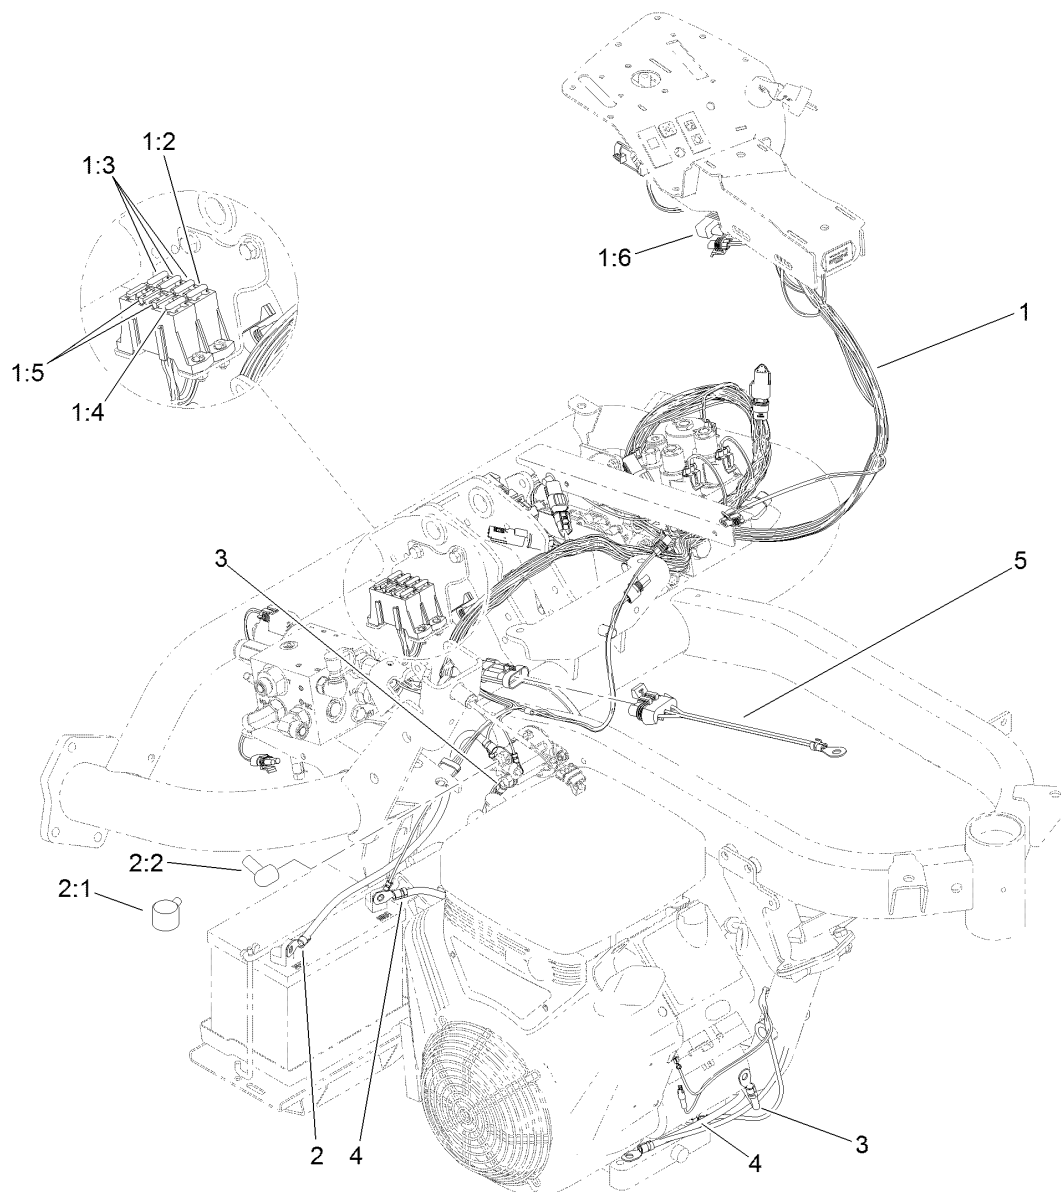

## Wire Harness Assembly
 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 120-3993    | 1    | Harness-Wire               |
| 1:2  | 94-6710     | 1    | Fuse-2 Amp                 |
| 1:3  | 114241      | 3    | Fuse-Blade, 7.5 Amp        |
| 1:4  | 218-578     | 1    | Fuse-Blade, 10 Amp         |
| 1:5  | 109355      | 2    | Fuse-Blade, 15 Amp         |
| 1:6  | 104-4022    | 1    | Resistor-75 Ohm            |
| 2    | 109-7653    | 1    | Positive Battery Cable ASM |
| 2:1  | 109-2407    | 1    | Insulator-Battery          |
| 2:2  | 1-543393    | 1    | Insulator-Solenoid         |
| 3    | 119-1781    | 1    | Cable-Battery, Positive    |
| 4    | 114-9748    | 1    | Cable-Battery, Negative    |
| 5    | 99-3441     | 1    | Harness-Wire, Fusible Link |

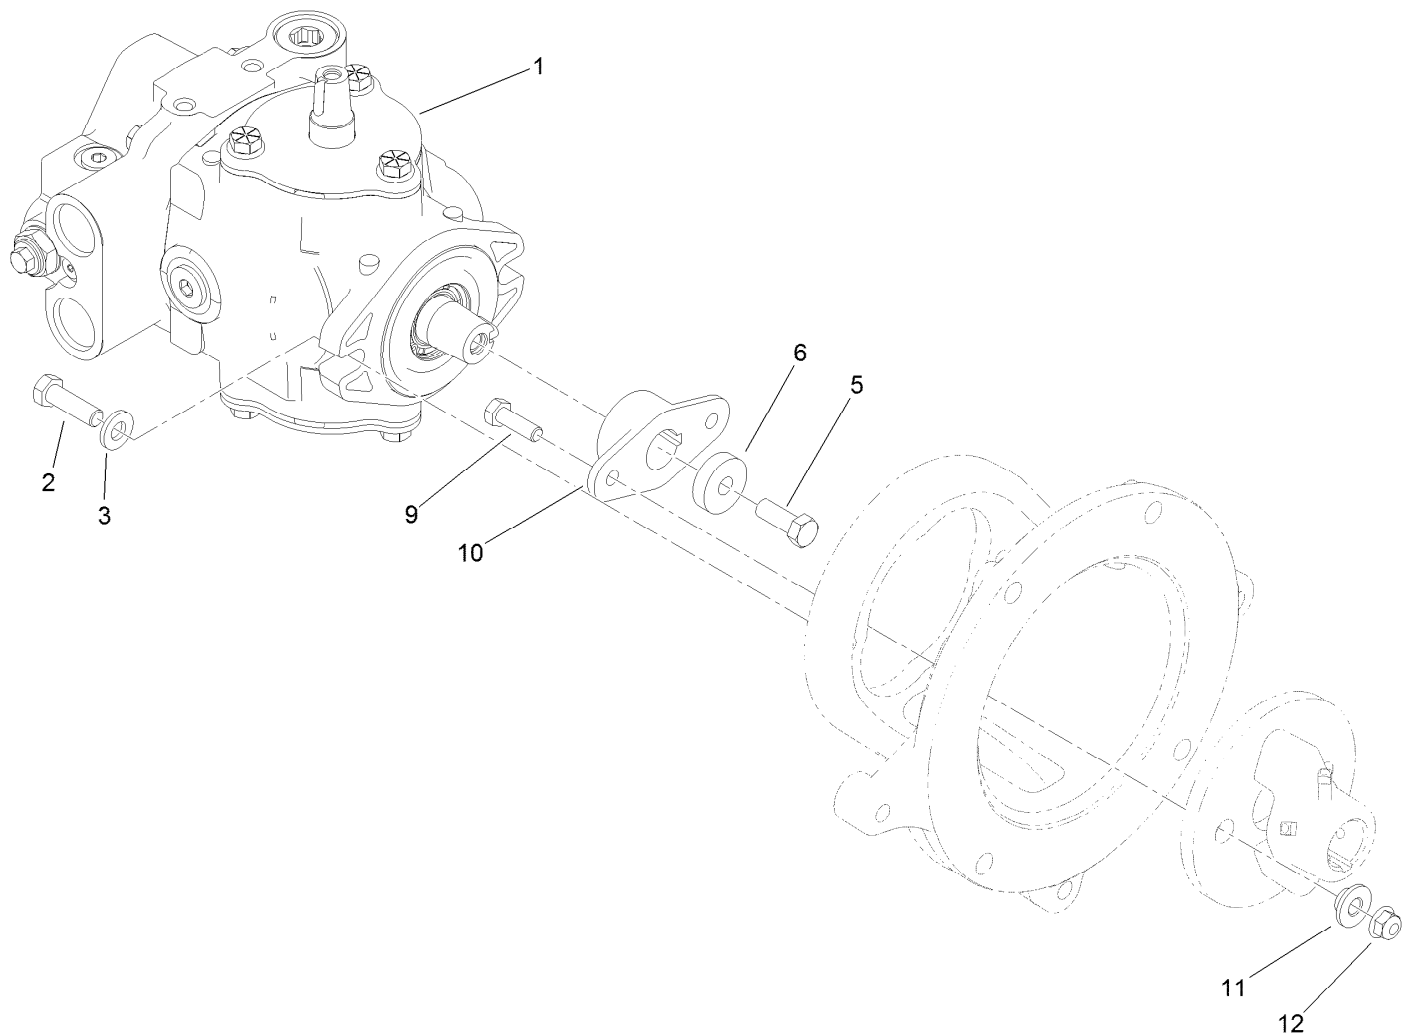

## Pump Coupling Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 121-9558    | 1    | HYD Pump ASM    |
| 2    | 323-7       | 2    | Screw-HH        |
| 3    | 100-4852    | 2    | Washer-Hardened |
| 5    | 3211-4      | 1    | Screw-HH        |
| 6    | 117-3657    | 1    | Spacer          |
| 9    | 322-5       | 2    | Screw-HH        |
| 10   | 119-4485    | 1    | Hub-Pump        |
| 11   | 27-6600     | 2    | Spacer-Coupling |
| 12   | 104-8300    | 2    | Nut-HF, NI      |



 
| <b>Ref.</b> | <b>Part Number</b> | <b>Qty.</b> | <b>Description</b> |
|-------------|--------------------|-------------|--------------------|
| 21          | 120-1989           | 1           | Relief Valve ASM   |
| 22          | 98-4639            | 2           | Bearing-Cone       |
| 23          | 98-4645            | 1           | Plate-Cover        |
| 24          | 98-4644            | 1           | Plate-Cover        |
| 26          | 76-6150            | 2           | Pin-Dowel          |
| 27          | 76-6160            | 2           | Capscrew           |
| 28          | 76-6170            | 2           | Capscrew           |
| 29          | 120-5751           | 1           | Key                |
| 30          | 94-3646            | 1           | Key                |
| 37          | 74-9040            | 1           | Coupler            |
| 39          | 104-4046           | 2           | Bearing-Cup        |
| 40          | 100-3182           | 1           | Shim Kit           |
| 41          | 100-3179           | 2           | O-Ring             |
| 48          | 100-3180           | 1           | Plate-Valve        |
| 50          | 74-9280            | 1           | Plug ASM           |
| 50:1        |                    | 1           | O-Ring ■           |
| 51          | 74-9280            | 1           | Plug ASM           |
| 51:1        |                    | 1           | O-Ring ■           |

■ Not serviced separately



| <b>Ref.</b> | <b>Part Number</b> | <b>Qty.</b> | <b>Description</b>                                  |
|-------------|--------------------|-------------|-----------------------------------------------------|
| 99:8        |                    | 5           | O-Ring ■                                            |
| 99:9        |                    | 1           | Ring-Retaining ■                                    |
| 99:10       |                    | 1           | O-Ring (Not Used For This Configuration) ● ■        |
| 99:11       |                    | 1           | O Ring-Molded (Not Used For This Configuration) ● ■ |
| 99:12       |                    | 2           | Ring-Retaining ■                                    |
| 99:13       |                    | 1           | O-Ring ■                                            |


K2A6

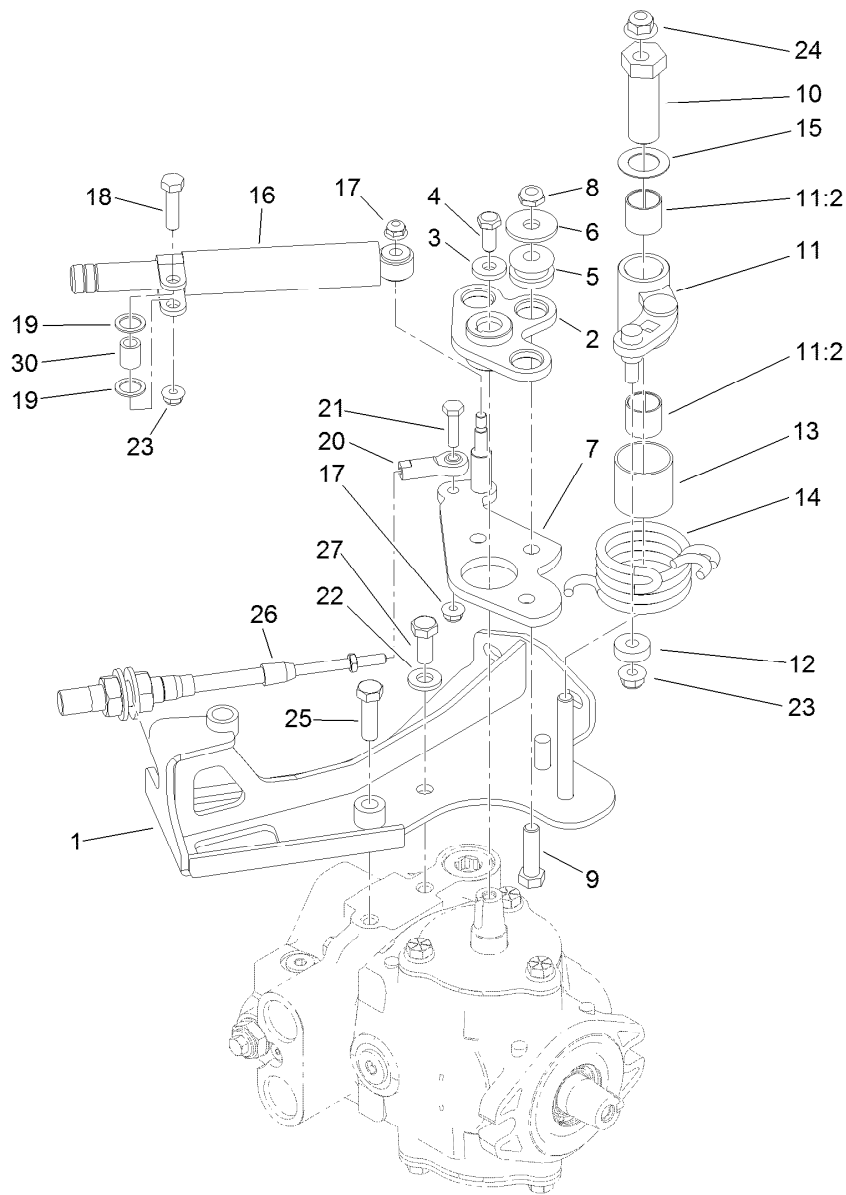

## Neutral Centering Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 120-2017    | 1    | Support-Cable    |
| 2    | 117-4466    | 1    | Plate ASM        |
| 3    | 88-7200     | 1    | Washer-Flat      |
| 4    | 3235-6      | 1    | Screw-HH         |
| 5    | 63-9750     | 3    | Mount            |
| 6    | 93-8806     | 3    | Washer-Hardened  |
| 7    | 117-9061    | 1    | Lever-Pump       |
| 8    | 3296-59     | 3    | Nut-Lock, NI     |
| 9    | 323-29      | 3    | Screw-HH         |
| 10   | 117-9046    | 1    | Stud-Eccentric   |
| 11   | 117-9053    | 1    | Neutral Arm ASM  |
| 11:2 | 94-9609     | 2    | Bushing-Straight |
| 12   | 251-259     | 1    | Bearing-Ball     |
| 13   | 115-8158    | 1    | Spacer-Spring    |
| 14   | 117-9047    | 1    | Spring-Torsion   |

 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 15   | 119-8199    | 1    | Washer-Nylon            |
| 16   | 76-8870     | 1    | Damper-Lever            |
| 17   | 104-7201    | 2    | Nut-HF, NI              |
| 18   | 322-6       | 1    | Screw-HH                |
| 19   | 94-8196     | 2    | Washer-Nylon            |
| 20   | 2411-41     | 1    | Rod End-Ball Joint      |
| 21   | 321-6       | 1    | Screw-HH                |
| 22   | 100-4852    | 1    | Washer-Hardened         |
| 23   | 104-8300    | 2    | Nut-HF, NI              |
| 24   | 104-8301    | 1    | Nut-HF, NI              |
| 25   | 323-7       | 1    | Screw-HH                |
| 26   | 119-1735    | 1    | Cable-Control, Traction |
| 27   | 323-5       | 1    | Screw-HH                |
| 30   | 94-8197     | 1    | Tube-Pivot              |

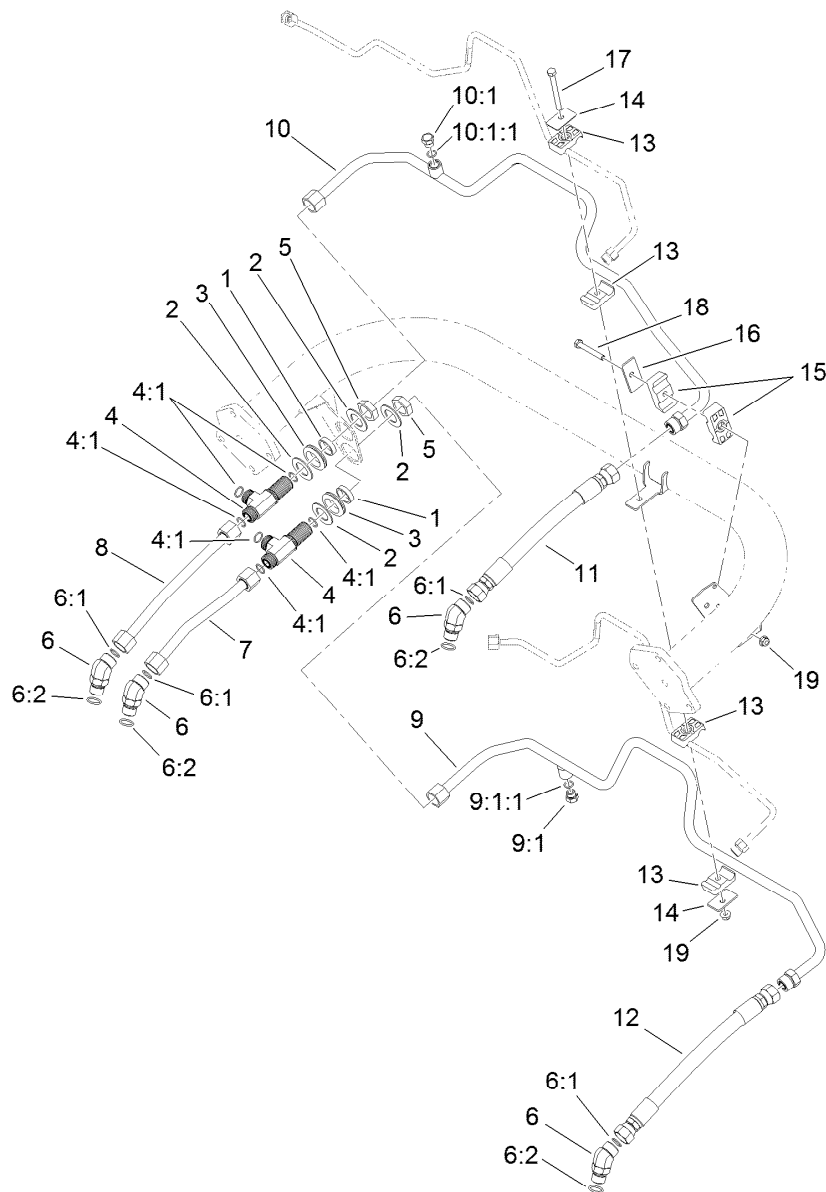

## Traction Drive Hydraulic Line Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 69-9000     | 2    | Spacer              |
| 2    | 69-9010     | 4    | Washer              |
| 3    | 240-3       | 2    | Grommet-Rubber      |
| 4    | 94-5350     | 2    | Fitting-Tee         |
| 4:1  | 237-65      | 3    | O-Ring              |
| 5    | 340-74      | 2    | Nut-Lock, Bulkhead  |
| 6    | 340-14      | 4    | Fitting-HYD, 45 DEG |
| 6:1  | 237-65      | 1    | O-Ring              |
| 6:2  | 237-80      | 1    | O-Ring              |
| 7    | 119-2057    | 1    | Tube-HYD            |
| 8    | 119-2058    | 1    | Tube-HYD            |
| 9    | 119-2063    | 1    | Tube-HYD            |
| 9:1  | 353-508     | 1    | Plug-HH             |
 
| Ref.   | Part Number | Qty. | Description  |
|--------|-------------|------|--------------|
| 9:1:1  | 237-42      | 1    | O-Ring       |
| 10     | 119-2064    | 1    | HYD Tube ASM |
| 10:1   | 353-508     | 1    | Plug-HH      |
| 10:1:1 | 237-42      | 1    | O-Ring       |
| 11     | 115-9484    | 1    | Hose-HYD     |
| 12     | 115-9485    | 1    | Hose-HYD     |
| 13     | 56-7970     | 4    | Clamp-Tube   |
| 14     | 69-9760     | 2    | Plate-Cover  |
| 15     | 119-8173    | 2    | Clamp-Tube   |
| 16     | 69-9761     | 1    | Plate-Cover  |
| 17     | 322-20      | 1    | Screw-HH     |
| 18     | 322-12      | 1    | Screw-HH     |
| 19     | 104-8300    | 2    | Nut-HF, NI   |

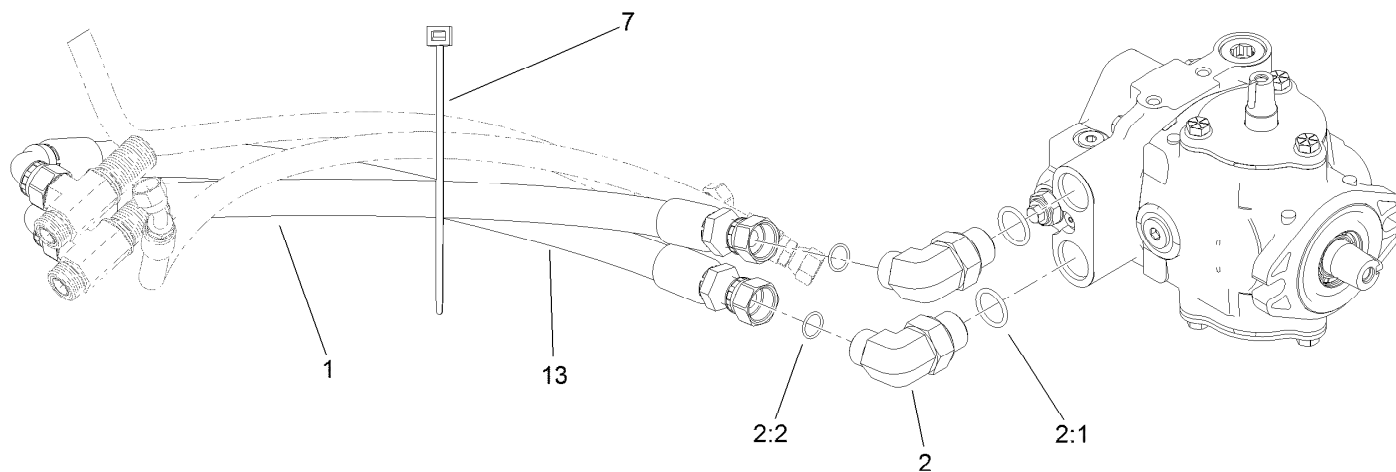

## Traction Drive Hose Routing Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-2060           | 1           | Hose-HYD           |
| 2           | 340-139            | 2           | Fitting-Elbow 90   |
| 2:1         | 237-81             | 1           | O-Ring             |
| 2:2         | 237-65             | 1           | O-Ring             |
| 7           | 3290-378           | 1           | Tie-Cable          |
| 13          | 120-1988           | 1           | Hose-HYD           |

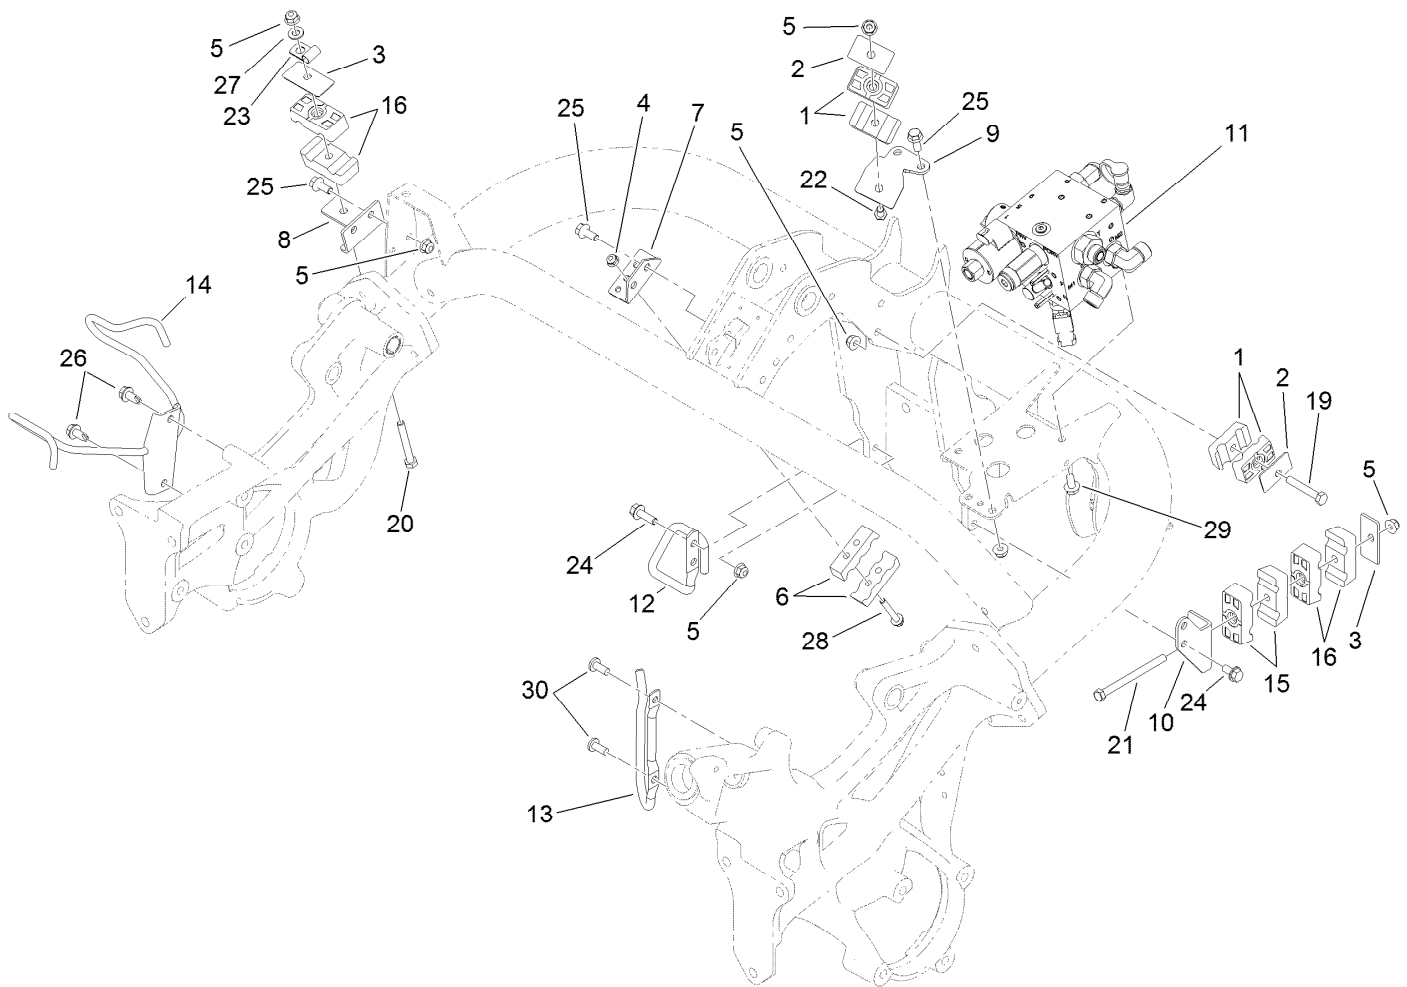


## Hydraulic Mow Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 56-7972     | 4    | Clamp-Tube            |
| 2    | 69-9760     | 2    | Plate-Cover           |
| 3    | 69-9761     | 2    | Plate-Cover           |
| 4    | 104-7201    | 2    | Nut-HF, NI            |
| 5    | 104-8300    | 14   | Nut-HF, NI            |
| 6    | 119-2082    | 2    | Clamp-Tube            |
| 7    | 119-2091    | 1    | Bracket-Tube          |
| 8    | 119-2095    | 1    | Bracket-Tube          |
| 9    | 119-2106    | 1    | Bracket-Clamp         |
| 10   | 119-4493    | 1    | Bracket-Support, Tube |
| 11   |             | 1    | Mow Manifold ASM ●    |
| 12   | 121-6671    | 1    | Wireform Hose Support |
| 13   | 121-6667    | 1    | Wireform-Hose, HYD    |
| 14   | 119-8109-03 | 1    | Bracket-Hose          |


| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 15   | 119-8156    | 2    | Clamp-Tube   |
| 16   | 119-8168    | 4    | Clamp-Tube   |
| 19   | 322-10      | 1    | Screw-HH     |
| 20   | 322-12      | 1    | Screw-HH     |
| 21   | 322-19      | 1    | Screw-HH     |
| 22   | 322-21      | 1    | Screw-HH     |
| 23   | 2412-113    | 1    | Clamp-R      |
| 24   | 3234-29     | 4    | Screw-HHF    |
| 25   | 3234-47     | 6    | Screw-HHF    |
| 26   | 32104-32    | 2    | Screw-HWH    |
| 27   | 3256-23     | 1    | Washer-Plain |
| 28   | 32105-18    | 2    | Screw-HHF    |
| 29   | 3234-7      | 2    | Screw-HHF    |
| 30   | 32122-14    | 2    | Screw-PPH    |

 ● Not serviced separately

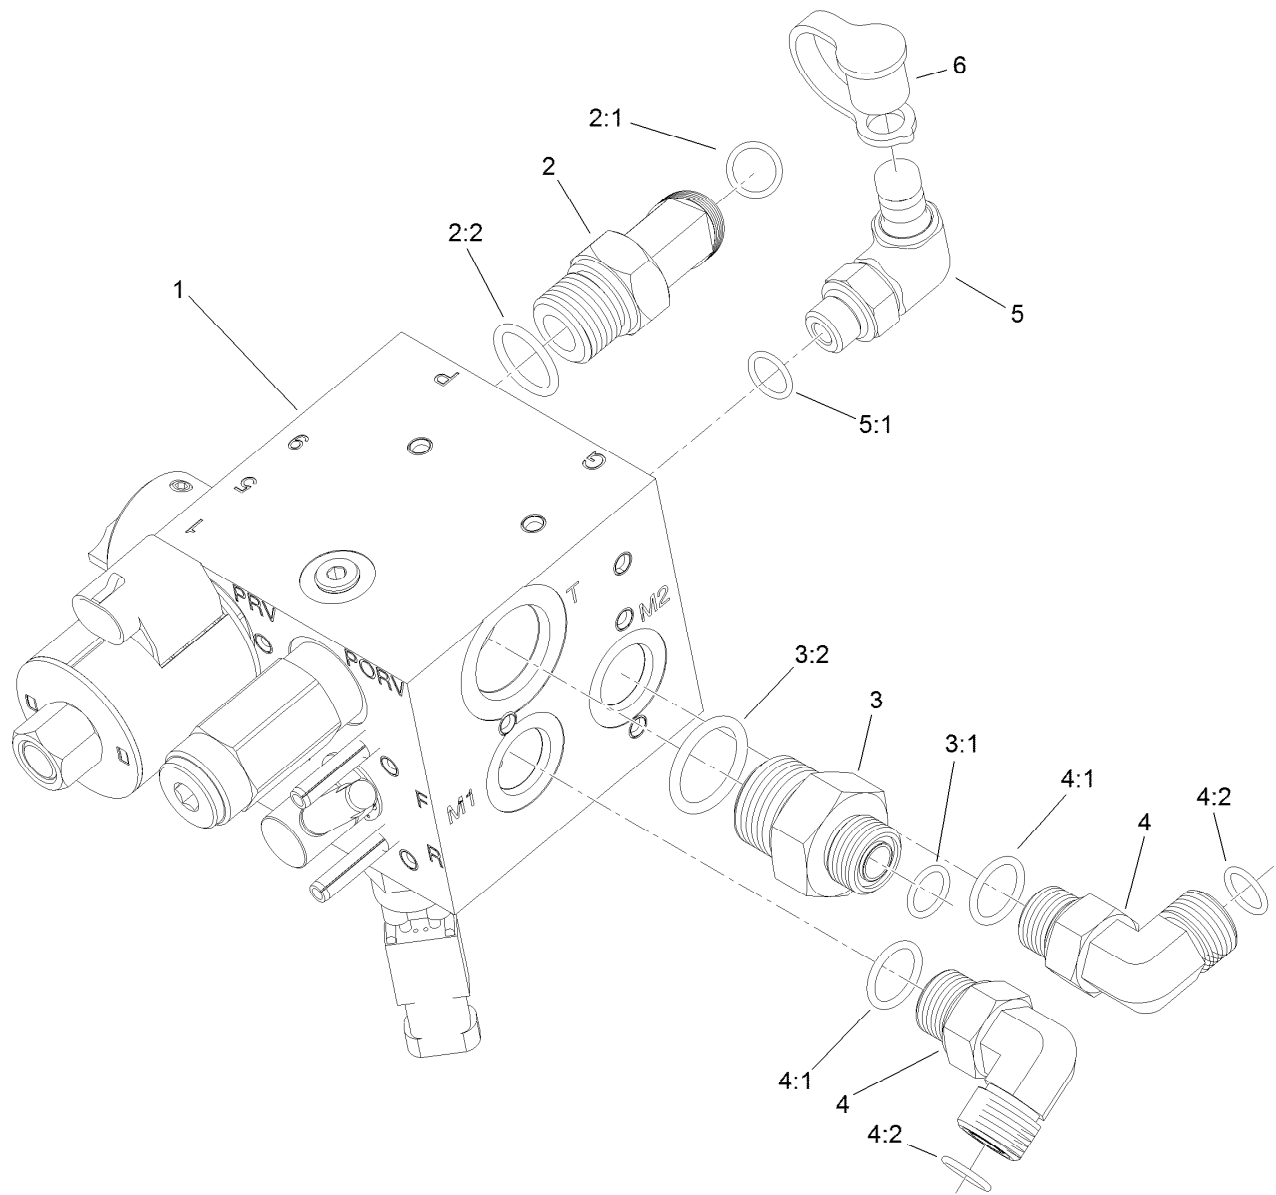

## Hydraulic Mow Manifold Assembly
 
| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 117-9858    | 1    | Manifold-HYD, Mow (Backlap) |
| 2    | 340-89      | 1    | Fitting-HYD, 45 DEG         |
| 2:1  | 237-30      | 1    | O-Ring                      |
| 2:2  | 237-80      | 1    | O-Ring                      |
| 3    | 100-4240    | 1    | Fitting-STR                 |
| 3:1  | 237-30      | 1    | O-Ring                      |
| 3:2  | 237-81      | 1    | O-Ring                      |
| 4    | 340-98      | 2    | Fitting-Elbow, 90 DEG       |
| 4:1  | 237-79      | 1    | O-Ring                      |
| 4:2  | 237-30      | 1    | O-Ring                      |
| 5    | 115-9147    | 1    | Fitting-Elbow, 90 DEG       |
| 5:1  | 237-78      | 1    | O-Ring                      |
| 6    | 354-79      | 1    | Cap-Dust                    |

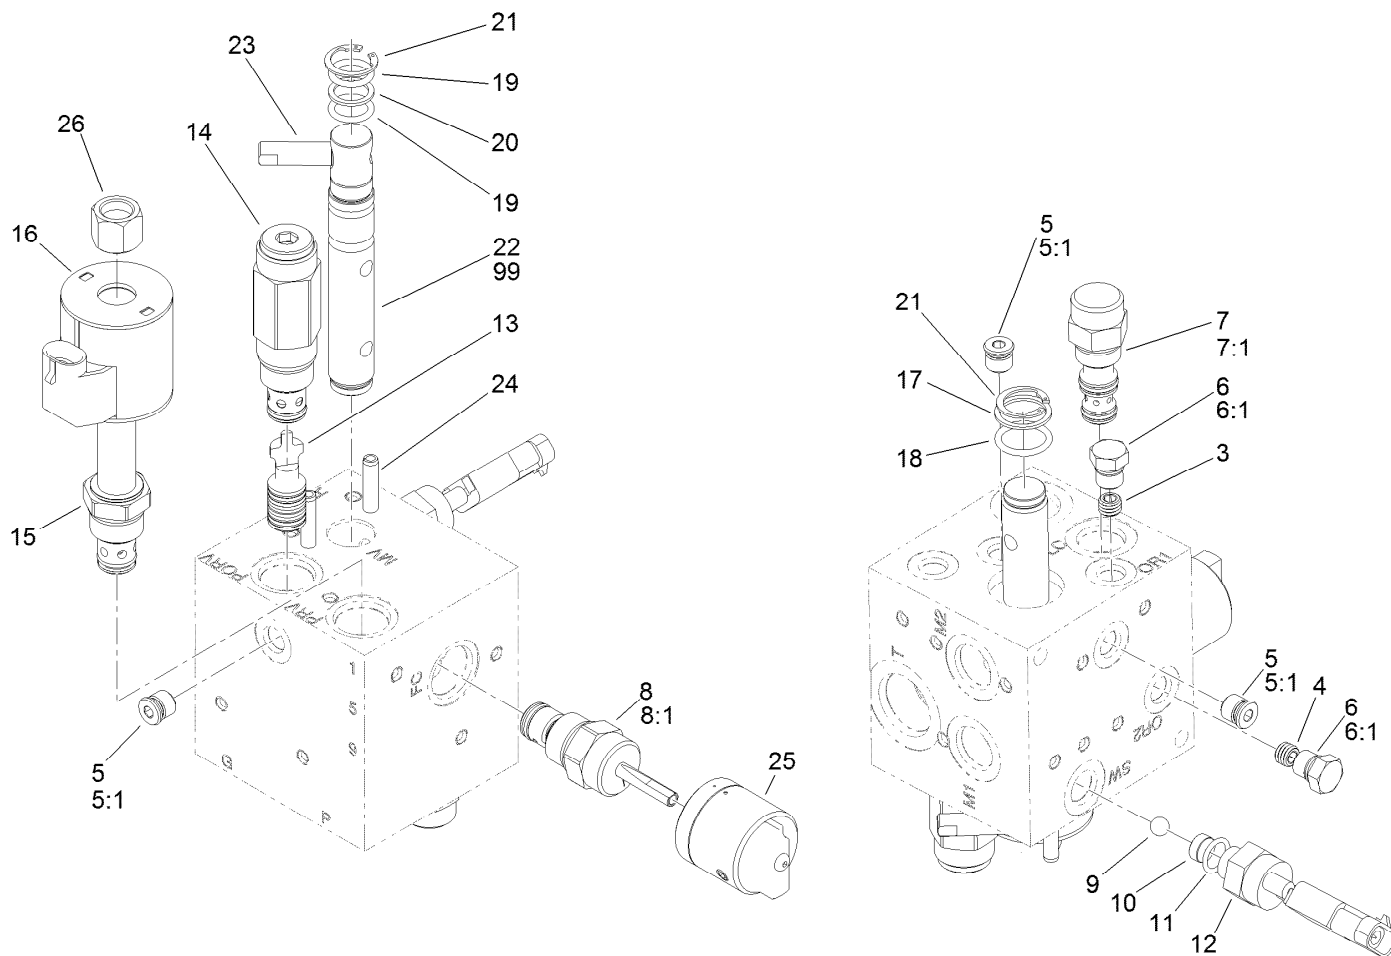


## Hydraulic Mow Manifold Assembly No. 117-9858

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 3    | 120-5761    | 1    | Orifice (.020)               |
| 4    | 112-9202    | 1    | Orifice-Flow, Control (.060) |
| 5    | 106-1025    | 3    | Plug-HYD                     |
| 5:1  | 237-78      | 1    | O-Ring                       |
| 6    | 117-0115    | 2    | Plug                         |
| 6:1  | 237-78      | 1    | O-Ring                       |
| 7    | 120-5762    | 1    | Element-Logic                |
| 7:1  | 110-8773    | 1    | Seal Kit                     |
| 8    | 110-8769    | 1    | Valve-Control, Manual Flow   |
| 8:1  | 110-2633    | 1    | Seal Kit ●                   |
| 9    | 117-4605    | 1    | Ball-SS                      |
| 10   | 119-7145    | 1    | Shim-SS                      |
| 11   | 110-8757    | 1    | O-Ring                       |
| 12   | 72-4320     | 1    | Switch-Ball                  |
| 13   | 119-7146    | 1    | Piston-Pilot (With Seals)    |


| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 14   | 119-7147    | 1    | Valve-Relief               |
| 15   | 110-8799    | 1    | Valve-Relief, Proportional |
| 16   | 110-6344    | 1    | Coil-12V, DC               |
| 17   | 106-8139    | 1    | Ring-Back Up               |
| 18   | 117-4607    | 1    | O-Ring                     |
| 19   | 117-4606    | 2    | O-Ring                     |
| 20   | 112-6534    | 1    | Ring-Back Up               |
| 21   | 112-6532    | 2    | Ring-Retaining             |
| 22   | 119-7141    | 1    | Spool                      |
| 23   | 110-8758    | 1    | Handle-Spool               |
| 24   | 112-6531    | 2    | Pin-Spring                 |
| 25   | 119-7140    | 1    | Knob                       |
| 26   | 130-8180    | 1    | Nut-Coil (9/16-24 Unef-2B) |
| 99   | 119-7142    | 1    | Kit-Seal, Spool            |

 ● Not illustrated

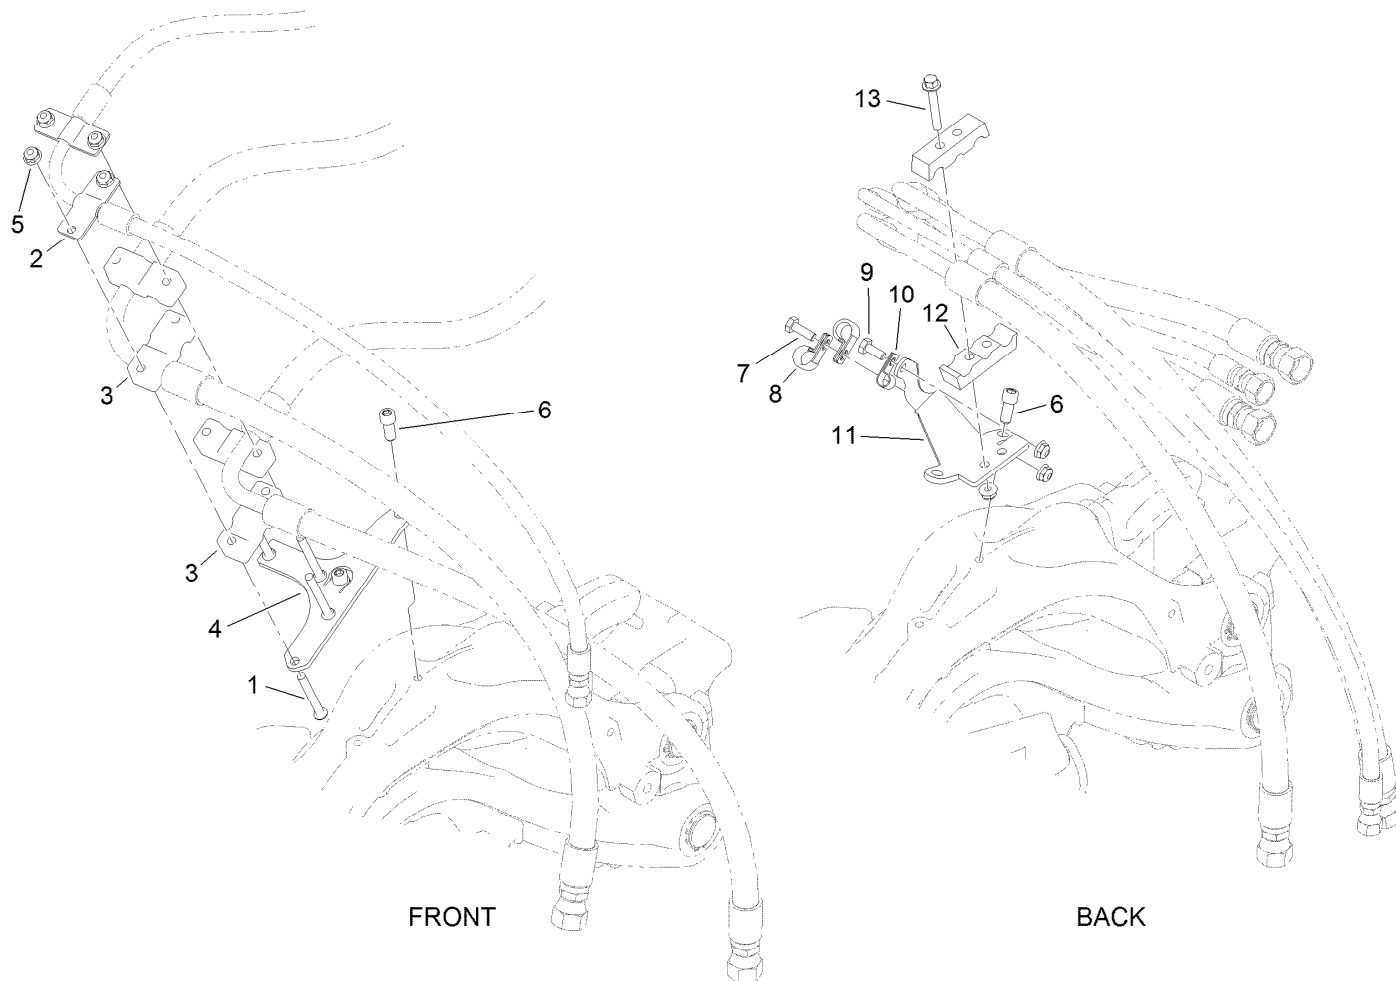


## Hydraulic Mow Clamp Assembly
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 120-2011    | 8    | Screw-HSBH          |
| 2    | 119-8142    | 4    | Strap               |
| 3    | 119-8141    | 8    | Clamp-Tube          |
| 4    | 119-8143-03 | 2    | Bracket-Clamp, Hose |
| 5    | 104-7201    | 12   | Nut-HF, NI          |
| 6    | 100-2401    | 6    | Screw-HSH           |
| 7    | 321-4       | 1    | Screw-HH            |
| 8    | 2412-73     | 2    | Clamp-R             |
| 9    | 321-3       | 1    | Screw-HH            |
| 10   | 2412-89     | 1    | Clamp-R             |
| 11   | 119-8172-03 | 1    | Bracket-Hose        |
| 12   | 119-2082    | 2    | Clamp-Tube          |
| 13   | 32105-18    | 2    | Screw-HHF           |

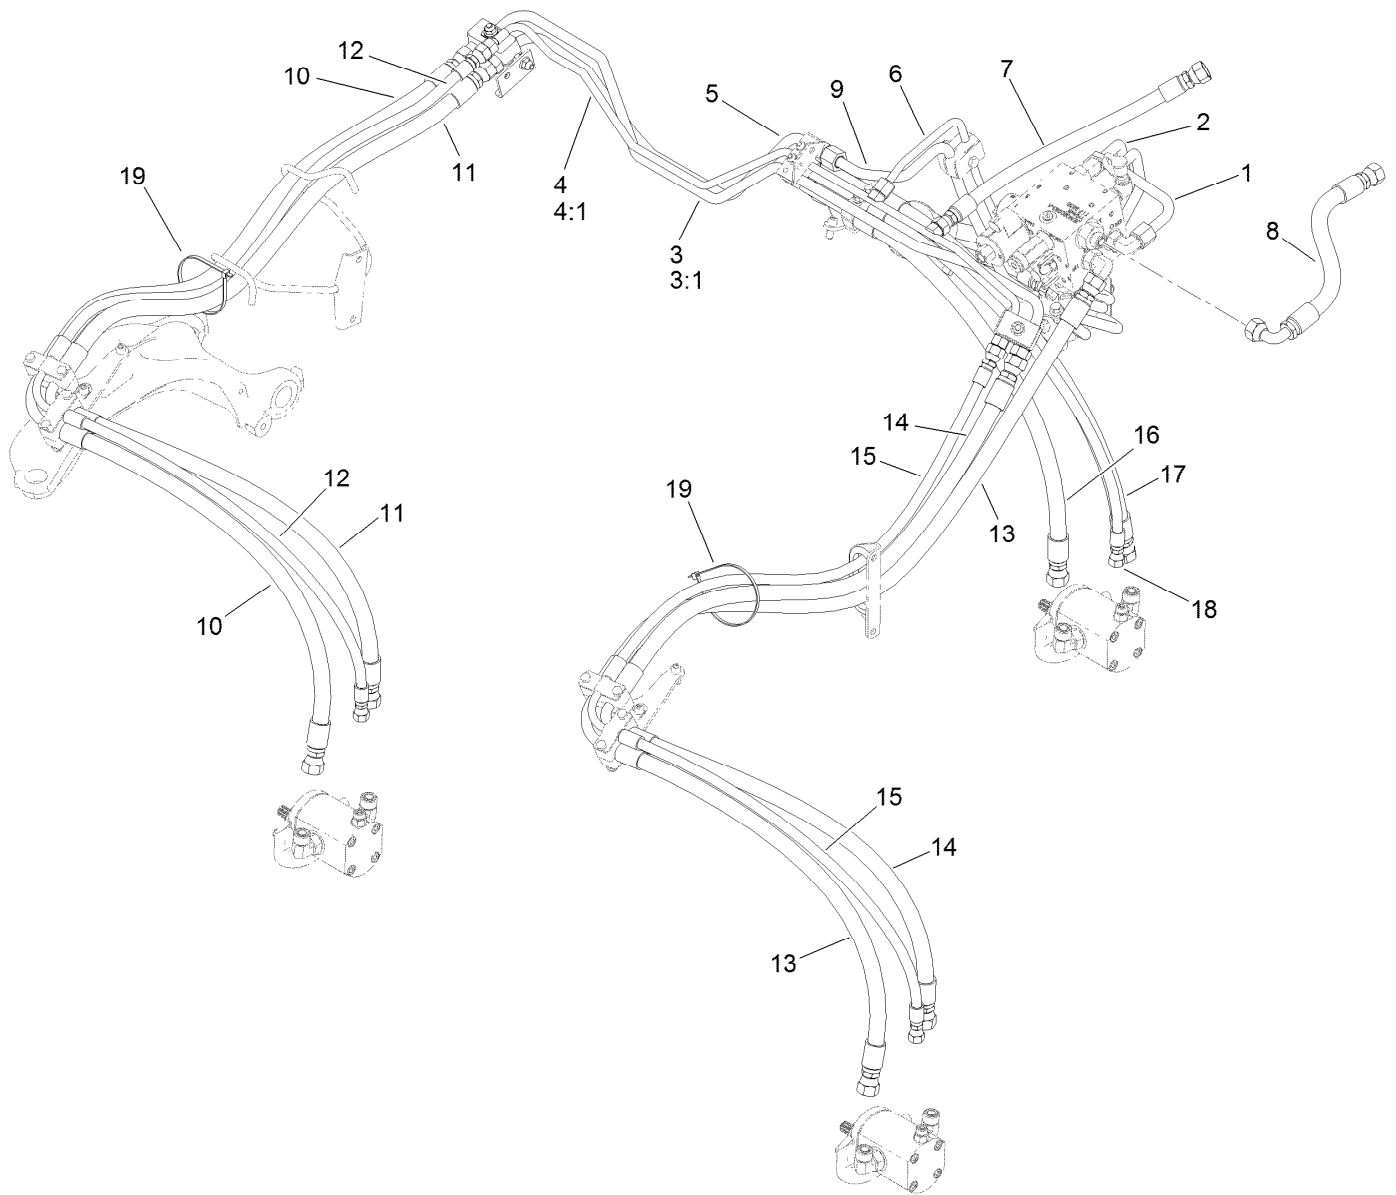


## Hydraulic Mow Hose Routing Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 117-9347           | 1           | HYD Tube ASM              | 10          | 119-8145           | 1           | Hose-HYD (Pressure No. 3) |
| 2           | 119-2073           | 1           | HYD Tube ASM              | 11          | 119-8146           | 1           | Hose-HYD (Return No. 3)   |
| 3           | 119-2078           | 1           | HYD Tube ASM              | 12          | 119-8147           | 1           | Hose-HYD (Case No. 3)     |
| 3:1         | 237-30             | 2           | O-Ring                    | 13          | 119-8157           | 1           | Hose-HYD (Pressure No. 2) |
| 4           | 119-2079           | 1           | HYD Tube ASM              | 14          | 119-8158           | 1           | Hose-HYD (Return No. 2)   |
| 4:1         | 237-22             | 4           | O-Ring                    | 15          | 119-8159           | 1           | HYD Hose ASM (Case No. 2) |
| 5           | 119-2084           | 1           | HYD Tube ASM              | 16          | 119-8160           | 1           | Hose-HYD (Pressure No. 1) |
| 6           | 119-2085           | 1           | HYD Tube ASM              | 17          | 119-8161           | 1           | Hose-HYD (Return No. 1)   |
| 7           | 119-2089           | 1           | Hose-HYD (Case To Tank)   | 18          | 119-8162           | 1           | Hose-HYD (Case No. 1)     |
| 8           | 119-8106           | 1           | Hose-HYD (Mow Block/Tank) | 19          | 3290-379           | 2           | Tie-Cable                 |
| 9           | 119-8122           | 1           | HYD Tube ASM              |             |                    |             |                           |

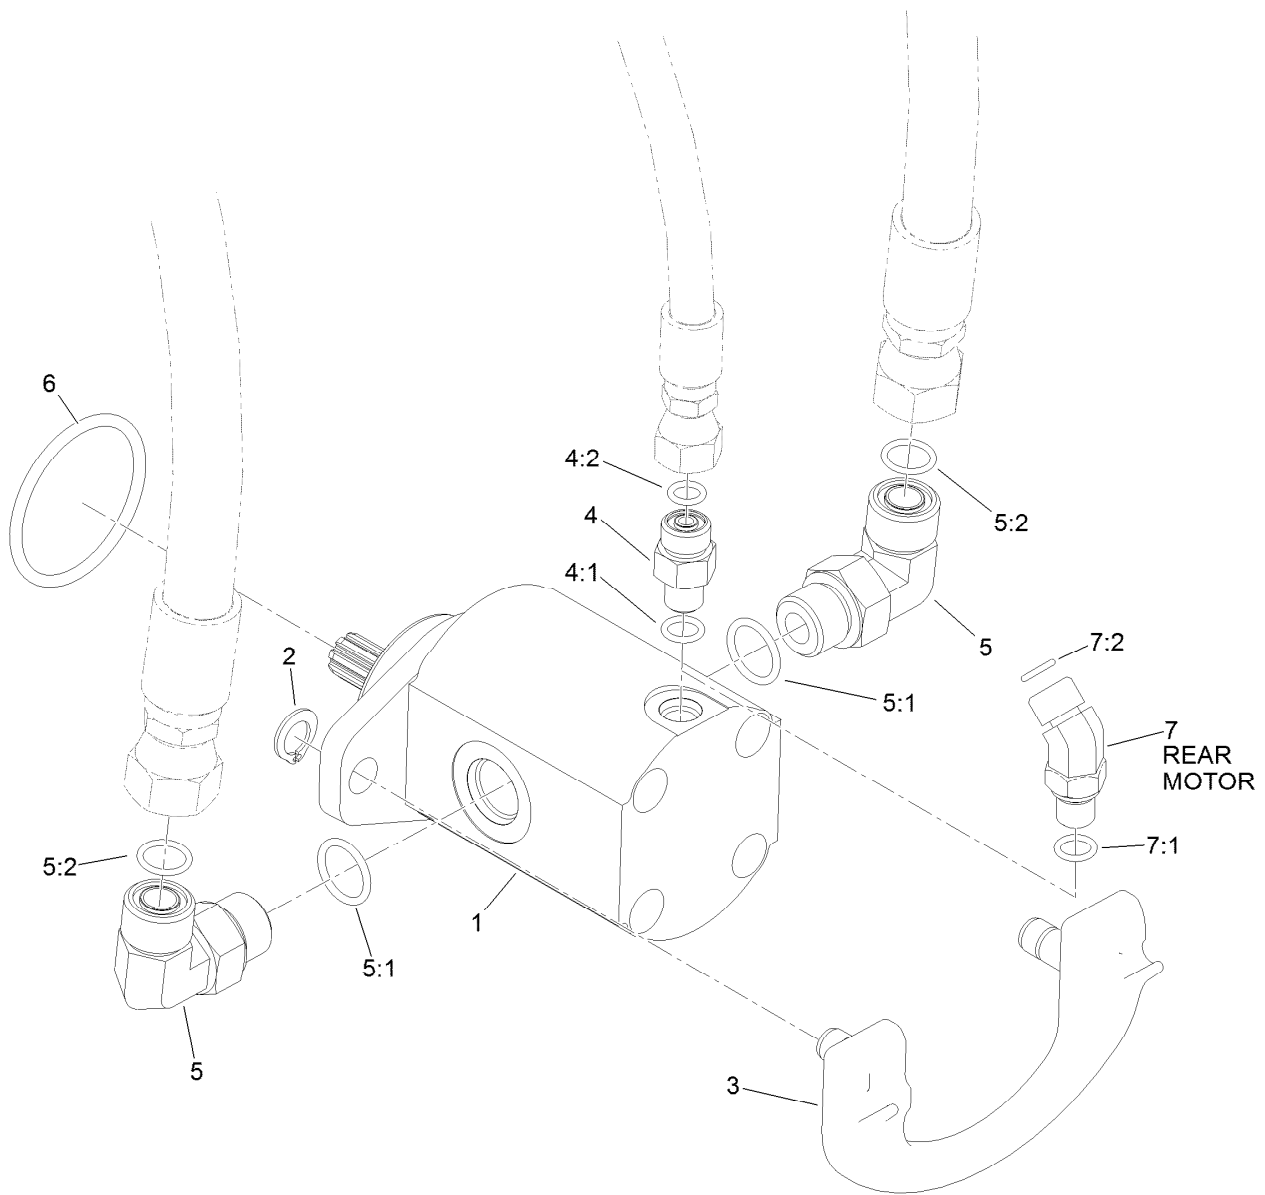

## Hydraulic Mow Reel Motor Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 115-3321    | 3    | HYD Reel Motor ASM    |
| 2    | 115-5206    | 6    | Ring-Retaining        |
| 3    | 115-5389    | 3    | Cam-Mount, Motor      |
| 4    | 340-92      | 2    | Fitting-Straight      |
| 4:1  | 237-78      | 1    | O-Ring                |
| 4:2  | 237-21      | 1    | O-Ring                |
| 5    | 340-98      | 6    | Fitting-Elbow, 90 DEG |
| 5:1  | 237-79      | 1    | O-Ring                |
| 5:2  | 237-30      | 1    | O-Ring                |
| 6    | 115-3298    | 3    | O-Ring                |
| 7    | 340-103     | 1    | Fitting-HYD, 45 DEG   |
| 7:1  | 237-78      | 1    | O-Ring                |
| 7:2  | 237-21      | 1    | O-Ring                |

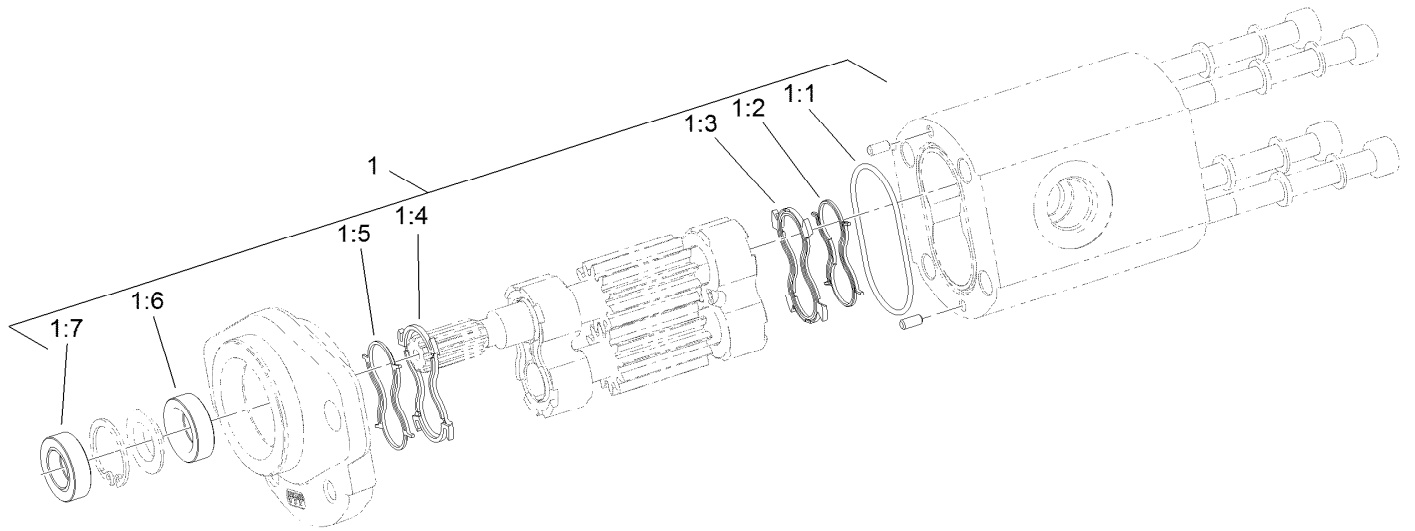

## Hydraulic Reel Motor Assembly No. 115-3321


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 119-7113    | 1    | Seal Kit                |
| 1:1  |             | 1    | O-Ring Housing ●        |
| 1:2  |             | 1    | Seal-Anti Extrusion ●   |
| 1:3  |             | 1    | Seal-Plate, Balancing ● |
| 1:4  |             | 1    | Seal-Plate, Balancing ● |
| 1:5  |             | 1    | Seal- Anti Extrusion ●  |
| 1:6  |             | 1    | Seal-Shaft (Inboard) ●  |
| 1:7  |             | 1    | Seal-Shaft (Outboard) ● |

 ● Not serviced separately

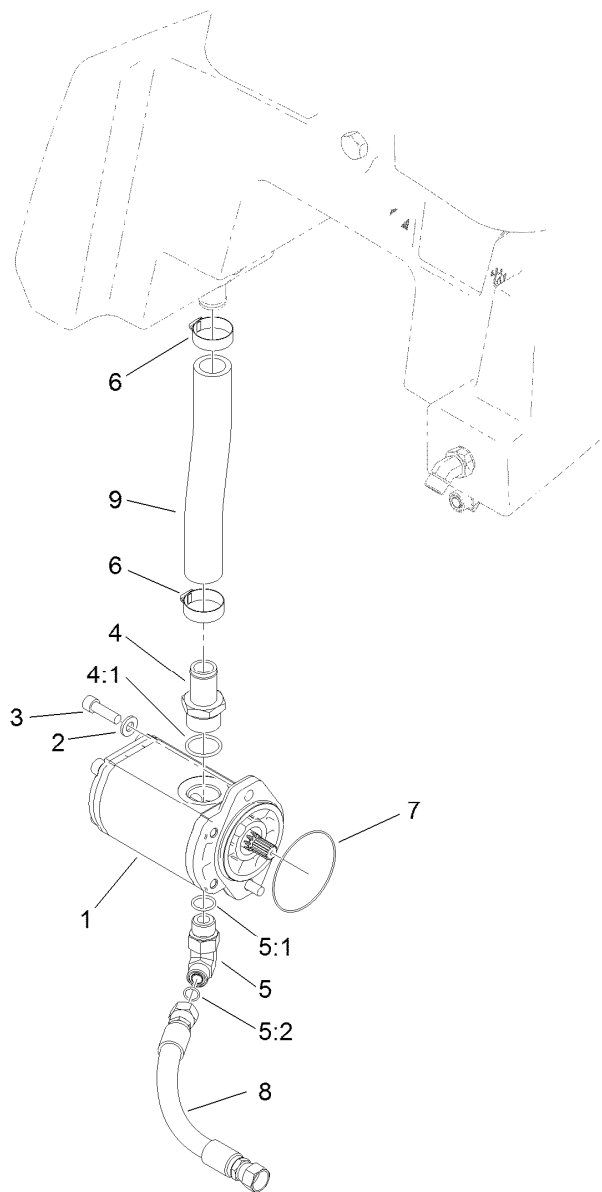

## Hydraulic Mow Gear Pump Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 114-9956    | 1    | HYD Gear Pump ASM     |
| 2    | 100-4852    | 2    | Washer-Hardened       |
| 3    | 3274-1      | 2    | Screw-HSH             |
| 4    | 354-78      | 1    | Fitting-STR           |
| 4:1  | 237-146     | 1    | O-Ring                |
| 5    | 340-105     | 1    | Fitting-Elbow, 90 DEG |
| 5:1  | 237-80      | 1    | O-Ring                |
| 5:2  | 237-30      | 1    | O-Ring                |
| 6    | 2412-34     | 2    | Clamp-Hose            |
| 7    | 353-949     | 1    | O-Ring                |
| 8    | 119-2074    | 1    | Hose-HYD              |
| 9    | 119-2069    | 1    | Hose-Suction          |

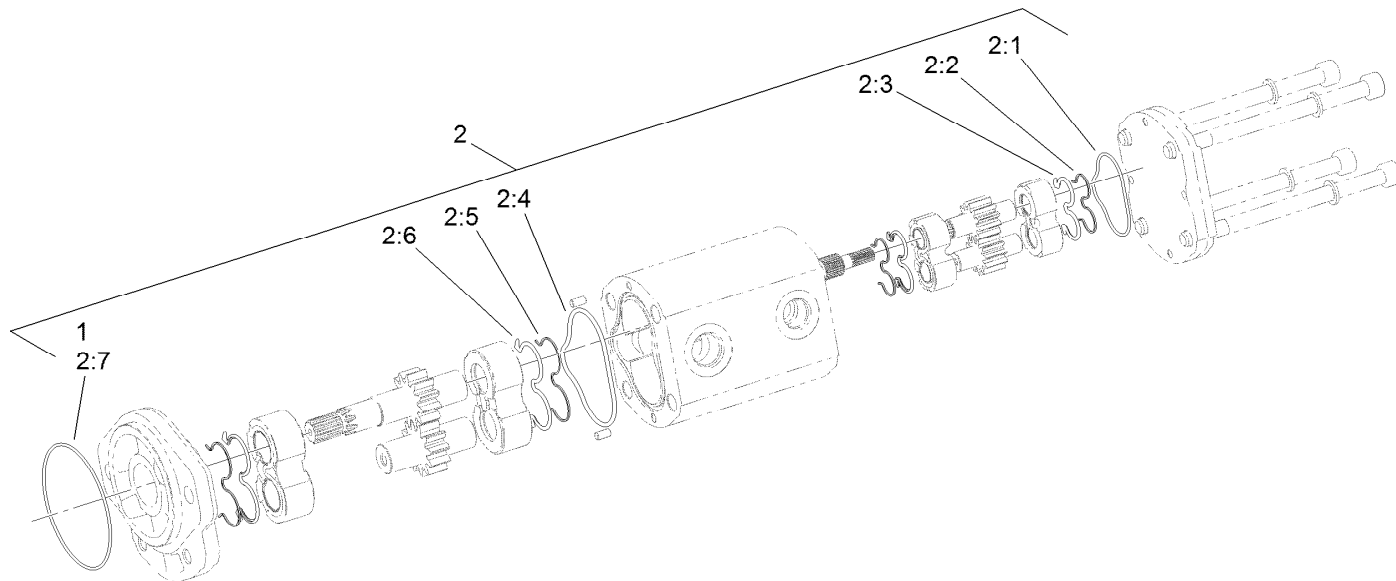

## Hydraulic Gear Pump Assembly No. 114-9956

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 353-949     | 1    | O-Ring                 |
| 2    | 119-7134    | 1    | Kit-Seal               |
| 2:1  |             | 1    | O-Ring ●               |
| 2:2  |             | 2    | Seal-Extrusion, Anti ● |
| 2:3  |             | 2    | Seal-Backup ●          |
| 2:4  |             | 1    | O-Ring ●               |
| 2:5  |             | 2    | Seal-Extrusion, Anti ● |
| 2:6  |             | 2    | Seal-Backup ●          |
| 2:7  |             | 1    | O-Ring ●               |

 ● Not serviced separately

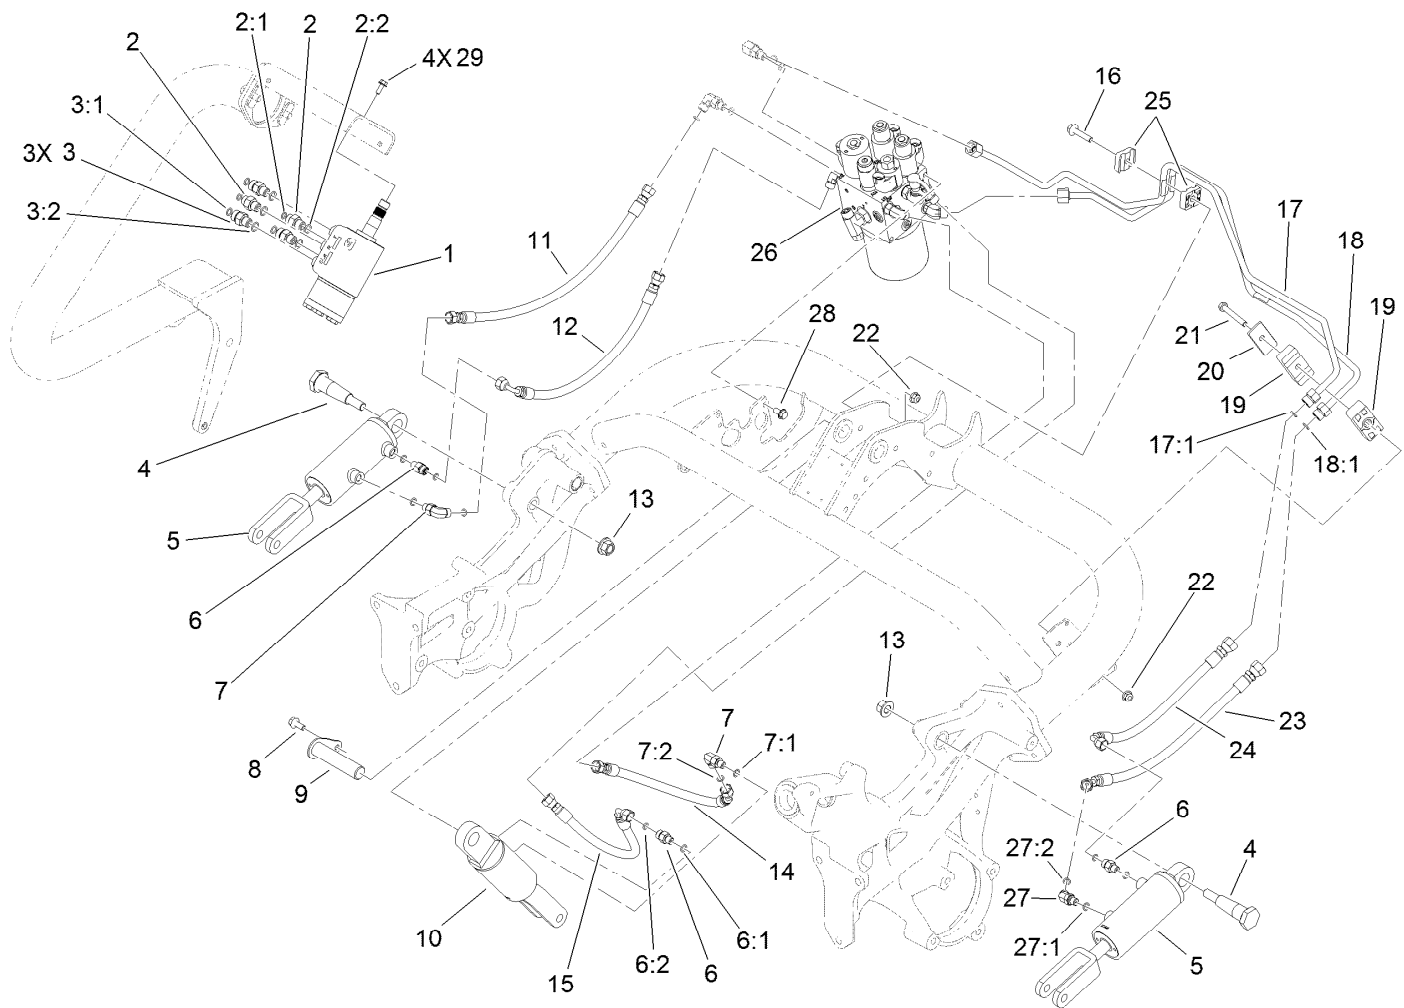


## Lift Circuit Assembly

| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 114-4672    | 1    | Steering Valve ASM           |
| 2    | 340-1       | 2    | Fitting-Straight             |
| 2:1  | 237-21      | 1    | O-Ring                       |
| 2:2  | 237-42      | 1    | O-Ring                       |
| 3    | 340-2       | 3    | Fitting-Straight             |
| 3:1  | 237-22      | 1    | O-Ring                       |
| 3:2  | 237-42      | 1    | O-Ring                       |
| 4    | 112-5709    | 2    | Pin-Tapered                  |
| 5    | 119-8129    | 2    | No. 2 And 3 HYD Cylinder ASM |
| 6    | 340-92      | 3    | Fitting-Straight             |
| 6:1  | 237-78      | 1    | O-Ring                       |
| 6:2  | 237-21      | 1    | O-Ring                       |
| 7    | 340-132     | 2    | Fitting-Elbow, 90 DEG        |
| 7:1  | 237-78      | 1    | O-Ring                       |
| 7:2  | 237-21      | 1    | O-Ring                       |
| 8    | 3234-47     | 1    | Screw-HHF                    |
| 9    | 119-8104    | 1    | Pin                          |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 10   | 119-8128    | 1    | No. 1 HYD Cylinder ASM |
| 11   | 119-2052    | 1    | Hose-HYD               |
| 12   | 119-2053    | 1    | Hose-HYD               |
| 13   | 99-5107     | 2    | Nut-Lock               |
| 14   | 119-2051    | 1    | Hose-HYD               |
| 15   | 119-2050    | 1    | Hose-HYD               |
| 16   | 115-1794    | 1    | Screw-HHF              |
| 17   | 119-8126    | 1    | HYD Tube ASM           |
| 17:1 | 237-22      | 1    | O-Ring                 |
| 18   | 119-8127    | 1    | HYD Tube ASM           |
| 18:1 | 237-22      | 1    | O-Ring                 |
| 19   | 120-3200    | 2    | Clamp-Tube             |
| 20   | 69-9761     | 1    | Plate-Cover            |
| 21   | 322-12      | 1    | Screw-HH               |
| 22   | 104-8300    | 3    | Nut-HF, NI             |
| 23   | 119-2066    | 1    | Hose-HYD               |
| 24   | 119-2065    | 1    | Hose-HYD               |
| 25   | 56-7973     | 2    | Clamp-Tube             |

 ● Not serviced separately

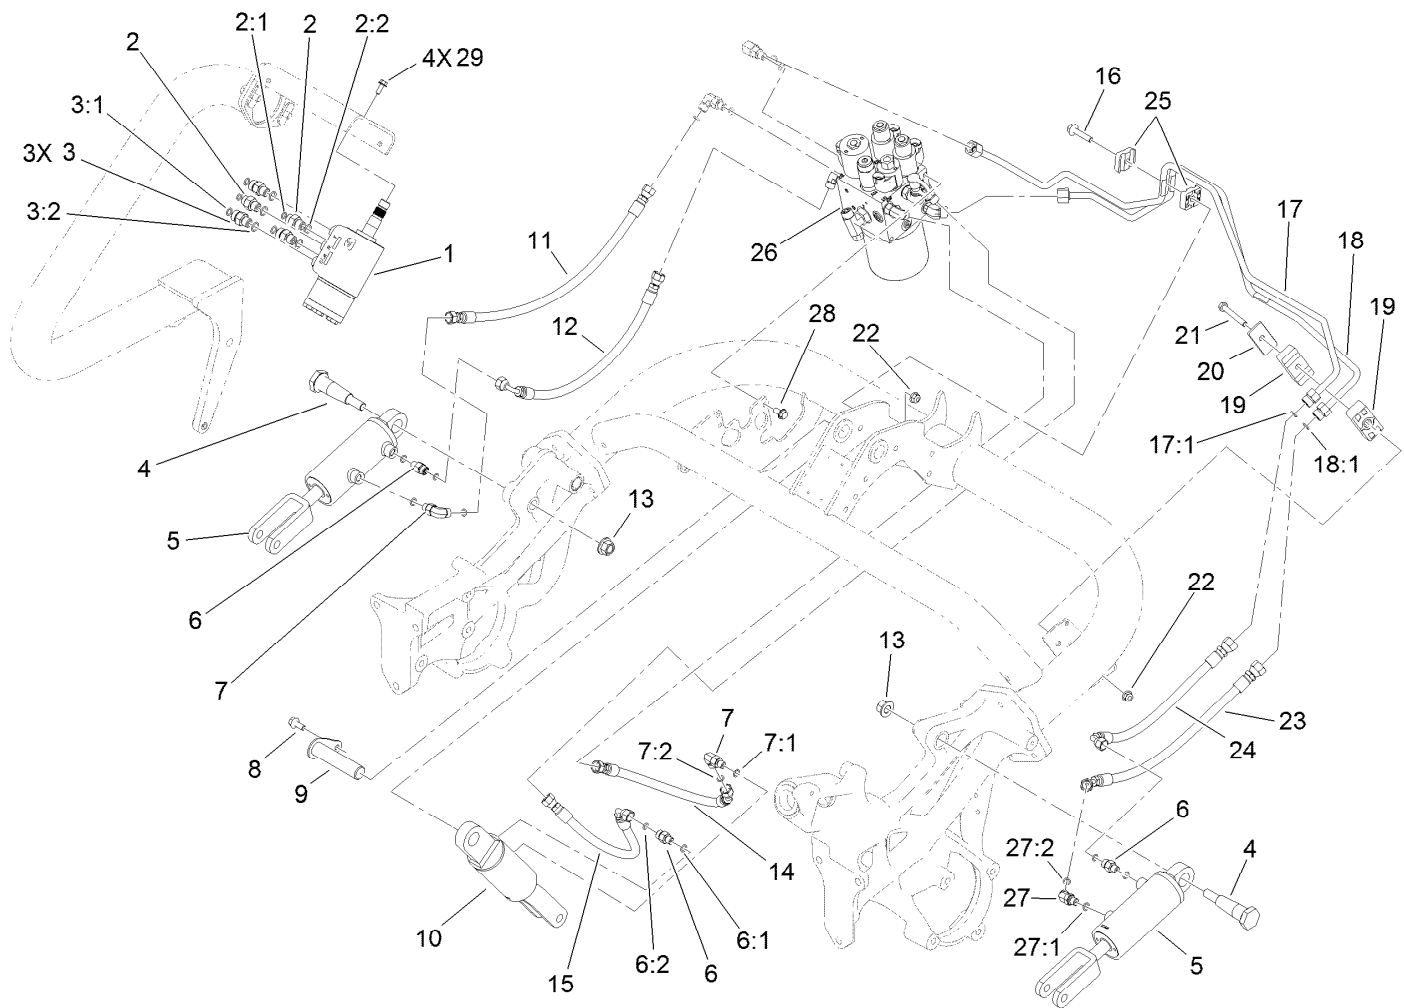


## Lift Circuit Assembly (continued)

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 26   |             | 1    | Hydraulic Lift Manifold ASM |
| 27   | 340-103     | 1    | Fitting-HYD, 45 DEG         |
| 27:1 | 237-78      | 1    | O-Ring                      |


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 27:2 | 237-21      | 1    | O-Ring      |
| 28   | 3234-7      | 2    | Screw-HHF   |
| 29   | 33103-016   | 4    | Screw-HHF   |

 ● Not serviced separately

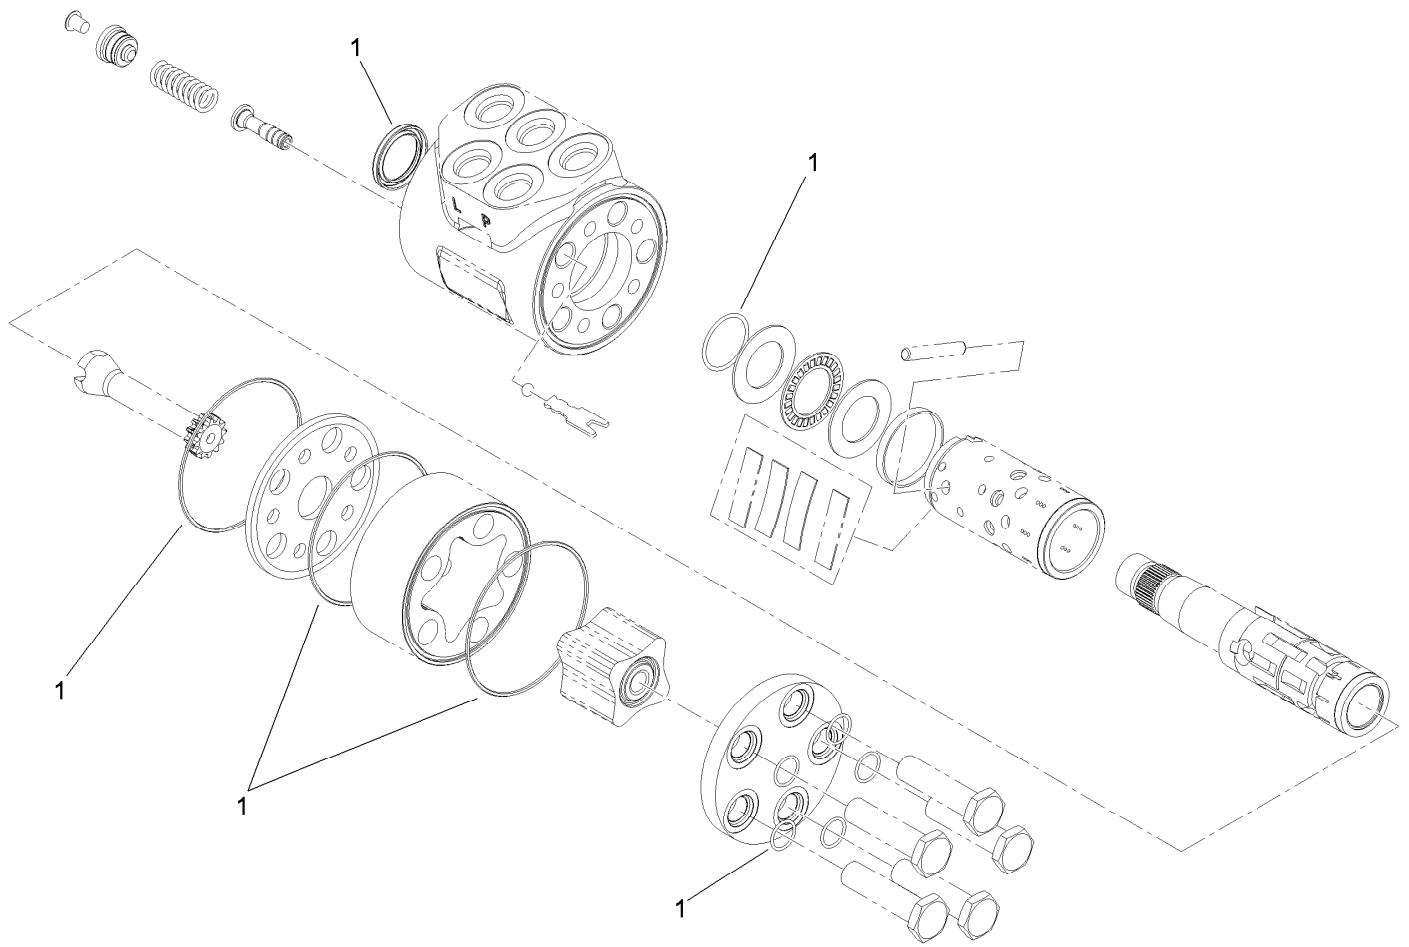

## Steering Valve Assembly No. 114-4672

 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 106-6716    | 1    | Seal Kit    |

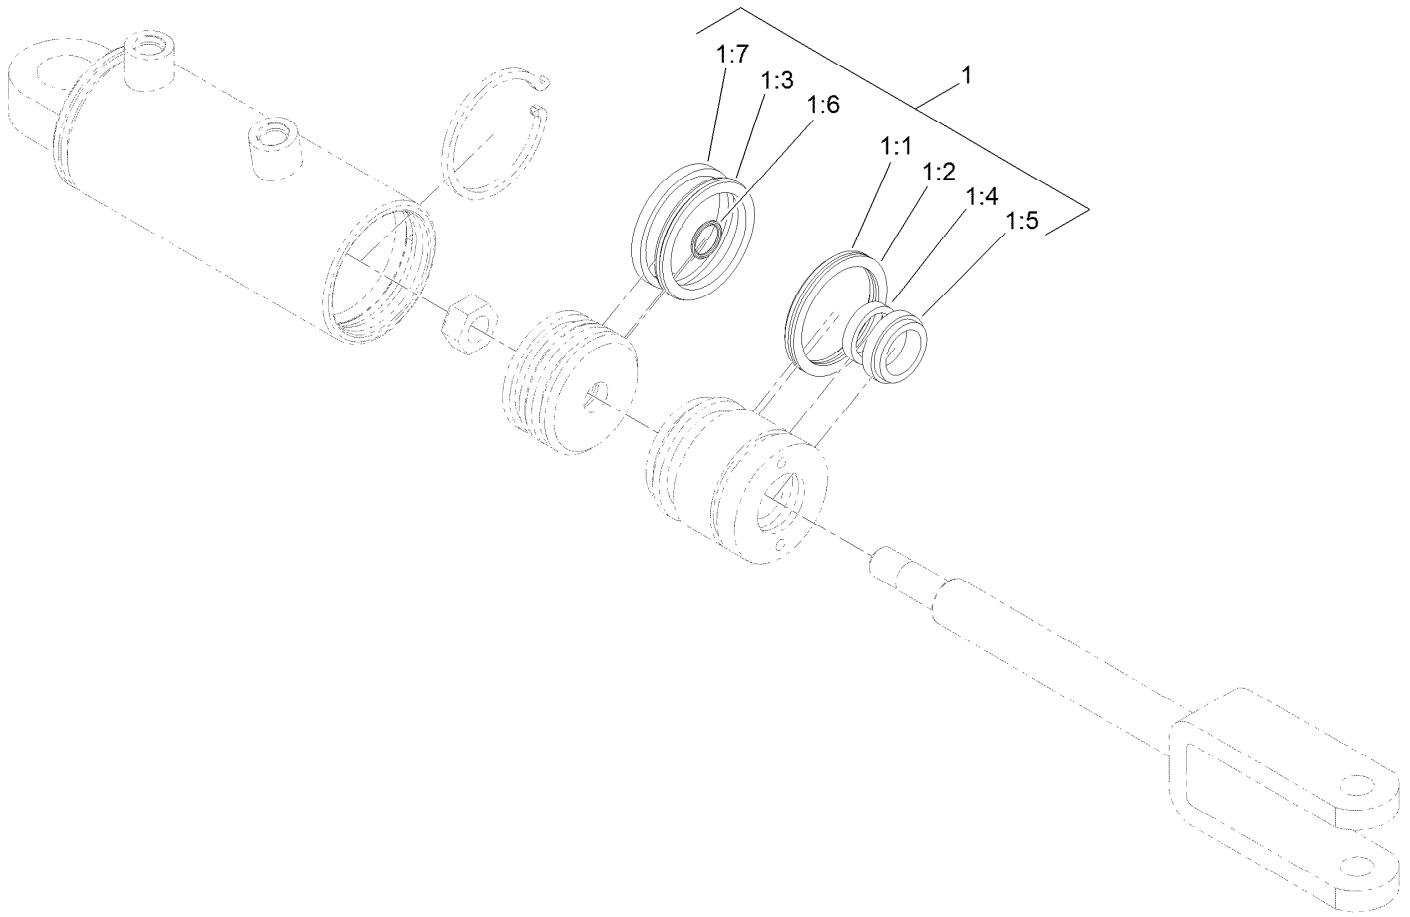

## Hydraulic Cylinder Assembly No. 119-8129

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 115-3410           | 1           | Seal Kit           |
| 1:1         |                    | 1           | O-Ring ●           |
| 1:2         |                    | 1           | Backup ●           |
| 1:3         |                    | 1           | Bp Seal ●          |
| 1:4         |                    | 1           | Bs Seal ●          |
| 1:5         |                    | 1           | Seal-Dust ●        |
| 1:6         |                    | 1           | O-Ring ●           |
| 1:7         |                    | 1           | Ring-Wear ●        |

 
● Not serviced separately

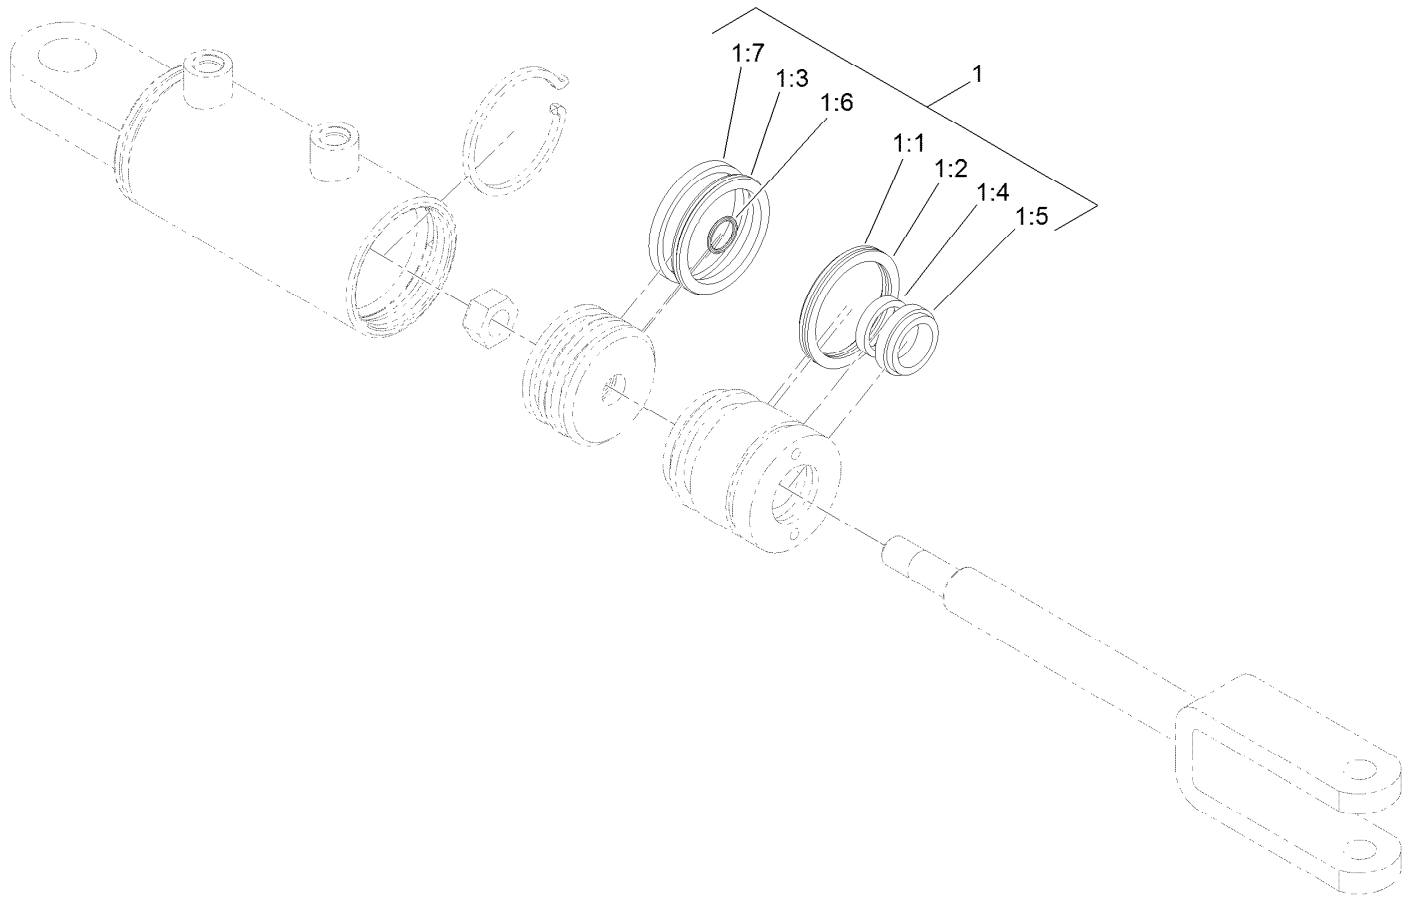

## Hydraulic Cylinder Assembly No. 119-8128

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 115-3410           | 1           | Seal Kit           |
| 1:1         |                    | 1           | O-Ring ●           |
| 1:2         |                    | 1           | Backup ●           |
| 1:3         |                    | 1           | Bp Seal ●          |
| 1:4         |                    | 1           | Bs Seal ●          |
| 1:5         |                    | 1           | Seal-Dust ●        |
| 1:6         |                    | 1           | O-Ring ●           |
| 1:7         |                    | 1           | Ring-Wear ●        |


 
● Not serviced separately

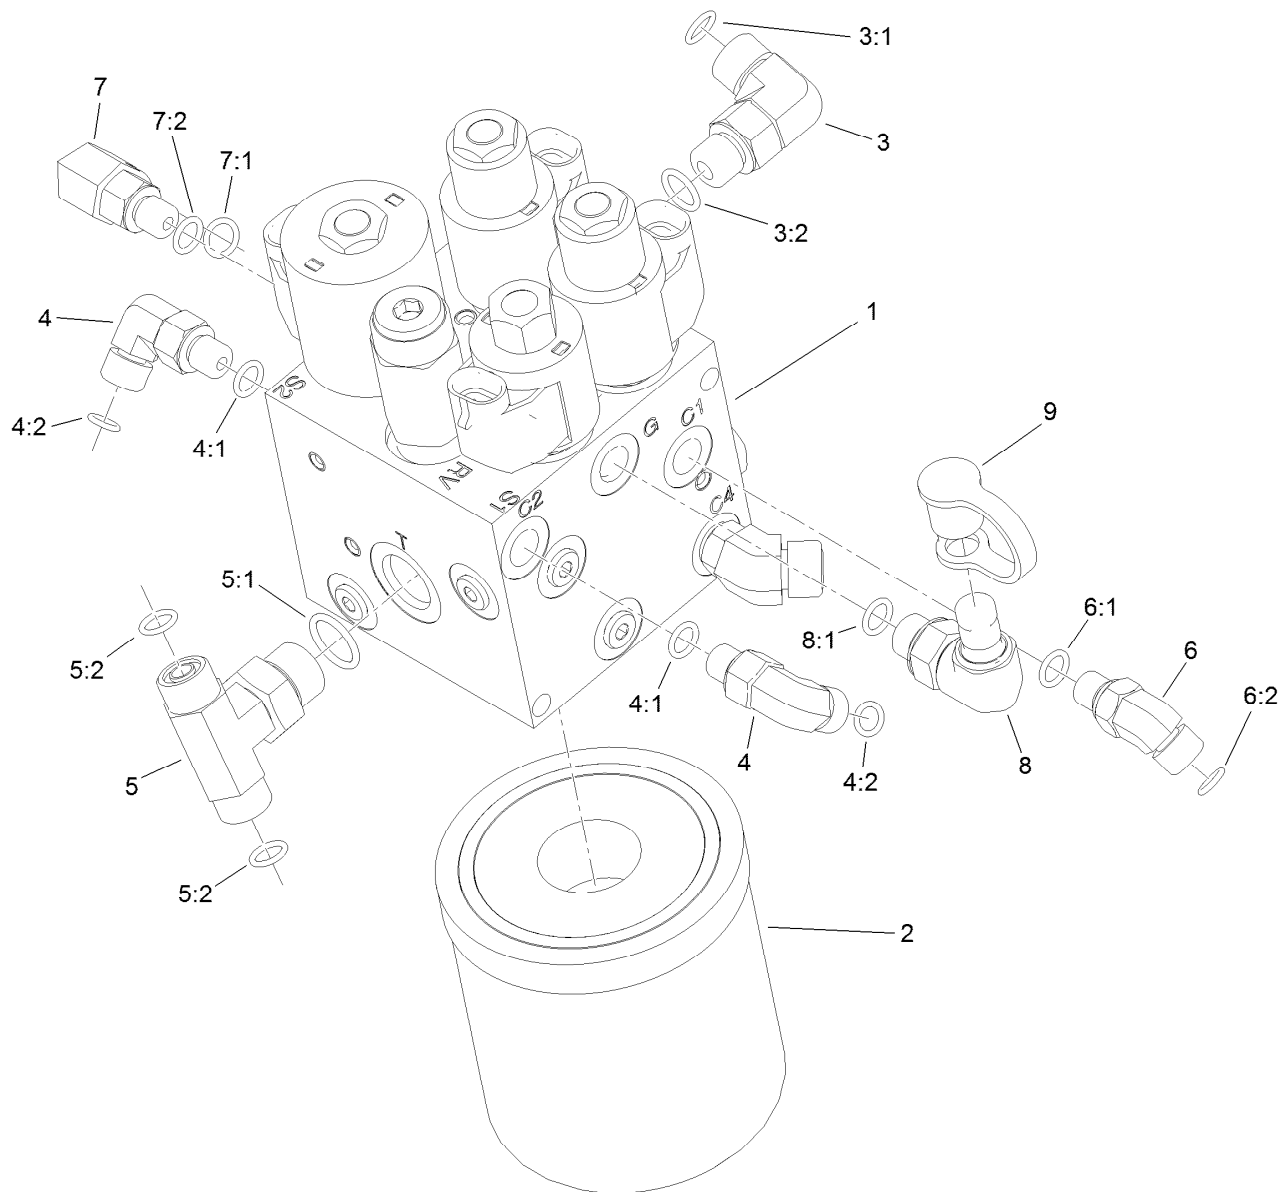

## Hydraulic Lift Manifold Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 125-5187    | 1    | Manifold-Lift, HYD    |
| 2    | 108-5194    | 1    | Filter-Oil, HYD       |
| 3    | 340-77      | 1    | Fitting-Elbow, 90 DEG |
| 3:1  | 237-22      | 1    | O-Ring                |
| 3:2  | 237-42      | 1    | O-Ring                |
| 4    | 340-132     | 2    | Fitting-Elbow, 90 DEG |
| 4:1  | 237-78      | 1    | O-Ring                |
| 4:2  | 237-21      | 1    | O-Ring                |
| 5    | 92-4799     | 1    | Fitting-Tee, HYD      |
| 5:1  | 237-79      | 1    | O-Ring                |

  
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 5:2  | 237-22      | 2    | O-Ring                |
| 6    | 340-103     | 1    | Fitting-HYD, 45 DEG   |
| 6:1  | 237-78      | 1    | O-Ring                |
| 6:2  | 237-21      | 1    | O-Ring                |
| 7    | 340-97      | 1    | Fitting-Elbow, 90 DEG |
| 7:1  | 237-22      | 1    | O-Ring                |
| 7:2  | 237-78      | 1    | O-Ring                |
| 8    | 115-9147    | 1    | Fitting-Elbow, 90 DEG |
| 8:1  | 237-78      | 1    | O-Ring                |
| 9    | 354-79      | 1    | Cap-Dust              |

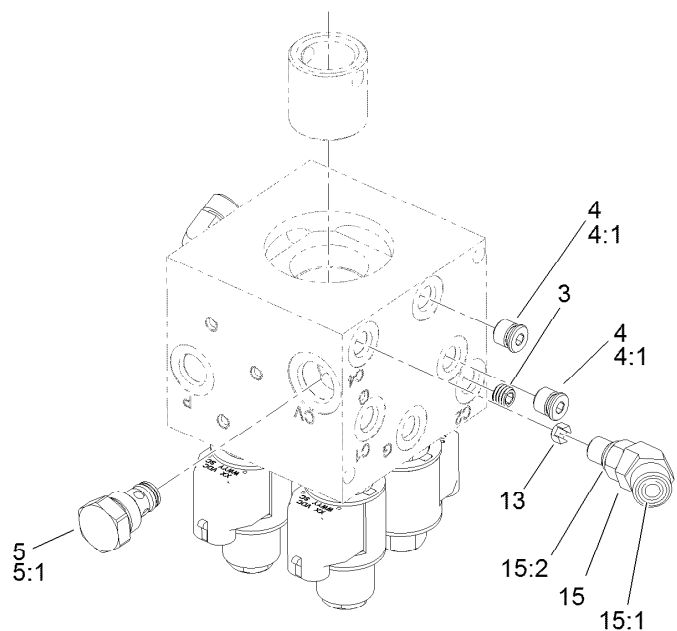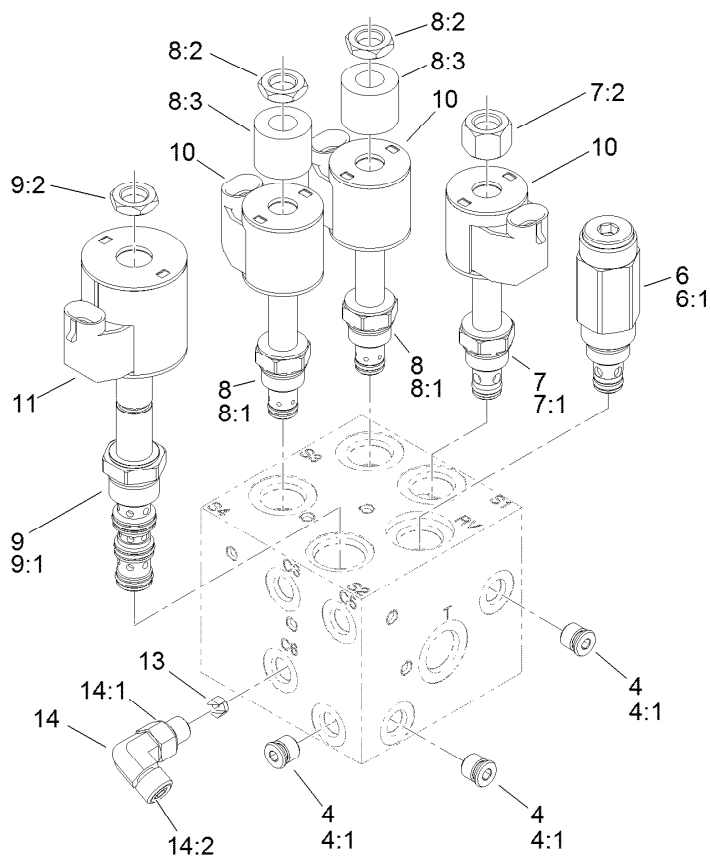

## Hydraulic Lift Manifold Assembly No. 125-5187


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 3    | 119-7144    | 1    | Orifice (.037 Inch) |
| 4    | 353-990     | 5    | Plug ASM            |
| 4:1  | 237-78      | 1    | O-Ring              |
| 5    | 107-7524    | 1    | Check Valve ASM     |
| 5:1  | 105-9156    | 1    | Seal Kit            |
| 6    | 112-9207    | 1    | Valve-Relief        |
| 6:1  | 105-9156    | 1    | Seal Kit            |
| 7    | 107-7517    | 1    | Valve-Solenoid      |
| 7:1  | 105-9156    | 1    | Seal Kit            |
| 7:2  | 107-7812    | 1    | Nut-Solenoid        |
| 8    | 110-8898    | 2    | Valve-Solenoid      |
| 8:1  | 107-7527    | 1    | Seal Kit            |
| 8:2  | 110-2634    | 1    | Nut-Coil            |
 
| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 8:3  | 110-8909    | 1    | Spacer-Coil                   |
| 9    | 110-8906    | 1    | Valve-Solenoid                |
| 9:1  | 110-8908    | 1    | Spool Valve Seal Kit          |
| 9:2  | 110-2634    | 1    | Nut-Coil                      |
| 10   | 110-0497    | 3    | Coil-Solenoid                 |
| 11   | 110-6344    | 1    | Coil-12V, DC                  |
| 13   | 125-5211    | 2    | Orifice-Control, Flow (0.030) |
| 14   | 340-132     | 1    | Fitting-Elbow, 90 DEG         |
| 14:1 | 237-78      | 1    | O-Ring                        |
| 14:2 | 237-21      | 1    | O-Ring                        |
| 15   | 340-54      | 1    | Elbow-45 DEG                  |
| 15:1 | 237-22      | 1    | O-Ring                        |
| 15:2 | 237-78      | 1    | O-Ring                        |

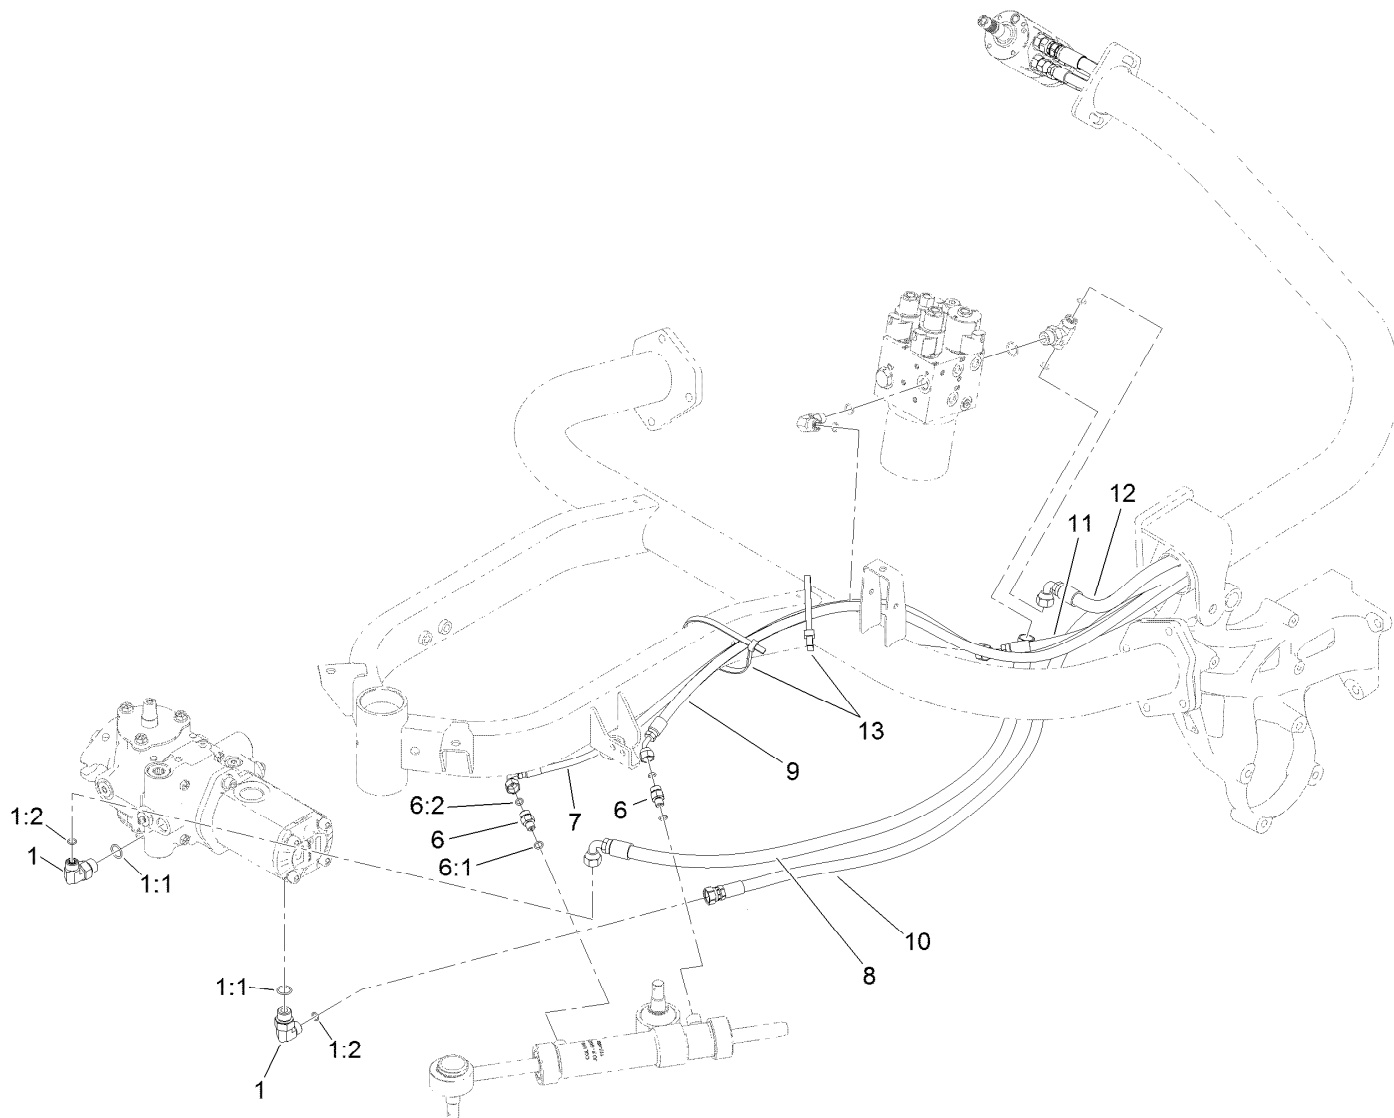

## Steering Circuit Assembly

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 340-18      | 2    | Fitting-HYD, 90 DEG |
| 1:1  | 237-79      | 1    | O-Ring              |
| 1:2  | 237-22      | 1    | O-Ring              |
| 6    | 340-92      | 2    | Fitting-Straight    |
| 6:1  | 237-78      | 1    | O-Ring              |
| 6:2  | 237-21      | 1    | O-Ring              |
| 7    | 119-8124    | 1    | Hose-HYD            |
| 8    | 125-5168    | 1    | Hose-HYD            |
| 9    | 119-8123    | 1    | Hose-HYD            |
| 10   | 125-5167    | 1    | Hose-HYD            |
| 11   | 117-3683    | 1    | Hose-HYD            |
| 12   | 125-5166    | 1    | Hose-HYD            |
| 13   | 3334-945    | 2    | Tie-Cable           |

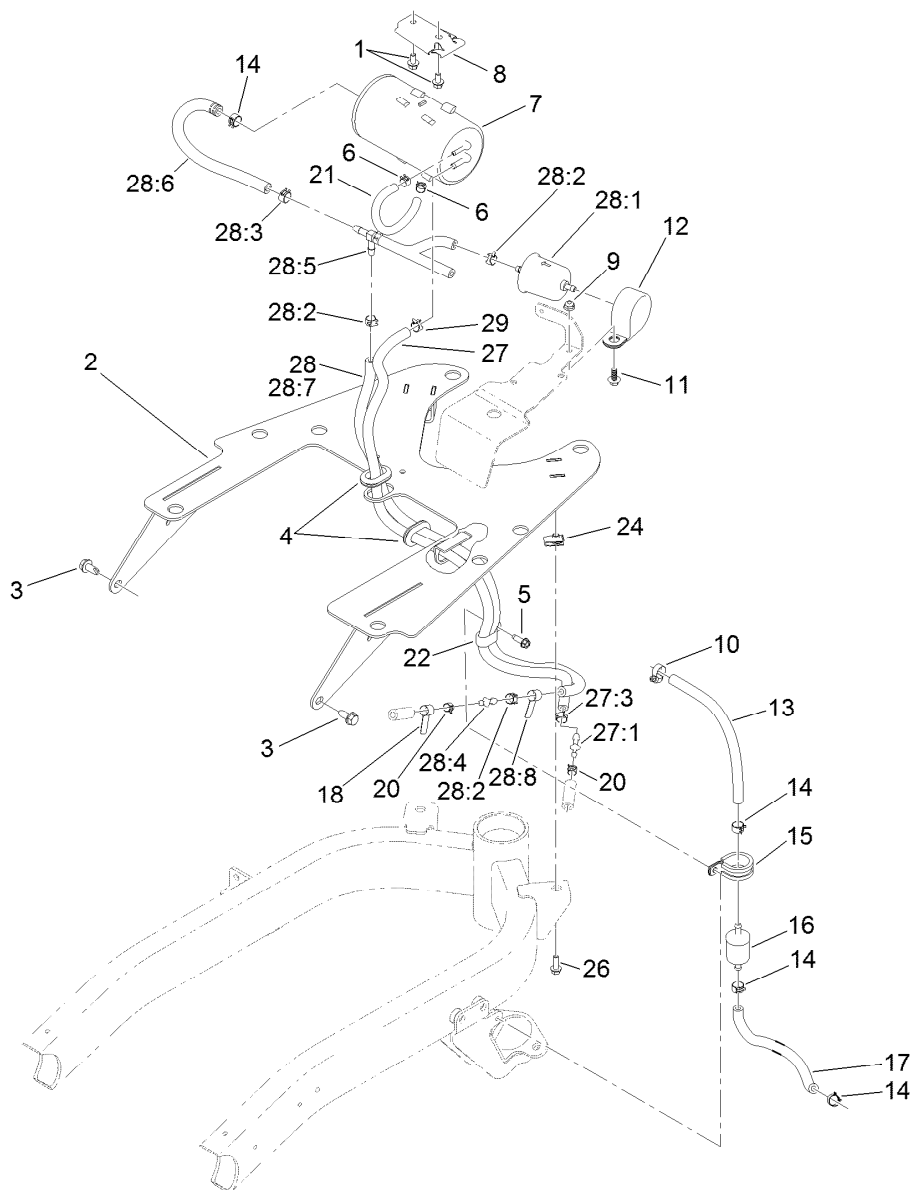

## Fuel Line and Carbon Canister Hose Routing Assembly

| Ref. | Part Number | Qty. | Description              | Ref. | Part Number | Qty. | Description          |
|------|-------------|------|--------------------------|------|-------------|------|----------------------|
| 1    | 3234-13     | 2    | Screw-HHF                | 18   | 121-6664    | 1    | Decal-Cleaner, Air   |
| 2    | 121-5176-03 | 1    | Plate-Mount, Tank        | 20   | 2412-80     | 1    | Clamp-Hose           |
| 3    | 32104-32    | 2    | Screw-HWH                | 21   | 119-8523    | 1    | Hose-Fuel            |
| 4    | 240-5       | 2    | Grommet                  | 22   | 119-8153    | 1    | Clamp-R, Double Tube |
| 5    | 49-2040     | 1    | Screw-HWHTF              | 24   | 107069      | 2    | Clip                 |
| 6    | 2412-146    | 3    | Clamp-Hose               | 26   | 115-5103    | 2    | Screw-HHF            |
| 7    | 115-2251    | 1    | Canister-Carbon          | 27   | 121-5181    | 1    | Purge Hose ASM       |
| 8    | 114-0292    | 1    | Bracket-Canister, Carbon | 27:1 | 121-2573    | 1    | Fitting-Straight     |
| 9    | 104-7201    | 1    | Nut-HF, NI               | 27:3 | 2412-98     | 2    | Clamp-Hose           |
| 10   | 2412-108    | 1    | Clamp-Worm               | 28   |             | 1    | Tee Hose ASM ●       |
| 11   | 99-6810     | 1    | Screw-HHF                | 28:1 | 121-2583    | 1    | Filter-Fuel, Inline  |
| 12   | 100-1424    | 1    | Clamp-R                  | 28:2 | 2412-98     | 3    | Clamp-Hose           |
| 13   | 109-0282    | 1    | Hose-Fuel                | 28:3 | 92-2379     | 2    | Clamp-Hose           |
| 14   | 92-2379     | 3    | Clamp-Hose               | 28:4 | 121-2573    | 1    | Fitting-Straight     |
| 15   | 120-2037    | 1    | R-Clamp                  | 28:5 | 121-6663    | 1    | Check Valve Hose ASM |
| 16   | 94-2690     | 1    | Filter-Fuel              | 28:6 | 110-4105    | 1    | Hose-Fuel            |
| 17   | 109-0293    | 1    | Hose-Fuel                | 28:7 | 109-3491    | 1    | Hose-Fuel            |

 
● Not serviced separately

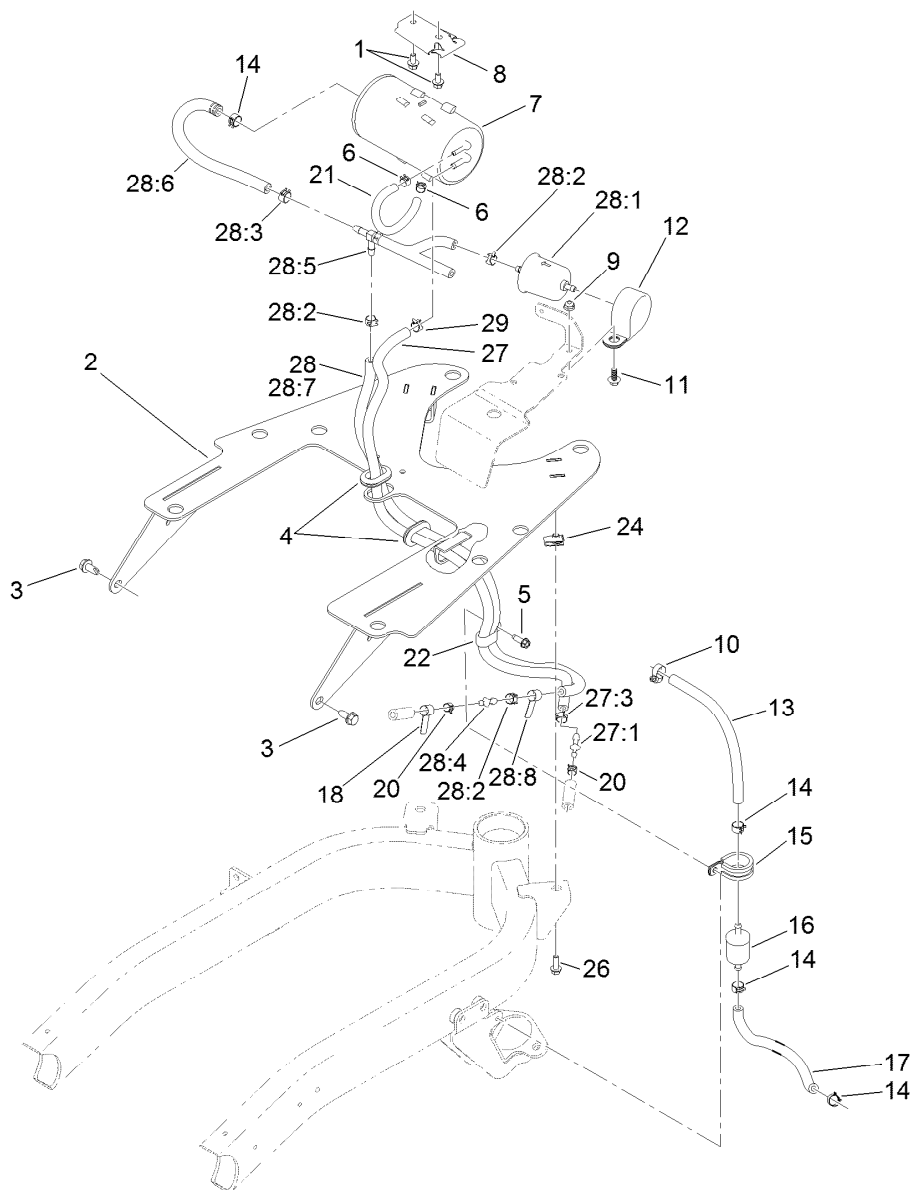

## Fuel Line and Carbon Canister Hose Routing Assembly (continued)

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 28:8 | 121-6664    | 1    | Decal-Cleaner, Air |
| 29   | 2412-98     | 1    | Clamp-Hose         |

 
● Not serviced separately

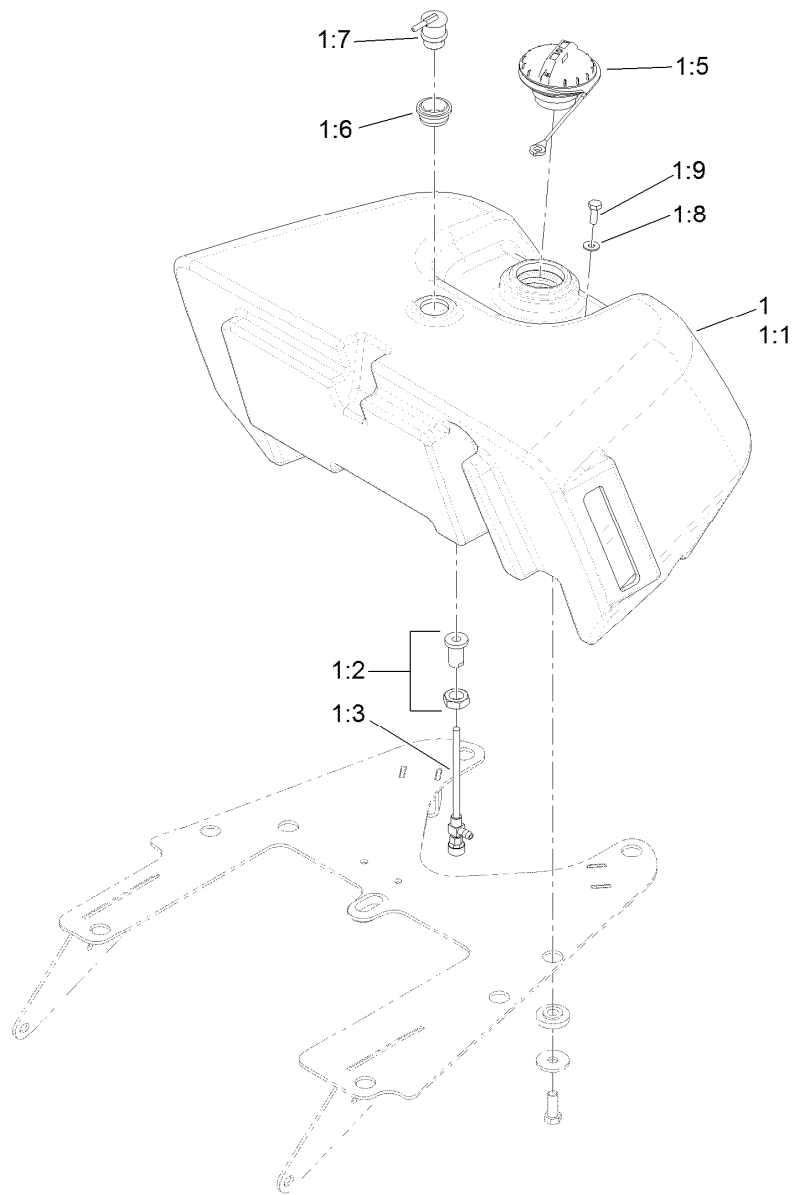

## Fuel Tank Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 121-9571    | 1    | Fuel Tank ASM          |
| 1:1  |             | 1    | Tank-Fuel, Gas ●       |
| 1:2  | 114-4677    | 1    | Bulkhead ASM           |
| 1:3  | 114-4679    | 1    | Fitting-Shut Off, Fuel |
| 1:5  | 117-1722    | 1    | Cap-Fuel               |
| 1:6  | 114-0284    | 1    | Grommet                |
| 1:7  | 119-3547    | 1    | Valve-Vent, Fuel       |
| 1:8  | 3256-1      | 1    | Washer-Flat            |
| 1:9  | 321-2       | 1    | Screw-HH               |

 
● Not serviced separately

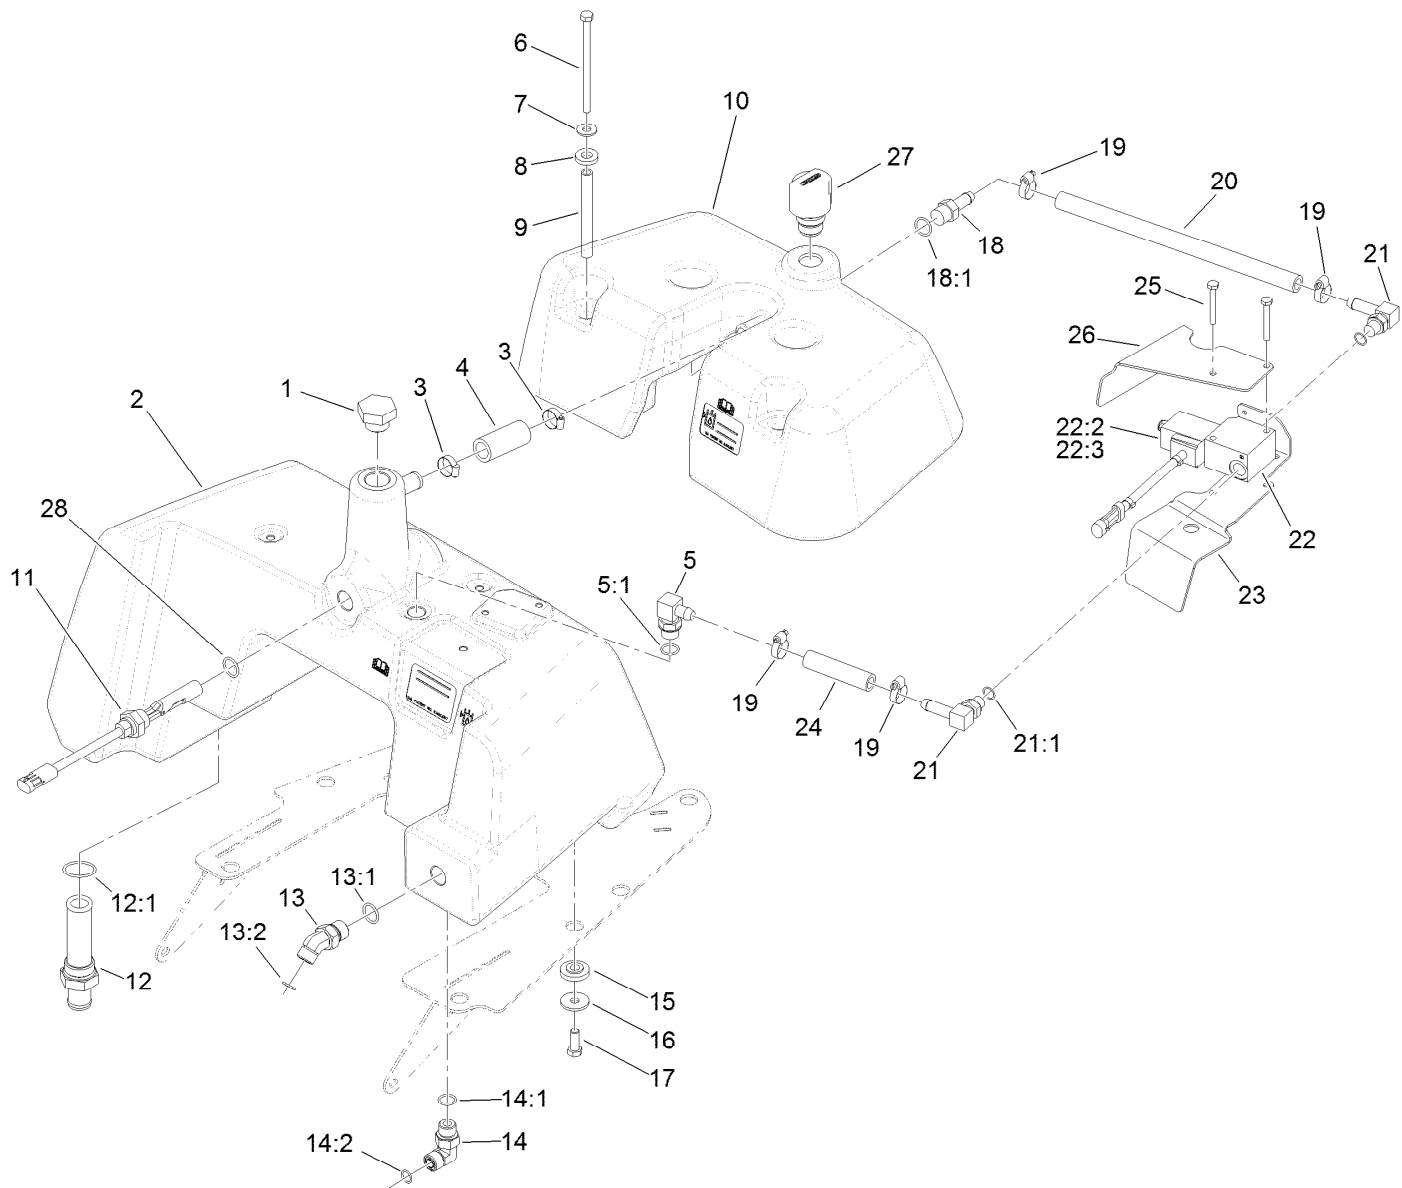

## Hydraulic Tank and Leak Detector Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 354-74      | 1    | Plug-HH               |
| 2    | 115-9822    | 1    | Tank-Hydraulic        |
| 3    | 2412-141    | 2    | Clamp-Drive, Worm     |
| 4    | 110-3998    | 1    | Hose-Overflow         |
| 5    | 119-9331    | 1    | Fitting-HYD 90 Spcl   |
| 5:1  | 237-79      | 1    | O-Ring                |
| 6    | 322-29      | 4    | Screw-HH              |
| 7    | 3256-71     | 4    | Washer-Flat           |
| 8    | 83-1470     | 4    | Washer-Neoprene       |
| 9    | 115-9825    | 4    | Spacer-Tube, Long     |
| 10   | 115-8242    | 1    | Tank-Detector, Leak   |
| 11   | 83-1450     | 1    | Sensor-Level, Oil     |
| 12   | 112-0211    | 1    | Strainer Fitting ASM  |
| 12:1 | 237-146     | 1    | O-Ring                |
| 13   | 340-89      | 1    | Fitting-HYD, 45 DEG   |
| 13:1 | 237-30      | 1    | O-Ring                |
| 13:2 | 237-80      | 1    | O-Ring                |
| 14   | 340-98      | 1    | Fitting-Elbow, 90 DEG |
| 14:1 | 237-79      | 1    | O-Ring                |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 14:2 | 237-30      | 1    | O-Ring             |
| 15   | 240-11      | 8    | Bushing-Flange     |
| 16   | 63-8410     | 8    | Washer             |
| 17   | 323-6       | 8    | Screw-HH           |
| 18   | 354-121     | 1    | Fitting-STR        |
| 18:1 | 237-79      | 1    | O-Ring             |
| 19   | 2412-36     | 4    | Clamp-Hose         |
| 20   | 83-2070     | 1    | Hose-Valve         |
| 21   | 354-120     | 2    | Fitting-Elbow, 90  |
| 21:1 | 237-79      | 1    | O-Ring             |
| 22   | 83-1460     | 1    | Solenoid Valve ASM |
| 22:2 | 83-2000     | 1    | Spool-Valve        |
| 22:3 | 83-2010     | 1    | Coil ASM           |
| 23   | 121-5175-03 | 1    | Cover-Level, Oil   |
| 24   | 83-2080     | 1    | Hose-Valve, Tank   |
| 25   | 321-16      | 2    | Screw-HH           |
| 26   | 120-2027-03 | 1    | Bracket-Shield     |
| 27   | 115-9793    | 1    | Breather           |
| 28   | 237-80      | 1    | O-Ring             |

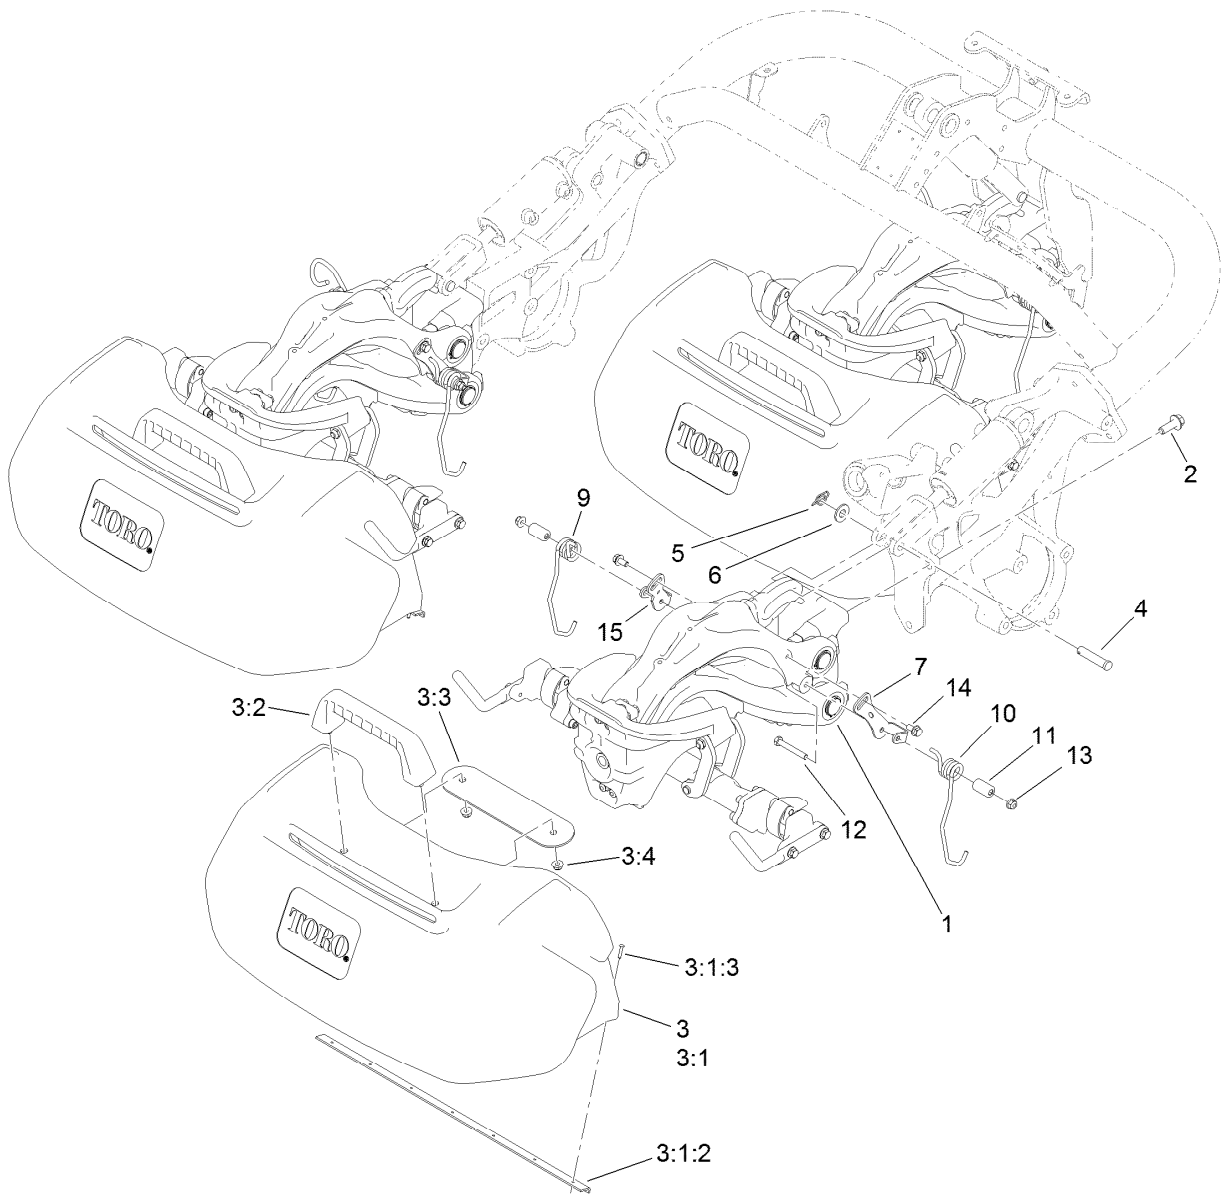


## Suspension and Basket Assembly

| Ref.  | Part Number | Qty. | Description      |
|-------|-------------|------|------------------|
| 1     |             | 3    | Suspension ASM ● |
| 2     | 117-9035    | 9    | Screw-HHF        |
| 3     | 117-8096    | 3    | Basket ASM       |
| 3:1   | 120-2775    | 1    | Grass Basket ASM |
| 3:1:2 | 120-2776    | 1    | Support-Basket   |
| 3:1:3 | 3290-382    | 9    | Rivet-Pop        |
| 3:2   | 117-8088    | 1    | Handle-Grab      |
| 3:3   | 117-8092-03 | 1    | Plate-Mounting   |
| 3:4   | 104-8300    | 2    | Nut-HF, NI       |
| 4     | 92-2739     | 3    | Pin-Clevis       |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 5    | 112-1491    | 3    | Pin-Cotter            |
| 6    | 29-8910     | 3    | Washer                |
| 7    | 117-6822    | 3    | Retainer-Spring, LH   |
| 9    | 117-6826    | 3    | Spring-Stabilizer, RH |
| 10   | 117-6827    | 3    | Spring-Stabilizer, LH |
| 11   | 117-6825    | 6    | Spacer                |
| 12   | 322-12      | 6    | Screw-HH              |
| 13   | 104-8300    | 6    | Nut-HF, NI            |
| 14   | 114-7728    | 6    | Screw-HF              |
| 15   | 117-6821    | 3    | Retainer-Spring, RH   |

● Not serviced separately

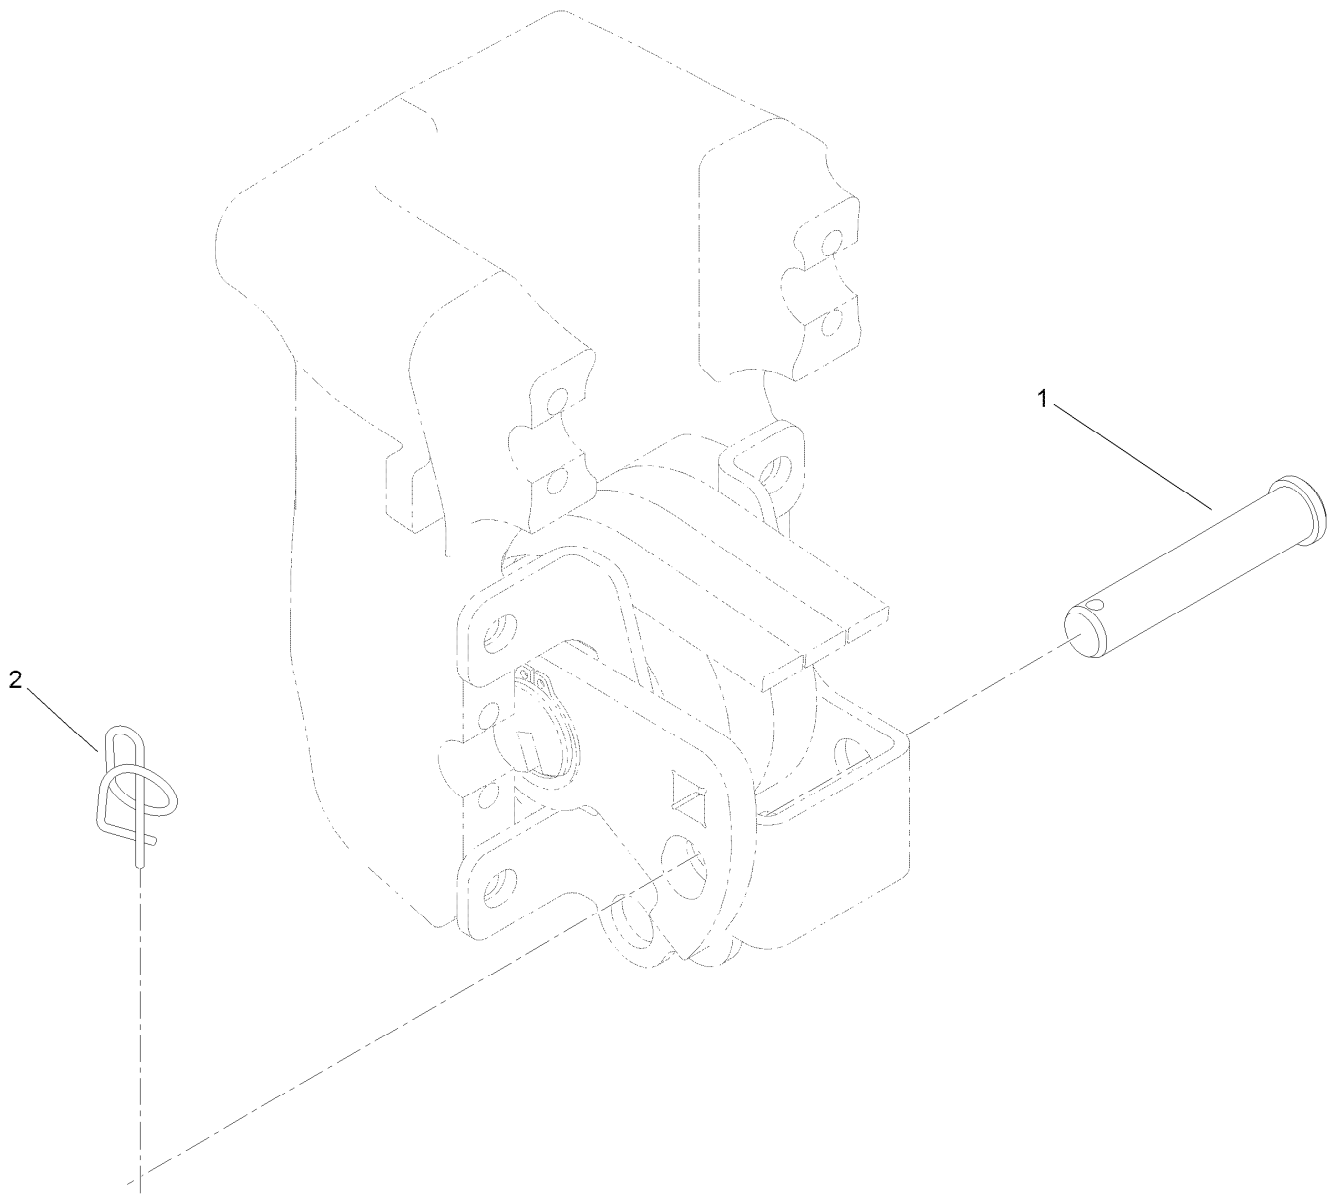

## Suspension Pin Position Assembly

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-6541           | 3           | Pin-Clevis         |
| 2           | 112-1491           | 3           | Pin-Cotter         |

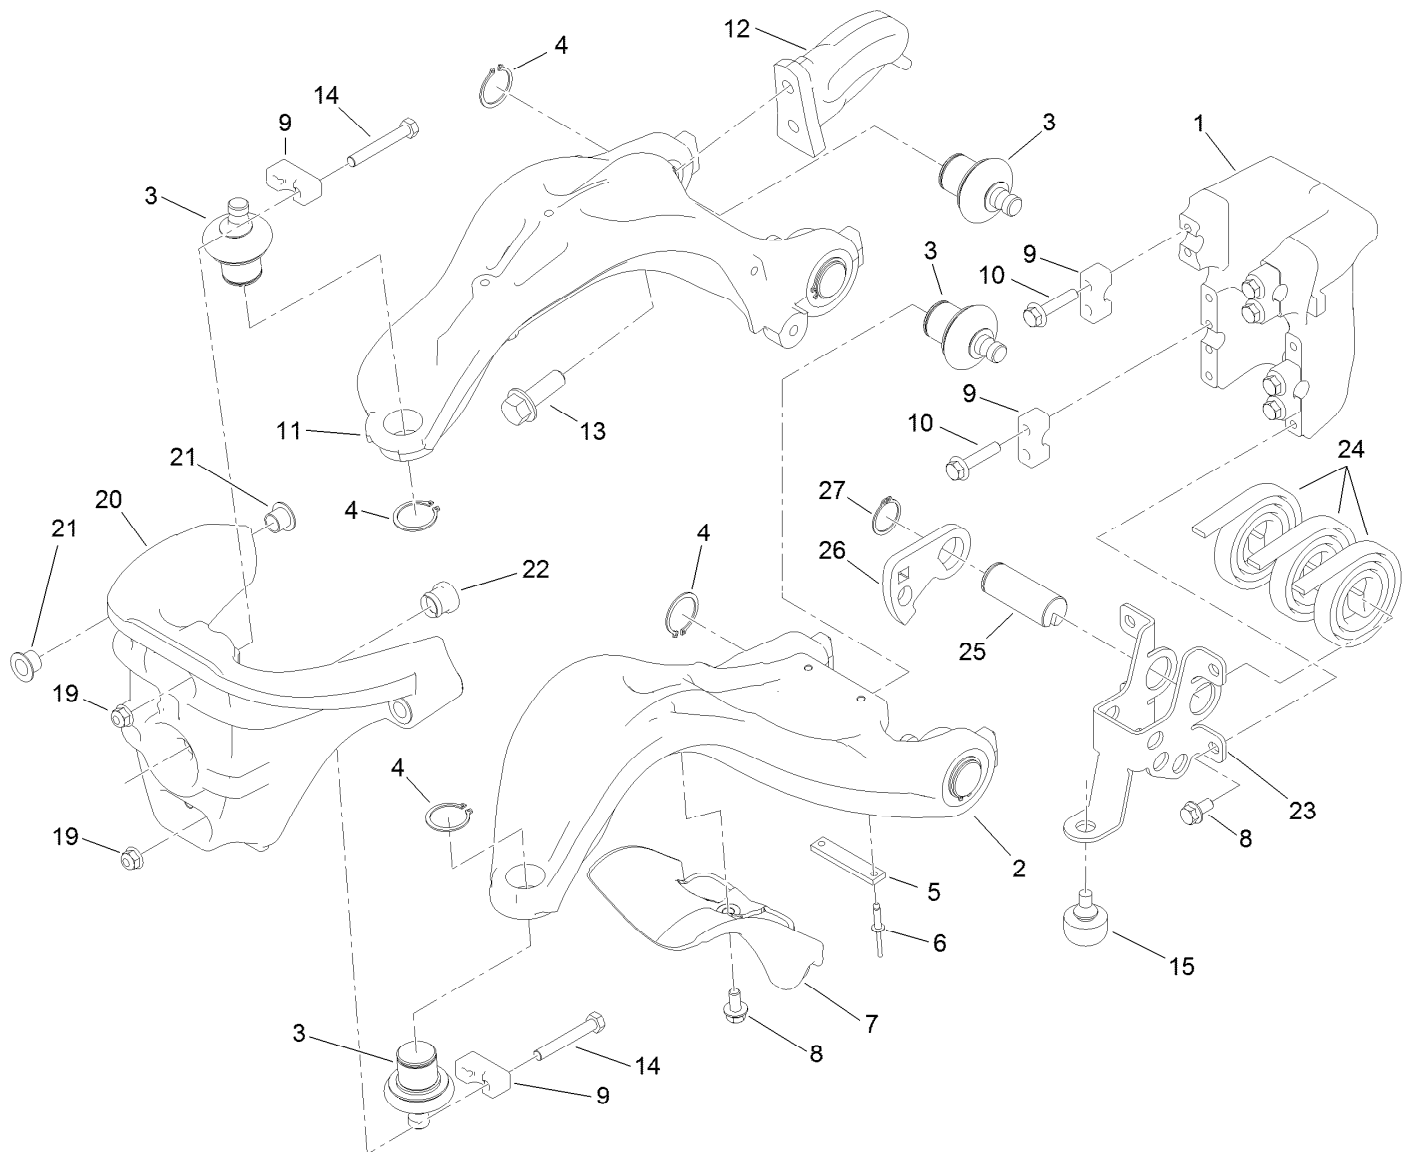

## Suspension A-Arm Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 117-9480    | 1    | Mount-Pivot, A-Arms |
| 2    | 117-6656    | 1    | A-Arm, Lower        |
| 3    | 117-6658    | 6    | Balljoint           |
| 4    | 120-3225    | 6    | Ring-Retaining, EXT |
| 5    | 117-6674    | 1    | Plate-Striker       |
| 6    | 3269-28     | 2    | Rivet-Pop           |
| 7    | 117-6755    | 1    | Stop-Steering       |
| 8    | 114-7728    | 5    | Screw-HF            |
| 9    | 112-5647    | 6    | Clamp               |
| 10   | 132-3837    | 8    | Screw-HHF           |
| 11   | 117-6648    | 1    | A-Arm, Upper        |
| 12   | 117-6650    | 1    | Plate-Lift          |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 13   | 100-6116    | 2    | Screw-HHF             |
| 14   | 132-3838    | 4    | Screw-HH              |
| 15   | 87-2440     | 1    | Bumper-Rubber         |
| 19   | 104-8300    | 4    | Nut-HF, NI            |
| 20   | 120-3216    | 1    | Steering Head ASM     |
| 21   | 93-2561     | 4    | Bushing-Flange        |
| 22   | 117-6819    | 1    | Grommet               |
| 23   | 121-9568    | 1    | Mount-Counter Balance |
| 24   | 114-9306    | 3    | Spring                |
| 25   | 117-6608    | 1    | Pin                   |
| 26   | 117-6738    | 1    | Arm-Tensioner         |
| 27   | 32151-29    | 1    | Ring-Retaining        |

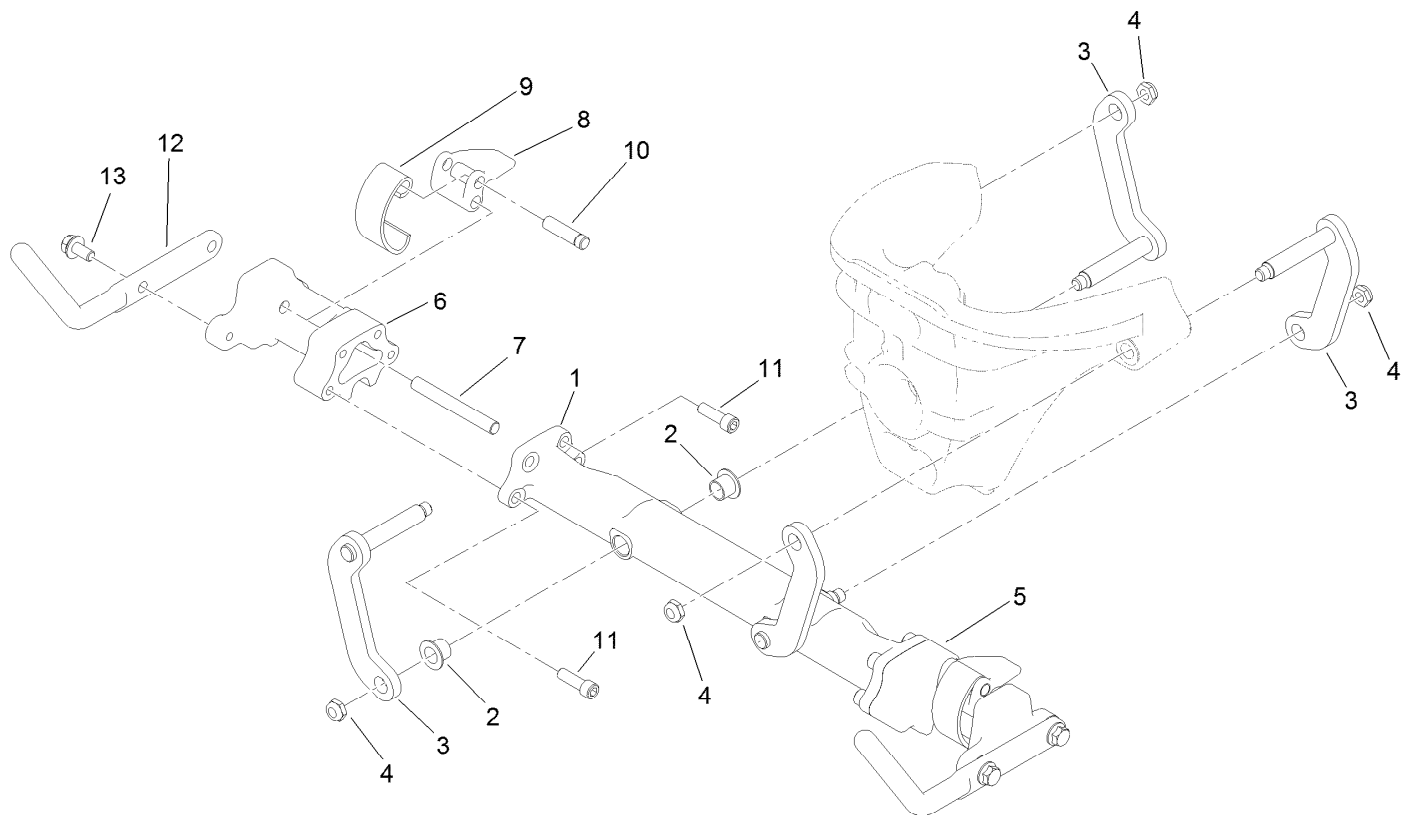

## Suspension Crossarm Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 120-3217    | 1    | Crossarm            |
| 2    | 93-2561     | 4    | Bushing-Flange      |
| 3    | 117-6654    | 4    | Link                |
| 4    | 3296-59     | 4    | Nut-Lock, NI        |
| 5    | 117-9482    | 1    | Mount-Cross Arm, LH |
| 6    | 117-9492    | 1    | Mount-Cross Arm, RH |
| 7    | 114-8051    | 2    | Pin-Pivot           |
| 8    | 114-8047    | 2    | Lever               |
| 9    | 114-8048    | 2    | Spring              |
| 10   | 114-8049    | 2    | Pin-Pivot           |
| 11   | 120-3227    | 8    | Screw-HSH           |
| 12   | 125-5152-03 | 2    | Horn-Basket         |
| 13   | 114-7728    | 4    | Screw-HF            |

# Attachments and Accessories

## For 04510 Greensmaster 3300 TriFlex Traction Unit

| Product Name                                                           | Model/Part |
|------------------------------------------------------------------------|------------|
| Turf Evaluator .....                                                   | 04399      |
| 8-Blade DPA Reel Mower .....                                           | 04613      |
| 11-Blade DPA Reel Mower .....                                          | 04614      |
| 14-Blade DPA Reel Mower .....                                          | 04615      |
| Three-Wheel Drive Kit .....                                            | 04714      |
| Light Kit.....                                                         | 04717      |
| Standard Seat Kit.....                                                 | 04718      |
| Premium Seat Kit.....                                                  | 04719      |
| Spark Arrestor Screen .....                                            | 104-6540   |
| Premium All Season Hydraulic Fluid (55 Gallon Drum) .....              | 108-1177   |
| Premium All Season Hydraulic Fluid (5 Gallon Pail).....                | 108-1178   |
| Bimini Folding Shade Assembly .....                                    | 115-4510   |
| Oil Cooler Kit.....                                                    | 119-1691   |
| Bag Kit.....                                                           | 119-1715   |
| Premium Synthetic Bio-Degradable Hydraulic Fluid (5 Gallon Pail) ..... | 119-2157   |
| Premium Synthetic Bio-Degradable Hydraulic Fluid (55 Gallon Drum)..... | 119-2158   |
| Premium Armrest Kit.....                                               | 119-7105   |
| Weight Kit .....                                                       | 119-7129   |
| Three-Wheel Drive Weight Kit .....                                     | 120-5750   |
| Premium Engine Oil 10w30 (55 Gallon Drum) .....                        | 121-6392   |
| Premium Engine Oil 10w30 (5 Gallon Pail) .....                         | 121-6393   |
| 400-hour Filter Maintenance Kit.....                                   | 30042      |
| LH Armrest Asm .....                                                   | 92-7307    |
| Tire-TURFMATE .....                                                    | 99-4506    |

**Notes:**

**Notes:**



**Count on it.**