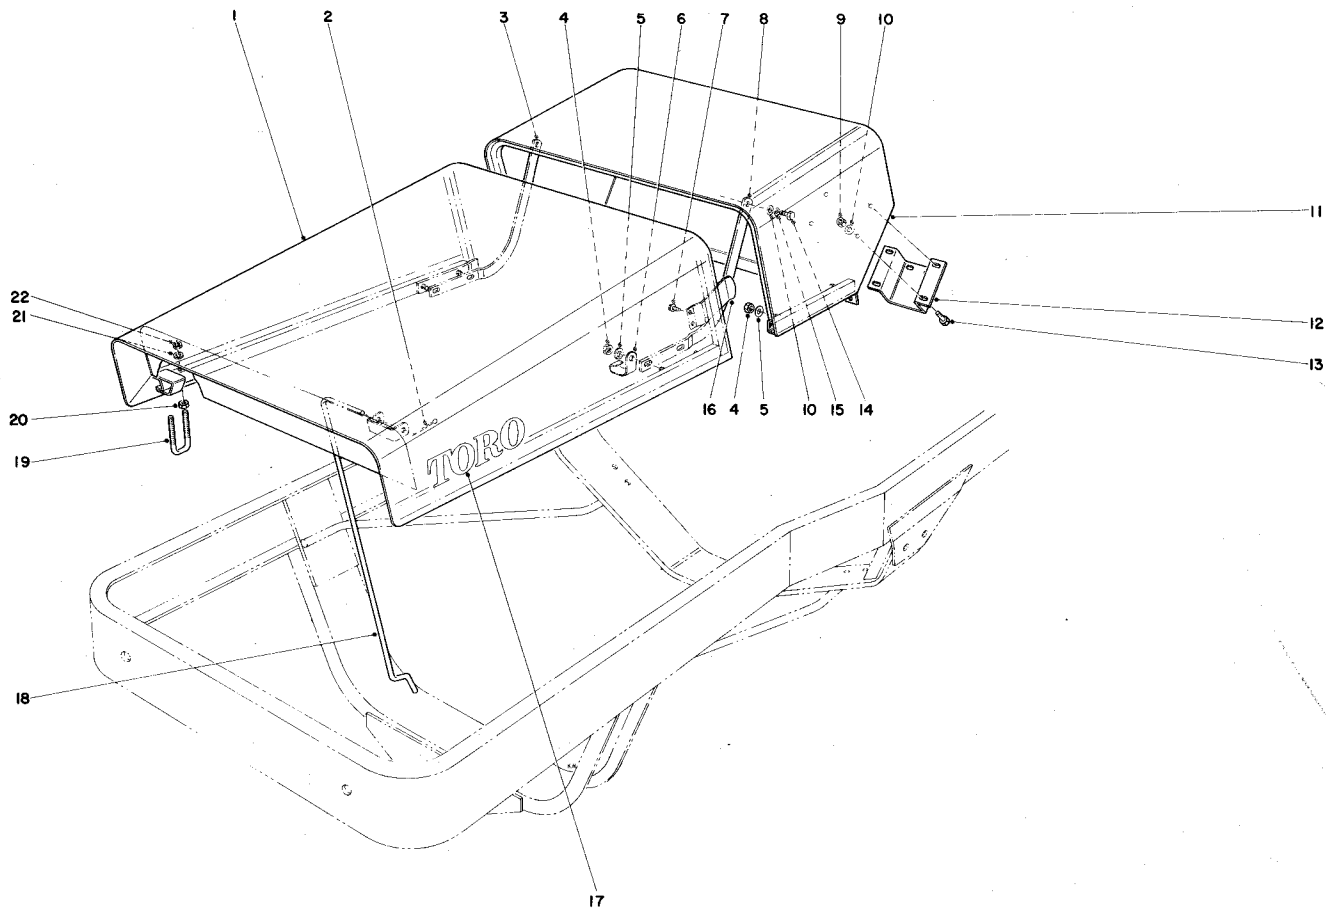


TORO®

MODEL NO. 37027-80001 & UP GENERAL TRACTOR
 MODEL NO. 33755-80001 & UP PARKMASTER 5
 MODEL NO. 33787-80001 & UP PARKMASTER 7
 MODEL NO. 33876-80001 & UP PARKMASTER 9

**PARTS
CATALOG**
DEC 14 REC'D **GENERAL TRACTOR**
WITH PARKMASTER 5, 7 and 9
**HOOD ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	18-0630	Hood	1
2	3272-9	Cotter Pin	1
3	18-0760	Pivot Arm R.H.	1
4	32146-2	Lock Nut	8
5	3256-24	Flatwasher	8
6	18-1270	Hood Clip	1
7	32140-32	Screw	4
8	18-0750	Pivot Arm L.H.	1
9	32146-5	Lock Nut	4
10	3256-23	Flatwasher	6
11	18-0560	Cowl	1


Ref. No.	Part No.	Description	No. Used
12	18-0770	Steering Column Support	1
13	322-2	Capscrew	4
14	322-1	Capscrew	2
15	3253-4	Lockwasher	2
16	18-3230	Hood Support Spring	2
17	18-2180	Decal, Hood	2
18	18-1280	Hood Prop	1
19	18-1290	U-Bolt	2
20	3218-1	Jam Nut	4
21	3253-3	Lockwasher	4
22	3217-5	Nut	4

COPYRIGHT 1977 BY

TheToroCompany

MINNEAPOLIS, MINN. 55420 — U.S.A.


Price \$3.00

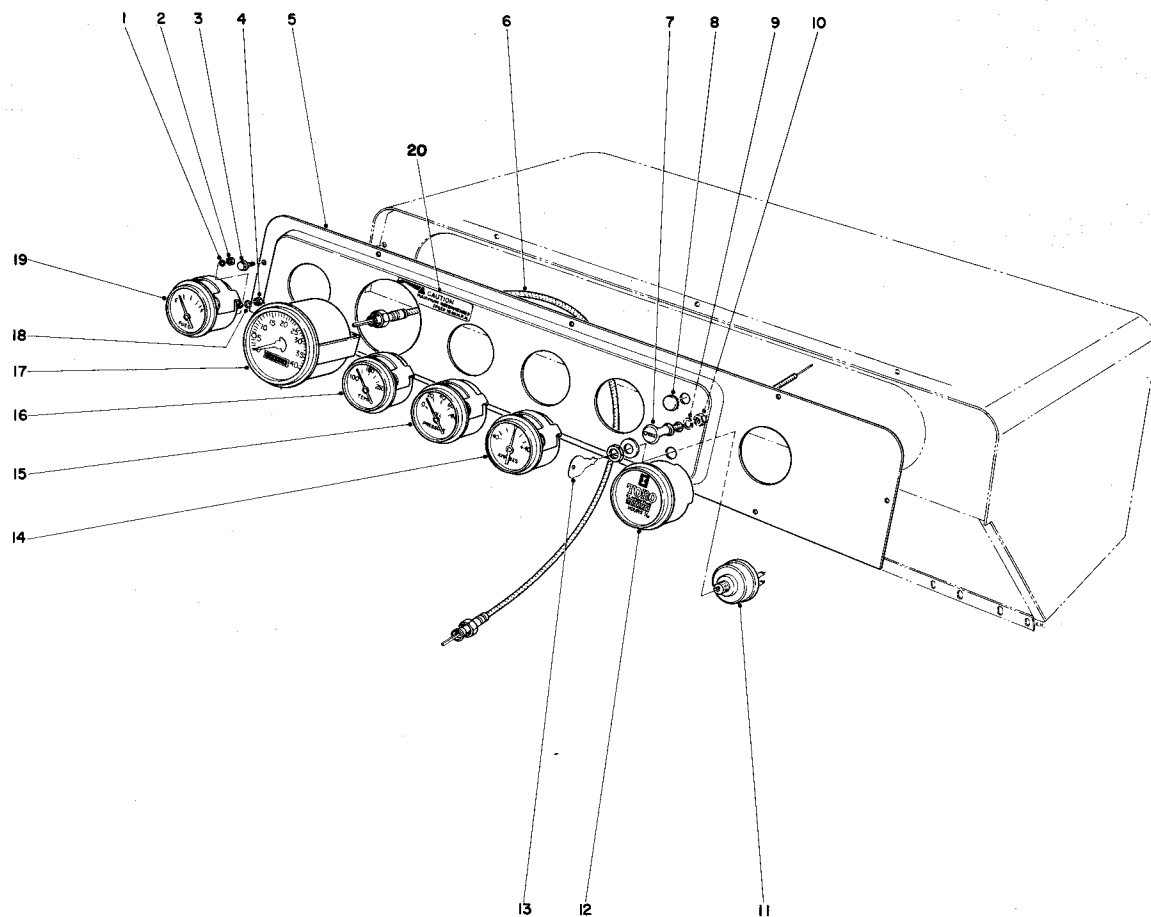

DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3253-17	Lockwasher	8
2	3219-14	Nut	8
3	32104-77	Self-Tapping Screw	8
4	3217-29	Nut	10
5	18-1390	Instrument Panel	1
6	18-2670	Speedometer Cable	1
7	3-3196	Choke (Incl. Ref. 9 & 10)	1
8	2410-13	Plug Button	1
9	3253-21	Lockwasher	1
10	3220-3	Jam Nut	1

Ref. No.	Part No.	Description	No. Used
11	12-8140	Ignition Switch	1
12	12-9990	Hourmeter	1
13	218-412	Key (2)	1
14	18-2190	Ammeter	1
15	18-2200	Oil Pressure Gauge	1
16	18-2220	Temperature Gauge	1
17	18-2230	Speedometer	1
18	3254-9	Lockwasher	10
19	18-2210	Fuel Gauge	1
20	28-1030	Decal Caution	1

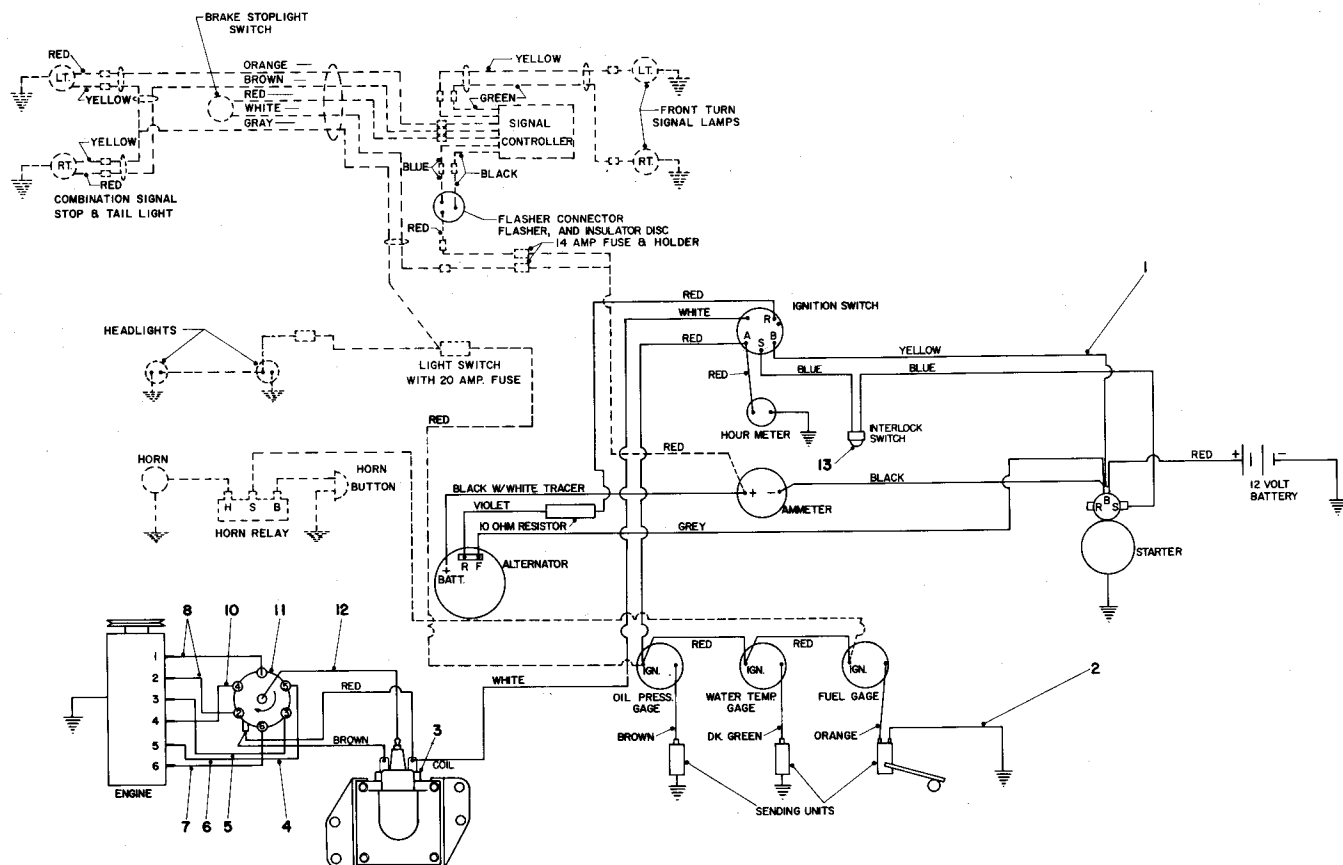


WIRING HARNESS — 12 Volt Negative Ground

Ref. No.	Part No.	Description	No. Used
1*	23-7990	Wiring Harness Complete	1
2*	3-3868	Ground Wire	1
3**	1115444	Coil	1
4**	891-6642	Wire Harness Ignition	1
5**	8914051	Spark Plug Wire No. 3	1
6**	8914069	Spark Plug Wire No. 5	1

Ref. No.	Part No.	Description	No. Used
7**	8914071	Spark Plug Wire No. 6	1
8**	12002058	Spark Plug Wire No. 1 & 2	2
10**	8914049	Spark Plug Wire No. 4	1
11**	1110717	Distributor	1
12**	8914040	Coil Wire	1
13*	23-8010	Interlock Switch	1

*Obtain from your Toro Distributor.

** Obtain from your local GM, Chevrolet Dealer.

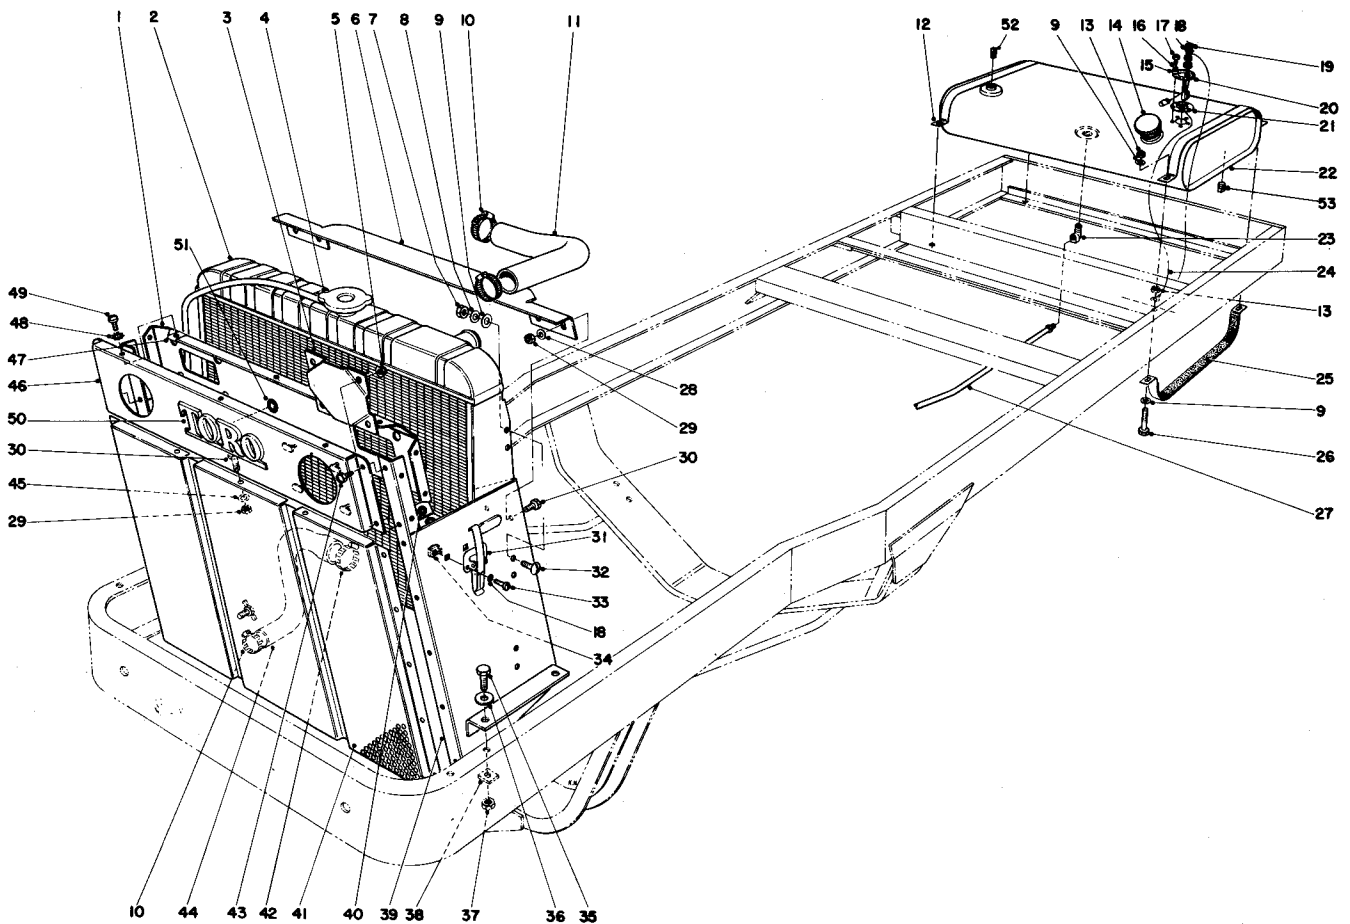


RADIATOR AND FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1020	Headlight Cover	1
2	18-2160	Radiator	1
3	18-4350	Headlight Hole Cover	2
4†	861042	Radiator Cap (15 P.S.I.)	1
5	32128-17	Flange Nut	8
6	18-1030	Fan Deflector	1
7	3217-6	Nut	8
8	3253-4	Lockwasher	8
9	3256-23	Flatwasher	16
10	2412-3	Hose Clamp	3
11	18-1820	Upper Radiator Hose	1
12	36-8280	Fuel Tank Strap	4
13	32146-5	Locknut	8
14	222-8	Gas Cap	1
15	237-49	Nylon Washer	5
16	3254-1	Lockwasher	5
17	3252-16	Machine Screw	5
18	3255-17	Lockwasher	5
19	3219-14	Nut	2
20	18-2370	Fuel Sender	1
21	18-2380	Gasket	1
22	36-8290	Fuel Tank (Incl. Ref. #14)	1
23	353-420	Fitting	1
24	3-3868	Ground Wire	1
25	3-3824	Felt Strip	4
26	3290-319	Machine Screw	4
27	19-3240	Fuel Line	1

Ref. No.	Part No.	Description	No. Used
28	3256-22	Flatwasher	4
29	32146-17	Lock Nut	7
30	321-2	Capscrew	7
31	249-10	Hood Clamp	2
32	32122-14	Machine Screw	8
33	3252-2	Screw	4
34	3217-26	Nut	4
35	325-6	Capscrew	4
36	3256-26	Flatwasher	4
37	32146-13	Lock Nut	4
38	3290-216	Bevel Washer	4
39	18-0880	Front Side Panel L. H.	1
*	18-0870	Front Side Panel R. H.	1
40	237-37	Rubber Bumper	4
41	18-0960	Grille	1
42	2412-42	Hose Clamp	1
43	32140-42	Self-Tapping Screw	14
44	18-1830	Lower Radiator Hose	1
45	3256-22	Flatwasher	3
46	25-9960	Headlight Panel	1
47	3290-192	Tinnerman Clip	7
48	3255-7	Washer	7
49	3290-145	Screw	7
50	25-9650	Toro Emblem	1
51	3290-363	Tinnerman Clip	5
52	281-7	Pipe Plug Sq. Hd.	1
53	281-5	Pipe Plug Sq. Hd.	1

*Not Illustrated


4 †Obtain from your local GM, Chevrolet Dealer.

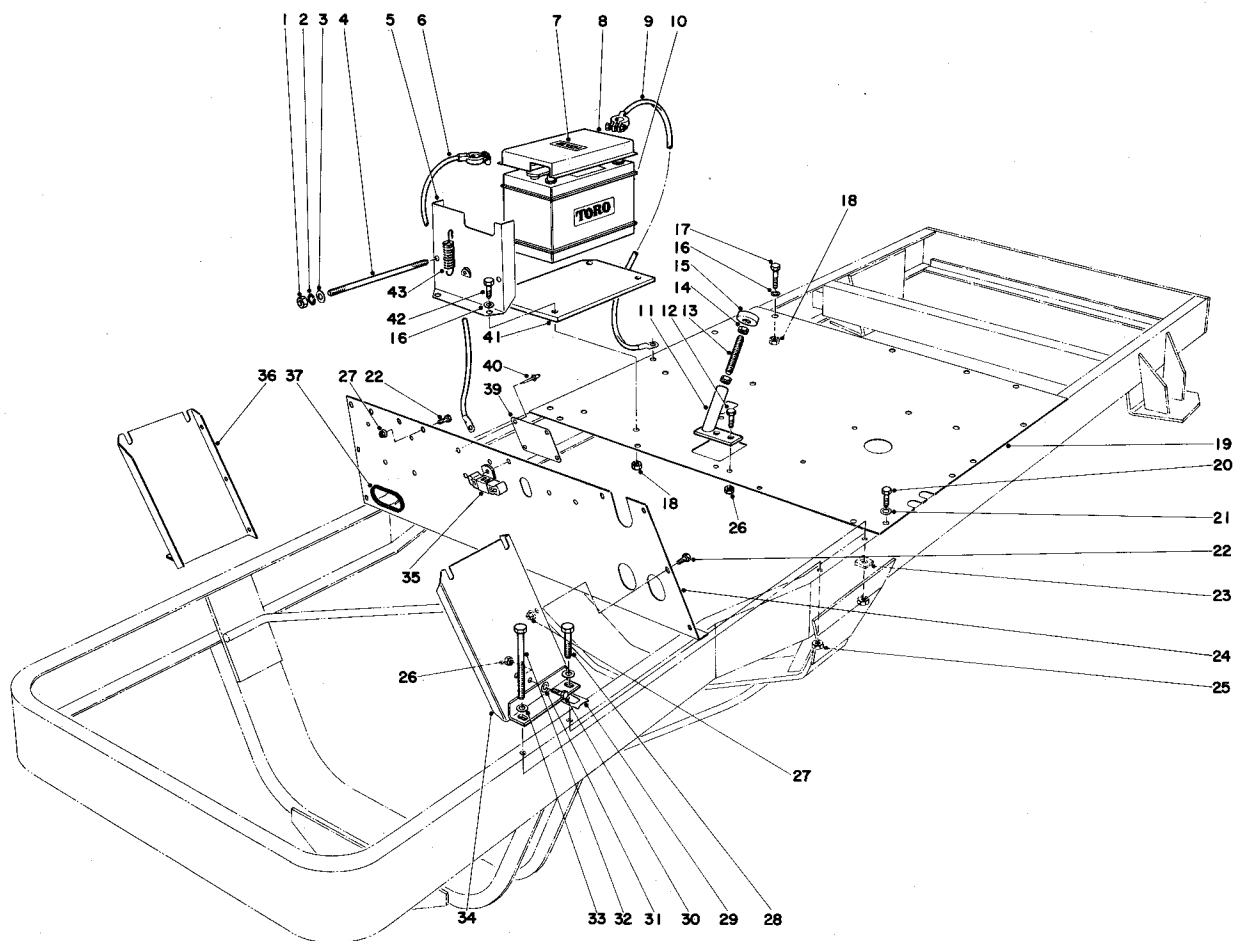

TOE BOARD AND BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3217-5	Nut	4
2	3253-3	Lockwasher	4
3	3256-2	Flatwasher	4
4	5-0678	Battery Rod	2
5	3-5967	Battery Support	2
6	18-2760	Cable (Hot)	1
7	3-5582	Decal	1
8	3-3175	Battery Cover	1
9	218-208	Ground Cable	1
10	13-6480	Battery	1
11	10-3150	Footrest	1
12	322-3	Capscrew	2
13	5-2973	Rod	1
14	3219-2	Jam Nut	2
15	5-2967	Button	1
16	3256-24	Flatwasher	8
17	323-5	Capscrew	4
18	32146-2	Locknut	8
19	18-0840	Floor Plate	1
20	32104-6	Self-Tapping Screw	6
21	3256-26	Flatwasher	4

Ref. No.	Part No.	Description	No. Used
22	3290-321	Capscrew	9
23	3290-216	Bevel Washer	3
24	18-0850	Toe Board	1
25	32146-13	Locknut	4
26	32146-5	Locknut	4
27	32128-17	Flanged Lock Nut	9
28	325-9	Capscrew	3
29	20-5040	Shim	A/R
30	322-2	Capscrew	2
31	3256-23	Flatwasher	2
32	325-23	Capscrew	1
33	3256-26	Flatwasher	4
34	18-0790	Rear Side Plate L.H.	1
35	18-2680	Resistor (10 Ohm)	1
36	18-0800	Rear Side Plate R.H.	1
37	18-2310	Grommet	1
39	18-3200	Instruction Plate	1
40	3290-56	Pop Rivet	6
41	5-3455	Battery Base	1
42	323-8	Capscrew	4
43	3-8135	Spring	2

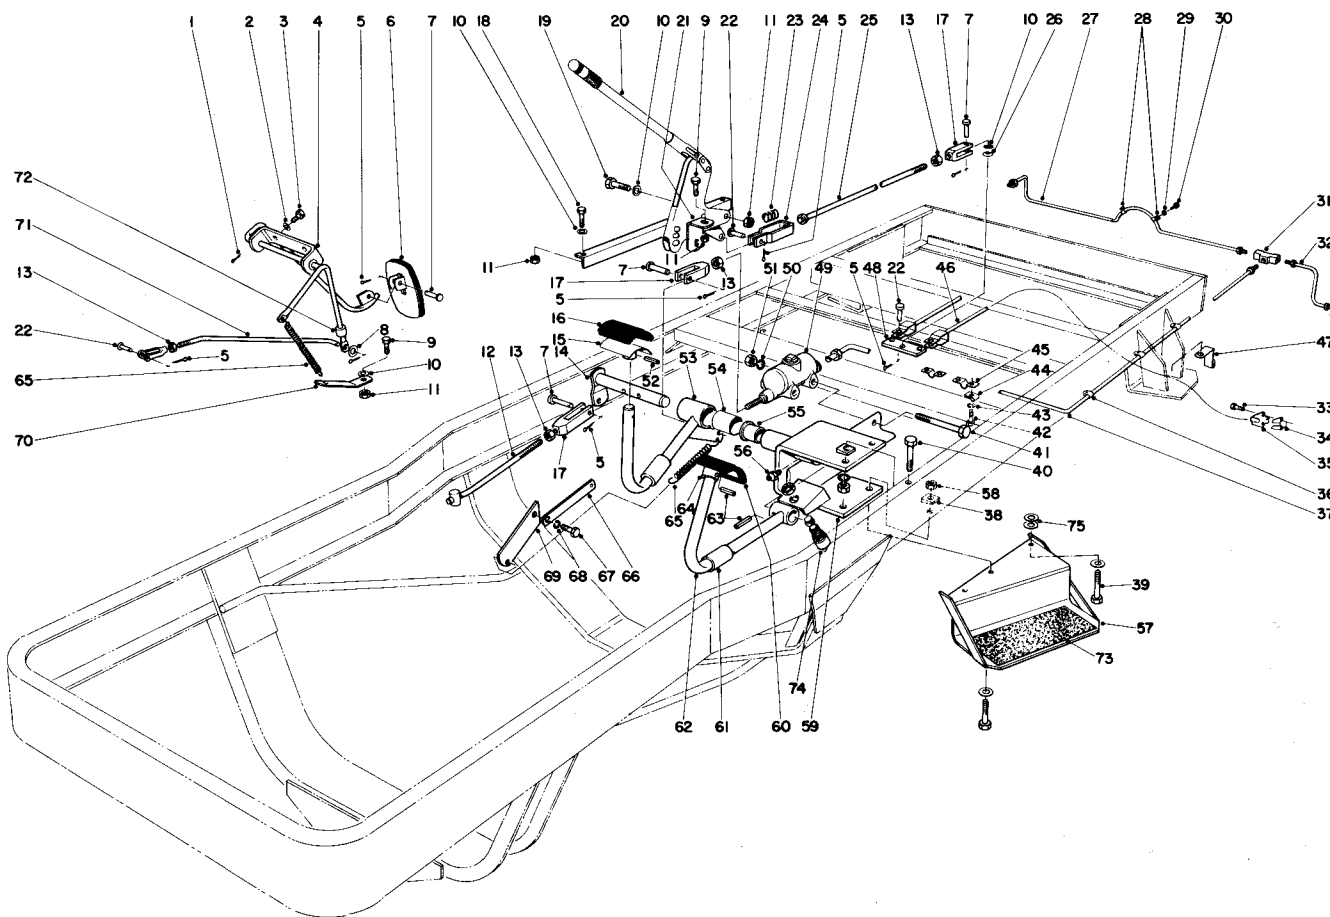


BRAKE, CLUTCH, THROTTLE CONTROLS

Ref. No.	Part No.	Description	No. Used
1	3272-5	Cotter Pin	2
2	3253-4	Lockwasher	2
3	32104-32	Self-Tapping Screw	2
4	18-2510	Foot Throttle	1
5	3272-6	Cotter Pin	5
6	10-2670	Accelerator Pedal	1
7	283-2	Clevis Pin	3
8	3256-22	Washer	1
9	323-5	Capscrew	2
10	3256-24	Flatwasher	8
11	32146-2	Lock Nut	8
12	18-1320	Clutch Link	1
13	3220-3	Jam Nut	3
14	18-1160	Pedal Shaft	1
15	10-0670	Pedal	1
16	7-3900	Brake Pad	1
17	282-1	Clevis	2
18	325-5	Capscrew	2
19	323-7	Capscrew	6
20	19-3120	Parking Brake	1
21	18-3260	Parking Brake Bracket	1
22	283-1	Yoke Pin	2
23	3-1768	Compression Spring	1
24	3-5300	Front Clevis	1
25	3-1772	Brake Rod	1
26	3290-211	Spring Washer	1

Ref. No.	Part No.	Description	No. Used
27	3-3690	Brake Tube Ass'y. (Long)	1
*28	3-3075	Clip	3
†	3-3075	Clip	2
*29	3254-6	Lockwasher	3
†	3254-6	Lockwasher	2
*30	323-2	Capscrew	1
31	304-2	Tee	2
32	3-3680	Brake Tube Ass'y. (Short)	1
33	32104-32	Self-Tapping Screw	4
34	19-5900	Felt Seal	2
35	19-5880	Conduit Cap	2
36	212-93	Clip-Wire	3
37	18-1180	Brake Tubing Assembly	1
38	3290-216	Bevel Washer	4
39	325-7	Capscrew	5
40	325-6	Capscrew	3
41	3212-14	Capscrew	2
42	32104-6	Self-Tapping Screw	4
43	3253-21	Lockwasher	4
44	18-2970	Fuel Line Clip	3
45	215-23	Clamp	2
*46	18-2630	Cable Assembly	2
†	19-6020	Cable Assembly	2
†47	19-6110	Support Brake Line	2
48	3-3137	Plate-Equalizer	1
49	215-17	Master Cylinder	1

†Used on units with serial no. 30400 and up.


*Used on units with serial no. 30001 thru 30399.

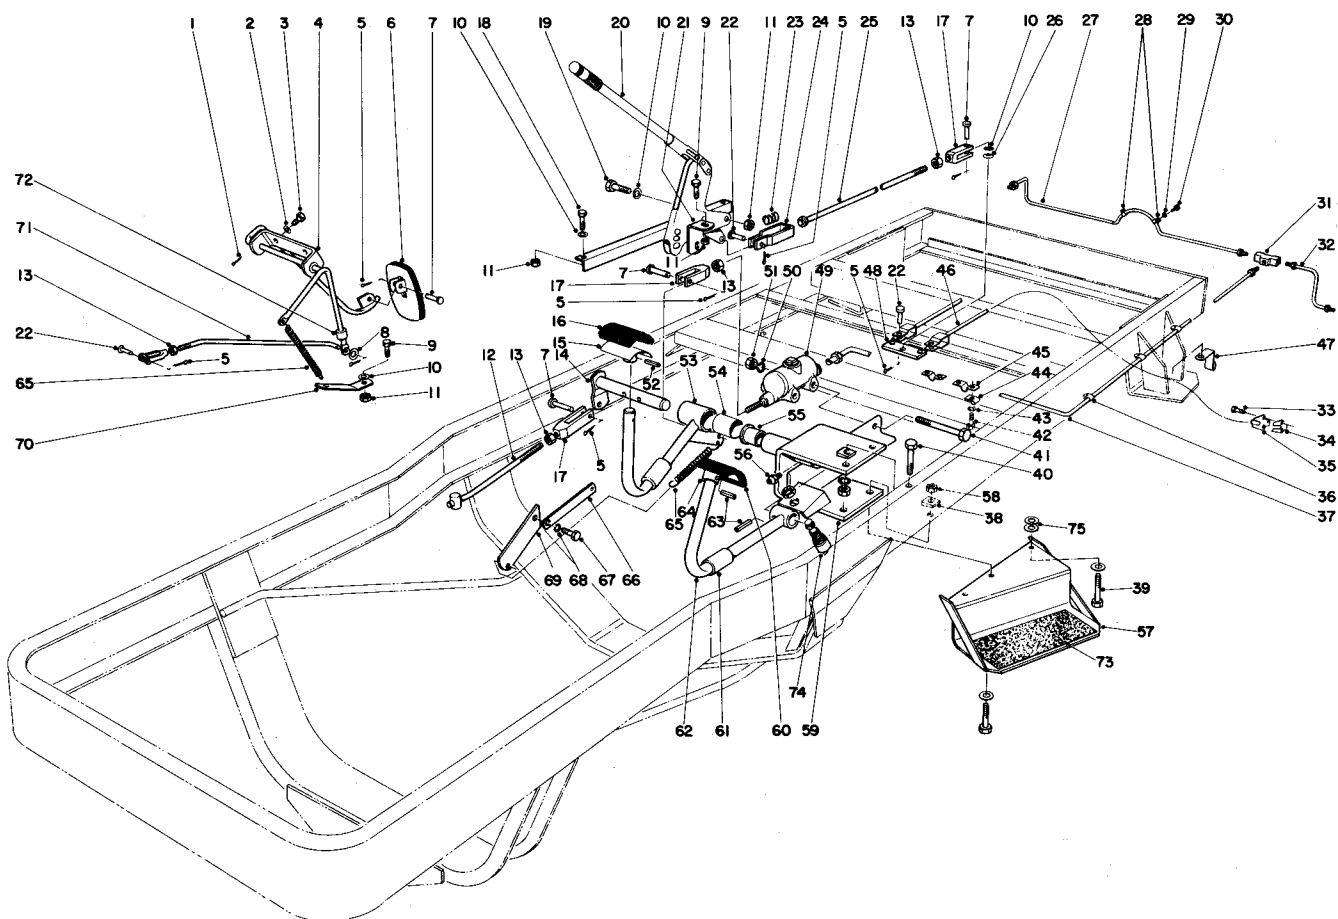

BRAKE, CLUTCH, THROTTLE CONTROLS (Continued)

Ref. No.	Part No.	Description	No. Used
50	3253-6	Lockwasher	2
51	3218-4	Nut	2
52	32121-34	Retaining Pin	2
53	3-8760	Brake Pedal and Bushing Assembly (Incl. Ref. No. 54)	1
54	256-143	Bushing	1
55	256-10	Bushing	2
56	302-5	Grease Fitting	1
57	33-2190	Step	1
58	32146-13	Lock Nut	5
59	3-3740	Pedal Shaft Bracket Assembly (Incl. Ref. No. 55)	1
60	7-3901	Clutch Pad	1
61	3-3107	Rubber Bumper	2

Ref. No.	Part No.	Description	No. Used
62	3-3750	Clutch Pedal	1
63	32121-34	Roll Pin	2
64	10-0680	Pedal Pad	1
65	5-1706	Throttle Return Spring	2
66	18-1050	Return Spring Bracket	1
67	325-3	Capscrew	1
68	3253-7	Lockwasher	1
69	18-1060	Clutch Return Spring Bracket	1
70	18-2740	Throttle Spring Bracket	1
71	18-2610	Foot Throttle Link	1
72	18-2860	Foot Throttle Bumper	1
73	33-2230	Pad Step	1
74	23-8010	Interlock Switch	1
75	3256-26	Washer	5

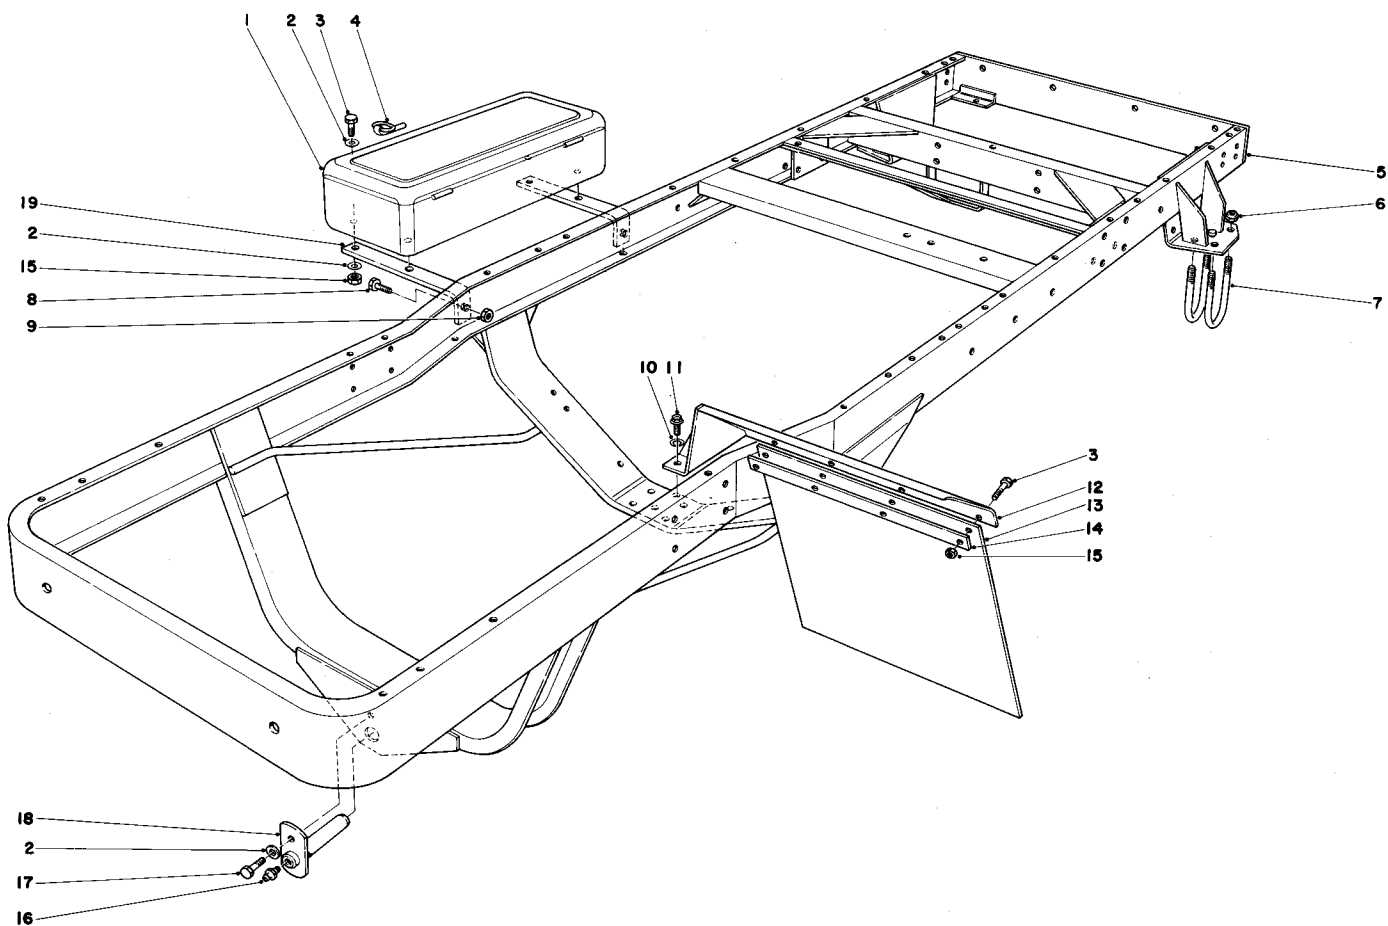


FRAME AND FRONT FENDER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	5-2250	Tool Box	1
2	3256-24	Flat Washer	9
3	323-6	Capscrew	12
4	3290-243	Lynch Pin	1
5	18-0340	Frame	1
6	3296-24	Locknut	8
7	18-1300	U-Bolt	4
8	325-6	Capscrew	2
9	32146-13	Nut	2
10	3253-7	Washer	2

Ref. No.	Part No.	Description	No. Used
11	32144-13	Self Tapping Screw	2
12	10-2780	Fender L.H.	1
*	10-2770	Fender R.H.	1
13	10-2810	Rubber Flap	2
14	10-2820	Flap Support	2
15	32146-2	Nut	12
16	302-2	Grease Fitting	1
17	32104-6	Screw	1
18	3-3760	Pivot Pin	1
19	26-8450	Box Support	1


*Not Illustrated

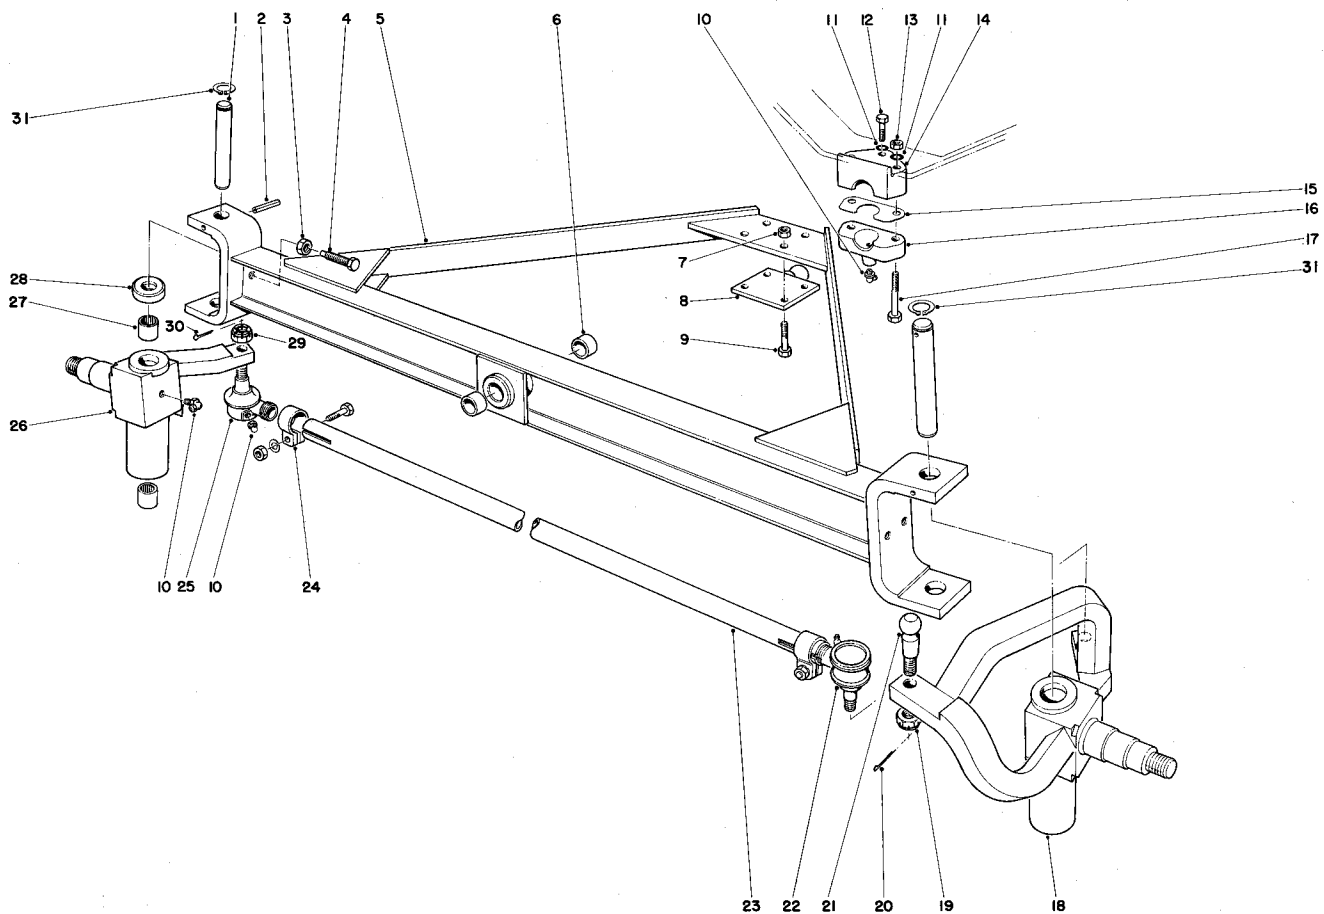

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-6900	Spindle Pin	2
2	32121-34	Roll Pin	4
3	3218-5	Jam Nut	3
4	32102-14	Set Screw	3
5	26-2320	Front Axle	1
6	256-126	Bushing	2
7	32146-13	Locknut	4
8	12-0360	Pivot Block	1
9	325-7	Capscrew	4
10	302-33	Grease Fitting	3
11	3253-8	Lockwasher	3
12	327-4	Capscrew	4
13	3219-6	Nut	2
14	3-2968	Lower Ball Socket	1
15	3-3825	Shim	A/R
16	3-2967	Upper Ball Socket	1


Ref. No.	Part No.	Description	No. Used
17	3214-13	Capscrew	2
18	23-5300	Spindle L.H.	1
19	32136-3	Slotted Nut	1
20	3272-7	Cotter Pin	1
21	5-2966	Ball Stud	1
22	2116-3	Ball Joint L.H.	1
23	3-3710	Tie Rod Assembly (Incl. Ref. #22, 24, 10, 25)	1
24	2412-7	End Clamp	2
25	2116-4	Ball Joint R.H.	1
26	20-9900	Spindle R.H.	1
27	252-52	Needle Bearing	4
28	251-32	Thrust Bearing	2
29	32136-2	Slotted Nut	2
30	3272-17	Cotter Pin	1
31	32151-36	Retaining Ring	2

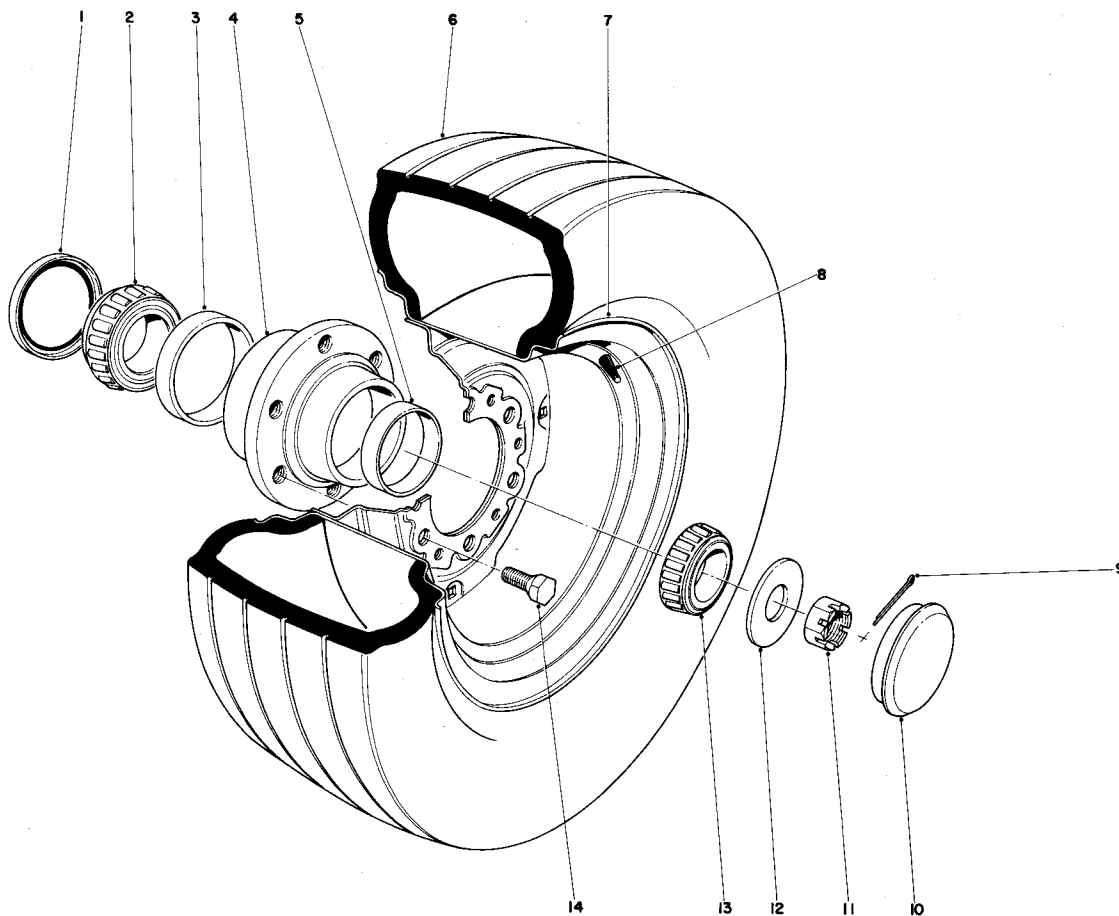

FRONT WHEELS AND RIM 9.5 L-14

Ref. No.	Part No.	Description	No. Used
1	253-100	Grease Seal	2
2	254-75	Inner Bearing Cone	2
3	254-76	Inner Bearing Cup	2
4	217-26	Wheel Hub (Incl. Ref. No. 1-3, 5, 10, 13)	2
5	254-20	Outer Bearing Cup	2
6	33-0750	Tire - Tubeless (9.5L-14)	2
7	10-0720	Wheel (14")	2

Ref. No.	Part No.	Description	No. Used
8	232-27	Valve Stem	2
9	3272-23	Cotter Pin	2
10	217-33	Hub Cap	2
11	32136-1	Slotted Hex Nut	2
12	3256-9	Washer	2
13	254-42	Outer Bearing Cone	2
14	217-34	Wheel Bolt	12

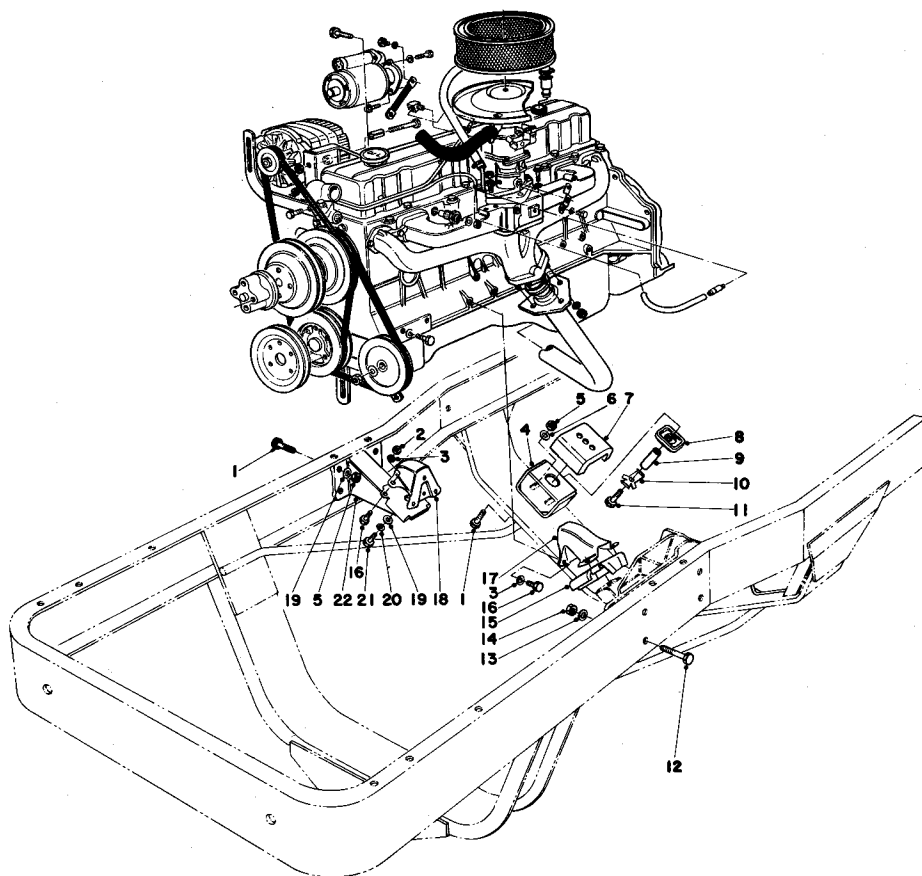


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	4
2	3217-7	Nut	4
3	3253-21	Lockwasher	8
4	18-1240	Engine Mount	2
5	32146-13	Locknut	3
6	3256-26	Flat Washer	1
**7	3705444	Upper Mount	2
**8	3789949	Lower Mount	2
**9	3769338	Spacer	2
**10	3763763	Lock	2
**11	3816560	Capscrew	2

Ref. No.	Part No.	Description	No. Used
12	327-10	Capscrew	4
13	3253-8	Lockwasher	2
14	3217-11	Nut	4
**15	3990332	Front Engine Mount	2
16	323-4	Capscrew	8
**17	3790291	Bracket L.H.	1
**18	3790292	Bracket R.H.	1
19	3256-25	Flat Washer	3
20	3253-6	Lockwasher	2
21	324-5	Capscrew	2
22	18-1040	Engine Mount R.H.	1

**Obtain from your local GM, Chevrolet Dealer.

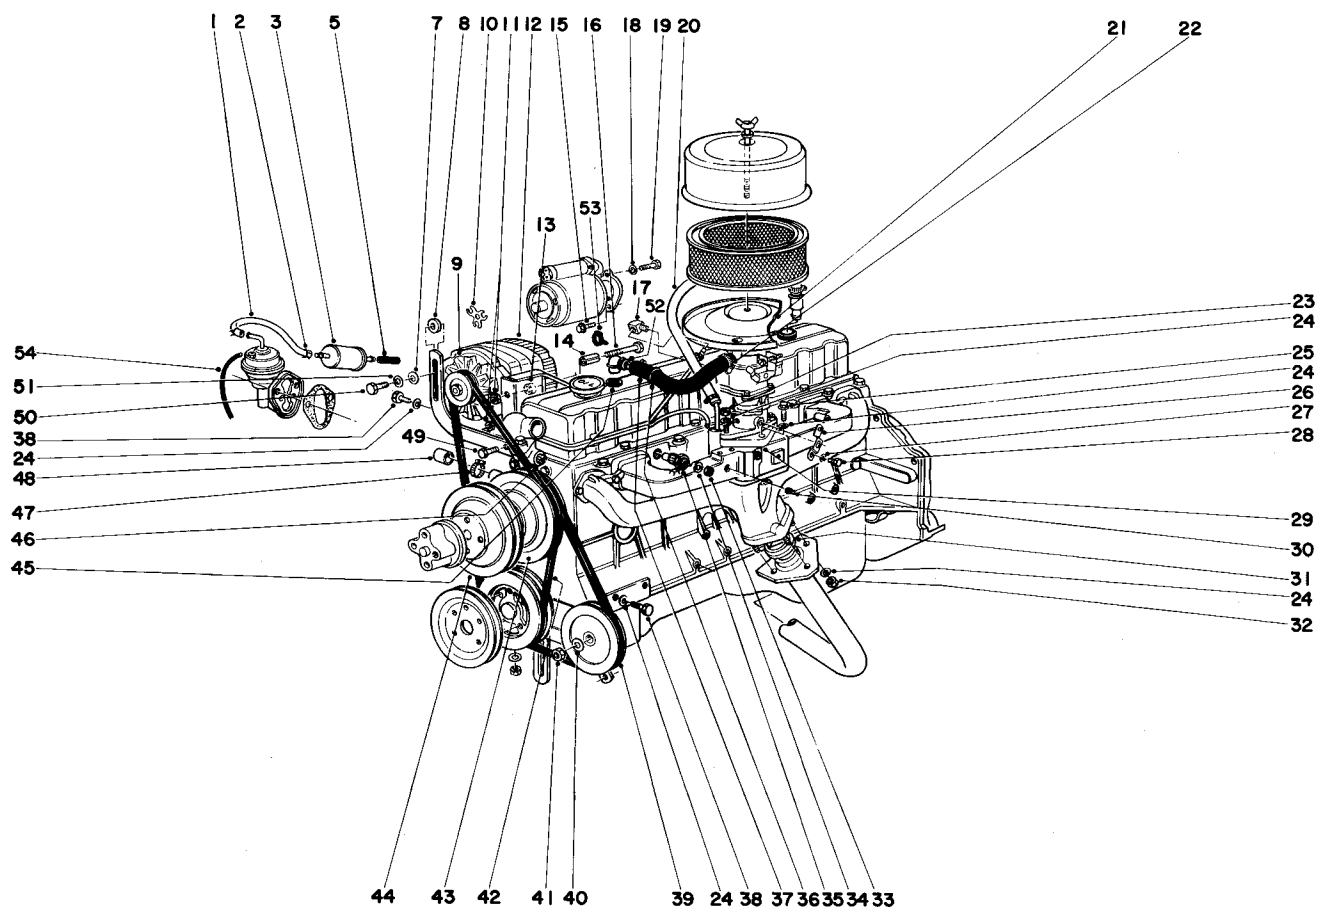


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1530	Hose Filter to Pump	1
2	2412-6	Hose Clamp	2
3	18-1520	Fuel Filter (AC5650718)	1
5	18-2400	Fuel Line	1
7	3256-23	Flat Washer	1
8	5-4460	Washer	1
**9	800612	Fan Alternator	1
**10	3702799	Wire Retainer	2
11	32146-2	Locknut	2
12	36-2420	Alternator (GM No. 1102920)	1
13	3-8774	Spacer	1
**14	3825451	Alternator Spacer	1
**15	120382	Capscrew Assembly	2
16	323-16	Capscrew	1
17	353-420	Inverted Flare Fitting	1
**18	138489	Lockwasher	1
**19	454467	Capscrew	1
20	18-0150	Hose Crankcase	1
21	226-15	Base	1
22	2412-34	Hose Clamp	2
23	3219-3	Nut	2
24	3253-21	Lockwasher	10
25	323-37	Ferrey Screw	2
26	18-8610	Carburetor Arm Connector	1
27	3253-17	Lockwasher	1
28	3290-237	Capscrew	1
29	18-1510	Carburetor Adapter	1

Ref. No.	Part No.	Description	No. Used
30	281-2	Pipe Plug Manifold Vac. Outlet	1
**31	6271611	Exhaust Pipe Packing	1
32	3217-7	Nut	3
33	3219-14	Nut	2
34	3255-7	Lockwasher	2
35	18-1750	Water Temp. Sending Unit	1
36	6262895	Arrestor	1
37	33-2340	Hose Valve Cover To A/C	1
38	323-4	Capscrew	3
39	18-2020	V-Belt	1
40	3255-2	Washer	1
41	3220-5	Jam Nut	1
42	18-2030	V-Belt	1
**43	3995646	Pulley Assembly	1
**44	329671	Pulley (3 Groove)	1
**45	3994239	Grommet	1
46	281-3	Plug Thermostat Housing	2
47	2412-34	Hose Clamp	1
**48	1191141	Inlet Cap	1
49	323-6	Capscrew	1
50	322-6	Capscrew	1
51	3253-4	Lockwasher	1
**52	366846	Connector 90° Elbow	1
53	218-492	Rose Bud Clip	3
54	33-0310	Hose Vacuum Advance	1

**Obtain from your local GM, Chevrolet Dealer.

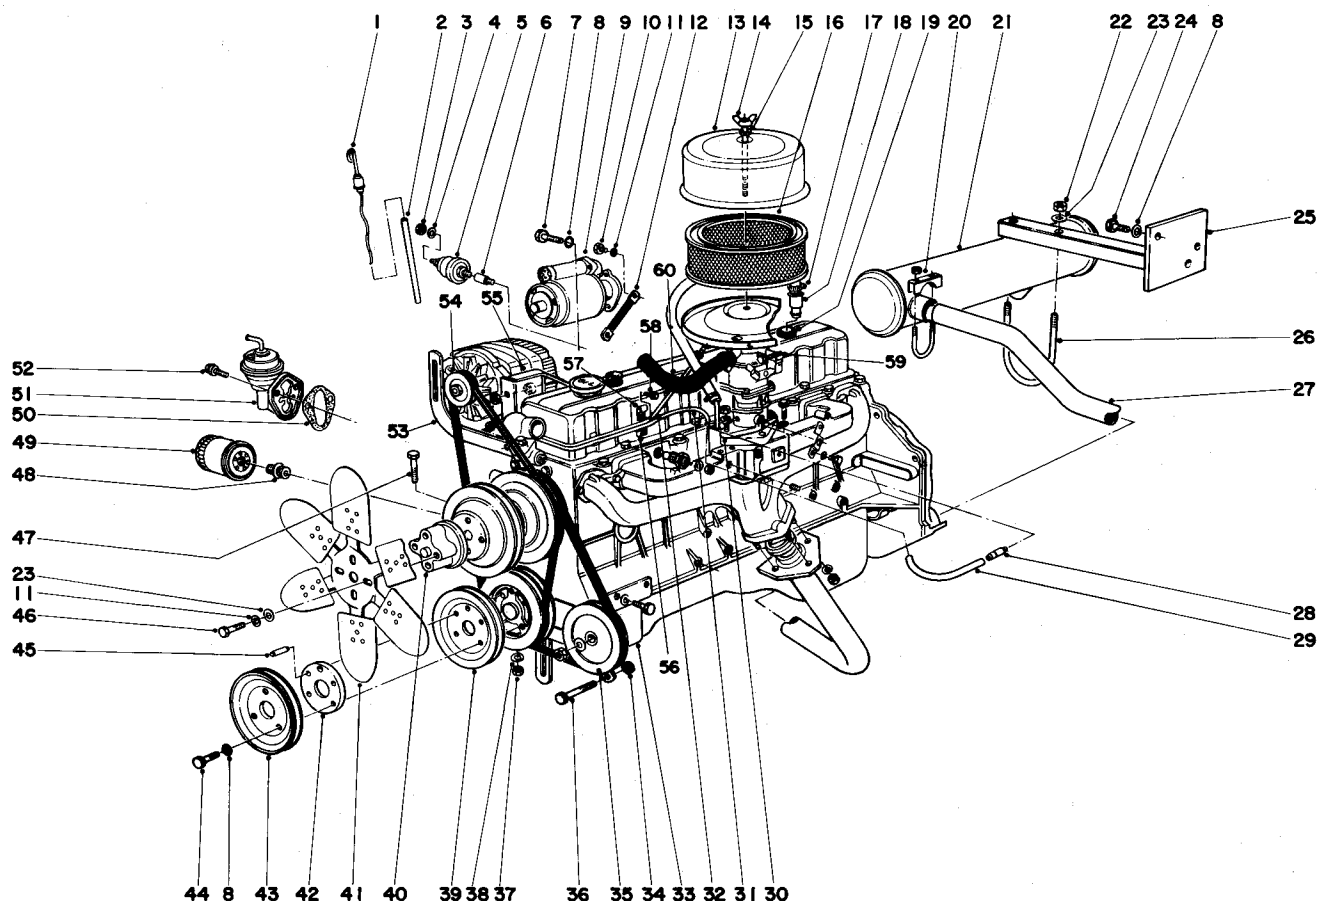

ENGINE ASSEMBLY

68649


36-2400

Ref. No.	Part No.	Description	No. Used
**1	3886082	Oil Level Gauge	1
**2	3828073	Oil Level Gauge Tube	1
3	3219-14	Nut	1
4	3255-17	Lockwasher	1
5	18-1760	Oil Pressure Sending Unit	1
6	18-2650	Adapter	1
7	323-9	Capscrew	1
8	3253-21	Lockwasher	6
**9	36-2650	Starter Motor (GM No. 1109099)	1
10	322-1	Capscrew	1
11	3253-4	Lockwasher	5
12	18-2770	Ground Cable	1
13	226-12	Cover	1
14	226-13	Wiring Bolt	1
15	226-10	Gasket	1
16	226-11	Cartridge	1
17	2412-36	Hose Clamp	2
18	18-1490	Valve Assembly PCV	1
**19	3989344	Grommet	1
20	20-4840	Muffler Clamp	1
21	19-8860	Muffler	1
22	32152-1	Locknut	2
23	3256-23	Flat Washer	6
24	323-5	Capscrew	2
25	26-8420	Muffler Support	1
26	19-7440	U-Bolt	1
27	28-7370	Exhaust Pipe	1
28	18-2840	Vacuum Tube	1
29	18-1570	Vacuum Hose	1
**30	3953732	Carburetor Gasket	2

Ref. No.	Part No.	Description	No. Used
31	18-1560	Vacuum Pipe	1
32	18-1580	Carburetor Gas Pipe	1
33	18-1920	Pump Mount	1
34	32146-2	Locknut	1
35	18-2000	Pulley, Power Steering Pump	1
36	323-16	Capscrew	1
37	32146-13	Locknut	1
38	3256-26	Flat Washer	1
39	18-8430	Pulley, Crankshaft	1
**40	3927792	Fan Blade Spacer	1
41	18-1470	Fan	1
42	18-8420	Pulley Adapter Plate	1
**43	3883263	Fan Pulley	1
44	3211-5	Capscrew	3
45	32121-11	Spring Pin	2
46	3210-10	Capscrew	4
47	325-9	Capscrew	1
**48	3853870	Oil Filter Connector	1
*49	PF-25	Oil Filter	1
50	18-1550	Gasket	1
51	18-1540	Fuel Pump	1
**52	460449	Capscrew Assembly	2
53	18-1120	Alternator Bracket	1
54	18-1610	Pulley Alternator	1
55	18-1080	Mount Alternator	1
56	3290-191	Speed Nut	1
57	2412-31	Conduit Clip	1
58	3290-144	Hex Hd. Screw Washer Face	1
59	3290-360	Hex Hd. Machine Screw	1
60	33-2330	Valve Cover Hose	1

*Obtain from your local AC Dealer.

**Obtain from your local GM, Chevrolet Dealer.

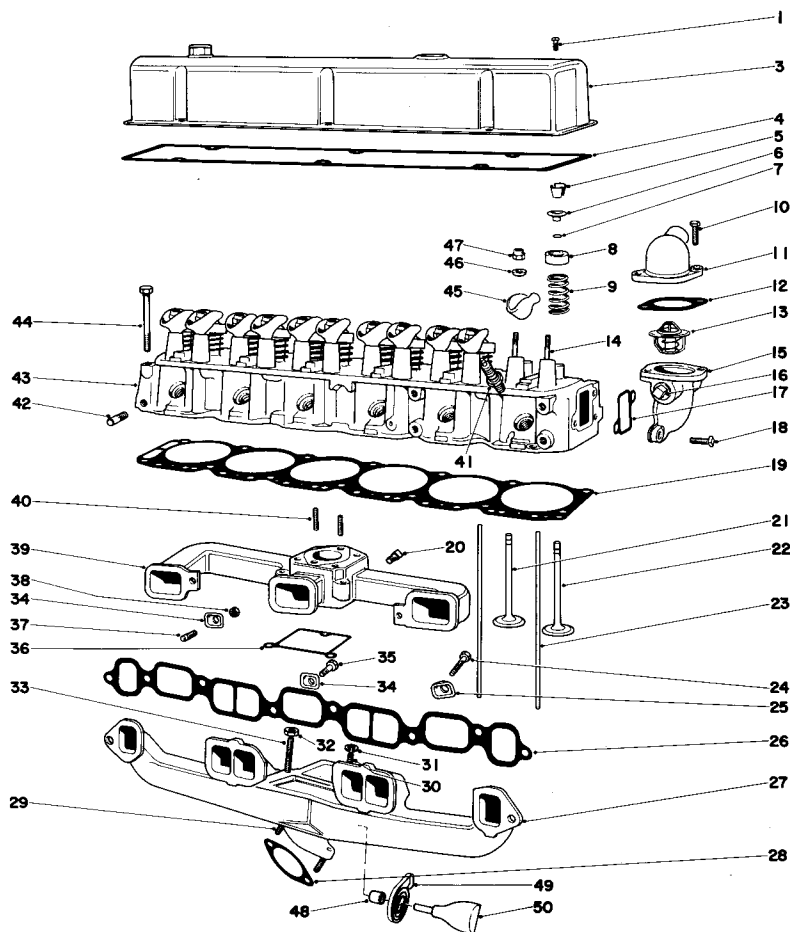

ENGINE


Ref. No.	Part No.	Description	No. Used
1	180016	Bolt — Valve Rocker Cover	7
3	458176	Cover Assembly — Valve Rocker	1
4†	3930912	Gasket — Valve Rocker Cover	1
5	3947770	Key Valve Stem	24
6	3729363	Cap — Valve Spring	12
7	3835333	Seal — Valve Stem	12
8	3836755	Shield Valve Spring	12
9	3864895	Spring & Damper — Valve	12
10	454905	Bolt — Water Outlet	2
11	3789162	Outlet Water	1
12†	3701777	Gasket — Water Outlet	1
13	3028626	Thermostat Assembly	1
14	3814692	Stud — Rocker Arm (.003 O.S.)	A/R
*	3815892	Stud — Rocker Arm (.013 O.S.)	A/R
15	352705	Housing Thermostat	1
16	444746	Plug Thermostat Housing	3
17†	3789161	Gasket — Thermostat Housing	1
18	454905	Bolt Thermostat Housing	2
19	355754	Gasket Cylinder Head	1
20	445673	Plug — Inlet Manifold Vacuum Outlet Hole	1
21	458151	Valve — Exhaust (Std.)	6

Ref. No.	Part No.	Description	No. Used
*	461915	Valve — Exhaust (.003 O.S.)	A/R
*	461918	Valve — Exhaust (.015 O.S.)	A/R
*	461920	Valve — Exhaust (.030 O.S.)	A/R
22	3989083	Valve — Intake (Std.)	6
*	3995684	Valve — Intake (.003 O.S.)	A/R
*	3995685	Valve — Intake (.015 O.S.)	A/R
*	3995686	Valve — Intake (.030 O.S.)	A/R
23	3788495	Rod — Push	12
24	120394	Bolt — Inlet & Exhaust Manifold Clamp	2
25	3823035	Clamp — Inlet & Exhaust Manifold (at end Exhaust Ports)	2
26	338115	Gasket — Inlet & Exhaust Manifold	1
27	460503	Manifold Exhaust, Less Studs	1
28	6271611	Exhaust Pipe Packing	1
29	3798281	Stud — Exhaust Manifold to Exhaust Pipe	3
30	181648	Bolt Intake to Exhaust Manifold	1
31	120382	Washer — Intake to Exhaust Manifold Bolt	1
32	3866766	Nut — Intake to Exhaust Manifold Stud	2

*Not Illustrated

Note: Obtain from your local GM, Chevrolet Dealer.

†Production engine not supplied with gasket.

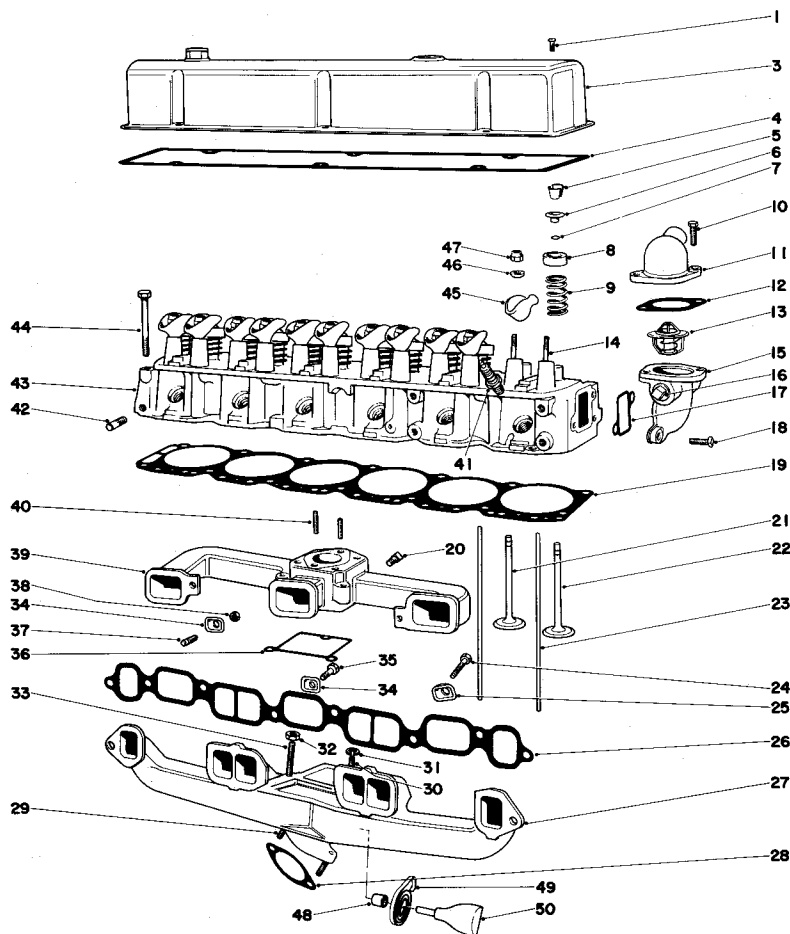


ENGINE (Continued)

Ref. No.	Part No.	Description	No. Used
33	3798281	Stud — Intake to Exhaust Manifold	2
34	3792519	Clamp — Inlet & Exhaust Manifold	4
35	9419059	Bolt (Inlet & Exhaust Manifold Clamp) (at End Exhaust Ports)	2
36	343386	Gasket — Exhaust to Intake Manifold	1
37	9784982	Stud — Inlet & Exhaust Manifold Clamp	2
38	3866766	Nut — Inlet & Exhaust Manifold Clamp	2
39	343304	Manifold — Intake	1
40	3973169	Stud- Carburetor	2
41	5613326	Spark Plug Assembly	6

Ref. No.	Part No.	Description	No. Used
42	3835487	Stud — Manifold Locating	2
43	6259693	Head Cylinder	1
44	3788417	Bolt Cylinder Head	14
45	5723551	Arm — Valve Rocker (Incl. Ref. #46-47)	12
46	3992294	Ball — Valve Rocker Arm	12
47	465934	Nut — Valve Rocker Arm Adj.	12
48	3848282	Bushing — Exhaust Manifold Valve	2
49	3895015	Spring — Exhaust Manifold Valve Stop	1
50	3881831	Thermostat Exhaust Manifold Valve	1
*	3943670	Connector (Crankcase Vent Hose) (Intake Manifold)	1
*	3835665	Cap — Oil Fill	1

*Not Illustrated

Note: Obtain from your local GM, Chevrolet Dealer.

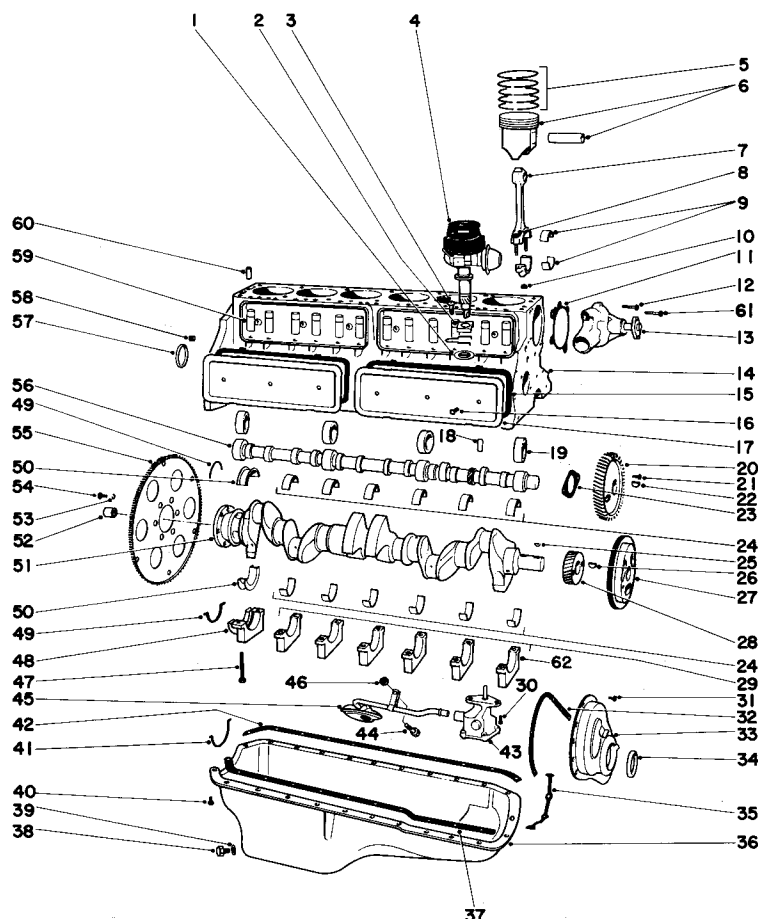

ENGINE


Ref. No.	Part No.	Description	No. Used
1	6256636	Gasket — Ignition Timer Distributor	1
2	355780	Clamp — Ignition Timer Distributor	1
3	454905	Bolt — Ignition Timer Distributor	1
4	1110717	Distributor Assembly	1
*	3792285	Washer Distributor Gear Thrust	1
*	3792286	Bearing — Distributor Shaft Pilot	1
5	326400	Ring — Piston (1 Per Cylinder) Std.	6
*	328503	Ring — Piston (.030 O.S.) (1 Per Cylinder)	A/R
6	6270033	Piston & Piston Pin Assembly (Std.)	6
*	6270034	Piston & Piston Pin Assembly (.001 O.S.)	A/R
*	6270036	Piston & Piston Pin Assembly (.030 O.S.)	A/R
7	3977110	Rod — Connecting	6
8	460405	Bolt Connecting Rod	12
9	463259	Bearing — Connecting Rod (Std.)	12
*	347119	Bearing — Connecting Rod (.001 U.S.)	A/R
*	463320	Bearing — Connecting Rod (.002 U.S.)	A/R
*	3715044	Bearing — Connecting Rod (.010 U.S.)	A/R
*	3715047	Bearing — Connecting Rod (.020 U.S.)	A/R
10	3815280	Nut Connecting Rod	12

Ref. No.	Part No.	Description	No. Used
11+	3788478	Gasket — Water Pump	1
12	443899	Bolt Water Pump Upper & Lower L.H. Side	2
13	361054	Pump Assembly Water	1
14	463322	Cylinder & Case	1
15+	3920938	Gasket — Push Rod Cover	2
16	3814350	Bolt & Seal Assembly Push Rod Cover	6
17	465809	Cover — Push Rod	2
18	352169	Stud & Seal Assembly Push Rod Cover	2
19	3750884	Bearing — Camshaft	4
20	3882893	Gear Camshaft	1
21	3817006	Screw — Camshaft Gear	2
22	106751	Key — Camshaft Gear	1
23	3790531	Bearing Unit — Camshaft Thrust	1
24	3829061	Bearing Unit — Crankshaft (Exc. R. R. Std.)	12
*	3829062	Bearing Unit — Crankshaft (Exc. R. R.) .001 U.S.	A/R
*	3829063	Bearing Unit — Crankshaft (Exc. R. R.) .002 U.S.	A/R
*	3829064	Bearing Unit — Crankshaft (Exc. R. R.) .010 U.S.	A/R
*	3829065	Bearing Unit — Crankshaft (Exc. R. R.) .020 U.S.	A/R
*	3829066	Bearing Unit — Crankshaft (Exc. R. R.) .030 U.S.	A/R
25	106751	Key — Crankshaft Gear	1
26	106751	Key — Torsional Damper	1
27	3896590	Damper — Assembly — Torsional	1

*Not Illustrated.

Note: Obtain from your local GM, Chevrolet dealer.

+Production Engine not supplied with gasket.

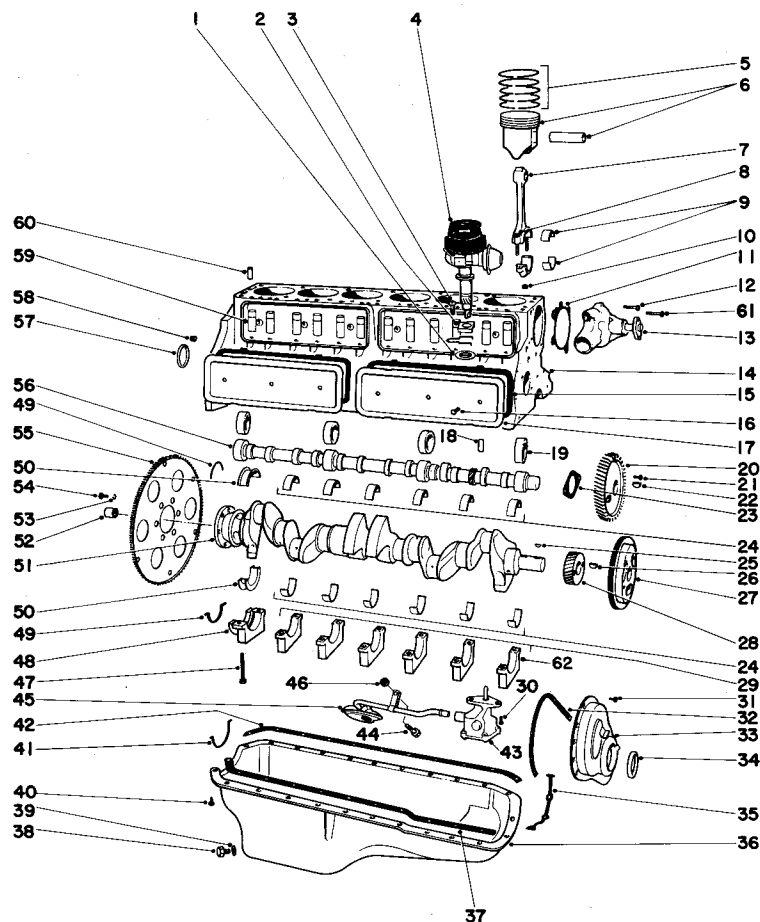


ENGINE (Continued)

Ref. No.	Part No.	Description	No. Used
28	352167	Gear — Crankshaft	1
29	3970194	Cap — Crankshaft Main Bearing (Exc. R. R.)	6
30	9424877	Bolt — Oil Pump & Screen	2
31	3817006	Screw — Crankcase Front Cover	8
32	3923472	Gasket — Front Cover	1
33	3996616	Cover — Crankcase Front End	1
34	3980267	Seal — Crankcase Front	1
35	3923440	Seal — Oil Pan Front	1
36	352156	Pan Oil	1
37	3930962	Gasket — Oil Pan R.H.	1
38	3923420	Plug — Oil Drain	1
39	3921989	Washer Oil Drain Plug	1
40	3817006	Screw — Oil Pan	18
*	180075	Screw — Oil Pan	4
*	180075	Screw — Oil Pan To Front Cover	2
41	39212973	Seal — Oil Pan Rear	1
42	3930962	Gasket — Oil Pan L.H.	1
43	3832449	Pump Assembly Oil	1
*	3829433	Valve Oil Pressure Regulator	1
*	3814903	Spring — Oil Pressure Regulator Valve	1
*	103677	Pin Oil Pressure Regulator Valve Retainer	1
*	3930824	Plug — Oil Pressure Regulator Hole	1
*	3788457	Cover — Oil Pump	1
*	3789970	Gasket — Oil Pump Cover	1
*	133043	Screw — Oil Pump Cover	4
*	9421423	Lockwasher — Oil Pump Cover	4

Ref. No.	Part No.	Description	No. Used
44	180016	Bolt — Oil Pump & Screen Support (To Oil Pump Sec. Pipe)	1
45	3859941	Pipe & Screen Assembly Oil	1
*	3920913	Support — Pipe & Screen	1
46	9422297	Nut — Oil Pump & Screen (To R.H. Stud #6 Crank Bearing Cap)	1
47	3872781	Bolt — Crank Main Bearing Cap	13
*	3852870	Stud #6 Bearing R.H. Side	1
48	3928975	Cap — Crankshaft Main Bearing (R. R.)	1
49	3958001	Seal Assembly — Crankshaft Rear Oil	2
50	3829067	Bearing Unit — Crankshaft R. R. Std.	2
*	3829068	Bearing Unit — Crankshaft R. R. .001 U.S.	A/R
*	3829069	Bearing Unit — Crankshaft R. R. .002 U.S.	A/R
*	3829070	Bearing Unit — Crankshaft R. R. .010 U.S.	A/R
*	3829071	Bearing Unit — Crankshaft R. R. .020 U.S.	A/R
*	3829072	Bearing Unit — Crankshaft R. R. .030 U.S.	A/R
51	460406	Crankshaft Assembly	1
52	3752487	Bearing Clutch Pilot	1
*	3925507	Housing Assembly Clutch	1
*	3736035	Bolt — Clutch Housing	4
*	3733130	Bolt — Clutch Housing	2

*Not Illustrated.

Note: Obtain from your local GM, Chevrolet dealer.

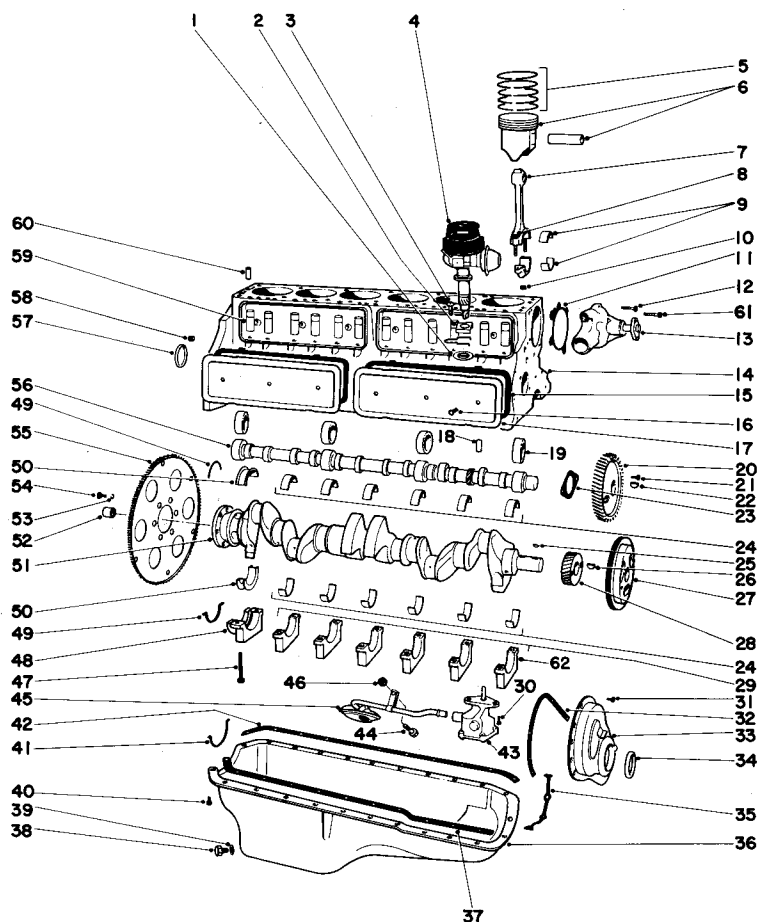


ENGINE (Continued)

Ref. No.	Part No.	Description	No. Used
*	3734908	Extension Clutch Housing Under Pan	1
*	3712745	Pin - Clutch Housing Line Up	2
*	3817006	Screw-Under Pan Extension	2
*	3714477	Under Pan Clutch Housing	1
*	3817006	Screw - Clutch Housing Under Pan	3
*	3828848	Plate Assembly Clutch Driven	1
*	3962052	Cover & Plate Assembly Clutch Pressure	1
*	3962052	Cover & Plate Clutch	1
*	3962057	Plate Clutch Pressure	1
*	3860361	Cover Clutch	1
*	3788605	Spring Clutch Pressure Plate	3
*	11500191	Washer - Clutch Cover Bolt	3
*	3962058	Bolt - Clutch Cover	3
*	838653	Bolt - Clutch Cover & Pressure Plate	6
*	120382	Lockwasher - Clutch Cover & Pressure Plate	6
*	3765372	Fork Assembly - Clutch	1
*	3725240	Stud - Clutch Fork Ball	1
*	3765360	Boot - Clutch Fork	1
53	136857	Lockwasher - Flywheel	6
54	839756	Bolt - Flywheel	6
55	3988759	Flywheel Assembly	1
56	6262809	Camshaft Sssembly	1
57	3826505	Plug - Water Jacket R.R.	1

Ref. No.	Part No.	Description	No. Used
*	838538	Plug - Water Jacket Side	3
*	455883	Plug - Cylinder & Case Water Drain Hole	1
58	3994255	Plug - Camshaft R. R. Bearing	1
59	5232450	Lifter Assembly Hydraulic Valve	12
60	585927	Pin - Cylinder Head Dowel	2
*	5575416	Valve Assembly Oil Filter By Pass	1
*	3875950	Nozzle - Timing Gear Oil	1
*	3835577	Plug - Cylinder & Case Main Oil Gallery Front Hole	1
*	444782	Plug - Cylinder & Case Main Oil Gallery R. R. Hole	1
*	443613	Plug - Cylinder & Case (EFE Switch Hole R.H. Front)	1
*	3788418	Plug - Water Jacket	3
*	6273484	Bracket - Engine Lift Front	1
*	180120	Bolt - Engine Lift Bracket	2
*	120382	Lockwasher - Engine Lift Bracket	1
*	454944	Bolt - Engine Lift Bracket Rear	1
*	120383	Lockwasher - Lift Bracket Rear	1
61	180083	Bolt, Water Pump Upper & Lower R. H. Side	2
*	473342	Bracket Engine Lift Rear	1
62	3970194	Cap - Crankshaft Main Bearing 1 thru 6	6

*Not Illustrated.

Note: Obtain from your local GM, Chevrolet dealer.

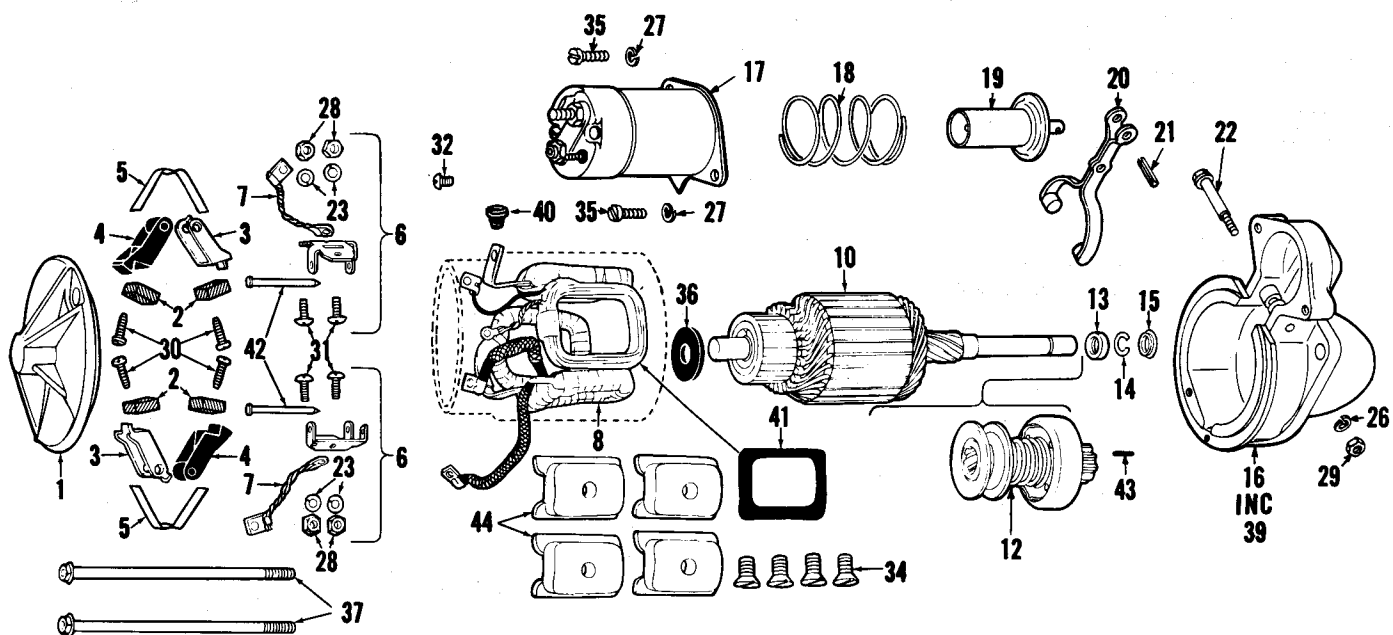


STARTER MOTOR ASSEMBLY NO. 36-2650

Ref. No.	Part No.	Description	No. Used
1	1974157	Frame	1
2	1906945	Brushes	4
3	1940477	Holder (Ground)	2
4	1926618	Holder (Insulated)	2
5	1926622	Springs (Brush)	2
6	1928015	Support (Package)	2
7	1960864	Lead (Ground)	2
8	1974183	Field Coil Assembly	1
10	1971568	Armature	1
12	1875687	Drive Assembly	1
13	1927849	Collar Stop	1
14	1927848	Ring — Retainer	1
15	1927850	Collar Thrust	1
16	1970297	Housing Drive (Incl. Ref. #39)	1
17	1114458	Switch	1
18	1958679	Spring (Plunger)	1
19	1941113	Plunger	1
20	1951567	Lever Shift	1
21	1894321	Pin — Lever	1
22	1932197	Stud Lever	1

Ref. No.	Part No.	Description	No. Used
23	453435	Washer — Lock (Brush Holder)	4
26	9421424	Washer — Lock (Lever Stud)	1
27	9421423	Washer — Lock (Switch)	2
28	120361	Nut — Brush Holder	4
29	1926640	Nut — Shift Lever	1
30	443527	Screw — Brush	2
31	274738	Screw — Brush Holder	4
32	9427815	Screw Field Lead	1
34	1968396	Screw — Pole Shoe	4
35	9413260	Screw — Switch Attaching	2
36	818265	Washer (Leather)	1
37	1939970	Bolt	2
39	1932190	Bushing	1
40	1893370	Grommet	1
41	1927853	Insulator (Field Coil)	4
42	1966923	Pin — Brush Holder	2
43	809593	Pin Dowel	1
44	1931129	Shoe — Pole	4
*	36-2650	Starter Motor Complete (Delco-Remy No. 1109099)	1

*Obtain part from Toro Distributor

Obtain other parts from local GM, Chevrolet Dealer, or Delco-Remy Dealer.

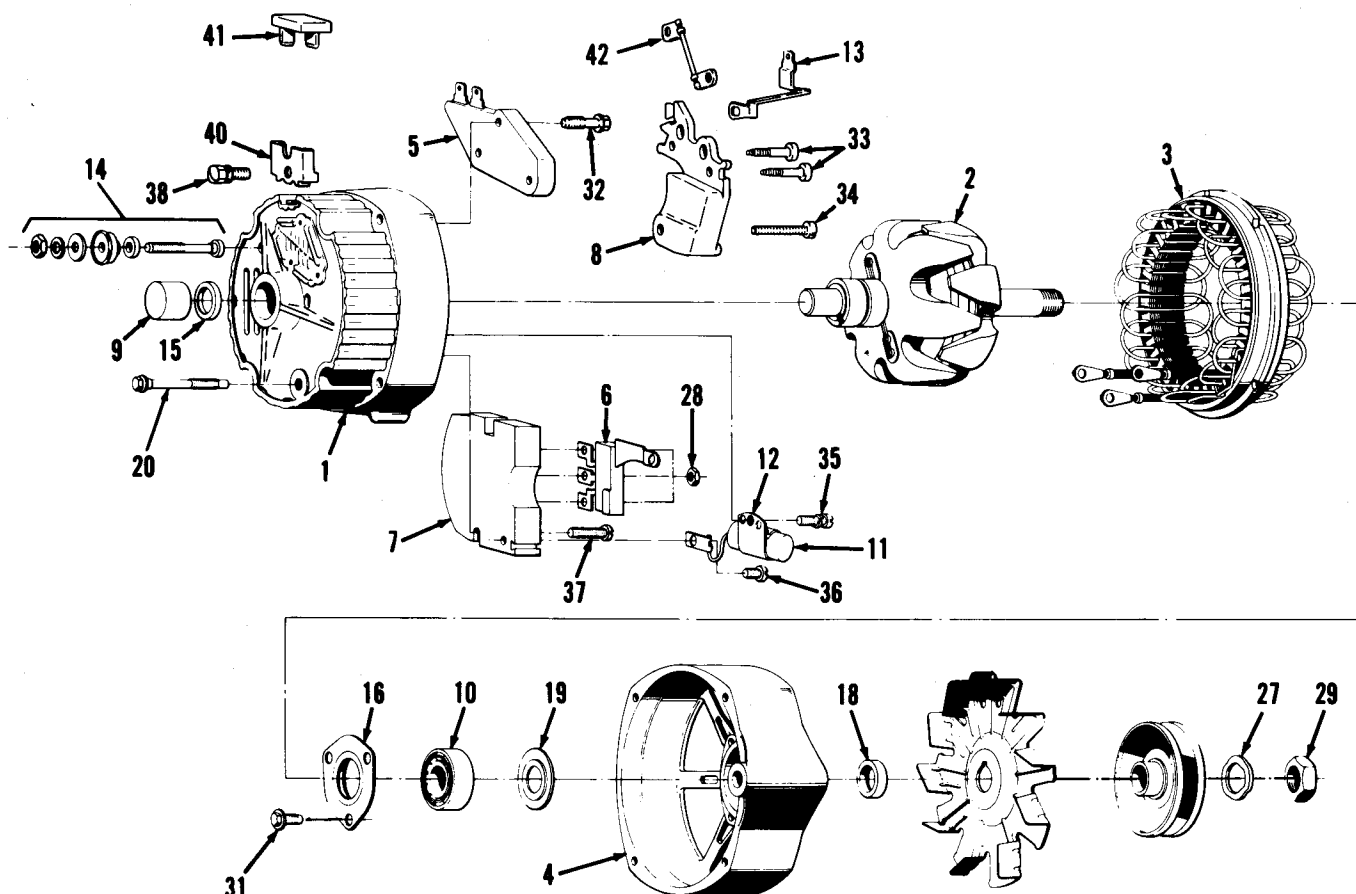


ALTERNATOR ASSEMBLY NO. 36-2420

Ref. No.	Part No.	Description	No. Used
1	1894595	S.R.E. Frame (Incl. Ref. #9-15)	1
2	1876163	Rotor Assembly	1
3	1894594	Stator Assembly	1
4	1970525	Frame D.E.	1
5	1116387	Regulator	1
6	1971528	Diode Trio	1
7	1891055	Rectifier Bridge	1
8	1894559	Brush Holder & Brush Assembly	1
9	9436831	Roller Bearing — S.R.E.	1
10	908019	Ball Bearing D.E.	1
11	1971411	Capacitor	1
12	1869573	Bracket — Capacitor	1
13	1894568	Terminal — Relay	1
14	1846900	Terminal Package	1
15	1961323	Oil — Seal	1
16	1971993	Plate — Ball Bearing Retainer — D.E.	1
18	1959991	Collar — Shaft Outside — D.E.	1

Ref. No.	Part No.	Description	No. Used
19	800832	Slinger — Grease D.E.	1
20	1956975	Bolt Thru	4
27	1941978	Lockwasher Shaft Nut D.E.	1
28	120622	Nut-Rectifier Bridge	3
29	1915172	Nut-Shaft D.E.	1
31	1965104	Screw-Bearing Retainer	3
32	1894586	Screw & Washer — Brush Holder Attaching (Ground)	1
33	1876681	Screw Assy. — Brush Holder Attaching (Insulated)	2
34	436700	Screw — Brush Holder Attaching Pivot	1
35	1851612	Screw Capacitor Bracket	1
36	1851612	Screw — Capacitor Lead Attaching	1
37	1876668	Screw & Washer — Rectifier Bridge Attaching	1
*	36-2420	Alternator Complete	1

*Obtain from local Toro Distributor.

Obtain all other parts from your local GM, Chevrolet Dealer, or Delco-Remy Dealer.

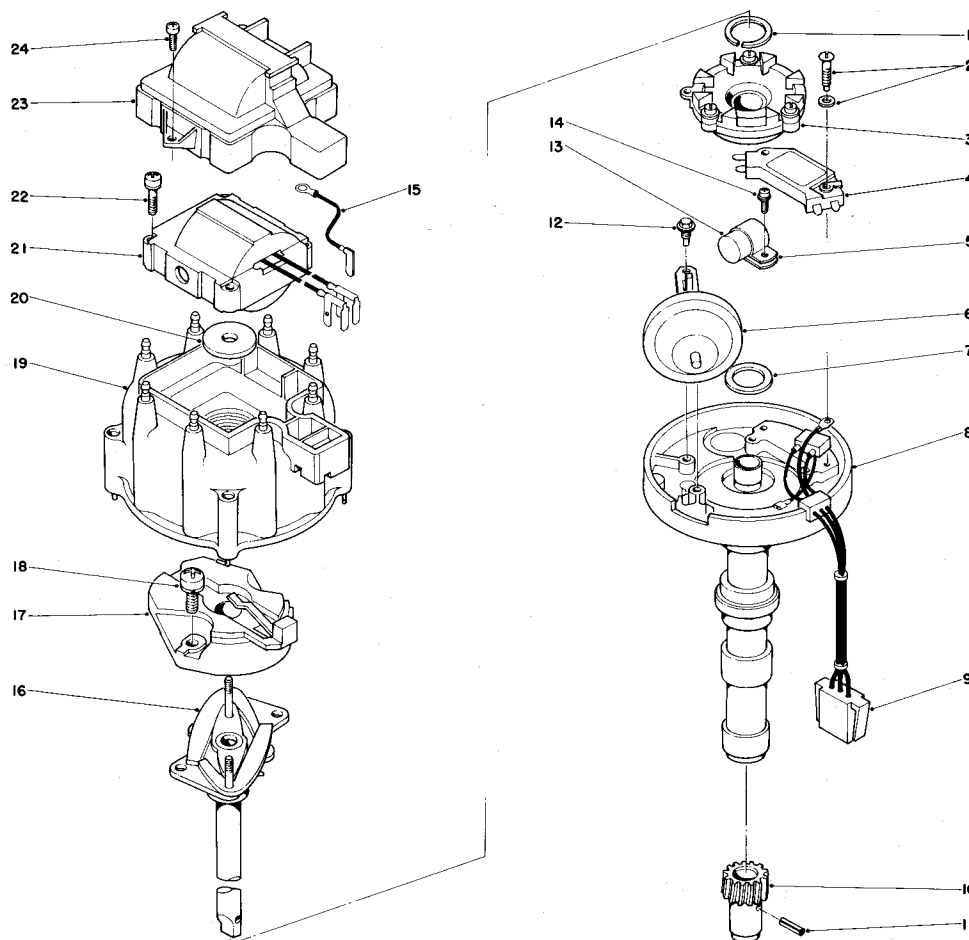

DISTRIBUTOR ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	830446	Retainer — Pole PC & Plate (Ring)	1
2	1891234	Screw & Lockwasher — Module Attaching	1
3	1880040	Pole PC & Plate	1
4	1875990	Module	1
5	1869573	Capacitor Bracket	1
6†	1973627	Control Vacuum	1
7	1950569	Seal — Dist. Housing	1
8	1893923	Housing (Incl. Ref. #7)	1
9	1974244	Harness (Incl. Ref. #5 & 13)	1
10	1862052	Gear	1
11	1893808	Pin Gear Attaching	1
12	454408	Screw Vac Control Attaching	1
13	1876154	Capacitor	1
14	1876639	Screw & Lockwasher — Capacitor Bracket Attaching	1
15	1894868	Lead Ground	1

Ref. No.	Part No.	Description	No. Used
16	1894352	Shaft Assembly (Incl. Ref. 17 & 18)	1
17	1893518	Rotor (Incl. Ref. 18)	1
18	1875948	Screw & Lockwasher — Rotor Attaching	1
19	1894979	Cap	1
20	1875962	Seal — Under Ign. Coil	1
21	1875894	Coil Assembly	1
22	1875961	Screw & Lockwasher — Ign. Coil Attaching	1
23	1894209	Cover Cap	1
24	1876153	Screw — Dist. Cap Cover Attaching	1
*	1875967	Brush — Resistor in Cap	1
*	273648	Pin-Spring — Lower Shaft Extension	1
*	1893524	Shaft — Lower Extension	1
**	1110717	Distributor Assembly	1

*Not Illustrated

†Service by complete replacement. Obtain from local GM, Chevrolet, or Delco-Remy Dealer.

**Obtain from local GM, Chevrolet or Delco-Remy Dealer.

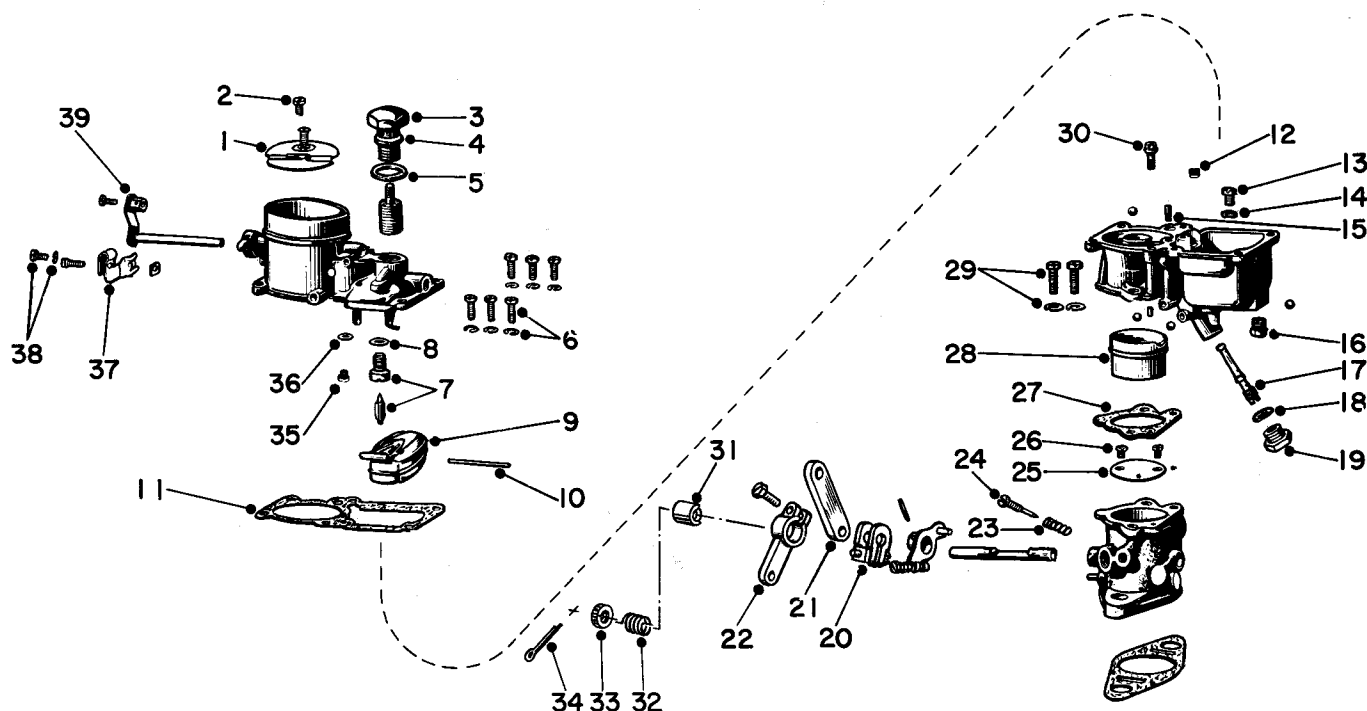


CARBURETOR ASSEMBLY 18-0740

Ref. No.	Part No.	Description	No. Used
1	18-4770	Plate Assembly Plate Air Shutter Valve Stem Spring Spring Return	1 1 1 1 1 1
2	18-4780	Screw #6-32	1
3	18-4790	Filter Head Assembly Stud & Bottom Washer Assembly Element Stud Bottom Washer Element Disc Head Washer	1 1 1 1 150 1
4	18-4800	Filter Head	1
5	18-4810	Washer	1
6	18-4870	Screw & Lockwasher	6
7	18-5100	Fuel Valve & Seat Assembly Fuel Valve Fuel Valve Seat	1 1 1
8	18-4900	Washer	1
9	18-4840	Float Assembly	1
10	18-4850	Float Axle	1
11	18-4860	Intake Gasket	1
12	18-5230	Plug - Power Jet Valve	1
13	18-5060	Main Jet	1
14	18-5070	Washer	1
15	18-5090	Well Vent	1
16	18-4880	Pipe Plug	1
17	18-5220	Discharge Jet	1
18	18-4900	Fibre Washer	1
19	18-4890	Lower Plug	1
20	18-4970	Floating Lever Stop Assembly Floating Lever Stop Screw #10-32 Washer Nut #10-32	1 1 1 1 1
21	18-4980	Floating Lever	1
22	18-4930	Clamp Lever Assembly Clamp Lever Screw #10-32	1 1 1
23	18-5040	Spring	1
24	18-5030	Idle Adjustment Needle	1
25	18-4940	Plate	1
26	18-4950	Retaining Screw	2
27	18-4910	Bowl Gasket	1
28	18-5050	Venturi	1
29	18-4920	Screw & Lockwasher	2

30	18-5080	Idle Jet	1
31	18-4990	Driver Bushing	1
32	18-5000	Return Spring	1
33	18-5010	Spring Retainer	1
34	18-5020	Cotter Pin	1
35	18-4820	Plug - 1/4-24 (Vac Piston)	1
36	18-4830	Washer	1
37	18-4750	Bracket Assembly Bracket Screw #6-32 Nut #6-32	1 1 1 1
38	18-4760	Screw & Lockwasher #8-36	1
39	18-4740	Shaft & Lever Assembly Shaft Lever & Swivel Assembly Lever Swivel Screw #8-36 Carburetor (Complete)	1 1 1 1 1 1 1
*	18-0740		1
*	18-5110	Throttle Shaft & Lever Assembly Shaft Shaft Pin Stop Lever Assembly Stop Lever Lever Bushing Screw #8-36 Retaining Pin	A/R 1 1 1 1 1 1 1
*	18-5120	Gasket Set	A/R
	18-4810	Washer	1
	18-4830	Washer	1
	18-4860	Intake Gasket	1
	18-4900	Fibre Washer	2
	18-4910	Bowl Gasket	1
	18-5070	Washer	1
*	18-5130	Carburetor Kit	A/R
	18-4780	Screw #6-32	1
	18-4810	Washer	1
	18-4830	Washer	1
	18-4850	Float Axle	1
	18-4860	Intake Gasket	1
	18-4900	Fibre Washer	1
	18-4910	Bowl Gasket	1
	18-4950	Retaining Screw	2
	18-5030	Idle Adjustment Needle	1
	18-5070	Washer	1
	18-5090	Well Vent	1
†	24-5640	Adj. High Speed Jet Ass'y	1

*Not Illustrated

†Optional Equipment

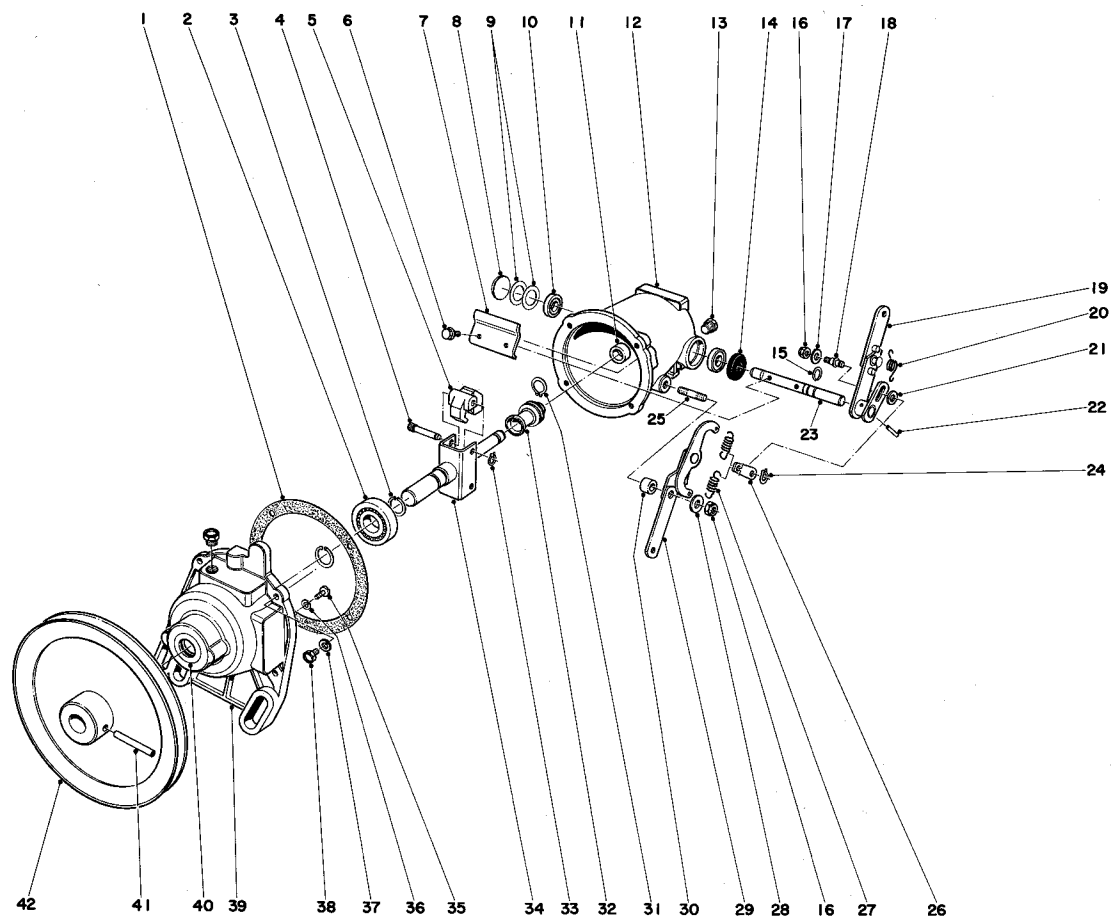


GOVERNOR ASSEMBLY NO. 18-1700

Ref. No.	Part No.	Description	No. Used
1	18-5790	Gasket	1
2	18-5570	Front Main Bearing	1
3	18-5640	Bearing Retainer	2
4	18-5660	Pivot Pin	2
5	18-5650	Flyweight	2
6	18-5530	Screw	2
7	18-5520	Rocker Lever	1
8	18-5430	Expansion Plug	1
9	18-5440	Spacer	2
10	18-5450	Bearing	2
11	18-5500	Main Bearing (Rear)	1
12	18-5490	Body	1
13	18-5510	Oil Plug	2
14	18-5480	Oil Seal	1
15	18-5470	Bearing Retainer	2
16	18-5760	Nut	2
17	18-5740	Washer	1
18	18-5730	Adjusting Pin	1
19	18-5420	Throttle Lever	1
20	18-5410	Torsion Spring	1
21	18-5720	Spacer	1
22	18-5750	Pin	1

Ref. No.	Part No.	Description	No. Used
23	18-5460	Rocker Shaft	1
24	18-5710	Retainer	1
25	18-5700	Stud	1
26	18-5400	Link	1
27	18-5390	Governor Spring	2
28	3256-16	Washer	1
29	18-5380	Variable Speed Lever	1
30	18-5690	Bushing	1
31	18-5540	Retainer	1
32	18-5550	Thrust, Sleeve & Bearing Ass'y.	1
33	18-5670	Retainer	1
34	18-5560	Main Shaft & Carrier Ass'y.	1
35	18-5780	Screw	2
36	18-5770	Lockwasher	2
37	18-5630	Lockwasher	4
38	18-5620	Screw	4
39	18-5590	Cover	1
40	18-5580	Oil Seal	1
41	18-5600	Pin	1
42	18-5610	Pulley	1
*	18-1700	Governor Assembly Complete	1


*Not Illustrated

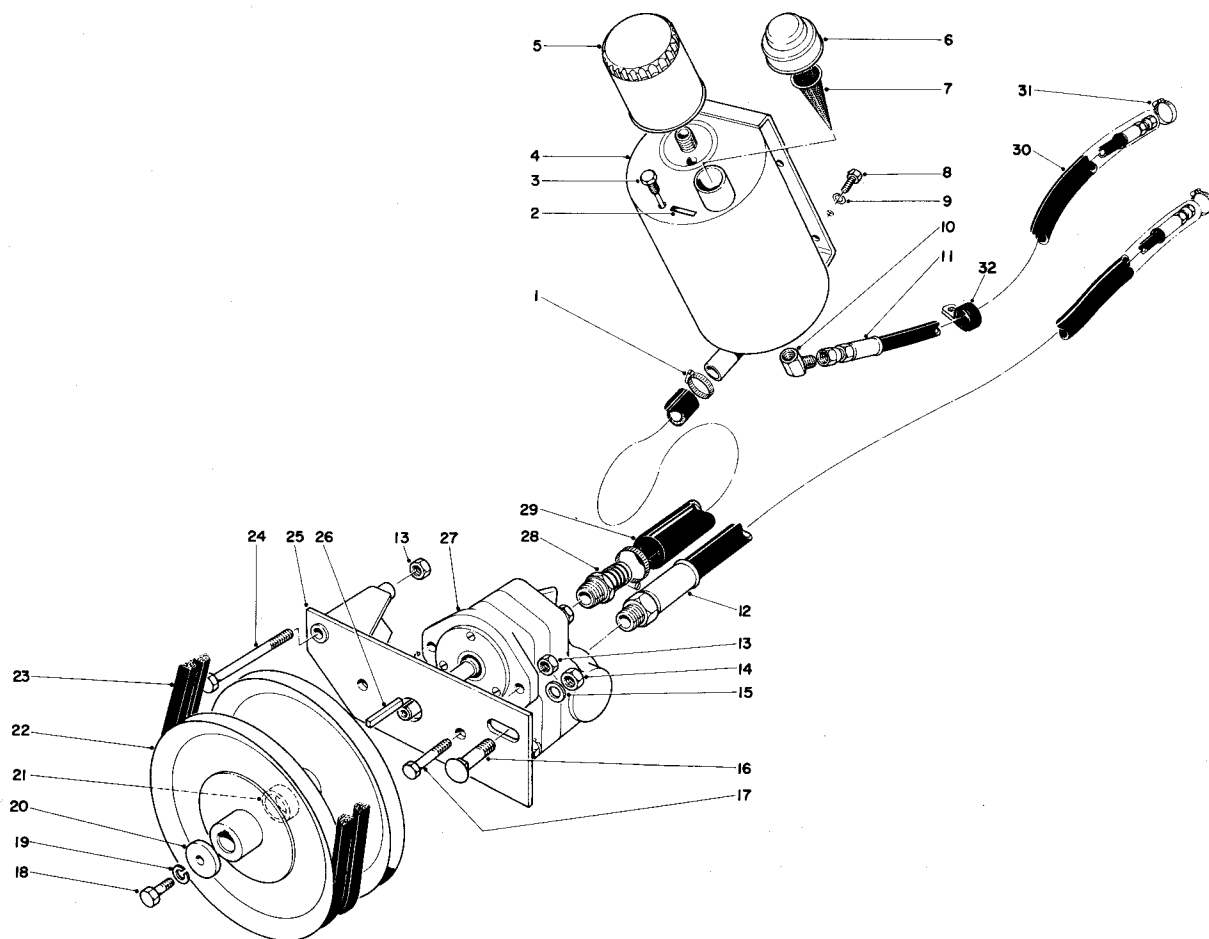

HYDRAULIC PUMP AND RESERVOIR

Ref. No.	Part No.	Description	No. Used
1	2412-3	Hose Clamp	2
2	3-1553	Decal	1
3	18-2980	Dipstick	1
4	18-2250	Hydraulic Reservoir	1
5	18-4360	Oil Filter (AC #PF-28)	1
6	353-119	Filler Cap	1
7	3-2197	Filler Screen	1
8	32104-6	Self-Tapping Screw	4
9	3253-21	Lockwasher	4
10	353-434	Fitting	1
11	28-9010	Return Hose (77" Lg.)	1
12	18-3240	Pressure Hose (102" Lg.)	1
13	32146-2	Locknut	2
14	32146-13	Locknut	1
15	3256-26	Flatwasher	1
16	3233-1	Carriage Bolt	1

Ref. No.	Part No.	Description	No. Used
17	323-8	Capscrew	2
18	3210-4	Capscrew	1
19	3253-4	Lockwasher	1
20	3-8158	Spacer	1
21	18-8550	Spacer	1
22	18-1990	Pulley	2
23	18-8450	V-Belt (Matched Set)	1
24	323-16	Capscrew	1
25	18-2550	Pump Mount	1
26	6-8590	Square Key	1
27	18-8440	Hydraulic Pump	1
28	3-7195	Coupling	1
29	18-2350	Suction Hose	1
30	28-9020	Sleeve Hose Protection	2
31	2412-3	Hose Clamp	2
32	2412-64	Clamp Hose	2

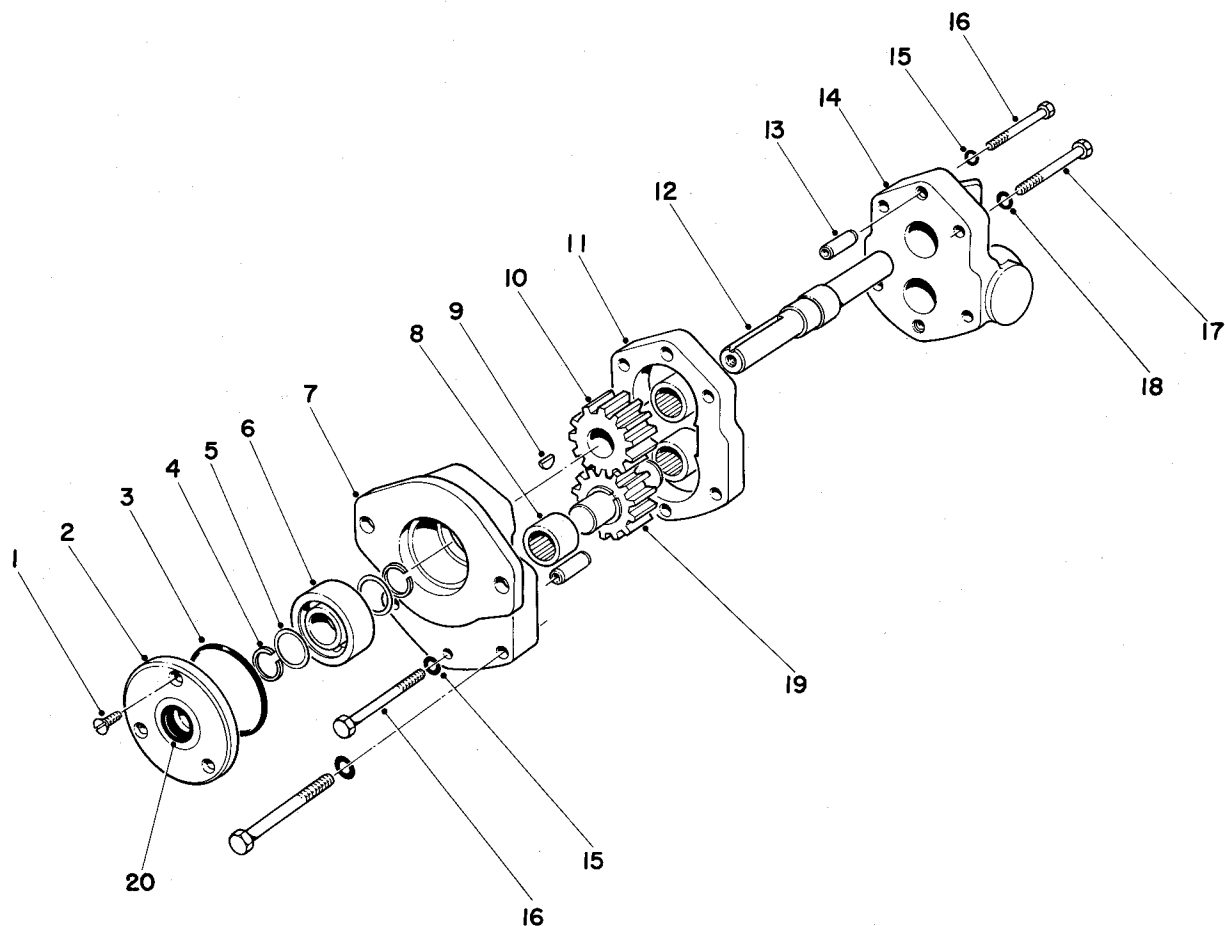


HYDRAULIC PUMP NO. 18-8440

Ref. No.	Part No.	Description	No. Used
1	18-8460	Screw	3
2	18-8500	Pilot Plate	1
3	24-7260	"O" Ring	1
4	24-7280	Retaining Ring	2
5	24-7270	Washer	2
6	24-7070	Ball Bearing	1
7	24-7080	Body (Incl. Ref. No. 8)	1
8	24-7100	Needle Bearing	3
9	24-7120	Woodruff Key	1
10	24-7110	Drive Gear	1
11	24-7200	Gear Plate	1

Ref. No.	Part No.	Description	No. Used
12	18-8490	Drive Shaft	1
13	24-7190	Dowel Pin	2
14	24-7130	Pump Cover (Incl. Ref. No. 8)	1
15	24-7150	Lockwasher	2
16	24-7160	Capscrew	2
17	24-7180	Capscrew	6
18	24-7170	Lockwasher	6
19	24-7210	Idler Gear	1
20	24-7300	Oil Seal	1
*	18-8440	Hydraulic Pump Complete	1

*Not Illustrated

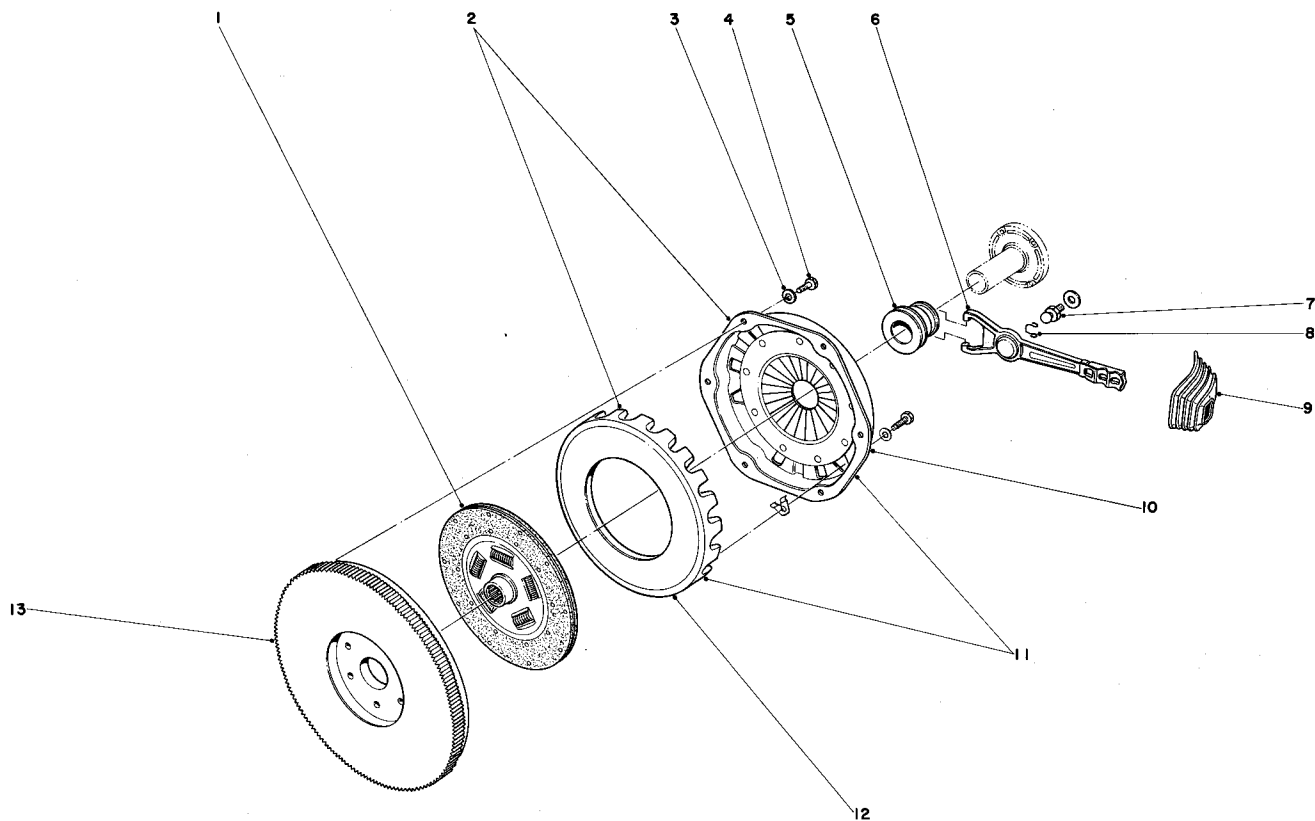


CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3828848	Clutch Plate	1
2	3959502	Cover & Plate Assembly (Incl. Ref. Nos. 10-16)	1
3	120382	Lockwasher	6
4	838653	Screw	6
5*	18-1740	Clutch Release Bearing	1
6	3765372	Fork Assembly (Incl. Ref. No. 8)	1
7	3725240	Stud	1
8	838987	Ball Retainer Spring	1

Ref. No.	Part No.	Description	No. Used
9	3765360	Boot	1
10	3860361	Cover Assembly	1
11	3962052	Cover & Plate Assembly	1
12	3962057	Clutch Pressure Plate	1
13	3988759	Flywheel Assembly	1
**14	3962058	Clutch Cover Bolt	3
**15	11500191	Clutch Cover Washer	3
**16	3788605	Pressure Plate Return Spring	3

*Obtain from Toro Distributor. All other parts obtain from GM Chevrolet Dealer.

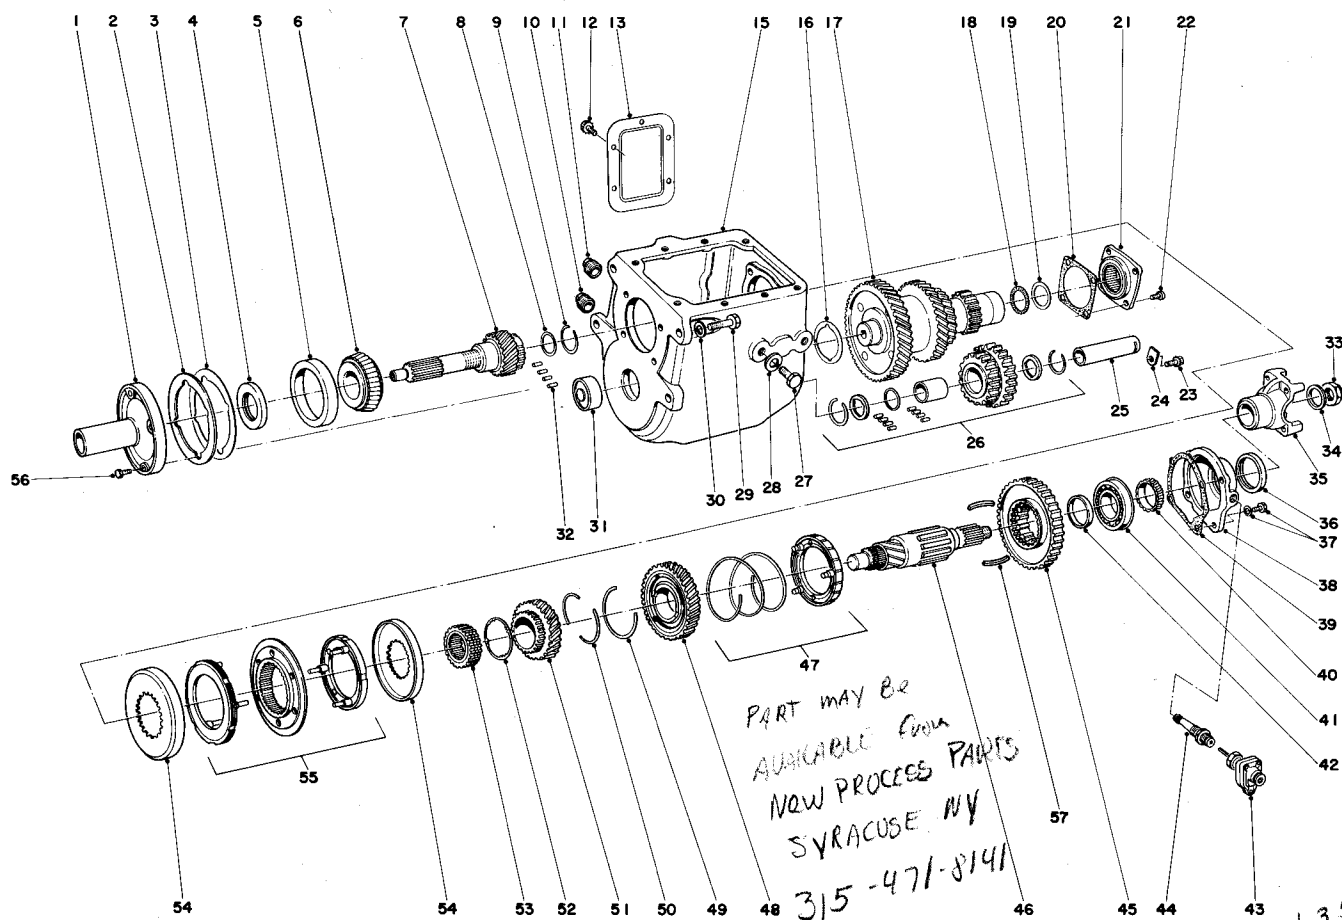

TRANSMISSION ASSEMBLY NO. 18-1840

model 435
new process
gear div
Chrysler Div


Ref. No.	Part No.	Description	No. Used
1*	18-3400	Bearing Retainer	1
2	647068	Shim (.007 Thick)	A/R
**	647069	Shim (.010 Thick)	A/R
**	647070	Shim (.020 Thick)	A/R
3*	18-3440	Gasket	2
4*	18-3390	Oil Seal	1
5*	18-3380	Bearing Cup	1
6*	18-3370	Bearing Cone	1
7	2463173	Main Drive Gear	1
8*	18-3350	Washer	1
9*	18-3340	Snap Ring	1
10	3787240	Magnetic Drain Plug	1
11	444592	Filler Plug	2
12	423351	Screw & Lockwasher Ass't.	6
13	13535	PTO Cover	1
15	2463171	Transmission Case	1
16	2462215	Thrust Washer	1
17	2462214	Cluster Gear	1
18*	18-3750	Bearing Race	1
19*	18-3760	Rear Bearing	1
20*	18-3790	Gasket	1
21	2462253	Rear Gear Rtnr. (Incl. Ndle Brg.)	1
22	18-3830	Screw	4
23	423351	Screw & Lockwasher Ass'y.	1
24	2462219	Lock Plate	1
25	2462218	Idle Gear Shaft	1
26	672766	Reverse Idle Gear Ass'y.	1
27	179898	Plug	2
28	103324	Lockwasher	2

Ref. No.	Part No.	Description	No. Used
29*	325-6	Capscrew	4
30*	3253-7	Lockwasher	4
31*	18-3320	Front Bearing	1
32*	18-3360	Roller Bearing	14
33	2238966	Nut	1
34	2492330	Washer	1
35	2495291	Yoke	1
36*	18-3680	Oil Seal	1
37*	18-3870	Screw & Lockwasher Ass'y.	4
38*	18-3660	Bearing Retainer	1
39*	18-3640	Gasket	1
40*	18-3670	Speedometer Gear	1
41*	18-3650	Bearing Assembly	1
42	2462251	Spacer	1
43*	18-1850	Speedometer Drive Joint	1
44*	18-3160	Speedometer Drive Gear	1
45	3900992	Low Speed Gear 2462248	1
46	2463175	Main Shaft	1
47	2462243	Ring and Pin Assembly	1
48	2462249	2nd Speed Gear	1
49*	18-3610	Snap Ring	1
50	3727142	Split Ring	1
51	2462250	3rd Speed Gear	1
52*	18-3330	Thrust Bearing	1
53	2489860	Clutch Gear	1
54*	18-3460	Outer Stop Ring	1
55*	18-3470	Synchromesh Assembly	1
56*	18-3420	Screw	4
*	18-1840	Transmission Complete	1

*Order from Toro.

All other parts obtain from your local GM, Chevrolet Dealer.

** Not Illustrated

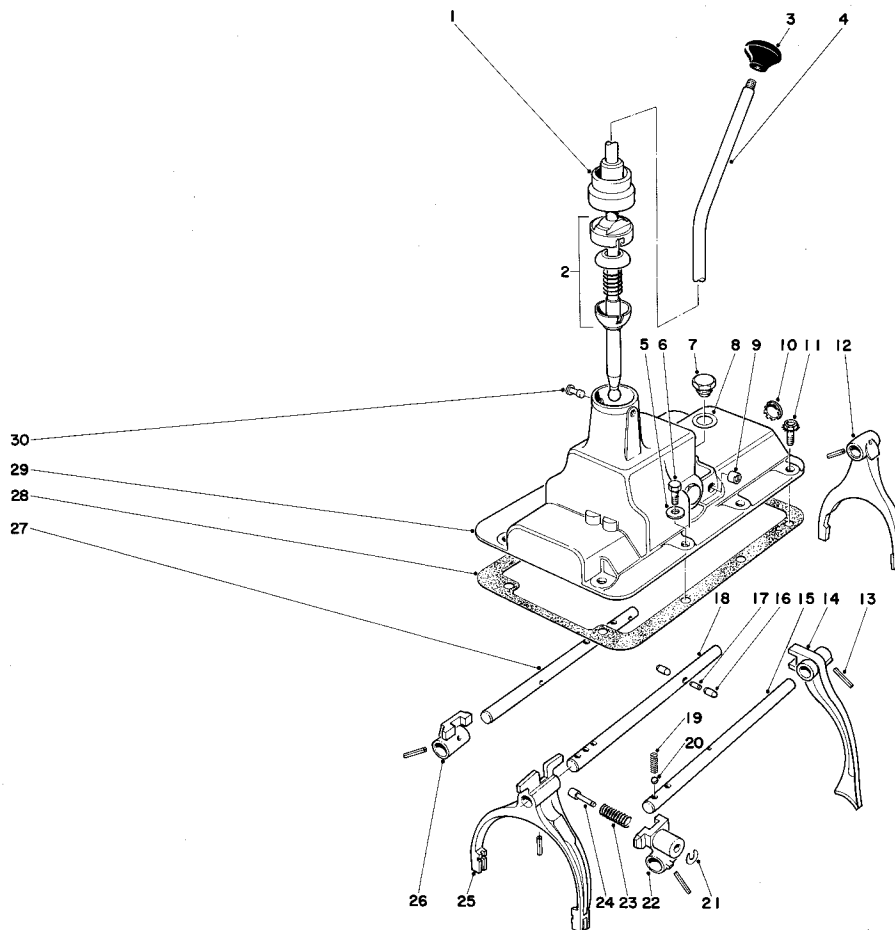


SHIFT LEVER AND FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1910	Boot Shift Lever	1
2*	18-1800	Shift Lever Mounting Kit	1
3*	233-10	Gearshift Knob	1
4*	18-1860	Gearshift Lever	1
5	6023050	Washer	2
6	3727166	Screw	2
7	3906448	Plug	2
8	3906462	Gasket	2
9	9421743	Plug	1
10	142656	Plug	3
11*	323-5	Screw & Lockwasher Assembly	6
12	3884002	Fork, 2nd & Low Shift (Incl. Bushing)	1
13*	18-3530	Lock Pin	5
14	2462224	Fork, Reverse Shift	1
15	3912387	Reverse Shift Rail	1
16	2462228	Plunger	2

Ref. No.	Part No.	Description	No. Used
17	2462229	Pin	1
18	2462221	Shift Rail, 3rd and Direct	1
19	2462227	Spring	3
20	147500	Poppet Ball	3
21	3727182	Washer	1
22	2462253	Reverse Shift Lug	1
23	2344765	Spring	1
24	2462260	Plunger	1
25	2462261	Fork, 3rd and Direct (Incl. Bushing)	1
26	2462225	Lug, 2nd and Low	1
27	2462220	Shift Rail, Low and 2nd	1
28*	18-3450	Gasket	1
29	3979462	Case Cover	1
30	3921024	Trunnion	2
**	2462206	Lug and Plunger Assembly (Incl. Ref. No. 21, 22, 23, 24)	1

*Order from Toro.

** Not Illustrated

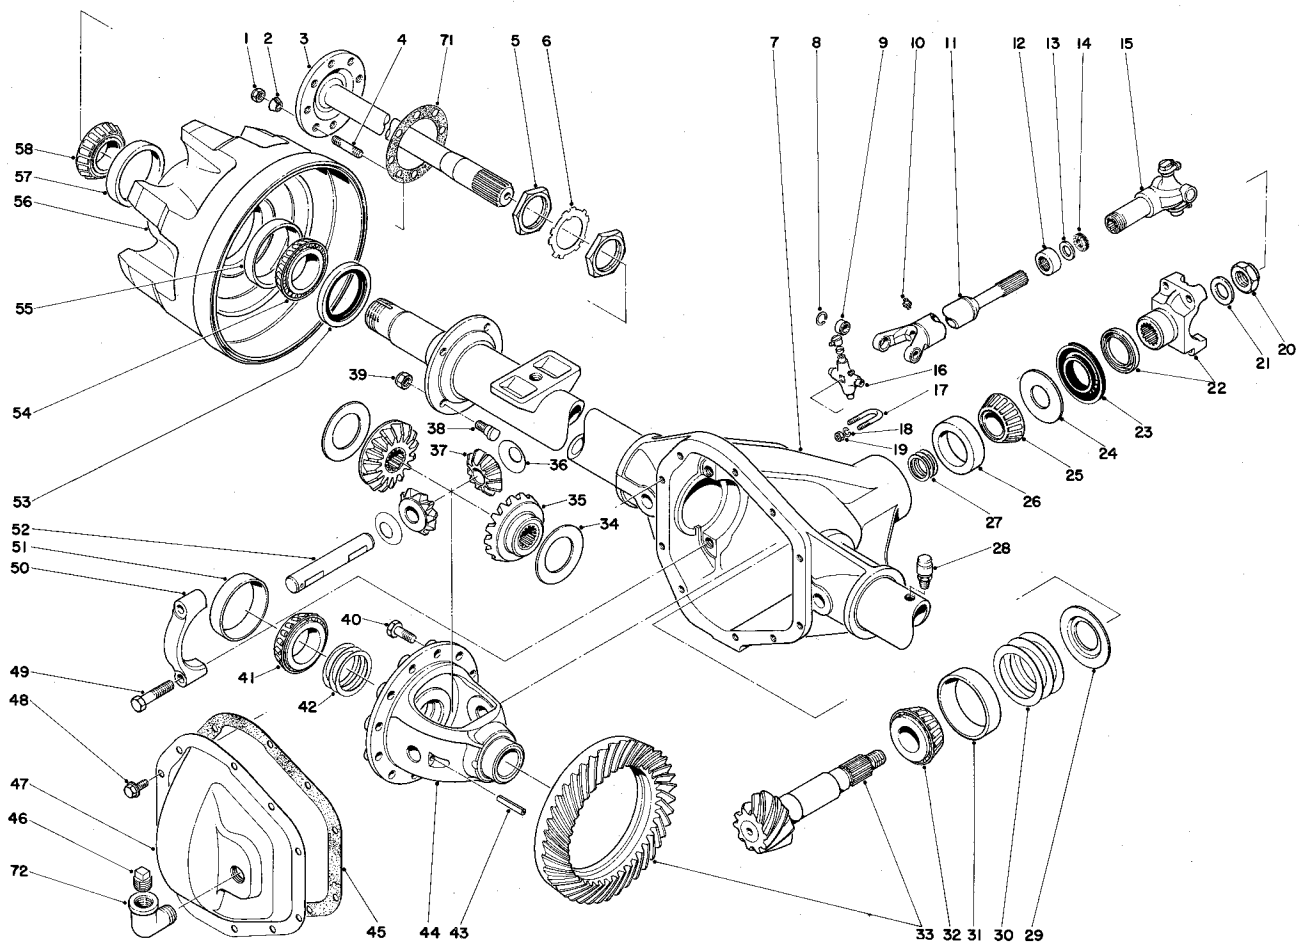


REAR AXLE AND DRIVE LINE NO. 19-6570

(USED ON UNITS WITH SERIAL NO. 30400 & UP)

Ref. No.	Part No.	Description	No. Used
1	3296-7	Lock Nut	16
2	19-6810	Stud Adapter	16
3	19-6710	Shaft Axle	2
4	19-6010	Stud	16
5	19-6820	Nut - Spindle	4
6	19-6840	Lock - Spindle Nut	2
7		Case Assembly - Differential	1
8	18-4650	Retaining Ring	8
9	<i>See Pg. 32</i>	Bearing Assembly	8
10	18-4690	Grease Fitting	1
11	18-4720	Shaft Assembly	1
12	18-4730	Retainer Cap	1
13	18-4710	Washer	1
14	18-4700	Felt Dust Seal	1
15	18-4680	Slip Yoke	1
16	<i>See Pg. 32</i>	Cross Journal	2
17	214-229	U-Bolt	4
18	3253-21	Lockwasher	8
19	32146-12	Nut	8
20	18-9360	Nut Pinion	1
21	18-9370	Washer Pinion Nut	1
22	19-6700	End Yoke Assembly	1
23	18-9390	Seal - Pinion	1
24	18-9400	Slinger - Pinion Bearing	1
25	18-9410	Bearing Cone	1

Ref. No.	Part No.	Description	No. Used
26	18-9420	Bearing Cup	1
27	18-9430	Shim Pinion Bearing .003	A/R
	18-9440	Shim Pinion Bearing .005	A/R
	18-9450	Shim Pinion Bearing .010	A/R
	18-9460	Shim Pinion Bearing .030	A/R
28	19-6780	Breather	1
29	19-6690	Baffle - Pinion Bearing	1
30	18-9310	Shim Adjusting .003	A/R
	18-9320	Shim Adjusting .005	A/R
	18-9330	Shim Adjusting .010	A/R
31	18-9300	Bearing Cup Inner	1
32	18-9290	Bearing Cone Inner	1
33		Gear Drive & Pinion Set	1
34	19-6640	Thrust Washer	1
35	19-6600	Gear Differential	2
36	19-6650	Thrust Washer	2
37	19-6610	Pinion Gear	2
38	19-6830	Brake Flange Bolt	8
39	3296-19	Lock Nut	8
40	18-9340	Bolt - Drive Gear	12
41	18-9220	Bearing Cone	1
42	18-9230	Shim - Bearing .003	A/R
	18-9240	Shim - Bearing .005	A/R
	18-9250	Shim - Bearing .010	A/R
	18-9260	Shim - Bearing .030	A/R

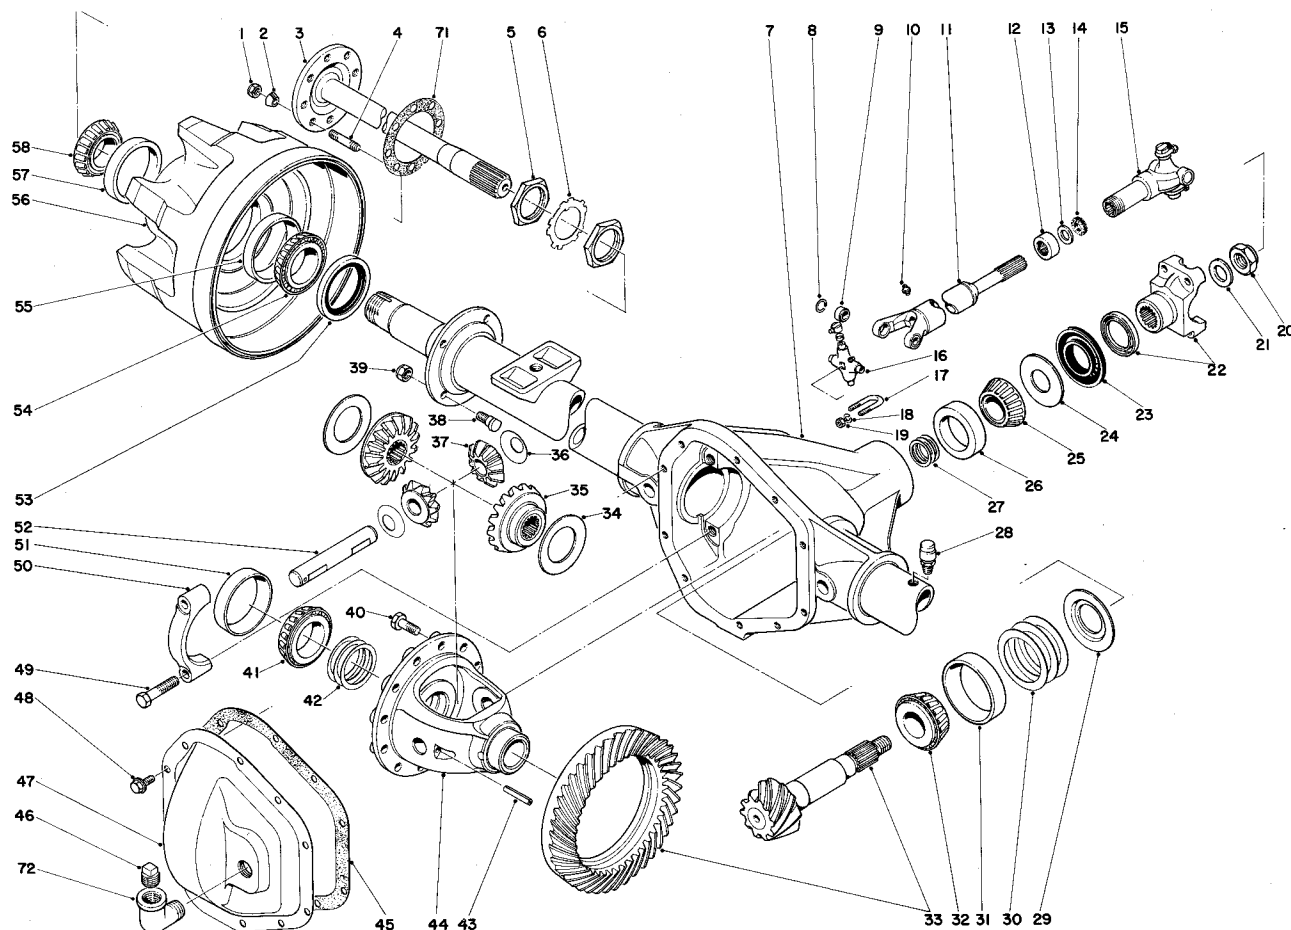


REAR AXLE AND DRIVE LINE NO. 19-6570 (Continued)

(USED ON UNITS WITH SERIAL NO. 30400 & UP)

Ref. No.	Part No.	Description	No. Used
43	19-6630	Lock - Differential	1
44	19-6590	Case - Differential	1
45	18-9190	Gasket - Carrier Cover	1
46	19-7090	Pipe Plug	1
47	19-7080	Gear Carrier Cover	1
48	18-9200	Bolt Carrier Cover	10
49	325-9	Bolt - Bearing Cup	4
50	18-9150	Cap Differential Bearing	2
51	18-9210	Bearing Cup	2
52	19-6620	Shaft Differential	1
53	253-128	Oil Seal	2
54	254-98	Bearing Cone	2
55	254-100	Bearing Cup	2
56	18-8930	Rear Wheel	2
57	254-99	Bearing Cup	2
58	254-101	Bearing Cone	2
*59	19-7410	Kit Differential & Pinion Shim (Incl. Ref. No. 20, 21, 27, 30, 42 & 45)	1
*60	19-7380	Kit Differential Shim (Incl. Ref. No. 42)	1
*61	19-7100	Kit Differential Bearing (Incl. Ref. No. 41 & 51)	1
*62	19-7120	Kit Inner Pinion Bearing (Incl. Ref. Nos. 31 & 32)	1

Ref. No.	Part No.	Description	No. Used
*63	19-7110	Kit Outer Pinion Bearing (Incl. Ref. Nos. 25 & 26)	1
*64	19-6770	Kit Differential Gear & Pinion (Incl. Ref. Nos. 35 & 37)	1
*65	19-7070	Kit Gear Carrier Cover (Incl. Ref. Nos. 45 thru 48)	1
*66	19-6580	Case Assy. Differential (Incl. Ref. Nos. 7, 43, 34-36, 37 & 52)	1
*67	19-6750	Gear & Pinion Assembly Drive (Incl. Ref. Nos. 20 & 33)	1
*68	19-6740	Kit - Differential Case Assembly (Incl. Ref. Nos. 40, 45, 60, 61 & 66)	1
*69	19-7140	Kit - Drive Gear & Pinion Assy. (Incl. Ref. Nos. 21, 23, 24, 29, 40, 45, 59, 62, 63 & 67)	1
*70	19-6760	Kit - Differential Parts (Incl. Ref. Nos. 34 thru 37, 40, 43, 45 & 52)	1
*	18-8700	Journal & Bearing Kit (Incl. Ref. Nos. 9 & 16)	1
71	24-8660	Gasket Drive Flange	2
72	2811-8	Street Elbow	1
*	19-6570	Rear Axle Assembly Complete	1

*Not Illustrated

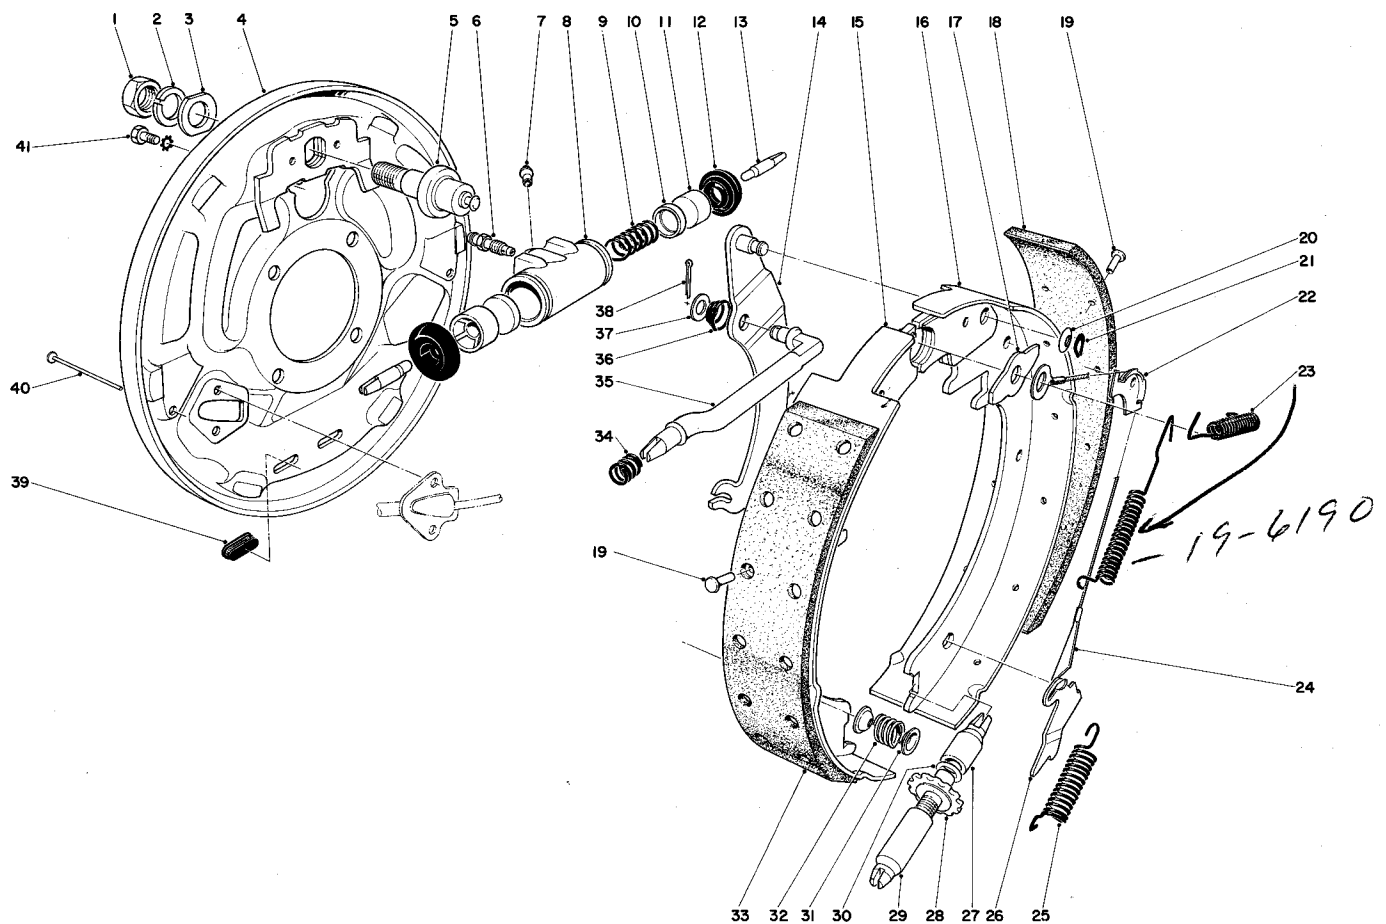


BRAKE ASSEMBLY (13 x 2½)

(USED ON UNITS WITH SERIAL NO. 30400 & UP)

Ref. No.	Part No.	Description	No. Used
1	19-6150	Nut	2
2	19-6160	Lockwasher	2
3	19-6170	Washer Special	2
4	19-7220	Backing Plate Assembly L.H.	1
*	19-7320	Backing Plate Assembly R.H.	1
5	19-6270	Anchor Pin	2
6	19-6460	Bleeder Screw	2
7	19-6450	Tube Seat Inlet	2
8	19-6440	Body L.H.	1
*	19-6540	Body R.H.	1
9		Spring	2
10		Cup	4
11		Piston	4
12		Boot	4
13	19-6180	Connecting Link	4
14	19-7270	Parking Brake Lever Assembly L.H.	1
*	19-7460	Parking Brake Lever Assembly R.H.	1
15	19-7300	Brake Shoe Lining Assy.-Prim.	2
16	19-7230	Brake Shoe Lining Assy.-Second.	2
17	19-6260	Plate Shoe Guide	2
18	19-7240	Lining-Drilled - Secondary	2
19	19-7250	Rivet-Tubular Brass	24
20	19-6210	Spring Washer	2
21	19-6200	Retainer	2
22	19-6280	Cable-Guide	2
23	19-6190	Spring-Anchors to Shoe	4
24	19-7280	Cable & Fitting Assembly	2
25	19-6380	Spring-Auto Adj. Lever	2
26	19-7450	Lever-Auto Adj. L.H.	1

Ref. No.	Part No.	Description	No. Used
*	19-6330	Lever-Auto Adj. R.H.	1
27	19-6340	Socket Adj. Screw	2
28	19-6370	Adj. Screw L.H.	1
*	19-6530	Adj. Screw R.H.	1
29	19-6360	Pivot Nut Adj. Screw L.H.	1
*	19-6520	Pivot Nut Adj. Screw R.H.	1
30	19-6350	Washer Adj. Screw	2
31	19-6390	Cup-Shoe Hold Down Spring	8
32	19-6410	Spring-Shoe Hold Down	4
33	19-7340	Lining Drilled - Primary	2
34	19-6430	Spring-Strut to Shoe	2
35	19-6230	Strut-Parking Brake	2
36	19-6250	Spring Strut	2
37	19-6240	Washer Strut	2
38	19-6220	Cotter Pin	2
39	19-6320	Cover-Brake Adj. Hole	4
40	19-6400	Pin-Shoe Hold Down Spring	4
41	19-6420	Screw & Lockwasher Assembly	4
*	19-7310	Wheel Cylinder Assy L.H. (Incl. Items 6-13)	1
*	19-7350	Wheel Cylinder Assy. R.H. (Incl. Items 6-13)	1
*	19-7290	Adj. Screw L.H. (Incl. Ref. Nos. 27-30)	1
*	19-7330	Adj. Screw R.H. (Incl. Ref. Nos. 27-30)	1
*	19-6140	Rear Brake Complete L.H.	1
*	19-6510	Rear Brake Complete R.H.	1
*	26-2550	Piston & Seal Kit (Incl. Ref. #9-12)	2

*Not Illustrated

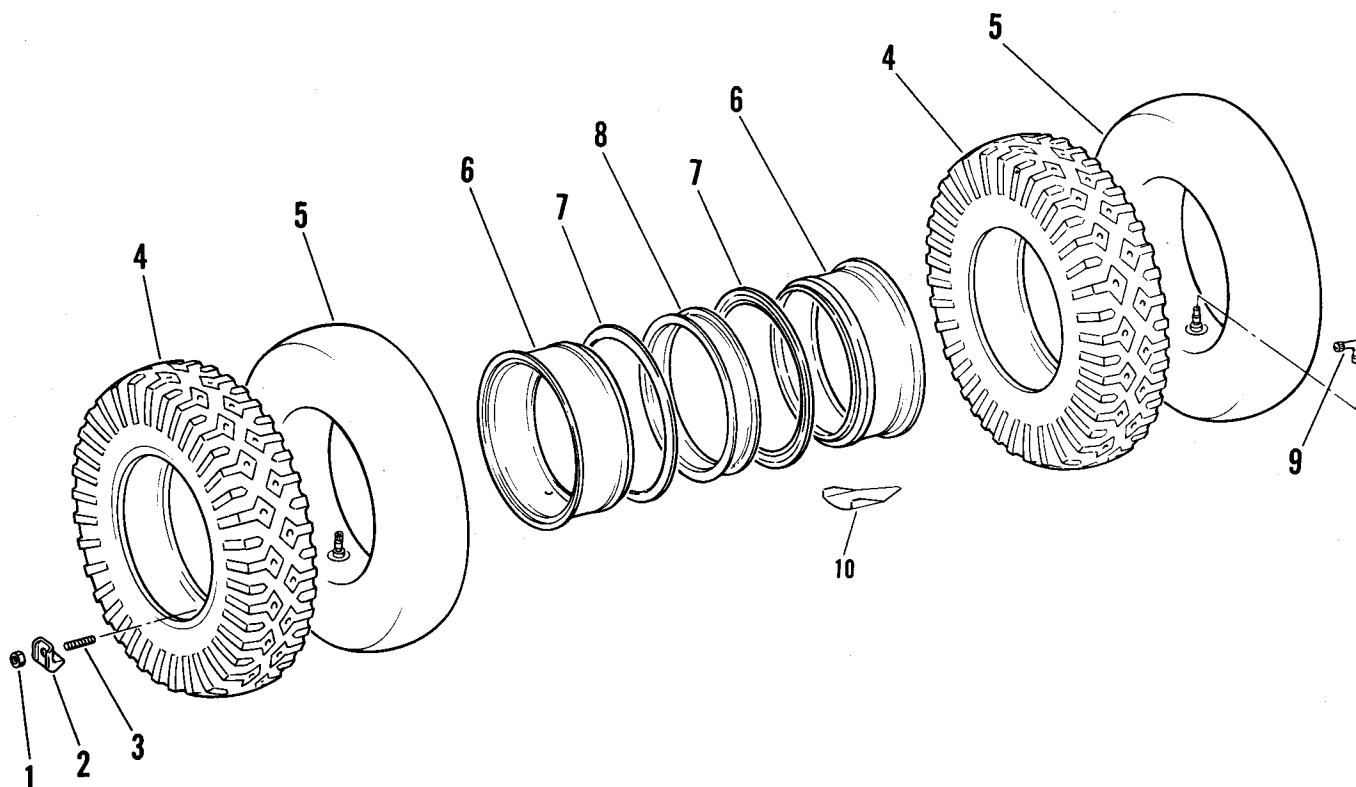


REAR TIRES AND RIMS — 7:50 x 16 General Tractor and Parkmaster 5 and 7

Ref. No.	Part No.	Description	No. Used
1	217-30	Nut, Rim Retaining	12
2	24-5650	Wedge Clamp	12
3	217-28	Stud	12
4	231-5	Tire, Rear 7:50 x 16	4
5	28-9650	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
6	217-36	Rim	4
7	217-37	Ring, Retaining	4
8	11-4860	Spacing Band	2
9	217-16	Valve Extension	2
10	12-2590	Shim	6
*	231-58	Tire, Rear 9:50 x 16	4


*Optional

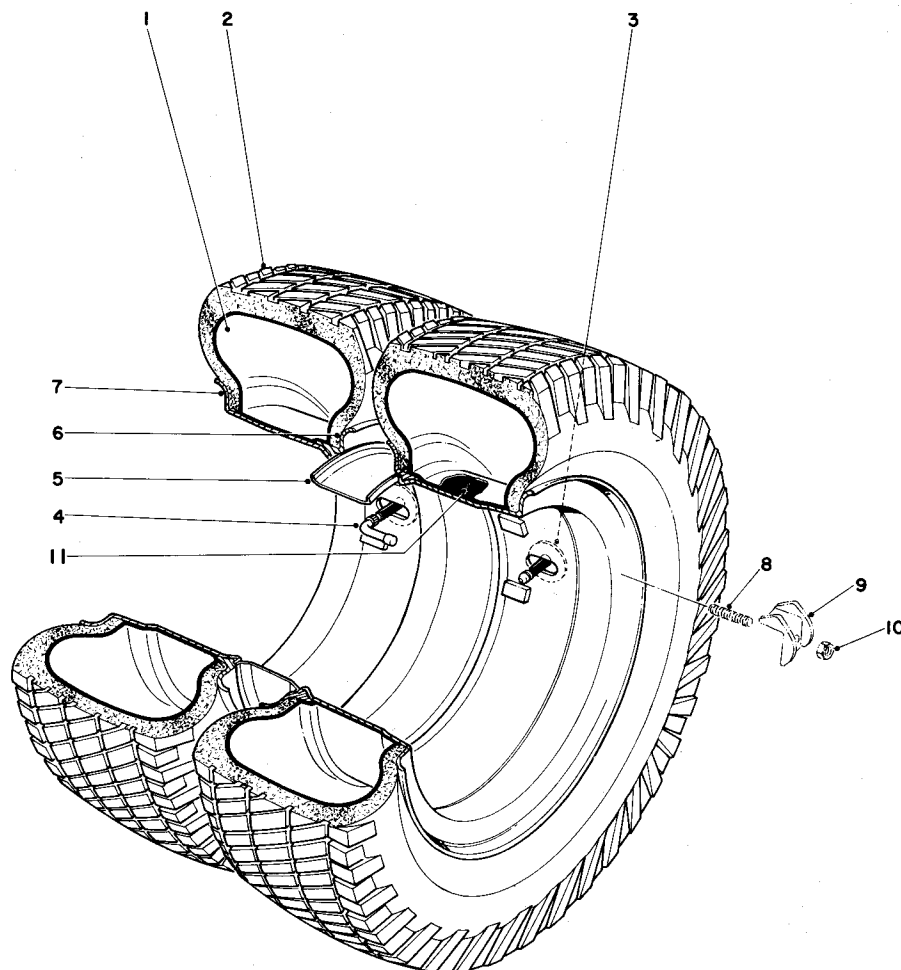

REAR TIRES AND RIMS 8:00x16 — Parkmaster 9

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	28-9650	Tube	4	7	11-4810	Rim	4
2	28-9640	Tire	4	8	217-28	Stud	12
3	3256-8	Bridge Washer	4	9	24-5650	Wedge Clamp	12
4	217-16	Valve Extension	2	10	217-30	Nut	12
5	11-4880	Spacer Band	2	11	28-9660	Flap	4
6	217-100	Rim Ring	4				
				*	231-58	Rear Tire 9.50 x 16	4

*Optional

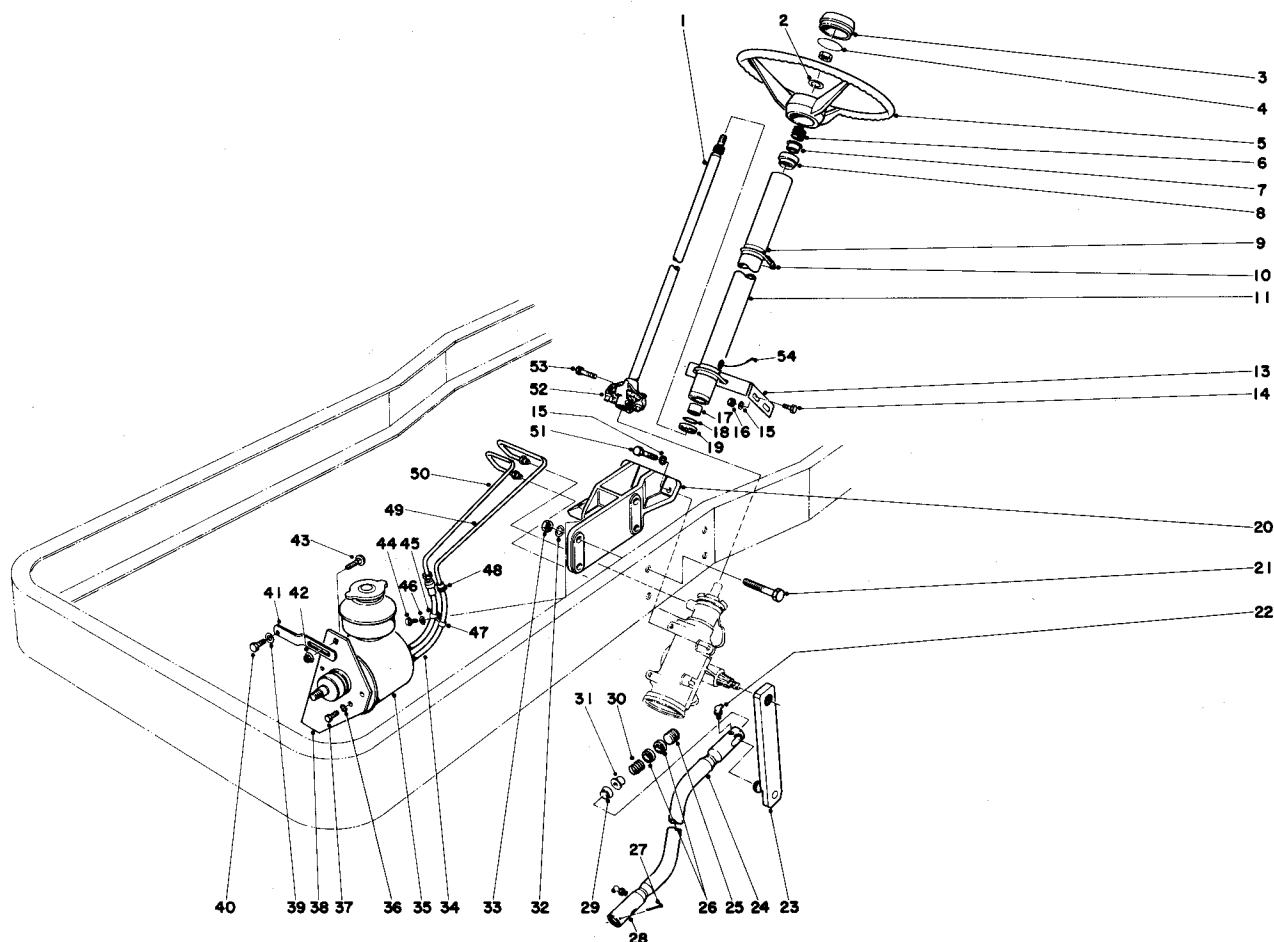


STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-3090	Steering Shaft Assembly	1
2	18-3130	Washer	1
3	18-2140	Steering Wheel Cap	1
4	18-3170	Decal	1
5	18-2110	Steering Wheel	1
6	18-3120	Spring	1
7	18-3110	Spring Seat	1
8	18-3030	Bearing Assembly	1
9	18-1310	Saddle	4
10	18-2130	Clamp	2
11	18-3050	Steering Jacket Ass'y.	1
13	18-0830	Steering Column Support	1
14	322-2	Capscrew	2
15	3256-23	Flatwasher	5
16	32146-5	Lock Nut	2
17	18-3060	Bushing	1
18	18-3080	Seal	1
19	18-3070	Bearing Seal Retainer	1
20	18-1200	Engine & Power Steering Mount	1
21	327-10	Capscrew	4
22	302-33	Grease Fitting	2
23	18-2070	Pitman Arm	1
24	18-0330	Drag Link Tube	1
25	2116-5	End Plug	2
26	2116-6	Spherical Seat	4
27	3272-15	Cotter Pin	2
28	18-0320	Drag Link (Incl. Ref. No's. 22, 24-31)	1

Ref. No.	Part No.	Description	No. Used
29	2116-8	Inner Plug	2
30	2116-7	Spring	2
31	2116-11	Spring Seat	2
32	3253-8	Lockwasher	4
33	3217-11	Nut	4
34	18-2080	Return Hose	1
35	18-2700	Power Steering Pump	1
36	3253-21	Lockwasher	3
37	323-4	Capscrew	3
38	18-2590	Power Steering Pump Mount	1
39	3253-6	Lockwasher	1
40	324-4	Capscrew	1
41	18-1380	Adjustment Bracket	1
42	32128-19	Flange Nut	1
43	3231-2	Carriage Bolt	1
44	32104-6	Self-Tapping Screw	1
45	2412-4	Clamp	1
46	3256-24	Flatwasher	1
47	2412-41	Clamp	1
48	2412-36	Hose Clamp	2
49	18-2090	Return Tube	1
50	18-2100	Press Tube & Hose Assembly	1
51	324-6	Capscrew	3
52	18-3010	Flange Assembly	1
53	18-3100	Bolt	1
54	18-3040	Horn Cable Assembly	1

*Not Illustrated

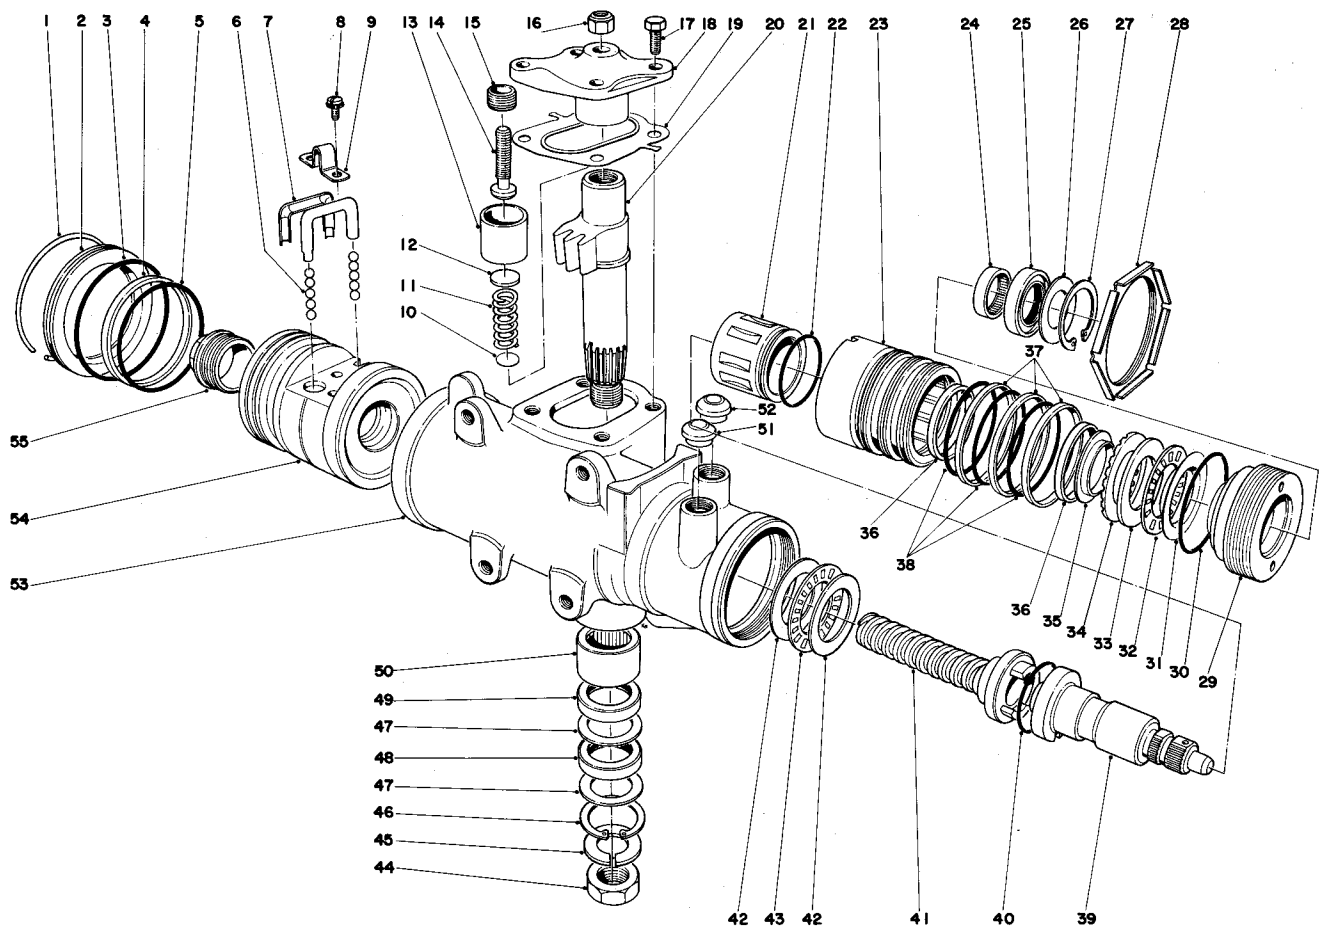


STEERING GEAR NO. 18-2050

Ref. No.	Part No.	Description	No. Used
1		Ring, Retaining	1
2	18-4330	Plug, Housing End	1
3		Seal, Housing End Plug	1
4		Ring, Rack Piston	1
5		Seal, O-Ring, Rack Piston	1
6		Ball, Chrome Alloy (.2812 Dia.)	11
*		Ball, (.2806 Dia.)	11
7	18-4280	Guide Ball Return	2
8	18-4260	Screw & Lockwasher Assembly	2
9	18-4270	Clamp, Ball Return Guide	1
10		Washer, Lash Adjuster Wear	1
11		Spring, Adjuster	1
12		Washer, Lash Adjuster	1
13		Bushing, Side Cover	1
14		Adjuster, Lash	1
15		Retainer, Lash Adjuster	1
16	28-8220	Nut, Lash Adjuster	1
17	28-8210	Bolt, Flange Hex Hd.	4
18	18-4170	Cover, Housing Side (Incl. Ref. #13)	1
19	18-4180	Seal - Assembly Gasket	1
20	569732	Gear Pitman Shaft	1
21		Spool Valve	1
22		Seal, O-Ring, Spool Valve	1

Ref. No.	Part No.	Description	No. Used
23		Valve Body	1
24	18-4240	Bearing Assembly, Needle	1
25		Seal, Stub Shaft	1
26		Seal, Stub Shaft Dust	1
27		Ring Retaining	1
28	18-4320	Nut, Adjuster Plug Lock	1
29		Plug Adjuster	1
30	28-8200	Seal, O-Ring	1
31		Race, Upper Thrust Bearing	1
32		Bearing Assembly Roller Thrust	1
33		Race, Thrust Bearing	1
34		Spacer, Thrust Bearing	1
35		Retainer, Bearing	1
36		Sleeve, Valve Body	2
37		Ring, Valve Body	3
38		Seal O-Ring	3
39		Shaft, Stub	1
40		Seal O-Ring	1
41		Worm, Steering	1
42		Race Thrust Bearing	2
43		Bearing Assembly, Roller Thrust	1
44		Nut, Pitman, Arm	1
45		Lockwasher	1

*Not Illustrated

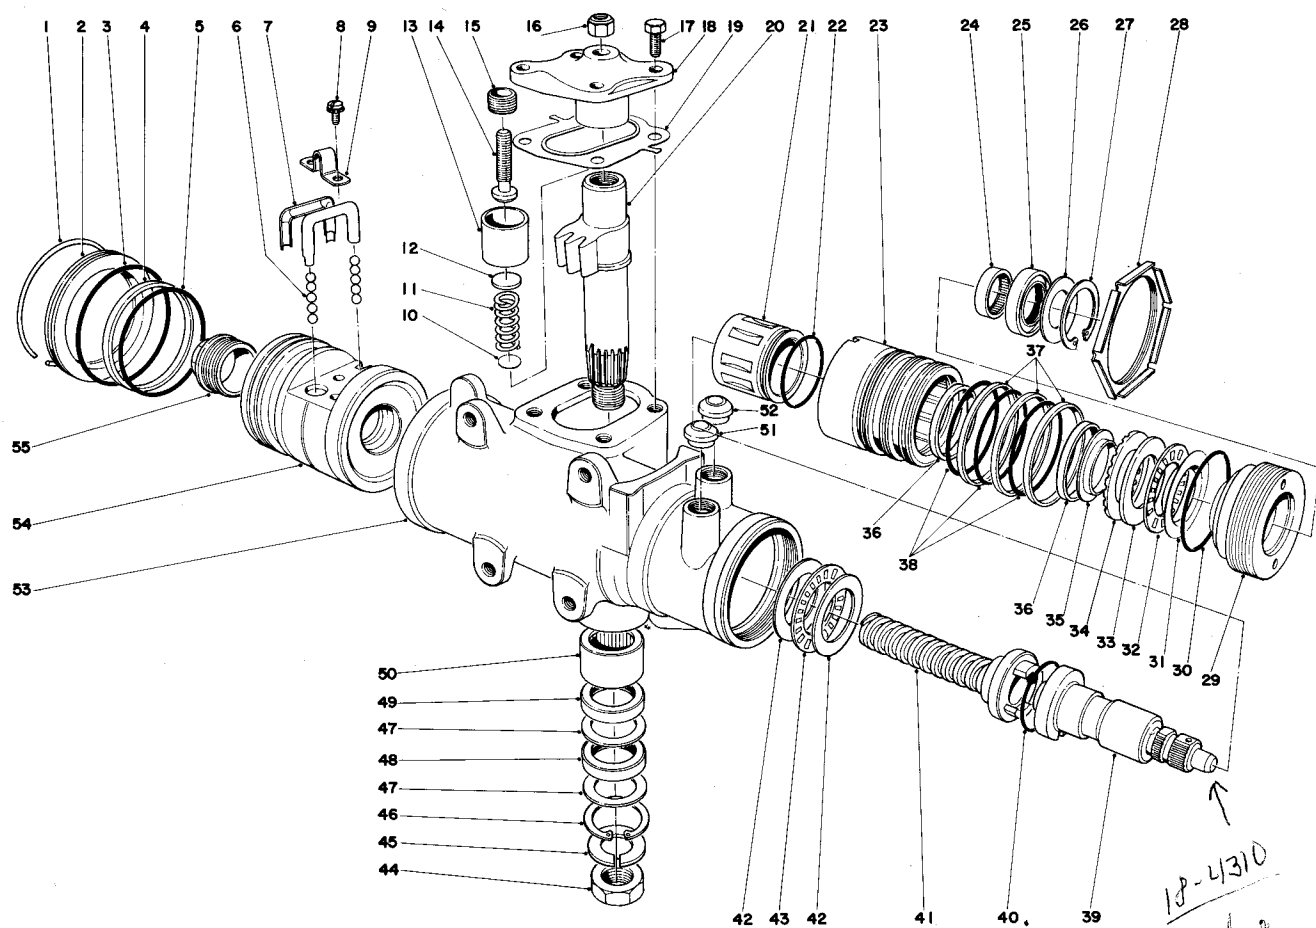


STEERING GEAR NO. 18-2050 (Continued)

Ref. No.	Part No.	Description	No. Used
46		Ring, Retaining	1
47		Washer, Seal Back Up	2
48		Seal, Pitman Shaft	1
49		Seal, Pitman Shaft	1
50	18-4200	Bearing, Pitman Shaft	1
51		Connector, Inverted Flare	1
52		Connector, Inverted Flare	1
53		Housing, Steering Gear	1
54		Nut, Rack Piston	1
55	18-4340	Plug, Rack Piston End	1
*	28-8230	Bearing Service Kit — Upper Thrust (Incl. Items 31-35)	1
*	18-5150	Seal Service Kit — Adjustment Plug (Incl. Items 25-27 & 30)	1
*	18-5160	Seal Service Kit — Pitman Shaft (Incl. Items 17, 46-49)	1
*	18-5170	Seal Service Kit — Valve Ring (Incl. Items 22, 37-38 & 40)	1
*	18-5180	Bearing Service Kit — Lower Thrust (Incl. Items 42-43)	1
*	18-5190	Ball Service Kit, Recirculating (Incl. Item #6)	1
*	28-8240	Cover Service Assembly, Housing Side (Incl. Ref. #16-19)	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
*	28-8270	Seal Service Kit, End Plug (Incl. 1 & 3)	1
*	18-5210	Seal Service Kit, Master (Incl. Items 1, 3, 16-17, 22, 25-27, 30, 37-38, 40 & 46-49)	1
*	28-8240	Seal Service Kit, Housing Side Cover (Incl. Items 17 & 19)	1
*	18-4190	Steering Gear Housing Assembly (Incl. Items 17 & 50-53)	1
*	18-4230	Plug Service Assembly Adjuster (Incl. Items 24-27 & 29-35)	1
*	28-8260	Connector Service Kit (Inverted Flare) (Incl. Items 51-52)	1
*	28-8290	Seal Service Kit (Rack-Piston) (Incl. Items 4 & 5)	1
*	28-8250	Pitman Shaft, Gear Service Assembly (Incl. 12, 14-15 & 20)	1
*	18-2050	Steering Gear Complete	1

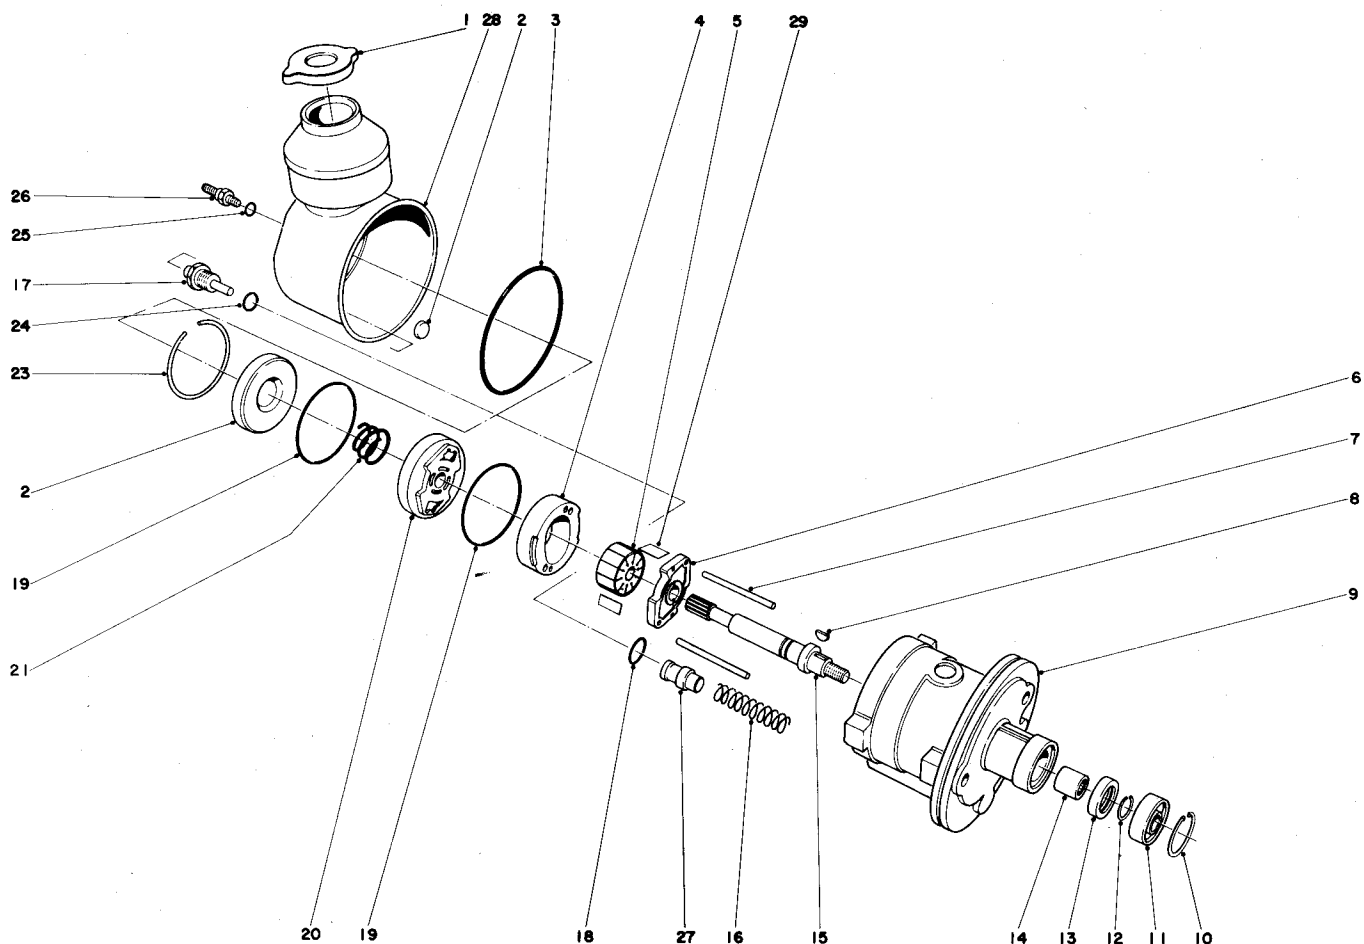


POWER STEERING PUMP NO. 28-5850

Ref. No.	Part No.	Description	No. Used
1	18-4380	Cap Assembly Reservoir (Incl. Gasket & Filter Element)	1
2	18-4470	Magnet	1
3	18-4570	Seal, O-Ring	1
4	18-4520	Ring, Pump	1
5	18-4550	Rotor, Pump	1
6	28-5790	Plate, Thrust	1
7	28-5760	Pin, Dowel	2
8	18-4460	Key Woodruff	1
9	28-5750	Housing Assembly Hydraulic Pump (Incl. Seal, Ball and Needle Bearings)	1
10	18-4530	Ring, Retaining	1
11	18-4430	Bearing Assembly Ball	1
12	18-4440	Ring, Retaining	1
13	18-4420	Seal, Drive Shaft	1
14	18-4410	Bearing Assembly Needle	1
15	18-4450	Shaft, Drive	1
16	18-4620	Spring, Flow Control	1
17	18-4390	Fitting Assembly Hydraulic Pump (Incl. Orifice Union)	1

Ref. No.	Part No.	Description	No. Used
18	18-4600	Seal, O-Ring	1
19	28-5810	Seal, O-Ring	2
20	28-5780	Plate Pressure	1
21	28-5820	Spring, Pressure Plate	1
22	28-5770	Plate End	1
23	28-5800	Ring, Retaining	1
24	18-4610	Seal, O-Ring	1
25	18-4560	Seal, O-Ring	1
26	18-4640	Stud, Pump Mounting	1
27	19-1410	Valve Assembly Control	1
		Screw Assembly Filter	1
		Filter — Screen	1
		Screw Relief Adjusting	1
		Ball — Carbon Steel	1
		Guide — Relief Spring	1
		Plunger — Flow control	1
		Shim	A/R
		Shim	A/R
		Shim	A/R
		Shim	A/R
		Spring — Pressure Relief	A/R

*Not Illustrated

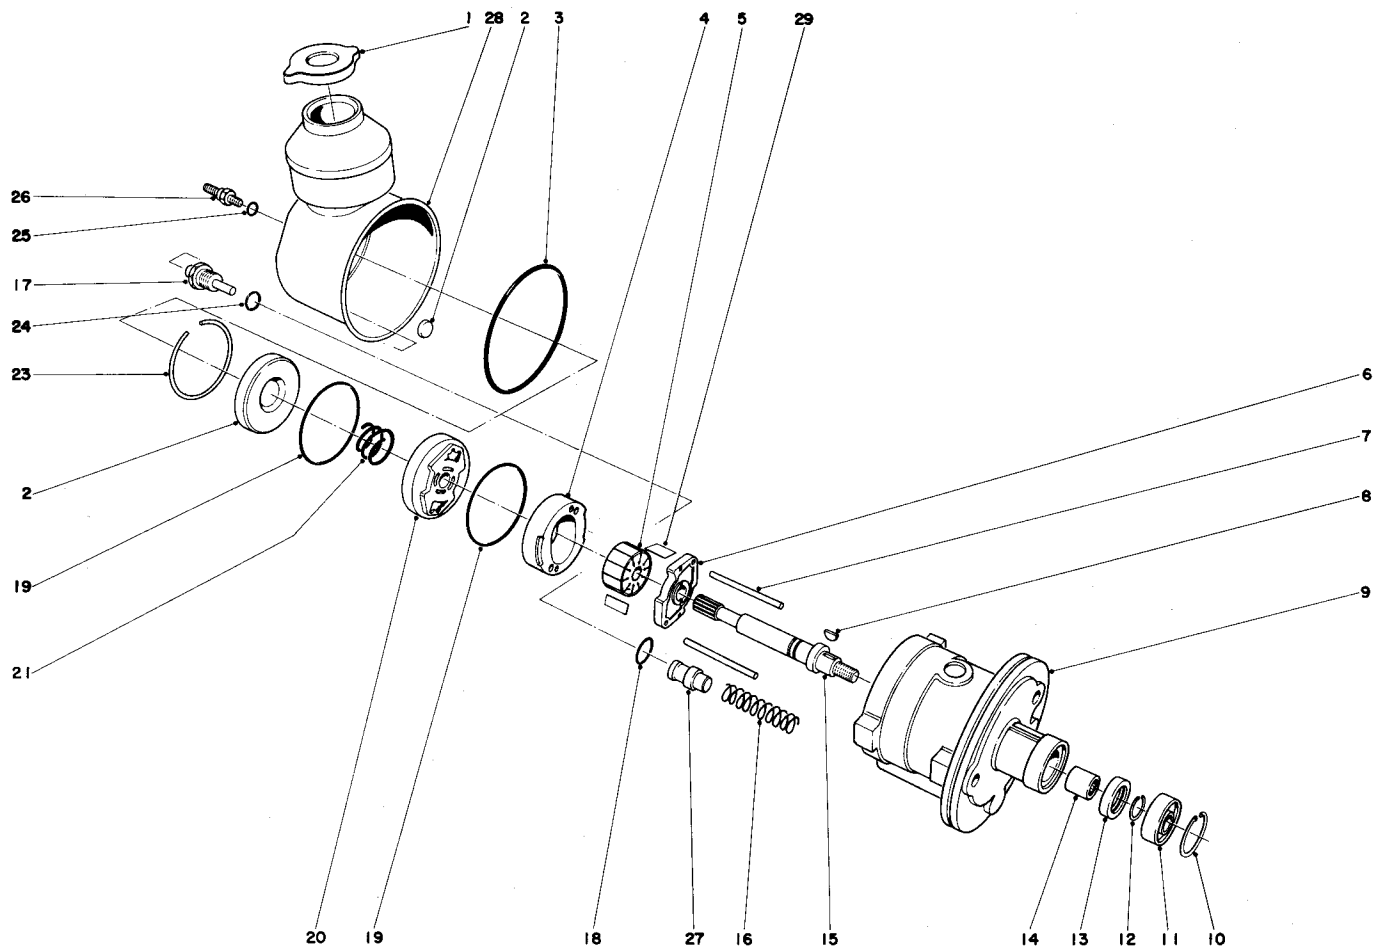


POWER STEERING PUMP NO. 28-5850 (Continued)

Ref. No.	Part No.	Description	No. Used
28	18-5350	Reservoir Assembly	
		Reservoir & Tube Assembly	1
		Body & Filler Neck Assembly	1
		Body Reservoir	1
		Neck, Upper Fluid Filler	1
		Neck, Lower Fluid Filler	1
		Filter Screen	1
		Tube, Return Hose	1
		Tube, Return Hose Optional	1
29	18-5360	Vane Service Kit Pump Vane Pump	10
*	28-5830	Seal Service Kit	
	28-5810	Seal, O-Ring	2
	18-4570	Seal, O-Ring (Reservoir)	1

Ref. No.	Part No.	Description	No. Used
	18-4560	Seal, O-Ring (Rear Mounting Stud)	2
	18-4610	Seal, O-Ring (Union)	1
	18-4600	Seal, O-Ring (Union)	1
*	18-5370	Rotor Service Kit, Ring, Valve Incl.	
		Ring, Pump	1
		Rotor, Pump	1
		Vane, Pump	10
		Ring, Shaft Retaining	1
	28-5850	Power Steering Pump Complete	1

*Not Illustrated

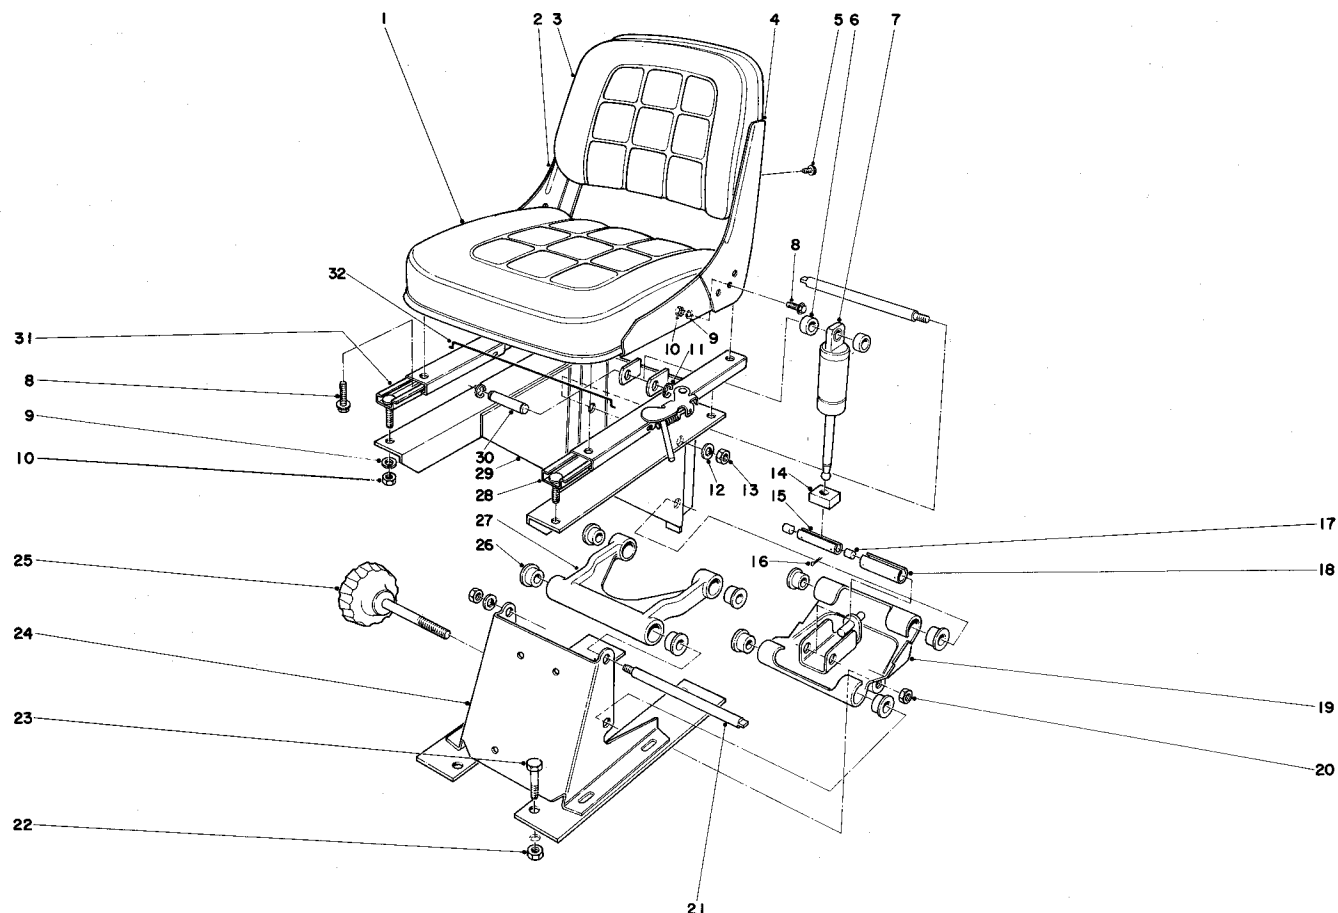


SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	351-59	Seat Cushion	1
2	351-64	Rail R.H.	1
3	351-60	Backrest	1
4	351-65	Rail L.H.	1
5	3234-5	Hex Flange Screw	4
6	351-44	Spacer	2
7	351-42	Gas Spring	1
8	3234-5	Flange Screw	10
9	3253-4	Lockwasher	6
10	3217-6	Nut	6
11	32120-18	Retaining Ring	2
12	3254-6	Lockwasher	4
13	32146-6	Nut	4
14	351-46	Bumper	1
15	351-45	Pivot	1
16	3272-7	Cotter Pin	3
17	351-69	Spacer	2
18	351-66	Pivot Sleeve	1

Ref. No.	Part No.	Description	No. Used
19	351-73	Adj. Link	1
20	3296-39	Nut	1
21	351-40	Step Bolt	4
22	32146-2	Locknut	4
23	323-7	Capscrew	4
24	351-71	Base	1
25	351-47	Adjustment Screw	1
26	351-48	Bushing	4
27	351-74	Arm Assembly (Incl. Ref. #26)	1
28	351-63	Adjuster L.H.	1
29	351-72	Carriage Assembly	1
30	351-43	Pivot Pin	1
31	351-62	Adjuster R.H.	1
32	351-61	Connecting Rod	1
*	21-4880	Seat Assembly (Incl. Ref. #1-5, 8-10, 28 & 31-32)	1
*	21-4930	Seat Suspension (Incl. Ref. #6-7, 11-21, 24-27, 29-30)	1


*Not Illustrated

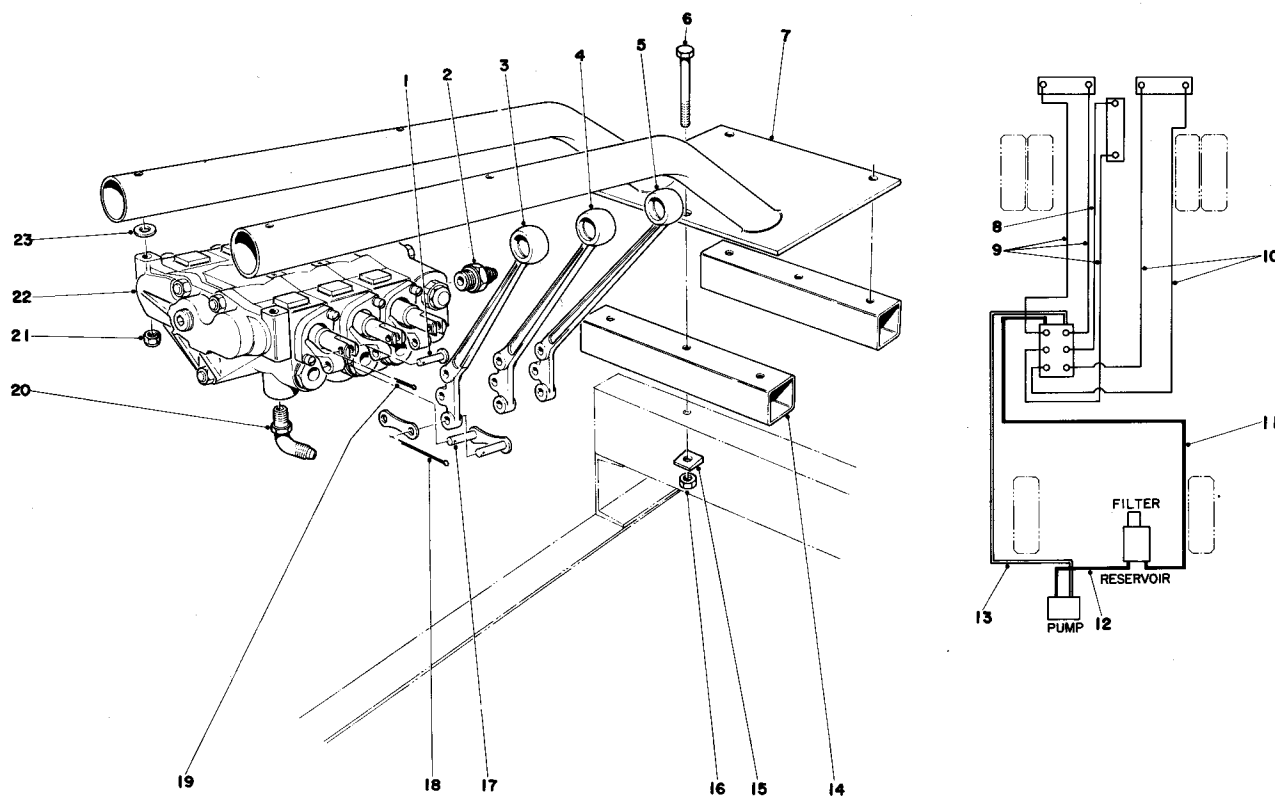

VALVE BANK — Parkmaster 5

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	3
2	353-433	Straight Swivel — Female	2
3	5-7840	Lever Modified	1
4	353-323	Lever	1
5	5-7830	Lever Modified	1
6	325-13	Capscrew	3
7	28-9030	Valve Stand	1
8	26-8520	Hydraulic Hose	1
9	5-0200	Hydraulic Hose (77")	3
10	5-0230	Hydraulic Hose (102")	2
11	28-9010	Low Pressure Hose (62")	1
12	18-2350	Suction Hose	1


Ref. No.	Part No.	Description	No. Used
13	36-2480	High Pressure Hose (94")	1
14	3-0166	Spacer Tube	2
15	3290-216	Bevel Washer	3
16	32146-13	Locknut	3
17	353-319	Connecting Link	3
18	353-320	Cotter Pin	3
19	353-321	Cotter Pin	3
20	353-212	Elbow 45°	6
21	3296-29	Nut	3
22	26-0600	Complete Valve Bank	1
23	3256-23	Washer	6

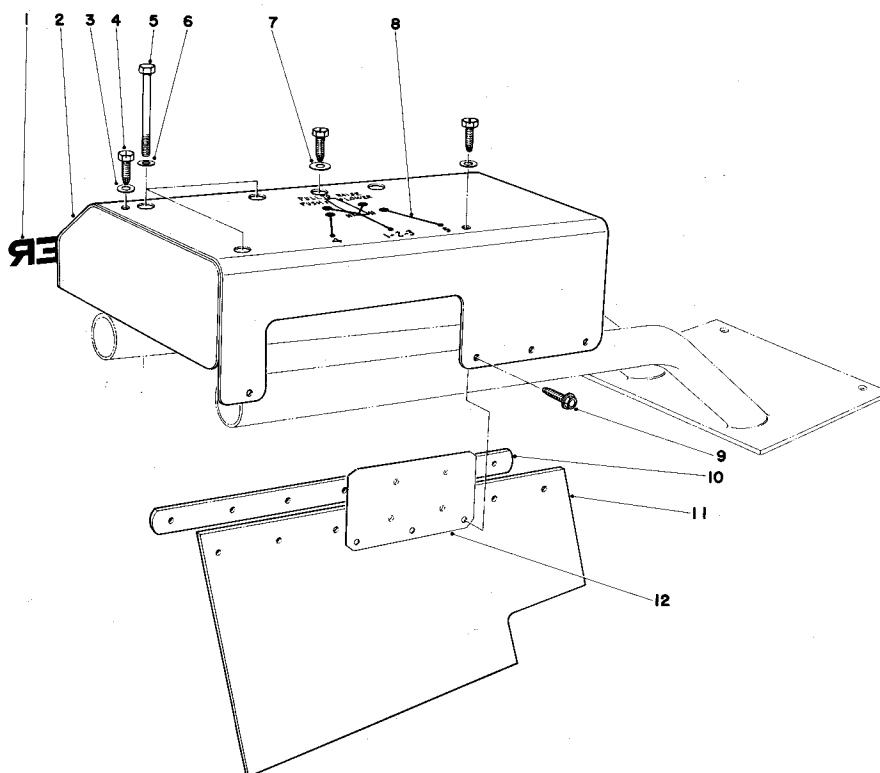

VALVE COVER & SHIELD ASSEMBLY — Parkmaster 5

Ref. No.	Part No.	Description	No. Used
1	19-2260	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	2
4	32104-6	Screw Self Tapping	4
5	322-38	Capscrew	3
6	3256-23	Washer	3

Ref. No.	Part No.	Description	No. Used
7	3256-4	Washer	1
8	5-8070	Decal	1
9	12-3270	Screw Special	7
10	28-8990	Strap Support	1
11	28-8980	Flap Valve	1
12	28-9000	Closure Cover	1

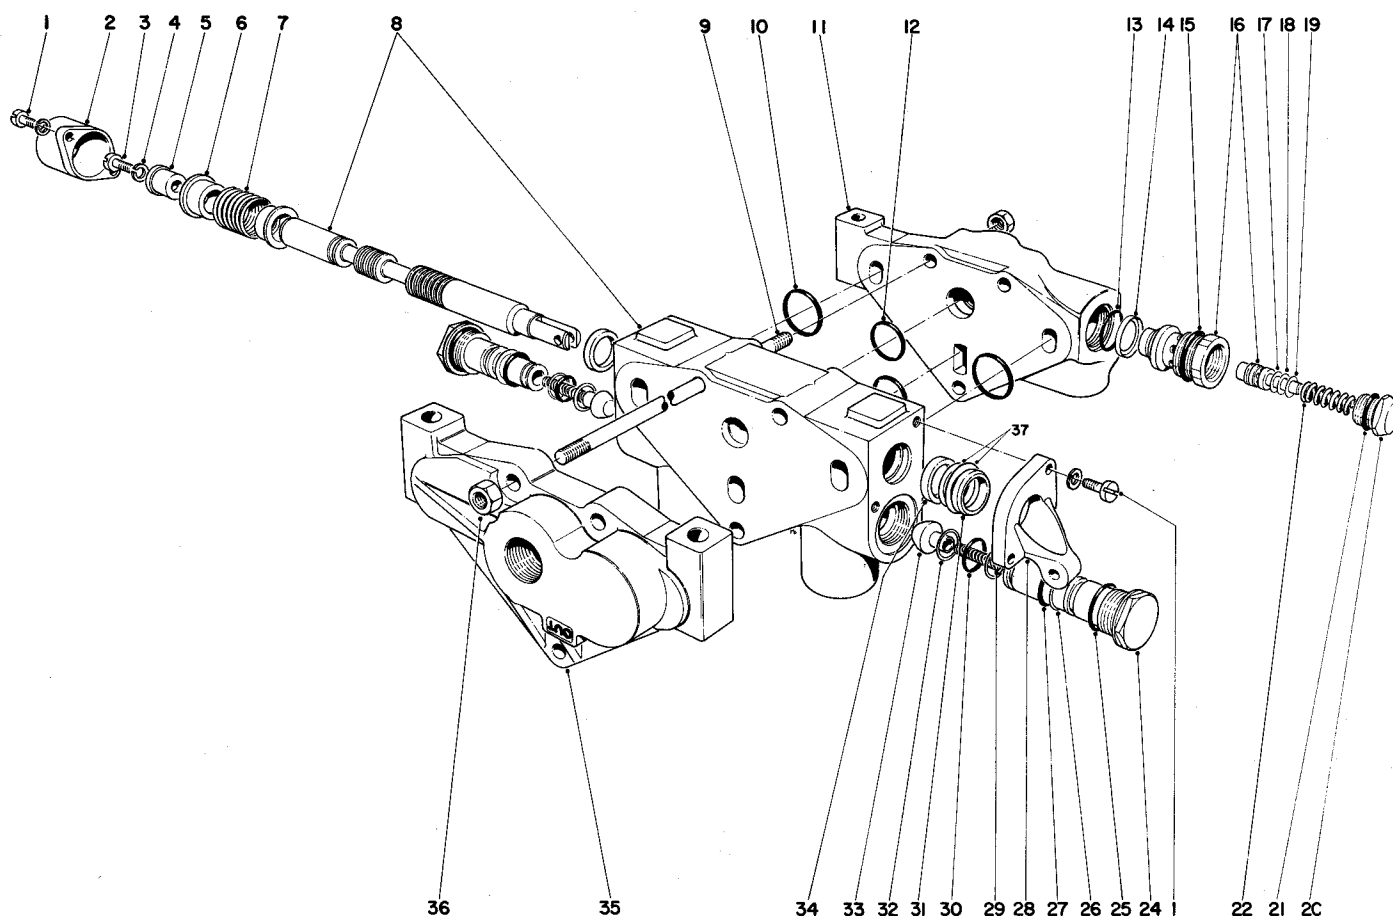


HYDRAULIC VALVE ASSEMBLY NO. 26-0600—Parkmaster 5

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Wash. Assy.	12
2	353-310	Bonnet	3
3	353-312	Screw	3
4	353-314	Washer	3
5	353-313	Spool Collar	3
6	353-311	Stop Collar	6
7	353-530	Spring	3
8	353-553	Housing & Spool Assy.	3
9	353-341	Stud	3
10	353-528	Section Seal Kit (Incl. Ref. #12)	8
11	353-337	End Cover	1
12		Sect. Seal, Pressure	8
13	353-332	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-555	Rel. Body & Rel. Poppet Assy.	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1

Ref. No.	Part No.	Description	No. Used
20	353-334	Relief Cap	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-333	Spring	1
24	353-307	Lift Check Plug	6
25	353-308	O-Ring Cylinder Port	6
26	353-306	Back-Up Washer Cover	6
27	353-305	O-Ring Check	6
28	353-324	Handle Bracket	3
29	353-304	Lift Check Spring	6
30	353-302	O-Ring, Check Plug Seal (Inner)	6
31	353-318	Secondary Spool Wiper Seal	3
32	353-303	Back-Up Washer (Inner)	12
33	353-301	Lift Check Poppet	6
34	353-570	Spool Seal	6
35	353-554	End Cover	1
36	353-343	Locknut	6
37	353-515	Seal Kit (Incl. Ref. #34)	6
*	26-0590	Valve Section Complete (Incl. Ref. Nos. 1-8, 24-34)	3


*Not Illustrated

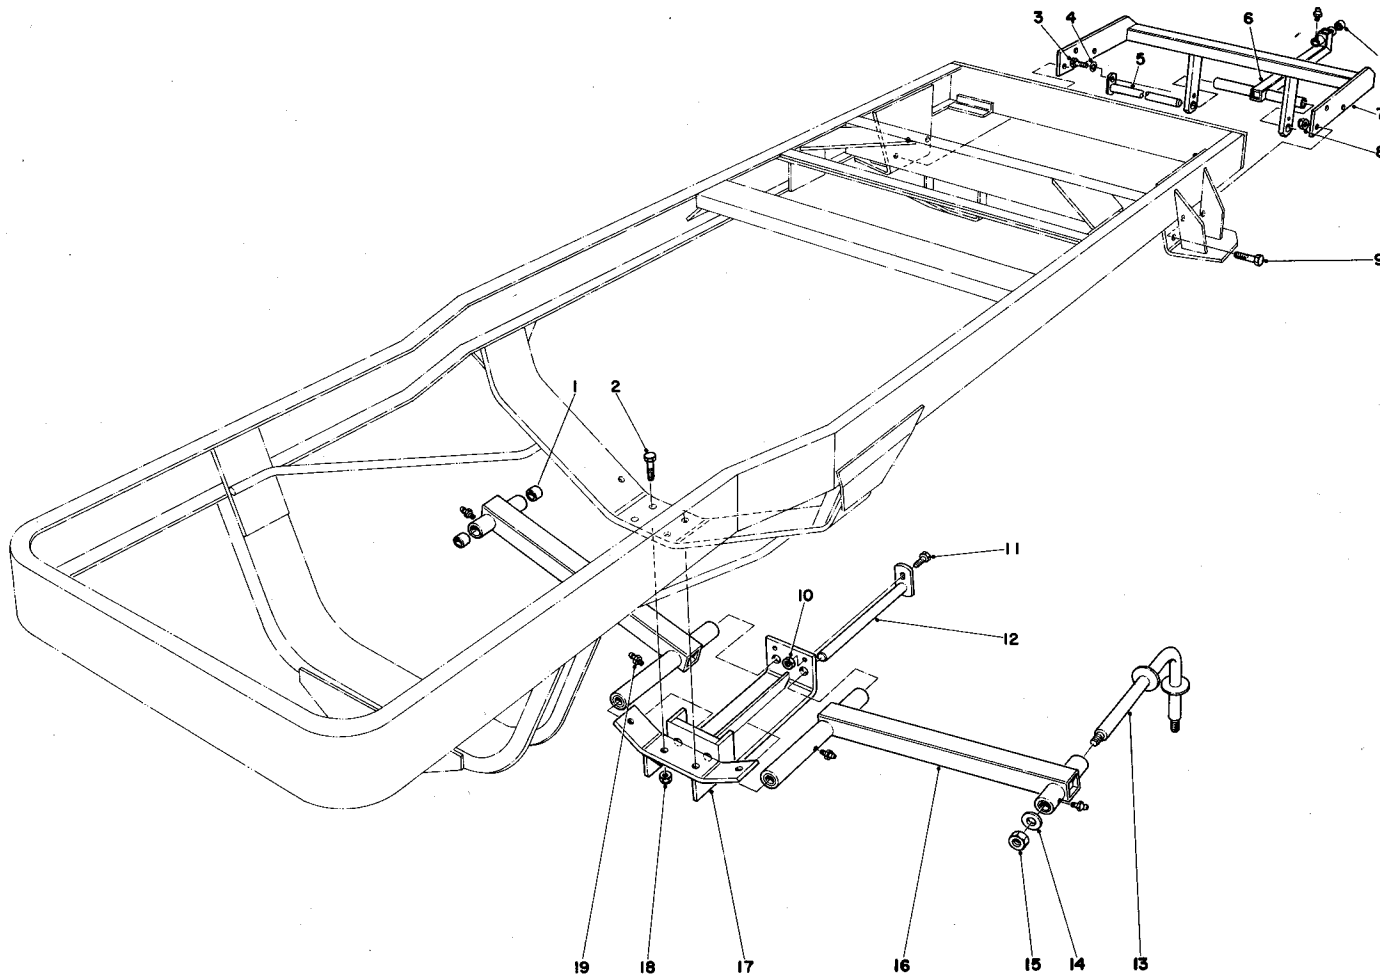

DRAWBAR ASSEMBLY No. 1, 2 & 3 POSITION Parkmaster 5 Unit

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	8-0390	Pin — Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2

Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	3296-50	Locknut	3
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

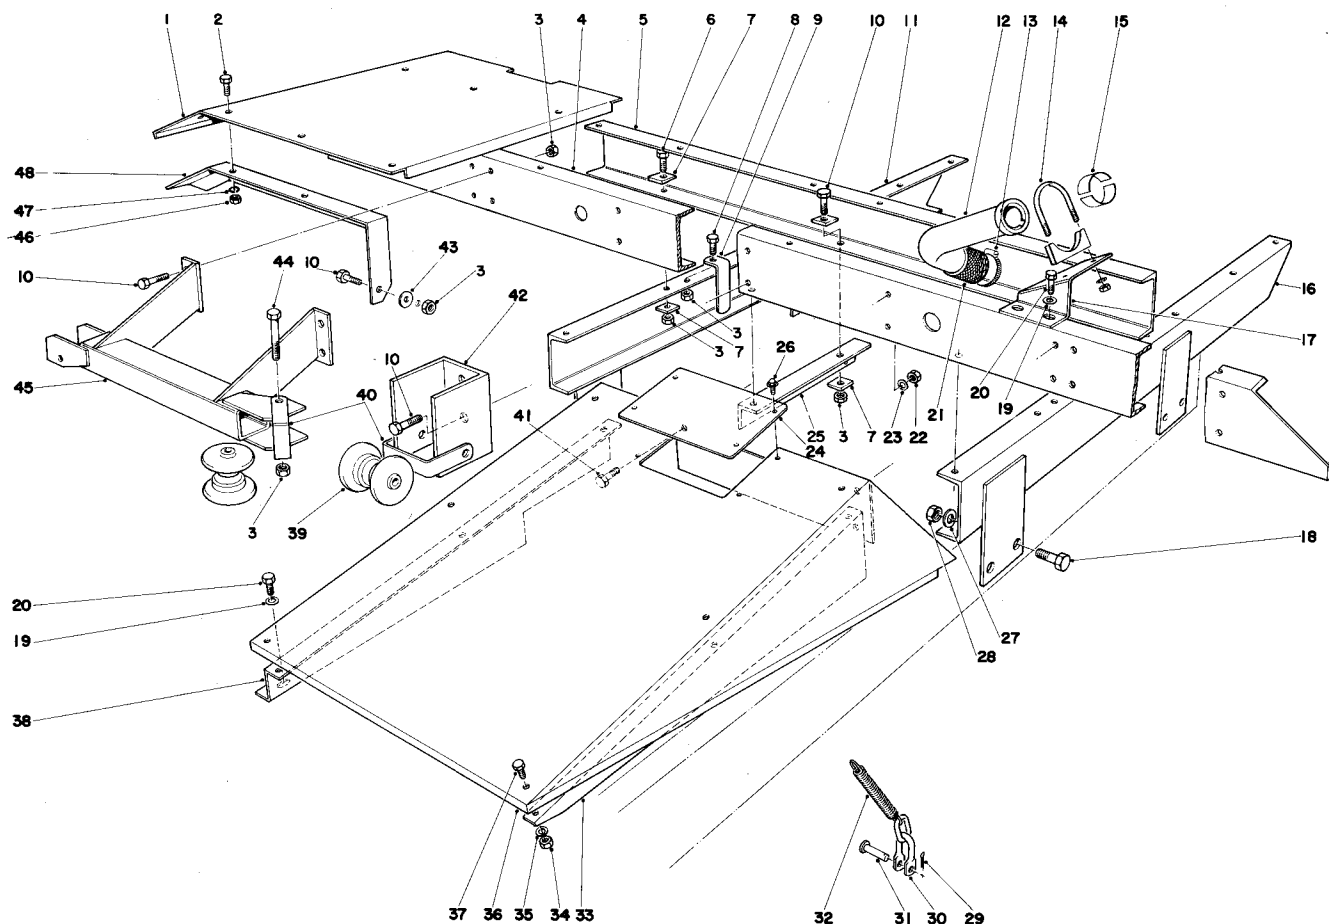


MAIN FRAME ASSEMBLY - Front Parkmaster 5

Ref. No.	Part No.	Description	No. Used
1	3-4596	Fender R.H.	1
*	3-4597	Fender L.H.	1
2	325-3	Capscrew	17
3	32146-13	Nut	30
4	26-9200	Front Cross Channel	1
5	26-9170	Front Cross Channel Rear	1
6	325-8	Capscrew	4
7	3290-216	Washer	10
8	325-5	Capscrew	2
9	3-0236	Hose Clip	2
10	325-6	Capscrew	4
11	3-4608	Side Channel Right	1
12	18-2410	Fill Tube	1
13	2412-42	Hose Clamp	2
14	18-8590	Clamp — Fuel Tank Ext.	1
15	18-8600	Saddle — Fuel Tank Ext.	2
16	3-4606	Side Channel Left	1
17	18-2420	Bracket Fill Tube	1
18	327-4	Capscrew	6
19	3256-26	Flat Washer	6
20	32104-6	Screw Self Tapping	6
21	18-2790	Ext. Hose Fill Tube	1
22	3217-7	Nut	6
23	3253-21	Lockwasher	6
24	21-5610	Cover	2
25	26-8580	Chain Support	1

Ref. No.	Part No.	Description	No. Used
26	32104-77	Self Tapping Screw	8
27	3253-8	Lockwasher	6
28	3217-11	Nut	6
29	3272-10	Cotter Pin	2
30	5-2942	Shackle	2
31	283-10	Pin	2
32	5-1706	Spring	2
33	5-2262	Fender Brace	2
34	3217-6	Nut	12
35	3253-4	Lockwasher	12
36	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
37	322-2	Capscrew	12
38	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1
39	3-2196	Sheave	5
40	3-0136	Chain Keeper	5
41	323-6	Capscrew	6
42	3-0112	Sheave Bracket	1
43	3-1615	Spacer	2
44	325-18	Capscrew	5
45	3-6680	Side Mower Tube R.H.	1
*	3-6690	Side Mower Tube L.H.	1
46	3217-9	Nut	14
47	3253-7	Lockwasher	14
48	3-6520	Brace	4


* Not Illustrated

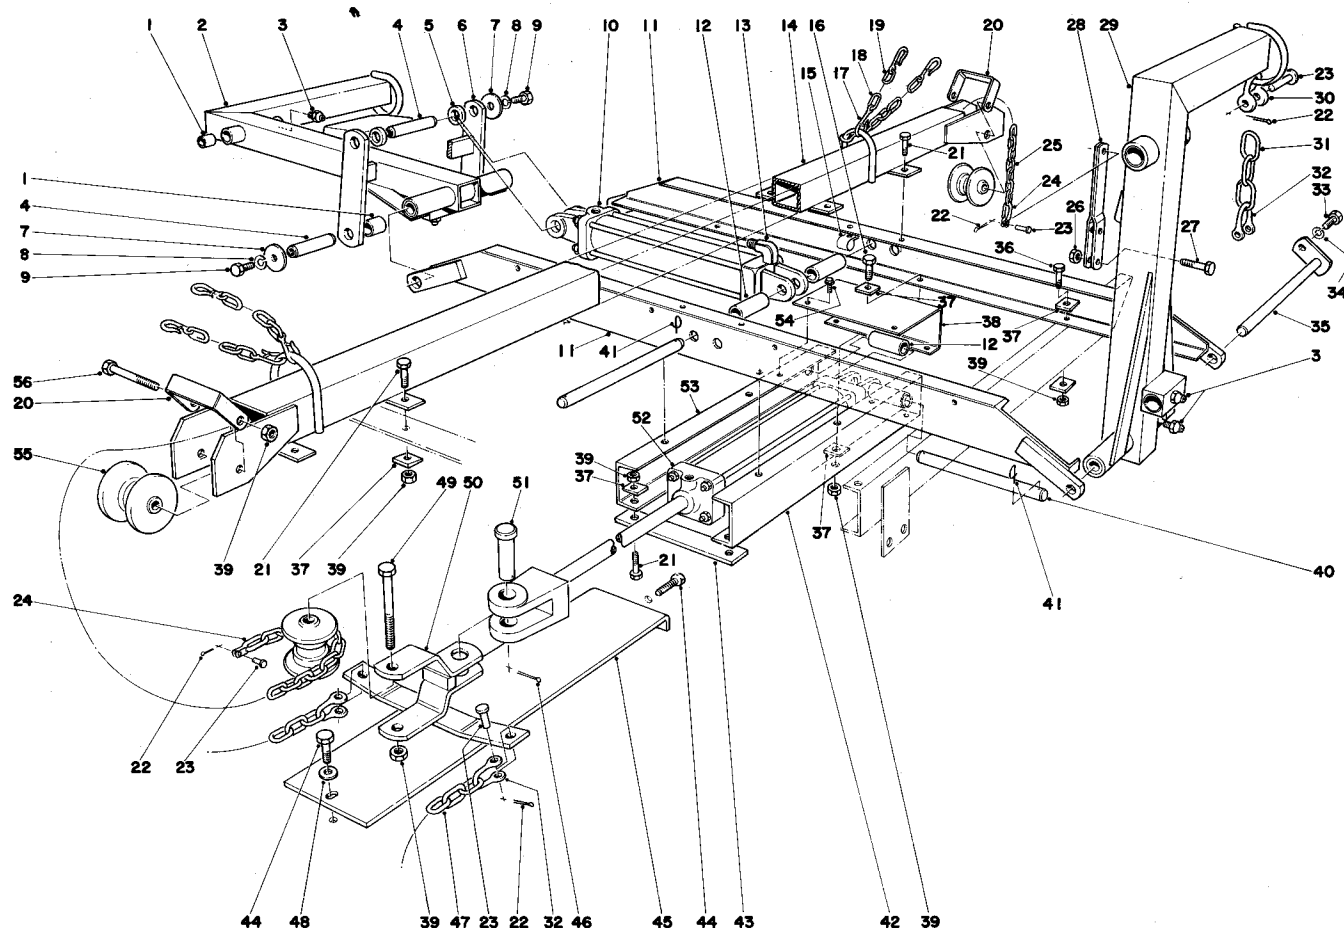

MAIN FRAME ASSEMBLY — Rear Parkmaster 5

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	10-1940	Arm Short	1
3	302-5	Grease Fitting	6
4	3-0128	Shaft	4
5	3256-30	Washer	4
6	23-2610	Link	2
7	5-1720	Washer	8
8	3253-5	Lockwasher	8
9	3211-4	Capscrew	8
10	22-7520	Hydraulic Cylinder	2
11	8-1280	Rear Cross Channel	2
12	20-4390	Tube Spacer	6
13	5-6560	Elbow	6
14	26-8460	Channel Brace	1
15	304-61	Hose Clamp	1
16	325-7	Capscrew	4
17	286-3	Safety Hook	4
18	287-2	End Lap Repair Link	4
19	3-1365	Chain	2
20	3-0136	Chain Keeper	2
21	325-6	Capscrew	10
22	3272-10	Cotter Pin	8
23	283-10	Pin	8



Ref. No.	Part No.	Description	No. Used
24	5-2942	Shackle	2
25	26-8540	Lift Chain	1
26	32146-2	Locknut	1
27	323-8	Capscrew	1
28	26-8370	Lift	1
29	10-1970	Arm Short	1
30	283-13	Chain Shackle	2
31	3-4636	Chain Lift Bail	2
32	8-0280	Shackle	4
33	322-3	Capscrew	2
34	3253-4	Lockwasher	2
35	8-0390	Pin Bail Lift	2
36	325-8	Capscrew	4
37	3290-216	Washer	18
38	26-8600	Cover Cylinder Mount	1
39	32146-13	Locknut	18
40	3-0144	Shaft	3
41	5-3126	Pin Spring	6
42	26-8490	Channel L.H.	1
43	26-9600	Cylinder Rest	1
44	32104-6	Screw Self Tapping	2
45	18-2620	Plate	1
46	3272-13	Cotter Pin	1

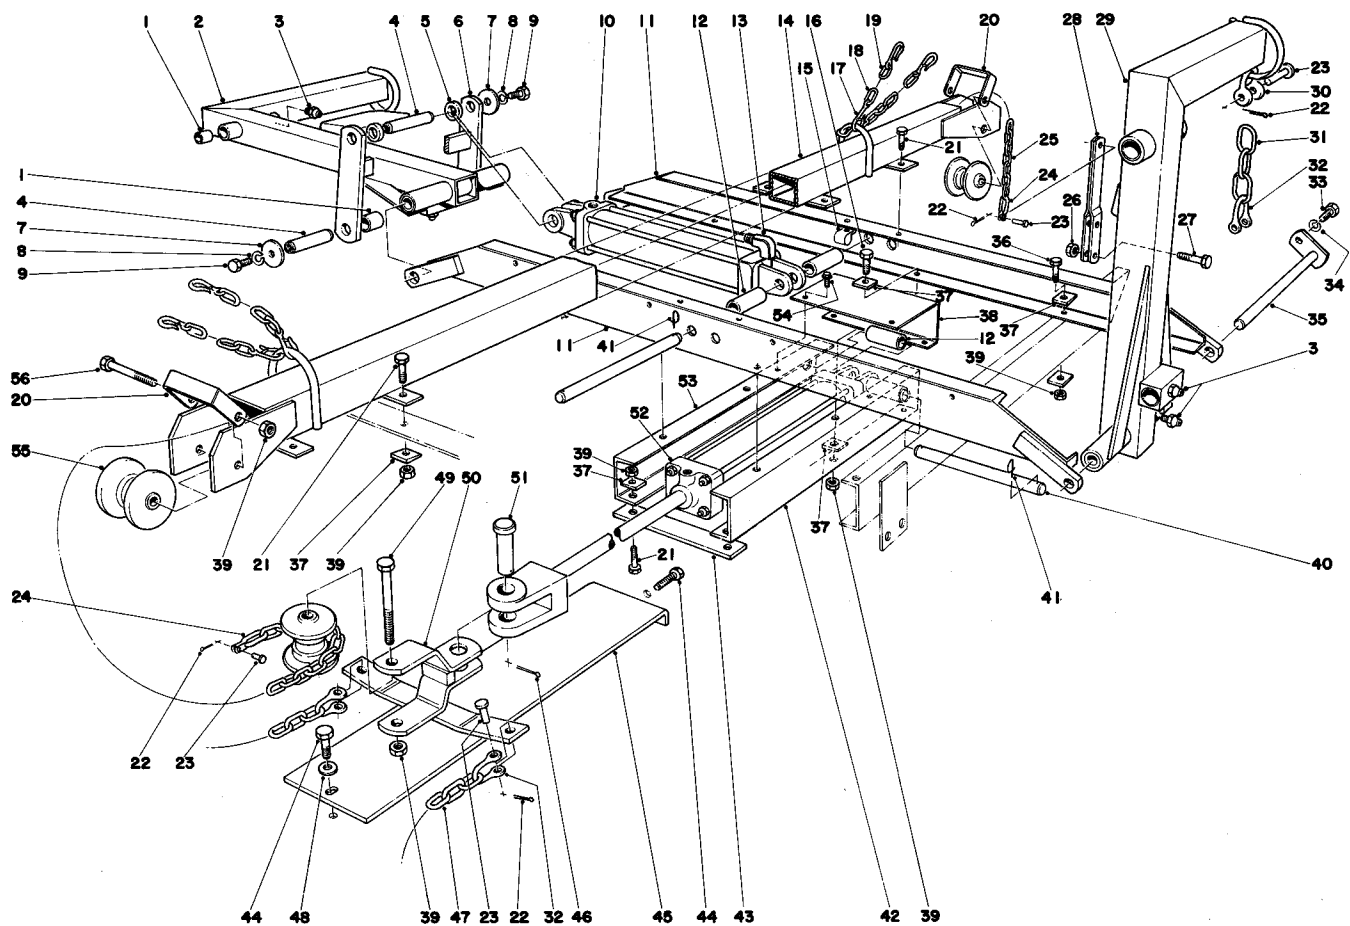

MAIN FRAME ASSEMBLY — Rear Parkmaster 5 (Continued)

Ref. No.	Part No.	Description	No. Used
47	26-8530	Lift Chain	2
48	3256-24	Flat Washer	1
49	325-14	Capscrew	1
50	26-8210	Pulley Support	1
51	26-8590	Pin Cylinder	1


Ref. No.	Part No.	Description	No. Used
52	22-7530	Cylinder	1
53	26-8500	Channel R.H.	1
54	32104-17	Hex Hd. Self Tapping Screw	4
55	3-2196	Sheave	3
56	325-18	Capscrew	2

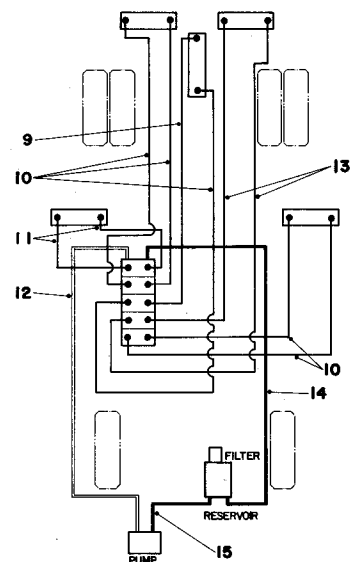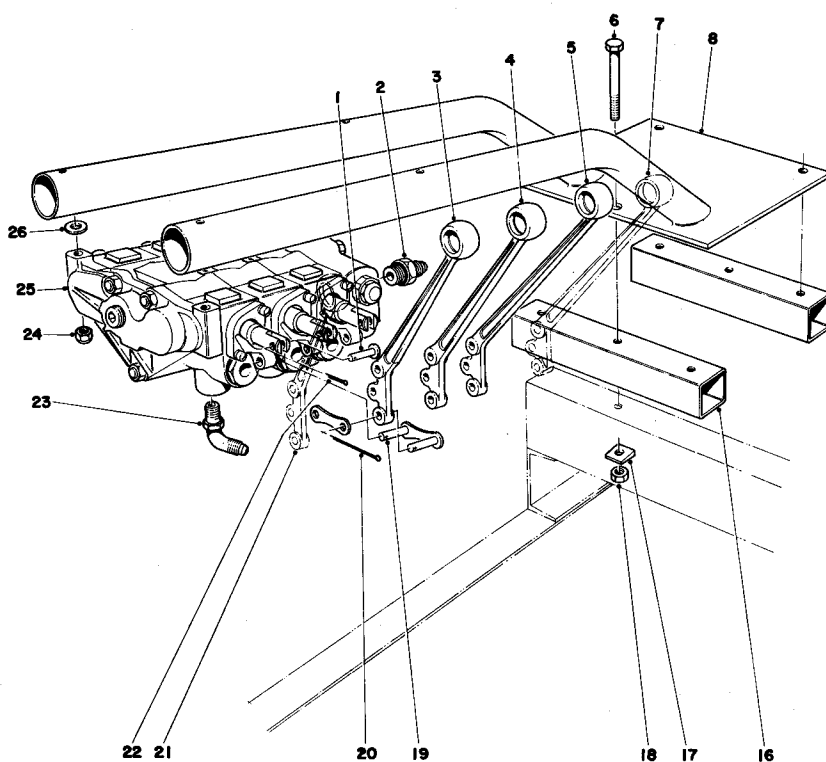

VALVE BANK — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	5
2	353-433	Straight Swivel — Female	2
3	5-7840	Modified Lever	1
4	353-323	Lever	1
5	5-7830	Modified Lever	1
6	325-13	Capscrew	3
7	5-7860	Modified Lever	1
8	28-9030	Valve Stand	1
9	26-8520	Hydraulic Hose	1
10	5-0200	Hydraulic Hose (77")	5
11	5-0220	Hydraulic Hose (46")	2
12	36-2480	High Pressure Hose (94")	1
13	5-0230	Hydraulic Hose (102")	2


Ref. No.	Part No.	Description	No. Used
14	28-9010	Hose Return (62")	1
15	18-2350	Suction Hose	1
16	3-0166	Spacer Tube	2
17	3290-216	Bevel Washer	3
18	32146-13	Locknut	3
19	353-319	Connecting Link	5
20	353-320	Cotter Pin	5
21	5-7850	Modified Lever	1
22	353-321	Cotter Pin	5
23	353-212	Male Elbow	10
24	3296-29	Locknut	3
25	26-0610	Complete Valve Bank Assy.	1
26	3256-23	Washer	3

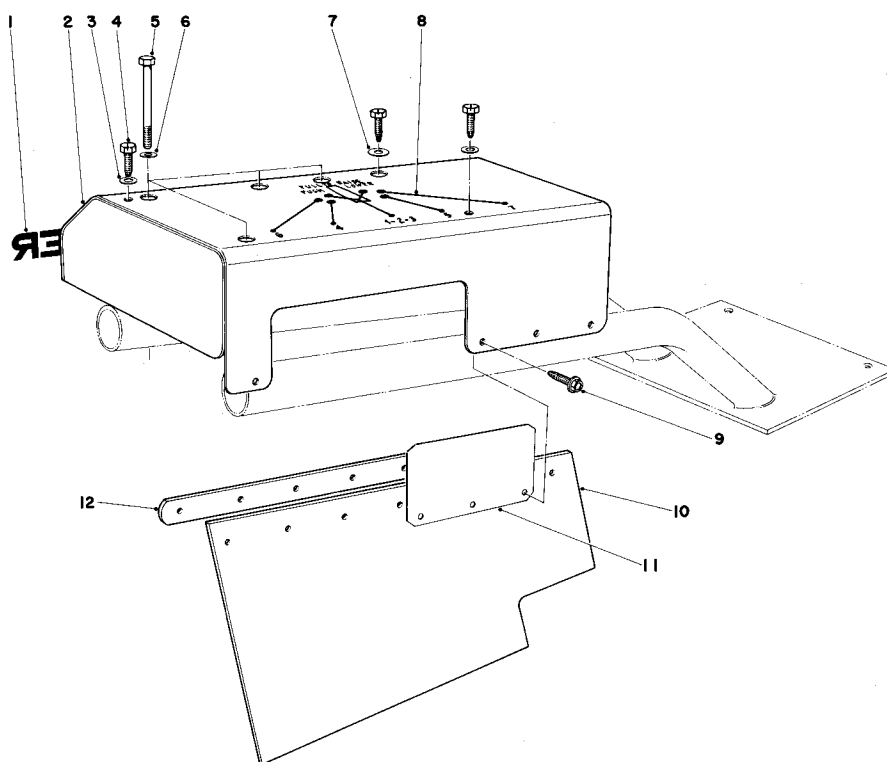

VALVE COVER & SHIELD ASSEMBLY — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	19-2270	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	2
4	32104-6	Screw Self Tapping	3
5	322-38	Capscrew	3
6	3256-23	Washer	3

Ref. No.	Part No.	Description	No. Used
7	3256-4	Washer	1
8	5-8080	Decal	1
9	12-3270	Screw Special	7
10	28-8980	Flap Valve	1
11	28-9000	Closure Cover	1
12	28-8990	Strap Support	1

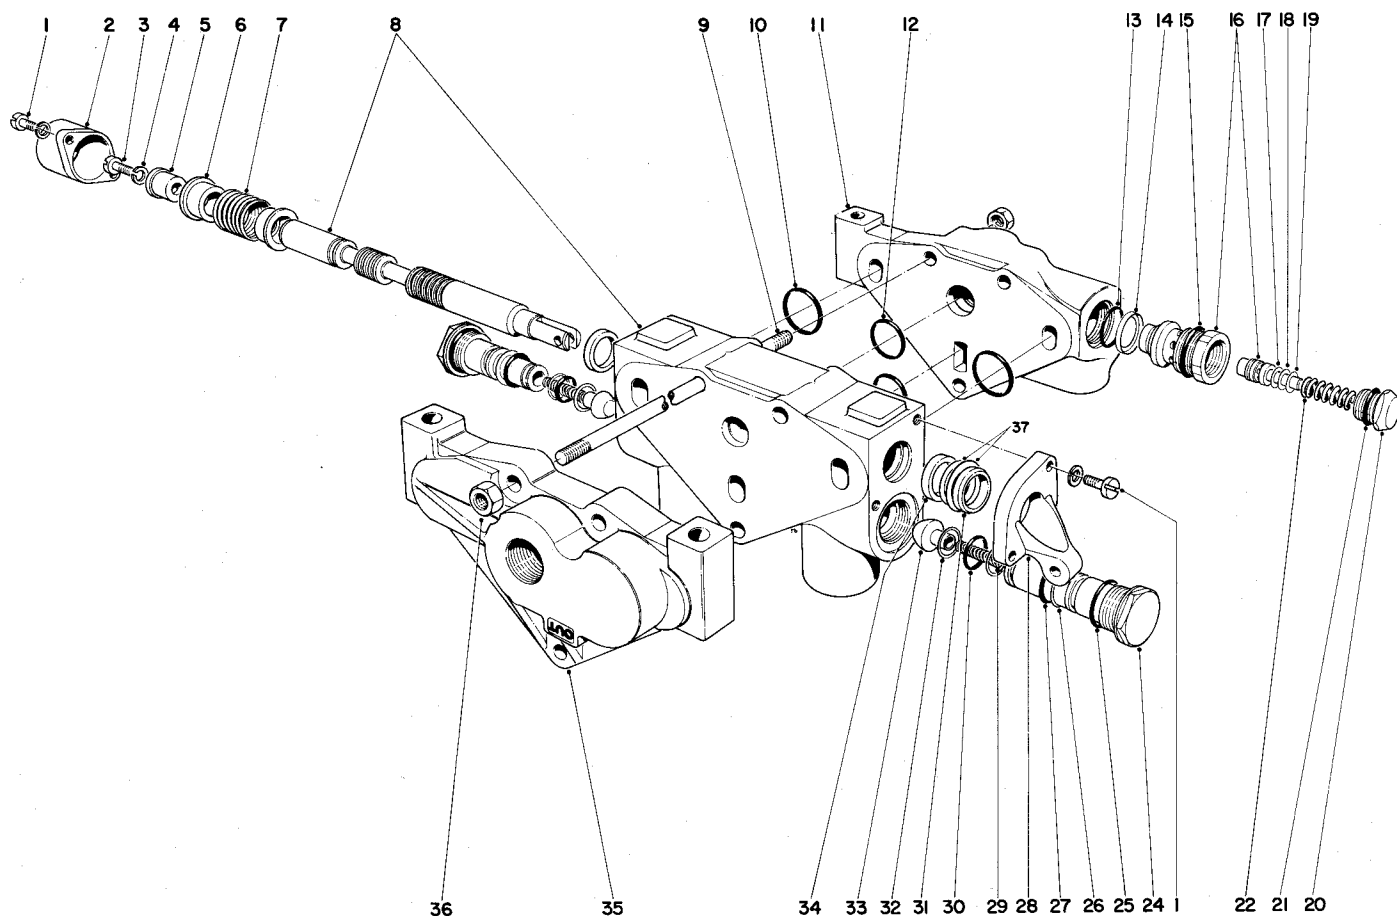


HYDRAULIC VALVE ASSEMBLY NO. 26-0610—Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Wash. Assy.	20
2	353-310	Bonnet	5
3	353-312	Screw	5
4	353-314	Washer	5
5	353-313	Spool Collar	5
6	353-311	Stop Collar	10
7	353-530	Spring	5
8	353-553	Housing & Spool Assy.	5
9	353-342	Stud	3
10	353-528	Section Seal Kit (Incl. Ref.#12)	12
11	353-337	End Cover	1
12		Sect. Seal, Pressure	12
13	353-332	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-555	Rel. Body & Rel. Poppet	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1

Ref. No.	Part No.	Description	No. Used
20	353-334	Cap, Relief Valve	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-333	Spring	1
24	353-307	Lift Check Plug	10
25	353-308	O-Ring Cylinder Port	10
26	353-306	Back-Up Washer Cover	10
27	353-305	O-Ring Check	10
28	353-324	Handle Bracket	5
29	353-304	Lift Check Spring	10
30	353-302	O-Ring, Check Plug Seal (Inner)	10
31	353-318	Secondary Spool Wiper Seal	5
32	353-303	Back-Up Washer (Inner)	20
33	353-301	Lift Check Poppet	10
34	353-570	Spool Seal	10
35	353-554	End Cover	1
36	353-343	Locknut	6
37	353-515	Seal Kit (Incl. Ref. #34)	10
*	26-0590	Valve Section Complete (Incl. Ref. Nos. 1-8 & 24-34)	5


*Not Illustrated

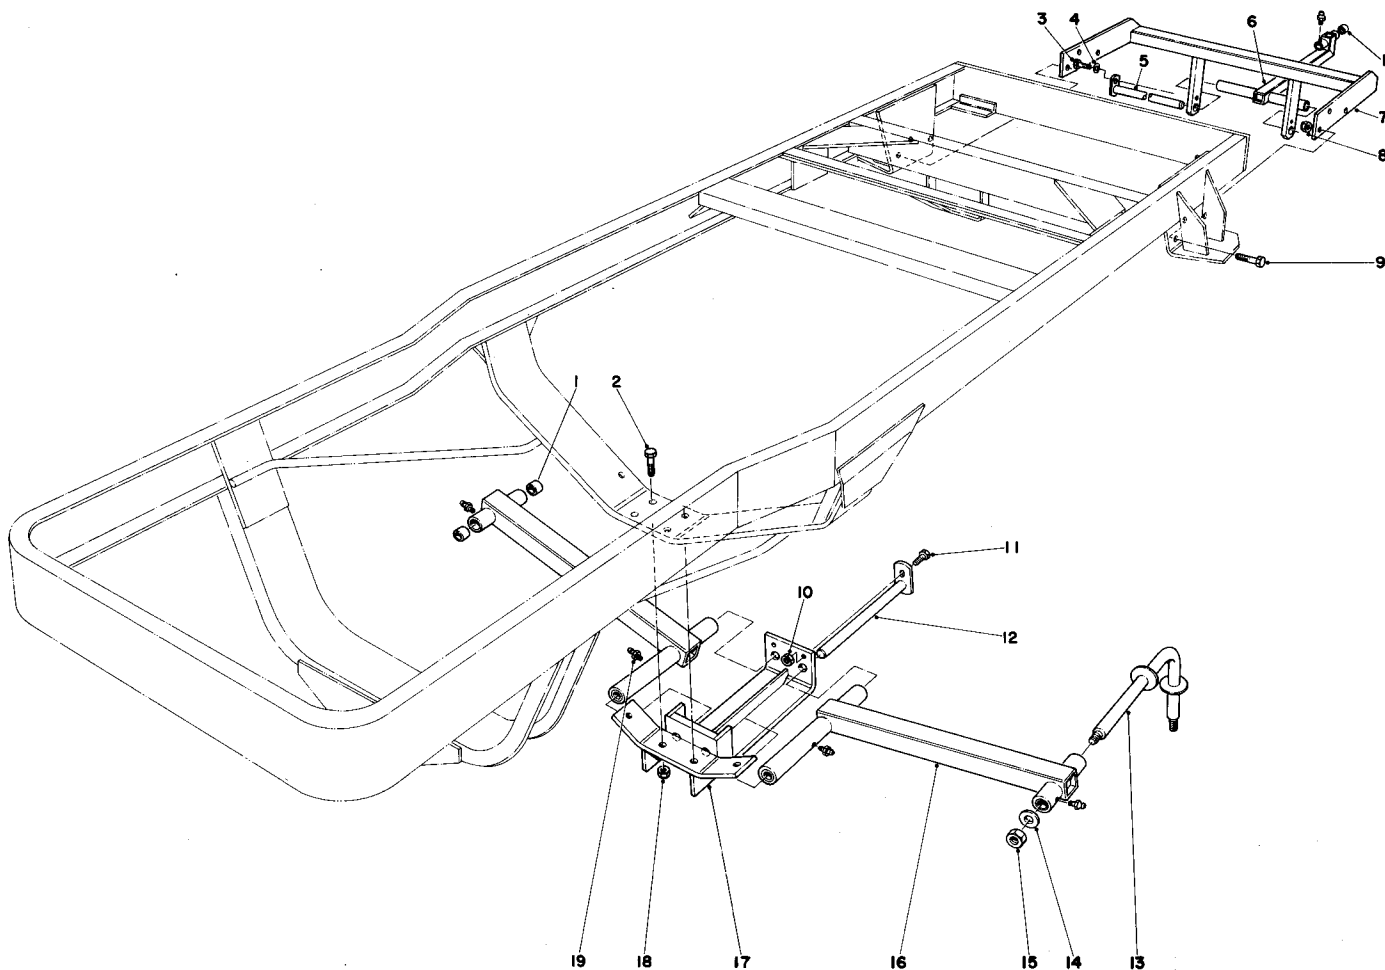

DRAWBAR ASSEMBLY No. 1, 2 & 3 POSITION Parkmaster 7 Unit

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	8-0390	Pin – Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2


Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	3296-50	Locknut	3
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

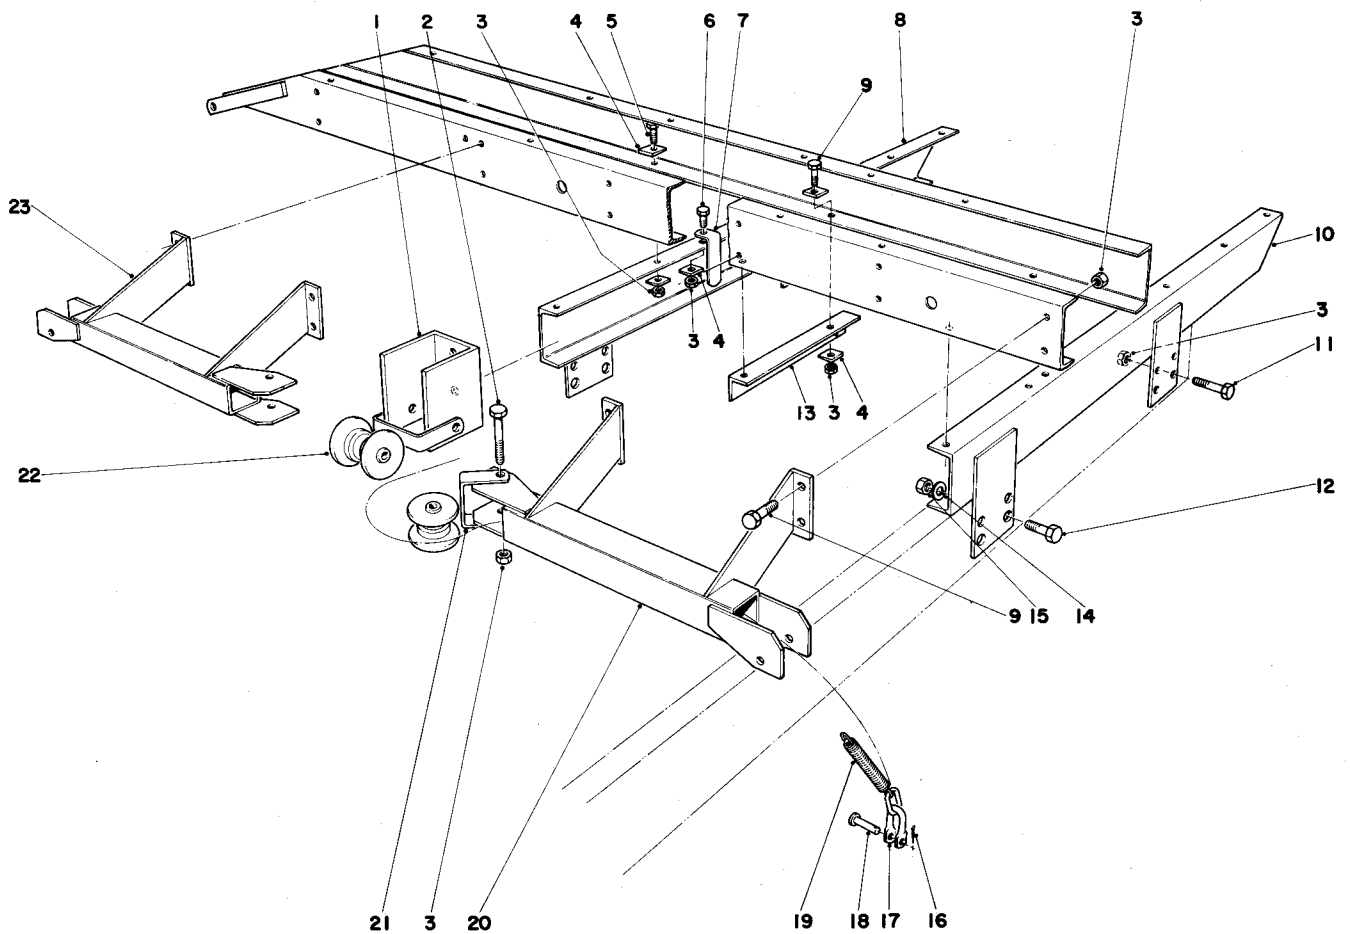

MAIN FRAME ASSEMBLY — Front Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	29
4	3290-216	Washer	12
5	325-8	Capscrew	4
6	325-5	Capscrew	2
7	3-0236	Hose Clip	2
8	3-4608	Side Channel Right	1
9	325-6	Capscrew	12
10	3-4606	Side Channel Lift	1
11	325-7	Capscrew	2
12	327-4	Capscrew	6

Ref. No.	Part No.	Description	No. Used
13	26-8580	Chain Support	1
14	3253-8	Lockwasher	6
15	3217-11	Nut	6
16	3272-10	Cotter Pin	2
17	5-2942	Shackle	2
18	283-10	Pin	2
19	5-1706	Spring	2
20	3-6690	Side Mower Tube L.H.	1
21	3-0136	Chain Keeper	5
22	3-2196	Sheave	5
23	3-6680	Side Mower Tube R.H.	1

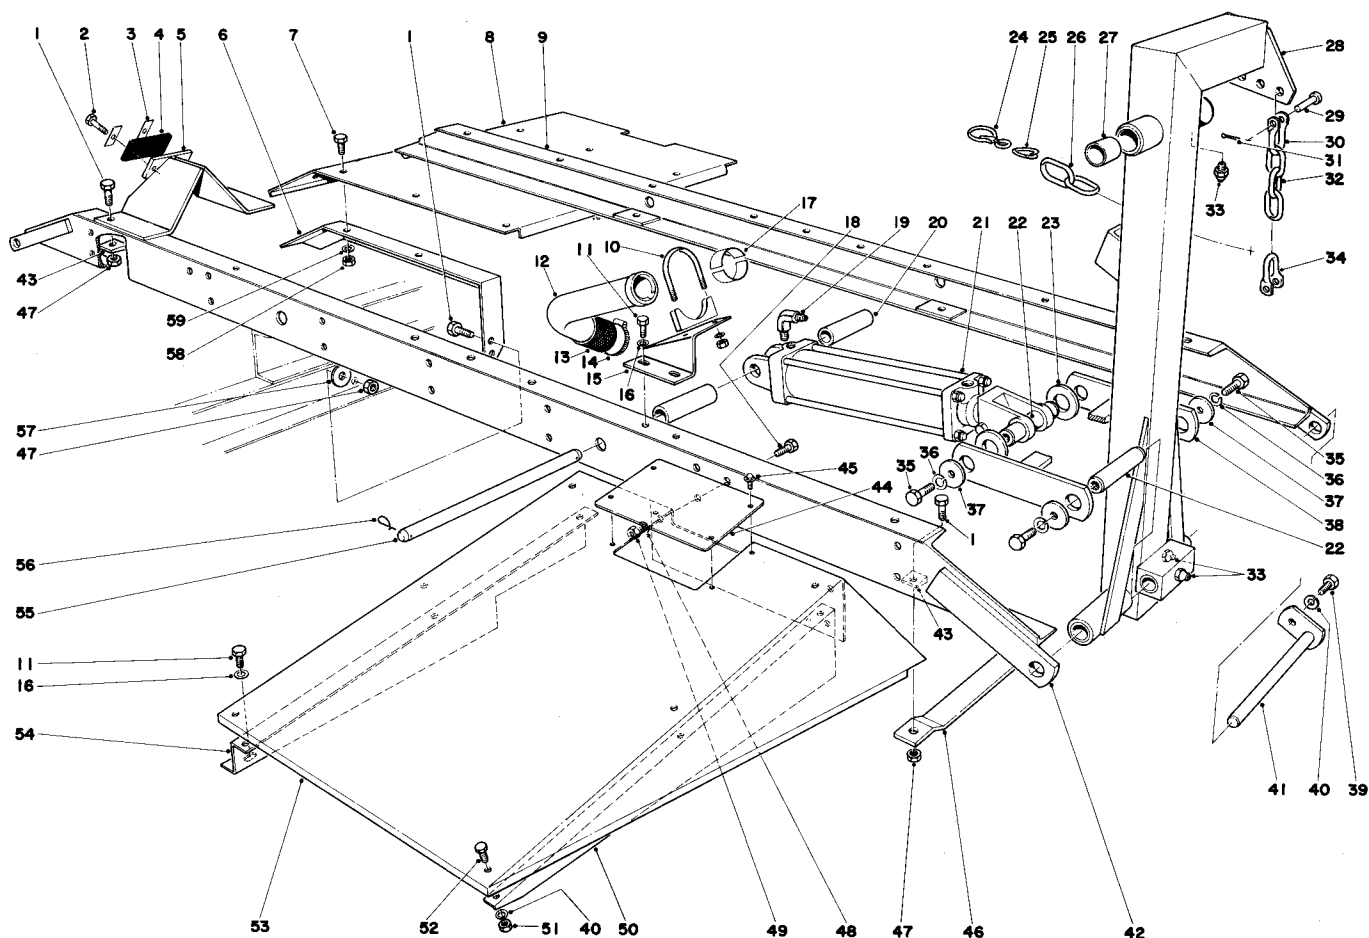


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	18
2	3290-319	Machine Screw	4
3	11-5270	Washer Bumper	4
4	11-4590	Bumper Pad	2
5	11-5630	Stop Arm	2
6	3-6520	Bracket	4
7	325-3	Capscrew	16
8	3-4596	Mudguard R.H.	1
*	3-4597	Mudguard L.H.	1
9	26-9220	Front Cross Channel Rear	1
10	18-8590	Clamp	1
11	32104-6	Self Tapping Screw	6
12	18-2410	Fill Tube	1
13	18-2790	Extension Hose	1
14	2412-42	Hose Clamp	2
15	18-2420	Fill Tube Bracket	1
16	3256-24	Lockwasher	6
17	18-8600	Saddle	2
18	323-6	Capscrew	6
19	5-6560	Elbow (78)	4
20	20-4390	Tube Spacer	4
21	22-7530	Cylinder 12"	2
22	3-0128	Shaft	4

Ref. No.	Part No.	Description	No. Used
23	3256-30	Washer	4
24	286-3	Snap Hook	4
25	287-2	Cold Shut	4
26	3-1365	Safety Chain (15 Links)	2
27	3-0348	Bushing	16
28	19-6130	Lift Arm L.H. No. 6 (Incl. Ref. No. 27)	1
*	19-6120	Lift Arm R.H. No. 7 (Incl. Ref. No. 27)	1
29	283-10	Pin	4
30	5-2942	Shackle	2
31	3272-10	Cotter Pin	4
32	3-4636	Lift Chain (7 Links)	2
33	302-5	Grease Fitting	6
34	8-0280	Shackle	2
35	3211-4	Screw	8
36	3253-5	Lockwasher	8
37	5-1720	Washer	8
38	23-2610	Link	2
39	322-3	Capscrew	2
40	3253-4	Lockwasher	14
41	8-0390	Bail Lift Pin	2
42	26-9180	Front Cross Channel Front	1

*Not Illustrated

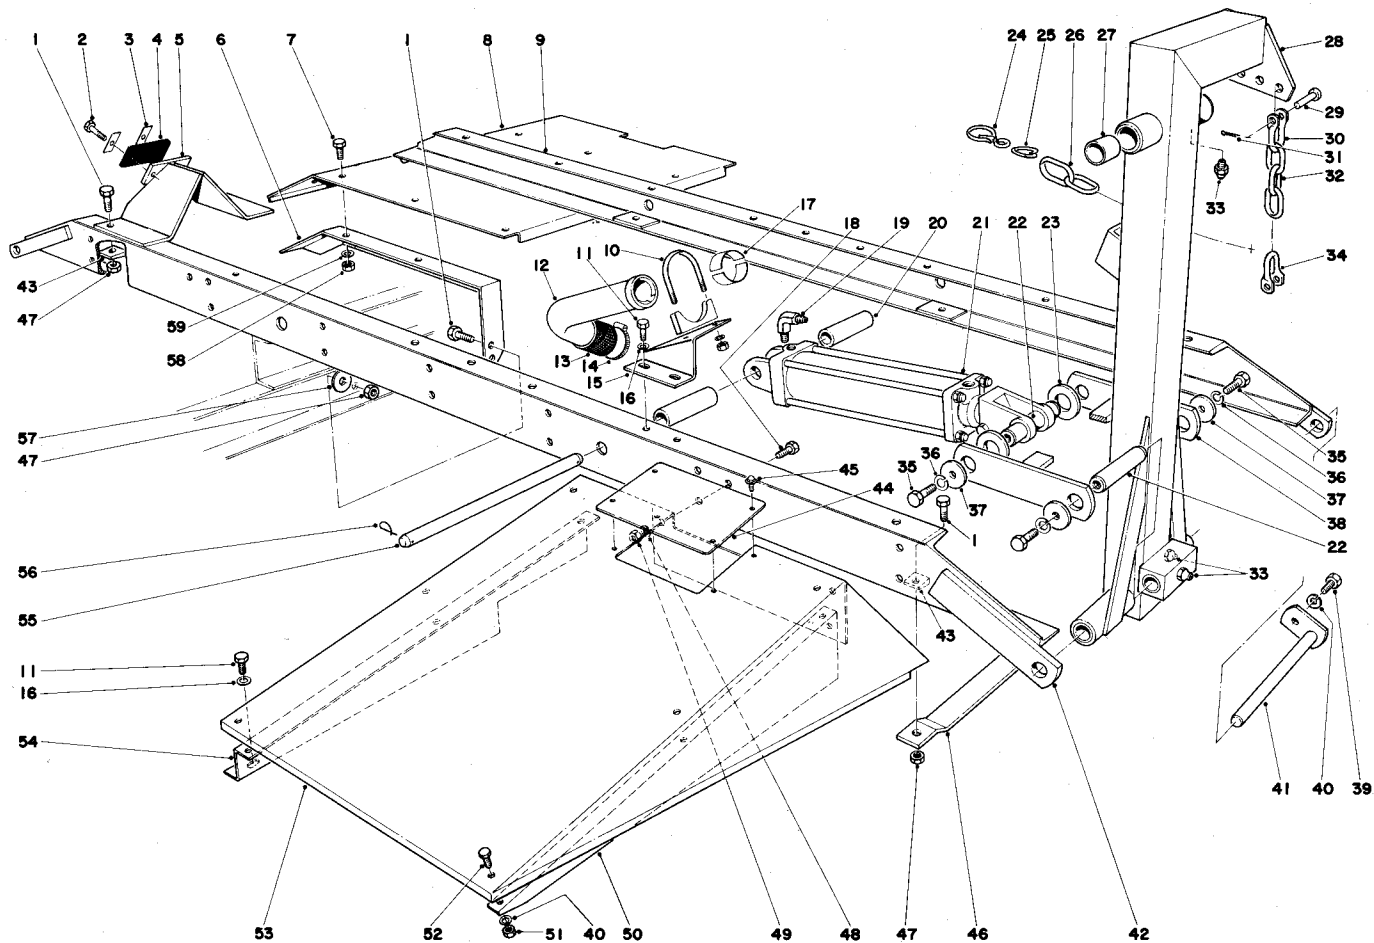


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
43	3290-216	Bevel Washer	8
44	21-5610	Cover	2
45	32104-77	Self Tapping Screw	8
46	20-4440	Cylinder Rest	2
47	32146-13	Locknut	10
48	3253-21	Lockwasher	6
49	3217-7	Nut	6
50	5-2262	Fender Brace	2
51	3217-6	Nut	12
52	322-2	Capscrew	12

Ref. No.	Part No.	Description	No. Used
53	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
54	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1
55	3-0144	Shaft	2
56	5-3126	Spring Pin	4
57	3-1615	Spacer	2
58	3217-9	Nut	16
59	3253-7	Lockwasher	16


*Not Illustrated

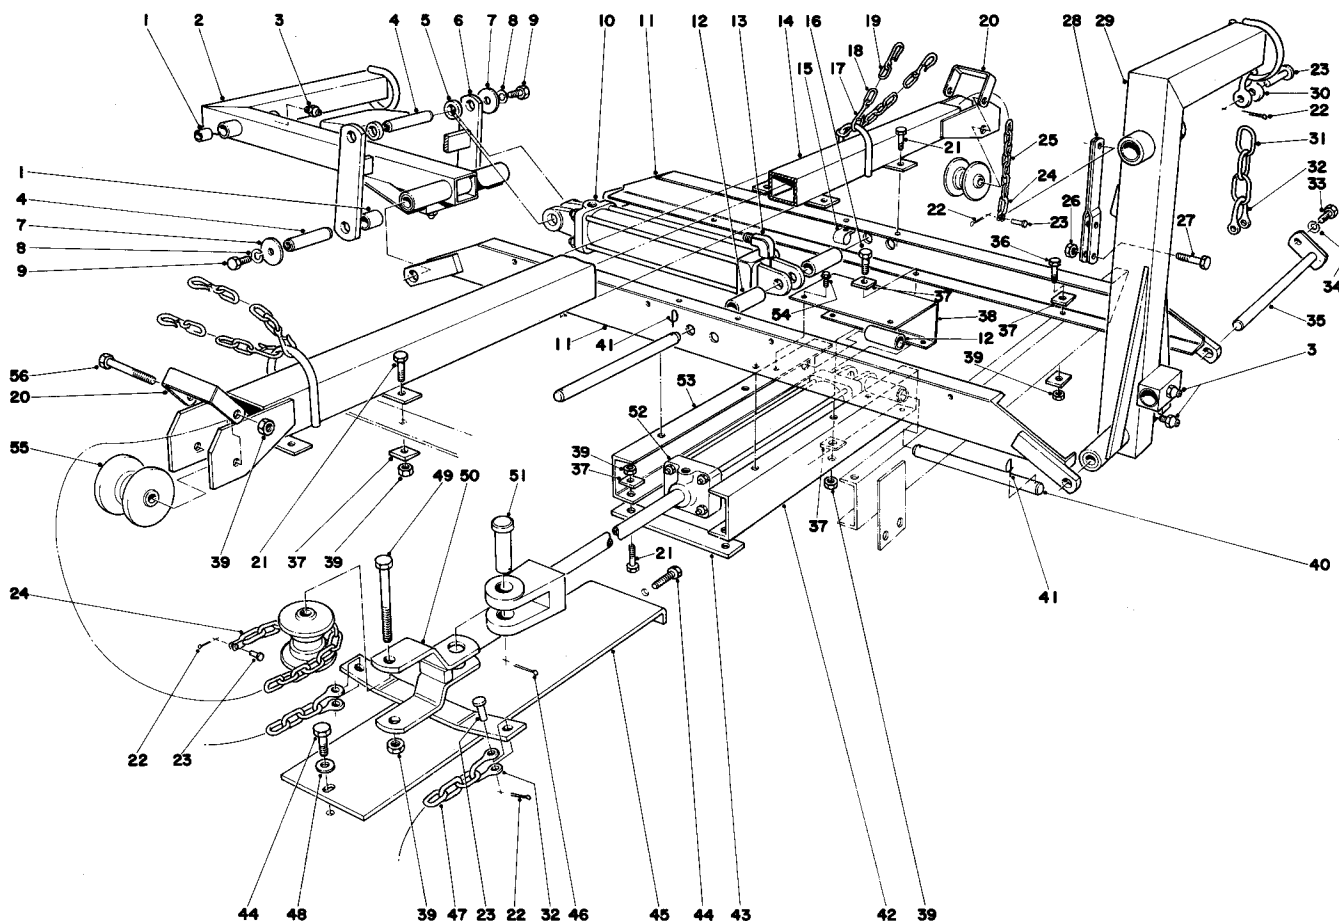

MAIN FRAME ASSEMBLY — Rear Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	10-1940	Arm Short	1
3	302-5	Grease Fitting	6
4	3-0128	Shaft	4
5	3256-30	Washer	4
6	23-2610	Link	2
7	5-1720	Washer	8
8	3253-5	Lockwasher	8
9	3211-4	Capscrew	8
10	22-7520	Hydraulic Cylinder	2
11	8-1280	Rear Cross Channel	2
12	20-4390	Tube Spacer	6
13	5-6560	Elbow	6
14	26-8460	Channel Brace	1
15	304-61	Hose Clamp	1
16	325-7	Capscrew	4
17	286-3	Safety Hook	4
18	287-2	End Lap Repair Link	4
19	3-1365	Chain	2
20	3-0136	Chain Keeper	2
21	325-6	Capscrew	10
22	3272-10	Cotter Pin	8
23	283-10	Pin	8


Ref. No.	Part No.	Description	No. Used
24	5-2942	Shackle	2
25	26-8540	Lift Chain	1
26	32146-2	Locknut	1
27	323-8	Capscrew	1
28	26-8370	Lift	1
29	10-1970	Arm Short	1
30	283-13	Chain Shackle	2
31	3-4636	Chain Lift Bail	2
32	8-0280	Shackle	4
33	322-3	Capscrew	2
34	3253-4	Lockwasher	2
35	8-0390	Pin Bail Lift	2
36	325-8	Capscrew	4
37	3290-216	Washer	18
38	26-8600	Cover Cylinder Mount	1
39	32146-13	Locknut	18
40	3-0144	Shaft	3
41	5-3126	Pin Spring	6
42	26-8490	Channel L.H.	1
43	26-9690	Cylinder Rest	1
44	32104-6	Screw Self Tapping	2
45	18-2620	Plate	1
46	3272-13	Cotter Pin	1

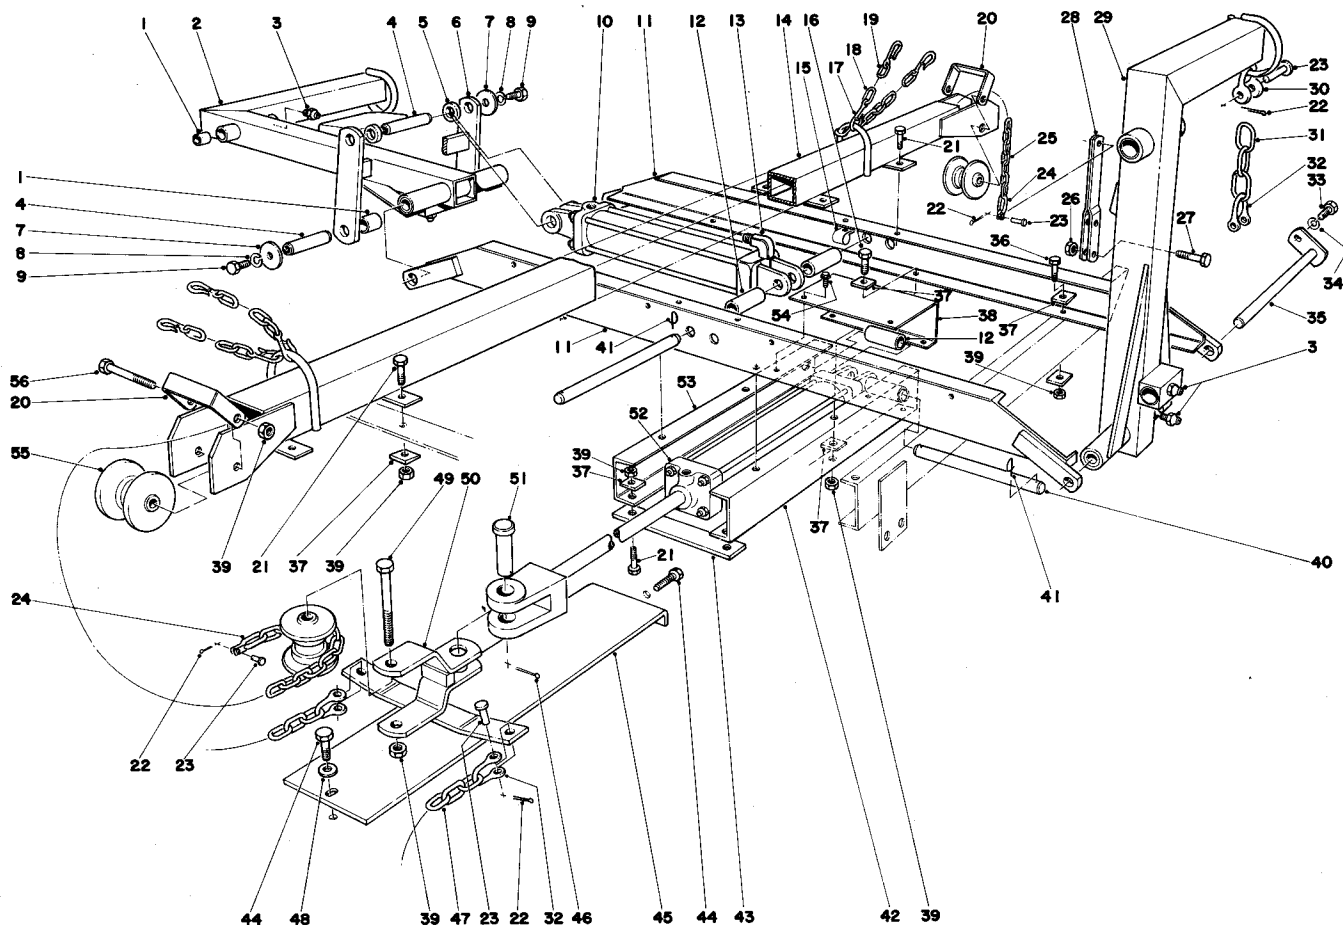

MAIN FRAME ASSEMBLY — Rear Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
47	26-8530	Lift Chain	2
48	3256-24	Flat Washer	1
49	325-14	Capscrew	1
50	26-8210	Pulley Support	1
51	26-8590	Pin Cylinder	1


Ref. No.	Part No.	Description	No. Used
52	22-7530	Cylinder	1
53	26-8500	Channel R.H.	1
54	32104-17	Hex Hd. Self Tapping Screw	4
55	3-2196	Sheave	3
56	325-18	Capscrew	2

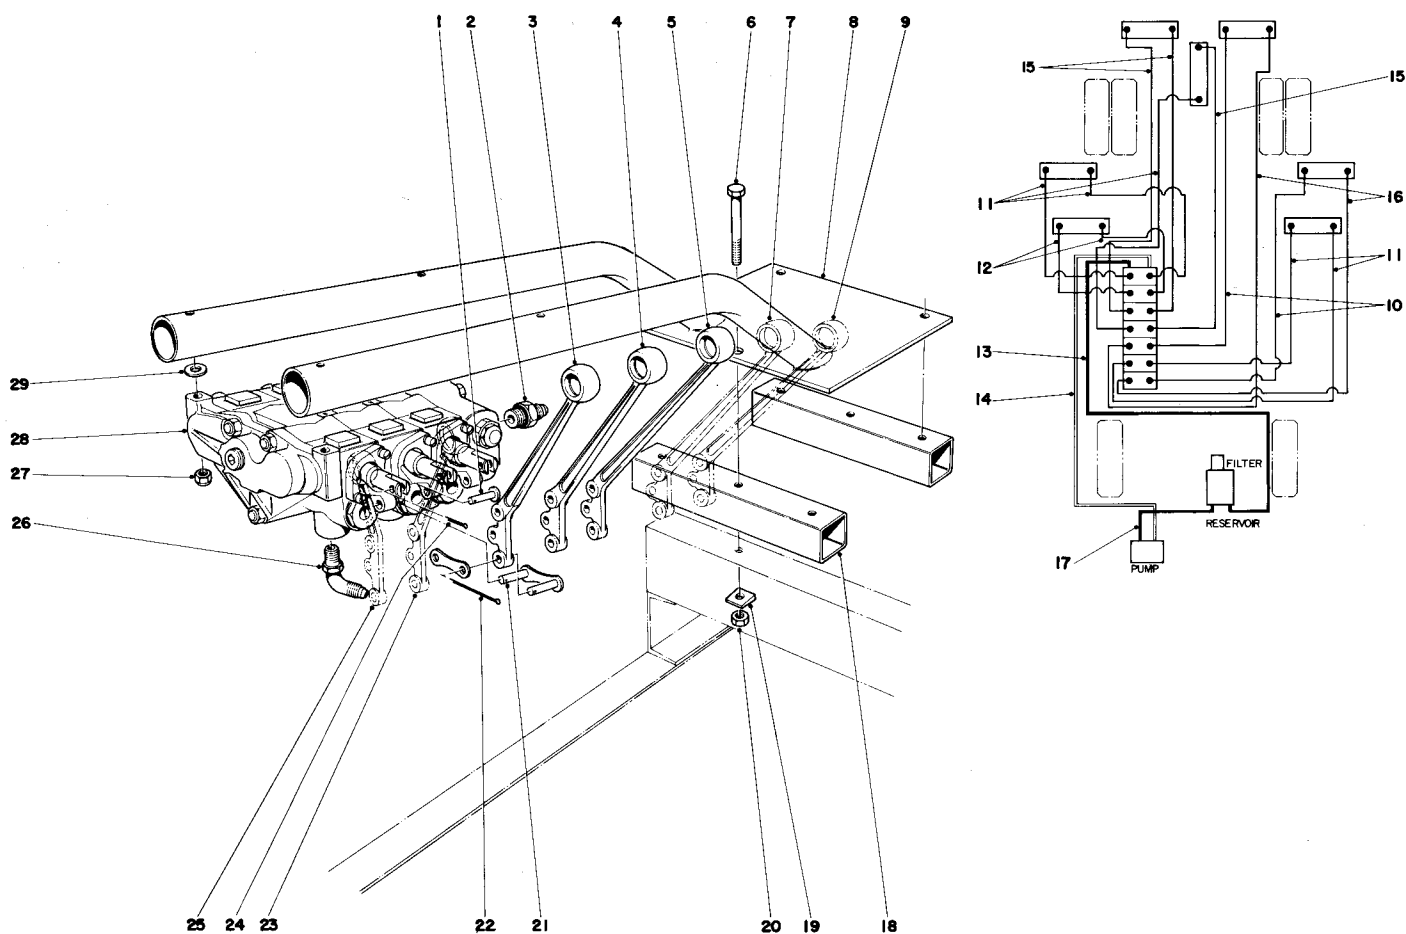

VALVE BANK — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	353-322	Pin	7
2	353-433	Straight Swivel	2
3	5-7840	Lever Modified	1
4	353-323	Lever	1
5	5-7830	Lever Modified	1
6	325-13	Capscrew	3
7	5-7860	Lever Modified	1
8	28-9030	Valve Stand	1
9	11-4780	Lever Modified	1
10	5-0230	Hydraulic Hose 102"	2
11	5-0200	Hydraulic Hose 77"	5
12	5-0220	Hydraulic Hose 46"	2
13	28-9010	Low Pressure Hose (62")	1
14	36-2480	High Pressure Hose (94")	1
15	26-8520	Hydraulic Hose (84")	3


Ref. No.	Part No.	Description	No. Used
16	5-0210	Hydraulic Hose 116"	2
17	18-2350	Suction Hose	1
18	3-0166	Tube Spacer	2
19	3290-216	Bevel Washer	3
20	32146-13	Locknut	3
21	353-319	Connecting Link	7
22	353-320	Cotter Pin	7
23	5-7850	Modified Lever	1
24	353-321	Cotter Pin	7
25	11-4790	Modified Lever	1
26	353-212	Male Elbow	14
27	32146-5	Locknut	3
28	26-0620	Complete Valve Bank Assembly	1
29	3256-23	Washer	3

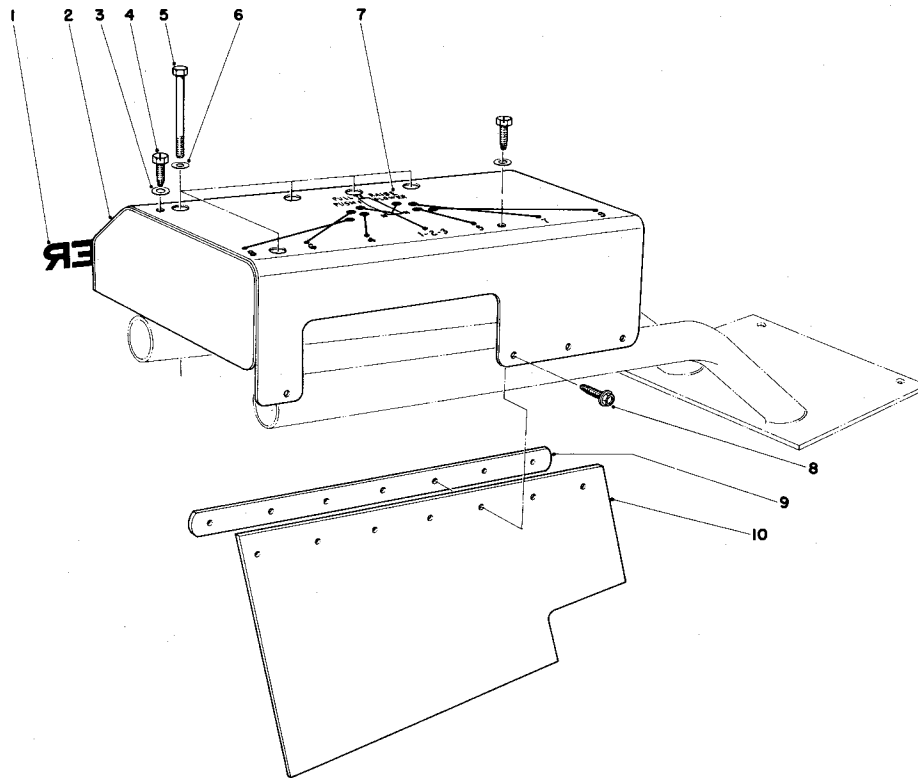

VALVE COVER & SHIELD ASSEMBLY — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	19-2280	Decal	1
2	28-8960	Valve Cover	1
3	3256-24	Washer	1
4	32104-6	Self Tapping Screw	2
5	322-38	Capscrew	3

Ref. No.	Part No.	Description	No. Used
6	3256-23	Washer	3
7	11-4770	Decal	1
8	12-3270	Screw Special	7
9	28-8990	Strap Support	1
10	28-8980	Flap Valve	1

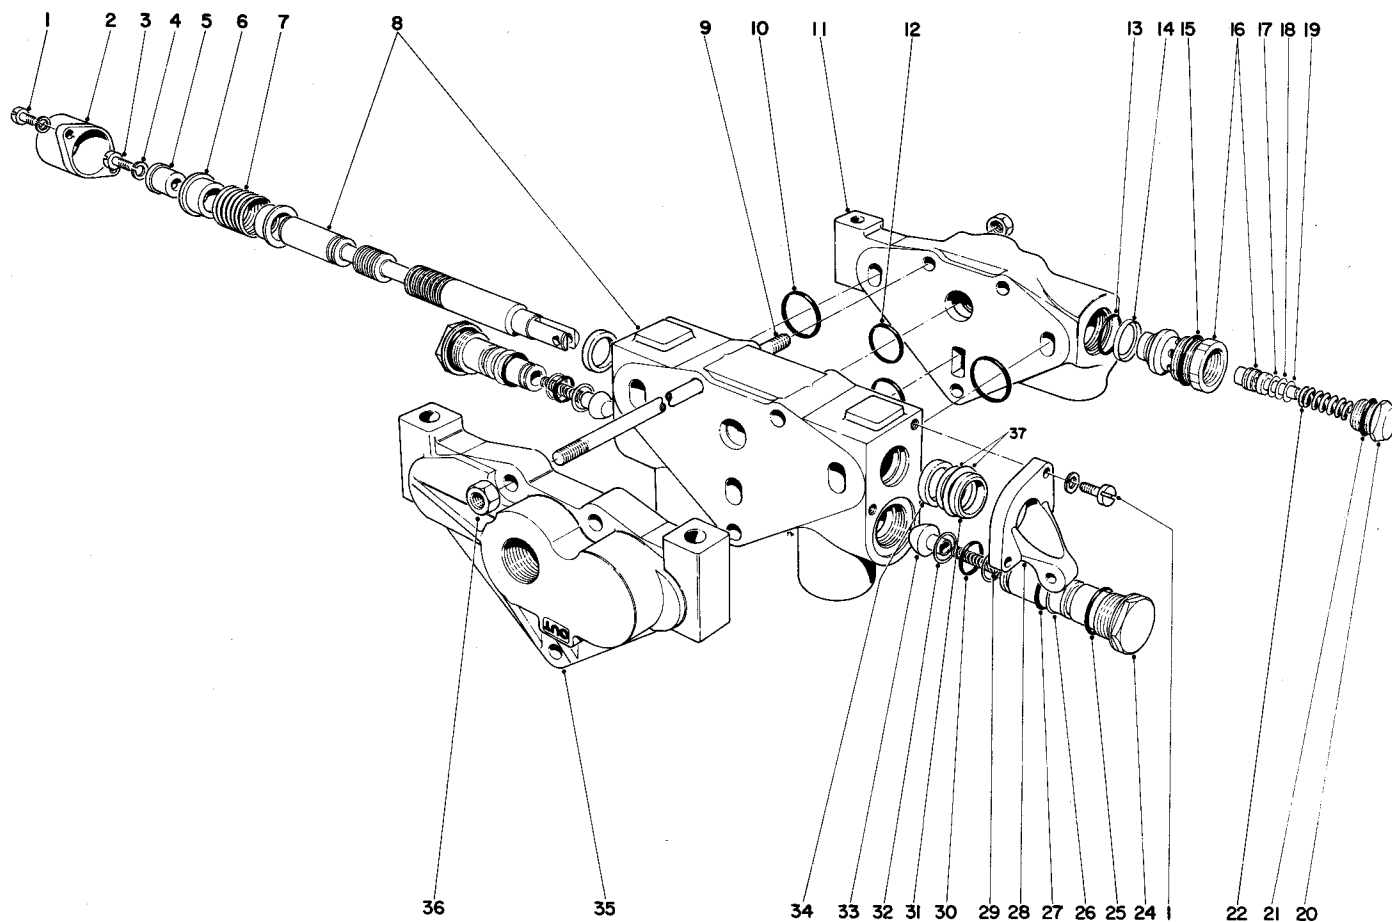


HYDRAULIC VALVE ASSEMBLY NO. 26-0620—Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Washer Assy.	28
2	353-310	Bonnet	7
3	353-312	Screw	7
4	353-314	Washer	7
5	353-313	Spool Collar	7
6	353-311	Stop Collar	14
7	353-530	Spring	7
8	353-553	Housing & Spool Assy.	7
9	353-395	Stud	3
10	353-528	Section Seal Kit (Incl. Ref.#12)	16
11	353-337	End Cover	1
12		Section Seal, Pressure	16
13	353-332	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-555	Rel. Body & Rel. Poppet Assy.	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1

Ref. No.	Part No.	Description	No. Used
20	353-334	Cap, Relief Valve	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-398	Spring	1
24	353-307	Lift Check Plug	14
25	353-308	O-Ring Cylinder Port	14
26	353-306	Back-Up Washer Cover	14
27	353-305	O-Ring Check	14
28	353-324	Handle Bracket	7
29	353-304	Lift Check Spring	14
30	353-302	O-Ring, Check Plug Seal (Inner)	14
31	353-318	Secondary Spool Wiper Seal	7
32	353-303	Back-Up Washer (Inner)	28
33	353-301	Lift Check Poppet	14
34	353-570	Spool Seal	14
35	353-554	End Cover	1
36	353-343	Locknut	6
37	353-515	Seal Kit (Incl. Ref. #34)	14
*	26-0590	Valve Section Complete (Incl. Ref. Nos. 1-8 & 24-34)	7


*Not Illustrated

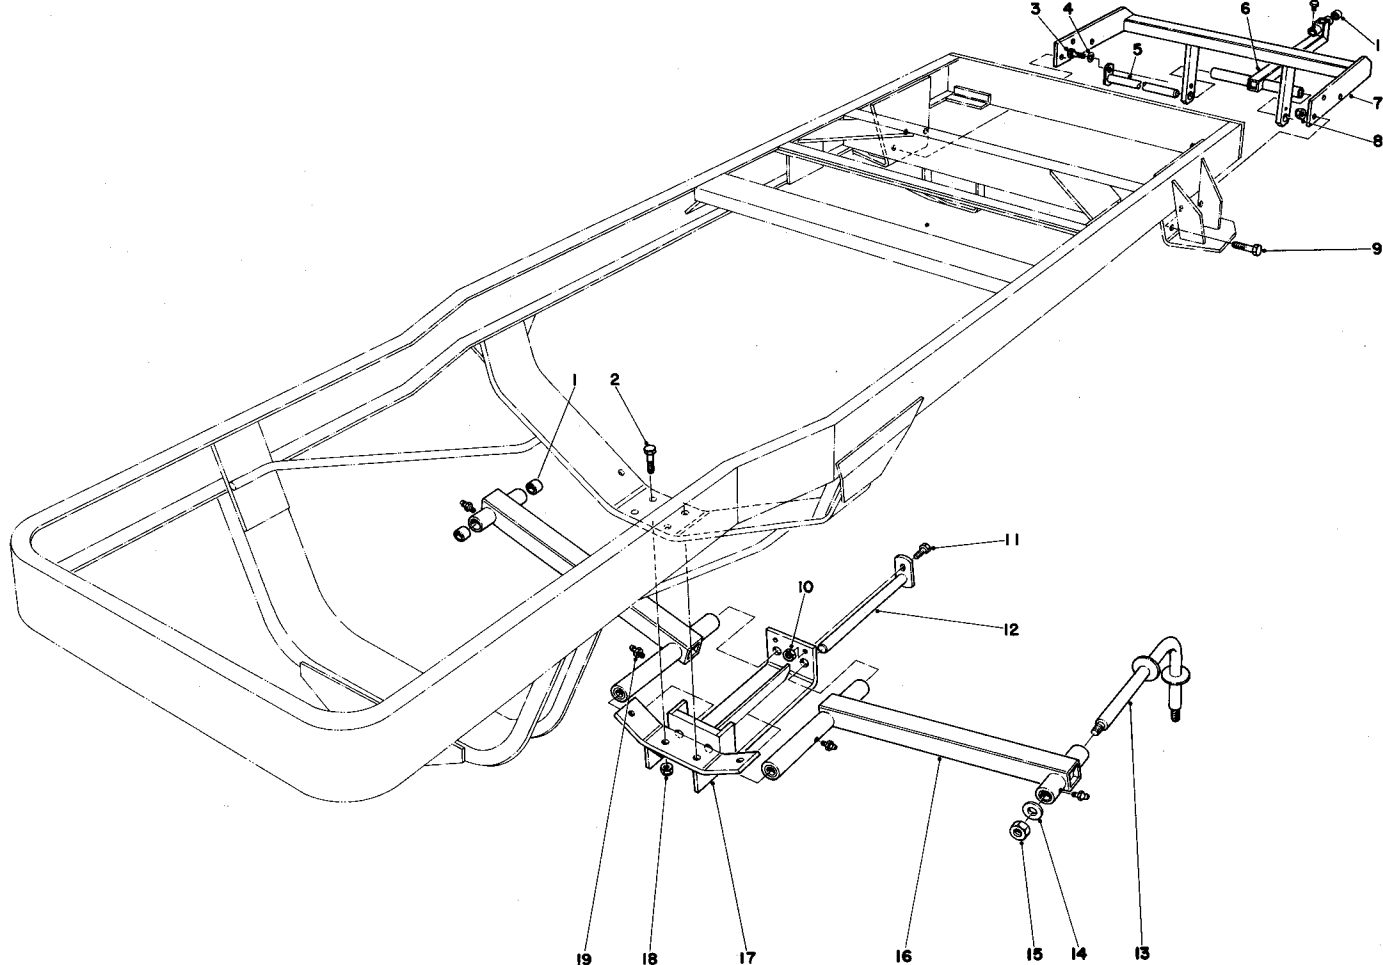

DRAWBAR ASSEMBLY No. 1, 2 & 3 POSITION Parkmaster 9 Unit

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	18
2	327-22	Capscrew	4
3	322-3	Capscrew	1
4	3253-4	Lockwasher	1
5	8-0390	Pin – Bail Lift	1
6	26-8390	Lift Arm	1
7	26-8270	Pivot Support	1
8	3296-51	Locknut	6
9	328-24	Capscrew	6
10	32153-3	Locknut	2


Ref. No.	Part No.	Description	No. Used
11	322-6	Capscrew	2
12	26-8250	Lift Arm	2
13	26-8310	Lift Bail Pin	3
14	3-8448	Washer	3
15	3296-50	Locknut	3
16	26-8340	Lift Arm	2
17	26-8160	Lift Arm Support	1
18	3296-24	Locknut	4
19	302-5	Grease Fitting	6

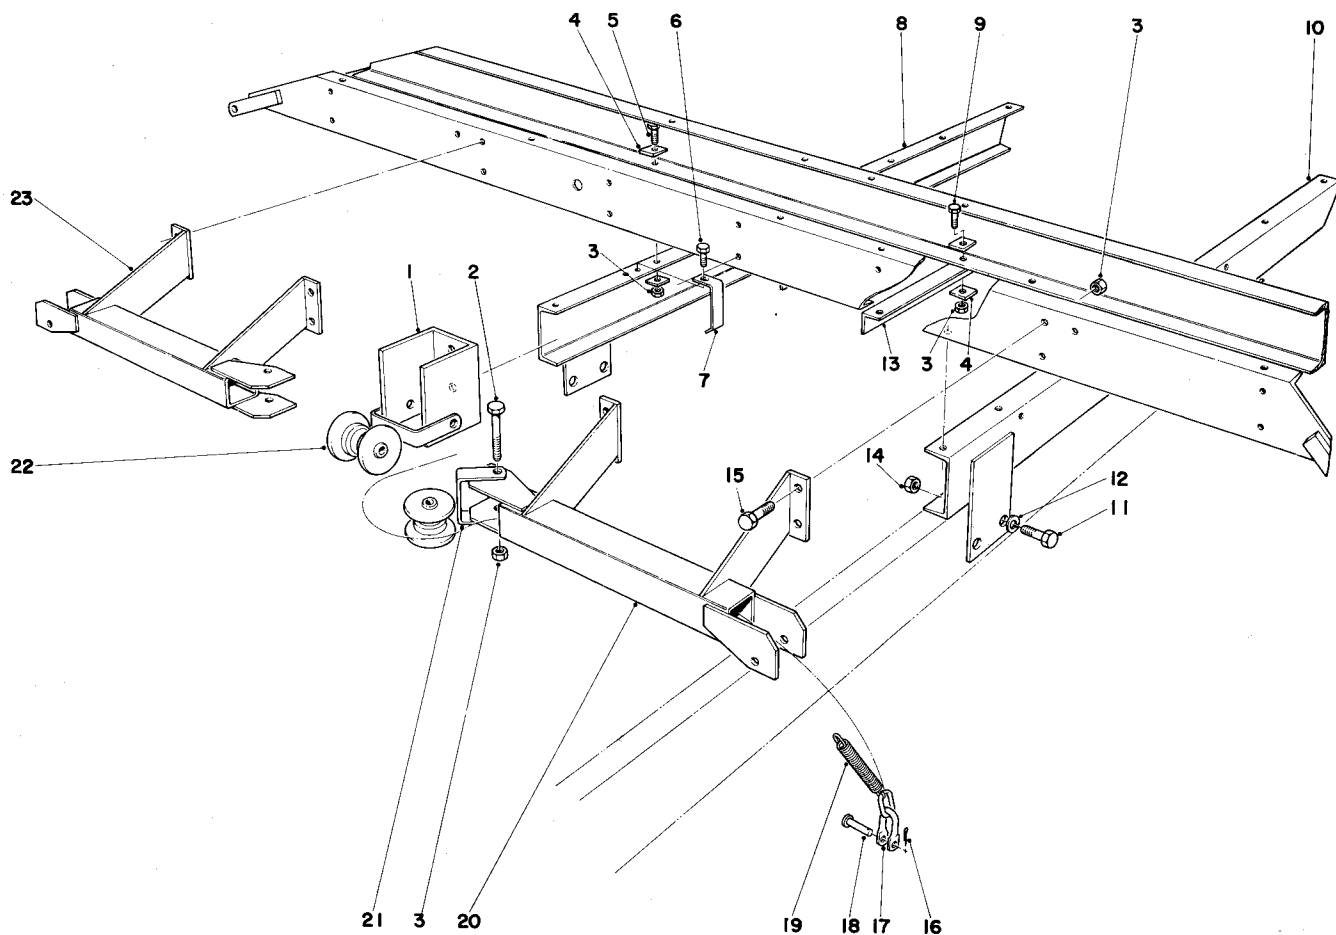

MAIN FRAME ASSEMBLY — Front Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	21
4	3290-216	Washer	14
5	325-8	Capscrew	4
6	32104-6	Screw Self Tapping	2
7	11-4630	Hose Retainer	2
8	11-3980	Side Channel Right	1
9	325-6	Capscrew	2
10	11-4000	Side Channel Left	1
11	327-4	Capscrew	8
12	3253-8	Lockwasher	8

Ref. No.	Part No.	Description	No. Used
13	26-8580	Chain Support	1
14	3217-11	Nut	8
15	325-5	Capscrew	10
16	3272-10	Cotter Pin	2
17	8-0280	Shackle Short	2
18	283-10	Pin	2
19	5-1706	Spring	2
20	3-6690	Tube L.H.	1
21	3-0136	Chain Keeper	5
22	3-2196	Sheave	5
23	3-6680	Tube R.H.	1

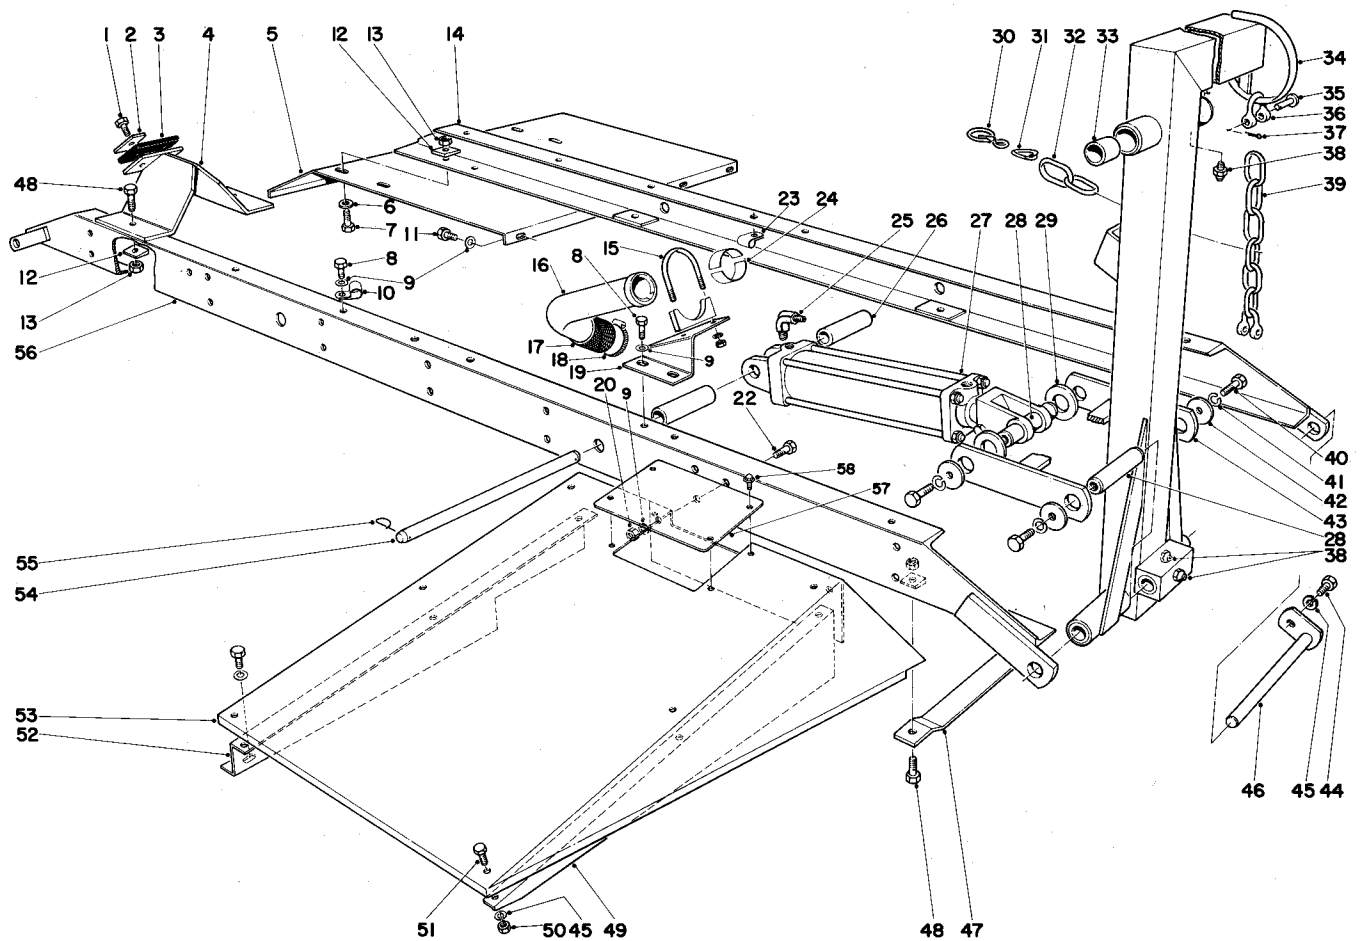


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3290-319	Machine Screw	4
2	11-5270	Bumper Washer	4
3	11-4590	Bumper Pad	4
4	11-5630	Stop	2
5	11-4620	Fender R.H.	1
*	11-4610	Fender L.H.	1
6	3256-26	Washer	4
7	325-5	Capscrew	4
8	32104-6	Self-Tapping Screw	3
9	3256-24	Washer	15
10	2412-39	Hose Clamp	1
11	32104-98	Self-Tapping Screw	8
12	3290-216	Bevel Washer	12
13	32146-13	Locknut	12
14	26-9220	Rear Cross Channel	1
15	18-8590	Fuel Tank Extension Clamp	1
16	18-2410	Fill Tube	1
17	18-2790	Extension Hose	1
18	2412-42	Hose Clamp	2
19	18-2420	Fill Tube Bracket	1
20	32146-2	Nut	6
22	323-6	Capscrew	6
23	304-61	Hose Clamp	1

Ref. No.	Part No.	Description	No. Used
24	18-8600	Saddle	2
25	5-6560	Elbow (No. 78)	4
26	20-4390	Spacer Tube	4
27	22-7530	Cylinder 12"	2
28	3-0128	Shaft	4
29	3256-30	Washer	4
30	286-3	Safety Hook	4
31	287-2	Cold Shut	4
32	3-1365	Chain (15 Links)	2
33	3-0348	Bushing	8
34	11-4220	Lift Arm (No. 6) (Incl. Ref. #33)	1
*	11-4250	Lift Arm (No. 7) (Incl. Ref. #33)	1
35	283-10	Pin	4
36	8-0280	Short Shackle	4
37	3272-10	Cotter Pin	4
38	302-5	Grease Fitting	6
39	11-4260	Lift Chain (6 Links)	2
40	3211-2	Capscrew	8
41	3253-5	Lockwasher	8
42	5-1720	Washer	8
43	23-2610	Link	4

*Not Illustrated

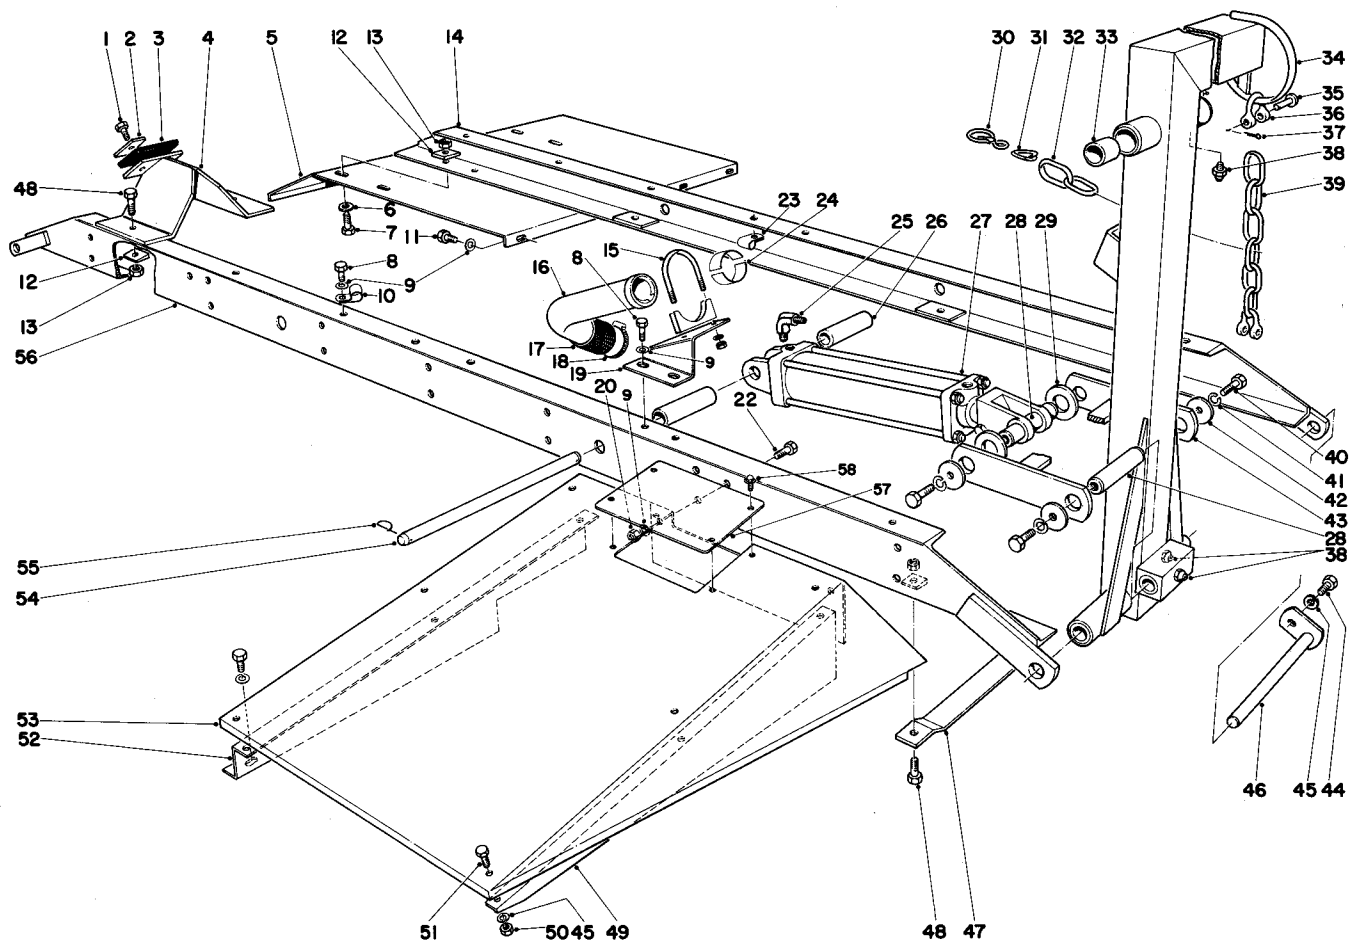


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9 (Continued)

Ref. No.	Part No.	Description	No. Used
44	322-3	Capscrew	2
45	3253-4	Lockwasher	14
46	8-0390	Lift Bail Pin	2
47	20-4440	Cylinder Rest	2
48	325-6	Capscrew	8
49	5-2262	Fender Brace	2
50	3217-6	Nut	12
51	322-2	Capscrew	12
52	5-2263	Fender Mount L.H.	1

Ref. No.	Part No.	Description	No. Used
*	5-2264	Fender Mount R.H.	1
53	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
54	3-0144	Shaft	2
55	5-3126	Spring Pin	4
56	26-9180	Front Cross Channel (Front Position)	1
57	21-5610	Cover Fender	2
58	32104-77	Self Tapping Screw	8

*Not Illustrated

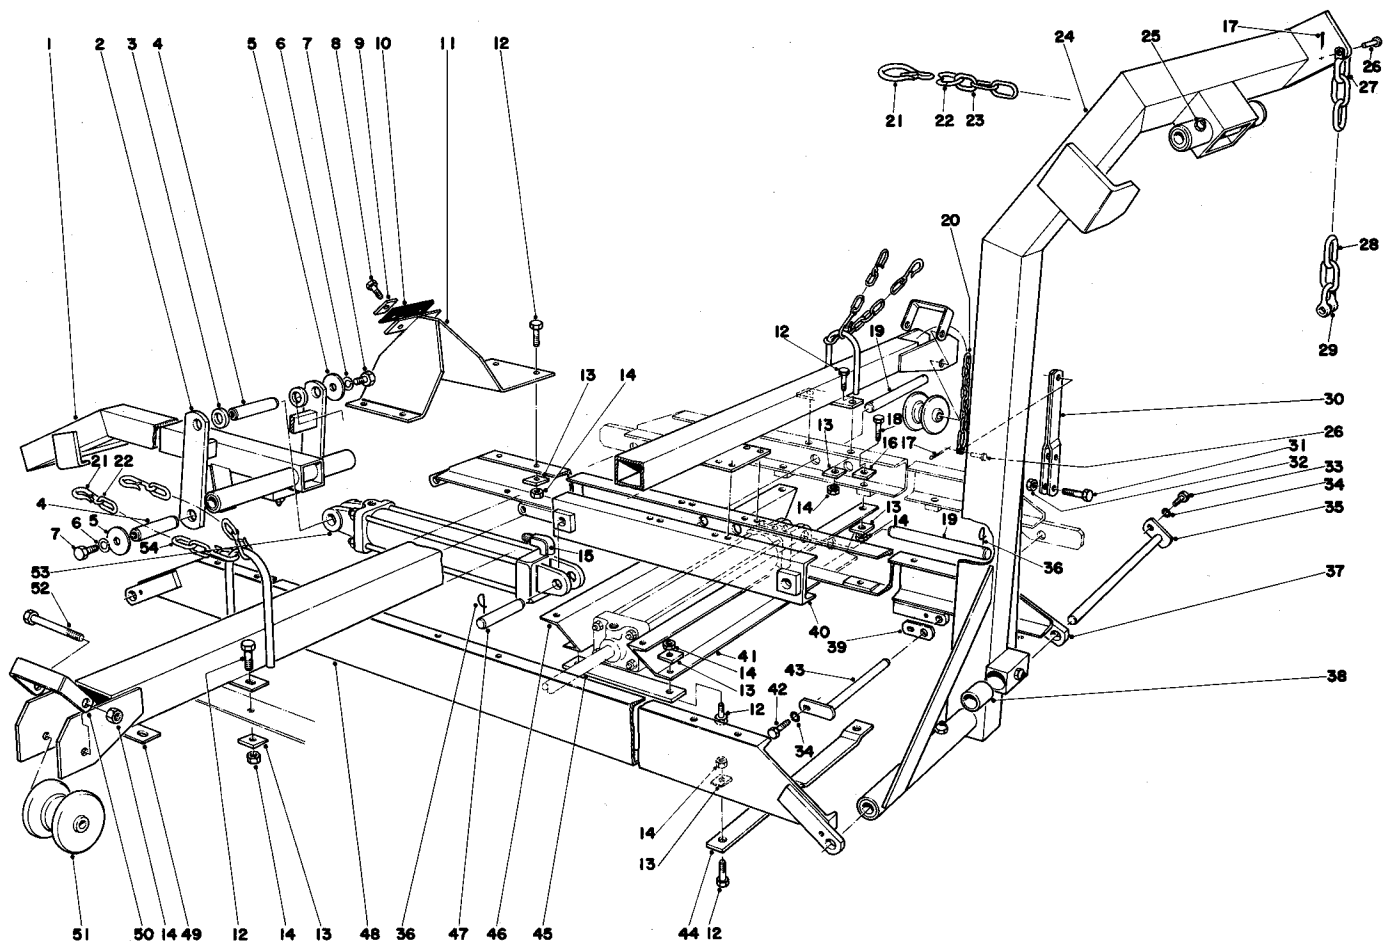


MAIN FRAME ASSEMBLY — Rear Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	11-4280	Lift Arm No. 9 (Incl. Ref. #38)	1
2	23-2620	Link	2
3	3256-30	Washer	4
4	11-4490	Shaft	4
5	5-1720	Washer	8
6	3253-5	Lockwasher	8
7	3211-2	Capscrew	8
8	3290-319	Machine Screw	4
9	11-5270	Washer Bumper	4
10	11-4590	Pad Bumper	2-6
11	11-4540	Stop R.H.	1
*	11-4580	Stop L.H.	1
12	325-6	Capscrew	34
13	3290-216	Bevel Washer	34
14	32146-13	Locknut	36
15	11-9800	Elbow (55)	4
16	11-4920	Bevel Washer	2
17	3272-10	Cotter Pin	6
18	325-11	Capscrew	2
19	3-0144	Pin	3
20	26-8540	Lift Chain	1
21	286-3	Snap Hook	10
22	287-2	End Lap Repair Link	10
23	11-4710	Safety Chain	1
24	11-4270	Lift Arm No. 8 (Incl. Ref. #38)	1
25	302-5	Grease Fitting	6
26	283-10	Pin	6

*Not Illustrated


Ref. No.	Part No.	Description	No. Used
27	5-2942	Shackle — Long	2
28	3-4636	Lift Chain 7 Link	2
29	8-0280	Shackle Short	2
30	26-8370	Lift Bracket	1
31	323-8	Capscrew	1
32	32146-2	Nut	1
33	322-3	Capscrew	2
34	3253-4	Lockwasher	2
35	11-4380	Pin Bail Lift	2
36	5-3126	Spring Pin	10
37	11-4060	Center Cross Channel	1
38	3-0348	Bushing	16
39	8-0410	Tab — Lift Arm	2
40	11-4440	Mount Cylinder	1
41	26-8440	Channel L.H.	1
42	322-5	Capscrew	1
43	8-0390	Pin — Bail Lift	2
44	20-4430	Cylinder Rest	2
45	26-8510	Cylinder Rest	1
46	26-8430	Channel R.H.	1
47	24-9510	Pin	2
48	11-4080	Front Cross Channel	1
49	26-8480	Channel Brace	1
50	3-0136	Chain Keeper	2
51	3-2196	Sheave	2
52	325-18	Capscrew	2
53	22-7530	Cylinder	3
54	3-1365	Safety Chain	4

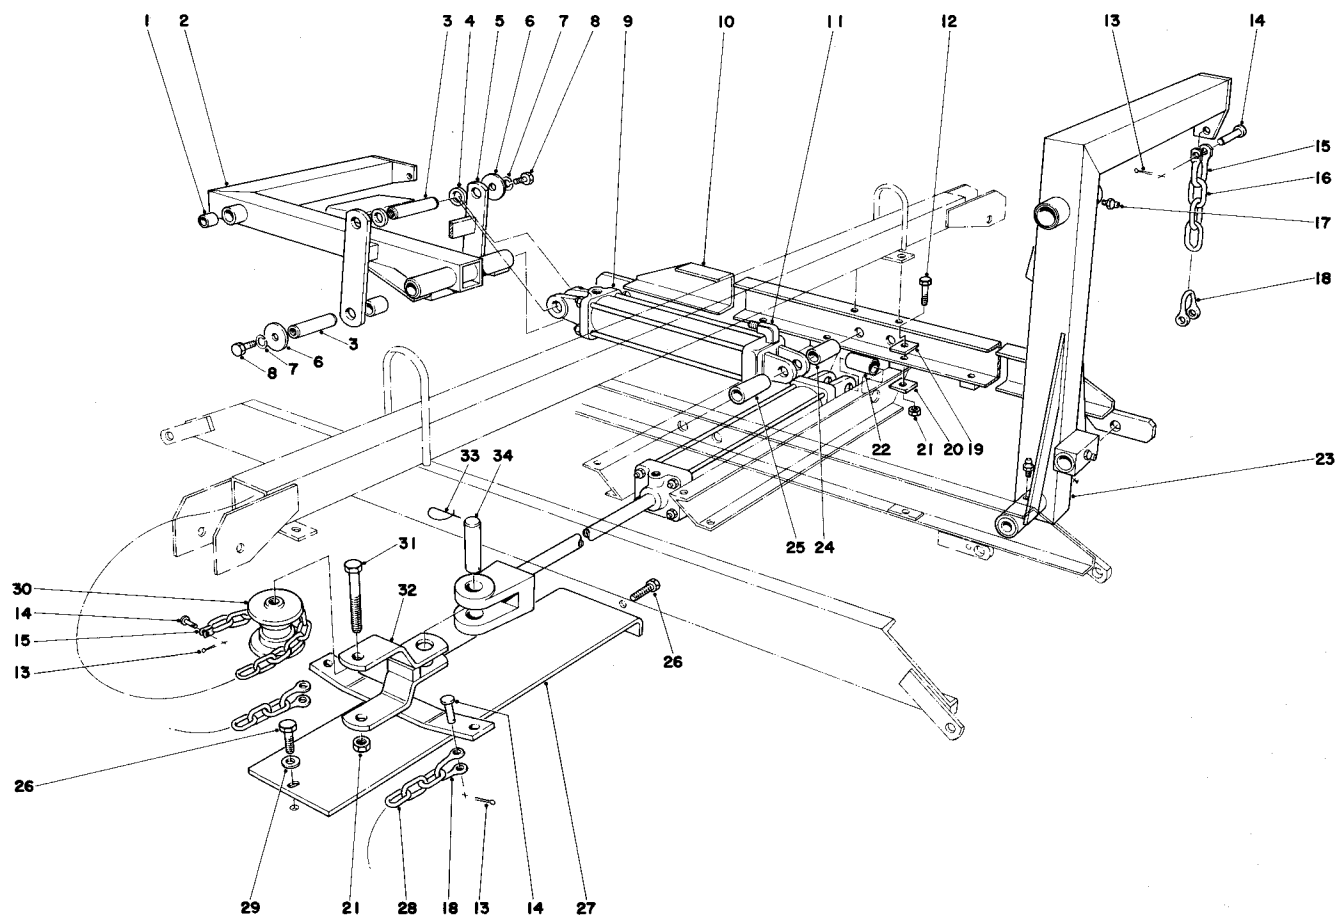

MAIN FRAME ASSEMBLY — Rear Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	11-4210	Lift Arm	1
3	3-0128	Shaft	4
4	3256-30	Washer	4
5	23-2610	Link	2
6	5-1720	Washer	8
7	3253-5	Lockwasher	8
8	3211-2	Capscrew	8
9	22-7520	Cylinder	2
10	26-8330	Rear Cross Channel	1
11	5-6560	Elbow	4
12	325-11	Capscrew	2
13	3272-10	Cotter Pin	7
14	283-10	Pin	7
15	5-2942	Shackle	5
16	12-0400	Lift Chain	2
17	302-5	Grease Fitting	6

Ref. No.	Part No.	Description	No. Used
18	8-0280	Shackle	4
19	11-9420	Bevel Washer	4
20	3290-216	Bevel Washer	4
21	32146-13	Locknut	5
22	20-4390	Tube Spacer	2
23	11-4180	Lift Arm	1
24	20-4410	Tube Spacer	2
25	20-4400	Tube Spacer	2
26	32104-6	Screw Self Tapping	3
27	18-2620	Plate Cylinder Rest	1
28	26-8530	Lift Chain	2
29	3256-24	Washer	1
30	3-2196	Sheave	1
31	325-14	Capscrew	1
32	26-8210	Pulley Support	1
33	3272-13	Cotter Pin	1
34	26-8590	Cylinder Pin	1

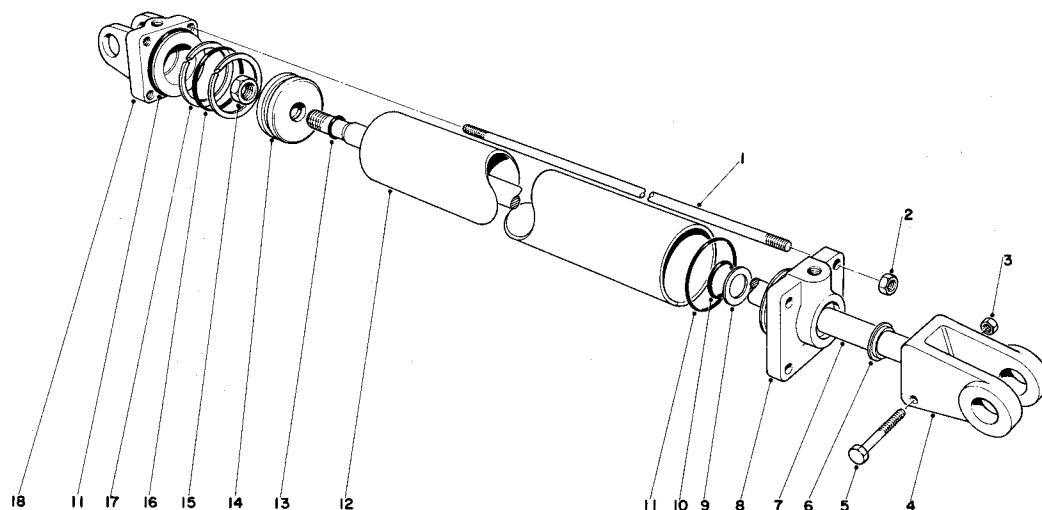


10" AND 12" CYLINDERS — Parkmaster 7 and 9

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10"	4
*	22-8710	Tie Rod 12"	4
2	3217-9	Nut	4
3	32146-5	Locknut	1
4	22-8680	Clevis Assembly	1
5	322-11	Capscrew	1
6	22-8660	Wiper Ring Seal	1
7	22-8610	Piston Rod 10"	1
*	22-8690	Piston Rod 12"	1
8	22-8630	Head	1
9	22-8650	Back-Up Washer	1

Ref. No.	Part No.	Description	No. Used
10	22-8640	"O" Ring Seal	1
11	22-8550	"O" Ring Seal	2
12	22-8620	Barrel 10"	1
*	22-8700	Barrel 12"	1
13	22-8600	"O" Ring Seal	1
14	22-8590	Piston	1
15	22-8560	Locknut	1
16	22-8570	"O" Ring Seal	1
17	22-8580	Back Up Washer	2
18	22-8540	Butt-End Cap	1
*	22-8720	Seal Kit	1

* Not Illustrated

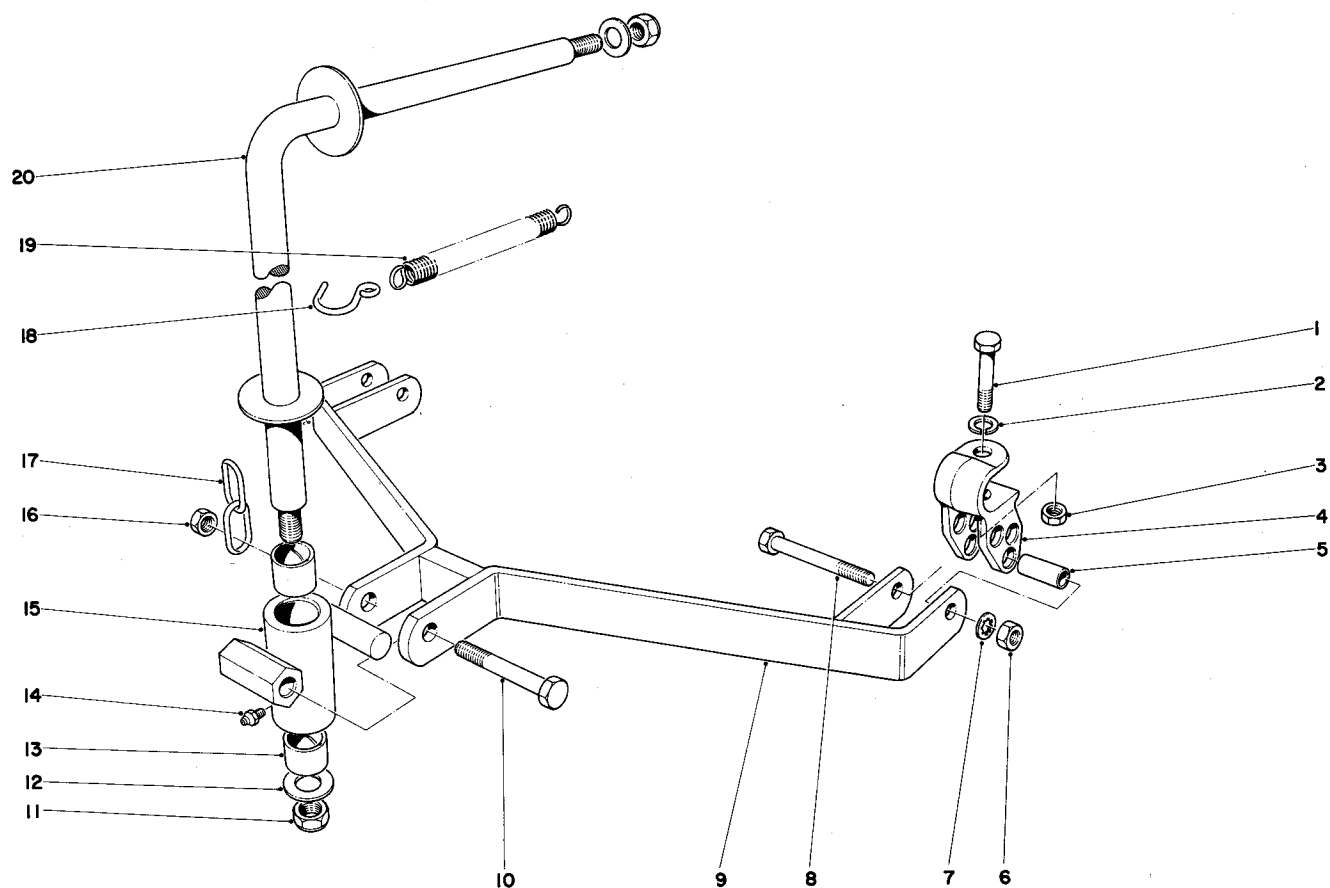


DRAWBAR ASSEMBLY — Parkmaster 5, 7 and 9

Ref. No.	Part No.	Description	No. Used		
			5-Un.	7-Un.	9-Un.
1	324-10	Capscrew	10	14	18
2	3253-6	Lockwasher	10	14	18
3	3217-8	Nut	10	14	18
4	5-1090	Clamp, Drawbar	10	14	18
5	5-1091	Spacer	10	14	18
6	3217-9	Nut	10	14	18
7	3254-4	Lockwasher	10	14	18
8	325-14	Capscrew	10	14	18
9	3-9280	Drawbar	5	7	9
10	325-17	Capscrew	5	7	9
11	3296-50	Locknut	10	14	18
12	3-8448	Washer	10	14	18

Ref. No.	Part No.	Description	No. Used		
			5-Un.	7-Un.	9-Un.
13	3-0348	Bushing	10	14	18
14	302-5	Grease Fitting	5	7	9
15	1-6559	Housing (Incl. Ref. No. 13)	5	7	9
16	32146-13	Locknut	5	7	9
17	3-0293	Chain	2	4	6
18	3-2198	S-Hook	2	4	7
19	5-1706	Spring	5	7	9
20	28-8720	Bail, Lift	2	4	—
*	28-8730	Bail, Lift	—	—	6
*	26-8310	Bail, Lift 1, 2 & 3 Position	3	3	3

NOTE: When used on 9 unit, item No. 9 to be rotated 180 degrees.

*Not Illustrated.

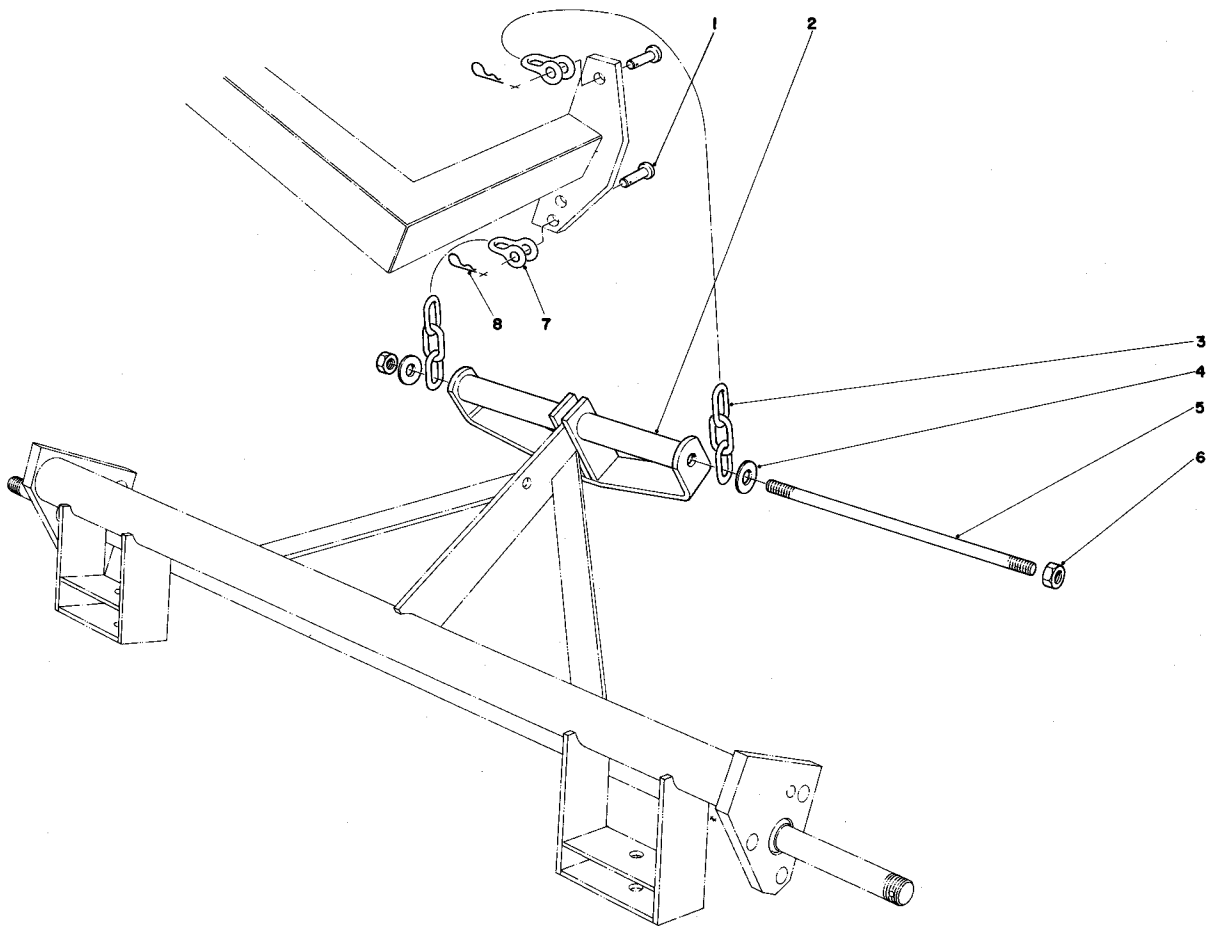


MOUNTING KIT FOR ROUGHMASTER MOWERS No.28-5030

Ref. No.	Part No.	Description	No. Used
1	283-10	Clevis Pin	2
2	3-7700	Bracket Chain	2
3	3-4977	Chain	2
4	2-6690	Spacer	4
5	3-4986	Rod	2

Ref. No.	Part No.	Description	No. Used
6	32127-9	Locknut	4
7	3290-255	Har Pin Cotter	2
8	8-0280	Shackle	2
*	33-2620	Lift Bail R.H.	1
*	33-2610	Lift Bail L.H.	1


*Not Illustrated

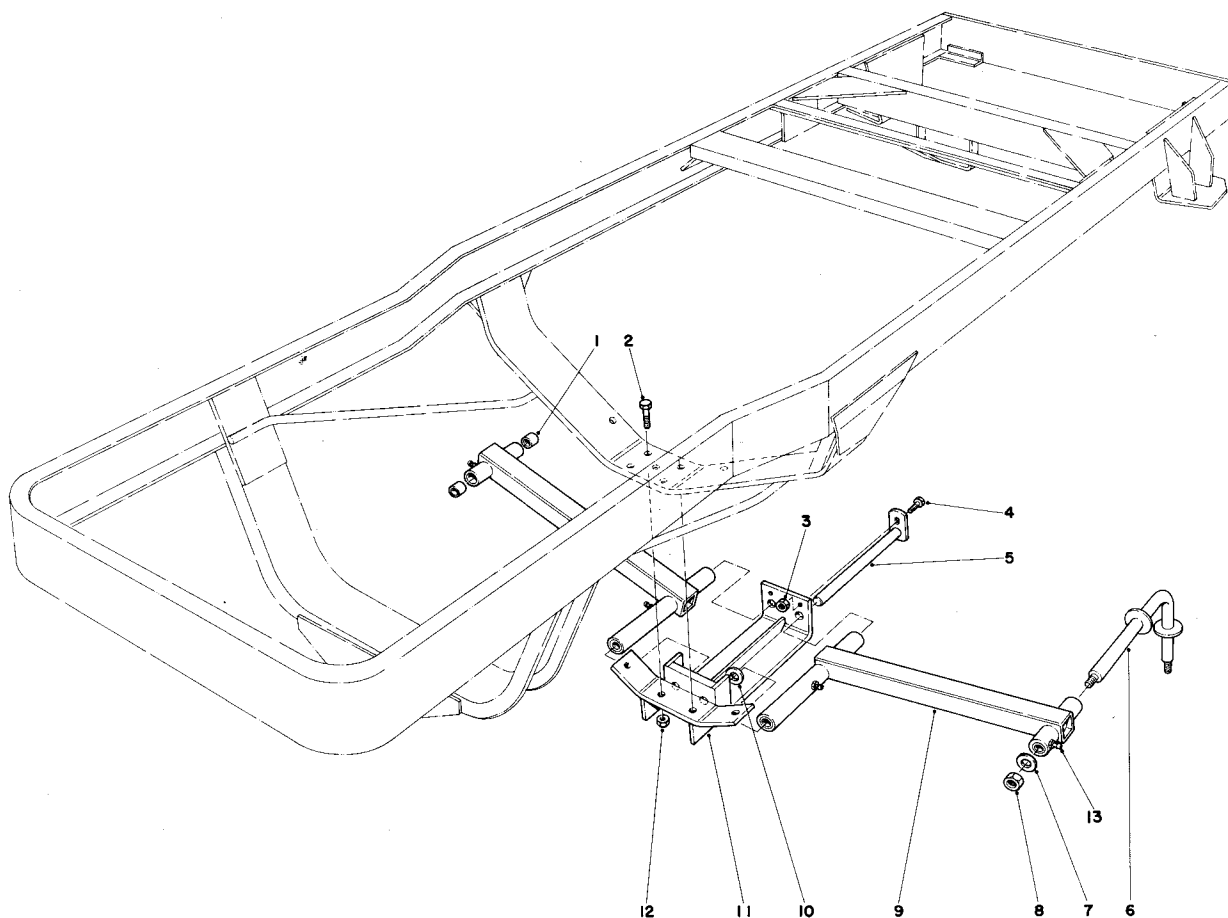

SUSPENSION IMPROVING KIT MODEL 26-8640 (Spartan®)

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	12
2	327-22	Capscrew	4
3	32153-3	Locknut	2
4	322-6	Capscrew	2
5	26-8250	Lift Arm Pin	2
6	26-8310	Lift Bail	2

Ref. No.	Part No.	Description	No. Used
7	3-8448	Thrust Washer	4
8	3296-50	Locknut	4
9	26-8340	Lift Arm (Inc. Ref. # 1)	2
10	3256-30	Washer	2
11	26-8160	Lift Arm Support	1
12	3296-24	Locknut	4
13	302-5	Grease Fitting	4

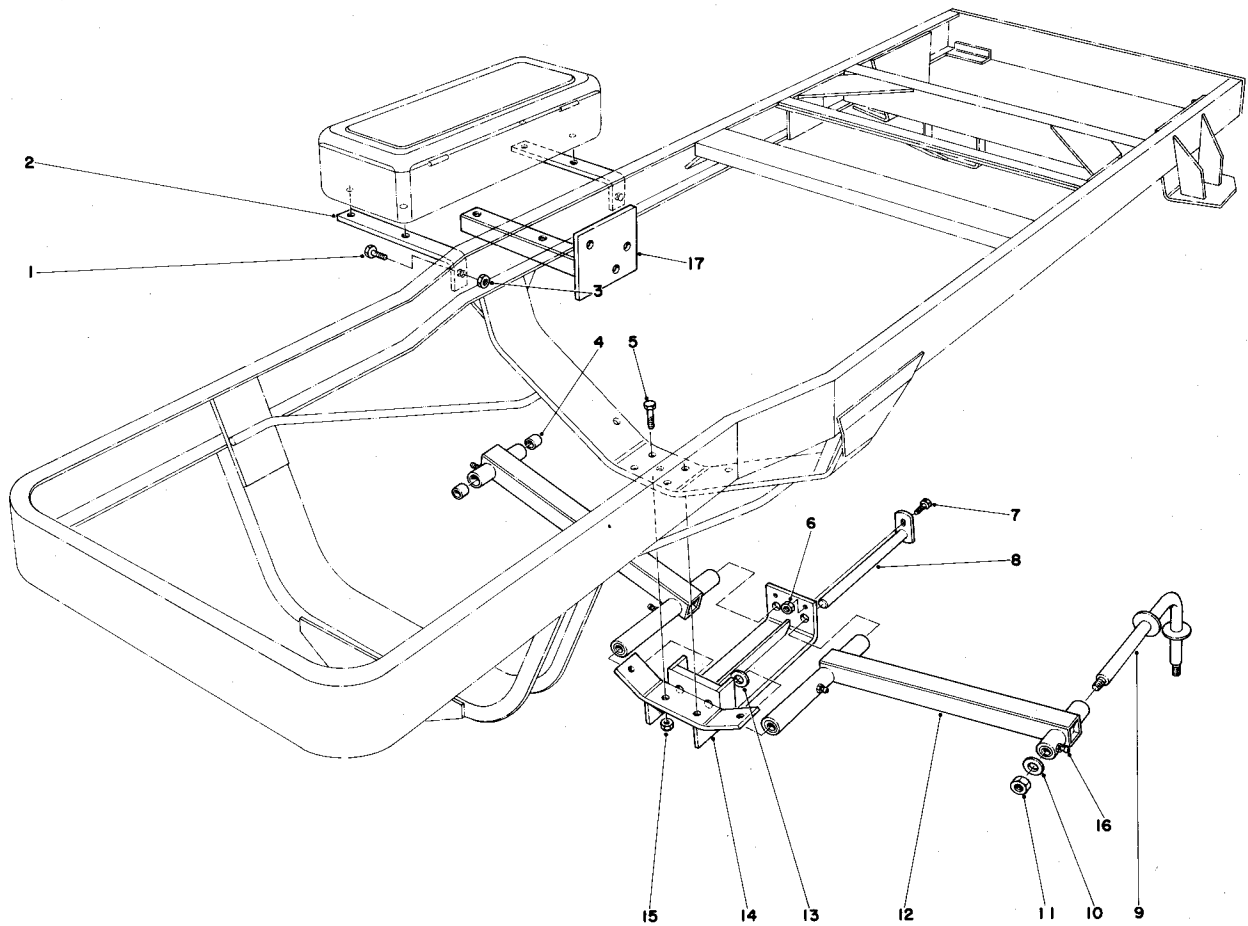


SUSPENSION IMPROVING KIT MODEL 26-9620 (Roughmaster®)

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	2
2	26-8450	Tool Box Support	2
3	32146-13	Locknut	2
4	3-0348	Bushing	12
5	327-22	Capscrew	4
6	32153-3	Locknut	2
7	322-6	Capscrew	2
8	26-8250	Lift Arm Pin	2
9	33-2610	Lift Bail L.H.	1

Ref. No.	Part No.	Description	No. Used
*	33-2620	Lift Bail R.H.	1
10	3-8448	Thrust Washer	4
11	3296-50	Locknut	4
12	26-8340	Lift Arm (Incl. Ref. #4)	2
13	3256-30	Washer	2
14	26-8160	Lift Arm Support	1
15	3296-24	Locknut	4
16	302-5	Grease Fitting	4
17	26-8420	Muffler Support	1


*Not Illustrated

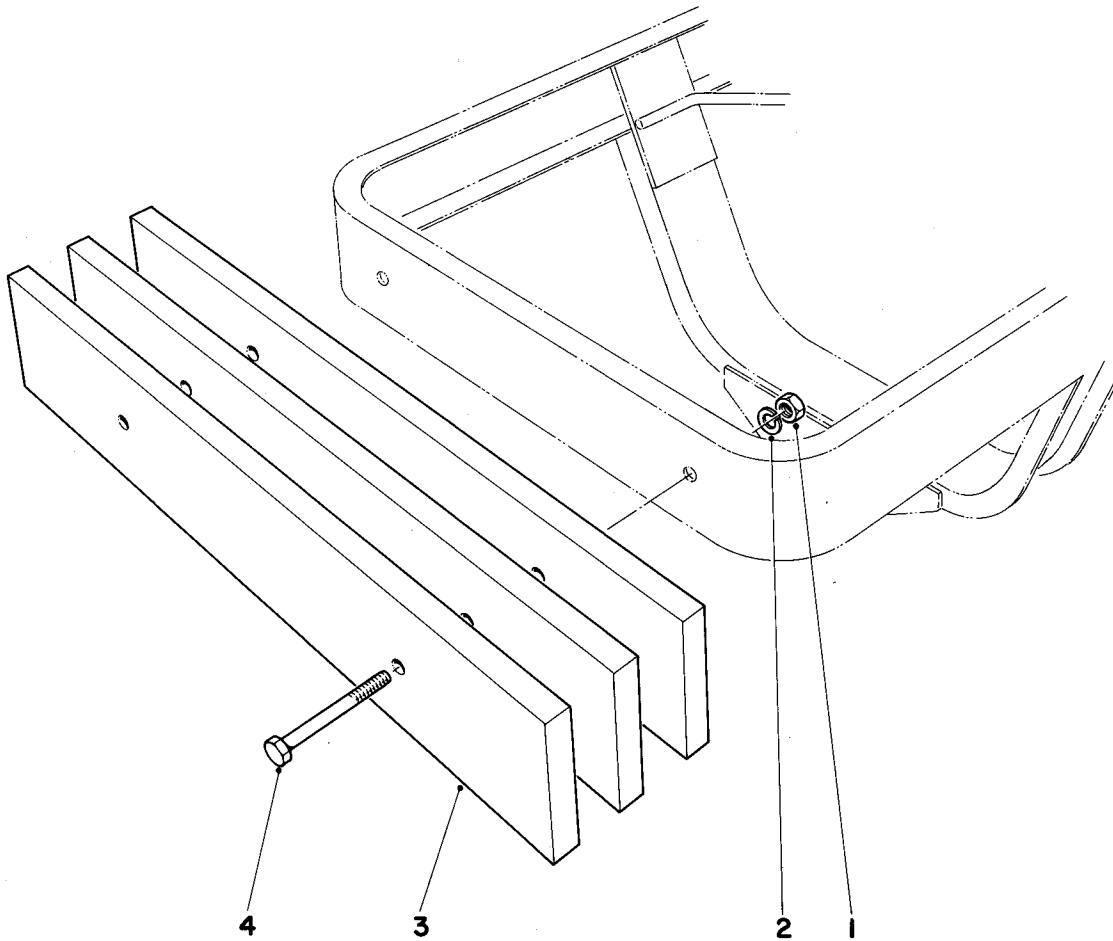

COUNTER WEIGHTS — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3217-12	Nut	2
2	3253-9	Lockwasher	2


Ref. No.	Part No.	Description	No. Used
3	18-2780	Front Weights	3
4	328-22	Capscrew	2

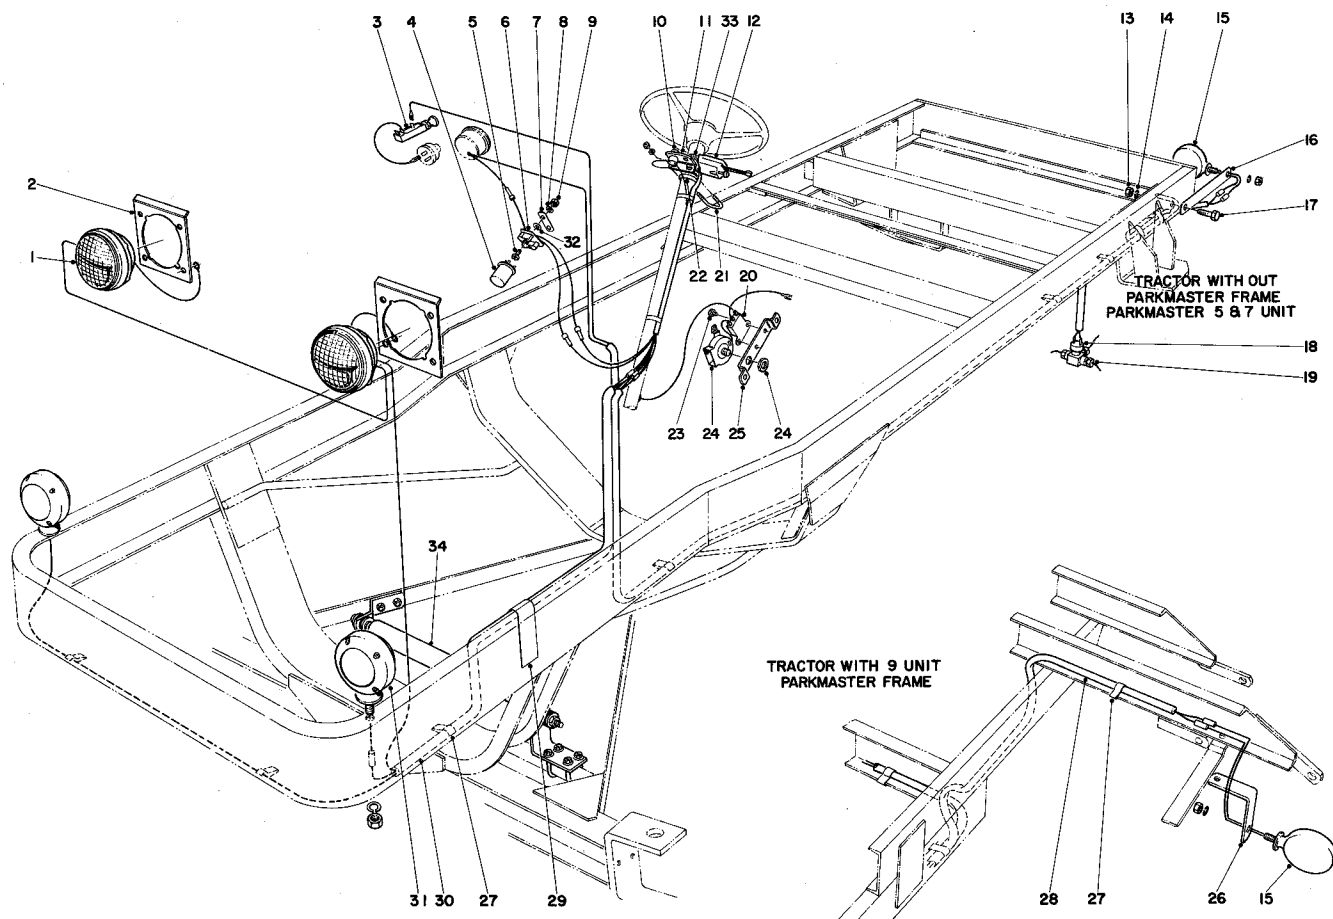

LIGHT KIT No. 26-2140

Ref. No.	Part No.	Description	No. Used
1	7-1646	Headlight	2
2	18-1010	Headlight Holder	2
3	218-213	Lightswitch	1
4	218-456	Flasher	1
5	3252-2	Screw	1
6	11-6440	Flasher Connector	1
7	18-4370	Flasher Connector Bracket	1
8	3253-12	Lockwasher	1
9	3217-26	Nut	1
10	18-2830	Horn Button	1
11	18-2480	Throttle Lever Support	1
12	11-6400	Signal Controller	1
13	3217-11	Nut	4
14	3253-8	Lockwasher	4
15	11-6390	Tail, Stop & Turn Lights	2
16	3-3402	Bracket	2
17	327-4	Capscrew	2


Ref. No.	Part No.	Description	No. Used
18	218-242	Stoplight Switch	1
19	218-243	Brake Line Tee	1
20	218-212	Horn Relay	1
21	18-2130	Clamp	1
22	18-1310	Saddle	2
23	32104-77	Self-Tapping Screw	2
24	19-6050	Horn (Incl. Nut)	1
25	18-2820	Horn Mount	1
26	18-8860	Bracket	2
27	212-93	Wire Clip	13
28	18-8580	Wire Harness	1
29	18-8570	Wire Harness Clip	1
30	18-5250	Wire Harness	1
31	11-6250	Fr. Signal Lamps Incl. Fasteners)	2
32	19-2430	Washer Plastic	1
33	2412-3	Hose Clamp	1
34	26-1980	Steering Stabilizer	1

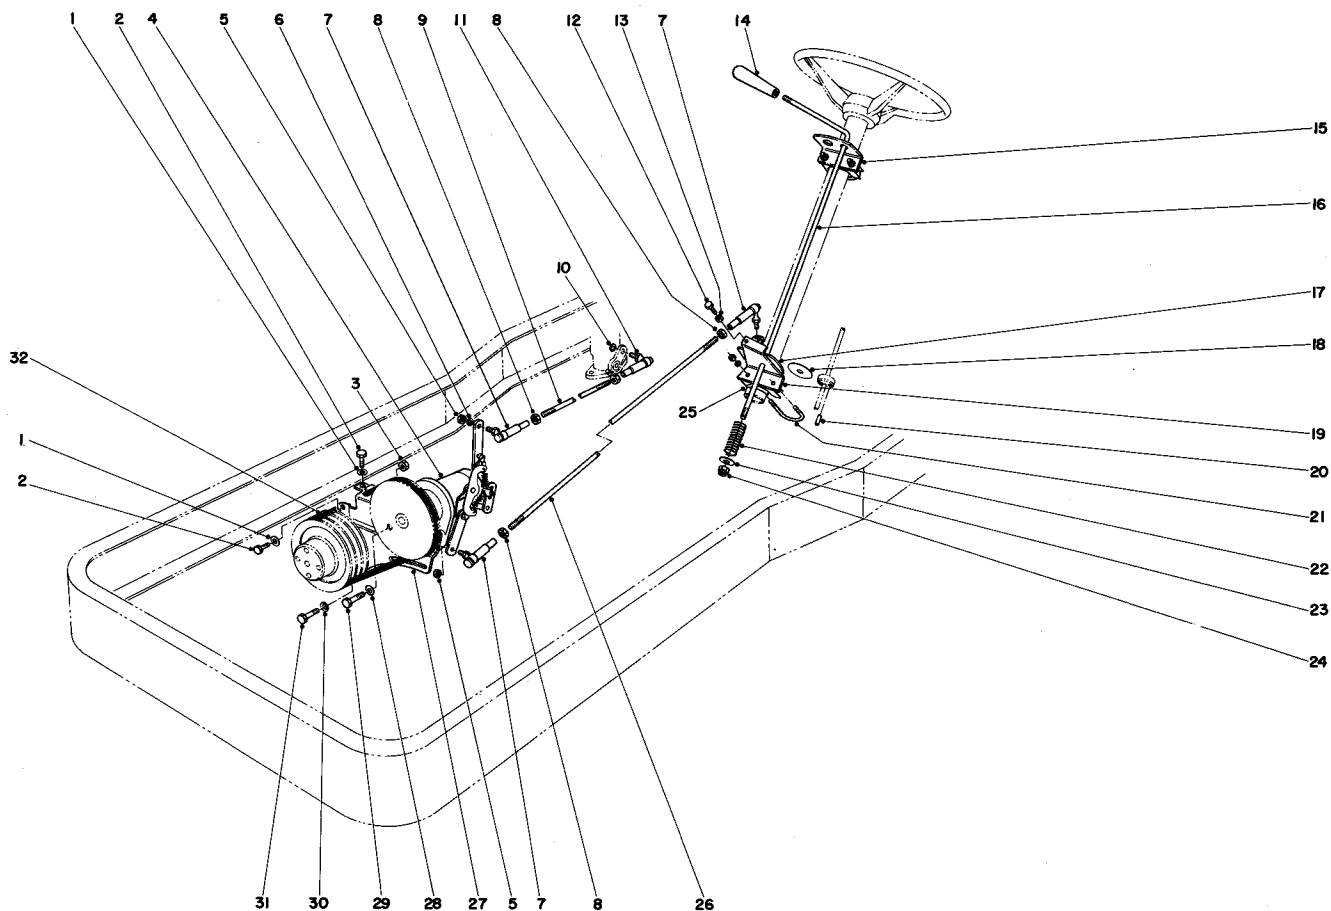

GOVERNOR KIT No. 5-6949

Ref. No.	Part No.	Description	No. Used
1	3253-21	Lockwasher	2
2	323-4	Capscrew	2
3	32146-2	Locknut	2
4	18-1700	Governor	1
5	3219-1	Nut	3
6	3253-3	Lockwasher	3
7	18-1720	Ball Joint	3
8	3220-1	Jam Nut	4
9	18-1730	Control Rod	1
10	3253-17	Lockwasher	1
11	18-1710	Ball Joint	1
12	321-4	Capscrew	1
13	3218-1	Jam Nut	1
14	18-2640	Handle	1
15	18-2480	Throttle Lever Support	1
16	18-2710	Lever	1


Ref. No.	Part No.	Description	No. Used
17	18-2440	Friction Plate	1
18	3-2858	Friction Disk	1
19	18-2470	Friction Plate Bracket	1
20	32121-2	Roll Pin	2
21	18-2130	Clamp	2
22	3-8596	Compression Spring	1
23	3256-25	Flat Washer	1
24	3296-7	Nut	1
25	18-1310	Saddle	4
26	18-2500	Control Rod	1
27	18-1400	Governor Bracket	1
28	3256-24	Flatwasher	2
29	323-8	Capscrew	2
30	3253-4	Lockwasher	1
31	322-6	Capscrew	1
32	18-2010	V-Belt	1

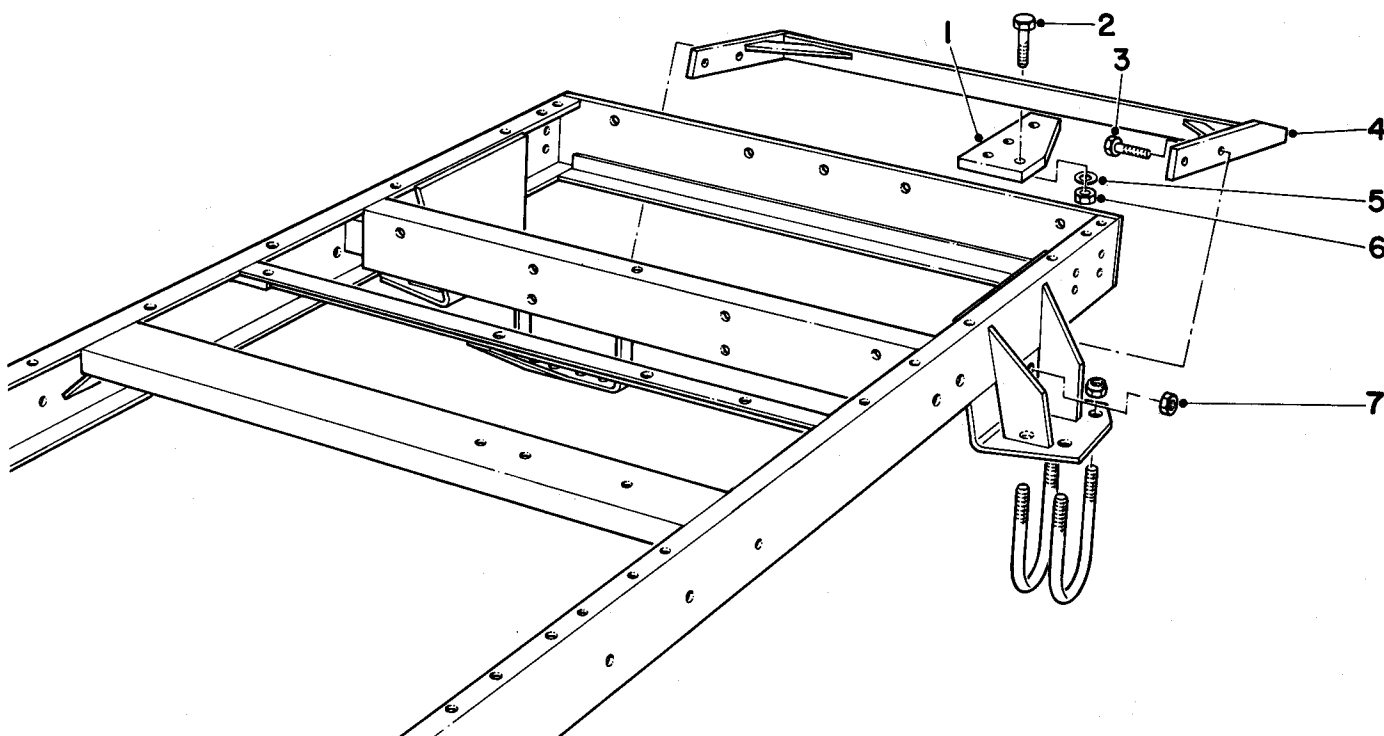

DRAWBAR KIT — 26-9260

Ref. No.	Part No.	Description	No. Used
1	3-3218	Hitch	1
2	328-2	Capscrew	2
3	328-24	Capscrew	4
4	18-2260	Drawbar	1

Ref. No.	Part No.	Description	No. Used
5	3253-9	Lockwasher	2
6	3217-12	Nut	2
7	3296-51	Nut	4

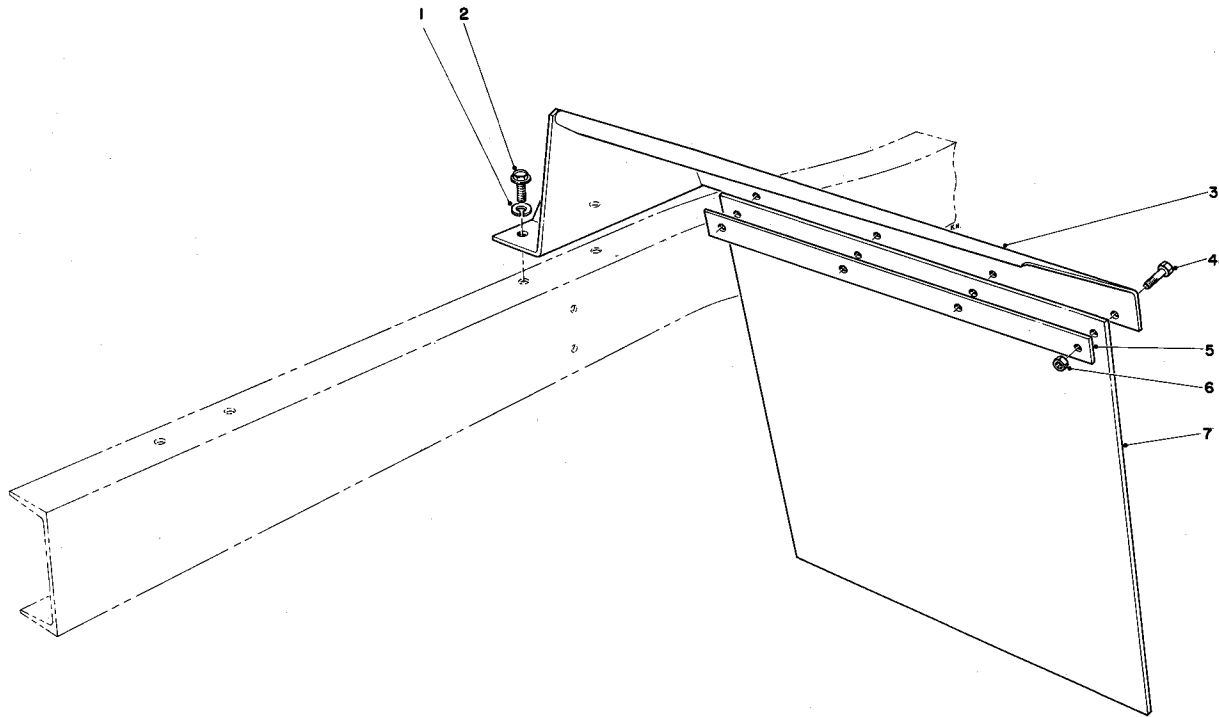


FRONT FENDER KIT No. 18-2910

Ref. No.	Part No.	Description	No. Used
1	3253-7	Lockwasher	4
2	32144-13	Thread Forming Capscrew	4
3	10-2780	Fender L.H.	1
*	10-2770	Fender R.H.	1

Ref. No.	Part No.	Description	No. Used
4	323-6	Capscrew	8
5	10-2820	Backing Flap	2
6	32146-2	Nut	8
7	10-2810	Flap	2

*Not Illustrated

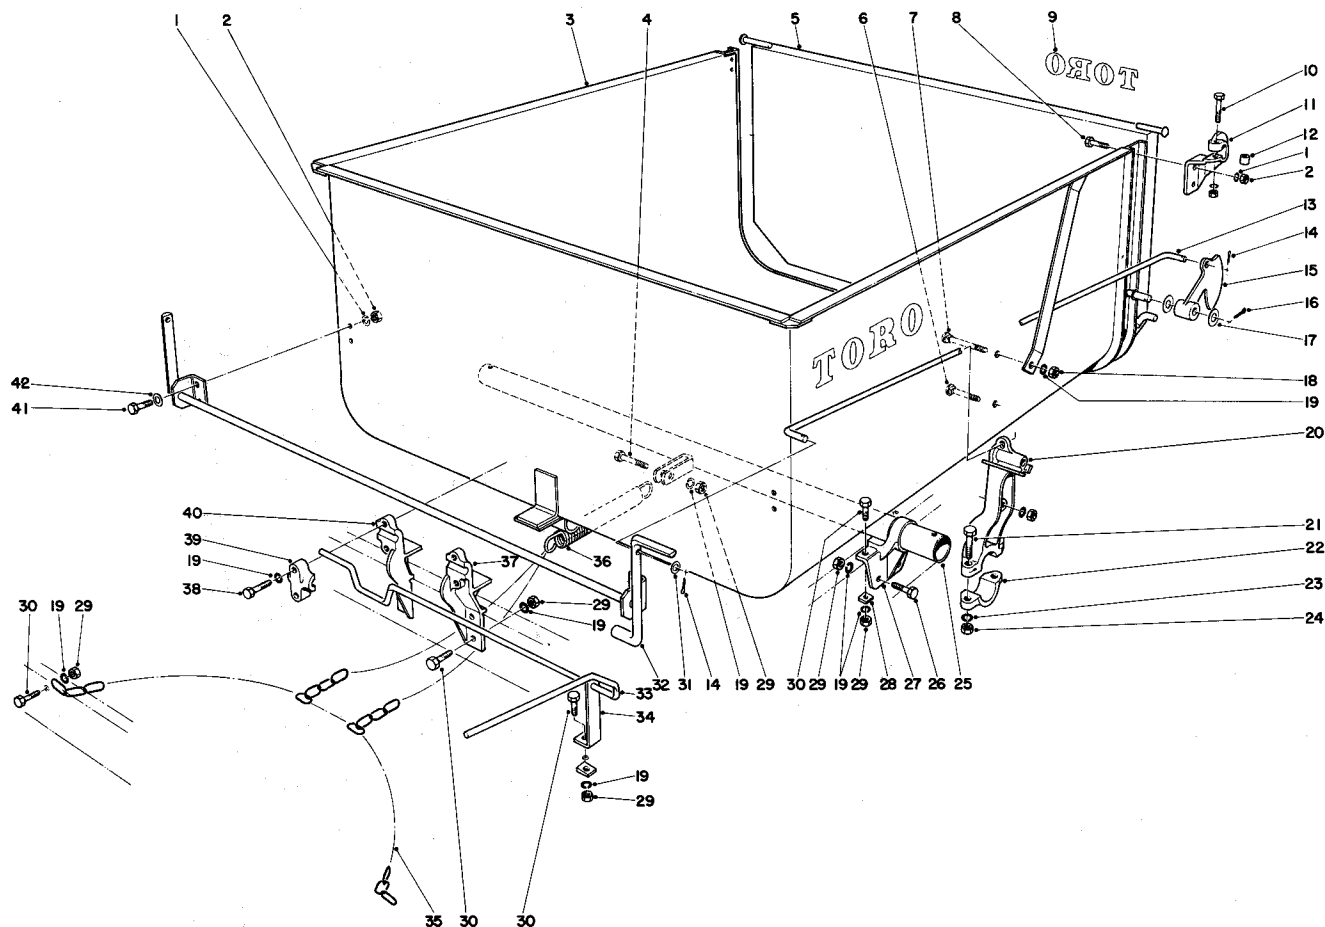


DUMP BOX KIT No. 2-2219

Ref. No.	Part No.	Description	No. Used
1	3253-4	Lockwasher	10
2	3219-2	Nut	10
3	5-3197	Dump Box	1
4	3213-4	Capscrew	1
5	5-3208	End Gate	1
6	3233-4	Carriage Bolt	2
7	3233-7	Carriage Bolt	2
8	3210-5	Capscrew	4
9	3-0704	Decal	3
10	3210-11	Capscrew	2
11	5-3223	End Gate Hanger L.H.	1
*	5-3224	End Gate Hanger R.H.	1
12	5-3225	Spacer	2
13	5-3214	Gate Latch Rod	2
14	3272-16	Cotter Pin	4
15	5-3188	Gate Latch	2
16	3272-21	Cotter Pin	2
17	5-3222	Washer	2
18	3217-9	Nut	4
19	3253-7	Lockwasher	24
20	5-3183	Box Support	2
21	3214-9	Capscrew	4

Ref. No.	Part No.	Description	No. Used
22	5-3184	Box Support Cap	2
23	3253-8	Lockwasher	4
24	3219-6	Nut	4
25	5-3193	Support Pipe	1
26	3213-2	Capscrew	4
27	5-3182	Box Support Bracket	2
28	3290-216	Bevel Washer	5
29	3219-5	Nut	16
30	3213-3	Capscrew	11
31	3256-5	Washer	2
32	5-3215	Latch Lever	1
33	5-3196	Lock Lever	1
34	5-3220	Lock Lever Bracket	1
35	5-3185	Snubber Assembly	1
36	5-3221	Spring	1
37	5-3191	Lock Lever Support L.H.	1
38	325-7	Capscrew	4
39	5-3192	Lock Lever Support Cap	2
40	5-3190	Lock Lever Support R.H.	1
41	3210-4	Capscrew	4
42	5-1183	Washer	4

*Not Illustrated

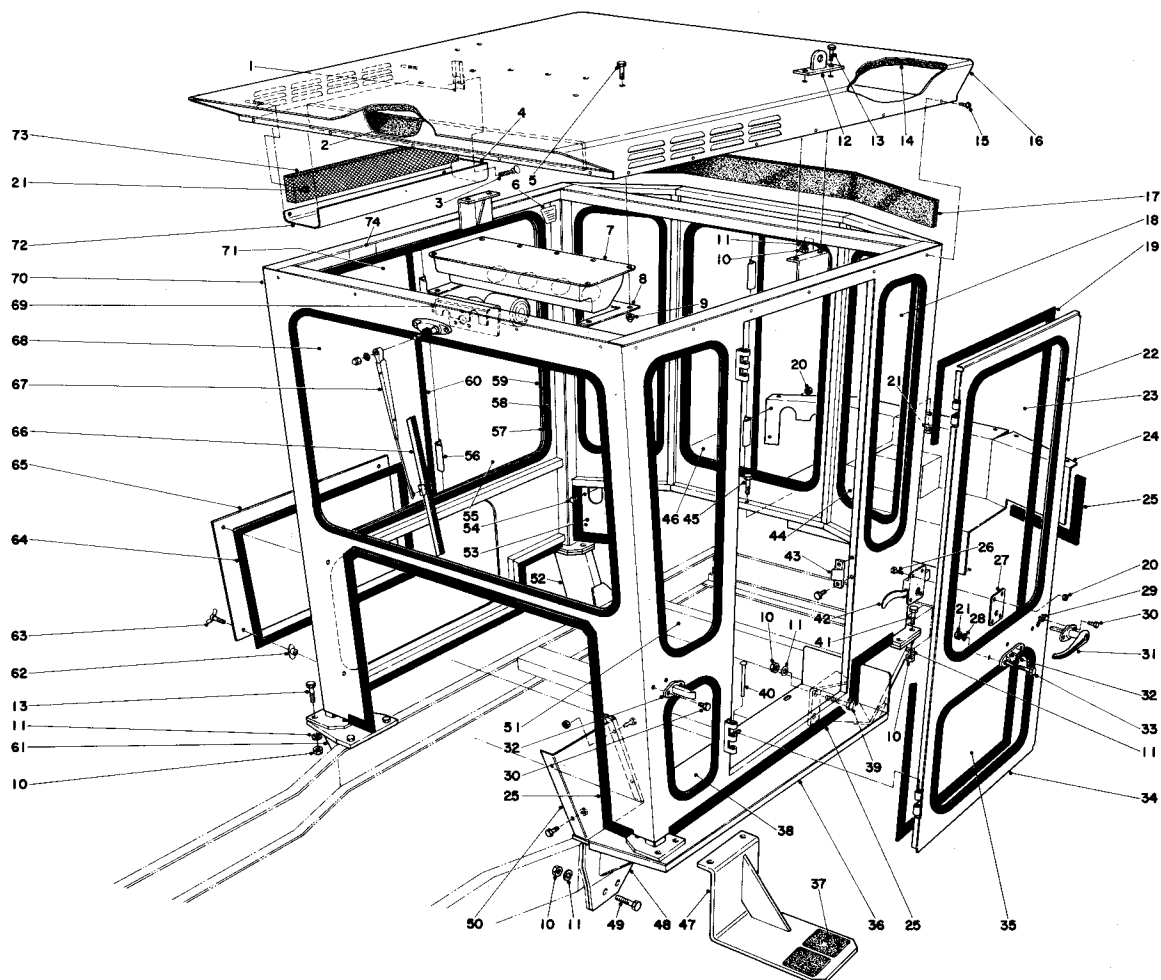


TRACTOR CAB

Ref. No.	Part No.	Description	No. Used
1	315176	Filter Retainer Clip	2
2	000311	Vinyl Poly	1
3	000229	Wing Bolt	2
4	280021-2	Duct Cap R.H.	1
*	280021-1	Duct Cap L.H.	1
5	000060	Capscrew	7
6	000657	Decal, Emergency Exit	1
7	000551	Pressurizer	1
8	315175	Pressurizer Retainer	1
9	000231	Acorn Nut	7
10	000085	Nut	20
11	000092	Lockwasher	35
12	315168	Lifting Eye	2
13	000064	Bolt	10
14	300554	Vinyl Poly (1" Roof)	1
15	000150	Zip Screw	11
16	300550	Roof	1
17	300574	Vinyl Poly (Roof Rear)	1
18	300558	Glass, Left Rear	1
19	000356	Universal Seal (160" Lg.)	1
20	000113	Nut	9
21	000078	Nut	13
22	000336	Window Rubber	AR
23	300564	Glass, Upper Door	1

Ref. No.	Part No.	Description	No. Used
24	300537	Rear Seal Panel	1
25	000354	Hollow Globe Clip On (275" Lg.)	1
26	000205	Machine Screw	4
27	315172	Shim, Lock	1
28	000089	Lockwasher	2
29	000202	Weld Nut	2
30	000204	Bolt	6
31	000625	Door Handle	1
32	000721-1	Door Catch (Male)	1
33	000121	Bolt	2
34	300553	Door Complete	1
35	300565	Glass, Lower Door	1
36	300531-2	Fender L.H.	1
*	300531-1	Fender R.H.	1
37	20-5050	Step Pad	2
38	300557	Glass, Lower Left	1
39	000070	Capscrew	8
40	315151	Pin	2
41	000062	Capscrew	6
42	000648	Door Lock L.H.	1
43	000631	Lock Striker	1
44	300559	Glass, Rear Corner	2
45	000060	Capscrew	7
46	300560	Glass, Rear Slider	2

* Not Illustrated

Note: Order all Repair Parts from: Palm Industries, Box 680, Litchfield, MN 55355

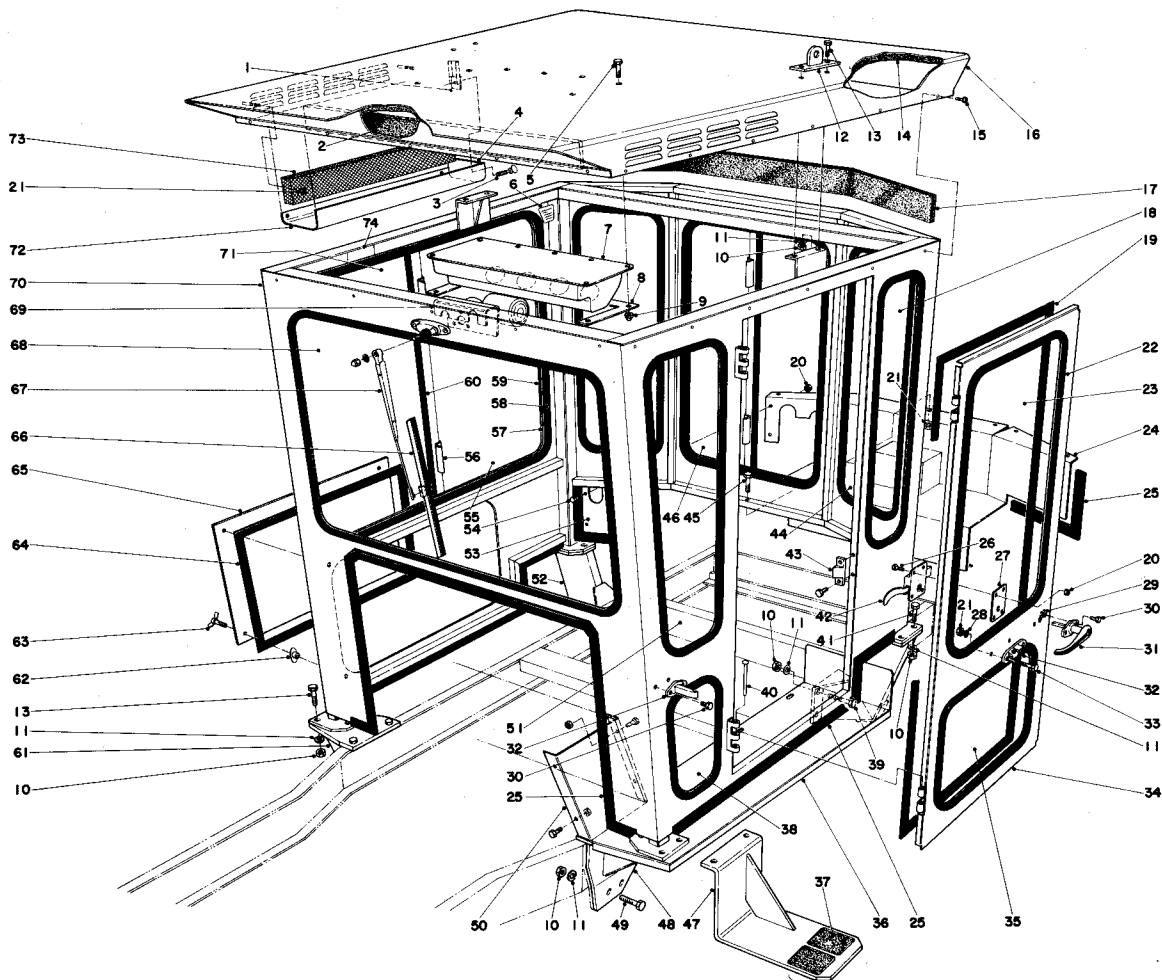


TRACTOR CAB (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	300569	Step	1	60	000320	Rigid Slider Channel (70" Lg.)	2
48	300506-1	Front Mount L.H.	1	61	300506-2	Front Mount R.H.	1
49	000066	Capscrew	4	62	000178	Flat Receptacle	4
50	300548-1	Filler Cowl L.H.	1	63	000177	Wing Bolt	4
*	300548-2	Filler Cowl R.H.	1	64	000356	Universal Seal (104" Lg.)	1
51	300556	Glass, Upper Left	1	65	300572	Side Panel	1
52	300514	Rear Mounts	2	66	000541	Wiper Blade 22"	1
53	300538	Sealed Panel	1	67	000544	Wiper Blade Arm 20"	1
54	000111	Machine Screw	5	68	300555	Glass, Front	1
55	300563	Glass, Rear Right Slider	1	69	000542	Wiper Motor Ass'y.	1
56	000717	Window Handle	4	70	300545	Cab	1
57	000338	Blank Spacer (125" Lg.)	2	71	300562	Front Glass, Right Slider	1
58	000306	Flexible Channel (250" Lg.)	2	72	280022	Duct Body	2
59	000339	Slider Glass Channel (250" Lg.)	2	73	000552	Filter	2
				74	000773	Warning Emblem	1

*Not Illustrated

Note: Order all Repair Parts from: Palm Industries, Box 680, Litchfield, MN 55355

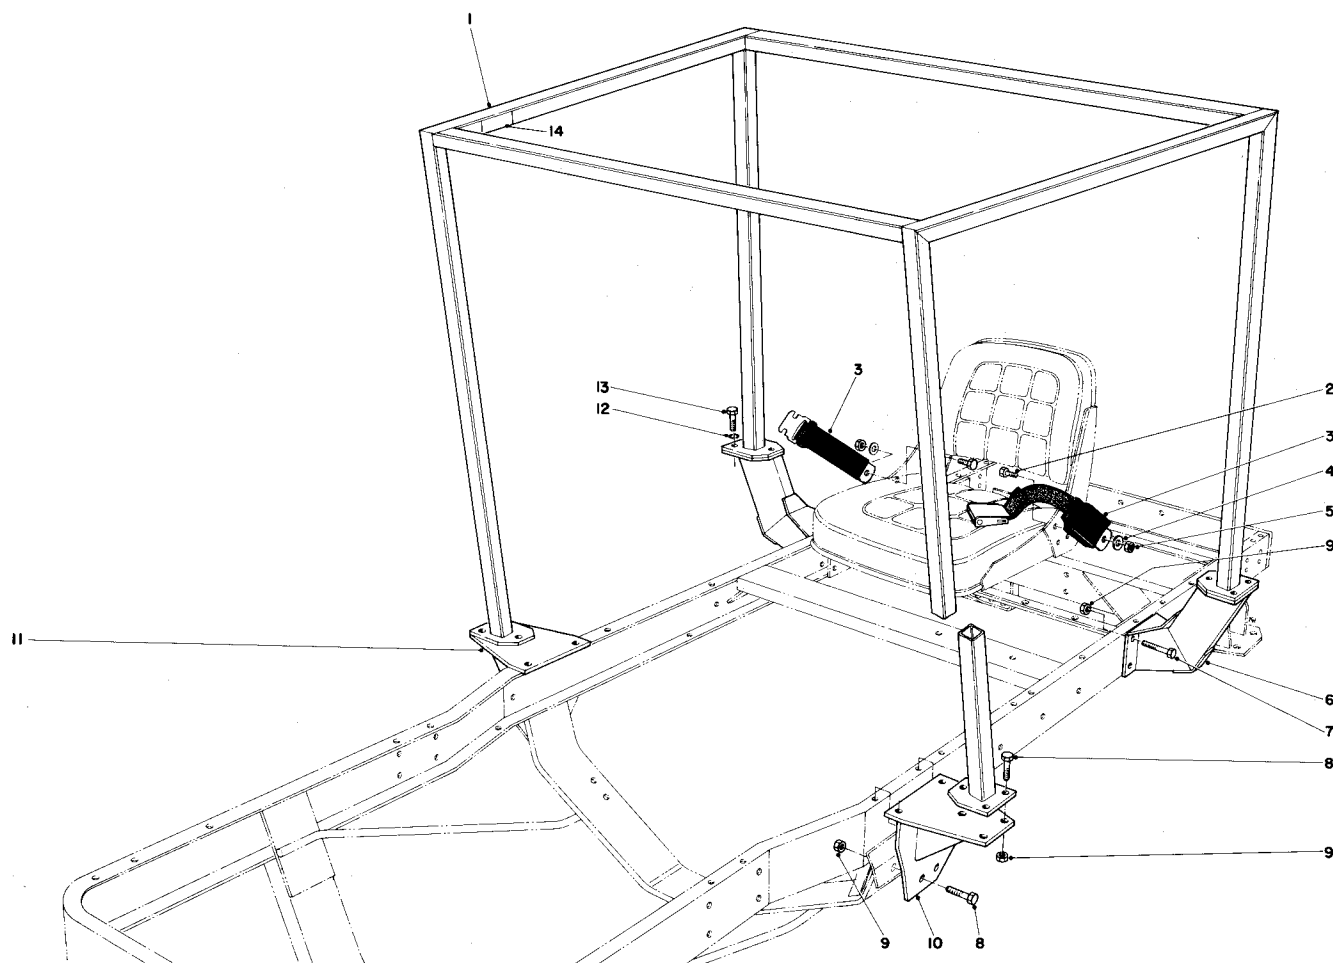

ROLL OVER PROTECTION KIT No. 77021

Ref. No.	Part No.	Description	No. Used
1	21-4120	Roll Bar Assembly	1
2	324-4	Capscrew	2
3	21-4190	Seat Belt	1
4	3256-25	Flatwasher	2
5	3296-48	Locknut	2
6	21-4310	Rear Mount	2
7	325-14	Capscrew	8

Ref. No.	Part No.	Description	No. Used
8	325-9	Capscrew	10
9	3253-7	Lockwasher	24
10	32146-13	Locknut	18
11	21-4390	Front Mount L.H.	1
12	21-4400	Front Mount R.H.	1
13	325-6	Capscrew	6
14	36-7910	Warning Decal	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Tractor has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on right side of toe board. In any correspondence concerning the Tractor, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information:

1. Model and serial numbers of the Tractor.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A One Year Limited Warranty on Turf Products Other Than Walk Rotary Mowers

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Turf Products	1 Year
Hevi-Duty Walk Rotary Mowers	90 Days

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Turf Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

MAINTENANCE RECORD

[illegible]