



**Count on it.**

Form No. 3396-851 Rev D

# Parts Catalog

## Workman® HDX-D

### 4-Wheel Drive Utility Vehicle with Bed

Model No. 07387TC—Serial No. 315001001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                                                   |    |
|-----------------------------------------------------------------------------------|----|
| Front Frame Assembly .....                                                        | 5  |
| Rear Frame and Suspension Assembly .....                                          | 6  |
| Rear Axle Assembly .....                                                          | 7  |
| Brake Caliper Assembly No. 127-7424 .....                                         | 8  |
| Driveshaft Assembly No. 114-8367 .....                                            | 9  |
| Front and Rear Brake Line Assembly .....                                          | 10 |
| Front Suspension Assembly .....                                                   | 11 |
| Steering and Front Wheel Assembly .....                                           | 12 |
| Steering Linkage Assembly .....                                                   | 13 |
| Hydraulic Cylinder Assembly No. 120-5059 .....                                    | 14 |
| Front Control Arm Assembly .....                                                  | 15 |
| Brake and Clutch Pedal Assembly .....                                             | 16 |
| Master Cylinder Assembly No. 104-6782 .....                                       | 17 |
| Accelerator Pedal Assembly .....                                                  | 18 |
| Console Assembly .....                                                            | 19 |
| Shift Assembly No. 106-7887 .....                                                 | 21 |
| Bumper, Hood and Seat Base Assembly .....                                         | 22 |
| Dash Assembly .....                                                               | 23 |
| Steering Hydraulic Assembly .....                                                 | 24 |
| Steering Valve Assembly No. 120-4813 .....                                        | 25 |
| Seat Assembly .....                                                               | 26 |
| Roll-Over Protection System Assembly .....                                        | 27 |
| Full Bed and Side Panel Assembly .....                                            | 28 |
| Engine Sub Frame Assembly .....                                                   | 29 |
| Engine Assembly .....                                                             | 30 |
| Cooling System Assembly .....                                                     | 31 |
| Radiator Assembly .....                                                           | 32 |
| Clutch Linkage Assembly .....                                                     | 33 |
| Transaxle Assembly .....                                                          | 34 |
| Case Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....                 | 35 |
| Center Plate Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....         | 36 |
| Main Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....           | 37 |
| Reduction Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....      | 38 |
| Reverse Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....        | 39 |
| Main Shift Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....           | 40 |
| Hi-Lo Shift Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....          | 41 |
| Countershaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....         | 42 |
| Differential Gear Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....    | 43 |
| Differential Carrier Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 ..... | 44 |
| Differential Lock Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....    | 45 |
| Axle Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....           | 46 |
| Front Drive Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175 .....          | 47 |
| 4 Wheel Drive Assembly .....                                                      | 48 |
| Differential Assembly No. 119-0824 .....                                          | 49 |
| Drive Shaft Assembly No. 115-2171 .....                                           | 50 |
| Battery Assembly .....                                                            | 51 |
| Tail Light and Fender Assembly .....                                              | 52 |
| Fuel System Assembly .....                                                        | 53 |
| Hydraulic Lift Cylinder Assembly .....                                            | 54 |
| Hydraulic Cylinder Assembly No. 106-7939 .....                                    | 56 |
| Main Hydraulic Pump and Lift Valve Assembly .....                                 | 57 |
| Control Valve Assembly No. 43-1950 .....                                          | 58 |
| Air Cleaner Assembly .....                                                        | 59 |
| Air Cleaner Assembly No. 106-5277 .....                                           | 60 |

## Contents (continued)

|                                                   |    |
|---------------------------------------------------|----|
| High Flow Assembly .....                          | 61 |
| Hydraulic Pump Assembly No. 115-7787 .....        | 62 |
| Tank Assembly No. 114-8435 .....                  | 63 |
| Hydraulic Manifold Assembly No. 115-2252 .....    | 64 |
| Coupler Assembly No. 114-8434 .....               | 65 |
| High Flow Hose Assembly .....                     | 66 |
| Front and Rear Wire Harness Assembly .....        | 67 |
| Crankcase Assembly .....                          | 68 |
| Oil Pan Assembly .....                            | 69 |
| Cylinder Head Assembly .....                      | 70 |
| Gear Case and Oil Filter Cartridge Assembly ..... | 71 |
| Cylinder Head Cover Assembly .....                | 72 |
| Oil Pump and Dipstick Assembly .....              | 73 |
| Main Bearing Case Assembly .....                  | 74 |
| Camshaft and Idle Gear Shaft Assembly .....       | 75 |
| Piston and Crankshaft Assembly .....              | 76 |
| Flywheel Assembly .....                           | 77 |
| Fuel Camshaft Assembly .....                      | 78 |
| Idle Apparatus Assembly .....                     | 79 |
| Stop Solenoid and Fuel Pump Cover Assembly .....  | 80 |
| Injection Pump Assembly .....                     | 81 |
| Governor Assembly .....                           | 82 |
| Speed Control Plate Assembly .....                | 83 |
| Nozzle Holder Assembly .....                      | 84 |
| Nozzle Holder and Glow Plug Assembly .....        | 86 |
| Alternator and Pulley Assembly .....              | 87 |
| Alternator Components Assembly .....              | 88 |
| Starter Assembly .....                            | 89 |
| Starter Component Assembly .....                  | 90 |
| Water Flange and Thermostat Assembly .....        | 91 |
| Water Pump and Water Pipe Assembly .....          | 92 |
| Valve and Rocker Arm Assembly .....               | 93 |
| Inlet and Exhaust Manifold Assembly .....         | 94 |
| Miscellaneous Engine Parts .....                  | 95 |
| Attachments and Accessories .....                 | 96 |



## Front Frame Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 120-5083-03 | 1    | Frame-Front            |
| 2    | 87-2440     | 2    | Bumper-Rubber          |
| 3    | 26-0071     | 2    | Snubber-Rubber         |
| 7    | 42862       | 1    | Block-Terminal, Ground |
| 8    | 32105-13    | 6    | Screw-HWH              |
| 9    | 3290-148    | 6    | Nut-HF                 |
| 10   | 110-2594    | 1    | Horn                   |
| 11   | 3234-1      | 1    | Screw-HHF              |
| 12   | 106-2427-03 | 1    | Cover                  |
| 13   | 114-8272-03 | 1    | Bracket-Bumper         |
| 14   | 3234-14     | 4    | Screw-HHF              |

 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 15   | 32144-11    | 4    | Screw-HWH       |
| 17   | 94-2413     | 7    | Nut-U           |
| 18   | 3231-21     | 4    | Screw-CARR      |
| 19   | 3290-357    | 7    | Nut-HSF         |
| 21   | 114-8418    | 7    | Screw-HWH, Sems |
| 22   | 42863       | 1    | Strip-Jumper    |
| 23   | 107-8042    | 2    | Bumper-Rubber   |
| 25   | 3290-379    | 8    | Tie-Cable       |
| 26   | 115-7813    | 1    | Decal-Fuse      |
| 31   | 32180-030   | 2    | Clip-Tie        |



## Rear Frame and Suspension Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 115-2255-03 | 1    | Frame-Rear        |
| 2    | 131-3474    | 1    | Mount-Spring, LH  |
| 3    | 131-3472    | 1    | Mount-Spring, RH  |
| 4    | 104-8301    | 10   | Nut-HF, NI        |
| 5    | 87-4760     | 12   | Bushing-Rubber    |
| 6    | 87-1490     | 2    | Spring-Leaf, Rear |
| 7    | 131-3476    | 4    | Shackle           |
| 8    | 3234-38     | 18   | Screw-HHF         |
| 9    | 99-5107     | 18   | Nut-Lock          |
| 10   | 32148-9     | 4    | Nut-Clinch        |
| 11   | 87-5800-03  | 2    | Mount-Transaxle   |
| 12   | 106-7865    | 2    | Mount-Engine      |


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 13   | 87-5100     | 4    | Washer-Snubbing    |
| 14   | 3234-24     | 4    | Screw-HHF          |
| 15   | 108-3109    | 2    | Retainer-Cylinder  |
| 16   | 3229-1      | 2    | Screw-CARR         |
| 17   | 104-7201    | 3    | Nut-HF, NI         |
| 18   | 87-3470     | 2    | Bumper             |
| 19   | 103-9511    | 2    | Nut-Lock, NI       |
| 20   | 115-2047    | 2    | Decal-Surface, Hot |
| 21   | 33116-080   | 2    | Screw-HH           |
| 22   | 3255-8      | 1    | Washer-Lock        |
| 23   | 32105-15    | 1    | Screw-HWH          |

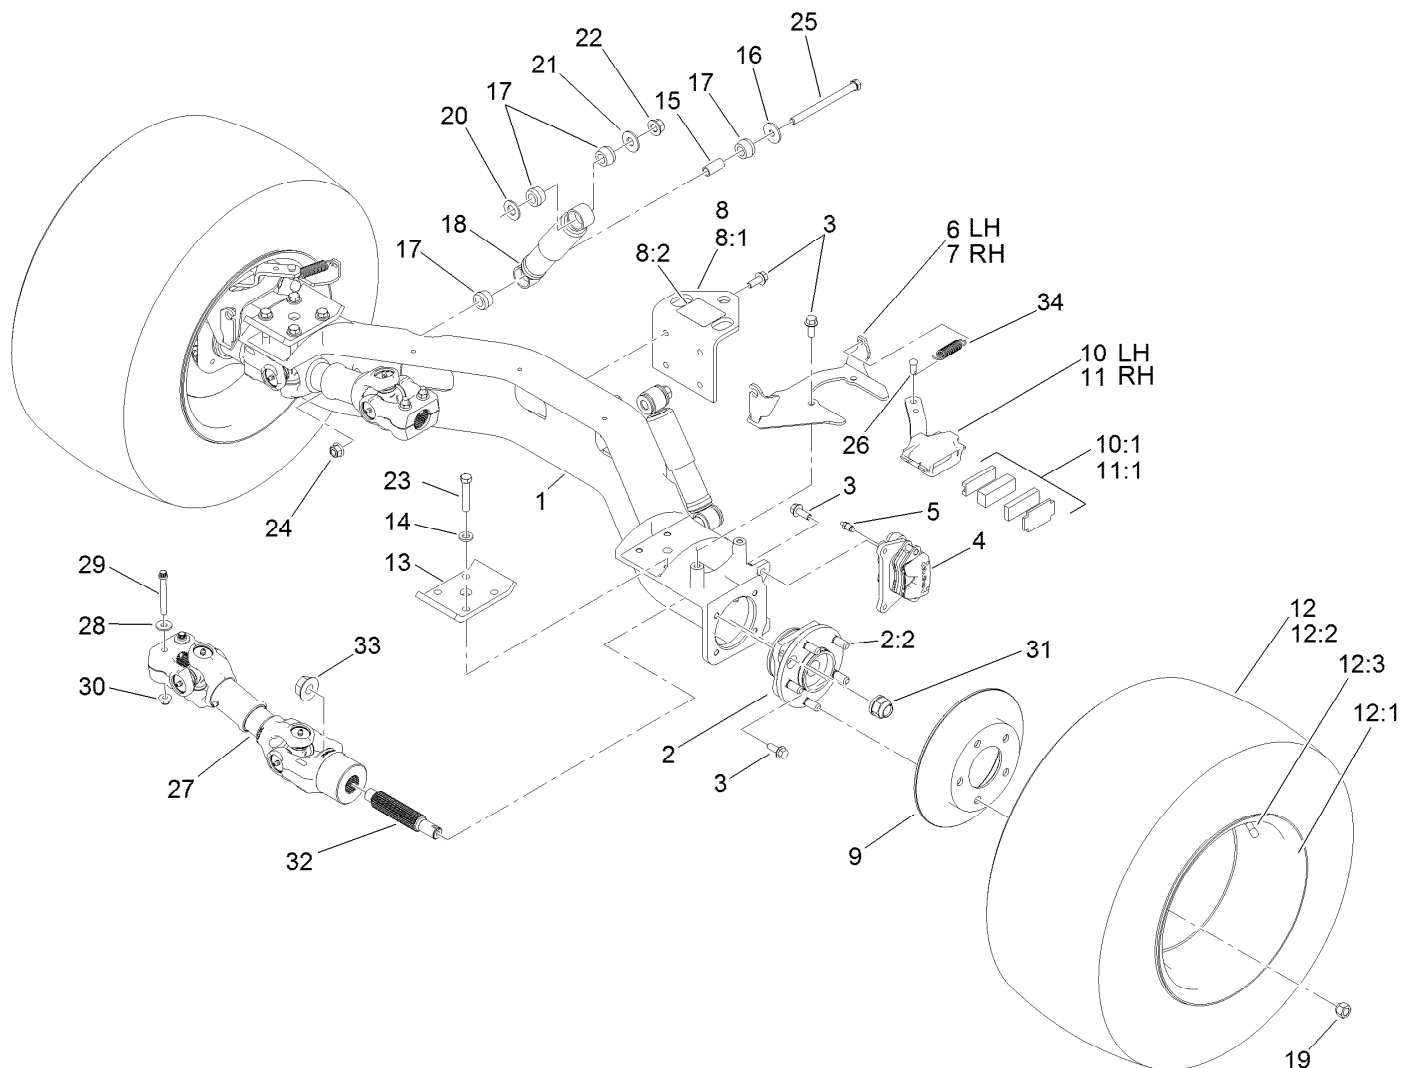

## Rear Axle Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 119-9515    | 1    | Axle-Rear              |
| 2    | 121-9751    | 2    | Hub-Bearing, Wheel     |
| 2:2  | 121-9752    | 5    | Stud-Wheel             |
| 3    | 3234-11     | 20   | Screw-HHF              |
| 4    | 127-7424    | 2    | Brake Caliper ASM      |
| 5    | 119-9509    | 2    | Screw-Bleed            |
| 6    | 115-2362-03 | 1    | Bracket-Caliper, LH    |
| 7    | 115-2359-03 | 1    | Bracket-Caliper, RH    |
| 8    | 115-7742    | 1    | Hitch ASM              |
| 8:1  | 92-5951-03  | 1    | Angle-Hitch            |
| 8:2  | 115-7740    | 1    | Decal-Load, Towing     |
| 9    | 114-8351    | 2    | Rotor-Brake            |
| 10   | 114-8365    | 1    | Caliper-Mechanical, LH |
| 10:1 | 115-7847    | 1    | Parking Brake Pad Kit  |
| 11   | 114-8366    | 1    | Caliper-Mechanical, RH |
| 11:1 | 115-7847    | 1    | Parking Brake Pad Kit  |
| 12   | 117-4838    | 2    | Tire And Wheel ASM     |
| 12:1 | 114-8259    | 1    | Wheel                  |
| 12:2 | 110-5132    | 1    | Tire                   |
| 12:3 | 232-27      | 1    | Stem-Valve             |
| 13   | 87-7470-03  | 2    | Plate-Spring, Clamp    |
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 14   | 87-7480     | 8    | Washer                 |
| 15   | 87-3600     | 2    | Spacer-Absorber, Shock |
| 16   | 87-5330     | 2    | Washer                 |
| 17   | 87-3920     | 8    | Bushing                |
| 18   | 87-3110     | 2    | Absorber-Shock         |
| 19   | 242-50      | 10   | Nut-Lug                |
| 20   | 3256-27     | 2    | Washer-Flat            |
| 21   | 3256-6      | 2    | Washer-Flat            |
| 22   | 99-5107     | 2    | Nut-Lock               |
| 23   | 115-2398    | 8    | Bolt-HH                |
| 24   | 114-8417    | 2    | Nut-HF, NI             |
| 25   | 114-8424    | 2    | Screw-HH               |
| 26   | 283-85      | 2    | Pin-Clevis             |
| 27   | 114-8367    | 2    | Driveshaft ASM         |
| 28   | 80-6990     | 4    | Washer-Hardened        |
| 29   | 98-2939     | 4    | Screw-Cap              |
| 30   | 104-8301    | 4    | Nut-HF, NI             |
| 31   | 115-2164    | 2    | Nut-Spindle            |
| 32   | 115-7771    | 2    | Shaft-Splined          |
| 33   | 32128-53    | 2    | Nut-HF                 |
| 34   | 104-6415    | 2    | Spring-Return, Pedal   |

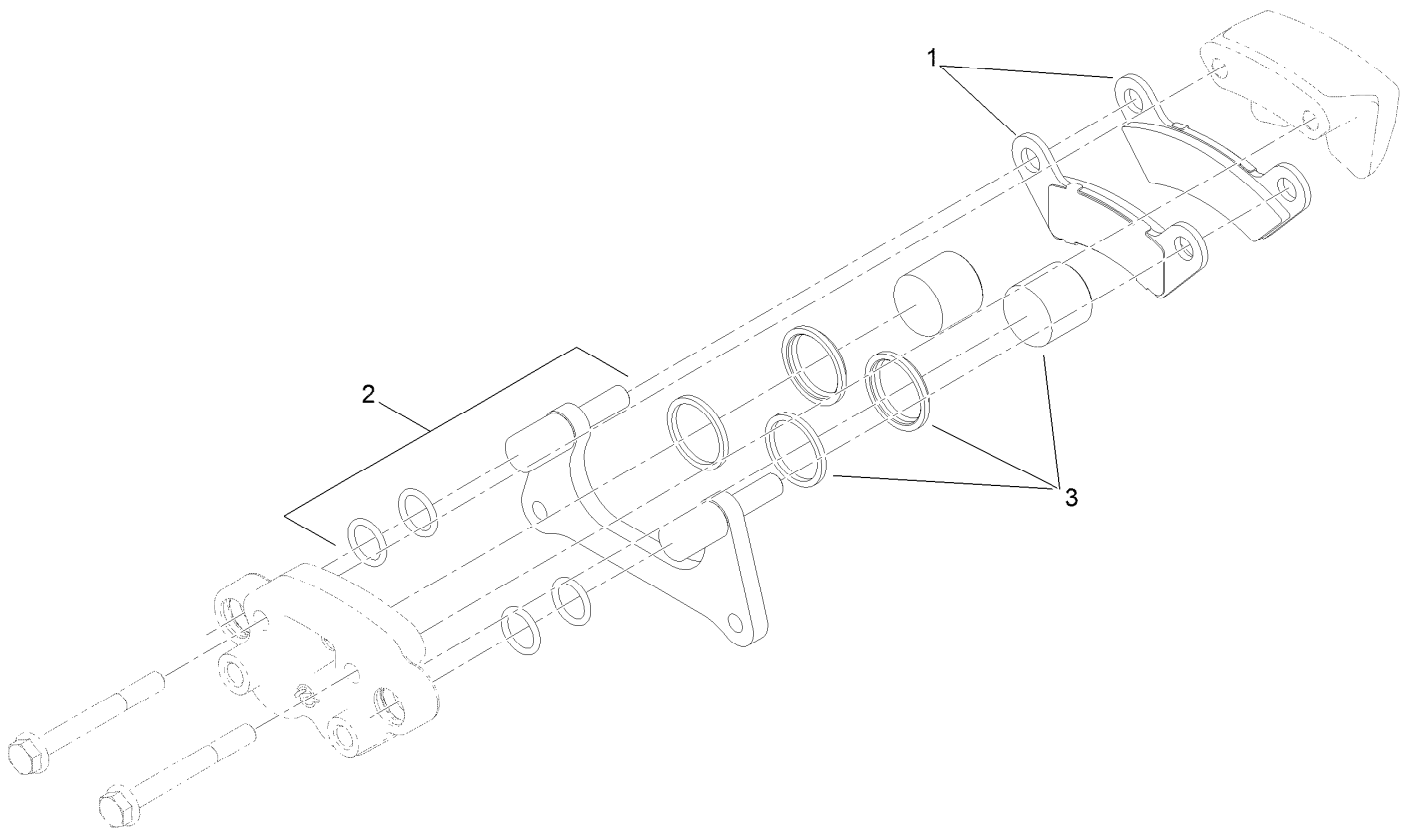


## Brake Caliper Assembly No. 127-7424
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-9510           | 1           | *obs* Pads-Brake   |
| 2           | 119-9511           | 1           | Bracket Kit        |
| 3           | 119-9512           | 1           | Piston Kit         |

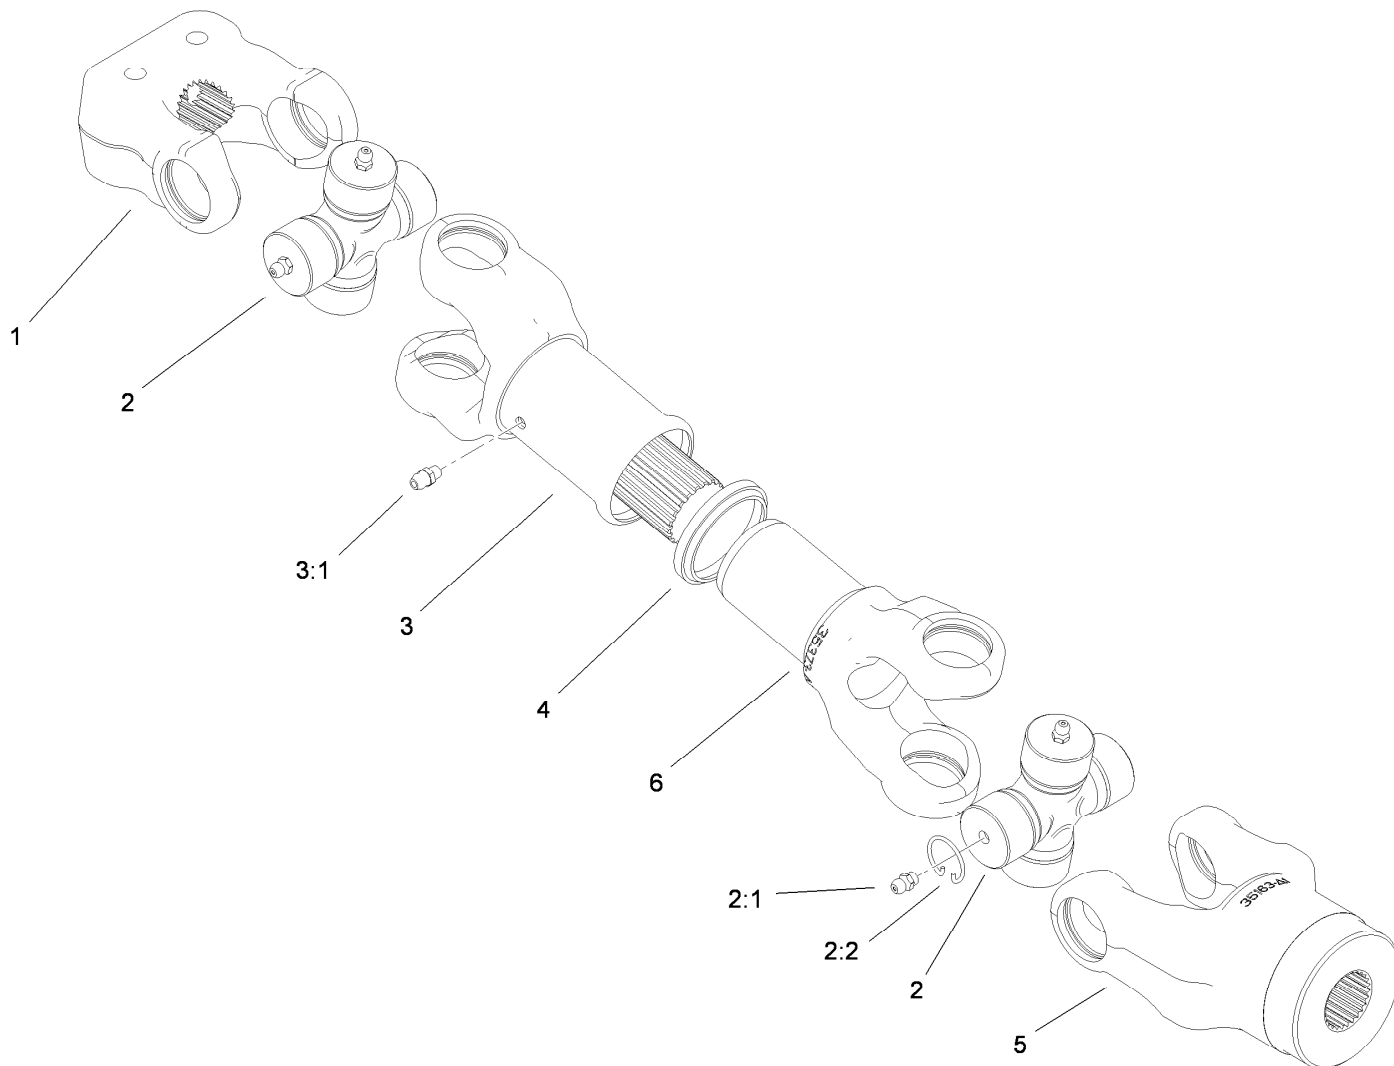


## Driveshaft Assembly No. 114-8367
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 98-2940     | 1    | Yoke                      |
| 2    | 92-4187     | 2    | Cross And Bearing Kit     |
| 2:1  | 302-58      | 4    | Fitting-Straight          |
| 2:2  | 92-4188     | 4    | Ring-Snap                 |
| 3    | 92-4179     | 1    | Yoke-Tube, Shaft And Seal |
| 3:1  | 302-5       | 1    | Fitting-Grease            |
| 4    | 92-4180     | 1    | Seal                      |
| 5    | 115-2351    | 1    | Yoke                      |
| 6    | 92-4182     | 1    | Yoke-Telescoping          |

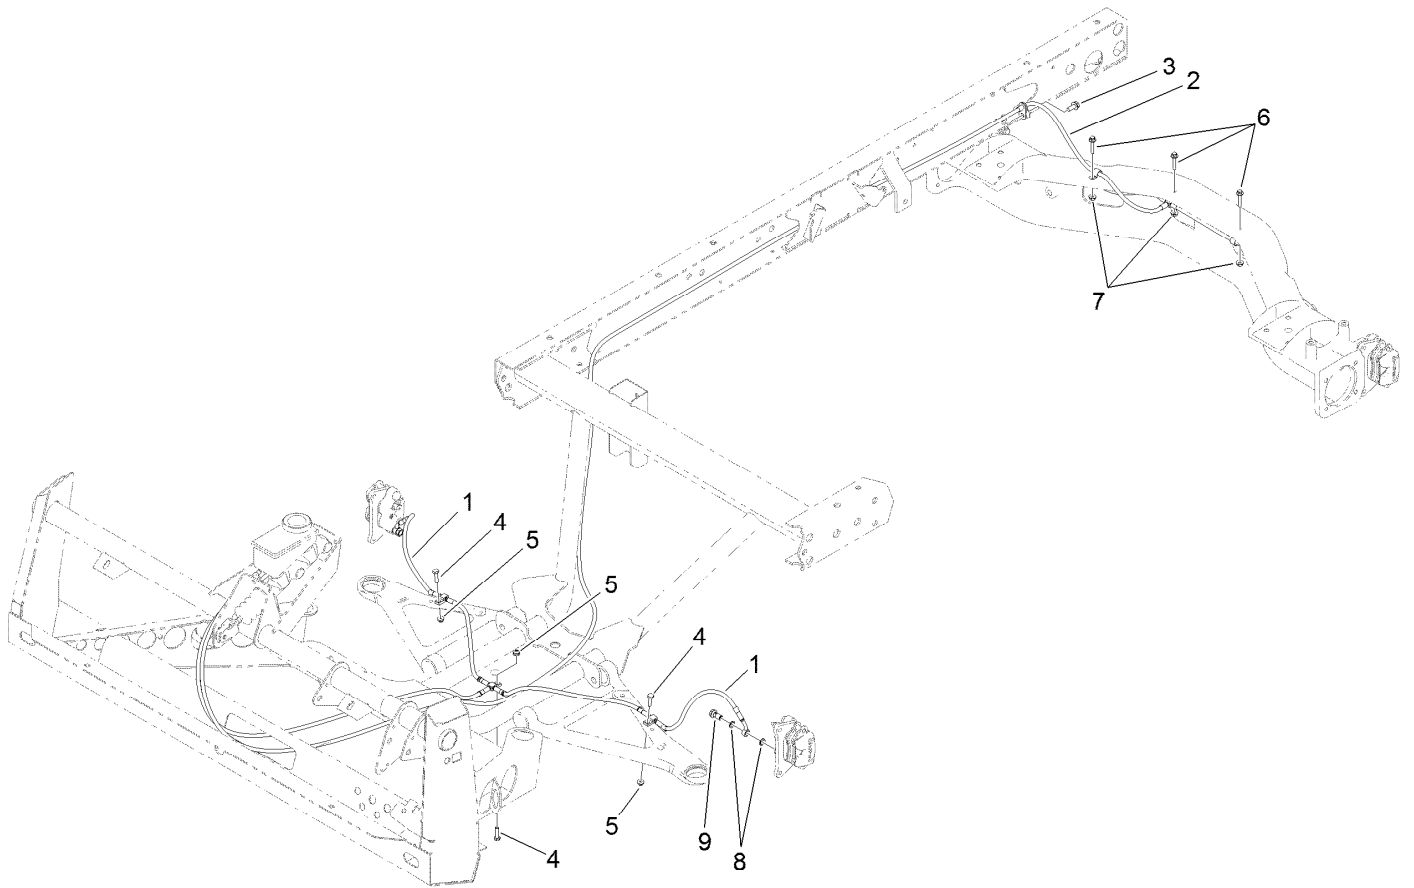

## Front and Rear Brake Line Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 119-9682    | 1    | Front Brake Line ASM |
| 2    | 119-9681    | 1    | Rear Brake Line ASM  |
| 3    | 32144-11    | 1    | Screw-HWH            |
| 4    | 321-6       | 3    | Screw-HH             |
| 5    | 104-7201    | 3    | Nut-HF, NI           |
| 6    | 3234-21     | 3    | Screw-HHF            |
| 7    | 32128-33    | 3    | Nut-HF               |
| 8    | 115-2341    | 8    | Washer-Banjo         |
| 9    | 120-4875    | 4    | Bolt-Flange, Banjo   |

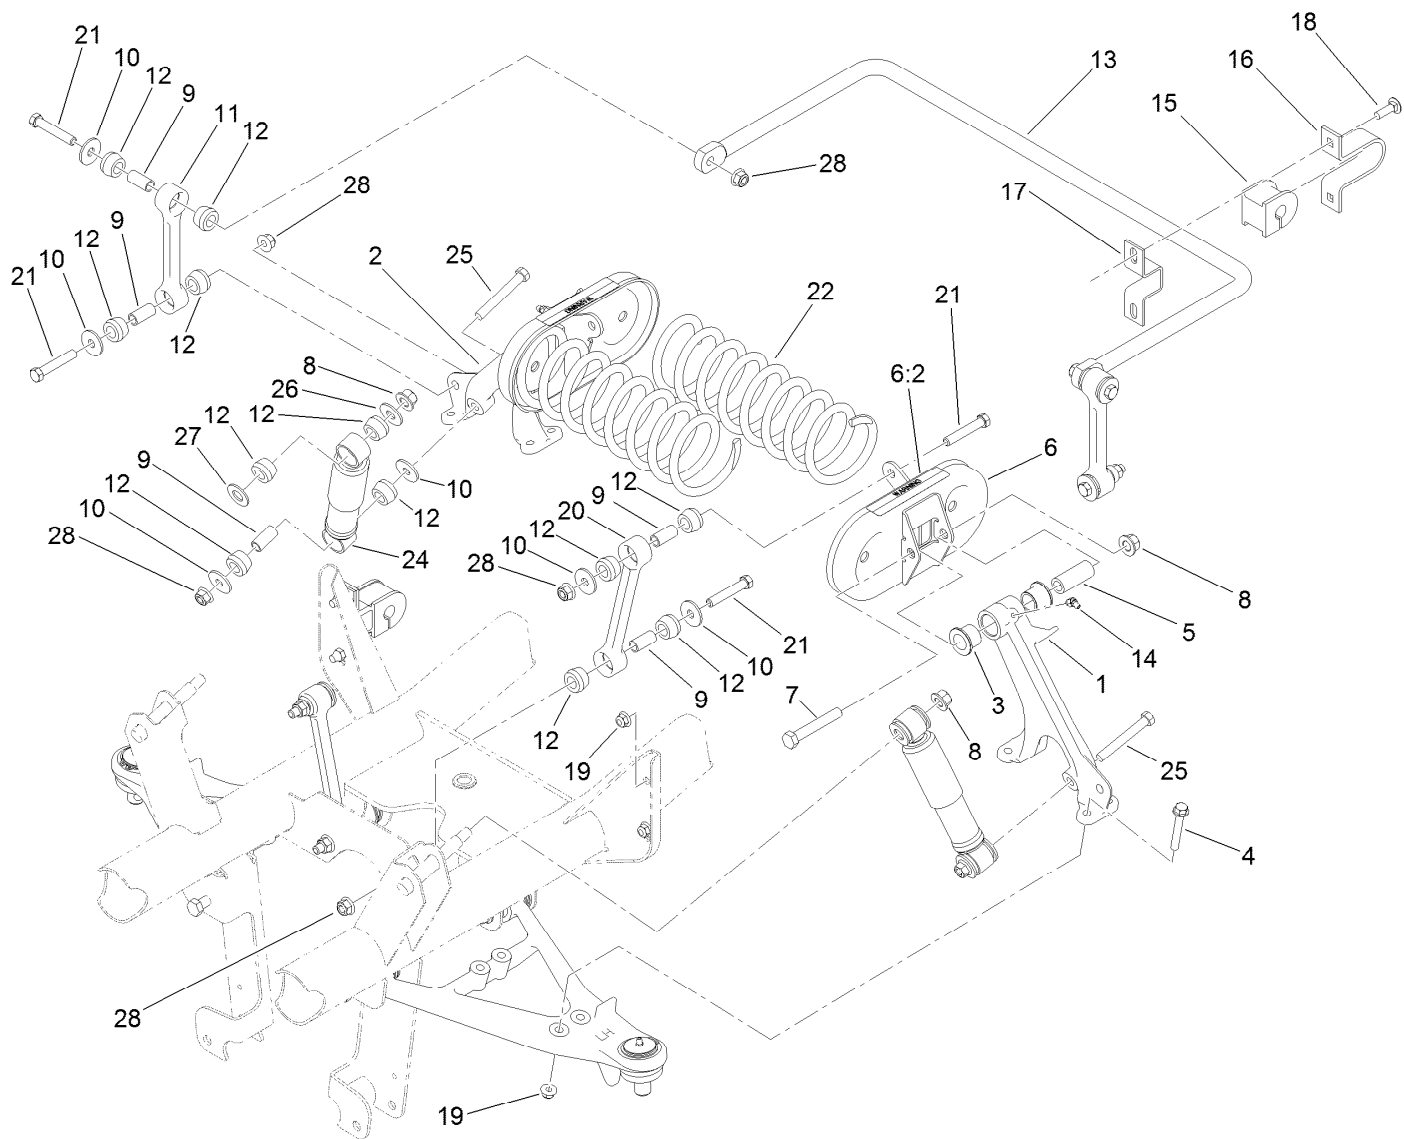

## Front Suspension Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 87-0160     | 1    | Tower-Control Arm, LH  |
| 2    | 87-0150     | 1    | Tower-Control Arm, RH  |
| 3    | 33-3090     | 4    | Bushing                |
| 4    | 3234-39     | 8    | Screw-HHF              |
| 5    | 87-2500     | 2    | Sleeve-Spring, Pivot   |
| 6    | 105-7958    | 2    | Spring Cradle ASM      |
| 6:2  | 93-9879     | 1    | Decal-Warning          |
| 7    | 325-13      | 2    | Screw-HH               |
| 8    | 99-5107     | 4    | Nut-Lock               |
| 9    | 87-3600     | 10   | Spacer-Absorber, Shock |
| 10   | 87-5330     | 12   | Washer                 |
| 11   | 119-6725    | 2    | Link, Anti-Sway Bar    |
| 12   | 87-3920     | 24   | Bushing                |
| 13   | 87-3850-03  | 1    | Bar-Sway, Anti         |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 14   | 302-11      | 2    | Fitting-Lube, 45 DEG |
| 15   | 87-3910     | 2    | Bushing-Rubber       |
| 16   | 87-4010-03  | 2    | Clamp-Bar, Sway      |
| 17   | 87-3890-03  | 2    | Bracket-Bar, Sway    |
| 18   | 3231-25     | 4    | Bolt-CARR            |
| 19   | 104-8301    | 12   | Nut-HF, NI           |
| 20   | 119-6724    | 2    | Link-Stabilizer      |
| 21   | 324-10      | 8    | Screw-HH             |
| 22   | 105-4183-01 | 2    | Spring-Compression   |
| 24   | 87-3110     | 2    | Absorber-Shock       |
| 25   | 324-13      | 2    | Screw-HH             |
| 26   | 3256-6      | 2    | Washer-Flat          |
| 27   | 3256-27     | 2    | Washer-Flat          |
| 28   | 114-8417    | 10   | Nut-HF, NI           |

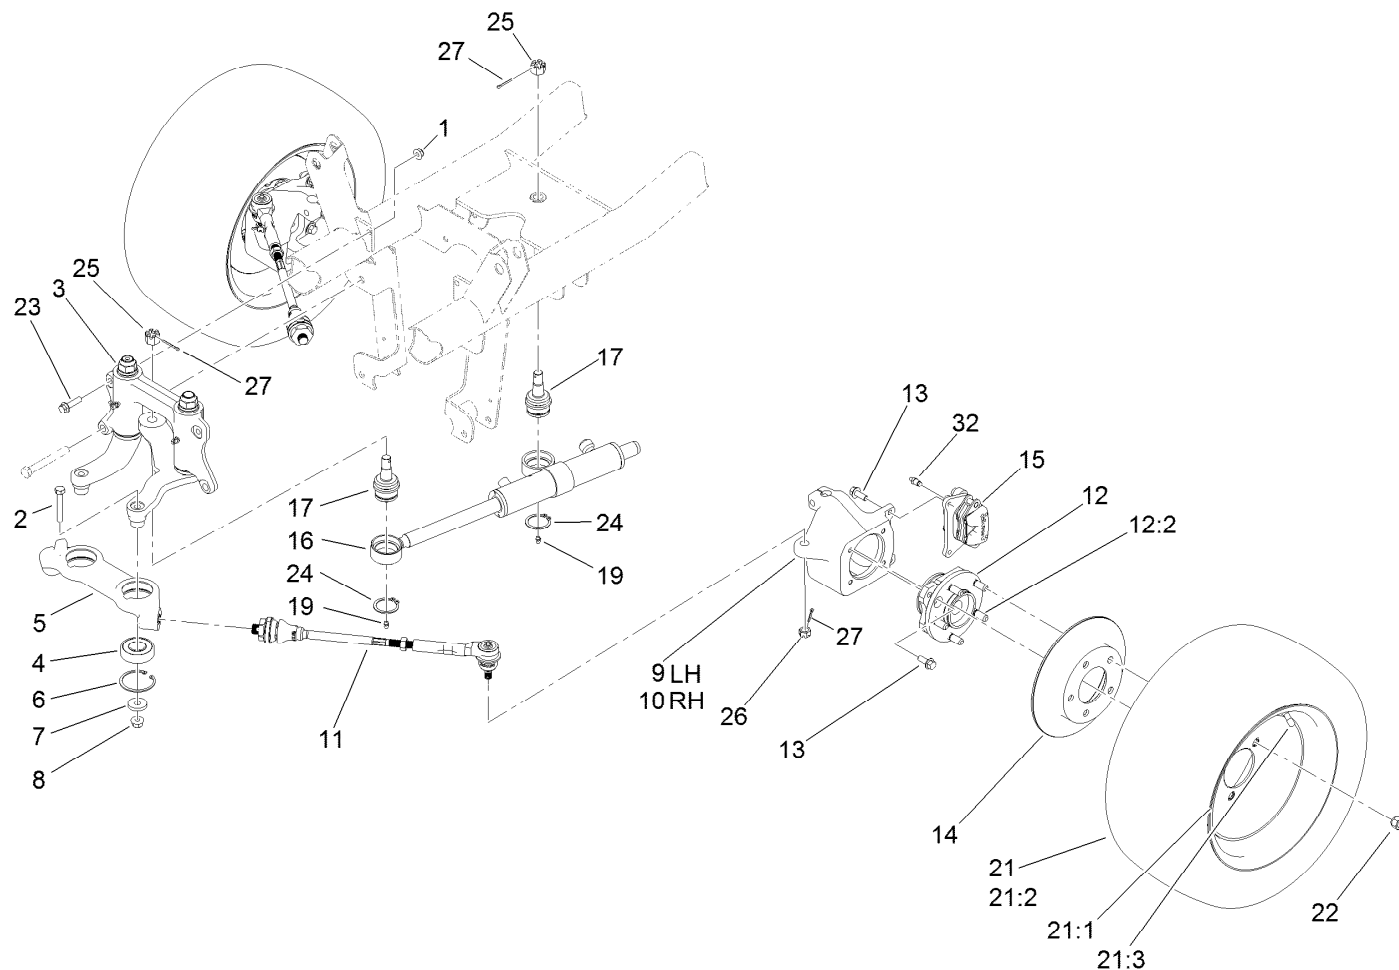


## Steering and Front Wheel Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 104-8301    | 2    | Nut-HF, NI             |
| 2    | 324-10      | 2    | Screw-HH               |
| 3    |             | 1    | Steering Linkage ASM ● |
| 4    | 119-9548    | 2    | Bearing-Ball           |
| 5    | 114-8296    | 1    | Link-Center            |
| 6    | 32120-22    | 2    | Ring-Snap, Internal    |
| 7    | 112843      | 2    | Washer                 |
| 8    | 114-8417    | 2    | Nut-HF, NI             |
| 9    | 119-9513    | 1    | Knuckle-LH             |
| 10   | 119-9514    | 1    | Knuckle-RH             |
| 11   | 114-8356    | 2    | Tie Rod ASM            |
| 12   | 121-9751    | 2    | Hub-Bearing, Wheel     |
| 12:2 | 121-9752    | 5    | Stud-Wheel             |
| 13   | 3234-11     | 12   | Screw-HHF              |
| 14   | 114-8351    | 2    | Rotor-Brake            |


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 15   | 127-7424    | 2    | Brake Caliper ASM        |
| 16   | 120-5059    | 1    | HYD Cylinder ASM         |
| 17   | 106-6774    | 2    | Joint-Ball               |
| 19   | 302-5       | 2    | Fitting-Grease           |
| 21   | 131-6671    | 2    | Tire And Wheel ASM       |
| 21:1 | 131-6669    | 1    | Wheel                    |
| 21:2 | 131-6670    | 1    | Tire                     |
| 21:3 | 232-27      | 1    | Stem-Valve               |
| 22   | 242-50      | 10   | Nut-Lug                  |
| 23   | 114-4681    | 2    | Screw-HHF                |
| 24   | 32151-104   | 2    | Ring-Retaining, External |
| 25   | 32136-14    | 2    | Nut-Hst                  |
| 26   | 32136-3     | 2    | Nut-SHH                  |
| 27   | 3272-12     | 4    | Pin-Cotter               |
| 32   | 119-9509    | 2    | Screw-Bleed              |

 ● Not serviced separately

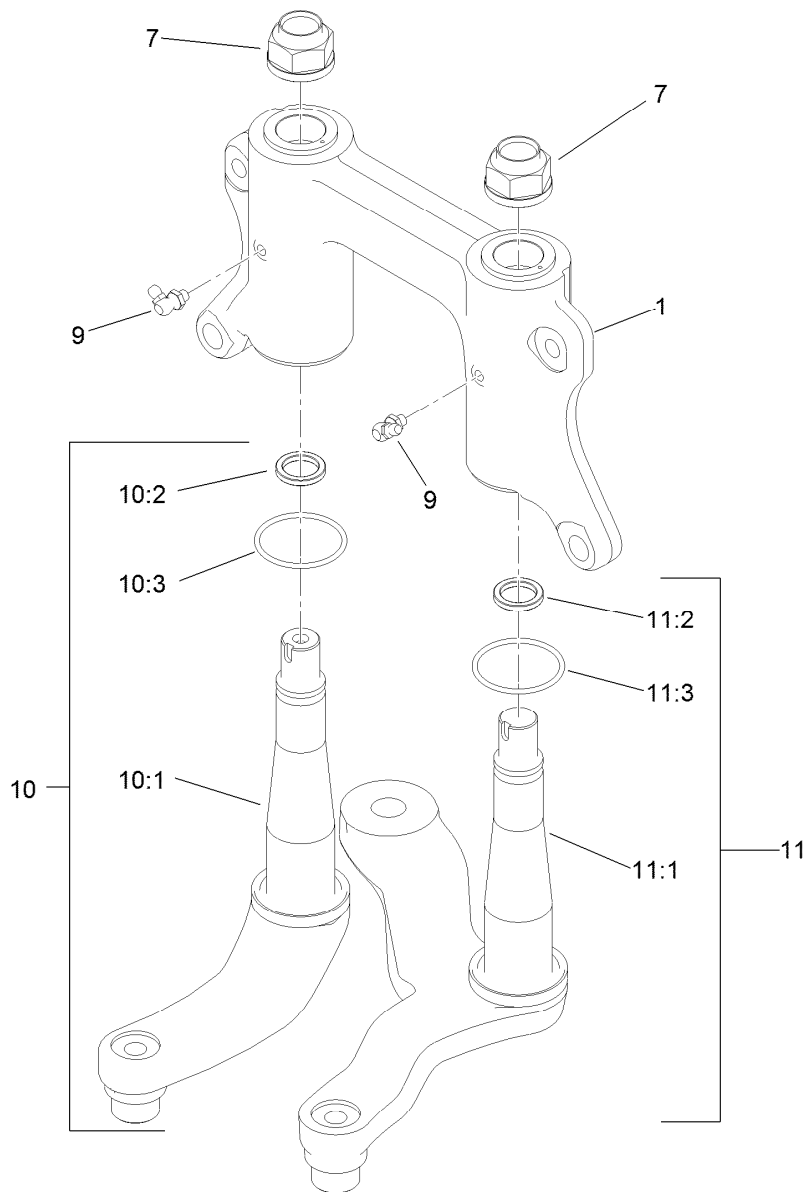

## Steering Linkage Assembly
 
| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 1    | 132-6767    | 1    | Mount-Pivot, W/Bushings          |
| 7    | 115-2164    | 2    | Nut-Spindle                      |
| 9    | 302-60      | 2    | Fitting-Grease                   |
| 10   | 132-0794    | 1    | Idler Arm ASM                    |
| 10:1 | 132-0792    | 1    | Idler Arm And Thrust Washer ASM  |
| 10:2 | 93-7510     | 1    | Ring-Quad                        |
| 10:3 | 131-3499    | 1    | O-Ring                           |
| 11   | 132-0795    | 1    | Pitman Arm ASM                   |
| 11:1 | 132-0793    | 1    | Pitman Arm And Thrust Washer ASM |
| 11:2 | 93-7510     | 1    | Ring-Quad                        |
| 11:3 | 131-3499    | 1    | O-Ring                           |

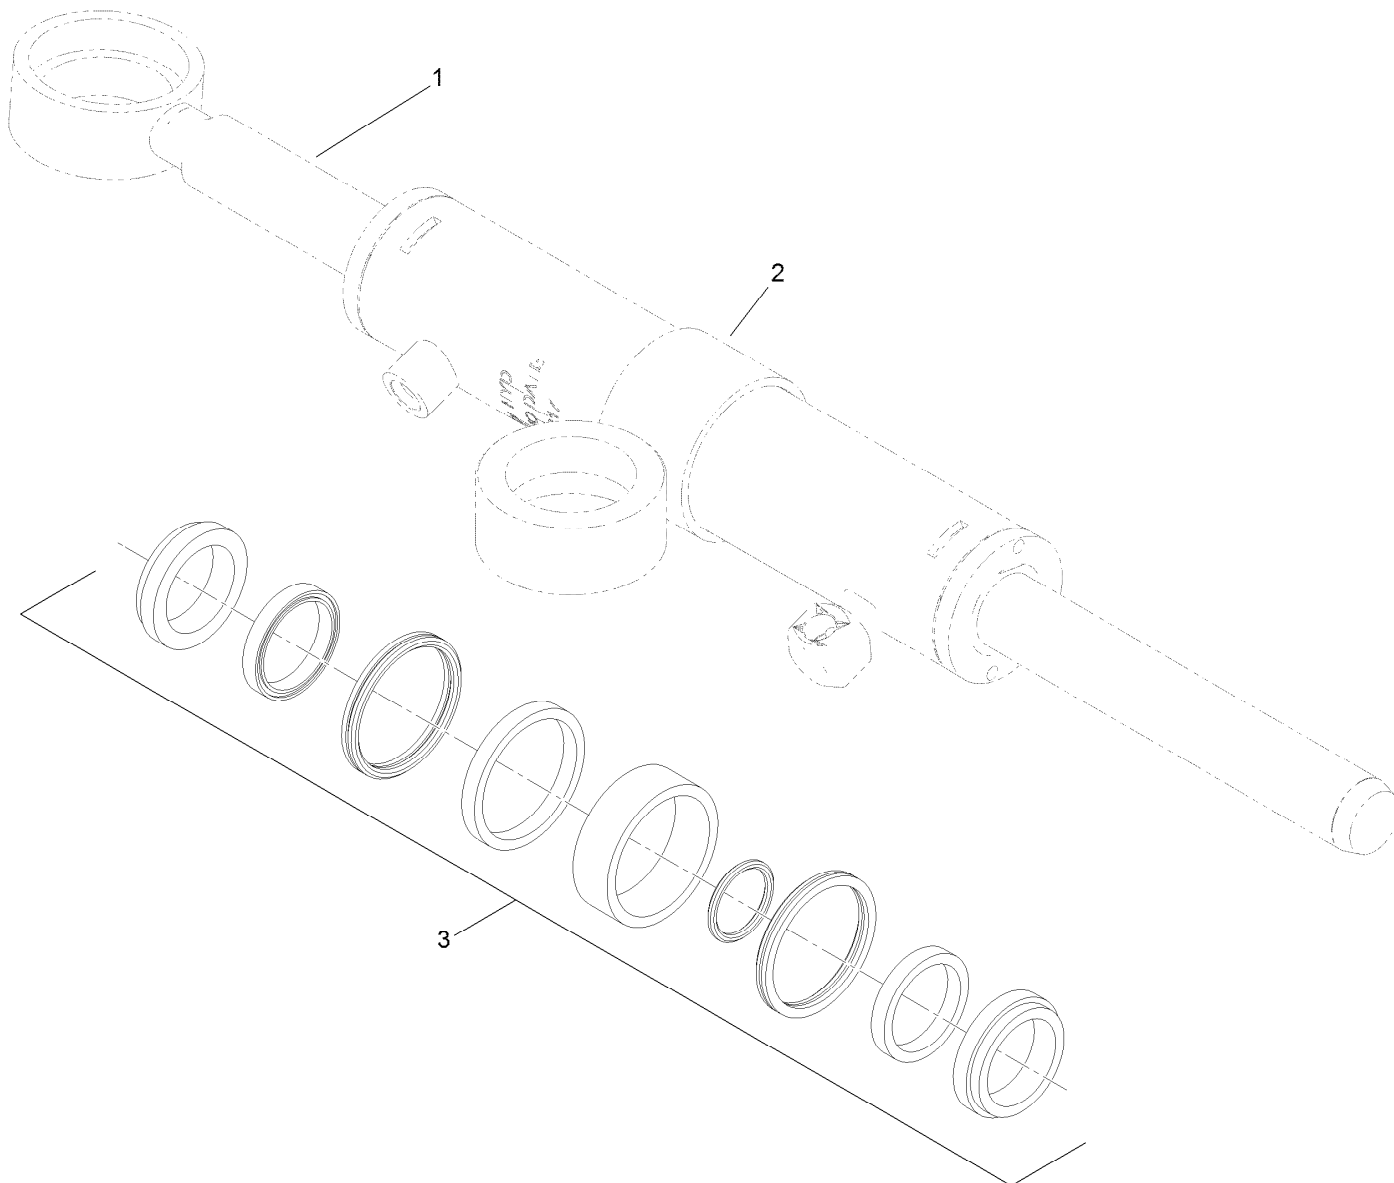

## Hydraulic Cylinder Assembly No. 120-5059

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    |             | 1    | Rod-Cylinder ●      |
| 2    |             | 1    | Body-Cylinder ●     |
| 3    | 115-2160    | 1    | Cylinder Repair Kit |

 
● Not serviced separately



## Front Control Arm Assembly

| Ref.  | Part Number | Qty. | Description              |
|-------|-------------|------|--------------------------|
| 1     | 115-2405    | 1    | Lower LH Control Arm ASM |
| 1:2   | 87-1450     | 2    | Bushing-Flange           |
| 1:3   | 115-2165    | 1    | Ball Joint               |
| 1:3:1 | 302-5       | 1    | Fitting-Grease           |
| 1:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 1:5   | 32151-104   | 1    | Ring-Retaining, External |
| 2     | 115-2407    | 1    | Lower RH Control Arm ASM |
| 2:2   | 87-1450     | 2    | Bushing-Flange           |
| 2:3   | 115-2165    | 1    | Ball Joint               |
| 2:3:1 | 302-5       | 1    | Fitting-Grease           |
| 2:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 2:5   | 32151-104   | 1    | Ring-Retaining, External |
| 3     | 115-2404    | 1    | Upper LH Control Arm ASM |
| 3:2   | 87-1450     | 2    | Bushing-Flange           |
| 3:3   | 115-2165    | 1    | Ball Joint               |


| Ref.  | Part Number | Qty. | Description              |
|-------|-------------|------|--------------------------|
| 3:3:1 | 302-5       | 1    | Fitting-Grease           |
| 3:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 3:5   | 32151-104   | 1    | Ring-Retaining, External |
| 4     | 115-2406    | 1    | Upper RH Control Arm ASM |
| 4:2   | 87-1450     | 2    | Bushing-Flange           |
| 4:3   | 115-2165    | 1    | Ball Joint               |
| 4:3:1 | 302-5       | 1    | Fitting-Grease           |
| 4:4   | 87-2420     | 1    | Seal-Joint, Ball         |
| 4:5   | 32151-104   | 1    | Ring-Retaining, External |
| 5     | 99-5107     | 8    | Nut-Lock                 |
| 6     | 114-8419    | 6    | Screw-HHF                |
| 7     | 324-10      | 4    | Screw-HH                 |
| 8     | 325-17      | 2    | Screw-HH                 |
| 9     | 114-8417    | 4    | Nut-HF, NI               |

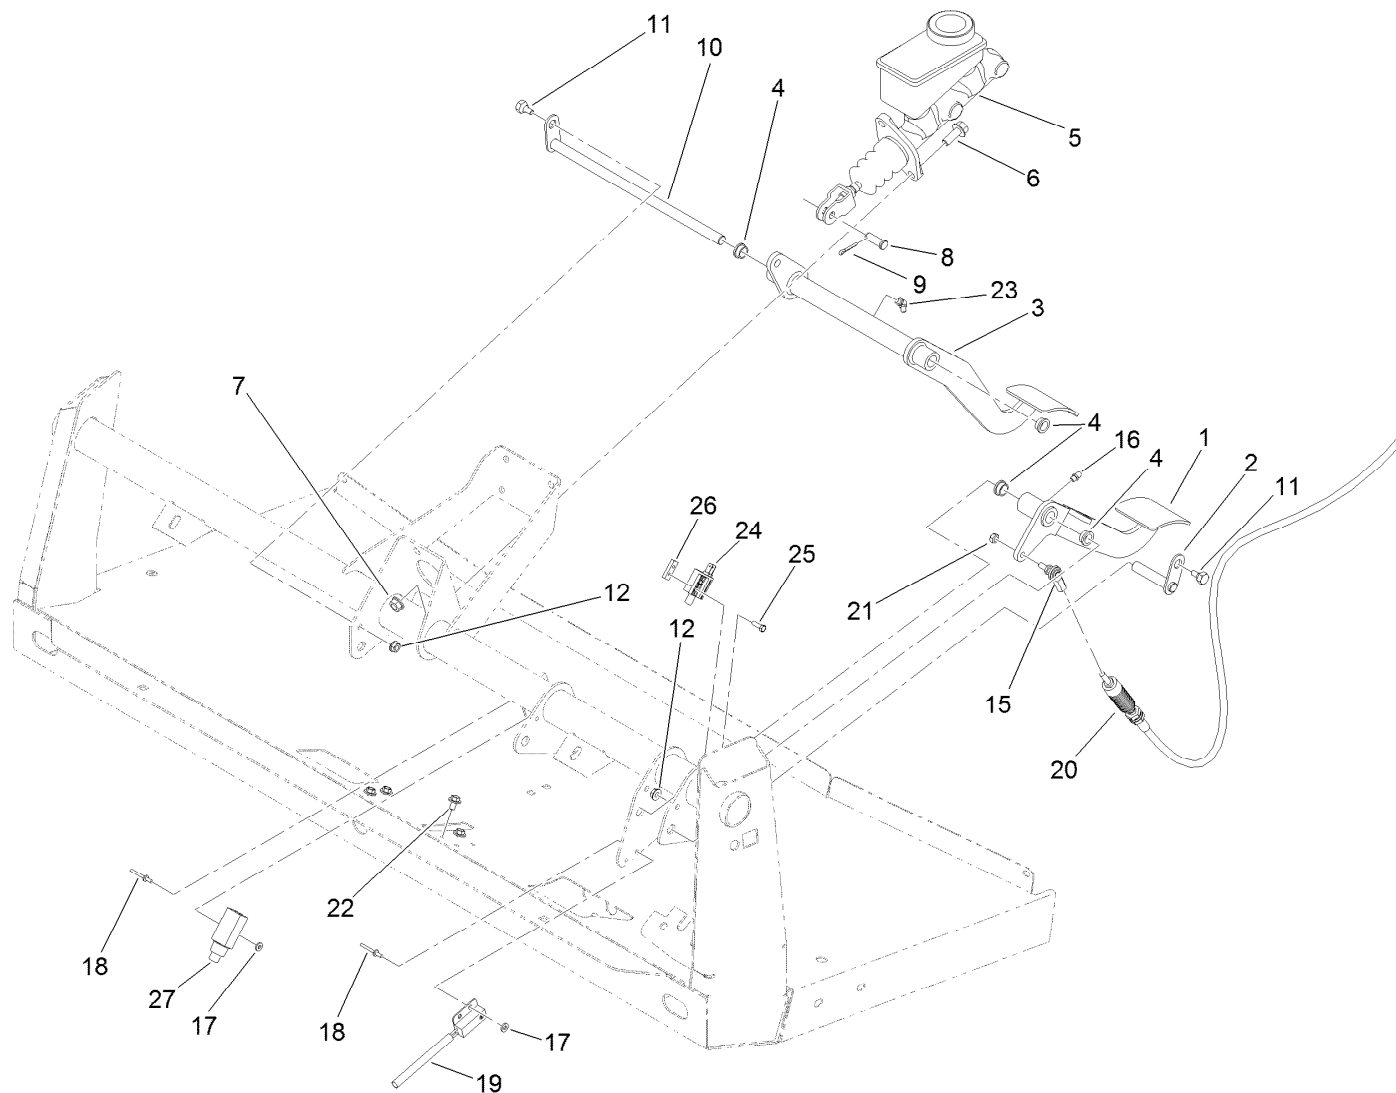

## Brake and Clutch Pedal Assembly


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 127-7357-03 | 1    | Pedal-Clutch        |
| 2    | 115-2269    | 1    | Pin-Pivot           |
| 3    | 120-5023-03 | 1    | Pedal-Brake         |
| 4    | 256-156     | 4    | Bushing-Flange      |
| 5    | 104-6782    | 1    | Master Cylinder ASM |
| 6    | 3234-11     | 2    | Screw-HHF           |
| 7    | 3290-357    | 2    | Nut-HSF             |
| 8    | 283-2       | 1    | Pin-Clevis          |
| 9    | 3272-10     | 1    | Pin-Cotter          |
| 10   | 106-2475    | 1    | Shaft-Brake         |
| 11   | 63-3410     | 2    | Screw-Shoulder      |
| 12   | 32128-33    | 2    | Nut-HF              |
| 15   | 110-2554    | 1    | Rod End-Spherical   |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 16   | 302-5       | 1    | Fitting-Grease        |
| 17   | 3256-21     | 4    | Washer-Flat           |
| 18   | 3269-25     | 4    | Rivet-Pop             |
| 19   | 105-0023    | 1    | Switch-Proximity      |
| 20   | 115-2284    | 1    | Cable-Clutch          |
| 21   | 3296-13     | 1    | Nut-Lock, NI          |
| 22   | 46-6811     | 4    | Screw-HWH             |
| 23   | 302-60      | 1    | Fitting-Grease        |
| 24   | 1-513051    | 1    | Switch-Open, Normally |
| 25   | 3290-134    | 2    | Screw                 |
| 26   | 1-633181    | 1    | Plate-Tapped          |
| 27   | 99-7407     | 1    | Switch                |

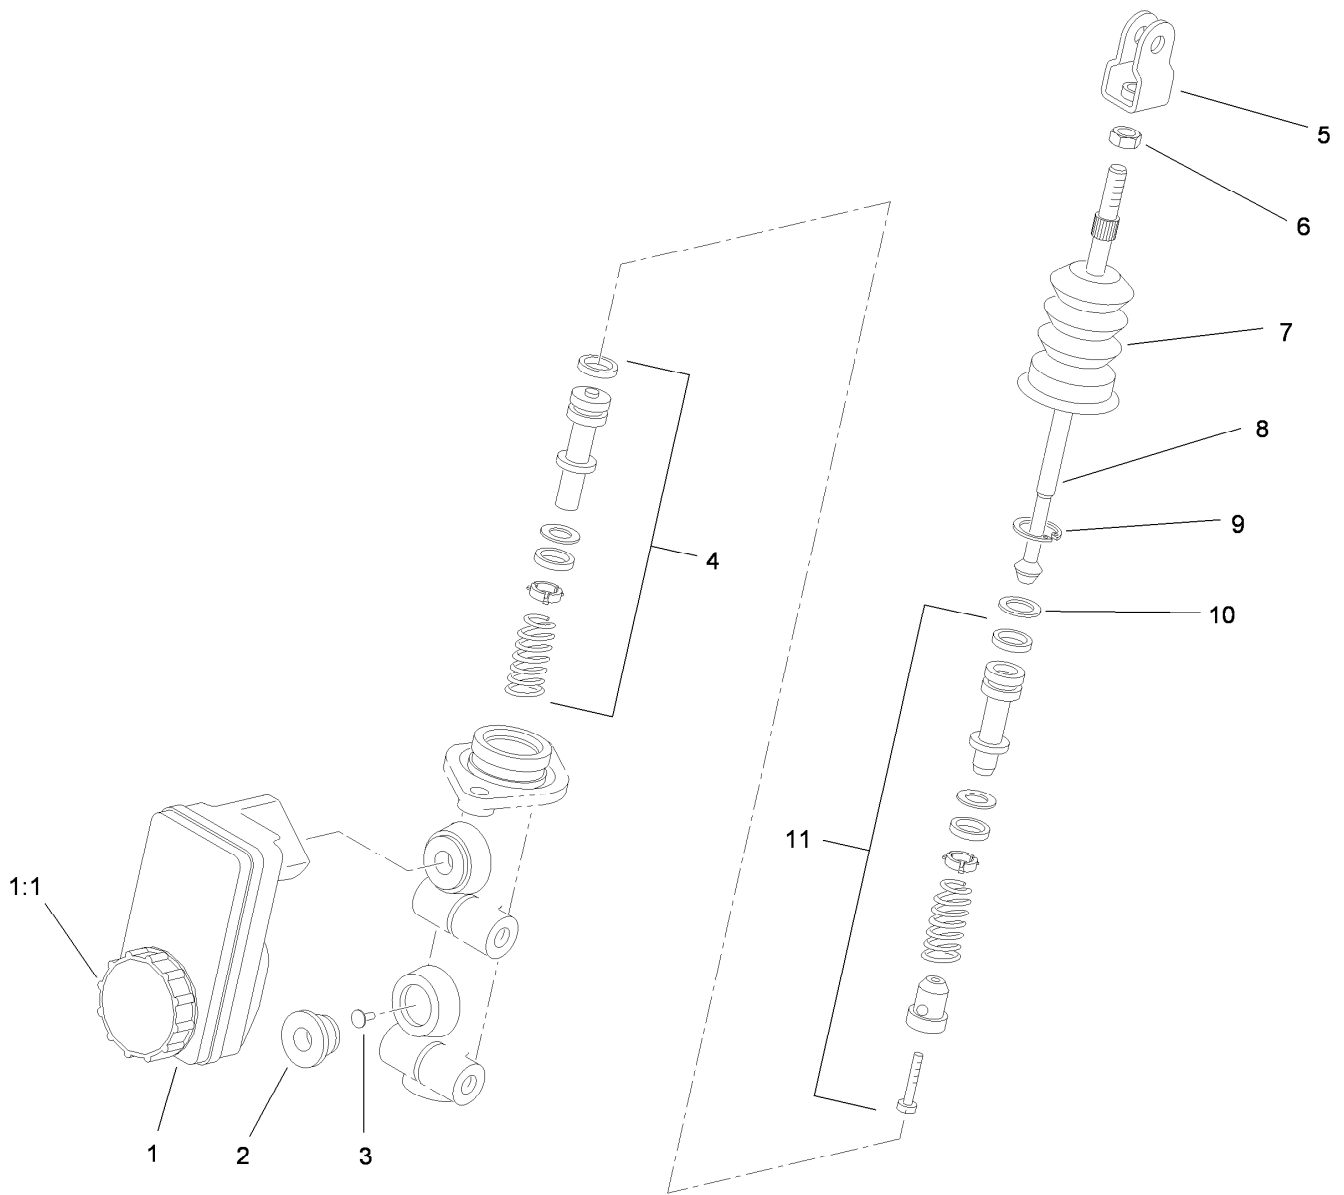

## Master Cylinder Assembly No. 104-6782

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 104-6845    | 1    | Reservoir ASM        |
| 1:1  | 92-4112     | 1    | Cap ASM              |
| 2    | 93-8971     | 2    | Seal-Port, Flange    |
| 3    | 92-4103     | 1    | Pin-Stop             |
| 4    | 92-4102     | 1    | Secondary Piston ASM |
| 5    | 92-4110     | 1    | Clevis               |
| 6    | 21-0360     | 1    | Nut-Hex              |
| 7    | 94-5209     | 1    | Cover-Dust           |
| 8    | 94-5210     | 1    | Rod-Push             |
| 9    | 92-4109     | 1    | Ring-Snap            |
| 10   | 92-4108     | 1    | Retainer-Washer      |
| 11   | 92-4101     | 1    | Primary Piston ASM   |

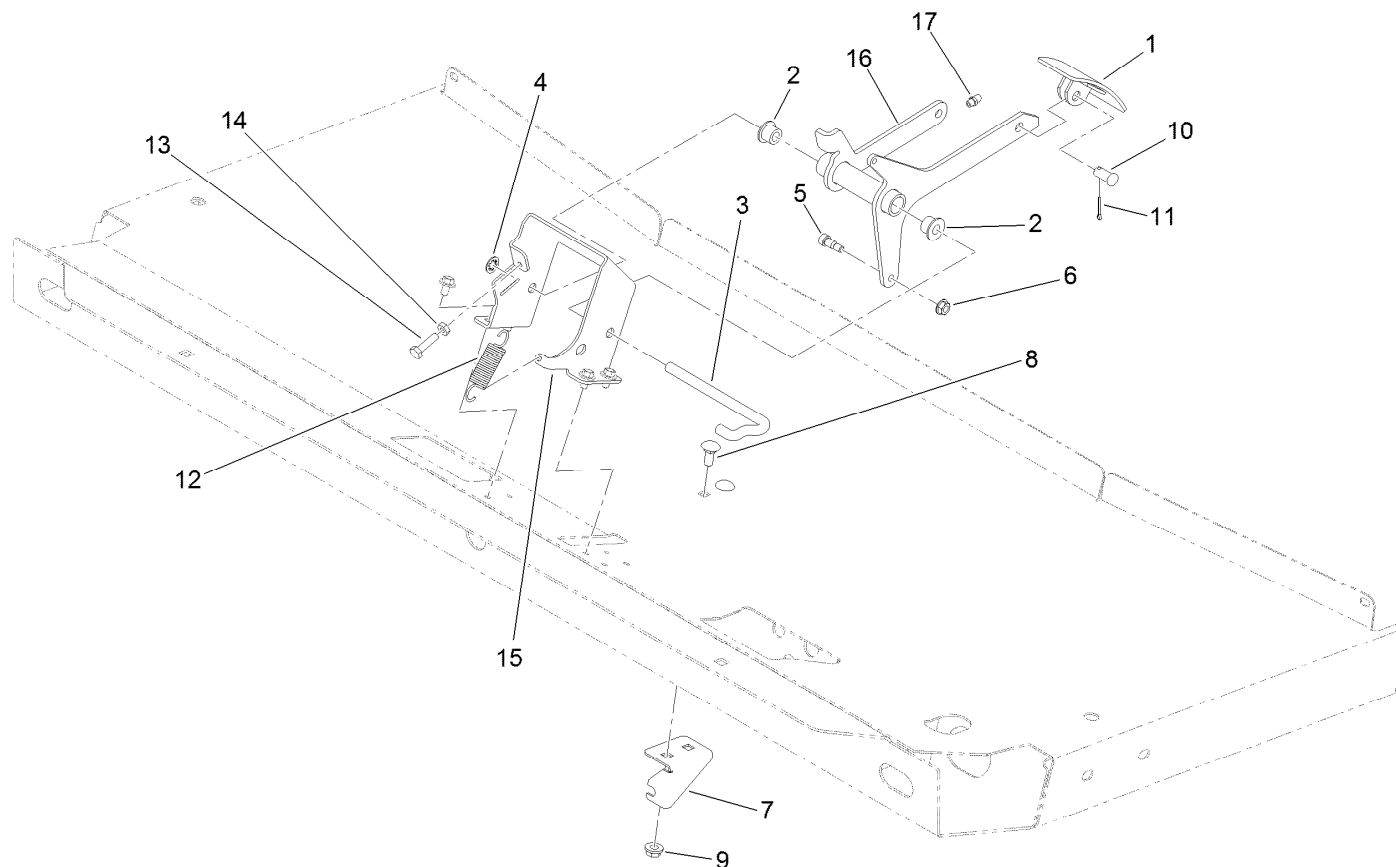

## Accelerator Pedal Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 93-8969-03  | 1    | Pedal                    |
| 2    | 256-259     | 2    | Bushing-Flange           |
| 3    | 87-2880     | 1    | Shaft-Pedal, Accelerator |
| 4    | 32151-56    | 1    | Ring-Retaining, External |
| 5    | 119-4881    | 1    | Bolt-Shoulder            |
| 6    | 32128-33    | 1    | Nut-HF                   |
| 7    | 120-4982    | 1    | Bracket-Mount, Cable     |
| 8    | 3230-1      | 2    | Bolt-CARR                |
| 9    | 32128-20    | 2    | Nut-HF                   |

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 283-85      | 1    | Pin-Clevis           |
| 11   | 3272-6      | 1    | Pin-Cotter           |
| 12   | 67-1450     | 1    | Spring-Idler         |
| 13   | 321-6       | 1    | Screw-HH             |
| 14   | 3218-1      | 1    | Nut-Jam              |
| 15   | 127-8625-03 | 1    | Bracket-Mount, Pedal |
| 16   | 120-4983-03 | 1    | Pedal-Accelerator    |
| 17   | 302-5       | 1    | Fitting-Grease       |

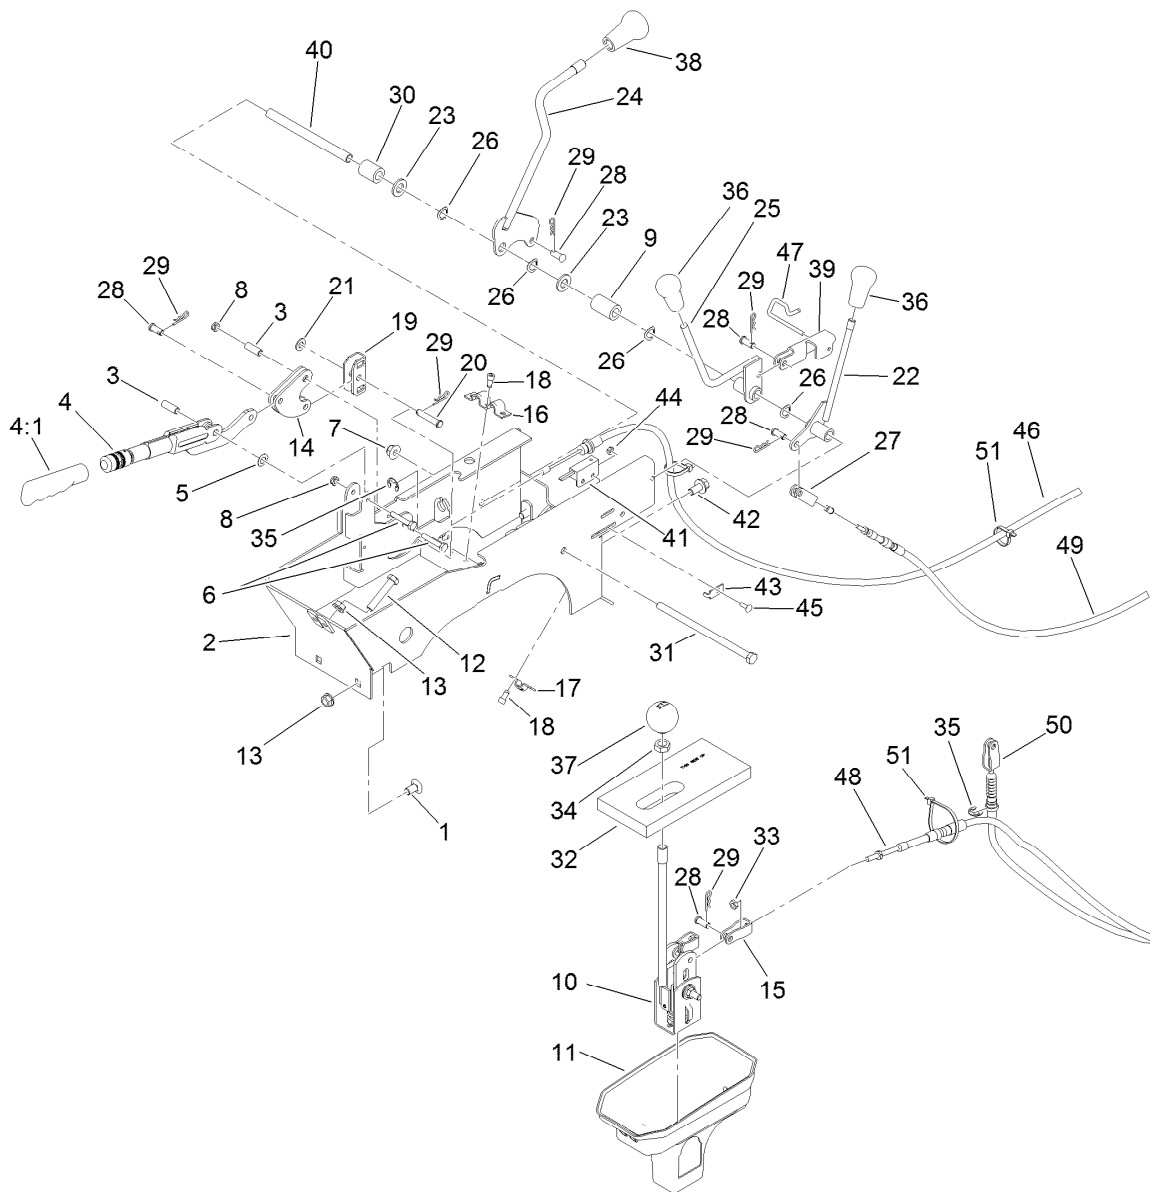

## Console Assembly

| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 3231-21     | 2    | Screw-CARR                |
| 2    | 108-6914-03 | 1    | Support-Lever             |
| 3    | 114402      | 2    | Spacer                    |
| 4    | 127-8863    | 1    | Lever-Brake, Park         |
| 4:1  | 127-8864    | 1    | Grip-Handle               |
| 5    | 3290-477    | 1    | Washer-Curved             |
| 6    | 321-9       | 2    | Screw-HH                  |
| 7    | 104-8301    | 1    | Nut-HF, NI                |
| 8    | 3296-56     | 2    | Nut-Lock, NI              |
| 9    | 120-5037    | 1    | Spacer                    |
| 10   | 106-7887    | 1    | Shift ASM                 |
| 11   | 106-2376    | 1    | Boot-Shift, Lower         |
| 12   | 323-10      | 2    | Screw-HH                  |
| 13   | 3290-357    | 4    | Nut-HSF                   |
| 14   | 106-7814    | 2    | Bellcrank                 |
| 15   | 87-2310     | 2    | Clevis-Cable              |
| 16   | 87-4960     | 1    | Clamp-Cable               |
| 17   | 87-4340     | 1    | Clamp-Cable               |
| 18   | 65-5220     | 5    | Screw-HSH, Thread Forming |
| 19   | 87-3480     | 1    | Bracket-Equalizer, Cable  |

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 20   | 94-3829     | 1    | Pin-Clevis               |
| 21   | 3256-23     | 1    | Washer-Plain             |
| 22   | 106-7828    | 1    | Lever                    |
| 23   | 33096-00    | 2    | Washer-Flat              |
| 24   | 131-3479    | 1    | Lever-Lock, Differential |
| 25   | 106-7960    | 1    | Lever-HYD                |
| 26   | 3290-221    | 4    | Washer-Spring            |
| 27   | 87-7160     | 1    | Clevis-Cable             |
| 28   | 283-62      | 6    | Pin-Clevis               |
| 29   | 3290-307    | 7    | Pin-Cotter               |
| 30   | 66-6501     | 1    | Spacer-Wheel             |
| 31   | 323-36      | 1    | Screw-HH                 |
| 32   | 87-6570     | 1    | Seal-Boot, Lower         |
| 33   | 3220-1      | 2    | Nut-Jam                  |
| 34   | 3218-18     | 1    | Nut-Jam                  |
| 35   | 32120-47    | 3    | Ring-Retaining, External |
| 36   | 106-7903    | 2    | Knob-Control             |
| 37   | 87-6720     | 1    | Knob-Shift               |
| 38   | 106-7952    | 1    | Knob                     |
| 39   | 115-2250    | 1    | Link                     |
| 40   | 106-7833    | 1    | Spacer                   |

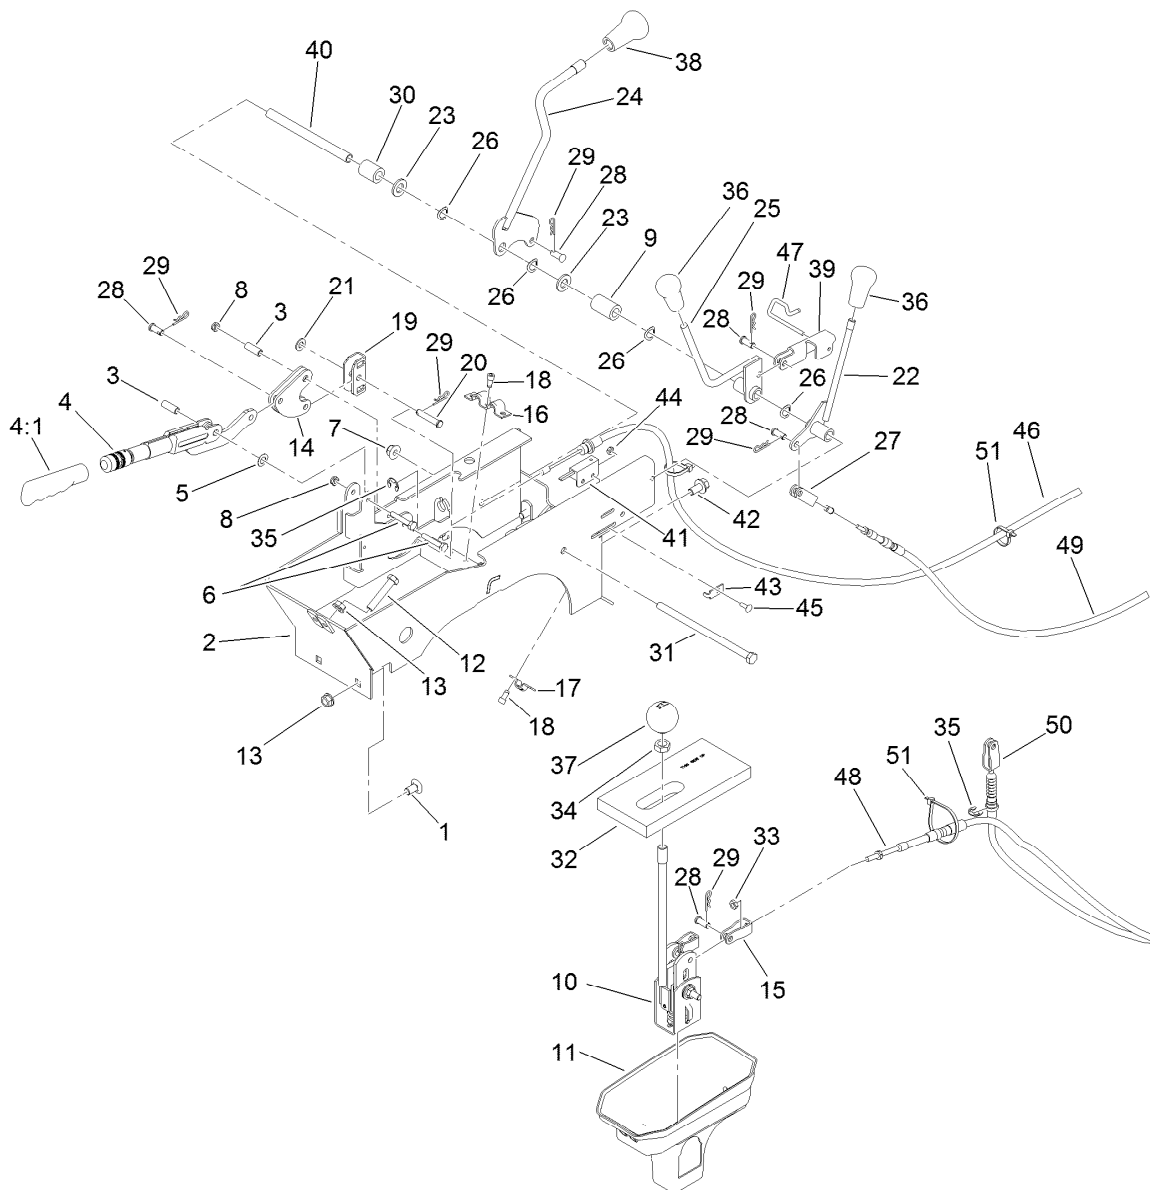

## Console Assembly (continued)


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 41   | 100-1270    | 1    | Switch-Proximity      |
| 42   | 3234-12     | 2    | Screw-HHF             |
| 43   | 100-4872    | 1    | Plate-Switch, Neutral |
| 44   | 3296-12     | 1    | Nut-Lock, NI          |
| 45   | 3229-34     | 1    | Screw-CARR            |
| 46   | 115-2283    | 2    | Cable-Brake, Park     |
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 47   | 115-2350    | 1    | Pin-Retainer             |
| 48   | 115-7811    | 2    | Cable-Selector, Gear     |
| 49   | 115-7812    | 1    | Cable-Hi Low             |
| 50   | 115-2287    | 1    | Cable-Lock, Differential |
| 51   | 3290-379    | 5    | Tie-Cable                |

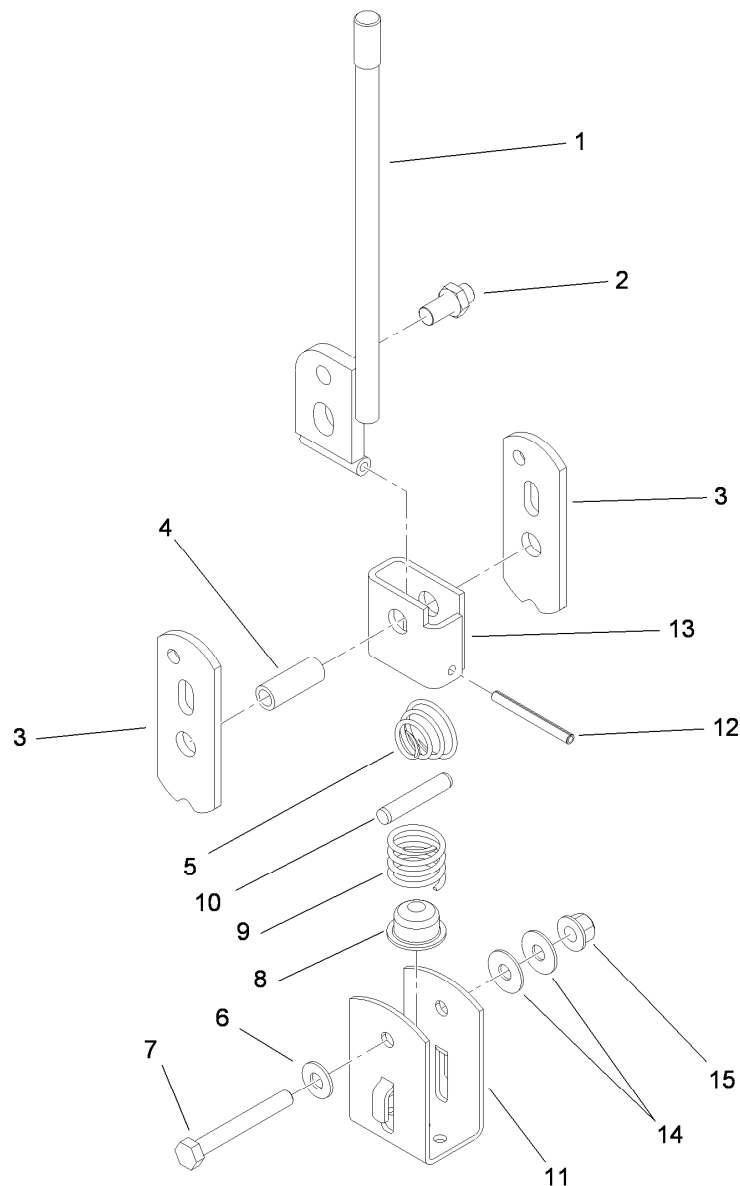

## Shift Assembly No. 106-7887
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 131-3469    | 1    | Lever-Shift        |
| 2    | 87-3650     | 1    | Pin-Shift          |
| 3    | 87-3540     | 2    | Link-Shift         |
| 4    | 87-2520     | 1    | Tube-Pivot         |
| 5    | 87-2900     | 1    | Spring-Compression |
| 6    | 87-8640     | 1    | Washer-Flat        |
| 7    | 322-12      | 1    | Screw-HH           |
| 8    | 87-3530     | 1    | Button-Shifter     |
| 9    | 87-3660     | 1    | Spring-Compression |
| 10   | 3290-507    | 1    | Pin-Dowel          |
| 11   | 87-3520     | 1    | Clevis             |
| 12   | 32121-48    | 1    | Pin-Spring         |
| 13   | 87-6040     | 1    | Bracket-Shifter    |
| 14   | 3290-456    | 2    | Washer-Belleville  |
| 15   | 104-8300    | 1    | Nut-HF, NI         |

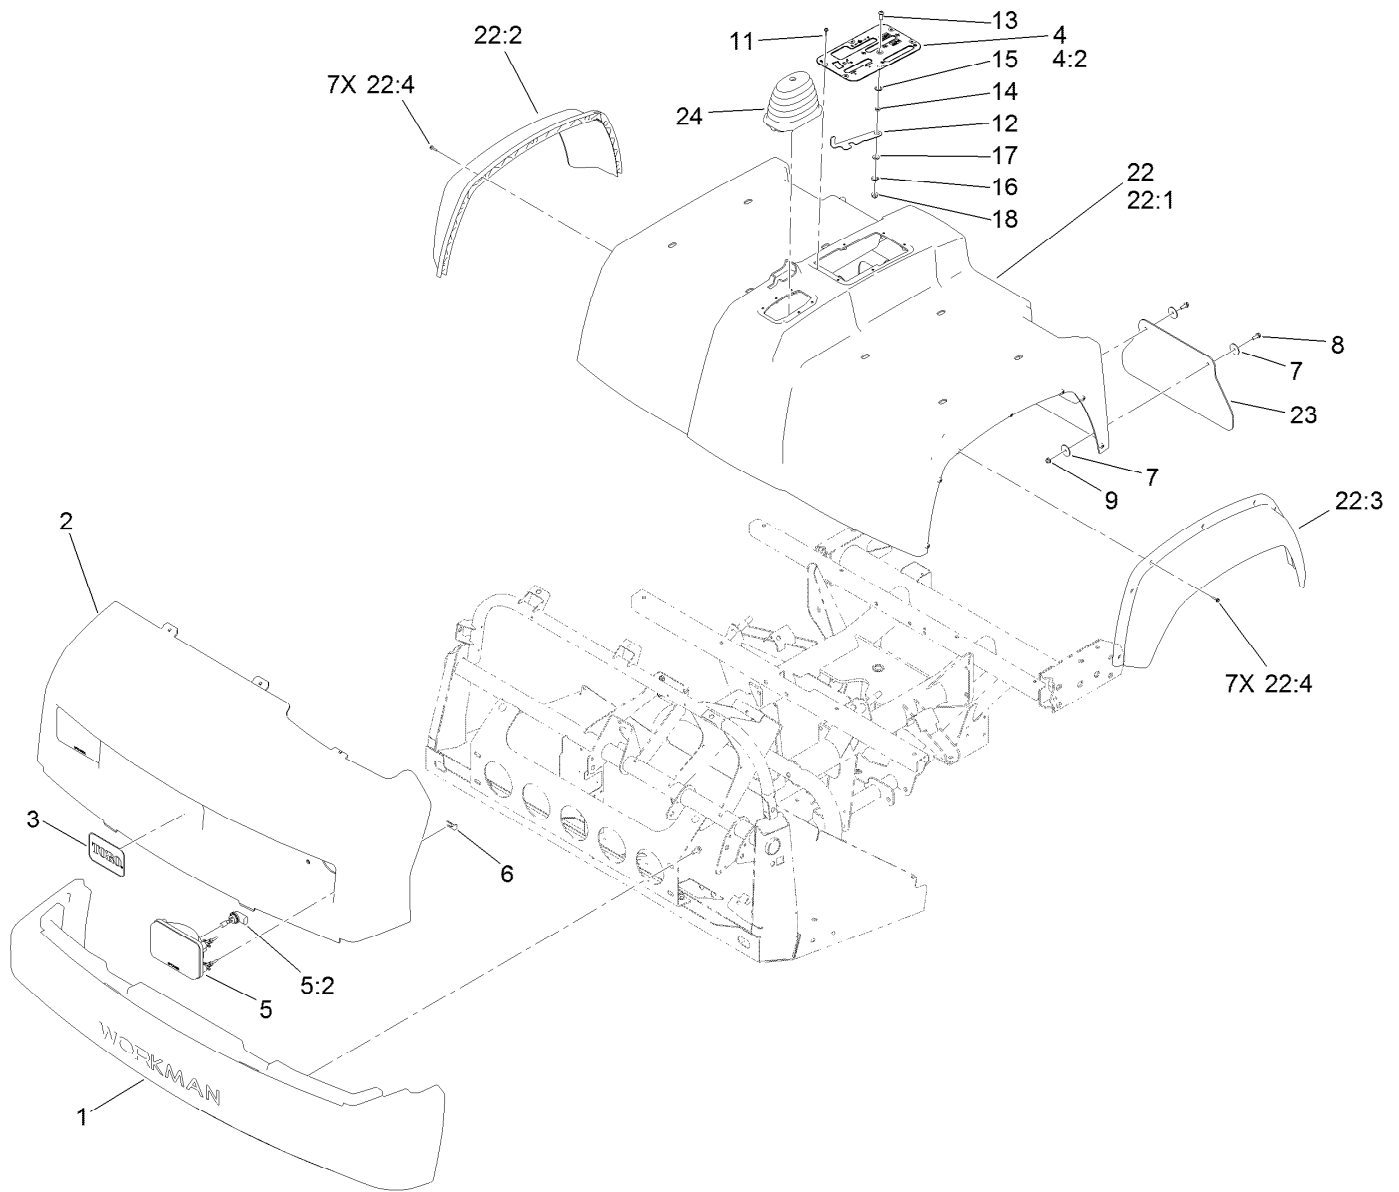


## Bumper, Hood and Seat Base Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 112-3185    | 1    | Bumper            |
| 2    | 112-3183    | 1    | Hood              |
| 3    | 117-4950    | 1    | Decal             |
| 4    | 106-7886    | 1    | Control Plate ASM |
| 4:2  | 106-2377    | 1    | Decal-Console     |
| 5    | 114-8322    | 2    | Headlight ASM     |
| 5:2  | 115-2395    | 1    | Bulb-Light        |
| 6    | 114-8341    | 6    | Clip-Speed        |
| 7    | 3256-55     | 8    | Washer-Flat       |
| 8    | 3234-4      | 4    | Screw-HHF         |
| 9    | 104-7201    | 4    | Nut-HF, NI        |
| 11   | 98-1375     | 6    | Screw-HWH         |
| 12   | 106-7984    | 1    | Lever-Detent      |

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 13   | 3274-55     | 1    | Screw-HSBH         |
| 14   | 82-4240     | 1    | Spacer-Bearing     |
| 15   | 94-8196     | 1    | Washer-Nylon       |
| 16   | 3290-221    | 1    | Washer-Spring      |
| 17   | 3256-23     | 1    | Washer-Plain       |
| 18   | 104-8300    | 1    | Nut-HF, NI         |
| 22   | 115-7815    | 1    | Seat Base ASM      |
| 22:1 |             | 1    | Base-Seat ●        |
| 22:2 | 114-8407    | 1    | Fender-Front, RH   |
| 22:3 | 114-8408    | 1    | Fender-Front, LH   |
| 22:4 | 117-5036    | 14   | Screw-Plastic, HWH |
| 23   | 106-2378    | 2    | Mudflap            |
| 24   | 117-8063    | 1    | Boot-Shift         |

 ● Not serviced separately

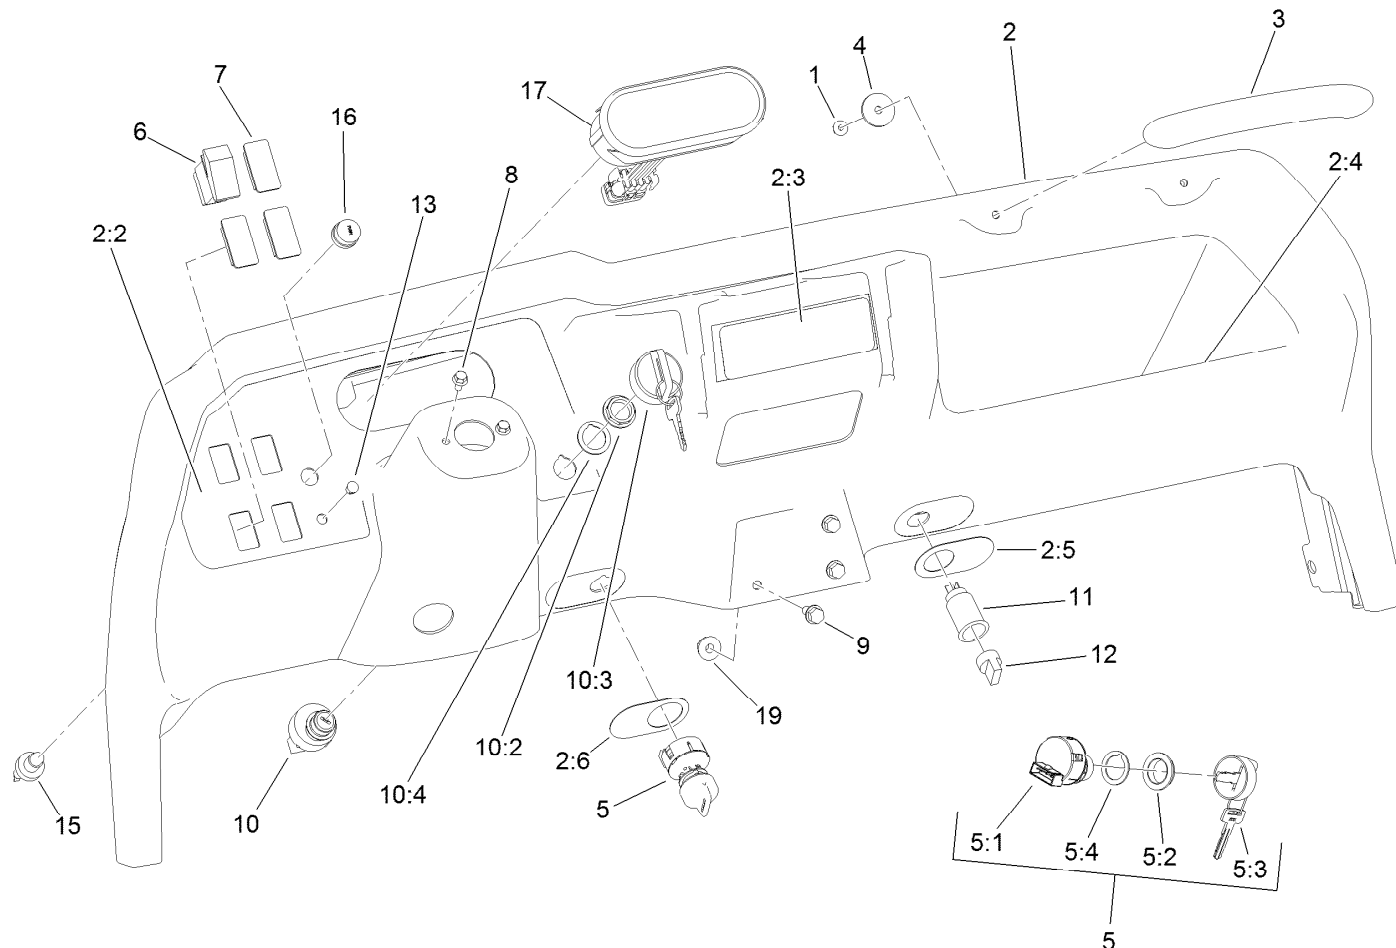


## Dash Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 104-7201    | 2    | Nut-HF, NI               |
| 2    | 115-7912    | 1    | Dash ASM                 |
| 2:2  | 115-2281    | 1    | Decal-Dash               |
| 2:3  | 115-7746    | 1    | Decal-Danger             |
| 2:4  | 115-2282    | 1    | Decal-Warning, Dash      |
| 2:5  | 106-2353    | 1    | Decal-Powerpoint         |
| 2:6  | 106-2355    | 1    | Decal-Switch, Supervisor |
| 3    | 117-4948    | 1    | Handle-Grab              |
| 4    | 103995      | 2    | Washer                   |
| 5    | 110-2580    | 1    | Switch-Key, Supervisor   |
| 5:1  |             | 1    | Switch-Key ●             |
| 5:2  | 108-8660    | 1    | Nut-Mounting             |
| 5:3  | 110-5221    | 1    | Set-Key, Supervisor      |
| 5:4  | 108-8659    | 1    | Washer-Backup            |
| 6    | 95-8999     | 1    | Switch                   |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 7    | 99-7420     | 2    | Plug-Hole           |
| 8    | 33103-012   | 2    | Screw-HHF           |
| 9    | 3234-5      | 3    | Screw-HHF           |
| 10   | 106-5269    | 1    | Ignition Switch ASM |
| 10:2 | 108-8660    | 1    | Nut-Mounting        |
| 10:3 | 106-5270    | 1    | Ignition Key Set    |
| 10:4 | 108-8659    | 1    | Washer-Backup       |
| 11   | 99-7411     | 1    | Point-Power         |
| 12   | 99-7416     | 1    | Cap                 |
| 13   | 104-9368    | 1    | Plug-Dome           |
| 15   | 112-3324    | 1    | Switch-Horn         |
| 16   | 112-3313    | 1    | Nut-Weatherproof    |
| 17   | 120-4808    | 1    | Cluster-Instrument  |
| 19   | 104-8300    | 3    | Nut-HF, NI          |

 
● Not serviced separately

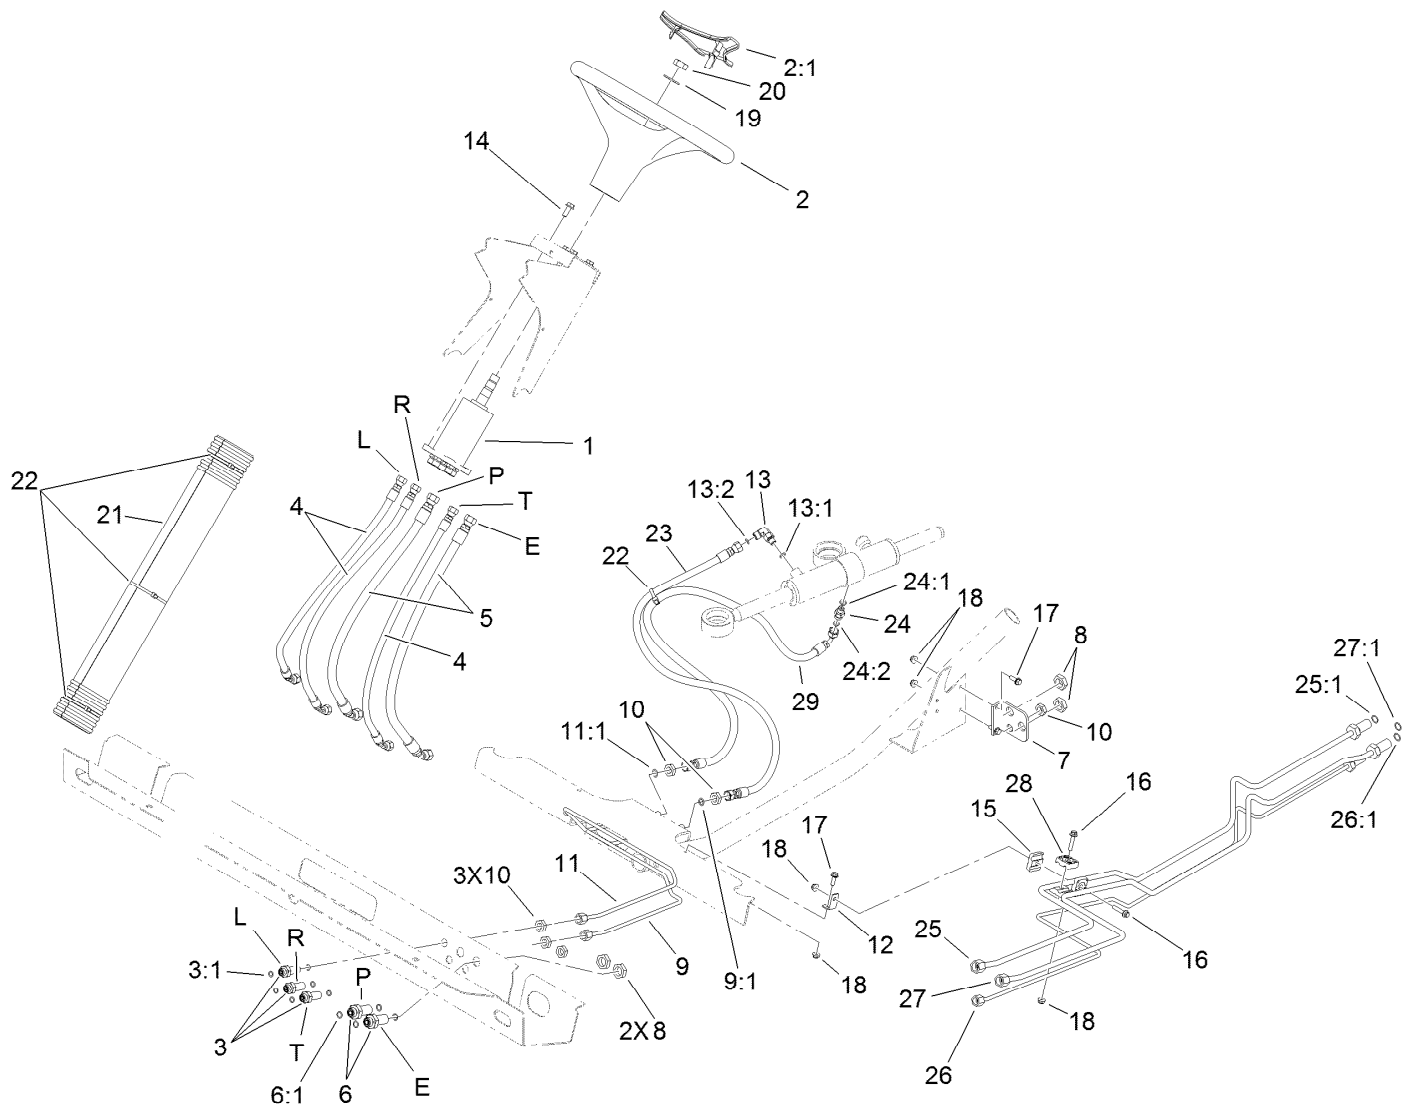

## Steering Hydraulic Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 120-4813    | 1    | Pump-Steering              |
| 2    | 98-1471     | 1    | Wheel-Steering             |
| 2:1  | 98-1468     | 1    | Cover-Wheel, Steering      |
| 3    | 94-1444     | 3    | Union-Bulkhead             |
| 3:1  | 237-21      | 2    | O-Ring                     |
| 4    | 106-7974    | 3    | Hose-HYD                   |
| 5    | 106-7975    | 2    | Hose-HYD                   |
| 6    | 340-71      | 2    | Fitting-Straight, Bulkhead |
| 6:1  | 237-22      | 2    | O-Ring                     |
| 7    | 106-7801-03 | 1    | Bracket-Line, Steering     |
| 8    | 340-70      | 4    | Nut-Lock                   |
| 9    | 106-7804    | 1    | Tube-HYD                   |
| 9:1  | 237-21      | 1    | O-Ring                     |
| 10   | 3219-10     | 6    | Nut-Hex                    |
| 11   | 106-7806    | 1    | Tube-HYD                   |
| 11:1 | 237-21      | 1    | O-Ring                     |
| 12   | 106-7807    | 1    | Bracket-Line, Steering     |
| 13   | 340-132     | 1    | Fitting-Elbow, 90 DEG      |
| 13:1 | 237-78      | 1    | O-Ring                     |
| 13:2 | 237-21      | 1    | O-Ring                     |
| 14   | 98-7977     | 4    | Screw-HHF                  |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 15   | 106-7839    | 2    | Clamp-Tube            |
| 16   | 3234-21     | 2    | Screw-HHF             |
| 17   | 3234-4      | 3    | Screw-HHF             |
| 18   | 104-7201    | 5    | Nut-HF, NI            |
| 19   | 3256-27     | 1    | Washer-Flat           |
| 20   | 3296-33     | 1    | Nut-Lock, NI          |
| 21   | 106-6713    | 1    | Cover-Lines, Steering |
| 22   | 3290-379    | 4    | Tie-Cable             |
| 23   | 108-6505    | 1    | Hose-HYD              |
| 24   | 340-92      | 1    | Fitting-Straight      |
| 24:1 | 237-78      | 1    | O-Ring                |
| 24:2 | 237-21      | 1    | O-Ring                |
| 25   | 115-7701    | 1    | Tube-HYD              |
| 25:1 | 237-22      | 1    | O-Ring                |
| 26   | 115-7702    | 1    | Tube-HYD              |
| 26:1 | 237-22      | 1    | O-Ring                |
| 27   | 115-7703    | 1    | Tube-HYD              |
| 27:1 | 237-21      | 1    | O-Ring                |
| 28   | 56-7973     | 2    | Clamp-Tube            |
| 29   | 117-4861    | 1    | Hose-HYD              |

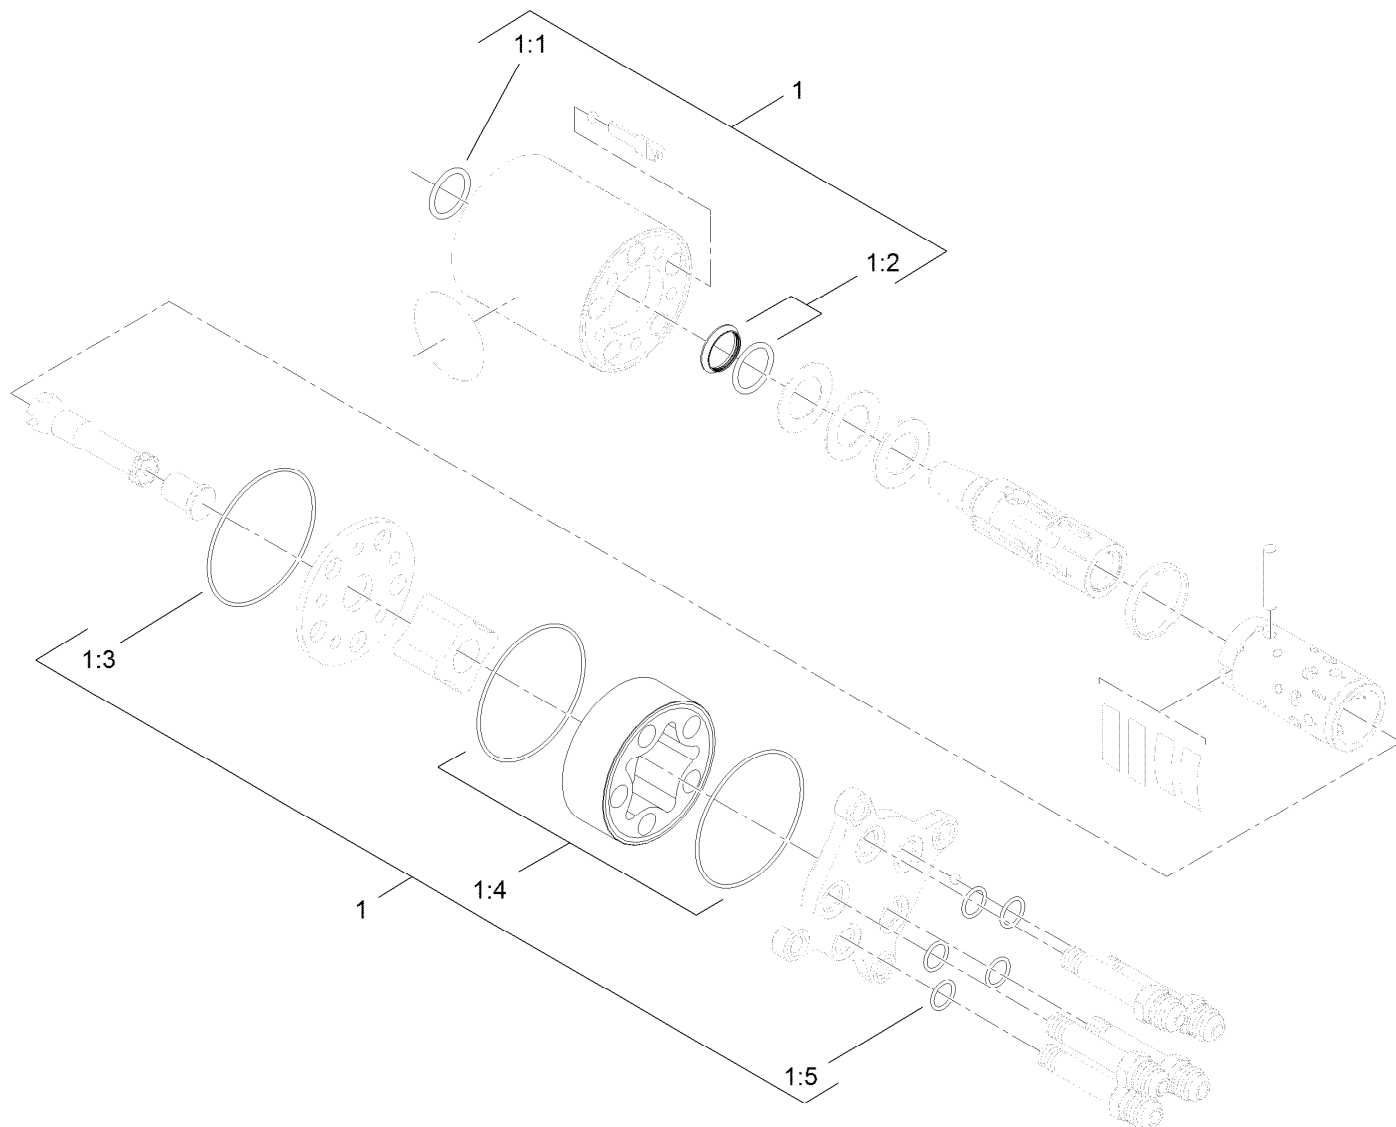

## Steering Valve Assembly No. 120-4813

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 106-6716    | 1    | Seal Kit          |
| 1:1  |             | 1    | Ring-Seal, Dust ● |
| 1:2  |             | 1    | Seal-Shaft ●      |
| 1:3  |             | 1    | O-Ring ●          |
| 1:4  |             | 2    | O-Ring ●          |
| 1:5  |             | 5    | O-Ring ●          |

 
● Not serviced separately

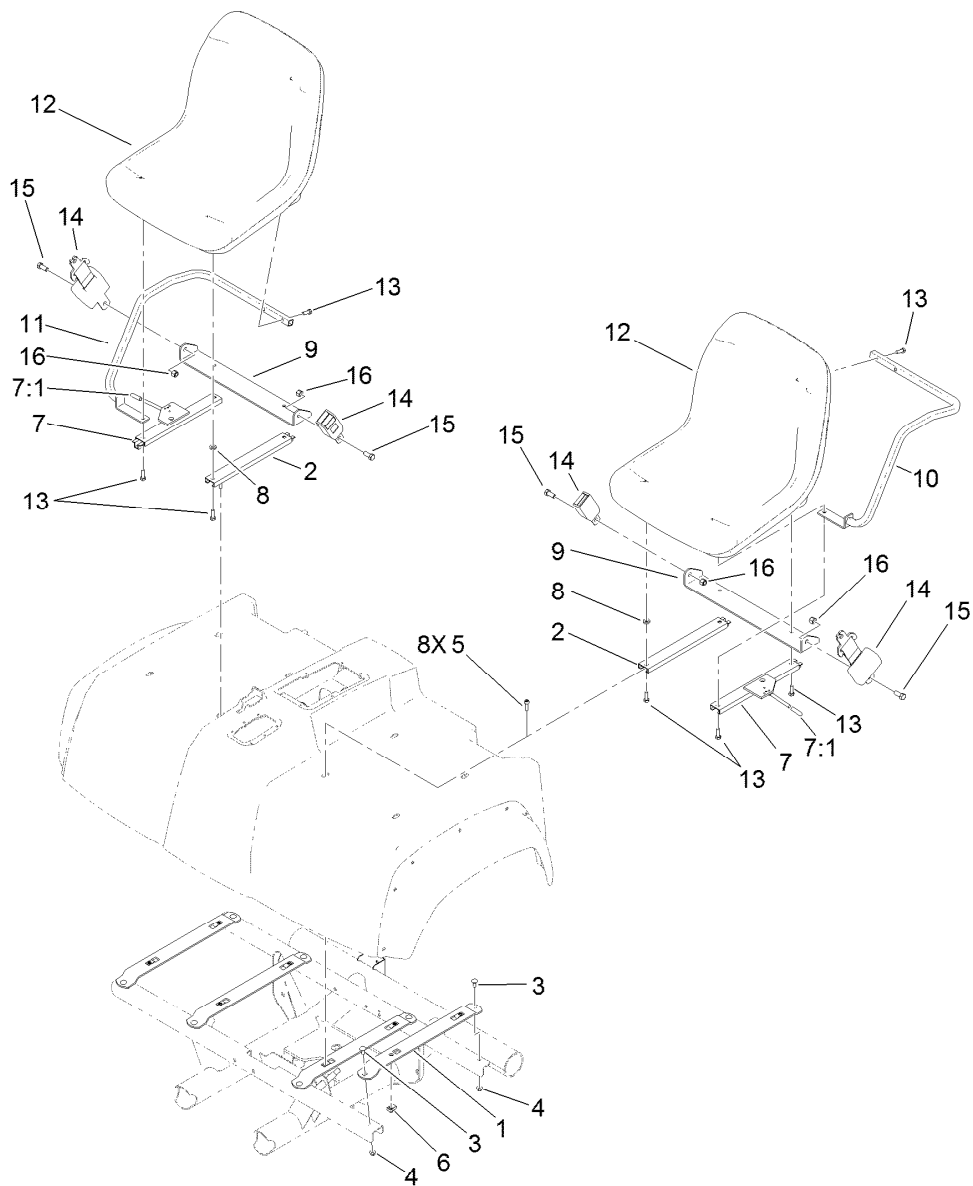

## Seat Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 115-2435-03 | 4    | Bracket-Seat               |
| 2    | 119-0655    | 2    | Adjuster-Seat, Non Locking |
| 3    | 3230-1      | 8    | Bolt-CARR                  |
| 4    | 104-8300    | 8    | Nut-HF, NI                 |
| 5    | 3274-22     | 8    | Screw-HSH                  |
| 6    | 115-7721    | 8    | Nut-Clip, U                |
| 7    | 121-9763    | 2    | Adjuster-Seat, Locking     |
| 7:1  | 2410-49     | 1    | Cap-Vinyl                  |
| 8    | 104-7658    | 2    | Spacer                     |

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 9    | 119-0727-03 | 2    | Bracket-Belt, Seat   |
| 10   | 119-0731-03 | 1    | Armrest-LH           |
| 11   | 119-0732-03 | 1    | Armrest-RH           |
| 12   | 112-2923    | 2    | Seat ASM             |
| 13   | 33114-030   | 12   | Screw-HH             |
| 14   | 110-0413    | 2    | Seatbelt-Retractable |
| 15   | 3212-4      | 4    | Screw-HH             |
| 16   | 3296-7      | 4    | Nut-Lock             |

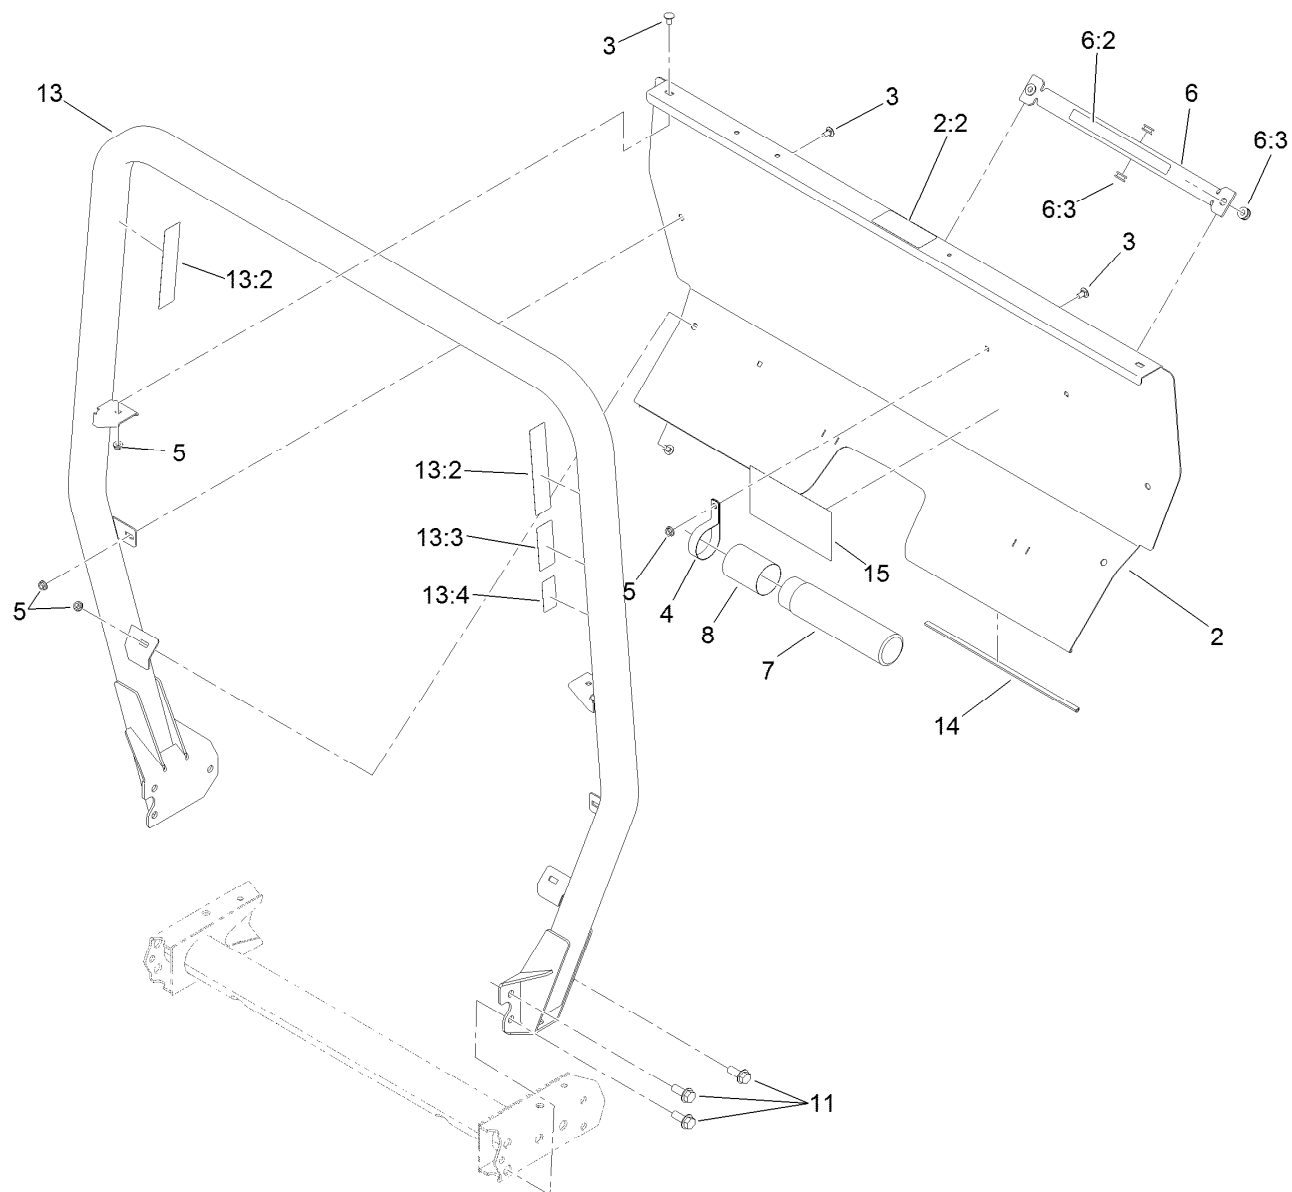

## Roll-Over Protection System Assembly

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 2    | 115-2213    | 1    | ROPS Cover ASM  |
| 2:2  | 105-4215    | 1    | Decal-Caution   |
| 3    | 3230-18     | 8    | Screw-CARR      |
| 4    | 2412-133    | 2    | Clamp-R         |
| 5    | 32128-20    | 8    | Nut-HF          |
| 6    | 105-7960    | 1    | Bed Support ASM |
| 6:2  | 93-9852     | 1    | Decal-Warning   |
| 6:3  | 92-5972     | 4    | Grommet-Rubber  |
| 7    | 104-7050    | 1    | Tube-Manual     |

 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 8    | 104-7048    | 1    | Cap-Housing            |
| 11   | 3234-38     | 6    | Screw-HHF              |
| 13   | 115-7910    | 1    | ROPS ASM               |
| 13:2 | 106-7767    | 2    | Decal-ROPS             |
| 13:3 | 93-9850     | 1    | Decal-ROPS, CE         |
| 13:4 | 117-4969    | 1    | Decal-ROPS, ISO        |
| 14   | 127-7382    | 2    | Seal-ROPS              |
| 15   | 115-7814    | 1    | Decal-Reference, Quick |

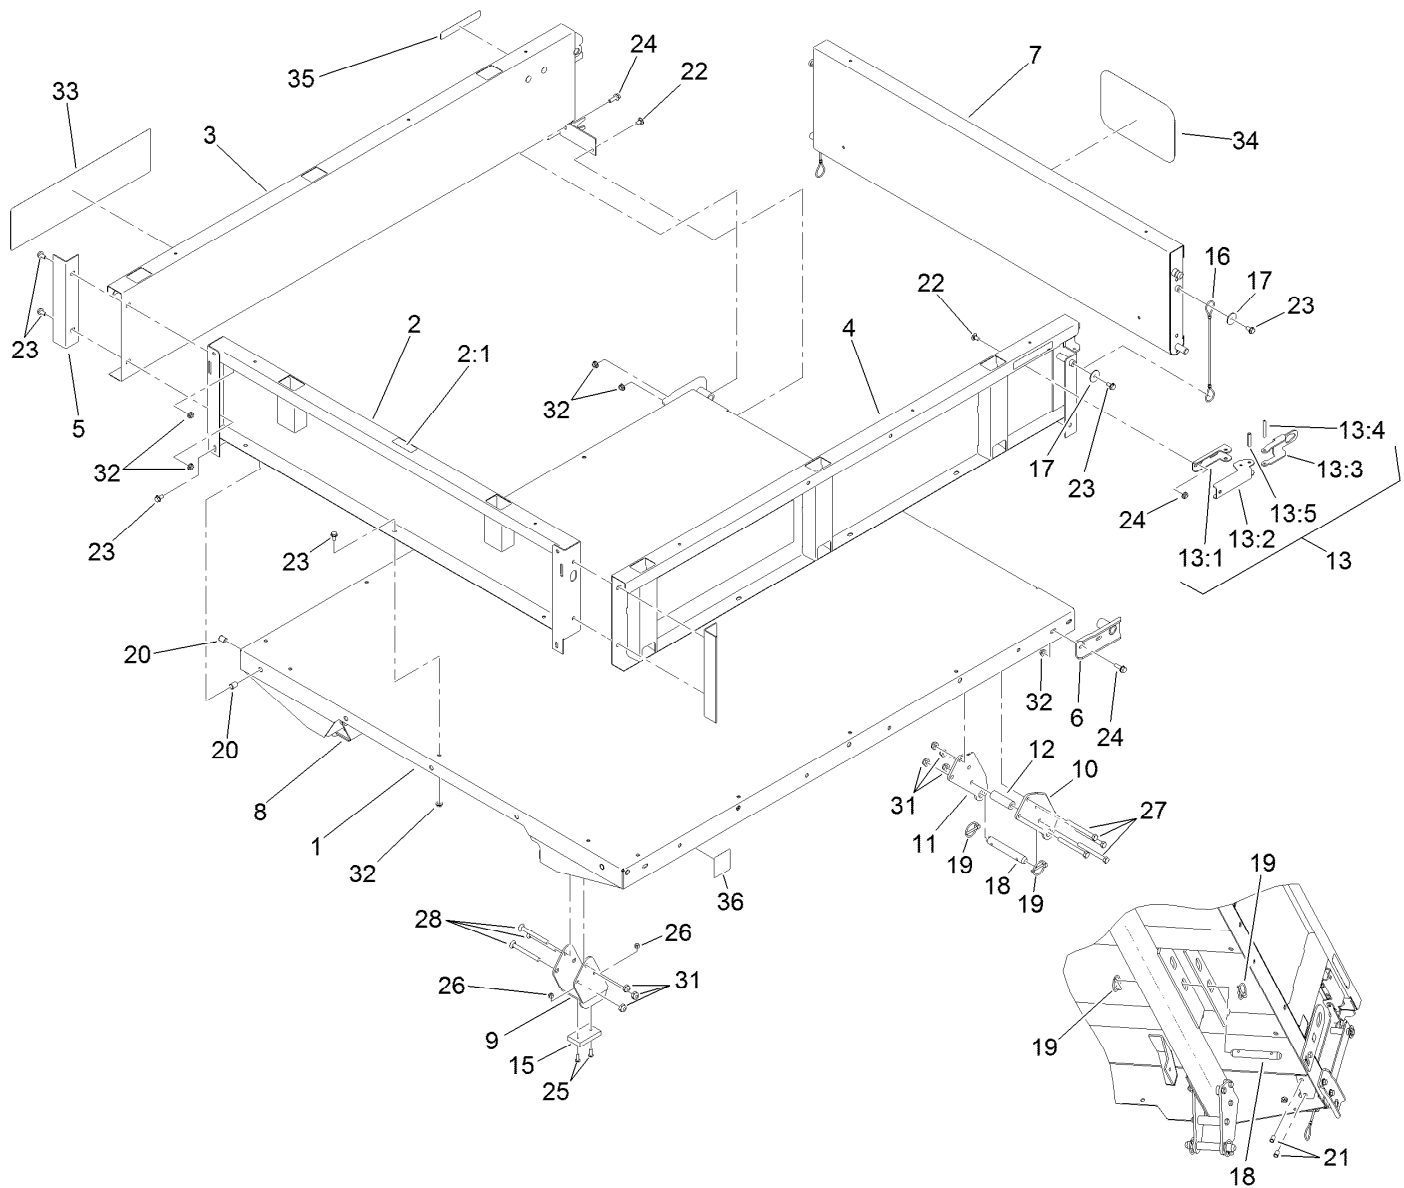

## Full Bed and Side Panel Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 93-9724-03  | 1    | Flatbed-Full             |
| 2    | 92-5982     | 1    | Front Panel ASM          |
| 2:1  | 115-7739    | 1    | Decal-No Riders          |
| 3    | 92-1255-03  | 1    | Panel-Side, RH           |
| 4    | 92-1248-03  | 1    | Panel-Side, LH           |
| 5    | 92-1320-03  | 2    | Angle-Side               |
| 6    | 92-1265-03  | 2    | Bracket-Pivot            |
| 7    | 92-1259-03  | 1    | Tailgate-Rear            |
| 8    | 106-2423-03 | 1    | Bracket-Spacer, RH       |
| 9    | 106-2422-03 | 1    | Bracket-Spacer, LH       |
| 10   | 93-9720-03  | 2    | Bracket-Pivot, Long (LH) |
| 11   | 93-9721-03  | 2    | Bracket-Pivot, Long (RH) |
| 12   | 93-9575     | 2    | Tube-Pivot, Flatbed      |
| 13   | 99-1123     | 2    | Latch ASM                |
| 13:1 | 92-1271     | 1    | Pivot-Latch              |
| 13:2 | 99-1113     | 1    | Handle-Latch             |
| 13:3 | 99-1112     | 1    | Plate-Retainer           |
| 13:4 | 32121-78    | 1    | Pin-Roll                 |
| 13:5 | 32121-25    | 1    | Pin-Roll                 |
| 15   | 93-9719     | 2    | Block-Wear               |

 
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 16   | 93-9595     | 2    | Lanyard       |
| 17   | 3256-57     | 4    | Washer-Flat   |
| 18   | 92-1233     | 4    | Pin-Clevis    |
| 19   | 92-1298     | 8    | Pin-Lynch     |
| 20   | 32148-7     | 4    | Nut-Clinch    |
| 21   | 32148-6     | 4    | Nut-Clinch    |
| 22   | 3230-18     | 6    | Screw-CARR    |
| 23   | 3234-7      | 21   | Screw-HHF     |
| 24   | 3234-29     | 6    | Screw-HHF     |
| 25   | 3250-45     | 4    | Screw-SPH     |
| 26   | 3296-42     | 4    | Nut-Lock, NI  |
| 27   | 323-42      | 8    | Screw-HH      |
| 28   | 3231-24     | 6    | Screw-CARR    |
| 31   | 3296-44     | 14   | Nut-Lock, NI  |
| 32   | 32128-20    | 27   | Nut-HF        |
| 33   | 115-7917    | 2    | Decal         |
| 34   | 105-4222    | 1    | Decal         |
| 35   | 93-9868     | 2    | Decal-Caution |
| 36   | 93-9899     | 2    | Decal-Warning |

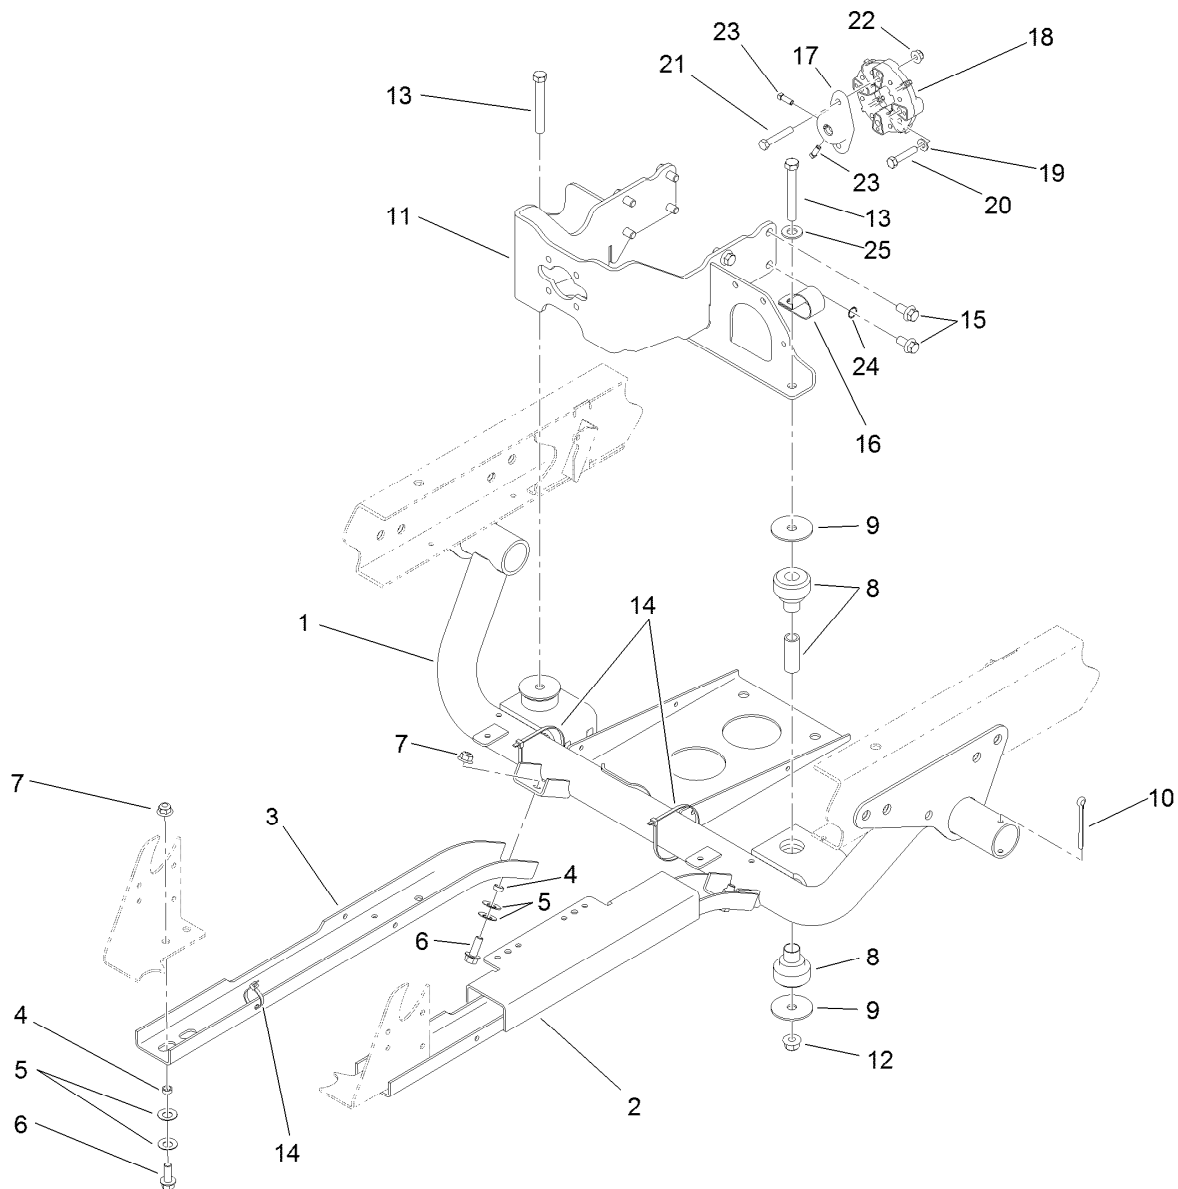

## Engine Sub Frame Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 119-9679-03 | 1    | Support-Engine     |
| 2    | 115-2215-03 | 1    | Guard-LH           |
| 3    | 87-4730-03  | 1    | Guard-Belly        |
| 4    | 76-9100     | 6    | Spacer             |
| 5    | 3290-413    | 12   | Washer-Belleville  |
| 6    | 3234-11     | 6    | Screw-HHF          |
| 7    | 104-8301    | 6    | Nut-HF, NI         |
| 8    | 106-7865    | 2    | Mount-Engine       |
| 9    | 87-5100     | 4    | Washer-Snubbing    |
| 10   | 3272-37     | 2    | Pin-Cotter         |
| 11   | 121-6259-03 | 1    | Mount-Pump, Engine |
| 12   | 114-8417    | 2    | Nut-HF, NI         |
| 13   | 324-13      | 2    | Screw-HH           |

 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 14   | 3290-379    | 4    | Tie-Cable        |
| 15   | 120-4839    | 8    | Screw-HHF        |
| 16   | 2412-82     | 1    | Clamp-R          |
| 17   | 115-2169    | 1    | Hub-Pump         |
| 18   | 119-0652    | 1    | Coupler-Rubber   |
| 19   | 3256-23     | 2    | Washer-Plain     |
| 20   | 33114-040   | 2    | Screw-HH         |
| 21   | 322-21      | 2    | Screw-HH         |
| 22   | 104-8300    | 2    | Nut-HF, NI       |
| 23   | 3241-6      | 2    | Screw-SQH        |
| 24   | 3254-20     | 1    | Washer-Lock, Int |
| 25   | 3256-26     | 1    | Washer-Flat      |

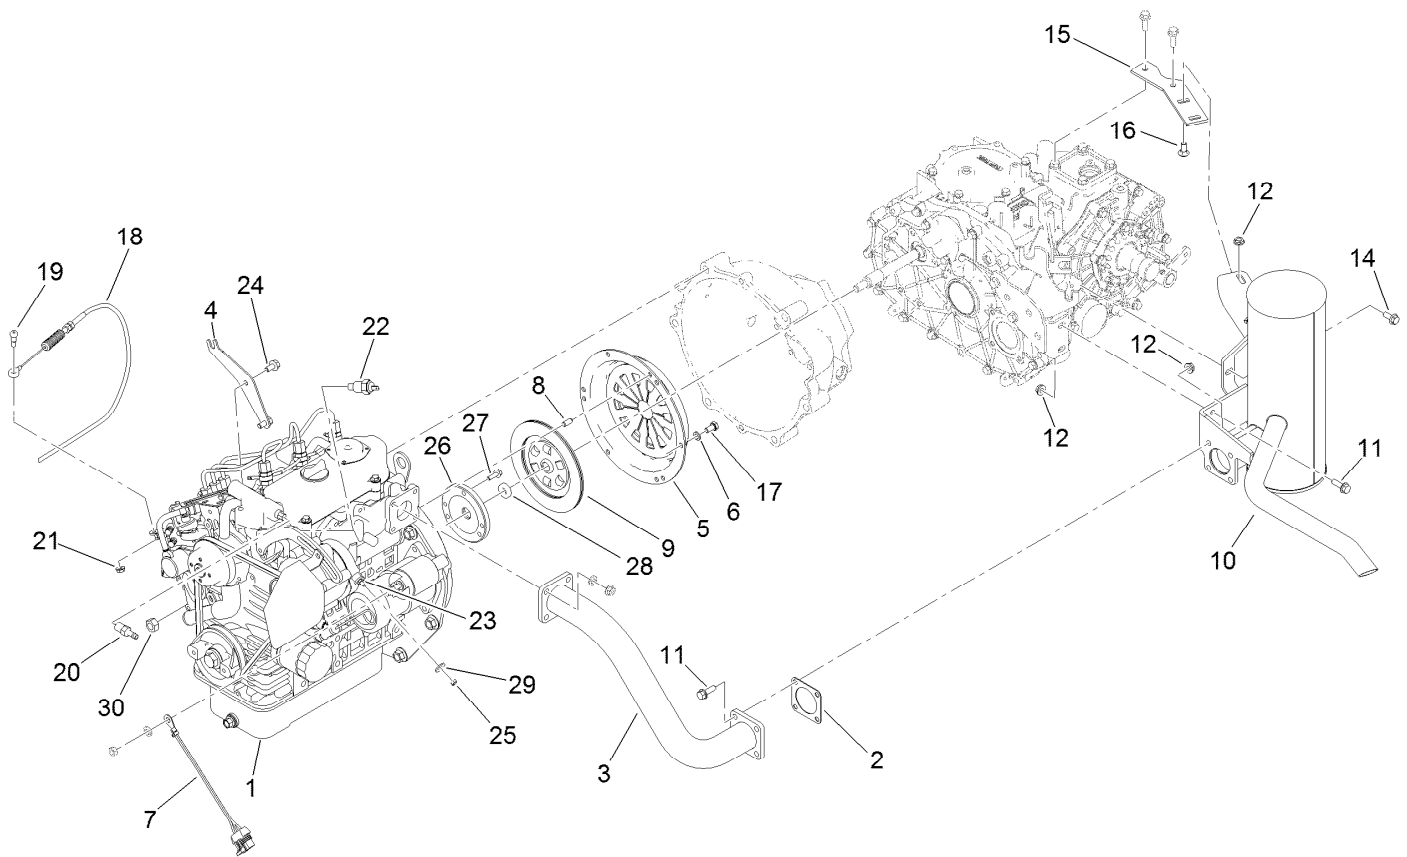

## Engine Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 127-9657    | 1    | Engine-Kubota, D902        |
| 2    | 105-4209    | 1    | Gasket-Muffler             |
| 3    | 119-0860    | 1    | Tube-Exhaust               |
| 4    | 120-4981-03 | 1    | Mount-Cable, Throttle      |
| 5    | 87-4690     | 1    | Cover-Clutch               |
| 6    | 3253-4      | 6    | Washer-Lock                |
| 7    | 99-3441     | 1    | Harness-Wire, Fusible Link |
| 8    | 42-7160     | 3    | Pin                        |
| 9    | 87-4700     | 1    | Disc-Clutch                |
| 10   | 127-7443    | 1    | Muffler                    |
| 11   | 3234-17     | 6    | Screw-HHF                  |
| 12   | 32128-20    | 8    | Nut-HF                     |
| 14   | 98-7977     | 1    | Screw-HHF                  |
| 15   | 105-9472    | 1    | Plate-Mount, Muffler       |
| 16   | 3230-1      | 2    | Bolt-CARR                  |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 17   | 33114-016   | 6    | Screw-HH              |
| 18   | 120-4980    | 1    | Cable-Throttle        |
| 19   | 119-4881    | 1    | Bolt-Shoulder         |
| 20   | 115-1448    | 1    | Fitting-Straight      |
| 21   | 32128-33    | 1    | Nut-HF                |
| 22   | 120-4907    | 1    | Sensor-Temperature    |
| 23   | 120-5075    | 1    | Sender-Temperature    |
| 24   | 33104-016   | 2    | Screw-HHF             |
| 25   | 33013-00    | 1    | Nut-Hex               |
| 26   | 120-5006    | 1    | Holder-Bearing, Pilot |
| 27   | 33103-020   | 3    | Screw-HHF             |
| 28   | 115-6870    | 1    | Bearing-Ball, Sealed  |
| 29   | 3256-2      | 1    | Washer-Flat           |
| 30   | 110-8815    | 1    | Nut-Hex               |

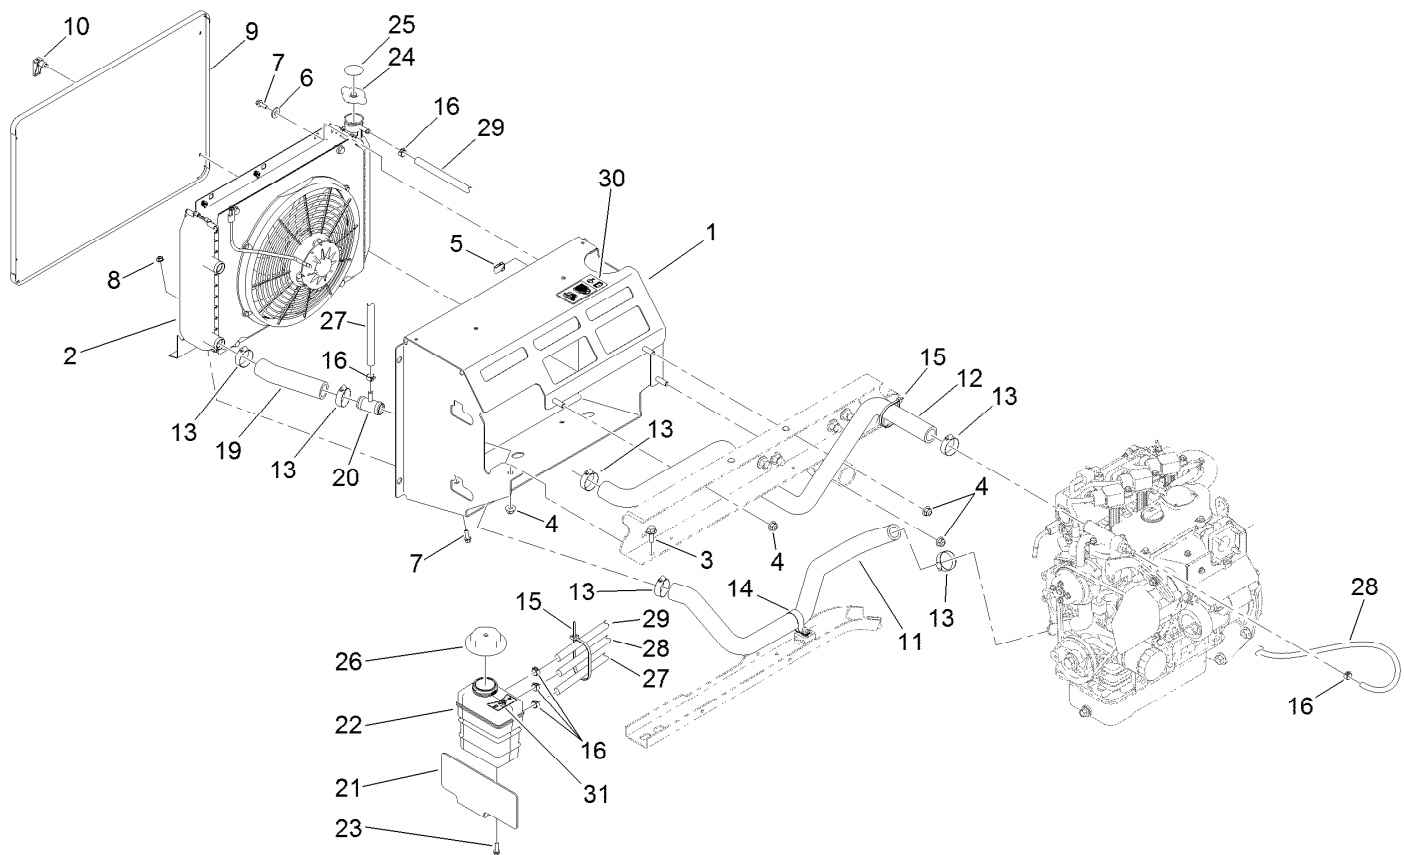


## Cooling System Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 115-2434    | 1    | Mount-Radiator      |
| 2    |             | 1    | Radiator ASM ●      |
| 3    | 3234-11     | 1    | Screw-HHF           |
| 4    | 104-8301    | 4    | Nut-HF, NI          |
| 5    | 107069      | 2    | Clip                |
| 6    | 3256-3      | 2    | Washer-Flat         |
| 7    | 3234-4      | 4    | Screw-HHF           |
| 8    | 32128-33    | 2    | Nut-HF              |
| 9    | 115-2428-03 | 1    | Screen-Radiator     |
| 10   | 74-5950     | 4    | Latch-Swell         |
| 11   | 119-9487    | 1    | Hose-Coolant, Lower |
| 12   | 119-9486    | 1    | Hose-Coolant, Upper |
| 13   | 2412-34     | 6    | Clamp-Hose          |
| 14   | 2412-74     | 1    | R-Clamp             |
| 15   | 3290-379    | 4    | Tie-Cable           |


| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 16   | 92-2379     | 6    | Clamp-Hose                     |
| 19   | 120-4905    | 1    | Hose-Coolant, Lower            |
| 20   | 120-4851    | 1    | Tee                            |
| 21   | 120-4906-03 | 1    | Plate-Mount, Tank              |
| 22   | 120-4856    | 1    | Tank-Surge                     |
| 23   | 46-8091     | 2    | Screw-HWH                      |
| 24   | 120-4866    | 1    | Cap-System, Cooling            |
| 25   | 106-6755    | 1    | Decal-Cap, Radiator            |
| 26   | 120-4867    | 1    | Cap-Coolant, Threaded (15 PSI) |
| 27   | 120-5019    | 1    | Hose-Coolant                   |
| 28   | 120-5020    | 1    | Hose-Coolant                   |
| 29   | 120-5021    | 1    | Hose-Coolant                   |
| 30   | 121-6286    | 1    | Decal-Fill, Radiator           |
| 31   | 121-6287    | 1    | Decal-Tank, Overflow           |

 ● Not serviced separately

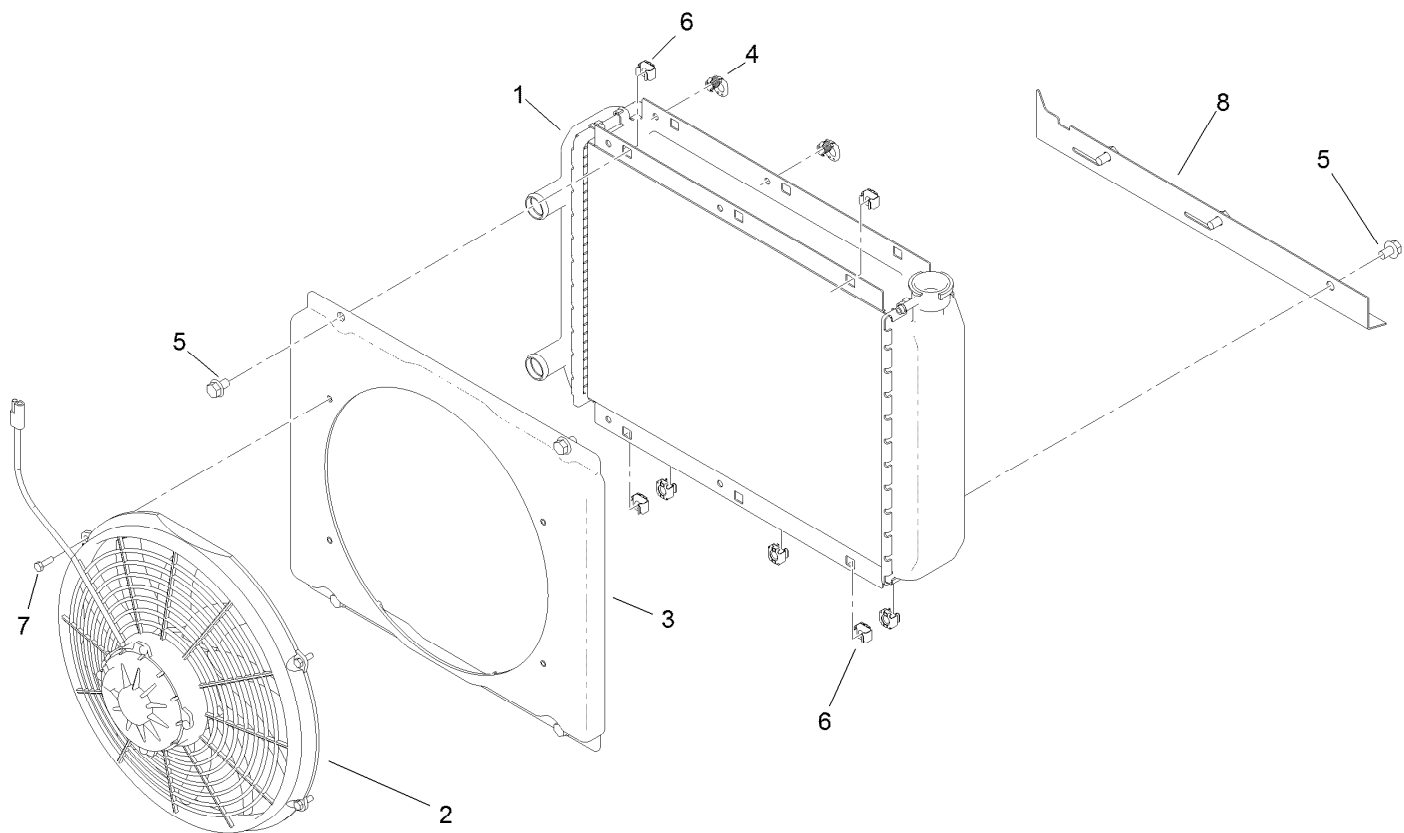

## Radiator Assembly

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 114-8384           | 1           | Radiator           |
| 2           | 114-8385           | 1           | Fan-Electric       |
| 3           | 114-8386           | 1           | Shroud             |
| 4           | 114-8387           | 2           | Latch-Spring       |
| 5           | 3234-30            | 7           | Screw-HHF          |
| 6           | 703856             | 7           | Nut-Sq, Caged      |
| 7           | 60-6910            | 4           | Screw-HH           |
| 8           | 115-7765           | 1           | Plate-Mount, Lower |

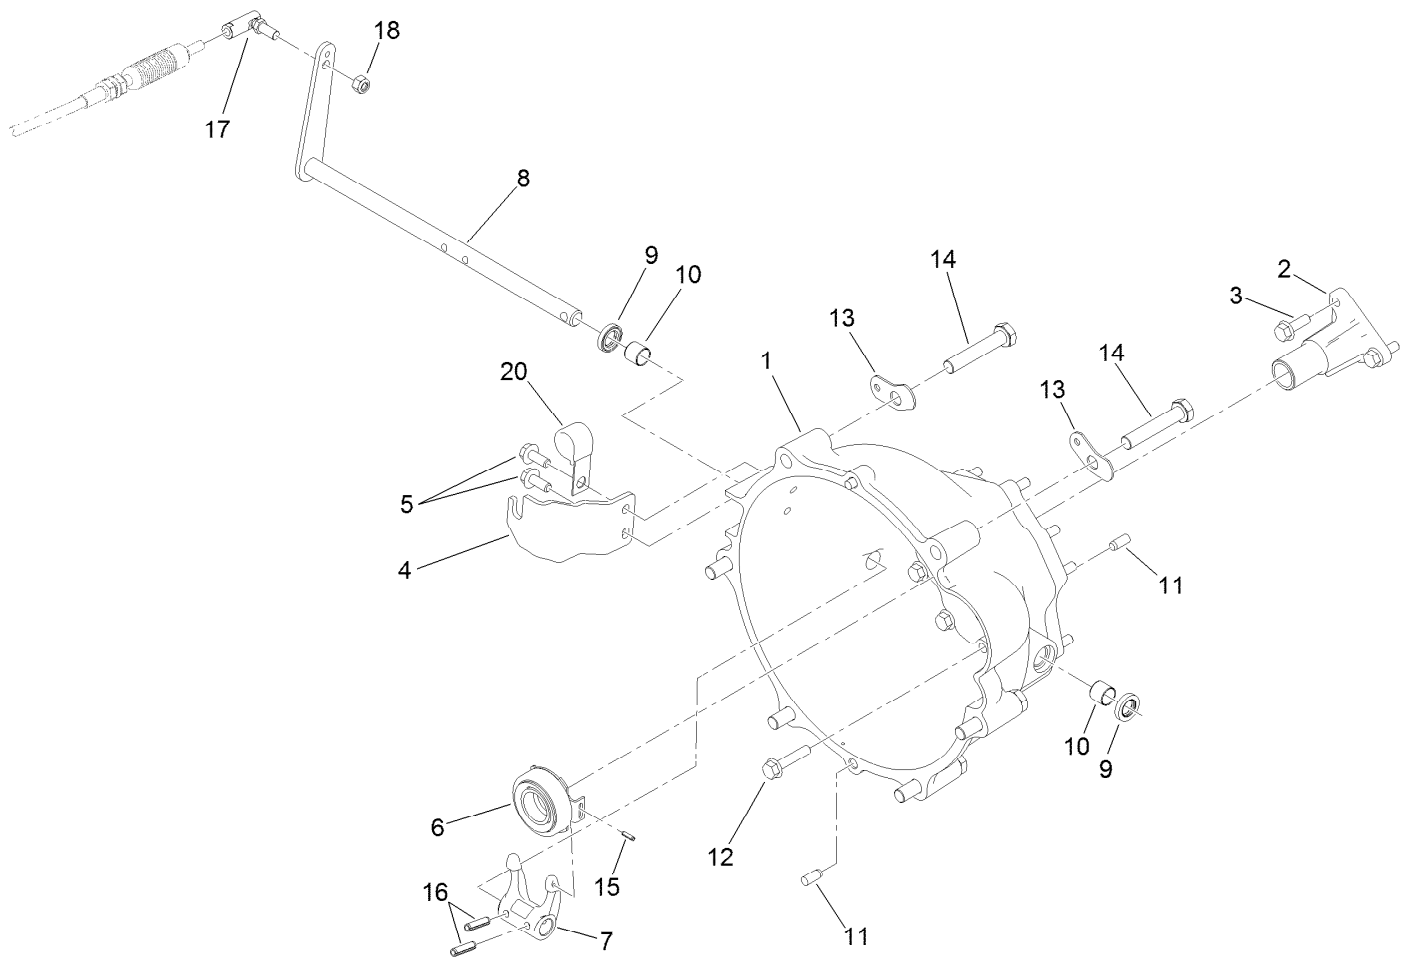

## Clutch Linkage Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 119-9498    | 1    | Bell Housing            |
| 2    | 120-4886    | 1    | Guide-Release           |
| 3    | 33104-025   | 3    | Screw-HHF               |
| 4    | 115-2313    | 1    | Bracket-Cable, Clutch   |
| 5    | 98-7977     | 2    | Screw-HHF               |
| 6    | 110-2538    | 1    | Bearing-Release, Clutch |
| 7    | 87-5300     | 1    | Fork-Clutch             |
| 8    | 115-2311    | 1    | Lever-Clutch            |
| 9    | 87-1920     | 2    | Seal-Oil                |
| 10   | 87-3770     | 2    | Bushing-Housing, Bell   |

 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 11   | 87-1910     | 4    | Pin-Dowel                |
| 12   | 33104-040   | 9    | Screw-HHF                |
| 13   | 87-6410     | 2    | Bracket-Harness          |
| 14   | 107-7983    | 6    | Screw-HH                 |
| 15   | 32121-7     | 1    | Pin-Roll, Slotted        |
| 16   | 32121-24    | 2    | Pin-Spring               |
| 17   | 2411-33     | 1    | Balljoint-RH (W/Grommet) |
| 18   | 3296-4      | 1    | Nut-Lock                 |
| 20   | 120-5018    | 1    | Clip-Open J, Coated      |

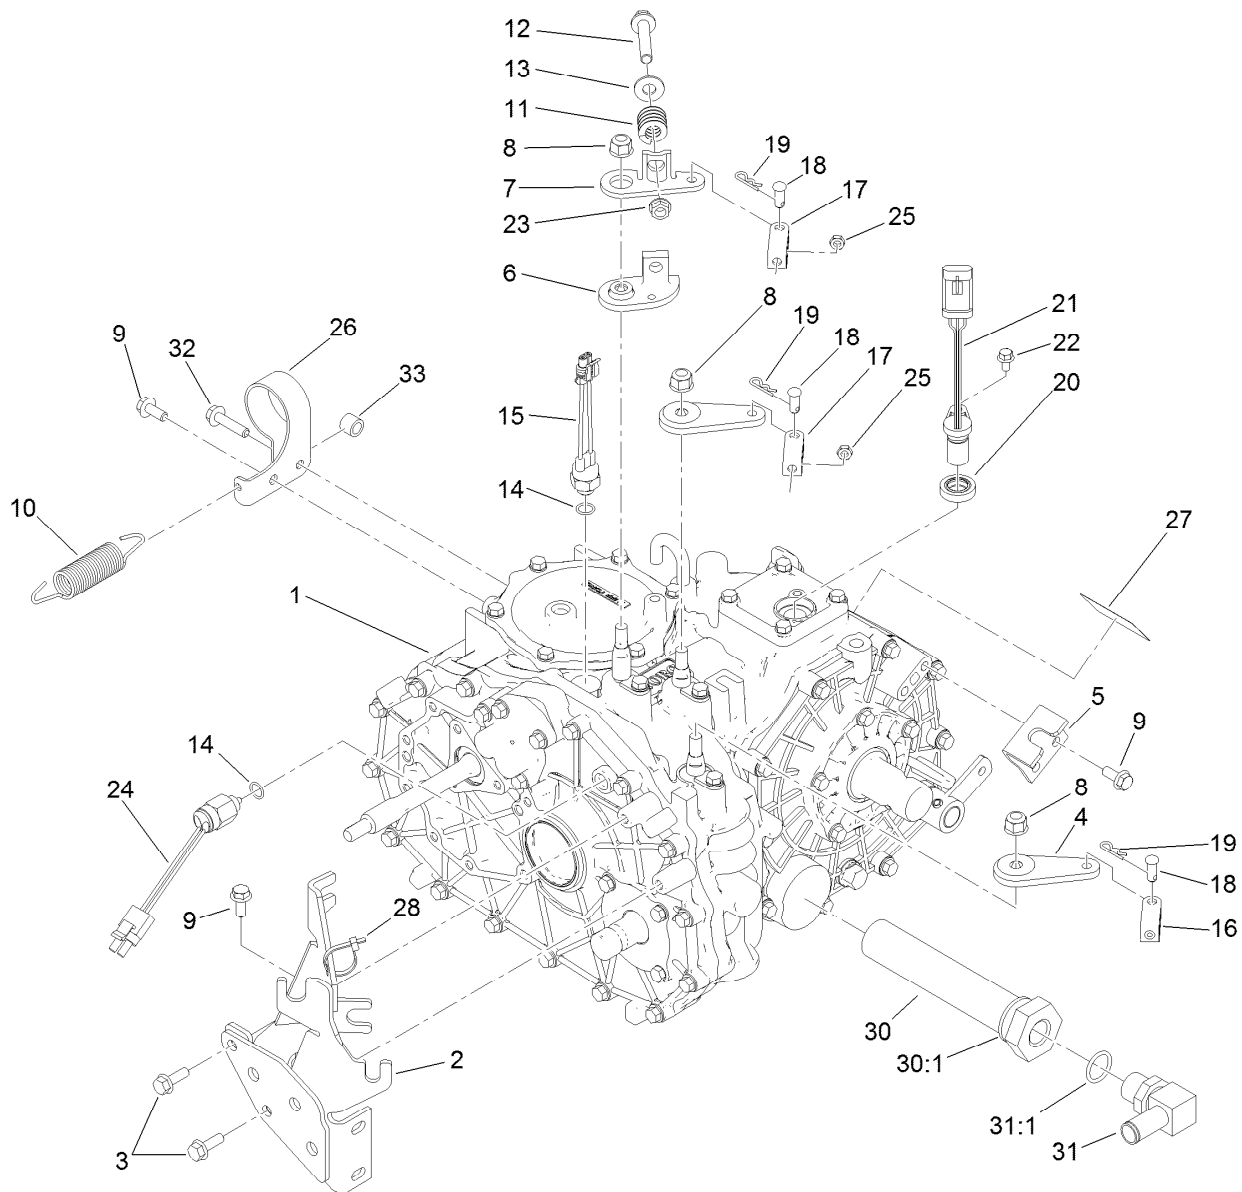

## Transaxle Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 115-2175    | 1    | 4 Wheel Drive Transaxle ASM |
| 2    | 105-4207-03 | 1    | Mount-Cable                 |
| 3    | 33104-025   | 2    | Screw-HHF                   |
| 4    | 87-7960     | 2    | Lever-Shift                 |
| 5    | 87-4470     | 1    | Bracket-Lock, Differential  |
| 6    | 87-7970     | 1    | Arm-Shift                   |
| 7    | 87-8250     | 1    | Plate-Arm, Shift            |
| 8    | 103-9511    | 3    | Nut-Lock, NI                |
| 9    | 98-7977     | 4    | Screw-HHF                   |
| 10   | 68-9950     | 1    | Spring-Traction             |
| 11   | 87-6910     | 1    | Spring-Compression          |
| 12   | 66-9302     | 1    | Screw-HHF Lock              |
| 13   | 3256-4      | 1    | Washer-Flat                 |
| 14   | 237-30      | 2    | O-Ring                      |
| 15   | 72-4310     | 1    | Switch-Ball                 |
| 16   | 87-7160     | 1    | Clevis-Cable                |
| 17   | 87-2310     | 2    | Clevis-Cable                |
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 18   | 283-62      | 3    | Pin-Clevis              |
| 19   | 3290-307    | 3    | Pin-Cotter              |
| 20   | 92-3735     | 1    | Seal-Sensor, Oil        |
| 21   | 120-4800    | 1    | Sensor-Geartooth        |
| 22   | 33103-012   | 1    | Screw-HHF               |
| 23   | 3290-357    | 1    | Nut-HSF                 |
| 24   | 87-6710     | 1    | Switch-Transmission     |
| 25   | 3220-1      | 2    | Nut-Jam                 |
| 26   | 131-6695    | 1    | Bracket-Pump, Fuel      |
| 27   | 115-7741    | 1    | Decal-Oil, Transmission |
| 28   | 3290-379    | 1    | Tie-Cable               |
| 30   | 87-3990     | 1    | Strainer-Transaxle      |
| 30:1 | 237-123     | 1    | O-Ring                  |
| 31   | 353-987     | 1    | Fitting-Elbow, 90       |
| 31:1 | 237-81      | 1    | O-Ring                  |
| 32   | 132-0797    | 1    | Screw-HHF               |
| 33   | 93-9847     | 1    | Spacer                  |

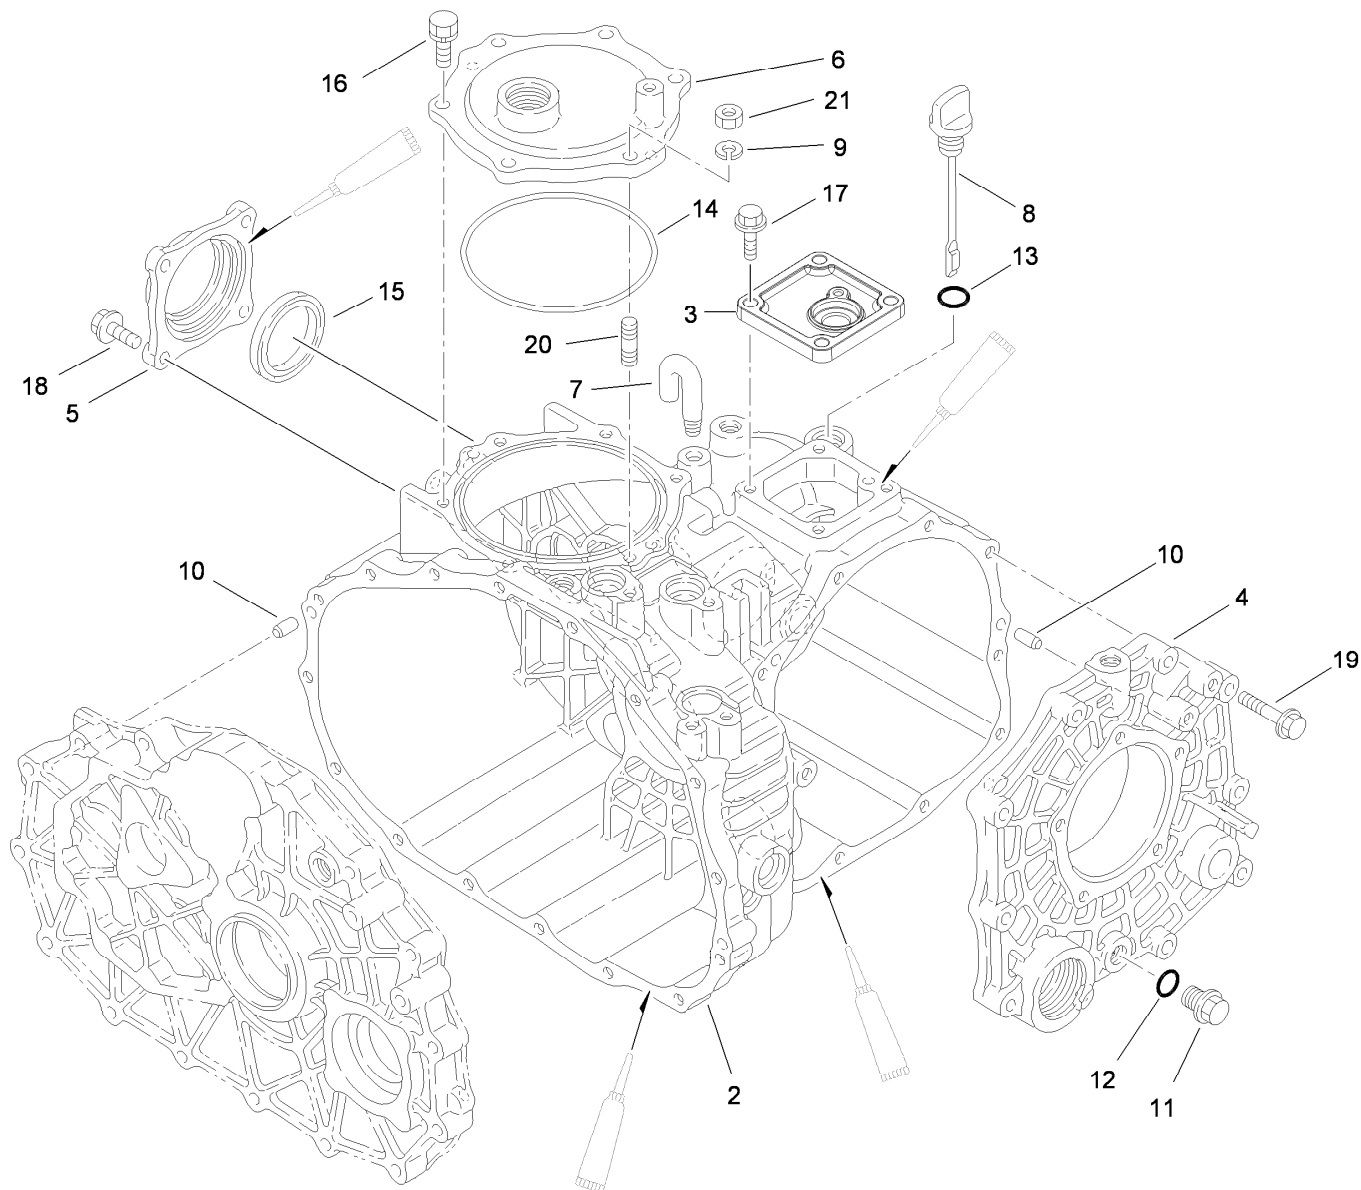


## Case Assembly

### 4 Wheel Drive Transaxle Assembly No. 115-2175


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 2    | 92-0651     | 1    | Case-Transmission   |
| 3    | 92-0810     | 1    | Cover-Upper, Sensor |
| 4    | 92-0653     | 1    | Cover-Side          |
| 5    | 92-0655     | 1    | Cover-Seal, Axle    |
| 6    | 92-0656     | 1    | Cover-Upper, PTO    |
| 7    | 92-0743     | 1    | Breather-Air        |
| 8    | 92-0662     | 1    | Cap-Oil             |
| 9    | 92-0762     | 1    | Washer-Spring       |
| 10   | 92-0765     | 4    | Pin-Parallel        |
| 11   | 92-0773     | 1    | Plug-Drain          |
 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 12   | 92-0787     | 1    | O-Ring      |
| 13   | 92-0788     | 1    | O-Ring      |
| 14   | 92-0790     | 1    | O-Ring      |
| 15   | 92-0793     | 1    | Seal-Oil    |
| 16   | 92-0796     | 5    | Bolt        |
| 17   | 33104-025   | 4    | Screw-HHF   |
| 18   | 33104-025   | 4    | Screw-HHF   |
| 19   | 33104-040   | 10   | Screw-HHF   |
| 20   | 92-0805     | 1    | Bolt 8X20   |
| 21   | 68-9400     | 1    | Nut-Flange  |

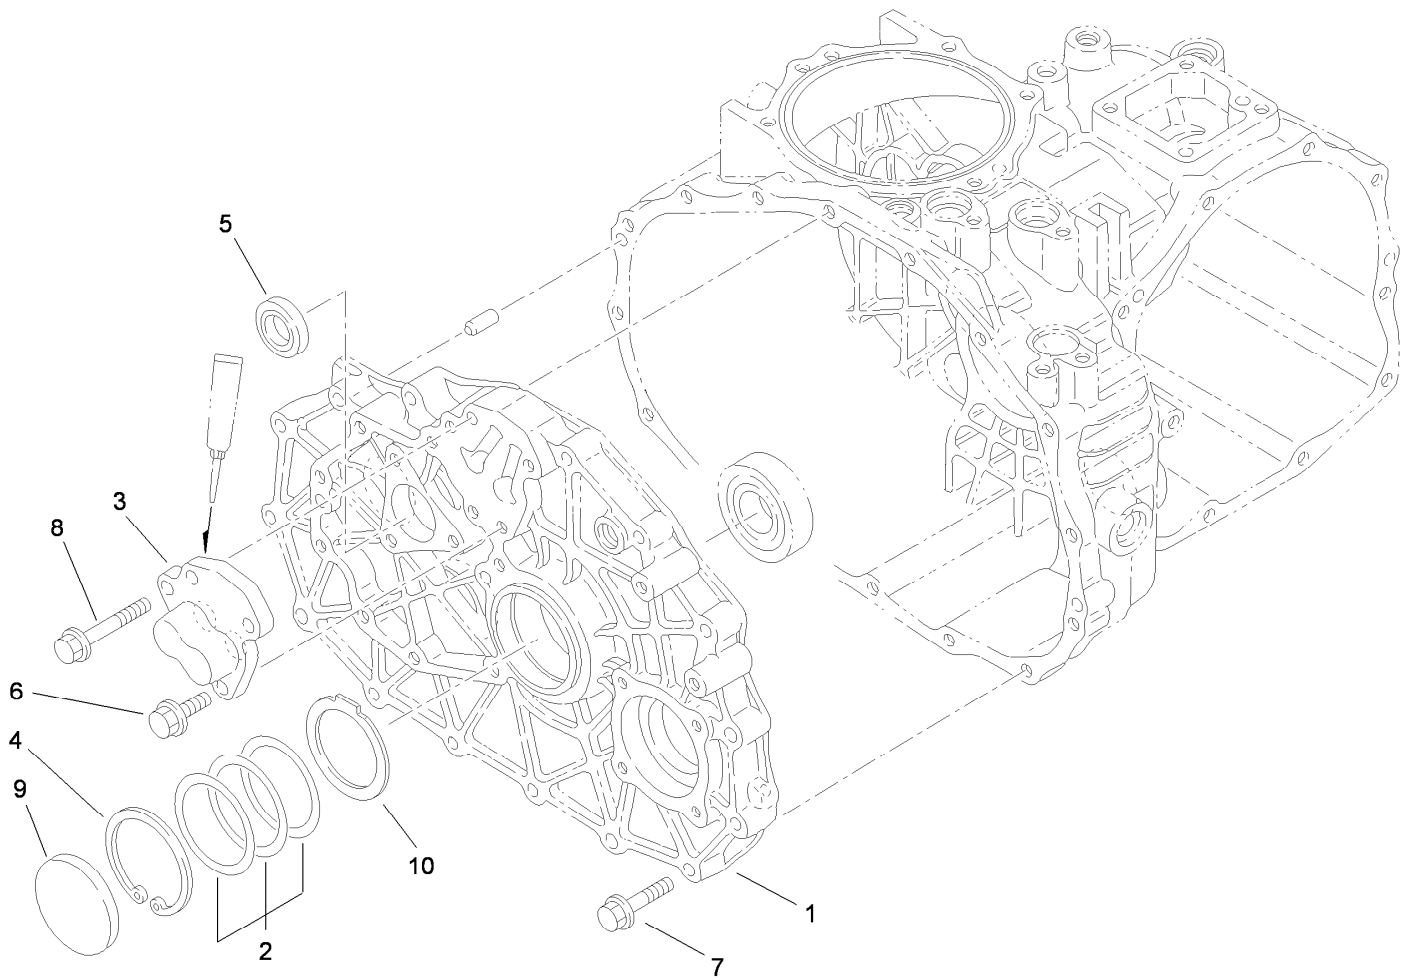

## Center Plate Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 100-4462           | 1           | Plate-Center, 4Wd  |
| 2           | 100-4460           | 1           | Shim-Set           |
| 3           | 92-0706            | 1           | Shaft-Fork         |
| 4           | 92-0759            | 1           | Ring-Snap          |
| 5           | 92-0791            | 1           | Seal-Oil           |
| 6           | 33104-025          | 3           | Screw-HHF          |
| 7           | 33104-040          | 15          | Screw-HHF          |
| 8           | 33104-050          | 1           | Screw-HHF          |
| 9           | 92-0807            | 1           | Cap-Sealing        |
| 10          | 100-4465           | 1           | Shim (W/Tab)       |

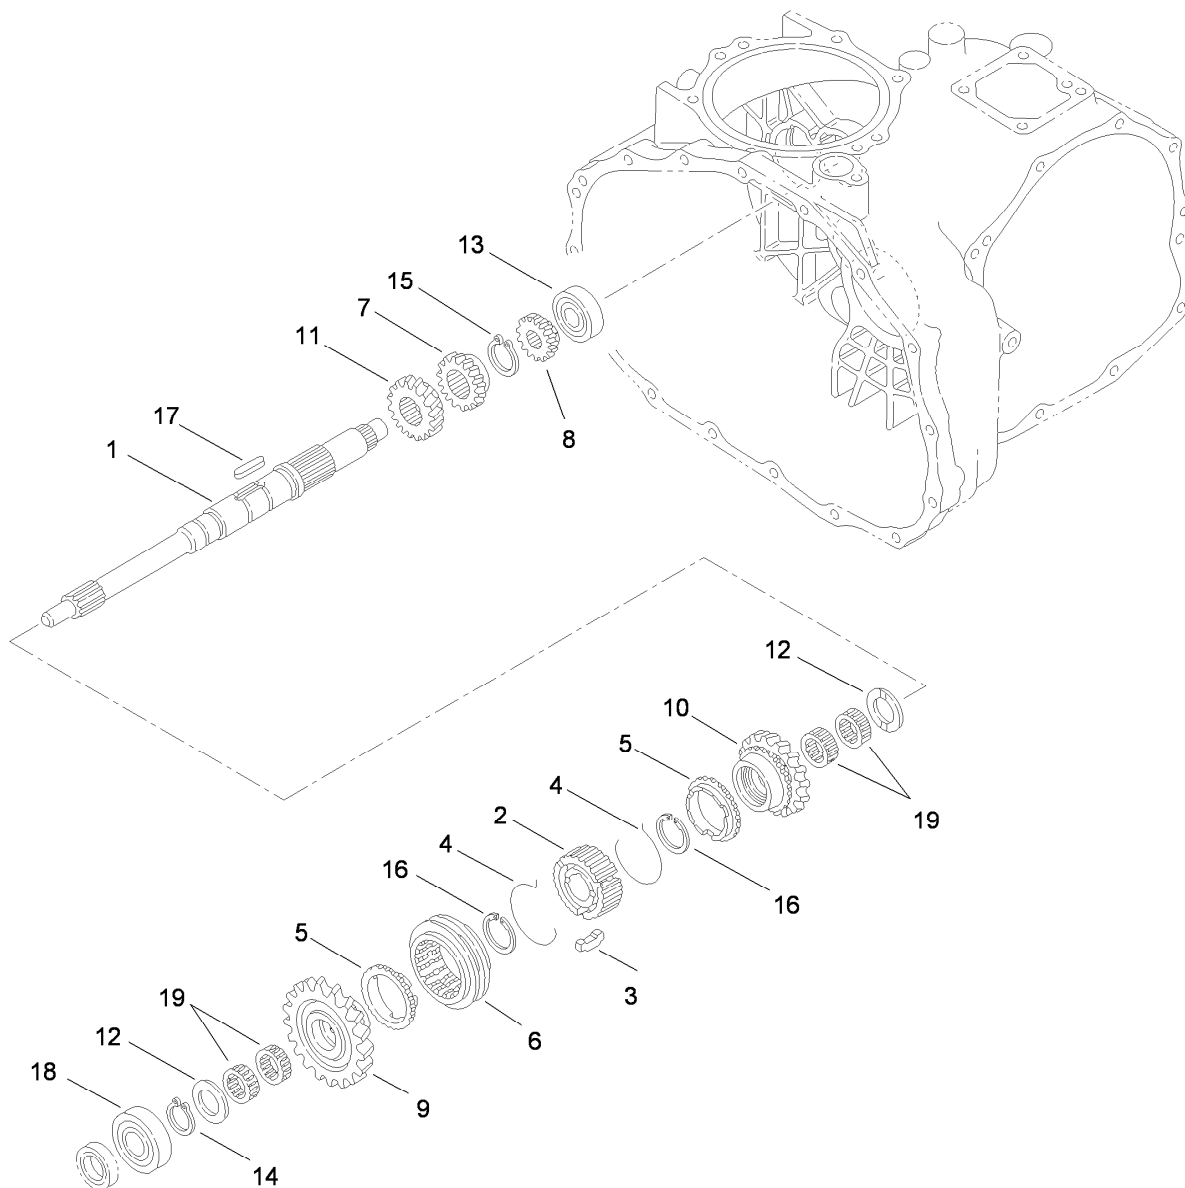

## Main Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 92-0663            | 1           | Shaft-Main           |
| 2           | 92-0664            | 1           | Hub-Synchro          |
| 3           | 92-0665            | 3           | Key-Synchro          |
| 4           | 92-0666            | 2           | Spring-Synchro       |
| 5           | 92-0667            | 2           | Ring-Synchro         |
| 6           | 92-0668            | 1           | Shifter-Synchro      |
| 7           | 92-0672            | 1           | Gear-Main, 18 Tooth  |
| 8           | 92-0673            | 1           | Gear-Main, 14 Tooth  |
| 9           | 110-2521           | 1           | Gear-Main, 27 Tooth  |
| 10          | 110-2522           | 1           | Gear- Main, 24 Tooth |

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 11          | 92-0687            | 1           | Gear-Main, 16 Tooth |
| 12          | 92-0740            | 2           | Washer-Thrust       |
| 13          | 92-0650            | 1           | Bearing             |
| 14          | 92-0753            | 1           | Ring-Snap           |
| 15          | 92-0754            | 1           | Ring-Snap           |
| 16          | 92-0763            | 2           | Ring-Snap           |
| 17          | 92-0772            | 1           | Key                 |
| 18          | 251-8              | 1           | Bearing-Ball        |
| 19          | 92-0781            | 4           | Bearing-Needle      |

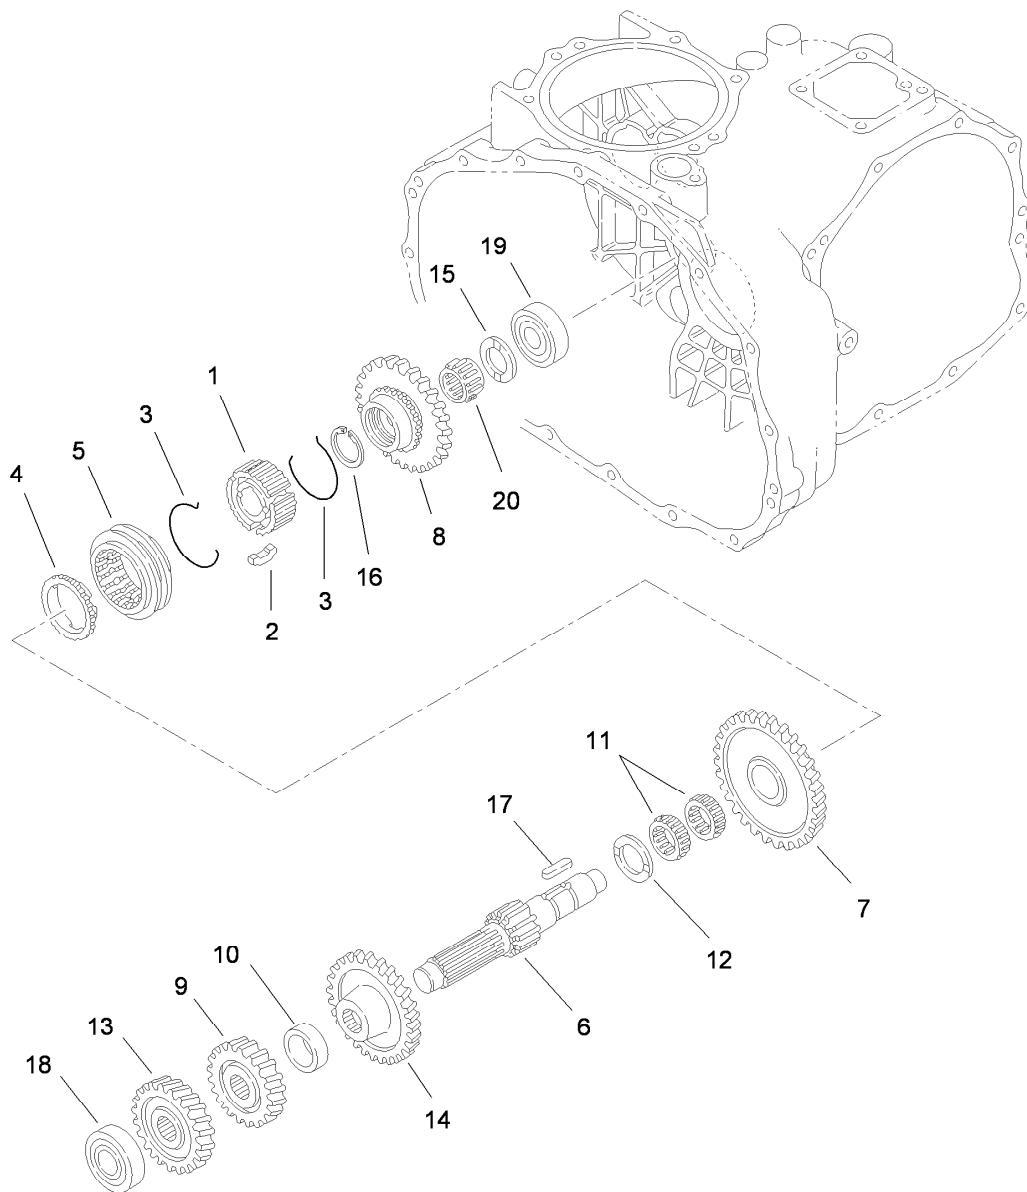

## Reduction Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 1           | 92-0664            | 1           | Hub-Synchro               |
| 2           | 92-0665            | 3           | Key-Synchro               |
| 3           | 92-0666            | 2           | Spring-Synchro            |
| 4           | 92-0667            | 1           | Ring-Synchro              |
| 5           | 92-0668            | 1           | Shifter-Synchro           |
| 6           | 92-0674            | 1           | Shaft-Reduction           |
| 7           | 110-2524           | 1           | Gear- Reduction, 49 Tooth |
| 8           | 92-0819            | 1           | Gear-Reduction, 40 Tooth  |
| 9           | 92-0769            | 1           | Pin-Roll                  |
| 10          | 92-0680            | 1           | Collar                    |
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|--------------------------|
| 11          | 92-0681            | 2           | Bearing-Needle           |
| 12          | 92-0682            | 1           | Washer-Thrust            |
| 13          | 92-0822            | 1           | Gear-Reduction, 28 Tooth |
| 14          | 92-0823            | 1           | Gear-Reduction, 43 Tooth |
| 15          | 92-0740            | 1           | Washer-Thrust            |
| 16          | 92-0673            | 1           | Gear-Main, 14 Tooth      |
| 17          | 92-0772            | 1           | Key                      |
| 18          | 105-7985           | 1           | Bearing                  |
| 19          | 92-0778            | 1           | Bearing                  |
| 20          | 92-0782            | 1           | Bearing-Needle           |

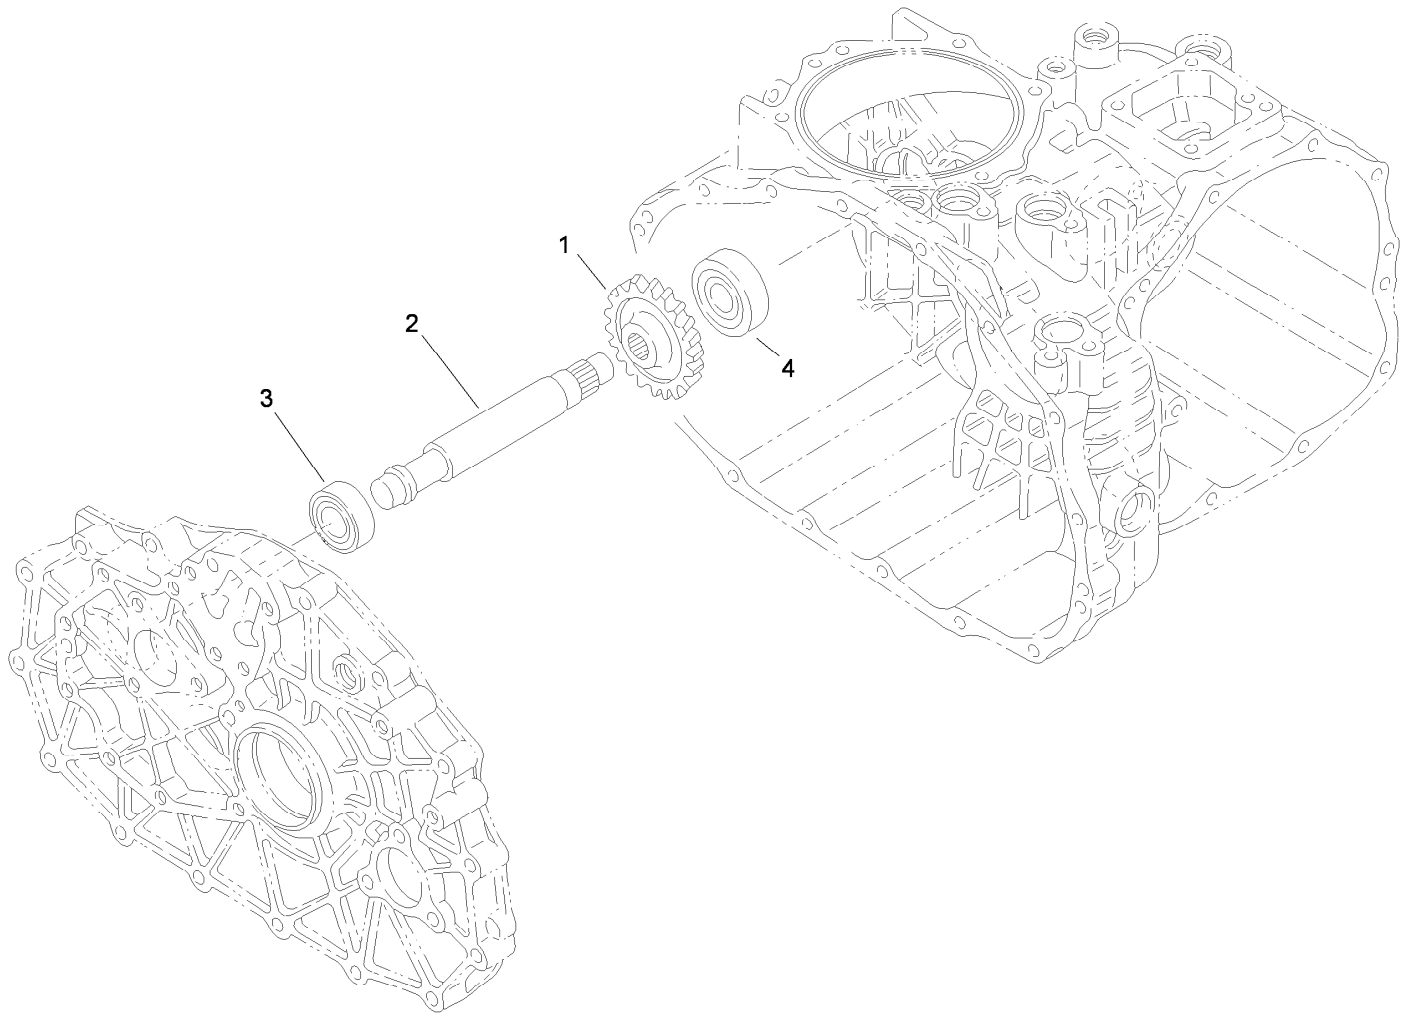


## Reverse Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 1           | 92-0684            | 1           | Gear-Reverse, 33 Tooth |
| 2           | 92-0824            | 1           | Shaft-Idler, Reverse   |
| 3           | 251-346            | 1           | Bearing-Ball           |
| 4           | 92-0778            | 1           | Bearing                |

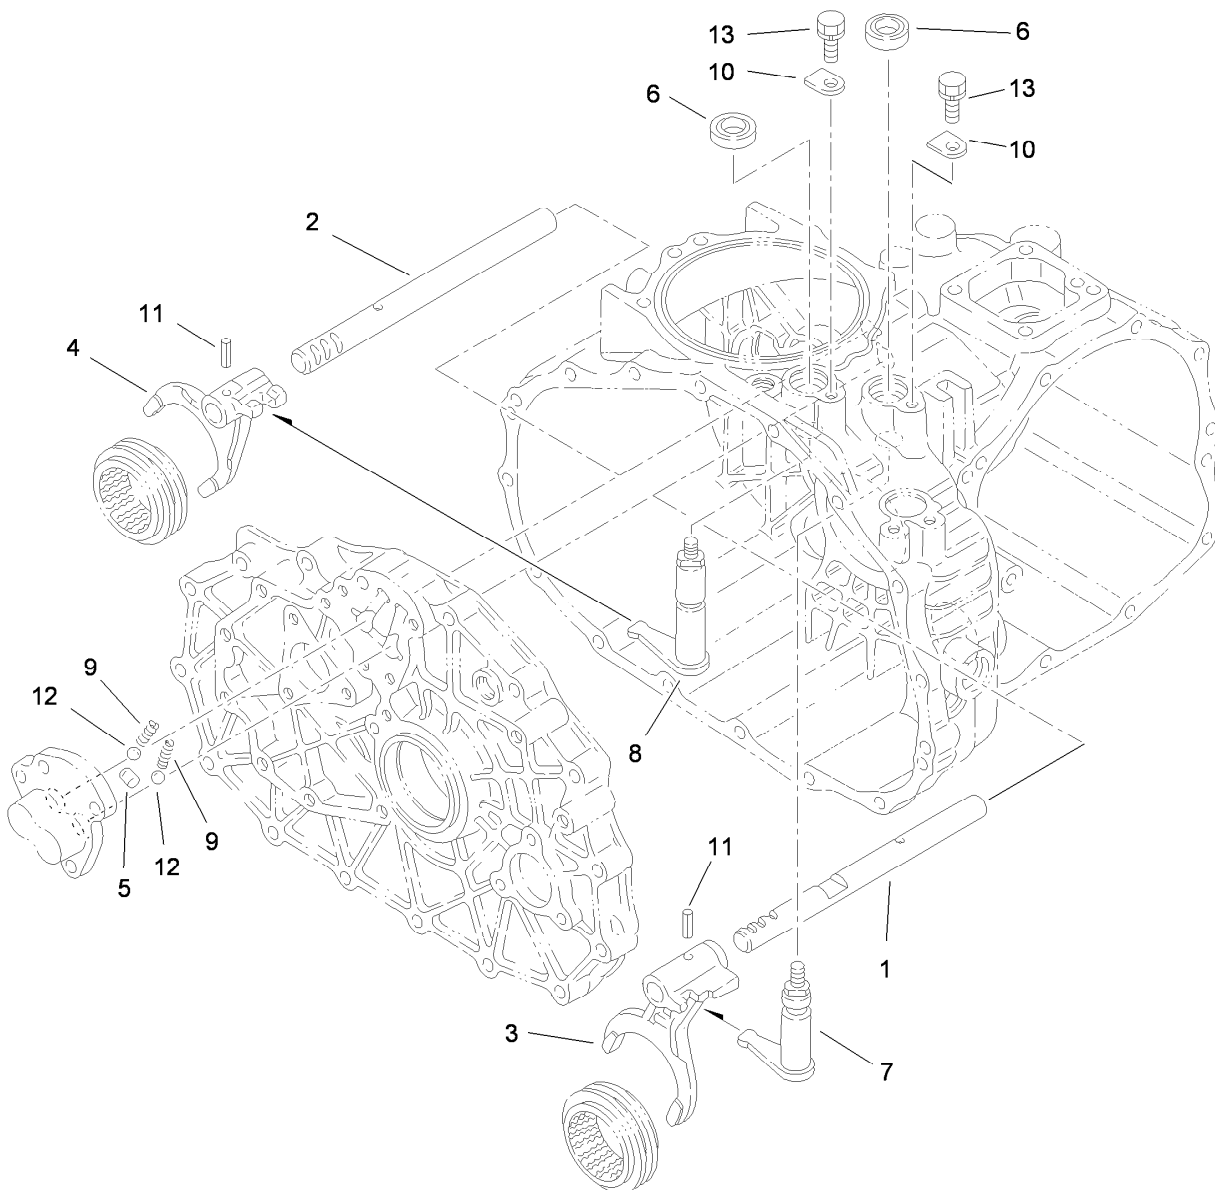


## Main Shift Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 92-0698     | 1    | Shaft-Fork   |
| 2    | 92-0699     | 1    | Shaft-Fork   |
| 3    | 92-0700     | 1    | Fork-Shift   |
| 4    | 92-0701     | 1    | Fork-Shift   |
| 5    | 92-0705     | 1    | Lock-Spindle |
| 6    | 92-0729     | 2    | Seal-Oil     |
| 7    | 92-0816     | 1    | Arm-Shift    |
| 8    | 92-0817     | 1    | Arm-Shift    |
| 9    | 92-0731     | 2    | Spring       |
| 10   | 92-0732     | 2    | Plate-Keeper |
| 11   | 92-0769     | 2    | Pin-Roll     |
| 12   | 92-0785     | 2    | Ball-Steel   |
| 13   | 33104-016   | 2    | Screw-HHF    |

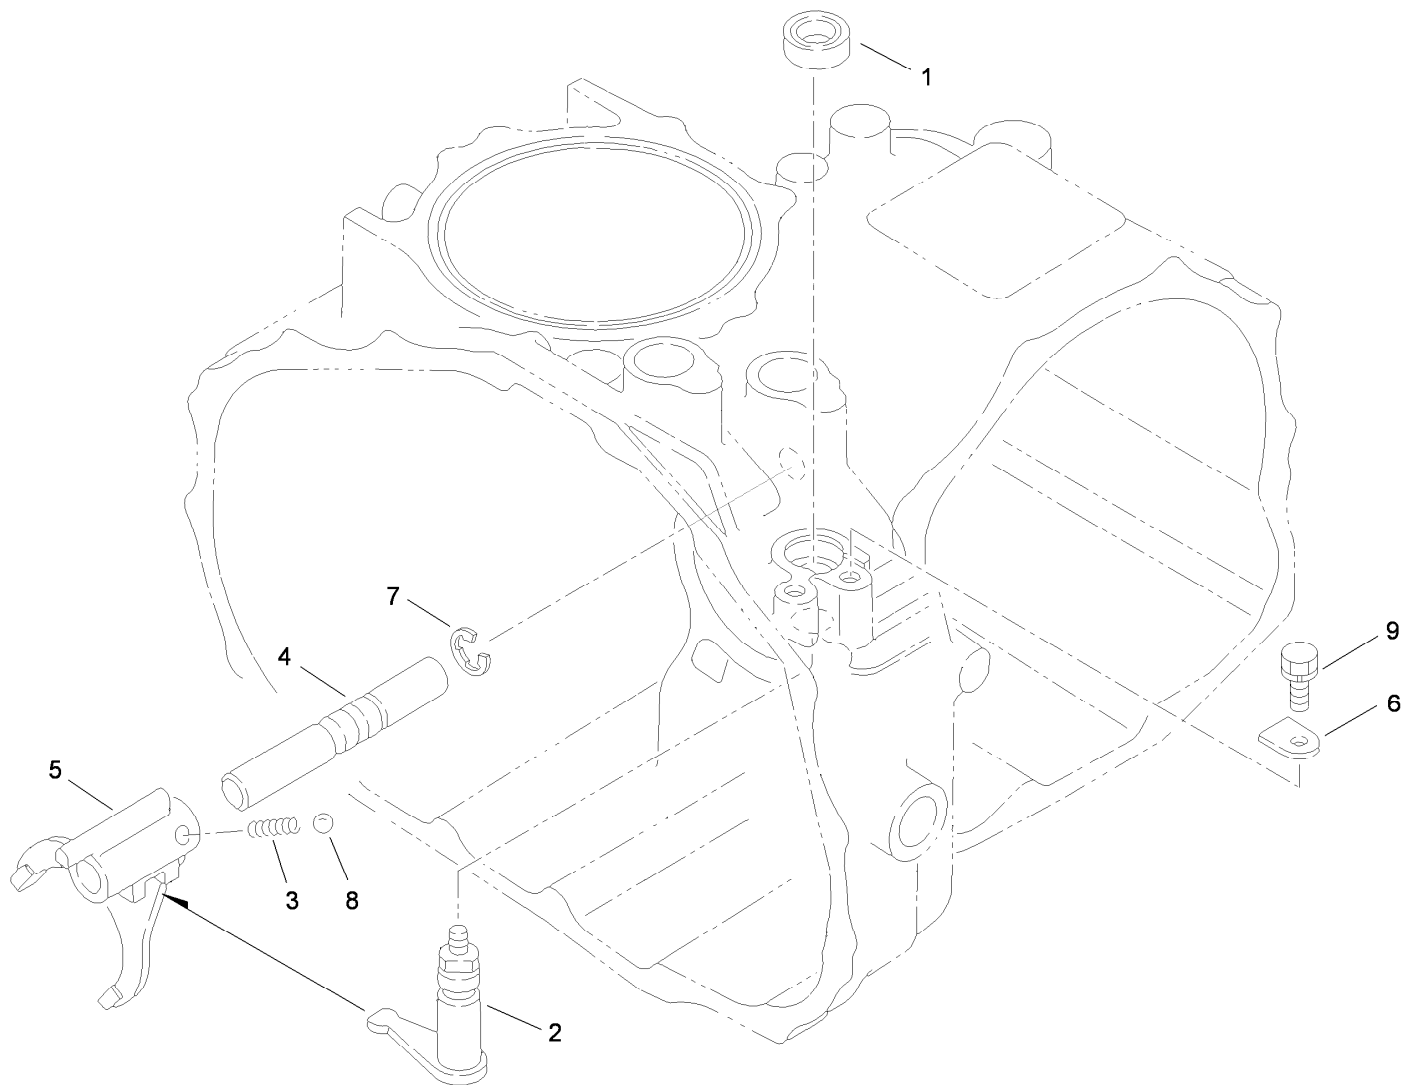


## Hi-Lo Shift Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-0729            | 1           | Seal-Oil           |
| 2           | 92-0818            | 1           | Arm-Shift          |
| 3           | 92-0731            | 1           | Spring             |
| 4           | 92-0708            | 1           | Shaft-Fork         |
| 5           | 92-0709            | 1           | Fork-Shift         |
| 6           | 92-0732            | 1           | Plate-Keeper       |
| 7           | 92-0761            | 1           | Ring-E             |
| 8           | 92-0785            | 1           | Ball-Steel         |
| 9           | 33104-016          | 1           | Screw-HHF          |

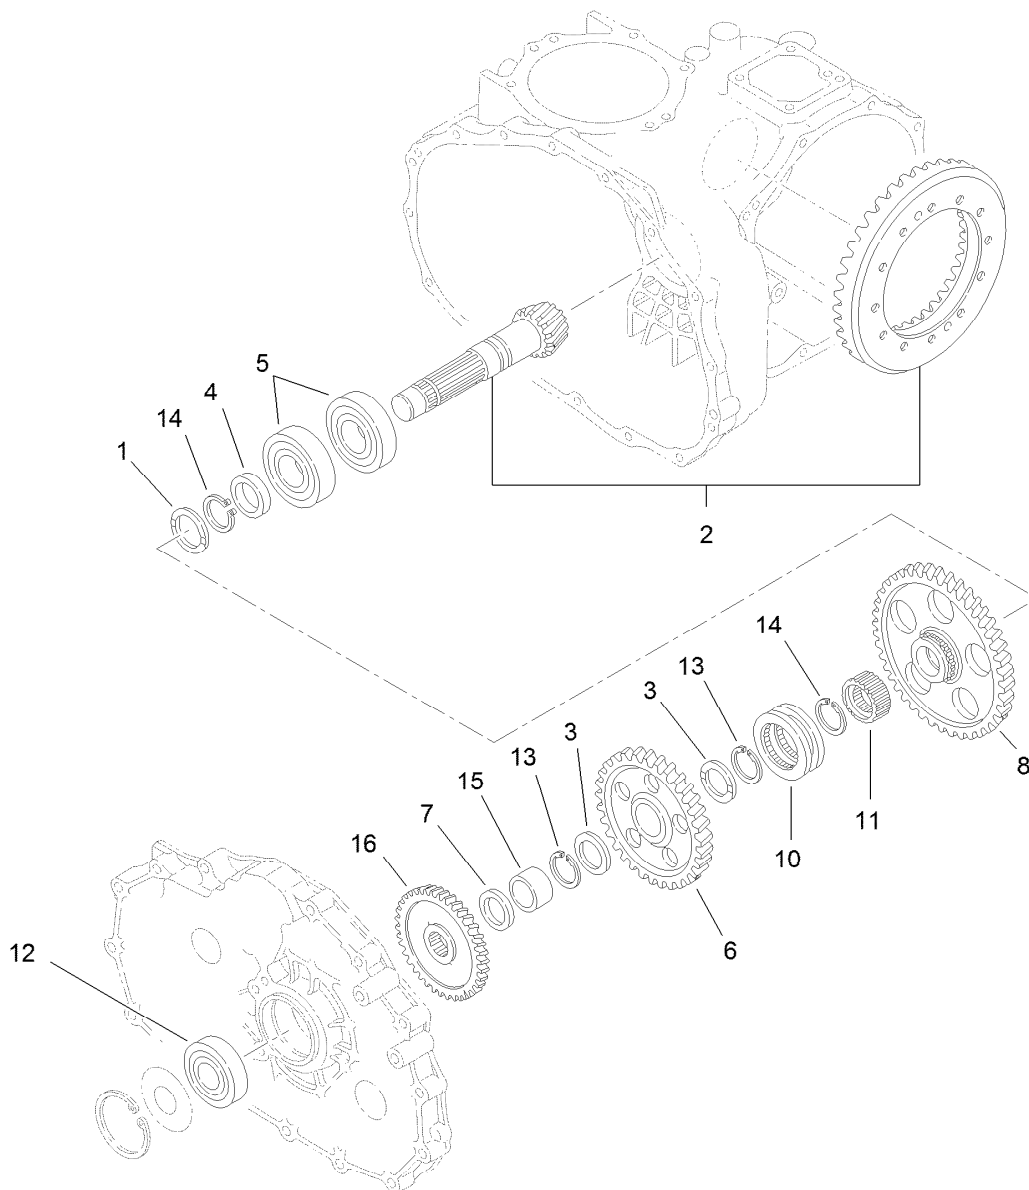


## Countershaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 1    | 92-0741     | 1    | Washer-Thrust                  |
| 2    | 105-7983    | 1    | Countershaft And Ring Gear ASM |
| 3    | 92-0711     | 2    | Washer-Thrust                  |
| 4    | 92-0713     | 1    | Collar                         |
| 5    | 92-0714     | 2    | Bearing                        |
| 6    | 92-0715     | 1    | Gear-Countershaft              |
| 7    | 92-0716     | 1    | Collar                         |
| 8    | 92-0717     | 1    | Gear-Countershaft              |
| 10   | 92-0718     | 1    | Shifter                        |
| 11   | 105-7986    | 1    | Collar-Spline                  |
| 12   | 92-0712     | 1    | Bearing-Ball                   |
| 13   | 105-7987    | 2    | Ring-Snap                      |
| 14   | 92-0755     | 2    | Ring-Snap                      |
| 15   | 92-0783     | 1    | Race-Inner                     |
| 16   | 92-5186     | 1    | Pinion                         |

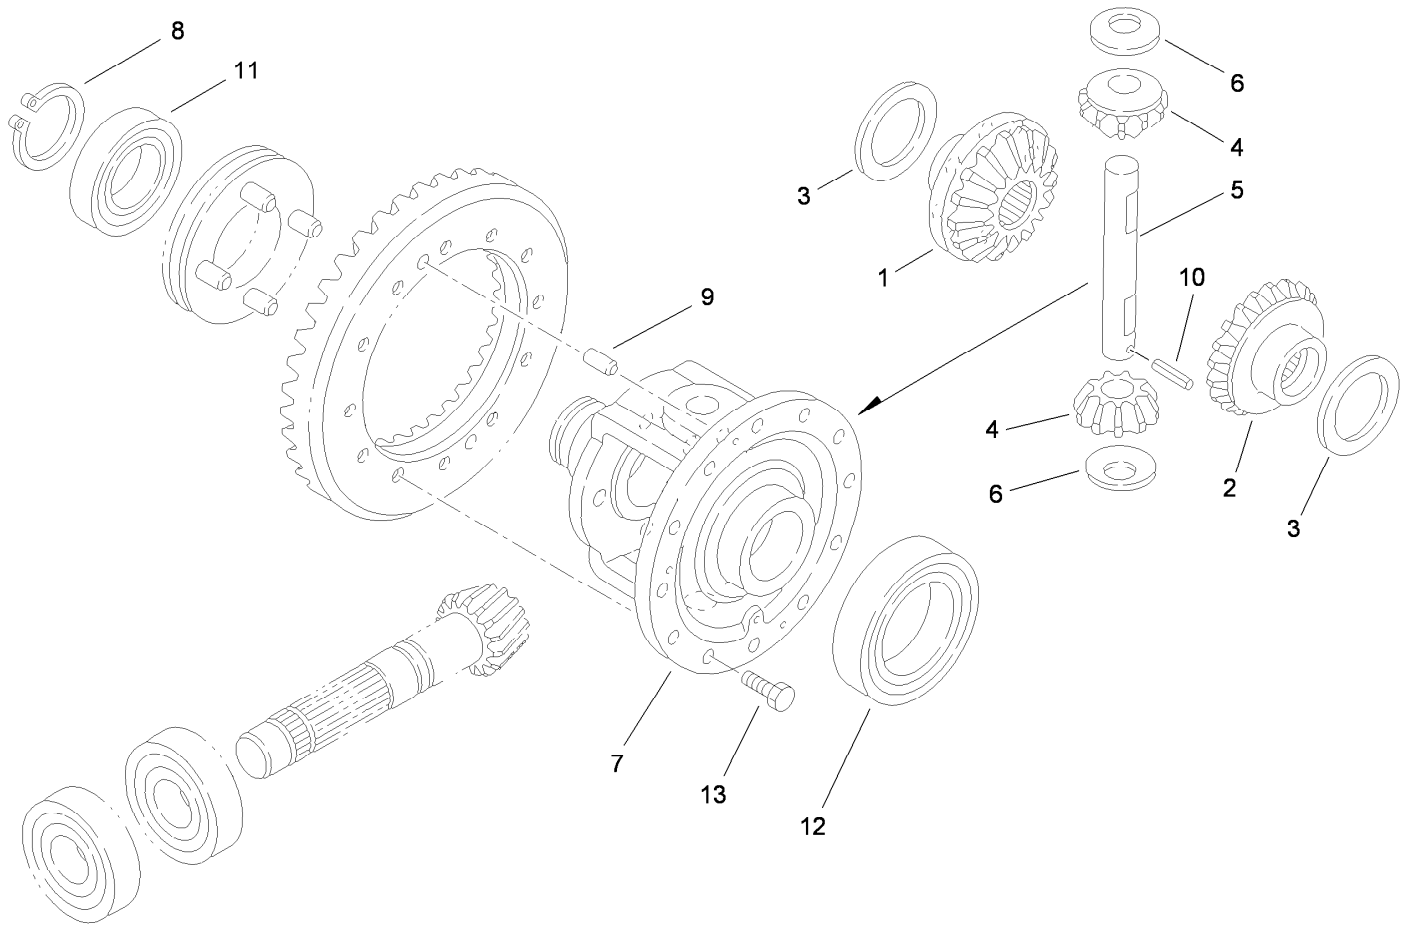


## Differential Gear Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 92-0745            | 1           | Gear-Side, LH         |
| 2           | 92-0746            | 1           | Gear-Side, RH         |
| 3           | 92-0747            | 2           | Side-Gear, Left Inner |
| 4           | 92-0748            | 2           | Pinion-Differential   |
| 5           | 92-0749            | 1           | Shaft-Pinion          |
| 6           | 92-0750            | 2           | Washer                |
| 7           | 92-0720            | 1           | Case-Differential     |
| 8           | 92-0756            | 1           | Ring-Snap             |
| 9           | 92-0765            | 2           | Pin-Parallel          |
| 10          | 92-0768            | 1           | Pin-Roll, Spring      |
| 11          | 92-0775            | 1           | Bearing               |
| 12          | 92-0776            | 1           | Bearing               |
| 13          | 92-0803            | 12          | Bolt                  |

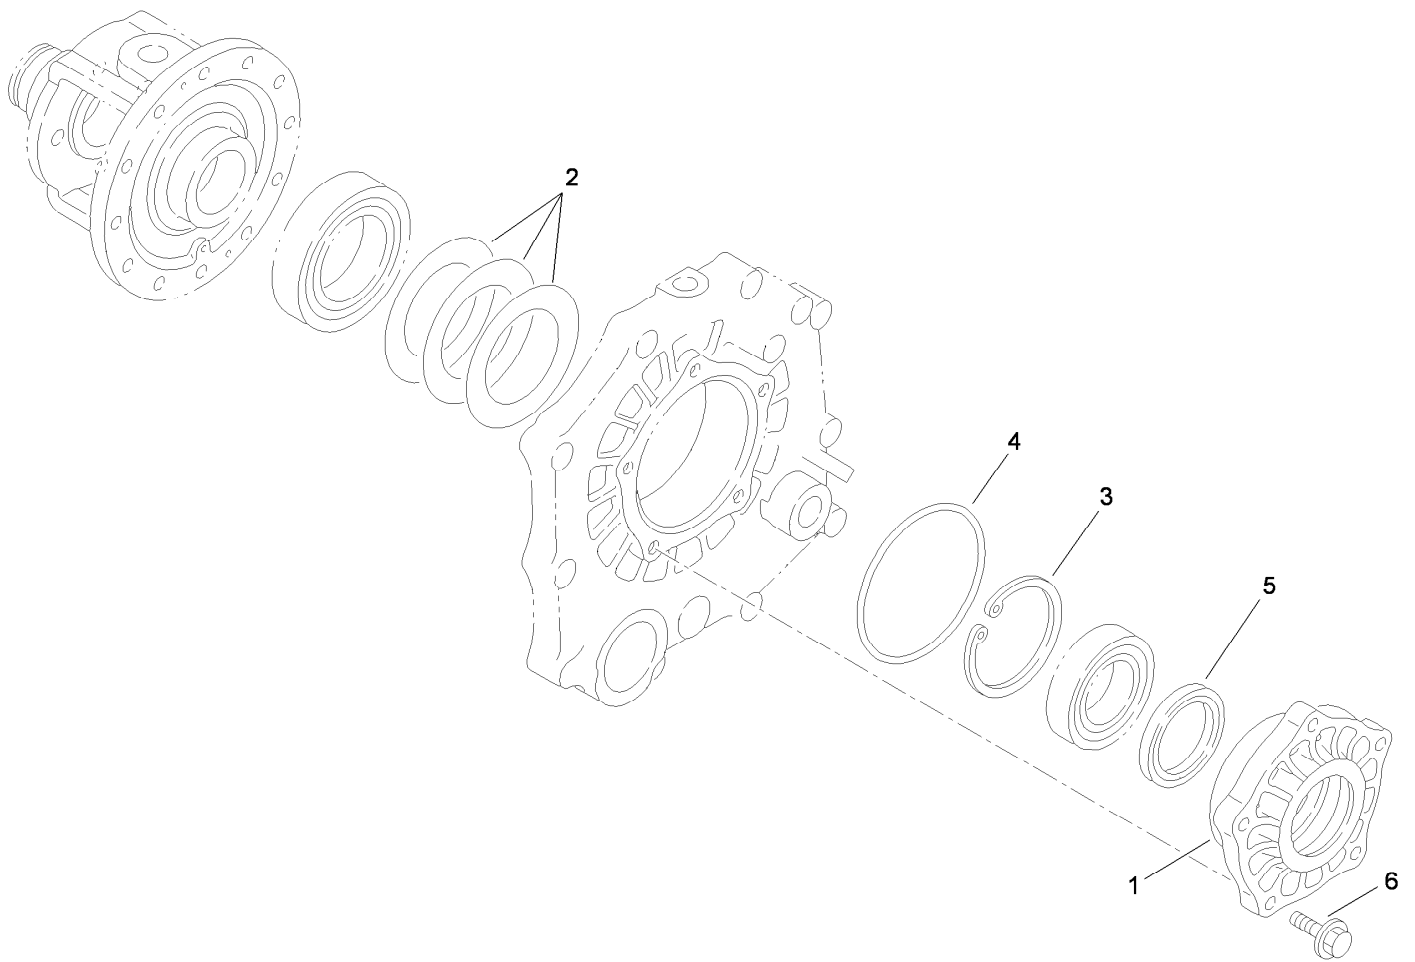


## Differential Carrier Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|----------------------|
| 1           | 92-0654            | 1           | Carrier-Differential |
| 2           | 92-0809            | 1           | Set-Shim             |
| 3           | 92-0760            | 1           | Ring-Snap            |
| 4           | 92-0789            | 1           | O-Ring               |
| 5           | 92-0793            | 1           | Seal-Oil             |
| 6           | 33104-030          | 5           | Screw-HHF            |

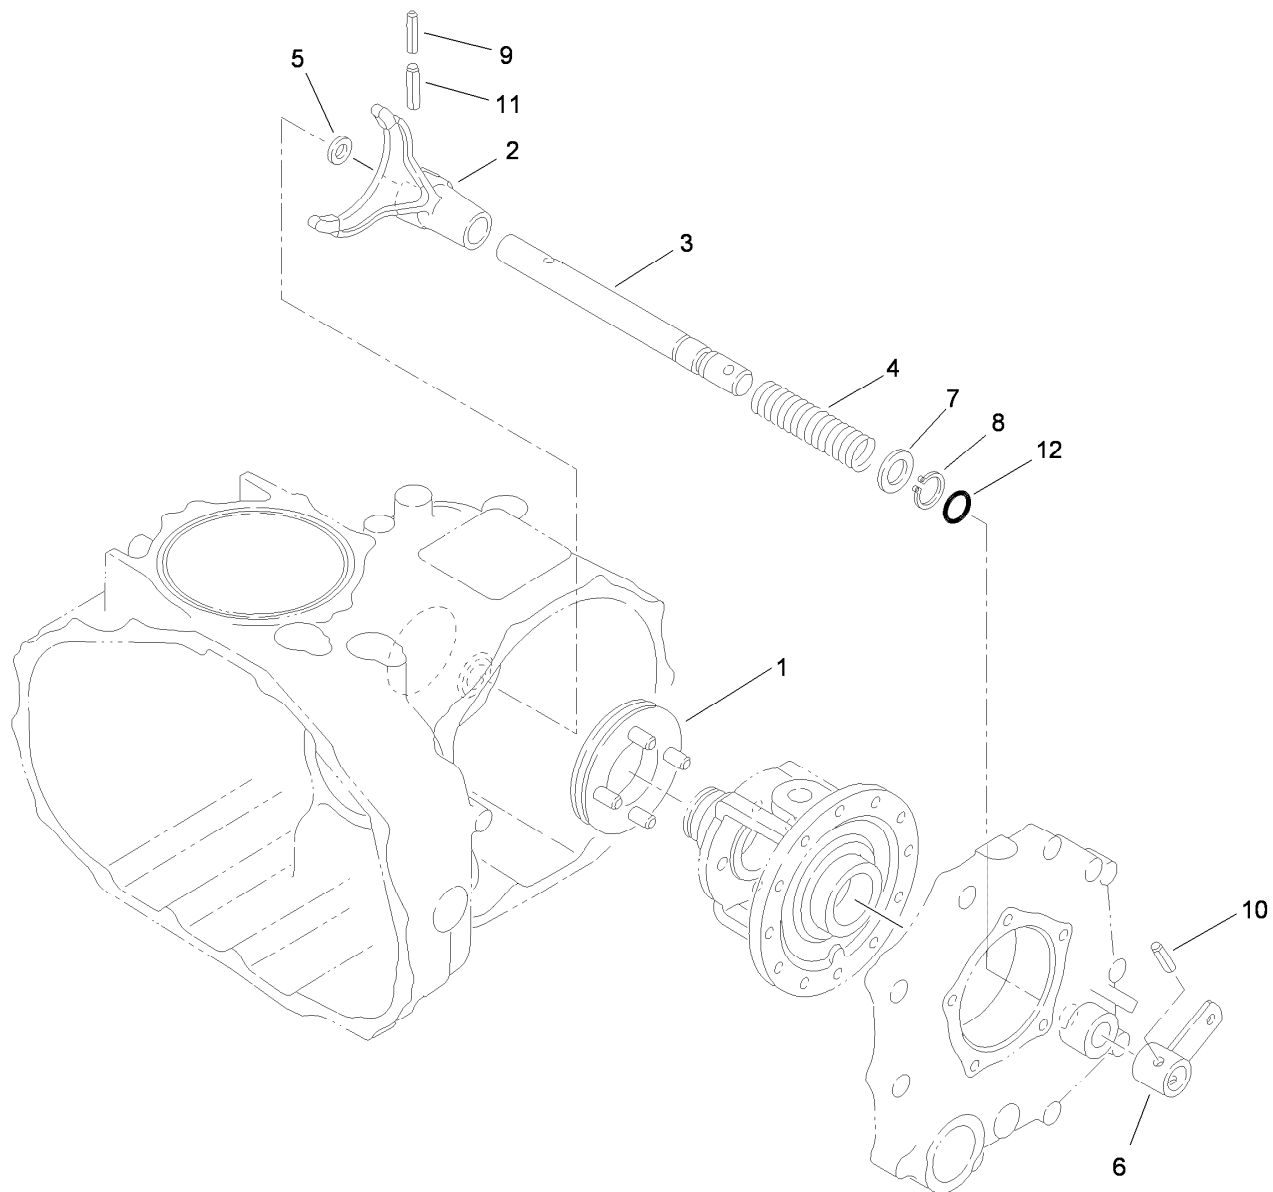


## Differential Lock Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 1    | 92-0730     | 1    | Slider-Differential, Lock     |
| 2    | 92-0721     | 1    | Fork-Lock, Differential       |
| 3    | 92-0722     | 1    | Shaft-Fork, Lock Differential |
| 4    | 92-0723     | 1    | Spring-Lock, Differential     |
| 5    | 92-0744     | 1    | Washer                        |
| 6    | 92-0724     | 1    | Arm-Lock, Differential        |
| 7    | 92-0733     | 1    | Washer                        |
| 8    | 92-0753     | 1    | Ring-Snap                     |
| 9    | 92-0768     | 1    | Pin-Roll, Spring              |
| 10   | 92-0770     | 1    | Pin-Roll, Spring              |
| 11   | 92-0771     | 1    | Pin-Roll, Spring              |
| 12   | 92-0787     | 1    | O-Ring                        |

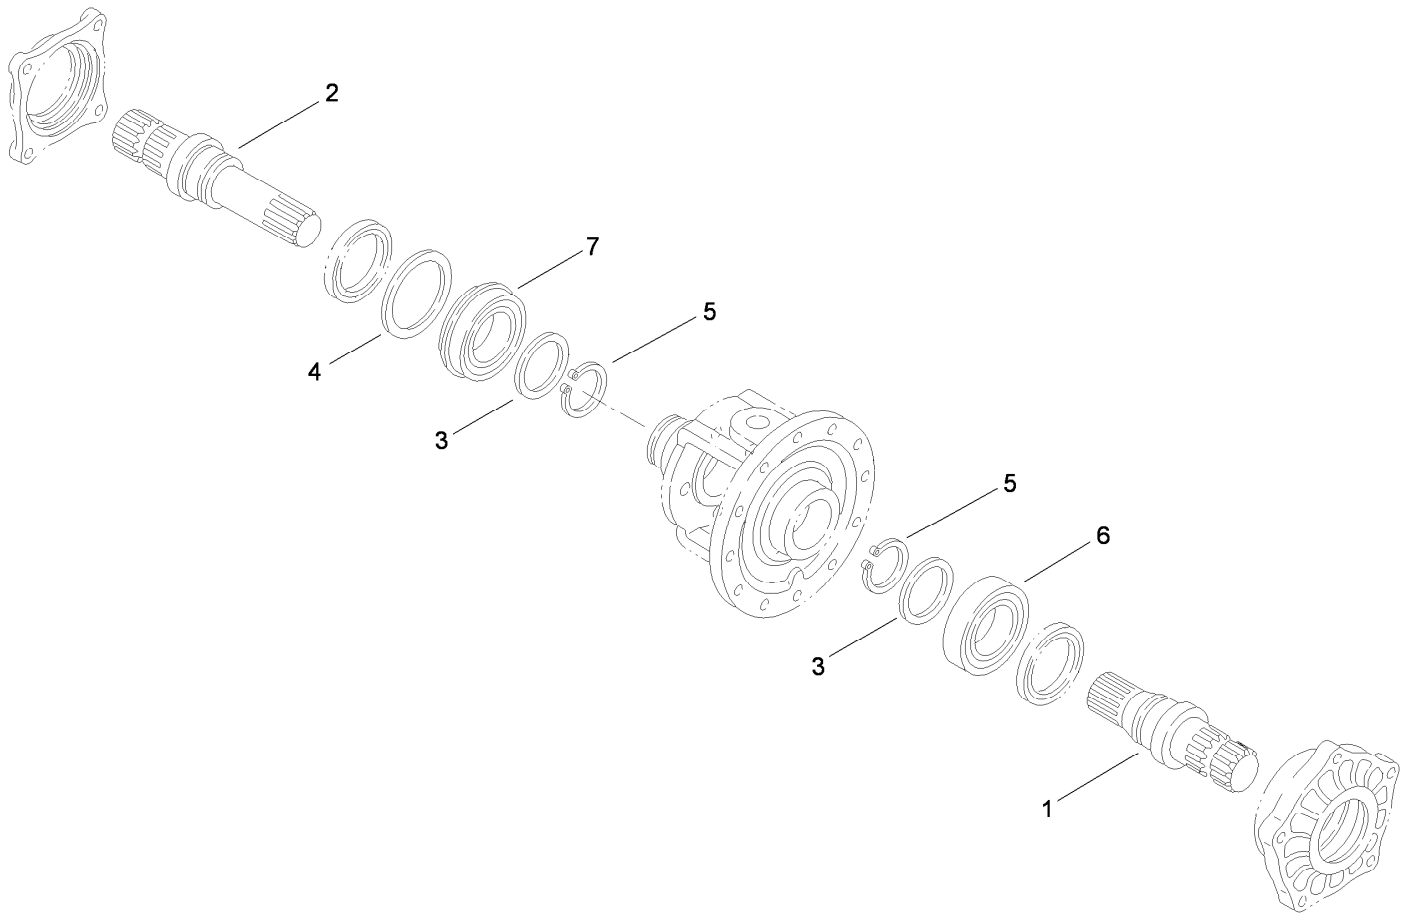


## Axle Shaft Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 92-0725            | 1           | Shaft-Axle, Left   |
| 2           | 92-0726            | 1           | Shaft-Axle, Right  |
| 3           | 92-0727            | 2           | Washer             |
| 4           | 92-0728            | 1           | Washer             |
| 5           | 92-0756            | 2           | Ring-Snap          |
| 6           | 92-0775            | 1           | Bearing            |
| 7           | 92-0780            | 1           | Bearing            |

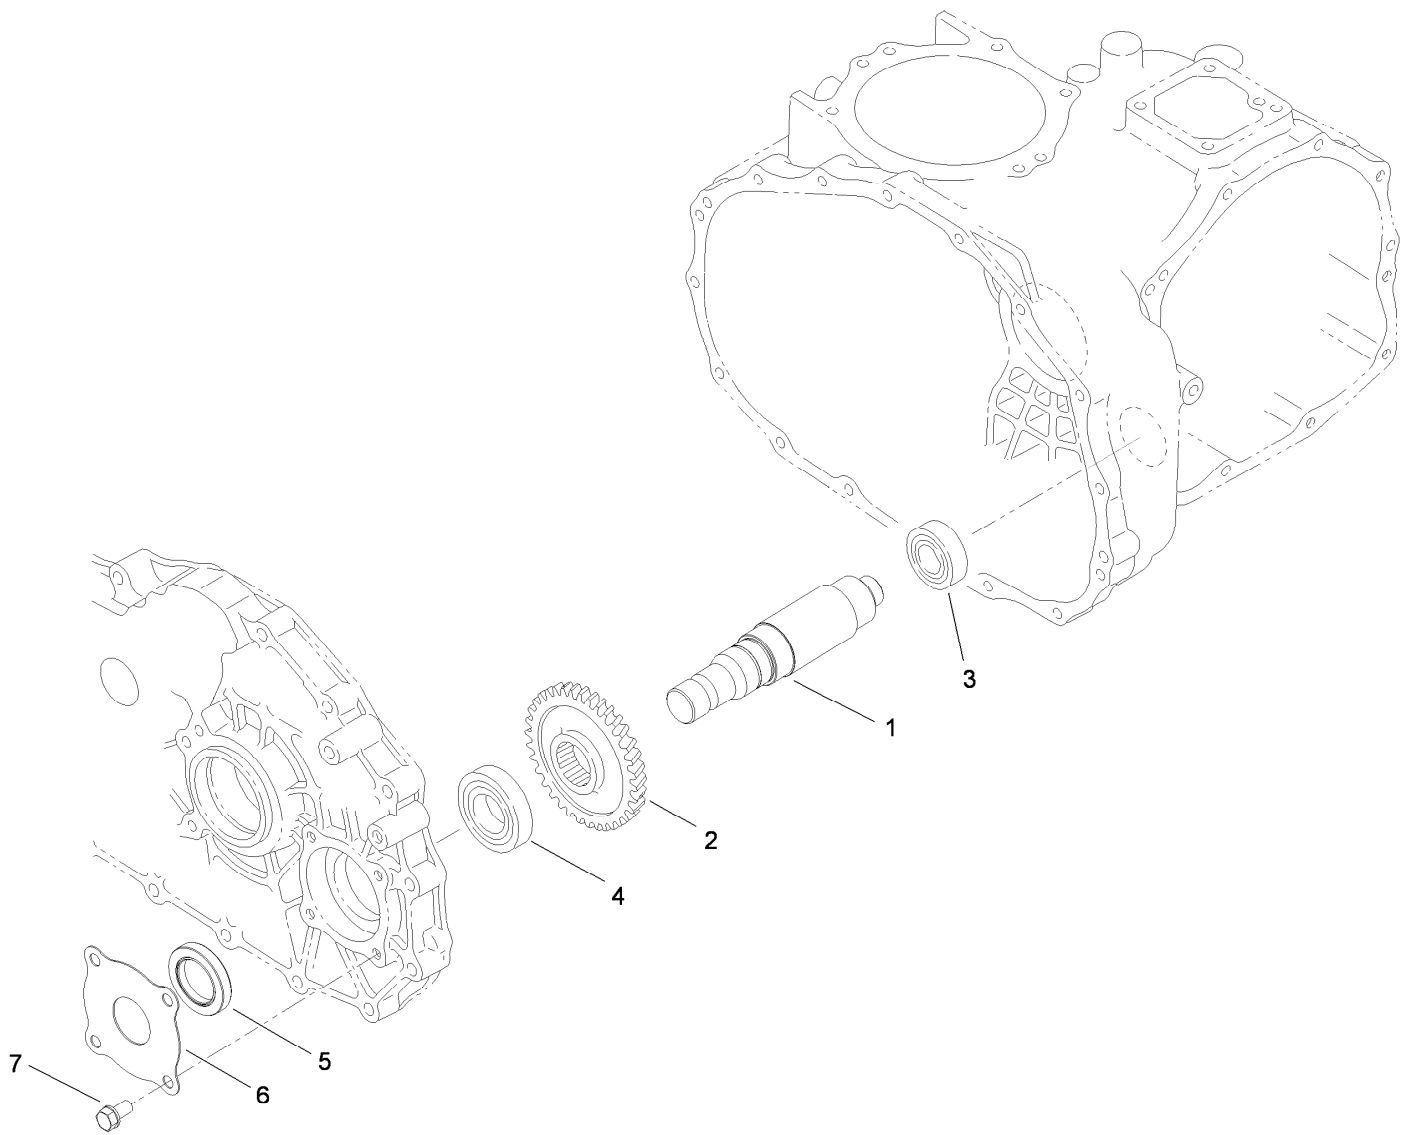


## Front Drive Assembly 4 Wheel Drive Transaxle Assembly No. 115-2175
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 115-7828           | 1           | Driveshaft-Front   |
| 2           | 92-5184            | 1           | Gear               |
| 3           | 251-346            | 1           | Bearing-Ball       |
| 4           | 92-5185            | 1           | Bearing            |
| 5           | 115-7829           | 1           | Seal               |
| 6           | 115-7830           | 1           | Protector-Seal     |
| 7           | 33104-016          | 4           | Screw-HHF          |

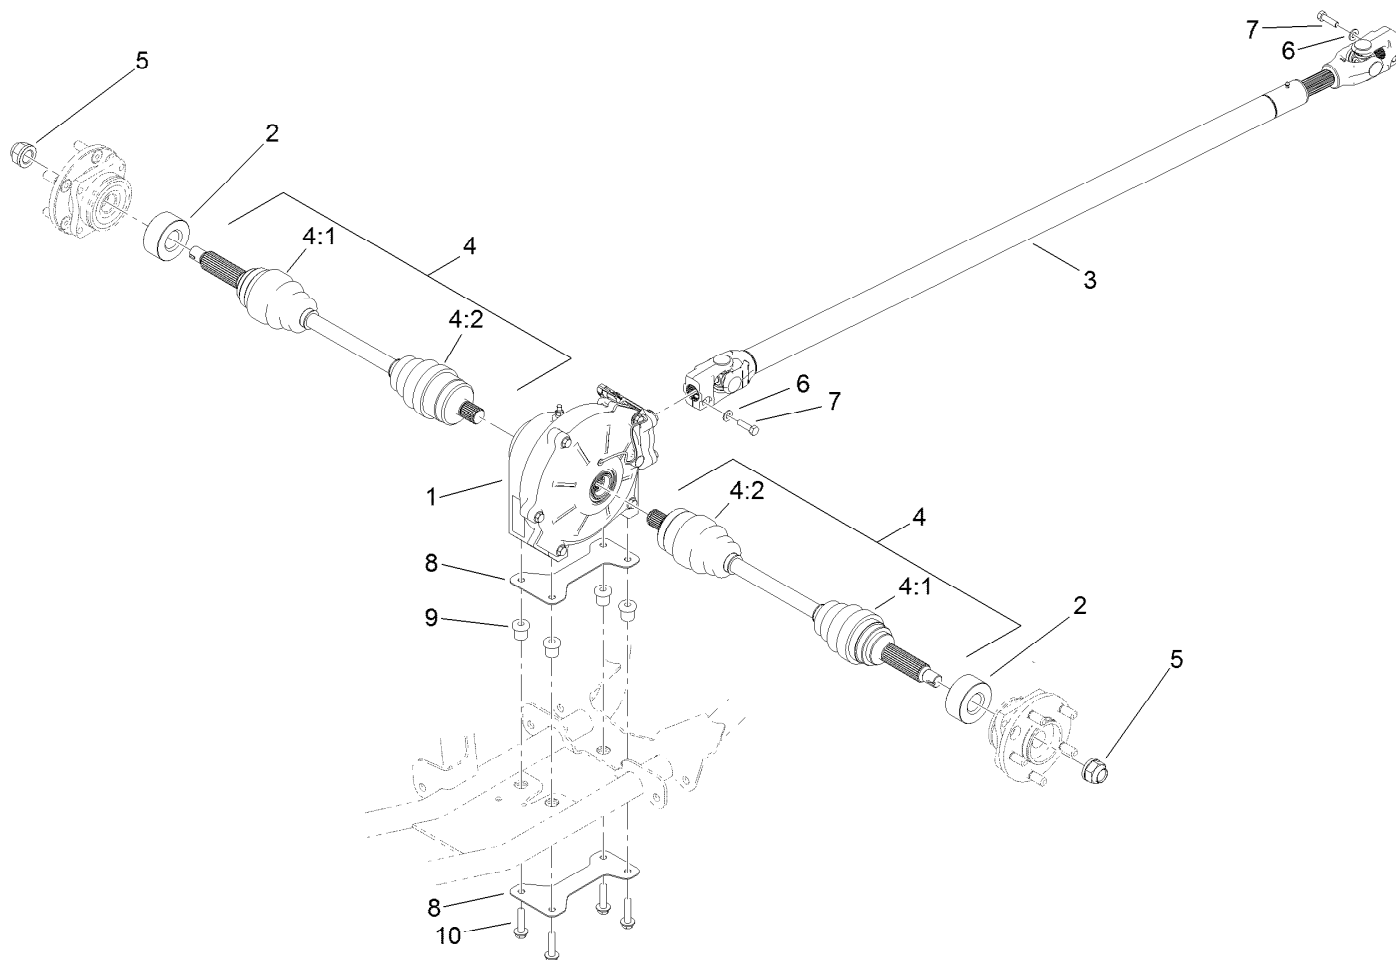

## 4 Wheel Drive Assembly

 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 119-0824    | 1    | Differential ASM   |
| 2    | 115-2254    | 2    | Spacer-Axle        |
| 3    | 115-2171    | 1    | Driveshaft ASM     |
| 4    | 115-2172    | 2    | Cv Axle ASM        |
| 4:1  | 107-2891    | 1    | Outboard Boot Kit  |
| 4:2  | 107-2892    | 1    | Inboard Boot Kit   |
| 5    | 115-2164    | 2    | Nut-Spindle        |
| 6    | 3256-23     | 2    | Washer-Plain       |
| 7    | 3210-6      | 2    | Screw-HH           |
| 8    | 119-9477-03 | 2    | Plate-Differential |
| 9    | 63-9750     | 4    | Mount              |
| 10   | 3234-18     | 4    | Screw-HHF          |

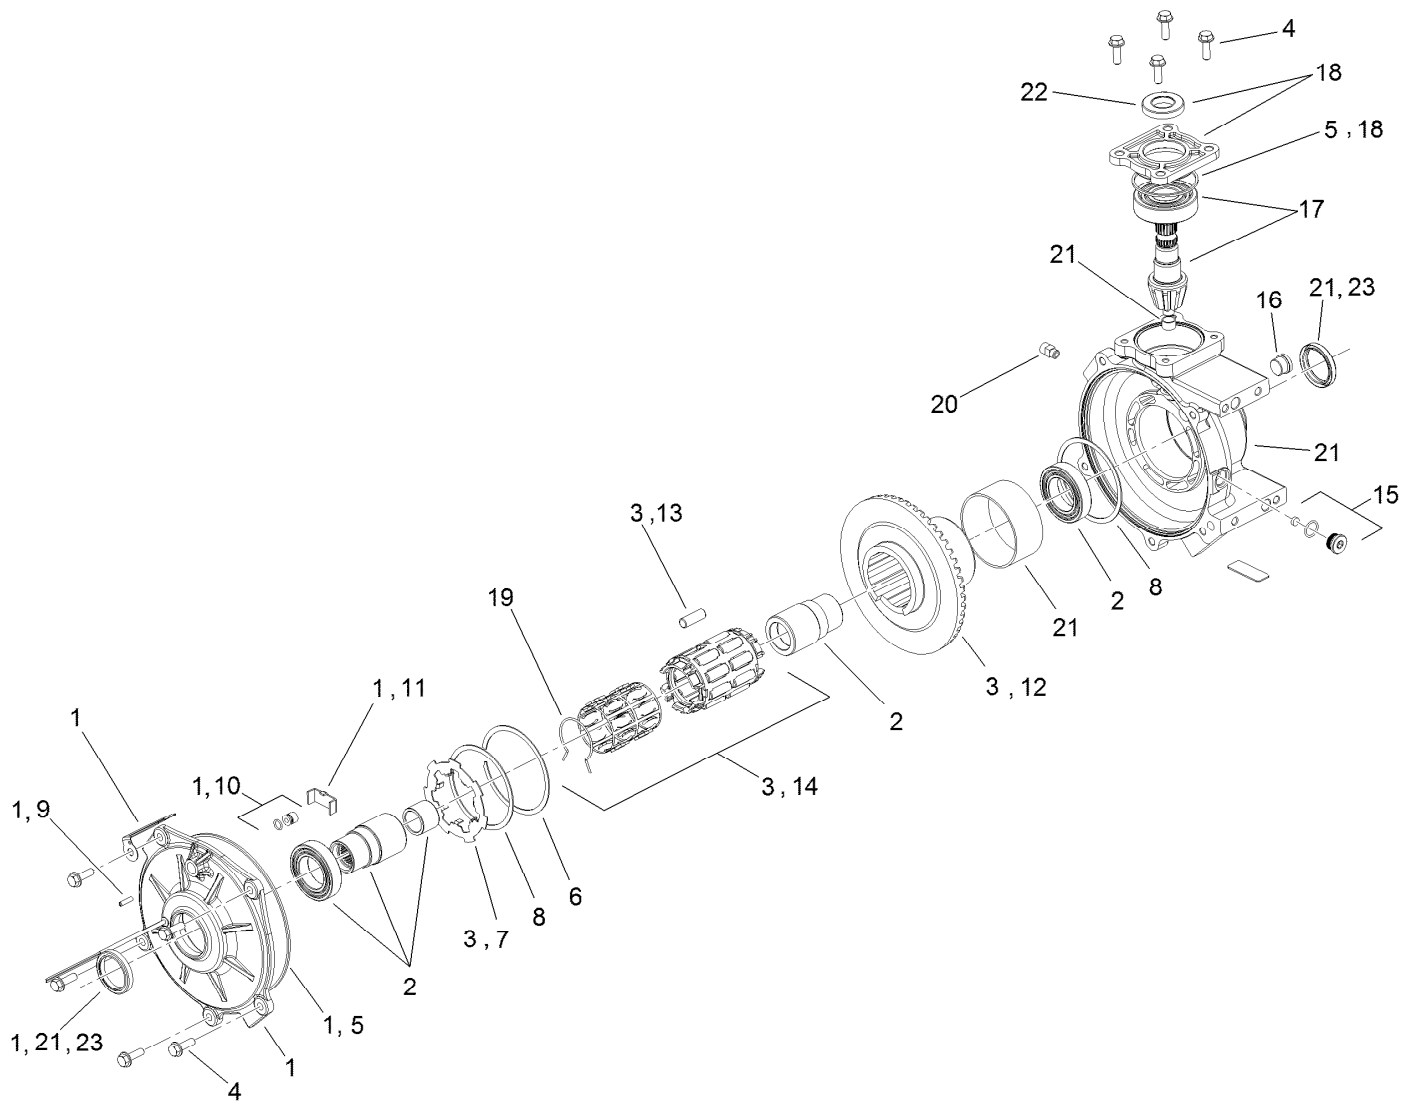

## Differential Assembly No. 119-0824


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 115-7790    | 1    | Output Cover ASM         |
| 2    | 119-9479    | 1    | Output Hub ASM           |
| 3    | 115-7792    | 1    | Clutch ASM               |
| 4    | 115-7793    | 1    | Bolt Kit                 |
| 5    | 115-7794    | 1    | Seal Kit                 |
| 6    | 115-7795    | 1    | Ring-Retaining, Internal |
| 7    | 115-7796    | 1    | Plate-Armature, Notched  |
| 8    | 115-7797    | 1    | Shim                     |
| 9    | 115-7798    | 1    | Screw-Set                |
| 10   | 115-7799    | 1    | Thrust Button ASM        |
| 11   | 115-7800    | 1    | Plate-Thrust             |
| 12   | 115-7801    | 1    | Gear-Ring, 50T           |
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 13   | 115-7802    | 1    | Roll Kit         |
| 14   | 115-7803    | 1    | Roll Cage ASM    |
| 15   | 115-7804    | 1    | Drain Plug ASM   |
| 16   | 115-7805    | 1    | Plug-Oil, Fill   |
| 17   | 115-7806    | 1    | Shaft-Pinion, 9T |
| 18   | 115-7807    | 1    | Input Cover ASM  |
| 19   | 115-7808    | 1    | Spring-Torsion   |
| 20   | 117-4985    | 1    | Vent-Protected   |
| 21   | 119-9480    | 1    | Gearcase ASM     |
| 22   | 127-8866    | 1    | Input Seal       |
| 23   | 127-8867    | 2    | Output Seal      |

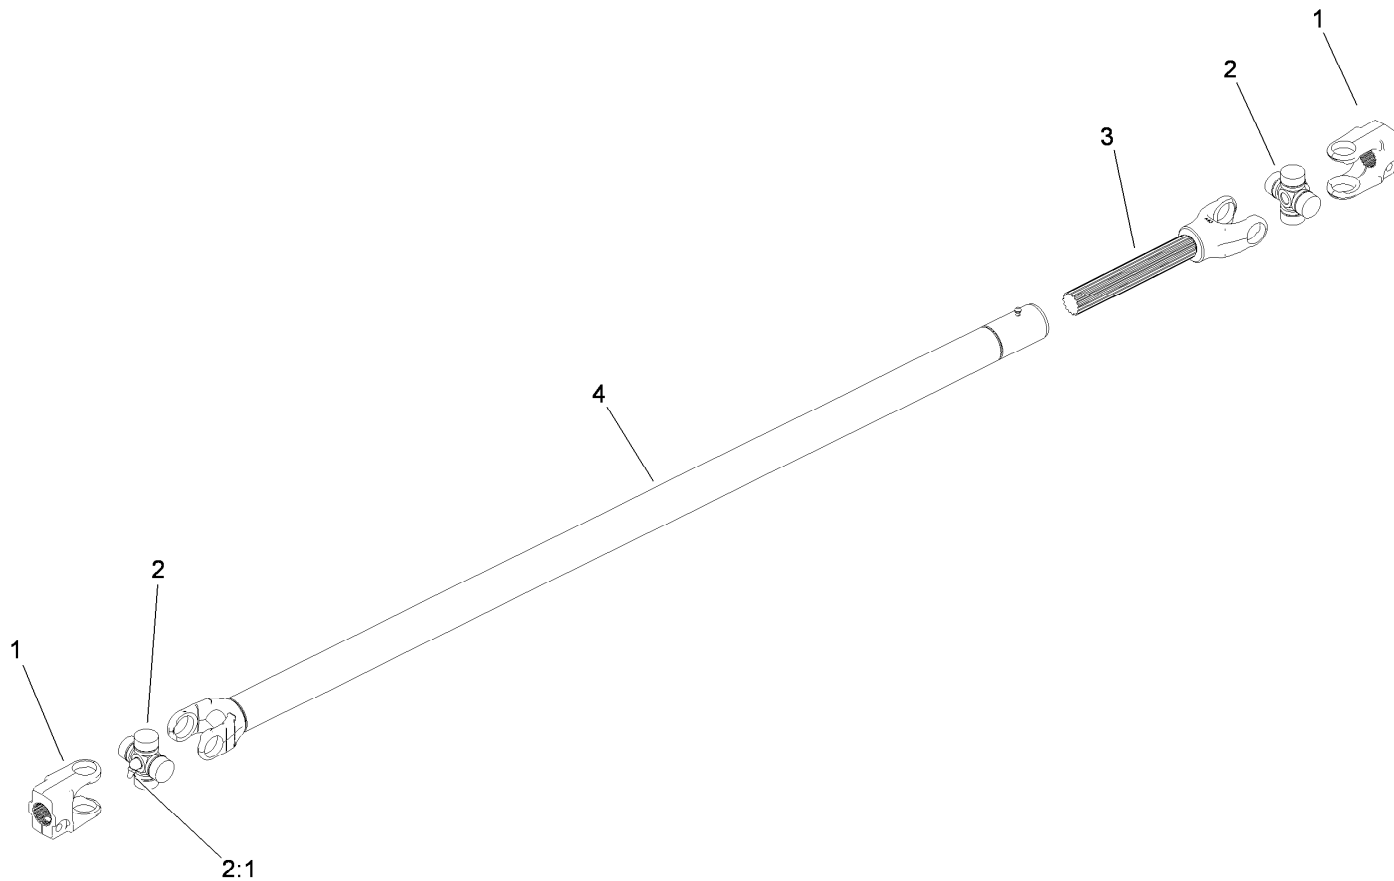


## Drive Shaft Assembly No. 115-2171
 
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 1    | 115-7707    | 2    | Yoke                           |
| 2    | 54-9180     | 2    | U-Joint Kit                    |
| 2:1  | 62-3820     | 1    | Fitting-Grease                 |
| 3    | 115-7708    | 1    | Yoke And Shaft                 |
| 4    | 115-7709    | 1    | Yoke, Tube And Slip Sleeve ASM |

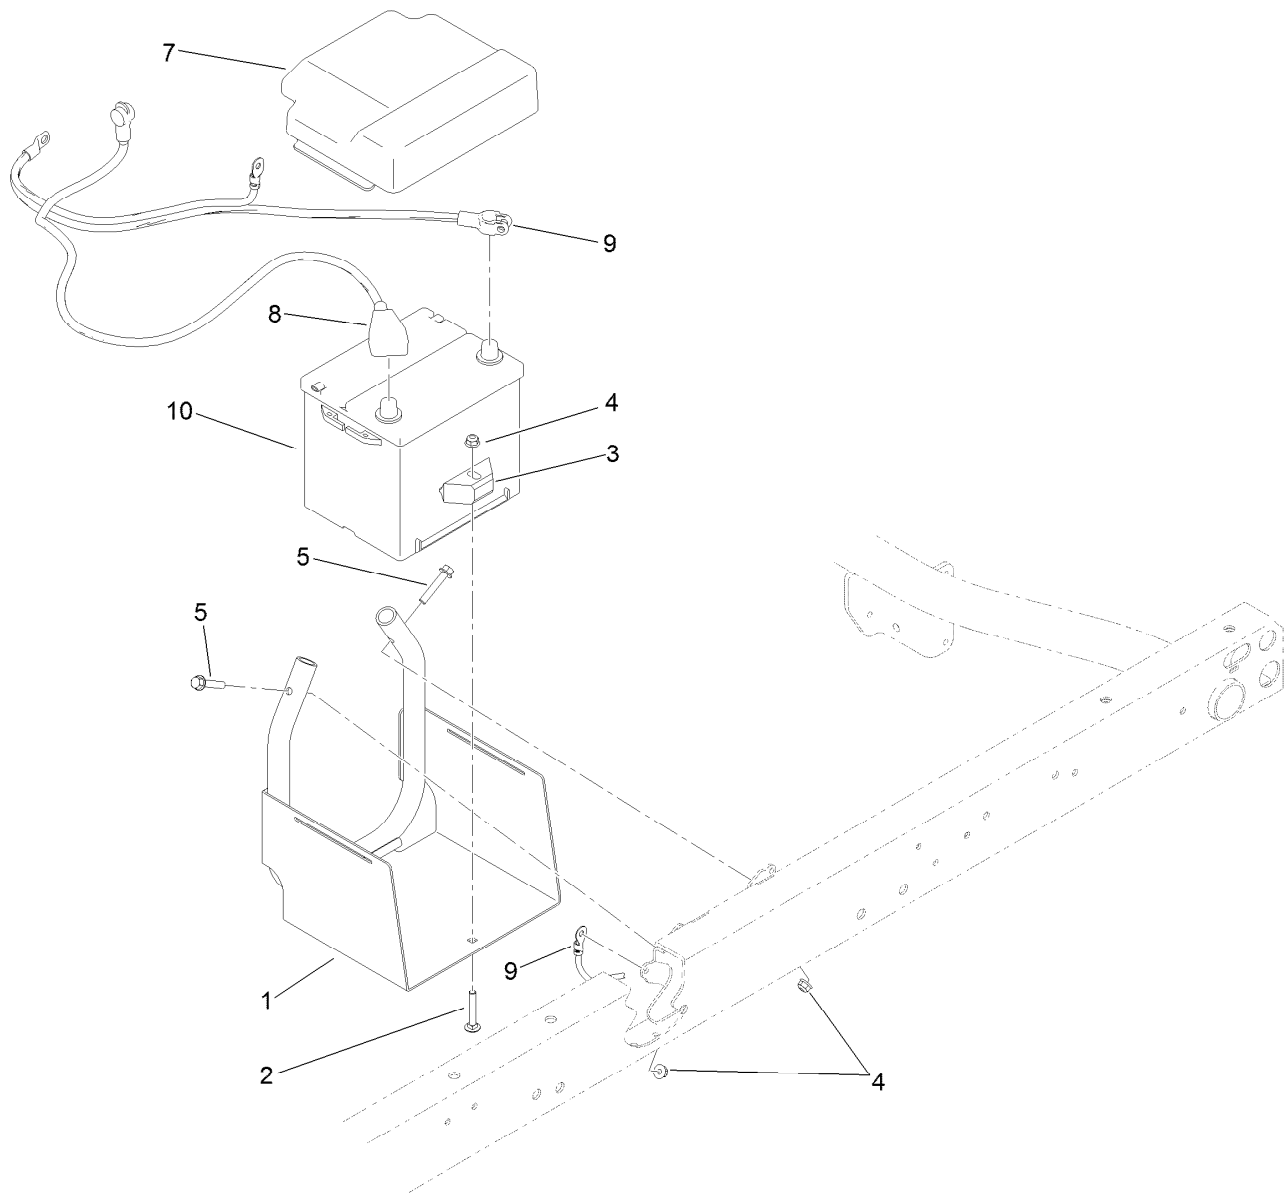

## Battery Assembly

 
| Ref. | Part Number | Qty. | Description                      |
|------|-------------|------|----------------------------------|
| 1    | 115-2237-03 | 1    | Tray-Battery                     |
| 2    | 3230-6      | 1    | Bolt-CARR                        |
| 3    | 66-2490     | 1    | Retainer-Battery                 |
| 4    | 104-8300    | 3    | Nut-HF, NI                       |
| 5    | 94-5780     | 2    | Screw-HWH                        |
| 7    | 119-9496    | 1    | Cover-Battery                    |
| 8    | 122-0204    | 1    | Cable-Battery, Positive          |
| 9    | 122-0120    | 1    | Cable-Battery, Negative          |
| 10   | 106-5187    | 1    | Battery, 525 CCA W/O Electrolyte |

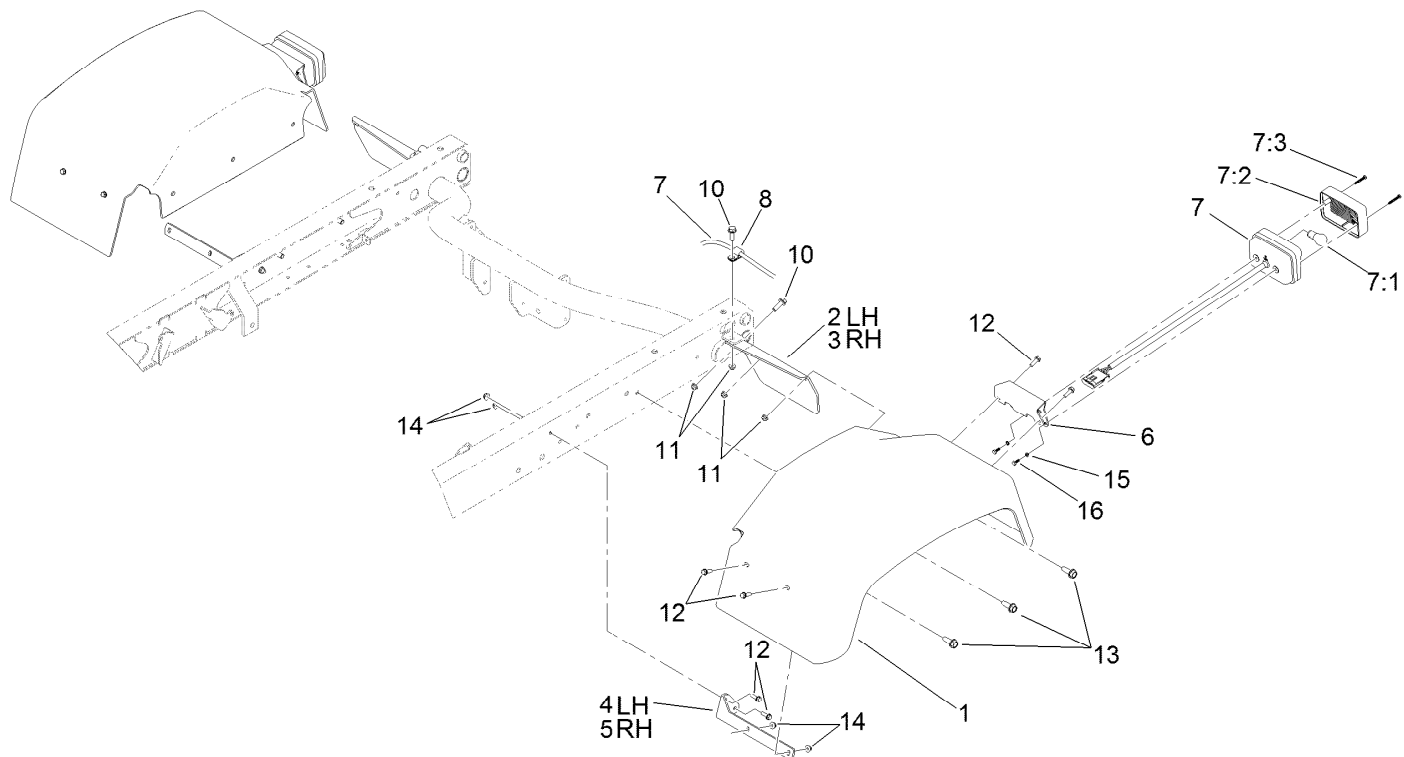

## Tail Light and Fender Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 87-6660     | 2    | Fender-Rear                |
| 2    | 93-8943-03  | 1    | Bracket-Fender, Rear (LH)  |
| 3    | 93-8944-03  | 1    | Bracket-Fender, Rear (RH)  |
| 4    | 93-8941-03  | 1    | Bracket-Fender, Front (LH) |
| 5    | 93-8942-03  | 1    | Bracket-Fender, Front (RH) |
| 6    | 121-6269-03 | 2    | Bracket-Light, Tail        |
| 7    | 120-4820    | 2    | Light-Tail, Brake          |
| 7:1  | 115-7858    | 1    | Bulb-7528                  |
| 7:2  | 121-6271    | 1    | Lens-Light, Tail           |

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 7:3  | 121-6272    | 2    | Screw-PPH           |
| 8    | 2412-93     | 2    | Clamp-R             |
| 10   | 3234-17     | 4    | Screw-HHF           |
| 11   | 104-8300    | 4    | Nut-HF, NI          |
| 12   | 32105-15    | 12   | Screw-HWH           |
| 13   | 105-6245    | 6    | Screw-Tapping       |
| 14   | 104-7201    | 12   | Nut-HF, NI          |
| 15   | 43-5920     | 4    | Washer-Lock, Spring |
| 16   | 121-6320    | 4    | Screw-HH            |

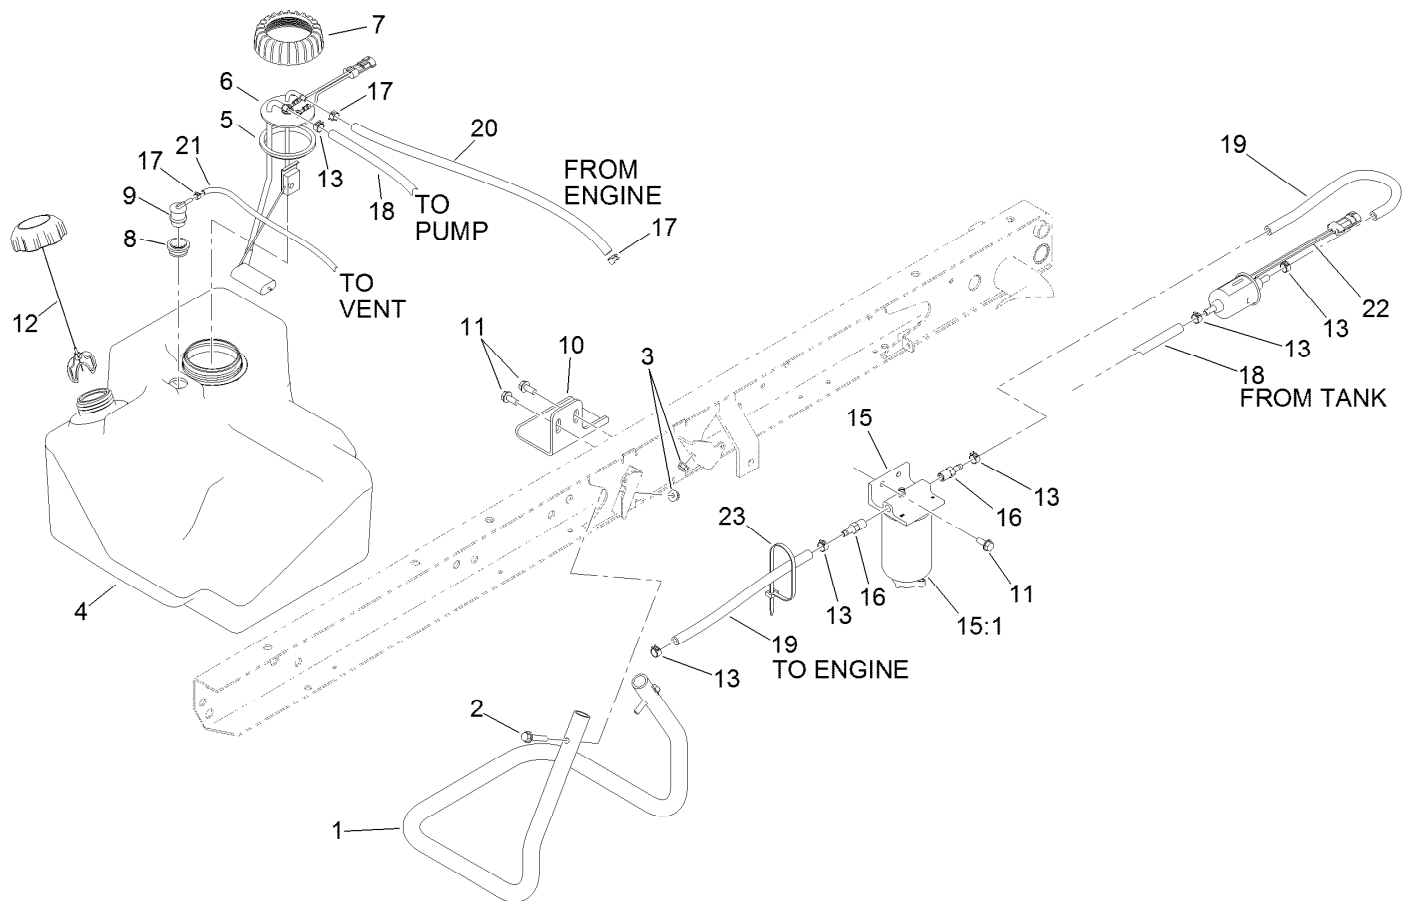

## Fuel System Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 115-7767-03 | 1    | Tube-Support      |
| 2    | 94-5780     | 2    | Screw-HWH         |
| 3    | 104-8300    | 2    | Nut-HF, NI        |
| 4    | 119-0735    | 1    | Tank-Fuel         |
| 5    | 115-2163    | 1    | Gasket-Pump, Fuel |
| 6    | 114-8348    | 1    | Sender-Fuel       |
| 7    | 115-2162    | 1    | Cap-Pump, Fuel    |
| 8    | 114-0284    | 1    | Grommet           |
| 9    | 114-0285    | 1    | Valve-Rollover    |
| 10   | 114-8404    | 1    | Plate-Retainer    |
| 11   | 32144-11    | 4    | Screw-HWH         |
| 12   | 115-7789    | 1    | Cap-Fuel, Diesel  |

 
| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 13   | 92-2379     | 6    | Clamp-Hose                 |
| 15   | 110-9044    | 1    | Separator-Filter           |
| 15:1 | 110-9049    | 1    | Filter-Spin On, Fuel/Water |
| 16   | 353-783     | 2    | Fitting-STR                |
| 17   | 2412-146    | 3    | Clamp-Hose                 |
| 18   | 114-8206    | 1    | Hose-Fuel                  |
| 19   | 110-4101    | 2    | Hose-Fuel                  |
| 20   | 120-5022    | 1    | Hose-Fuel                  |
| 21   | 110-8255    | 1    | Hose-Fuel                  |
| 22   | 110-8806    | 1    | Pump-Fuel                  |
| 23   | 3290-379    | 1    | Tie-Cable                  |

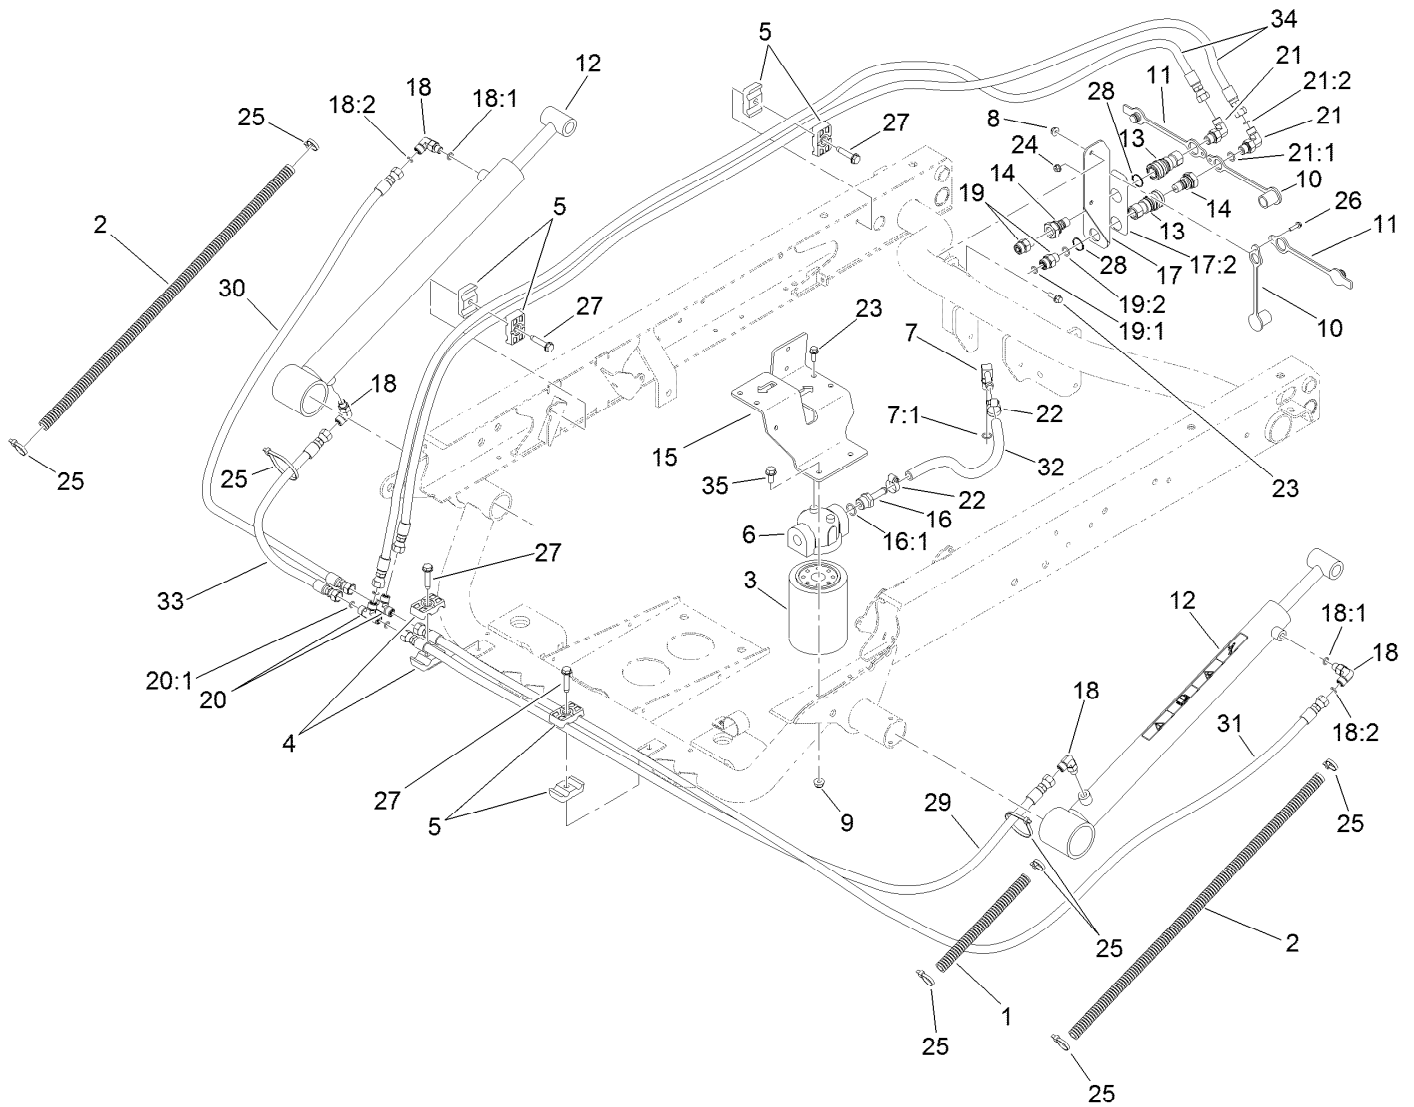

## Hydraulic Lift Cylinder Assembly

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 24-7922     | 1    | Conduit-Convolutd, Split |
| 2    | 24-7923     | 2    | Conduit-Convolutd, Split |
| 3    | 54-0110     | 1    | Filter-Oil, Transmission |
| 4    | 56-7971     | 2    | Clamp-Tube               |
| 5    | 56-7976     | 6    | Clamp-Tube               |
| 6    | 87-8780     | 1    | Head-Filter              |
| 7    | 100-4887    | 1    | Fitting-Elbow, 90        |
| 7:1  | 237-42      | 1    | O-Ring                   |
| 8    | 104-7201    | 2    | Nut-HF, NI               |
| 9    | 104-8300    | 2    | Nut-HF, NI               |
| 10   | 106-7881    | 2    | Cap-Dust, HYD            |
| 11   | 106-7882    | 2    | Plug-Dust, HYD           |
| 12   | 106-7939    | 2    | HYD Cylinder ASM         |
| 13   | 106-7968    | 2    | Coupler-Quick, Female    |
| 14   | 106-7969    | 2    | Coupler-Quick, Male      |
| 15   | 115-2168-03 | 1    | Bracket-Filter           |
| 16   | 115-2231    | 1    | Fitting-STR              |
| 16:1 | 237-79      | 1    | O-Ring                   |
| 17   | 115-7715    | 1    | Coupler Bracket ASM      |
| 17:2 | 115-7723    | 1    | Decal-Disconnect, Quick  |
| 18   | 340-132     | 4    | Fitting-Elbow, 90 DEG    |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 18:1 | 237-78      | 1    | O-Ring                |
| 18:2 | 237-21      | 1    | O-Ring                |
| 19   | 340-2       | 2    | Fitting-Straight      |
| 19:1 | 237-22      | 1    | O-Ring                |
| 19:2 | 237-42      | 1    | O-Ring                |
| 20   | 340-21      | 2    | Fitting               |
| 20:1 | 237-21      | 3    | O-Ring                |
| 21   | 340-82      | 2    | Fitting-Elbow, 90 DEG |
| 21:1 | 237-42      | 1    | O-Ring                |
| 21:2 | 237-21      | 1    | O-Ring                |
| 22   | 2412-36     | 2    | Clamp-Hose            |
| 23   | 3234-4      | 4    | Screw-HHF             |
| 24   | 3290-148    | 1    | Nut-HF                |
| 25   | 3290-379    | 6    | Tie-Cable             |
| 26   | 32105-13    | 1    | Screw-HWH             |
| 27   | 32144-57    | 4    | Screw                 |
| 28   | 32151-83    | 2    | Ring-Snap             |
| 29   | 115-7711    | 1    | Hose-HYD              |
| 30   | 108-6508    | 1    | Hose-HYD              |
| 31   | 104-3716    | 1    | Hose-HYD              |
| 32   | 115-2228    | 1    | Hose-HYD              |

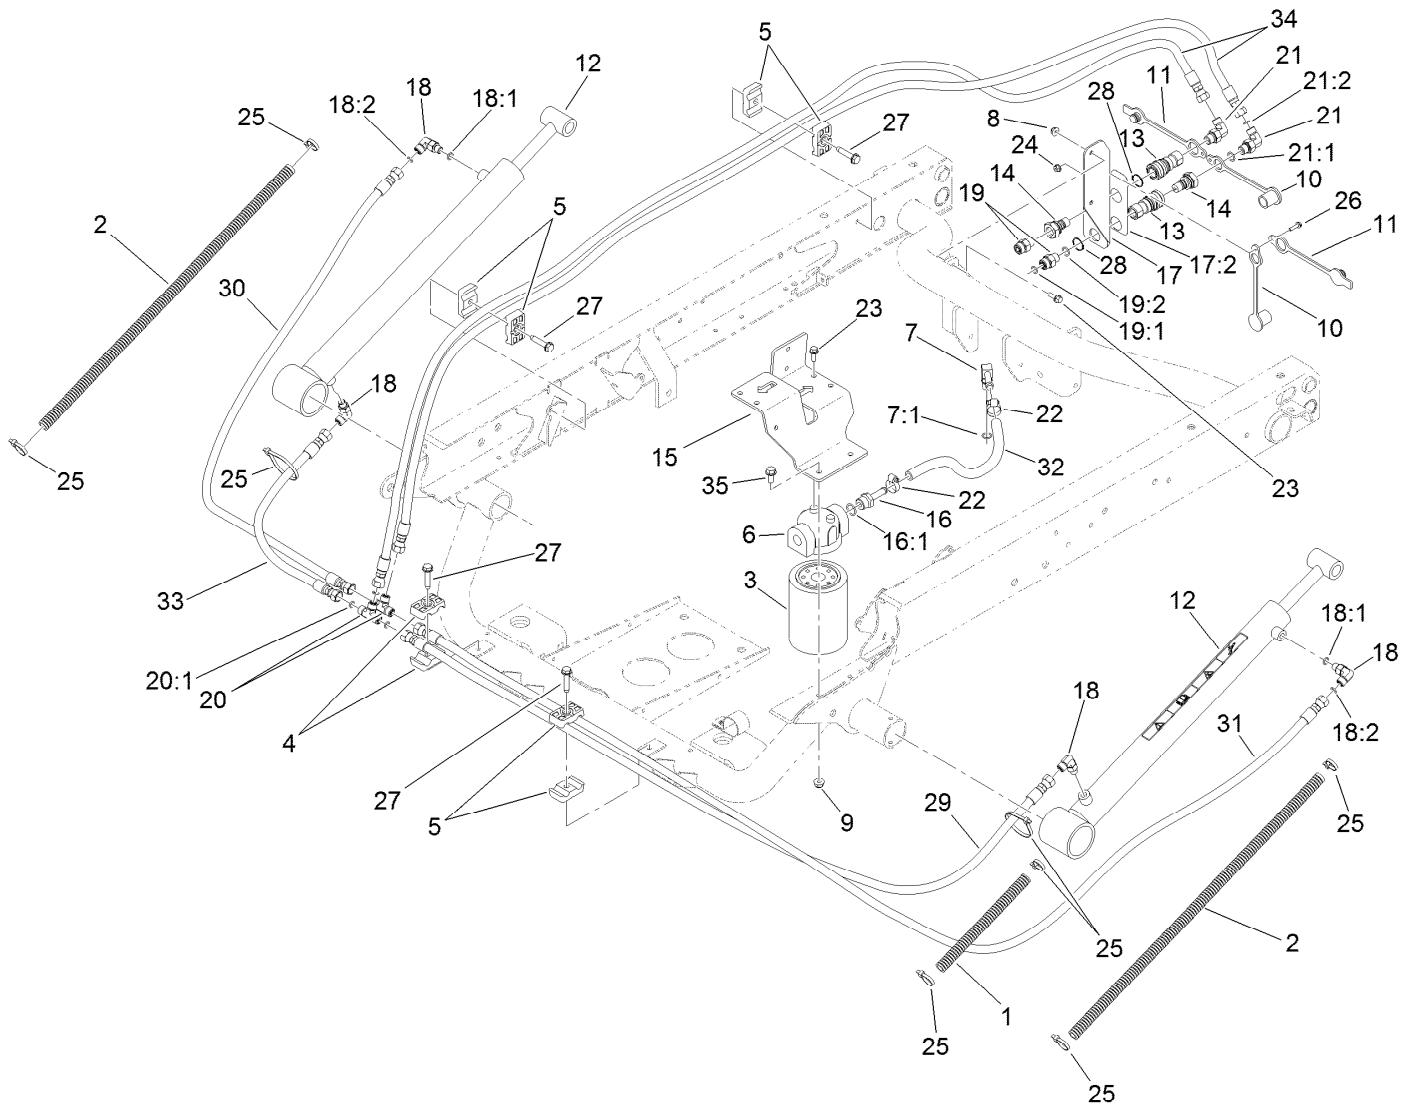

## Hydraulic Lift Cylinder Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 33   | 110-0931    | 1    | Hose-HYD    |

 
| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 34   | 106-3680    | 2    | Hose-HYD    |
| 35   | 3234-5      | 2    | Screw-HHF   |

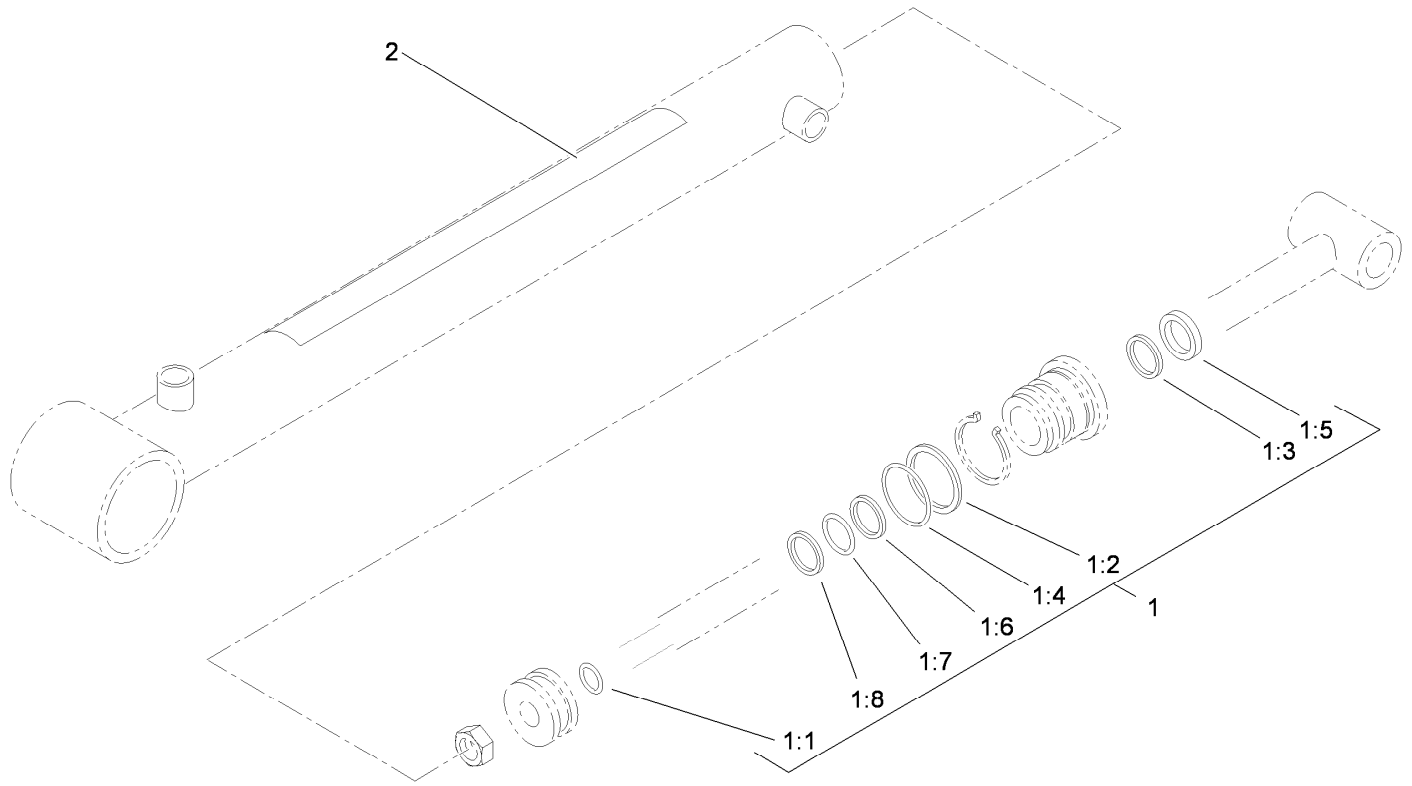

## Hydraulic Cylinder Assembly No. 106-7939

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 1    | 106-7941    | 1    | Seal Kit      |
| 1:1  |             | 1    | O-Ring ●      |
| 1:2  |             | 1    | O-Ring ●      |
| 1:3  |             | 1    | Seal ●        |
| 1:4  |             | 1    | Back-Up ●     |
| 1:5  |             | 1    | Wiper ●       |
| 1:6  |             | 1    | Seal ●        |
| 1:7  |             | 1    | O-Ring ●      |
| 1:8  |             | 1    | Ring-Wear ●   |
| 2    | 93-9852     | 1    | Decal-Warning |

 
● Not serviced separately

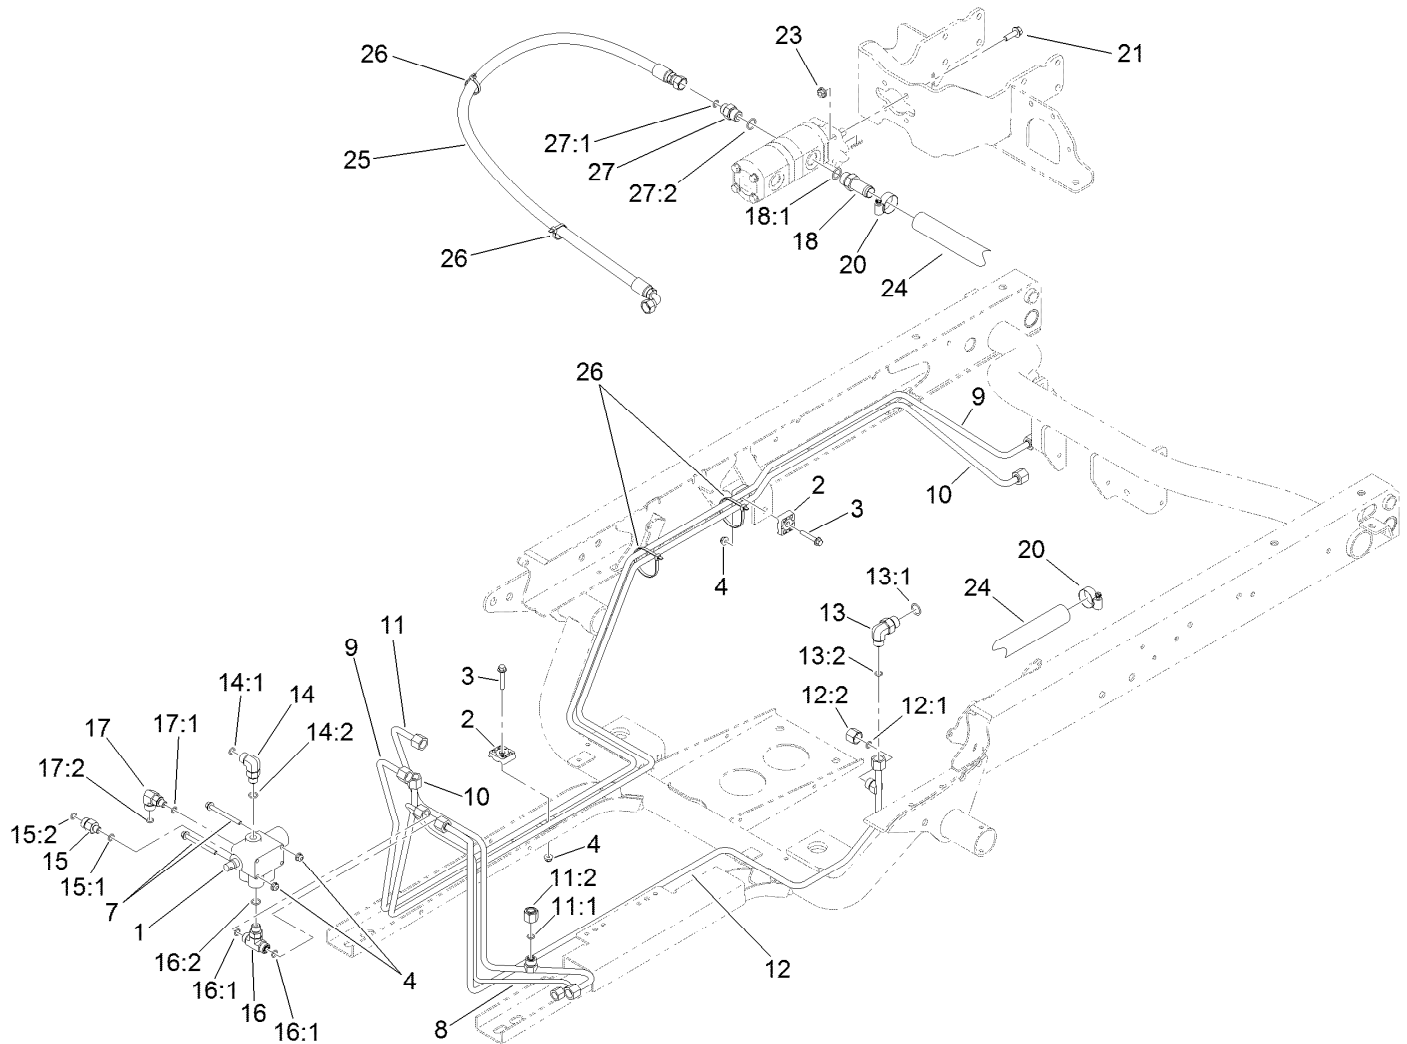

## Main Hydraulic Pump and Lift Valve Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 43-1950     | 1    | HYD Control Valve ASM |
| 2    | 56-7973     | 4    | Clamp-Tube            |
| 3    | 94-5781     | 2    | Screw-HHF             |
| 4    | 104-7201    | 4    | Nut-HF, NI            |
| 7    | 114-8410    | 2    | Screw-HHF             |
| 8    | 127-8605    | 1    | Tube-HYD              |
| 9    | 115-2217    | 1    | Tube-HYD              |
| 10   | 115-2218    | 1    | Tube-HYD              |
| 11   | 127-8604    | 1    | Tube-HYD              |
| 11:1 | 237-22      | 1    | O-Ring                |
| 11:2 | 340-117     | 1    | Cap                   |
| 12   | 127-8752    | 1    | Tube-HYD              |
| 12:1 | 237-22      | 1    | O-Ring                |
| 12:2 | 340-117     | 1    | Cap                   |
| 13   | 340-18      | 1    | Fitting-HYD, 90 DEG   |
| 13:1 | 237-79      | 1    | O-Ring                |
| 13:2 | 237-22      | 1    | O-Ring                |
| 14   | 340-77      | 1    | Fitting-Elbow, 90 DEG |
| 14:1 | 237-22      | 1    | O-Ring                |
| 14:2 | 237-42      | 1    | O-Ring                |

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 15   | 340-88      | 1    | Fitting-Straight      |
| 15:1 | 237-22      | 1    | O-Ring                |
| 15:2 | 237-78      | 1    | O-Ring                |
| 16   | 340-94      | 1    | Adapter               |
| 16:1 | 237-22      | 2    | O-Ring                |
| 16:2 | 237-42      | 1    | O-Ring                |
| 17   | 340-97      | 1    | Fitting-Elbow, 90 DEG |
| 17:1 | 237-22      | 1    | O-Ring                |
| 17:2 | 237-78      | 1    | O-Ring                |
| 18   | 354-136     | 1    | Fitting-STR           |
| 18:1 | 237-80      | 1    | O-Ring                |
| 20   | 2412-129    | 2    | Clamp-Hose            |
| 21   | 3234-17     | 4    | Screw-HHF             |
| 23   | 32128-20    | 4    | Nut-HF                |
| 24   | 87-3670     | 1    | Hose-Suction          |
| 25   | 121-6283    | 1    | Hose-HYD              |
| 26   | 3290-379    | 4    | Tie-Cable             |
| 27   | 340-3       | 1    | Fitting-Straight      |
| 27:1 | 237-22      | 1    | O-Ring                |
| 27:2 | 237-79      | 1    | O-Ring                |

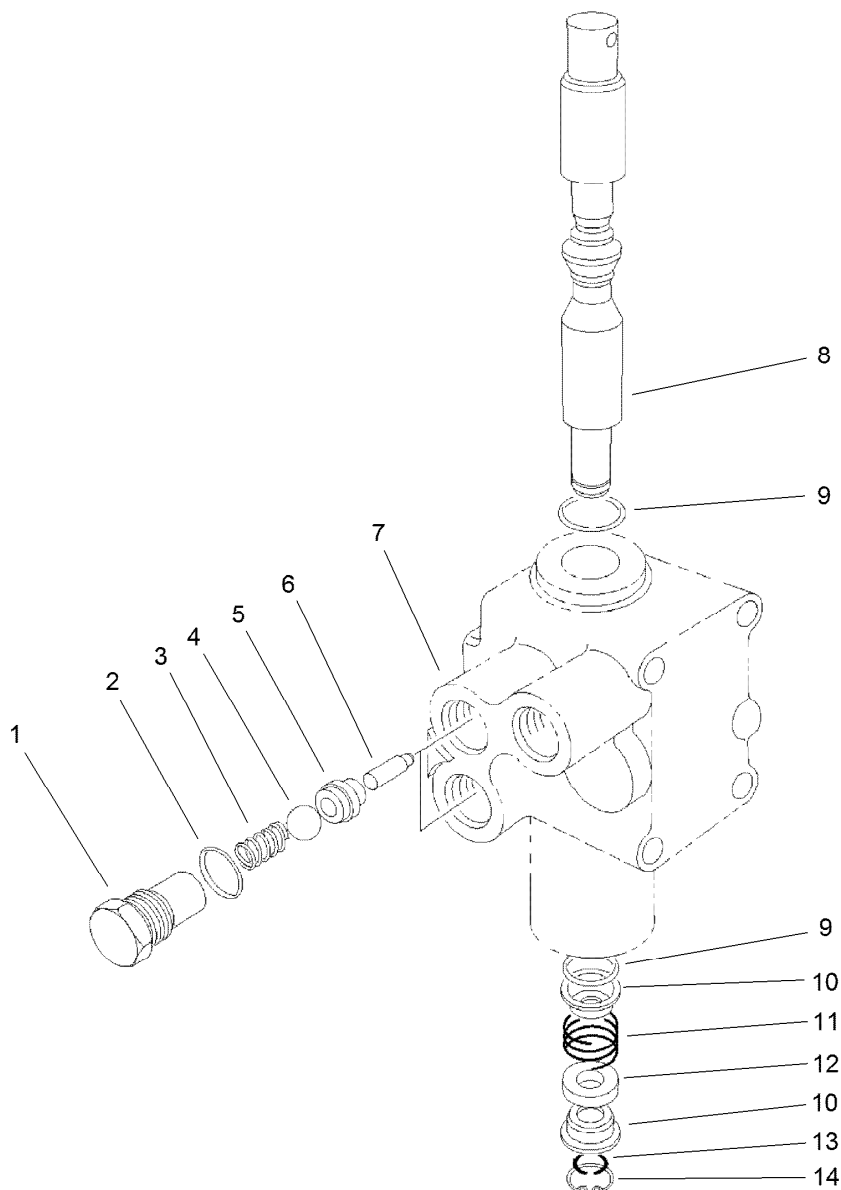

## Control Valve Assembly No. 43-1950


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 1    | 22-8330     | 2    | Plug        |
| 2    | 237-42      | 2    | O-Ring      |
| 3    | 22-8340     | 2    | Spring      |
| 4    | 22-8350     | 2    | Ball        |
| 5    | 22-8370     | 2    | Seat-Valve  |
| 6    | 22-8360     | 2    | Pin         |
| 7    |             | 1    | Body ●      |
| 8    | 22-8420     | 1    | Spool       |
| 9    | 22-8500     | 2    | O-Ring      |
| 10   | 22-8380     | 2    | Retainer    |
| 11   | 22-8410     | 1    | Spring      |
| 12   | 23-3030     | 1    | Spacer      |
| 13   | 22-8480     | 1    | Ring-Snap   |
| 14   | 22-8490     | 1    | Ring-Snap   |

 ● Not serviced separately

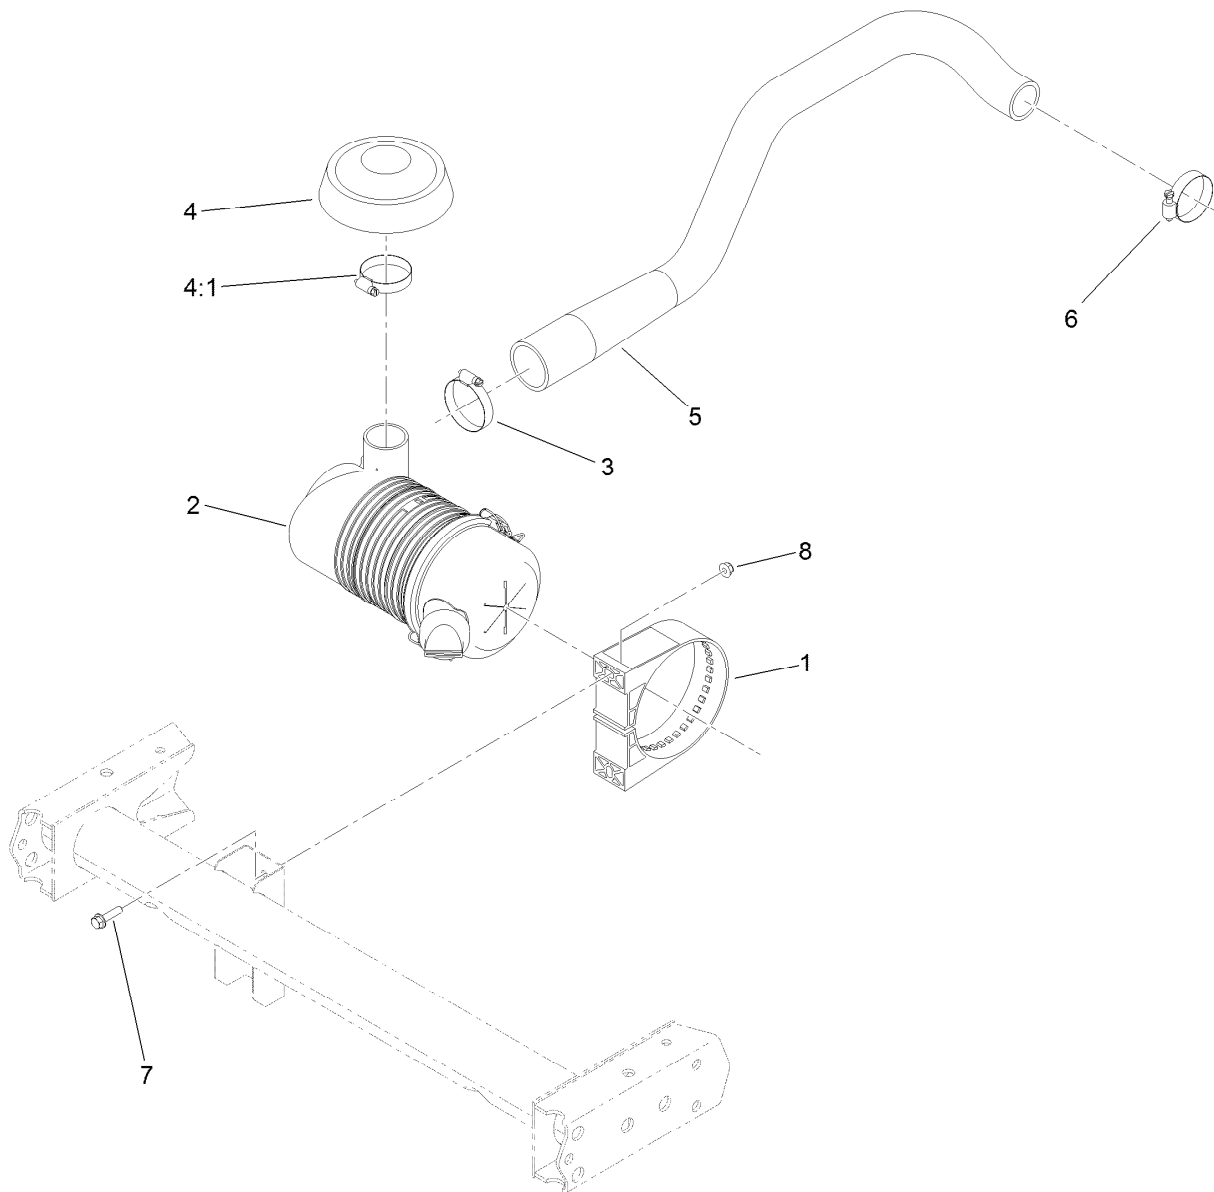


## Air Cleaner Assembly
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 1    | 98-4525     | 1    | Bracket-Cleaner, Air      |
| 2    | 106-5277    | 1    | Air Cleaner ASM           |
| 3    | 2412-130    | 1    | Clamp-Hose                |
| 4    | 105-2539    | 1    | Cap                       |
| 4:1  | 2412-130    | 1    | Clamp-Hose                |
| 5    | 120-5097    | 1    | Hose-Intake, Air (Diesel) |
| 6    | 2412-3      | 1    | Clamp-Hose                |
| 7    | 3234-36     | 2    | Screw-HHF                 |
| 8    | 104-8300    | 2    | Nut-HF, NI                |

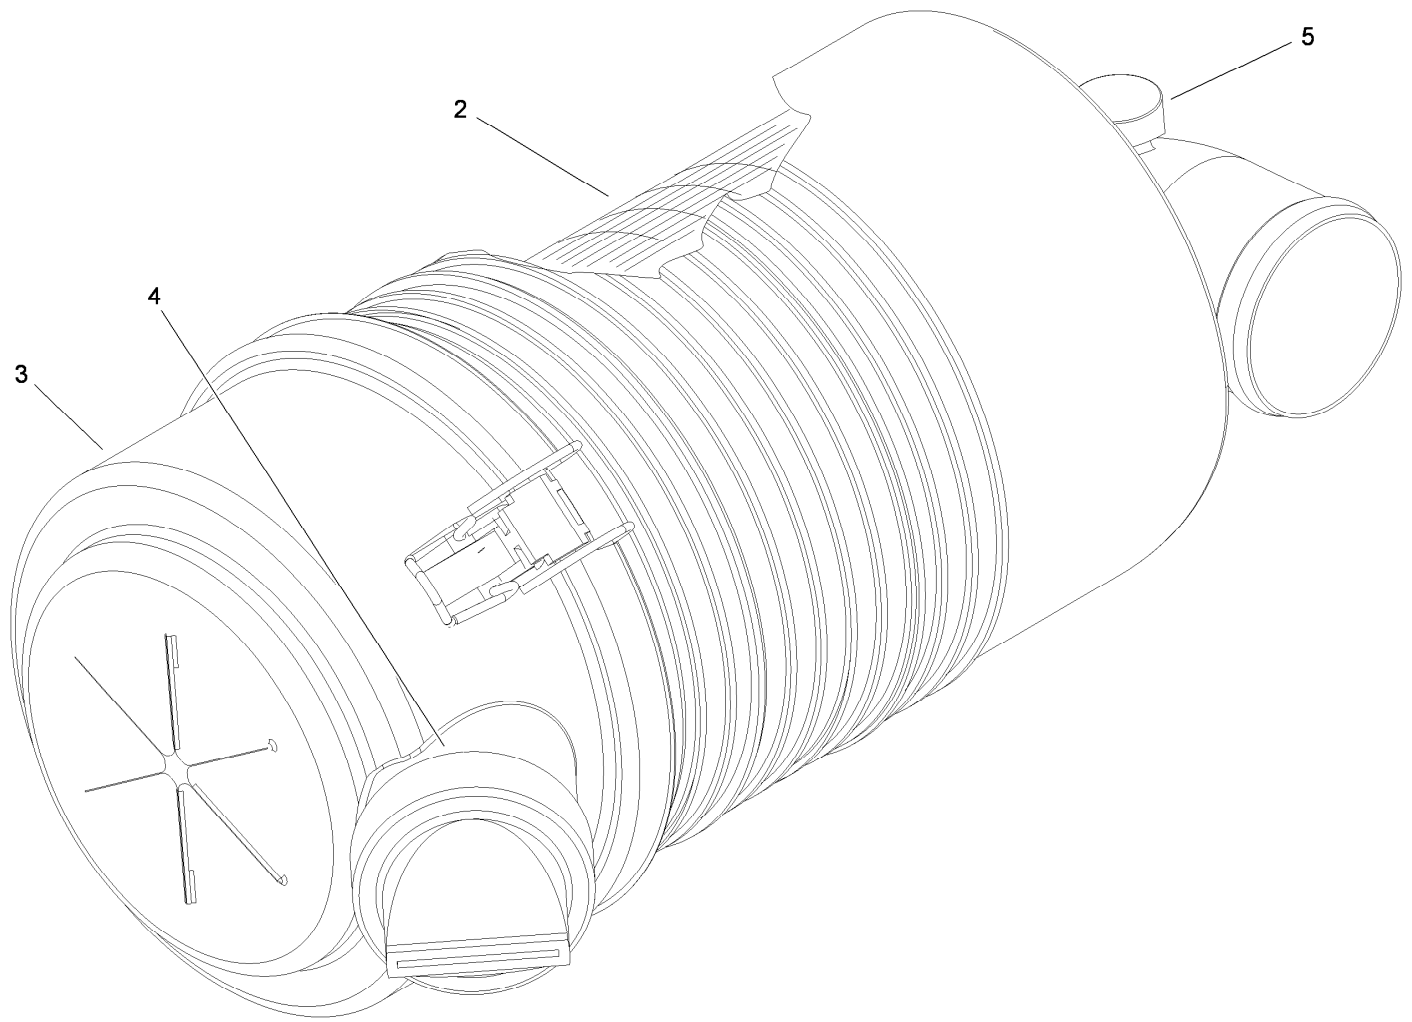

## Air Cleaner Assembly No. 106-5277

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 2           | 108-3810           | 1           | Filter-Air         |
| 3           | 98-9771            | 1           | Cover ASM          |
| 4           | 87-9400            | 1           | Valve-Vacuator     |
| 5           | 285-17             | 1           | Plug-Pipe          |

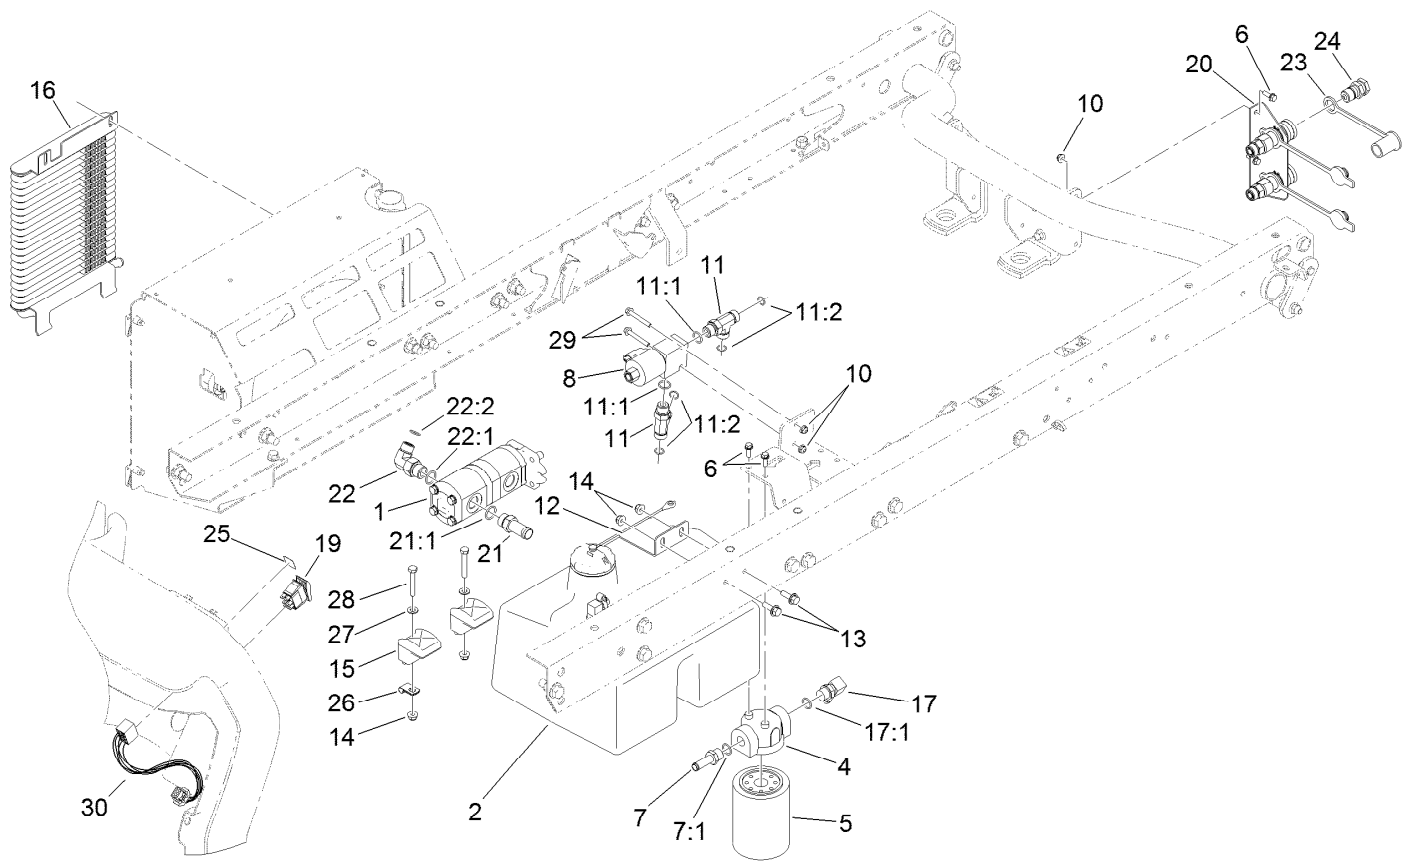

## High Flow Assembly


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 115-7787    | 1    | Hydraulic Pump ASM       |
| 2    | 114-8435    | 1    | Tank ASM                 |
| 4    | 87-8780     | 1    | Head-Filter              |
| 5    | 54-0110     | 1    | Filter-Oil, Transmission |
| 6    | 3234-4      | 4    | Screw-HHF                |
| 7    | 354-121     | 1    | Fitting-STR              |
| 7:1  | 237-79      | 1    | O-Ring                   |
| 8    | 115-2252    | 1    | HYD Manifold ASM         |
| 10   | 104-7201    | 4    | Nut-HF, NI               |
| 11   | 340-109     | 2    | Fitting-Tee              |
| 11:1 | 237-79      | 1    | O-Ring                   |
| 11:2 | 237-30      | 2    | O-Ring                   |
| 12   | 115-2166    | 1    | Support-Tank             |
| 13   | 3234-29     | 2    | Screw-HHF                |
| 14   | 104-8300    | 4    | Nut-HF, NI               |
| 15   | 107-4543    | 2    | Clamp                    |
| 16   | 114-8363    | 1    | Cooler-Oil               |
 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 17   | 354-120     | 1    | Fitting-Elbow, 90     |
| 17:1 | 237-79      | 1    | O-Ring                |
| 19   | 105-4232    | 1    | Switch                |
| 20   | 114-8434    | 1    | Coupler ASM           |
| 21   | 354-136     | 1    | Fitting-STR           |
| 21:1 | 237-80      | 1    | O-Ring                |
| 22   | 340-105     | 1    | Fitting-Elbow, 90 DEG |
| 22:1 | 237-80      | 1    | O-Ring                |
| 22:2 | 237-30      | 1    | O-Ring                |
| 23   | 105-4170    | 1    | Coupler-Male          |
| 24   | 105-7963    | 1    | Cap-Dust              |
| 25   | 115-7756    | 1    | Decal-HYD, High Flow  |
| 26   | 2412-113    | 1    | Clamp-R               |
| 27   | 3256-23     | 2    | Washer-Plain          |
| 28   | 322-10      | 2    | Screw-HH              |
| 29   | 321-44      | 2    | Screw-HHF             |
| 30   | 105-8513    | 1    | Harness-Wire          |

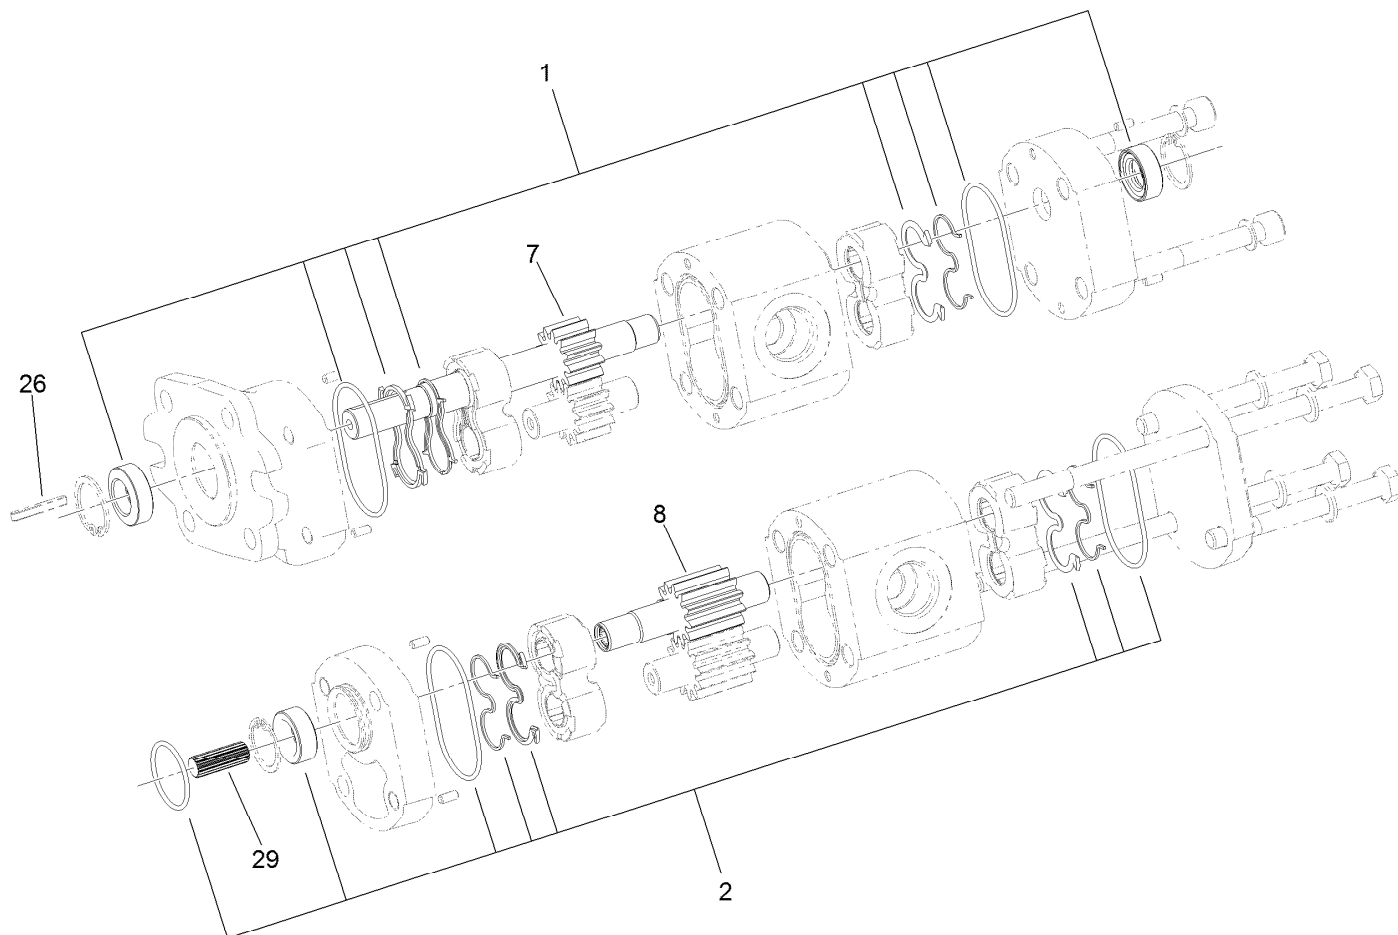


## Hydraulic Pump Assembly No. 115-7787
 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 115-8696    | 1    | Seal Kit         |
| 2    | 115-8697    | 1    | Seal Kit         |
| 7    | 136-1197    | 1    | Shaft-Drive      |
| 8    | 136-1198    | 1    | Gear-Drive       |
| 26   | 115-7855    | 1    | Key-Square       |
| 29   | 119-0653    | 1    | Coupling-Splined |

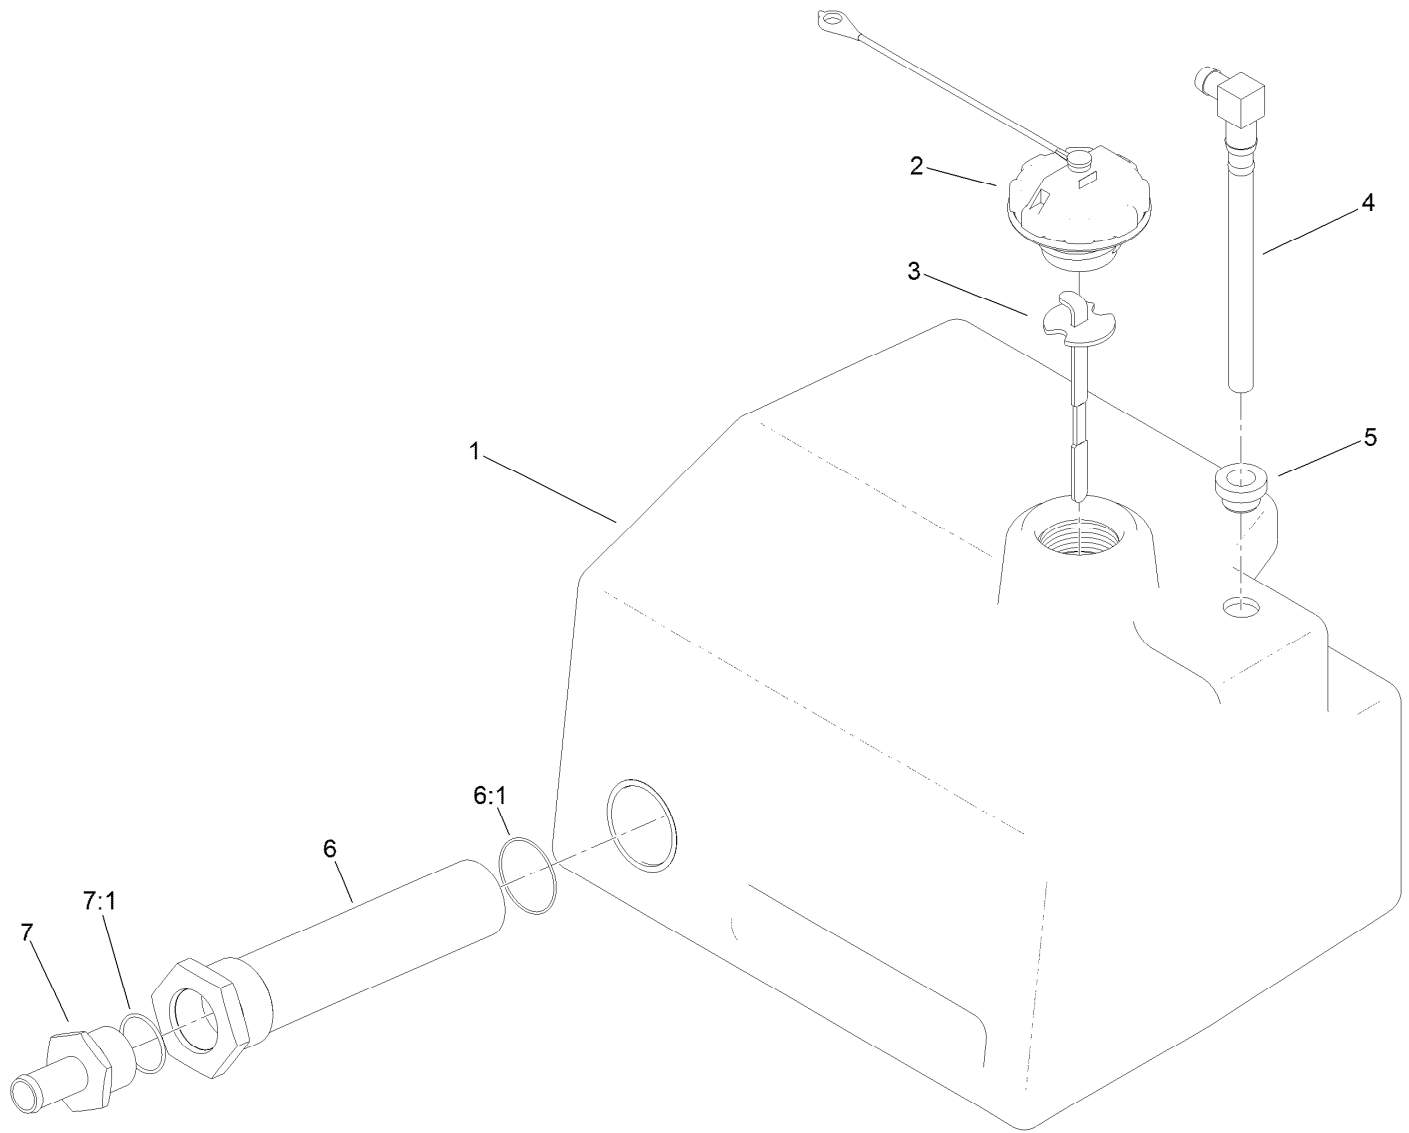

## Tank Assembly No. 114-8435

 
| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 114-8364    | 1    | Tank-HYD         |
| 2    | 115-7877    | 1    | Cap-Oil, HYD     |
| 3    | 115-7870    | 1    | Dipstick-Oil     |
| 4    | 104-0791    | 1    | Pipe-Stand       |
| 5    | 104-0790    | 1    | Bushing          |
| 6    | 115-2230    | 1    | Strainer-In Tank |
| 6:1  | 340-136     | 1    | O-Ring           |
| 7    | 99-6932     | 1    | Fitting-STR      |
| 7:1  | 237-117     | 1    | O-Ring           |

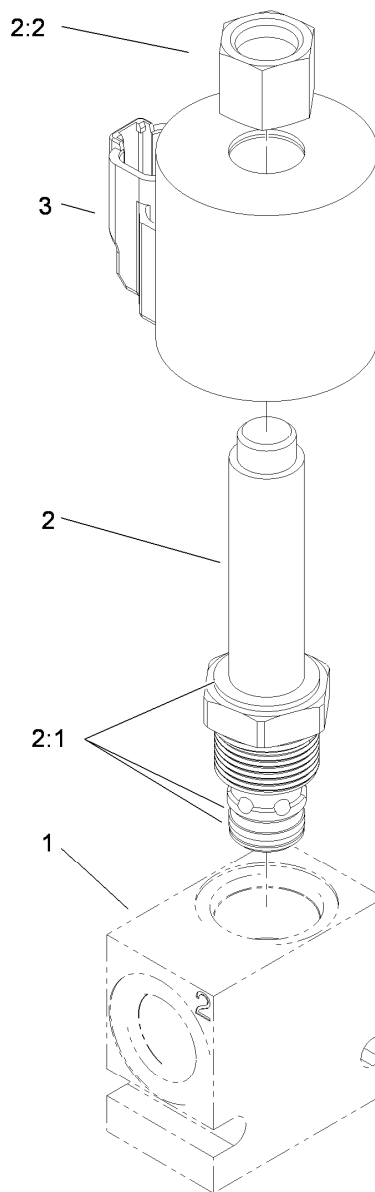

## Hydraulic Manifold Assembly No. 115-2252


| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|
| 1           |                    | 1           | Housing ●                  |
| 2           | 110-8905           | 1           | Valve-Relief, Solenoid     |
| 2:1         | 110-6316           | 1           | Seal Kit                   |
| 2:2         | 130-8180           | 1           | Nut-Coil (9/16-24 Unef-2B) |
| 3           | 115-3021           | 1           | Coil-12V                   |

 ● Not serviced separately

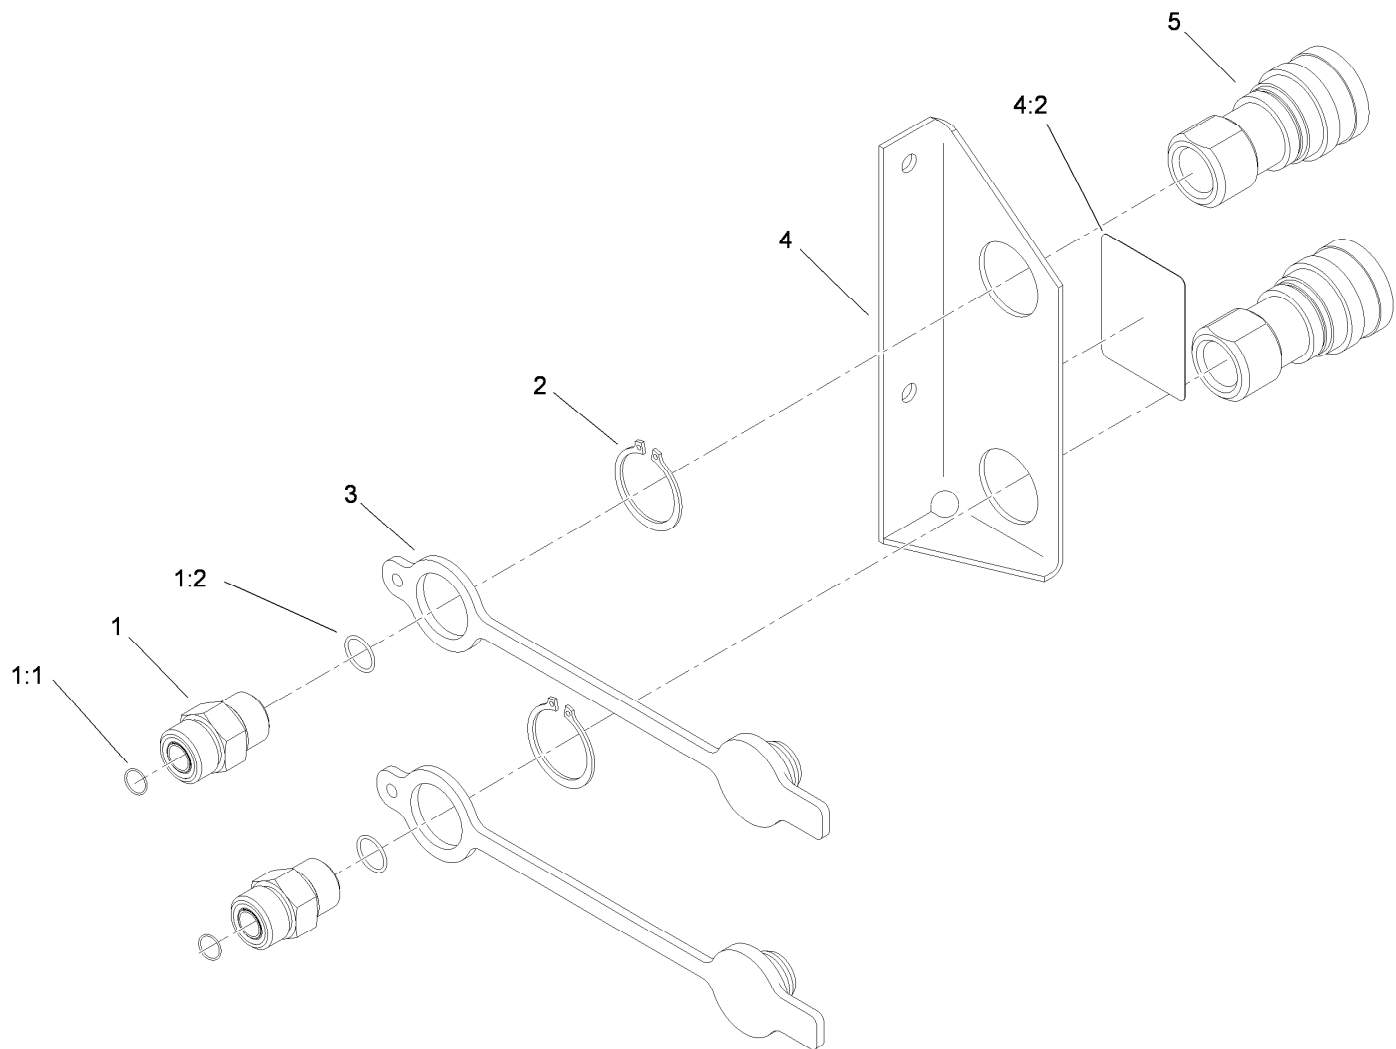


## Coupler Assembly No. 114-8434
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 340-4       | 2    | Fitting-Straight    |
| 1:1  | 237-30      | 1    | O-Ring              |
| 1:2  | 237-79      | 1    | O-Ring              |
| 2    | 32120-2     | 2    | Ring-Retaining      |
| 3    | 105-7962    | 2    | Plug-Dust           |
| 4    | 105-7978    | 1    | Coupler Bracket ASM |
| 4:2  | 105-7977    | 1    | Decal               |
| 5    | 105-4169    | 2    | Coupler-Female      |

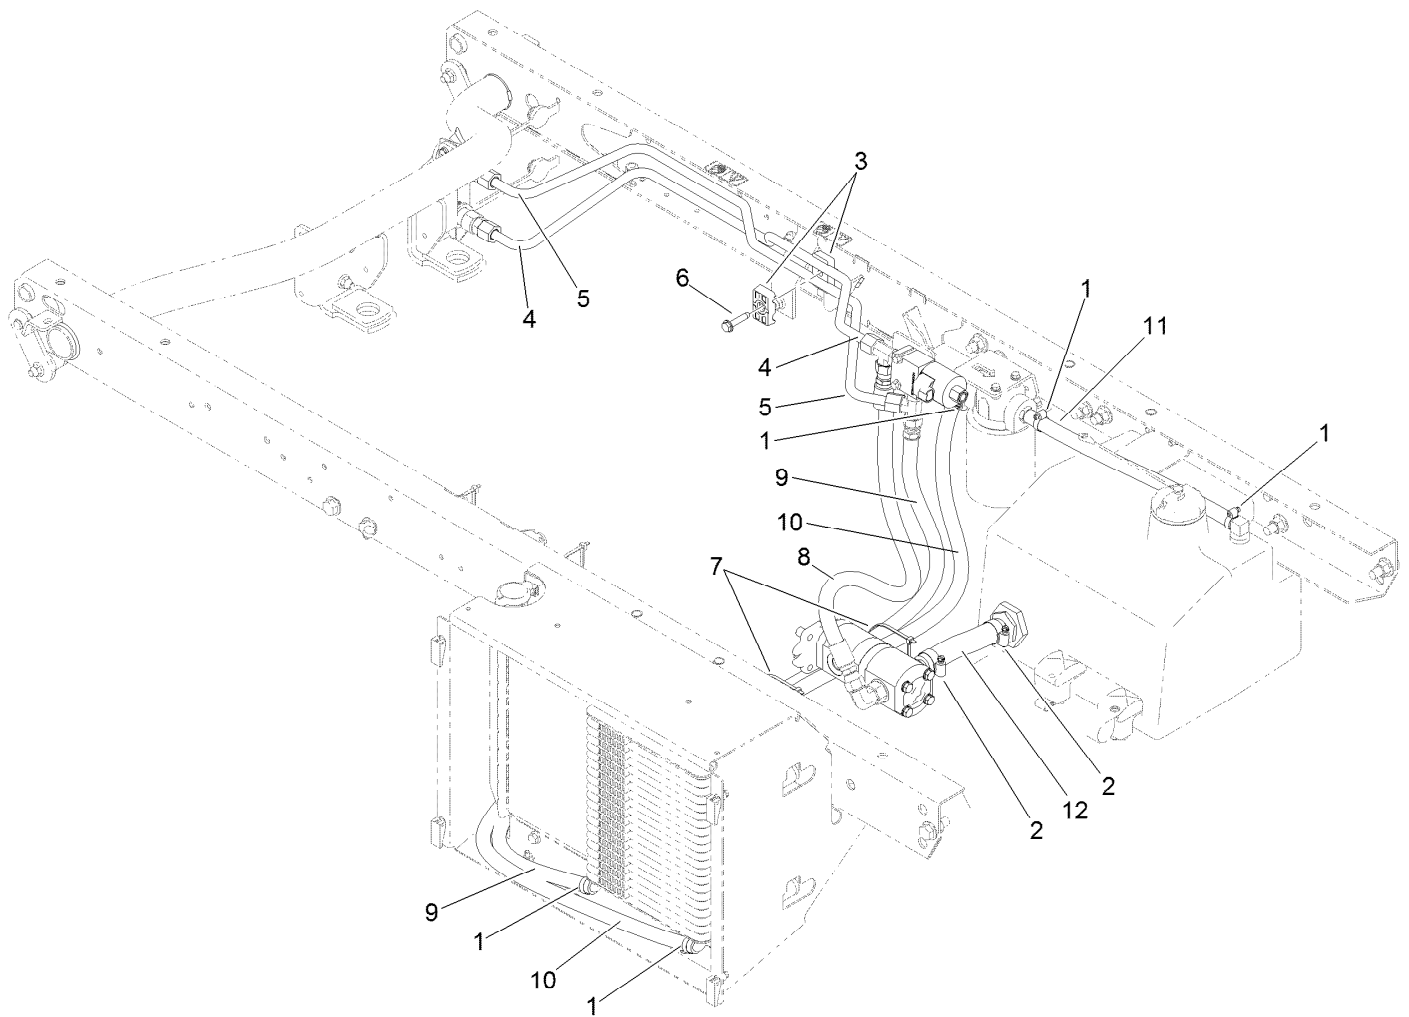

## High Flow Hose Assembly

 
| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 1    | 2412-36     | 5    | Clamp-Hose   |
| 2    | 2412-129    | 2    | Clamp-Hose   |
| 3    | 56-7976     | 2    | Clamp-Tube   |
| 4    | 115-2248    | 1    | Tube-HYD     |
| 5    | 115-2249    | 1    | Tube-HYD     |
| 6    | 32144-57    | 1    | Screw        |
| 7    | 3290-379    | 2    | Tie-Cable    |
| 8    | 114-8439    | 1    | HYD Hose ASM |
| 9    | 93-5356     | 1    | Hose-HYD     |
| 10   | 114-8437    | 1    | Hose-HYD     |
| 11   | 114-8438    | 1    | Hose-HYD     |
| 12   | 114-8442    | 1    | Hose-HYD     |

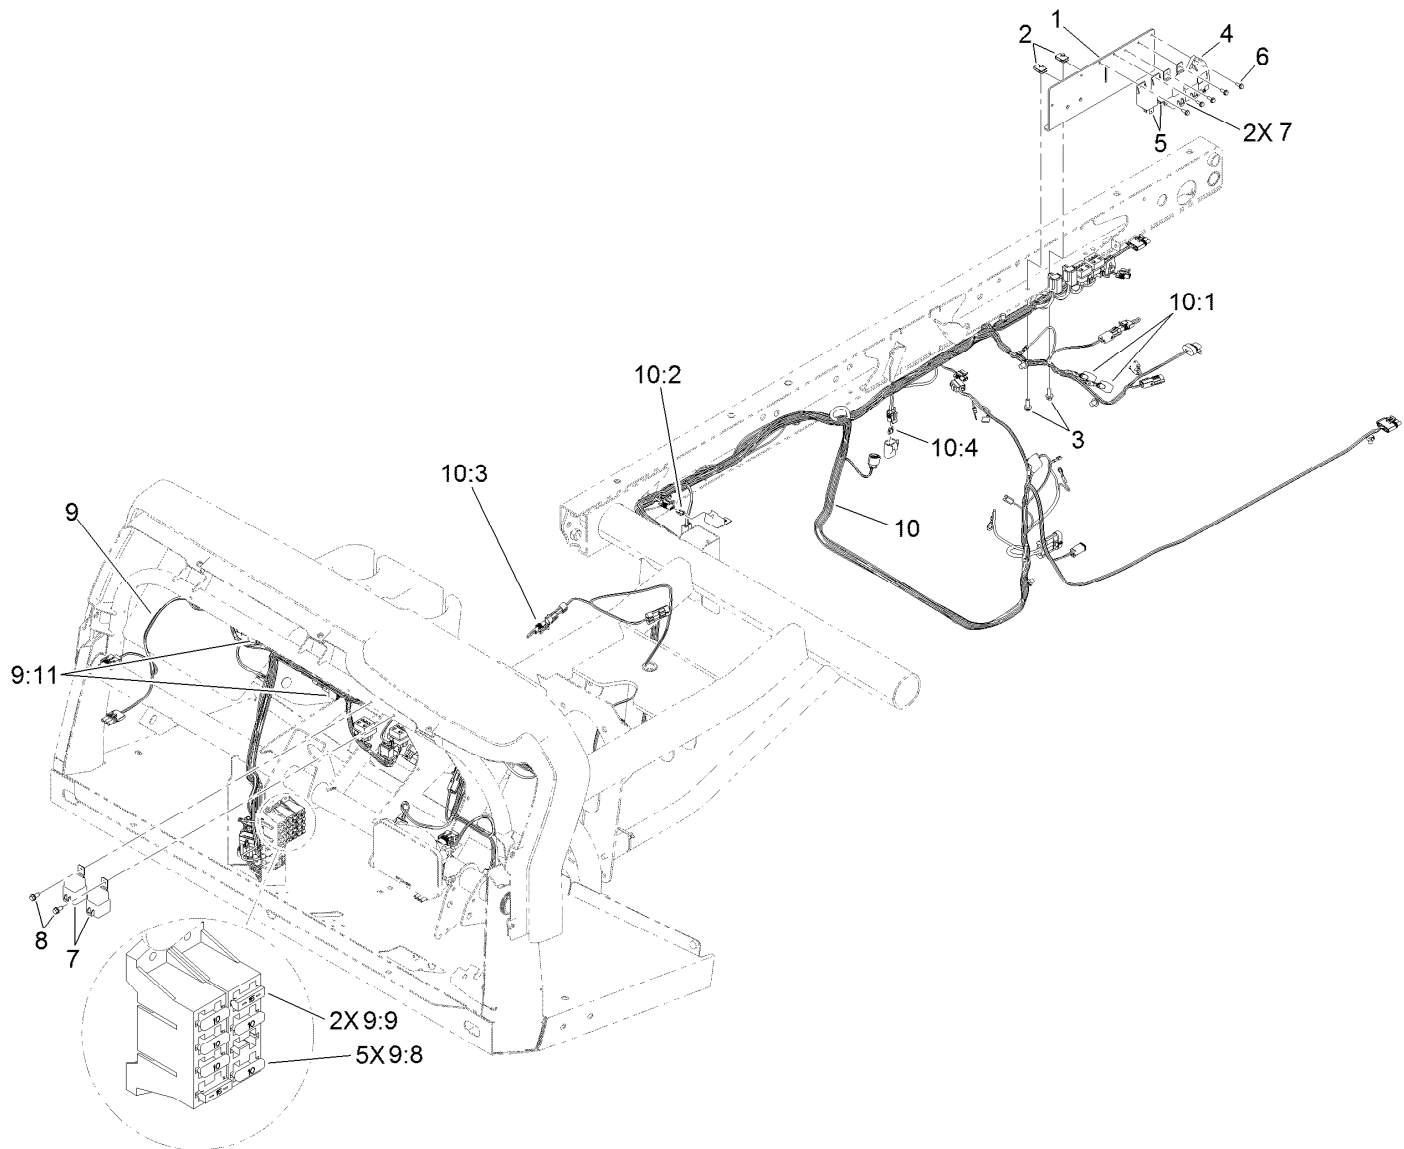

## Front and Rear Wire Harness Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 115-2225    | 1    | Bracket-Relay       |
| 2    | 107069      | 2    | Clip                |
| 3    | 3234-4      | 2    | Screw-HHF           |
| 4    | 98-7611     | 1    | Controller-Glow     |
| 5    | 99-7435     | 2    | Relay               |
| 6    | 32144-112   | 5    | Screw-HWH           |
| 7    | 99-7430     | 4    | Relay-Mini          |
| 8    | 32144-10    | 2    | Screw-HWH           |
| 9    | 122-0222    | 1    | Harness-Wire, Front |

 
| Ref. | Part Number | Qty. | Description                       |
|------|-------------|------|-----------------------------------|
| 9:8  | 218-578     | 5    | Fuse-Blade, 10 Amp                |
| 9:9  | 109355      | 2    | Fuse-Blade, 15 Amp                |
| 9:11 | 100-4918    | 2    | Diode                             |
| 10   | 120-3975    | 1    | Harness-Wire, Rear                |
| 10:1 | 100-4918    | 2    | Diode                             |
| 10:2 | 121-8870    | 1    | Fuse-Mini Blade, 30 Amp           |
| 10:3 | 119-7787    | 1    | Harness-Wire, Vertical Lift Shunt |
| 10:4 | 121-8867    | 1    | Fuse-Mini Blade, 15 Amp           |

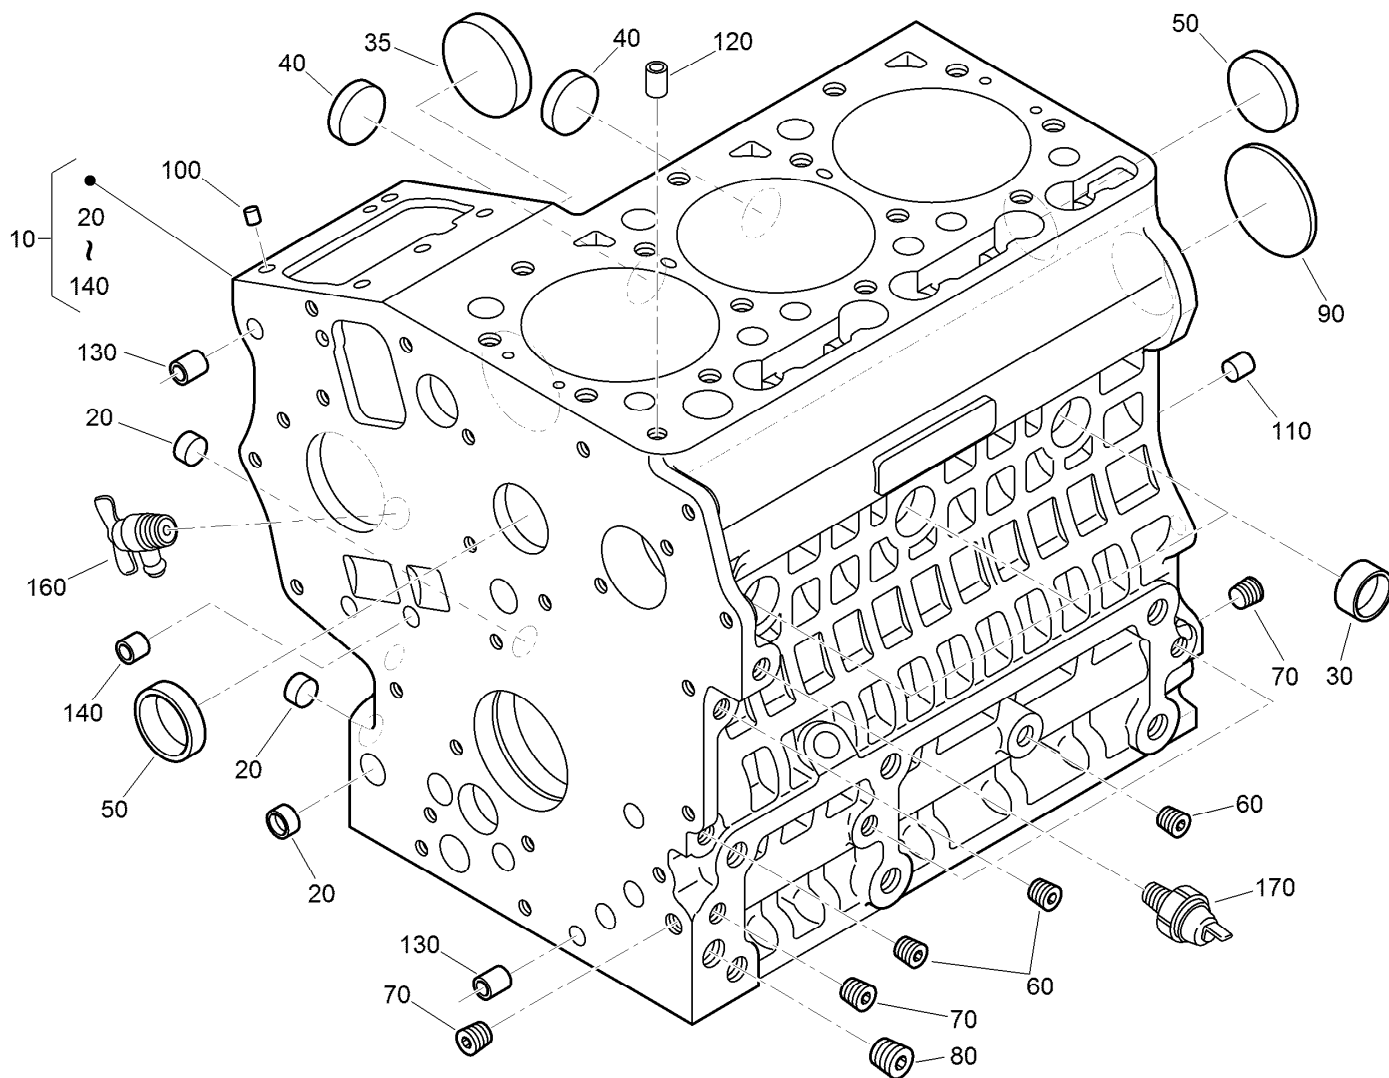

## Crankcase Assembly


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 10   | 130-1486    | 1    | Crankcase ASM  |
| 20   | 100-2019    | 3    | Cap-Sealing    |
| 30   | 100-2020    | 3    | Cap-Sealing    |
| 35   | 110-3702    | 2    | Cap-Sealing    |
| 40   | 98-9398     | 2    | Cap-Sealing    |
| 50   | 98-9687     | 5    | Plug           |
| 60   | 98-7487     | 3    | Plug           |
| 70   | 98-7488     | 1    | Plug           |
| 80   | 100-1851    | 1    | Plug-Expansion |
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 90   | 98-9375     | 2    | Pin-Straight         |
| 100  | 98-9377     | 2    | Pin-Straight         |
| 110  | 98-7506     | 1    | Pin-Pipe             |
| 120  | 100-2051    | 2    | Pin-Pipe             |
| 130  | 100-2051    | 2    | Pin-Pipe             |
| 140  | 100-1991    | 1    | Cover-Fuel, Camshaft |
| 160  | 120-3121    | 1    | Draincock ASM        |
| 170  | 98-9416     | 1    | Switch-Oil           |

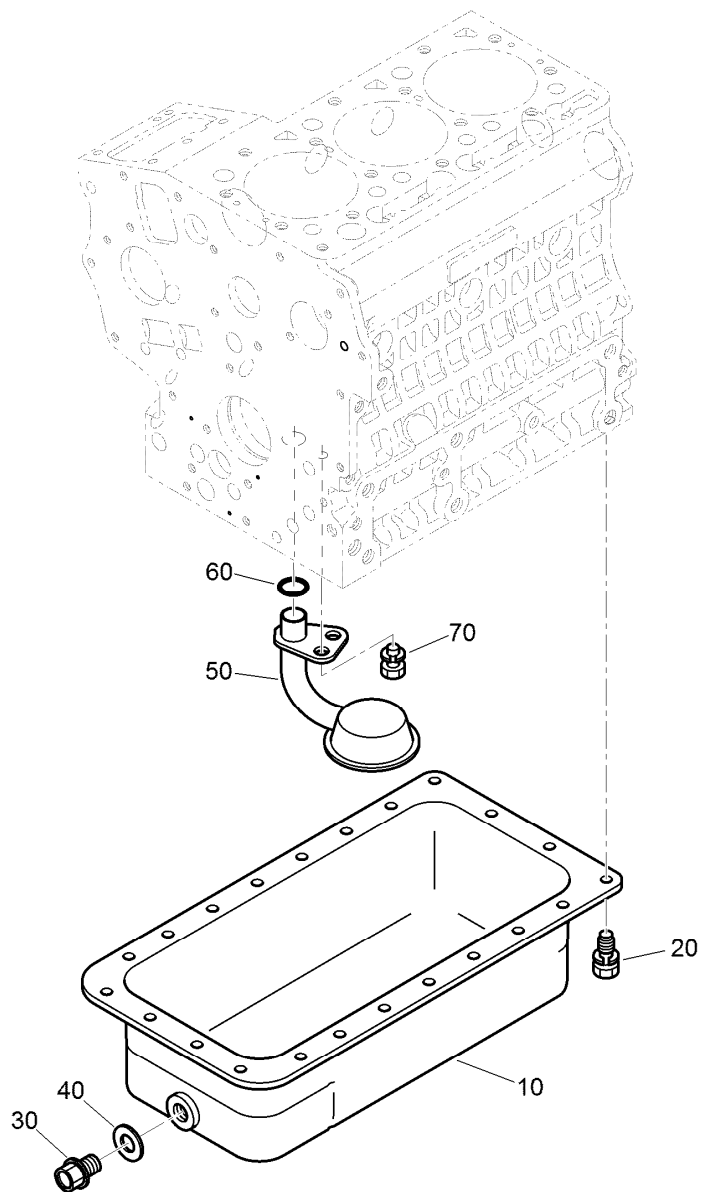


## Oil Pan Assembly
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 125-9056    | 1    | Oil Pan ASM       |
| 20   | 98-9350     | 22   | Bolt              |
| 30   | 114-8151    | 1    | Plug-Drain        |
| 40   | 98-7524     | 1    | Gasket            |
| 50   | 125-9052    | 1    | Tube-Pick Up, Oil |
| 60   | 105-3776    | 1    | O-Ring            |
| 70   | 100-9195    | 1    | Bolt              |

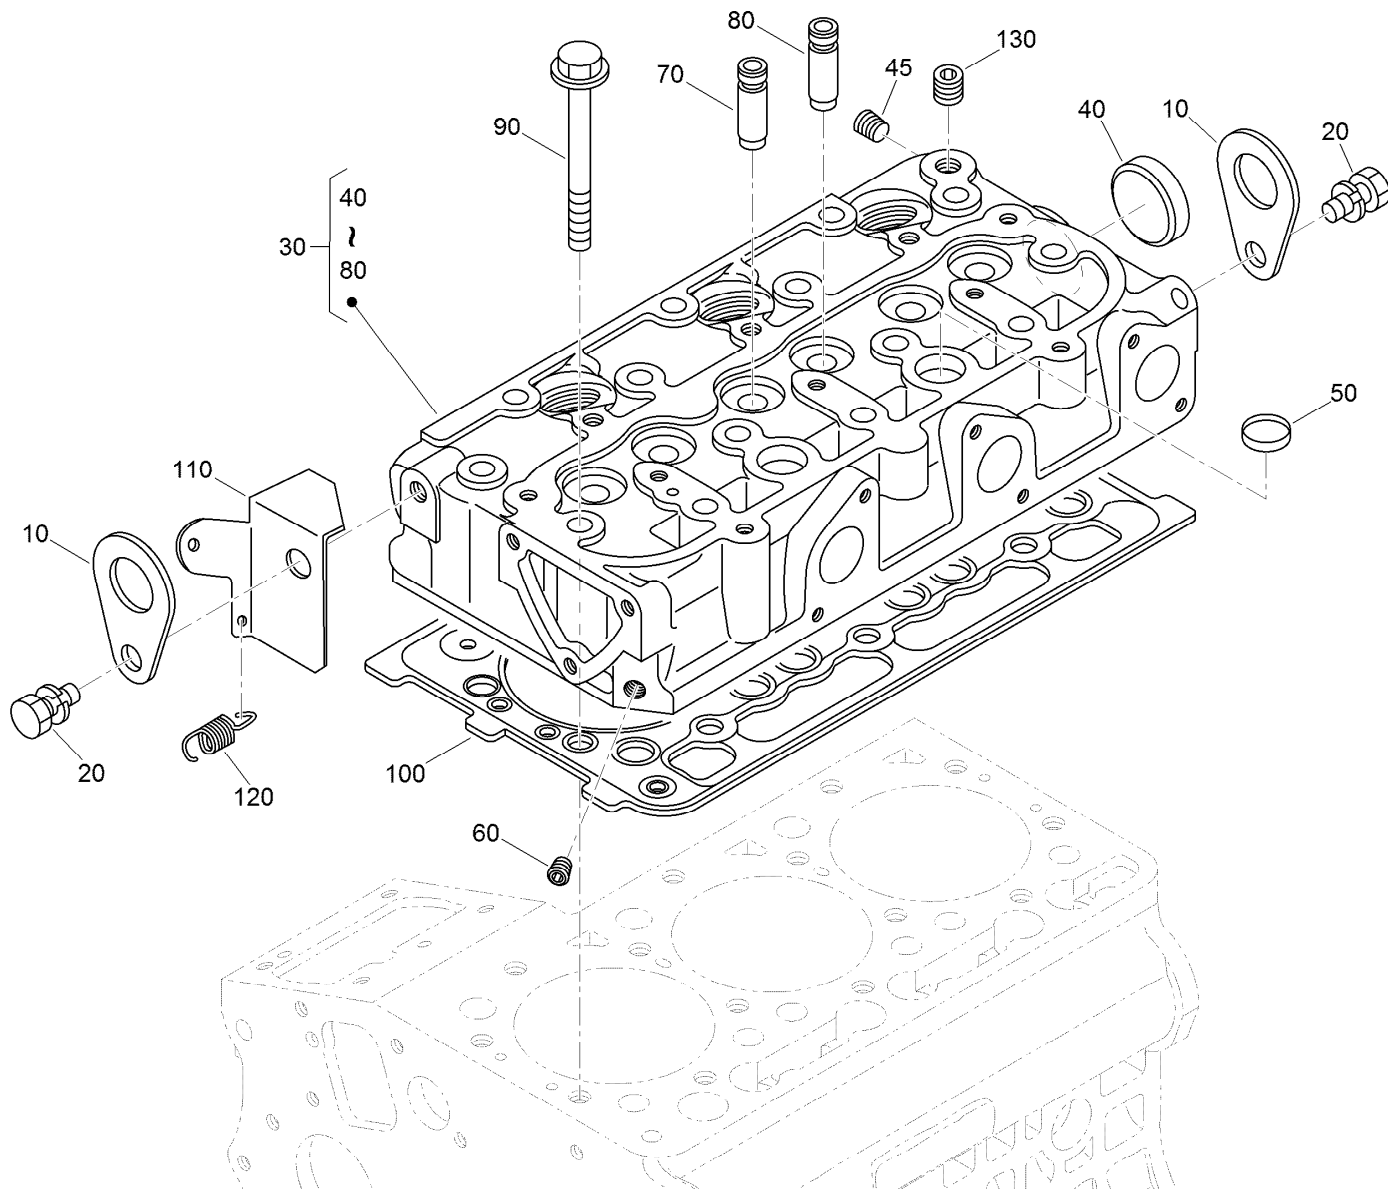

## Cylinder Head Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 98-7531     | 2    | Hook-Engine           |
| 20   | 98-7526     | 2    | Bolt                  |
| 30   | 130-1533    | 1    | Cylinder Head ASM     |
| 40   | 105-3705    | 1    | Cap-Sealing           |
| 45   | 125-9062    | 1    | Plug                  |
| 50   | 98-9389     | 2    | Cap-Sealing           |
| 60   | 98-9687     | 1    | Plug                  |
| 70   | 100-1882    | 3    | Guide-Valve, Inlet    |
| 80   | 100-1883    | 3    | Guide-Valve, Exhaust  |
| 90   | 100-1820    | 14   | Bolt-Head, Cylinder   |
| 100  | 112-2520    | 1    | Gasket-Head, Cylinder |
| 110  | 121-3810    | 1    | Stay                  |
| 120  | 121-3820    | 1    | Spring-Return         |
| 130  | 98-9444     | 1    | Plug                  |

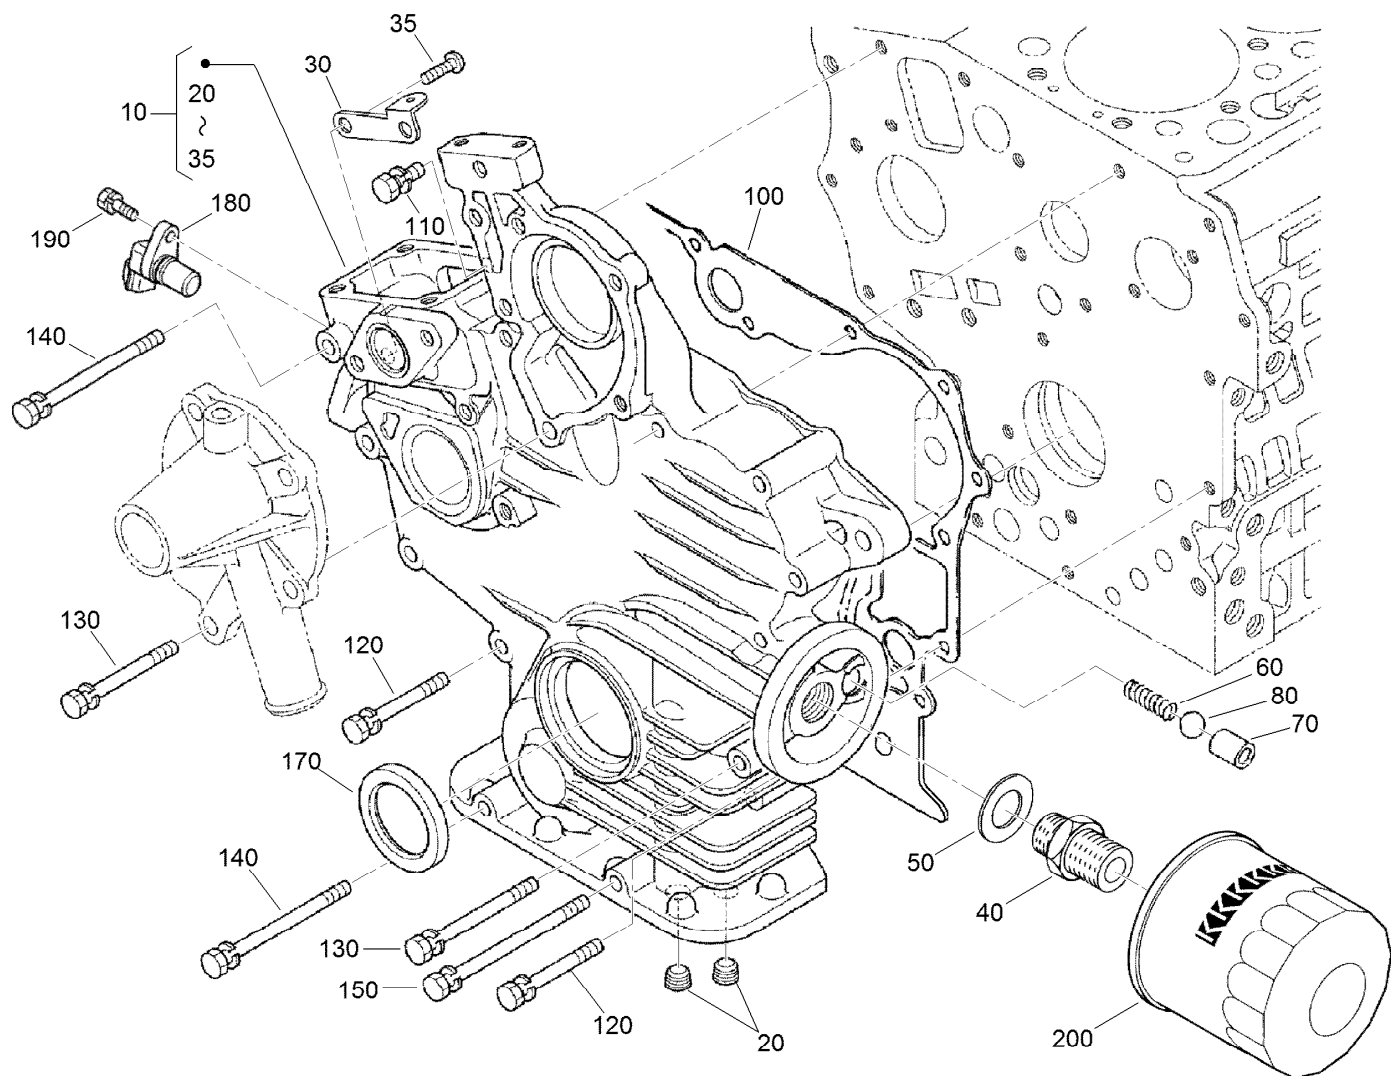

## Gear Case and Oil Filter Cartridge Assembly


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 125-9057    | 1    | Gear Case ASM      |
| 20   | 98-7488     | 2    | Plug               |
| 30   | 110-3708    | 1    | Stay-Spring, Start |
| 35   | 100-2040    | 2    | Screw              |
| 40   | 98-9388     | 1    | Joint-Pipe         |
| 50   | 100-1926    | 1    | Washer-Plain       |
| 60   | 100-2004    | 1    | Spring             |
| 70   | 100-1894    | 1    | Seat-Valve         |
| 80   | 100-1792    | 1    | Ball               |
| 100  | 117-0327    | 1    | Gasket-Case, Gear  |
 
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 110  | 127-0403    | 1    | Bolt-Flange        |
| 120  | 125-9063    | 9    | Bolt-Sems          |
| 130  | 100-1922    | 2    | Bolt               |
| 140  | 98-9357     | 2    | Bolt               |
| 150  | 110-3710    | 1    | Bolt               |
| 170  | 120-7852    | 1    | Seal-Oil           |
| 180  | 125-9058    | 1    | Sensor-Revolution  |
| 190  | 98-7692     | 1    | Bolt               |
| 200  | 115-8189    | 1    | Filter-Oil, Engine |

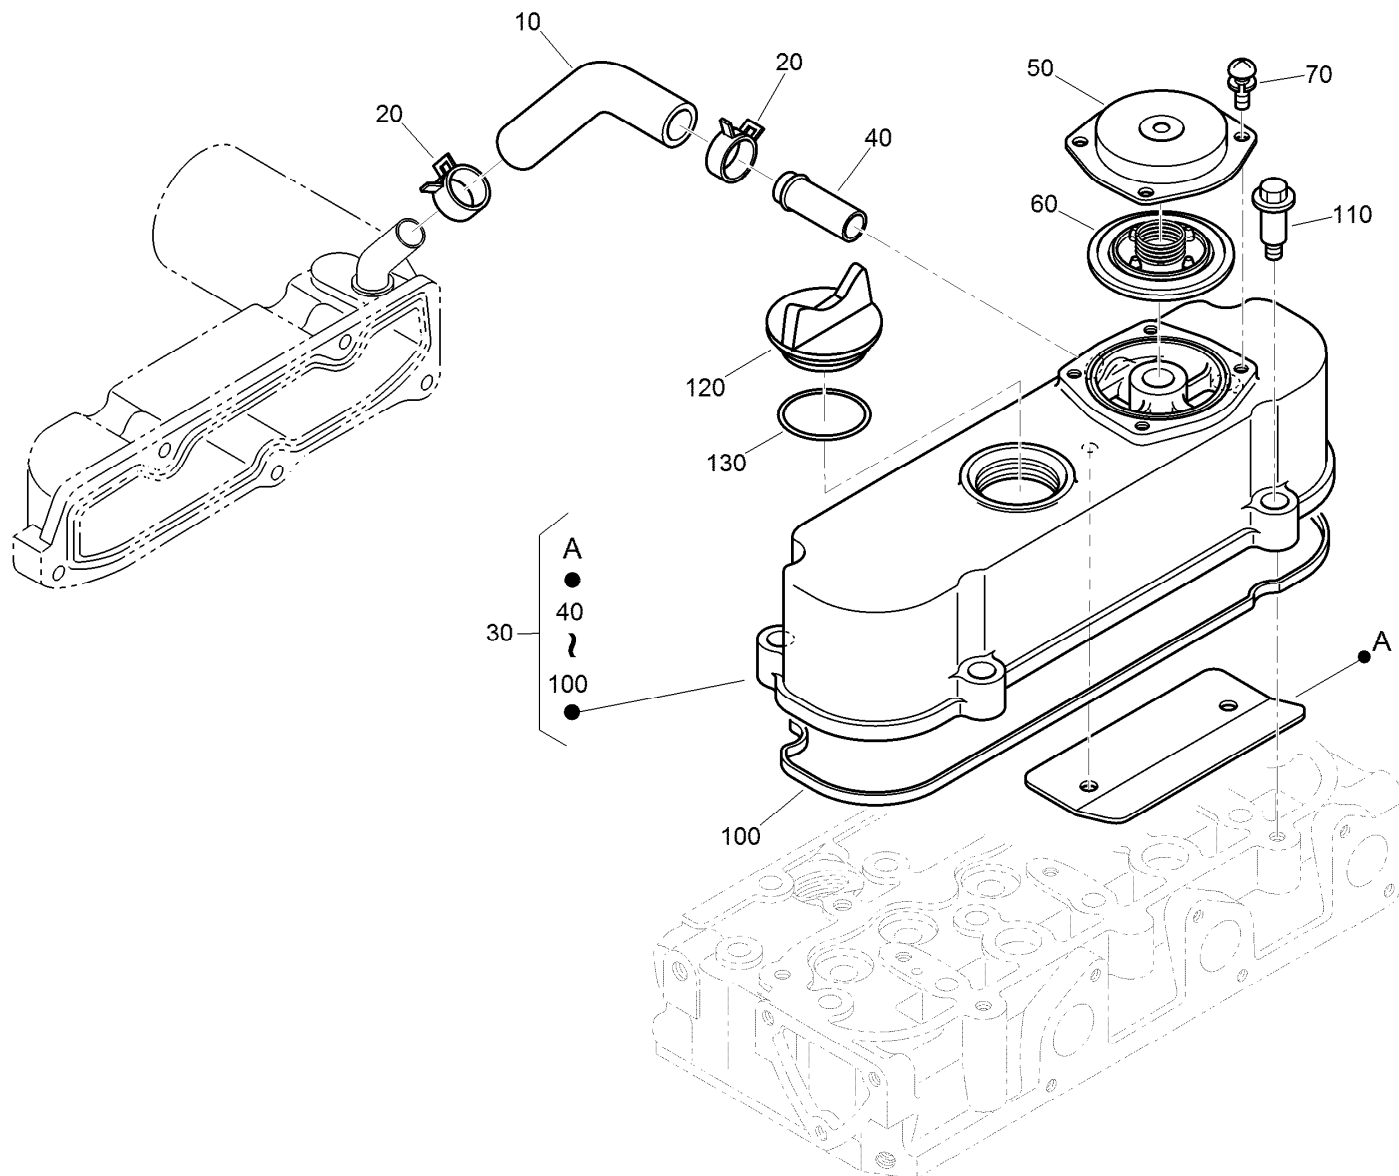


## Cylinder Head Cover Assembly
 
| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 120-3139    | 1    | Tube-Breather           |
| 20   | 110-3712    | 2    | Clamp-Hose              |
| 30   | 112-8332    | 1    | Cylinder Head Cover ASM |
| 40   | 98-9580     | 1    | Pipe-Return, Water      |
| 50   | 110-3714    | 1    | Cover-Breather          |
| 60   | 110-3715    | 1    | Valve-Breather          |
| 70   | 98-9364     | 4    | Screw (With Washer)     |
| 100  | 112-2521    | 1    | Gasket-Cover, Head      |
| 110  | 108-7063    | 4    | Bolt                    |
| 120  | 107-9075    | 1    | Plug-Filler, Oil        |
| 130  | 99-3446     | 1    | O-Ring                  |

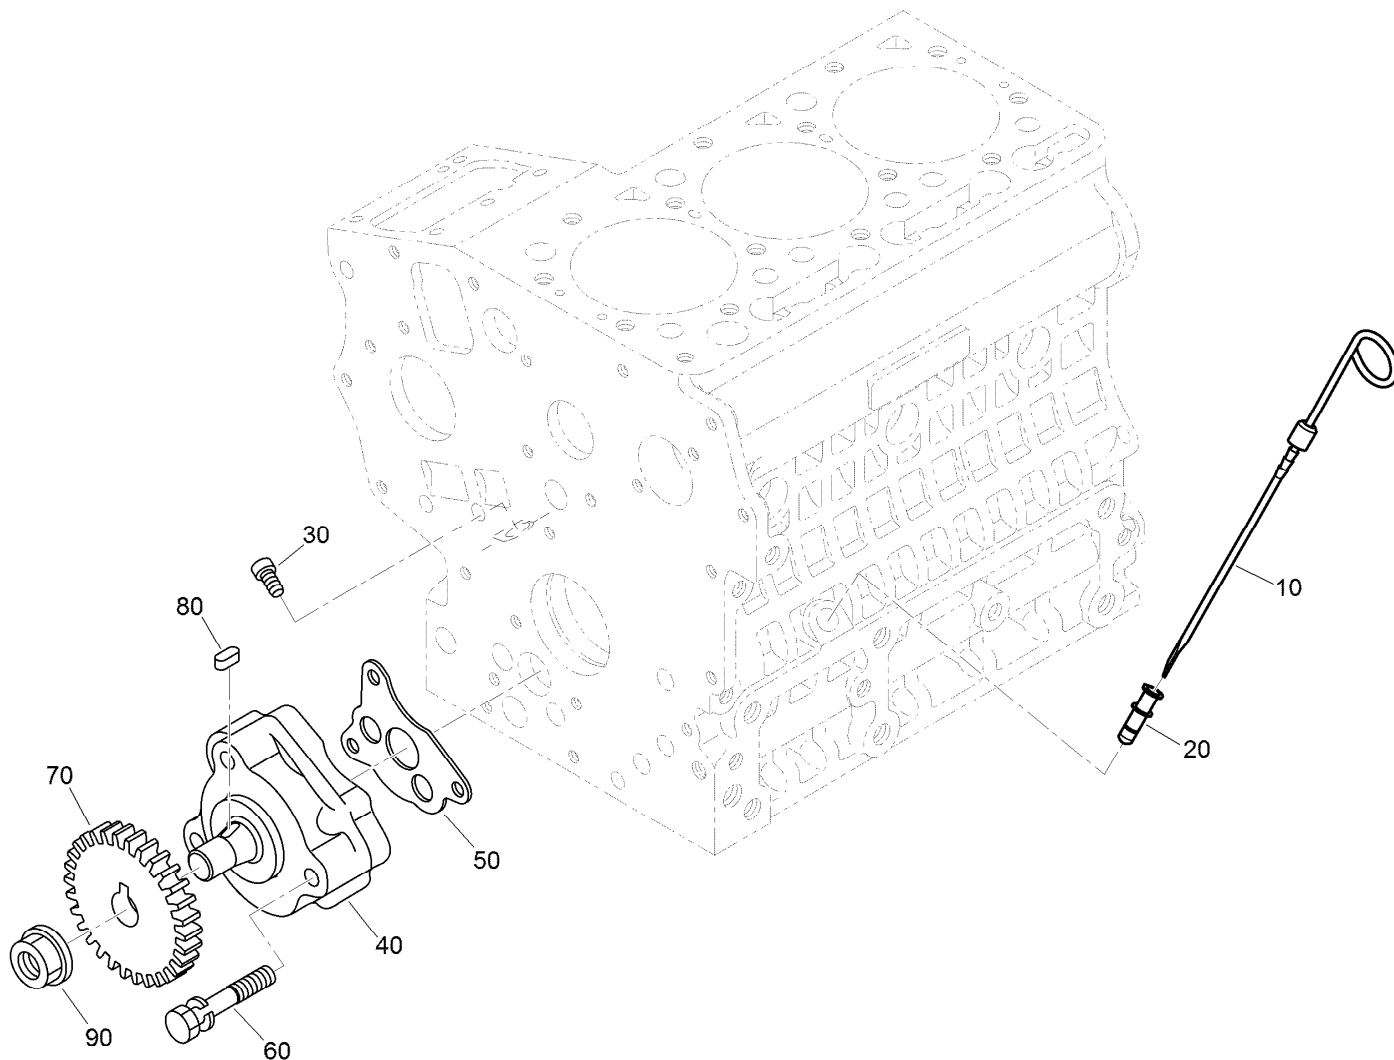

## Oil Pump and Dipstick Assembly

 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 110-3719    | 1    | Gauge-Oil            |
| 20   | 105-4580    | 1    | Guide-Gauge, Oil     |
| 30   | 110-3720    | 1    | Plug-Gauge, Oil      |
| 40   | 100-2002    | 1    | Oil Pump ASM         |
| 50   | 100-2003    | 1    | Gasket-Pump, Oil     |
| 60   | 100-1923    | 3    | Bolt                 |
| 70   | 130-1419    | 1    | Gear-Drive, Oil Pump |
| 80   | 98-7658     | 1    | Key-Feather          |
| 90   | 100-1779    | 1    | Nut-Flange           |

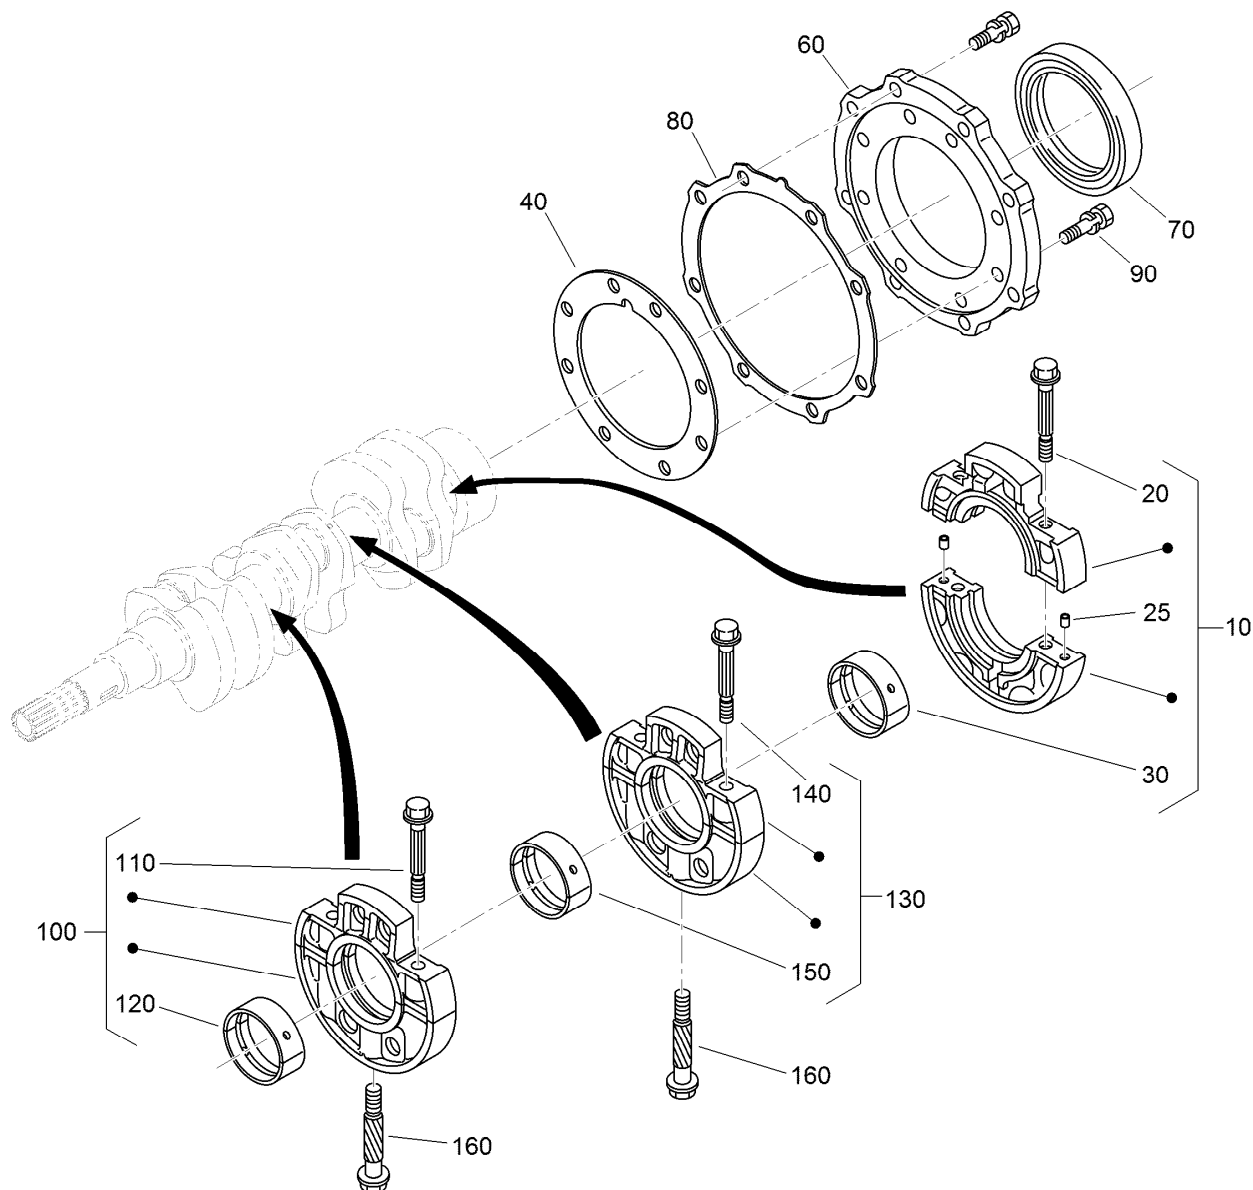

## Main Bearing Case Assembly


| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 10   | 125-9064    | 1    | Wheel Bearing Case ASM         |
| 20   | 125-9065    | 2    | Bolt-Flange                    |
| 25   | 125-9082    | 2    | Pin-Straight                   |
| 30   | 125-9066    | 1    | Crankshaft Metal ASM (STD)     |
| 30   | 125-9067    | 1    | Crankshaft Metal ASM (-0.20Mm) |
| 30   | 125-9068    | 1    | Crankshaft Metal ASM (-0.40Mm) |
| 40   | 112-2812    | 1    | Gasket-Case, Bearing           |
| 60   | 112-8334    | 1    | Cover-Case, Bearing            |
| 70   | 110-3724    | 1    | Seal-Oil                       |
| 80   | 100-1876    | 1    | Gasket-Cover, Case             |
| 90   | 100-1750    | 16   | Bolt                           |
| 100  | 130-1417    | 1    | Main Bearing Case ASM          |
| 110  | 110-3723    | 2    | Bolt-Case, Bearing             |
 
| Ref. | Part Number | Qty. | Description                    |
|------|-------------|------|--------------------------------|
| 120  | 110-3741    | 1    | Crankshaft Metal ASM (STD)     |
| 120  | 125-9083    | 1    | Crankshaft Metal ASM (-0.20Mm) |
| 120  | 110-3743    | 1    | Crankshaft Metal ASM (-0.40Mm) |
| 130  | 130-1418    | 1    | Main Bearing Case ASM          |
| 140  | 110-3723    | 2    | Bolt-Case, Bearing             |
| 150  | 110-3741    | 1    | Crankshaft Metal ASM (STD)     |
| 150  | 125-9083    | 1    | Crankshaft Metal ASM (-0.20Mm) |
| 150  | 110-3743    | 1    | Crankshaft Metal ASM (-0.40Mm) |
| 160  | 100-1874    | 2    | Bolt-Case, Bearing             |

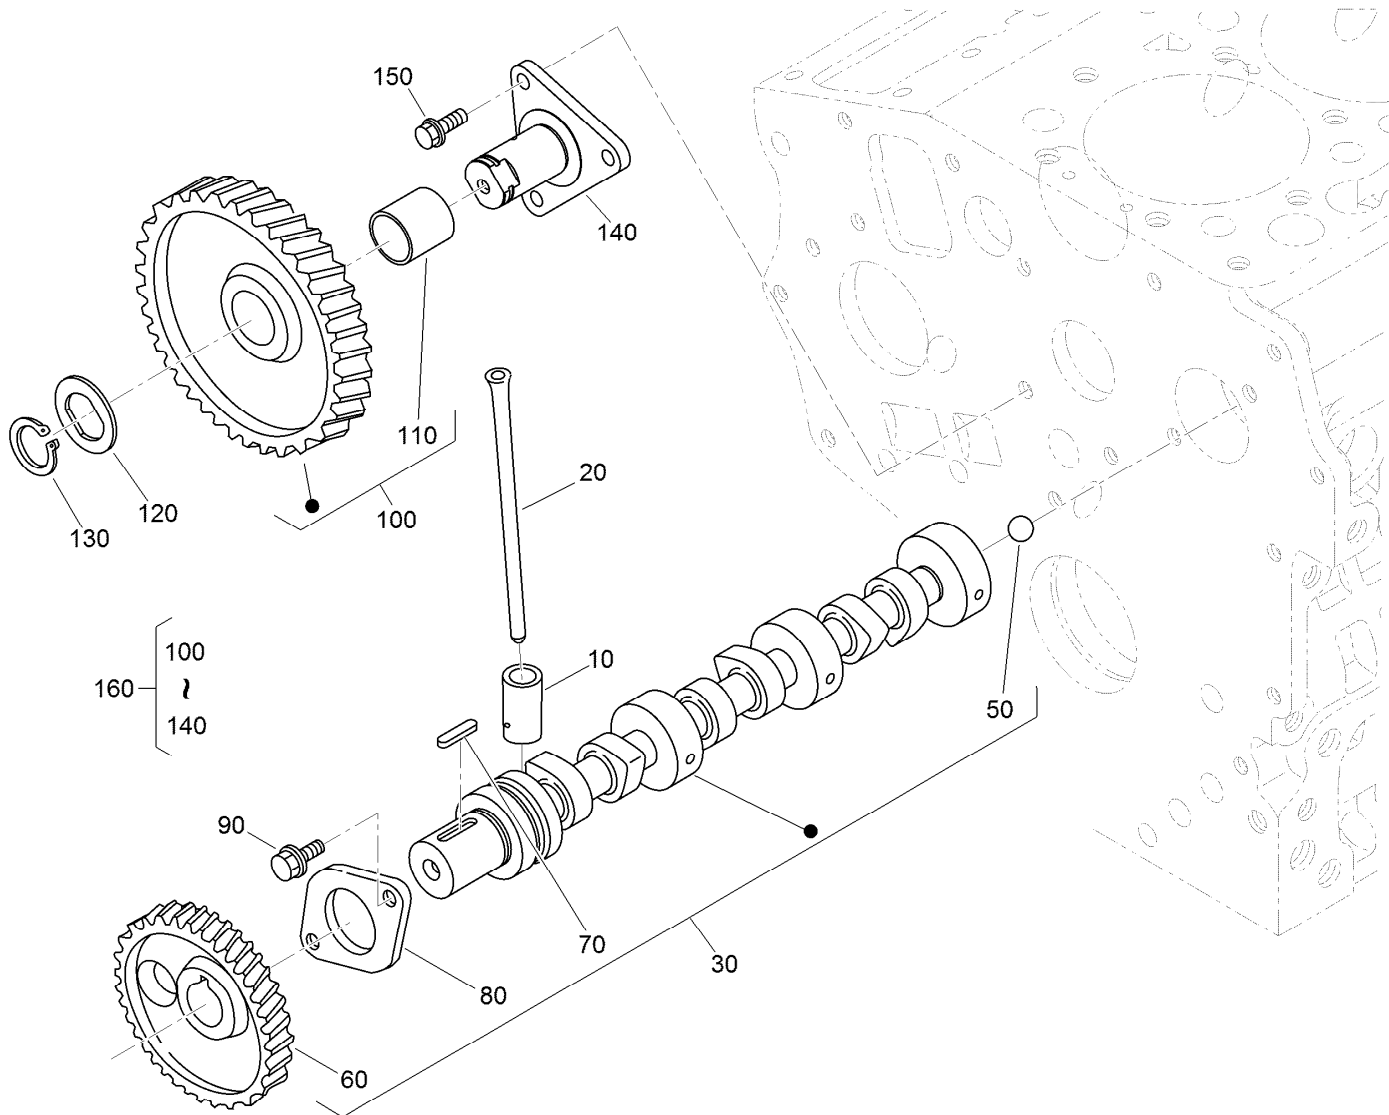

## Camshaft and Idle Gear Shaft Assembly

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 110-3727    | 6    | Tappet            |
| 20   | 100-1989    | 6    | Rod-Push          |
| 30   | 130-1492    | 1    | Camshaft ASM      |
| 50   | 110-3729    | 1    | Ball              |
| 60   | 130-1534    | 1    | Gear-Cam          |
| 70   | 98-9378     | 1    | Key-Feather       |
| 80   | 100-1887    | 1    | Stopper-Camshaft  |
| 90   | 98-9350     | 2    | Bolt              |
| 100  | 121-2421    | 1    | Idle Gear ASM     |
| 110  | 121-2422    | 1    | Bushing           |
| 120  | 100-1970    | 1    | Collar-Gear, Idle |
| 130  | 100-1969    | 1    | Ring-Snap         |
| 140  | 100-1967    | 1    | Shaft-Gear, Idle  |
| 150  | 100-1774    | 3    | Bolt-Flange       |
| 160  | 100-2240    | 1    | Idle Gear ASM     |

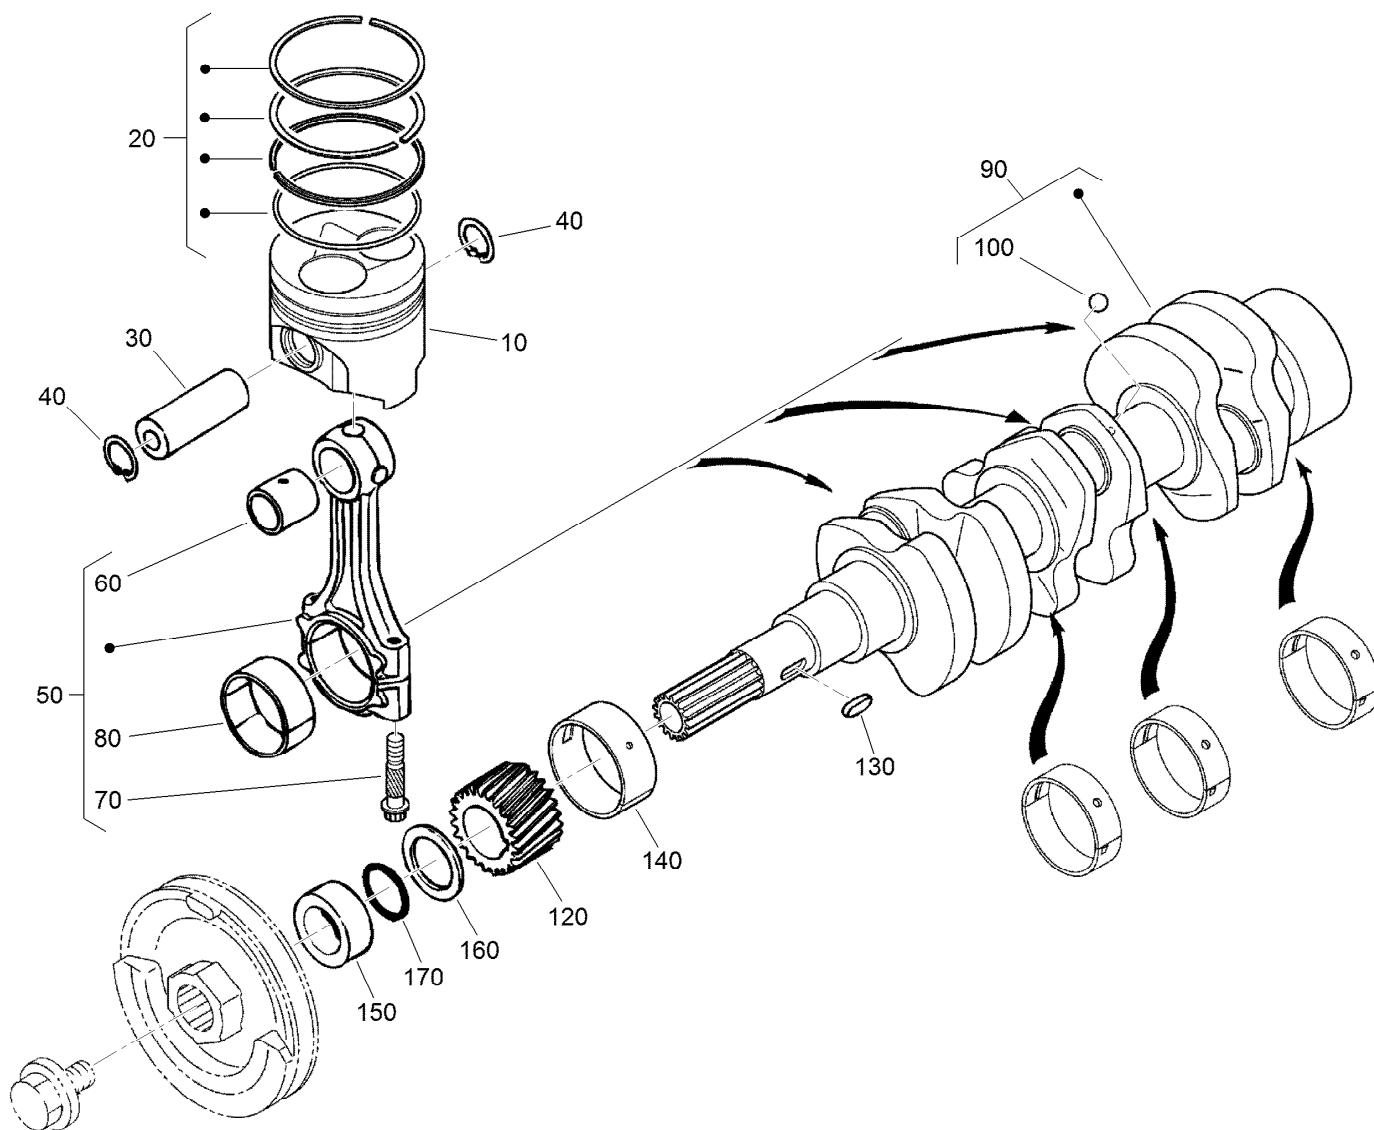

## Piston and Crankshaft Assembly


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 130-1537    | 3    | Piston                  |
| 10   | 130-1540    | 3    | Piston                  |
| 20   | 130-1535    | 3    | Piston Ring ASM         |
| 20   | 130-1536    | 3    | Piston Ring ASM         |
| 30   | 110-3734    | 3    | Pin-Piston              |
| 40   | 100-1835    | 6    | Circlip-Internal        |
| 50   | 125-9070    | 3    | Connecting Rod ASM      |
| 60   | 110-3736    | 3    | Bushing-Pin, Piston     |
| 70   | 100-1999    | 6    | Bolt-Rod, Connecting    |
| 80   | 100-2000    | 6    | Metal-Crankpin (STD)    |
| 80   | 121-3849    | 3    | Metal-Crankpin (-.20MM) |
 
| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 80   | 121-2420    | 3    | Metal-Crankpin (-.40MM)   |
| 90   | 117-0308    | 1    | Crankshaft                |
| 100  | 100-1791    | 3    | Ball                      |
| 120  | 100-1891    | 1    | Gear-Crankshaft           |
| 130  | 100-1752    | 1    | Key-Feather               |
| 140  | 110-3738    | 1    | Metal-Crankshaft (STD)    |
| 140  | 121-2424    | 1    | Metal-Crankshaft (-.20MM) |
| 140  | 121-2425    | 1    | Metal-Crankshaft (-.40MM) |
| 150  | 100-1890    | 1    | Collar-Crankshaft         |
| 160  | 100-1974    | 1    | Slinger-Oil               |
| 170  | 100-2209    | 1    | O-Ring                    |

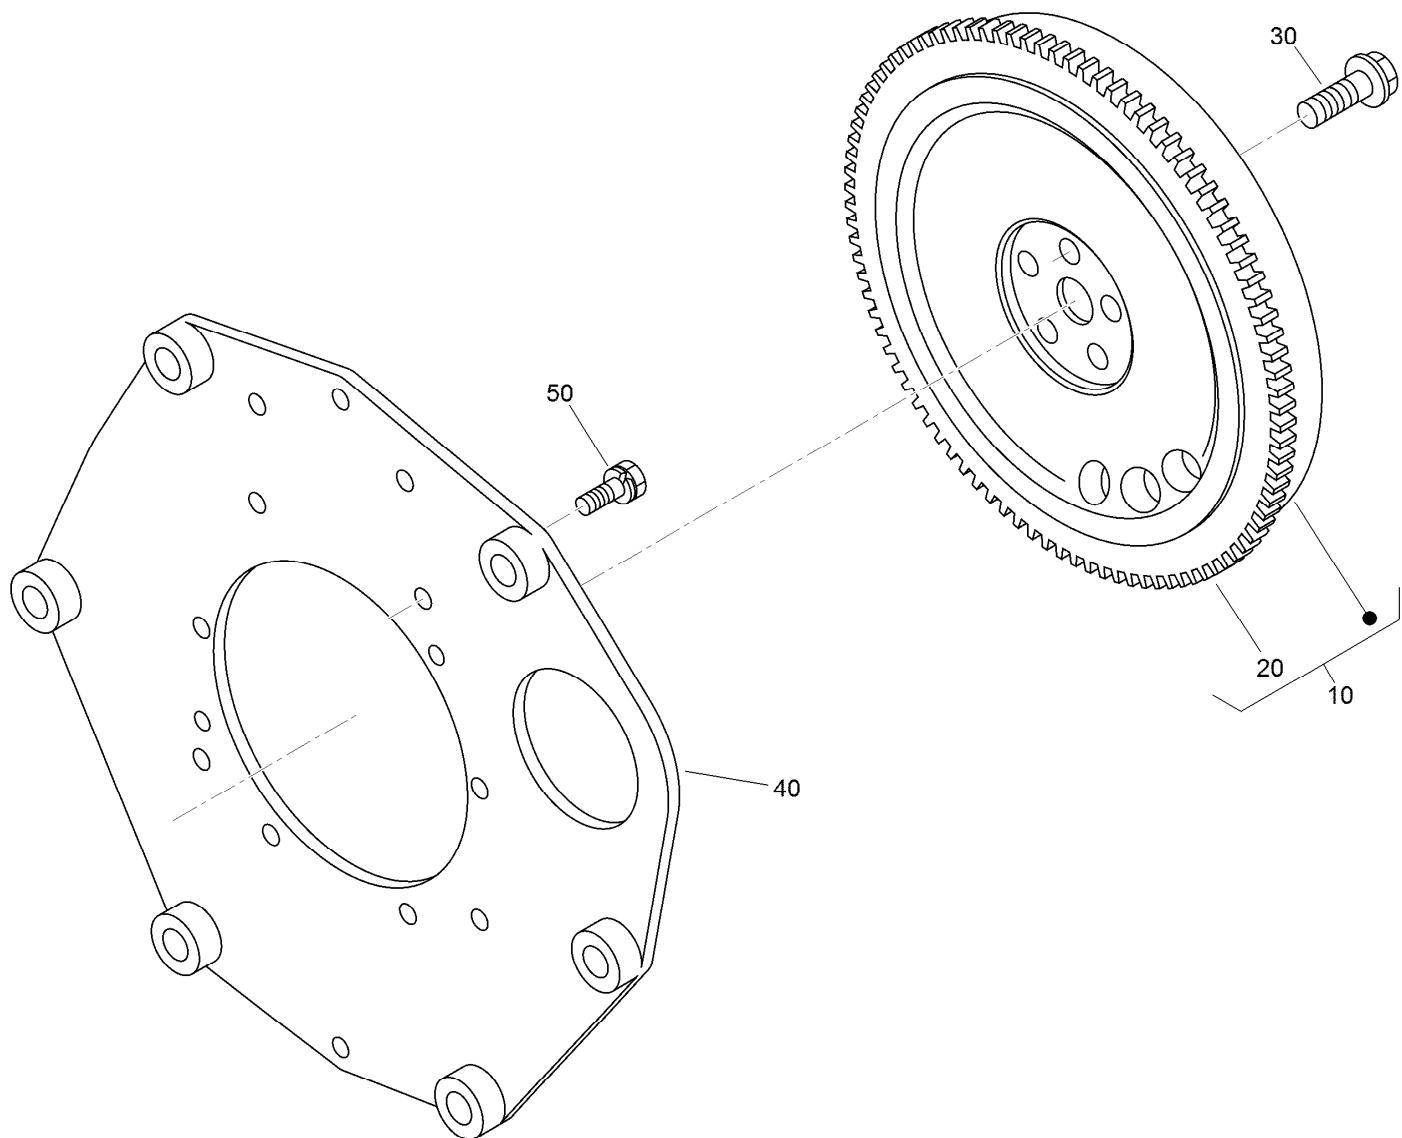


## Flywheel Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 125-9054           | 1           | Flywheel ASM       |
| 20          | 105-3722           | 1           | Gear-Ring          |
| 30          | 125-9051           | 5           | Bolt-Flywheel      |
| 40          | 125-9053           | 1           | Plate-Rear End     |
| 50          | 110-3754           | 10          | Bolt               |

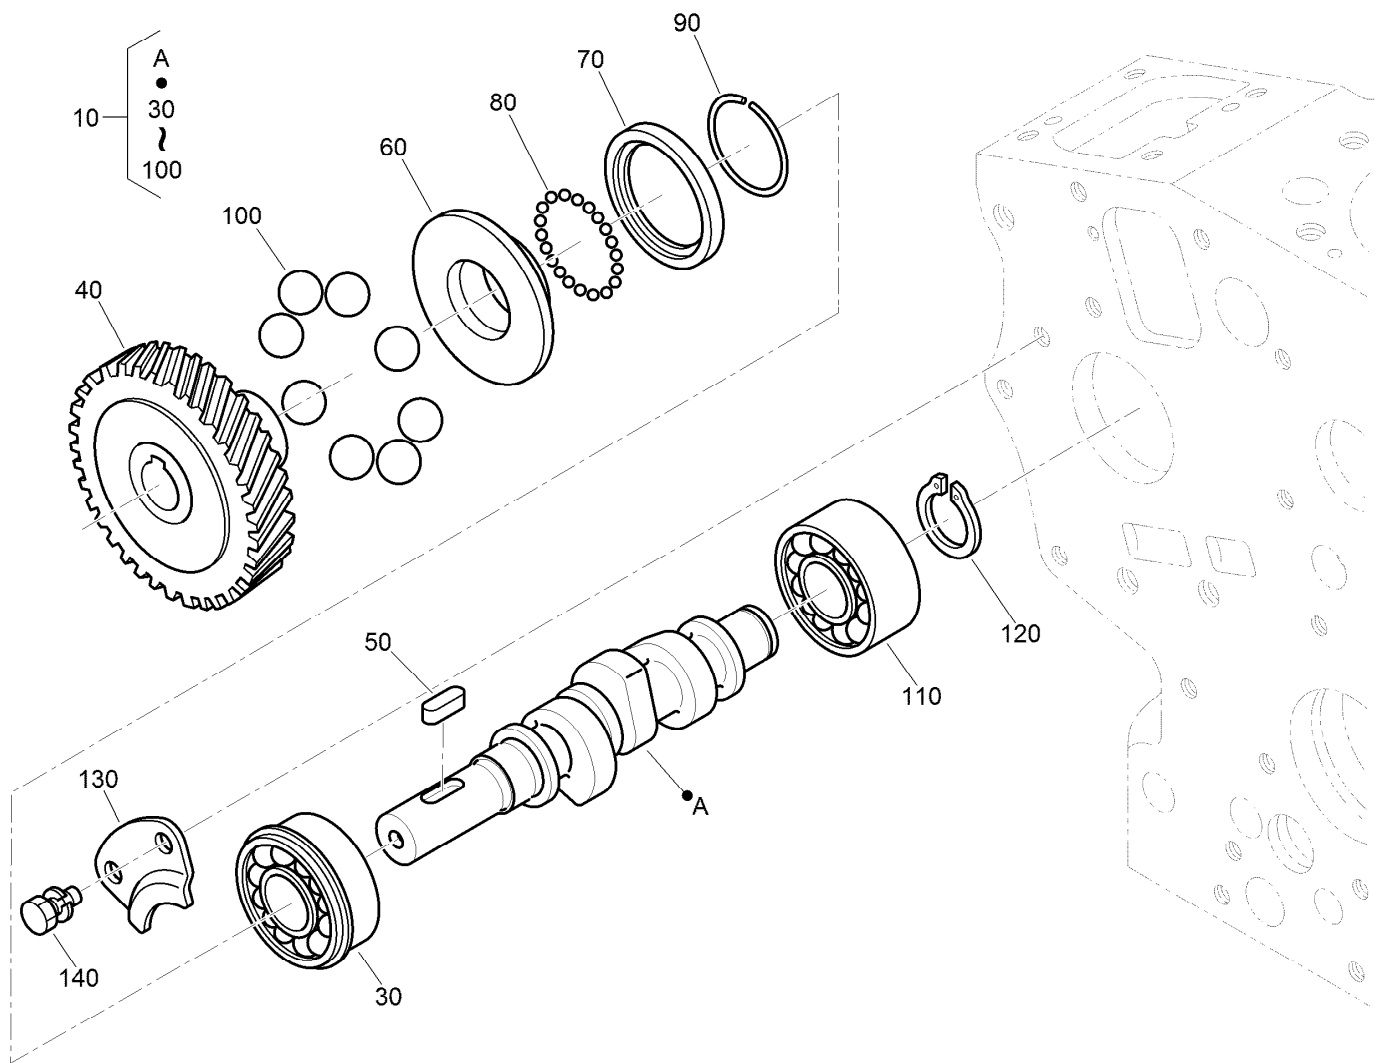


## Fuel Camshaft Assembly
 
| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 10   | 125-9075    | 1    | Fuel Camshaft ASM      |
| 30   | 100-1795    | 1    | Bearing-Ball           |
| 40   | 100-2006    | 1    | Gear-Pump, Injection   |
| 50   | 100-1752    | 1    | Key-Feather            |
| 60   | 112-8336    | 1    | Sleeve-Governor        |
| 70   | 100-1904    | 1    | Case-Ball, Governor    |
| 80   | 100-1790    | 32   | Ball                   |
| 90   | 100-1843    | 1    | Circ-Clip              |
| 100  | 100-1793    | 8    | Ball                   |
| 110  | 110-3757    | 1    | Bearing-Ball           |
| 120  | 100-1784    | 1    | Circ-Clip, External    |
| 130  | 100-1888    | 1    | Stopper-Fuel, Camshaft |
| 140  | 98-9350     | 2    | Bolt                   |

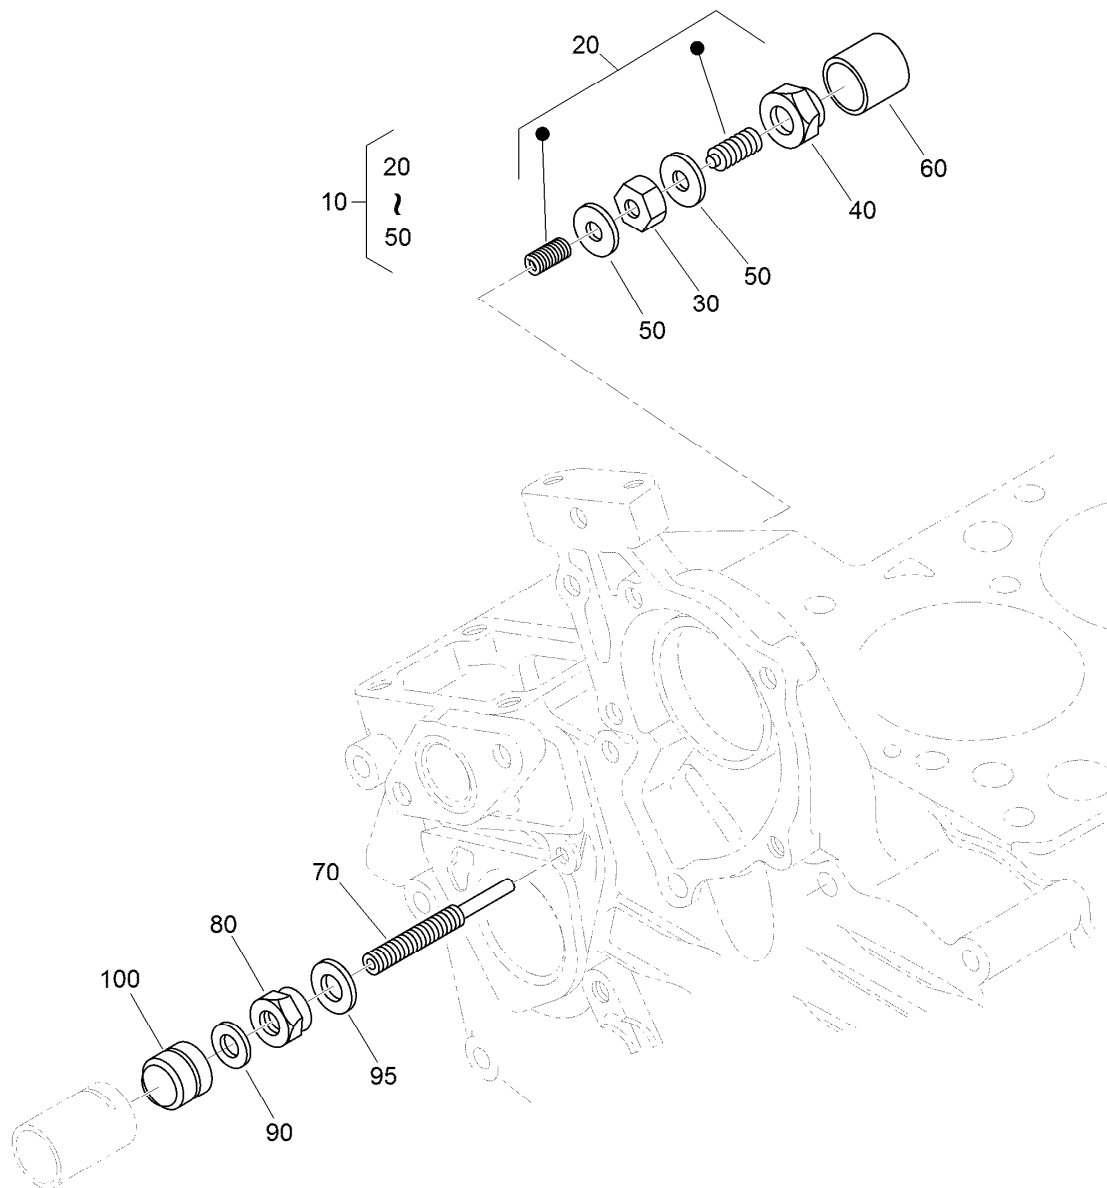


## Idle Apparatus Assembly
 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 100-1898           | 1           | Idle Apparatus ASM |
| 20          | 100-1899           | 1           | Adjusting Bolt ASM |
| 30          | 100-1846           | 1           | Nut                |
| 40          | 100-1901           | 1           | Nut-Cap            |
| 50          | 98-7428            | 2           | Gasket             |
| 60          | 100-1902           | 1           | Cap                |
| 70          | 110-3758           | 1           | Bolt-Adjusting     |
| 80          | 100-2175           | 1           | Nut-Lock           |
| 90          | 98-7654            | 1           | Gasket             |
| 95          | 107-9081           | 1           | Gasket             |
| 100         | 99-8387            | 1           | Nut-Cap            |

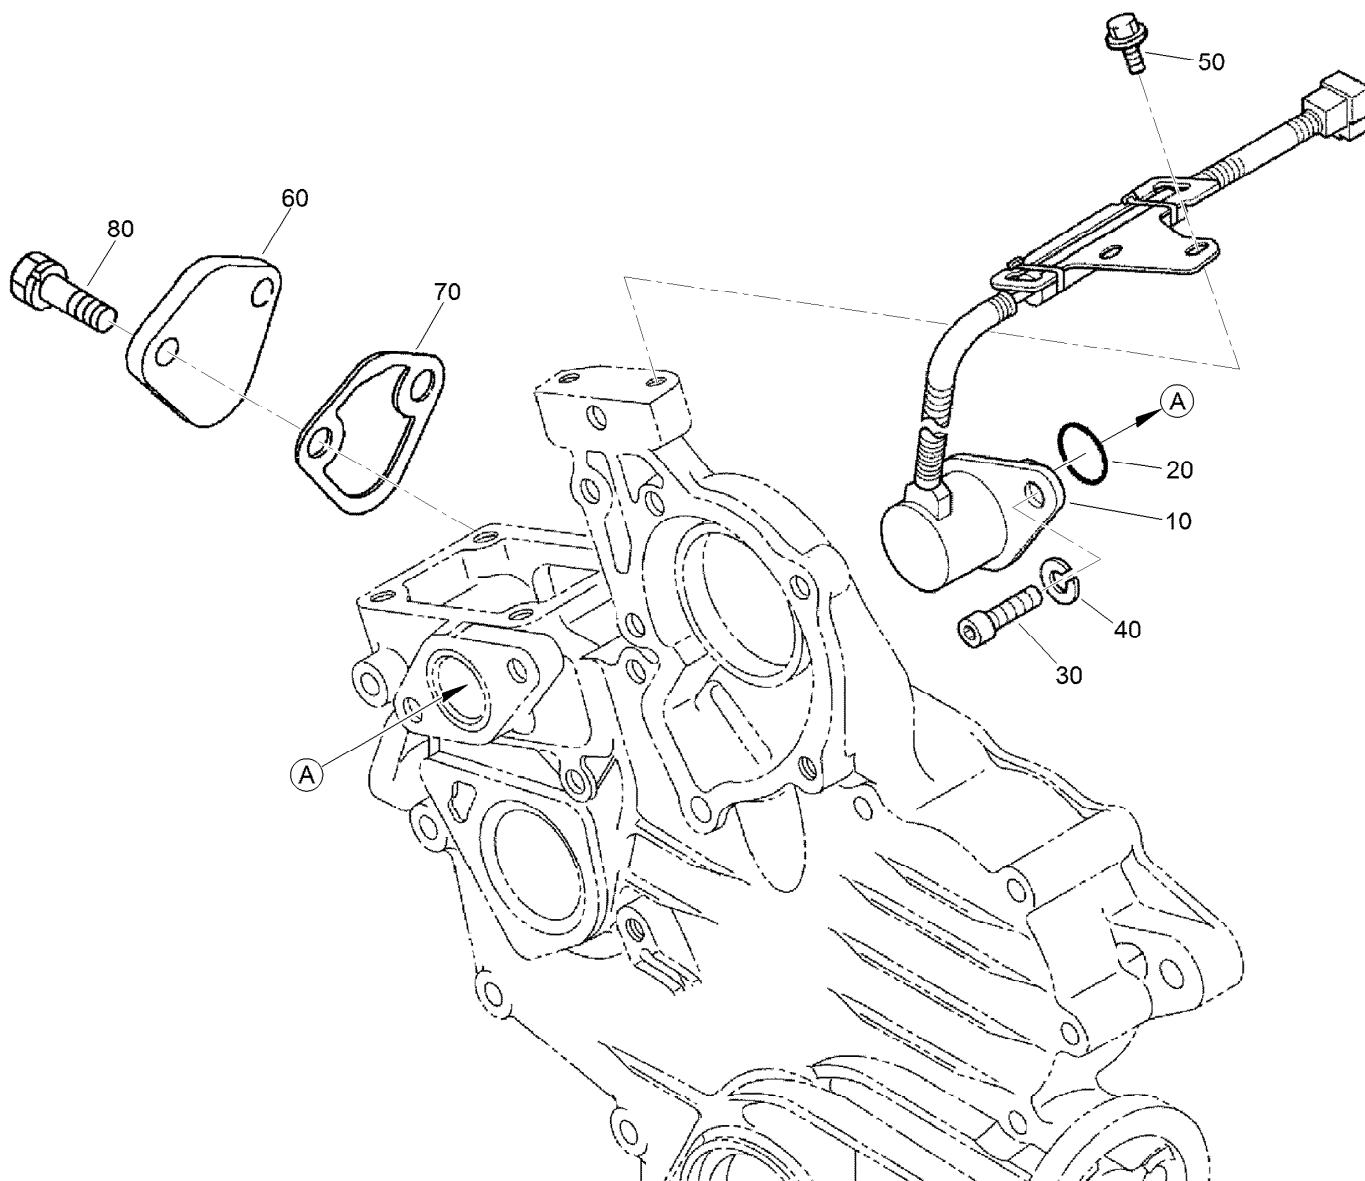

## Stop Solenoid and Fuel Pump Cover Assembly

 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 10   | 117-2719    | 1    | Solenoid Stop ASM |
| 20   | 110-3762    | 1    | O-Ring            |
| 30   | 110-3763    | 2    | Bolt-HSH          |
| 40   | 98-7699     | 1    | Washer-Spring     |
| 50   | 100-1774    | 2    | Bolt-Flange       |
| 60   | 99-3514     | 1    | Cover             |
| 70   | 98-9636     | 1    | Gasket-Pump, Fuel |
| 80   | 98-7692     | 2    | Bolt              |

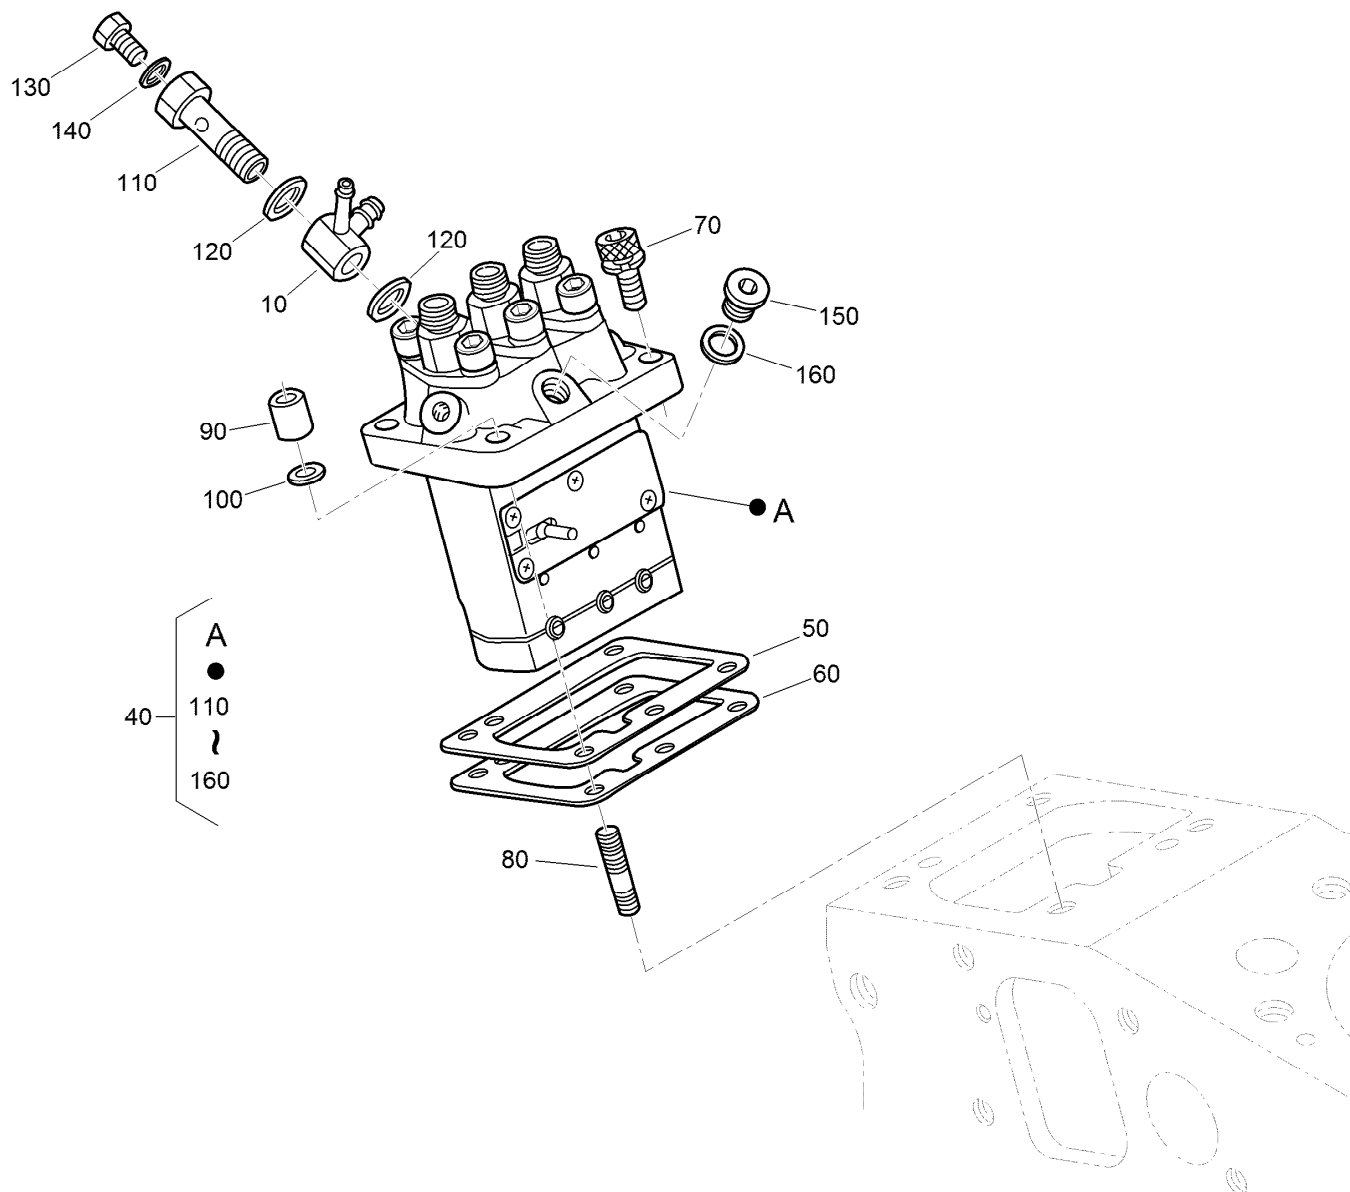

## Injection Pump Assembly



| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 110-3764    | 1    | Joint                    |
| 40   | 110-3765    | 1    | Injection Pump ASM       |
| 50   | 115-3045    | 1    | Shim-Injection (0.175MM) |
| 50   | 98-9456     | 1    | Shim-Injection (0.20MM)  |
| 50   | 98-9457     | 1    | Shim-Injection (0.25MM)  |
| 60   | 98-9458     | 1    | Shim-Injection (0.30MM)  |
| 60   | 115-3046    | 1    | Shim-Injection (0.35MM)  |
| 70   | 117-7564    | 2    | Bolt-Hex Soc HD          |
| 80   | 98-9438     | 2    | Stud                     |
 
| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 90   | 98-9440     | 2    | Nut-Cap       |
| 100  | 98-7699     | 2    | Washer-Spring |
| 110  | 100-1896    | 1    | Screw-Hollow  |
| 120  | 98-9445     | 2    | Gasket        |
| 130  | 98-9430     | 1    | Screw         |
| 140  | 98-9446     | 1    | Gasket        |
| 150  | 98-9466     | 1    | Plug          |
| 160  | 98-9451     | 1    | Gasket        |

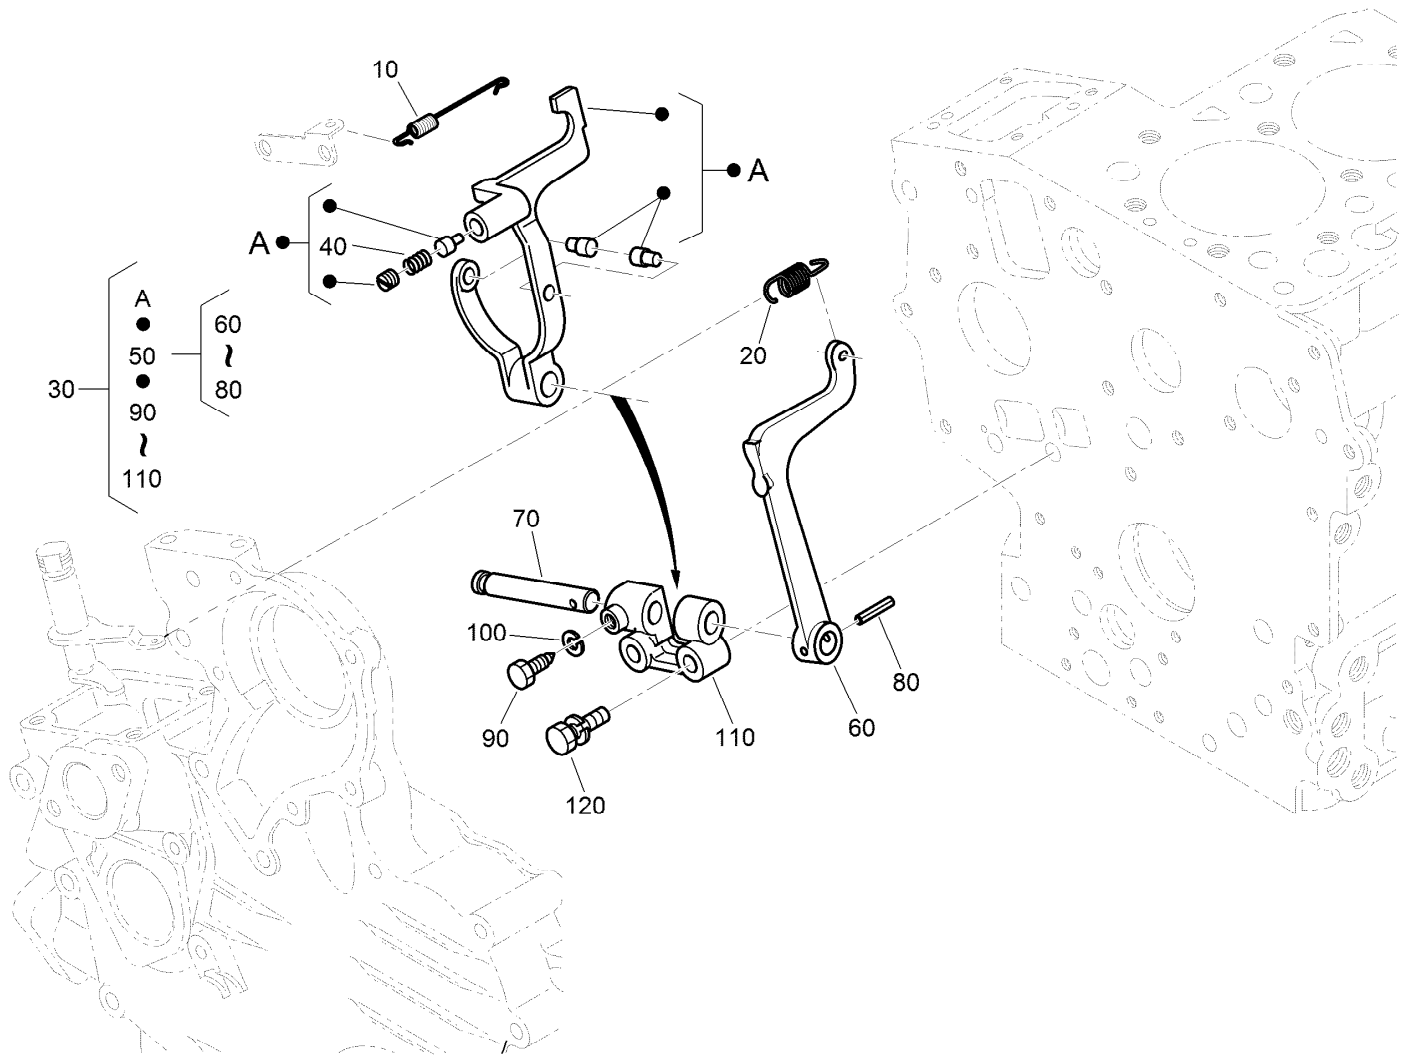

## Governor Assembly
  
| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 110-3766    | 1    | Spring-Start       |
| 20   | 110-3767    | 1    | Spring-Governor    |
| 30   | 130-1368    | 1    | Fork Lever ASM     |
| 40   | 117-0313    | 1    | Spring             |
| 50   | 100-1905    | 1    | Fork Lever ASM     |
| 60   | 100-1907    | 1    | Lever-Fork         |
| 70   | 100-1908    | 1    | Shaft-Lever, Fork  |
| 80   | 100-1751    | 1    | Pin-Spring         |
| 90   | 100-1845    | 1    | Bolt               |
| 100  | 100-2204    | 1    | Washer-Spring      |
| 110  | 100-1909    | 1    | Holder-Lever, Fork |
| 120  | 100-1763    | 2    | Bolt               |

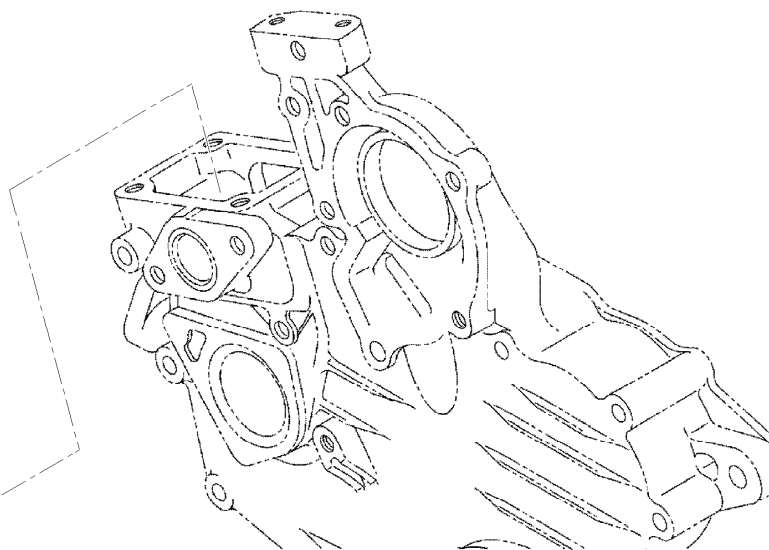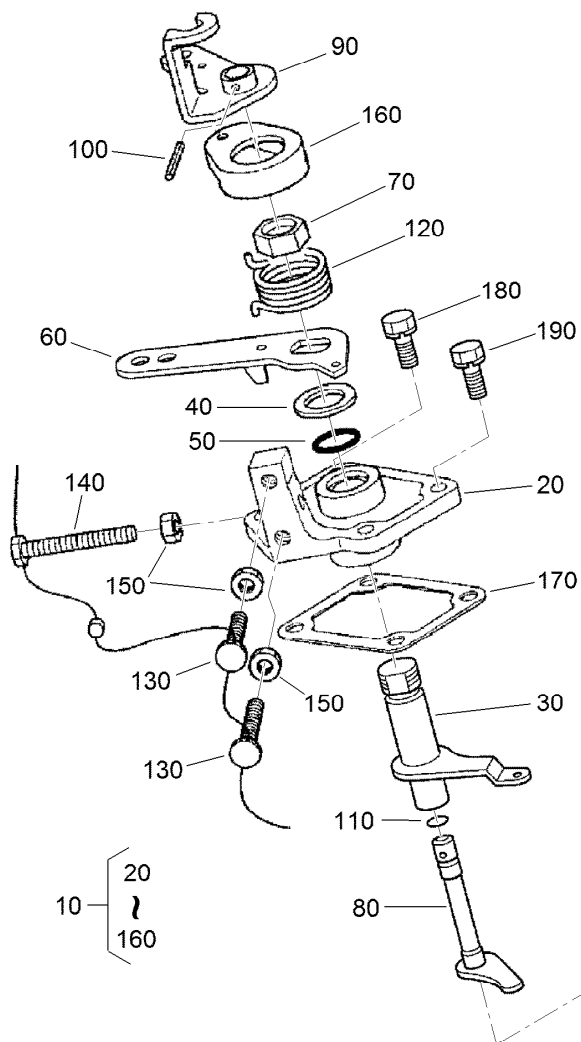


## Speed Control Plate Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 10   | 110-3769    | 1    | Speed Control Plate ASM |
| 20   | 110-3770    | 1    | Plate-Control, Speed    |
| 30   | 110-3771    | 1    | Lever-Governor          |
| 40   | 110-3772    | 1    | Collar                  |
| 50   | 100-2208    | 1    | O-Ring                  |
| 60   | 110-3773    | 1    | Lever-Control, Speed    |
| 70   | 110-3774    | 1    | Nut-Control, Speed      |
| 80   | 110-3775    | 1    | Shaft-Lever             |
| 90   | 110-3776    | 1    | Lever-Stop, Engine      |
| 100  | 110-3777    | 1    | Pin-Spring              |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 110  | 100-2207    | 1    | O-Ring                |
| 120  | 110-3778    | 1    | Spring-Return         |
| 130  | 120-3133    | 2    | Screw-Stopper         |
| 140  | 120-3134    | 1    | Bolt                  |
| 150  | 98-7572     | 3    | Nut                   |
| 160  | 110-3779    | 1    | Cap                   |
| 170  | 100-1962    | 1    | Gasket-Plate, Control |
| 180  | 127-0403    | 2    | Bolt-Flange           |
| 190  | 112-2507    | 2    | Bolt                  |
 
# Nozzle Holder Assembly

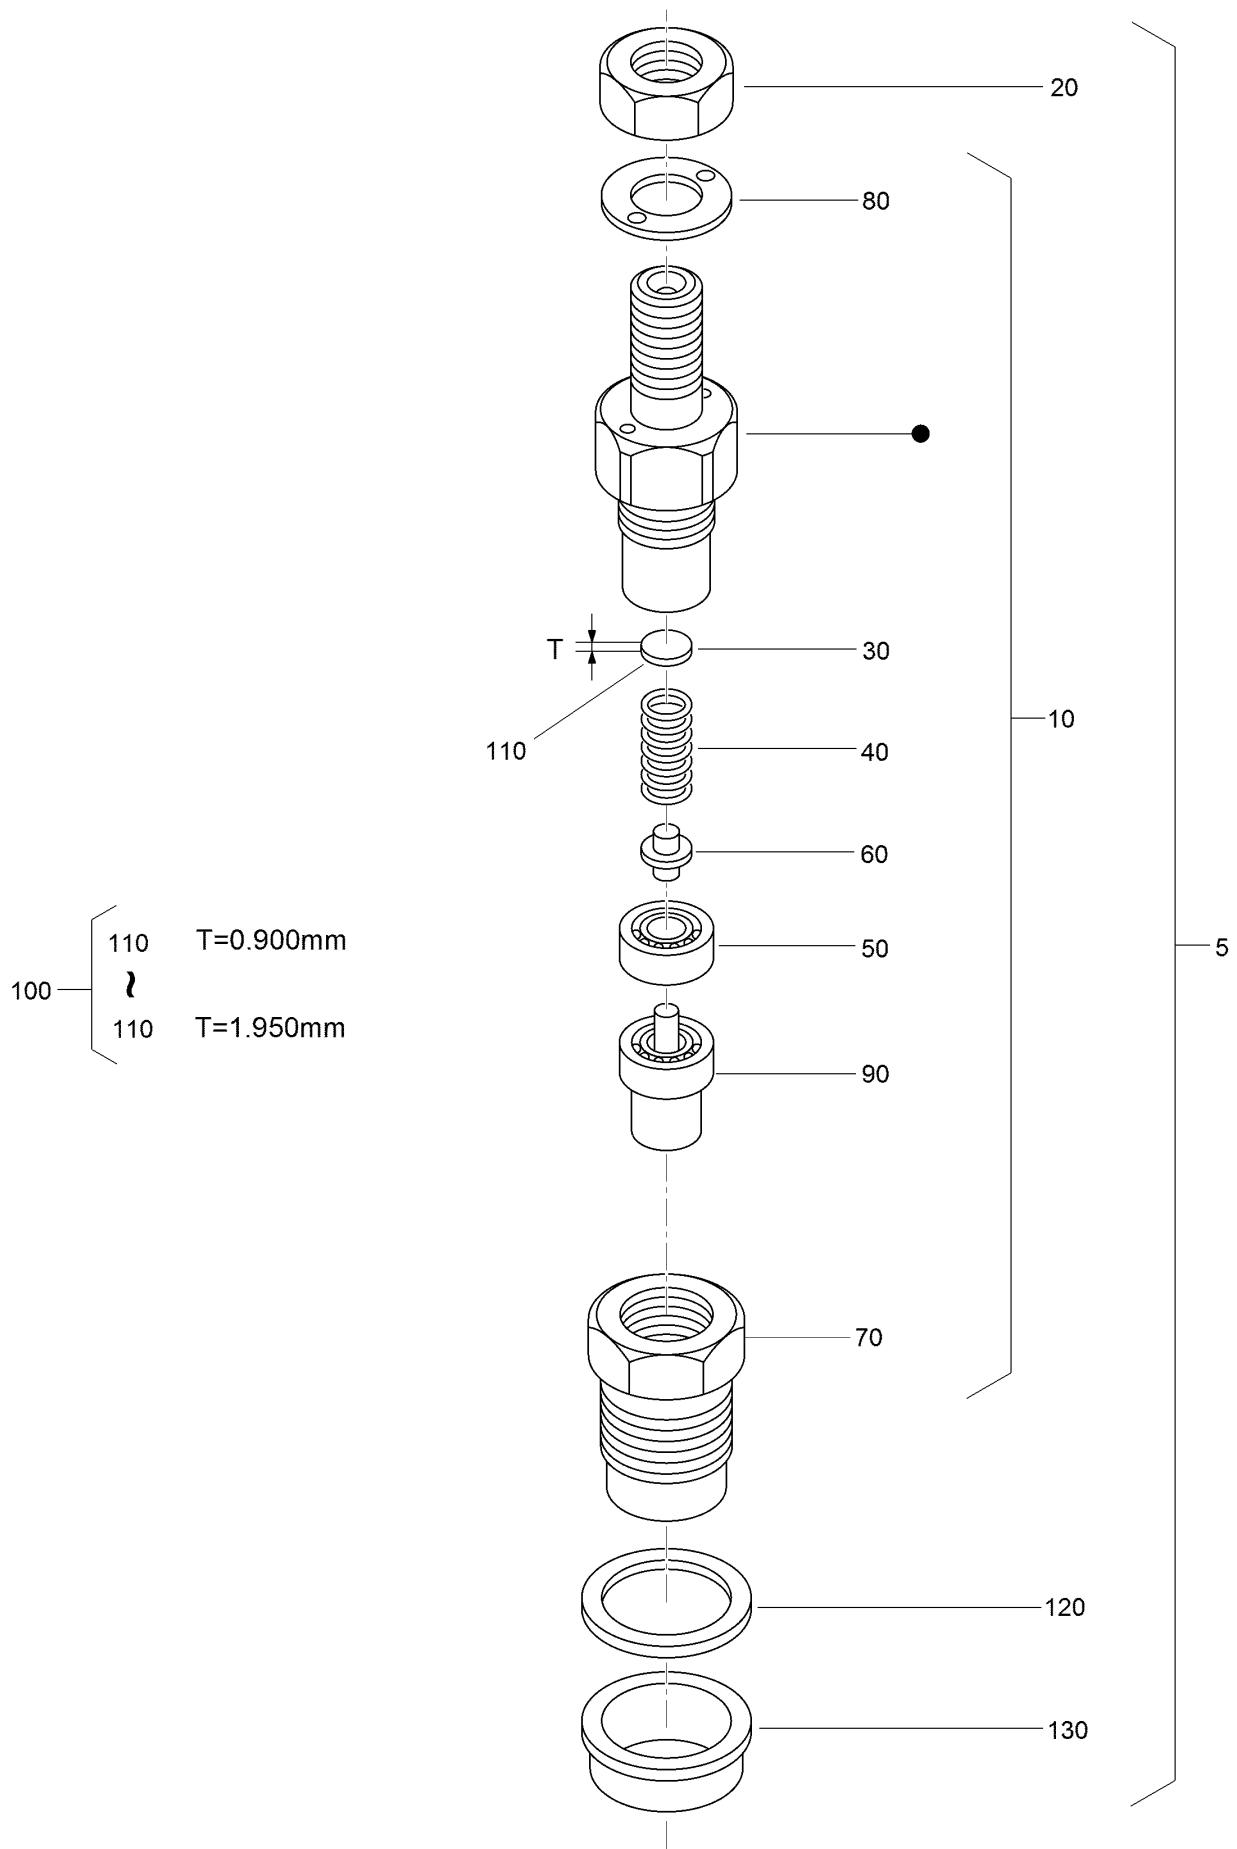

## Nozzle Holder Assembly (continued)

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|----------------------------|
| 5           | 130-1305           | 3           | Nozzle Holder Kit          | 110         | 98-7860            | 3           | Washer-Adjusting (1.400MM) |
| 10          | 130-1303           | 3           | Nozzle Holder ASM          | 110         | 98-7861            | 3           | Washer-Adjusting (1.425MM) |
| 20          | 121-2411           | 3           | Nut                        | 110         | 98-7862            | 3           | Washer-Adjusting (1.450MM) |
| 30          | 99-8302            | 3           | Washer-Adjusting           | 110         | 98-7863            | 3           | Washer-Adjusting (1.475MM) |
| 40          | 99-8303            | 3           | Spring-Nozzle              | 110         | 98-7864            | 3           | Washer-Adjusting (1.500MM) |
| 50          | 99-8304            | 3           | Spacer-Distance            | 110         | 98-7865            | 3           | Washer-Adjusting (1.525MM) |
| 60          | 99-8305            | 3           | Rod-Push                   | 110         | 98-7866            | 3           | Washer-Adjusting (1.550MM) |
| 70          | 130-1304           | 3           | Nut-Nozzle                 | 110         | 98-7867            | 3           | Washer-Adjusting (1.575MM) |
| 80          | 99-8307            | 3           | Washer-Plain               | 110         | 98-7868            | 3           | Washer-Adjusting (1.600MM) |
| 90          | 130-1497           | 3           | Nozzle-Piece               | 110         | 98-7869            | 3           | Washer-Adjusting (1.625MM) |
| 100         | 98-9448            | 3           | Adjusting Washer ASM       | 110         | 98-7870            | 3           | Washer-Adjusting (1.650MM) |
| 110         | 98-7642            | 3           | Washer-Adjusting (0.900Mm) | 110         | 98-7871            | 3           | Washer-Adjusting (1.675MM) |
| 110         | 98-7841            | 3           | Washer-Adjusting (0.925Mm) | 110         | 98-7872            | 3           | Washer-Adjusting (1.700MM) |
| 110         | 98-7842            | 3           | Washer-Adjusting (0.950Mm) | 110         | 98-7873            | 3           | Washer-Adjusting (1.725MM) |
| 110         | 98-7843            | 3           | Washer-Adjusting (0.975Mm) | 110         | 98-7874            | 3           | Washer-Adjusting (1.750MM) |
| 110         | 98-7844            | 3           | Washer-Adjusting (1.000Mm) | 110         | 98-7875            | 3           | Washer-Adjusting (1.775MM) |
| 110         | 98-7845            | 3           | Washer-Adjusting (1.025Mm) | 110         | 98-7876            | 3           | Washer-Adjusting (1.800MM) |
| 110         | 98-7846            | 3           | Washer-Adjusting (1.050Mm) | 110         | 98-7877            | 3           | Washer-Adjusting (1.825MM) |
| 110         | 98-7847            | 3           | Washer-Adjusting (1.075MM) | 110         | 98-7878            | 3           | Washer-Adjusting (1.850MM) |
| 110         | 98-7848            | 3           | Washer-Adjusting (1.100MM) | 110         | 98-7879            | 3           | Washer-Adjusting (1.875MM) |
| 110         | 98-7849            | 3           | Washer-Adjusting (1.125MM) | 110         | 98-7880            | 3           | Washer-Adjusting (1.900MM) |
| 110         | 98-7850            | 3           | Washer-Adjusting (1.150MM) | 110         | 98-7881            | 3           | Washer-Adjusting (1.925MM) |
| 110         | 98-7851            | 3           | Washer-Adjusting (1.175MM) | 110         | 98-7882            | 3           | Washer-Adjusting (1.950MM) |
| 110         | 98-7852            | 3           | Washer-Adjusting (1.200MM) | 120         | 98-7676            | 3           | Gasket                     |
| 110         | 98-7853            | 3           | Washer-Adjusting (1.225MM) | 130         | 98-7677            | 3           | Seal-Heat                  |
| 110         | 98-7854            | 3           | Washer-Adjusting (1.250MM) |             |                    |             |                            |
| 110         | 98-7855            | 3           | Washer-Adjusting (1.275MM) |             |                    |             |                            |
| 110         | 98-7856            | 3           | Washer-Adjusting 1.300MM)  |             |                    |             |                            |
| 110         | 98-7857            | 3           | Washer-Adjusting (1.325MM) |             |                    |             |                            |
| 110         | 98-7858            | 3           | Washer-Adjusting (1.350MM) |             |                    |             |                            |
| 110         | 98-7859            | 3           | Washer-Adjusting (1.375MM) |             |                    |             |                            |

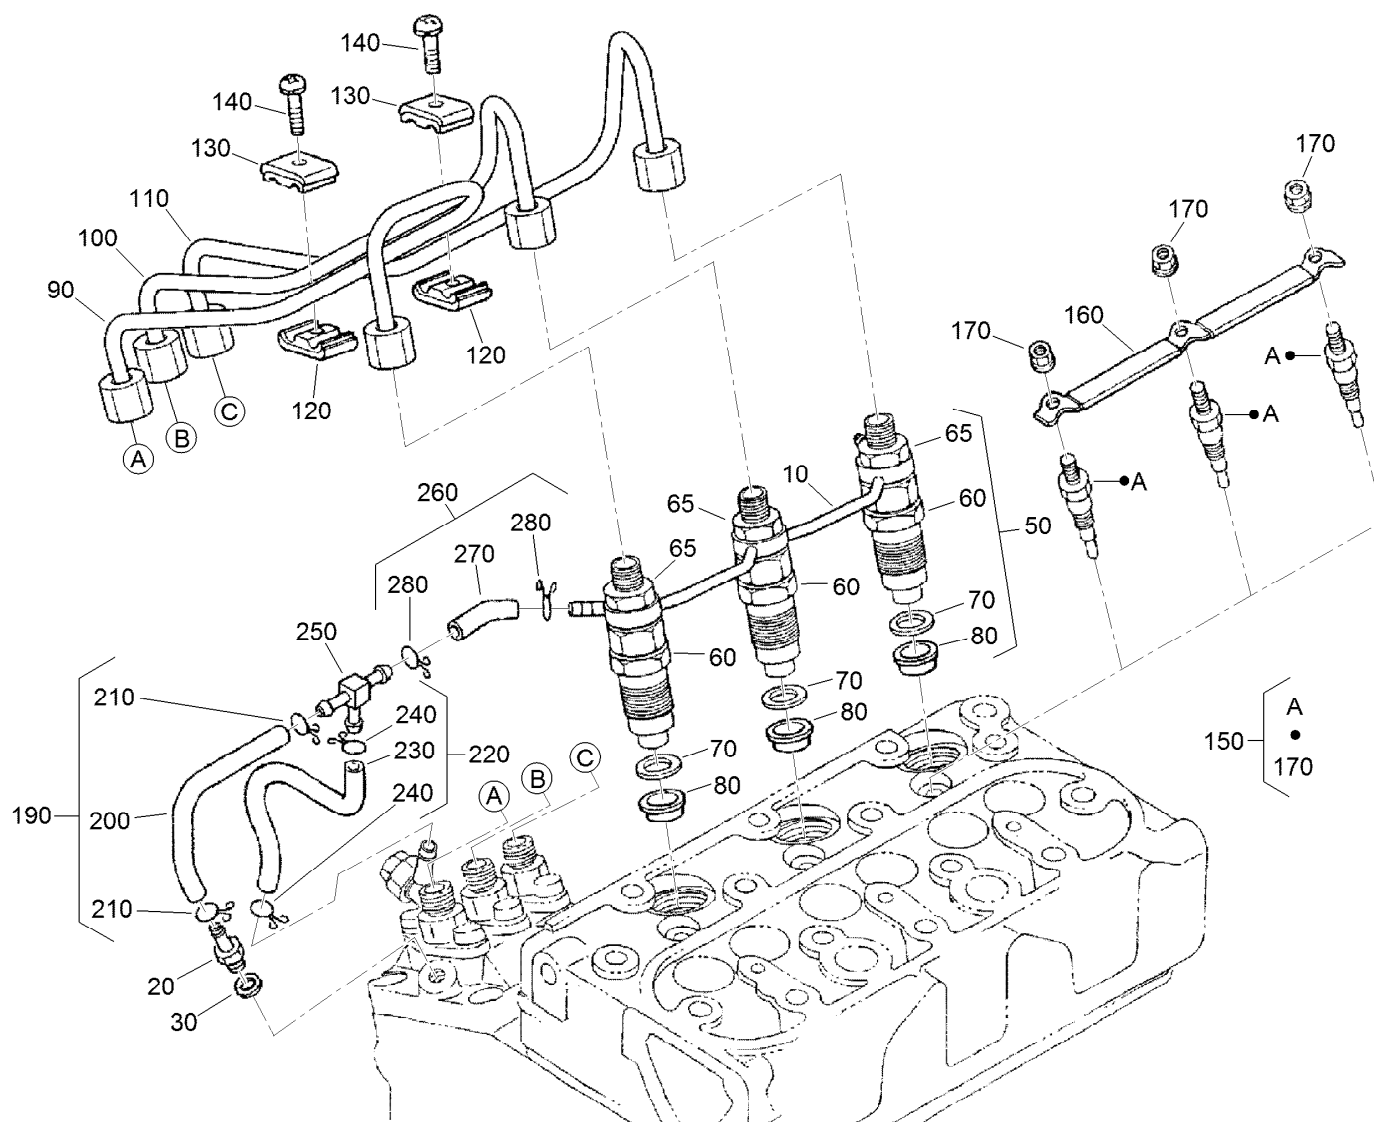

## Nozzle Holder and Glow Plug Assembly


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 10   | 110-3780    | 1    | Over Flow Pipe ASM |
| 20   | 98-9431     | 1    | Screw-Bleeder, Air |
| 30   | 98-7654     | 1    | Gasket             |
| 50   | 130-1305    | 3    | Nozzle Holder Kit  |
| 60   | 130-1303    | 3    | Nozzle Holder ASM  |
| 65   | 121-2411    | 3    | Nut                |
| 70   | 98-7676     | 3    | Gasket             |
| 80   | 98-7677     | 3    | Seal-Heat          |
| 90   | 130-1522    | 1    | Pipe-Injection     |
| 100  | 130-1523    | 1    | Pipe-Injection     |
| 110  | 130-1541    | 1    | Pipe-Injection     |
| 120  | 98-7682     | 2    | Clamp-Pipe         |
| 130  | 98-7683     | 2    | Clamp-Pipe         |
| 140  | 98-7684     | 2    | Screw (W/Washer)   |
 
| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 150  | 130-1411    | 3    | Plug-Glow       |
| 160  | 110-3784    | 1    | Cord-Plug, Glow |
| 170  | 99-8377     | 3    | Nut-Flange      |
| 190  | 110-3785    | 1    | Fuel Tube ASM   |
| 200  | 110-3786    | 1    | Tube-Fuel       |
| 210  | 98-7671     | 2    | Clip-Pipe       |
| 220  | 110-3787    | 1    | Fuel Tube ASM   |
| 230  | 110-3788    | 1    | Tube-Fuel       |
| 240  | 98-7671     | 2    | Clip-Pipe       |
| 250  | 112-8338    | 1    | Pipe-Joint, T   |
| 260  | 110-3790    | 1    | Fuel Tube ASM   |
| 270  | 110-3791    | 1    | Tube-Fuel       |
| 280  | 98-7671     | 2    | Clip-Pipe       |

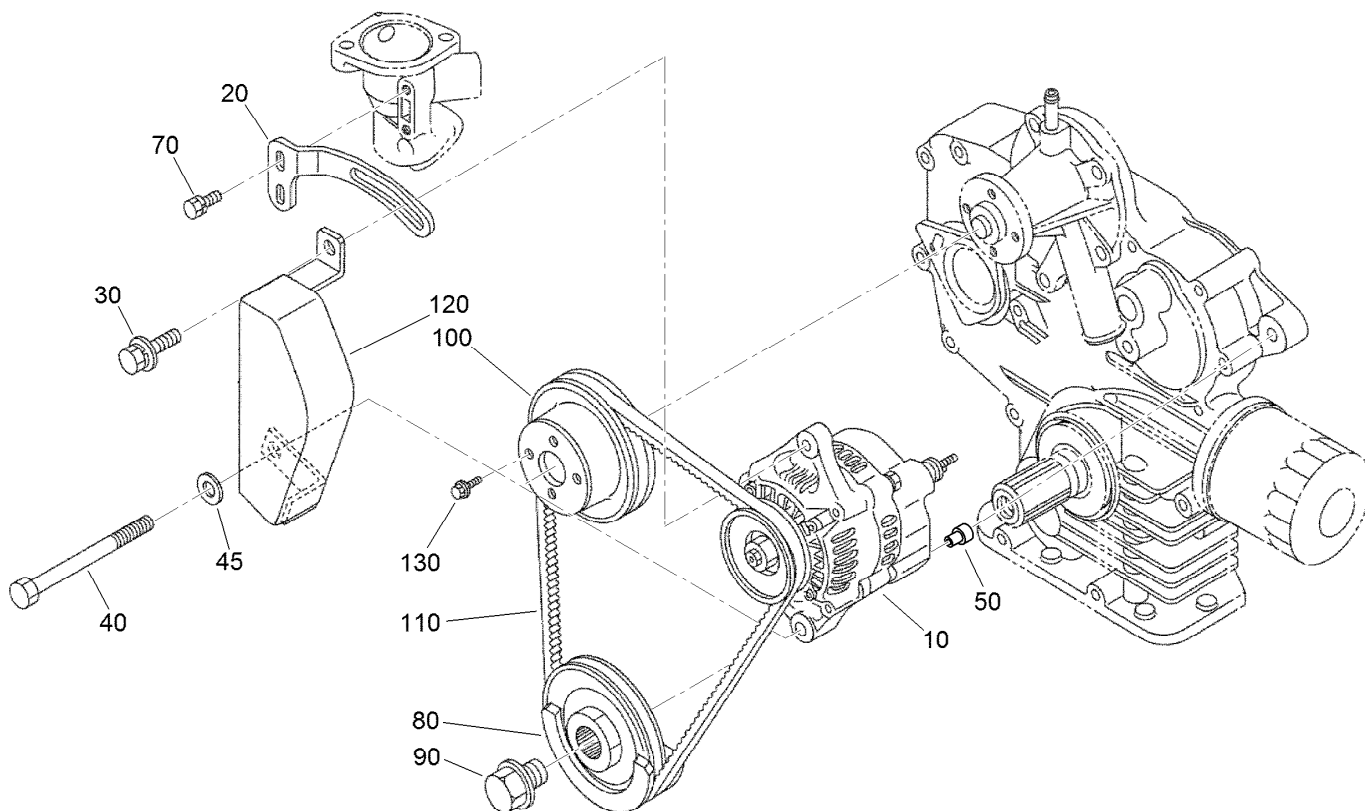

## Alternator and Pulley Assembly

 
| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 117-5541    | 1    | 60 Amp Alternator ASM |
| 20   | 117-0314    | 1    | Stay-Alternator       |
| 30   | 121-3800    | 1    | Bolt-Sems             |
| 40   | 110-3793    | 1    | Bolt                  |
| 45   | 120-5832    | 1    | Washer-Plain          |
| 50   | 110-3794    | 1    | Collar                |
| 70   | 98-7692     | 2    | Bolt                  |
| 80   | 125-9055    | 1    | Pulley-Drive, Fan     |
| 90   | 100-1978    | 1    | Bolt                  |
| 100  | 100-1921    | 1    | Pulley-Fan            |
| 110  | 110-3796    | 1    | Belt-V                |
| 120  | 117-0315    | 1    | Cover-Alternator      |
| 130  | 99-8363     | 4    | Bolt-Flange           |

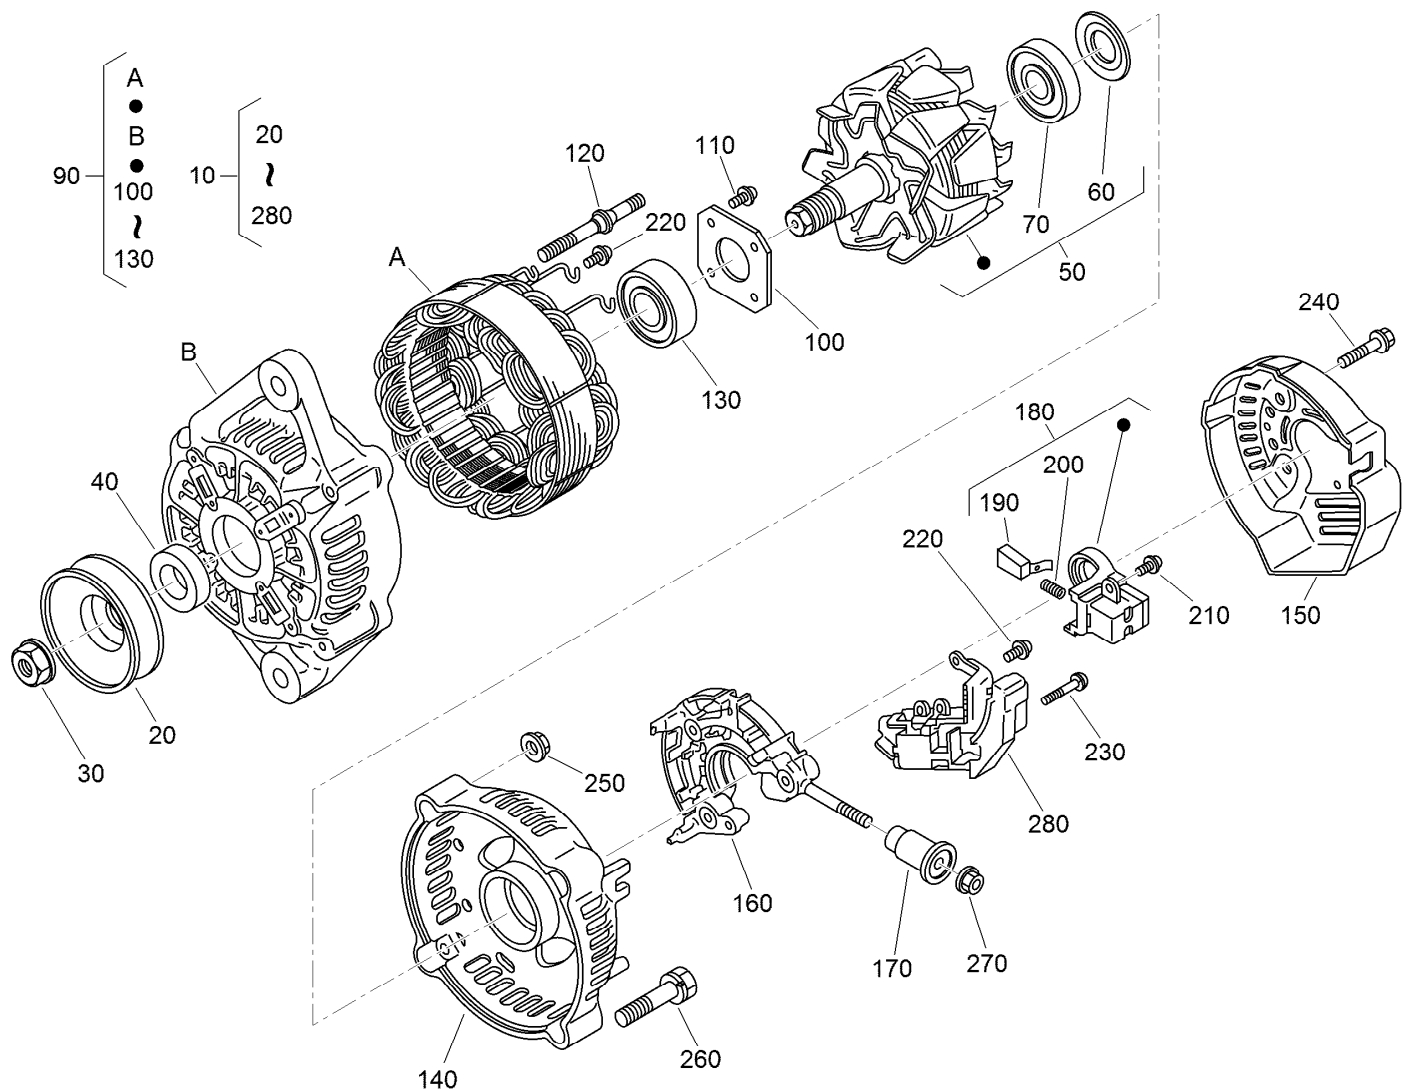

## Alternator Components Assembly


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 10   | 117-5541    | 1    | 60 Amp Alternator ASM |
| 20   | 98-9453     | 1    | Pulley-Dynamo         |
| 30   | 98-7708     | 1    | Nut                   |
| 40   | 98-7709     | 1    | Collar                |
| 50   | 117-0317    | 1    | Rotor ASM             |
| 60   | 98-7711     | 1    | Cover-Bearing         |
| 70   | 107-0138    | 1    | Bearing-Ball          |
| 90   | 117-0316    | 1    | Drive End Frame ASM   |
| 100  | 98-7715     | 1    | Plate-Retainer        |
| 110  | 98-7716     | 4    | Screw-Head, Round     |
| 120  | 98-7717     | 2    | Bolt-Through          |
| 130  | 107-0137    | 1    | Bearing-Ball          |
| 140  | 117-0318    | 1    | *obs* Frame-End       |
| 150  | 117-0320    | 1    | Cover-End             |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 160  | 117-0322    | 1    | Holder            |
| 170  | 117-0321    | 1    | Insulation-Brush  |
| 180  | 107-0141    | 1    | Brush Holder ASM  |
| 190  | 98-7724     | 2    | Brush             |
| 200  | 98-7725     | 2    | Spring-Brush      |
| 210  | 98-7727     | 6    | Screw-Head, Round |
| 220  | 98-7728     | 1    | Screw-Head, Round |
| 230  | 98-7726     | 2    | Screw-Head, Round |
| 240  | 98-7729     | 3    | Bolt              |
| 250  | 98-7730     | 2    | Nut               |
| 260  | 98-7731     | 2    | Bolt              |
| 270  | 98-7732     | 1    | Nut               |
| 280  | 117-0319    | 1    | Regulator ASM     |

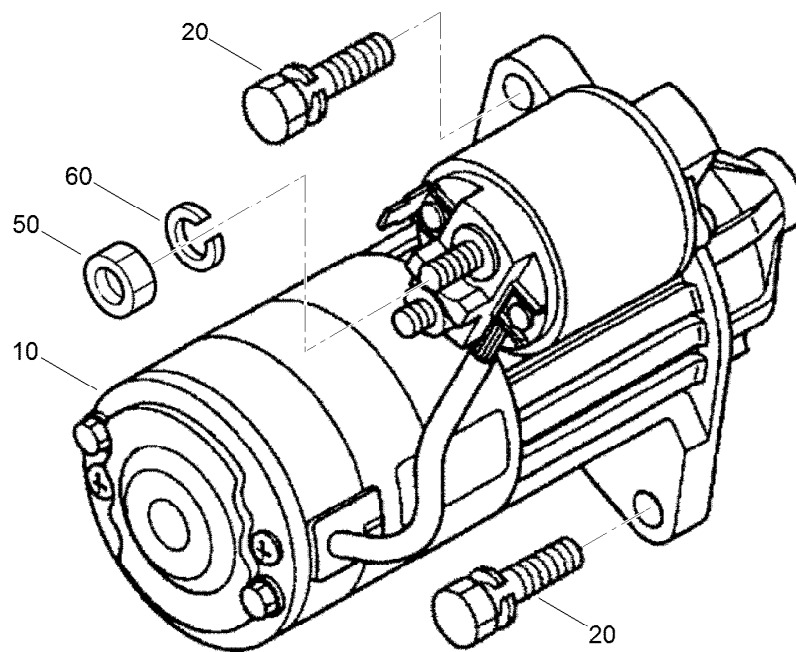

## Starter Assembly

 
| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 130-1294           | 1           | Starter ASM        |
| 20          | 98-7697            | 2           | Bolt               |
| 50          | 98-7534            | 1           | Nut                |
| 60          | 105-2893           | 1           | Washer-Spring      |

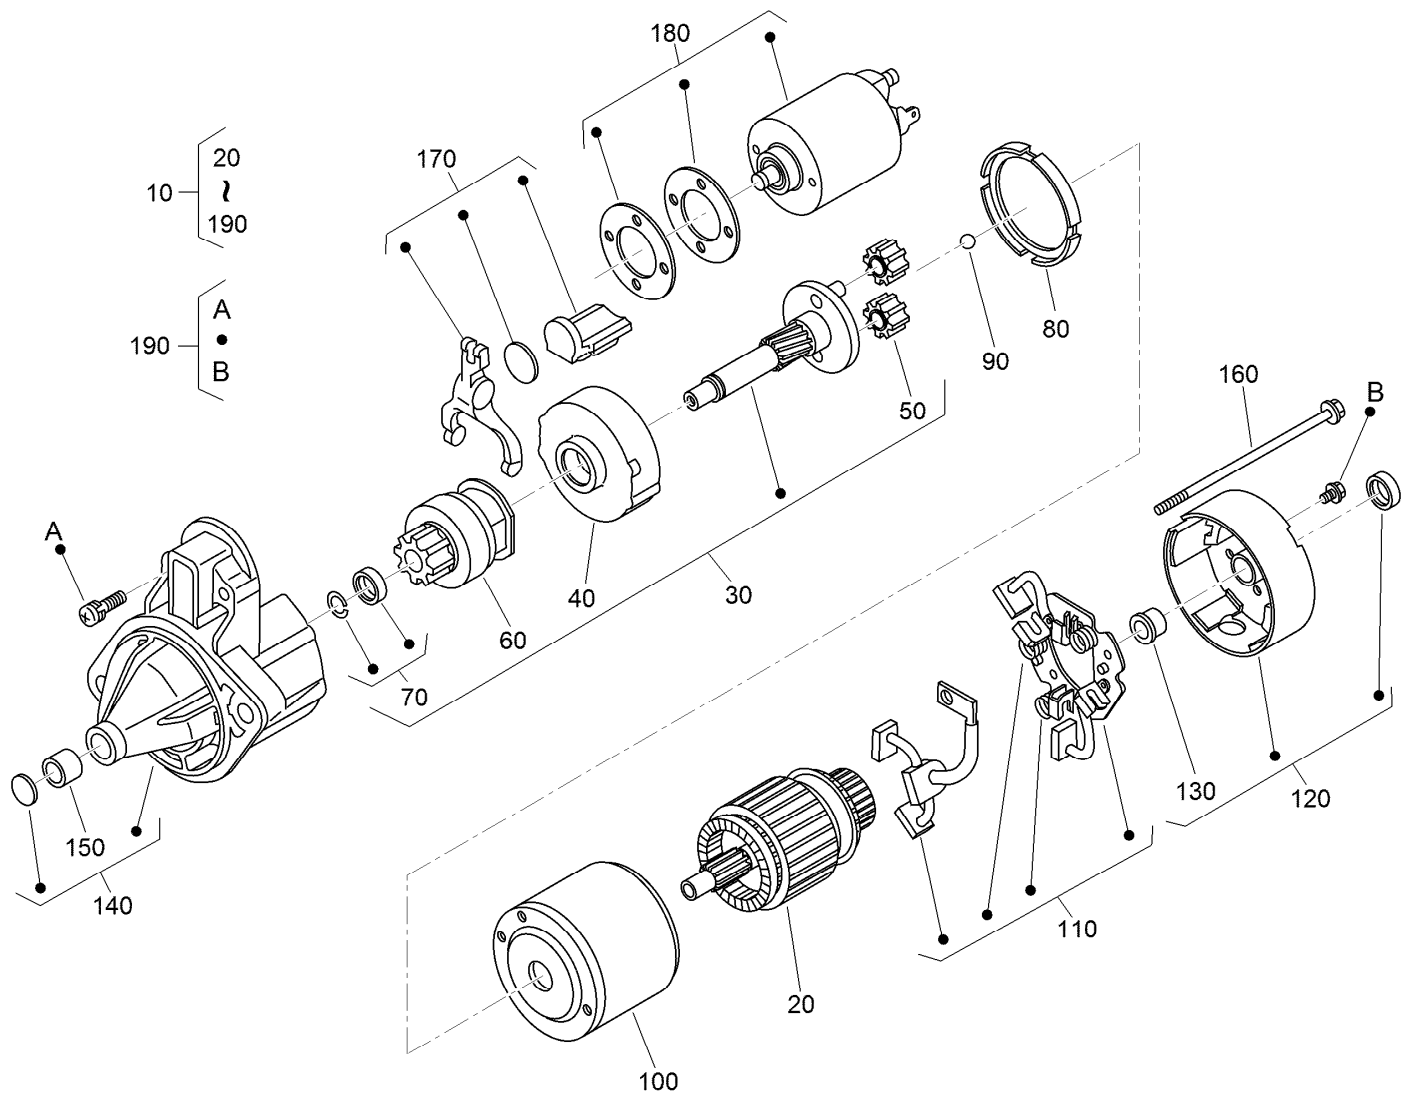

## Starter Component Assembly


| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 130-1294    | 1    | Starter ASM          |
| 20   | 110-3801    | 1    | Armature             |
| 30   | 110-3802    | 1    | Shaft ASM            |
| 40   | 120-3142    | 1    | Gear-Internal        |
| 50   | 110-3804    | 3    | Gear-Planetary       |
| 60   | 110-3805    | 1    | Clutch-Running, Over |
| 70   | 110-3806    | 1    | Stopper              |
| 80   | 120-3143    | 1    | Gasket               |
| 90   | 110-3808    | 1    | Ball                 |
| 100  | 130-1295    | 1    | Yoke                 |
 
| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 110  | 110-3810    | 1    | Brush Holder ASM  |
| 120  | 110-3811    | 1    | Rear Bracket ASM  |
| 130  | 110-3812    | 1    | Bushing           |
| 140  | 110-3813    | 1    | Front Bracket ASM |
| 150  | 110-3814    | 1    | Bushing           |
| 160  | 110-3815    | 2    | Bolt              |
| 170  | 110-3816    | 1    | Fork Lever ASM    |
| 180  | 125-9099    | 1    | Switch-Magnetic   |
| 190  | 110-3818    | 2    | Screws (Set Of 4) |

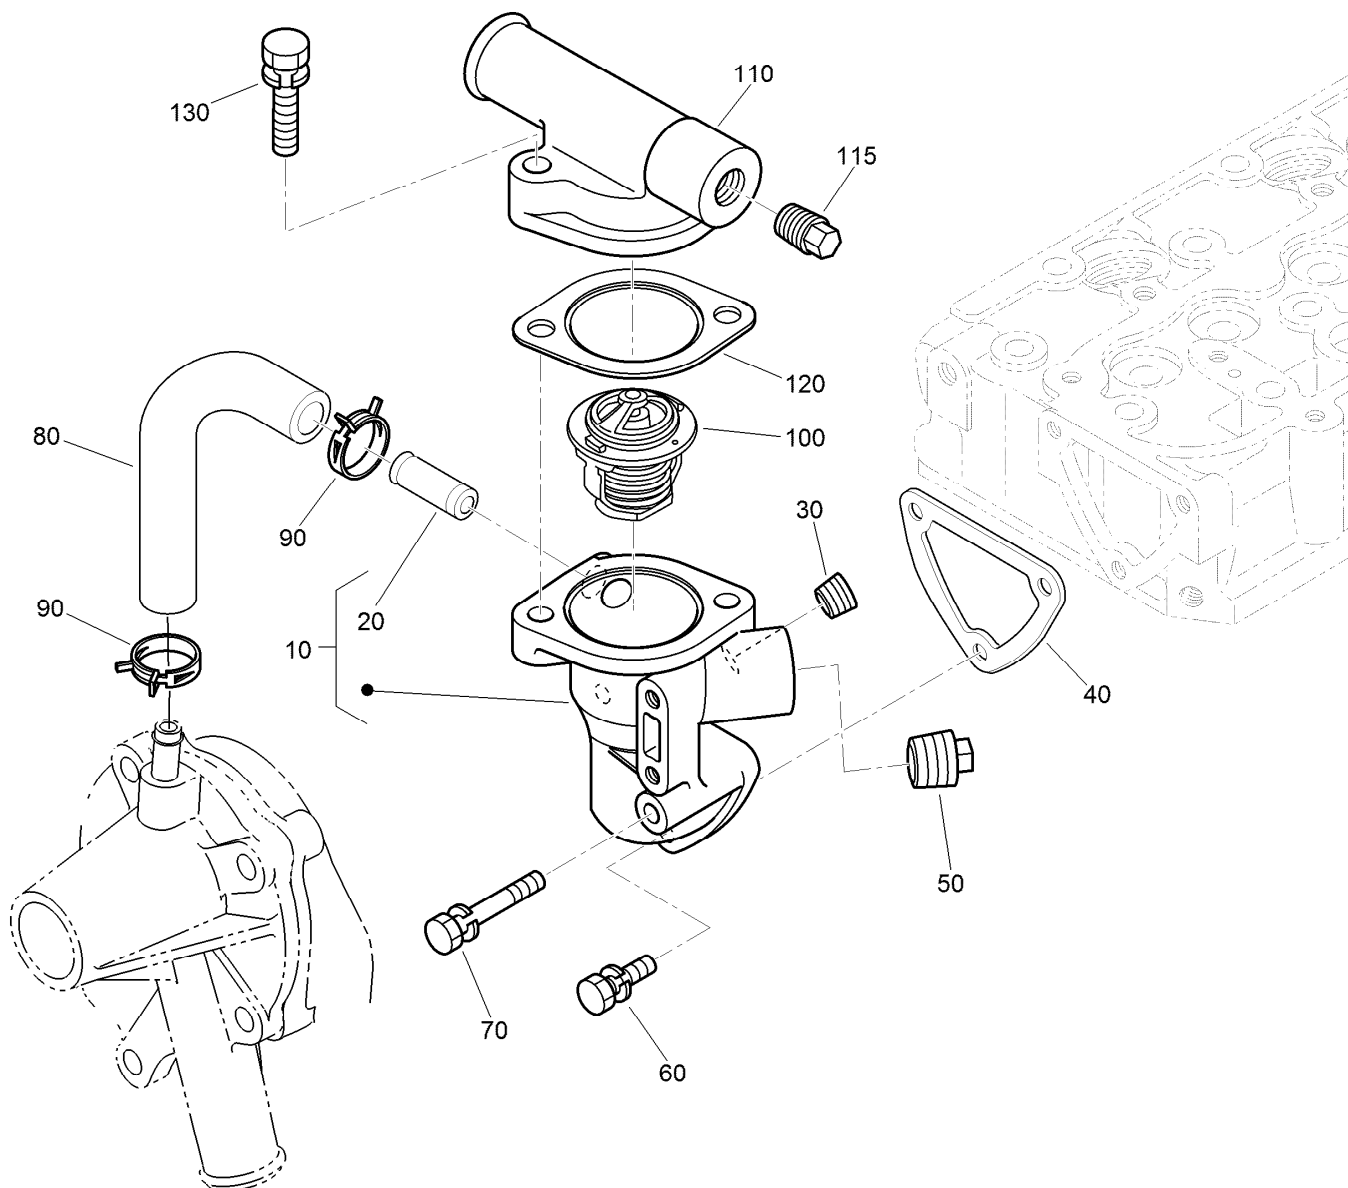


## Water Flange and Thermostat Assembly
 
| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 10   | 110-3819    | 1    | Water Flange ASM     |
| 20   | 98-9580     | 1    | Pipe-Return, Water   |
| 30   | 98-9444     | 1    | Plug                 |
| 40   | 110-3820    | 1    | Gasket-Flange, Water |
| 50   | 110-3821    | 1    | Plug                 |
| 60   | 98-7692     | 2    | Bolt                 |
| 70   | 125-9063    | 1    | Bolt-Sems            |
| 80   | 110-3822    | 1    | Pipe-Return, Water   |
| 90   | 125-9078    | 2    | Clamp-Hose           |
| 100  | 98-7778     | 1    | Thermostat ASM       |
| 110  | 120-7575    | 1    | Cover-Thermostat     |
| 115  | 125-9079    | 1    | Plug                 |
| 120  | 105-3748    | 1    | Gasket-Thermostat    |
| 130  | 98-7777     | 2    | Bolt                 |

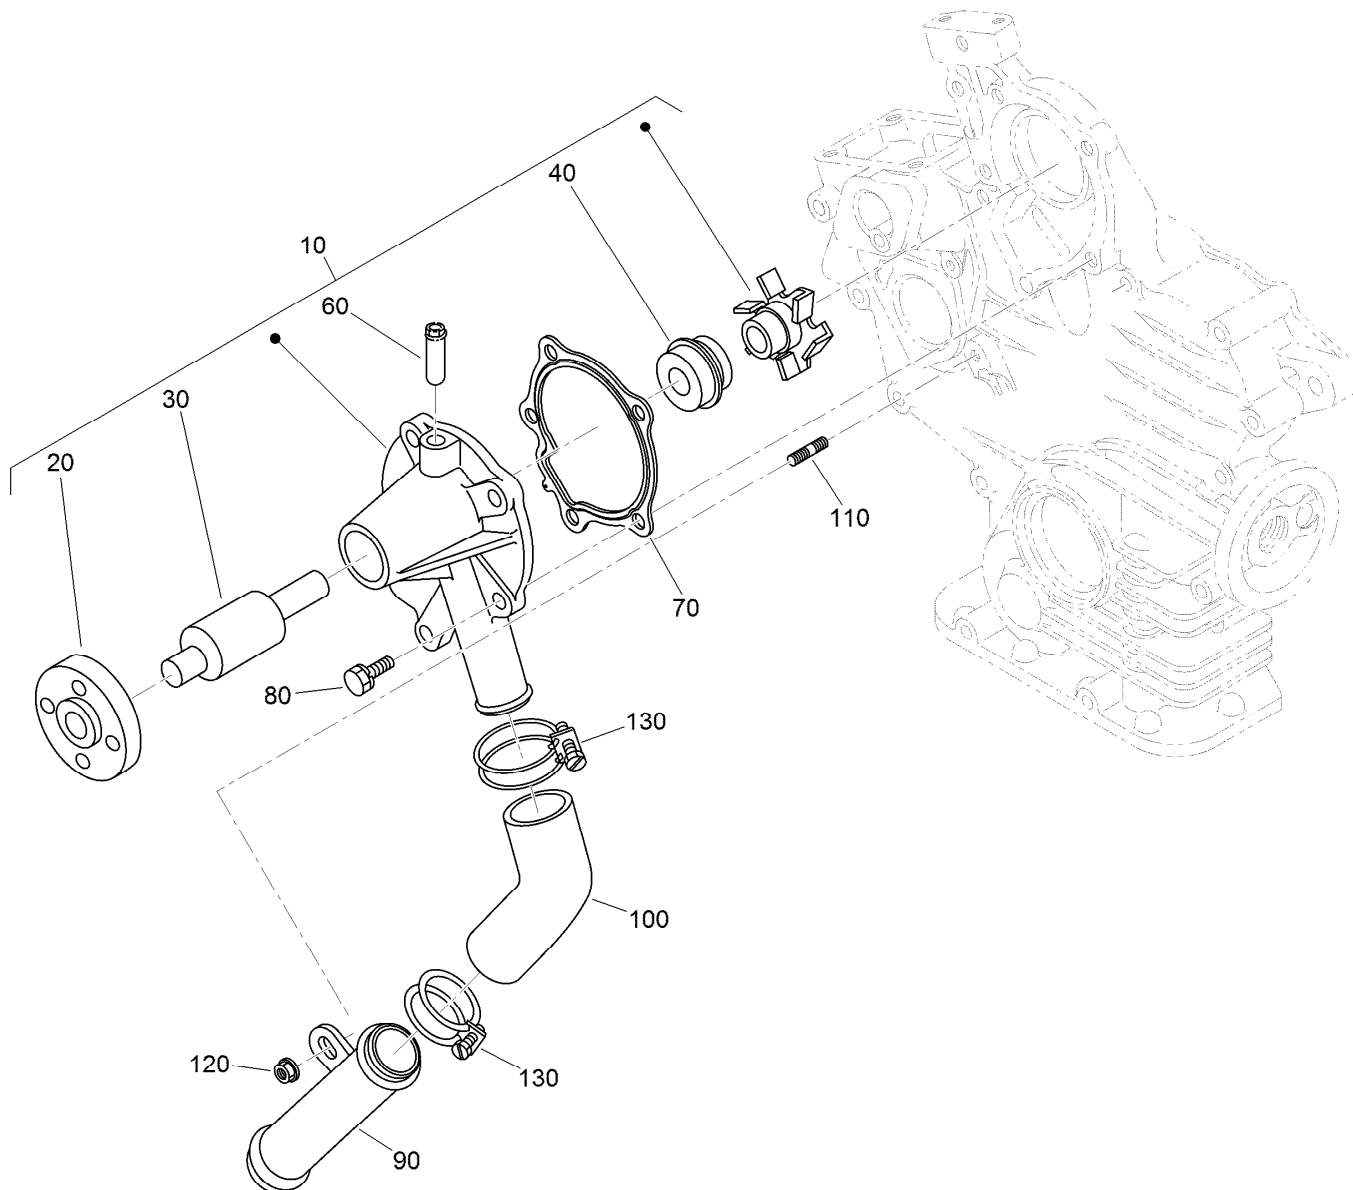

## Water Pump and Water Pipe Assembly

 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 10   | 110-3824    | 1    | Water Pump ASM      |
| 20   | 125-9081    | 1    | Flange-Pump, Water  |
| 30   | 100-1934    | 1    | Bearing-Ball        |
| 40   | 99-3518     | 1    | Water Pump Seal ASM |
| 60   | 100-1932    | 1    | Pipe-Return, Water  |
| 70   | 117-0330    | 1    | Gasket-Pump, Water  |
| 80   | 100-1750    | 4    | Bolt                |
| 90   | 100-1918    | 1    | Pipe-Water          |
| 100  | 110-3827    | 1    | Pipe-Water          |
| 110  | 100-1924    | 1    | Stud                |
| 120  | 100-2203    | 1    | Nut-Flange          |
| 130  | 110-3828    | 2    | Band-Pipe           |

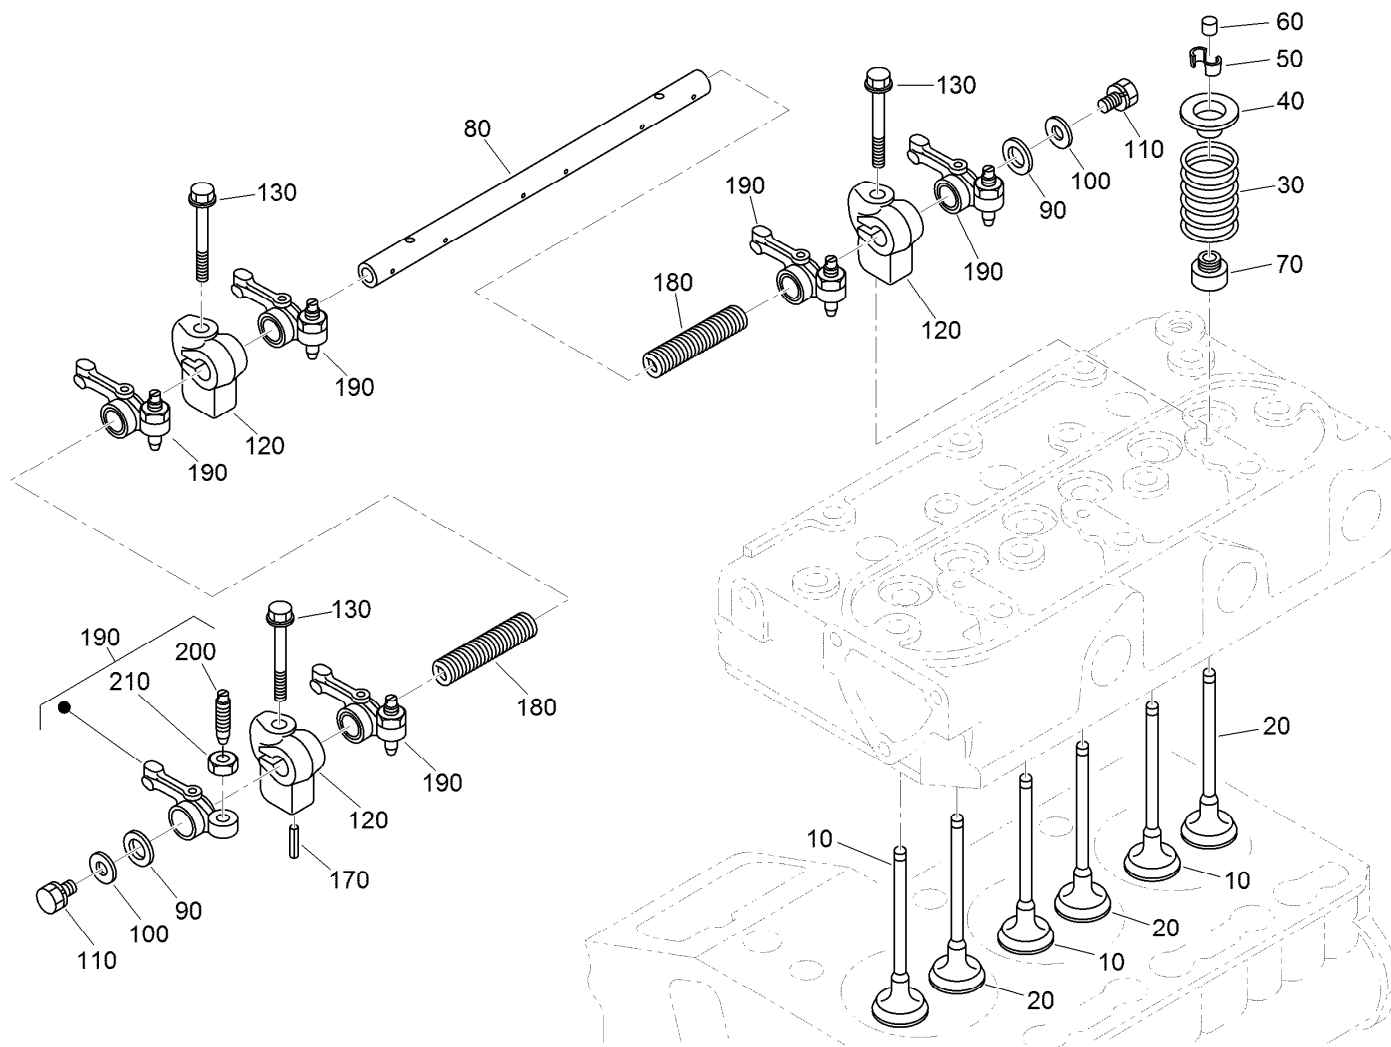

## Valve and Rocker Arm Assembly


| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 10   | 112-2514    | 3    | Valve-Inlet            |
| 20   | 112-2515    | 3    | Valve-Exhaust          |
| 30   | 100-1823    | 6    | Spring-Valve           |
| 40   | 100-1825    | 6    | Retainer-Spring, Valve |
| 50   | 120-3136    | 6    | Collet-Spring, Valve   |
| 60   | 100-2155    | 6    | Cap-Valve              |
| 70   | 100-1797    | 6    | Seal-Stem, Valve       |
| 80   | 112-8341    | 1    | Shaft-Arm, Rocker      |
| 90   | 100-2044    | 2    | Washer                 |
 
| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 100  | 110-3832    | 2    | Washer-Plain        |
| 110  | 100-1762    | 2    | Bolt                |
| 120  | 110-3833    | 3    | Bracket-Arm, Rocker |
| 130  | 110-3834    | 3    | Bolt-Flange         |
| 170  | 98-7602     | 1    | Pin-Spring          |
| 180  | 112-8342    | 2    | Spring              |
| 190  | 100-1884    | 6    | Rocker Arm ASM      |
| 200  | 100-1885    | 6    | Screw-Adjusting     |
| 210  | 100-1827    | 6    | Nut                 |

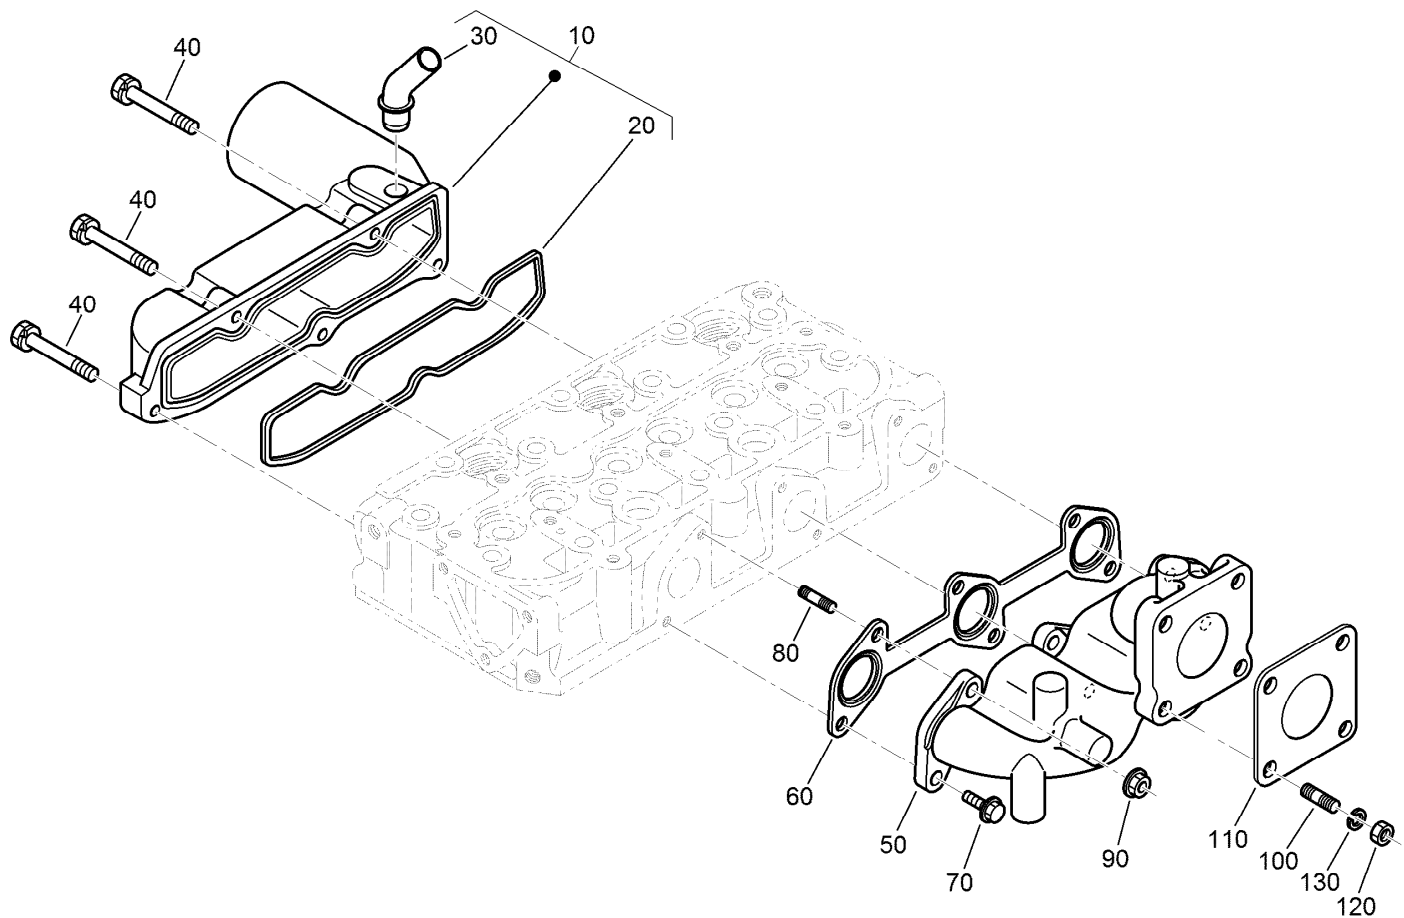

## Inlet and Exhaust Manifold Assembly
 
| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 10   | 120-3141    | 1    | Intake Manifold ASM      |
| 20   | 110-3838    | 1    | Gasket-Manifold, Intake  |
| 30   | 121-2417    | 1    | Pipe-Breather            |
| 40   | 98-9352     | 5    | Bolt                     |
| 50   | 110-3839    | 1    | Manifold-Exhaust         |
| 60   | 110-3840    | 1    | Gasket-Manifold, Exhaust |
| 70   | 130-1514    | 3    | Bolt-Ubs                 |
| 80   | 130-1156    | 3    | Bolt-Stud                |
| 90   | 100-1778    | 3    | Nut                      |
| 100  | 98-7769     | 4    | Stud                     |
| 110  | 99-8343     | 1    | Gasket-Muffler           |
| 120  | 98-7534     | 4    | Nut                      |
| 130  | 105-2893    | 4    | Washer-Spring            |

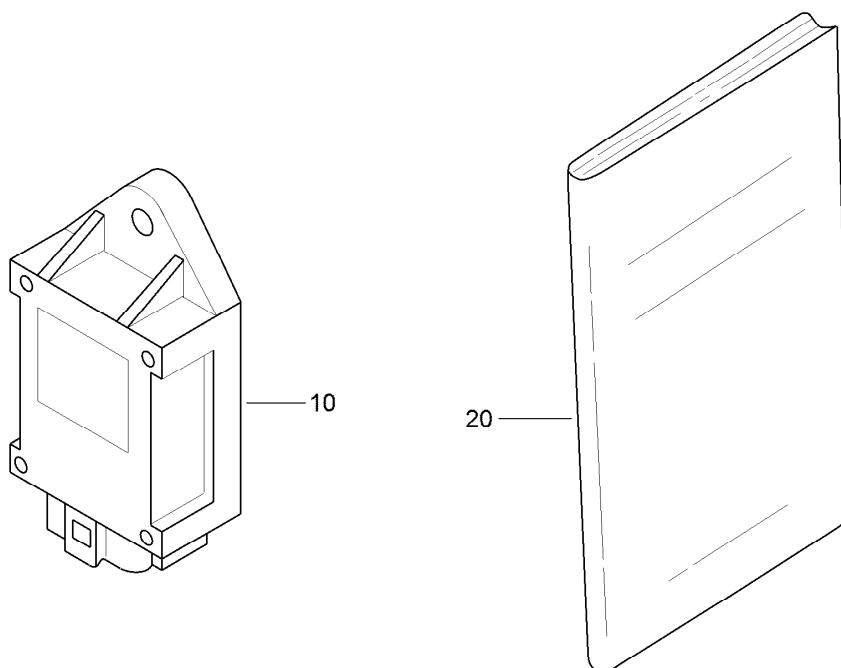

## Miscellaneous Engine Parts

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 98-7611            | 1           | Controller-Glow    |
| 20          | 130-1513           | 1           | Manual-Operator    |

# Attachments and Accessories

## For 07387TC Workman HDX-D 4-Wheel Drive Utility Vehicle with Bed

| Product Name                                              | Model/Part |
|-----------------------------------------------------------|------------|
| Pro Sweep 5200 Turf Sweeper .....                         | 07066      |
| Full Area Flatbed .....                                   | 07301      |
| Full Area Flatbed Side Kit .....                          | 07302      |
| Fold Down Side Kit .....                                  | 07303      |
| High-Flow Hydraulic Kit .....                             | 07316      |
| 2/3 Area Flatbed .....                                    | 07321      |
| 2/3 Area Flatbed Side Kit .....                           | 07322      |
| Bed Liner .....                                           | 07331      |
| Cab .....                                                 | 07339      |
| 1/3 Area Flatbed .....                                    | 07341      |
| 1/3 Area Platform Lift .....                              | 07347      |
| Heater Kit.....                                           | 07349      |
| Canopy .....                                              | 07372      |
| Windshield .....                                          | 07373      |
| Cab Door Kit.....                                         | 07375      |
| Solid Window Cab Door Kit.....                            | 07376      |
| 4 Post Roll-Over Protection System.....                   | 07378      |
| Rear PTO Kit .....                                        | 07419      |
| Hand Throttle Kit.....                                    | 07420      |
| Synthetic Turf Conditioner, Tow-Behind Accessory.....     | 08791      |
| ProCore Processor .....                                   | 09749      |
| Backup Alarm Kit .....                                    | 107-8037   |
| Premium ATF (Drum).....                                   | 108-1185   |
| Premium ATF (Pail) .....                                  | 108-1186   |
| Premium All Purpose Grease (Tube) .....                   | 108-1190   |
| Remote Hydraulics Manifold Kit.....                       | 110-2626   |
| Tire-Rear, 24x13-12 .....                                 | 110-5132   |
| Spark Arrestor Kit .....                                  | 112-1688   |
| Wheel-12in x 8.0in .....                                  | 114-8260   |
| Horn Kit.....                                             | 115-7825   |
| Side Mirror Kit.....                                      | 115-7849   |
| Roll-Over Protection System Signal Kit.....               | 117-4825   |
| Worklight Kit .....                                       | 117-4827   |
| Remote Hydraulic Float Kit .....                          | 117-4828   |
| Cab Mirror Kit.....                                       | 117-4830   |
| Receiver Hitch Kit .....                                  | 117-4831   |
| Trailer Signal Kit .....                                  | 117-4836   |
| 24x13-12 Tire and Wheel ASM .....                         | 117-4838   |
| Manual 4-Wheel Drive Control Kit.....                     | 119-0817   |
| Canopy for Four-Post Roll-Over Protection System Kit..... | 119-9457   |
| Road Light and Homologation Kit .....                     | 120-5030   |
| Brake and Signal Light Kit.....                           | 120-5045   |
| High Air Intake Kit .....                                 | 121-6285   |
| Front Differential Interrupter Kit.....                   | 121-6337   |
| Trailer Brake Kit .....                                   | 125-0123   |
| Tailpipe Extension Kit.....                               | 127-7397   |

## Attachments and Accessories (continued)

|                                                                      |          |
|----------------------------------------------------------------------|----------|
| 1/3 Area Cover Kit .....                                             | 127-8739 |
| Hitch ASM.....                                                       | 131-3462 |
| Multi Pro WM Turf Sprayer.....                                       | 41240    |
| Spreader Base Unit .....                                             | 41253    |
| Vicon Spreader.....                                                  | 41256    |
| Topdresser 1800.....                                                 | 44225    |
| Core Harvester Adapter Kit.....                                      | 44242    |
| Topdresser 2500.....                                                 | 44507    |
| Pro Force Debris Blower.....                                         | 44538    |
| Road-Ready Pro Force Debris Blower.....                              | 44539    |
| ProPass 200 Top Dresser with Twin Spinner and Wireless Control ..... | 44700    |
| ProPass 200 Top Dresser with Twin Spinner .....                      | 44701    |
| Automatic Tailgate Release Kit .....                                 | 92-1220  |
| Fuse Block.....                                                      | 92-2641  |
| PTO Over Running Clutch Kit .....                                    | 92-2655  |
| Topdresser 1800 Lift Kit .....                                       | 92-4452  |
| Tire-Rear, 23x8.50-12.....                                           | 98-2993  |
| Tire-Rear, Industrial .....                                          | 99-1091  |

**Notes:**

**Notes:**



**Count on it.**