



Count on it.

Parts Catalog

Full Weather Cab

**LT-F3000 Triple Flail Mower or LT3340 4
Wheel Drive Triple Reel Mower**

Model No. 02955—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Bracket and Decal Assembly 4

Bottle Bracket Assembly 6

Platform Seal Assembly 8

Platform Strengthening Assembly 10

Cab Frame Assembly 12

Top-Front Window Assembly 13

Bottom-Front Window Assembly 14

Rear Window Assembly 15

Left and Right Door Assembly 16

Left and Right Side Window Assembly 17

Front Support Assembly 18

Front Bracket Assembly 19

Cross Member Support Assembly 20

Radio Installation Assembly 21

Roof Assembly 22


Roof Insert Assembly 24

Air Conditioning Assembly 26

Cab Air Conditioning Assembly 28

Washer Pump and Bottle Assembly 30

Bracket and Decal Assembly

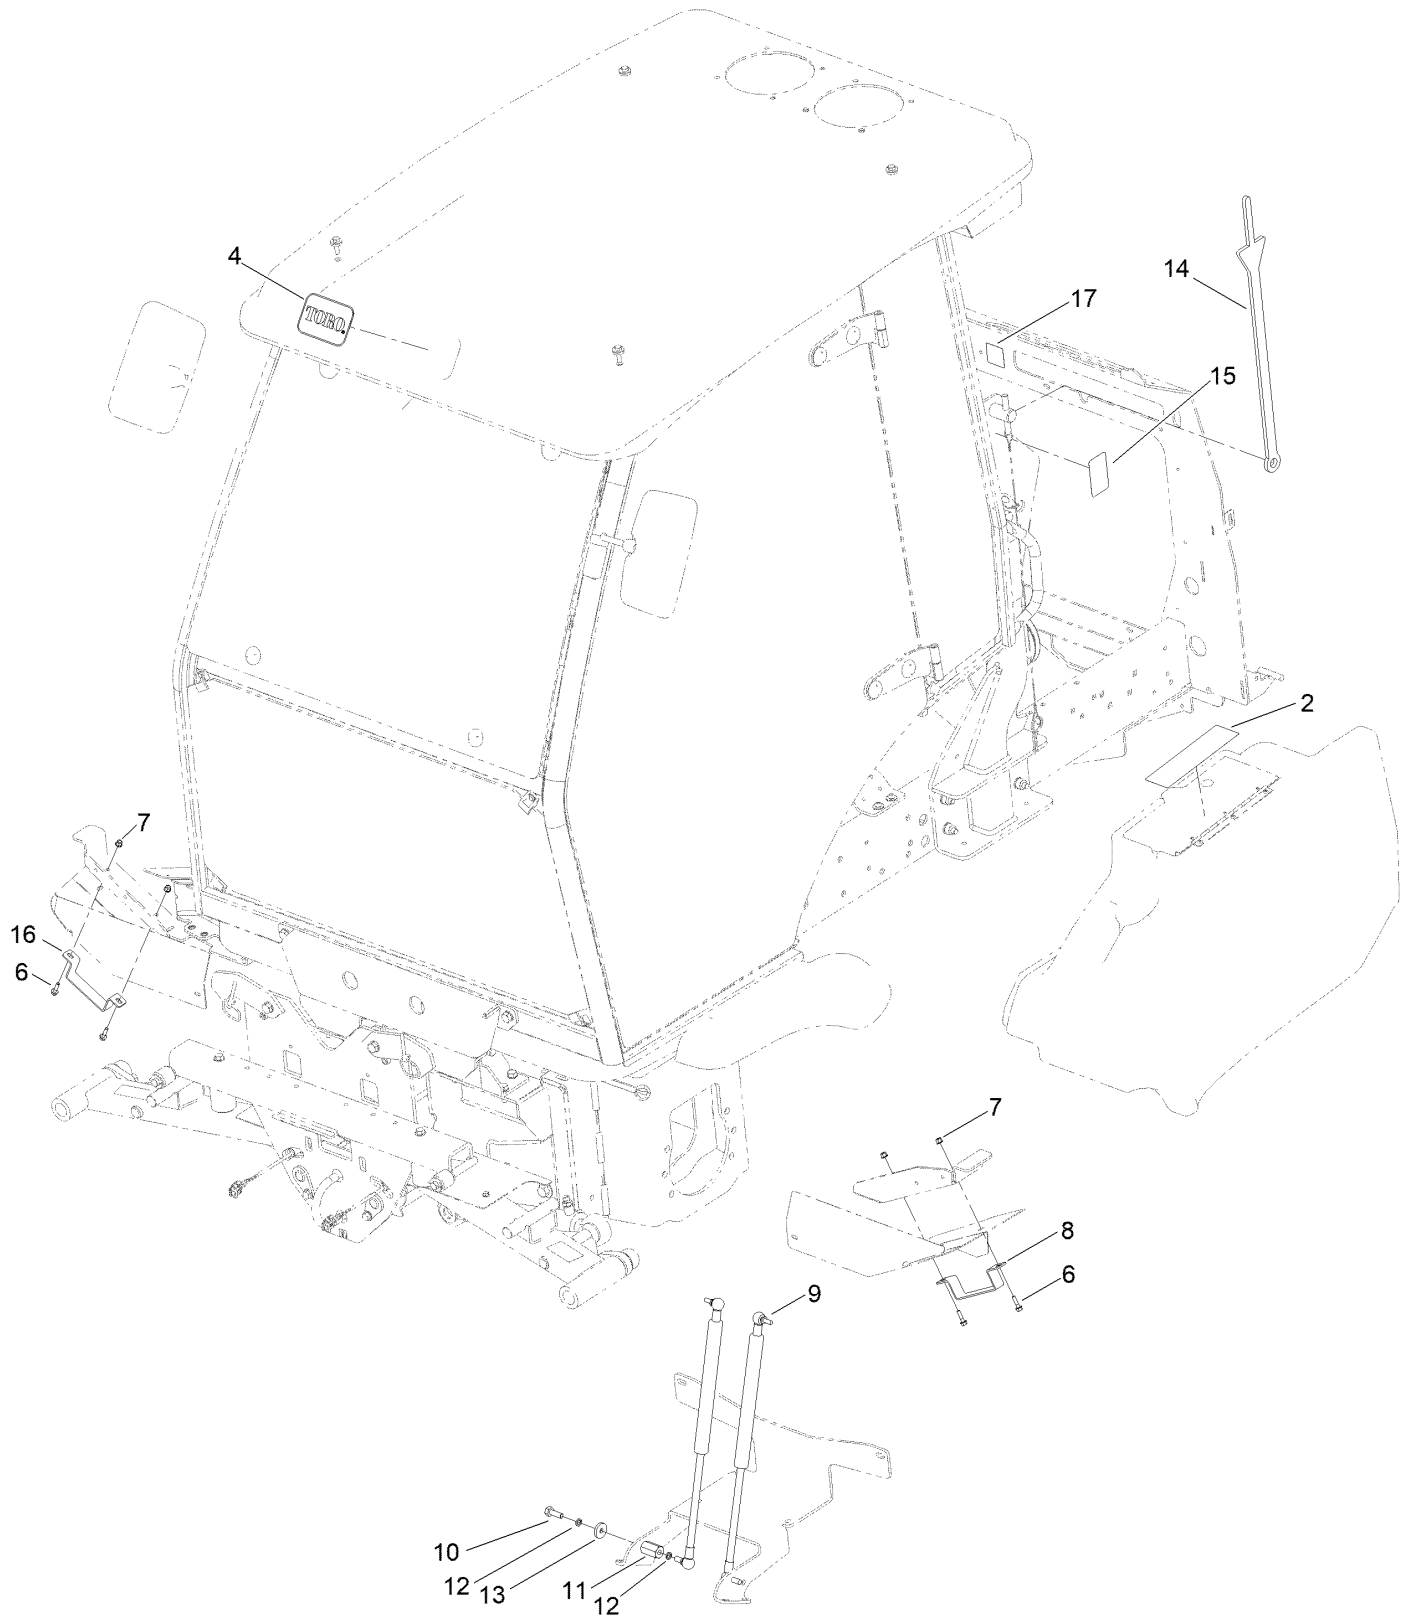


Bracket and Decal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	134-6005	1	Decal-Warning, Inclines	12	09480	2	Washer-Lock
4	67-1300	1	Decal	13	65-01-559	1	Washer-Space
6	134-3741	4	Screw-HHF	14	111-7030-01	1	Bracket-Support
7	134-3761	4	Nut-Flange, NI	15	111-9775	2	Decal-Stay, Safety
8	111-9772-03	1	Bracket-Hose	16	134-5150-03	1	Guide-Hose, Cab
9	134-6128	2	Gas-Strut	17	978004	1	Decal-Warning, Refrigerant
10	09392	1	Screw-HH	99	MU41223/U	2	Tubing-Convolute ●
11	111-7070	1	Bar-Hex, Threaded				

● Not illustrated

Bottle Bracket Assembly

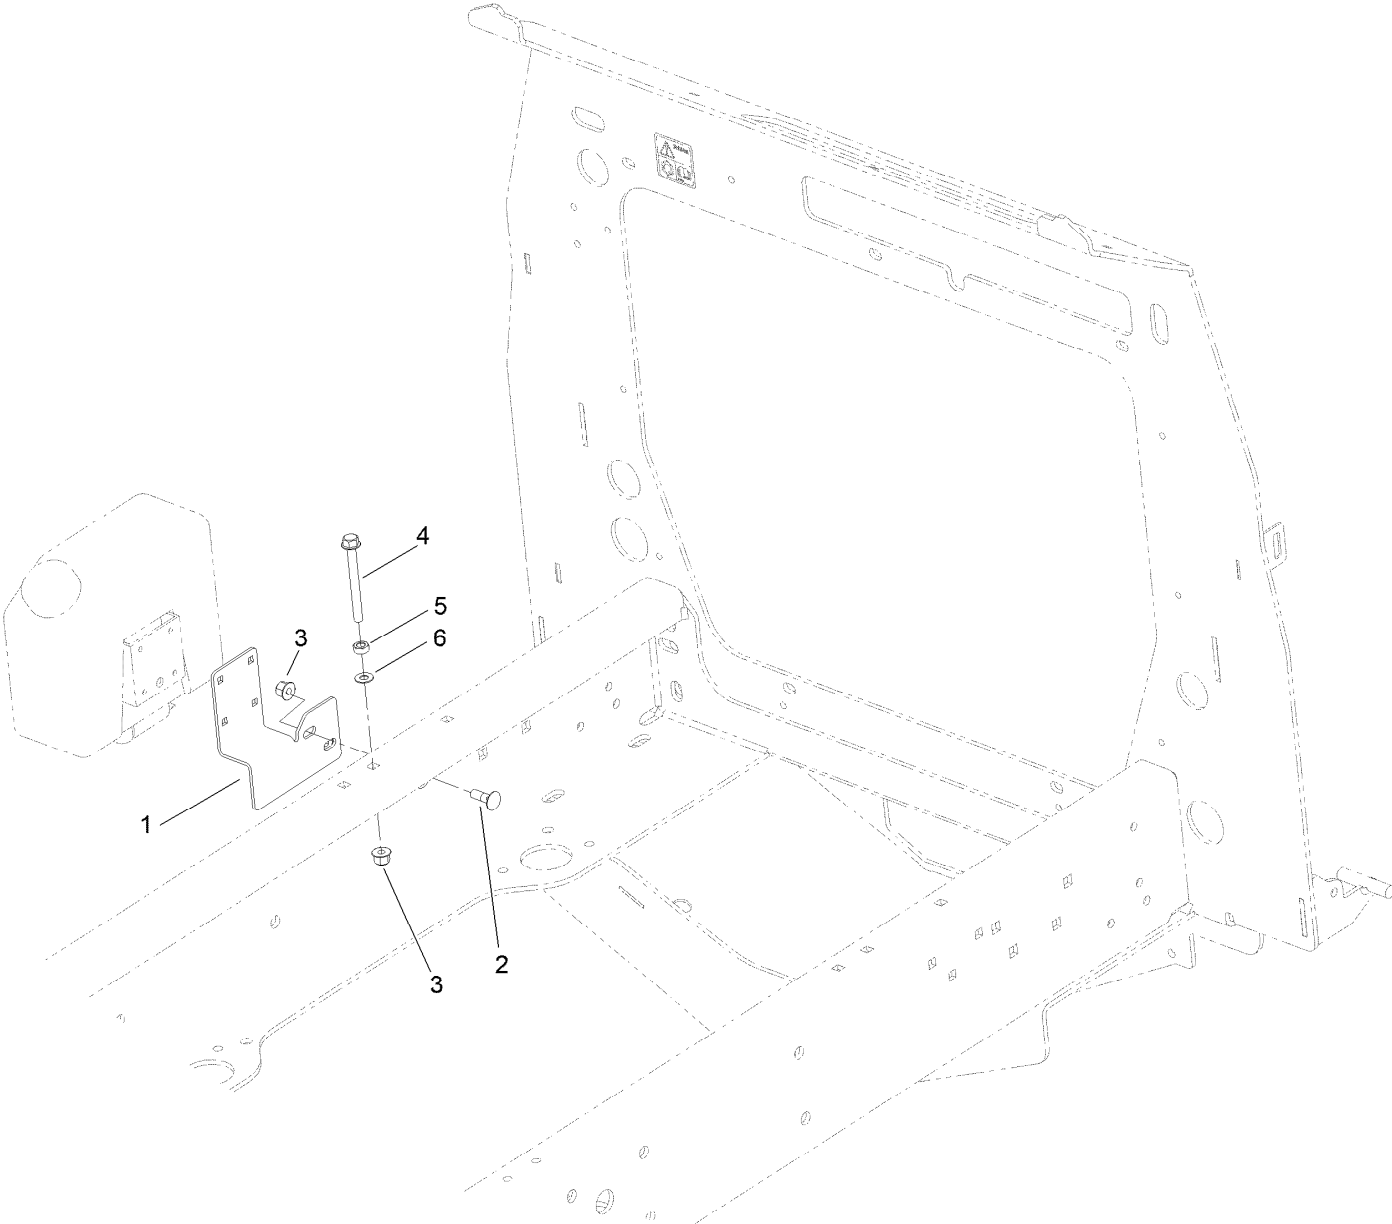


Bottle Bracket Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-5687-03	1	Bracket, Washer Bottle [black]
2	09373	2	Bolt-Coach
3	134-3762	3	Nut-Flange, NI

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	134-3750	1	Screw-HHF
5	ZNH1H000U	1	Nut-Hex
6	09475	1	Washer


Platform Seal Assembly

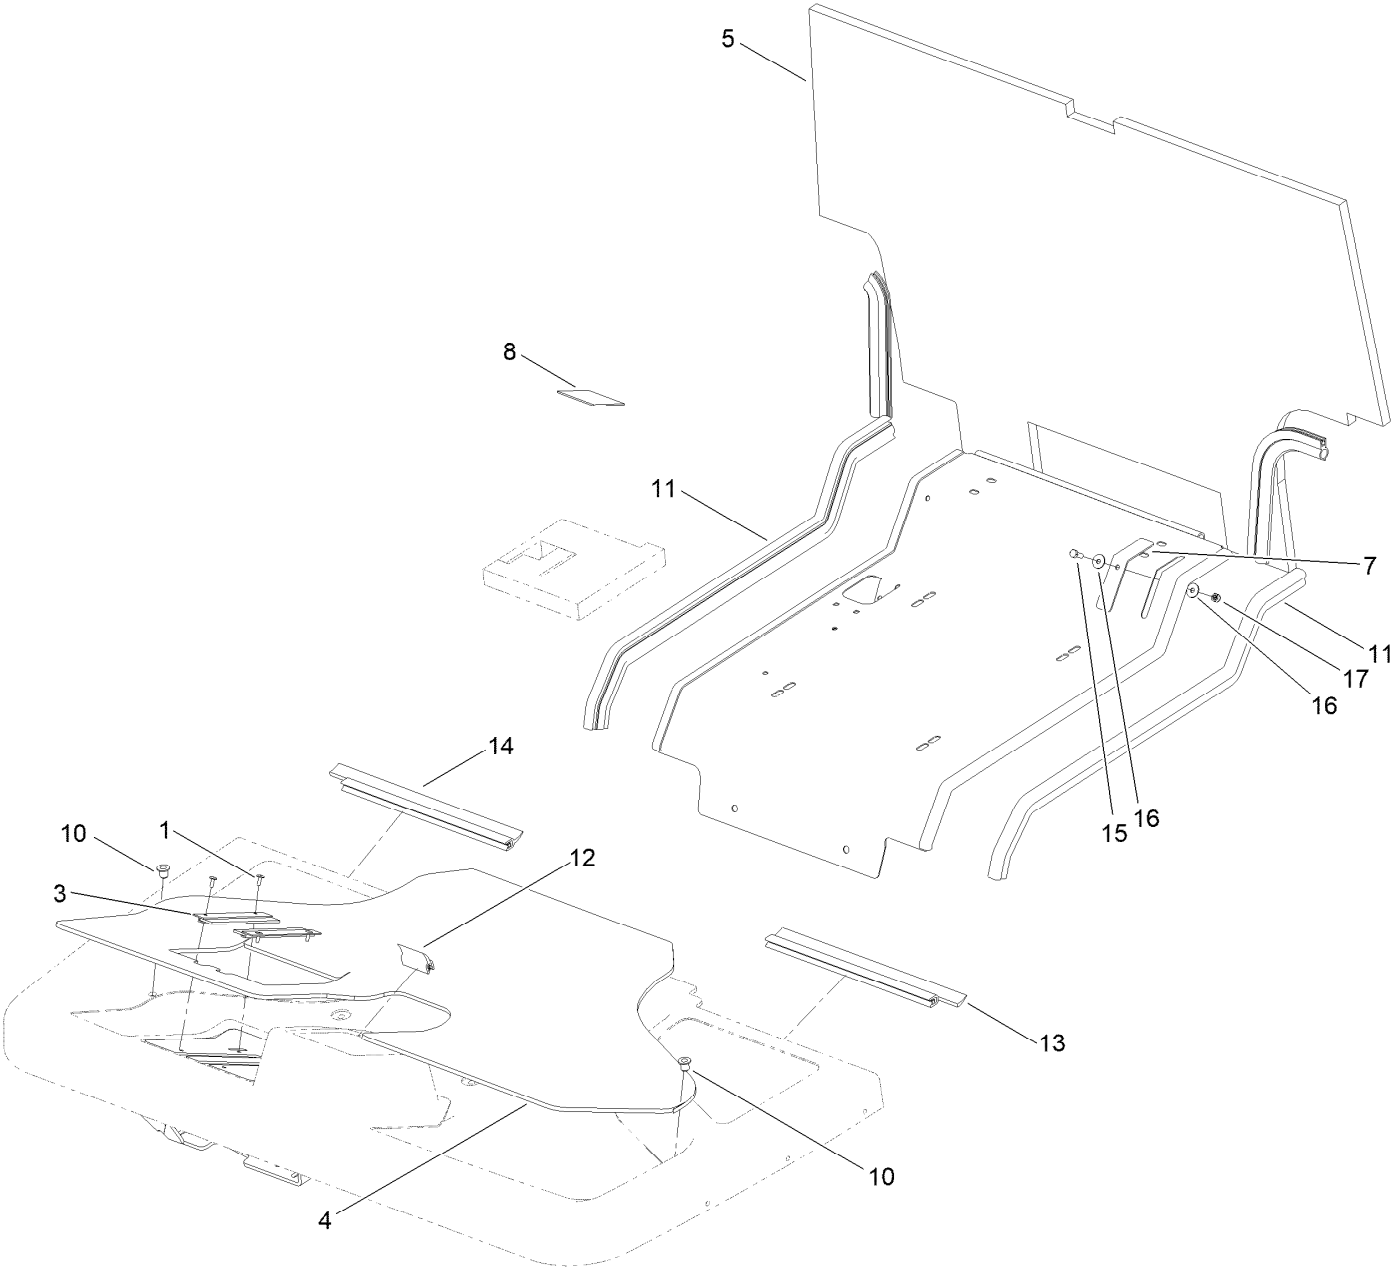

Platform Seal Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-1627	4	Rivet	12	111-7056	1	Seal-Flipper, Steering Column
3	111-6571	2	Strip-Brush, Pedal Slot	13	111-7057	1	Seal-Flipper, Platform (LH)
4	111-6949	1	Pad-Mat, Platform	14	111-7071	1	Seal-Flipper, Platform (RH)
5	111-6992	1	Pad-Bulkhead	15	09362	1	Screw-HH
7	111-7044-03	1	Plate-Hole, Latch	16	09262	2	Washer
8	111-7046	1	Pad-Bitumen	17	09438	1	Nut-Nyloc
10	111-7051	2	Plug-Platform				
11	111-7055	2	Seal-Bubble, Seat Plate				

Platform Strengthening Assembly

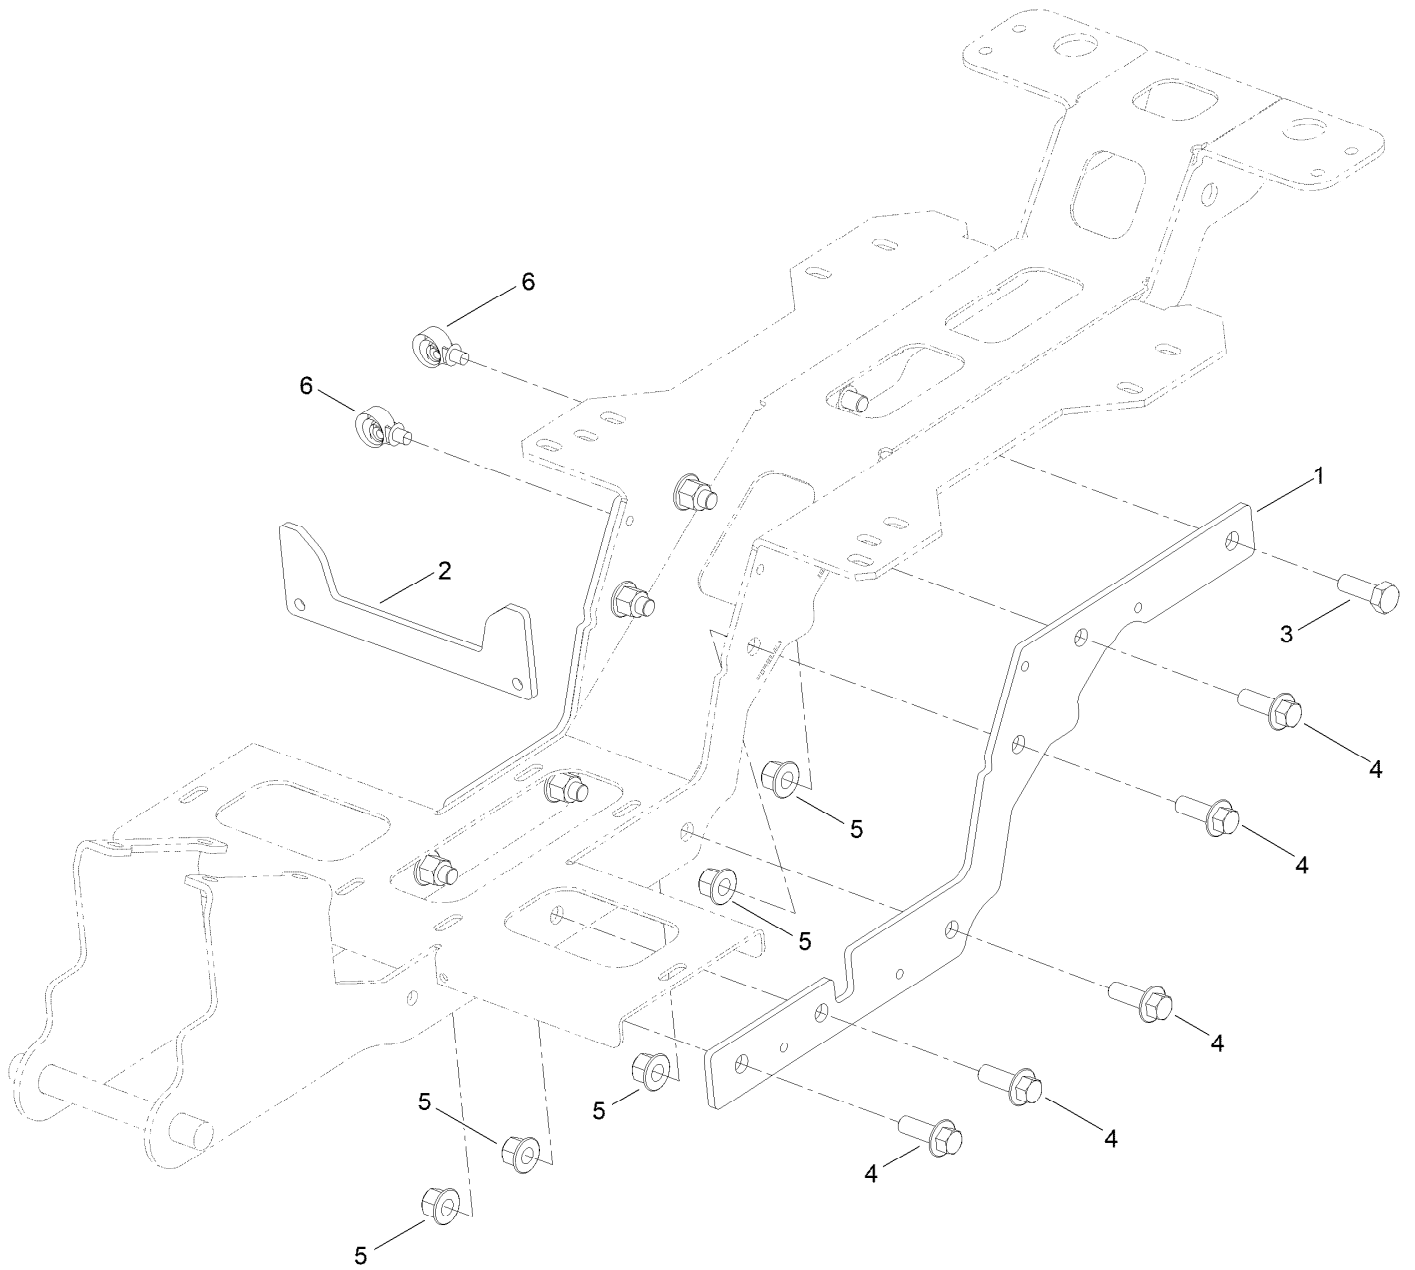


Platform Strengthening Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-9224-03	2	Bracket-Plate
2	111-9769-03	1	Plate-Location
3	ZDH1L035U	2	Screw-HH

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	134-3756	10	Screw-HHF
5	134-3764	10	Nut-Flange, NI
6	32180-030	4	Clip-Tie ●


● Not illustrated

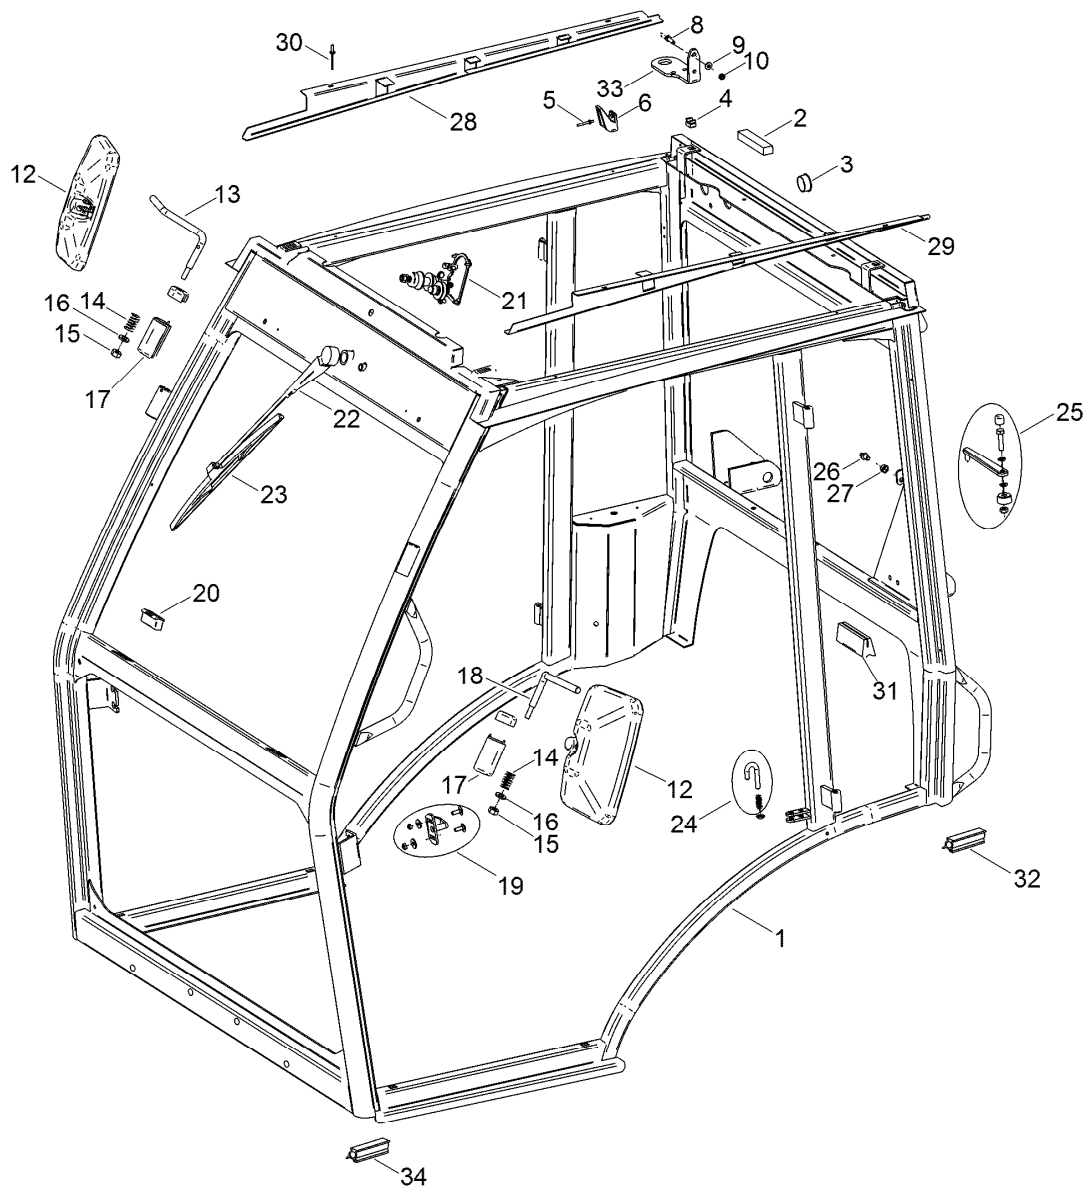

Cab Frame Assembly


Ref.	Part Number	Qty.	Description
1	111-7688	1	Frame-Cab
2	111-7974	1	Seal
3	111-5343	2	Plug
4	111-5253	4	Nut-Captive
5	111-1694	1	Rivet
6	964102	1	Hook
8	09363	2	Screw-HH
9	ZWP1F000U	4	Washer-Plain
10	09438	2	Nut-Nyloc
12	111-5346	2	Mirror-Side
13	111-5336	1	Support-Mirror, Right
14	111-5344	2	Spring-Mirror
15	ZNH1H000U	2	Nut-Hex
16	09475	2	Washer
17	111-5345	2	Cover-Mirror
18	111-5335	1	Support-Mirror, Left

Ref.	Part Number	Qty.	Description
19	964105	2	Bolt-Locking
20	111-5292	3	Insert
21	111-5249	1	Motor-Wiper
22	111-5338	1	Arm-Wiper
23	111-5337	1	Wiper ASM
24	111-5352	1	Release-Spring, Door
25	111-5083	1	Stay-Window
26	111-5367	2	Ball And Socket ASM
27	09441	2	Nut-Hex, NI
28	111-5277	1	Trim-Top, Right
29	111-5278	1	Trim-Top, Left
30	09320	6	Rivet
31	111-7072	1	Seal-Bulkhead, Rear
32	111-7973	1	Seal-Rubber
33	111-5283	1	Bracket-Beacon
34	111-7973	1	Seal-Rubber

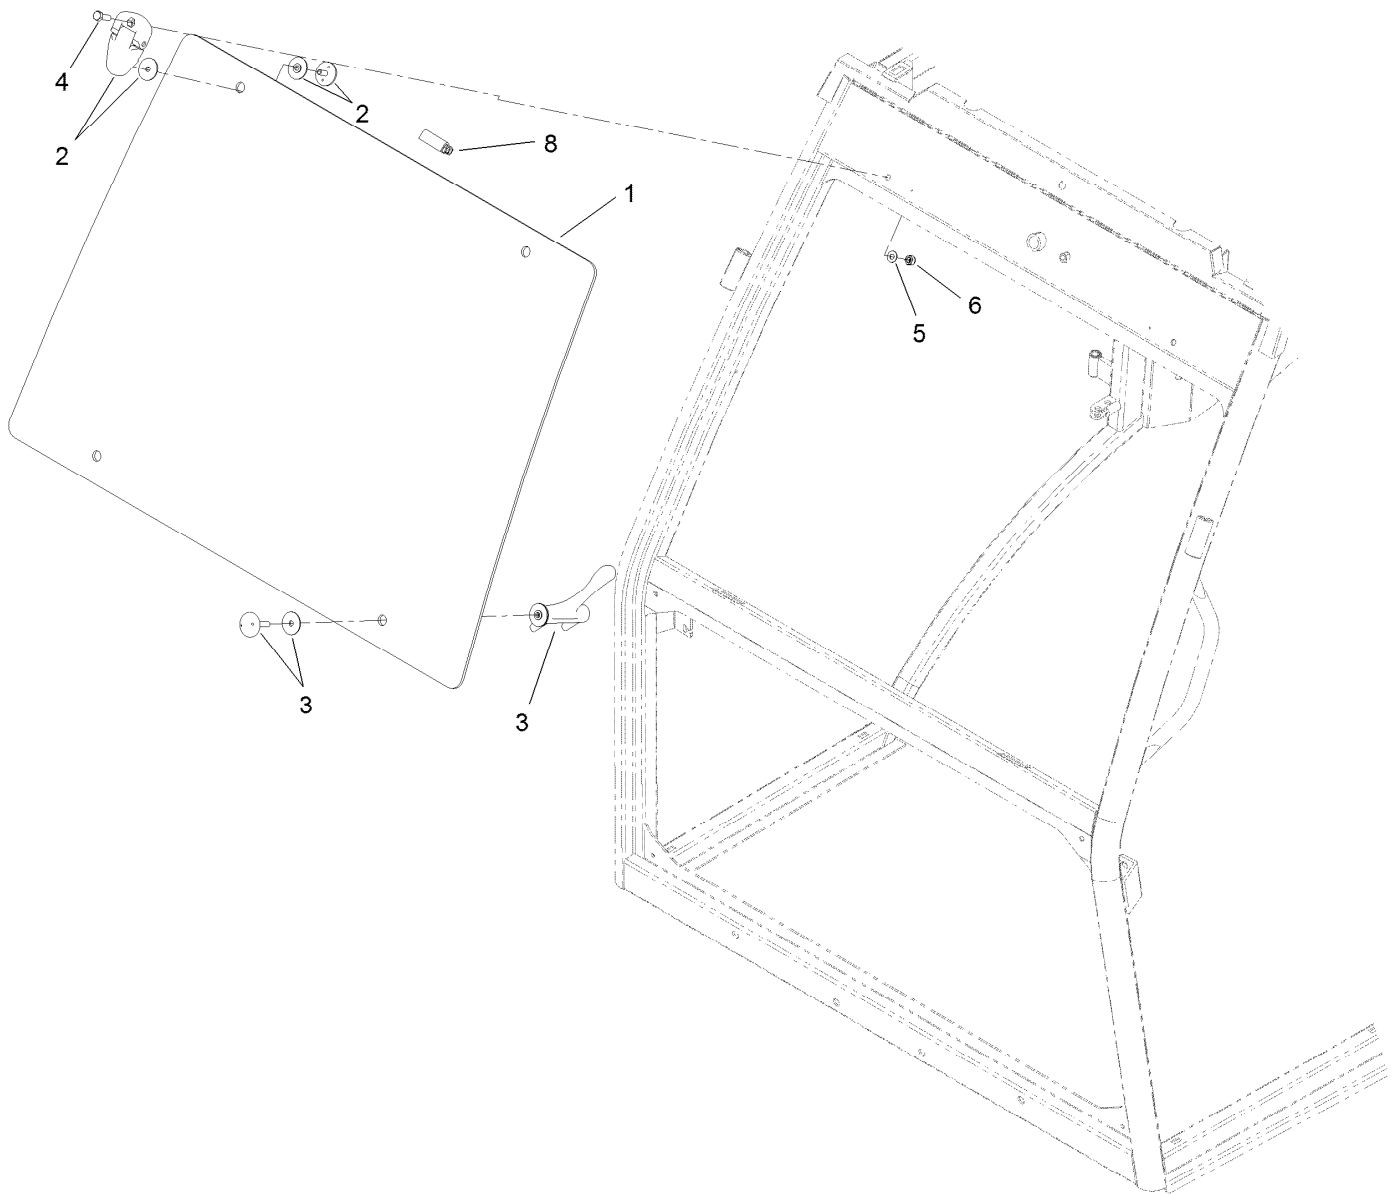


Top-Front Window Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5074	1	Glass-Front
2	111-7689	2	Hinge, Window-Cab
3	111-5082	2	Buckle-Front
4	03162	2	Screw-HH
5	09475	2	Washer
6	09441	2	Nut-Hex, NI
8	111-7989	1	Seal-Rubber

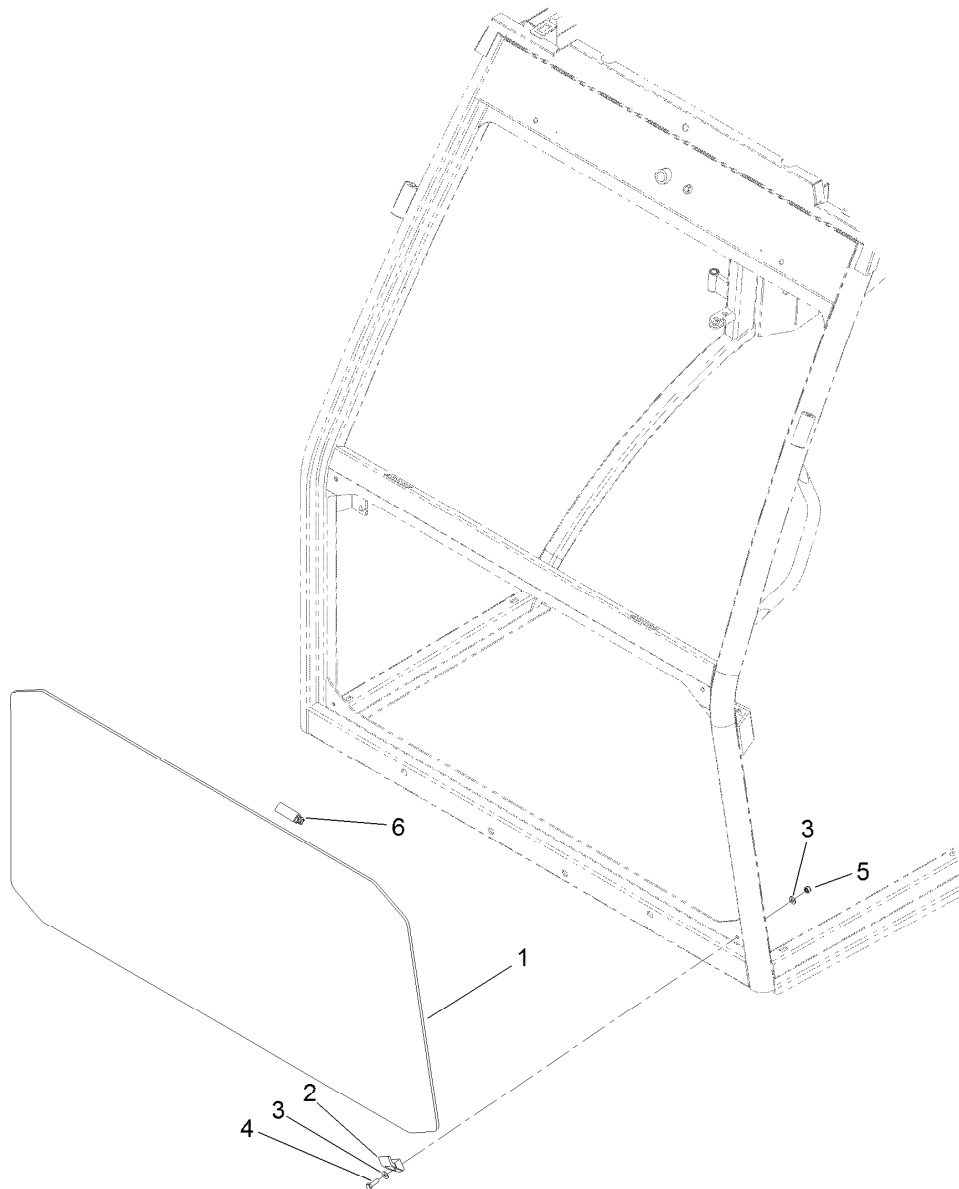


Bottom-Front Window Assembly

Ref.	Part Number	Qty.	Description
1	111-5075	1	Glass-Lower, Front
2	111-5288	4	Fixing-Glass
3	ZWP1F000U	8	Washer-Plain
4	09363	4	Screw-HH
5	09438	4	Nut-Nyloc
6	111-7989	1	Seal-Rubber

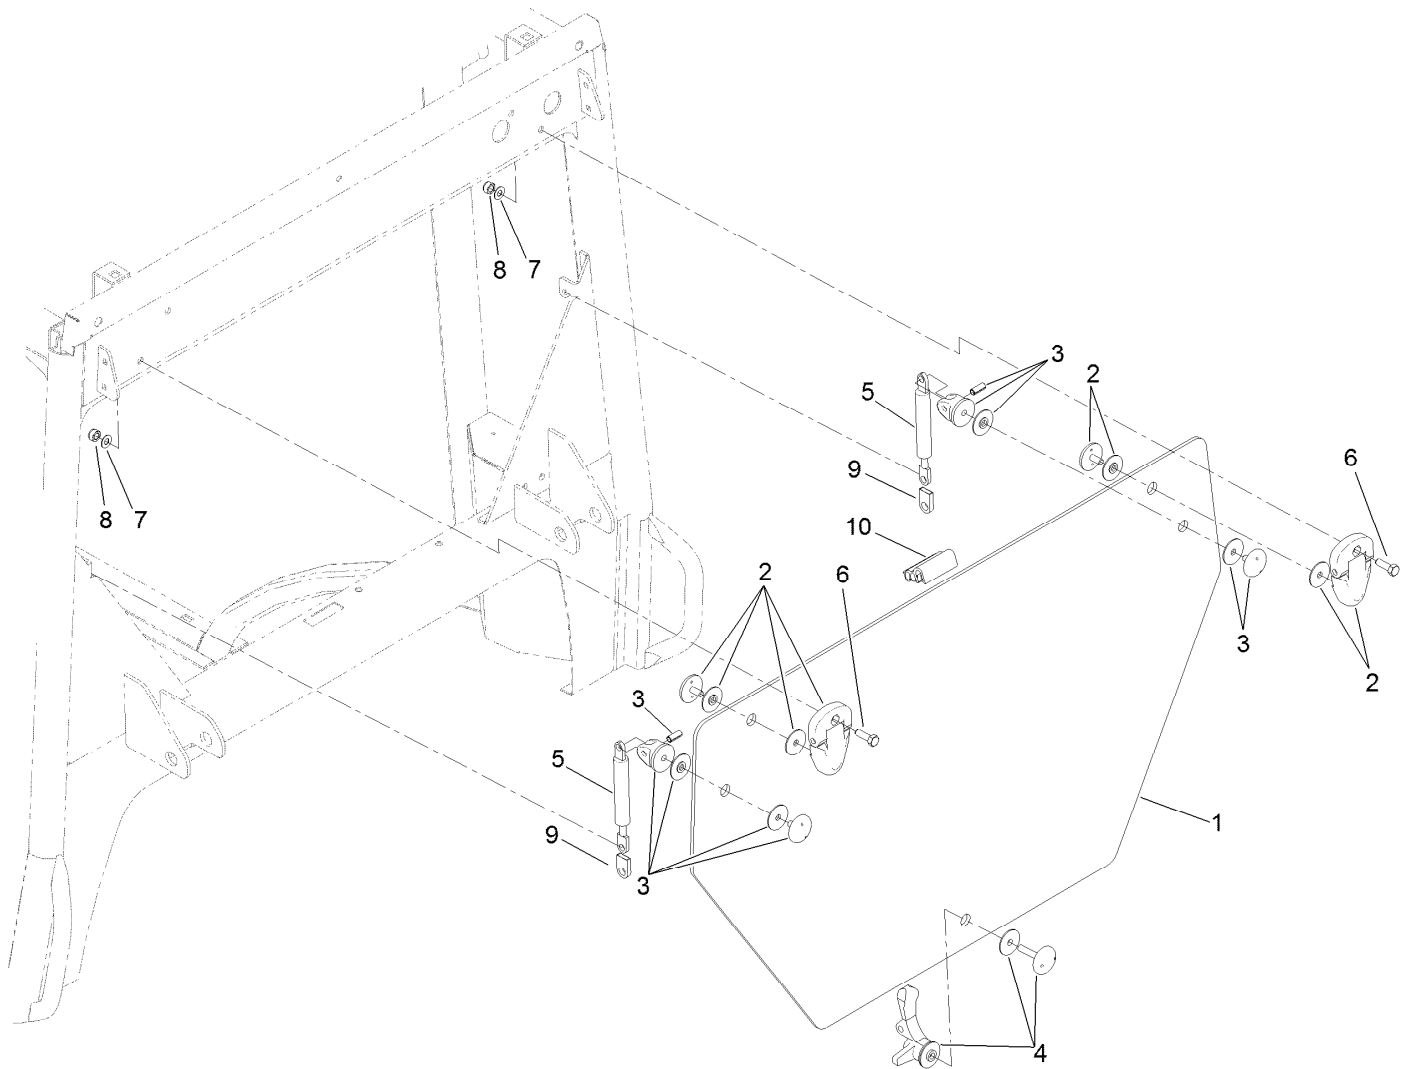

Rear Window Assembly

Ref.	Part Number	Qty.	Description
1	111-5076	1	Glass-Rear
2	111-7689	2	Hinge, Window-Cab
3	111-5291	2	Support
4	964230	1	Buckle
5	111-5266	2	Rear Gas Spring ASM
6	03162	2	Screw-HH
7	09475	2	Washer
8	09438	2	Nut-Nyloc
9	964208	2	Bracket
10	111-7989	1	Seal-Rubber

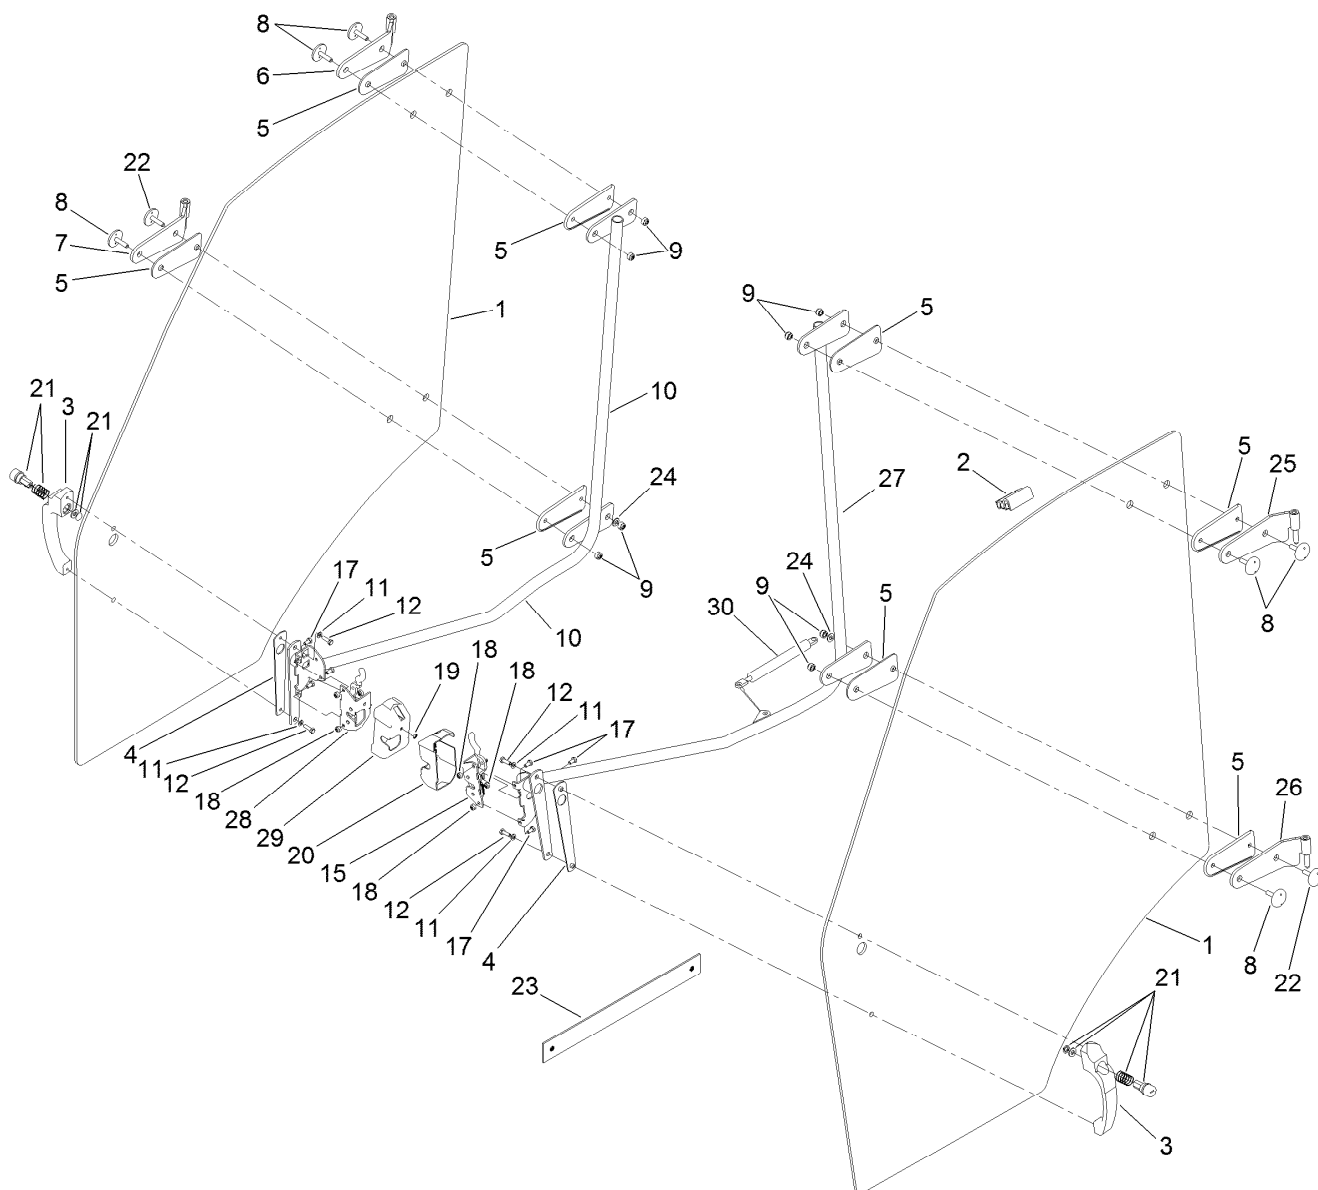


Left and Right Door Assembly

Ref.	Part Number	Qty.	Description
1	111-5293	2	Glass-Door
2	111-7990	1	Seal-Rubber
3	964210	2	Latch-Door, Outside
4	111-7691	2	Pad-Rubber, Door
5	111-5298	8	Pad-Rubber, Door
6	111-5301	1	Hinge-Upper, Right
7	111-5302	1	Hinge-Bottom, Right
8	111-7711	7	Screw
9	09441	8	Nut-Hex, NI
10	111-5307	1	Right Door Frame ASM
11	ZWP1F000U	4	Washer-Plain
12	09363	4	Screw-HH
15	111-5306	1	Lock-Door Right
17	09361	6	Screw-HH
18	09438	6	Nut-Nyloc


Ref.	Part Number	Qty.	Description
19	111-7692	2	Rivet
20	111-5308	1	Cover-Lock, Left
21	964211	2	Locking Device ASM
22	111-7710	1	Screw
23	111-7693	1	Strap, Door
24	111-5311	1	Washer
25	111-5297	1	Hinge-Left
26	111-7694	1	Hinge, Left-Lower
27	111-5295	1	Left Door Frame ASM
28	111-5294	1	Lock-Door, Left
29	111-5309	1	Cover-Lock, Right
30	111-5081	1	Spring-Door
99	09658	2	Washer ●
99	111-7708	1	Cap-Spring, Door ●

● Not illustrated

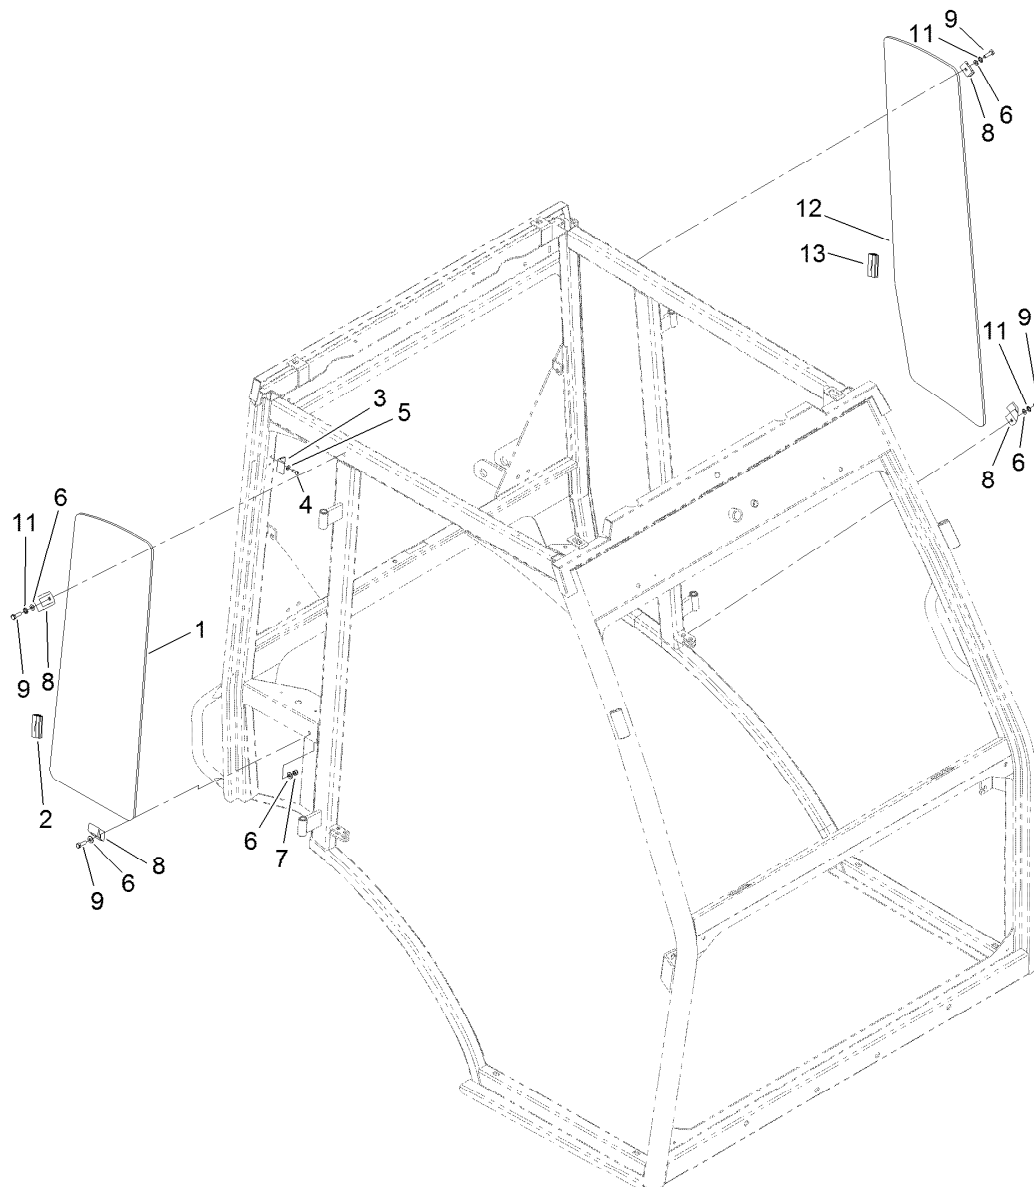


Left and Right Side Window Assembly

Ref.	Part Number	Qty.	Description
1	111-5289	1	Glass-Side RH
2	111-7991	1	Seal-Rubber
3	111-5368	4	Support-Glass
4	MU710259	4	Rivet-Pop
5	09470	4	Washer
6	ZWP1F000U	5	Washer-Plain
7	09438	1	Nut-Nyloc
8	111-5288	4	Fixing-Glass
9	09363	4	Screw-HH
11	09473	3	Washer-Shakeproof
12	111-5077	1	Glass-Side LH
13	111-7991	1	Seal-Rubber

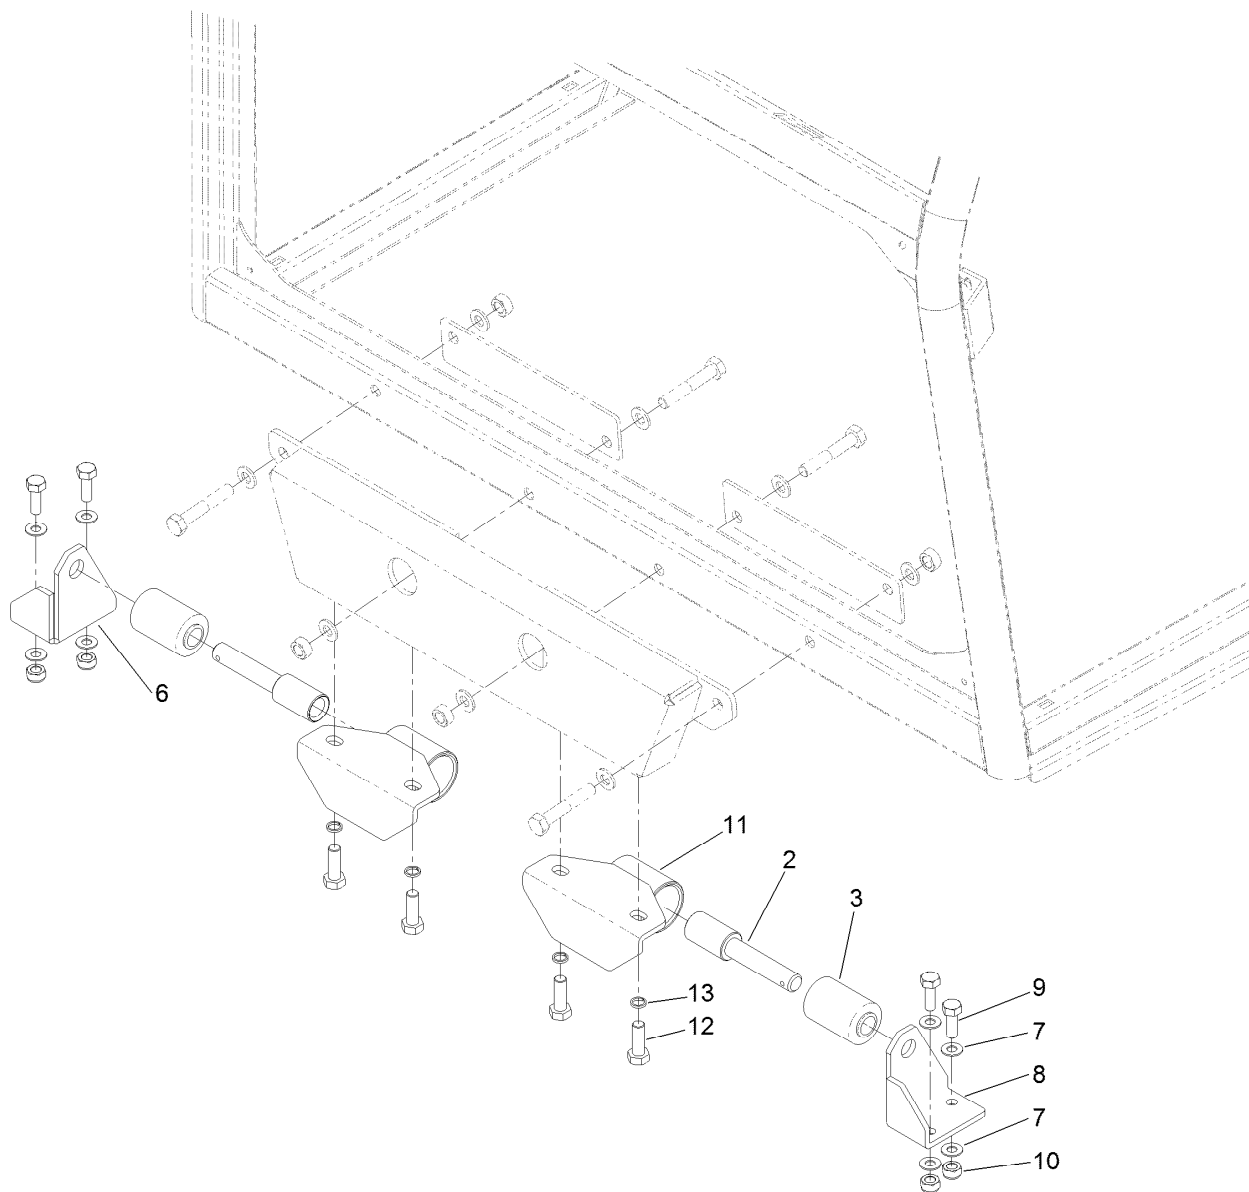


Front Support Assembly

Ref.	Part Number	Qty.	Description
2	111-5258	2	Pin
3	111-5257	2	Bearing
6	111-5254	1	Support-Front, Right
7	09479	8	Washer-Plain
8	111-5255	1	Support-Front, Left
9	09392	4	Screw-HH
10	ZNN1J000U	4	Nut-Hex, NI
11	111-7459	2	Bracket, Lower-Front
12	ZDH1L035U	4	Screw-HH
13	09599	4	Washer-Lock

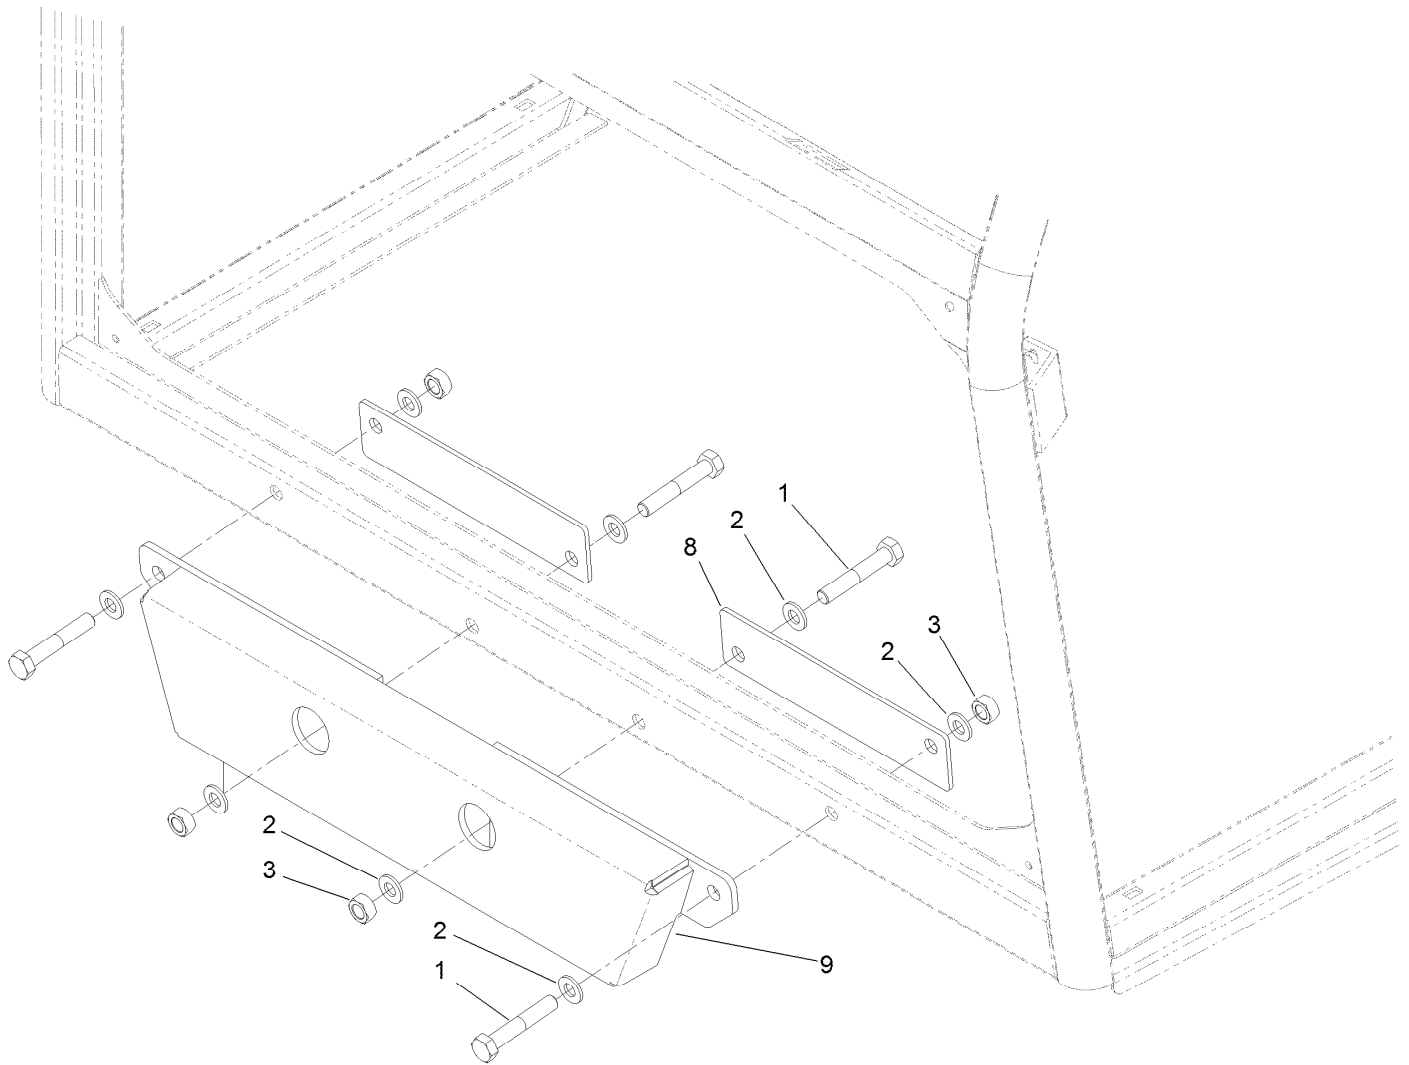

Front Bracket Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	ZBH1L070U	4	Bolt
2	HY09485	8	Washer-Plain
3	09650	4	Nut-Hex, Nyloc
8	111-7460	2	Plate-Spreader
9	111-7458	1	Bracket, Upper-Front

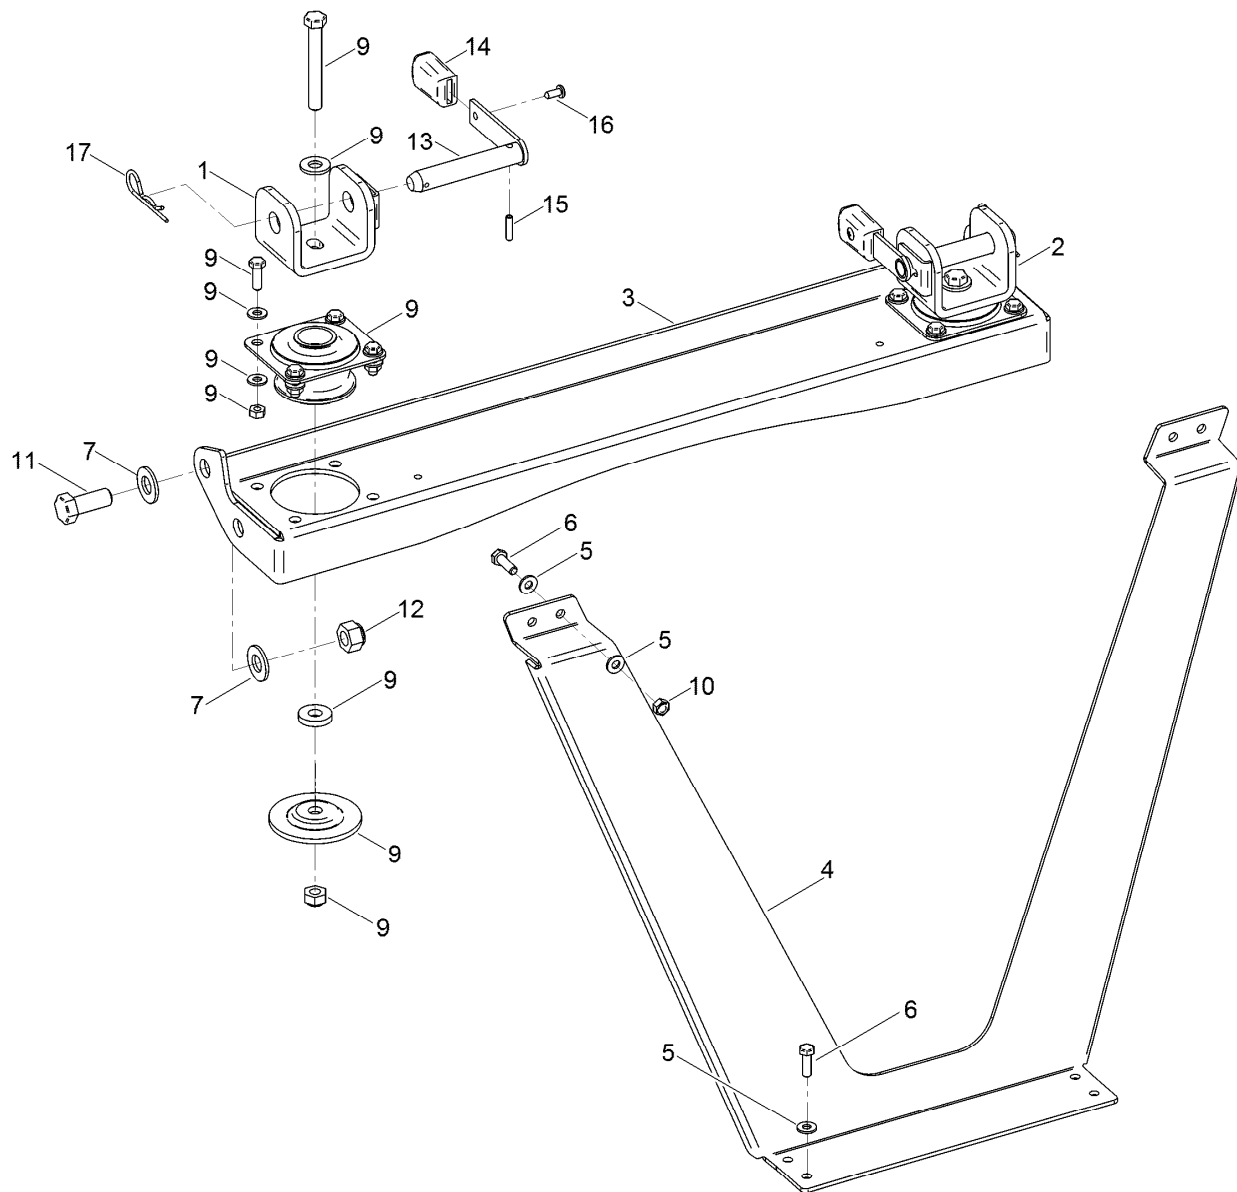


Cross Member Support Assembly

Ref.	Part Number	Qty.	Description
1	111-5312	1	Support-Right
2	111-5260	1	Support-Left
3	111-5262	1	Support-Cross Member
4	111-5261	1	Support-Main
5	09475	16	Washer
6	03162	8	Screw-HH
7	ZWP1P000U	8	Washer-Plain
9	111-5259	2	Mount
10	09441	8	Nut-Hex, NI

Ref.	Part Number	Qty.	Description
11	111-5370	4	Setscrew
12	09456	4	Nut
13	111-5263	2	Pin-Latch
14	111-7699	2	Grip-Pin, Locking
15	111-7700	2	Pin-Spiral
16	111-7701	2	Screw
17	111-7453	2	Pin-Secure
99	111-7998	2	Pin-Secure, String ●


● Not illustrated

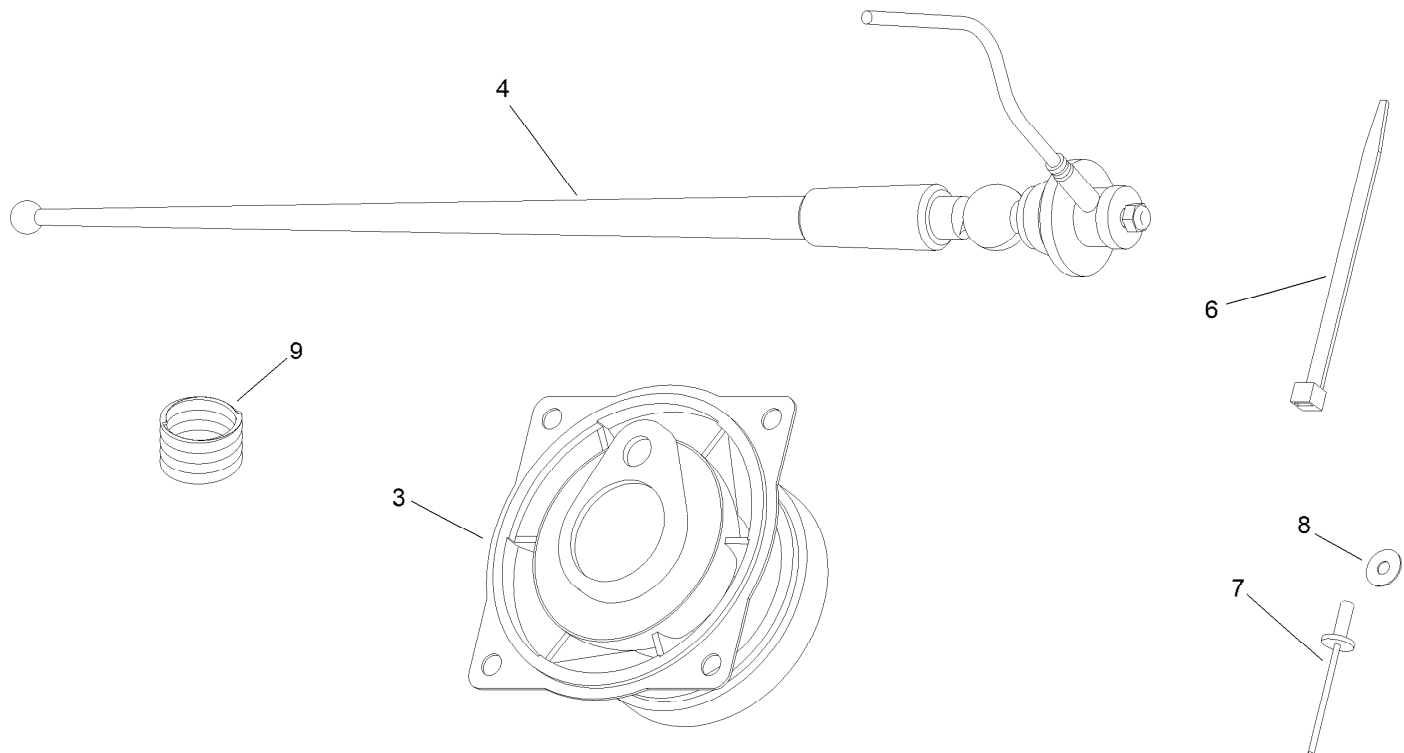

Radio Installation Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	111-5268	2	Speaker-Cab
4	111-7707	1	Antenna-Radio
6	74-07-020	3	Tie-Cable
7	09317	1	Rivet
8	09658	1	Washer
9	MU41223/U	2	Tubing-Convolute


Roof Assembly

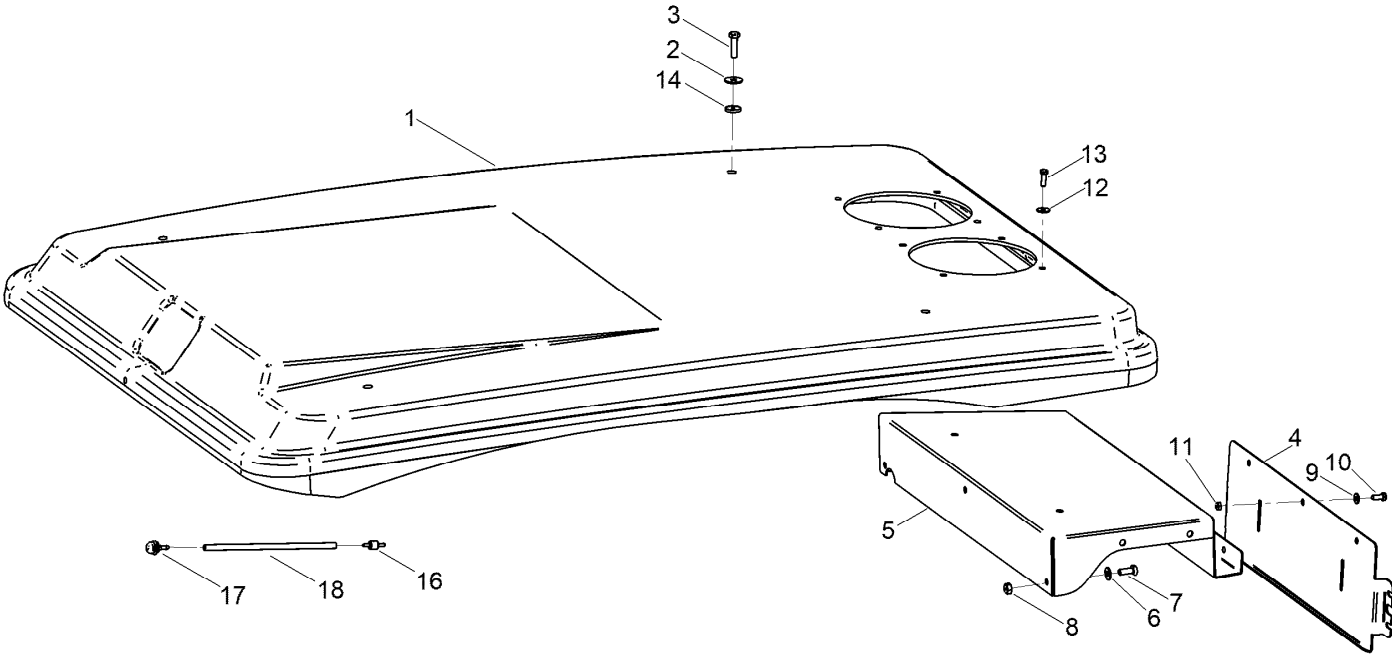

Roof Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5084	1	Roof	10	09362	3	Screw-HH
2	111-5311	4	Washer	11	09438	7	Nut-Nyloc
3	09369	4	Screw-HH	12	61-11-001	8	Washer
4	111-5265	1	Bracket-Number Plate	13	09363	4	Screw-HH
5	111-5264	1	Cover	14	111-5310	4	Washer
6	09475	6	Washer	16	111-5373	1	Valve-Non Return
7	09368	3	Screw-HH	17	111-5371	1	Nozzle-Washer
8	09441	3	Nut-Hex, NI	18	111-7992	1	Hose-Washer
9	09472	6	Washer-Plain				

Roof Insert Assembly

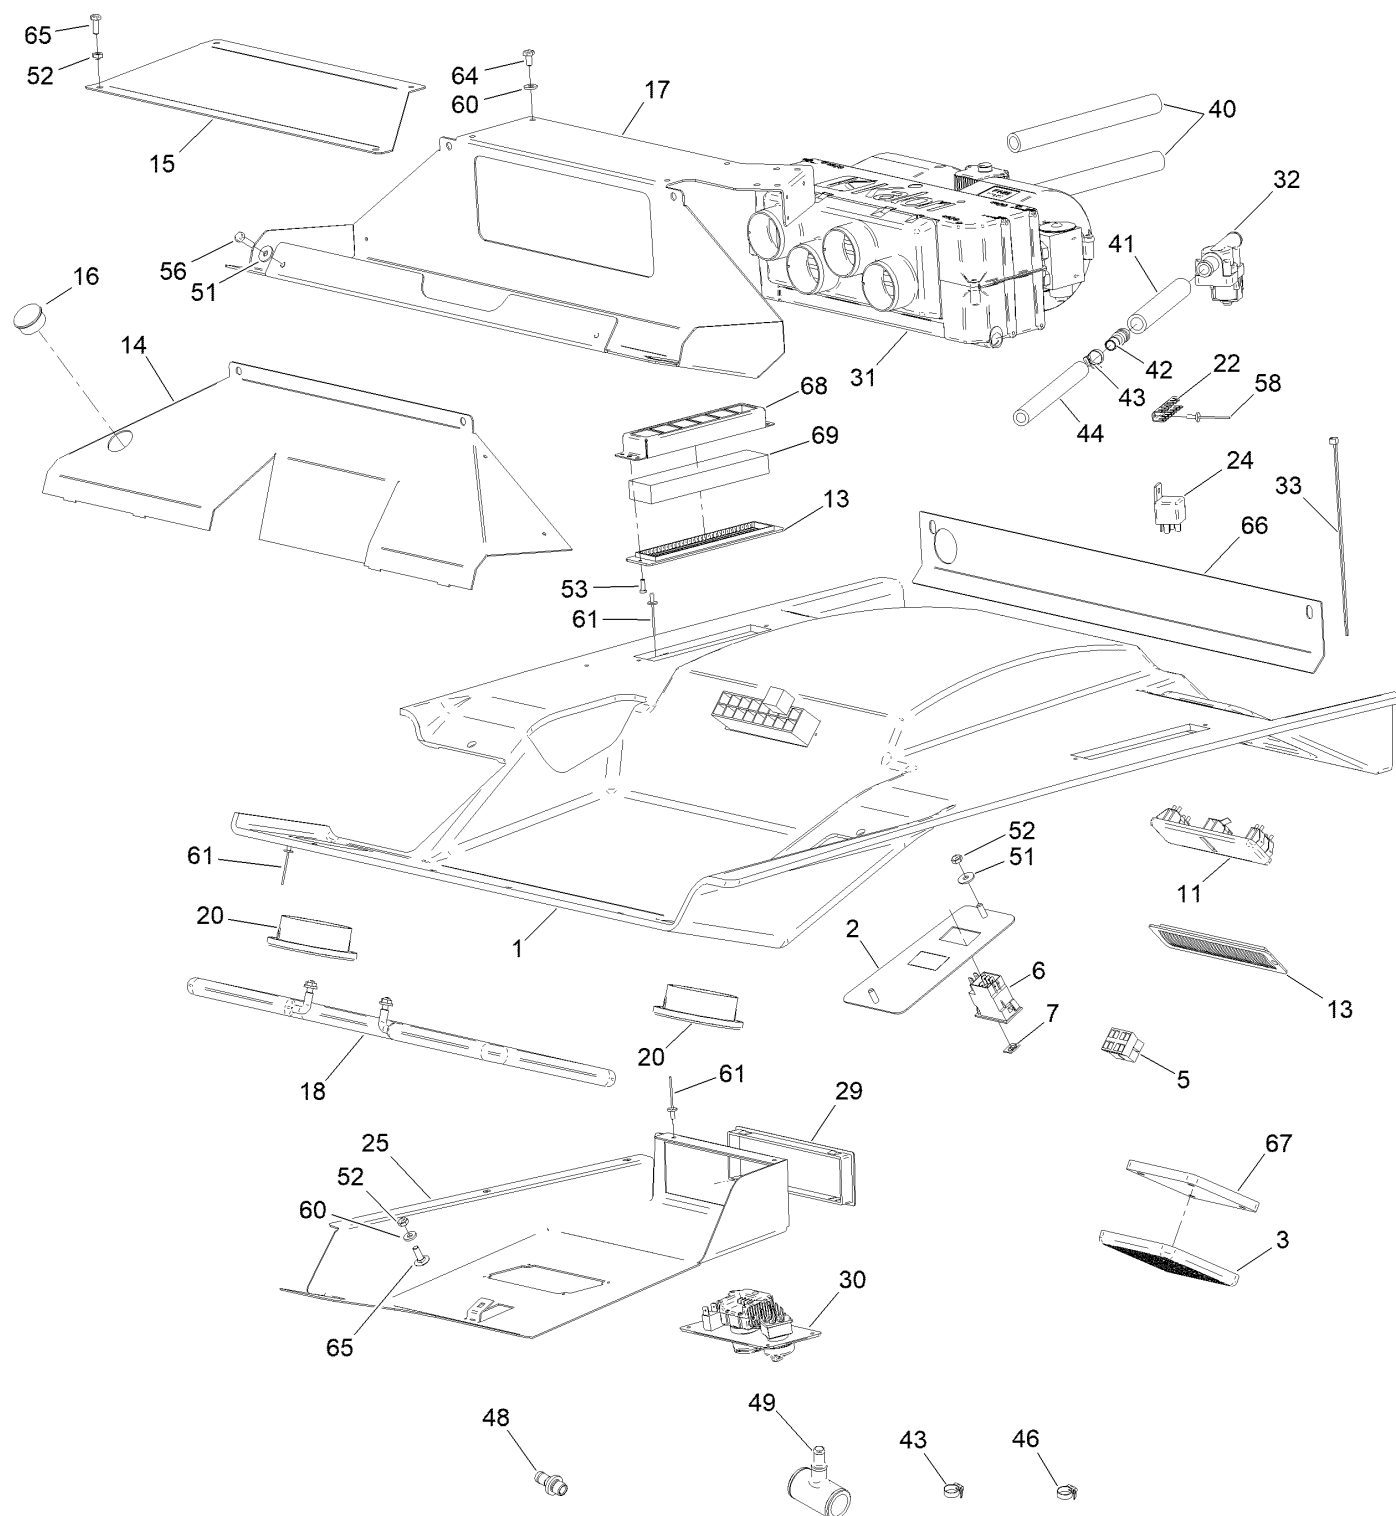


Roof Insert Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5286	1	Liner-Roof	51	61-11-001	4	Washer
2	111-5274	1	Console	52	09438	5	Nut-Nyloc
3	111-5287	2	Cover	53	ZDH1D012U	12	Screw-HH
5	111-5271	1	Fuse Box	56	09363	2	Screw-HH
6	111-5375	1	Switch	58	111-1694	3	Rivet
7	111-5376	1	Symbol-Switch	60	ZWP1F000U	9	Washer-Plain
11	111-1680	1	Interior Light	61	MU710259	8	Rivet-Pop
13	111-7455	3	Vent-Return, Air	64	09361	2	Screw-HH
14	111-5270	1	Duct-Air	65	09362	4	Screw-HH
15	111-5279	1	Support	66	111-7695	1	Plate, Block-Terminal
16	111-5343	1	Plug	67	111-7696	2	Filter-Dust
17	111-5280	1	Bracket	68	111-7697	3	Housing, Filter-Dust
18	111-5272	1	Visor-Sun	69	111-7698	3	Filter-Dust
20	111-5275	2	Nozzle	99	09262	4	Washer ●
22	111-5281	1	Bar-Ground	99	09320	8	Rivet ●
24	111-5282	1	Relay	99	09362	1	Screw-HH ●
25	111-5267	1	Console	99	09364	2	Screw-HH ●
29	111-5273	1	Cover-Radio	99	09470	8	Washer ●
30	111-5380	1	Switch Console	99	09544	2	Nut-Nyloc ●
31	111-5269	1	Heating And Air Conditioning ASM	99	09657	14	Nut-Insert, NI ●
32	111-7456	1	Valve-Heating, Cab	99	09658	8	Washer ●
33	74-07-020	14	Tie-Cable	99	09704	8	Screw-Set ●
40	111-7994	1	Hose-Water, Hot	99	111-7997	1	Hose, Water-Hot ●
41	111-7995	1	Hose-Water, Hot	99	111-9772-03	1	Bracket-Hose ●
42	111-1563	2	Connector-Hose	99	134-6933	1	Harness-Wire, Power Supply ●
43	910845	10	Clip-Jubilee	99	134-6934	1	Harness Wire, Roof Insert ●
44	111-7996	1	Hose-Water, Hot	99	134-6935	1	Harness-Wire, Wiper ●
46	111-1716	2	Clip-Jubilee	99	134-6936	1	Harness-Wire, Blower ●
48	111-1582	2	Pipe-Union	99	924438	2	Clamp-Hose ●
49	134-6937	1	Fitting-Tee				

● Not illustrated

Air Conditioning Assembly

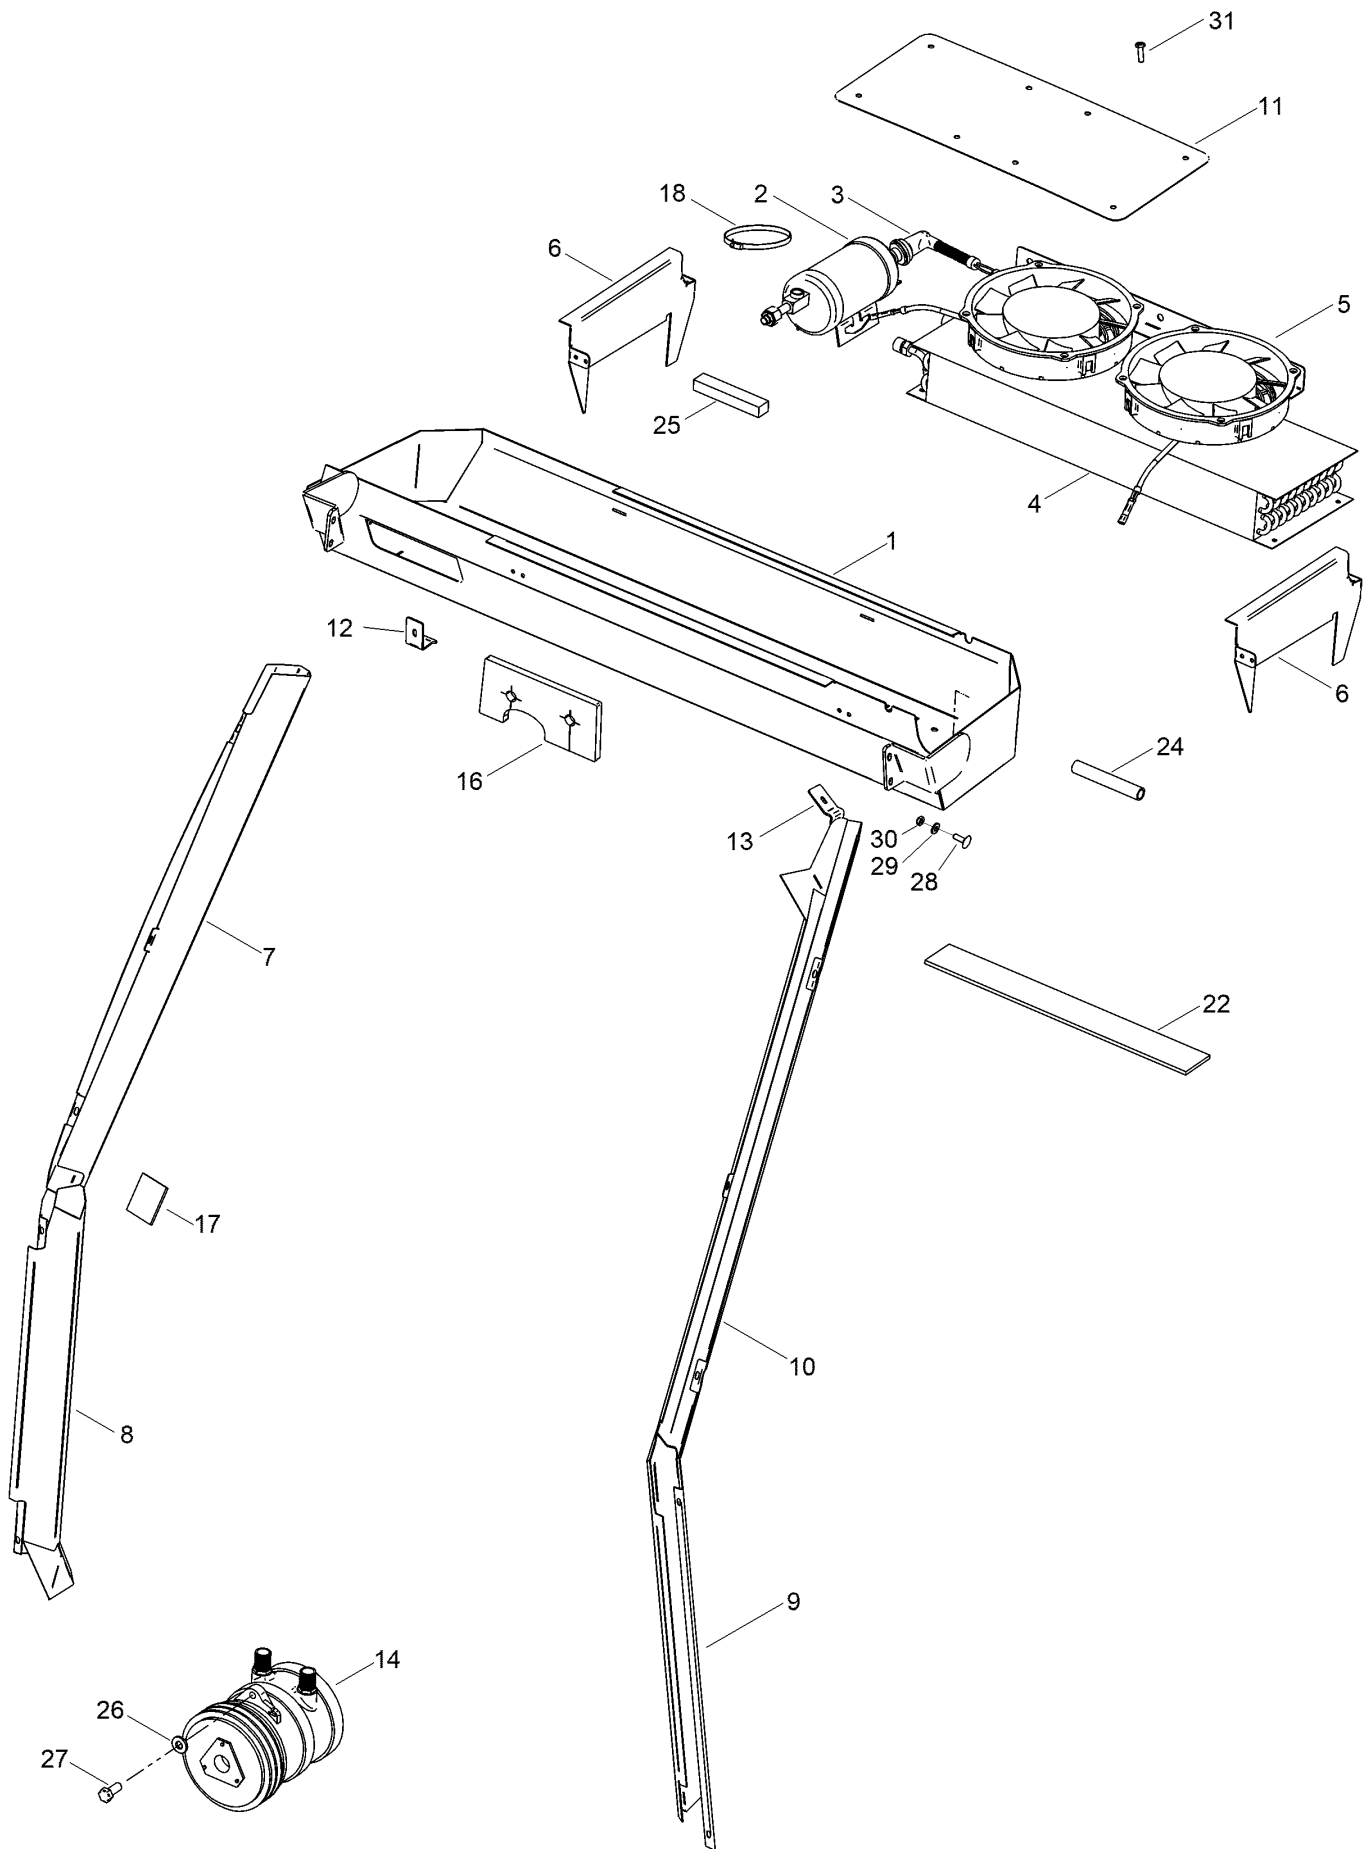


Air Conditioning Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5491	1	Housing	22	111-7965	1	Tape-Sealant
2	111-5492	1	Tank-Collecting, Filter	24	111-7966	1	Tube-Transparent
3	111-5493	1	Switch-Pressure	25	111-7967	1	Seal
4	111-5495	1	Condenser	26	ZWQ1J000U	3	Washer-Plain
5	111-5494	2	Fan	27	50-11-005	3	Screw-HH
6	111-5496	2	Plate-Separating	28	09668	4	Bolt-Coach
7	111-5569	1	Plate-Cover, Upper-Right	29	09472	12	Washer-Plain
8	111-5571	1	Plate-Cover, Lower-Right	30	09544	12	Nut-Nyloc
9	111-5570	1	Plate-Cover, Lower-Left	31	09363	8	Screw-HH
10	111-5568	1	Plate-Cover, Upper-Left	99	111-5574	1	Hose-Climatic (Condenser To Evaporator) ●
11	111-5501	1	Cover	99	111-7704	1	Hose-Climatic ●
12	111-7702	1	Angle-Fastening	99	134-6496	1	Hose-Climatic (Evaporator To Compressor) ●
13	111-7703	1	Angle-Fastening	99	134-6497	1	Hose-Climatic (Compressor To Condensor) ●
14	111-1600	2	Compressor				
16	111-5614	1	Seal				
17	111-5506	2	Rubber-Intermediate				
18	111-1625	1	Clamp-Hose				

● Not illustrated

Cab Air Conditioning Assembly

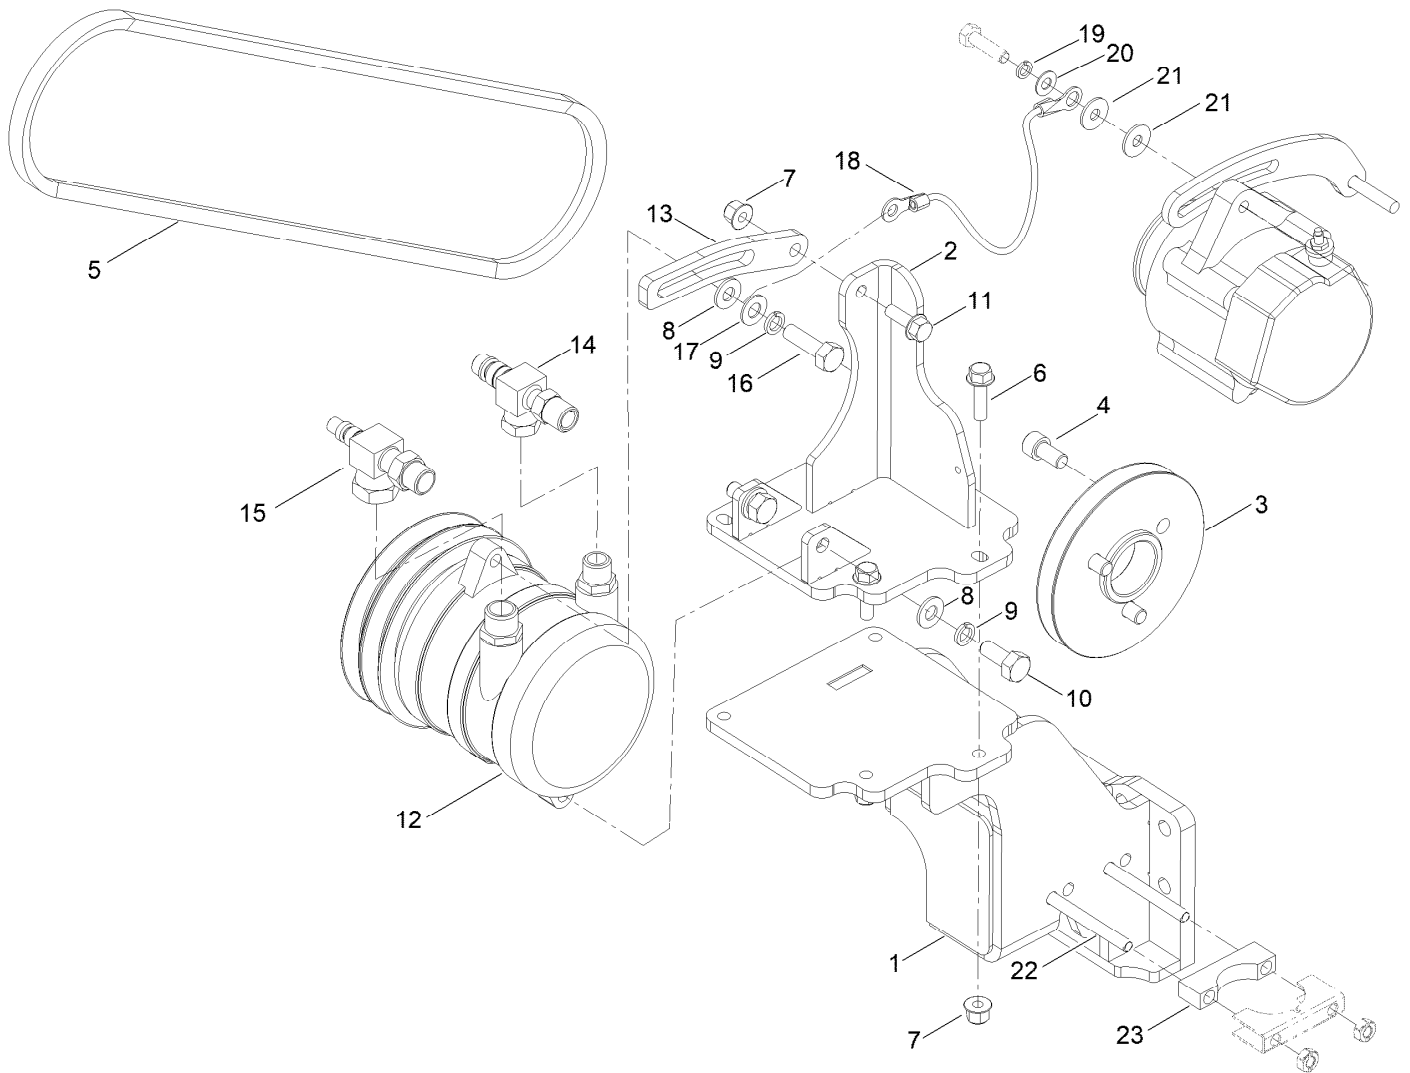


Cab Air Conditioning Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	134-6978-03	1	Bracket Compressor ASM [black]	14	134-5688	1	Adaptor, Air Con
2	134-6987-03	1	Mount ASM [black]	15	134-5689	1	Adaptor, Air Con
3	134-3327	1	Pulley, Air-Conditioner	16	111-0597	1	Screw-HH
4	ZCS1J020U	3	Screw Soc HD Cap M10*20	17	09479	1	Washer-Plain
5	134-5178	1	Belt, Compressor	18	134-7013	1	Cable-Earth, Air Condition Compressor
6	134-3748	4	Screw-HHF	19	03469	1	Washer-Spring
7	134-3762	5	Nut-Flange, NI	20	09475	1	Washer
8	ZWQ1J000U	3	Washer-Plain	21	09267	2	Washer-Plain
9	09480	3	Washer-Lock	22	134-7015	1	Bar-Bolt
10	50-11-005	2	Screw-HH	23	134-7016	1	Saddle, Exhaust Pipe
11	134-3747	1	Screw-HHF	99	111-2898	1	Fuse-40A ●
12	111-1600	1	Compressor	99	121-8865	1	Fuse-Mini Blade, 7.5 Amp ●
13	134-6991-03	1	Clamp, A/C Compressor	99	924625	1	Relay-70A ●

● Not illustrated

Washer Pump and Bottle Assembly

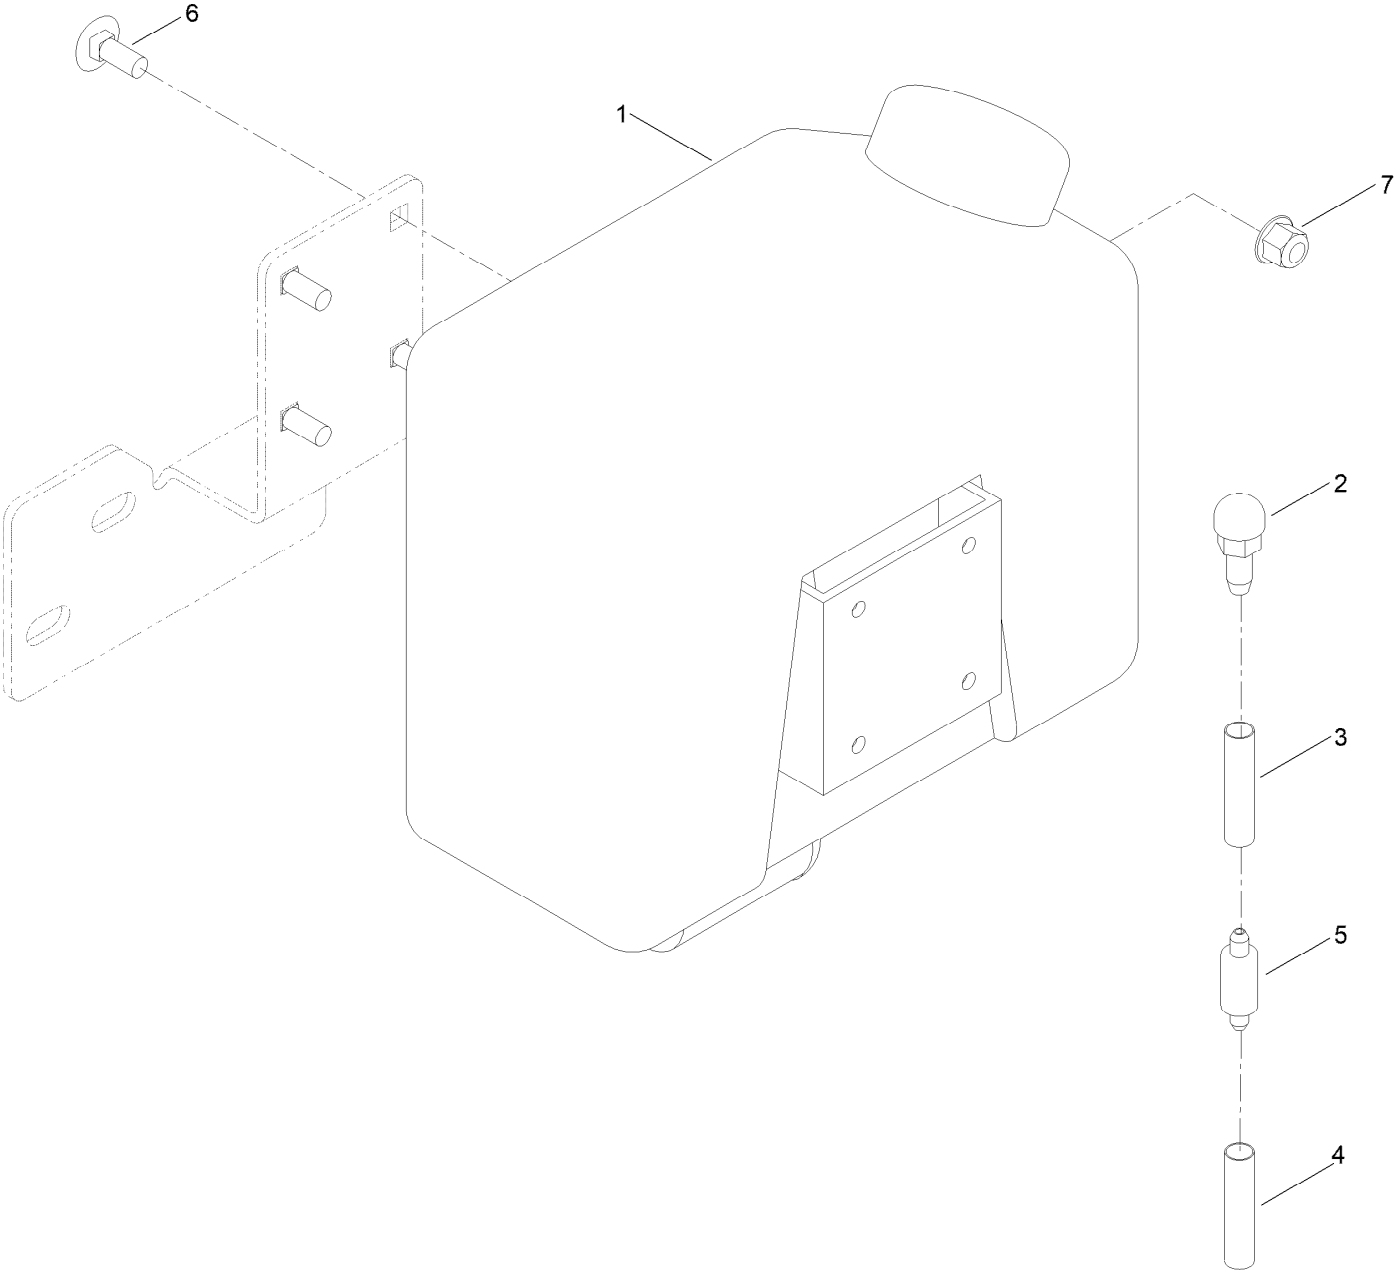

Washer Pump and Bottle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-5285	1	Washer Pump And Bottle ASM
2	111-5371	1	Nozzle-Washer
3	111-7993	1	Hose-Washer
4	111-7992	1	Hose-Washer

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	111-5373	1	Valve-Non Return
6	09570	4	Bolt-Carriage
7	134-3761	4	Nut-Flange, NI
99	111-1742	1	Grommet ●
99	74-07-020	17	Tie-Cable ●

● Not illustrated



Count on it.