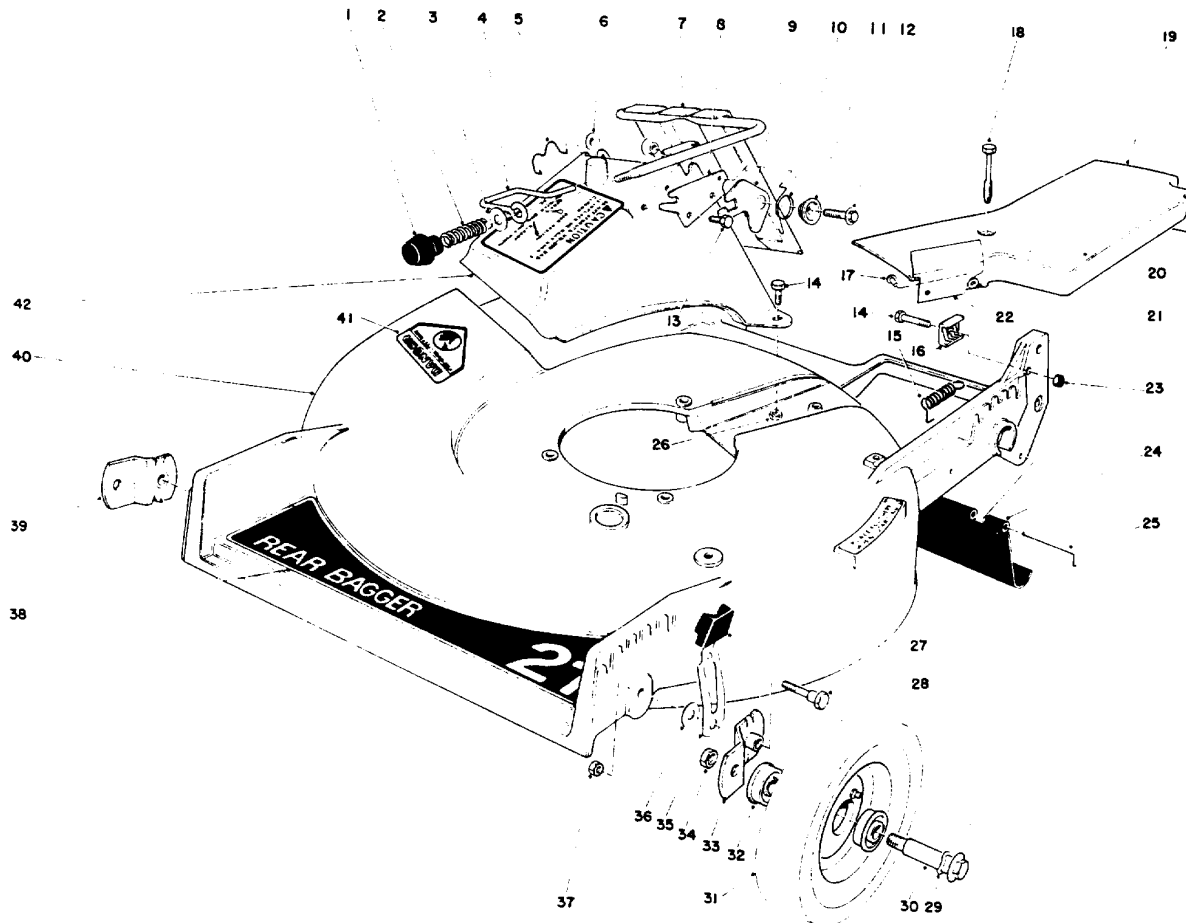


TORO®

FORM NO. 3311-820

MODEL NO. 10502-1000001 & UP


**PARTS
CATALOG****21" S.P. REAR BAGGER**
WITH BLADE BRAKE CLUTCH**HOUSING ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	23-0920	Spring	1
3	3256-25	Washer	1
4	23-0940	Door Latch	1
5	33-4830	Door Retainer	1
6	23-0880	Bushing	2
7	33-5660	Door Handle	1
8	23-1040	Latch Plate	1
9	42-4010	Safety Latch	1
10	33-4860	Torsion Spring	1
11	23-1180	Spacer-Latch	1
12	11-9760	Thread Forming Screw	1
13	32104-17	Hex Hd. Self Tapping Screw	1
14	321-7	Capscrew	3
15	38-0040	Spring	1

Ref. No.	Part No.	Description	No. Used
16	29-9550	Cable Clamp	1
17	3295-35	Rivet	2
18	37-7260	Screw	2
19	38-8741	Belt Cover Assembly	1
20	3311-299	Greasing Sticker	1
21	3256-14	Washer	2
22	38-8730	Heat Shield	1
23	3218-1	Jam Nut	1
24	29-9180	Rear Shield	1
25	33-3203	Rod-Shield	1
26	3296-42	Locknut	2
27	25-7740	Knob-Arm	2
28	25-3440	Pivot Screw	2
29	3290-393	Wave Washer	2
30	3-2652	Wheel Bolt	2

COPYRIGHT © ALL RIGHTS RESERVED
The Toro Company — 1981
MINNEAPOLIS, MN 55420 — U.S.A.


PRICE \$1.00

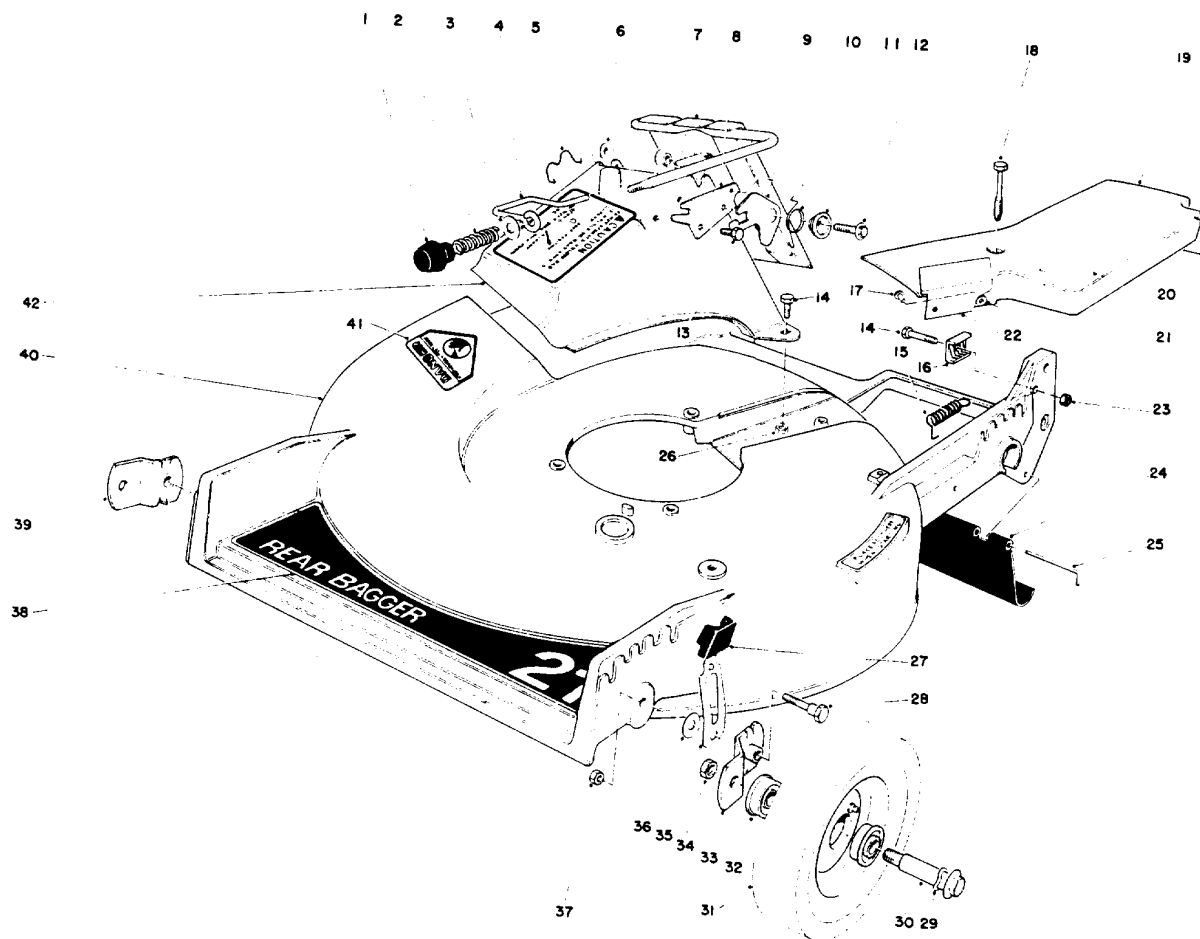

HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
31	38-6000	Wheel & Tire Assembly (Incl. Ref. # 32)	2
32	251-180	Bearing	4
33	24-7710	Pivot Arm "A"	1
34	32146-6	Nut	2
35	33-4850	Spring Arm	2
36	5-4460	Pivot Washer	2


Ref. No.	Part No.	Description	No. Used
37	32146-5	Nut	2
38	40-2250	Decal — Rear Bagger	1
39	23-9120	Pivot Arm "B"	1
40	42-0110	Housing	1
41	43-8480	Decal — Danger	1
42	36-1350	Discharge Chute	1

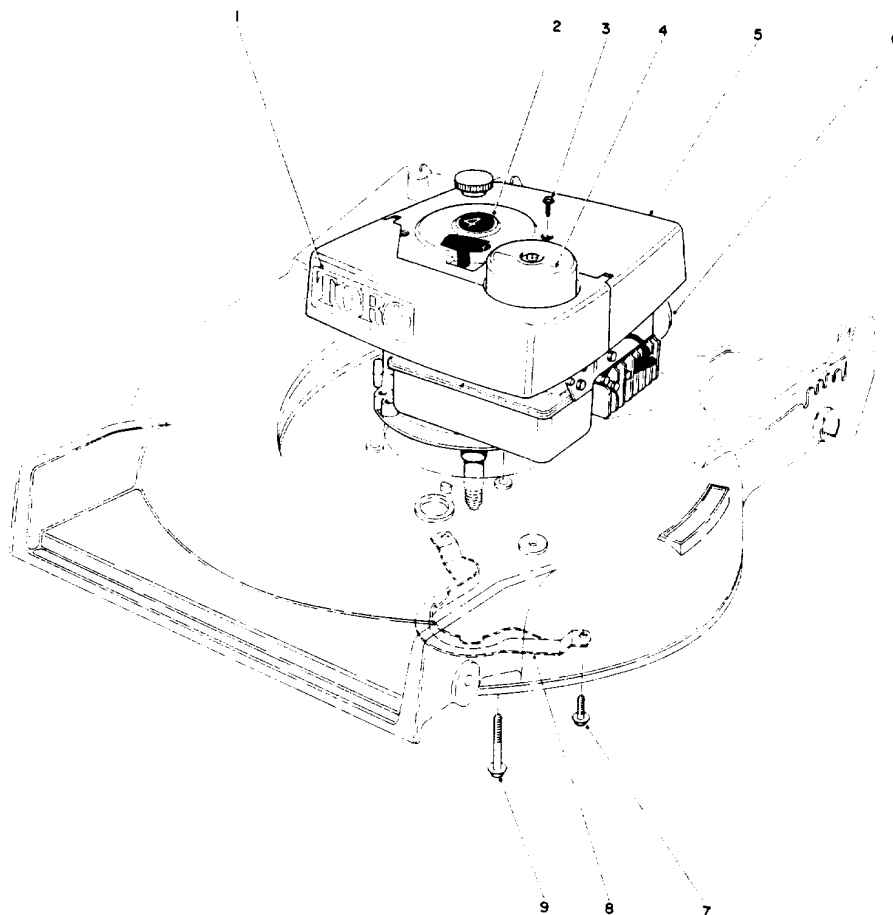

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-2570	Decal – Toro	1
2	38-0790	Decal – 4 Cycle	1
3	32104-94	Hex Hd. Tapping Screw	4
4	38-0780	Decal – Air Filter	1
5	37-9831	Shroud Assembly	1


Ref. No.	Part No.	Description	No. Used
6	221-694	Engine	1
7	11-9760	Thread Forming Screw	2
8	39-1840	Belt Guide	1
9	11-0590	Screw	3

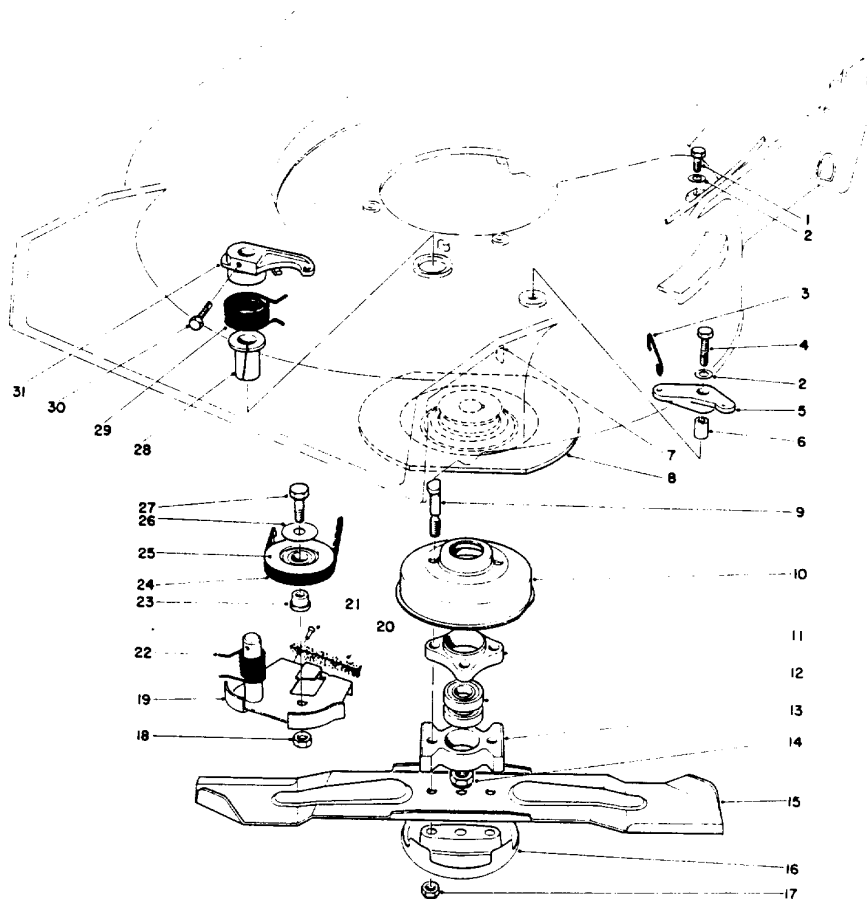

BLADE BRAKE CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-11	Hex Hd. Thread Forming Screw	1
2	3256-2	Washer	2
3	43-1380	Link-Control	1
4	32104-107	Hex Hd. Tapping Screw	1
5	43-1390	Bell Crank	1
6	42-1330	Sleeve — Bell Crank	1
7	3257-3	Woodruff Key	1
8	43-7720	Flywheel	1
9	42-3190	Blade Bolt	2
10	42-1020	Brake Drum	1
11	42-6890	Hub Assy. (Incl. Ref. #12)	1
12	38-7820	Bearing	2
13	42-6760	Spacer Blade	1
14	3296-33	Locknut w/Nylon Insert	1
15	42-1000	Blade	1
16	42-0910	Anti Scalp Cup	1


Ref. No.	Part No.	Description	No. Used
17	3296-55	Locknut	2
18	3296-6	Locknut	1
19	42-0940	Brake Plate	1
20	42-0890	Brake Pad	1
21	3295-23	Rivet	2
22	42-0840	Spring	1
23	42-4370	Hub — Idler Pulley	1
24	42-0880	V-Belt	1
25	42-0960	Idler Pulley Assembly w/Bearing	1
26	42-0870	Washer	1
27	3211-5	Hex Hd. Capscrew	1
28	42-1320	Split Bushing	1
29	44-0150	Spring	1
30	32104-97	Hex Hd. Tapping Screw	1
31	42-0950	Lever	1

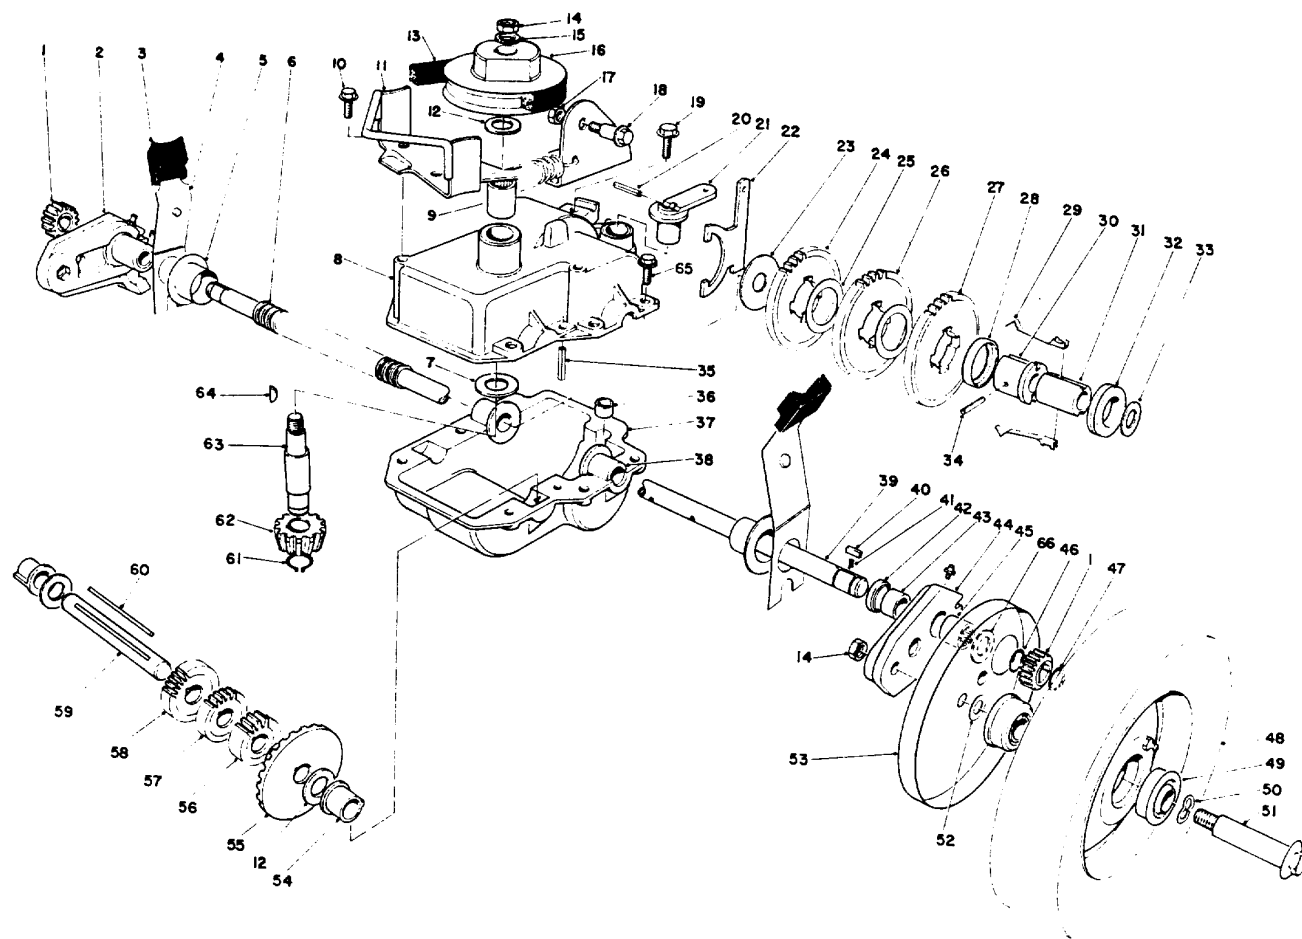

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-9160	Pinion	2
2	29-9590	Pivot Arm R.H. (Incl. Ref. # 42, 43 & 45)	1
3	25-7740	Knob - Arm	2
4	29-9540	Spring Arm	2
5	42-3520	End Cap	2
6	24-7922	Drive Shaft Cover	1
7	256-196	Oilite Thrust Washer	1
8	39-7282	Upper Gear Case	1
9	252-99	Bearing	1
10	11-9760	Hex Head Screw	2
11	40-9730	Belt Guide Bracket	1
12	36-4790	Washer	3
13	36-8070	Belt	1
14	32146-6	Locknut	3
15	3256-45	Washer	1
16	39-6740	Pulley	1
17	32146-17	Nut	1
18	26-5620	Shoulder Bolt	1
19	32144-11	Screw Thread Forming	1
20	32121-99	Slotted Roll Pin	1
21	29-9560	Shift Lever	1
22	29-9520	Shift Yoke	1

Ref. No.	Part No.	Description	No. Used
23	29-9690	Washer	1
24	42-4740	Gear - 38 Tooth	1
25	36-4770	Gear Spacer	2
26	42-4730	Gear - 40 Tooth	1
27	29-9271	Gear - 42 Tooth	1
28	39-7830	Key Retainer	1
29	39-6470	Key	2
30	39-6730	Sleeve Body	1
31	39-6720	Sleeve	1
32	29-9340	Shift Collar	1
33	36-4780	Washer	1
34	32121-106	Coil Pin	1
35	32121-100	Roll Pin	1
36	29-9570	Yoke Bushing	1
37	29-9410	Lower Case	1
38	29-9310	Bushing - Output Shaft	1
39	39-9750	Output Shaft	1
40	39-9680	Key	2
41	39-9650	Spring	2
42	253-140	Seal	2
43	256-110	Bushing	2
44	29-9640	Pivot Arm L.H. (Incl. Ref. # 42, 43 & 45)	1

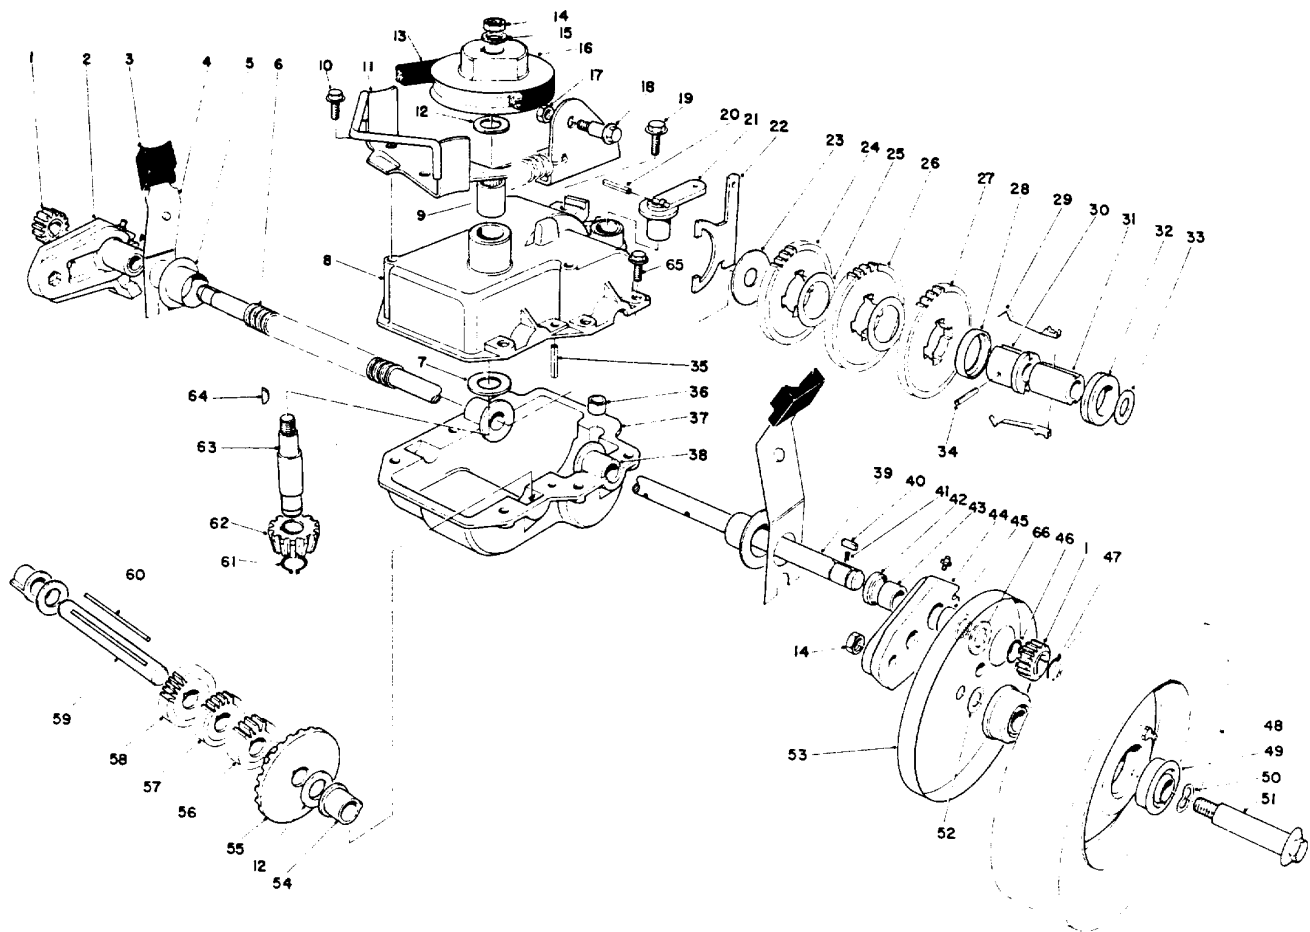


GEAR CASE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	252-96	Needle Bearing	2
46	32151-11	Grip Ring	2
47	32151-61	Retaining Ring	2
48	38-2930	Wheel & Tire Assembly (Incl. Ref. # 49)	2
49	251-180	Bearing	4
50	3290-393	Wave Washer	2
51	26-4430	Wheel Bolt	2
52	40-1940	Washer — Wheel Bolt	2
53	36-5630	Wheel Cover	1
54	29-9350	Bushing — Short Shaft	2
55	39-6670	Gear — Bevel	1

Ref. No.	Part No.	Description	No. Used
56	39-6630	Gear — 14 Tooth	1
57	39-6640	Gear — 16 Tooth	1
58	39-6650	Gear — 18 Tooth	1
59	39-6680	Short Shaft	1
60	39-7840	Key — Square	1
61	32151-57	Retaining Ring	1
62	39-6660	Pinion — Bevel	1
63	39-6690	Input Shaft	1
64	3257-1	Key — Woodruff	2
65	32144-44	Screw Hex Head	6
66	252-73	Thrust Washer	2
*	39-5802	Gear Case Assembly — Complete	1


*Not Illustrated

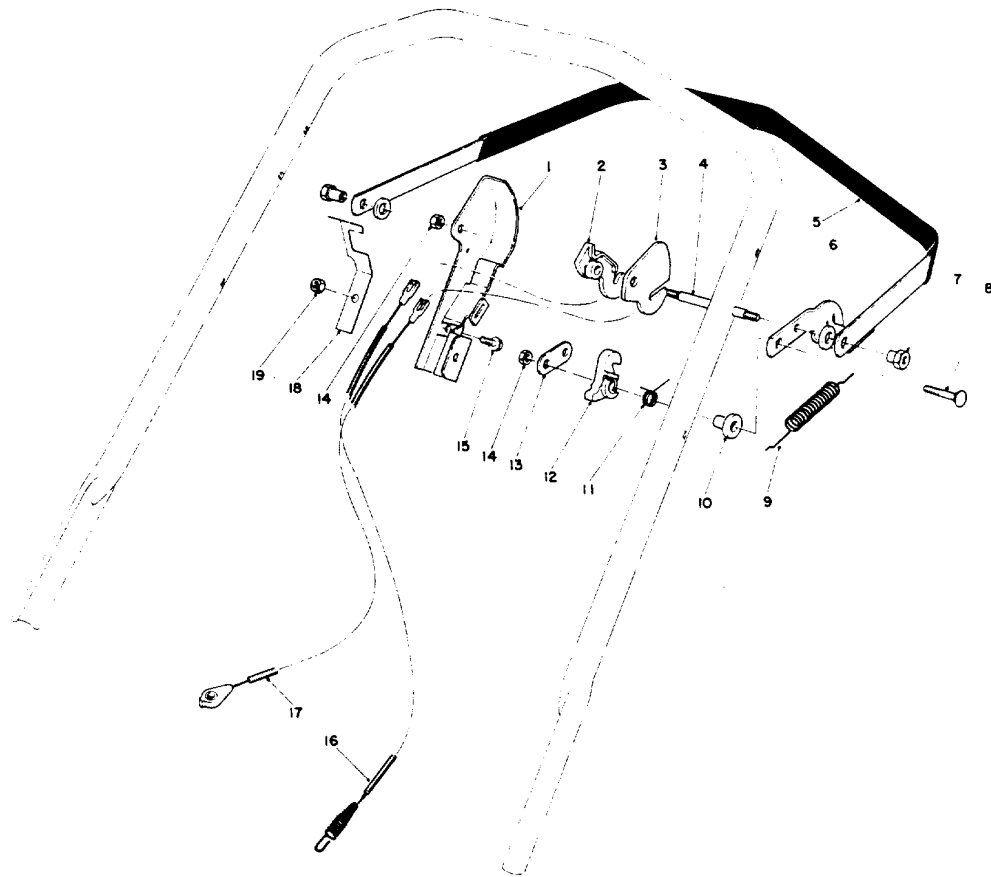

TRACTION CONTROL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-8790	Cable Support	1
2	43-7010	Cable Hook	1
3	43-8800	Cable Anchor	1
4	43-8650	Shoulder Stud	1
5	43-8750	Control Bar	1
6	43-8700	Nylon Washer	2
7	43-8660	Shoulder Nut	2
8	3229-26	Carriage Bolt	2
9	43-8810	Spring	1
10	43-8720	Spacer	1


Ref. No.	Part No.	Description	No. Used
11	43-8690	Spring	1
12	43-7000	Release Latch	1
13	43-8710	Link	1
14	32149-2	Locknut	2
15	3234-5	Hex Flange Hd. Locking Screw	1
16	43-8760	Clutch Cable Assembly	1
17	43-8770	Traction Cable	1
18	43-8680	Leaf Spring	1
19	32149-1	Locknut	1

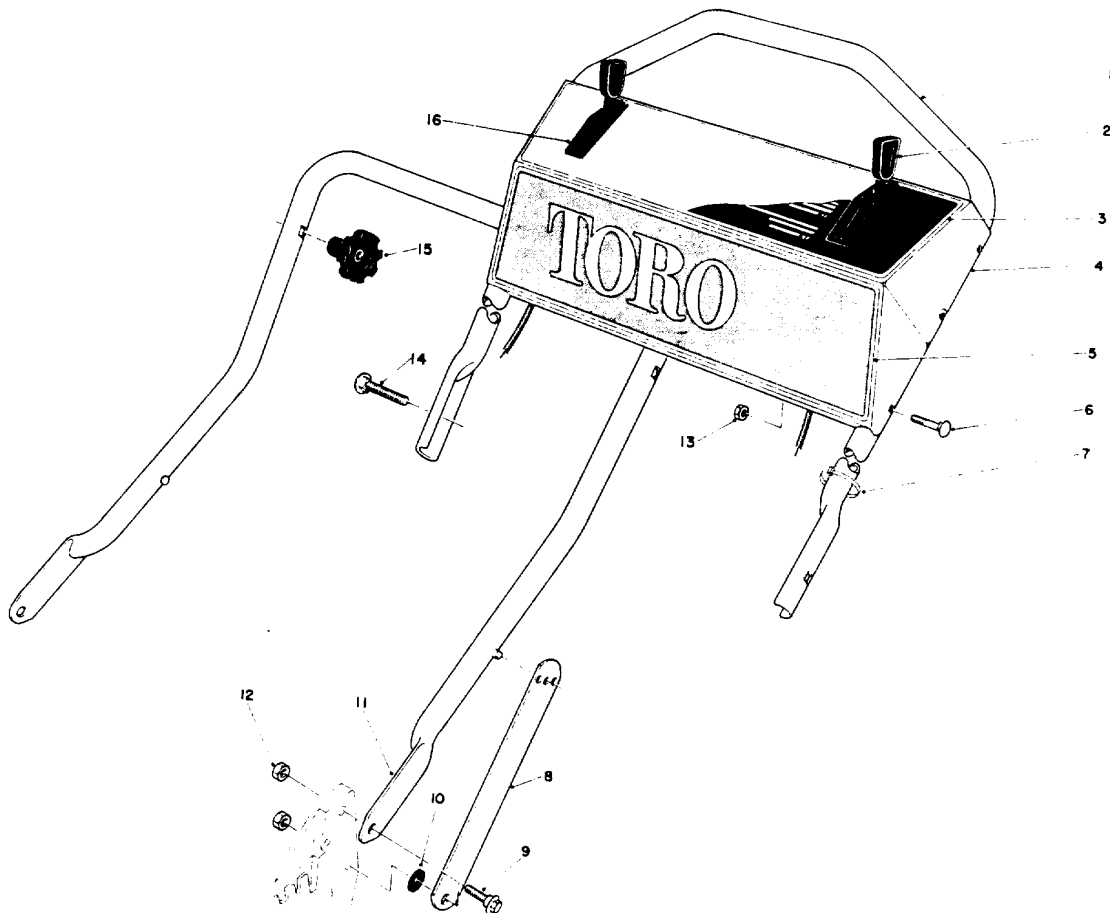

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	43-1340	Upper Handle	1
2	42-3910	Throttle Control	1
3	43-8820	Decal — Instruction	1
4	43-4471	Control Plate	1
5	43-8830	Decal — Toro	1
6	3229-26	Carriage Bolt	4
7	3290-378	Cable Tie	2
8	43-1370	Handle Latch	2

Ref. No.	Part No.	Description	No. Used
9	27-7211	Shoulder Screw	4
10	3-3287	Spacer — Handle Latch	2
11	43-1360	Lower Handle Assembly	1
12	32146-5	Locknut	4
13	32149-2	Locknut	4
14	17-9420	Handle Screw	2
15	19-4050	Handle Knob	2
16	42-3920	Ground Speed Control	1

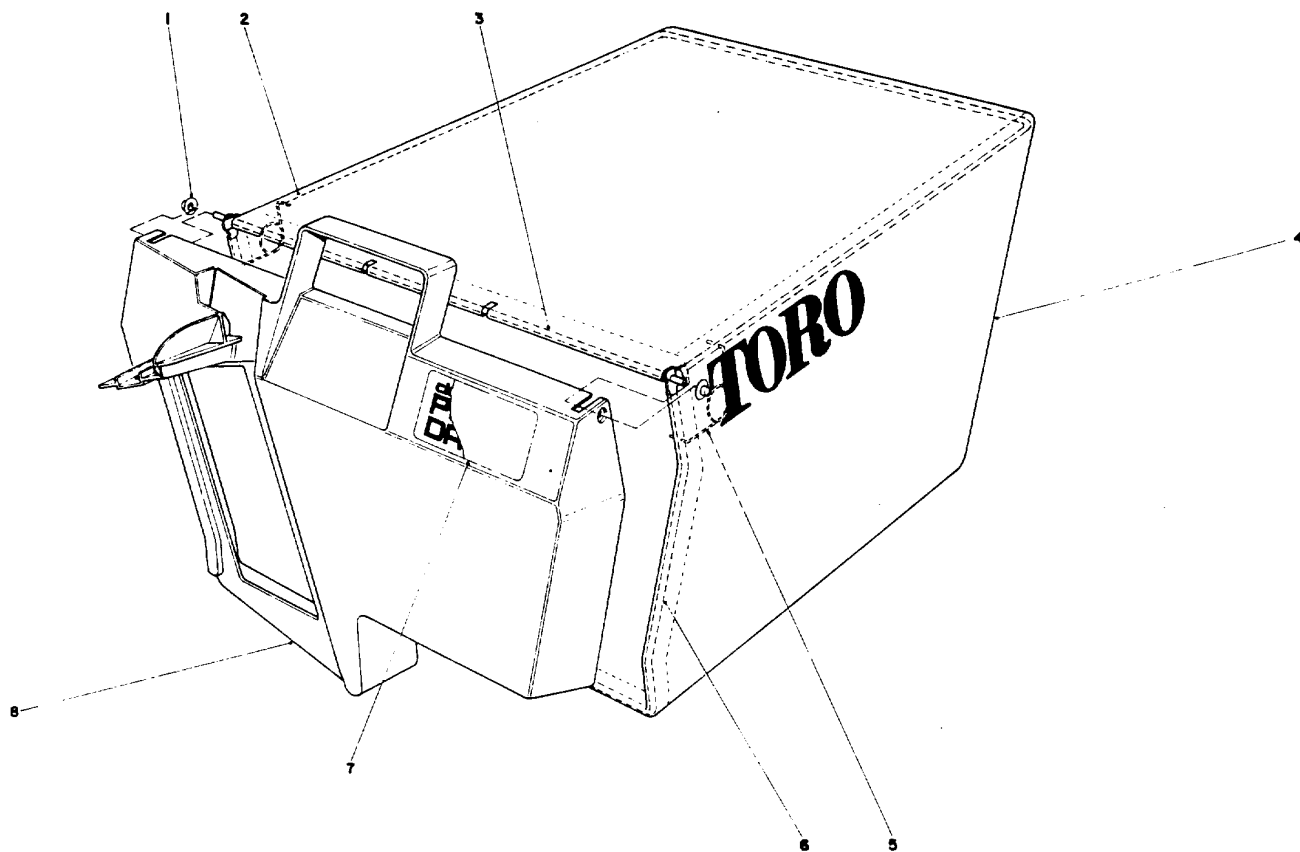


GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-422	Push Nut	2
2	42-4030	Bag Frame Upper	1
3	33-4820	Hinge Bag Door	1
4	8-2759	Grass Bag	1

Ref. No.	Part No.	Description	No. Used
5	36-6910	Spring	2
6	42-4020	Frame Bag	1
7	40-2240	Decal Bag Door	1
8	37-1390	Door Grass Bag	1
*	11-0189	Grass Bag Assembly (Incl. Ref. #1-8)	1

*Not Illustrated


BRIGGS & STRATTON ENGINE MODEL NO.. 110908-0529-01

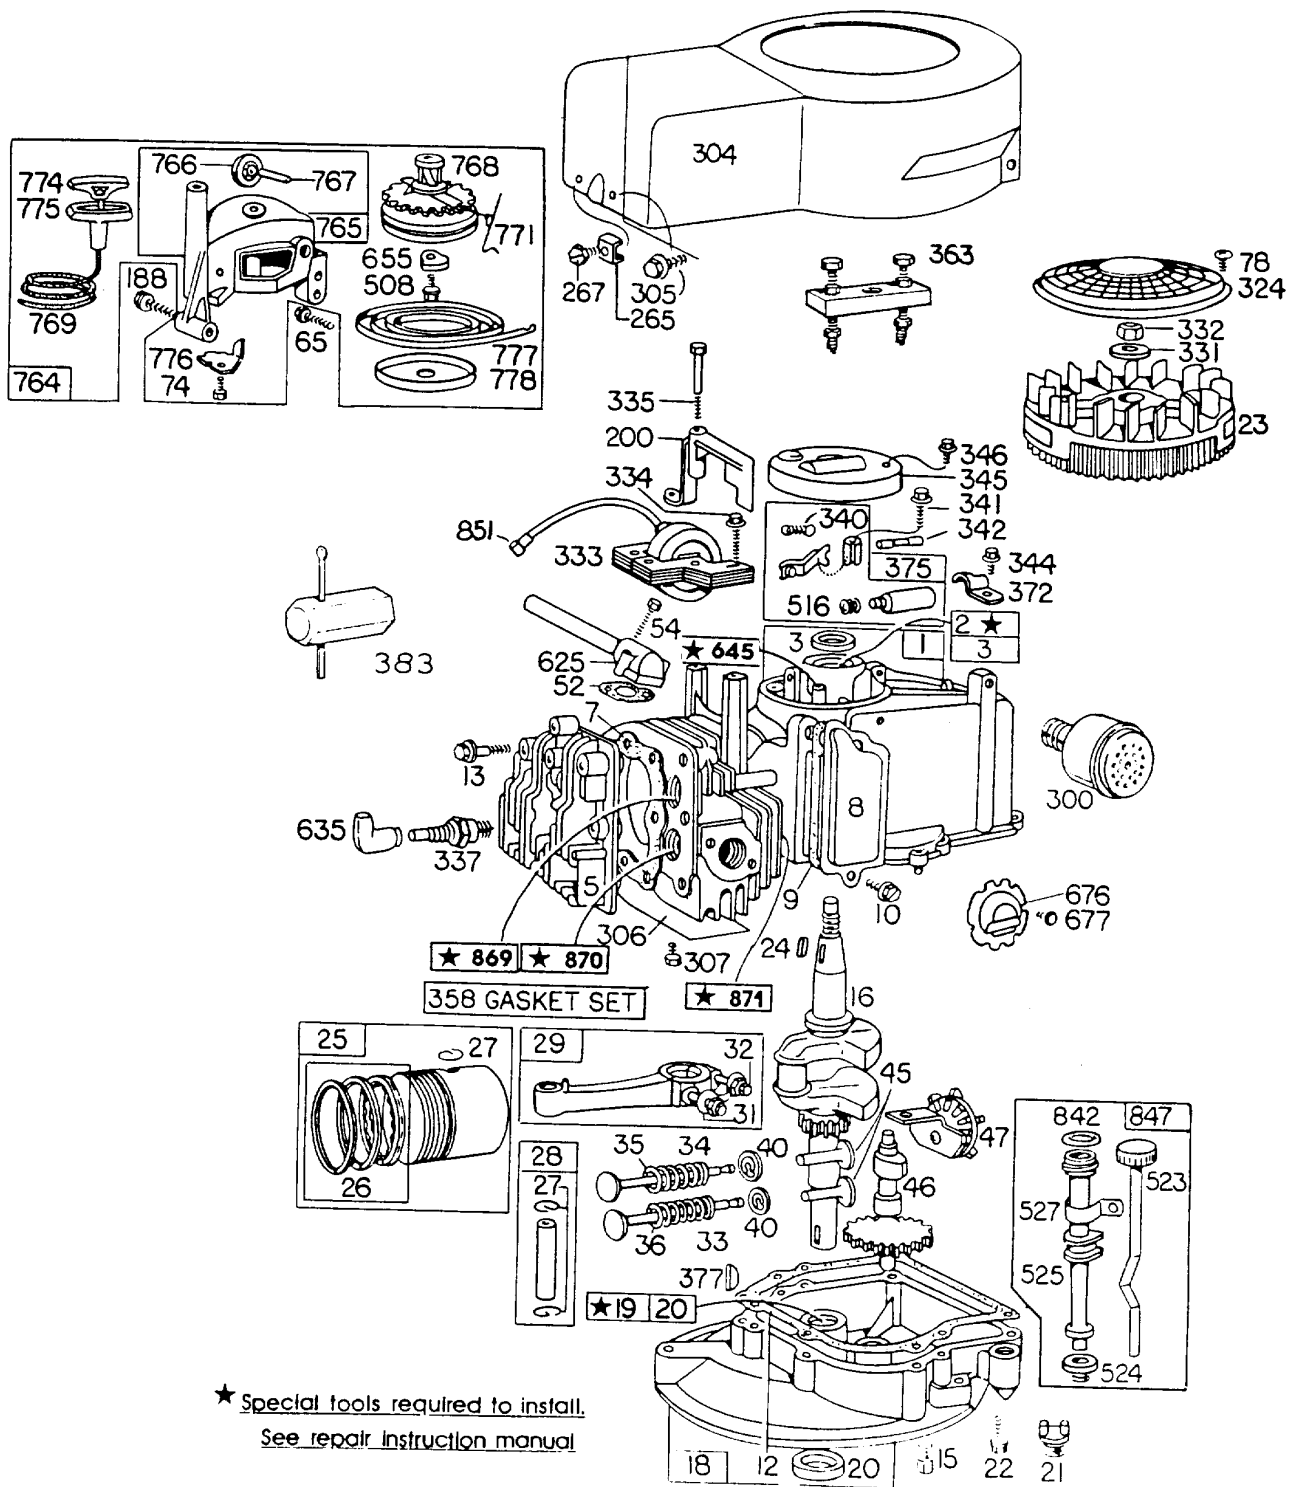

BRIGGS & STRATTON ENGINE MODEL NO. 110908-0529-01

Ref. No.	Part No.	Description	No. Used
1	391639	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
		Note: Requires special tools for installation	1
3	299819	Seal — Oil	1
5	211851	Head — Cylinder	1
7	*270836	Gasket — Cylinder Hd.	1
8	298383	Breather — Valve Chamber	1
9	*270239	Gasket — Valve Cover	1
10	93394	Screw — Breather Mounting	1
12	*270833	Gasket — Crankcase — .015" thick (Standard)	1
	*270895	Gasket — Crankcase .005" thick	1
	*270896	Gasket — Crankcase — .009" thick	1
13	93111	Screw — Cylinder Hd. (1-15/16" long)	1
15	93418	Plug — Oil Drain	1
16	261641	Crankshaft	1
18	392381	Sump — Oil	1
19	293709	Bushing — Oil Sump	1
		Note: Requires special tools for installation	1
20	391483	Seal — Oil	1
22	93032	Screw — Sump Mtg.	1
23	391488	Flywheel — Magneto	1
24	61760	Key — Flywheel	1
25	391650	Piston Assy. — Standard	1
	391651	Piston Assy. — .010" O.S.	1
	391652	Piston Assy. — .020" O.S.	1
	391653	Piston Assy. — .030" O.S.	1
		MODEL 110900 SERIES	
		PISTON RING SETS:	
		Note: For chrome piston ring set — standard size — order Part No. 392330	
26	391654	Ring Set — Standard Piston	1
	391656	Ring Set — .010" O.S. Piston	1
	391658	Ring Set — .020" O.S. Piston	1
	391660	Ring Set — .030" O.S. Piston	1
27	26026	Lock — Piston Pin	1
28	391649	Pin Assembly — Piston — Std.	1
	394861	Pin Assembly — Piston .005" O.S.	1
29	391640	Rod Assembly — Connecting	1
		Note: For connecting rod with .020" undersize crankpin bearing — order No. 393710	1
31	222390	Lock — Connecting Rod Screw	1
32	93670	Screw — Connecting Rod	1
33	212004	Valve — Exhaust	1
34	261233	Valve — Intake	1
35	260552	Spring — Intake Valve	1
36	26478	Spring — Exhaust Valve	1
40	93312	Retainer — Valve Spring	1
		Used with valves with groove in stem	1
45	261250	Tappet — Valve	1
46	394845	Gear — Cam	1
47	294652	Oil Slinger Gear and Bracket	1
52	*270844	Gasket — Intake Elbow	1
54	93485	Screw — Intake Elbow Mtg.	1
65	93587	Screw — Vertical Pull Starter Mounting	1
74	93490	Screw	1
78	93758	Screw — Screen Mtg.	1
188	93585	Screw — Fuel Tank and Starter Mounting	4
200	68388	Blade Governor	1

Ref. No.	Part No.	Description	No. Used
265	22372	Clamp — Casing	1
267	93469	Screw — Clamp Mtg.	1
300	391435	Muffler — Exhaust	1
304	391636	Housing — Blower	1
305	93559	Screw — Blower Housing Mounting	1
306	223263	Shield — Cylinder	1
307	93490	Screw — Cylinder Shield Mounting	1
324	280140	Screen — Rotating	1
331	220865	Washer — Flywheel	1
332	92284	Nut — Flywheel	1
333	298502	Armature — Magneto	1
334	93381	Screw — Armature Mtg.	1
335	93435	Screw — Armature and Governor Blade	1
337	293918	Plug — Spark (with gasket) 1-1/2" high — (resistor type) (37-42 mm)	1
340	26018	Spring — Breaker Arm	1
341	93381	Screw — Breaker Arm Mounting	1
342	65704	Plunger — Breaker Point	1
344	93042	Screw — Condenser Clamp Mounting	1
345	220366	Cover — Breaker Point and Condenser	1
346	93705	Screw — Dust Cover Mounting	1
358	391662	Gasket Set	1
363	19069	Puller — Flywheel (Optional Accessory)	1
372	220477	Clamp — Condenser	1
375	294628	Breaker Points and Condenser Set	1
377	93065	Key — Woodruff No. 6	1
383	89838	Wrench — Spark Plug	1
508	93158	Screw	1
516	260374	Spring — Connector	1
523	391838	Cap with Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280131	Tube — Oil Filler	1
527	222549	Clamp — Oil Filler Tube	1
625	391377	Tube — Fuel Intake	1
635	66538	Elbow — Spark Plug	1
645	23513	Bushing — Plunger	1
655	222057	Anchor — Spring	1
676	393760	Deflector — Muffler	1
677	93705	Screw — Muffler Deflector and Harness Retainer	1
764	391486	Starter Assembly — Vertical Pull	1
765	299947	Housing — Vertical Pull Starter	1
766	280022	Pulley — Rope (Small)	1
767	231048	Pin — Small Rope Pulley	1
768	299948	Pulley and Gear Assembly — Starter (50" Rope)	1
769	66734	Rope — Vertical Pull Starter (50")	1
771	299961	Clip — Vertical Pull	1
774	280121	Insert — Starter Handle	1
775	280036	Grip — Starter Rope	1
776	222049	Guide — Rope	1
777	390066	Spring — Vertical Pull Starter	1
778	280021	Cover — Vertical Pull Starter Pulley	1
842	270920	Seal — Filler Cap	1
847	392056	Filler Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	210879	Seat — Intake Valve (Std.)	1
870	211291	Seat — Exhaust Valve (Std.)	1
871	63709	Guide — Exhaust Valve	1

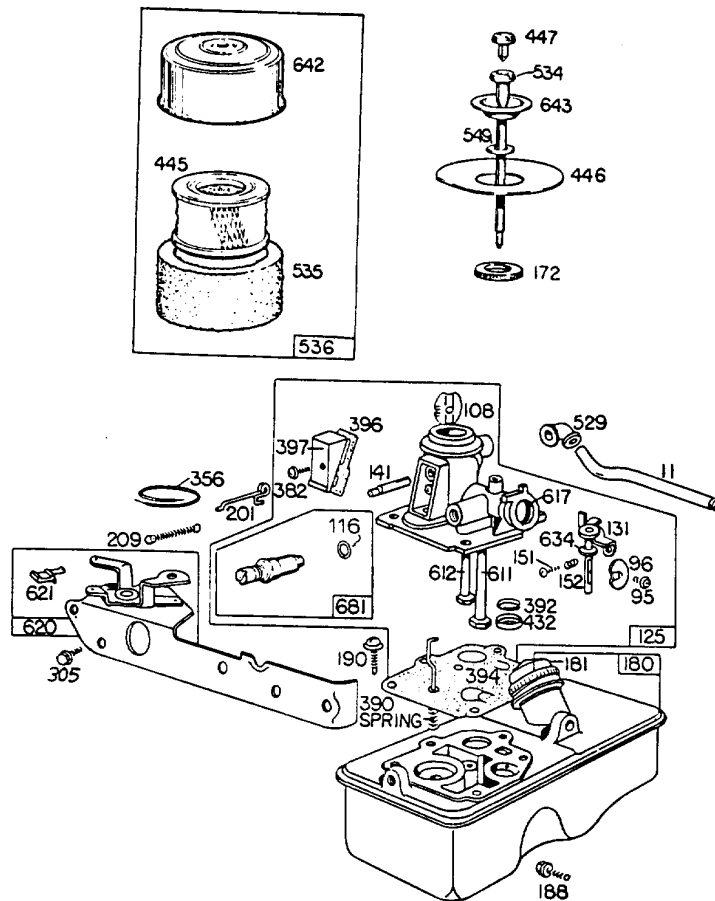

CARBURETOR ASSEMBLY BRIGGS & STRATTON MODEL NO. 110908-0529-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
11	231043	Tube Breather	1	392	260455	Spring - Fuel Pump Diaphragm	1
95	93499	Screw - Throttle Valve Mounting	1	394	391643	Diaphragm Carburetor	1
96	211237	Valve - Throttle	1	396	270571	Gasket - Choke Link Cover	1
108	280178	Valve - Choke	1	397	211678	Cover - Choke Link	1
116	280203	O-Ring	1	432	221377	Cap - Spring	1
125	394065	Carburetor Assembly	1	445	392308	Cartridge - Air Cleaner	1
131	299977	Shaft and Lever - Throttle	1	446	222844	Base - Air Cleaner	1
141	68908	Shaft - Choke	1	447	93913	Screw - Cover Mounting	1
151	93524	Screw - Rd. Hd.	1	529	67838	Grommet - Breather	1
152	260746	Spring - Throttle Adj.	1	534	93818	Screw - Air Cleaner (Internal)	1
172	271077	Gasket - Air Cleaner	1	535	270979	Element - Air Cleaner	1
180	381694	Tank Assembly - Fuel	1	536	392368	Cleaner Assy. - Air	1
181	391494	Cap - Fuel Tank (Chrome)	1	549	270978	Washer (Below Internal Screw Head)	1
188	93585	Screw - Fuel Tank and Starter Mounting	1	611	297219	Pipe - Fuel (Long)	1
190	93440	Screw - Fuel Tank Mounting	1	612	296811	Pipe - Fuel (Short)	1
201	261027	Link - Governor	1	617	270344	Seal - Fuel Intake Tube	1
209	201419	Spring - Governor (For 2500 to 2700 RPM)	1	620	391442	Plate - Carburetor Control	1
305	93559	Screw - Blower Housing Mounting	1	621	297472	Switch - Stop	1
356	298479	Wire - Ground	1	634	270167	Washer - Throttle Shaft (Felt)	1
382	93545	Screw - Choke Link Cover	1	642	222626	Cover - Air Cleaner	1
390	261249	Spring - Diaphragm	1	643	222594	Cup - Air Cleaner	1
				681	393451	Needle Valve Kit (Nylon Body)	1