



Groundsmaster[®] 328-D

2WD and 4WD Traction Unit

Model No. 30626-220000001 and Up

Model No. 30627-220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

 
Description	Page	Description	Page
Frame Assembly	4	Front Axle Assembly No. 86–9600–03 (Continued)	
Frame Assembly No. 98–3879	5	(Only on: 30626)	46
Control Panel Assembly	6	Front Axle Assembly No. 86–9630–03	
Brake Pedal Assembly	7	(Only on: 30627)	47
Traction Pedal Assembly	8	Front Axle Assembly No. 86–9630–03 (Continued)	
Power Steering Assembly	9	(Only on: 30627)	48
Power Steering Unit Assembly No. 92–7308 ..	10	Brake Assembly	49
Engine Installation Assembly	11	Electrical Schematic	50
PTO and Shaft Assembly	12	Hydraulic Schematic	51
PTO Assembly	13	Engine and Mounting Components Assembly .	52
Valve and Cylinder Assembly	14	Crankcase Assembly	
Hydraulic Cylinder Assembly No. 100–6586		Engine Assembly No. 104–3448	55
(2–1/2 in. Bore)	15	Oil Pan Assembly	
Hydraulic Cylinder Assembly No. 100–6591		Engine Assembly No. 104–3448	56
(Optional) (3 in. Bore)	16	Cylinder Head Assembly	
Valve Assembly No. 105–7821–01	17	Engine Assembly No. 104–3448	57
Radiator and Hood Assembly	18	Gear Case, Oil Filter and Cover Assembly	
Hydrostatic Transmission Assembly	20	Engine Assembly No. 104–3448	58
Hydrostatic Transmission Assembly		Head Cover Assembly	
No. 92–8947	22	Engine Assembly No. 104–3448	59
Neutral Centering Device Assembly	24	Dipstick and Guide Assembly	
4 Wheel Drive Rear Axle Assembly		Engine Assembly No. 104–3448	60
(only on: 30627)	25	Main Bearing Case Assembly	
Driveshaft Assembly No. 98–5009		Engine Assembly No. 104–3448	61
(only on: 30627)	27	Camshaft and Idler Gear Shaft Assembly	
Bi-Directional Clutch Assembly No. 95–6296		Engine Assembly No. 104–3448	62
(only on: 30627)	28	Piston and Crankshaft Assembly	
Cylinder Assembly No. 99–2415		Engine Assembly No. 104–3448	63
(only on: 30627)	29	Flywheel Assembly	
Push Arm and ROPS Assembly	30	Engine Assembly No. 104–3448	64
Water and Fuel Filter Assembly	32	Fuel, Camshaft and Governor Shaft Assembly	
Water and Fuel Filter No. 98–9305	33	Engine Assembly No. 104–3448	65
Fuel Tank and Front Axle Assembly	34	Idle Apparatus and Stop Solenoid Assembly	
2 Wheel Drive Rear Axle Assembly		Engine Assembly No. 104–3448	66
(only on: 30626)	35	Injection Pump Assembly	
Hydraulic Cylinder Assembly No. 92–7828		Engine Assembly No. 104–3448	67
(only on: 30626)	37	Injection Pump Assembly No. 98–9643	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	68
Bevel Pinion Shaft Assembly (only on: 30627)	38	Governor Assembly	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	69
Differential Assembly (only on: 30627)	39	Speed Control Plate Assembly	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	70
Axle Support Assembly (only on: 30627) ...	40	Nozzle Holder Glow Plug Assembly	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	71
Bevel Gear Case Assembly (only on: 30627)	41	Nozzle Holder Assembly No. 98–9468	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	72
Bevel Gear Shaft Assembly (only on: 30627)	42	Alternator and Pulley Assembly	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	73
Axle Case Assembly (only on: 30627)	43	Alternator Assembly	
4 Wheel Drive Rear Axle Assembly No. 95–7501		Engine Assembly No. 104–3448	74
Axle Assembly (only on: 30627)	44	Starter Mount Assembly	
Front Axle Assembly No. 86–9600–03		Engine Assembly No. 104–3448	75
(Only on: 30626)	45		

Starter Assembly No. 98–9705		Valve and Rocker Arm Assembly	
Engine Assembly No. 104–3448	76	Engine Assembly No. 104–3448	79
Water Flange and Thermostat Assembly		Inlet and Exhaust Manifold Assembly	
Engine Assembly No. 104–3448	77	Engine Assembly No. 104–3448	80
Water pump and Water Pipe Assembly			
Engine Assembly No. 104–3448	78		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

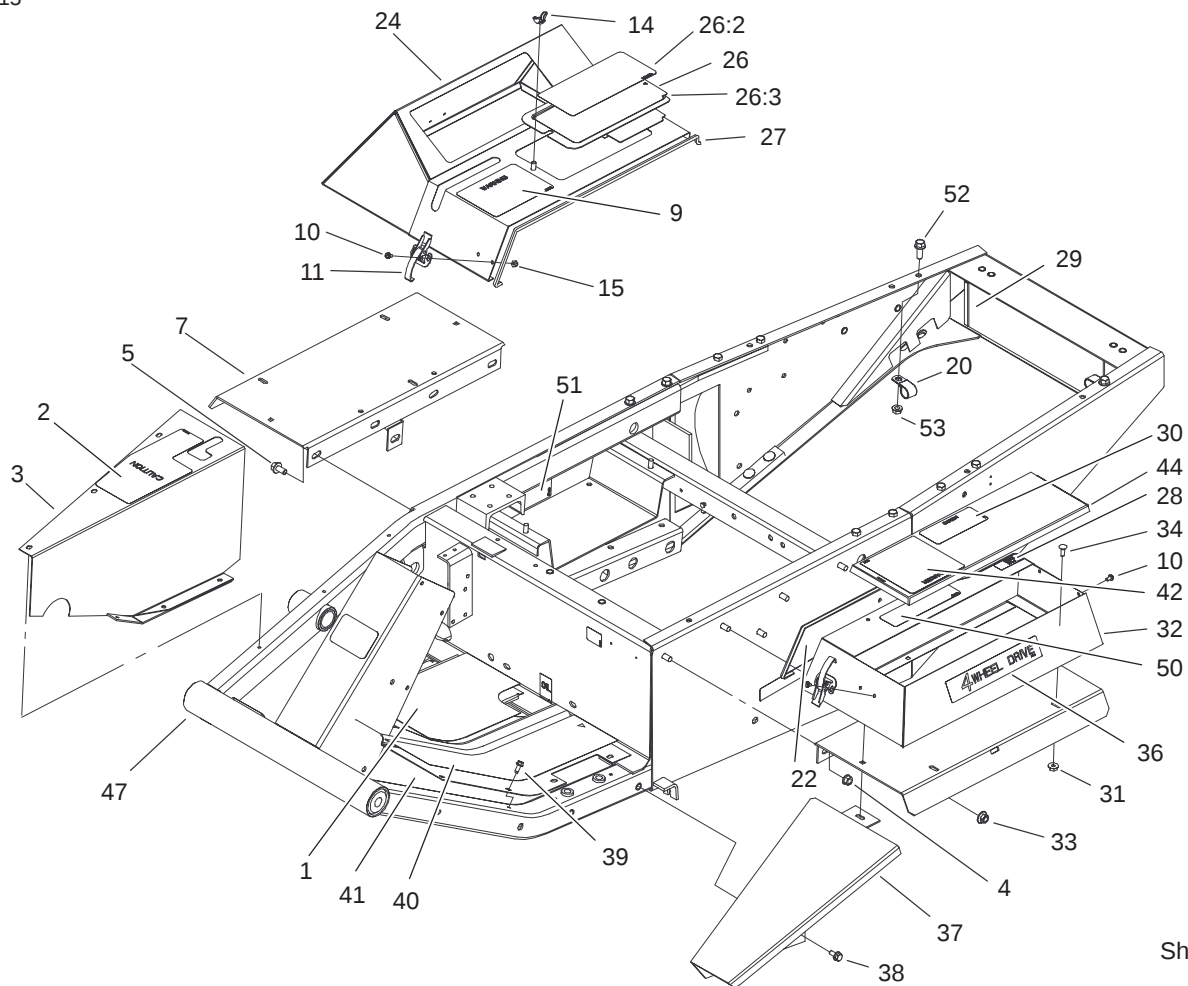


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	21-2770	1	Pad-Floor Plate, RH
2	105-7822	1	Decal-Caution
3	21-2660-01	1	Plate-Side, Foot Rest
4	32128-21	2	Nut-HF
5	3234-12	4	Screw-HHF
7	105-2596-01	2	Fender ASM
9	27-7290	1	Decal-PTO
10	3290-144	9	Screw-SHWH
11	249-21	3	Clamp-Slotted
14	32103-2	1	Nut-Wing
15	3296-2	9	Nut-Lock
20	2412-4	2	Clamp
22	37-9650	1	Trim-Tool Box
24	38-4550-03	1	Cover-Instruments
26	105-2564	1	Cover ASM-Battery
26:2	105-2531	1	Decal-Starting Instructions
26:3	92-7801	1	Shield-Cover, Battery
27	39-8020	1	Trim-Cover, Instrument
28	52-1321	1	Decal-Fuel, Diesel
29	43-4300	2	Trim-Frame, Rear
30	27-7310	1	Decal-Refueling
31	32128-33	5	Nut-HF
32	93-3182-03	1	Box-Tool
33	32128-19	6	Nut-HF

Ref. No.	Part No.	Qty.	Description
34	3229-1	5	Screw-CARR
36	72-3560	2	Decal
37	68-8610-01	1	Extension-Fender
38	3234-14	2	Screw-HHF
39	32144-10	11	Screw-HWH
40	21-2760	1	Pad-Floor Plate, LH
41	88-0070-01	1	Plate-Floor
42	72-3700	1	Decal
44	93-3177-03	1	Cover-Tool Box
47	98-3879	1	Frame ASM
50	67-1710	1	Decal-Warning
52	3234-11	2	Screw-HHF
53	3290-357	2	Nut-HHF

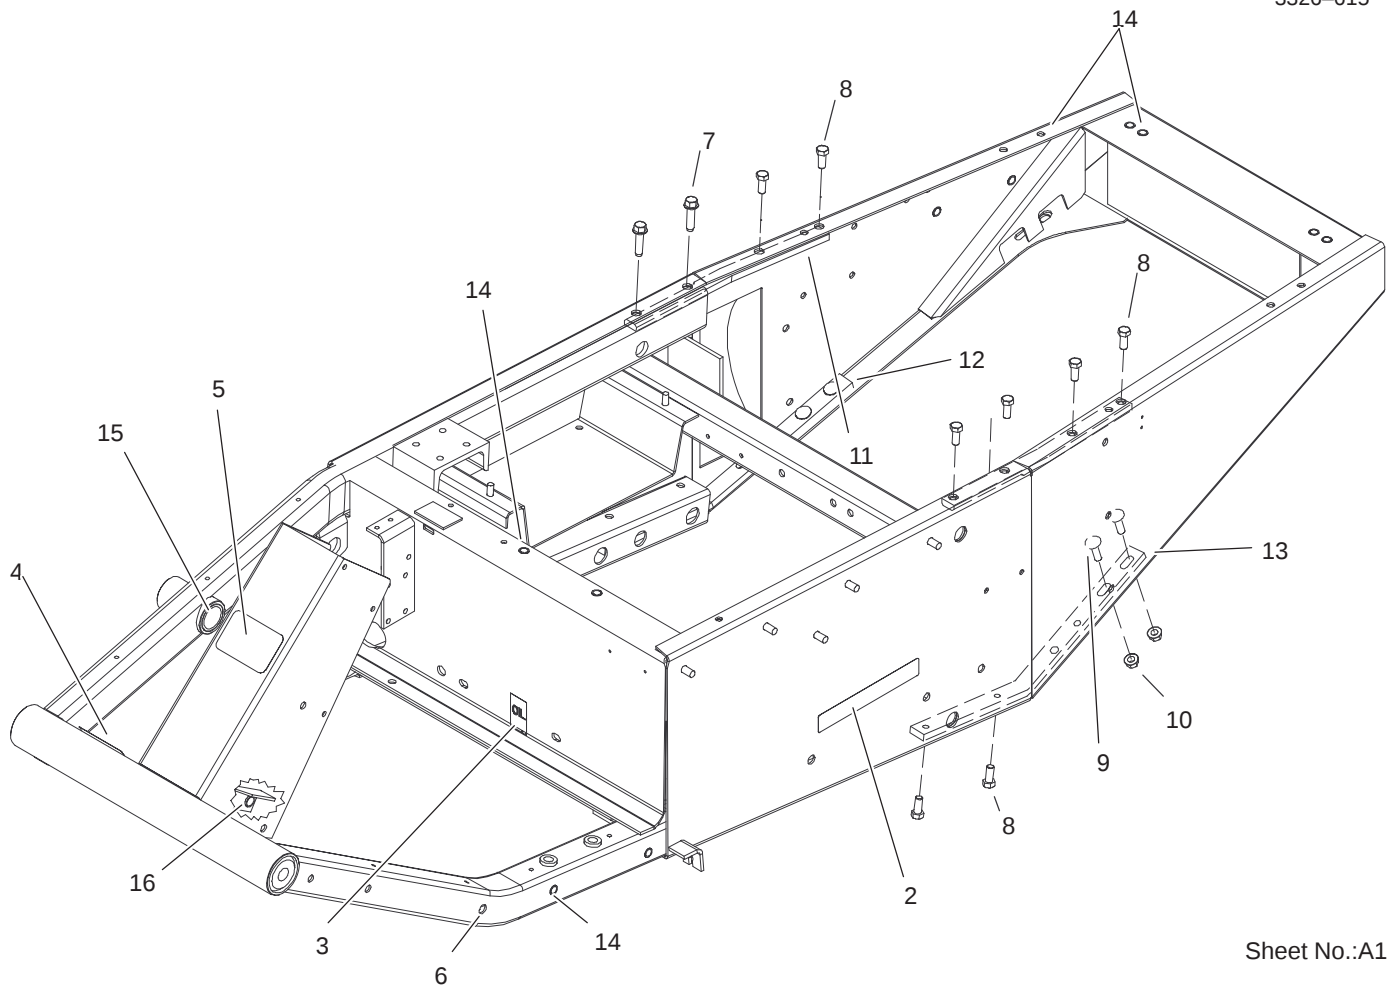 


Sheet No.:A1

Frame Assembly No. 98-3879

Ref. No.	Part No.	Qty.	Description
2	67-1720	2	Decal-Caution
3	53-4430	1	Decal-Oil
4	27-7320	1	Decal-Pedal, Traction
5	70-2200	1	Decal-Toro
6	32148-9	1	Insert-Nut
7	11-0590	2	Screw-HWHTF
8	3234-25	10	Bolt-HF
9	3231-25	4	Screw-CARR
10	32128-21	4	Nut-HF
11	98-3866-01	2	Brace-Upper
12	98-3865-01	1	Brace-Right, Lower
13	98-3864-01	1	Brace-Left, Lower
14	3290-472	10	Insert-Threaded
15	256-126	2	Bushing
16	256-156	1	Bushing-Flange

Ref. No.	Part No.	Qty.	Description

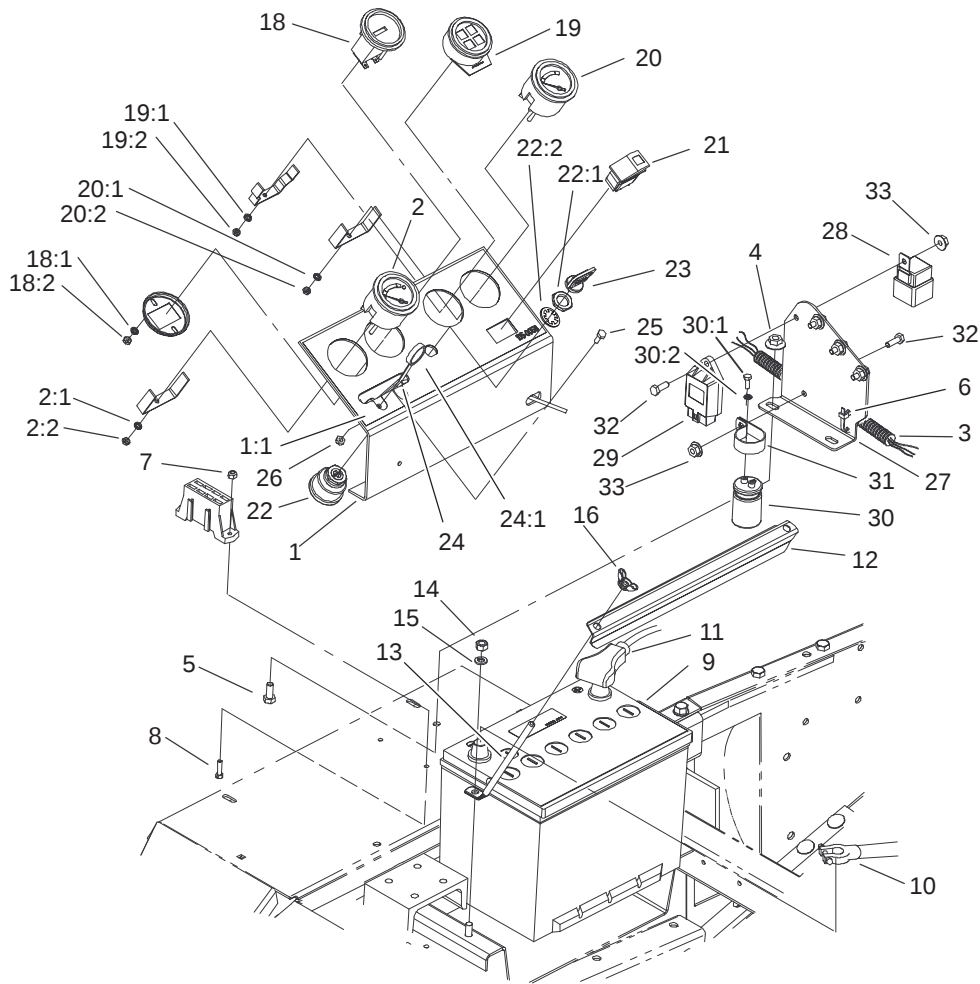 


Sheet No.:3

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105-2917	1	Instrument Panel ASM
1:1	105-0056	1	Decal-Panel, Instrument
2	98-9339	1	Gauge-Fuel
2:1	3254-1	3	Washer-Lock, Internal
2:2	3217-27	3	Nut-Hex
3	104-3438	1	Harness-Wire, Main
4	32128-30	4	Nut
5	322-3	4	Screw-HH
6	3290-379	2	Tie-Cable
7	3296-2	2	Nut-Lock
8	32105-13	2	Screw-SHH
9	63-9230	1	Battery-Dry
10	104-9497	1	Cable-Battery, Negative
11	95-8853	1	Cable-Battery, Positive
12	24-6420-03	1	Holddown-Battery
13	24-6390	2	Stud-Holddown, Battery
14	3217-6	2	Nut-Hex
15	3253-4	2	Washer-Lock
16	32103-2	2	Nut-Wing
18	66-2950	1	Gauge-Hourmeter
18:1	3255-20	2	Washer-Lock
18:2	3217-25	2	Nut-Hex

Ref. No.	Part No.	Qty.	Description
19	98-9306	1	Light-Warning
19:1	3254-1	1	Washer-Lock, Internal
19:2	3217-27	1	Nut-Hex
20	98-9308	1	Gauge-Temperature
20:1	3254-1	3	Washer-Lock, Internal
20:2	3217-27	3	Nut-Hex
21	100-8072	1	Switch
22	104-2541	1	Switch-Key
22:1	218-461	1	Nut-HH
22:2	3254-5	1	Washer-Lock, Internal
23	63-8360	1	Key-Ignition
24	43-3990	1	Control-Throttle
24:1	233-35	1	Knob
25	3290-134	2	Screw
26	3296-12	2	Nut-Lock
27	105-0002-01	1	Bracket-Relay
28	70-1480	4	Relay
29	98-7611	1	Controller-Glow
30	37-2690	1	Capacitor
30:1	3252-18	2	Screw
30:2	3254-1	2	Washer-Lock, Internal
31	2412-74	1	R-Clamp
32	321-4	5	Screw-HH
33	32128-33	5	Nut-HF

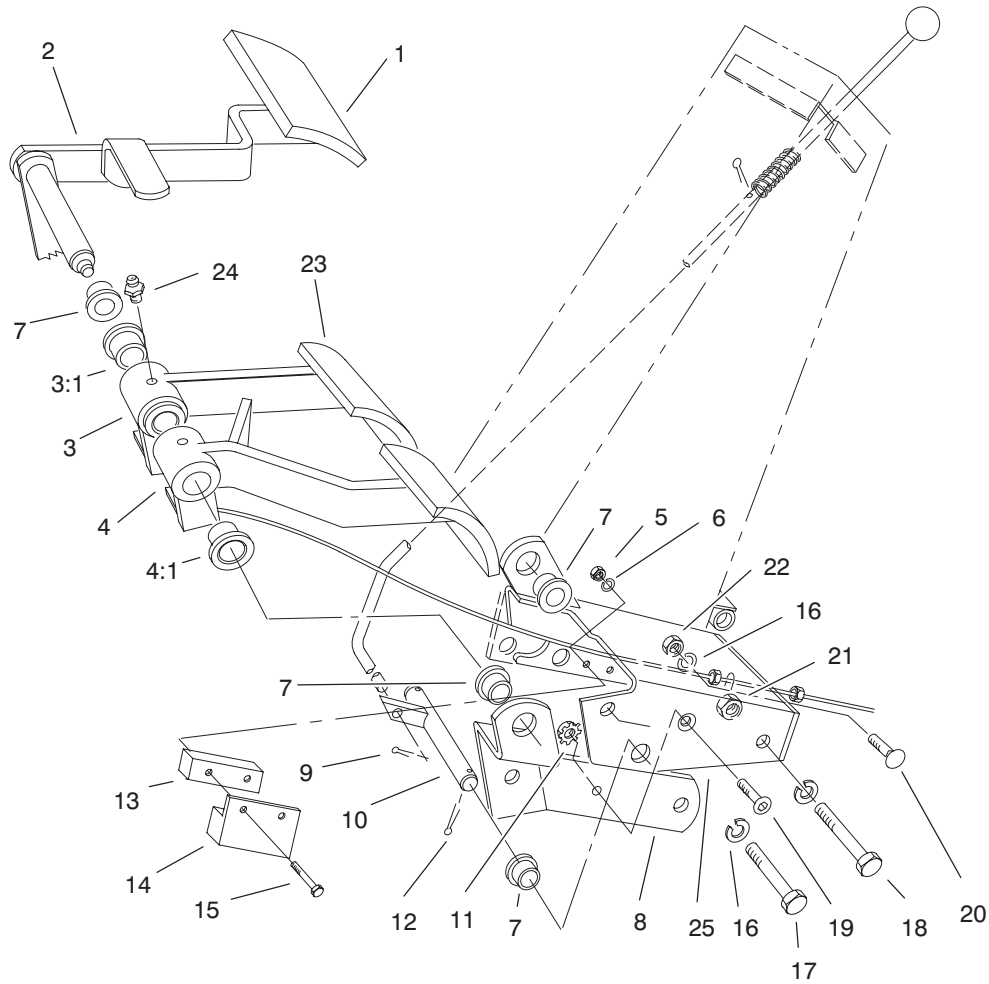 


Sheet No.:4

Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8742	1	Footpad-Brake
2	27-8550-01	1	Parking Brake Pedal ASM
3	27-7510	1	Brake Pedal ASM, RH
3:1	256-10	2	Bushing-Flange
4	27-7490	1	Brake Pedal ASM, LH
4:1	256-10	2	Bushing-Flange
5	3296-2	2	Nut-Lock
6	3256-51	4	Washer-Flat
7	256-156	4	Bushing-Flange
8	27-9270-01	1	Mount-Brake, Pivot Shaft
9	3272-5	2	Pin-Cotter
10	105-0065	1	Parking Brake Shaft ASM
11	32149-2	1	Nut
12	3272-6	2	Pin-Cotter
13	105-0064	1	Spacer-Switch
14	100-1270	1	Switch-Proximity
15	3290-360	2	Screw-HH
16	3253-21	4	Washer-Lock
17	323-13	1	Screw-HH
18	323-14	1	Screw-HH
19	3274-47	1	Screw-HSFH
20	3231-21	2	Screw-CARR
21	32153-2	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
22	3217-7	2	Nut-Hex
23	93-8743	2	Footpad-Turn
24	302-5	2	Fitting-Grease
25	105-0066-01	1	Brake Pedal Mount ASM

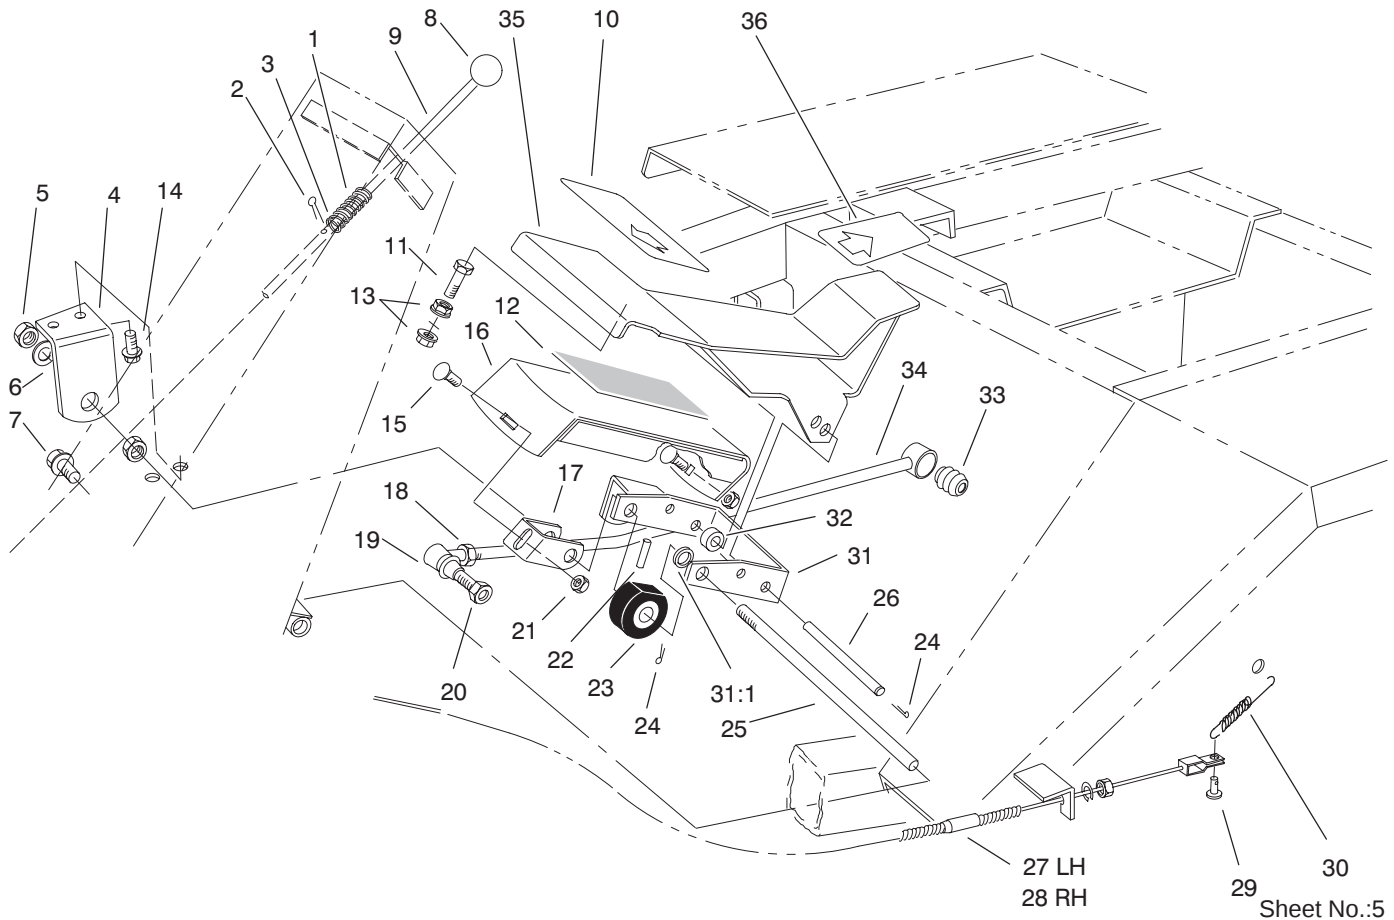 

Traction Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	95-1821-03	1	Spring-Compression
2	3272-5	1	Pin-Cotter
3	3256-22	1	Washer-Flat
4	21-2850-01	1	Mount-Pedal, RH
5	3218-5	2	Nut-Jam
6	3256-26	1	Washer-Flat
7	3234-11	3	Screw-HHF
8	233-17	1	Knob
9	82-8670	1	Rod-Latch, Brake
10	94-3307	1	Pad-Pedal, Traction
11	323-15	1	Screw-HH
12	88-1720	1	Pad-Footerest
13	32128-43	2	Nut-Flange
14	11-0590	2	Screw-HWHTF
15	3230-1	2	Screw-CARR
16	88-1710-01	1	Footrest
17	88-1680-01	1	Bracket-Footerest
18	3220-5	1	Nut-Jam
19	21-0141	1	RH Ball Joint ASM
20	3220-3	2	Nut-Jam
21	32128-25	2	Nut-Flange
22	32121-6	1	Pin-Roll
23	28-5220	1	Friction Wheel ASM
24	3272-6	4	Pin-Cotter
25	88-1650	1	Shaft-Pedal, Traction
26	88-1640	1	Pin-Pedal, Traction


Ref. No.	Part No.	Qty.	Description
27	21-3380	1	Brake Cable ASM, LH
28	21-3370	1	Brake Cable ASM, RH
29	283-58	2	Pin-Clevis
30	3-7243	2	Spring-Extension
31	88-1670	1	Pivot Bracket ASM
31:1	256-156	2	Bushing-Flange
32	88-0470	1	Tube-Spacer, Pedal
33	23-2270	1	Bushing-Rubber
34	23-2240-03	1	Pump Control Tube ASM
35	94-3304-01	1	Support-Pedal
36	94-3308	1	Pad-Pedal, Traction

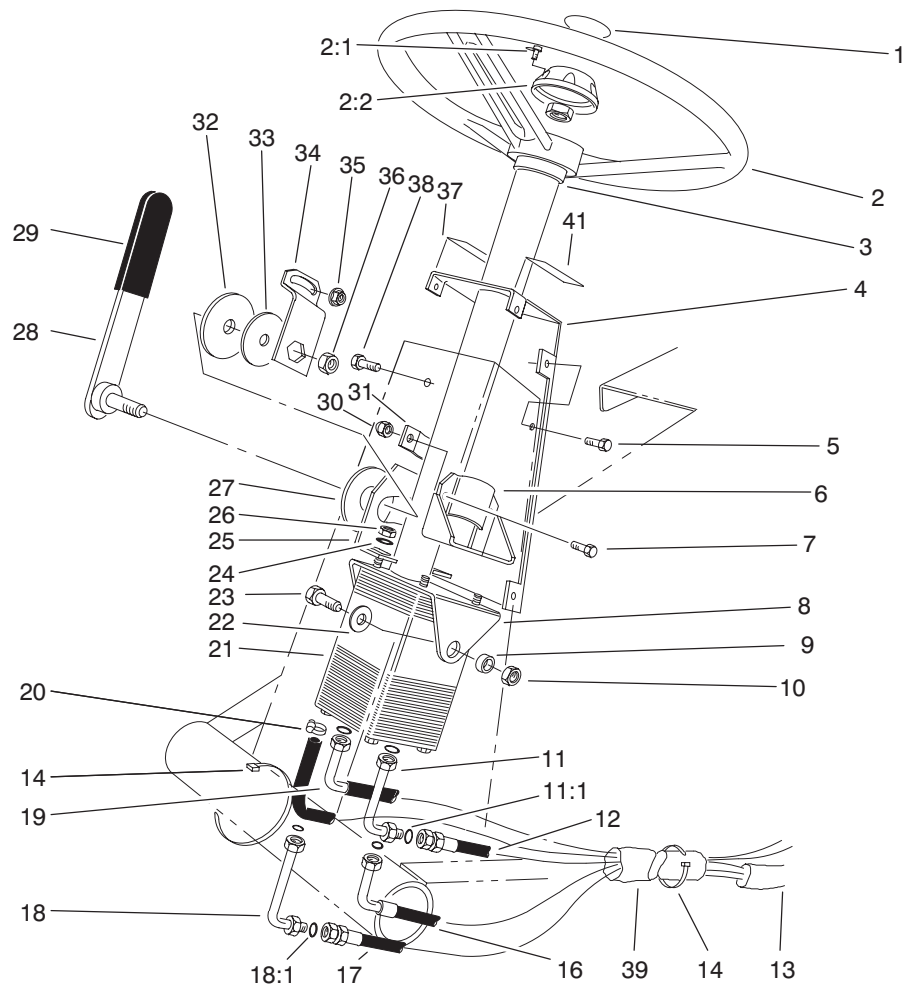 

Sheet No.:6

Power Steering Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	68-5370	1	Decal-Toro	22	3256-46	2	Washer-Flat
2	75-0560	1	Wheel-Steering	23	323-6	2	Screw-HH
2:1	32144-21	1	Screw	24	3256-3	4	Washer-Flat
2:2	68-5140	1	Cap-Wheel, Steering	25	80-2940-03	1	Plate-Pivot
3	21-9260	1	Cover-Dust	26	3296-20	4	Nut-Lock, NI
4	82-8660-01	1	Cover-Tower	27	31-0390	1	Disc-Friction
5	32144-10	6	Screw-HWH	28	93-1353-03	1	Lever-Steering, Tilt
6	67-8690-03	1	Support-Column	29	21-1880	2	Grip-Handle
7	322-5	2	Screw-HH	30	3296-29	2	Nut-Lock, NI
8	77-3120-01	1	Bracket-Mounting, Column	31	82-8650	1	Clamp-Column
9	80-2960	2	Spacer-Tower	32	82-9010	1	Disc-Friction
10	32153-2	2	Nut-Lock	33	80-2930	1	Washer-Flat
11	82-8760	1	Elbow-HYD	34	80-2880	1	Bracket-Tilt
11:1	237-30	1	O-Ring	35	32128-20	1	Nut-HF
12	63-8970	1	Hose-HYD	36	3218-7	1	Nut-Jam
13	70-1390	1	Sleeve-Protective	37	82-8940	1	Decal-Steering, Tilt
14	3290-379	4	Tie-Cable	38	322-4	1	Screw-HH
16	68-9730	1	Hose-HYD, Steering	39	70-1380	1	Sleeve-Protective
17	68-9720	1	Hose-HYD, Steering	41	82-8930	1	Decal-Brake, Parking
18	82-8770	1	Elbow-HYD				
18:1	237-22	1	O-Ring				
19	63-8980	1	Hose-HYD				
20	2412-36	1	Clamp-Hose				
21	92-7308	1	Power Steering Unit ASM				

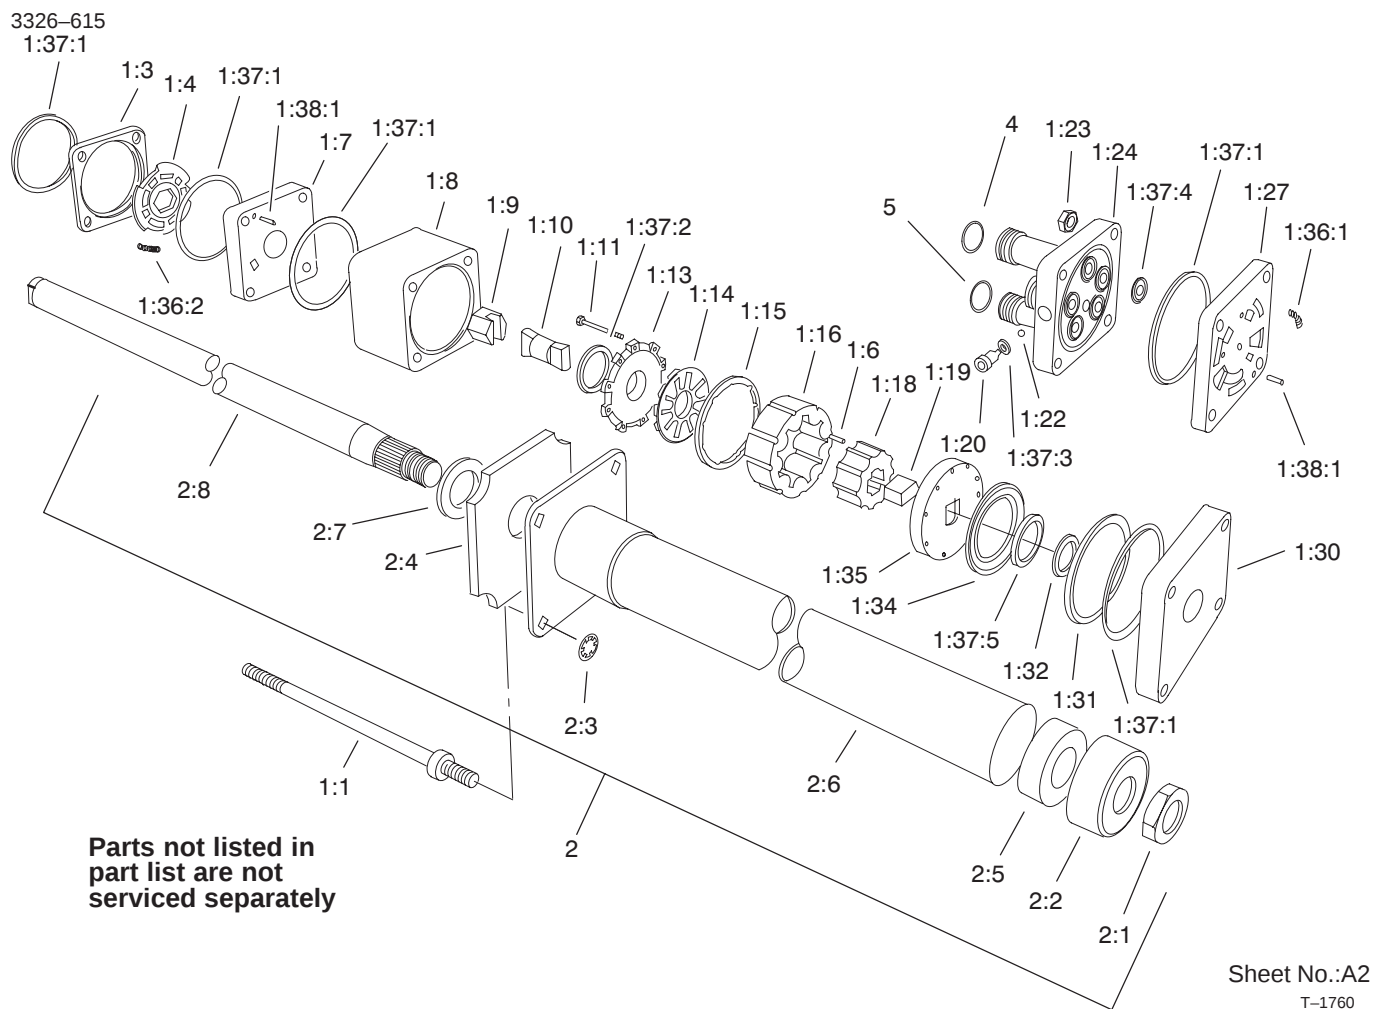 


Power Steering Unit Assembly No. 92-7308

Ref. No.	Part No.	Qty.	Description
☆1	92-7310	1	Power Steering Unit
1:1		4	Bolt-Special
☆1:3		1	Ring-Valve
☆1:4		1	Plate-Valve
☆1:7		1	Manifold-Isolation
☆1:8		1	Ring-Metering
☆1:9		1	Hex Drive ASM
☆1:10		1	Link-Drive
☆1:11		11	Screw-HSH
☆1:13		1	Cover-Commutator
☆1:14		1	Commutator
☆1:15		1	Ring-Commutator
☆1:16		1	Stator
☆1:18		1	Rotor
☆1:19		1	Spacer-Link, Drive
☆1:20		1	Plug
☆1:22		1	Ball
☆1:23		4	Nut-Hex
☆1:24		1	Cover-Port
☆1:27		1	Manifold-Port
☆1:30		1	Plate-Cover, Upper
☆1:31		1	Spacer-Bearing, Thrust
☆1:32		1	Spacer-Seal
☆1:34		1	Bearing-Thrust
☆1:35		1	Plate-Drive

Ref. No.	Part No.	Qty.	Description
*1:36	66-9970	1	Kit-Spring
☆1:36:1		3	Spring
☆1:36:2		3	Spring
*1:37	66-9980	1	Kit-Seal
☆1:37:1		5	Ring-Seal
☆1:37:2		1	Seal-Commutator
☆1:37:5		1	Seal-Face
*1:38	66-9990	1	Kit-Roller, Needle
☆1:38:1		9	Pin-Alignment
2	92-7314	1	Column ASM
2:1	3220-6	1	Nut-Jam
2:2	92-7315	1	Seal-Upper
2:3	92-7316	4	Nut-Push On
2:4	92-7317	1	Seal-Foam, Upper Cover
2:5	66-9780	1	Bushing
☆2:6		1	Cover-Upper
☆2:7		1	Washer-Retaining
☆2:8		1	Shaft-Input
4	237-30	2	O-Ring
5	237-22	2	O-Ring

☆ Not serviced separately

 * Not illustrated

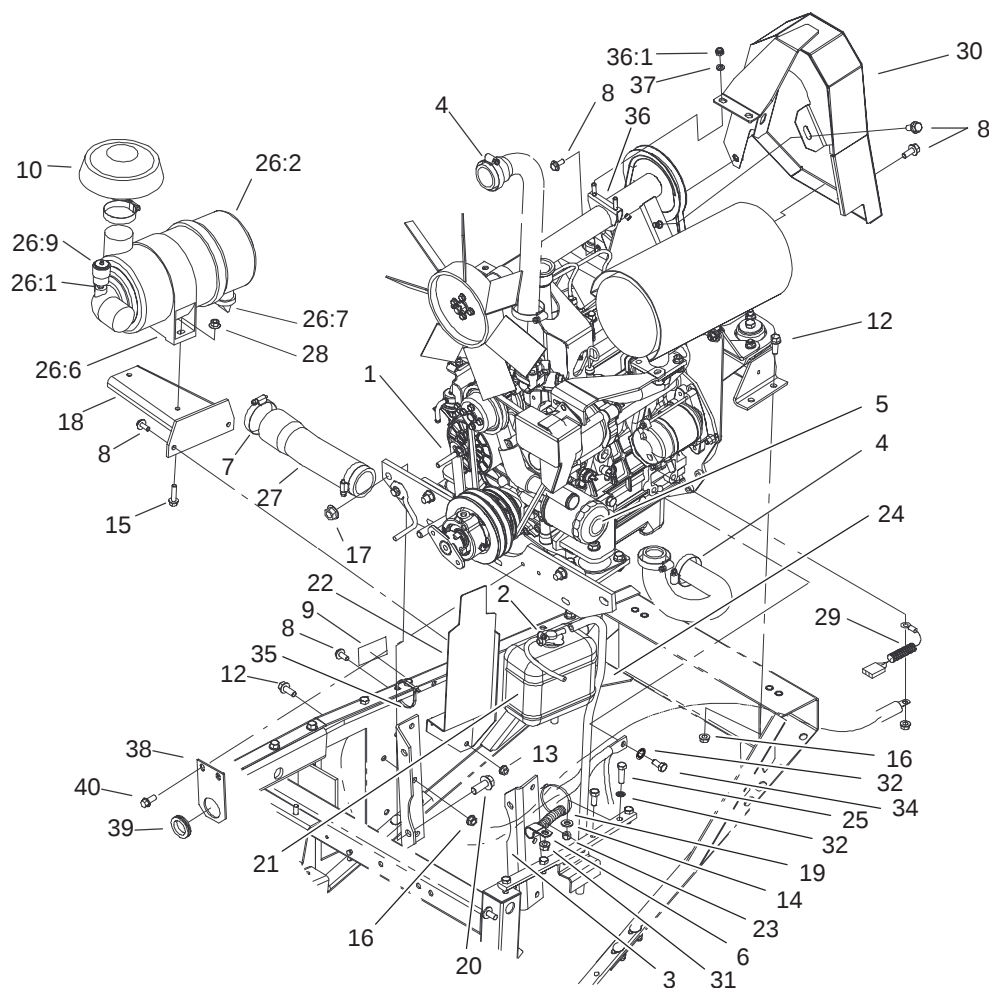


Sheet No.:7

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		1	Engine Installation ASM	24	63-7630	1	Hose
2	2412-108	2	Clamp-Worm	25	323-8	1	Screw-HH
3	67-8190-01	2	Bracket-Support, Engine	26	104-3428	1	Air Cleaner ASM
4	2412-3	4	Clamp-Hose	26:1	105-4292	1	Nipple-Pipe
5	23-9740	1	Filter-Oil	26:2	104-0497	1	Cover ASM
6	98-3883	1	Clamp-Wire	26:6	98-4525	1	Bracket-Cleaner, Air
7	2412-130	2	Clamp-Hose	26:7	104-0498	1	Valve-Vacuator
8	3234-5	9	Screw	*26:8	98-9763	1	Element ASM
9	83-9150	1	Decal-Fluid, Starting	26:9	93-9164	1	Indicator-Mini
10	105-2539	1	Cap ASM	27	104-3434	1	Hose-Inlet, Air
12	3234-11	10	Screw-HHF	28	32128-20	2	Nut-HF
13	32128-20	3	Nut-HF	29	99-3441	1	Harness-Wire, Fusible Link
14	3256-24	1	Washer-Flat	30	105-7807-03	1	Guard-Fan Belt ASM
15	3234-36	2	Screw-HHF	31	3296-59	1	Nut-Lock, NI
16	3290-357	10	Nut-HHF	32	3254-6	2	Washer-Lock, Internal
17	32128-23	2	Nut-HF	34	70-8470	1	Screw-HH
18	98-4518-03	1	Bracket-Cleaner, Air	35	3290-379	1	Tie-Cable
19	3290-378	1	Tie-Cable	36	2112-6	1	Clamp-Muffler
20	3234-32	2	Screw-HHF	36:1	3218-2	2	Nut-Jam
21	104-9318	1	Bottle-Overflow, Water	37	3253-4	2	Washer-Lock
22	105-0050-03	1	Reservoir Bracket ASM	38	104-3774	1	Bracket-Bulkhead
23	3296-29	3	Nut-Lock, NI	39	240-7	1	Grommet-Rubber
				40	32144-11	2	Screw-TAP

☆ Not serviced separately

 * Not illustrated

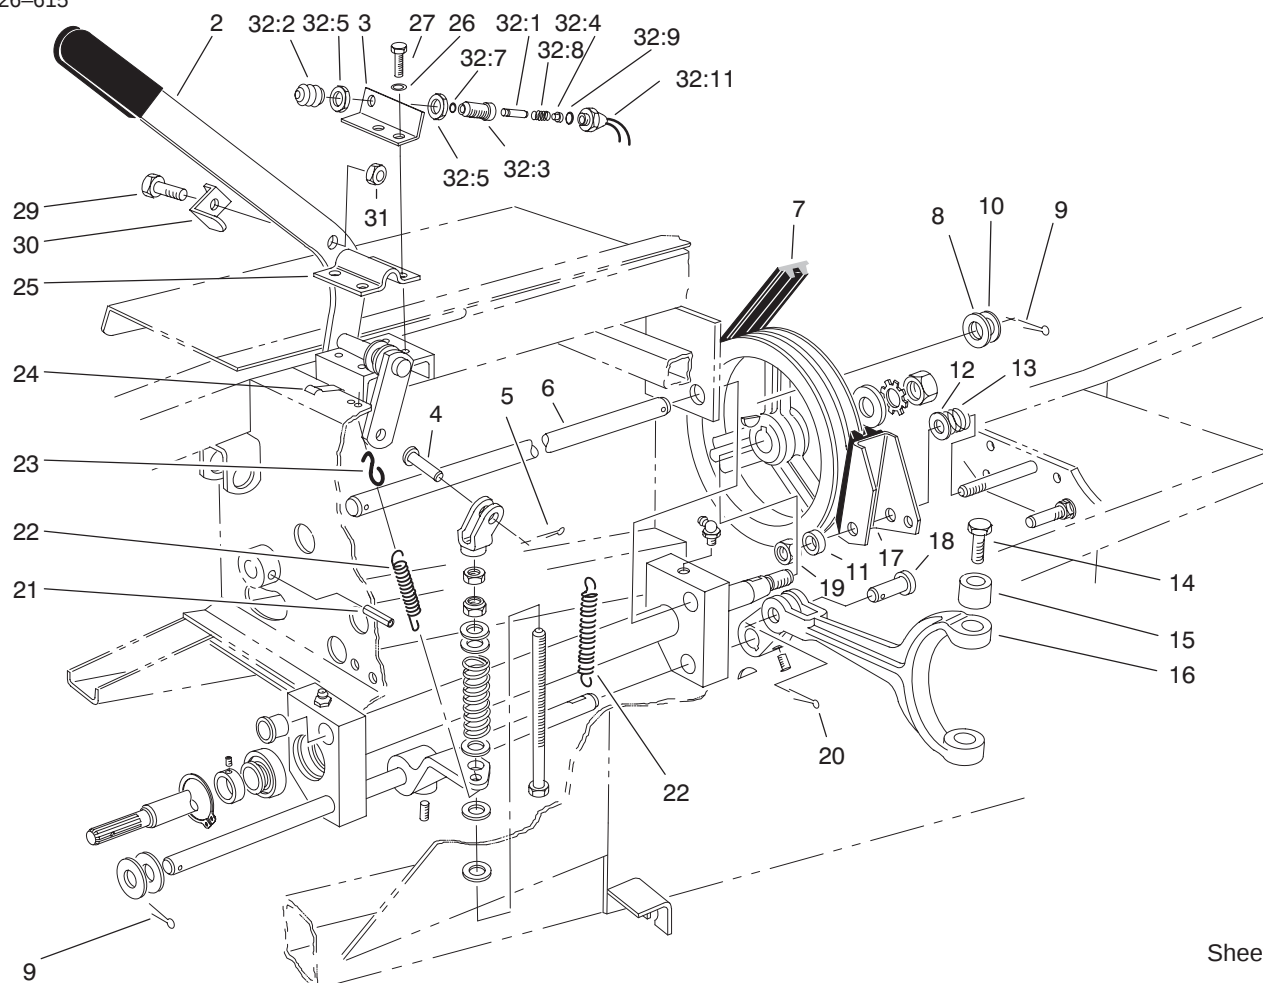


Sheet No.:8

PTO and Shaft Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	PTO ASM
2	84-8500-01	1	Lever-PTO
3	84-8520-01	1	Bracket-Switch, PTO
4	283-42	1	Pin-Clevis
5	3272-6	1	Pin-Cotter
6	43-3860	1	Shaft-Pivot, PTO
7	53-9660	1	V-Belt
8	3256-28	1	Washer-Flat
9	3272-22	1	Pin-Cotter
10	3-6498	3	Washer-Thrust
11	3-8812	1	Spacer-Spring Anchor
12	3256-6	1	Washer-Flat
13	5-1747	1	Spring-Adjustment
14	92-5727	2	Screw-Patch Lock
15	92-5723	2	Bushing-PTO Fork
16	92-4060-03	1	Fork-PTO
17	27-7370	1	PTO Brake ASM
☆17:3		1	Adhesive
18	93-3769	1	Pin-Clevis
19	3296-28	1	Nut-Lock, NI
20	3272-11	1	Pin-Cotter
21	32121-9	1	Pin-Spring
22	21-1830	2	Spring-PTO, Tension
23	5-0701	1	Anchor
24	212-93	3	Clamp-Casing
25	21-1600	1	Clamp-Lever, PTO

Ref. No.	Part No.	Qty.	Description
26	3253-21	4	Washer-Lock
27	32104-6	4	Screw-HH
29	321-4	1	Screw-HH
30	86-7050	1	Bracket-Switch, Actuator
31	3296-16	1	Nut-Lock, NI
32	43-9071	1	Limit Switch ASM
32:1	43-8860	1	Plunger-Switch
32:2	43-8870	1	Boot-Switch
32:3	43-8620	1	Pin-Guide, Switch
32:4	43-8610	1	Guide
32:5	218-461	2	Nut-HH
32:7	237-7	1	O-Ring
32:8	43-8600	1	Spring-Compression
32:9	237-30	1	O-Ring
32:11	72-4320	1	Switch

 
☆ Not serviced separately

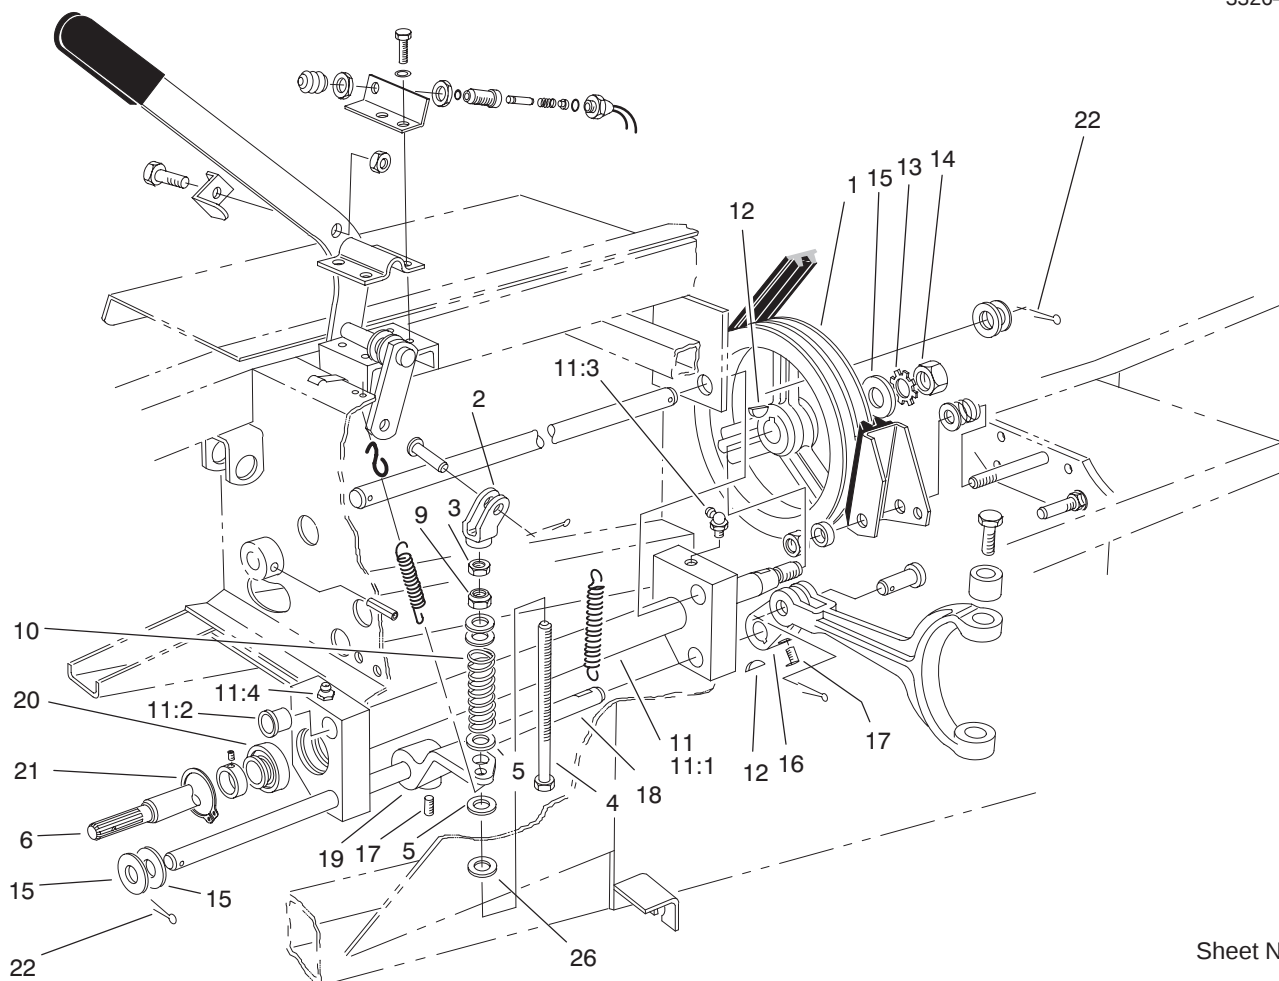

Sheet No.:A6

PTO Assembly

Ref. No.	Part No.	Qty.	Description
1	21-0230	1	Pulley-PTO
2	43-5630	1	Yoke-PTO
3	3219-3	1	Nut-HH
4	27-7900	1	Screw-Adjusting
5	3256-41	4	Washer-Flat
6	43-5540	1	Shaft-PTO
9	3296-6	1	Nut-Lock, NI
10	21-0400	1	Spring-Compression
11	100-6599	1	PTO Pivot ASM
11:1	43-5500-01	1	Pivot-PTO
11:2	256-113	4	Bushing-Flange
11:3	302-10	1	Fitting-Grease
11:4	302-2	1	Fitting-Grease
12	3257-5	3	Key-Woodruff
13	3254-7	1	Washer-Lock/Int
14	3219-7	1	Nut-Hex
15	3256-28	3	Washer-Flat
16	92-4058	1	Arm-PTO
17	3246-3	4	Screw-HS
18	43-5550	1	Shaft-Actuator, PTO
19	43-5570	1	Arm-Actuator
20	251-252	2	Bearing
21	32120-22	2	Ring-Snap, Internal
22	3272-22	1	Pin-Cotter
26	5-0652	1	Spacer

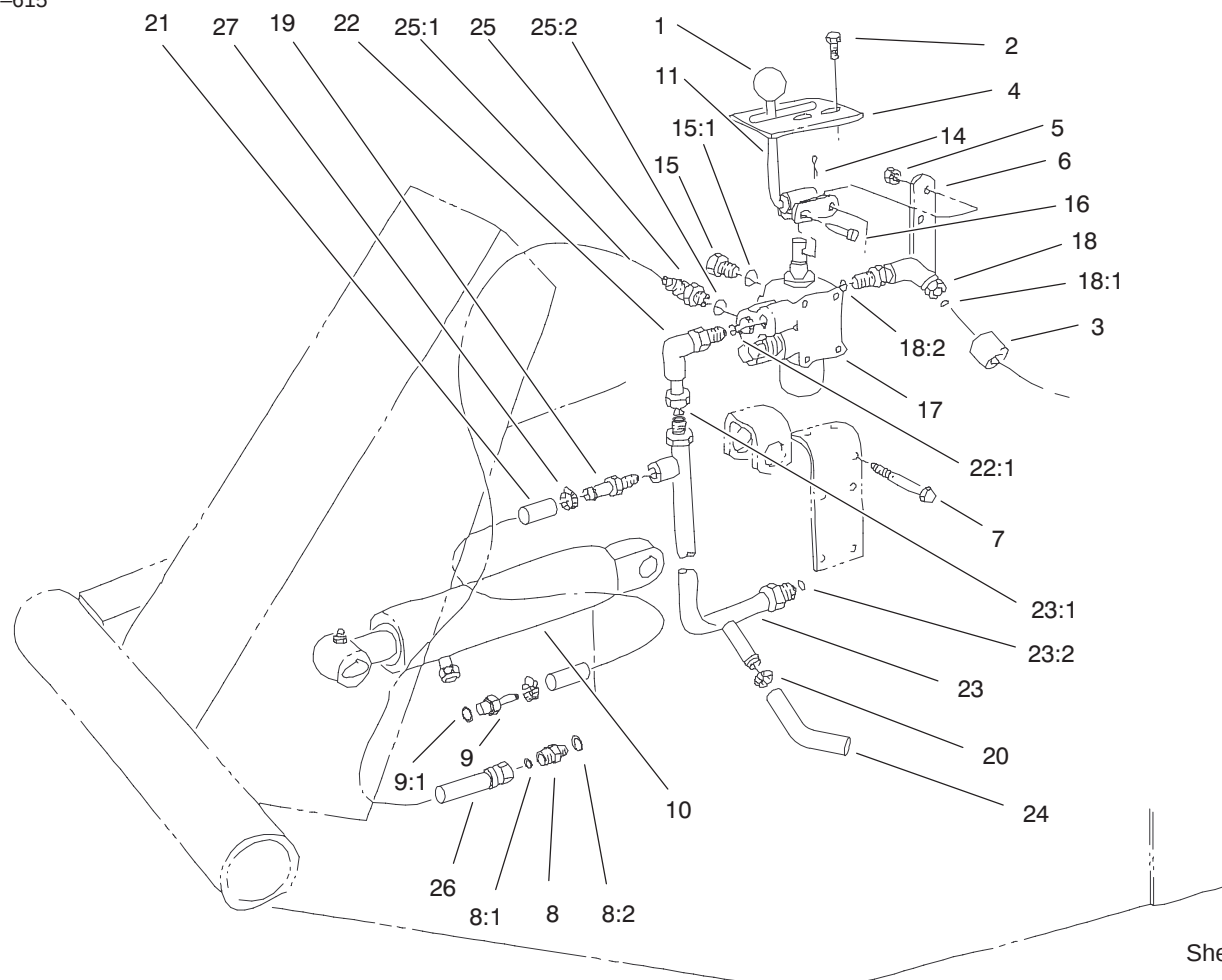 


Sheet No.:9

Valve and Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	233-21	1	Knob
2	32144-10	2	Screw-HWH
3	38-3400	2	Guard-Rubber
4	105-7806	1	Latch-Lever, Valve
5	3296-42	5	Nut-Lock, NI
6	21-9010	1	Lever-Valve, Pivot Mount
7	321-23	5	Screw-HH
8	340-2	1	Fitting-HYD, Straight
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-8849	1	Fitting-HYD, Straight
9:1	237-78	1	O-Ring
10	100-6586	1	Cylinder-Hydraulic
10	100-6591	1	Cylinder-Hydraulic
11	105-7839-03	1	Valve Lever ASM
14	3272-6	1	Pin-Cotter
15	353-512	1	Plug
15:1	237-78	1	O-Ring
16	283-17	1	Pin-Clevis
17	105-7821-01	1	Valve ASM
18	340-99	1	Fitting-HYD, 90°
18:1	237-30	1	O-Ring
18:2	237-42	1	O-Ring
19	304-73	1	Connector-Hose
20	2412-36	1	Clamp-Hose

Ref. No.	Part No.	Qty.	Description
21	92-7834	1	Hose
22	340-110	1	Elbow-Swivel, 90°
22:1	237-42	1	O-Ring
23	63-9260	1	Manifold-Valve
23:1	237-22	1	O-Ring
23:2	237-30	1	O-Ring
24	63-8990	1	Hose-Out/Cool
25	340-97	1	Fitting-HYD, 90°
25:1	237-22	1	O-Ring
25:2	237-78	1	O-Ring
26	92-7833	1	Hose ASM
27	2412-108	1	Clamp-Worm

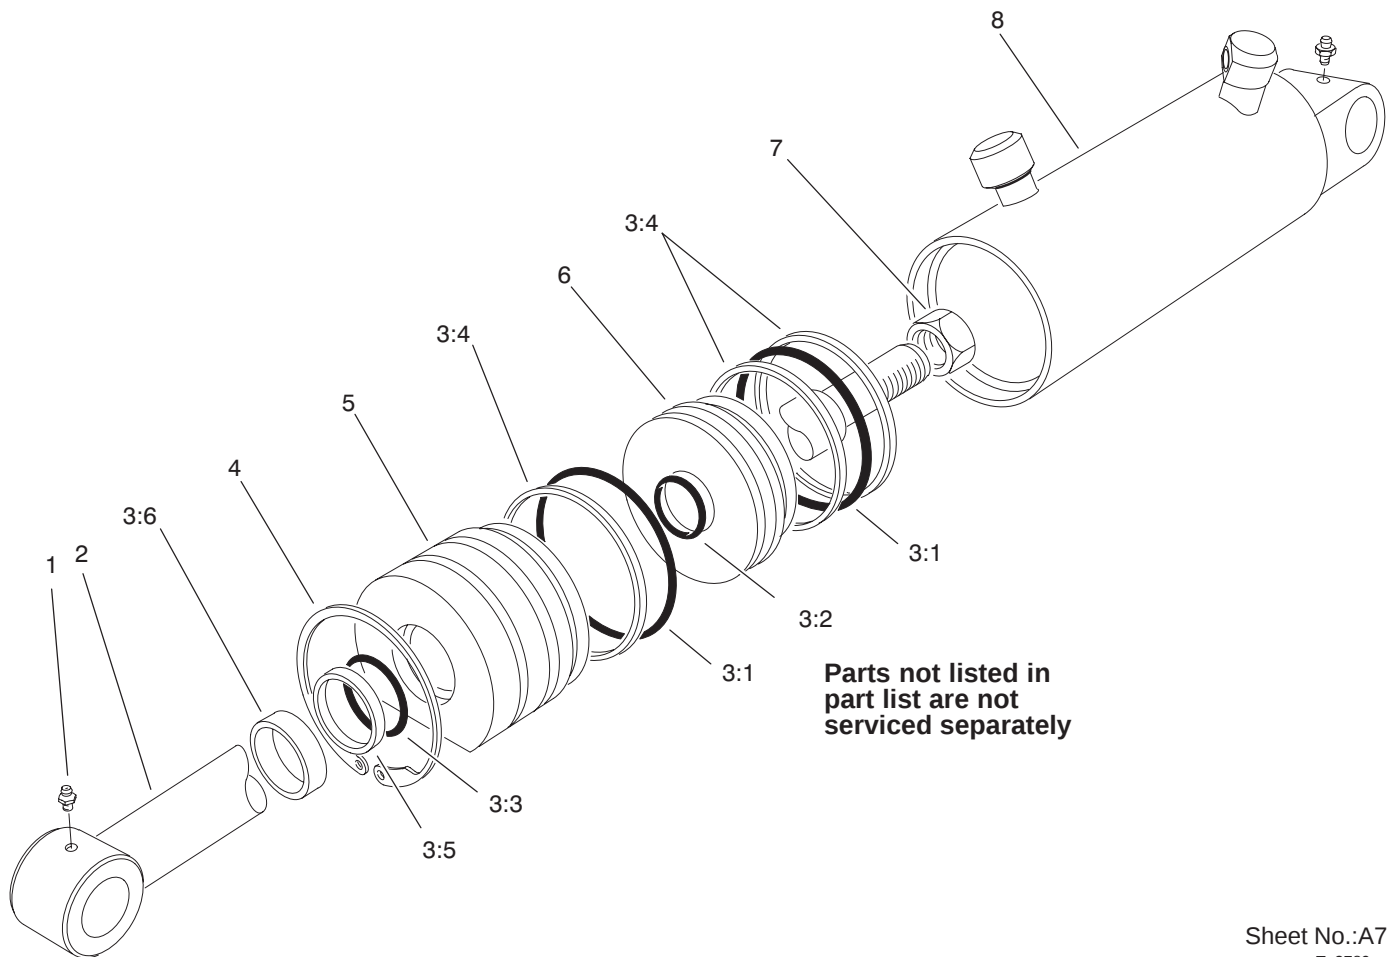 


Sheet No.:A7
T-3789

Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in. Bore)

Ref. No.	Part No.	Qty.	Description
1	302-55	2	Zerk
2	61-4980	1	Shaft With Clevis
3	61-4960	1	Seal Repair Kit
☆3:1		2	O-Ring
☆3:2		1	O-Ring
☆3:3		1	O-Ring
☆3:4		3	Backup
☆3:5		1	Backup
☆3:6		1	Seal-Dust
4	61-4990	1	Ring-Retaining
5	60-9780	1	Head
6	60-9770	1	Piston
7	60-9760	1	Nut
☆8		1	Barrel

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

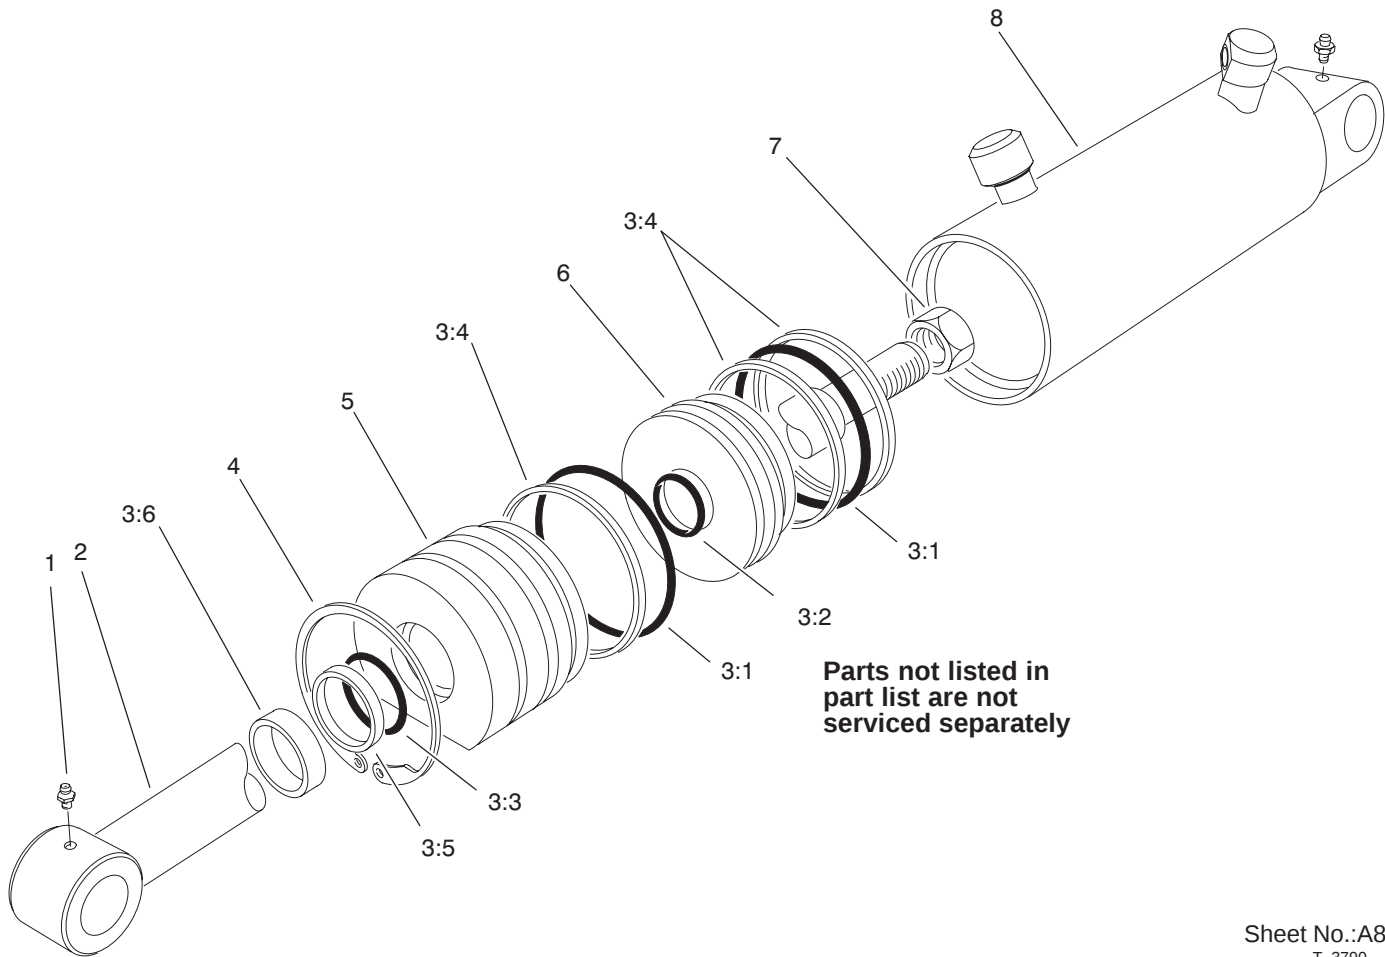


Sheet No.:A8
T-3790

Hydraulic Clyinder Assembly No. 100-6591(Optional)
(3 in. Bore)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	302-55	2	Zerk				
2	67-5480	1	Shaft With Clevis				
3	67-5500	1	Repair Kit				
☆3:1		2	O-Ring				
☆3:2		1	O-Ring				
☆3:3		1	O-Ring				
☆3:4		3	Backup				
☆3:5		1	Backup				
☆3:6		1	Seal-Dust				
4	67-5470	1	Ring-Snap				
5	67-5460	1	Head				
6	67-5450	1	Piston				
7	60-9760	1	Nut				
☆8		1	Barrel				

 ☆ Not serviced separately

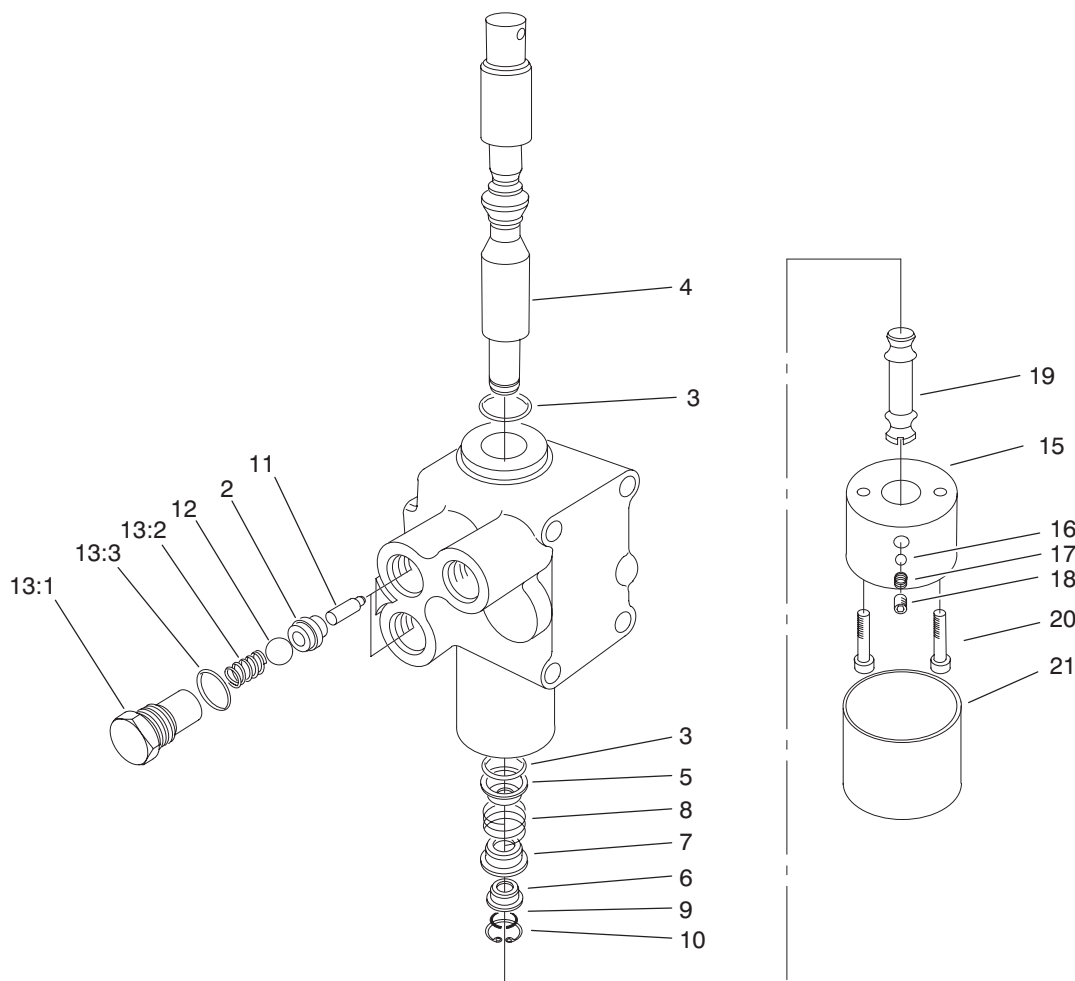

Sheet No.:A9


T-0428

Valve Assembly No. 105-7821-01

Ref. No.	Part No.	Qty.	Description
☆1		1	Body
2	22-8370	2	Seat-Valve
3	22-8500	2	O-Ring
4	105-7826	1	Spool
5	22-8380	1	Retainer
6	22-8400	1	Spacer
7	22-8390	1	Retainer
8	22-8410	1	Spring
9	22-8480	1	Ring-Snap
10	22-8490	1	Ring-Snap
11	22-8360	2	Pin
12	22-8350	2	Ball
☆13		2	Plug ASM
13:1	22-8330	1	Plug
13:2	22-8340	1	Spring
13:3	237-42	1	O-Ring
15	105-7828	1	Barrel-Detent
16	105-7829	2	Ball-Steel
17	105-7830	2	Spring
18	105-7831	2	Screw-Set
19	105-7832	1	Stud-Detent
20	105-7833	2	Screw-HS
21	105-7834	1	Cap-Dust, Round

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

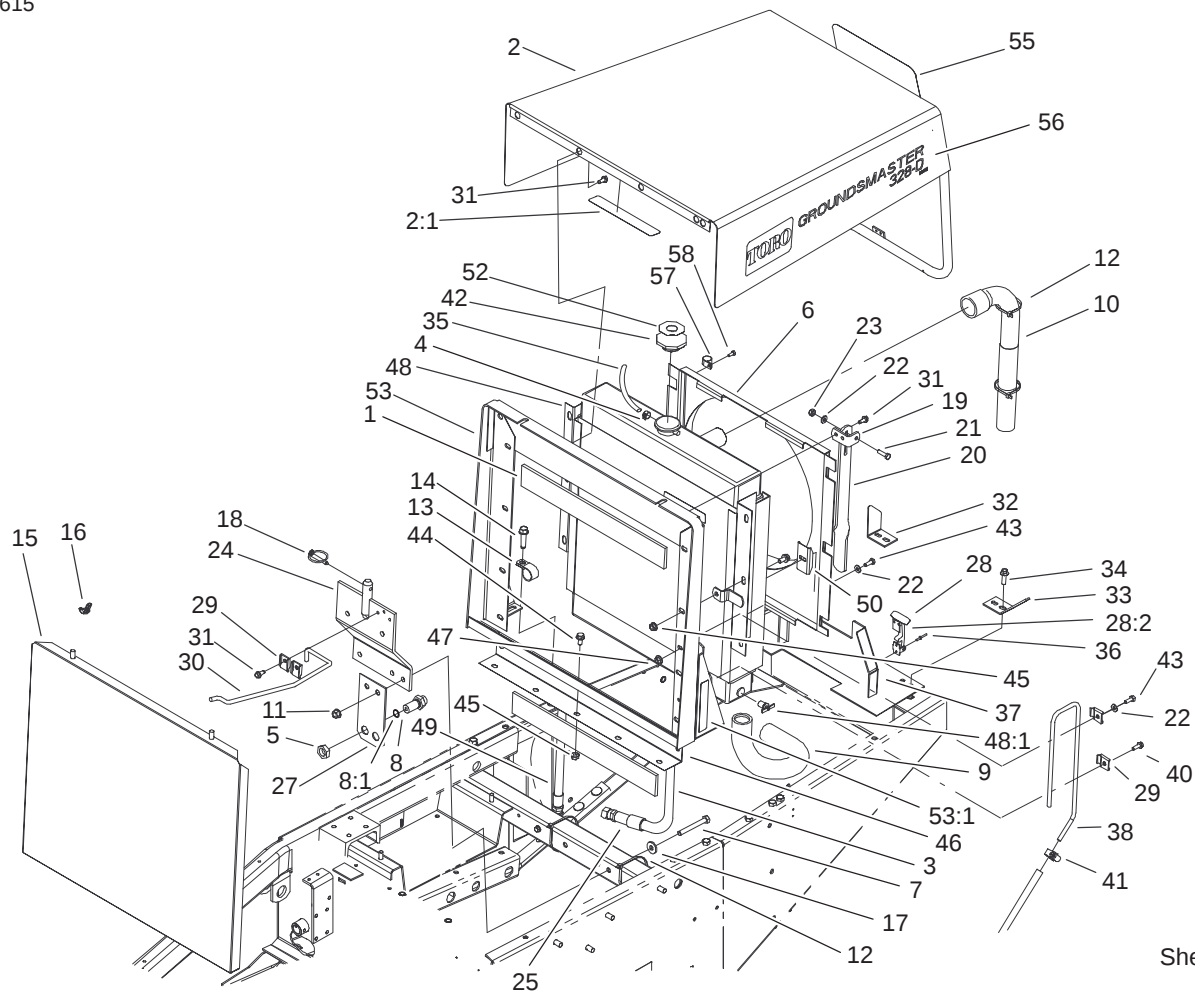


Sheet No.:10

Radiator and Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	43-3320	2	Foam-Radiator
2	105-2919	1	Hood ASM
2:1	82-8970	1	Decal-Coolant, Engine
3	63-9010	1	Hose-Transmission, Coolant
4	92-2379	1	Clamp-Hose
5	340-70	2	Locknut-Bulkhead
6	105-0007-03	1	Fan Shroud ASM
7	323-14	3	Screw-HH
8	340-71	2	Fitting-Straight, Bulkhead
8:1	237-22	2	O-Ring
9	104-3432	1	Hose-Radiator, Bottom
10	104-3433	1	Hose-Radiator, Top
11	32128-21	3	Nut-HF
12	3290-379	6	Tie-Cable
13	2412-39	1	R-Clamp
14	11-0590	1	Screw-HWHTF
15	67-9030-03	1	Grille
16	32103-2	2	Nut-Wing
17	5-0838	3	Washer
18	283-76	1	Pin-Lynch
19	84-5330	1	Bracket-Prop, Hood
20	84-5380	1	Strap-Prop, Hood
21	321-6	1	Screw-HH


Ref. No.	Part No.	Qty.	Description
22	3256-22	8	Washer-Flat
23	3296-16	1	Nut-Lock, NI
24	105-2542-01	1	Bracket-Support, Seat
25	38-3400	1	Guard-Rubber
27	68-9160	1	Bracket
28	59-9740	1	Flex Draw Latch ASM
28:2	249-40	1	Keeper
29	3-6657	4	Clip-Skid
30	86-7040	1	Rod-Prop, Seat
31	32144-10	7	Screw-HWH
32	62-3010-01	1	Bracket-RH
33	62-3020-01	1	Bracket-LH
34	3234-17	4	Screw-HHF
35	104-0076	1	Hose
36	3290-55	4	Rivet-Pop
37	105-4255-01	1	Pulley Guard ASM
38	105-4265	1	Tube-Vent
40	32104-109	1	Screw-HWH
41	2412-108	1	Clamp-Worm
42	66-3240	1	Cap-Radiator
43	321-4	7	Screw-HH
44	3234-14	13	Screw-HHF
45	32128-20	13	Nut-HF
46	105-4264-03	1	Grill-Plate, Sealing
47	32128-33	1	Nut-HF
48	104-3483	1	Radiator ASM

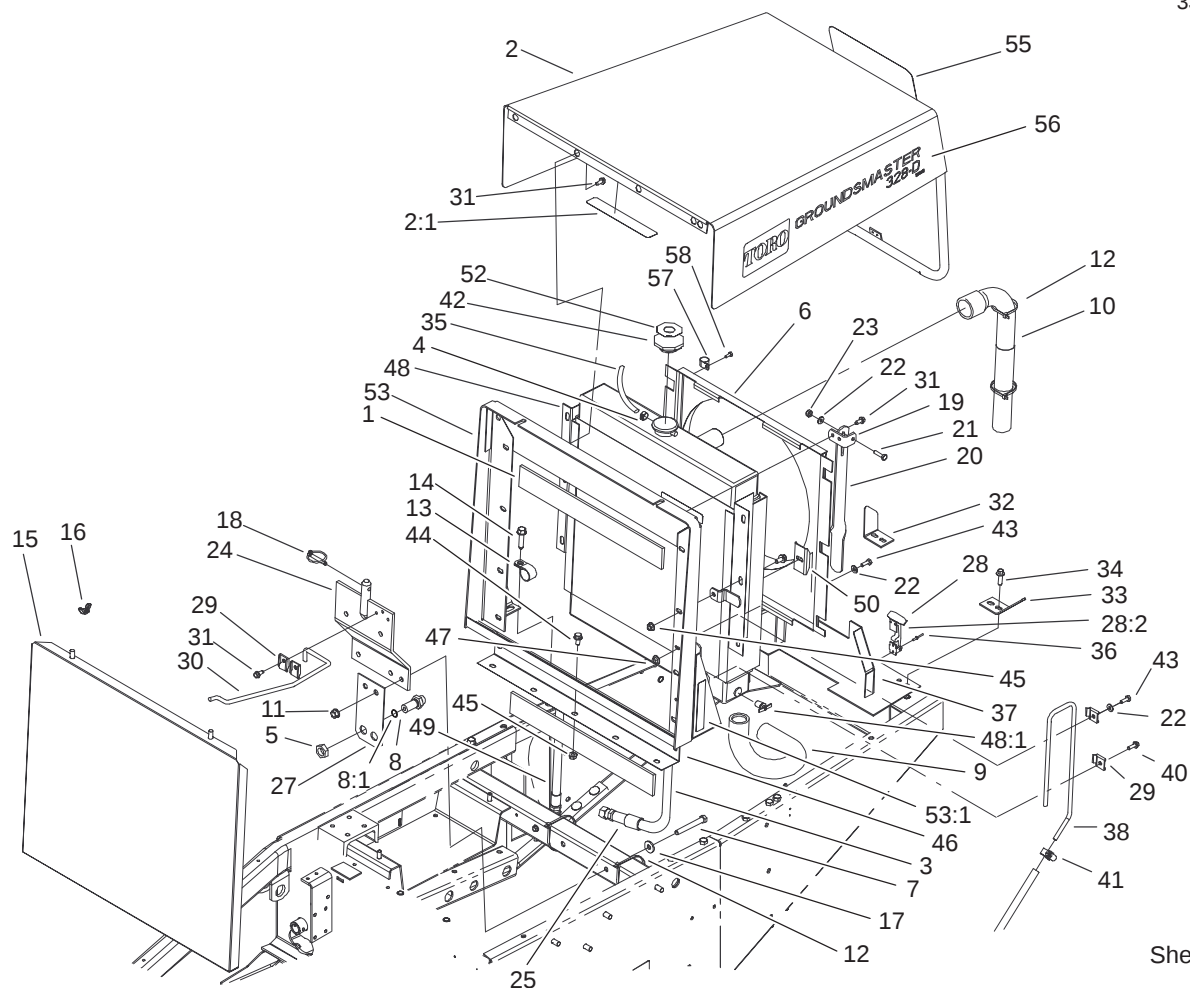 

Sheet No.:10

Radiator and Hood Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
48:1	304-46	1	Draincock
49	63-8960	1	Hose
50	105-0012-03	6	Clip-Mounting, Fan Shroud
52	93-7840	1	Decal-Cap, Radiator
53	105-2918	1	Radiator Support ASM
53:1	77-3100	3	Decal-Caution
55	66-6140	1	Decal-Toro
56	105-0046	2	Decal-Hood, Gm328
57	2412-83	1	Clamp-Cable
58	32144-1	1	Screw-Taptite

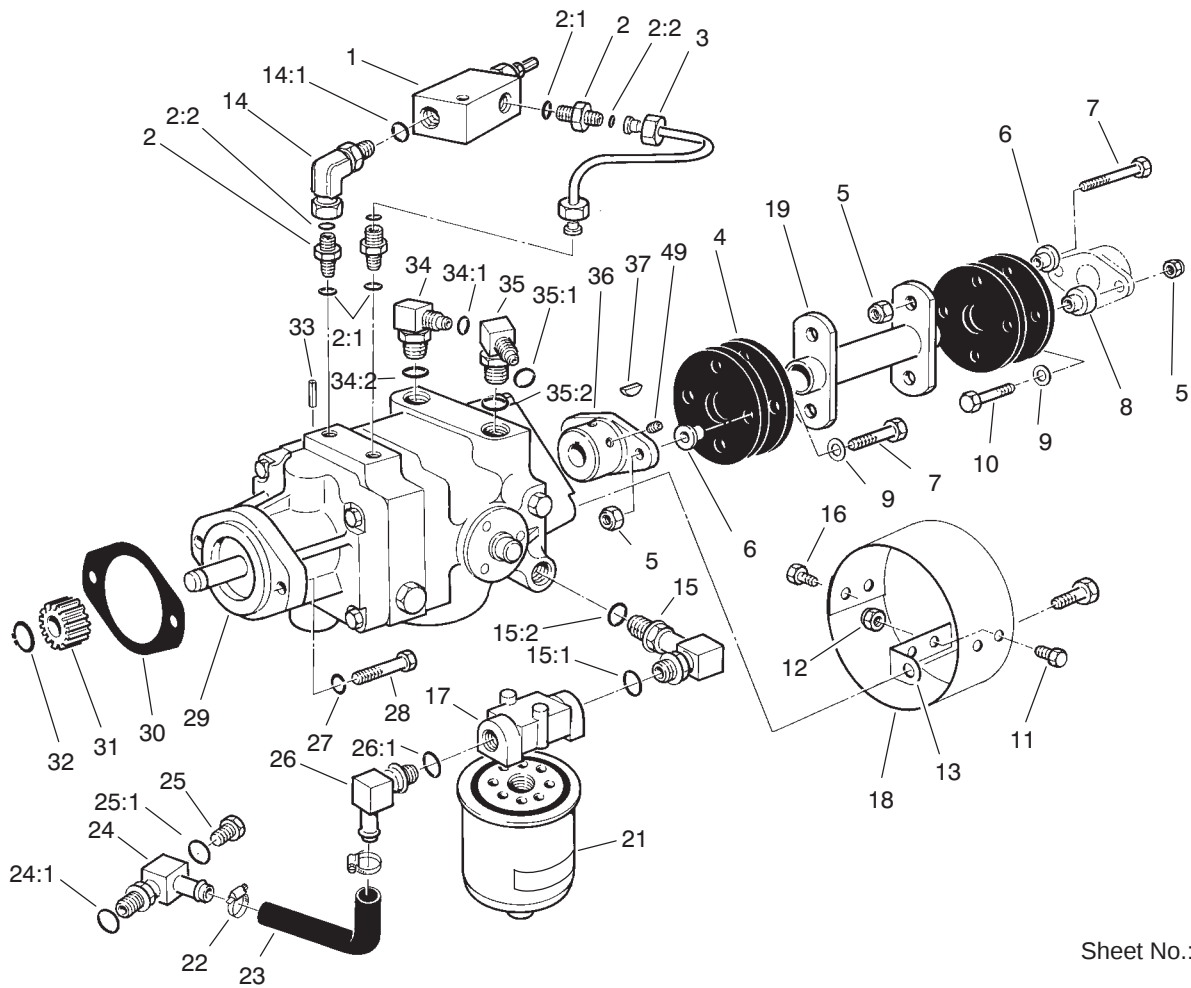 


Sheet No.:12

Hydrostatic Transmission Assembly

Ref. No.	Part No.	Qty.	Description
1	72-3540	1	Relief Valve (only on: 30627)
2	340-92	3	Fitting-Straight, HYD (only on: 30627)
2:1	237-78	1	O-Ring (only on: 30627)
2:2	237-21	1	O-Ring (only on: 30627)
3	72-3550	1	Tube (only on: 30627)
4	44-2230	4	Coupling-Rubber
5	32152-1	8	Nut-Lock, NI
6	71-4411	4	Spacer
7	322-8	6	Screw-HH
8	71-4410	4	Spacer
9	3256-3	4	Washer-Flat
10	322-10	2	Screw-HH
11	321-2	2	Screw-HH
12	3296-42	4	Nut-Lock, NI
13	54-9290	2	Bracket-Mounting
14	340-143	1	Elbow-Swivel, 90°
14:1	237-78	1	O-Ring (only on: 30627)
15	68-8660	1	Fitting-HYD, 90°
15:1	237-80	1	O-Ring
15:2	237-81	1	O-Ring

Ref. No.	Part No.	Qty.	Description
16	321-4	2	Screw-HH
17	68-8990	1	Filter Head ASM
18	54-9300-03	1	Cover-Shaft, Pump
19	105-0033-03	1	Drive Shaft ASM
21	23-9740	1	Filter-Oil
22	2412-34	2	Clamp-Hose
23	68-9650	1	Hose-Axle
24	70-2620	1	Fitting-HYD, 90°
24:1	237-81	1	O-Ring
25	353-508	1	Plug
25:1	237-42	1	O-Ring
26	353-987	1	Fitting-HYD, 90°
26:1	237-81	1	O-Ring
27	3253-21	2	Washer-Lock
28	323-7	2	Screw-HH
29	92-8947	1	Transmission ASM
30	41-8760	1	Gasket
31	86-7220	1	Gear-Pinion
32	32120-72	1	Ring-Snap
33	32121-6	1	Pin-Roll
34	340-77	1	Fitting-HYD, 90°
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	340-99	1	Fitting-HYD, 90°
35:1	237-30	1	O-Ring
35:2	237-42	1	O-Ring

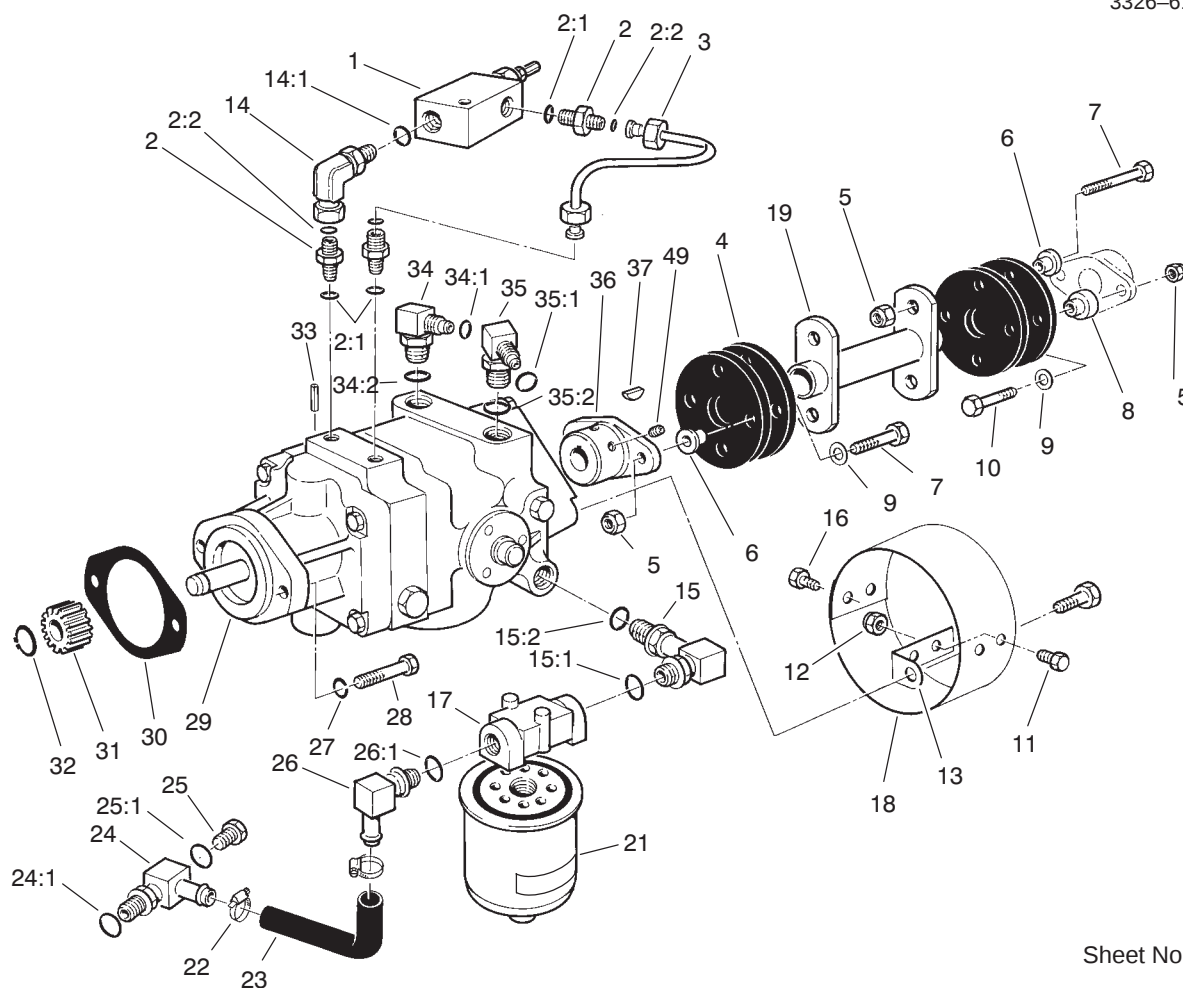 


Sheet No.:12

Hydrostatic Transmission Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
36	33-4380	1	Hub-Pump
37	3257-32	1	Key-Woodruff
49	3241-5	2	Screw-Set

Ref. No.	Part No.	Qty.	Description

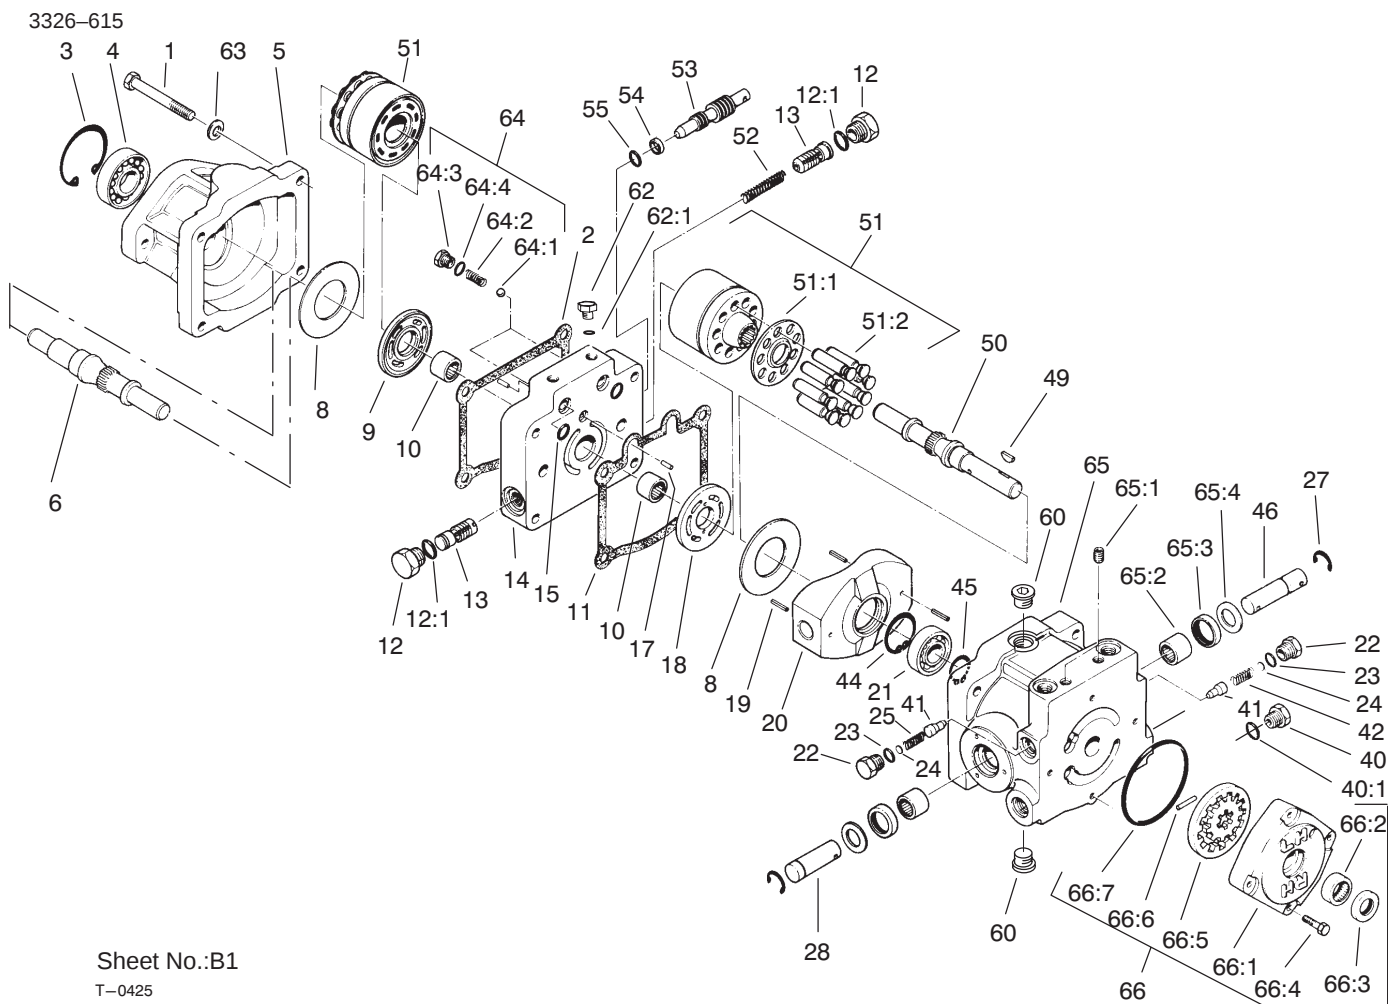 

Sheet No.:B1


T-0425

Hydrostatic Transmission Assembly No. 92-8947

Ref. No.	Part No.	Qty.	Description
1	323-56	4	Screw-HH
2	67-9100	1	Gasket
3	32120-8	1	Ring-Snap
4	72-3750	1	Bearing-Roller
5	67-9080	1	Housing-Motor
6	46-8410	1	Motor Shaft
8	25-2380	2	Plate-Thrust
9	25-2390	1	Plate-Valve, Motor
10	46-8400	2	Bearing-Shaft
11	25-2400	1	Gasket
12	353-550	2	Plug-HYD
12:1	237-79	1	O-Ring
13	25-2410	2	Valve ASM
14	92-8918	1	Center Section
15	93-4132	2	O-Ring
17	25-2430	2	Pin-Dowel
18	25-2440	1	Plate-Valve, Pump
19	32121-91	3	Pin-Spring, Coil
20	25-2450	1	Plate-Swash, Variable
21	251-8	1	Bearing-Ball
22	25-2460	2	Plug-HH
22:1	237-86	1	O-Ring
23	237-86	4	O-Ring
24	25-2470	2	Pack-Shim
25	25-2480	1	Spring-Valve
27	32151-46	2	Ring-Retaining

Ref. No.	Part No.	Qty.	Description
28	25-2500	1	Shaft-Trunnion
40	353-551	1	Plug-HH
40:1	237-80	1	O-Ring
41	83-7260	2	Cone-Relief, Charge
42	25-2570	1	Spring-Valve
44	32120-11	1	Ring-Retaining
45	32120-15	1	Ring-Snap, Ext
46	25-2580	1	Shaft-Trunnion
49	3257-32	1	Key-Woodruff
50	67-8020	1	Shaft-Pump
51	48-1800	2	Cylinder Block Kit
☆51:1		1	Retainer-Slipper
☆51:2		9	Piston ASM
52	25-2610	1	Spring-Valve
53	88-8220	1	Valve-By-Pass
54	25-2630	1	Ring-Back-Up
55	237-22	1	O-Ring
60	67-9090	1	Plug
62	92-8776	4	Plug
62:1	92-8777	1	O-Ring
63	93-0312	4	Washer-Hardened
64	99-5689	1	Check Valve ASM
64:1	25-2490	1	Ball
64:2	25-2640	1	Spring-Valve
64:3	25-2650	1	Plug-Valve, Check
64:4	237-86	1	O-Ring

 ☆ Not serviced separately

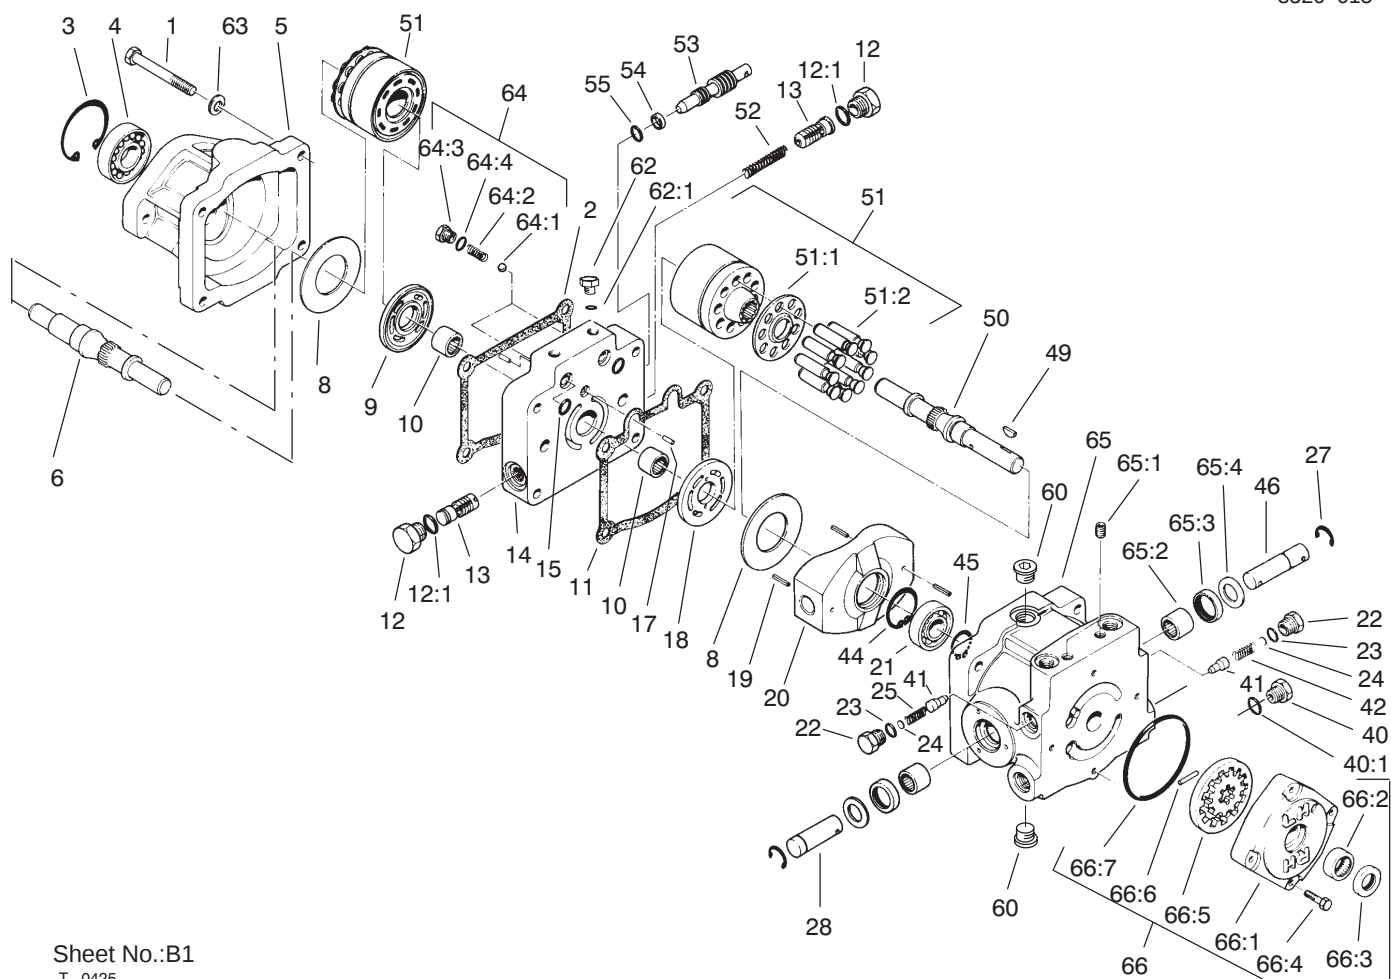


Sheet No.:B1

T-0425

Hydrostatic Transmission Assembly No. 92-8947 (Continued)

Ref. No.	Part No.	Qty.	Description
65	54-7890	1	Housing Kit
65:1	285-17	2	Plug-Pipe
65:2	252-82	2	Bearing-Needle
65:3	25-3210	2	Seal-Lip
65:4	25-2510	2	Washer-Flat
66	25-3190	1	Charge Pump Kit
66:1	25-2550	1	Housing-Pump, Charge
66:2	67-8050	1	Bearing-Needle
66:3	93-4133	1	Seal-Lip
66:4	322-4	4	Screw-HH
66:5	25-2540	1	Gerotor ASM
66:6	25-2530	1	Pin-Straight, Headless
66:7	237-95	1	O-Ring

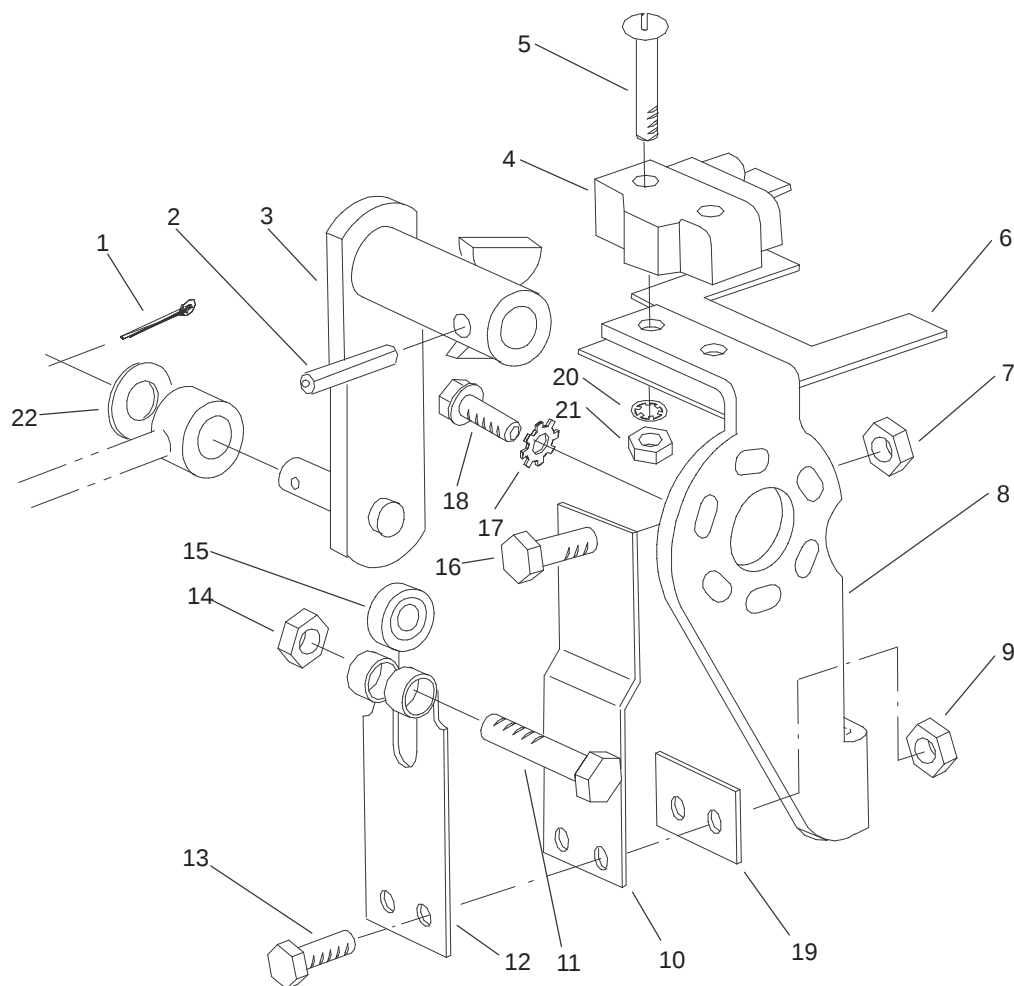 


Sheet No.:13

Neutral Centering Device Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter
2	32121-24	1	Pin-Spring
3	28-9570-03	1	Lever-Pump
4	29-6163	1	Switch-Micro
5	3249-11	2	Screw
6	46-8810	1	Stop-Spring, Leaf
7	3219-2	1	Nut-Hex
8	29-6120-03	1	Plate-Pump
9	3296-42	2	Nut-Lock, NI
10	29-6170	1	Leaf Spring ASM
11	322-17	1	Screw-HH
12	29-6150	1	Spring-Leaf
13	321-6	2	Screw-HH
14	3296-29	1	Nut-Lock, NI
15	251-259	1	Bearing
16	3210-7	1	Screw-HH
17	3255-7	3	Washer-Lock/Ext
18	49-2040	3	Screw-Tapping
19	51-3150	1	Shim
20	3254-9	2	Washer-Lock/Int
21	3217-16	2	Nut-Hex
22	3256-6	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description

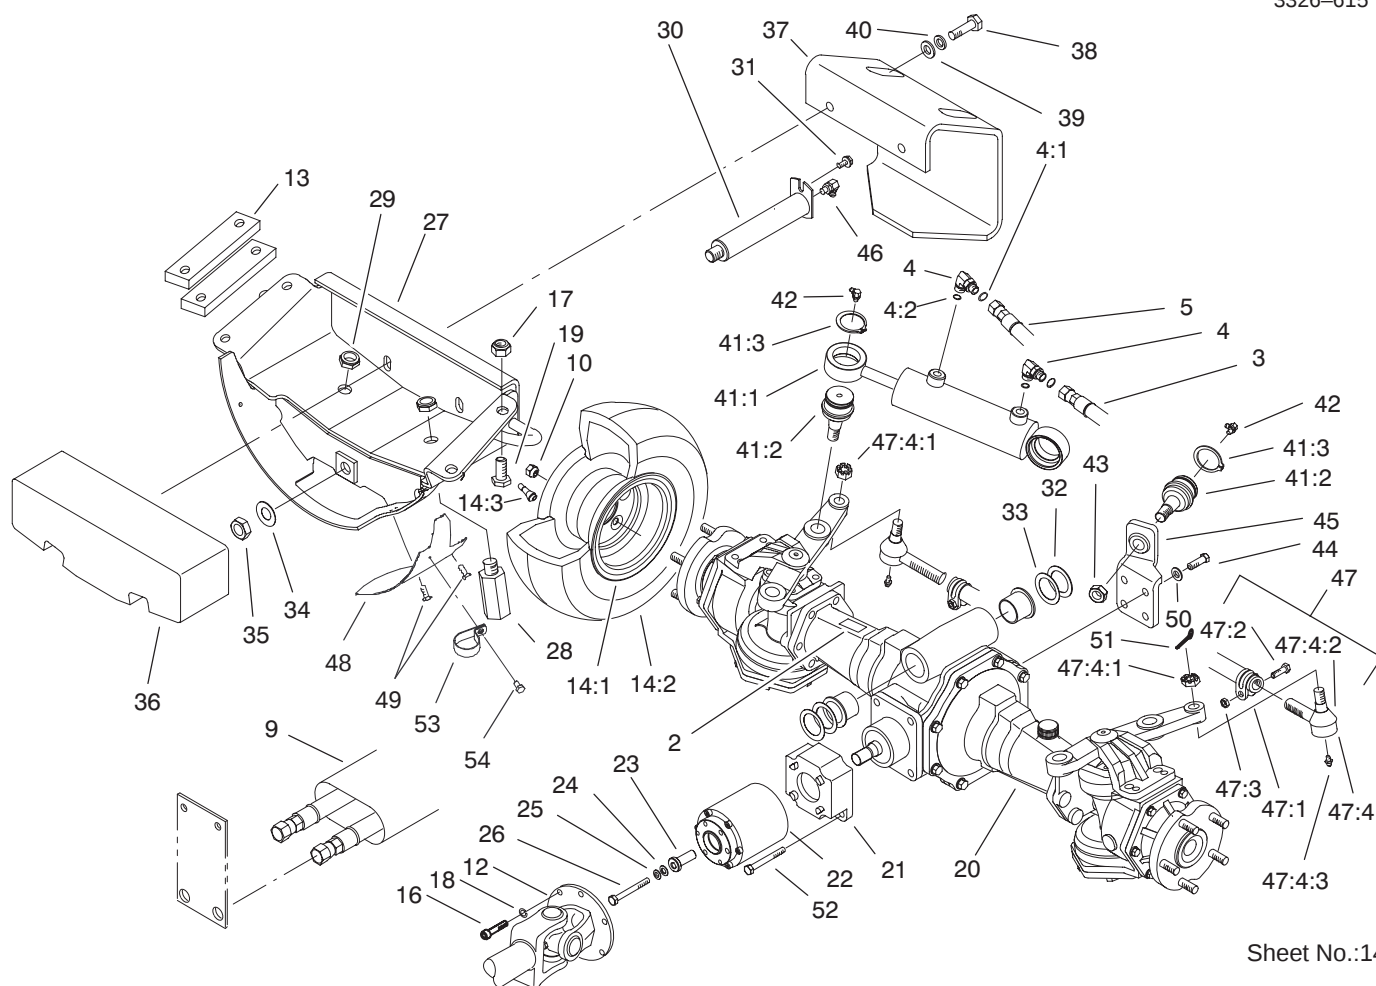 


Sheet No.:14

4 Wheel Drive Rear Axle Assembly(only on: 30627)

Ref. No.	Part No.	Qty.	Description
2	70-2560	1	Decal-Oil
3	99-2407	1	Hose ASM
4	340-97	2	Fitting-HYD, 90°
4:1	237-22	1	O-Ring
4:2	237-78	1	O-Ring
5	99-2408	1	Hose ASM
6	32128-20	1	Nut-HF
7	2412-74	1	R-Clamp
8	3234-17	1	Screw-HHF
9	56-7985	1	Sleeve-Protective
10	93-5268	10	Nut-Lug
12	98-5009	1	Driveshaft ASM
13	105-0073-01	4	Spacer-Frame
★14		2	Tire & Wheel ASM
14:1	105-7846	1	Wheel
14:2	231-122	1	Tire
14:3	232-27	1	Stem-Valve
16	3274-8	12	Screw-HSH
17	32128-23	4	Nut-HF
18	3253-3	12	Washer-Lock
19	3234-46	4	Screw-HHF
20	95-7501	1	Rear Axle ASM
21	98-3860-03	1	Adaptor-Locator, Clutch
22	95-6296	1	Clutch-Bidirectional
23	99-8436	1	Spacer-Clutch

Ref. No.	Part No.	Qty.	Description
24	33094-00	1	Washer-Flat
25	3253-4	1	Washer-Lock
26	33114-070	1	Screw-HH
27	100-6570-01	1	Axle Support ASM
28	98-3863	2	Stop-Oscillation
29	3296-15	2	Nut-Lock NI
30	99-8434-03	1	Rear Axle Pin ASM
31	32144-14	1	Screw-HWH
32	99-8431	1	Washer-Thrust
33	99-8432	1	Washer-Thrust
34	71-4540	1	Washer-Thrust
35	32146-20	1	Nut-Jam
36	98-3869-01	1	Weight-Rear
37	98-3880-03	1	Bumper
38	325-7	2	Screw-HH
39	3256-26	2	Washer-Flat
40	3253-7	2	Washer-Lock
★41		1	Steering Cylinder ASM
41:1	99-2415	1	Cylinder-Hydraulic
41:2	92-5838-01	2	Joint-Ball
41:3	32151-104	2	Ring-Retaining, Ext
42	302-11	2	Fitting-Lube, 45°
43	3220-6	4	Nut-Jam
44	95-8812	4	Screw-HH
45	98-3862-03	1	Bracket-Support, Cylinder

 ★ Not serviced separately

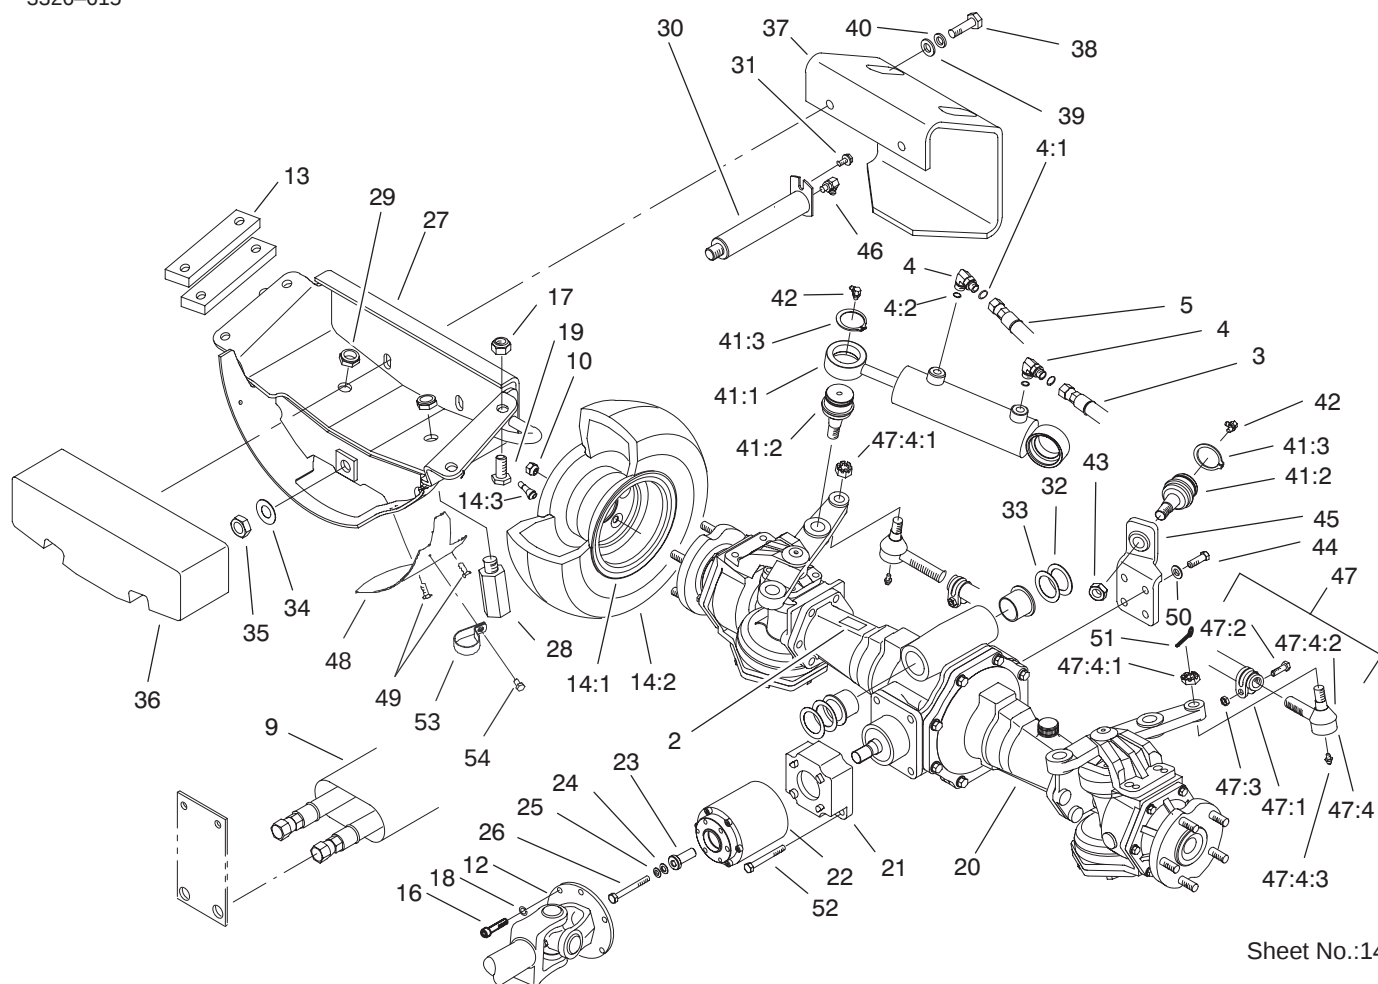


Sheet No.:14

4 Wheel Drive Rear Axle Assembly(only on: 30627) (Continued)

Ref. No.	Part No.	Qty.	Description
46	302-33	1	Fitting-Grease
47	98-3871-03	1	Tie Rod ASM
47:1	99-2412-03	1	Rod & Clamp ASM
47:2	323-9	2	Screw-HH
47:3	3296-39	2	Nut-Lock, NI
47:4	71-4740	2	End-Rod, Tie
47:4:1	105-7941	1	Nut-Hex, Slotted
47:4:2	71-4760	1	Seal
47:4:3	302-55	1	Zerk
48	99-2413-01	1	Cover-Guard, Flywheel
49	32144-10	2	Screw-HWH
50	48-9220	4	Washer
51	3272-12	2	Pin-Cotter
52	87-3700	2	Screw
53	2412-74	1	R-Clamp
54	321-2	1	Screw-HH

Ref. No.	Part No.	Qty.	Description

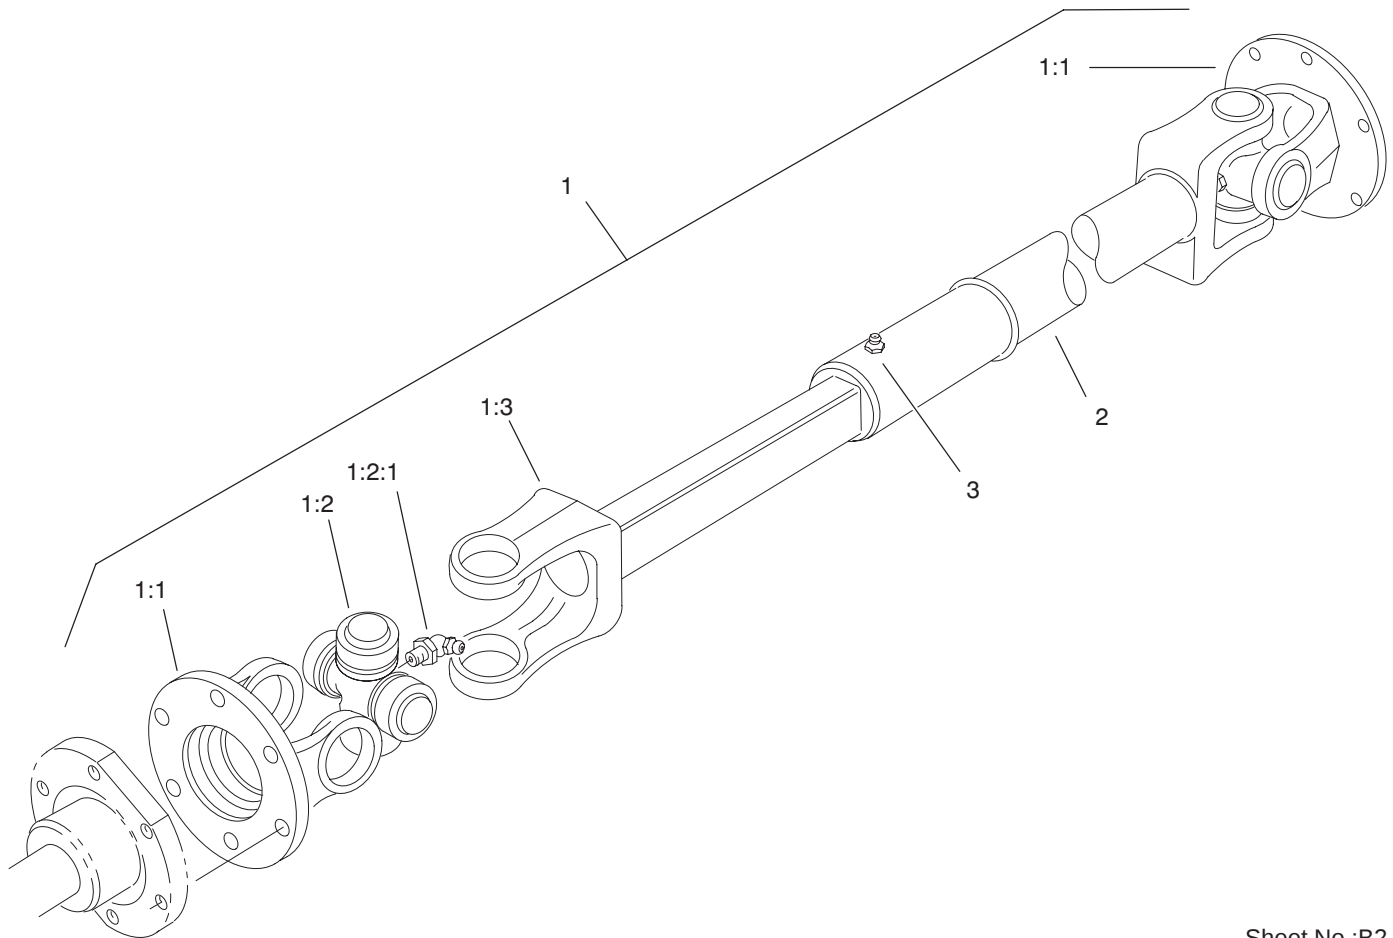 


Sheet No.:B2

T-3804

Driveshaft Assembly No. 98-5009 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	92-5096	1	Joint & Shaft ASM
1:1	72-3410	1	Yoke-Flange
1:2	54-9180	1	U-Joint Kit
1:2:1	62-3820	1	Fitting-Grease
1:3	72-3420	1	Shaft-Slip, Yoke
2	72-3431	1	Tube-Slip, Yoke
3	302-58	1	Fitting-Grease

Ref. No.	Part No.	Qty.	Description

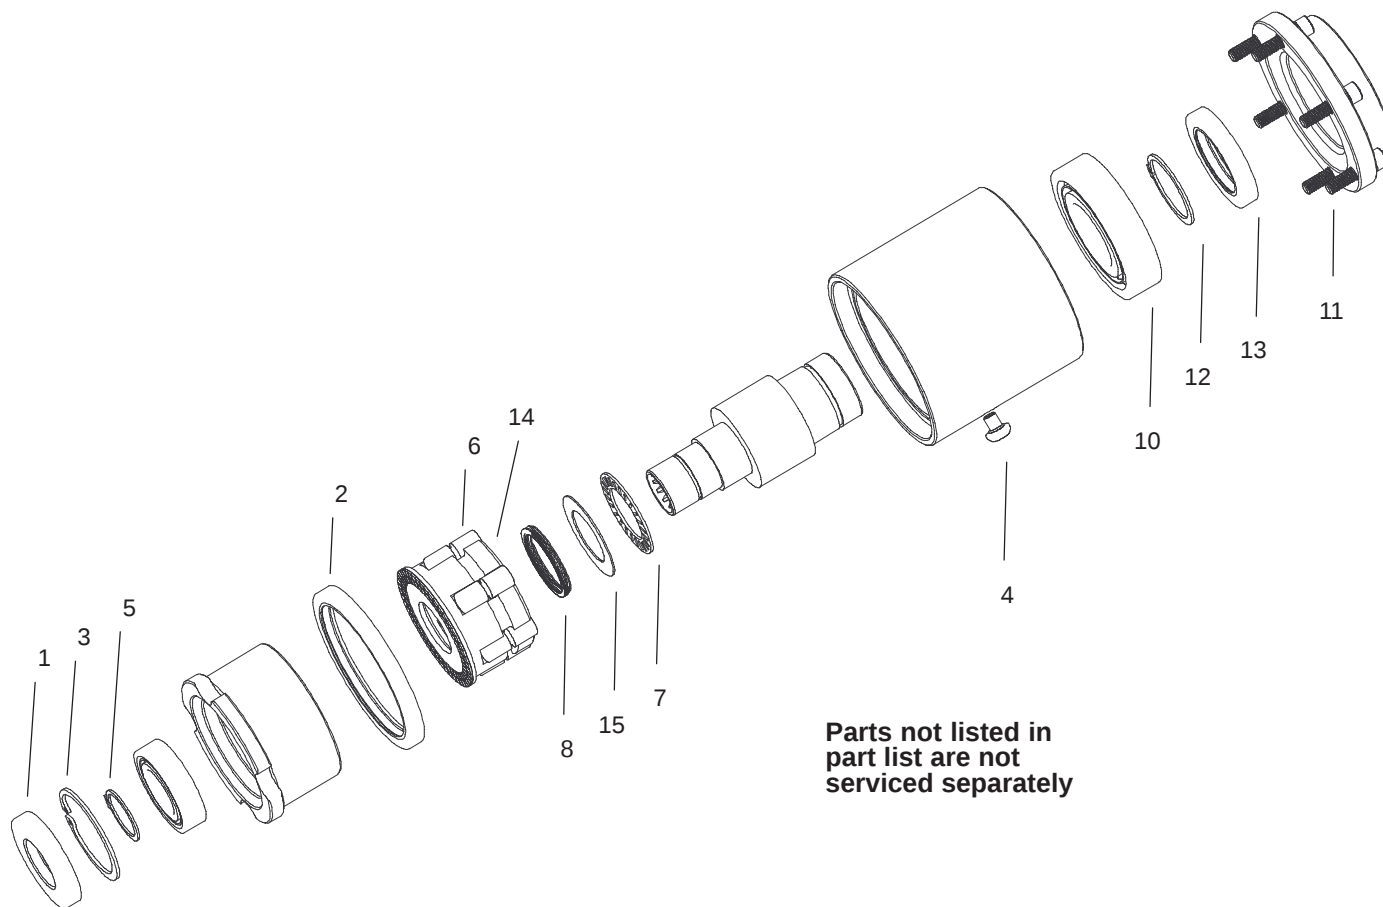 

**Parts not listed in
part list are not
serviced separately**


Sheet No.:B3

T-3802

Bi-Directional Clutch Assembly No. 95-6296 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	100-6589	1	Seal-Oil
2	100-6593	1	Seal-Oil
3	100-6594	1	Ring-Snap, Internal
4	100-6596	1	Screw-PPH
5	100-6597	1	Ring-Snap, External
6	93-8925	6	Roller
7	93-8919	1	Bearing-Needle, Thrust
8	93-8923	1	Spring-Wave
9	99-2902	1	Bearing-Ball
10	92-9705	1	Bearing
11	3245-6	6	Screw-HSH
12	32120-84	1	Ring-Snap, External
13	71-6790	1	Seal-Oil
14	100-2568	1	Roll Cage ASM
15	93-8929	1	Washer-Thrust

Ref. No.	Part No.	Qty.	Description

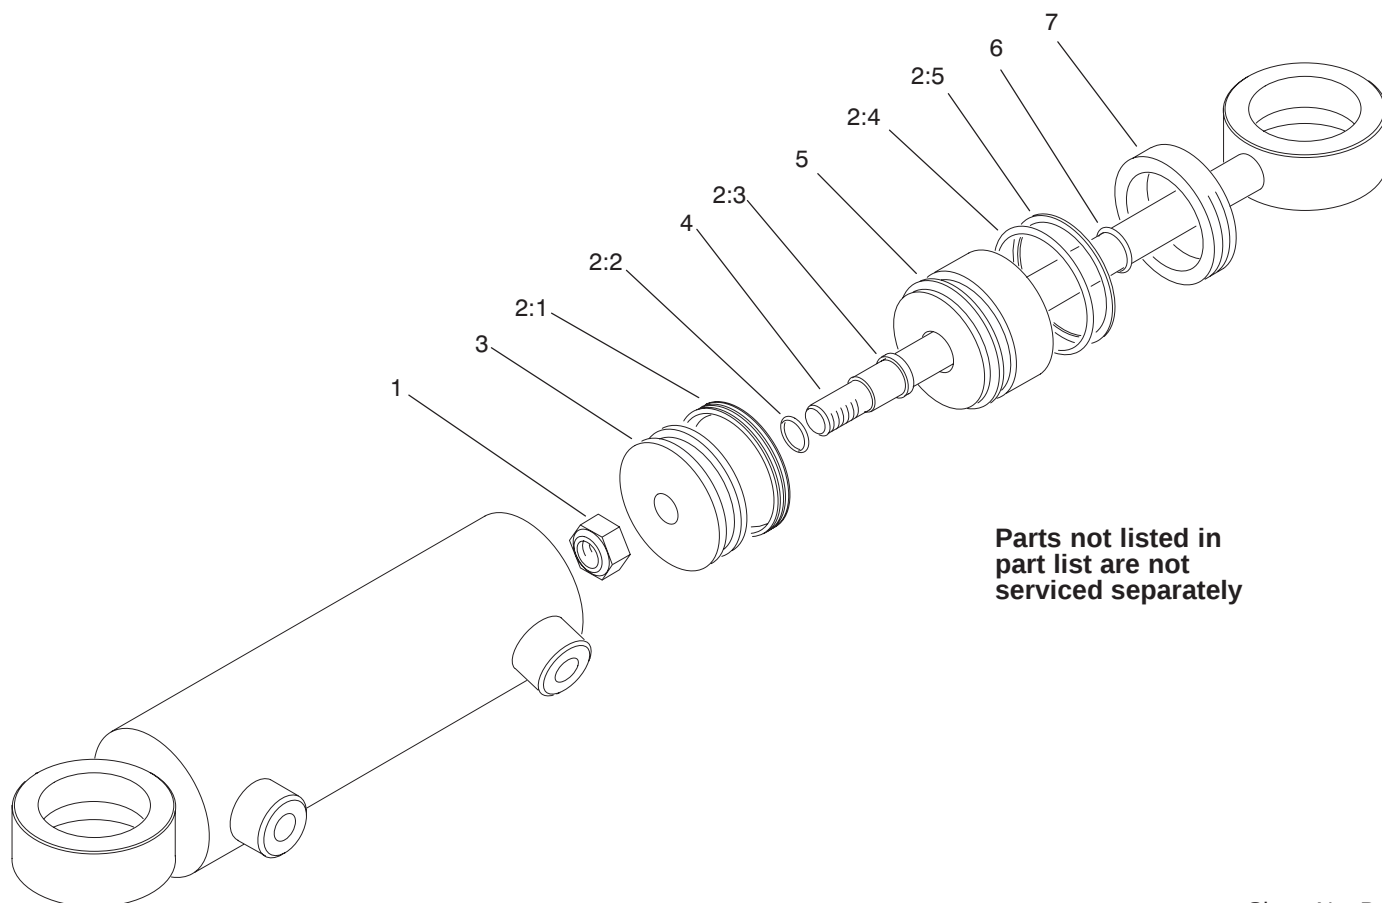 

**Parts not listed in
part list are not
serviced separately**


Sheet No.:B4
T-3111

Cylinder Assembly No. 99-2415 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	32152-10	1	Locknut
2	86-5390	1	Kit-Repair, Seal
☆2:1		1	Uniring
☆2:2		1	O-Ring
☆2:3		1	Seal-Rod
☆2:4		1	O-Ring
☆2:5		1	Ring-Backup
☆3		1	Piston
☆4		1	Rod
☆5		1	Head
☆6		1	Seal-Dust
☆7		1	Collar-Internal

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

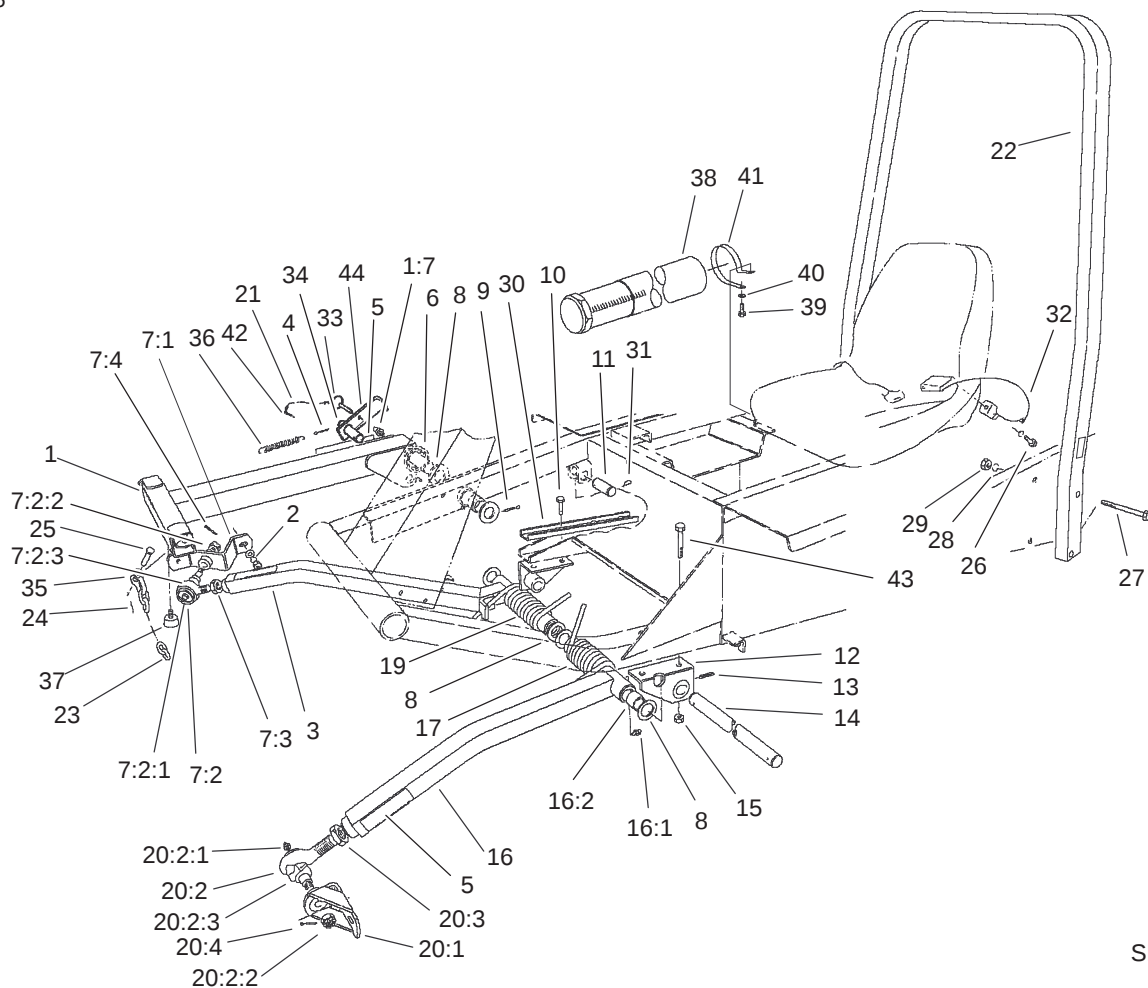


Sheet No.:15

Push Arm and ROPS Assembly

Ref. No.	Part No.	Qty.	Description
1	66-6370	1	Arm-Lift
1:7	302-5	1	Fitting-Grease
*1:8	3290-472 1 1	1	Insert-Threaded
2	3253-6	2	Washer-Lock
3	66-7150	1	Arm-Push, RH
*3:1	302-33	1	Fitting-Grease
*3:2	256-126	2	Bushing
4	3272-24	1	Pin-Cotter
5	55-4300	3	Decal-Warning
6	46-8840-01	1	Spring-Arm, Lift
7	18-2869-01	1	RH Ball Joint ASM
7:1	21-3020-01	1	Mount-Balljoint, RH
7:2	86-8100-01	1	Joint-Ball
7:2:1	302-5	1	Fitting-Grease
7:2:2	32136-2	1	Nut-SHH
7:2:3	105-7835	1	Seal
7:3	21-3000	1	Nut-HJ, Push Arm
7:4	3272-11	1	Pin-Cotter
8	5-1754	6	Washer-Pulley, Countershaft
9	3272-33	1	Pin-Cotter
10	324-4	2	Screw-HH
11	3-7292	1	Pin
12	21-2860-01	2	Bracket-Arm, Push
13	32121-84	2	Pin-Coil
14	21-2990	1	Shaft-Pivot

Ref. No.	Part No.	Qty.	Description
15	32128-42	4	Nut-HF
16	21-2960	1	Arm-Push, LH
16:1	302-33	1	Fitting-Grease
16:2	256-126	2	Bushing
17	21-2900-01	1	Spring-LH
19	21-2890-01	1	Spring-RH
20	18-2879-01	1	LH Ball Joint ASM
20:1	21-3050-01	1	Mount-Ball Joint, LH
20:2	86-8100	1	Joint-Ball
20:2:1	302-5	1	Fitting-Grease
20:2:2	32136-2	1	Nut-SHH
20:2:3	105-7835	1	Seal
20:3	21-3000	1	Nut-HJ, Push Arm
20:4	3272-11	1	Pin-Cotter
22	99-1299-03	1	Rops-2 Post (only on: 30627)
23	3-1365	3	Chain
24	3272-10	6	Pin-Cotter
25	283-10	6	Clevis
26	3212-4	2	Screw-HH (only on: 30627)
27	328-12	4	Screw-HH (only on: 30627)
28	3253-9	4	Washer-Lock/Sp (only on: 30627)

 * Not illustrated

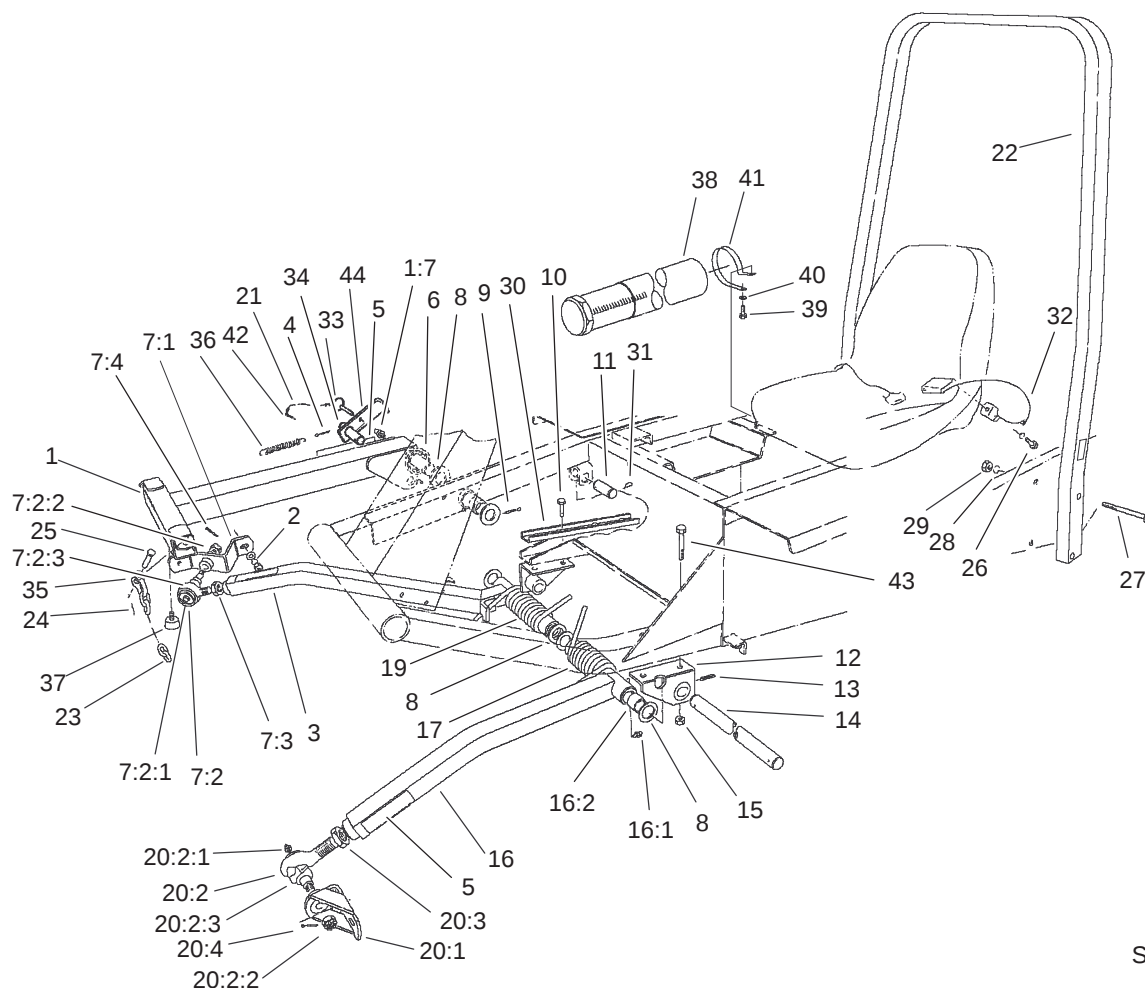

Sheet No.:15


Push Arm and ROPS Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
29	3217-12	4	Nut-,Hex (only on: 30627)
30	23-1950-01	1	Support-Reinforcem ent
31	5-3126	3	Pin-Spring
32	72-9390	1	Belt-Seat (only on: 30627)
34	24-9510	1	Pin
35	5-2942	6	Shackle
36	21-1830	1	Spring-PTO, Tension
37	68-3270	1	Bumper-Rubber
38	74-0720	1	Tube-Manual
39	322-2	2	Screw-HH
40	3256-23	2	Washer-Flat
41	2412-133	2	R-Clamp
43	324-12	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

Water and Fuel Filter Assembly


Ref. No.	Part No.	Qty.	Description

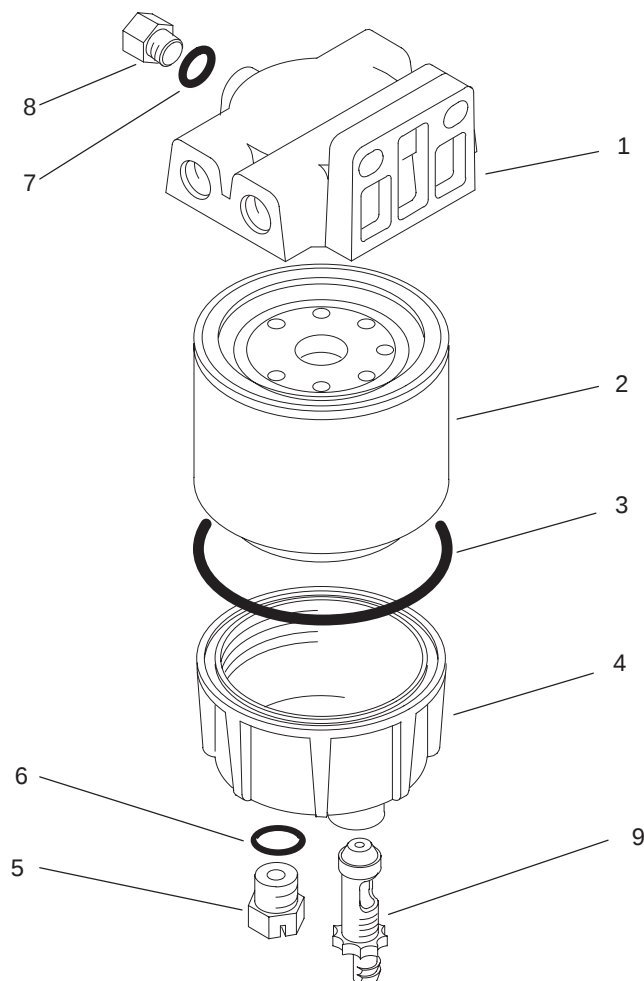 

Sheet No.:B5
T-3330

Water and Fuel Filter No. 98-9305

Ref. No.	Part No.	Qty.	Description
1	98-9772	1	Head-Filter
2	98-9764	1	Element-On, Spin
3	98-9774	1	O-Ring-Base, Filter
4	98-9775	1	Base-Filter
5	98-9773	1	Plug-Base, Filter
6	237-42	1	O-Ring
7	237-78	1	O-Ring
8	98-9776	1	Plug-Head, Filter
9	98-9777	1	Drain Valve ASM

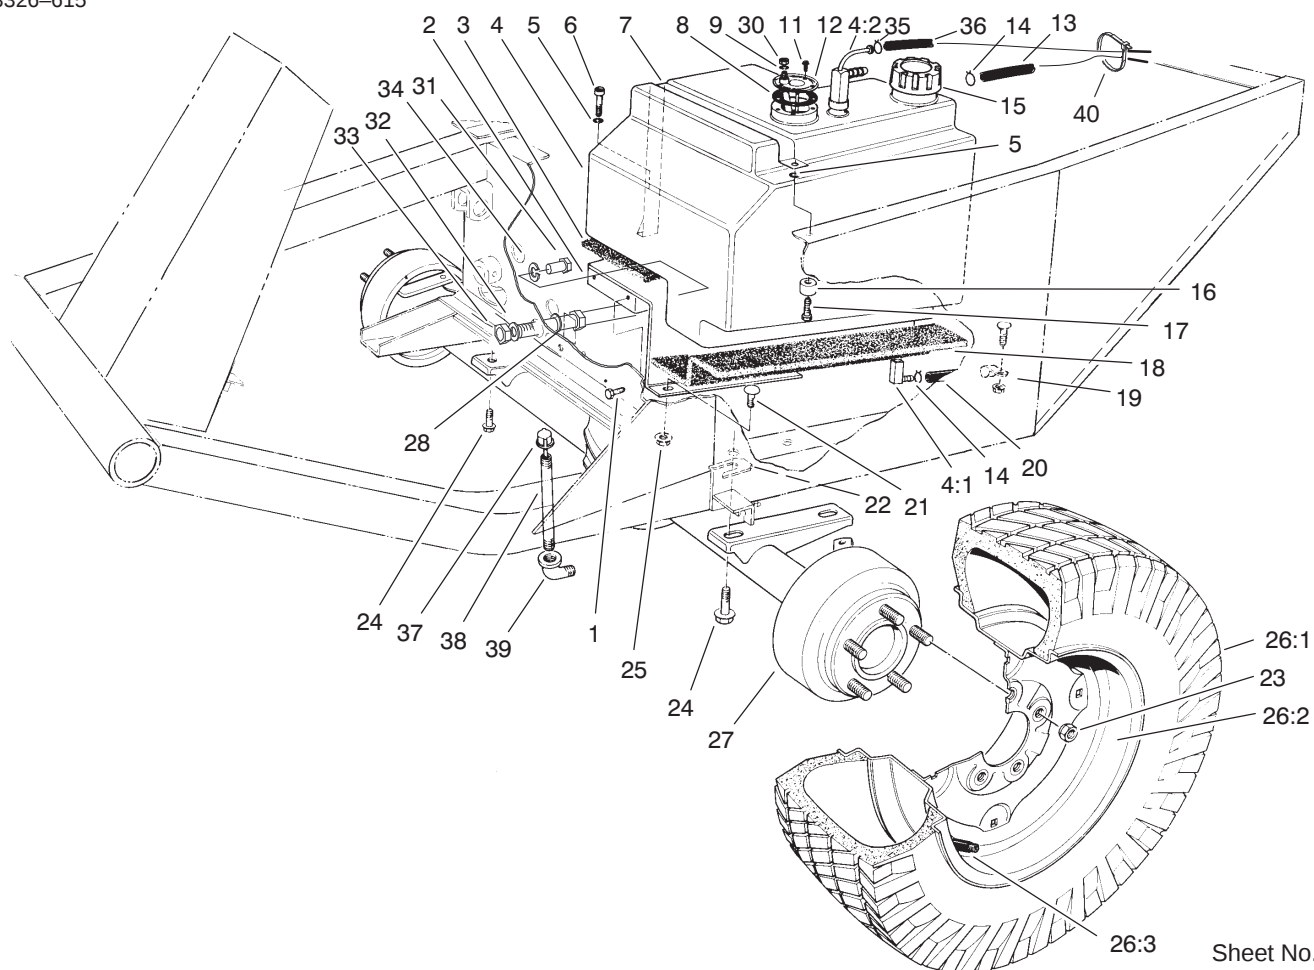 


Fuel Tank and Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3234-11	2	Screw-HHF
2	68-9760	1	Base-Tank, Fuel
3	21-3600	1	Foam-Support, Tank
4	43-4150	1	Fuel Tank ASM
4:1	43-4190	1	Fitting ASM
4:2	43-4160	1	Fitting-Return & Vent
5	3253-3	2	Washer-Lock
6	32104-96	1	Screw-HH
7	37-9550	1	Strap-Tank, Gas
8	62-7650	1	Gasket
9	3253-17	1	Washer-Lock/Sp
11	32144-53	5	Screw-SHWH
12	105-2563	1	Sender-Fuel
13	104-0076	1	Hose-Fuel
14	2412-6	2	Clamp-Hose
15	55-3572	1	Gas Cap ASM
16	22-7810	1	Spacer
17	321-6	1	Screw-HH
18	21-3610	1	Foam-Support, Tank
19	2412-4	1	Clamp
20	27-5360	1	Line-Fuel
21	3230-2	3	Screw-CARR
22	42-6080	1	Shim-Axle
23	23-7270	10	Nut-Wheel
24	32144-67	4	Screw

Ref. No.	Part No.	Qty.	Description
25	32128-20	2	Nut-HF (only on: 30627)
25	32128-20	3	Nut-HF (only on: 30626)
★26		2	Tire ASM
26:1	95-3348	1	Tire
26:2	217-117	1	Wheel ASM
26:3	232-27	1	Stem-Valve
27	86-9600-03	1	Axle ASM (only on: 30626)
27	86-9630-03	1	Axle ASM (only on: 30627)
28	24-9830-01	1	Support-Axle
30	3219-14	1	Nut-Hex
31	323-6	1	Screw-HH
32	3256-6	2	Washer-Flat
33	3217-9	2	Nut-HH
34	3253-21	1	Washer-Lock
35	2412-79	2	Clamp-Hose
36	43-4230	1	Hose-Return
37	23-5180	1	Dipstick-Axle
38	289-37	1	Nipple-Pipe
39	2811-9	1	Fitting-Elbow, Street
40	3290-379	1	Tie-Cable

 ★ Not serviced separately

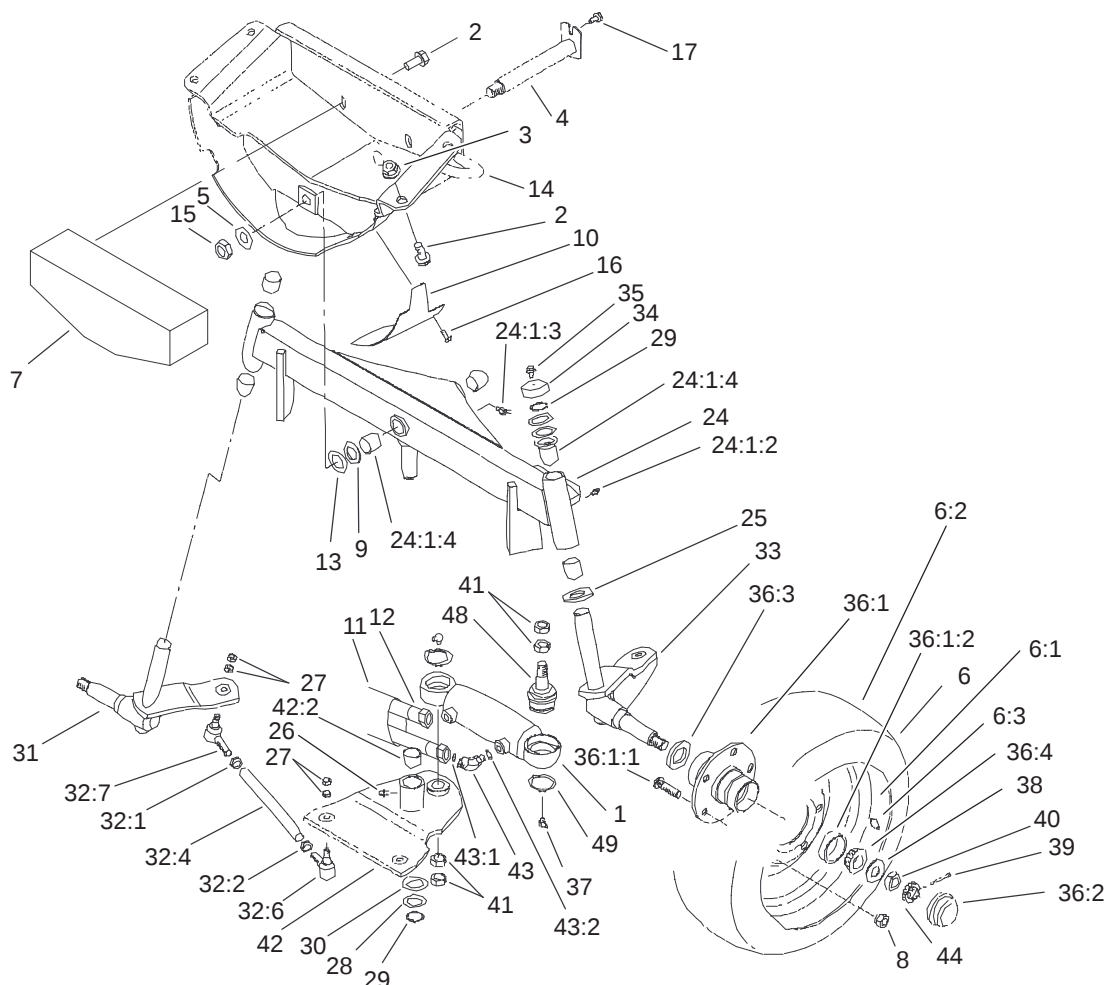


Sheet No.:18

2 Wheel Drive Rear Axle Assembly (only on: 30626)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-7828	1	Cylinder-HYD	25	256-121	2	Washer-Thrust
2	3234-32	6	Screw-HHF	26	302-5	1	Fitting-Grease
3	32128-23	4	Nut-HF	27	3220-3	8	Nut-Jam
4	92-7807-01	1	Pin-Axle, Rear	28	5-1226	4	Washer
5	71-4540	1	Washer-Thrust	29	32151-36	3	Ring-Retaining
☆6	217-106	2	Tire & Wheel ASM	30	10-8110	3	Washer-Thrust
6:1	231-105	1	Wheel ASM	31	93-3199-03	1	Spindle-RH
6:2	231-105	1	Tire	32	21-1991	2	Tie Rod ASM
6:3	232-31	1	Stem-Valve	32:1	3220-12	1	Nut-HJ, LH Thread
7	98-3869-01	1	Weight-Rear	32:2	3220-5-01	1	Nut-HJ
8	242-50	10	Nut-Lug	32:4	21-2000	1	Tie Rod-Steering
9	92-7845	1	Spacer-Hardened	32:6	21-0151	1	LH Ball Joint ASM
10	99-2413-01	1	Cover-Guard, Flywheel	32:7	21-0141-03	1	RH Ball Joint ASM
11	56-7980	1	Sleeve-Protective	33	99-1292-03	1	LH Spindle ASM
12	68-9710	2	Hose-Steering, Rear	34	66-2990	2	Cap-Spindle
13	56-2460	1	Washer-Flat	35	3234-13	2	Screw-HHF
14	92-7803-01	1	Support-Axle	☆36	21-2820	2	Hub ASM
15	32146-20	1	Nut-Jam	36:1	21-2820	1	Hub ASM
16	32144-10	2	Screw-HWH	36:1:1	10-6830	5	Stud-Type, Drive
17	32144-14	1	Screw-HWH	36:1:2	254-72	2	Bearing-Cup, Tapered
24	100-6566-03	1	Rear Axle ASM	36:2	241-119	1	Cap-Dust
☆24:1	302-5	1	Rear Axle ASM	36:3	253-129	1	Seal
24:1:2	302-11	2	Fitting-Grease	36:4	254-94	2	Bearing-Cone, Taper
24:1:3	67-1750	1	Fitting-Lube, 45°	37	302-11	2	Fitting-Lube, 45°
24:1:4		6	Bushing	38	93-0309	2	Washer-Tab
				39	3272-13	2	Pin-Cotter

 ☆ Not serviced separately

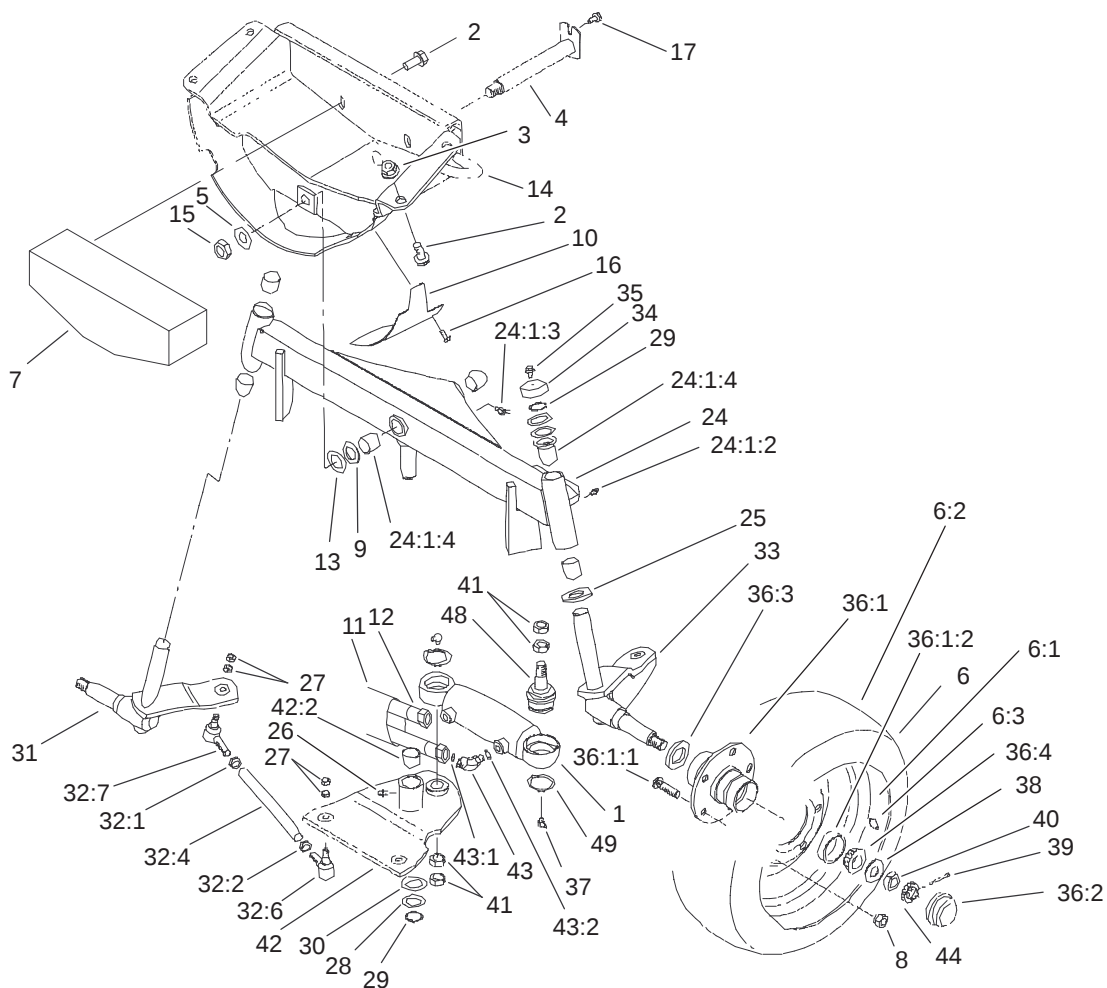


Sheet No.:18

2 Wheel Drive Rear Axle Assembly (only on: 30626) (Continued)


Ref. No.	Part No.	Qty.	Description
40	3220-7	2	Nut-Jam
41	3220-6	4	Nut-Jam
42	92-7821	1	Pivot-Steering
42:2	256-242	2	Bushing
43	340-54	2	Elbow-45°
43:1	237-22	1	O-Ring
43:2	237-78	1	O-Ring
44	93-0307	2	Nut-Lock, Retainer
48	92-5838-01	2	Joint-Ball
49	32151-104	2	Ring-Retaining, Ext

Ref. No.	Part No.	Qty.	Description

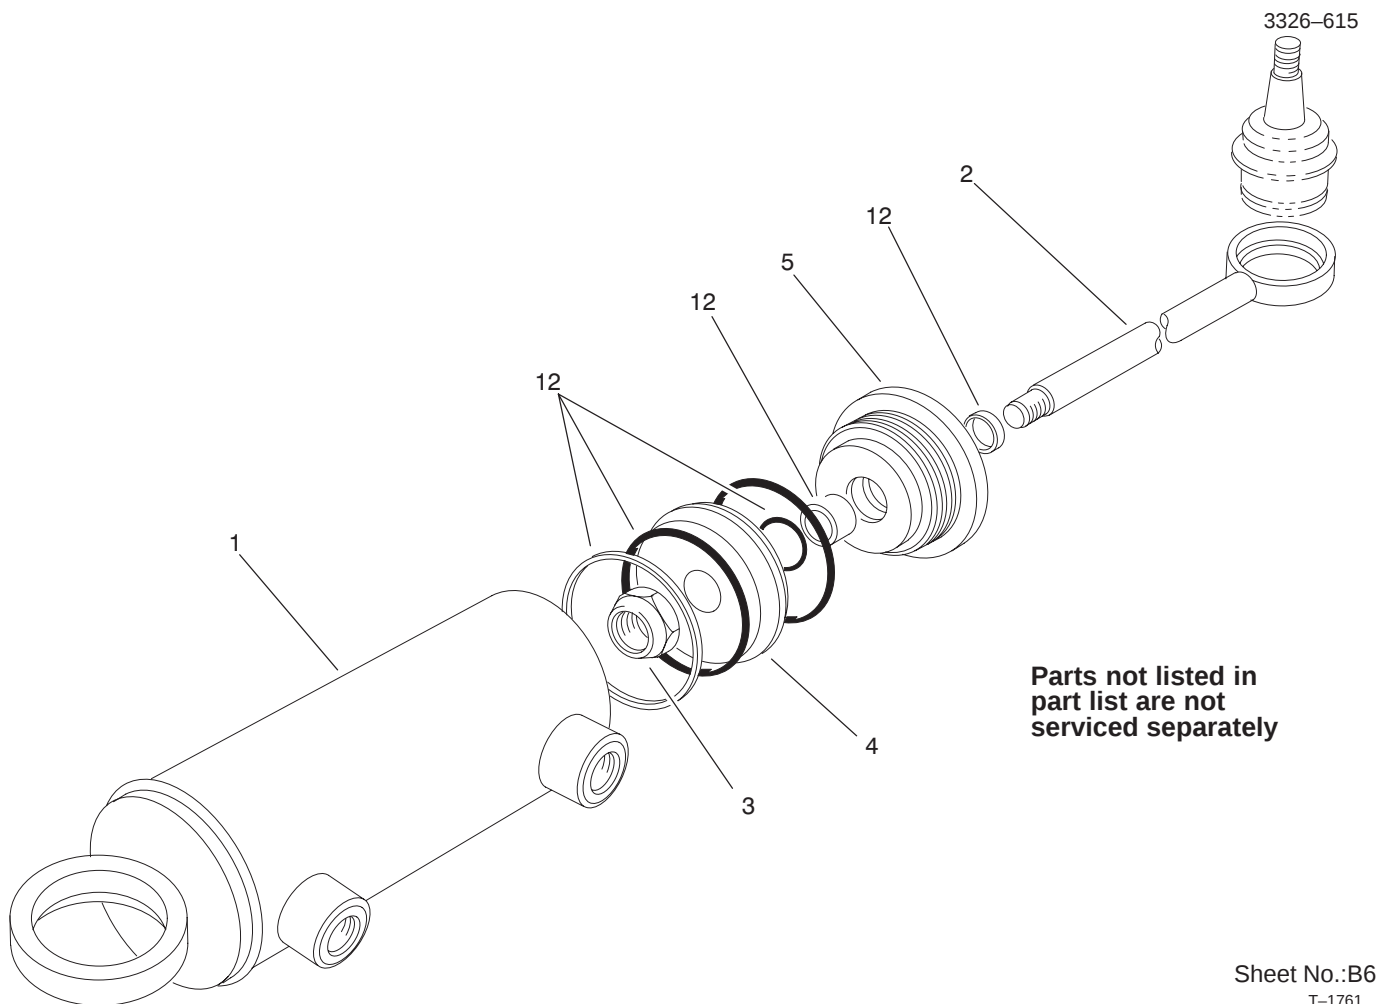 

Ref. No.	Part No.	Qty.	Description
☆1		1	Tube ASM
☆2		1	Piston Rod ASM
3	66-1930	1	Locknut
4	66-1940	1	Piston
5	92-6588	1	Gland
12	92-6593	1	4wd Packing Kit

 ☆ Not serviced separately

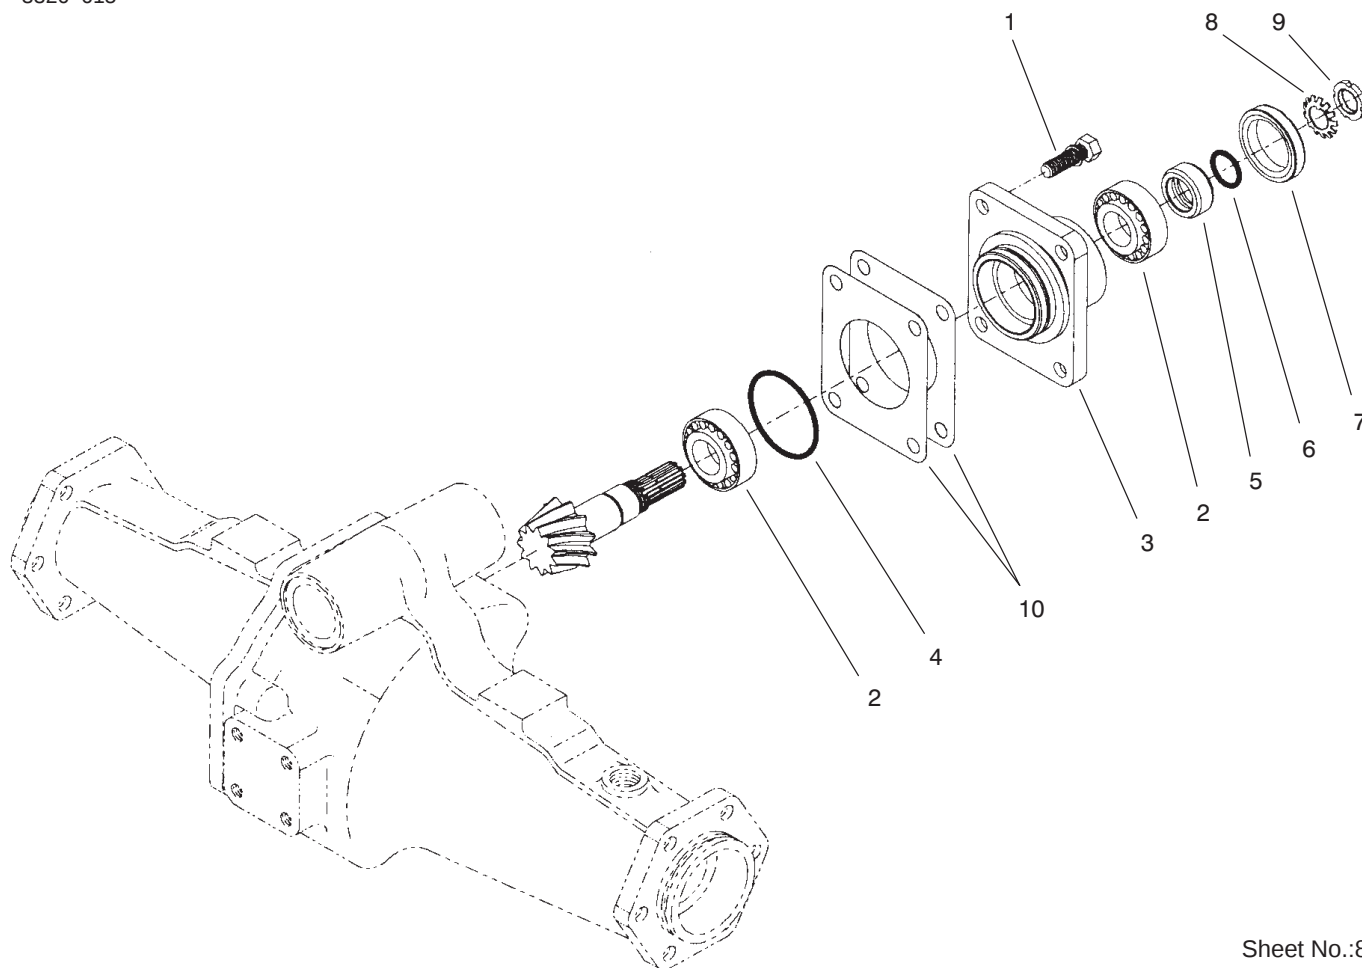


Sheet No.:83
T-3102

4 Wheel Drive Rear Axle Assembly No. 95-7501 Bevel Pinion Shaft Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	99-7575	4	Bolt
2	99-7570	2	Bearing-Taper Roller
3	95-7535	1	Case-Bearing
4	99-7571	1	O-Ring
5	99-7572	1	Collar-Oil Seal
6	99-7573	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock
10	99-7550	2	Shim 0.1
*10	99-7551	2	Shim 0.2

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

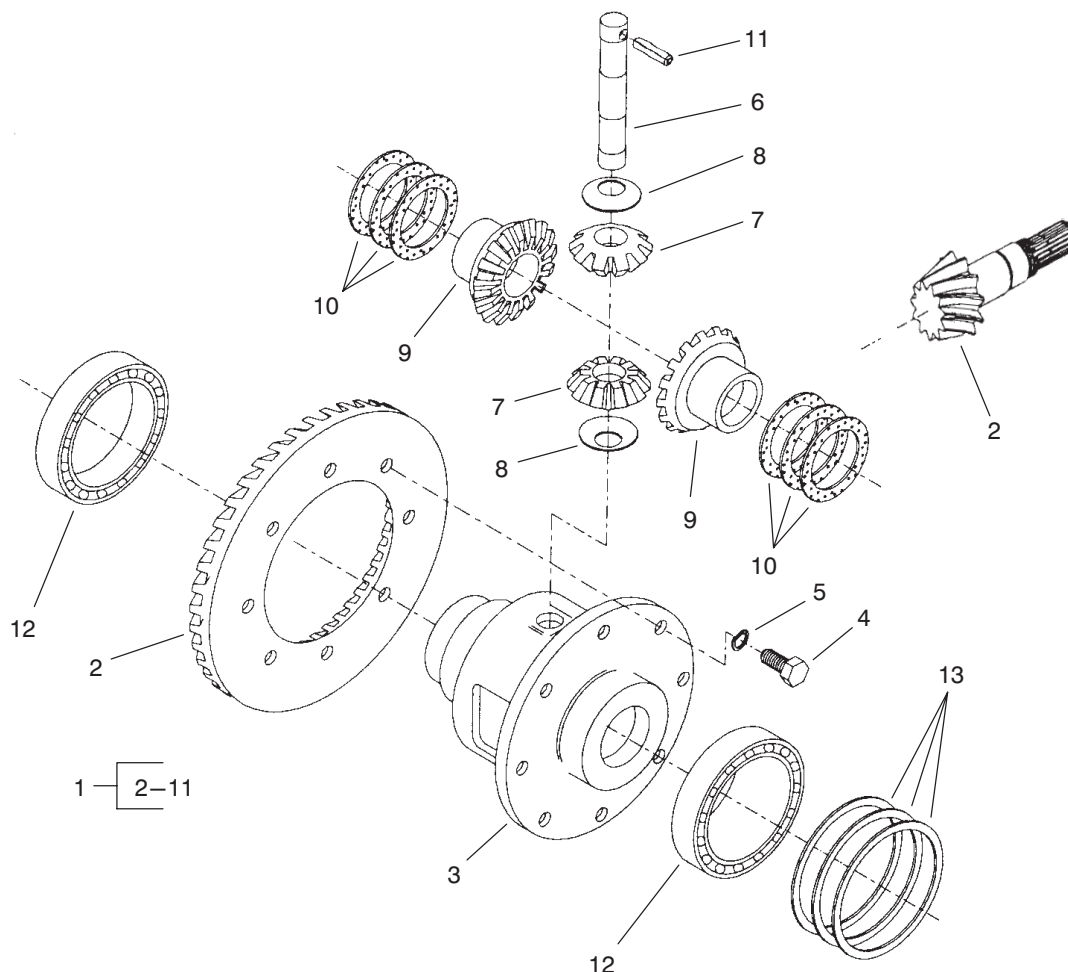


Sheet No.:84
T-3103

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Differential Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7503	1	Differential ASM				
2	100-2555	1	Ring And Pinion Matched Set				
3	95-7502	1	Case-Differential				
4	99-7576	8	Bolt				
5	99-7577	8	Washer-Spring				
6	99-7578	1	Shaft-Differential				
7	99-7579	2	Pinion-Differential				
8	99-7580	2	Washer-Differential				
9	99-7581	2	Gear-Differential				
10	99-7582	2	Washer-Differential				
*10	99-7583	2	Washer-Differential				
*10	99-7584	2	Washer-Differential				
11	99-7588	1	Pin-Spring				
12	99-7562	2	Bearing-Ball				
13	99-7585	2	Shim 0.1				
*13	99-7586	2	Shim 0.2				
*13	99-7587	2	Shim 0.4				

 * Not illustrated

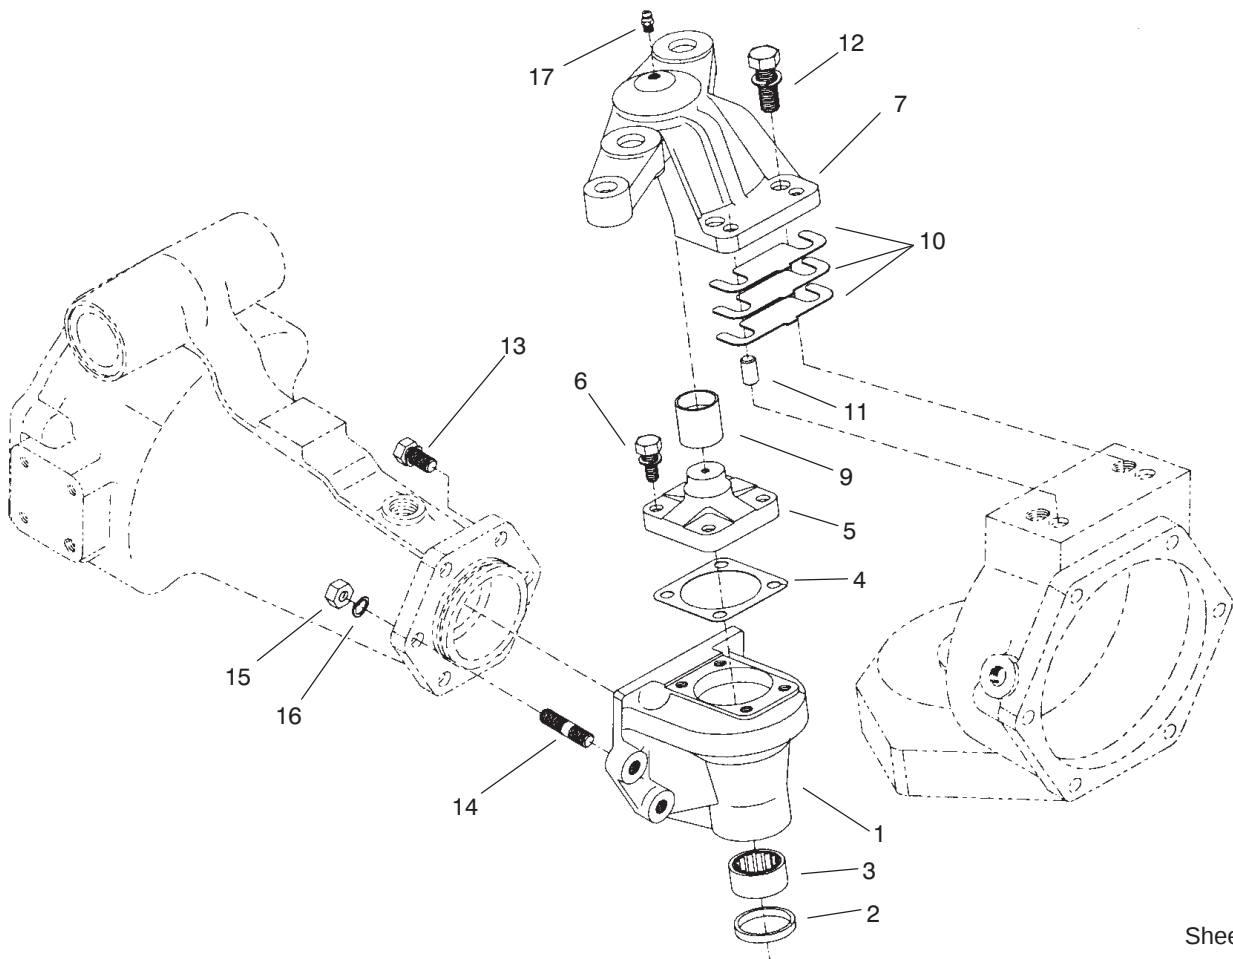

Sheet No.:86

T-3105

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Bevel Gear Case Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7539	2	Case-Bevel Gear				
2	99-7594	2	Seal-Oil				
3	99-7595	2	Bearing-Needle				
4	95-7511	2	Gasket				
5	95-7510	2	Pin-Knuckle				
6	99-7596	8	Bolt				
7	95-7514	1	Support-Axle Case, RH				
*8	95-7516	1	Support-Axle Case, LH				
9	99-7529	2	Bushing				
10	95-7547	2	Shim 0.1				
*10	95-7548	2	Shim 0.2				
*10	95-7549	2	Shim 0.4				
11	99-7597	4	Pin-Dowel				
12	99-7598	4	Bolt				
13	99-7599	8	Bolt				
14	99-7525	4	Stud				
15	99-7526	4	Nut				
16	99-7527	4	Washer-Spring				
17	99-7528	2	Nipple-Grease				


* Not illustrated

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Bevel Gear Shaft Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	95-7509	1	Shaft-Gear, Differential
2	95-7512	1	Shaft-Gear, Differential
3	95-7518	4	Gear-18 Bevel
4	99-7530	4	Bearing-Ball
5	99-7552	2	Shim 0.1
*5	99-7553	2	Shim 0.2
*5	99-7554	2	Shim 0.5
6	99-7531	2	Clip
7	95-7530	2	Shaft-Bevel Gear
8	99-7532	2	Bearing-Taper Roller
9	95-7543	2	Spacer
10	99-7533	2	Collar-Thrust
11	99-7558	2	Collar

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

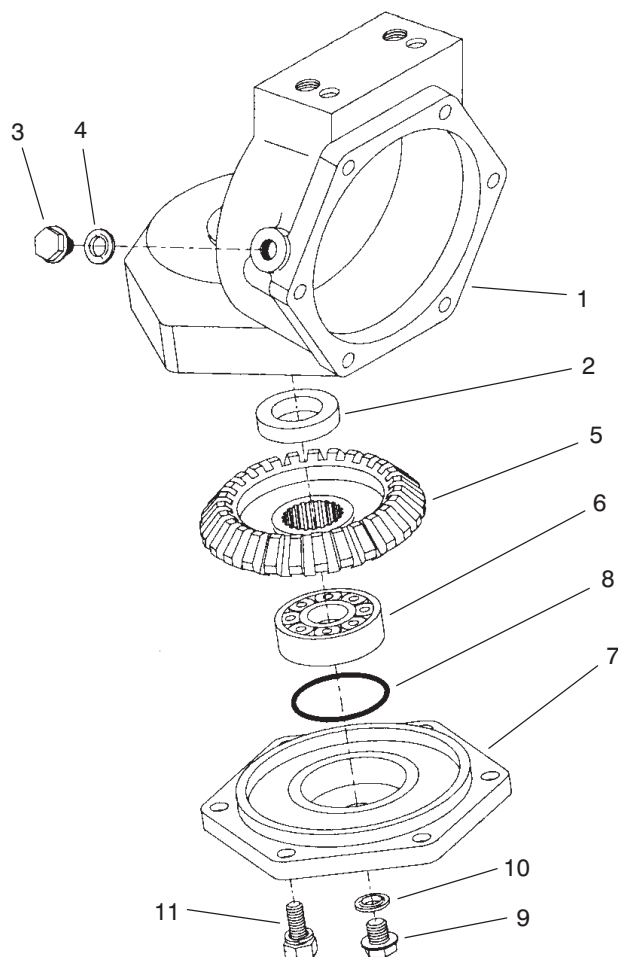

Sheet No.:88
T-3107


**4 Wheel Drive Rear Axle Assembly No. 95-7501
(Continued)
Axle Case Assembly (only on: 30627)**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7532	2	Case-Axle				
2	99-7594	2	Seal-Oil				
3	99-7535	2	Plug				
4	99-7536	2	Washer-Seal				
5	95-7528	2	Gear-27 Bevel				
6	99-7532	2	Bearing-Taper Roller				
7	95-7526	2	Cover-Axle				
8	99-7537	2	O-Ring				
9	99-7589	2	Plug				
10	99-7590	2	Washer-Seal				
11	99-7596	12	Bolt				

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Axle Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description

 44

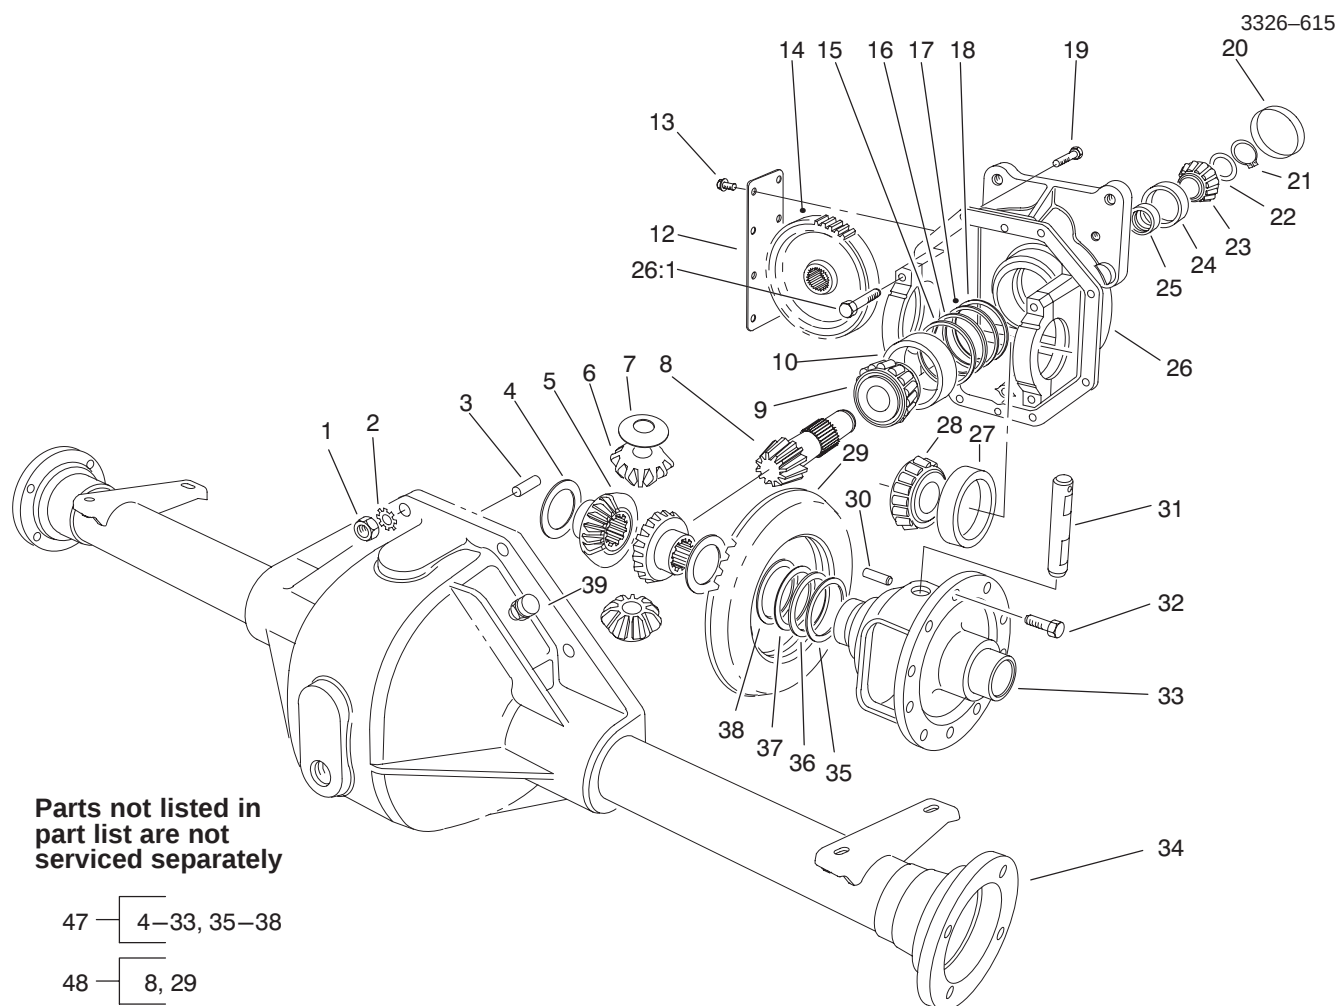


Front Axle Assembly No. 86–9600–03 (Only on: 30626)

Ref. No.	Part No.	Qty.	Description
1	3219–2	8	Nut
2	3255–8	8	Washer–Lock
3	21–8270	2	Dowel Pin
4	21–7720	2	Thrust Washer
5	24–8790	2	Differential Bevel Gear Side
6	21–7690	2	Pinion Gear
7	21–7730	2	Thrust Washer
8		1	Drive Pinion
9	43–6760	1	Roller Bearing Cone
10	43–6750	1	Roller Bearing Cup
12	21–7830	1	Gear Cover
13	12–5450	8	Screw–TAP
14	86–7230	1	Spur–Gear
15	43–6710	AR	Adjustment Shim .003
16	43–6711	AR	Adjustment Shim .005
17	43–6712	AR	Adjustment Shim .010
18	43–6713	AR	Adjustment Shim .030
19	3210–7	8	Screw–HH
20	21–7850	1	Cup–Plug
21	43–6550	1	Snap Ring
22	46–2210	AR	Shim–Front Pinion Bearing (.031)
*	46–2211	AR	Shim–Front Pinion Bearing (.033)
*22	46–2212	AR	Shim–Front Pinion

Ref. No.	Part No.	Qty.	Description
*	46–2213	AR	Bearing (.035)
*	46–2214	AR	Shim–Front Pinion Bearing (.037)
*	46–2215	AR	Shim–Front Pinion Bearing (.039)
*	46–2216	AR	Shim–Front Pinion Bearing (.041)
*	46–2220	AR	Shim–Front Pinion Bearing (.043)
*	46–2221	AR	Shim–Front Pinion Bearing (.045)
*	46–2222	AR	Shim–Front Pinion Bearing (.047)
*	46–2223	AR	Shim–Front Pinion Bearing (.049)
*	46–2224	AR	Shim–Front Pinion Bearing (.051)
*	46–2225	AR	Shim–Front Pinion Bearing (.053)
*	46–2226	AR	Shim–Front Pinion Bearing (.055)
*	46–2410	AR	Shim–Front Pinion Bearing (.057)
			Bearing (.062)

 *Not Illustrated

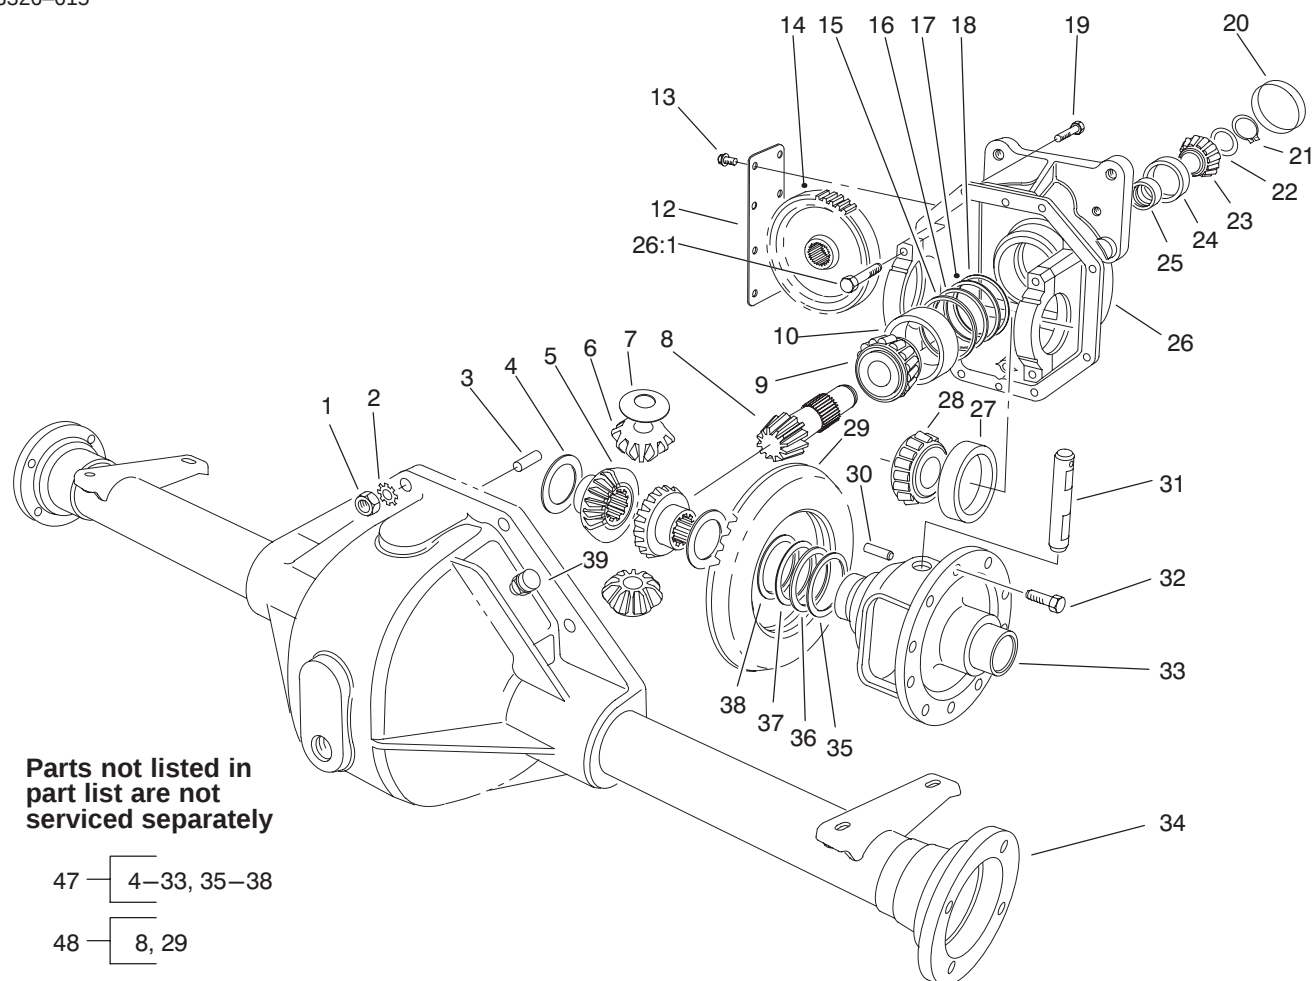


Front Axle Assembly No. 86-9600-03 (Continued) (Only on: 30626)

Ref. No.	Part No.	Qty.	Description
*22	46-2411	AR	Shim-Front Pinion Bearing (.064)
*	46-2412	AR	Shim-Front Pinion Bearing (.066)
*	46-2413	AR	Shim-Front Pinion Bearing (.068)
*	46-2414	AR	Shim-Front Pinion Bearing (.070)
*	46-2415	AR	Shim-Front Pinion Bearing (.072)
*	46-2416	AR	Shim-Front Pinion Bearing (.074)
*	46-2420	AR	Shim-Front Pinion Bearing (.076)
*	46-2421	AR	Shim-Front Pinion Bearing (.078)
*	46-2422	AR	Shim-Front Pinion Bearing (.080)
*	46-2423	AR	Shim-Front Pinion Bearing (.082)
*	46-2424	AR	Shim-Front Pinion Bearing (.084)
*22	46-2425	AR	Shim-Front Pinion Bearing (.086)

Ref. No.	Part No.	Qty.	Description
*	46-2426	AR	Shim-Front Pinion Bearing (.088)
23	254-91	1	Bearing Cone
24	254-90	1	Bearing Cup
25	21-8020	1	Spacer-Pinion Bearing
26	86-9580	1	Upper Housing
26:1	92-1773	4	Screw-HH
27	254-66	2	Cup-Tapered Bearing
28	254-65	2	Cone-Tapered Bearing
29		1	Ring Gear
30	32121-15	1	Roll Pin
31	21-7700	1	Pinion Mate Shaft
32	21-7770	5	Drive Gear Screw
33	21-7670	1	Differential Case
34	43-6840	1	Lower Housing
35	21-8120	AR	Adjustment Shim .030
36	21-8110	AR	Adjustment Shim .010
37	21-8100	AR	Adjustment Shim .005
38	21-8090	AR	Adjustment Shim .003
39	72-9420	1	Asm-Vent Tube
47	92-4903	1	Housing ASM-Upper
48	92-4848	1	Asm-Gear & Pinion

 *Not Illustrated

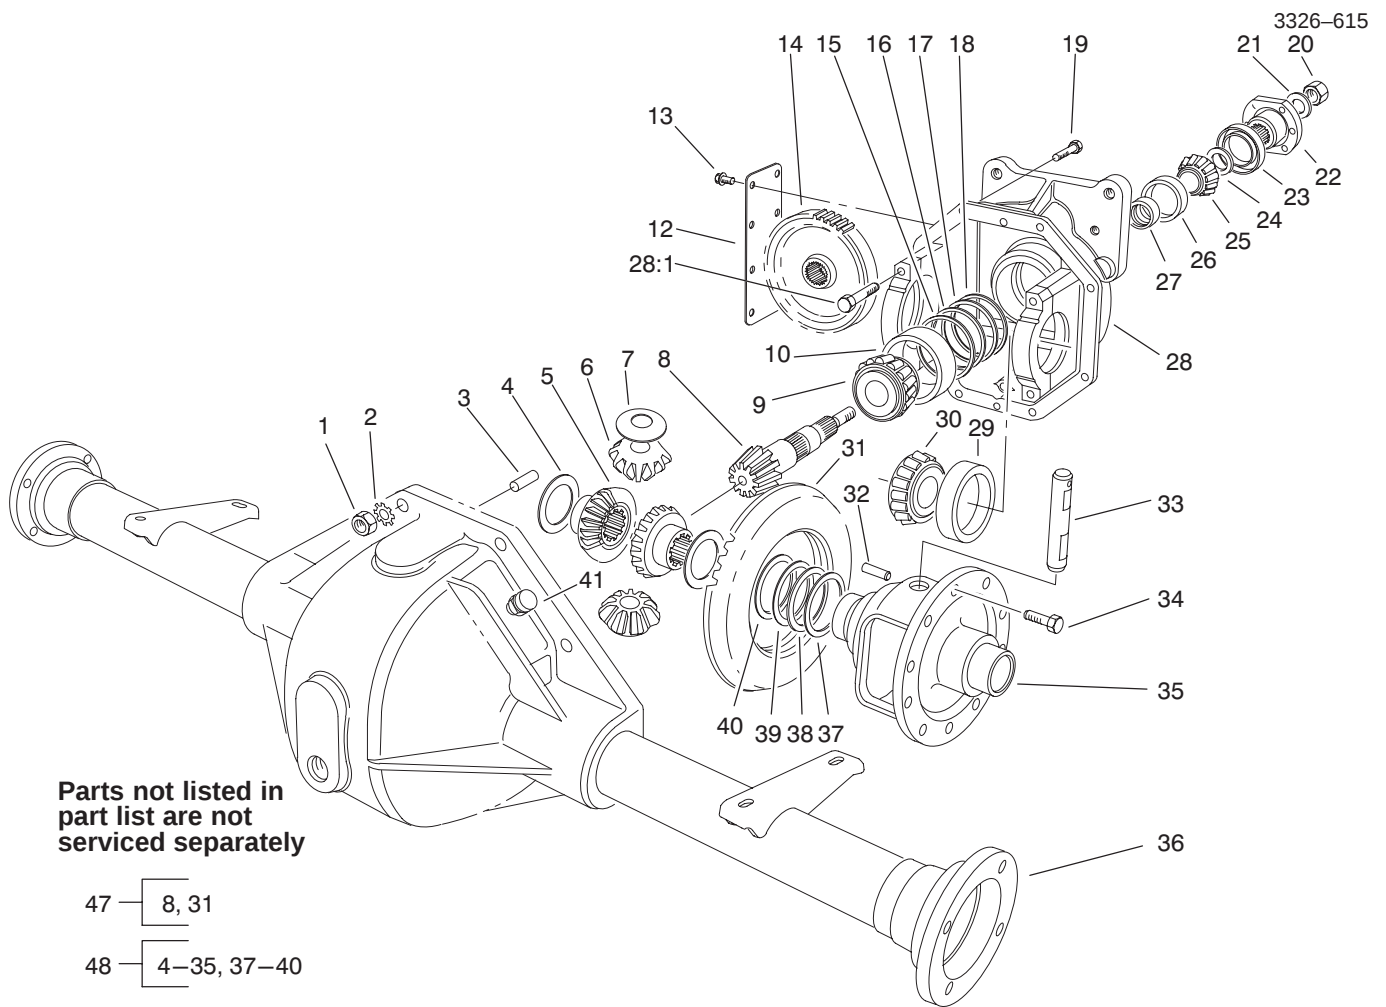


Front Axle Assembly No. 86-9630-03 (Only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	3219-2	8	Nut
2	3255-8	8	Washer-Lock
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Bevel, Diff. Side
6	21-7690	2	Gear-Pinion
7	21-7730	2	Washer-Thrust
8		1	Pinion-Drive
9	43-6760	1	Cone-Bearing, Tapered
10	43-6750	1	Cup-Bearing, Tapered
12	21-7830	1	Cover-Gear
13	12-5450	8	Screw-TAP
14	86-7230	1	Gear-Spur
15	43-6710	A/R	Shim .003-Diff. Adjust.
16	43-6711	A/R	Shim .005-Diff. Adjust.
17	43-6712	A/R	Shim .010-Diff. Adjust.
18	43-6713	A/R	Shim .030-Diff. Adjust.
19	3210-7	8	Screw-HH
20	71-4350	1	Nut
21	71-4340	1	Washer
22	68-7010	1	Flange
23	71-4330	1	Seal
24	72-3570	A/R	Shim .094-Diff. Adjust.
*	72-3571	A/R	Shim .096-Diff. Adjust.
*	72-3572	A/R	Shim .098-Diff. Adjust.

Ref. No.	Part No.	Qty.	Description
24	72-3573	A/R	Shim .100-Diff. Adjust.
*	72-3574	A/R	Shim .102-Diff. Adjust.
*	72-3575	A/R	Shim .104-Diff. Adjust.
*	72-3576	A/R	Shim .106-Diff. Adjust.
*	72-3577	A/R	Shim .108-Diff. Adjust.
*	72-3578	A/R	Shim .110-Diff. Adjust.
*	72-3580	A/R	Shim .112-Diff. Adjust.
*	72-3581	A/R	Shim .114-Diff. Adjust.
*	72-3582	A/R	Shim .116-Diff. Adjust.
*	72-3583	A/R	Shim .118-Diff. Adjust.
*	72-3584	A/R	Shim .120-Diff. Adjust.
*	72-3585	A/R	Shim .125-Diff. Adjust.
*	72-3586	A/R	Shim .127-Diff. Adjust.
*	72-3587	A/R	Shim .129-Diff. Adjust.
*	72-3588	A/R	Shim .131-Diff. Adjust.
*	72-3590	A/R	Shim .133-Diff. Adjust.
*	72-3591	A/R	Shim .135-Diff. Adjust.
*	72-3592	A/R	Shim .137-Diff. Adjust.
*	72-3593	A/R	Shim .139-Diff. Adjust.
*	72-3594	A/R	Shim .141-Diff. Adjust.
*	72-3595	A/R	Shim .143-Diff. Adjust.
*	72-3596	A/R	Shim .145-Diff. Adjust.
*	72-3597	A/R	Shim .147-Diff. Adjust.
*	72-3598	A/R	Shim .149-Diff. Adjust.

 
*Not Illustrated

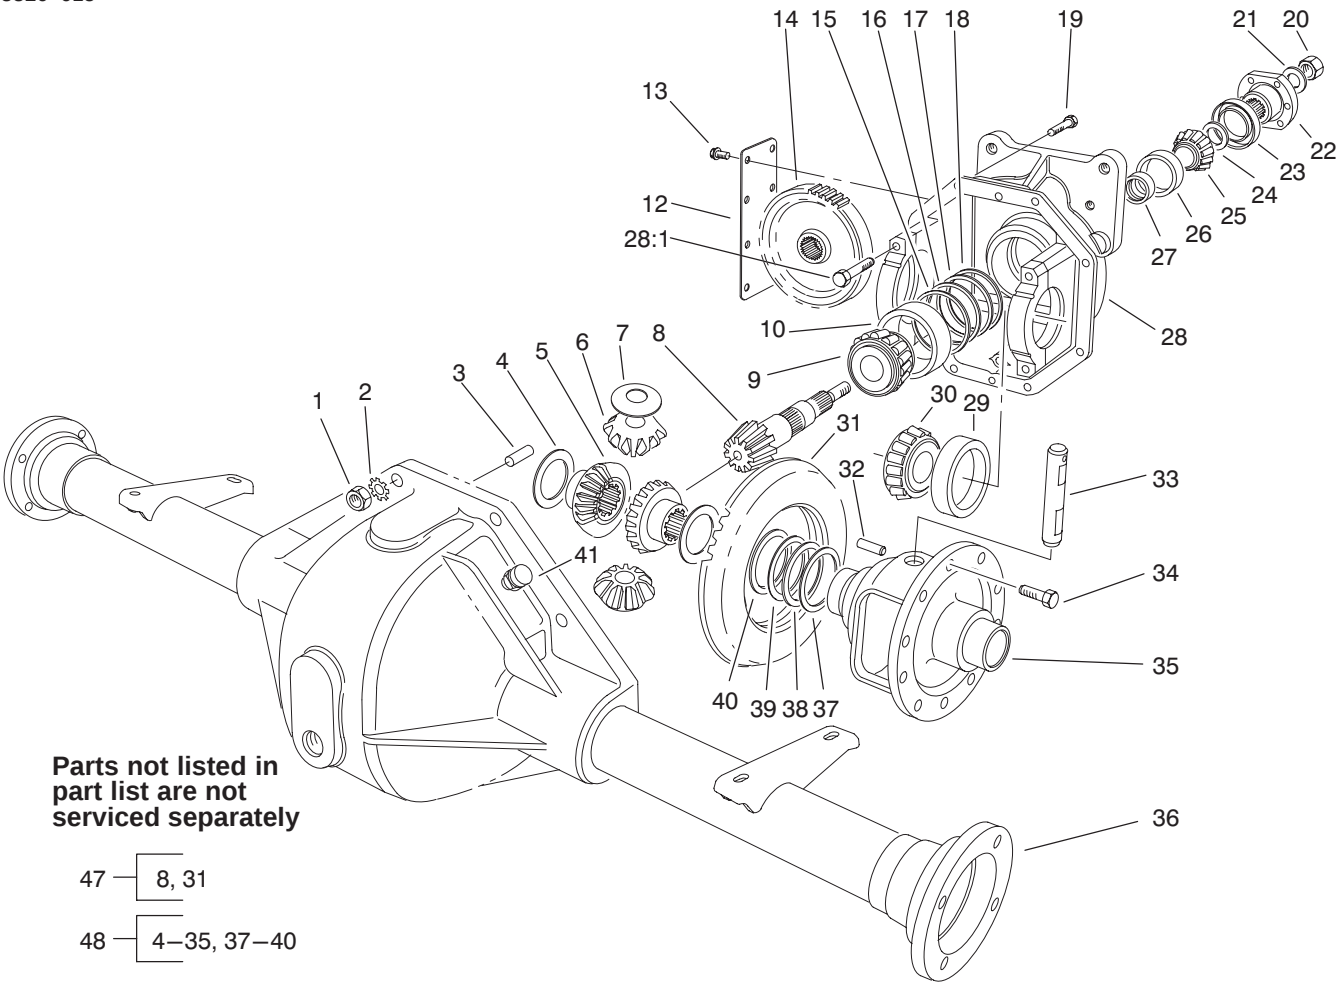

Front Axle Assembly No. 86-9630-03 (Continued)
(Only on: 30627)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
* 72-3600	A/R	Shim .151-Diff. Adjust.					
25 254-91	1	Cone-Bearing					
26 254-90	1	Cup-Bearing					
27 21-8020	1	Spacer-Bearing, Pinion					
28 86-9610	1	Asm-Carrier					
28:1 92-1773	4	Screw-HH					
29 254-66	2	Cup-Bearing, Tapered					
30 254-65	2	Cone-Bearing, Tapered					
31	1	Gear-Ring					
32 32121-15	1	Pin-Roll					
33 21-7700	1	Shaft-Pinion, Mate					
34 21-7770	5	Screw-Gear, Drive					
35 21-7670	1	Case-Differential					
36 43-6840	1	Housing-Lower					
37 21-8120	A/R	Shim .030-Diff. Adjust.					
38 21-8110	A/R	Shim .010-Diff. Adjust.					
39 21-8100	A/R	Shim .005-Diff. Adjust.					
40 21-8090	A/R	Shim .003-Diff. Adjust.					
41 72-9420	1	Asm-Vent					
* 92-1676	1	Asm-Gear & Pinion					
* 92-4902	1	Housing ASM-Upper					

 *Not Illustrated

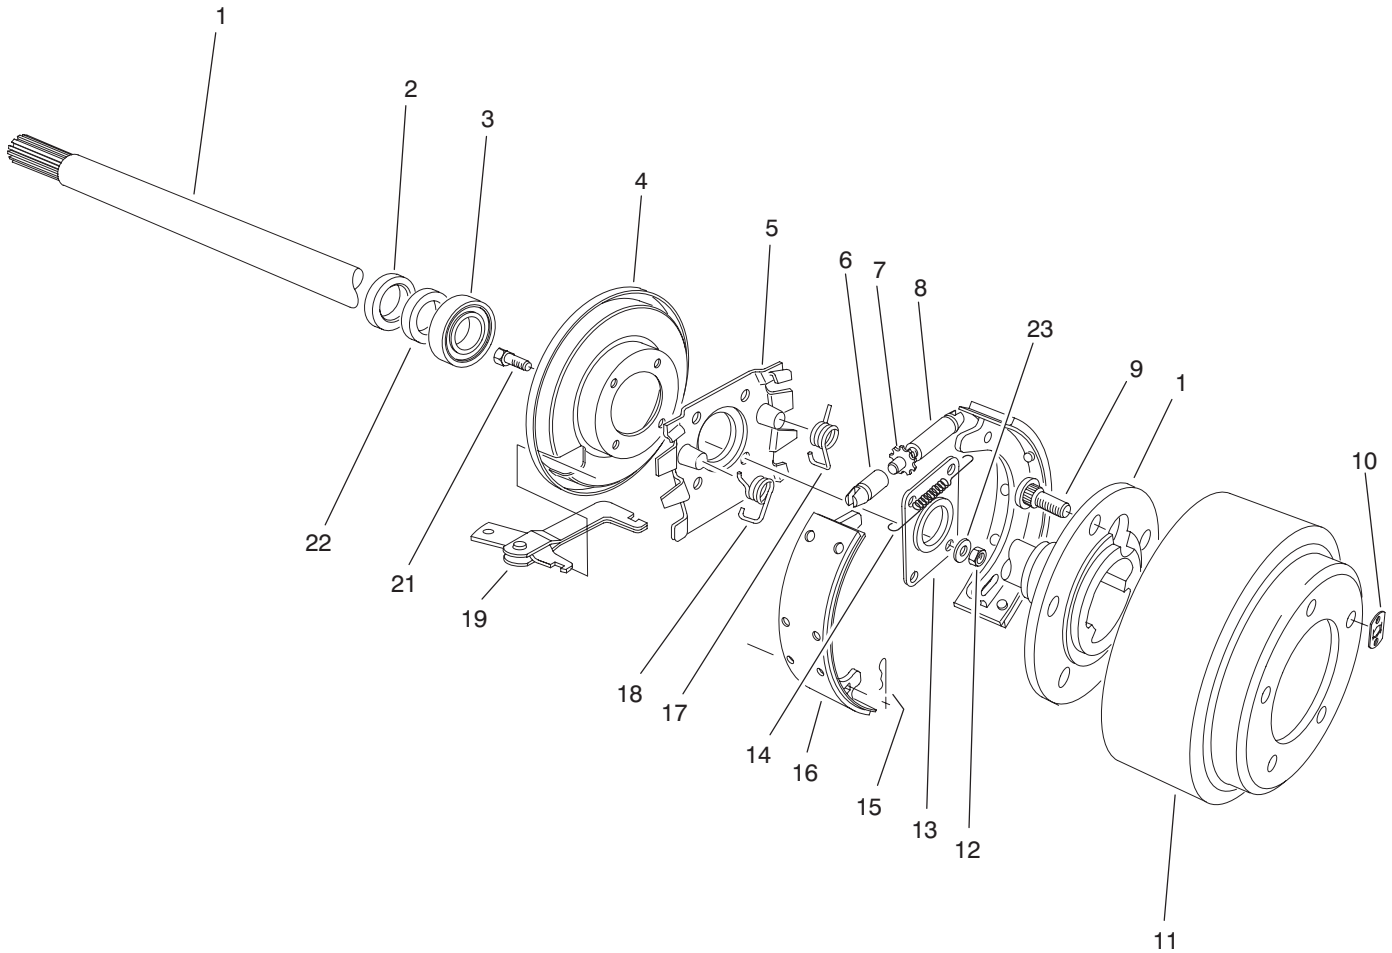

T-2664

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	28-0650	2	Shaft-Flanged, Axle
2	92-1774	2	Seal-Oil
3	21-8180	2	Bearing
4	21-9450	2	Dust Shield
5	43-6810	2	Torque-Spider
6	21-9390	2	Socket-Adjusting Screw
7	21-9370	2	Screw-Adjusting
8	100-6570-01	2	Nut-Pivot
9	242-34	10	Stud-Flanged, Axle
10	21-8360	2	Clip-Retaining
11	99-8434-03	2	Brake Drum
12	94-6935	8	Nut-Lock
13	28-0670	2	Seal-Oil
14	21-9440	2	Spring-Adjusting Screw
15	21-9460	4	Retainer-Brake Lever
16	84-8600	1	Asm-Shoe & Lining (Set of 4)
17	21-9420	2	Spring-Shoe Return LH
18	21-9430	2	Spring-Shoe Return RH
19	24-9180	2	Strut & Lever Parking Brake
21	94-6934	8	Screw-HH


Ref. No.	Part No.	Qty.	Description
22	24-8840	2	Ring-Wheel Bearing
23	94-6936	8	Washer
*	92-8775	1	Kit-Gasket, Liquid

*Not Illustrated


Electrical Schematic


KEY TO WIRE COLORS
BK = BLACK
BR = BROWN
BU = BLUE
R = RED
Y = YELLOW
W = WHITE
T = TAN

 OR = ORANGE
GN = GREEN
GY = GRAY
PK = PINK
VO = VIOLET

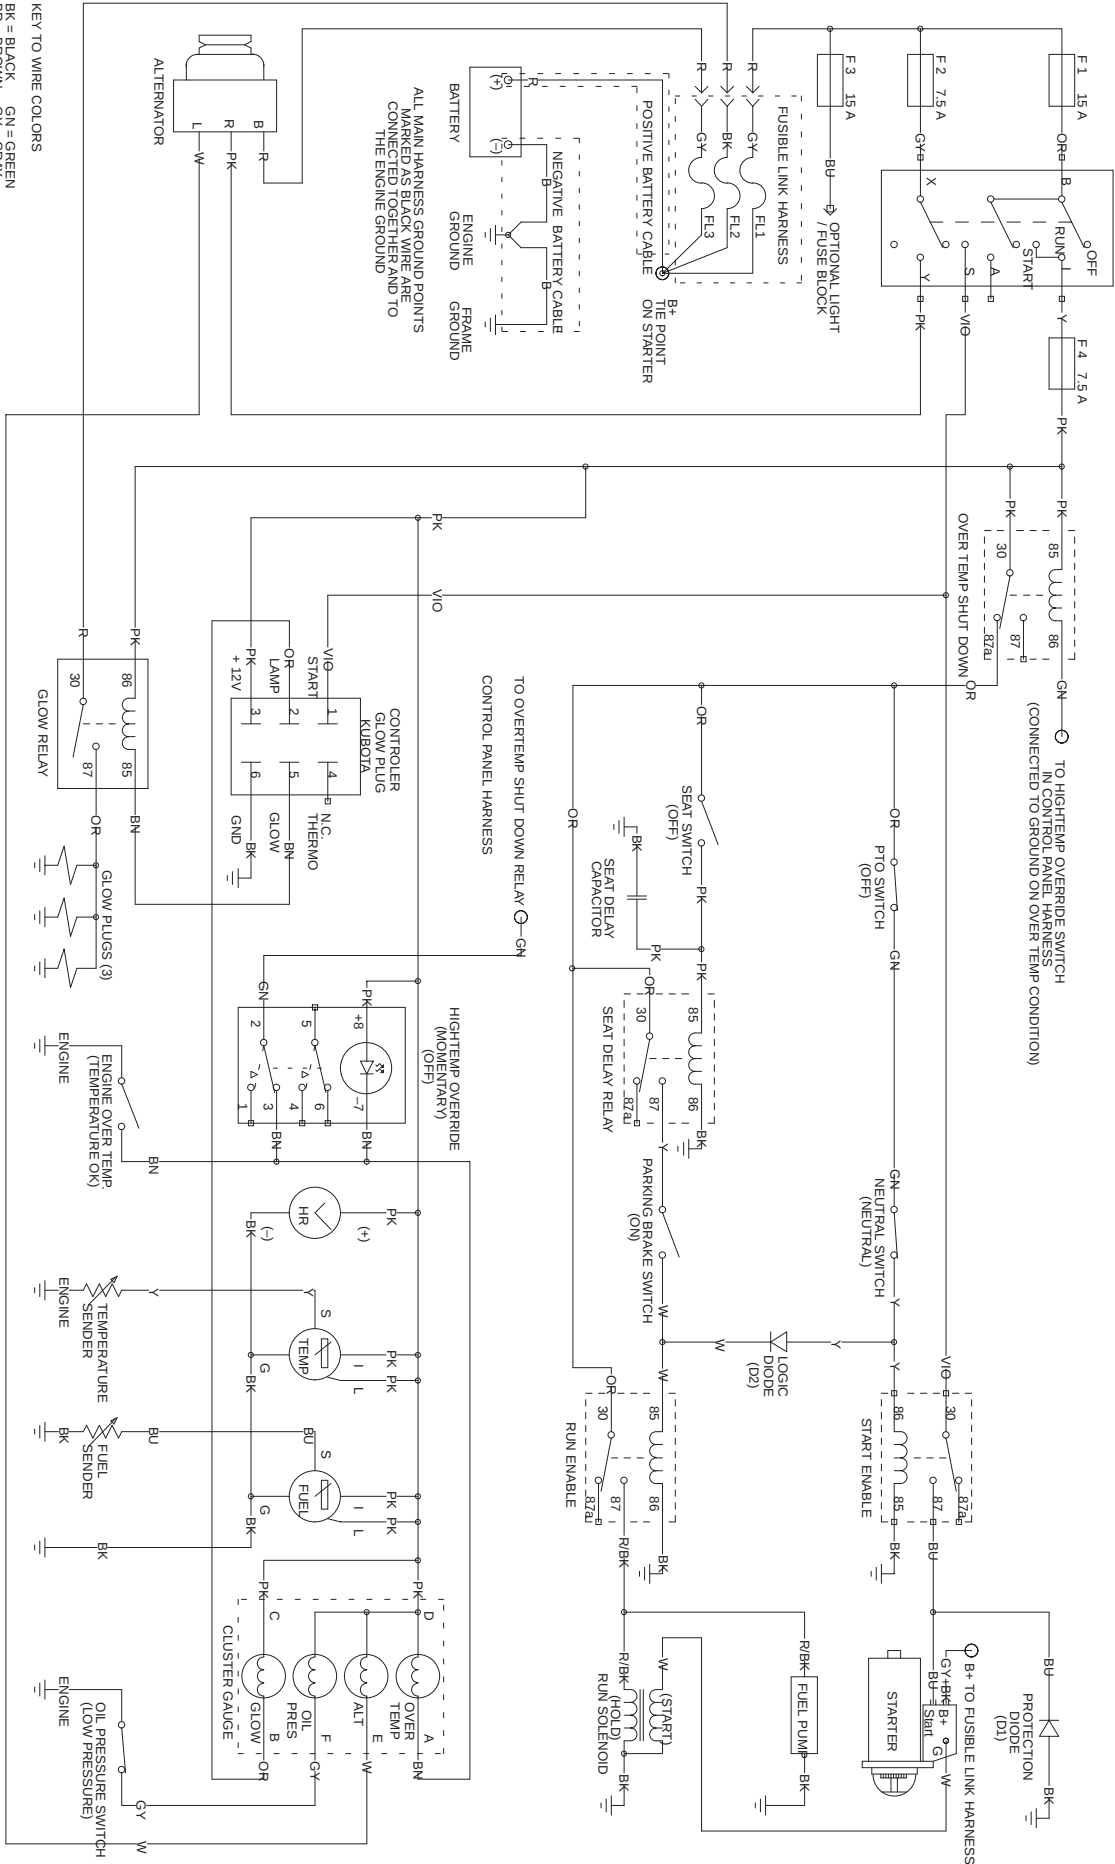

Hydraulic Schematic

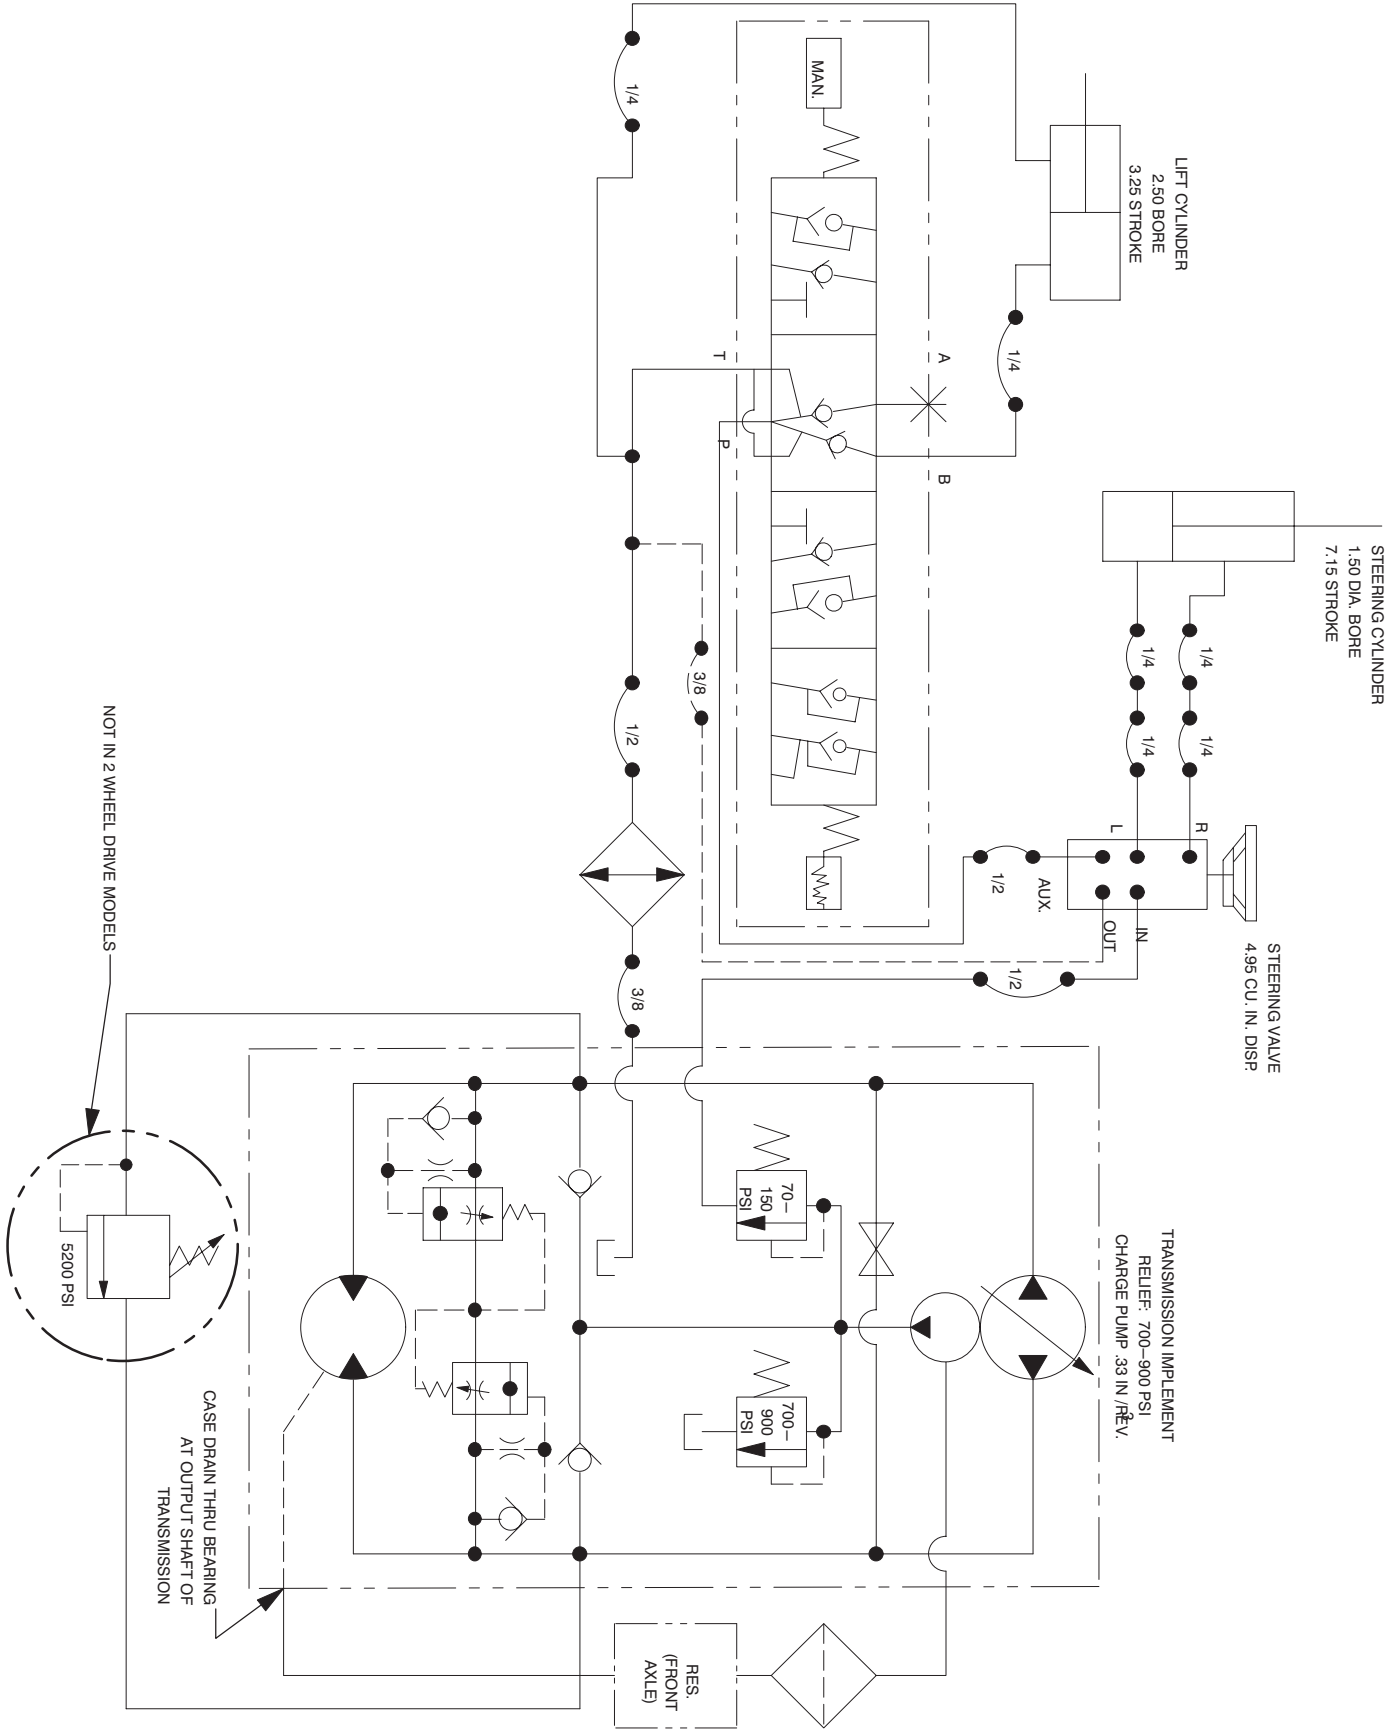 

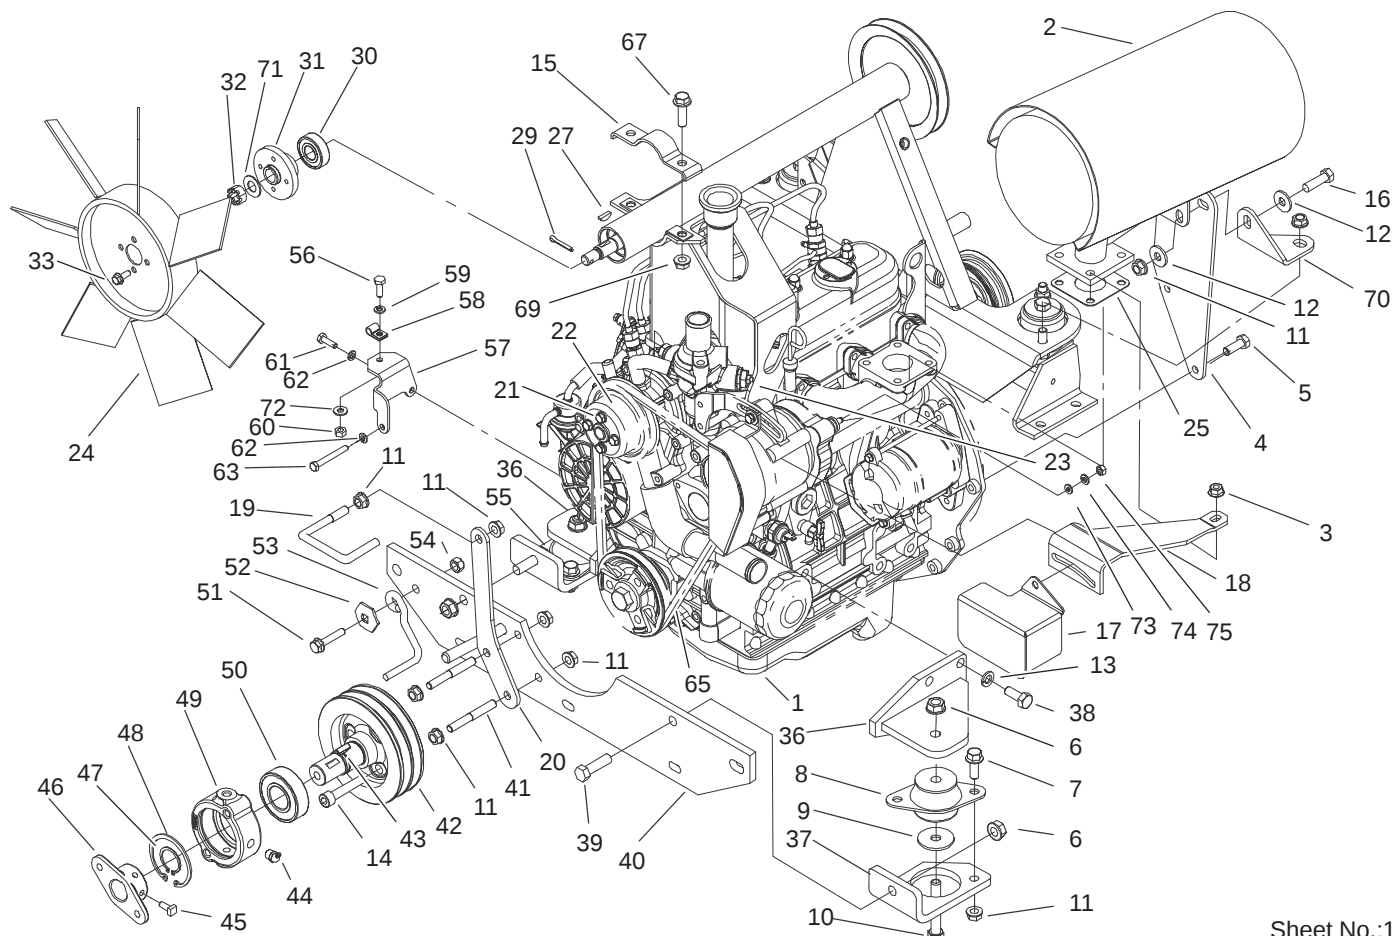 


Sheet No.:1

Engine and Mounting Components Assembly

Ref. No.	Part No.	Qty.	Description
1	104-3448	1	Engine-Kubota
2	104-3426	1	Muffler-Exhaust
3	92-6780	4	Nut-HF
4	105-2523-03	1	Bracket-Muffler
5	33114-016	2	Screw-HH
6	32128-37	4	Nut-HF
7	3234-11	6	Screw-HHF
8	53-9680	2	Mount-Engine
9	53-9480	2	Snubber Washer
10	324-11	2	Screw-HH
11	3290-357	16	Nut-HHF
12	80-6990	4	Washer-Hardened
13	42-9600	8	Lockwasher-Spring
14	3274-106	3	Screw-HSH
15	105-2519-03	1	Clamp-Cradle
16	323-44	2	Screw-HH
17	105-2557-03	1	Guard-Alternator
18	105-2556-03	1	Brace-Alternator, Upper
19	105-4276	1	Guide-Belt, PTO
20	105-0052-03	1	Bracket-Belt Guide
21	81-1280	4	Bolt
22	98-9584	1	Pulley-Fan
23	98-9346	1	Sender-Temperature
24	104-4246	1	Fan-Engine
25	98-9611	1	Gasket

Ref. No.	Part No.	Qty.	Description
27	3257-30	1	Key-Woodruff
29	3272-16	1	Pin-Cotter
30	38-7820	1	Bearing-Ball
31	104-3408-03	1	Hub-Fan
32	32136-3	1	Nut
33	3234-33	4	Screw-HHF
36	104-3463-03	2	Mount-Front ASM
37	104-3464-03	1	Mount-LH Front, Frame
38	43-0090	8	Screw-HH
39	324-6	2	Screw-HH
40	75-9900-01	1	Support-Engine, Front
41	105-0057	2	Stud-Belt Retainer
42	104-3406-03	1	Pulley-Fan
43	3257-33	1	Key-Woodruff
44	302-10	1	Fitting-Grease
45	3241-5	2	Screw-Set
46	27-1960	1	Hub-Engine
47	32120-69	1	Ring-Snap
48	32120-22	1	Ring-Snap, Internal
49	43-3720	1	Collar-Bearing
50	251-252	1	Bearing
51	3234-18	1	Screw-HHF
52	3290-224	1	Lockwasher-Pyramid
53	63-1400	1	Rod-Belt
54	32153-2	1	Nut-Lock

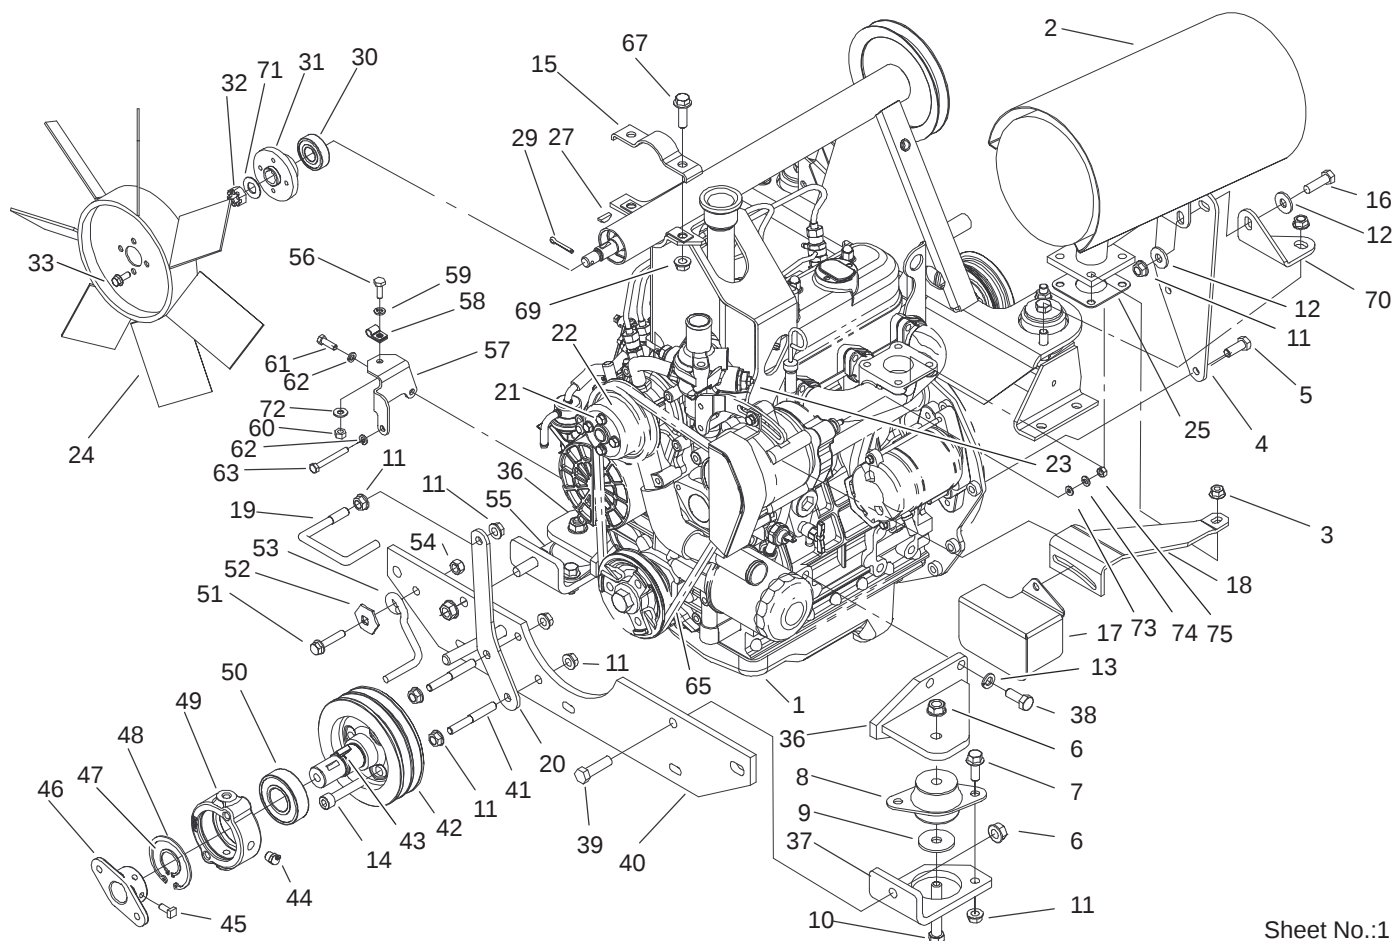 


Sheet No.:1

Engine and Mounting Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
55	104-3465-03	1	Mount-RH Front, Frame
56	321-4	1	Screw-HH
57	104-3421-03	1	Bracket-Throttle
58	2412-31	1	Clamp-Boden
59	3253-3	1	Washer-Lock
60	3217-5	1	Nut-Hex
61	60-6650	1	Screw-HH
62	48-8020	2	Washer-Spring
63	48-7630	1	Screw
65	98-9676	1	V-Belt
67	3234-24	2	Screw-HHF
69	3296-39	2	Nut-Lock, NI
70	105-2598-03	1	Bracket-Muffler
71	3-6803	1	Washer-Adjusting
72	3256-22	1	Washer-Flat
73	3256-78	1	Washer-Flat
74	43-5930	1	Washer-Spring
75	48-7890	1	Nut

Ref. No.	Part No.	Qty.	Description

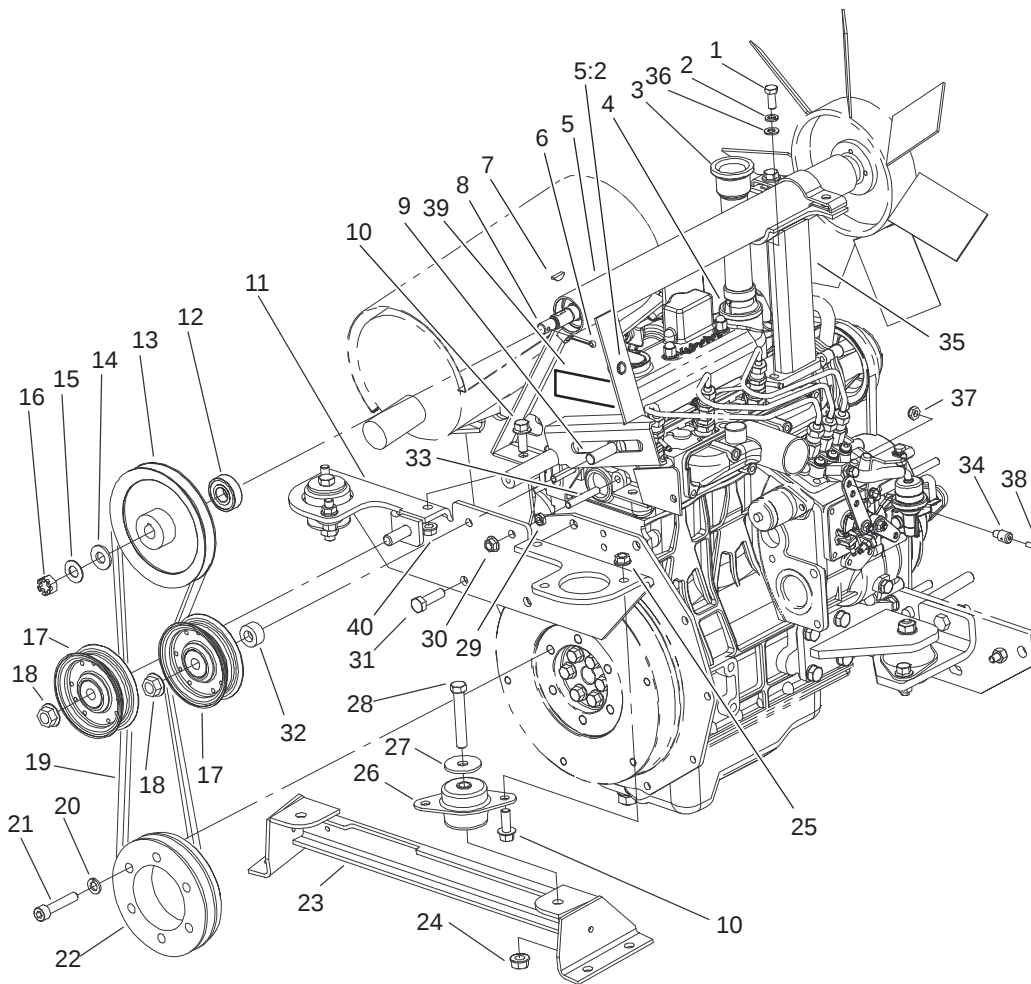 


Sheet No.:2

Engine and Mounting Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
1	92-1374	2	Screw-HH
2	48-9570	2	Washer
3	105-0087	1	Flange-Filler, Oil
4	98-7430	1	O-Ring
5	105-2592	1	Tube Support ASM
5:2	3290-472	2	Insert-Threaded
6	3272-16	1	Pin-Cotter
7	3257-30	1	Key-Woodruff
8	43-3690	1	Fan Shaft
9	3233-14	1	Screw-CARR
10	3234-11	6	Screw-HHF
11	105-2501-03	1	Engine Mount ASM
12	38-7820	1	Bearing-Ball
13	105-2524	1	Pulley Hub
14	3-6803	2	Washer-Adjusting
15	29-8910	1	Washer
16	32136-3	1	Nut
17	105-3699	2	Pulley-Idler, Flat
18	32128-23	2	Nut-HF
19	105-3693	1	Belt-Fan
20	42-9600	6	Lockwasher-Spring
21	3274-106	6	Screw-HSH
22	104-3407-03	1	Pulley-Flywheel
23	105-2520-03	1	Engine Mount ASM
24	32128-37	2	Nut-HF
25	3290-357	4	Nut-HHF

Ref. No.	Part No.	Qty.	Description
26	53-9680	2	Mount-Engine
27	53-9480	2	Snubber Washer
28	324-11	2	Screw-HH
29	33014-00	2	Nut-Hex
30	92-6780	2	Nut-HF
31	56-2140	2	Bolt
32	105-0058	1	Spacer-Fan Idler
33	105-2502	2	Stud
34	105-4263	1	Swivel-Throttle Cable
35	105-2507-03	1	Cradle-Tube Support
36	33094-00	2	Washer-Flat
37	3296-20	1	Nut-Lock, NI
38	25-8640	1	Screw-HH
39	67-5360	1	Decal-Danger
40	32125-25	2	Nut-Sidelock

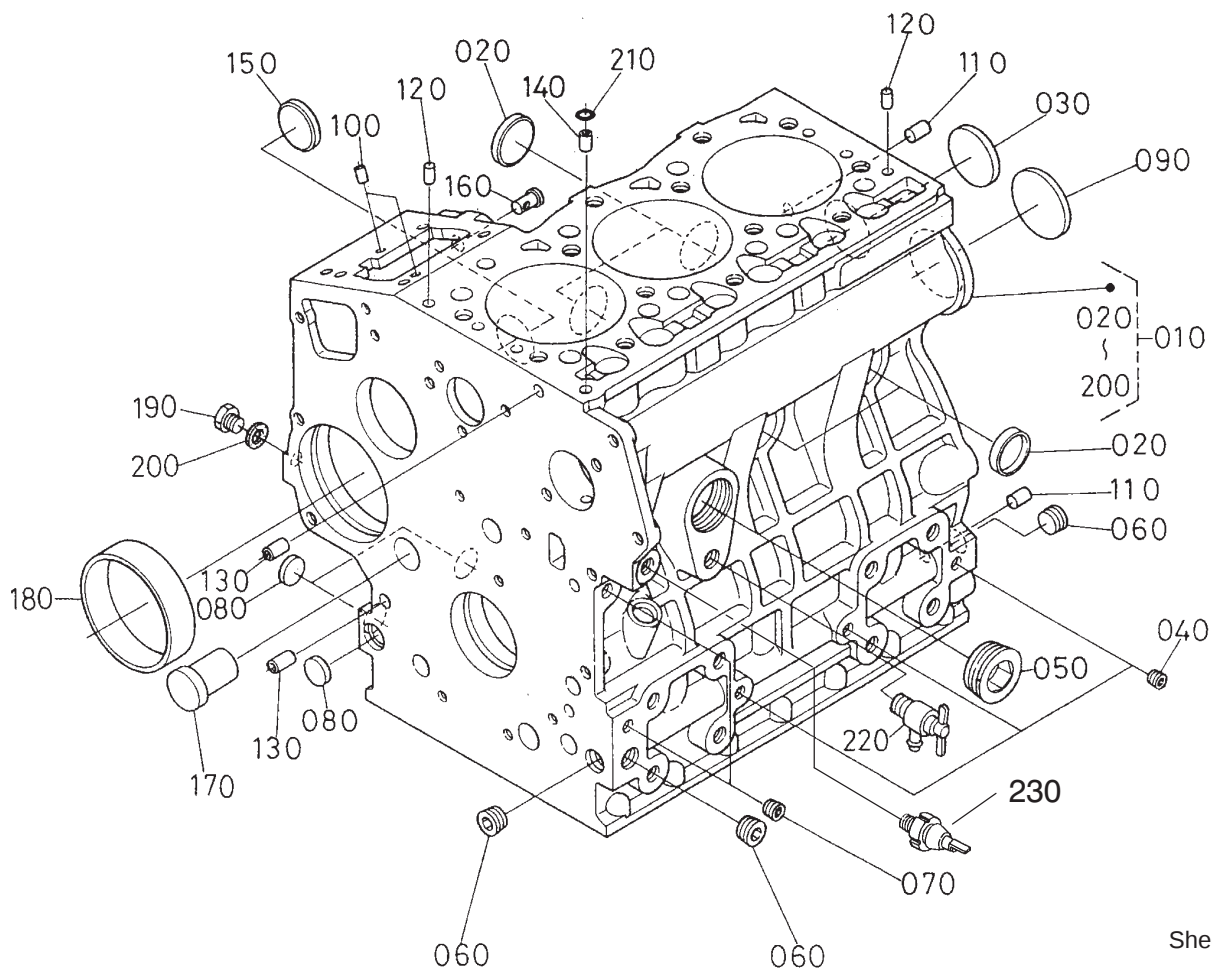 


Sheet No.:53

Crankcase Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	105-3778	1	Crankcase ASM
020	98-9398	4	Cap-Sealing
030	98-7539	1	Cap-Sealing
040	98-7540	3	Cap-Sealing
050	105-3779	1	Plug
060	98-9597	3	Plug
070	98-7487	2	Plug
080	98-7489	3	Plug
090	98-9668	1	Plug
100	105-3793	2	Pin-Straight
110	105-3794	2	Pin-Straight
120	105-3795	2	Pin-Straight
130	98-9387	2	Pin-Pipe
140	98-9539	1	Pin-Pipe
150	98-9599	1	Plug
160	98-9630	1	Pin-Spring, Start
170	98-9675	1	Plug
180	98-9656	1	Bush-Governor, Gear
190	98-7507	1	Plug
200	98-7428	1	Gasket
210	98-7509	1	O-Ring
220	98-9436	1	Drain Cock ASM
230	98-9416	1	Switch-Oil

Ref. No.	Part No.	Qty.	Description

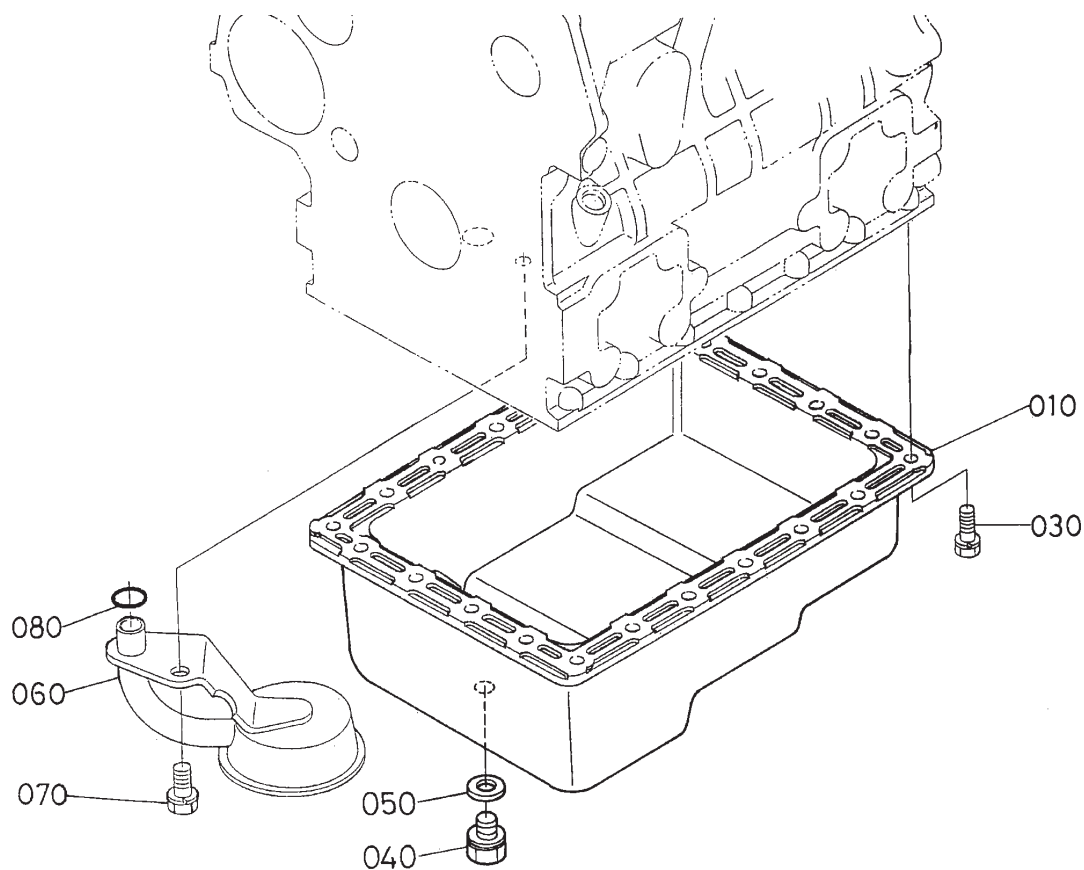 


Sheet No.:54

Oil Pan Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	104-3495	1	Pan-Oil
030	98-9350	2	Bolt
040	98-9386	1	Plug
050	98-7524	1	Gasket
060	104-3496	1	Filter-Oil Pickup
070	98-9358	1	Bolt
080	105-3776	1	O-Ring

Ref. No.	Part No.	Qty.	Description

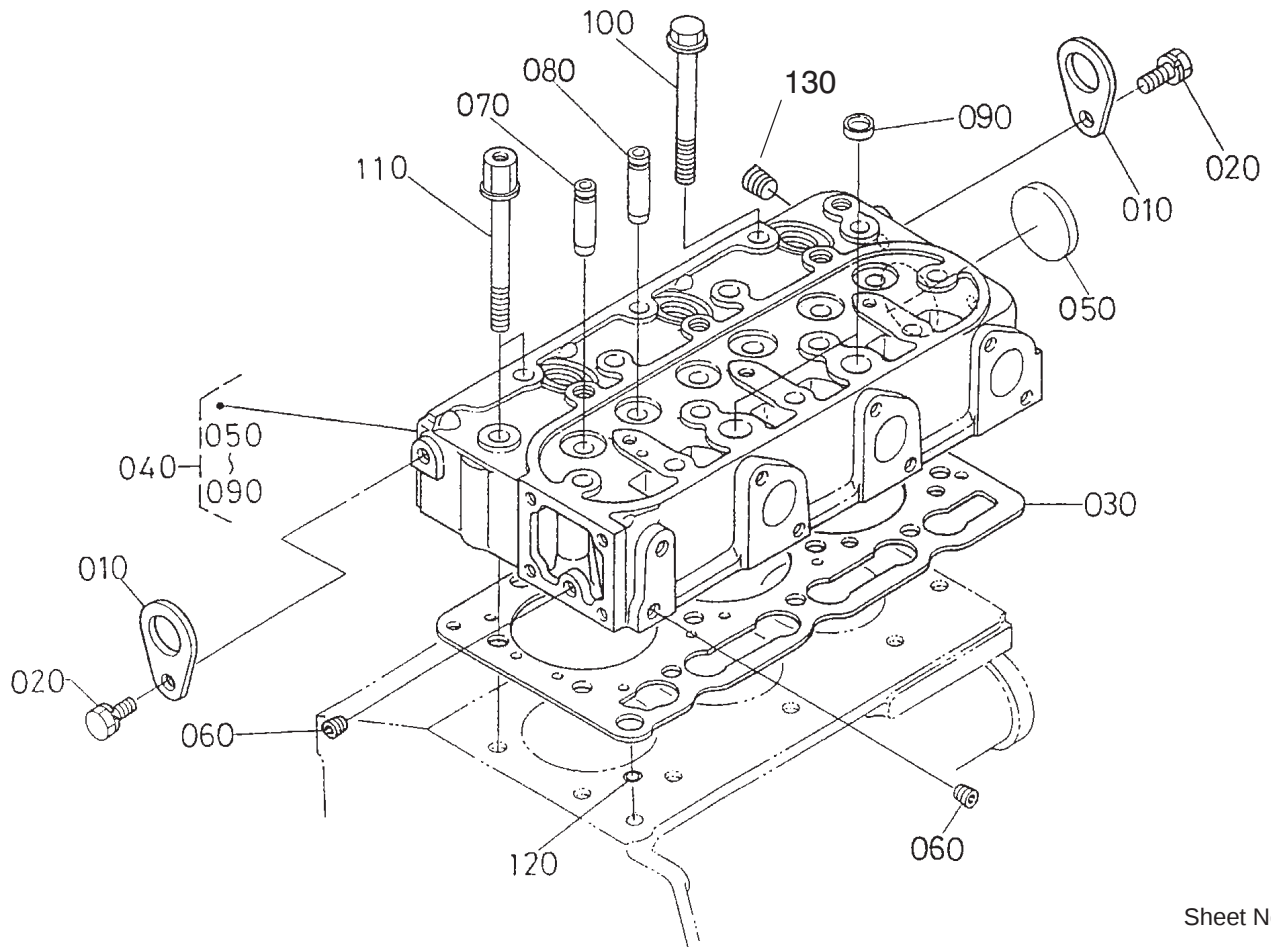 


Sheet No.:55

Cylinder Head Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-7531	2	Hook-Engine
020	100-9195	2	Bolt
030	105-3780	1	Gasket-Head,Cylinder
040	98-9460	1	Cylinder Head ASM
050	98-9395	1	Cap-Sealing
060	98-7540	2	Cap-Sealing
070	98-9499	3	Guide-Valve, Inlet
080	98-9500	3	Guide-Valve, Exhaust
090	98-9389	2	Cap-Sealing
100	98-9479	1	Bolt-Head, Cylinder
110	98-9647	2	Bolt-Head, Cylinder
120	98-7509	1	O-Ring
130	98-9444	1	Plug

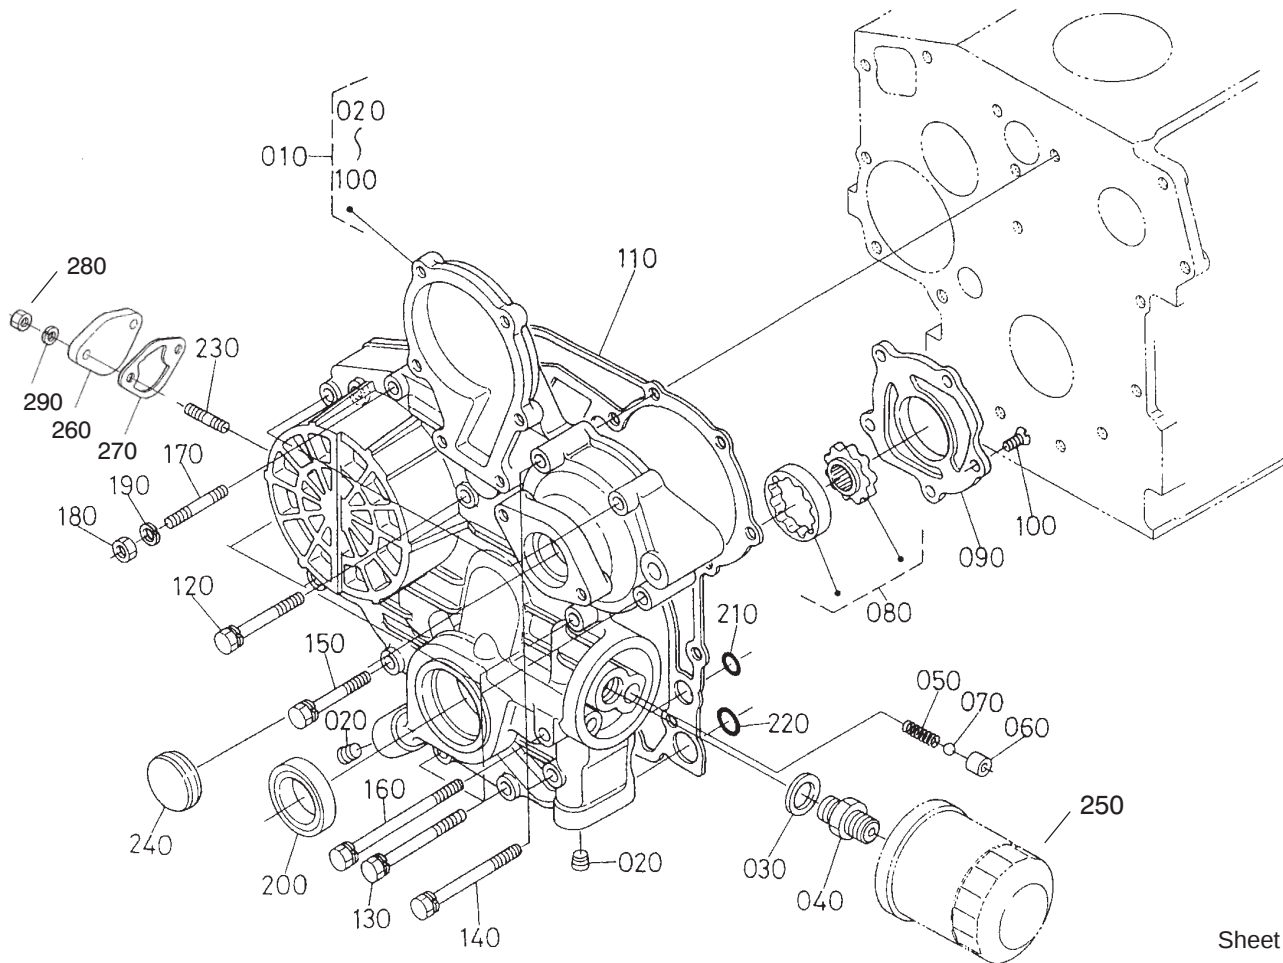 


Sheet No.:56

Gear Case, Oil Filter and Cover Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9481	1	Gear Case ASM
020	98-9598	1	Plug
030	98-7562	1	Washer-Plain
040	98-9388	1	Joint-Pipe
050	98-9544	1	Spring
060	98-9543	1	Seat-Valve
070	98-9380	1	Ball
080	98-9540	1	Oil Pump Rotor ASM
090	98-9541	1	Cover-Pump, Oil
100	98-9592	5	Screw
110	98-9633	1	Gasket-Case, Gear
120	98-7496	3	Bolt
130	105-3797	6	Bolt
140	98-9356	2	Bolt
150	98-9437	1	Bolt
160	98-9586	1	Bolt
170	105-3709	1	Stud
180	98-7572	1	Nut
190	98-7699	1	Washer-Spring
200	98-9482	1	Seal-Oil
210	105-3781	2	O-Ring
220	105-3777	2	O-Ring
230	105-3710	2	Stud
240	98-9641	1	Cover

Ref. No.	Part No.	Qty.	Description
250	99-8384	1	Filter-Oil
260	99-3514	1	Cover
270	98-9636	1	Gasket-Pump, Fuel
280	98-7572	2	Nut
290	98-7699	2	Washer-Spring

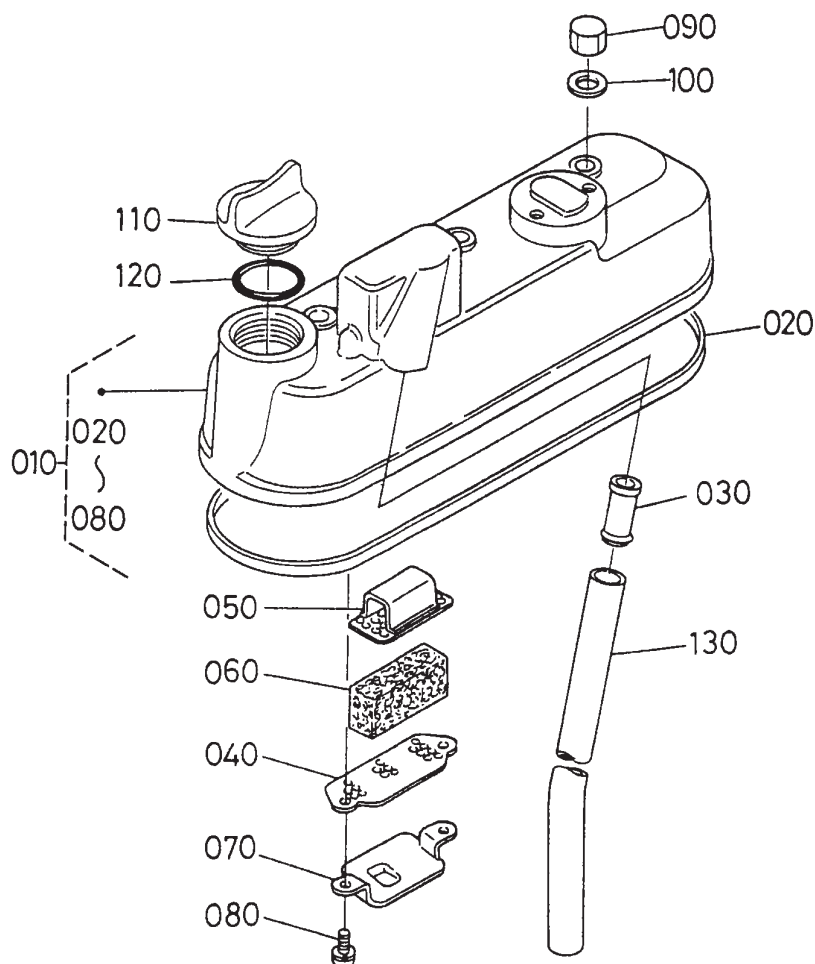 


Sheet No.:57

Head Cover Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9614	1	Cylinder Head Cover ASM
020	98-9615	1	Gasket-Cover, Head
030	98-9492	1	Joint-Pipe, Breather
040	98-9488	1	Plate-Element, Breather
050	98-9489	1	Plate-Element, Breather
060	98-9493	1	Element-Breather
070	98-9490	1	Shield-Oil, Breather
080	105-3782	2	Screw W/Washer
090	98-9455	3	Nut-Cap
100	98-9454	3	Gasket
110	98-9449	1	Plug-Filler, Oil
120	99-3446	1	O-Ring
130	98-9491	1	Pipe-Breather

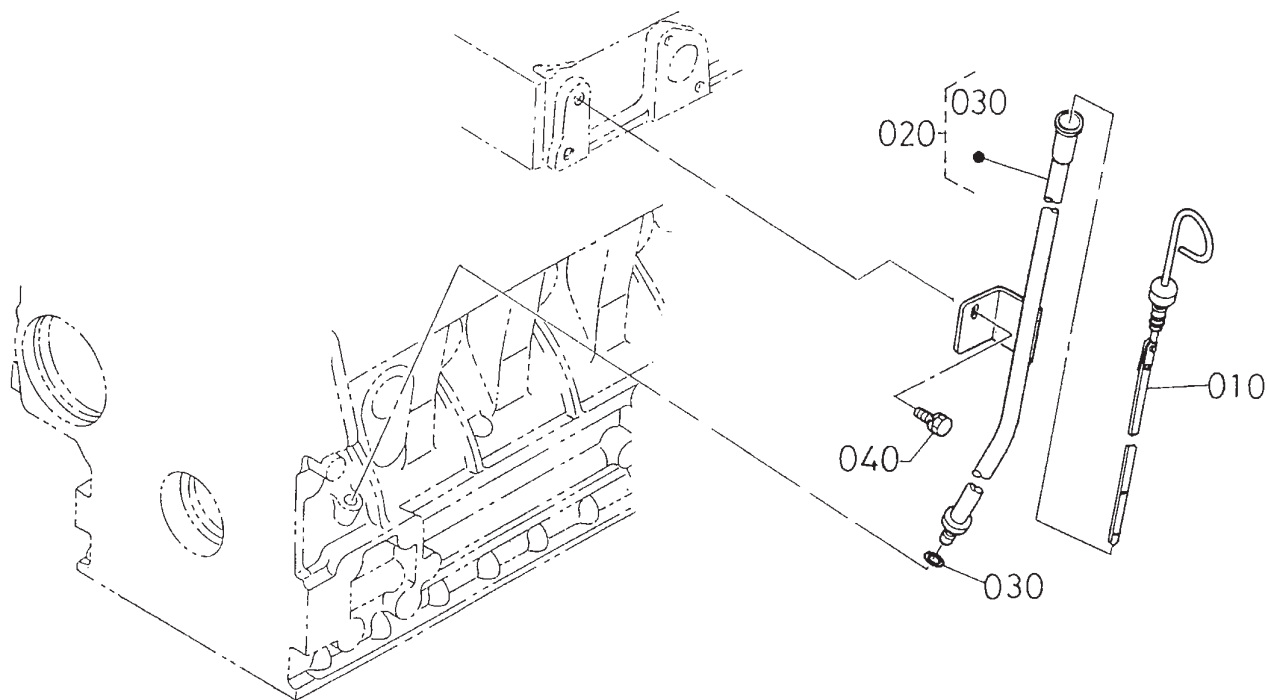 


Sheet No.:58

Dipstick and Guide Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9670	1	Gauge-Oil
020	98-9672	1	Oil Gauge Guide ASM
030	98-9374	1	O-Ring
040	98-7453	1	Bolt

Ref. No.	Part No.	Qty.	Description

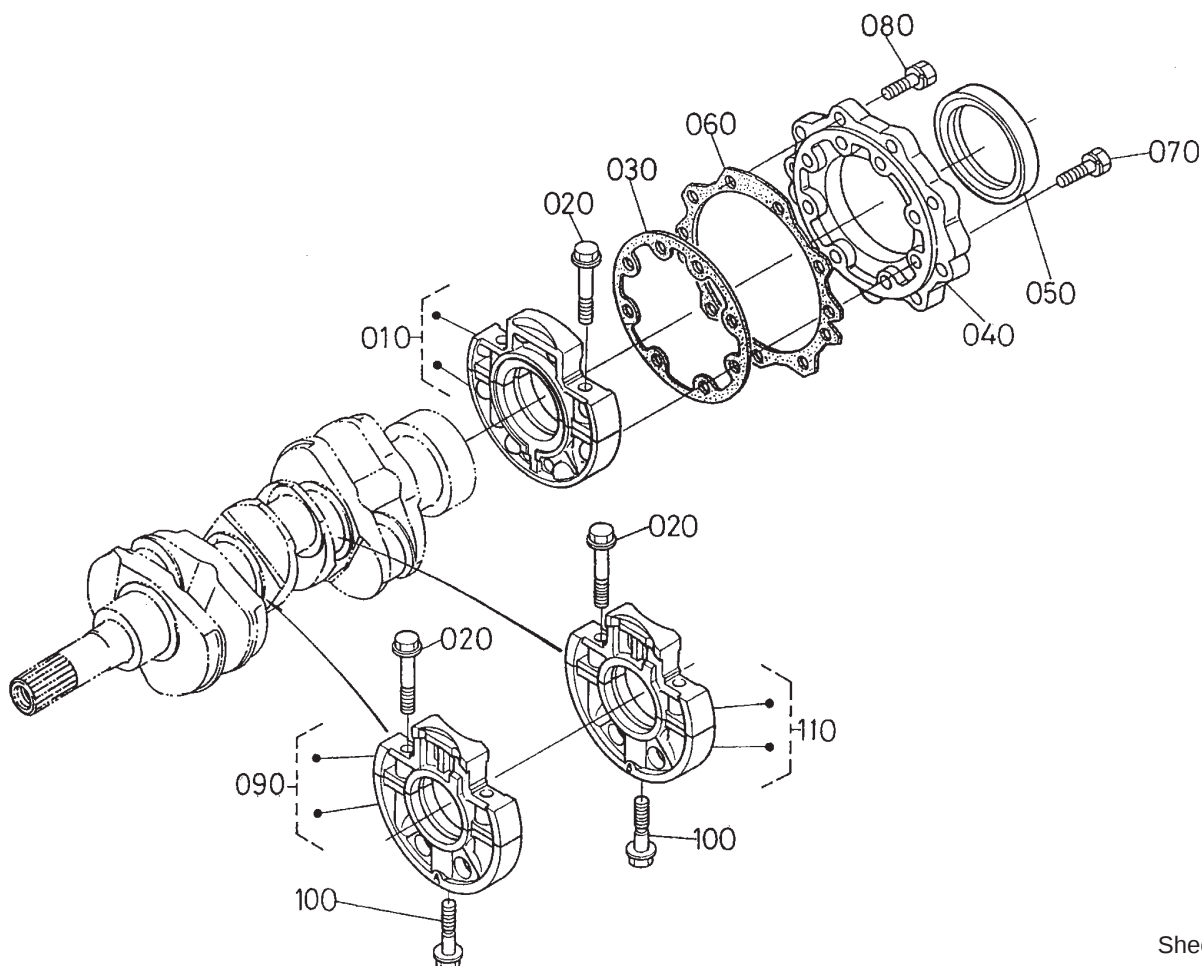 


Sheet No.:59

Main Bearing Case Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9480	1	Main Bearing Case ASM
020	98-9484	6	Bolt-Case, Bearing
030	98-9634	1	Gasket-Case, Bearing
040	98-9487	1	Cover-Case, Bearing
050	98-9483	1	Seal-Oil
060	98-9635	1	Gasket-Cover, Bearing Case
070	98-9352	8	Bolt
080	98-7568	9	Bolt
090	98-9606	1	Main Bearing Case ASM
100	98-9485	2	Bolt-Case, Bearing
110	98-9607	1	Main Bearing Case ASM

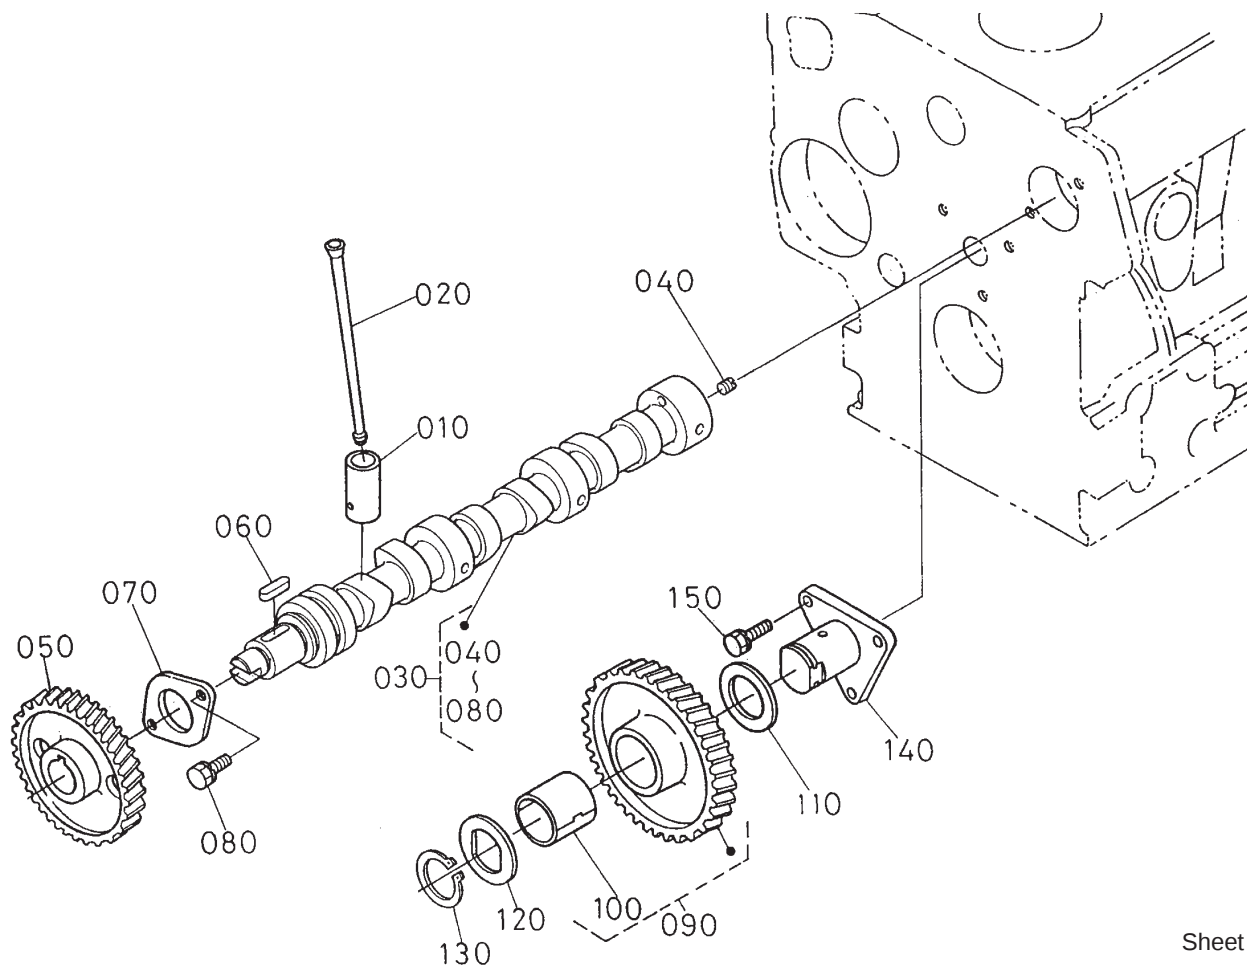 


Sheet No.:60

Camshaft and Idler Gear Shaft Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9616	6	Tappet
020	98-9509	6	Rod-Push
030	98-9617	1	Camshaft ASM
040	98-7449	1	Screw-Set
050	98-9512	1	Gear-Cam
060	98-9378	1	Key-Feather
070	98-9510	1	Stopper-Camshaft
080	98-9351	2	Bolt
090	98-9649	1	Idle Gear ASM
100	98-9650	1	Bushing-Gear, Idle
110	98-9535	1	Collar-Gear, Idle
120	98-9536	1	Collar-Gear, Idle
130	98-9534	1	Clip-Circular, Idle Gear
140	98-9533	1	Shaft-Gear, Idle
150	98-7692	3	Bolt

Ref. No.	Part No.	Qty.	Description

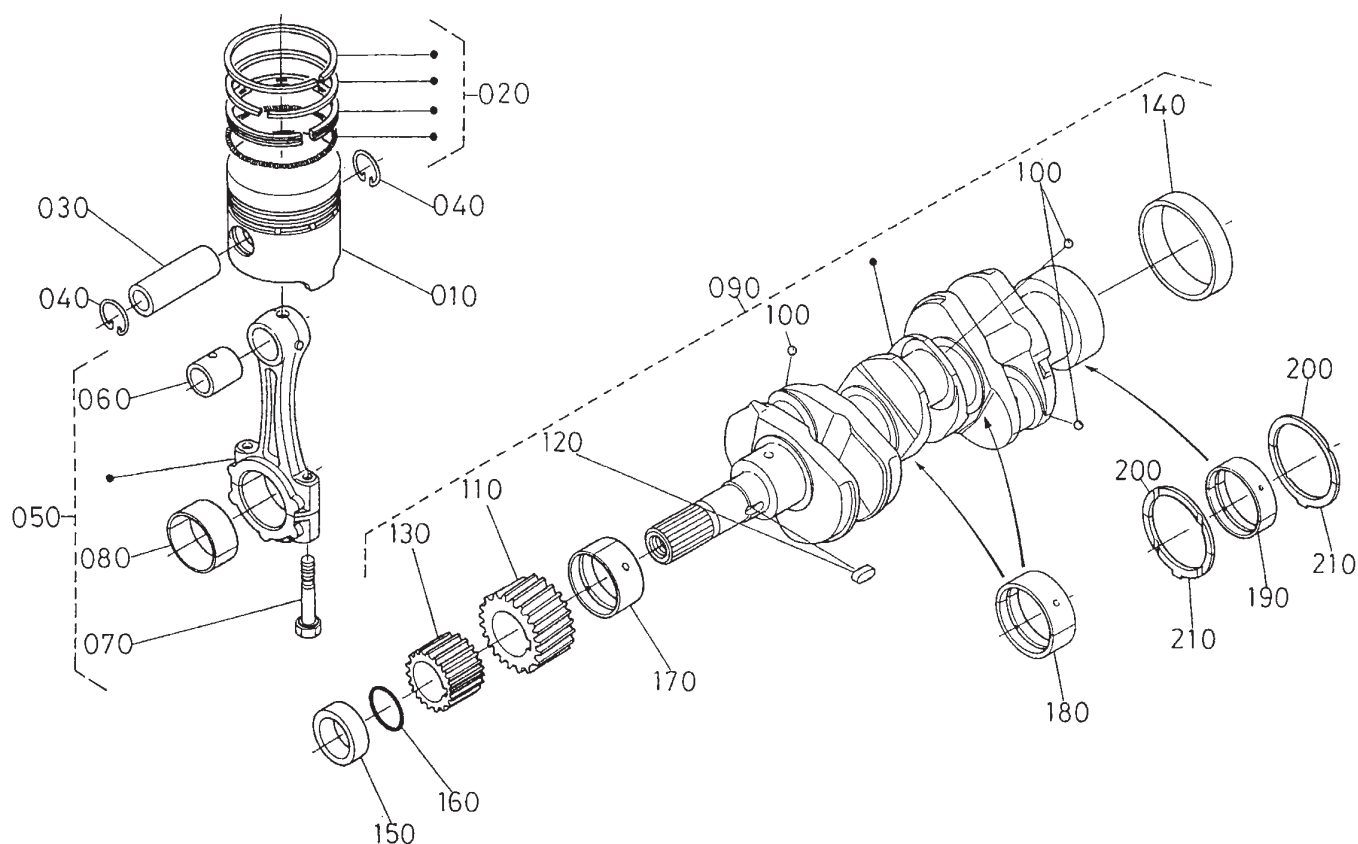 


Sheet No.:61

Piston and Crankshaft Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9469	3	Piston (STD)
010	98-9470	3	Piston (0.5mm)
020	98-9618	3	Piston Ring ASM (STD)
020	98-9619	3	Piston Ring ASM (+0.5mm)
030	98-9513	3	Pin-Piston
040	98-9514	6	Clip-Circular, Piston Pin
050	98-9516	3	Connecting Rod ASM
060	98-9515	3	Bushing-Pin, Piston
070	98-9517	6	Bolt-Rod, Connecting
080	98-9518	3	Metal, Crankpin (STD)
080	98-9519	3	Bearing-Rod (0.2mm)
080	98-9520	3	Bearing-Rod (0.4mm)
090	98-9642	1	Crankshaft ASM
100	98-7473	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9529	1	Bearing-Main (0.4mm)

Ref. No.	Part No.	Qty.	Description
170	98-9528	1	Bearing-Main (0.2mm)
170	98-9523	1	Metal Crankshaft(STD)
180	98-9531	2	Bearing-Main (0.4mm)
180	98-9530	2	Bearing-Main (0.2mm)
180	98-9524	2	Metal-Crankshaft (STD Set)
190	98-9527	1	Bearing-Main (0.4mm)
190	98-9526	1	Bearing-Main (0.2mm)
190	98-9525	1	Metal Crankshaft(STD Set)
200	98-9415	2	Bearing-Thrust (0.4mm)
200	98-9414	2	Bearing-Thrust (0.2mm)
200	98-9413	2	Bearing-Thrust (STD)
210	98-9690	2	Bearing-Thrust (0.4mm)
210	98-9689	2	Bearing-Thrust (0.2mm)
210	98-9688	2	Bearing-Thrust (STD)

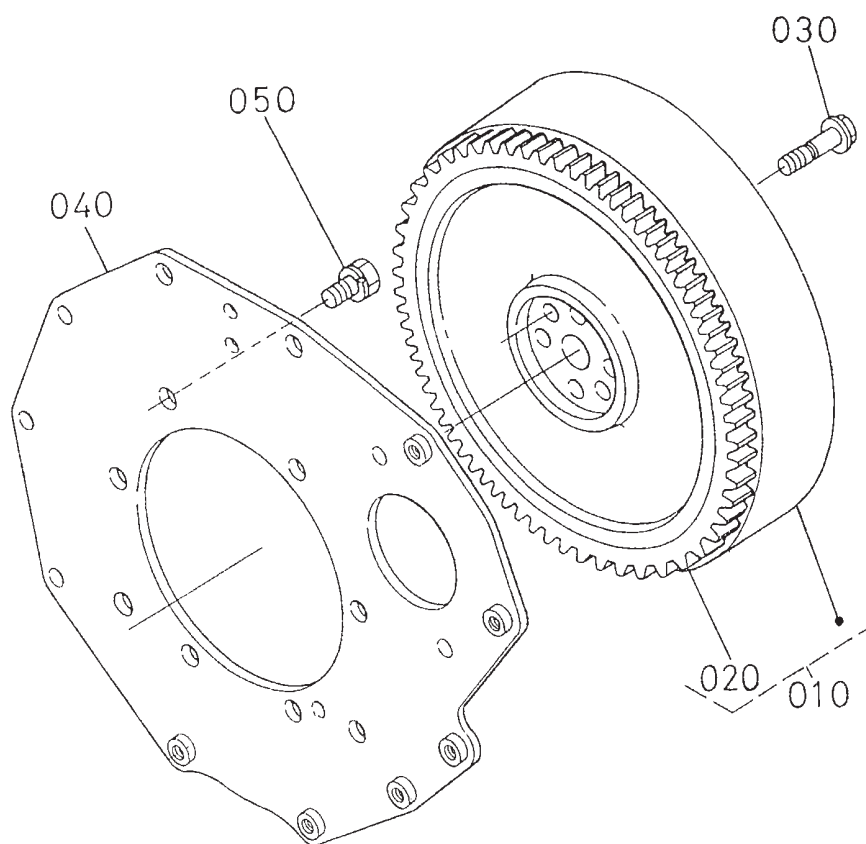 


Sheet No.:62

Flywheel Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	105-3784	1	Flywheel ASM
020	105-3722	1	Gear-Ring
030	98-9537	6	Bolt-Flywheel
040	98-9486	1	Plate-End, Rear
050	98-9392	8	Bolt

Ref. No.	Part No.	Qty.	Description

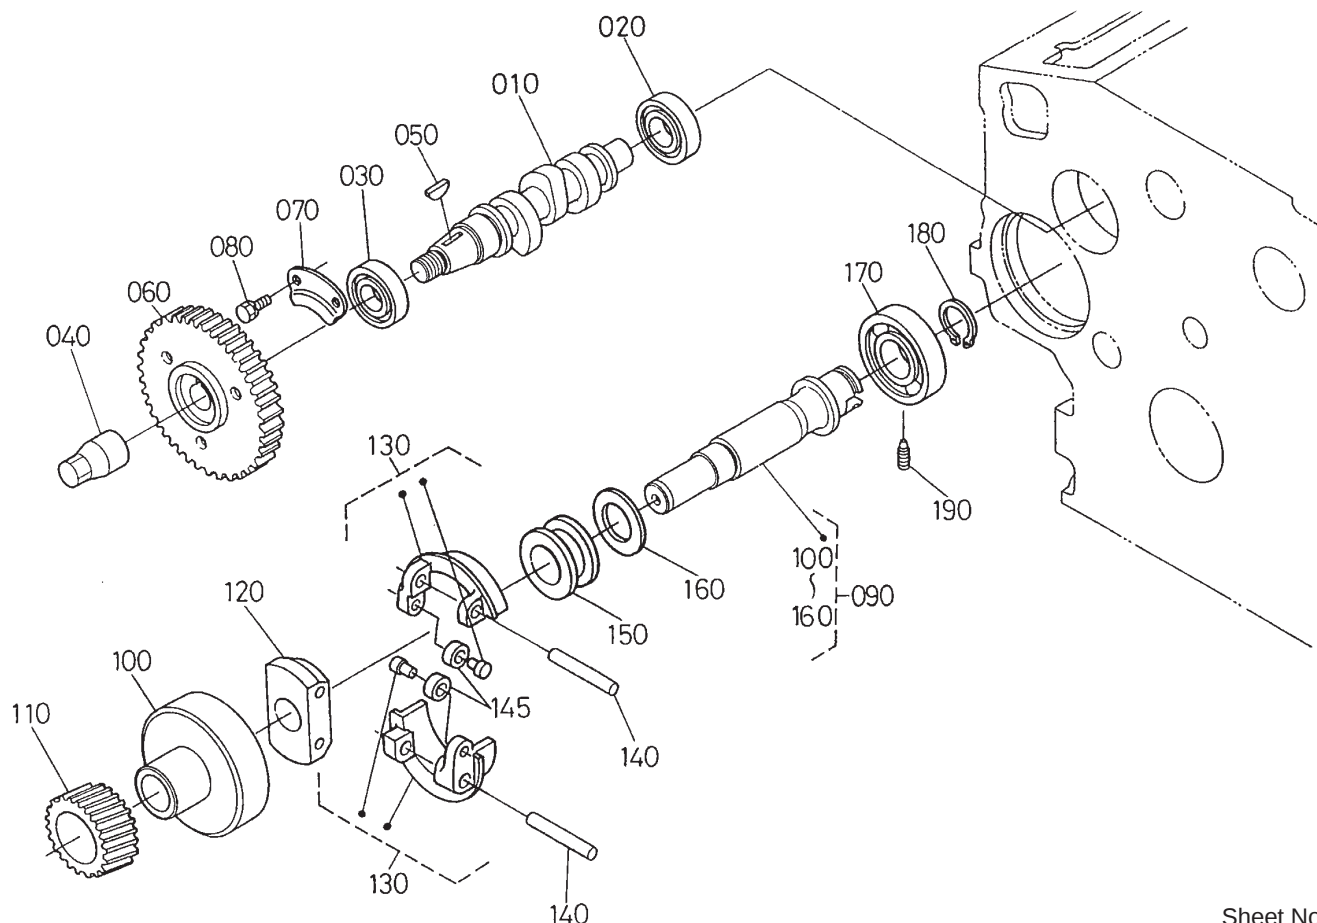 


Sheet No.:63

Fuel, Camshaft and Governor Shaft Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9459	1	Camshaft-Fuel
020	98-9382	1	Bearing-Ball
030	98-9383	1	Bearing-Ball
040	98-9590	1	Nut-Cap
050	98-9595	1	Key-Woodruff
060	98-9669	1	Gear-Pump, Injection
070	98-9511	1	Stopper-Fuel, Camshaft
080	98-9350	2	Bolt
090	98-9644	1	Governor Shaft ASM
100	98-9562	1	Holder-Gear, Governor
110	98-9673	1	Gear-Governor
120	98-9561	1	Holder-Weight, Governor
130	98-9559	2	Governor Weight ASM
140	98-9560	2	Shaft-Weight, Governor
145	98-9692	2	Roller
150	98-9563	1	Sleeve-Governor
160	98-9564	1	Washer-Thrust
170	98-9381	1	Bearing-Ball
180	98-9657	1	Clip-Circular,

Ref. No.	Part No.	Qty.	Description
190	98-9565	1	Governor Shaft Screw-Set

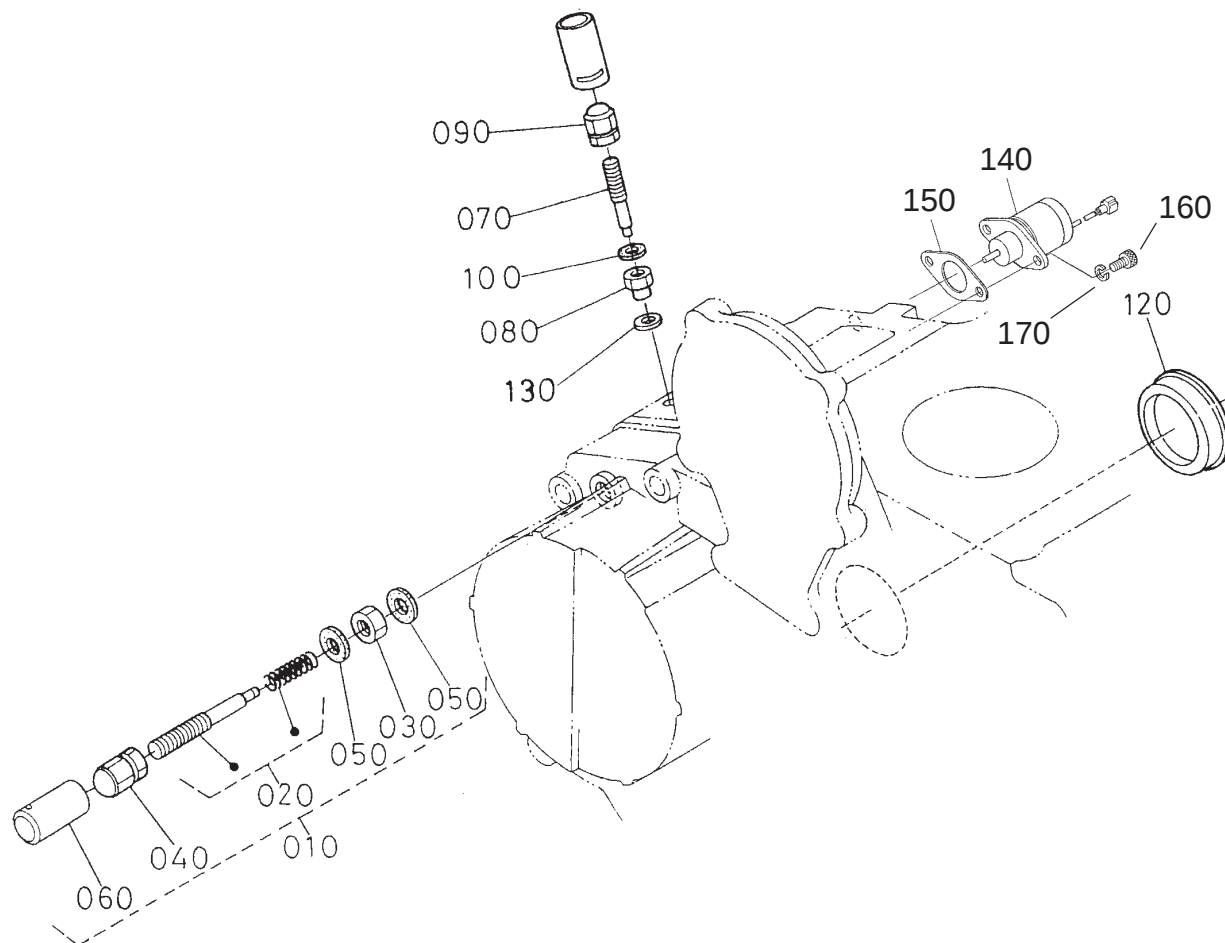 


Sheet No.:64

Idle Apparatus and Stop Solenoid Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9678	1	Idle Apparatus ASM
020	98-9679	1	Adjusting Bolt ASM
030	98-9439	1	Nut
040	105-3785	1	Plug
050	98-7654	2	Gasket
060	98-7656	1	Cap
070	98-9557	1	Bolt-Adjusting
080	99-3512	1	Nut
090	105-3785	1	Plug
100	98-7654	1	Gasket
120	98-9640	1	Cover-Pump
130	99-8389	1	Gasket
140	98-9693	1	Solenoid-Stop
150	98-9683	1	Gasket-Cover, Solenoid
160	105-3799	2	Bolt-HSH
170	98-7699	2	Washer-Spring

Ref. No.	Part No.	Qty.	Description

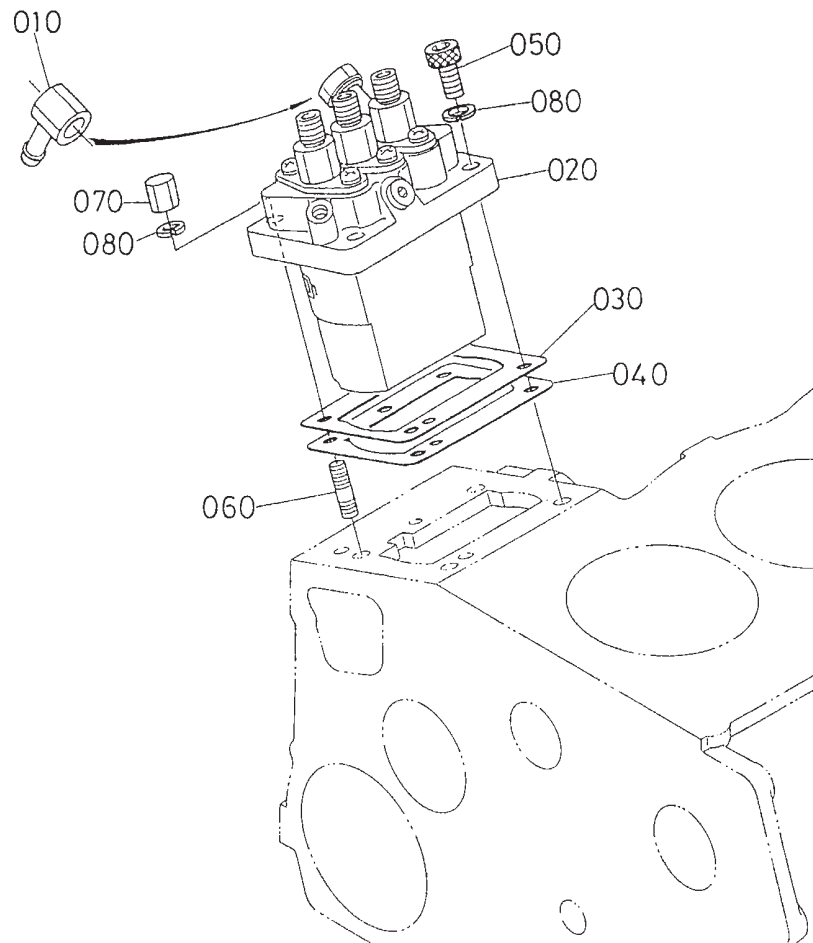 


Sheet No.:65

Injection Pump Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9596	1	Joint-Eye
020	98-9643	1	Injection Pump ASM
030	98-9456	1	Shim (0.2mm)
030	98-9457	1	Shim-Injection (0.25mm)
040	98-9458	1	Shim-Injection (0.30mm)
050	98-9361	2	Bolt-HSH
060	98-9438	2	Stud
070	98-9440	2	Nut-Cap
080	98-7699	4	Washer-Spring

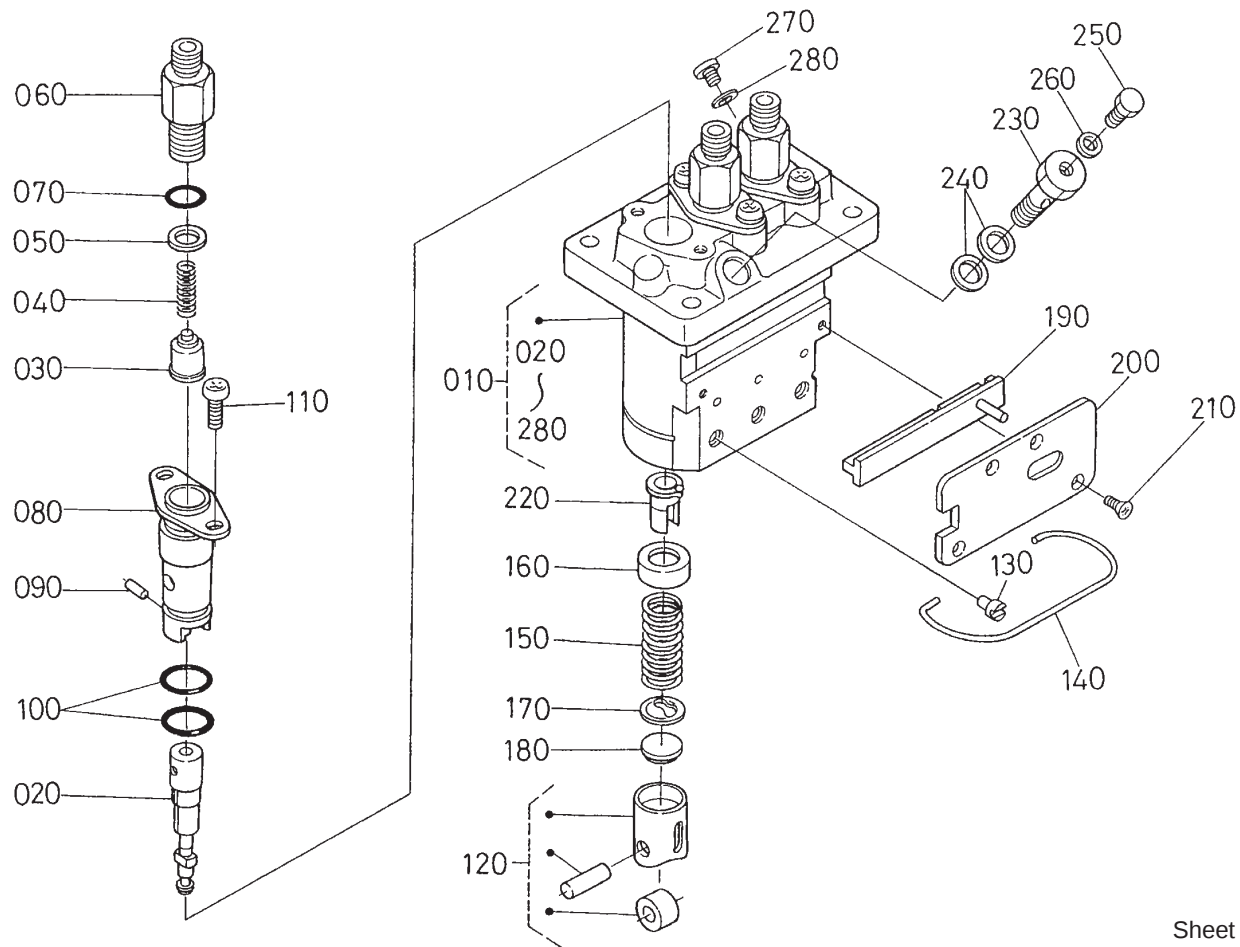 


Sheet No.:66

Injection Pump Assembly No. 98-9643 Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9643	1	Injection Pump ASM
020	98-9462	3	Element-Pump
030	98-9421	3	Valve-Delivery
040	98-9424	3	Spring-Valve, Delivery
050	98-9425	3	Gasket-Valve, Delivery
060	98-9652	3	Holder-Valve, Delivery
070	98-9447	3	O-Ring
080	98-9434	3	Flange-Sleeve
090	98-9443	3	Pin-Joint
100	98-9423	6	O-Ring
110	105-2892	6	Screw
120	98-9422	3	Tappet ASM
130	98-9426	3	Pin-Guide, Tappet
140	98-9450	1	Pin-Clamp
150	98-9428	3	Spring-Plunger
160	98-9427	3	Seat-Spring, Upper
170	98-9429	3	Seat-Spring, Lower
180	98-9433	3	Shim
190	98-9463	1	Control-Rack
200	98-9465	1	Plate
210	98-9442	4	Screw
220	98-9432	3	Sleeve-Control
230	98-9464	1	Bolt-Joint

Ref. No.	Part No.	Qty.	Description
240	98-9445	2	Gasket
250	98-9430	1	Screw
260	98-9446	1	Gasket
270	98-9466	1	Plug
280	98-9451	1	Gasket

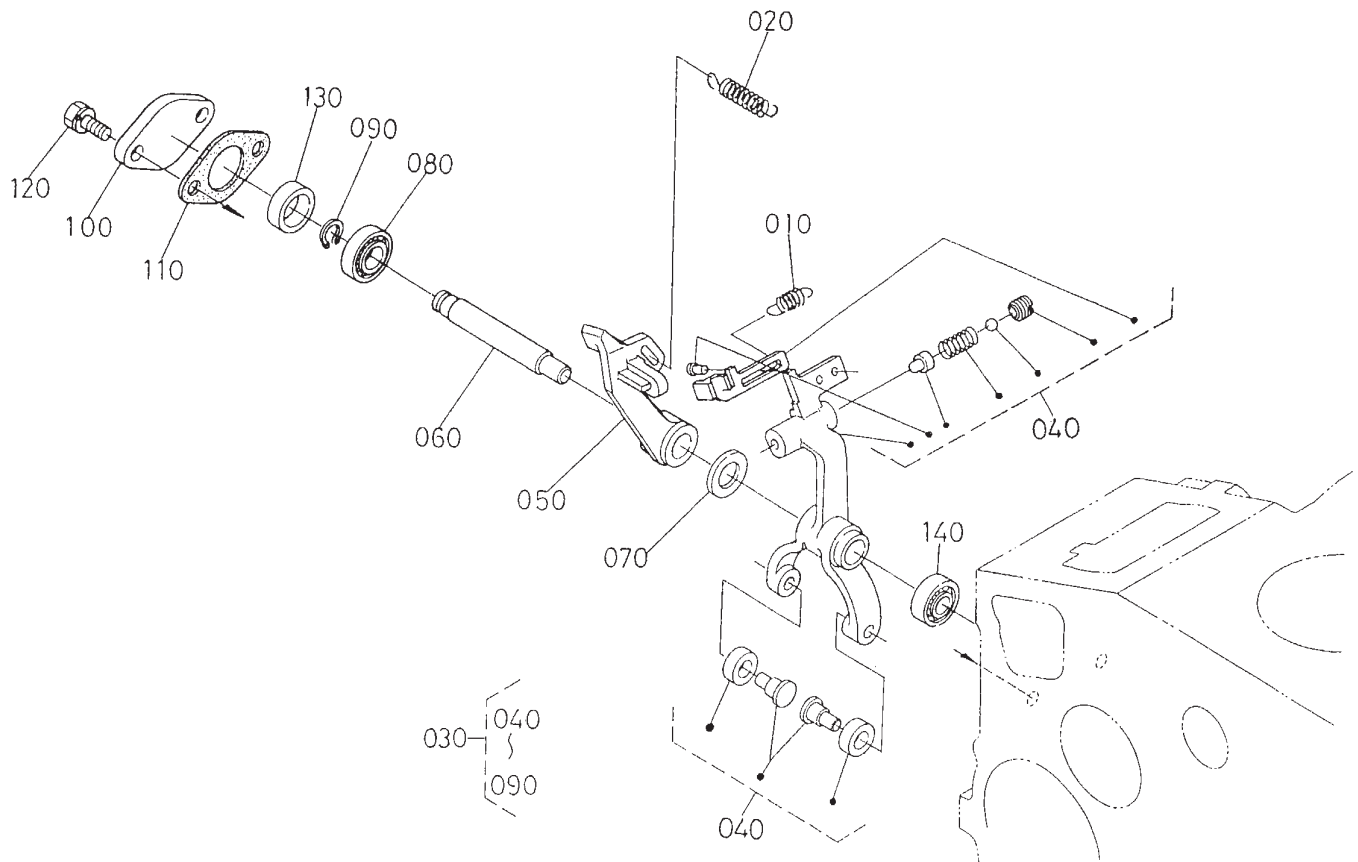 


Sheet No.:67

**Governor Assembly
Engine Assembly No. 104-3448**

Ref. No.	Part No.	Qty.	Description
010	105-3786	1	Spring-Start
020	98-9681	1	Spring-Governor
030	105-3787	1	Fork Lever ASM
040	99-8380	1	Fork Lever ASM
050	105-3743	1	Lever-Fork
060	98-9566	1	Shaft-Lever, Fork
070	98-9593	1	Washer-Plain
080	98-9570	1	Bearing-Miniaturize
090	98-9369	1	Clip-Circular, External
100	98-9569	1	Cover-Shaft, Fork Lever
110	98-9682	1	Gasket
120	98-9351	2	Bolt
130	98-9567	1	Collar
140	98-9571	1	Bearing-Miniaturize

Ref. No.	Part No.	Qty.	Description

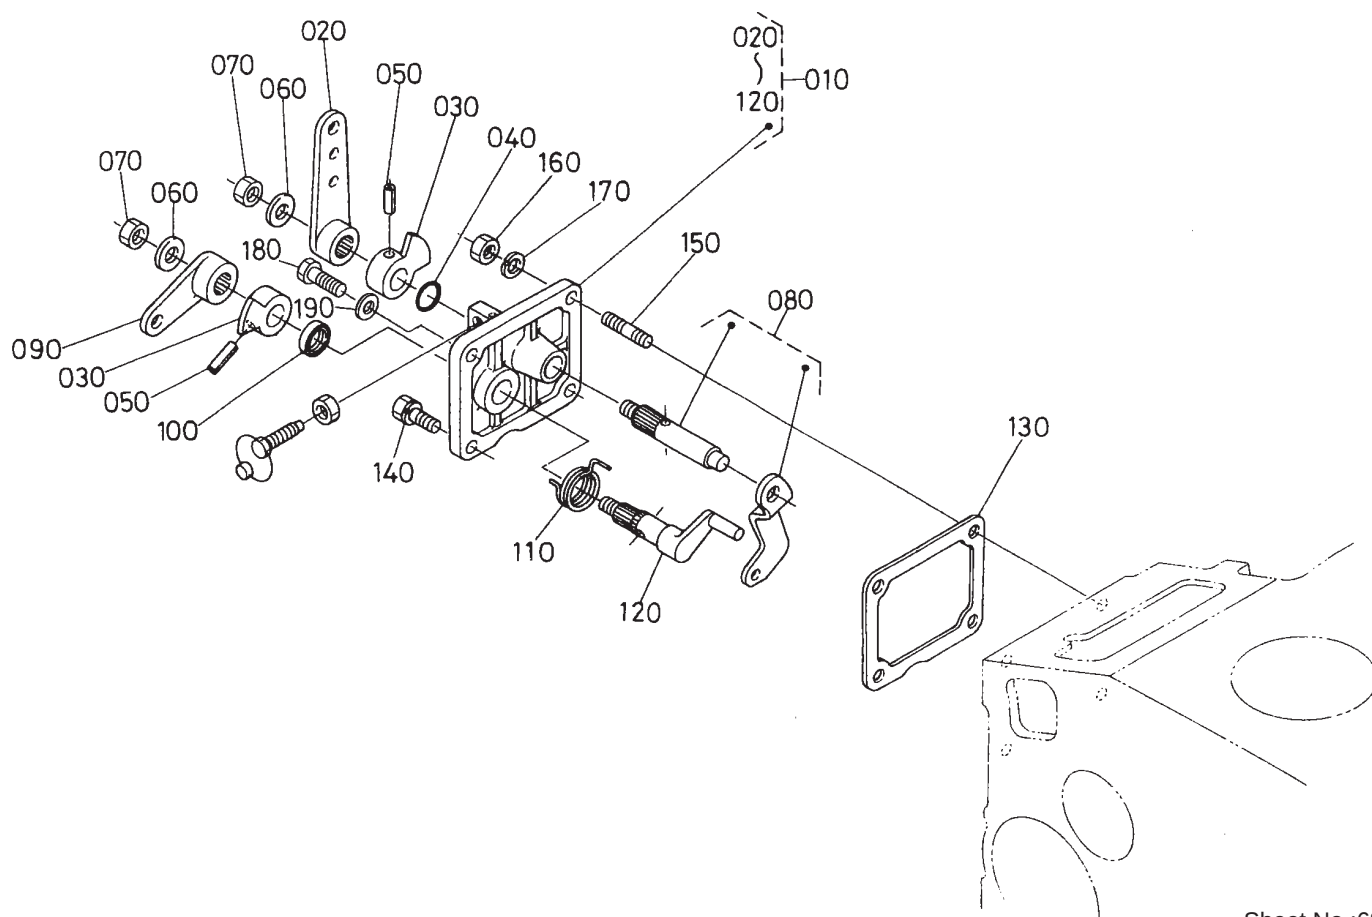 


Sheet No.:68

Speed Control Plate Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9661	1	Control Plate ASM
020	98-9662	1	Lever-Control, Speed
030	98-9572	2	Lever-Control, Speed
040	105-3788	1	O-Ring
050	98-7602	2	Pin-Spring
060	98-9594	2	Washer-Plain
070	98-9589	2	Nut
080	98-9658	1	Governor Lever ASM
090	98-9663	1	Lever-Stop, Engine
100	98-7601	1	Seal-Oil
110	98-9472	1	Spring-Return
120	98-9664	1	Shaft-Lever, Stop
130	98-9637	1	Gasket
140	98-7692	1	Bolt
150	105-3710	2	Stud
160	98-7572	2	Nut
170	98-7699	2	Washer-Spring
180	99-8348	1	Bolt
190	98-7654	1	Gasket


Ref. No.	Part No.	Qty.	Description

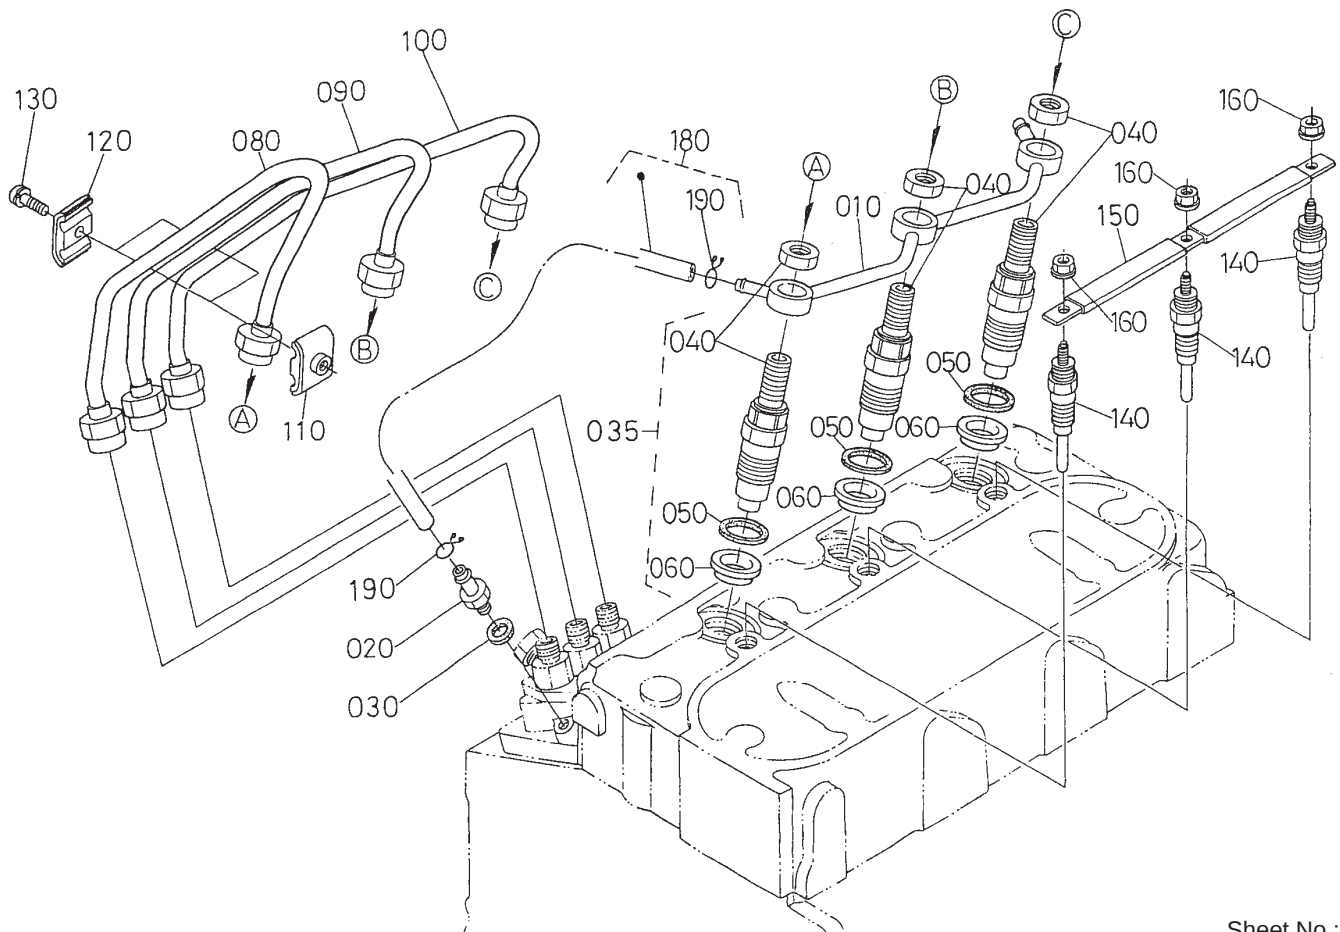 

Sheet No.:69

Nozzle Holder Glow Plug Assembly Engine Assembly No. 104-3448


Ref. No.	Part No.	Qty.	Description
010	98-9620	1	Over Flow Pipe ASM
020	98-9431	1	Screw-Bleeder
030	98-7654	1	Gasket
035	105-3740	3	Kit-Holder, Nozzle
040	98-9468	3	Nozzle Holder ASM
050	98-7676	3	Gasket
060	98-7677	3	Seal
080	98-9653	1	Pipe-Injection
090	98-9654	1	Pipe-Injection
100	98-9655	1	Pipe-Injection
110	98-7682	2	Clamp-Pipe
120	98-7683	2	Clamp-Pipe
130	98-7684	2	Screw W/Washer
140	98-9695	3	Plug,Glow
150	98-9631	3	Cord-Plug, Glow
160	99-8377	3	Nut - Flange
180	98-9420	1	Over Flow Pipe ASM
190	98-7671	2	Clip-Pipe

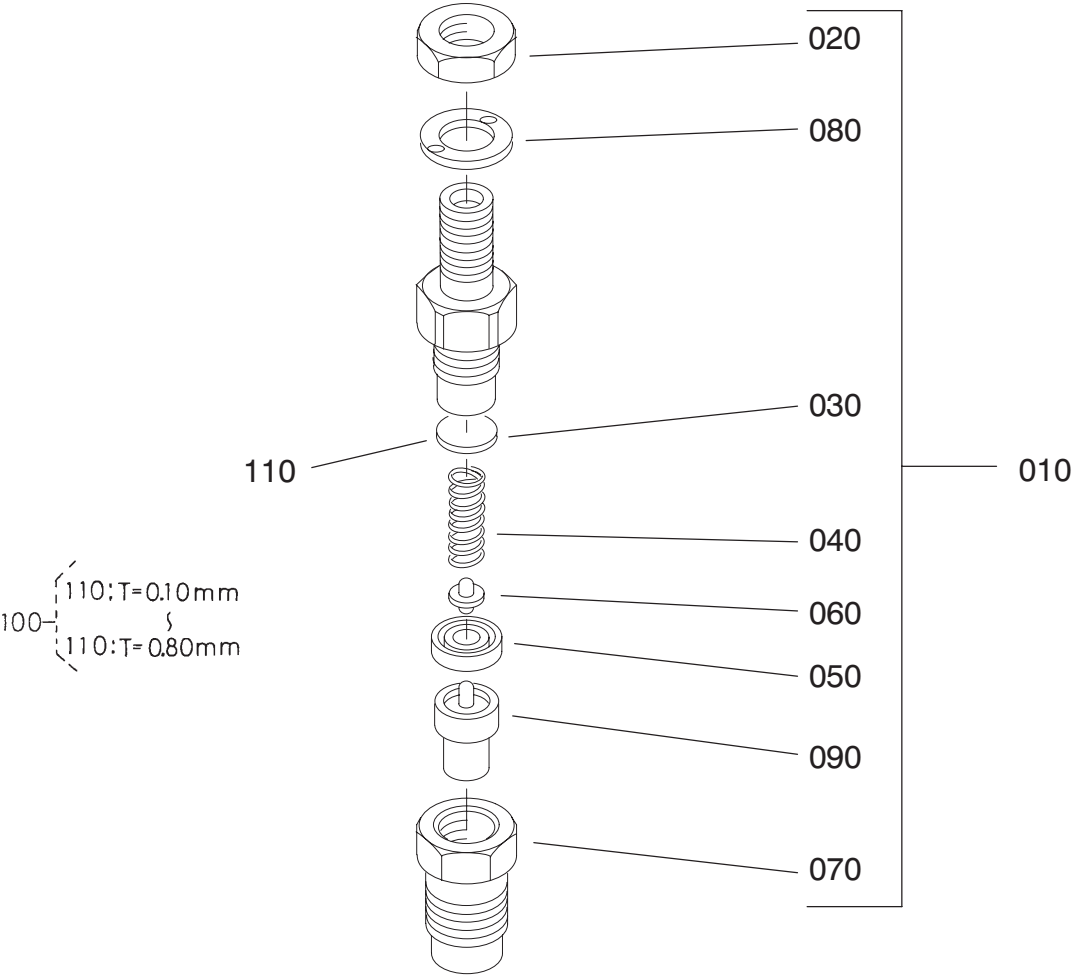 

Sheet No.:70

Nozzle Holder Assembly No. 98-9468
Engine Assembly No. 104-3448


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
010	98-9468	3	Nozzle Holder ASM	110	99-8312	3	Washer-Adjust (0.30mm)
020	99-8301	3	Nut	110	99-8313	3	Washer-Adjust (0.40mm)
030	99-8302	3	Washer-Adjusting	110	99-8314	3	Washer-Adjust (0.50mm)
040	99-8303	3	Spring – Nozzle				
050	99-8304	3	Spacer – Distance				
060	99-8305	3	Rod-Push				
070	99-8306	3	Nut – Nozzle				
080	99-8307	3	Washer-Plain				
090	99-8308	3	Piece – Nozzle				
100	99-8309	3	Adjusting Washer ASM				
110	99-8315	3	Washer-Adjust (0.52mm)				
110	99-8316	3	Washer-Adjust (0.54mm)				
110	99-8317	3	Washer-Adjust (0.56mm)				
110	99-8318	3	Washer-Adjust (0.58mm)				
110	99-8319	3	Washer-Adjust (0.80mm)				
110	99-8310	3	Washer-Adjust (0.10mm)				
110	99-8311	3	Washer-Adjust (0.20mm)				

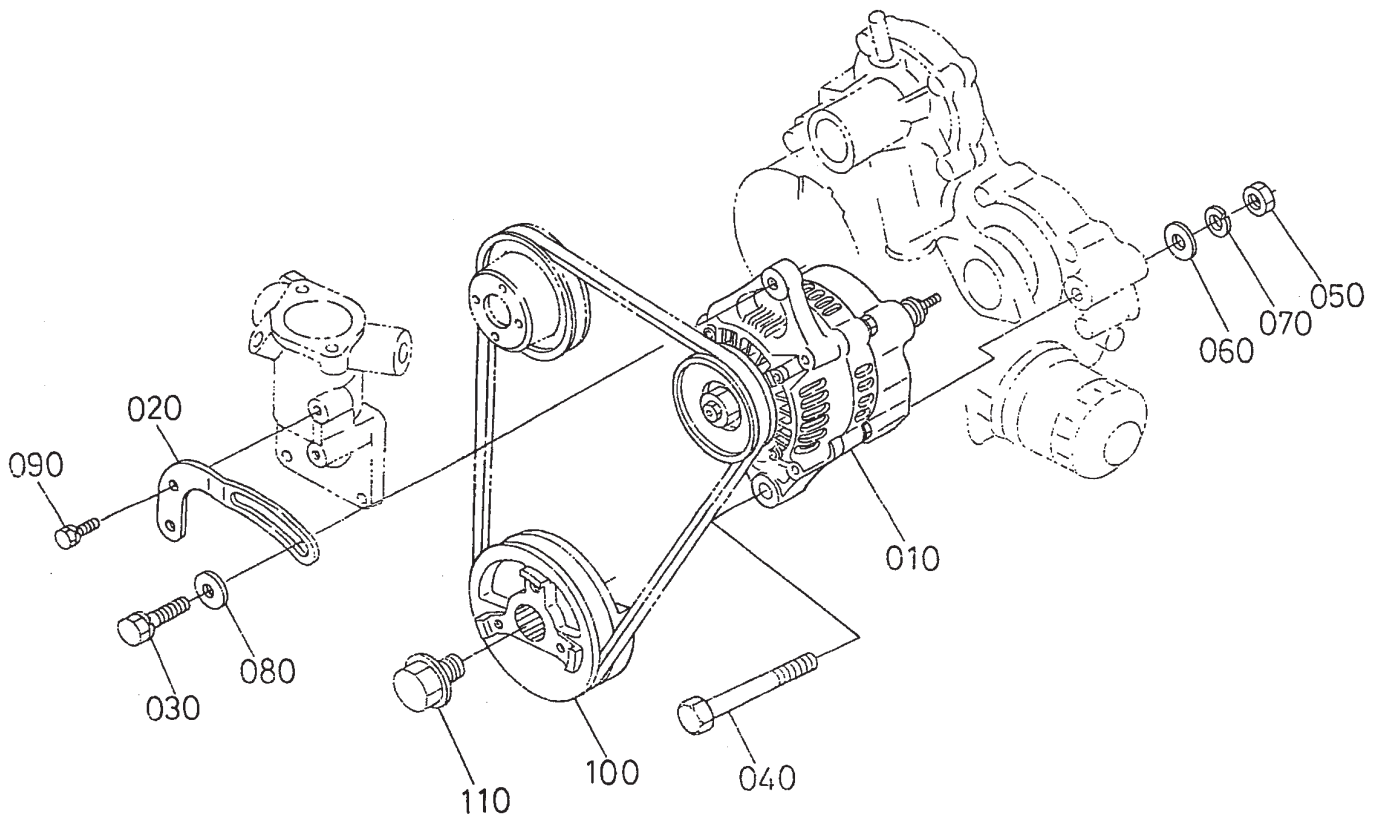 

Sheet No.:71

Alternator and Pulley Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9474	1	Alternator ASM
020	98-9573	1	Stay-Dynamo
030	98-7697	1	Bolt
040	98-9360	1	Bolt
050	98-7737	1	Nut
060	3256-24	1	Washer-Flat
070	98-7738	1	Washer-Spring
080	100-9233	1	Washer-Plain
090	98-7692	1	Bolt
100	98-9473	1	Pulley-Drive, Fan
110	98-9585	1	Bolt

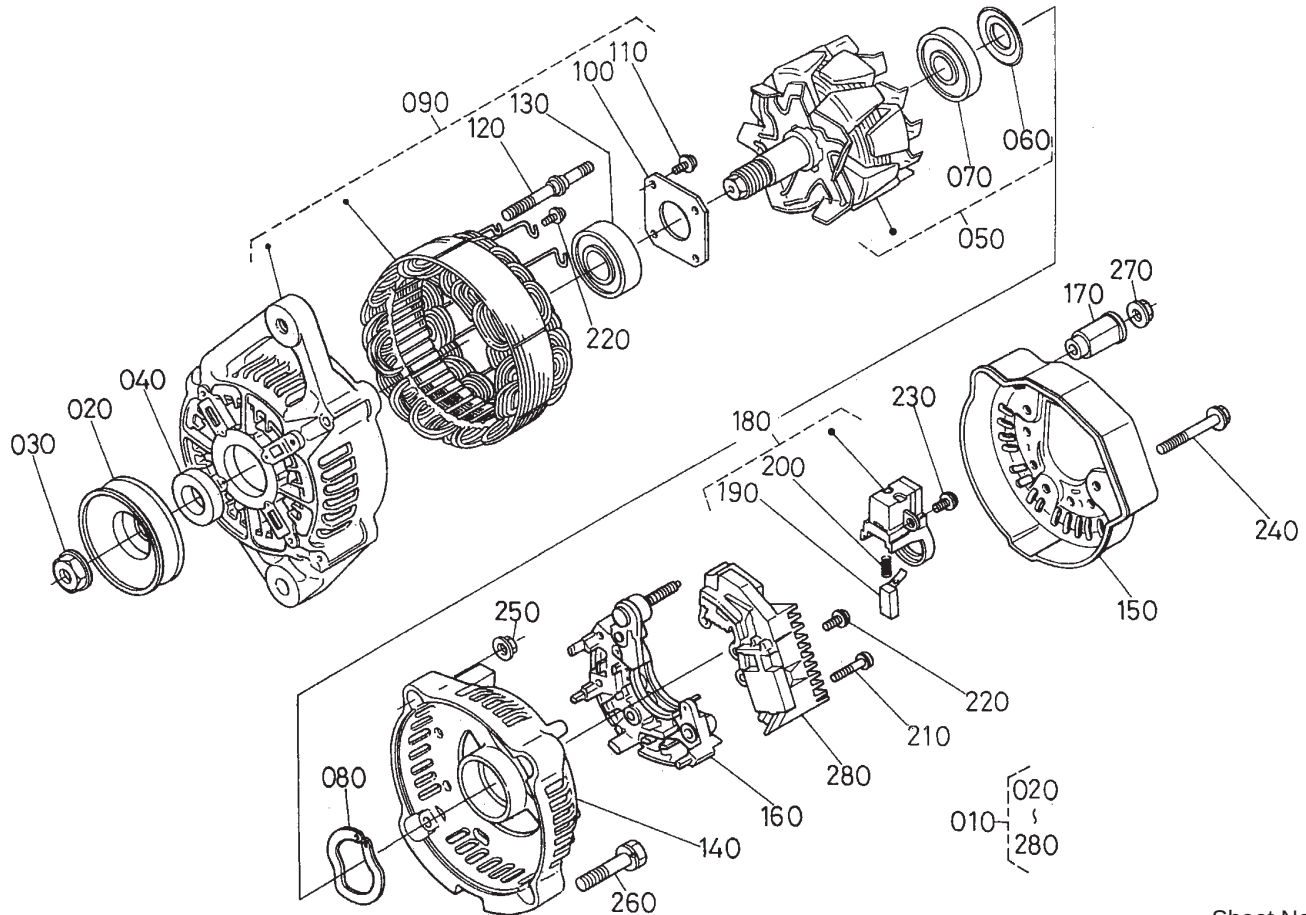 


Sheet No.:72

Alternator Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9474	1	Alternator ASM
020	98-9453	1	Pulley-Dynamo
030	98-7708	1	Nut
040	98-7709	1	Collar
050	98-7710	1	Rotor
060	98-7711	1	Cover-Bearing
070	98-7712	1	Bearing-Ball
080	98-7713	1	Washer-Thrust
090	98-7714	1	Frame-End, Drive
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	98-7718	1	Bearing-Ball
140	98-7719	1	Frame-End
150	98-7720	1	Cover-End
160	98-7721	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	98-7723	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt


Ref. No.	Part No.	Qty.	Description
250	98-7730	2	Nut
260	98-7731	2	Bolt
270	98-7732	1	Nut
280	98-7733	1	Regulator ASM

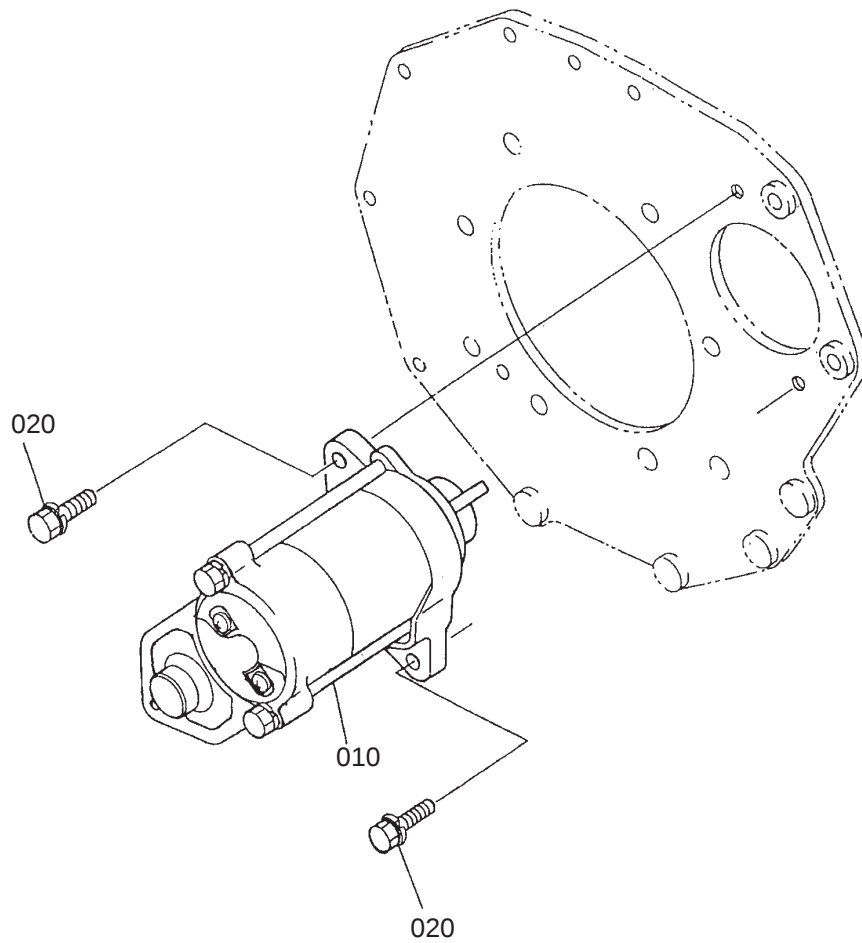 

Sheet No.:73

Starter Mount Assembly Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9705	1	Starter ASM
020	98-7697	2	Bolt

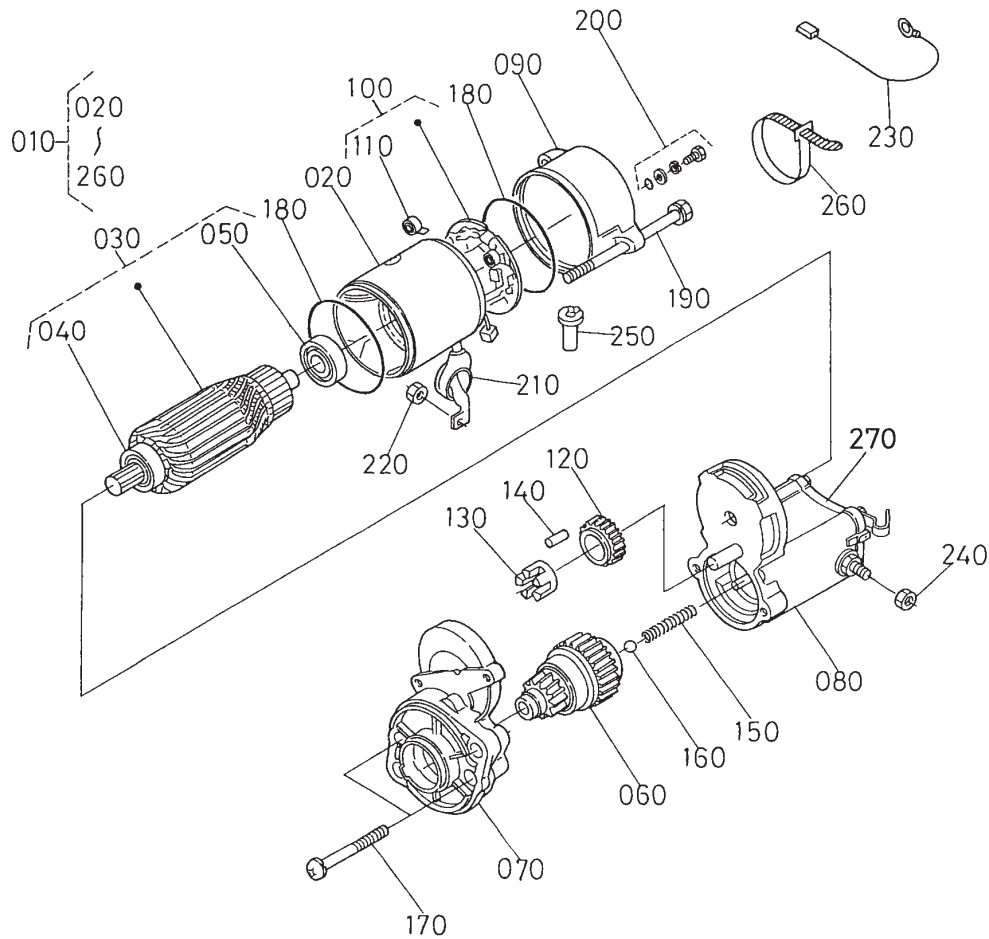 


Sheet No.:74

Starter Assembly No. 98-9705 Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9705	1	Starter ASM
020	104-8608	1	Yoke ASM
030	98-7742	1	Armature ASM
040	98-7744	1	Bearing
050	98-7743	1	Bearing
060	99-8373	1	Clutch-Running, Over
070	99-8374	1	Frame-End, Drive
080	105-3746	1	Magnetic Switch ASM
090	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut - Hex


Ref. No.	Part No.	Qty.	Description
250	98-7759	1	Pipe-Drain
260	98-9712	1	Band-Cover
270	105-2886	1	Cover ASM

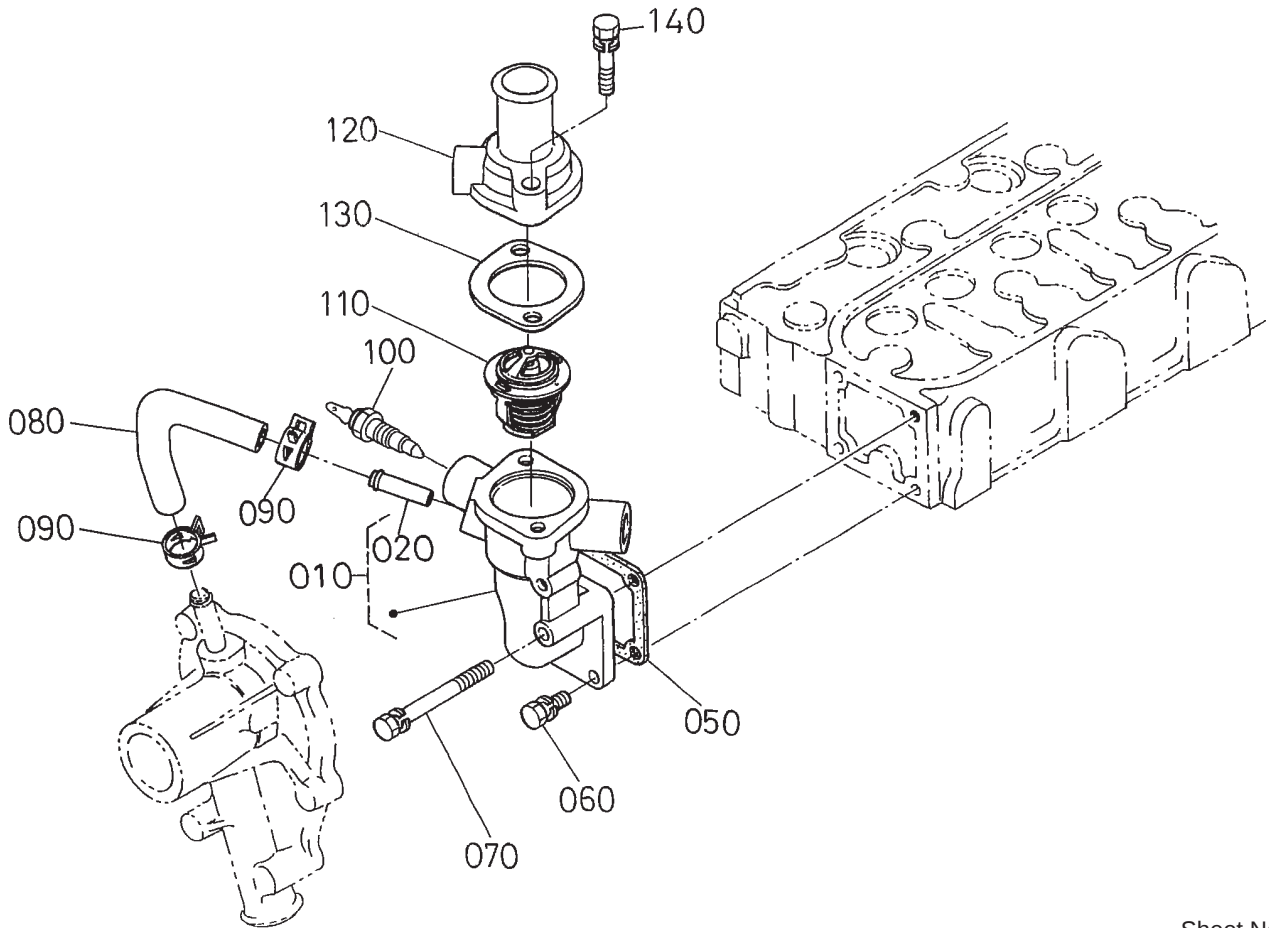 

Sheet No.:75

Water Flange and Thermostat Assembly
Engine Assembly No. 104-3448


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
010	98-9713	1	Water Flange ASM				
020	98-9580	1	Pipe-Return, Water				
050	98-9638	1	Gasket-Flange, Water				
060	98-7692	3	Bolt				
070	98-9356	1	Bolt				
080	98-9578	1	Pipe-Return, Water				
090	98-9579	2	Band-Pipe				
100	98-9719	1	Thermoswitch				
110	98-7778	1	Thermostat ASM				
120	98-9471	1	Cover-Thermostat				
130	105-3748	1	Gasket-Thermostat				
140	98-7777	2	Bolt				

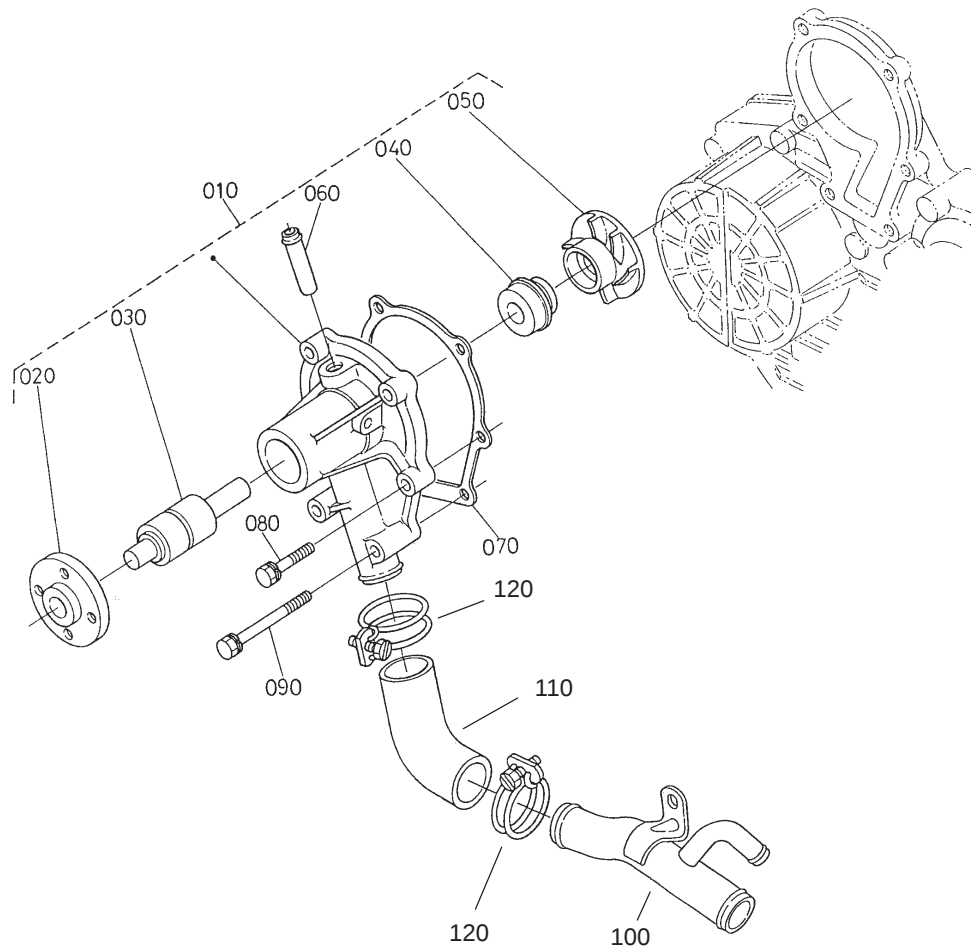 

Sheet No.:76

Water pump and Water Pipe Assembly
Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
010	98-9575	1	Water Pump ASM				
020	98-9582	1	Flange-Pump, Water				
030	98-9583	1	Bearing				
040	98-9576	1	Mechanical Seal ASM				
050	98-9581	1	Impeller-Pump, Water				
060	98-9577	1	Pipe-Return, Water				
070	98-9632	1	Gasket, Water Pump				
080	105-3789	1	Bolt				
090	98-9357	4	Bolt				
100	98-9716	1	Pipe-Water				
110	98-9574	1	Pipe-Water				
120	98-9717	2	Clamp				

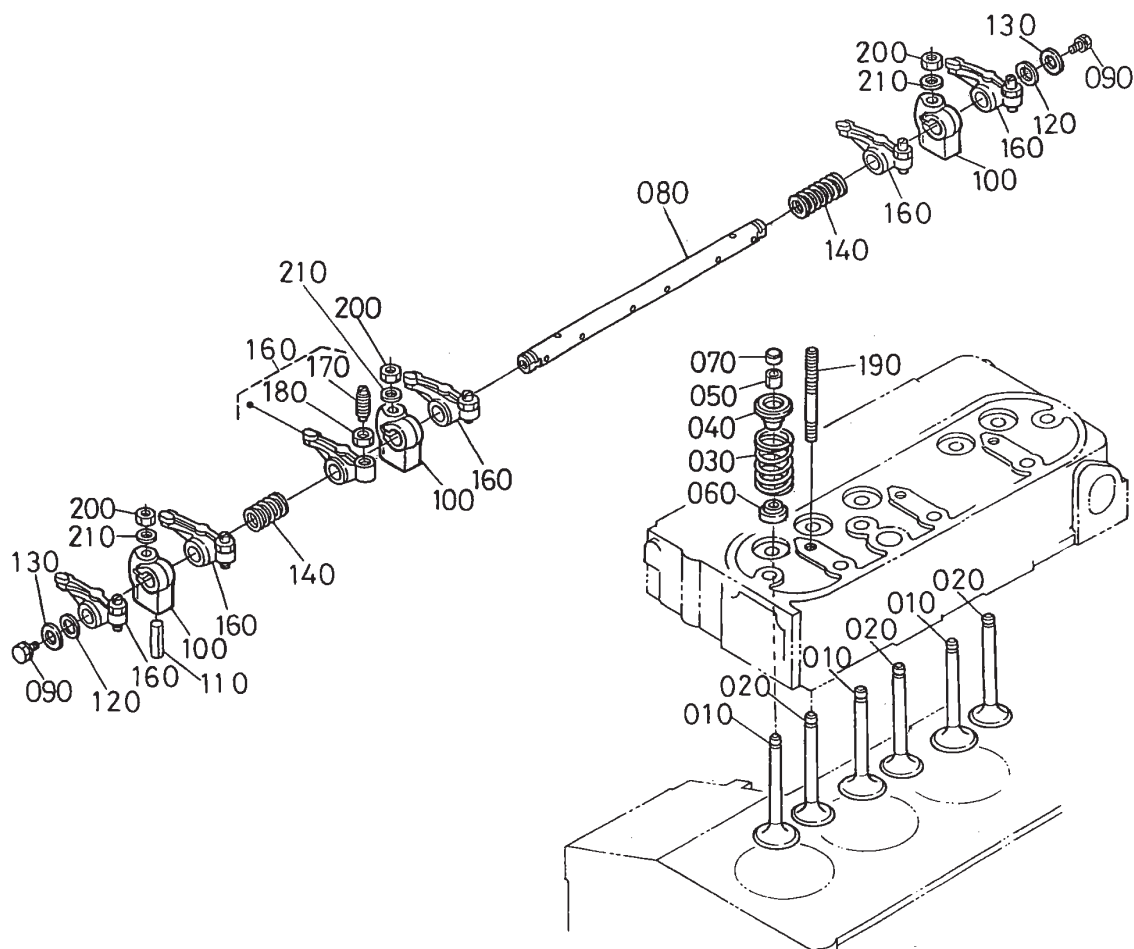 


Sheet No.:77

Valve and Rocker Arm Assembly

Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	98-9494	3	Valve-Inlet
020	98-9495	3	Valve, Exhaust
030	98-9648	6	Spring, Valve
040	98-9498	6	Retainer-Valve
050	98-9390	6	Collet-Set, Valve Spring
060	99-8385	6	Seat-Stem, Valve
070	98-9497	6	Cap-Valve
080	105-3790	1	R-Arm Shaft ASM
090	100-9265	2	Bolt
100	98-9505	3	Bracket-Arm, Rocker
110	98-7602	1	Pin-Spring
120	98-9507	2	Washer-Shaft, R-Arm
130	3256-1	2	Washer-Flat
140	98-9504	2	Spring-Arm, Rocker
160	98-9501	6	Rocker Arm ASM
170	98-9502	6	Screw, Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer - Flat

Ref. No.	Part No.	Qty.	Description

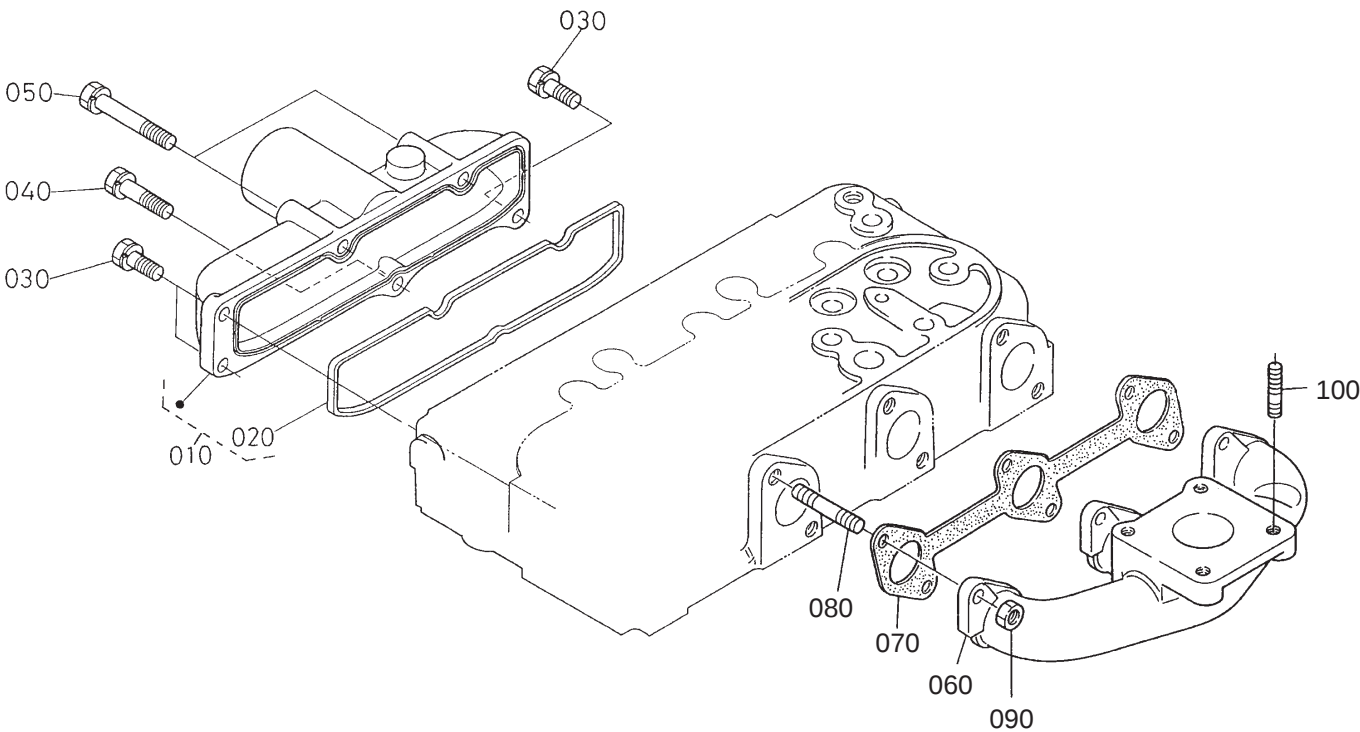 

Sheet No.:78

Inlet and Exhaust Manifold Assembly
Engine Assembly No. 104-3448

Ref. No.	Part No.	Qty.	Description
010	105-3791	1	Inlet Manifold ASM
020	98-9609	1	Gasket
030	98-7605	3	Bolt
040	98-9353	1	Bolt
060	98-9718	1	Manifold – Exhaust
070	98-9610	1	Gasket
080	98-9588	6	Stud
090	98-9665	6	Nut
100	98-7769	4	Stud

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

