



Debris Blower 400

Model No. 44523—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Housing and Impeller Assembly	3	Drive Assembly	6
Chute and Roller Assembly	4	Driveshaft Assembly No. LDB12900	7
3-Point Frame Assembly	5	Cover and Caster Wheel Assembly	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

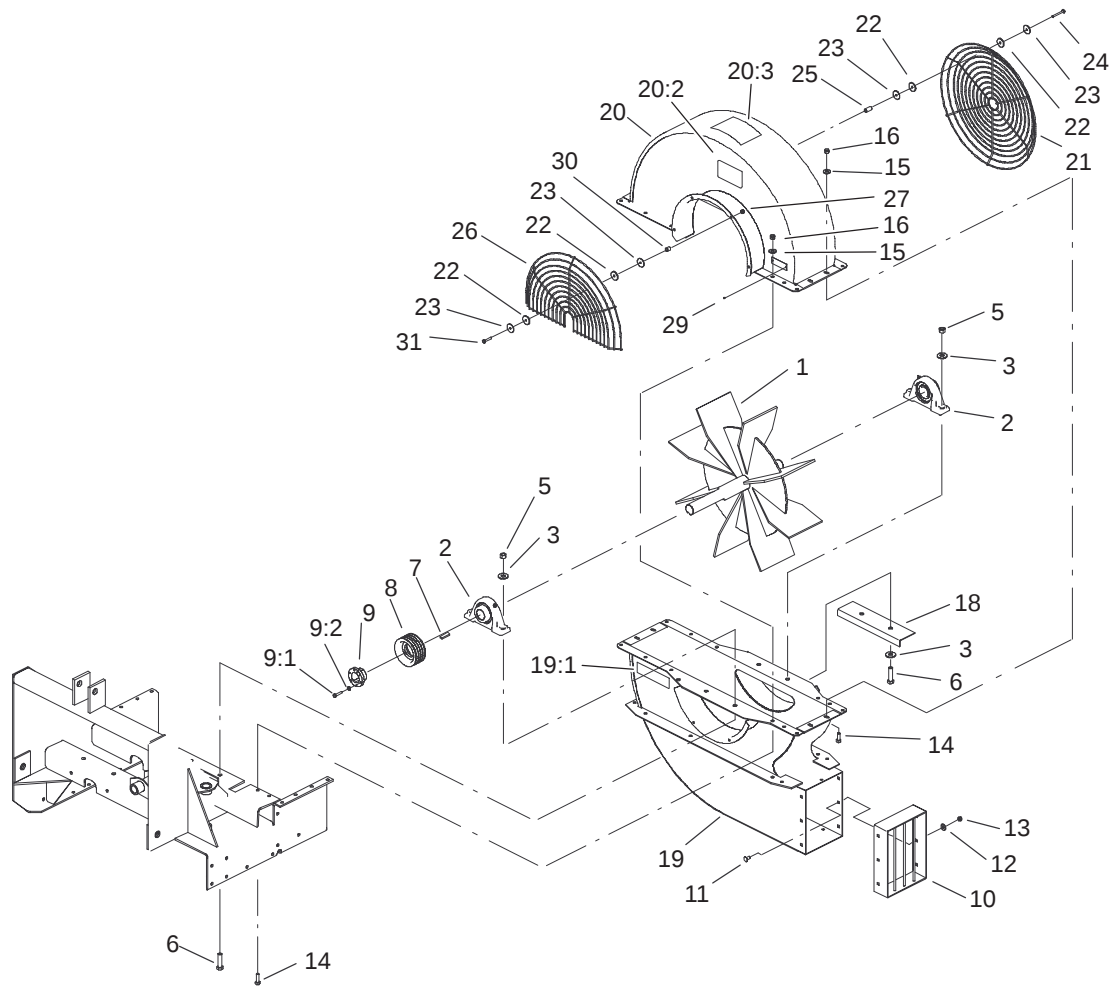


Sheet No.:2

Housing and Impeller Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4711-01	1	Impeller ASM
2	105-0621	2	Bearing-Block, Pillow
3	3256-6	6	Washer-Flat
5	3296-23	4	Nut-Lock, NI
6	325-9	4	Screw-HH
7	105-0634	1	Key
8	105-0612	1	Pulley
9	105-0614	1	Bushing-Pulley
9:1	321-8	3	Screw-HH
9:2	3253-3	3	Washer-Lock
10	105-4793-01	1	Frame-Exhaust
11	3230-2	6	Screw-CARR
12	3256-3	6	Washer-Flat
13	3296-29	6	Nut-Lock, NI
14	323-7	19	Screw-HH
15	3256-4	19	Washer-Flat
16	3296-39	19	Nut-Lock, NI
18	105-4735-01	1	Stabilizer-Mount, Bearing
19	105-4716-01	1	Lower Housing ASM
19:1	105-0709	1	Decal-Warning
20	105-0616	1	Housing-Upper
20:2	67-1300	2	Decal-Toro
20:3	98-3110	1	Decal-Caution, Ce
21	105-0664-01	1	Guard-Fan, Rear
22	105-4734	20	Washer - Rubber

Ref. No.	Part No.	Qty.	Description
23	3256-58	20	Washer-Flat
24	321-11	6	Screw-HH
25	105-4733	6	Spacer-Guard, Fan
26	105-4792-01	1	Guard-Fan, PTO
27	3296-42	10	Nut-Lock, NI
29	3290-271	2	Rivet-Pop
30	105-4820	4	Spacer-Short
31	321-9	4	Screw-HH

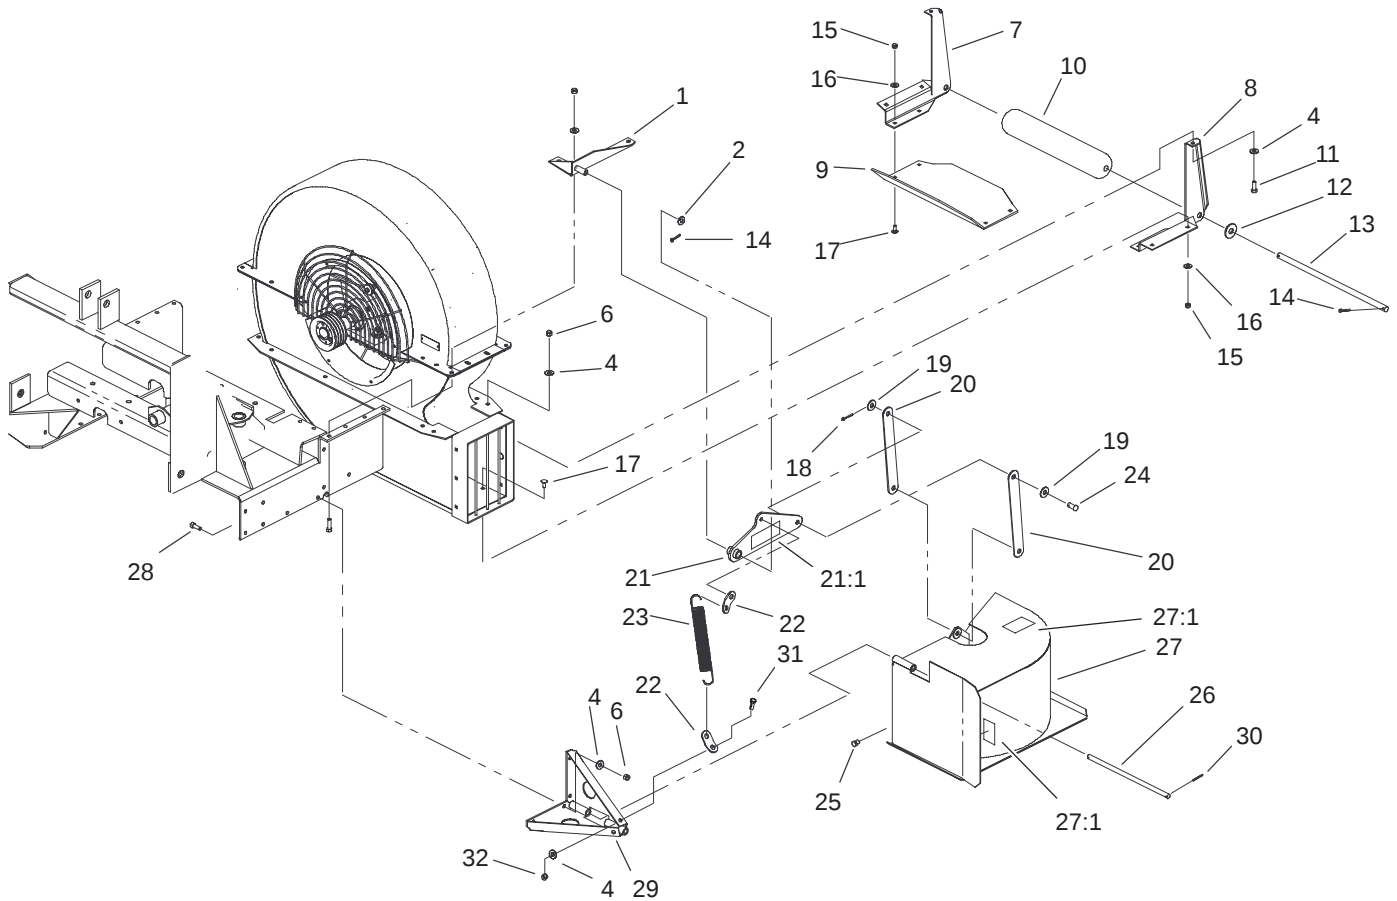


Sheet No.:3

Chute and Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4741-01	1	Pivot Mount ASM
2	3256-27	1	Washer-Flat
4	3256-4	7	Washer-Flat
6	3296-39	8	Nut-Lock, NI
7	105-4782-01	1	Mount-Roller
8	105-4779-01	1	Mount-Roller
9	105-4738-01	1	Plate-Skid
10	105-4823	1	Roller-Turf
11	323-7	2	Screw-HH
12	3256-7	2	Washer-Flat
13	105-4732	1	Axle-Roller
14	3272-22	3	Pin-Cotter
15	3296-29	8	Nut-Lock, NI
16	3256-3	8	Washer-Flat
17	3230-2	8	Screw-CARR
18	3272-17	2	Pin-Cotter
19	3256-5	4	Washer-Flat
20	105-4731-01	2	Link-Lift, Chute
21	105-4744-01	1	Chute Lift Pivot ASM
21:1	93-6674	1	Decal-Warning
22	105-4739-01	2	Mount-Spring
23	105-4825	1	Spring-Ext
24	283-60	2	Pin-Clevis
25	105-4740	1	Bumper-Rubber
26	105-4730	1	Rod-Hinge
27	105-0617	1	Chute

Ref. No.	Part No.	Qty.	Description
27:1	105-0708	2	Decal-Danger
28	323-7	5	Screw-HH
29	105-4815-01	1	Mount-Hinge, Chute
30	32121-103	1	Pin-Spring
31	46-3380	1	Bolt-Shoulder
32	3296-59	1	Nut-Lock NI

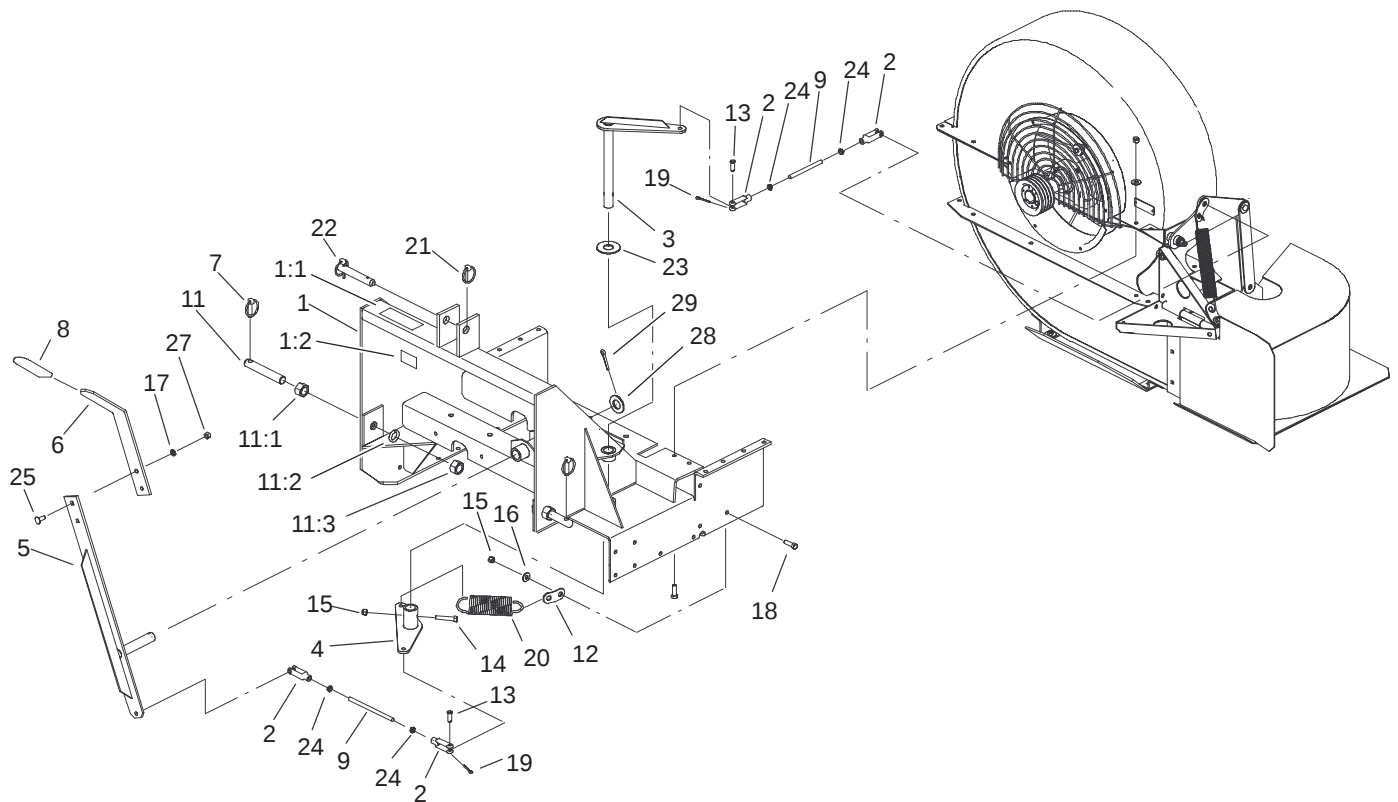


Sheet No.:4

3-Point Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4765-01	1	Frame-3 Point
1:1	105-0707	1	Decal-Caution
1:2	105-0709	1	Decal-Warning
2	1-633131	4	Yoke-Linkage, Brake
3	105-4750-01	1	Arm-Control, Upper
4	105-4754-01	1	Arm-Control, Lower
5	105-4757-01	1	Lever-Control
6	105-4791-01	1	Handle-Control
7	283-71	2	Pin-Lynch
8	105-4737	1	Cover-Handle
9	105-4809	2	Link-Adjustment, Long
11	01-252-0010	2	Lift Arm Pin Adjustment ASM
11:1	3219-18	1	Nut-Hex
11:2	3253-28	1	Washer-Lock/Sp
11:3	3219-8	1	Nut-Hex
12	105-4739-01	1	Mount-Spring
13	1-808285	4	Pin-Clevis
14	323-10	1	Screw-HH
15	3296-39	2	Nut-Lock, NI
16	3256-4	2	Washer-Flat
17	3253-21	2	Washer-Lock
18	323-7	1	Screw-HH
19	3272-10	4	Pin-Cotter
20	105-4812	1	Spring-Extension
21	92-1298	2	Pin-Lynch

Ref. No.	Part No.	Qty.	Description
22	92-1233	1	Pin-Clevis
23	106826	1	Washer-Thrust
24	3220-3	4	Nut-Jam
25	3231-25	2	Screw-CARR
27	3296-39	2	Nut-Lock, NI
28	3-0481	1	Washer-Clutch
29	3272-30	1	Pin-Cotter

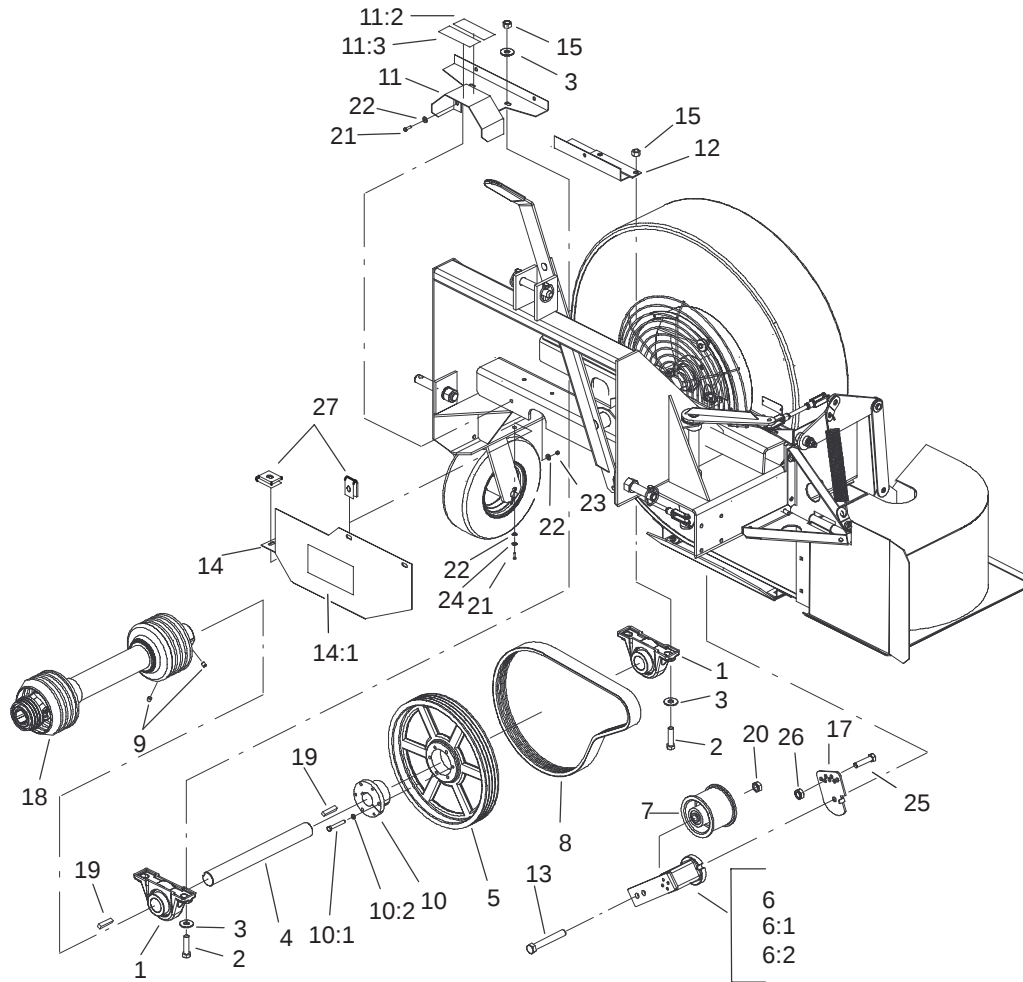


Sheet No.:5

Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	105-0621	2	Bearing-Block, Pillow
2	325-9	4	Screw-HH
3	3256-8	6	Washer-Flat
4	105-4784	1	Shaft-Input
5	105-0611	1	Pulley
6	105-0667	1	Tensioner-Idler
6:1	33116-040	1	Screw-HH
6:2	3253-7	1	Washer-Lock
7	105-4821	1	Idler-Pulley
8	105-0620	1	V-Belt
9	3247-2	2	Screw-Set, HS
10	105-0613	1	Bushing-Pulley
10:1	322-6	3	Screw-HH
10:2	3253-4	3	Washer-Lock
11	105-0625	1	PTO Cover ASM
11:2	105-0627	1	Decal-Caution
11:3	105-0628	1	Decal-Caution, U-Joint
12	105-4788-01	1	Mount-Guard
13	3214-15	1	Screw-HH
14	105-0666	1	Shield-Lower
14:1	93-7814	1	Decal-Danger
15	3296-23	4	Nut-Lock, NI
17	105-4787-01	1	Stabilizer-Tensioner
18	LDB12900	1	Driveshaft ASM
19	41-004-5241	2	Key

Ref. No.	Part No.	Qty.	Description
20	3220-6	1	Nut-Jam
21	322-5	6	Screw-HH
22	3256-3	6	Washer-Flat
23	3296-29	2	Nut-Lock, NI
24	3253-4	4	Washer-Lock
25	3231-2	1	Screw-CARR
26	3296-39	1	Nut-Lock, NI
27	CSP11700	4	Nut-Thin, Tinnerman

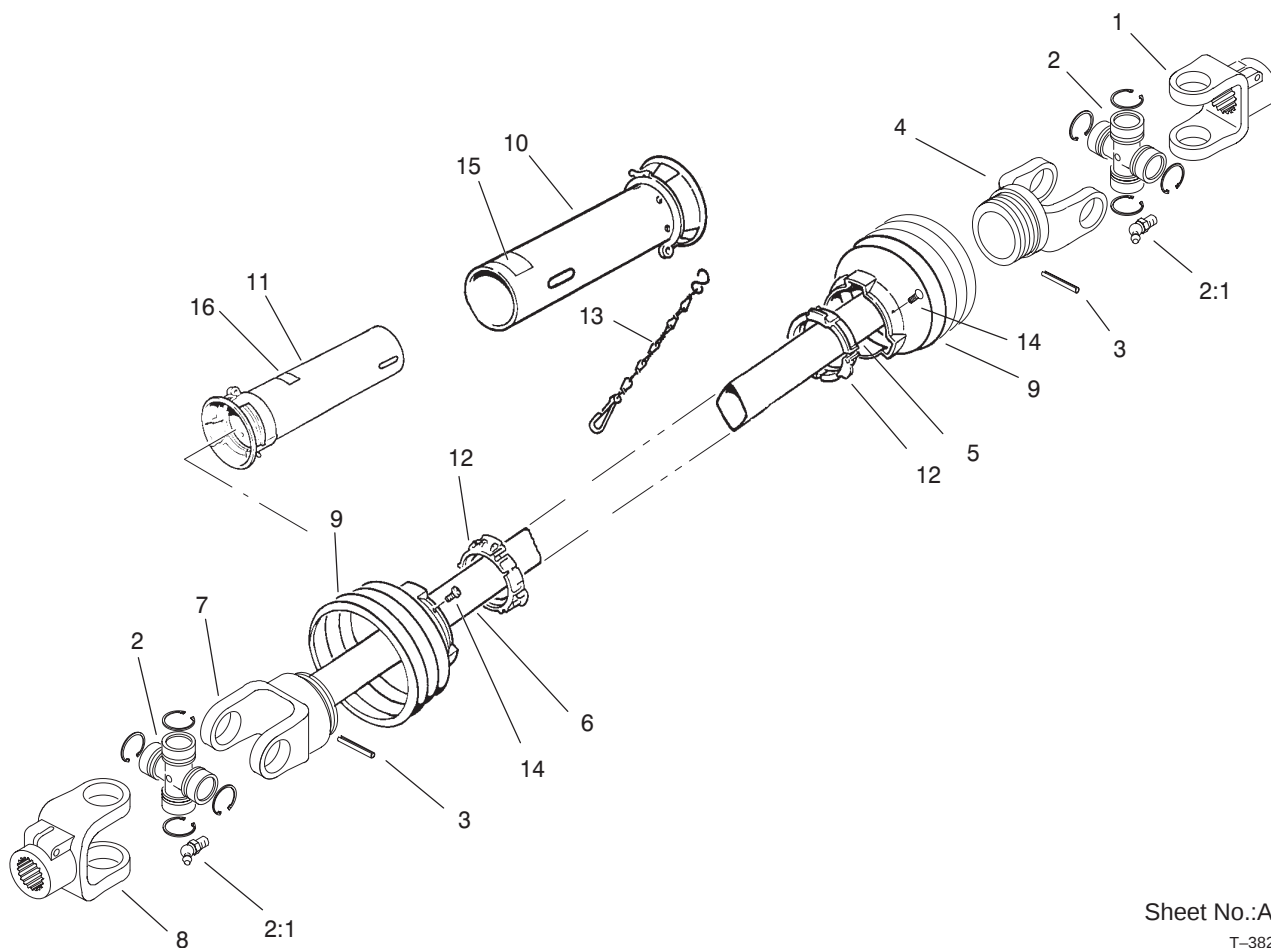

Sheet No.:A1

T-3823

Driveshaft Assembly No. LDB12900

Ref. No.	Part No.	Qty.	Description
1	105-2926	1	Yoke
2	104-0918	2	Kit-Cross & Bearing
2:1	104-0919	1	Fitting-Lube
3	105-2927	2	Pin-Spring
4	105-2928	1	Yoke-Male
5	105-2929	1	Shaft-Inner
6	105-2930	1	Tube-Outer
7	105-2931	1	Yoke-Female
8	105-2932	1	Yoke
9	105-2933	2	Shield-Cone
10	105-2934	1	Tube-Outer
11	105-2935	1	Tube-Inner
12	105-2936	2	Bearing-Ring
13	77-4760	1	Chain-Safety
14	84-6360	2	Screw
15	92-7936	1	Decal-Warning
16	92-7937	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

