



Brake Service Kit

T-Bar Gear Drive Mid-Size Mower

Model No. 105-4655

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

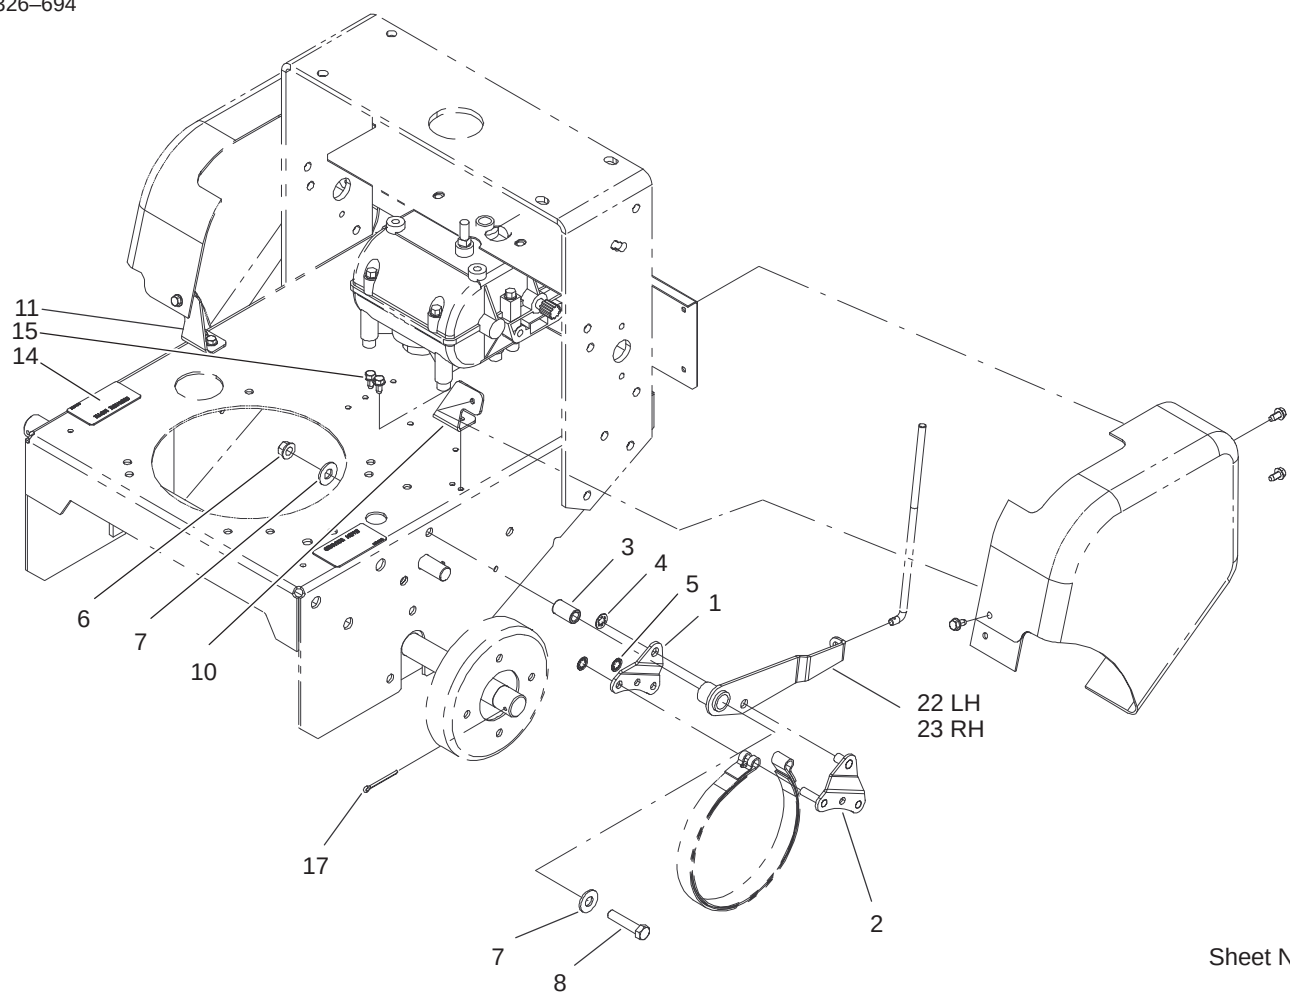

Sheet No.: 0

Brake Service Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4651-01	2	Plate-Link,Brake
2	105-4652-01	2	Brake-Link ASM
3	105-4653	2	Hub-Mounting,Brake
4	32151-56	2	Ring-Retaining, External
5	32151-72	4	Ring-Retaining
6	32128-40	2	Nut-Flange
7	3256-4	4	Washer-Flat
8	323-9	2	Screw-HH
10	105-4657-01	1	Bracket-Mounting Guard,LH
11	105-4658-01	1	Bracket-Mounting Guard,RH
14	105-4662	2	Decal-Service, Brake
15	12-3270	10	Screw
17	1-806800	2	Pin-Cotter
22	105-4667-01	1	LH Brake Arm ASM
23	105-4668-01	1	RH Brake Arm ASM

Ref. No.	Part No.	Qty.	Description