



Operator Shield Guard Kit

Twister™ Utility Vehicle

Model No. 19052

Installation Instructions

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.




Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch before you do any maintenance.

2. Slide the shield into the slots at the front of the cargo bed (Fig. 1).
3. Using the shield bracket holes as a guide, drill 2 holes (11/32 in. diameter) through the cargo bed.
4. Secure the shield with the 2 bolts and flange nuts (Fig. 1). Torque the bolts to 175–225 in.-lb. (20–25 N·m)

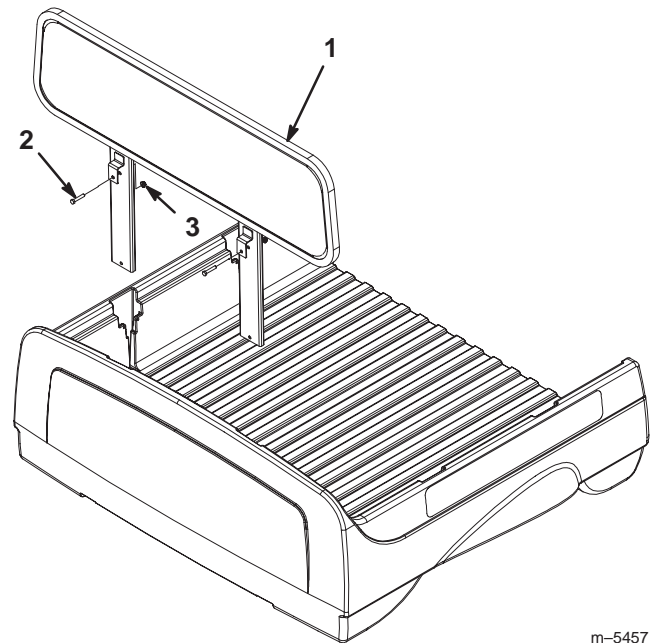

m-5457

Figure 1

- | | |
|-----------|---------------|
| 1. Shield | 3. Flange nut |
| 2. Bolt | |