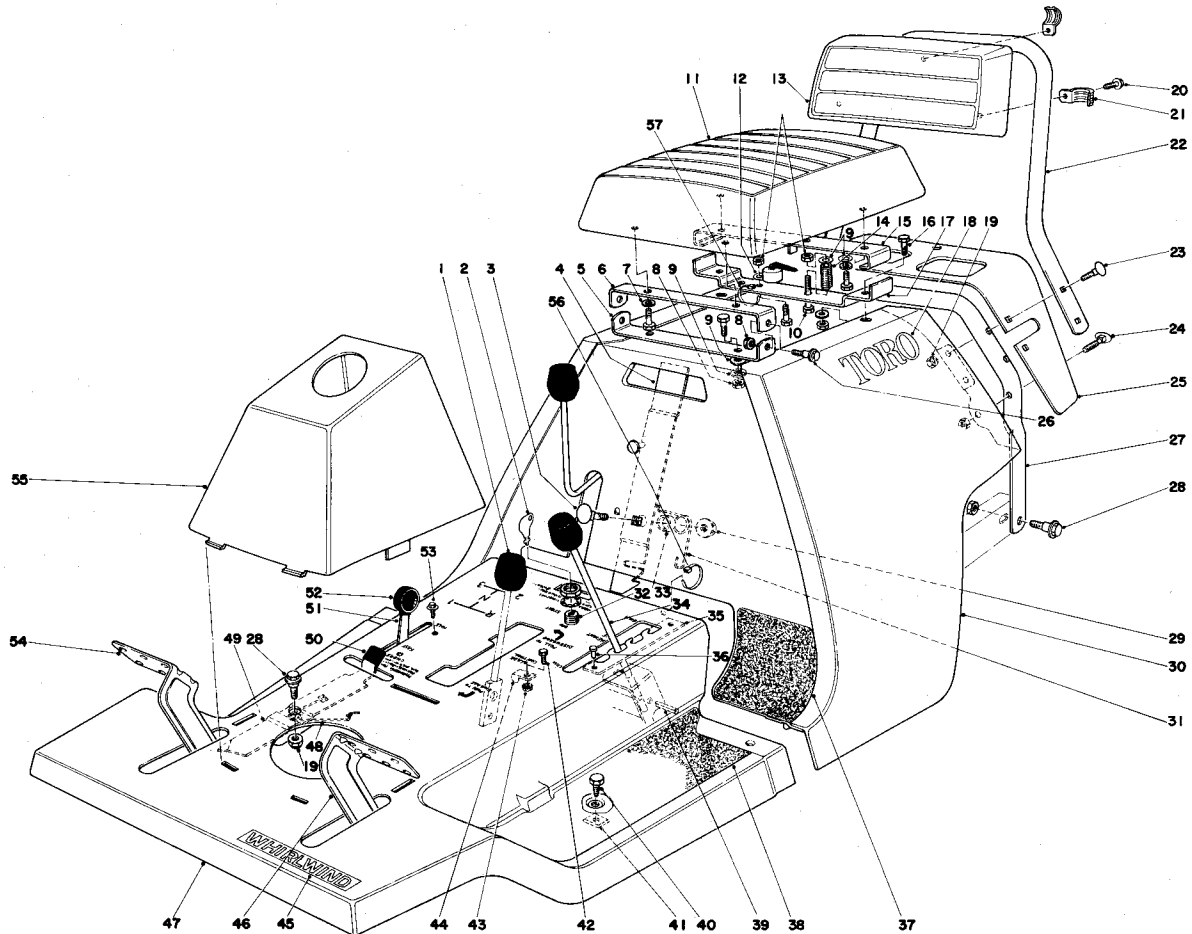 


TORO®


MODEL NO. 56044-8000001 & UP

FORM NO. 3311-255

**PARTS
CATALOG****7 hp PREMIUM RIDER KEY-LECTRIC®****BODY AND SEAT ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	3
2	218-412	Key (Set of 2)	1
3	3230-10	Carriage Bolt	1
4	19-2400	Handle — Latch	1
5	28-4580	Seat Pivot Brkt — Lower	1
6	28-4590	Seat Pivot Brkt - Upper	1
7	3253-3	Lockwasher	4
8	32152-4	Locknut	8
9	3256-22	Washer	9
10	321-14	Capscrew	1
11	28-6420	Seat	1
12	28-4140	Switch Seat	1

Ref. No.	Part No.	Description	No. Used
13	17-1360	Back Rest	1
14	5-1723	Spring	1
15	28-5730	Rear Support Seat	1
16	321-3	Capscrew	9
17	28-4570	Seat Support Rear Lower	1
18	20-4690	Decal — Rear Body	2
19	32152-1	Locknut	9
20	3234-4	Screw	3
21	2412-40	Clamp Conduit	3
22	28-9380	Handle — Upper	1
23	3230-3	Carriage Bolt	4
24	6-6330	Handle Screw	2

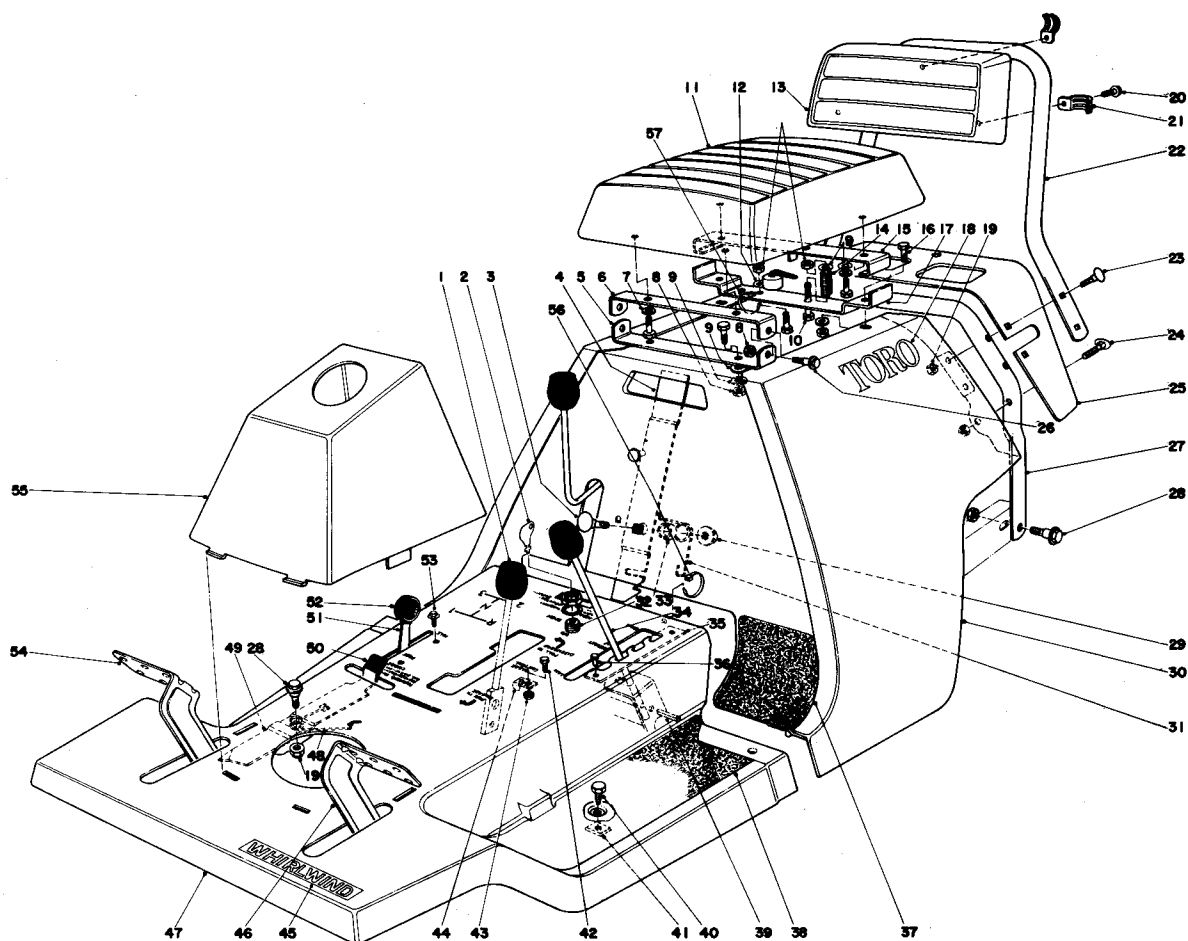 


BODY AND SEAT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
25	25-1630	Extension Rear Body	1
26	11-9030	Shoulder Bolt	2
27	17-9990	Lower Handle	1
28	19-1470	Shoulder Screw	3
29	32128-13	Flange Nut	1
30	19-2070	Rear Body	1
31	19-2390	Spring - Latch Return	1
32	12-2820	Starter - Switch	1
33	19-2410	Spacer	1
34	17-9630	Lever - Height of Cut	1
35	17-9610	Plate Height Adjustment	1
36	3290-372	Rivet	2
37	26-2530	Heel Pad - L.H.	1
*	26-2540	Heel Pad - R.H.	1
38	26-2510	Foot Tread L.H.	1
*	26-2520	Foot Tread R.H.	1
39	32121-94	Spiral Pin	1
40	32104-110	Hex Hd. Screw	4

Ref. No.	Part No.	Description	No. Used
41	3290-347	Tinnerman Nut	4
42	3290-134	Hex Hd. Machine Screw	1
43	32149-7	Keps Nut	1
44	2412-51	Clamp	1
45	28-8910	Decal - Whirlwind	1
46	19-1860	Clutch Pedal	1
47	21-4680	Body Front (Incl. Ref. #35 & 36)	1
48	19-1970	Spring Parking Brake	1
49	19-1610	Parking Brake	1
50	19-2200	Tip Parking Brake	1
51	21-4560	Throttle Control (Incl. Ref #52)	1
52	233-35	Knob	1
53	32104-94	Self Tapping Screw	2
54	26-5310	Brake Pedal	1
55	28-3690	Tower	1
56	3290-381	Cable Tie	1
57	3290-378	Cable Tie	1

 
*Not Illustrated

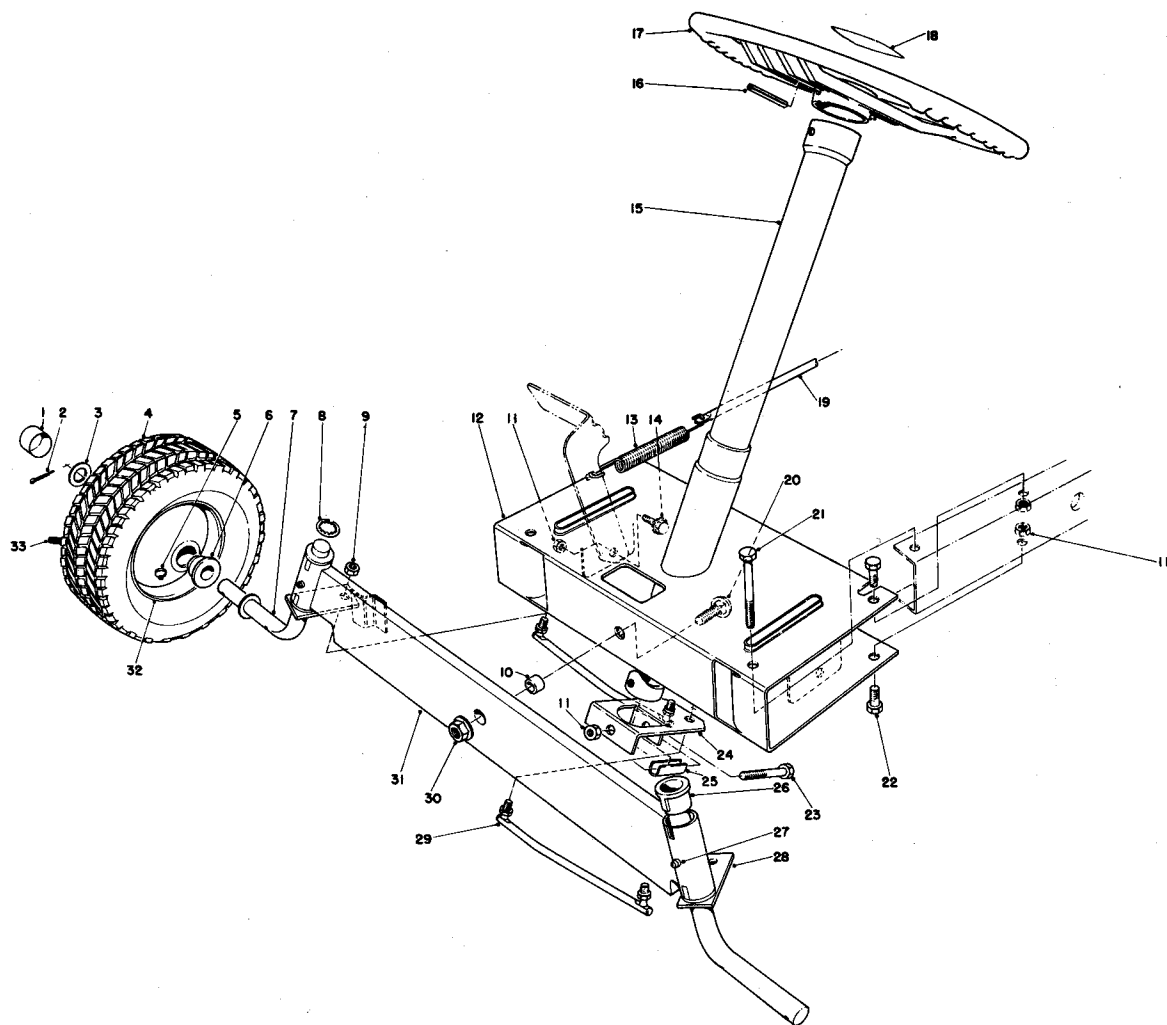

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	285-18	Hub Cap	2
2	3272-12	Cotter Pin	4
3	3256-27	Flat Washer	A/R
4	231-77	Tire Turf King	2
*	231-82	Tire Xtra Traction	2
5	302-5	Grease Fitting	2
6	256-170	Bushing	4
7	21-9830	Spindle R.H.	1
8	32151-40	Retaining Ring	2
9	32146-4	Locknut	4
10	19-1520	Spacer Front Axle	1
11	32152-1	Locknut	9
12	24-7420	Front Frame	1
13	26-2740	Brake Spring	1
14	19-1470	Shoulder Screw	2
15	24-7370	Steering Tube	1
16	32121-10	Roll Pin	1
17	12-7540	Steering Wheel	1


Ref. No.	Part No.	Description	No. Used
18	19-2010	Decal	1
19	26-5290	Brake Rod	1
20	3233-2	Carriage Bolt	1
21	322-14	Capscrew	2
22	322-2	Capscrew	4
23	322-11	Capscrew	1
24	21-9840	Steering Lever	1
25	19-1510	Steering Tube Spacer	1
26	19-1890	Bushing	4
27	302-49	Grease Fitting	2
28	21-9820	Spindle L.H.	1
29	21-9860	Tie Rod	2
30	32128-23	Flange Nut	1
31	25-2330	Front Axle	1
32	217-80	Rim	2
33	232-27	Valve Stem & Cap	2
*	232-36	Tube (Service Only)	2

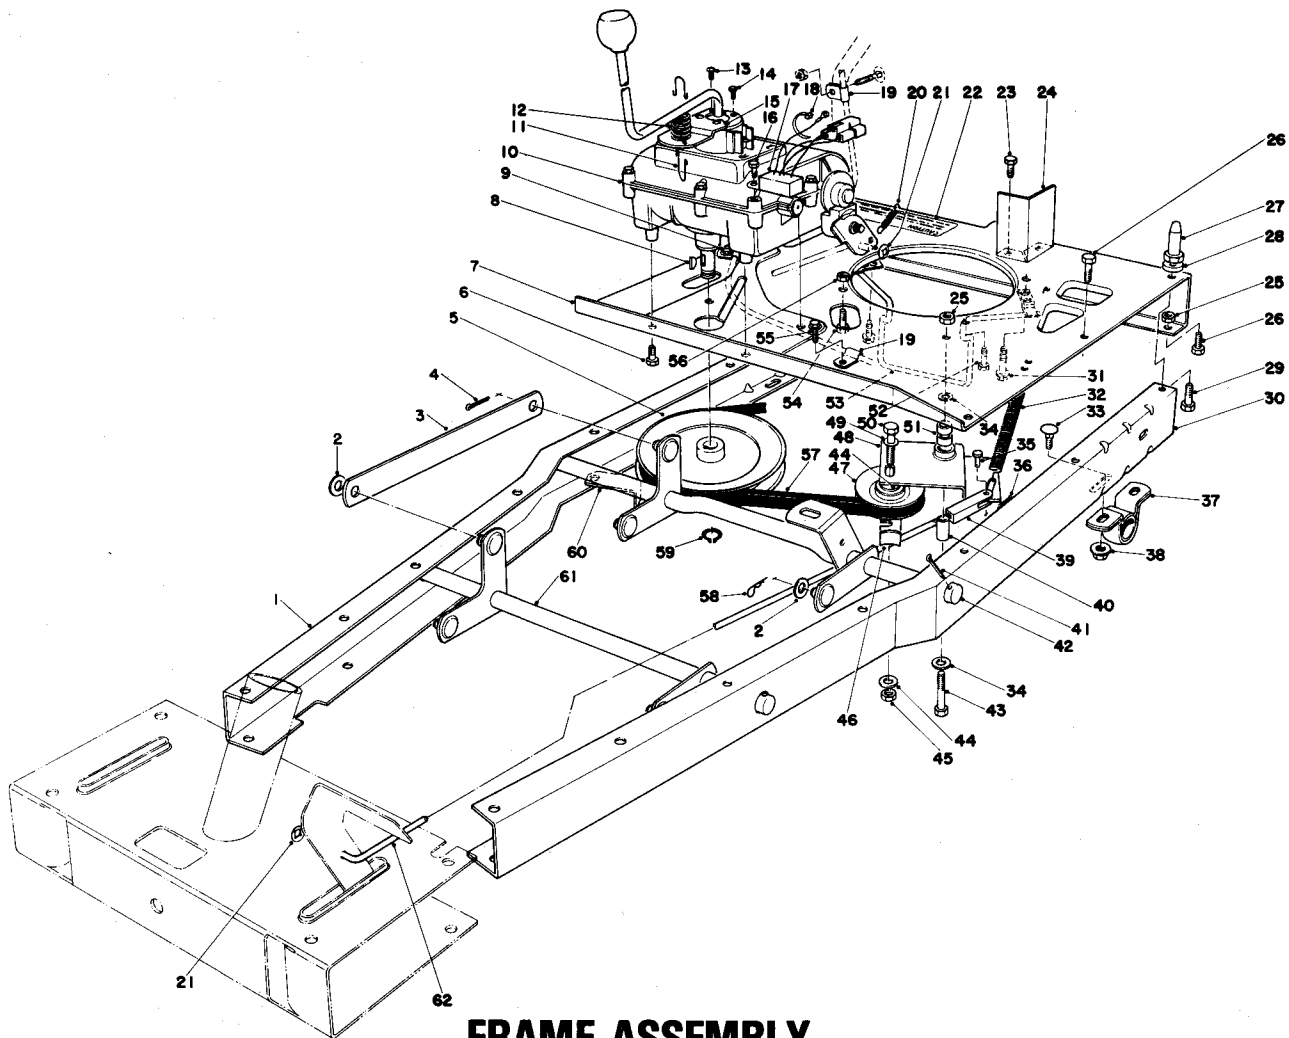 

FRAME ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	26-2650	Frame Channel R.H.	1
2	3256-26	Washer	5
3	17-9530	Linkage — Height Adjustment	1
4	3272-6	Cotter Pin	2
5	7-4085	Pulley	1
6	32140-61	Hex Hd. Sems Machine Screw	4
7	26-0470	Plate — Engine Mounting	1
8	3257-5	Woodruff Key	1
9	32144-15	Screw Thread Forming	1
10	26-5440	Transmission	1
11	25-4040	Neutral Spring Wire	2
12	25-4030	Compression Spring	1
13	3290-134	Machine Screw	3
14	2119-619	Screw	1
15	25-4050	Neutral Bracket	1
16	32104-117	Self Tapping Screw	1
17	28-4520	Control Module	1
18	3290-378	Cable Tie	1
19	18-2970	Clamp	4
20	26-6700	Brake Return Spring	1
21	3290-363	Speed Nut	2
22	19-5850	Decal — Neutral Caution	1
23	32104-110	Hex Hd. Screw	2
24	19-9880	Baffle — Carb	1
25	32152-1	Top Deform Locknut	12
26	322-2	Hex Hd. Capscrew	9
27	25-1530	Mounting Pin Lower	2
28	26-4840	Spacer Mounting Pin	2
29	322-4	Hex Hd. Capscrew	2
30	26-2640	Frame Channel L.H.	1
31	11-0590	Hex Hd. Thrd. Forming Capscrew	2


Ref. No.	Part No.	Description	No. Used
32	19-5340	Spring Tension Clutch	1
33	3231-30	Carriage Bolt	1
34	3256-23	Washer	4
35	283-3	Clevis Pin	1
36	3272-4	Cotter Pin	1
37	12-3340	Pillow Block	2
38	32128-21	Flange Nutt	4
39	282-17	Adjustment Yoke	1
40	26-2610	Spacer	1
41	3272-23	Cotter Pin	1
42	28-5690	Height Adjustment Rear	1
43	322-7	Hex Hd. Capscrew	1
44	3256-24	Washer	2
45	32153-2	Locknut	1
46	12-9020	Belt Retainer	1
47	12-5820	Idler Pulley	1
48	26-2830	Traction Idler (Incl. Ref. #51)	1
49	3256-46	Washer	1
50	323-8	Hex Hd. Capscrew	1
51	256-110	Bushing	2
52	32140-45	Hex Hd. Sems Screw	1
53	26-5740	Belt Guide — Engine	1
54	322-17	Capscrew	1
55	12-3270	Screw Thd. Forming	2
56	32128-25	Locknut	1
57	19-2650	V-Belt (Engine to Transmission)	1
58	3290-250	Hair Pin Cotter	4
59	32120-64	Retaining Ring	1
60	17-2230	Belt Retainer	1
61	17-9890	Height Adjustment Front	1
62	28-4550	Clutch Rod	1

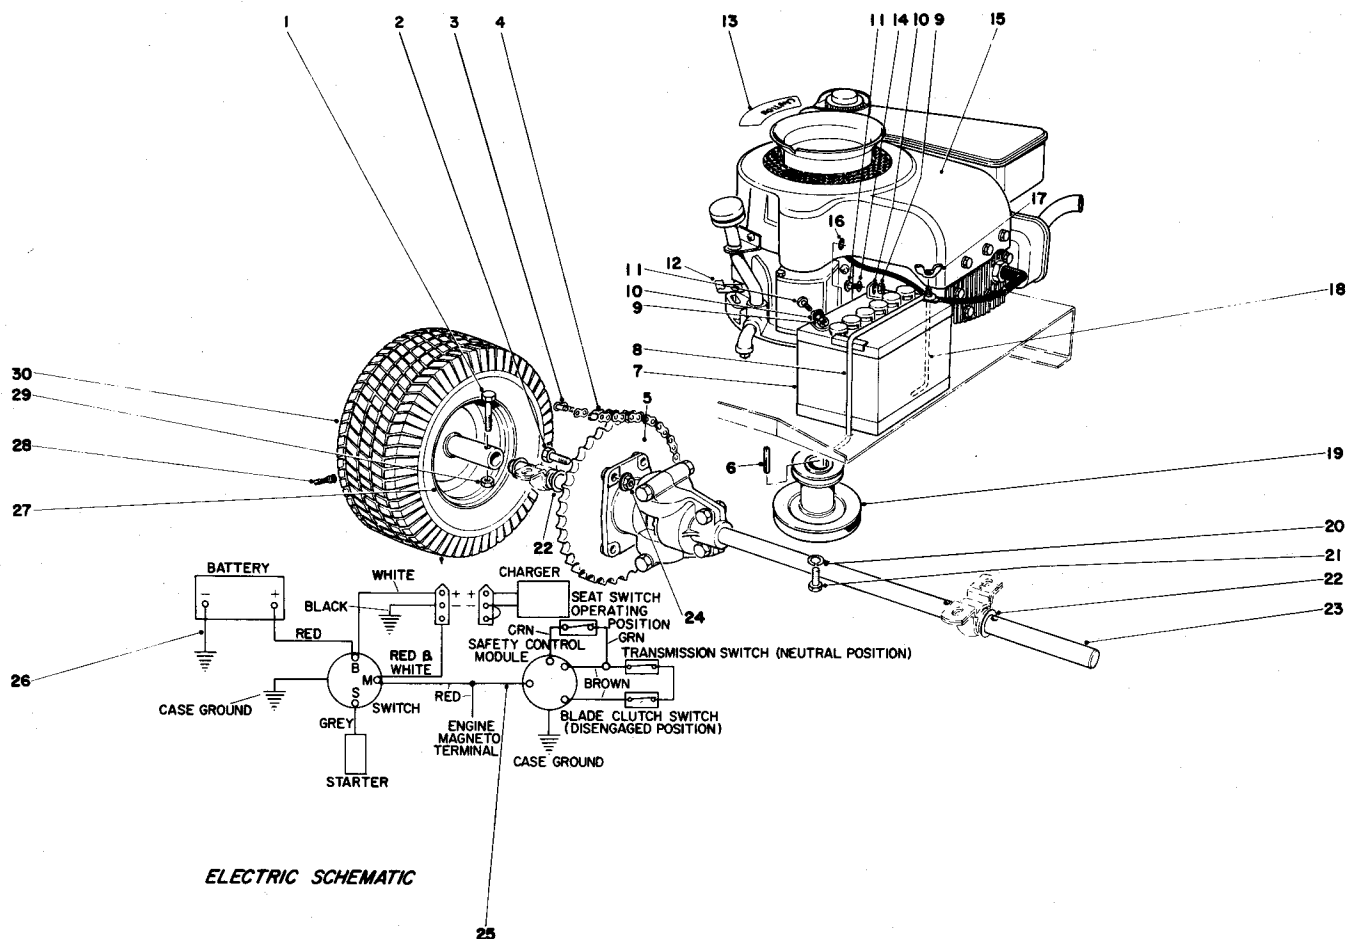 

ENGINE AND AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-9	Hex Hd. Capscrew	2
2	322-5	Hex Hd. Capscrew	4
3	2710-6	Connecting Link	1
4	26-2860	Chain Roller (Incl. Ref. #3)	1
5	12-1940	Sprocket Differential	1
6	3-0971	Square Key	1
7	26-7290	Battery	1
8	12-5700	Battery Clamp	1
9	3217-5	Nut	2
10	3253-3	Lockwasher	2
11	321-4	Capscrew	2
12	7-0077	Clip - Cable	1
13	20-8270	Decal - Engine Shroud	1
14	3256-22	Washer	1
15	221-534	Engine	1
16	3255-7	Washer - Ext.	1
17	32103-14	Wing Nut	1


Ref. No.	Part No.	Description	No. Used
18	12-5950	Support Rod - Battery	1
19	26-6850	Engine Pulley	1
20	3253-21	Lockwasher	1
21	3211-36	Hex Hd. Capscrew	1
22	11-4930	Washer	A/R
23	11-1800	Differential	1
24	32152-1	Locknut	4
25	28-4540	Wiring Harness	1
26	7-7630	Wire Assembly	1
27	241-110	Wheel Rim	2
28	232-27	Valve Stem and Cap	2
29	32152-2	Locknut	2
30	231-81	Tire Xtra Traction	2
*	231-67	Tire Turf King	2
*	232-36	Tube (Service Only)	2
*	7-6580	Battery Charger	1
*	28-4420	Loose Parts Bag	1

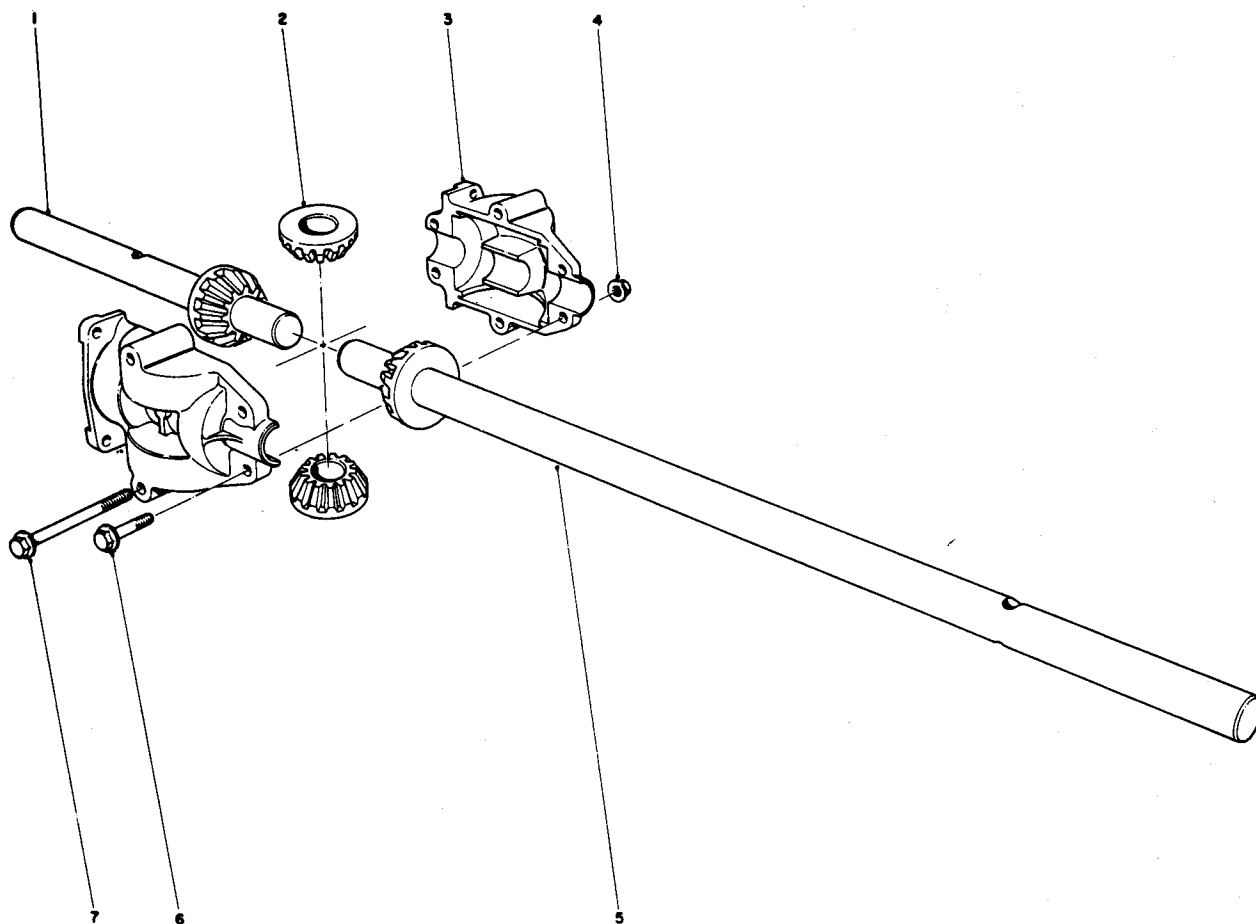 

DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2119-534	Axle Short Shaft	1
2	2119-535	Miter Gear	2
3	2119-532	Housing Half	2
4	32128-16	Locknut	6

Ref. No.	Part No.	Description	No. Used
5	2119-530	Axle Long Shaft	1
6	2119-531	Bolt, Short	4
7	2119-533	Bolt, Long	2

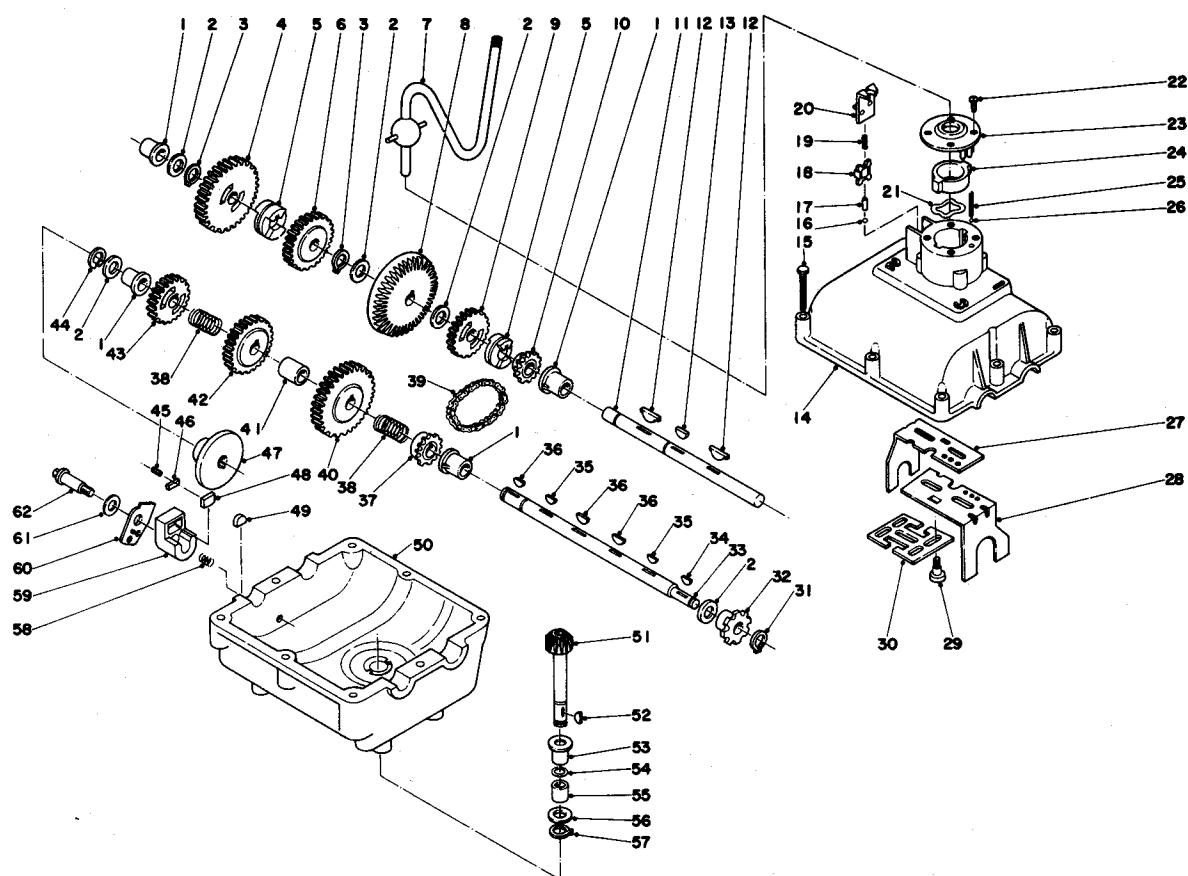 


TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	2119-458	Flange Bearing	4
2	2119-625	Washer Kit	1
3	2119-554	Retaining Ring	2
4	2119-611	Spur Gear 30T	1
5	2119-461	Clutch Collar	2
6	2119-465	Spur Gear 25T	1
7	2119-627	Shift Lever	1
8	2119-474	Bevel Gear 42T	1
9	2119-475	Spur Gear 20T	1
10	2119-476	Sprocket 12T	1
11	2119-613	Drive Shaft	1
12	2119-484	Hi Pro Key	2
13	2119-468	Woodruff Key	1
14	2119-616	Upper Housing	1
15	2119-489	Hex Hd. Capscrew	8
*	2119-621	Switch Kit Assembly (Incl. Ref. # 16 - 20)	1
16		Ball Detent	1
17		Actuating Pin	1
18		Carrier Contact Assembly	1
19		Compression Spring	1
20		Terminal Board	1
21	2119-492	Wave Washer	1

Ref. No.	Part No.	Description	No. Used
22	2119-619	Screw	1
23	2119-618	Nylon Cover	1
24	2119-493	Nylon Insert	1
25	2119-617	Detent Spring	2
26	2119-490	Detent Ball	2
27	2119-615	Shifter Fork R.H.	1
28	2119-487	Shifter Fork L.H.	1
29	2119-486	Shoulder Screw	4
30	2119-485	Lock-Out Plate	1
31	2119-606	Retaining Ring	1
32	2119-453	Sprocket 8T	1
33	2119-482	Output Shaft	1
34	2119-479	Woodruff Key	1
35	2119-480	Woodruff Key	2
36	2119-481	Woodruff Key	3
37	2119-478	Sprocket 12T	1
38	2119-462	Spring Compression	2
39	2119-477	Chain	1
40	2119-467	Spur Gear 30T	1
41	2119-466	Spacer	1
42	2119-464	Spur Gear 25T	1
43	2119-459	Spur Gear 20T	1
44	2119-550	Retaining Ring	1

 *Not Illustrated

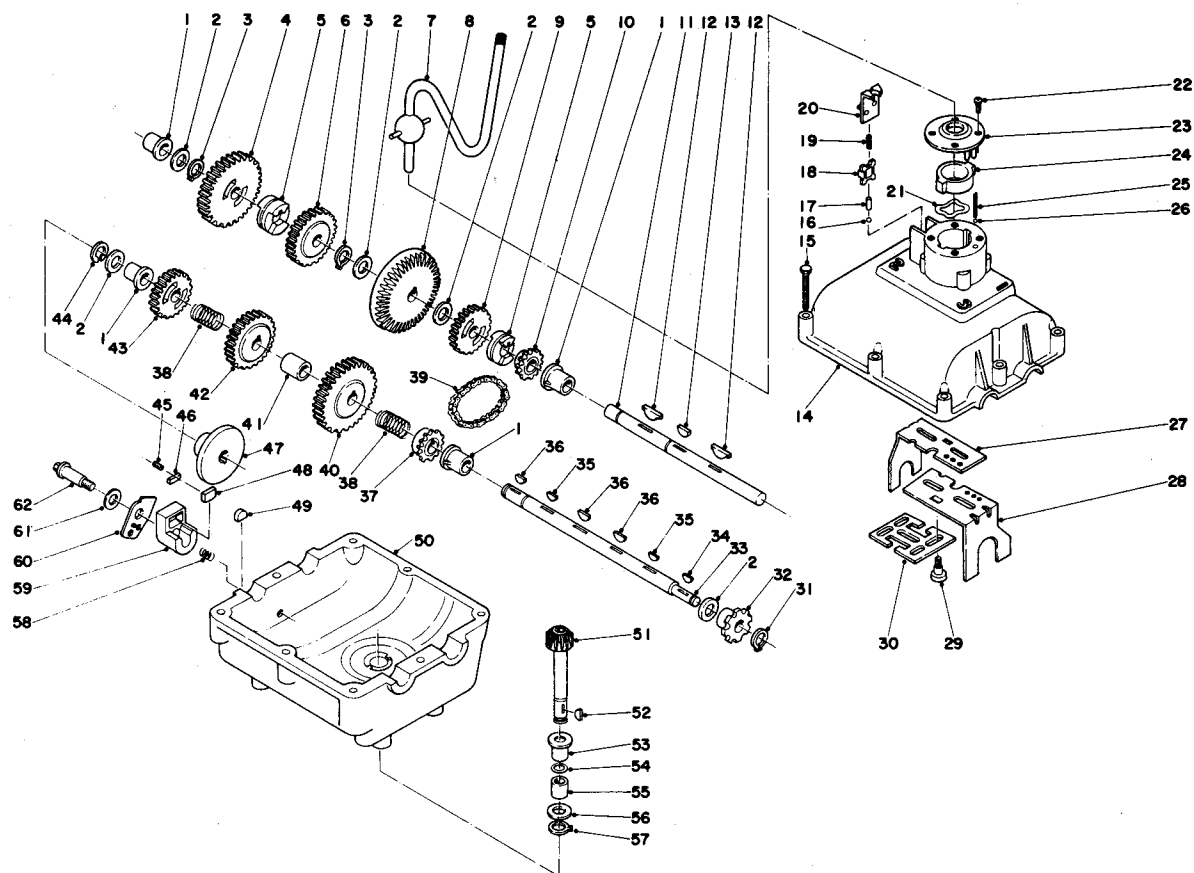


TRANSMISSION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	2119-588	Set Screw	1
46	2119-608	Spacer	1
47	2119-562	Disc Brake	1
48	2119-601	Friction Puck	1
49	2119-563	Friction Puck	1
50	2119-612	Lower Housing	1
*	2119-614	Input Shaft Assembly (Incl. Ref. #51 - 57)	1
51		Input Shaft	1
52		Woodruff Key	1
53		Flange Bearing	1

Ref. No.	Part No.	Description	No. Used
54		Washer	1
55		Bushing	1
56		Washer	1
57		Retaining Ring	1
58	2119-564	Compression Spring	1
59	2119-594	Brake Jaw	1
60	2119-628	Actuating Lever L.H.	1
61	2119-589	Washer Kit	1
62	2119-558	Shoulder Bolt	1
*	2119-603	Brake Service Kit (Incl. Ref. # 46 & 48-49 & 51)	1

 
*Not Illustrated

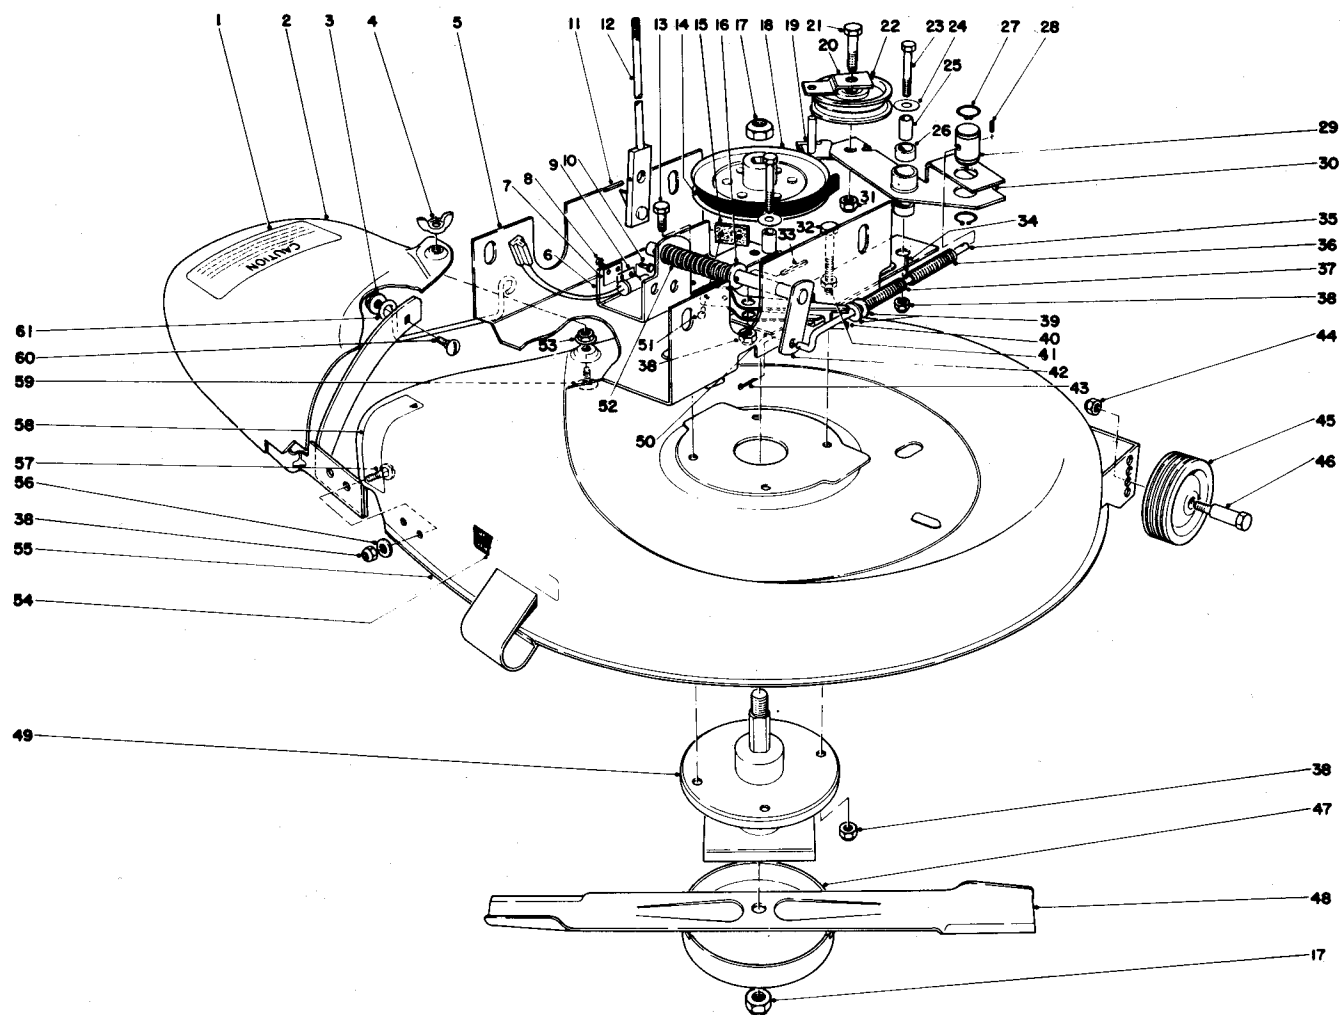

25" MOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	12-2890	Decal Deflector Caution	1
2	24-6730	Deflector	1
3	32128-10	Flange Nut	2
4	3-2625	Wing Nut	1
5	18-8210	Channel Height Adjustment	1
6	26-5150	Mounting Bracket Blade	1
7	26-5320	Spacer Switch	1
8	32149-7	Keps Nut	2
9	28-4450	Switch Interlock	1
10	3290-134	Screw	2
11	32121-93	Spiral Pin	1
12	26-4460	Lever Deck Engagement	1
13	322-4	Capscrew	3
14	26-2770	V-Belt (Engine to Deck)	1
15	7-0643	Brake Lining Blade	1
16	3256-26	Washer Flat	1
17	17-0980	Nut Special	2
18	26-4020	Pulley Deck	1


Ref. No.	Part No.	Description	No. Used
19	28-4460	Belt Retainer	1
20	28-4480	Belt Retainer Upper	1
21	323-9	Capscrew	1
22	7-4660	Flat Idler	1
23	322-7	Capscrew	2
24	3256-23	Washer	2
25	26-2610	Spacer Pivot	2
26	256-110	Bushing	2
27	32120-93	Snap Ring	2
28	32121-73	Roll Pin	1
29	26-2580	Pivot Pin	1
30	28-6450	Idler Arm (Incl. Ref. # 26)	1
31	32153-2	Locknut	1
32	322-12	Capscrew	1
33	32121-45	Roll Pin	1
34	32121-50	Roll Pin	1
35	26-5500	Rod Blade Engage	1
36	26-4800	Spring Deck Idler	1

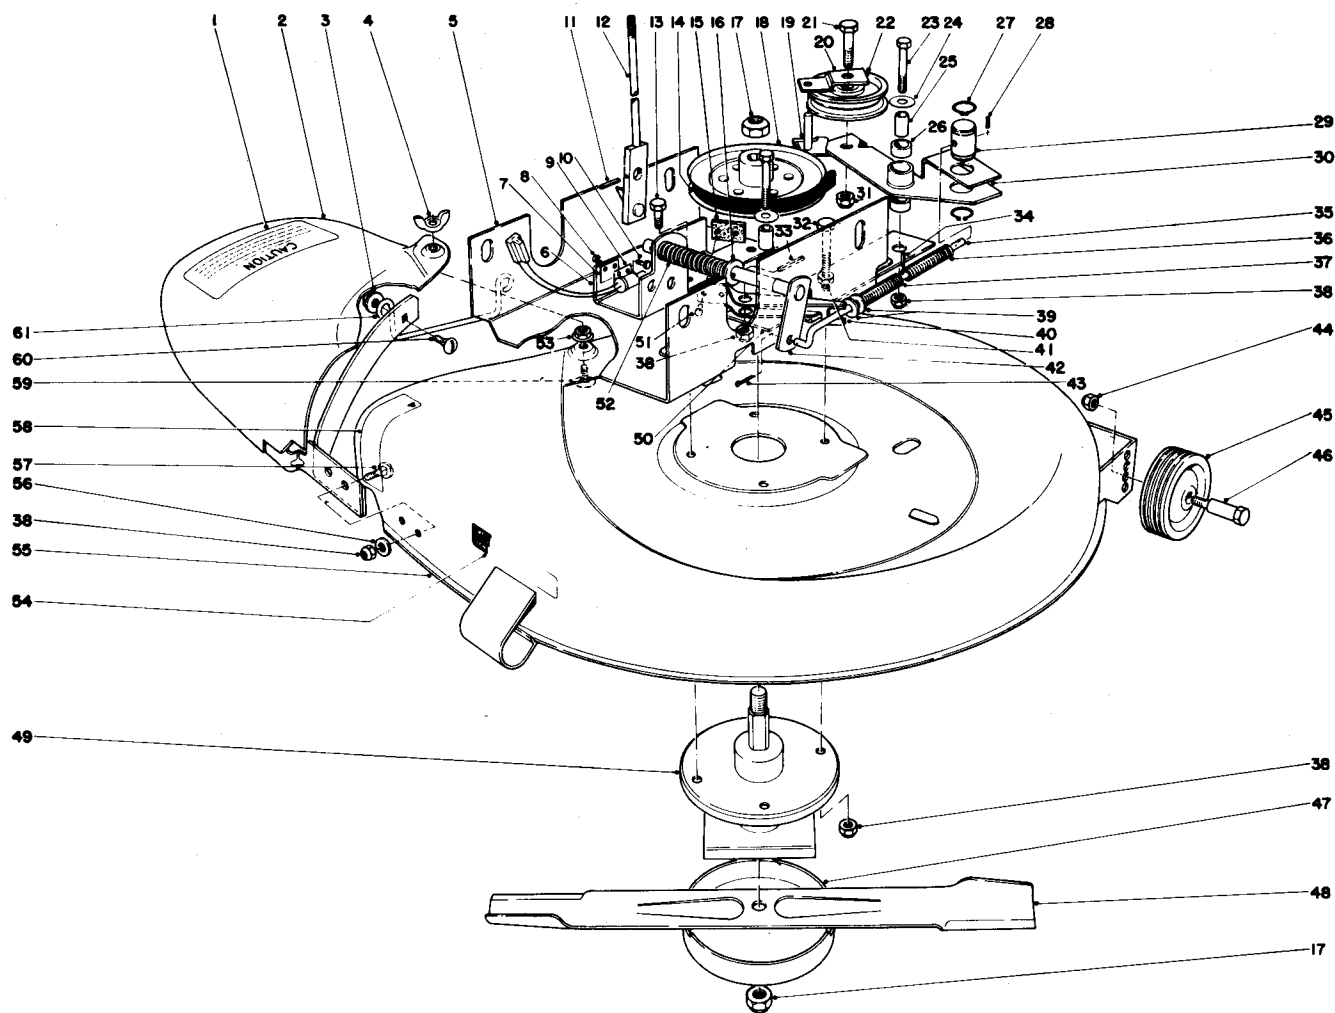 

25" MOWER ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
37	26-4810	Spring Deck Brake	1
38	32152-1	Locknut	8
39	5-1350	Washer	2
40	19-5980	Blade Brake (Incl. Ref.#15&51)	1
41	3218-2	Jam Nut	1
42	17-9960	Linkage Blade Engagement	1
43	3272-6	Cotter Pin	1
44	32146-12	Locknut	2
45	11-1580	Wheel	2
46	3-2652	Shoulder Bolt	2
47	7-3522	Anti-Scalp Cup	1
48	26-8060	Blade	1
49	19-2140	Mower Spindle Assembly	1


Ref. No.	Part No.	Description	No. Used
50	17-9540	Bracket Idler Mounting	1
51	3295-25	Rivet	2
52	19-1930	Spring	1
53	3290-147	Palnut — Washer Type	1
54	26-4820	Decal — Deck Instructions	1
55	24-6700	Housing	1
56	3256-3	Washer	2
57	3230-2	Carriage Bolt	2
58	25-5810	Decal Housing	1
59	26-0430	Elevator Bolt	1
60	3229-22	Carriage Bolt	2
61	17-0960	Bracket Foot Guard	1

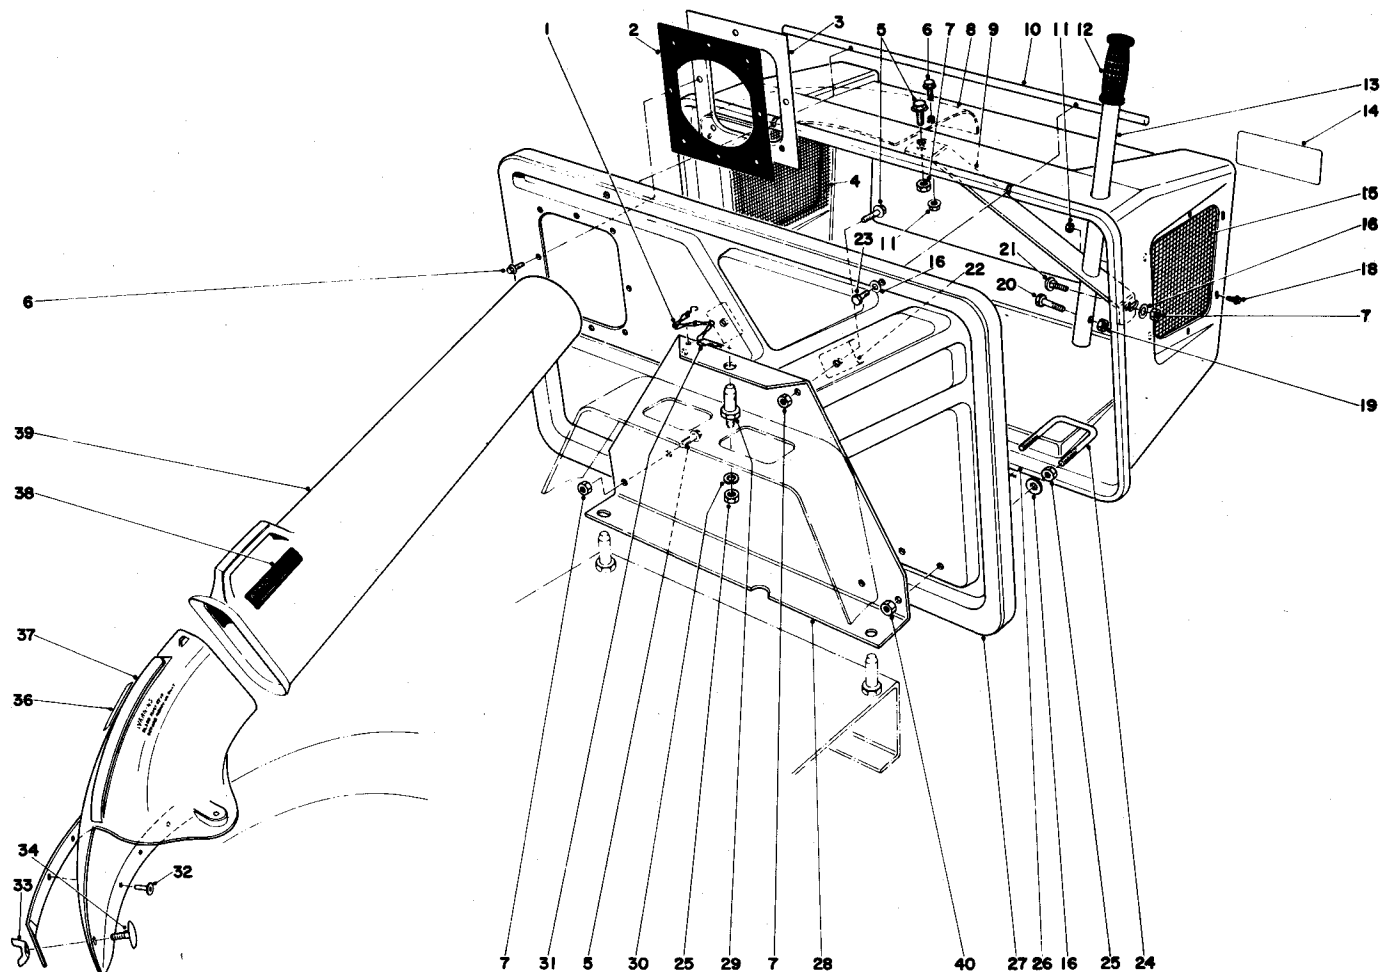 

EASY-EMPTY GRASS CATCHER MODEL 59046 (OPTIONAL)

Ref. No.	Part No.	Description	No. Used
1	2830-9	Chain	1
2	25-1410	Seal — Inlet	1
3	25-1420	Frame Seal	1
4	25-1300	Screen	1
5	3234-5	Hex Head Flange Capscrew	4
6	12-5450	Screw Thread Forming	10
7	32153-3	Locknut	5
8	25-1470	Deflector	1
9	25-1390	Guide — Handle	1
10	25-1360	Rod Pivot	1
11	32128-17	Locknut	14
12	233-40	Handle Grip	1
13	25-1380	Handle Tube	1
14	25-2200	Decal — Easy Empty Bagger	1
15	26-0010	Screen	1
16	3256-2	Plain Washer	5
18	3290-126	Ind. Hex Washer Head Machine Screw	12


Ref. No.	Part No.	Description	No. Used
19	32153-4	Locknut	1
20	321-8	Capscrew	1
21	3230-15	Carriage Bolt	1
22	25-3980	Retainer	2
23	321-30	Hex Head Capscrew	2
24	25-1370	Latch	1
25	3217-6	Hex Nut	3
26	25-1290	Hopper	1
27	25-1330	Cap	1
28	25-1430	Plate — Mounting	1
29	25-1510	Mounting Pin Upper	1
30	3253-4	Spring Lockwasher	1
31	3290-290	Hair Pin Cotter	1
32	3290-402	Pop Rivet	3
33	32103-2	Wing Nut	1
34	3290-391	Step Bolt	1
36	26-7030	Decal — Chute	1

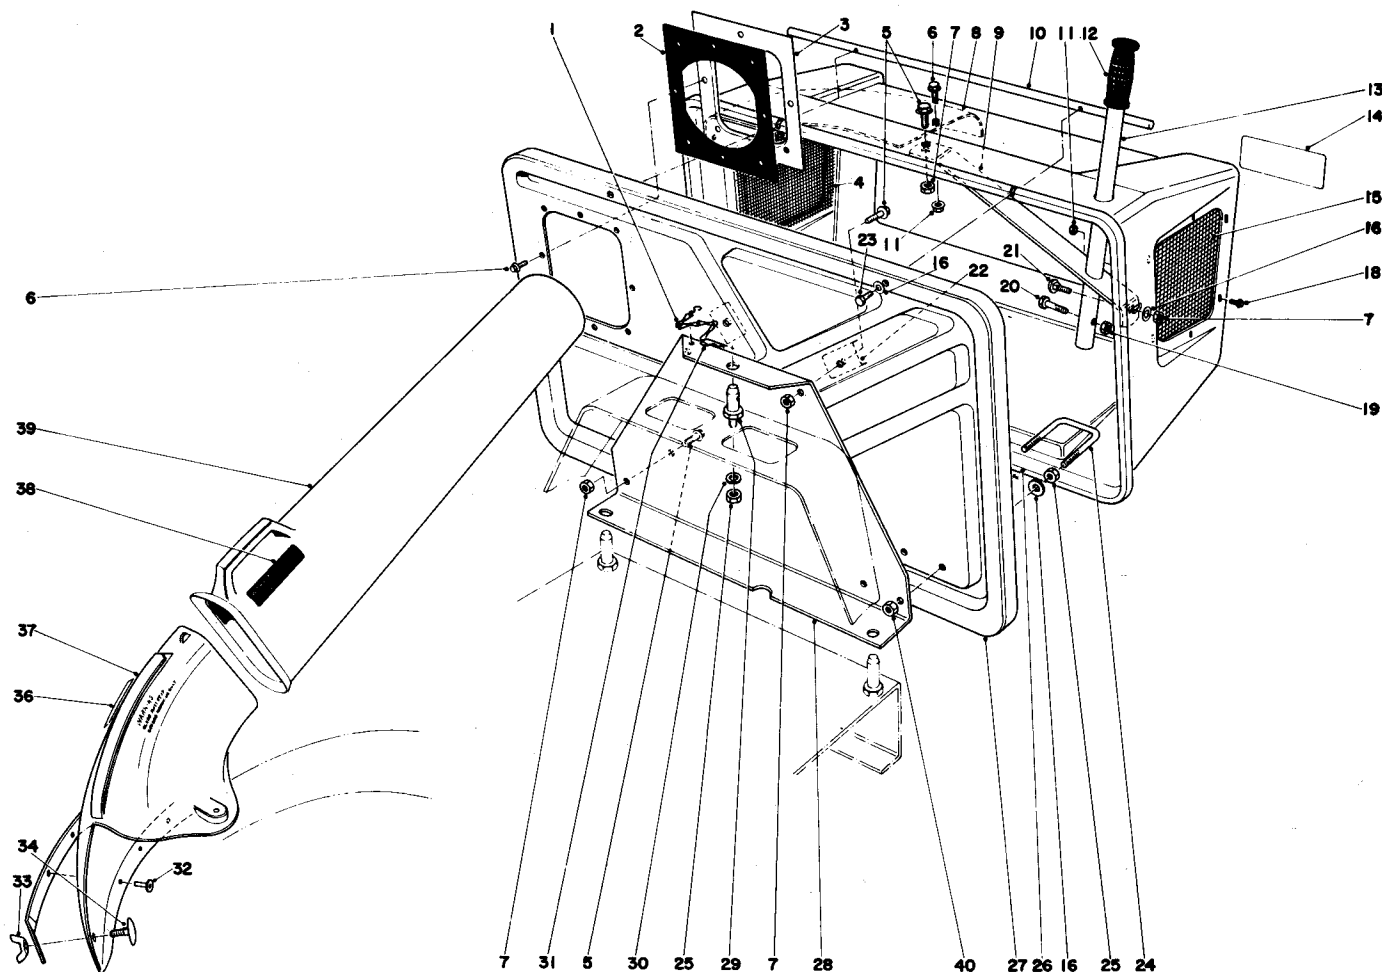 

EASY-EMPTY GRASS CATCHER MODEL 59046 (OPTIONAL) (Continued)

Ref. No.	Part No.	Description	No. Used
37	26-7160	Chute Assembly (Incl. Ref. # 32 & 35 - 36)	1
38	25-3600	Decal - Duct	1

Ref. No.	Part No.	Description	No. Used
39	25-3610	Duct Assembly (Incl. Ref.#38)	1
40	3296-29	Locknut	2

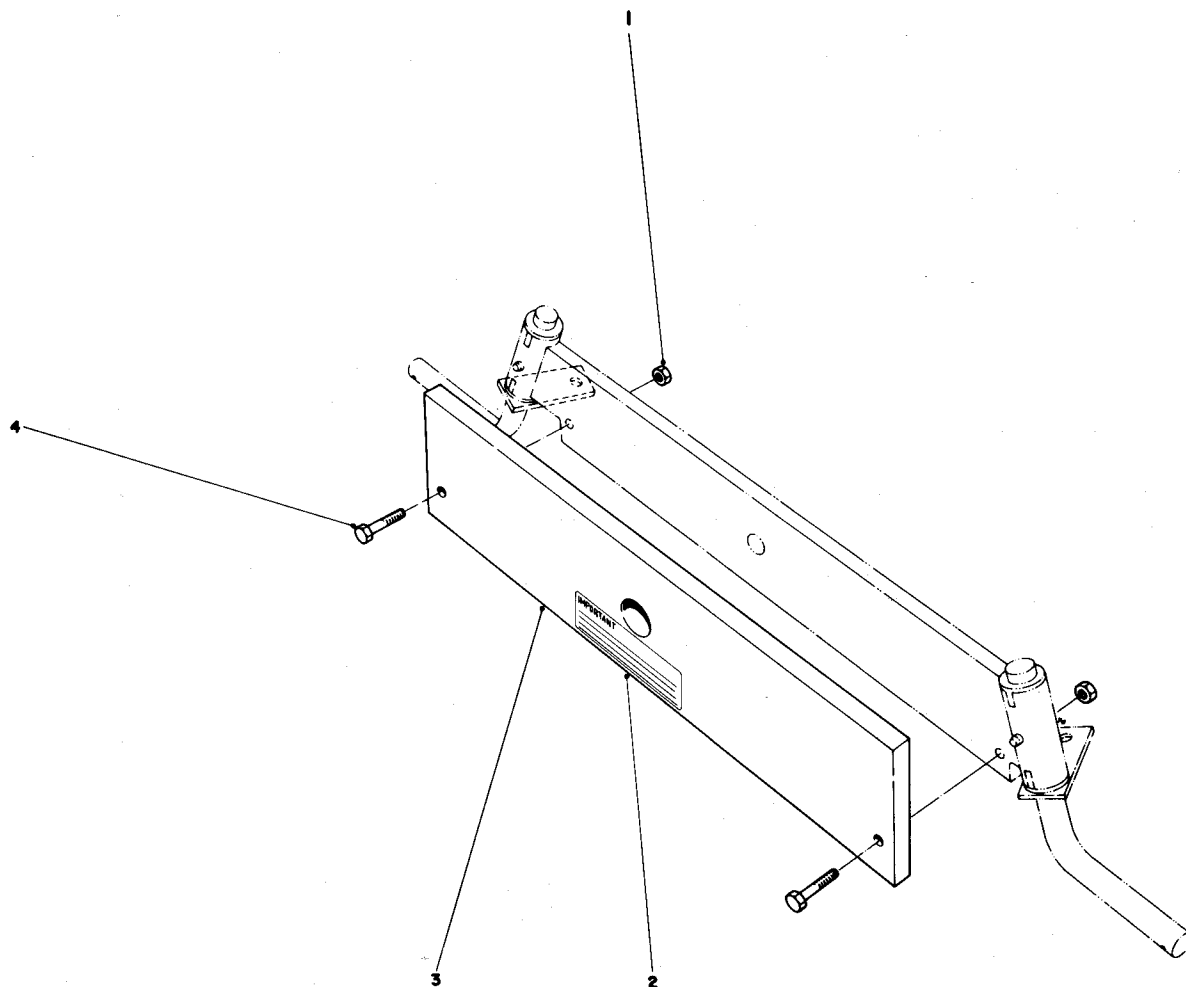 

Ref. No.	Part No.	Description	No. Used
1	32152-4	Locknut	2
2	26-4830	Decal Instructions	1
3	25-3030	Counterweight	1

Ref. No.	Part No.	Description	No. Used
4	321-9	Capscrew	2
*	26-9010	Loose Parts	1


*Not Illustrated

1



TECUMSEH ENGINE MODEL NO. V70-125183C

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	34172	Cylinder Assy. (Incl. Nos. 2, 4 & 44)	1	66	610118	Cover, Spark Plug	1
2	27652	Pin, Dowel	2	69	650372	Screw, Hex Hd. Sems	2
4	32630	Seal, Oil	1	82	32181	Control Assy., Speed (Incl. Nos. 161 & 162)	1
5	32783	Valve, Intake (Std.) (Incl. No. 9)	1	83	30200	Screw, Hex Hd. Self-Tap Sems	2
5	32784	Valve, Intake (1/32" Oversize) (Incl. No. 9)	1	84	*27272	Gasket, Air Cleaner Bracket-To-Carburetor	1
6	27878A	Valve, Exhaust (Std.) (Incl. No. 9)	1	87	31691	Bracket, Air Cleaner	1
6	27880A	Valve, Exhaust (1/32" Oversize) (Incl. No. 9)	1	88	28820	Screw, Phil. Fil. Hd. Mach. Sems	2
7	27882	Cap, Upper Valve Spring	2	89	30727	Element, Air Cleaner	1
8	27881	Spring, Valve	2	90	31692	Body, Air Cleaner	1
9	32581	Cap, Lower Valve Spring	2	91	*27930	Gasket, Exhaust	1
10	34173	Plate, Lock	1	92	391023	Muffler	1
11	32638	Crankshaft Assy. (Incl. Nos. 12 & 13)	1	93	650696	Screw, Hex Hd. Cap	2
12	29783	Pin, Crankshaft Gear	1	94	34105	Bracket, Blower Housing	1
13	27884	Gear, Crankshaft	1	96	650561	Screw, Phil. Hex Hd. Sems	2
14	32592	Piston & Pin Assy. (Incl. 2 of No. 16) (Std.)	1	98	32589	Key, Flywheel	1
14	32593	Piston & Pin Assy. (Incl. 2 of No. 16) (.010 Oversize)	1	99	28277	Washer, Flat	1
14	32594	Piston & Pin Assy. (Incl. 2 of No. 16) (.020 Oversize)	1	101	650489	Screw, Hex Hd. Sems	2
15	32595	Ring Set, Piston (Std.)	1	102	31823	Link, Throttle	1
15	32596	Ring Set, Piston (.010 Oversize)	1	103	31361	Spring, Governor	1
15	32597	Ring Set, Piston (.020 Oversize)	1	104	30669	Rod, Governor (Incl. No. 99)	1
16	27888	Ring, Piston Pin Retaining	2	105	32582	Link, Governor Spring	1
17	32591C	Rod Assy., Connecting (Incl. Nos. 10 & 18)	1	106	31357	Lever, Governor	1
18	650662	Screw, Hex Hd.	2	108	30688	Screw, Hex Hd. Cap Sems	4
21	34034	Lifter, Valve	2	109	31707	Spacer, Governor Gear	1
22	32114	Camshaft (Mech. Comp. Release)	1	110	30668	Shaft, Mechanical Governor	1
23	*30684	Gasket, Mounting Flange	1	111	30591	Gear Assy., Governor	1
24	31471B	Flange Assy., Mounting (Incl. Nos. 25, 27, 29, 34, 45 & 110)	1	112	29193	Ring, Retaining	2
25	31355	Screen, Oil Filter	1	113	30588A	Spool, Governor	1
27	29117	Screw, Slotted Hex Hd. Self-Tap	1	114	27793	Clip, Conduit	1
28	31356	Pump Assy., Oil	1	115	28942	Screw, Hex Hd. Slotted Sems	1
29	27642	Plug, Pipe Sq. Hd.	1	116	31588	Plate, Muffler Locking	1
34	27897	Seal, Oil	1	117	30622	Extension, Blower Housing	1
35	650548	Screw, Hex Slotted Washer Hd.	1	118	31752	Decal, Air Cleaner	1
36	31335	Clamp, Governor Lever	1	119	650128	Screw, Fil. Slotted Hd. Sems	1
39	650488	Screw, Hex Hd. Sems	7	121	30688	Screw, Hex Hd. Cap Sems	1
44	34165	Dipstick, Oil (Incl. No. 45)	1	122	27275	Clip, Hi-Tension Wire	2
45	*29673	Gasket, Oil Filler	1	123	650490	Washer, Belleville	1
46	29573	Elbow, 90° Street	1	124	8116	Nut, Hex	1
47	*32631	Gasket, Cylinder Head	1	126	32926	Tank Assy., Fuel (Incl. No. 127)	1
48	30938A	Head, Cylinder	1	127	32387A	Cap, Fuel	1
49	30939A	Cover, Cylinder Head	1	128	28301	Hub & Screen Assy., Starter	1
51	650697	Screw, Hex Hd. Cap	8	129	590343	Rope & Handle, Starter	1
52	34251	Resistor Spark Plug (Canada Reg. req. RJ-17LM Resistor Plug)	1	131	29747A	Screw, Hex Hd. Sems Cap	2
53	*27896	Gasket, Valve Chamber Cover	2	134	29774	Line, Fuel	1
54	28423	Body Assy., Breather	1	135	33549	Clamp, Tank Holdown	1
55	28424	Element, Breather	1	138	31865	Decal, Name & Instruction	1
56	28425	Cover, Valve Chamber	1	143	32629A	Housing, Blower	1
57	27627	Tube, Breather	1	148	33548	Deflector, Fuel	1
59	650128	Screw, Fil. Slotted Hd. Sems	2	159	610683	Wire, Ground	1
60	*27915	Gasket, Intake Pipe	1	161	31342	Spring, Compression	1
61	32632	Pipe, Intake	1	162	650549	Screw, Speed Adjustment Fil. Slotted Hd. Mach.	1
63	650152	Screw, Fil. Slotted Hd. Sems	2	163	610694A	Magneto (The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.)	1
64	650378	Screw, Fil. Hd. Sems	2	164	631449	Carburetor (Incl. No. 65)	1
65	*26756	Gasket, Carburetor	1	165	33606	Motor, Starter	1
				166	33239	Gasket Set (Incl. Items Marked*)	1

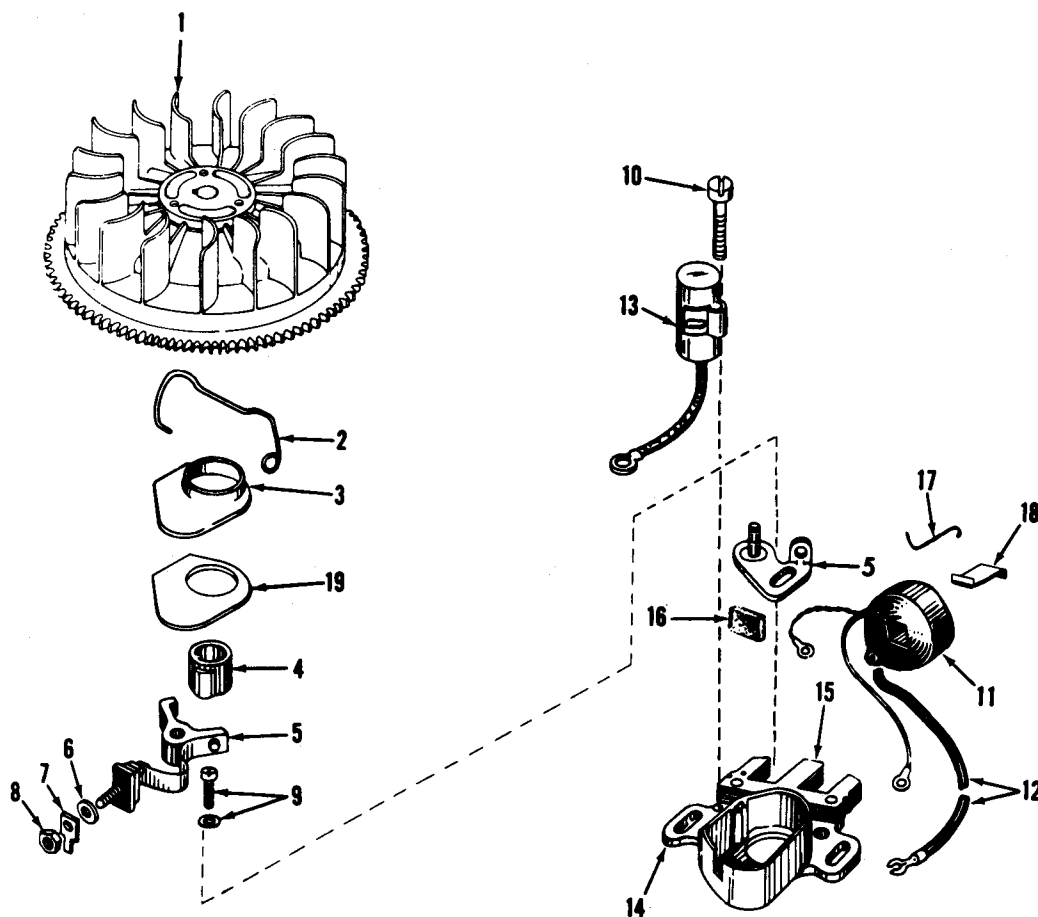 


MAGNETO NO. 610694A*

Ref. No.	Part No.	Description	No. Used
1	30811	Flywheel	1
2	30551	Spring, Breaker Box	1
3	30550	Cover, Breaker Box Dust	1
4	30992	Cam, Breaker	1
5	30547A	Contact Assembly, Breaker	1
6	610385	Washer, Terminal	1
7	33356	Tab, Ground Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer, Breaker	1
10	610593	Screw, Condenser Fastening	1


Ref. No.	Part No.	Description	No. Used
11	30560A	Coil Assy., (Incl. # 12)	1
12	30554	Wire, Lead	1
13	30548A	Condenser	1
14	30545	Core & Plate	1
15	30561A	Stator Assembly, (Incl. # 2, 3, 5 thru 14 & 16 thru 19)	1
16	30549	Felt, Cam Wiper	1
17	31311	Clip, Coil Locking	1
18	29629	Spring, Coil Wedge	1
19	33695	Gasket, Dust Cover	1

 *The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

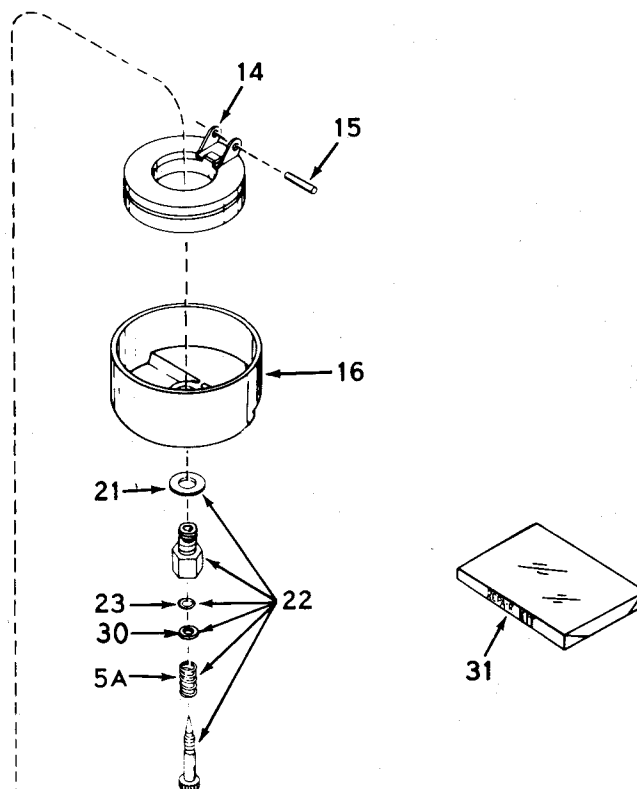

Ref. No.	Part No.	Description	No. Used
1	31834	Shaft & Lever Assy., Throttle	1
2	631279	Spring, Throttle Return	1
3	631036	Shutter, Throttle	1
4	650506	Screw, Rd. Hd.	2
5	630766	Spring, Idle Regulating Screw	2
5A	630738	Spring, Main Adjustment Screw	1
6	650417	Screw, Idle Regulating	1
7	630973	Shaft & Lever Assy., Choke	1
8	630821	Spring, Choke Return	1
9	631037	Shutter, Choke	1
10	*630748	Plug, Welch	1
11	*631027	Plug, Welch	1
12	*631021	Inlet Needle, Seat & Clip Assy. (Incl. No. 13)	1

 17

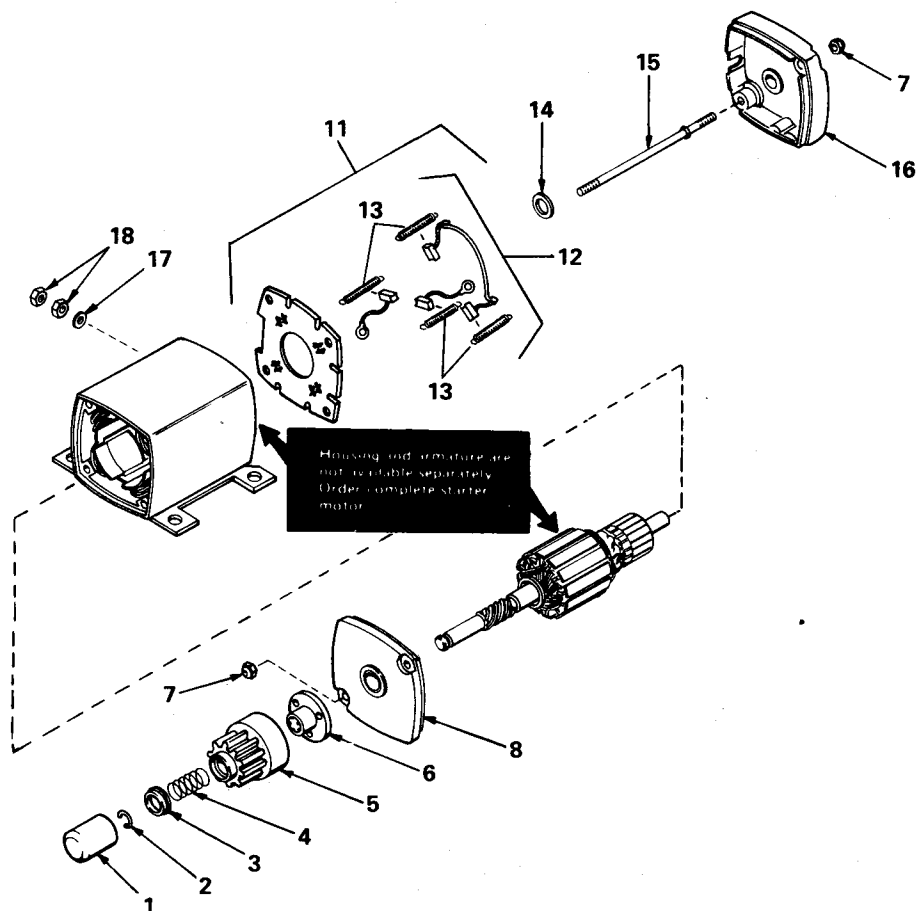

12 VOLT ELECTRIC STARTER NO. 33606

Ref. No.	Part No.	Description	No. Used
1	33451	Cover, Dust	1
2	33842	Ring, Retainer	1
3	33430	Retainer, Spring	1
4	33431	Spring, Anti-Drift	1
5	33432	Gear	1
6	33433	Nut, Engaging	1
7	33450	Nut, Lock	4
8	33434	Cap Assy., Drive End	1
11	33712	Card Assy., Brush (Incl. No. 12)	1

Ref. No.	Part No.	Description	No. Used
12	33705	Brush & Spring Kit (Incl. 4 pcs. of No. 13)	1
13	33440	Spring, Brush	4
14	590500	Washer, Thrust	1
15	33449	Bolt	2
16	33706	Cap Assy., Commutator End	1
17	650168	Washer, Flat	1
18	650723	Nut, Hex	2

The Toro Promise

A One Year Limited Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product	1 Year
Residential Products Used Commercially	45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on top left hand side of engine mounting plate adjacent to left rear wheel. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

[illegible]