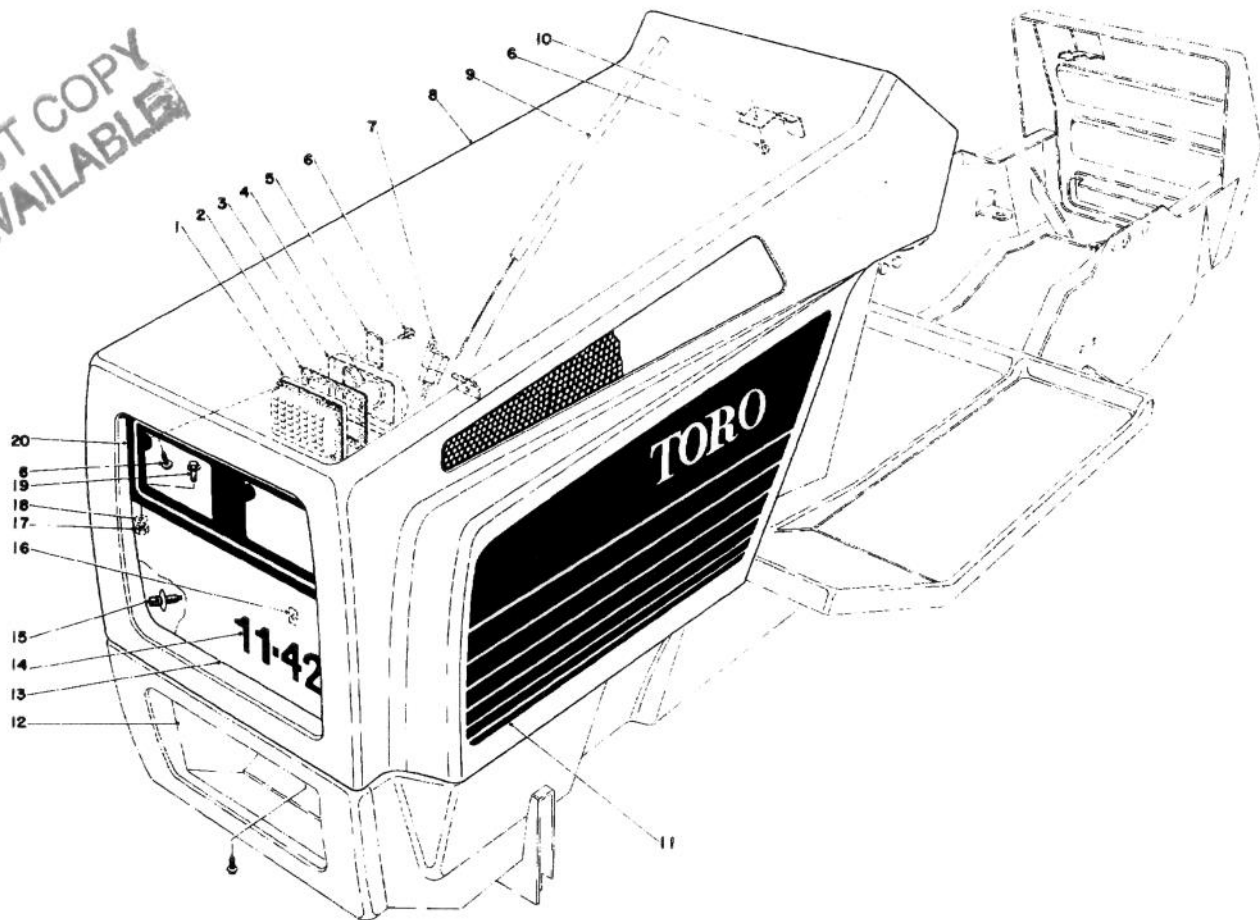


TORO

MODEL NO. 57356 — 8000001 & UP

**PARTS
CATALOG****1142 FRONT ENGINE RIDER**


ELECTRIC START

**HOOD ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	219-14	Lens	2
2	219-13	Lens Gasket	4
3	219-12	Reflector Assembly	2
4		Bulb GE #1156	2
5	28-0050	Clamp Headlight	3
6	32104-76	Self Tapping Screw	14
7	218-493	Connector Body	1
8	36-5330	Hood	1
9	28-3810	Rubber Extrusion Seal	2
10	27-9130	Spring Latch	1
11	28-4230	Decal Hood L.H.	1
*	28-4240	Decal Hood R.H.	1

Ref. No.	Part No.	Description	No. Used
12	28-0010	Grille Lower	1
13	36-2090	Grille Headlight	1
14	36-2660	Name Plate — Grille	1
15	27-9120	Stud Hinge Bracket	4
16	3290-299	Tinnerman Nut	2
17	32153-1	Locknut	2
18	3256-21	Washer	2
19	3290-144	Hex Hd. Machine Screw	2
20	28-0040	Panel Headlight	1
*	28-3880	Headlight Assy. (Incl. Ref. #1-4)	2
*	8-1539	Loose Parts Bag	1


*Not Illustrated

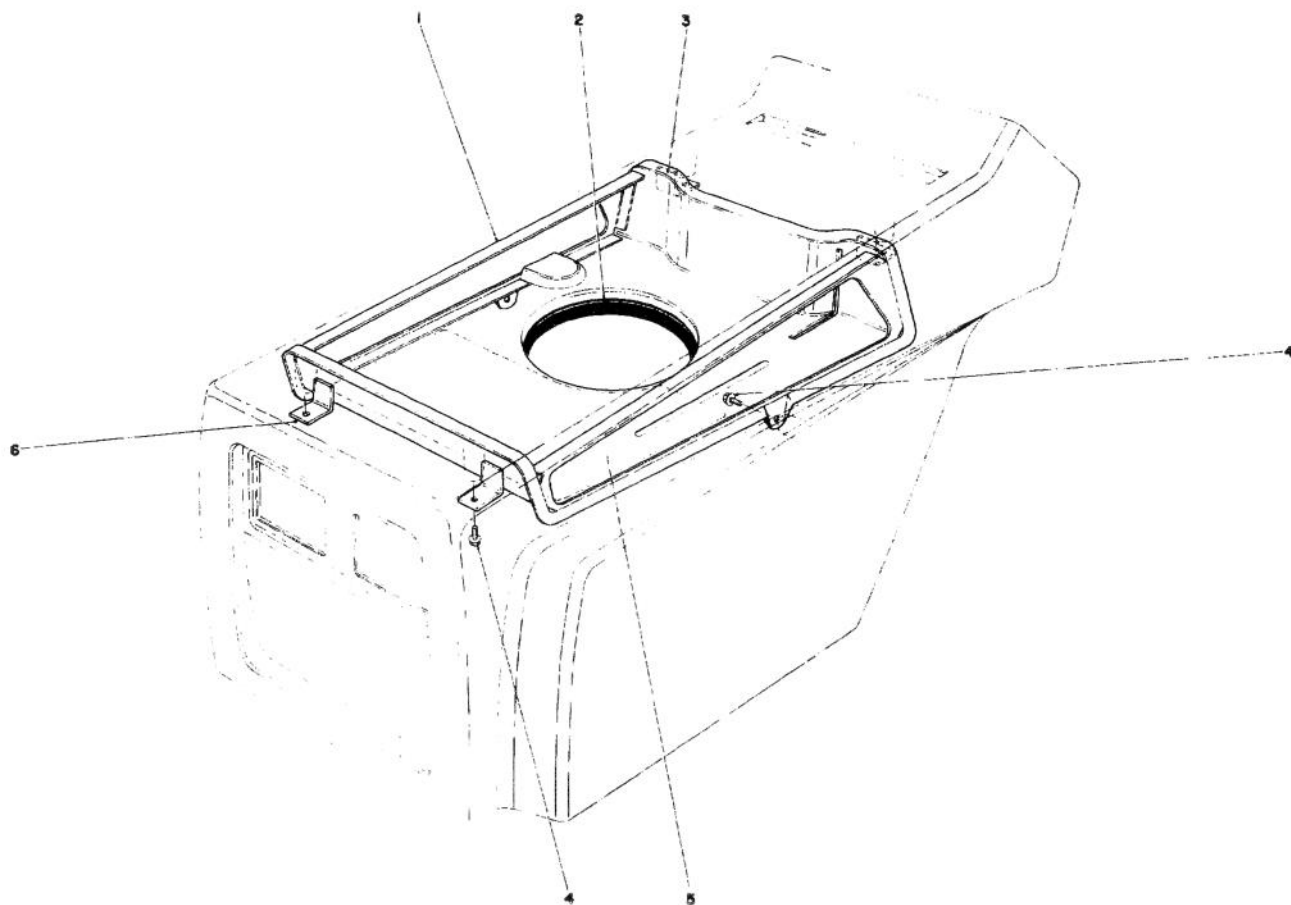

HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-8180	Duct Hood	1
2	36-8160	Seal Engine	1
3	37-8270	Clip	2

Ref. No.	Part No.	Description	No. Used
4	32104-76	Self Tapping Screw	6
5	36-5190	Decal Service	1
6	36-8250	Bracket Duct Support	2

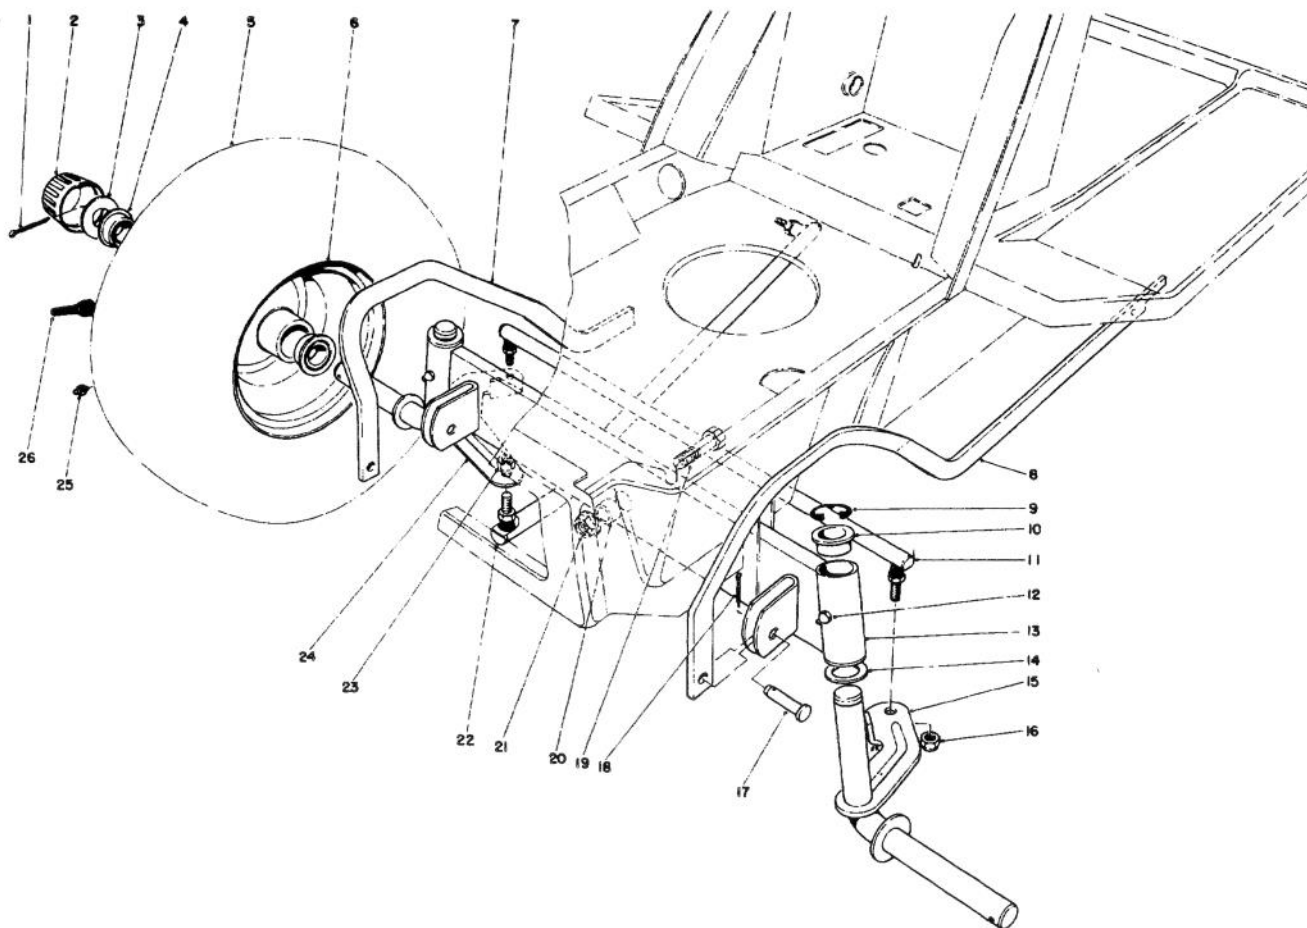


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	28-0060	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-99	Tire	2
6	242-65	Rim	2
7	36-3430	Scissors Link – Front R.H.	1
8	36-3440	Scissors Link – Front L.H.	1
9	32151-48	E-Ring	2
10	27-9080	Flange Bearing	4
11	28-0070	Tie Rod Steering	1
12	302-49	Grease Fitting	2
13	36-3420	Front Axle (Incl. Ref. #10)	1
14	3-6498	Thrust Washer	2

Ref. No.	Part No.	Description	No. Used
15	33-3170	Spindle L.H.	1
16	32146-4	Locknut	2
17	283-2	Clevis Pin	2
18	3272-6	Cotter Pin	2
19	325-6	Capscrew	1
20	28-0380	Spacer Front Axle	1
21	32128-23	Flange Nut	1
22	28-0080	Steering Arm	1
23	32146-6	Locknut	1
24	33-3180	Spindle R.H.	1
25	302-22	Grease Fitting	2
26	232-27	Valve Stem w/Cap	2
*	232-39	Tube (Optional)	2

*Not Illustrated

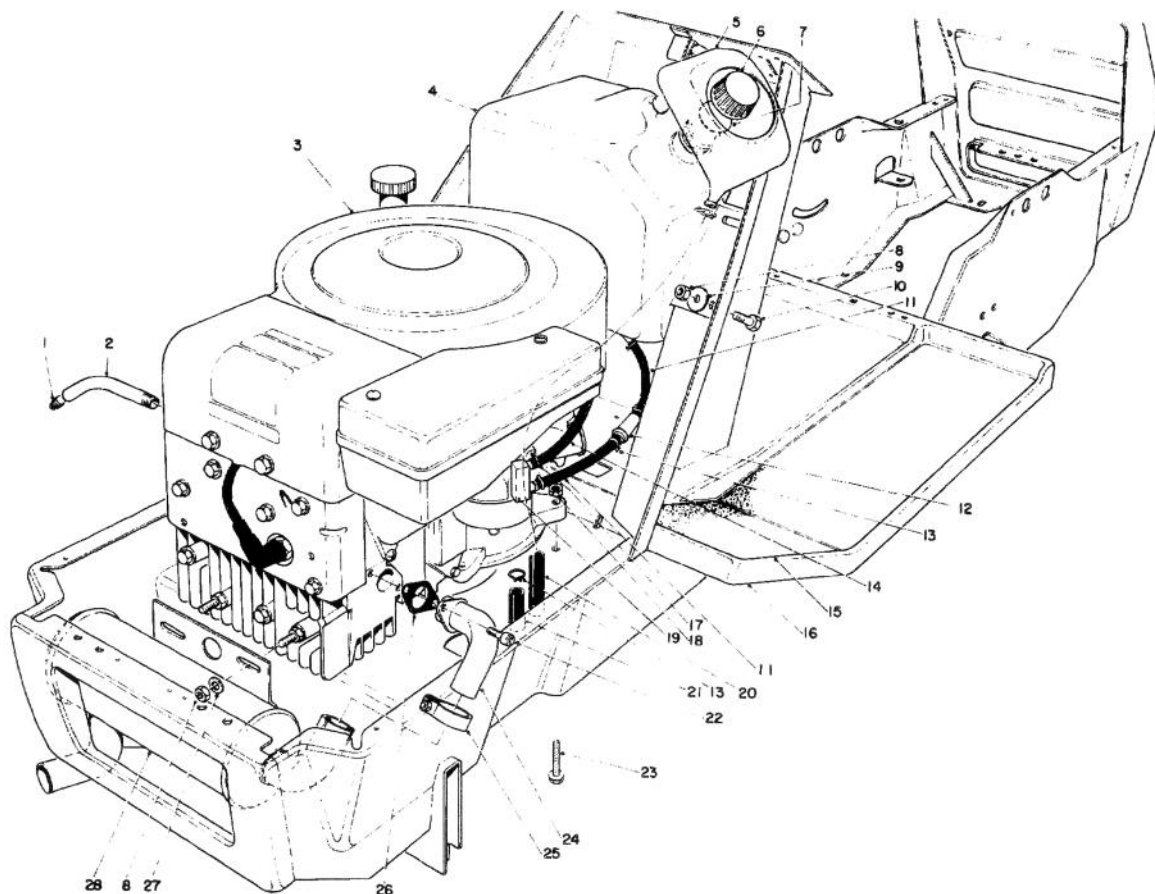


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3	221-587	Engine	1
4	36-3350	Gas Tank (Incl. Ref. #5)	1
5	28-9450	Funnel Overflow	1
6	28-9680	Gas Cap Assembly (Incl. Ref. #7)	1
7	28-9670	Gasket Gas Cap	1
8	32152-1	Locknut	6
9	5-1350	Washer	4
10	322-3	Capscrew	4
11	33-2140	Gas Hose	2
12	2210-186	Fuel Filter	1
13	2412-62	Hose Clamp	6
14	29-7870	Hose Gas Return	1

Ref. No.	Part No.	Description	No. Used
15	27-9050	Foot Tread L.H.	1
*	27-9040	Foot Tread R.H.	1
16	36-2100	Frame	1
17	2412-33	Clamp Hose	2
18	32152-1	Locknut	4
19	33-2260	Fitting Carburetor	1
20	28-9460	Hose Funnel	1
21	28-4180	Hose Carburetor Drain	1
22	3274-53	Hex Socket Capscrew	2
23	322-6	Capscrew	4
24	28-0290	Exhaust Pipe	1
25	23-7760	Clamp Exhaust Pipe	1
26†		Gasket Exhaust	1
27	3256-23	Washer	2
28	28-0300	Muffler	1

*Not Illustrated


†Obtain from your local Briggs & Stratton dealer.

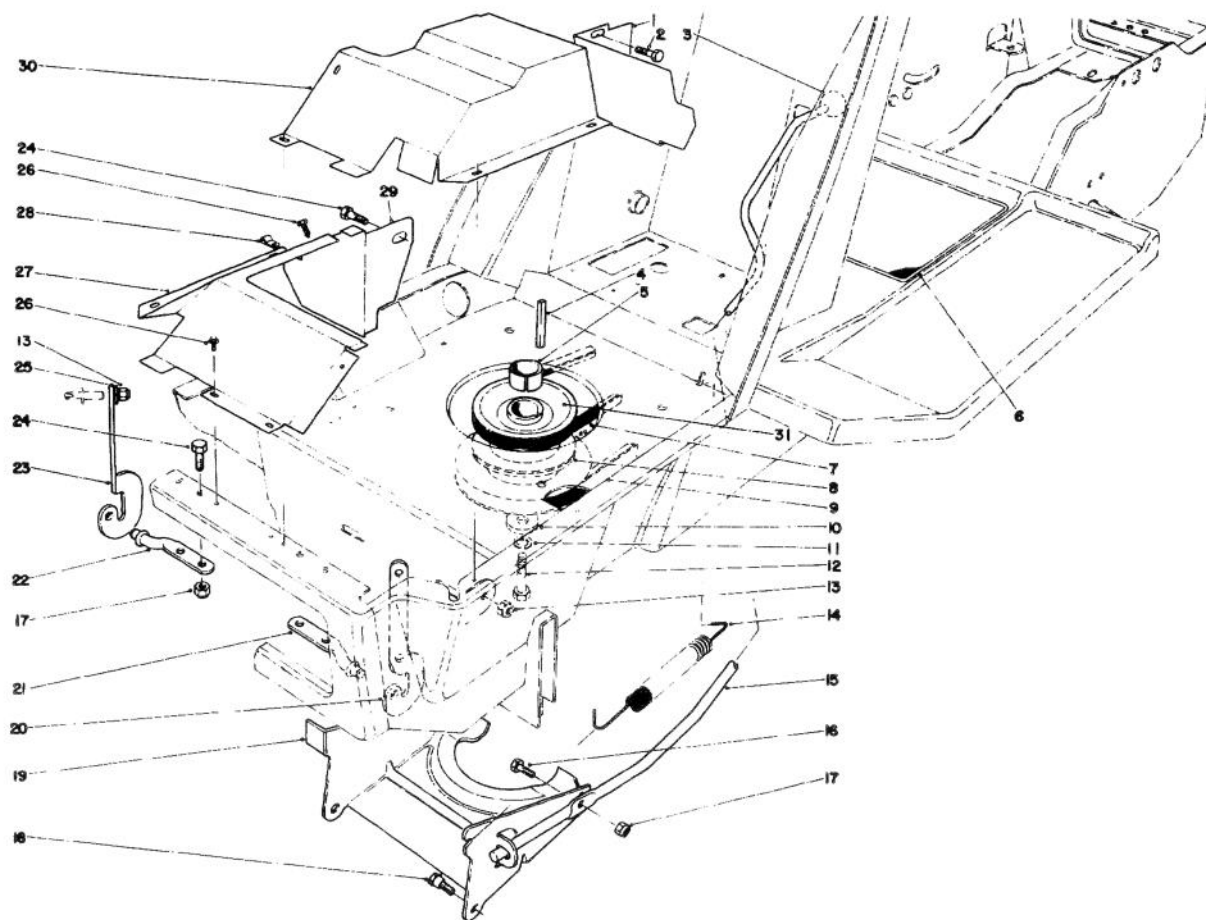

CLUTCH & ACTUATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support Exhaust Shield	1
2	321-3	Capscrew	1
3	233-42	Knob	1
4	5-1336	Square Key	1
5	27-8910	Spacer	1
6	28-8140	Decal — Operation	1
7	28-2650	V-Belt Traction	1
8	36-4800	Clutch & Brake Deck	1
9	36-2920	V-Belt — Deck	1
10	27-8920	Washer	1
11	3253-22	Lockwasher	1
12	3212-21	Capscrew — Patchlock	1
13	32152-4	Locknut	4
14	27-8960	Spring Deck Engagement	1
15	28-2320	Engagement Lever	1


Ref. No.	Part No.	Description	No. Used
16	322-3	Capscrew	1
17	32152-1	Locknut	5
18	11-9030	Shoulder Screw	2
19	36-3160	Actuator Clutch	1
20	28-0120	Bracket Hinge L.H.	1
21	28-0110	Hinge Pin Hood L.H.	1
22	28-0100	Hinge Pin Hood R.H.	1
23	28-0130	Bracket — Hinge R.H.	1
24	322-2	Capscrew	5
25	37-0170	Bracket Screen Hood	2
26	32104-76	Self Tapping Screw	12
27	33-0840	Heat Shield	1
28	2412-51	Clamp	1
29	28-3980	Support Heat Shield	1
30	33-0820	Heat Shield	1
31	36-4810	Sheave	1

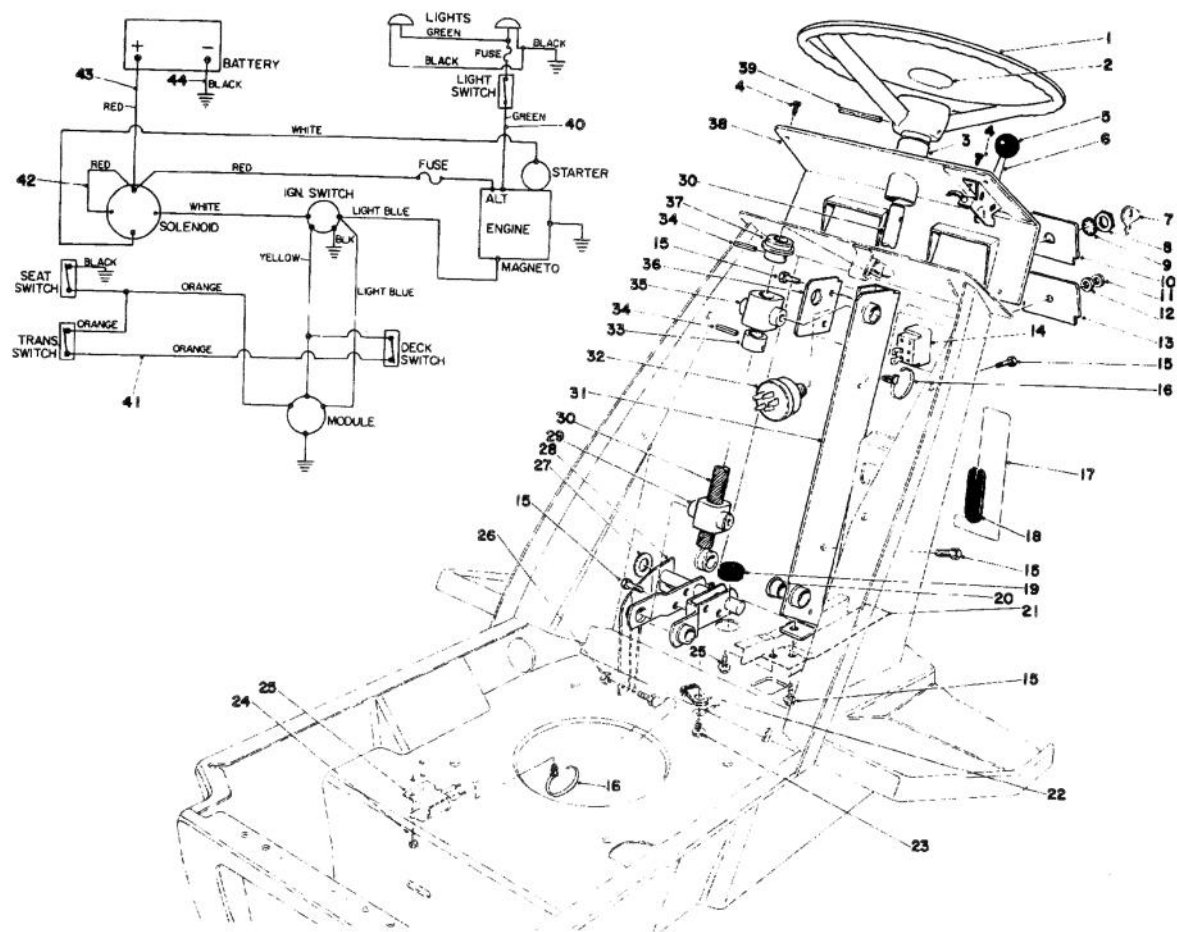

STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3820	Steering Wheel	1
2	36-2670	Cap Steering Wheel	1
3	28-3960	Tube Steering	1
4	32104-76	Self Tapping Screw	7
5	233-25	Knob	1
6	28-0090	Throttle Control	1
7	218-412	Key	2
8	218-461	Nut	1
9	3254-5	Lockwasher	1
10	28-2690	Insert - Dash Panel (Ignition)	1
11	218-497	Beveled Facenut	1
12	218-498	Locknut	1
13	28-2510	Insert - Dash Panel	1
14	28-4110	Light Switch (Incl. Ref. #11-12)	1
15	32144-11	Hex Hd. Self Tapping Screw	7
16	3290-410	Push Mount Tie	3
17	36-2230	Decal Deck Engagement	1
18	29-4780	Edge Molding	1
19	237-100	Grommet	1
20	27-9080	Flange Bearing	2
21	36-1570	Shield Wire Harness	1
22	18-2970	Clamp	1
23	32144-10	Screw Thread Forming	2


Ref. No.	Part No.	Description	No. Used
24	32144-1	Screw Thread Forming	2
25	28-4450	Interlock Deck Switch	1
26	32146-6	Locknut	1
27	11-6240	Washer	1
28	36-3470	Steering Link	1
29	37-0140	Follower - Steering Shaft	1
30	33-4530	Steering Shaft	1
31	36-2040	Bracket Steering	1
32	23-0660	Ignition Switch (Incl. Ref. #7-9)	1
33	28-3940	Collar Steering Shaft	1
34	32121-31	Roll Pin	2
35	37-0150	Bearing - Steering Shaft	1
36	28-0390	Bearing Support Steering	1
37	28-3950	Collar Steering Shaft	1
38	28-2460	Panel - Dash	1
39	32121-78	Roll Pin	1
40	28-4300	Wire Harness Light	1
41	36-2850	Wire Harness	1
42	28-7880	Wire Solenoid	1
43	28-3890	Wire Assembly (Battery to Solenoid)	1
44	28-3860	Wire Assembly (Battery to Ground)	1

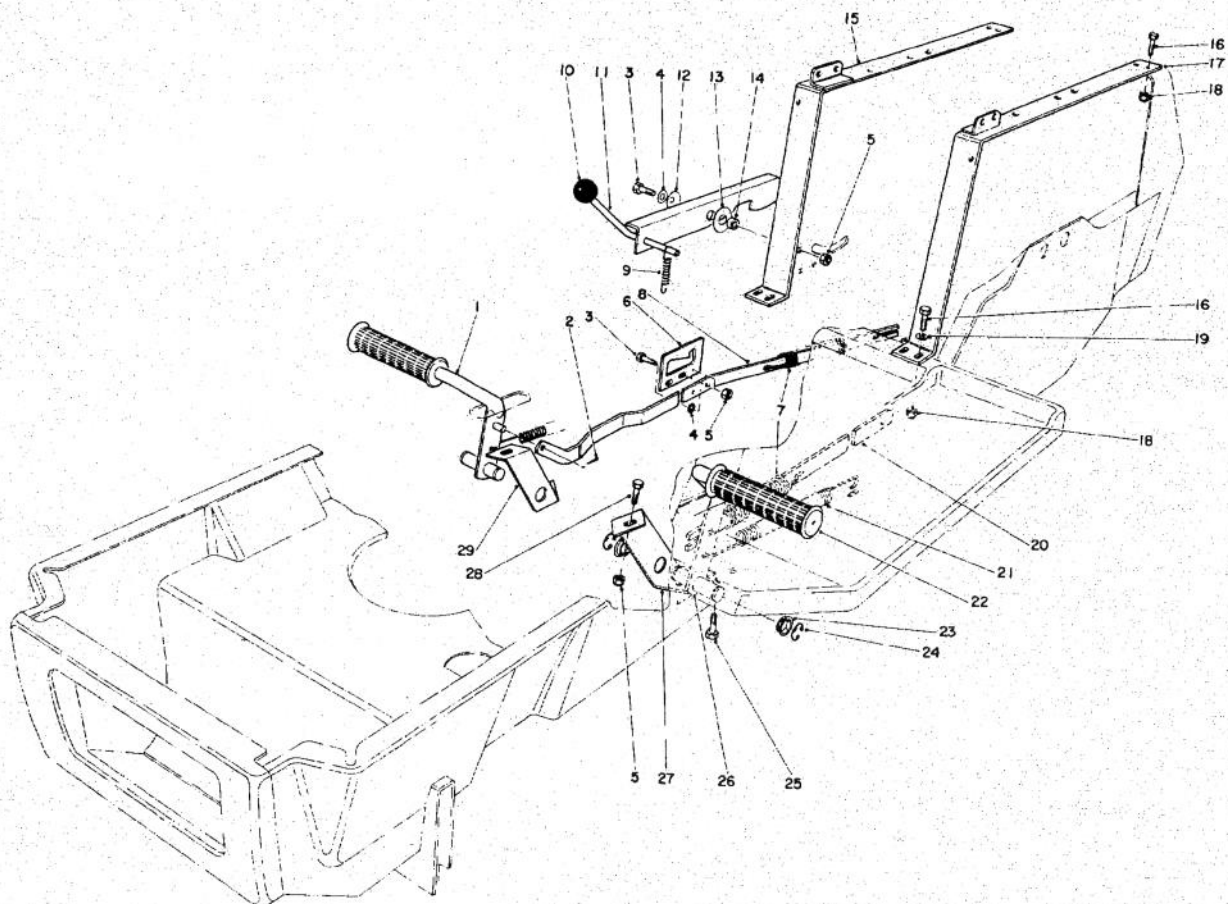

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-3	Capscrew	3
4	3256-23	Washer	3
5	32152-1	Locknut	5
6	28-9370	Latch Plate — Brake Rod	1
7	27-8950	Spring — Extension	2
8	28-9350	Link Brake Rod	1
9	8-9900	Spring — Control Rod	1
10	233-42	Knob	1
11	28-2570	Parking Brake Lever	1
12	3290-413	Belleville Washer	1
13	28-2450	Washer	1
14	28-2440	Spacer	1
15	36-0820	Strap — Rear Body R.H.	1


Ref. No.	Part No.	Description	No. Used
16	321-3	Capscrew	8
17	36-0810	Strap — Rear Body L.H.	1
18	32152-4	Locknut	8
19	3256-22	Washer	4
20	28-0430	Link Clutch Rod	1
21	27-8890	Spring Return	2
22	28-2470	Pad Foot	2
23	256-258	Nylinder	4
24	32120-19	E-Ring	4
25	32144-11	Hex Hd. Self Tapping Screw	4
26	28-2520	Clutch Pedal	1
27	28-0420	Support Pedal L.H.	1
28	322-2	Capscrew	2
29	28-0410	Support Pedal R.H.	1

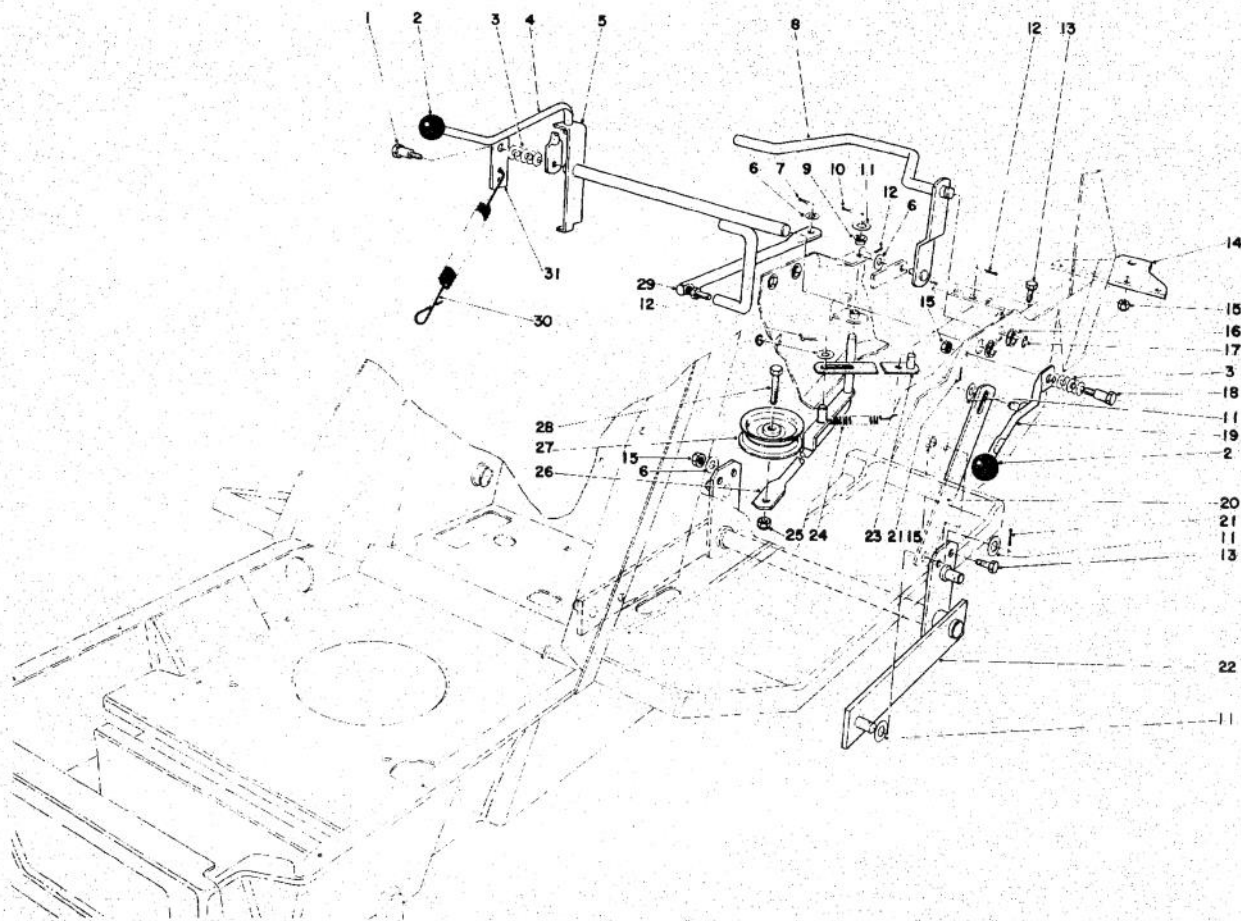

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	1
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	5
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	1
11	3256-26	Washer	3
12	3272-10	Cotter Pin	4
13	322-2	Capscrew	10
14	28-2250	Plate Hitch	1
15	32152-1	Locknut	11
16	256-258	Nyliner	4

Ref. No.	Part No.	Description	No. Used
17	32120-19	E-Ring	2
18	5-4015	Shoulder Bolt	1
19	36-1780	Height of Cut Handle	1
20	36-1300	Link Height of Cut	1
21	3272-7	Cotter Pin	2
22	36-1860	Pivot Bar	1
23	28-2270	Spring Retainer	1
24	28-2340	Spring Deck Tension	1
25	32152-2	Locknut	1
26	28-0500	Idler Arm	1
27	36-1020	Pulley Idler	1
28	323-10	Hex Hd. Capscrew	1
29	28-2210	Shift Arm	1
30	36-4850	Spring Extension	1
31	36-4860	Bracket Counterbalance Spring	1

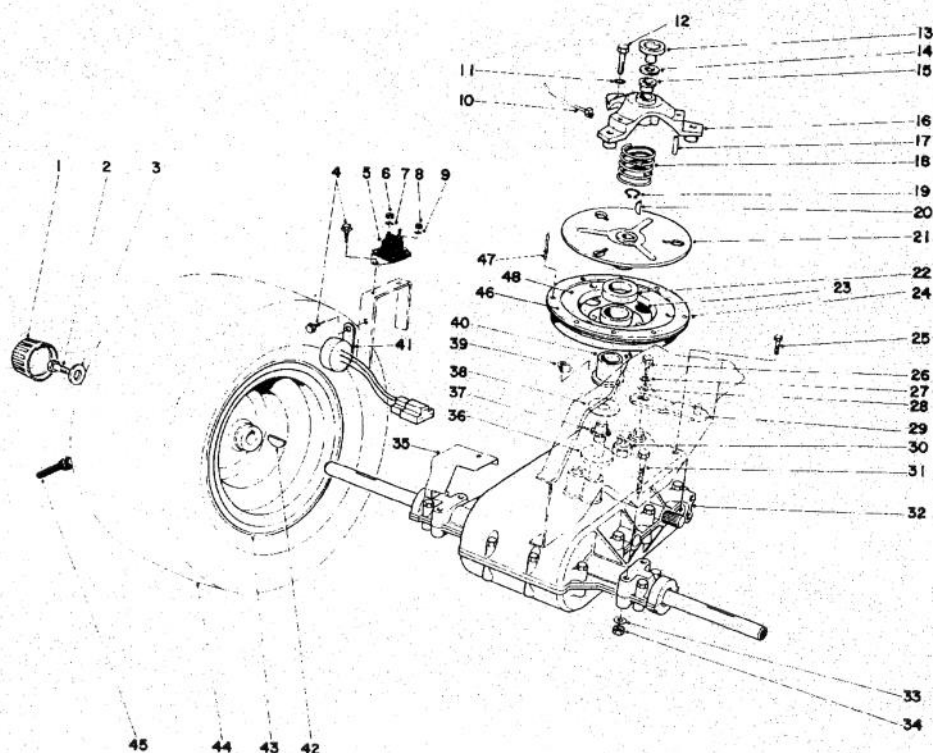


TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0060	Hub Cap	2
2	36-4030	Capscrew	2
3	37-4700	Spacer — Wheel	1
4	32144-10	Screw Thread Forming	3
5	28-4210	Solenoid	1
6	3218-13	Nut	2
7	3253-4	Lockwasher	2
8	3219-14	Nut	2
9	3253-17	Lockwasher	2
10	3290-410	Push Mount Tie	2
11	3254-8	Lockwasher	3
12	321-5	Capscrew	3
13	36-2130	Cap Clutch	1
14	252-94	Thrust Race	1
15	256-259	Bushing	1
16	28-2560	Cover Clutch (Incl. Ref. #15 & 17)	1
17	252-92	Needle Roller	3
18	36-2220	Spring Compression	1
19	32120-64	Retaining Ring	1
20	3257-32	Key Woodruff	1
21	27-9030	Clutch Plate	1
22	28-4220	Washer Felt	1
23	2410-40	Plug	3
24	27-9170	Sheave Assembly (Incl. Ref. #40 & 46-48)	1

Ref. No.	Part No.	Description	No. Used
25	32144-11	Self Tapping Screw	2
26	329-2	Capscrew	1
27	3253-3	Lockwasher	1
28	3256-22	Washer	1
29	28-2380	Shift Bracket	1
30	28-4250	Switch — Neutral	1
31	322-11	Capscrew	4
32	27-8880	Transaxle	1
33	3256-23	Washer	4
34	32152-1	Locknut	4
35	29-6940	Shield — Grass	1
36	27-8810	Thrust Washer	1
37	252-58	Thrust Bearing	1
38	27-8820	Thrust Washer	1
39	18-2970	Clamp	1
40	28-4150	Bushing	1
41	28-7890	Module Interlock	1
42	3257-38	Woodruff Key	2
43	242-66	Rim	2
44	231-98	Tire	2
45	232-27	Valve Stem	2
46	27-8800	Pad — Clutch	1
47	3269-3	Pop Rivet	12
48	27-8790	Retainer Ring	1


PEERLESS TRANSAXLE MODEL 801

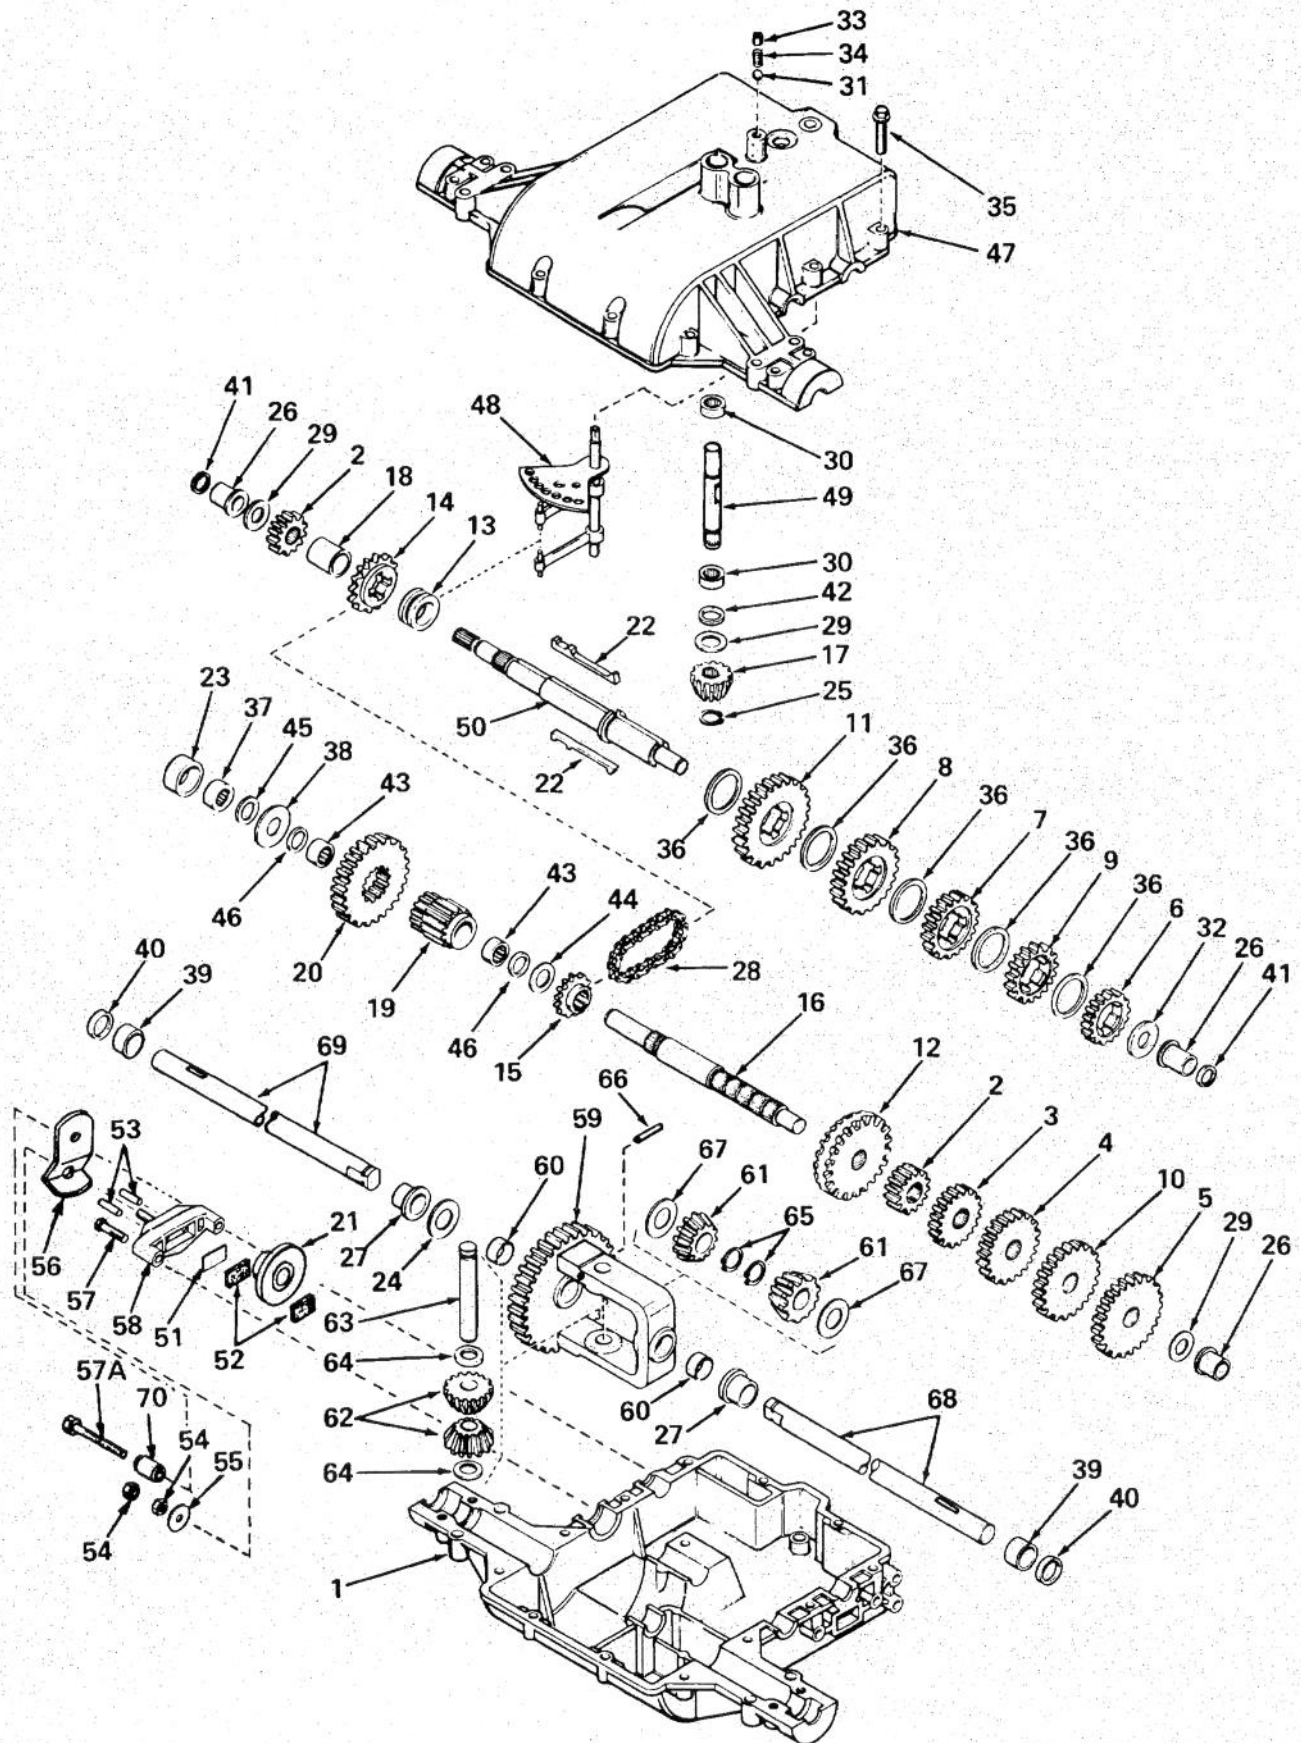

PEERLESS TRANSAXLE MODEL 801

Ref. No.	Part No.	Description	No. Used
1	770067	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
3	778126	Gear, Spur (20 teeth)	1
4	778127	Gear, Spur (25 teeth)	1
5	778129	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123	Gear, Spur (25 teeth)	1
8	778124	Gear, Spur (30 teeth)	1
9	778122	Gear, Spur (22 teeth)	1
10	778128	Gear, Spur (28 teeth)	1
11	778125	Gear, Spur (35 teeth)	1
12	778137	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786060	Sprocket (14 teeth)	1
15	786061	Sprocket (10 teeth)	1
16	776181	Shaft, Counter	1
17	778113	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
24	780001	Washer	1
25	788040	Ring, Retaining	1
26	780105	Bushing, Flanged	1
27	780059	Bushing, Flanged	1
28	786062	Chain, Roller (No. 41 chain, 22 links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set	1
34	792079	Spring	1
35	792073	Screw, Hex Hd. Thread Forming	1
36	780108	Washer, Thrust	1


Ref. No.	Part No.	Description	No. Used
37	780111	Bearing, Needle	1
38	780113	Washer, Flat	1
39	530105	Bearing, Needle	1
40	788042	Seal, Oil	1
41	788051	Ring, Square Cut	1
42	792001	Ring, Square Cut	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Ring, Square Cut	1
46	788053	Ring, Square Cut	1
47	772074	Cover, Transaxle	1
48	784290	Rod & Fork Assembly, Shift	1
49	776182	Shaft, Input	1
50	776183	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Hex Hd. Thread Forming	1
57A	792085	Screw, Hex Hd. Thread Forming	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assembly, Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
61	778067	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	788038	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774364	Axle (14-7/8" long)	1
69	774363	Axle (13" long)	1
70	786067	Spacer	1

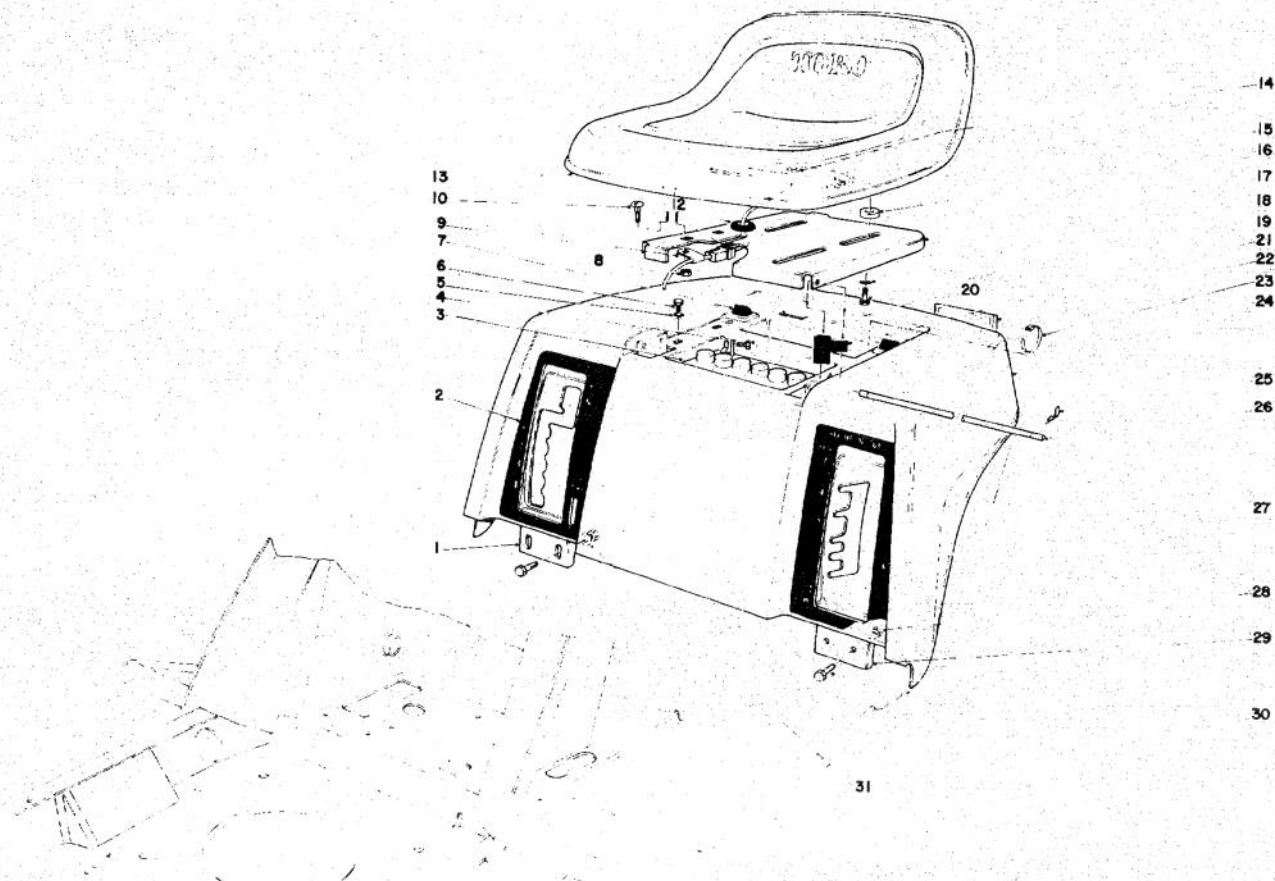

REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0370	Plate Detent	1
2	36-2940	Decal Transmission	1
3	29-9870	Battery	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32152-4	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11		Female Connector	1
12	237-100	Grommet	1
13	36-2860	Seat (Incl. Ref. #11 & 14-15)	1
14		Grommet	1
15		Seat Switch	1
16	26-4840	Spacer	4


Ref. No.	Part No.	Description	No. Used
17	36-1490	Seat Support	1
18	3256-23	Washer	4
19	322-4	Capscrew	4
20	321-3	Capscrew	2
21	28-8080	Boot Terminal	1
22	218-491	Reflector	2
23	3290-378	Cable Tie	7
24	36-2030	Rear Body	1
25	3290-307	Hair Pin Cotter	2
26	28-2400	Pivot Roll Seat	1
27	36-2950	Decal Height of Cut	1
28	32152-1	Locknut	4
29	36-1950	Quadrant Height of Cut	1
30	322-2	Capscrew	4
31	3253-23	Washer	2

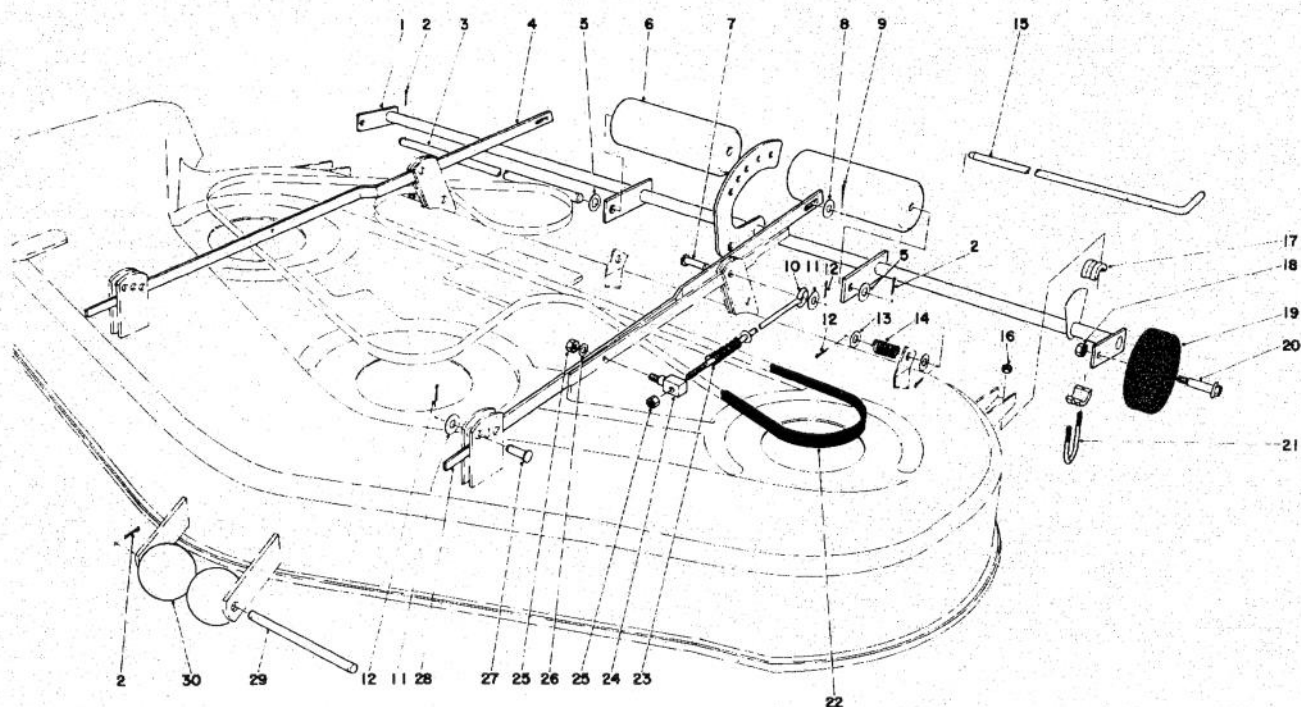

MOWER LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-1840	Deck Wheel Shaft	1
2	3272-11	Cotter Pin	2
3	36-1360	Roller Shaft	1
4	36-3450	Scissors Link Rear R.H.	1
5	3256-26	Flat Washer	2
6	36-1740	Roller Deck	2
7	283-10	Clevis Pin	2
8	3256-26	Washer	2
9	3272-7	Cotter Pin	2
10	33-1050	Pin	2
11	3256-24	Washer	4
12	3272-6	Cotter Pin	6
13	3256-24	Washer	2
14	3-3251	Spring Compression	1
15	36-1710	Rod Wheel Clutch	1

Ref. No.	Part No.	Description	No. Used
16	32152-4	Nut	4
17	36-1310	Bearing Deck Shaft	4
18	32146-6	Hex Nut	2
19	29-6010	Wheel	2
20	3-2652	Wheel Bolt	2
21	298-11	U-Bolt	2
22	36-2930	V-Belt	1
23	18-9050	Spring Deck Idler	2
24	36-0580	Pin Scissors Link	2
25	32152-1	Locknut	4
26	3256-23	Washer	2
27	283-2	Clevis Pin	2
28	36-3460	Scissors Link Rear L.H.	1
29	7-0277	Shaft	1
30	29-4820	Roller	2

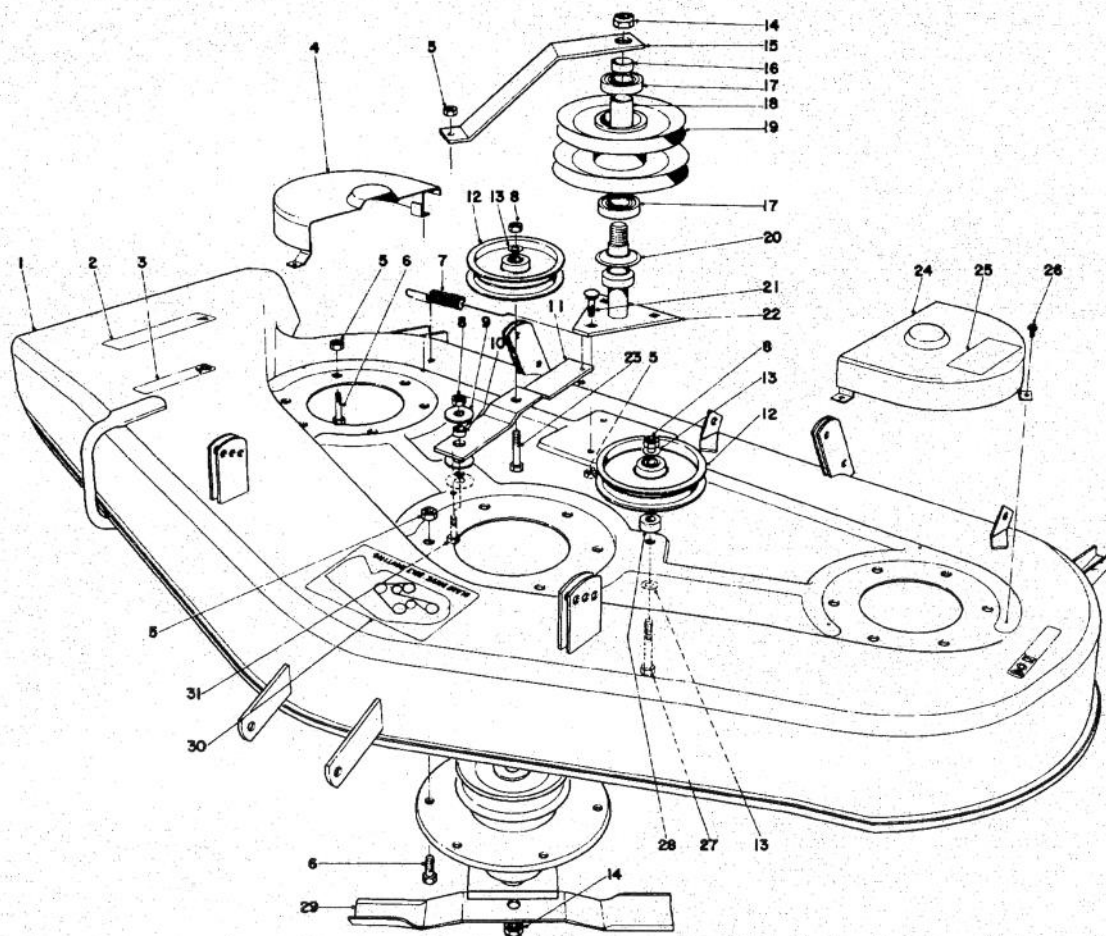


CUTTING DECK

Ref. No.	Part No.	Description	No. Used
1	36-1830	Deck	1
2	36-3410	Decal Caution	1
3	36-3400	Decal Warning	2
4	37-9330	Belt Cover R.H.	1
5	32152-1	Nut	22
6	322-3	Capscrew	19
7	36-8040	Spring Extension	1
8	32152-2	Nut	3
9	36-8020	Washer	3
10	36-1430	Spacer Idler Bracket	1
11	36-1400	Idler Pulley Bracket	1
12	36-3220	Idler Pulley	2
13	3256-3	Washer	3
14	3296-33	Hex Nut	4
15	36-1460	Support Spindle	1
16	37-0180	Spacer	1

Ref. No.	Part No.	Description	No. Used
17	37-0200	Bearing	2
18	37-0190	Spacer	1
19	37-0210	Pulley & Bearing Assembly	1
20	38-0470	Dust Cover	1
21	3230-1	Carriage Bolt	3
22	37-0220	Shaft Saddle Assembly	1
23	323-9	Capscrew	1
24	37-9340	Belt Cover L.H.	1
25	36-4240	Decal Wheel Adjustment	1
26	32104-76	Self Tapping Screw	6
27	323-11	Hex Hd. Capscrew	1
28	36-8030	Spacer	1
29	36-1790	Blade	3
30	36-5360	Decal Belt Routing	1
31	323-6	Capscrew	1
*	8-1549	Loose Parts Bag	1

*Not Illustrated

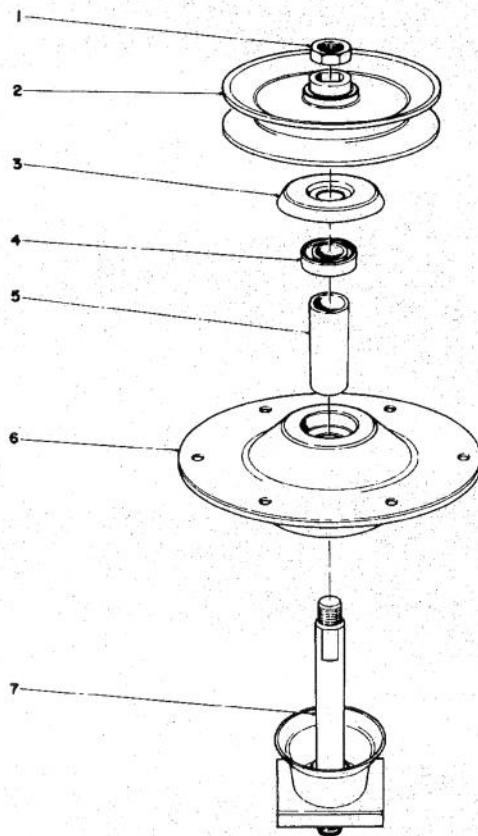


SPINDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3296-33	Locknut	3
2	37-9390	Pulley	3
3	37-9470	Dust Cover	3
4	37-9500	Bearing	3

Ref. No.	Part No.	Description	No. Used
5	37-9490	Spacer	3
6	37-9510	Housing	3
7	37-9480	Shaft & Saddle Assembly	3

ENGINE BRIGGS & STRATTON MODEL 252707-0146-01

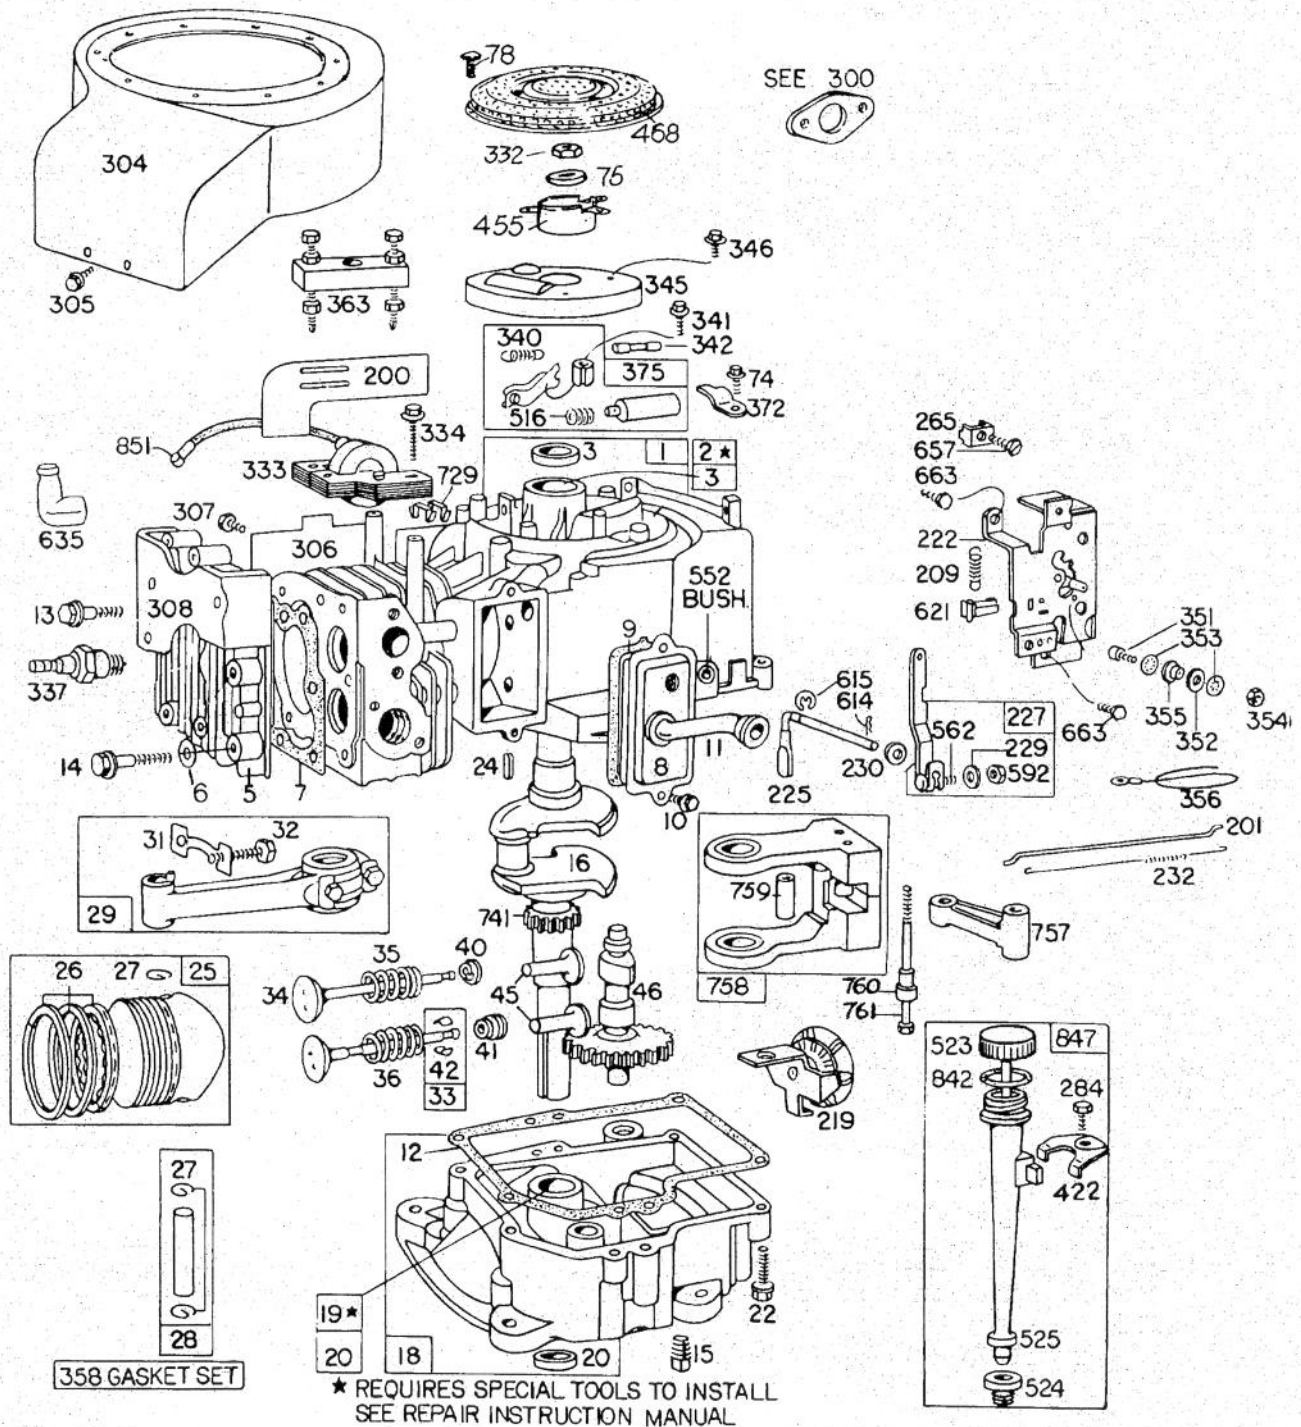


ENGINE BRIGGS & STRATTON MODEL 252707-0146-01

Ref. No.	Part No.	Description	No. Used
1	393409	Cylinder Assembly	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw — Sem	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover 1/64" Thick	1
	*270915	Gasket — Crankcase Cover — .005" Thick	1
	*270916	Gasket — Crankcase Cover — .009" Thick	1
13	93723	Screw — Cylinder Head (3" Long) Note: 93781 Stud — Cylinder Head 22963 Washer	2
15	91084	Plug — Oil Drain	1
16	391265	Crankshaft	1
18	391784	Sump — Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mtg. Sem	1
24	61760	Key — Flywheel	1
25	391285	Piston Assy. — Standard	1
	391287	Piston Assy. — .010" O.S.	1
	391288	Piston Assy. — .020" O.S.	1
	391289	Piston Assy. — .030" O.S.	1
26	391780	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assembly — Piston — Std.	1
	391286	Pin Assy. Piston — .005" O.S.	1
29	391775	Rod Assembly — Connecting	1
31	222299	Lock — Conn. Rod Screw	1
32	92909	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212296	Gear — Cam	1
74	93042	Screw — Sem	1
75	220865	Washer — Spring	1
78	93808	Screw — Sem	1
201	261198	Link — Governor	1
209	261306	Spring — Governor	1
219	391764	Oil Slinger, Gov. Gear & Bracket Assembly	1
222	390662	Plate — Governor Control	1
225	231058	Crank — Governor (1/4" Dia.)	1
227	391733	Lever Assembly — Governor (For 1/4" Dia. Crank)	1
230	222450	Washer — Gov. Crank (1/4" I.D.)	1
232	261197	Spring — Governor Link	1
258	93686	Screw — Control Bracket Mtg.	1
265	221535	Clamp — Casing	1
284	93804	Screw — Clamp Mgt.	1

Ref. No.	Part No.	Description	No. Used
300	270917	Gasket Exhaust	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mounting Sem	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mounting Sem	1
308	222725	Cover — Cylinder Head	1
332	92284	Nut — Hex	1
333	298968	Armature Assembly	1
334	93381	Screw — Armature Mtg. Sem	1
337	293918	Plug — Spark (1-1/2" High — 37-42 MM) (Resistor) Note: Spark Plugs Use Ig- nition Cable Terminal No. 221798	1
339	391284	Breaker Assembly — Ignition	1
340	26018	Spring — Breaker Arm	1
342	65704	Plunger — Breaker Point	1
343	391792	Condenser	1
345	222309	Cover — Breaker Point	1
346	93014	Screw — Sem	1
351	93735	Screw — Terminal	1
352	66068	Washer — Insulating	1
353	92791	Washer — Lock — Shakeproof	3
354	90576	Nut — Hex. — 8-32	2
355	66554	Collar — Insulating	1
356	391602	Wire — Ground Note: Wire — Jumper Used in addition to No. 391602 Ground Wire	1
358	393411	Gasket Set	1
363	19203	Puller — Flywheel	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap & Dipstick — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
590	93226	Screw — Breaker Adjusting Sem	1
592	231082	Nut — Hex., 10-24	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
621	297472	Switch — Stop	1
635	66538	Elbow — Spark Plug	1
645	23513	Bushing — Plunger	1
657	93496	Screw — Sem	1
663	93572	Screw	1
670	231039	Spacer — Control Bracket Mtg.	1
729	221907	Clip — Wire	1
741	261196	Gear — Wire	1
757	211675	Link — Counterweight	1
758	391373	Counterweight Assembly	1
759	298909	Pin — Counterweight	1
760	231038	Spacer — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal Oil Filler Cap	1
847	392067	Tube & Clamp Group	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Standard)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	230881	Guide — Exhaust Valve	1

*Included in Gasket Set Part No. 393411

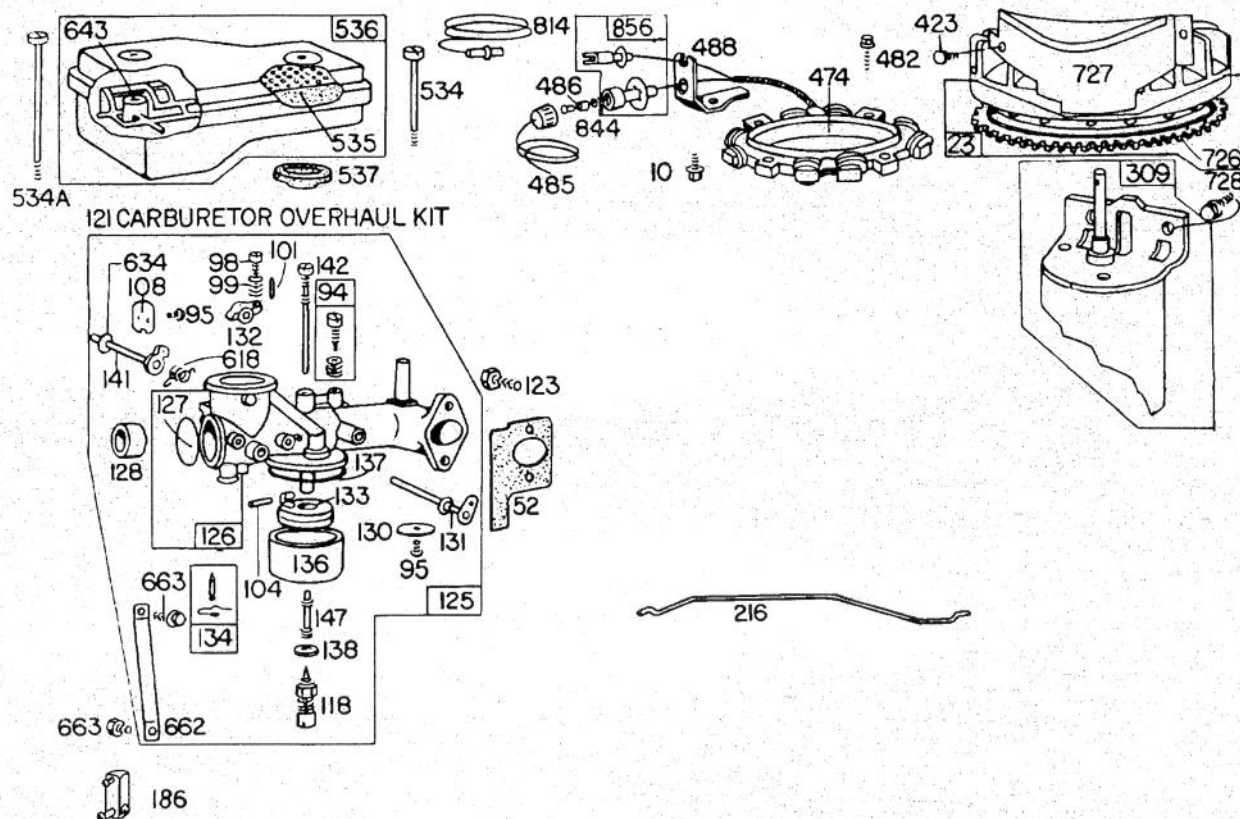


ENGINE BRIGGS & STRATTON MODEL 252707-0146-01

Ref. No.	Part No.	Description	No. Used
10	93394	Screw - Sem	1
23	391988	Flywheel & Ring Gear	1
		Assembly - Magneto	1
52	*270872	Gasket - Carburetor Mounting	1
94	†292681	Valve Assy. - Carburetor Idle	1
95	93499	Screw - Throttle & Choke Valve Mtg. Sem	1
98	91920	Screw - Machine, Fill. Hd. 8-32 x 5/8"	1
99	26157	Spring - Throttle Adjustment	1
101	93043	Pin - Throttle Stop	1
104	†230896	Pin - Float Hinge	1
108	222010	Valve Choke	1
118	†391233	Valve - Needle	1
121	299852	Carburetor Overhaul Kit	1
123	93357	Screw - Carburetor Mtg.	1
125	393410	Carb. Assy. (Choke-A-Matic)	1
126	391787	Body Assembly Carburetor	1
127	†221997	Plug - Welch	1
128	211960	Venturi - Carburetor	1
130	222433	Valve - Throttle	1
131	391512	Shaft & Lever - Throttle	1
132	211712	Stop - Throttle	1
133	299707	Float - Carburetor	1
134	†299096	Valve - Fuel Inlet	1
136	221995	Bowl - Float	1
137	†270511	Gasket - Float Bowl	1
138	†222014	Washer - Float Bowl	1
141	390684	Shaft & Lever - Choke	1
142	†299740	Nozzle - Carburetor	1

*Included in Gasket Set Part No. 393411

†Included in Carburetor Overhaul Kit - Part No. 299852

Ref. No.	Part No.	Description	No. Used
147	†230932	Screw - Nozzle	1
186	212327	Connector - Fuel pipe. Furnished by Equip. Mgr.	1
216	261274	Link - Choke	1
309	391177	Motor - Starting Briggs & Stratton (on Commutator End Cap)	1
423	93410	Screw - Sem	1
474	391520	Stator - Alternator	1
482	93621	Screw - Sem	1
485	390888	Knob Assembly - Fuse	1
486	391507	Diode - Alternator	1
488	222211	Bracket - Output	1
534	93622	Screw - Air Cleaner	1
534A	93323	Screw - Air Cleaner	1
535	270843	Element - Air Cleaner	1
536	391786	Cleaner Assembly - Air	1
537	270853	Gasket - Air Cleaner	1
618	261116	Spring - Choke Return	1
634	270382	Washer - Choke Shaft	1
643	280118	Support - Air Cleaner Element	1
662	222311	Bracket - Carburetor	1
663	93572	Screw	1
726	392134	Gear - Ring (Includes Mtg. Parts)	1
727	390233	Cover & Shield - Starter	1
728	93523	Screw - Sem	1
814	390867	Wire - Assembly - 7 Amp. Alternator	1
844	261269	Spring - Diode	1
856	393304	Holder Parts - Fuse	1

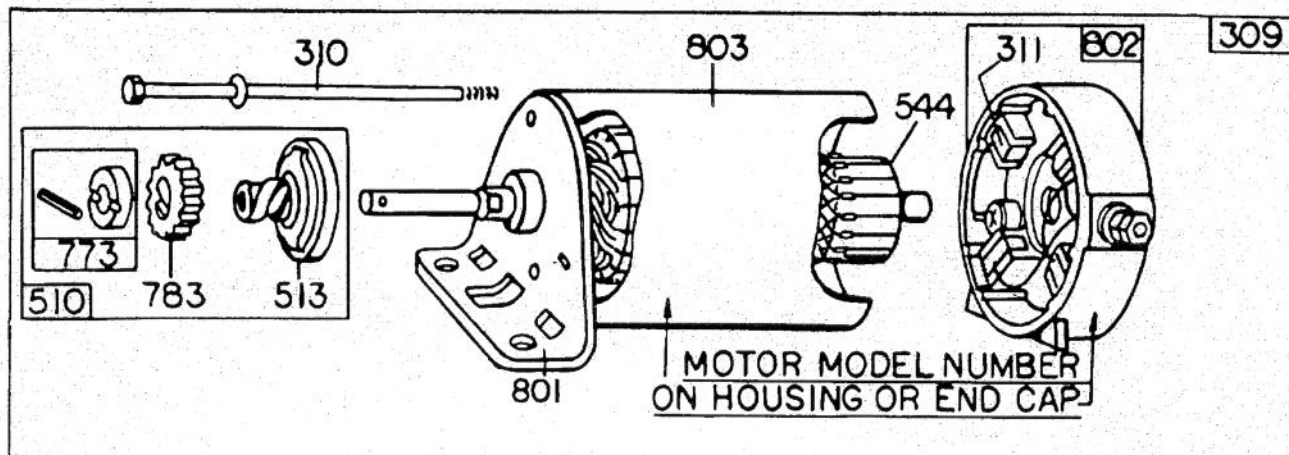

BRIGGS & STRATTON MODEL 252707-0146-01

Ref. No.	Part No.	Description	No. Used
309	391177	Motor — Starting Briggs & Stratton (on Commutator End Cap)	1
310	391790	Thru Bolt Assembly	1
311	391791	Brush Set	1
510	391461	Drive Assembly	1
513	391135	Clutch Assy. — Starter	1

Ref. No.	Part No.	Description	No. Used
544	391160	Armature Assembly	1
773	391462	Retainer & Pin Assy. — Starter Clutch	1
783	280104	Gear — Starter	1
801	392061	Drive End Cap Assy.	1
802	391172	Commutator End Cap Assy.	1
803	391167	Housing Assembly	1