



8 and 11 Blade Reel Mowers

Greensmaster® 3250-D

Model No. 04472—220000001 and Up

Model No. 04473—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

 
Contents

Description	Page	Description	Page
Reel Assembly	3	Roller Assembly	4

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

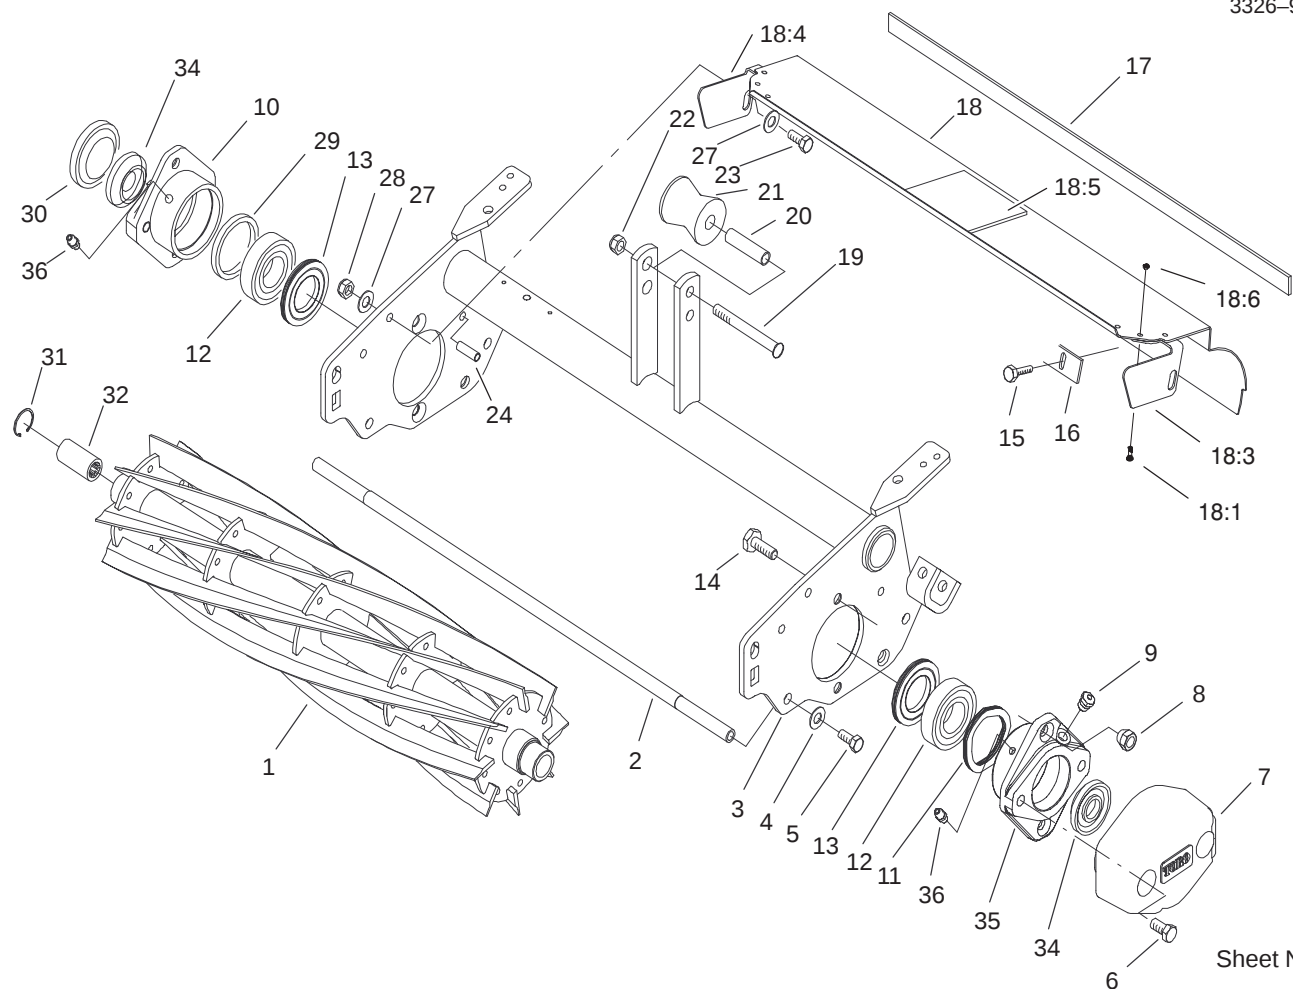


Sheet No.:2

Reel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*1	94-8037	1	11 Blade Reel ASM (only on: 04473)	19	104-2092	1	Screw-HSBH
1	94-8039	1	8 Blade Reel ASM (only on: 04472)	20	93-2464	1	Spacer-Roller
2	98-2196	1	Rod-Shield	21	93-2463	1	Roller-Lift
3	95-1634-01	1	Frame-Reel	22	33025-00	1	Nut-Lock
4	3256-24	2	Washer-Flat	23	33114-020	2	Screw-HH
5	33115-020	2	Screw-HH	24	32121-123	2	Pin-Roll
6	93-2569	4	Screw-HHF	27	3256-74	4	Washer-Flat
7	100-7113-01	1	Weight-End	28	33024-00	2	Nut-Lock
8	93-2454	4	Nut-Tapered, Lock	29	94-4544	1	Spacer
9	302-34	2	Breather	30	2410-30	1	Cap-Plastic
10	105-3825	1	Housing-Bearing, RH	31	32120-37	1	Ring-Retaining
11	94-4543	1	Spring-Wire, Flat	32	94-4507	1	Coupler-Splined
12	105-3827	2	Bearing	34	104-2067	2	Spacer-End, Motor
13	105-3824	2	Seal-Grease	35	105-3826	1	Housing-Bearing, LH
14	95-0745	4	Screw-Tapered	36	302-5	2	Fitting-Grease
15	104-2065	5	Screw-HWH				
16	36-7260	1	Bar-Off, Cut				
17	95-1636	1	Strip-Seal				
18	99-4197	1	Rear Shield ASM				
18:1	60-6500	4	Screw-HH				
18:3	99-4152	1	Deflector-Reel, LH				
18:4	99-4151	1	Deflector-Reel, RH				
18:5	99-1456	1	Pad-Unit, Cutting				
18:6	46-0430	4	Nut-Lock				

 * Not illustrated

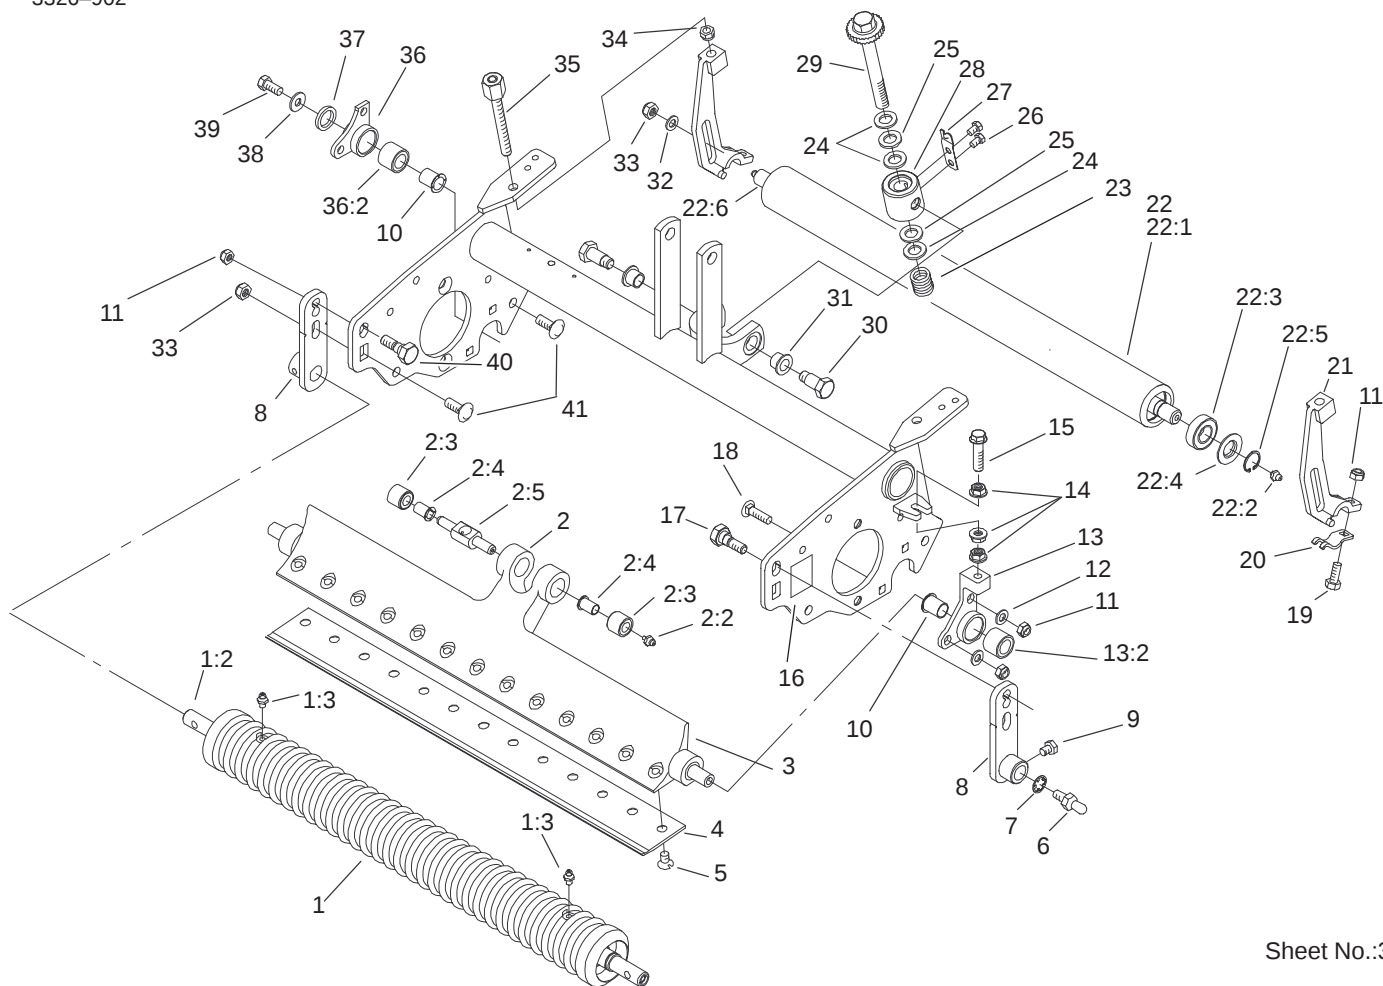

Sheet No.:3


Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6241	1	Wiehle Roller ASM
1:2	52-3180	2	Bearing-Roller, Front
1:3	302-5	2	Fitting-Grease
☆2		1	Bedbar & Bushing ASM
2:2	302-18	1	Fitting-Grease
2:3	62-5510	2	Bushing-Rubber
2:4	52-2890	2	Bushing-Nylon
2:5	52-2920	1	Pivot-Bedbar
3	93-2511-01	1	Bedbar
4	99-4299	1	Bedknife-Tournament, Extended
*4	94-6393	1	Bedknife-Fairway
*4	104-7720	1	Bedknife-Microcut, Extended
*4	94-6392	1	Bedknife-Highcut
*4	93-4264	1	Bedknife-Lowcut
5	57-4910	13	Screw
6	94-2958	2	Stud-Ball
7	3254-6	2	Washer-Lock, Internal
8	94-8170	2	Bracket-Front
9	33113-012	2	Screw-HH
10	93-7502	2	Bushing-Flanged
11	33024-00	8	Nut-Lock
12	87-7510	2	Washer-Flat
13	100-3381	1	LH Pivot Hub ASM

Ref. No.	Part No.	Qty.	Description
13:2	93-7501	1	Bushing ASM
14	33004-00	3	Nut-HF
15	94-3489	1	Capscrew-HH
16	94-8169	2	Decal-Position, Bracket
17	105-3834	1	Bolt-Shoulder
18	33124-025	4	Screw-CARR
19	33114-020	2	Screw-HH
20	99-8168	2	Collar-HOC
21	95-1638	2	Bracket-Rear, HOC Adjust
22	95-2910	1	Roller ASM
22:1	95-2913	1	Roller Tube ASM
22:2	302-5	2	Fitting-Grease
22:3	85-9970	2	Bearing
22:4	85-7190	2	Washer-Shield
22:5	32151-12	2	Ring-Retaining
22:6	95-2912	1	Shaft-Roller
23	93-2562	1	Spring-Compression
24	257-5	3	Washer-Thrust
25	77-0350	2	Washer-Thrust, Nylon
26	33113-008	2	Screw-HH
27	93-2522	1	Arm-Spring
28	93-2518	1	Housing-Pivot
29	93-2550	1	Adjustor ASM
30	93-2545	2	Screw-Pivot

☆ Not serviced separately

 * Not illustrated

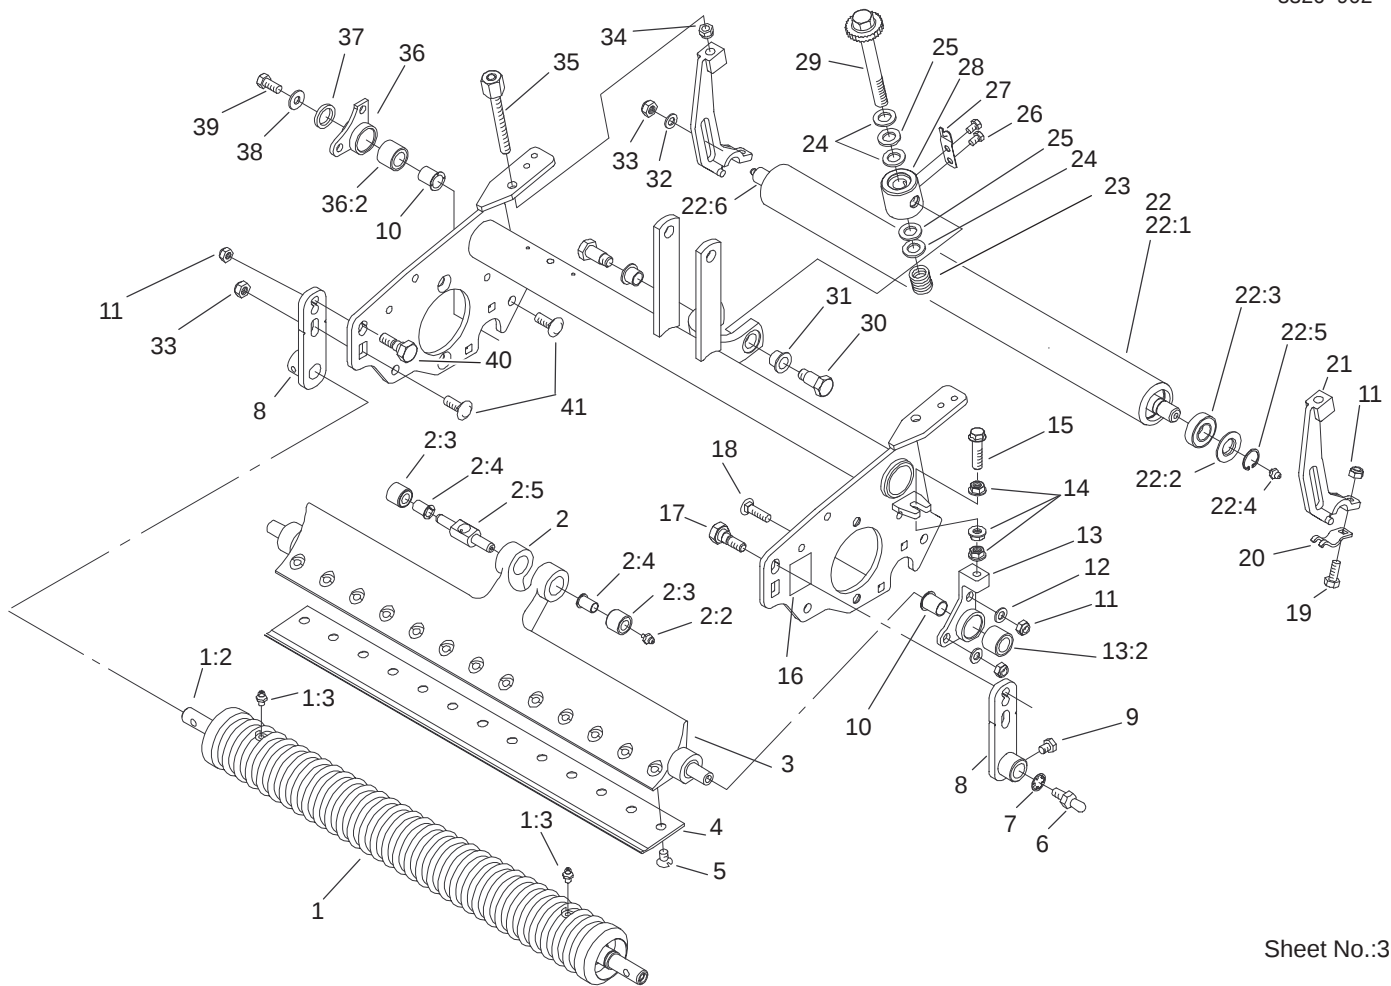

Sheet No.:3

Roller Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
31	93-2891	2	Bushing-Plastic
32	3256-46	2	Washer-Flat
33	33025-00	4	Nut-Lock
34	3296-5	2	Nut-Lock, NI
35	95-1633	2	HOC Adjust ASM
36	100-3380	1	RH Pivot Hub ASM
36:2	93-7501	1	Bushing ASM
37	93-7510	1	Ring-Quad
38	3256-82	1	Washer-Flat
39	33104-020	1	Screw-HHF
40	105-3833	1	Bolt-Eccentric
41	33125-025	4	Screw-CARR

Maintenance Record

[illegible]

Maintenance Record

[illegible]

