

Guardian Recycler® Conversion Kit Groundsmaster® 4000–D

Model No. 30420

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

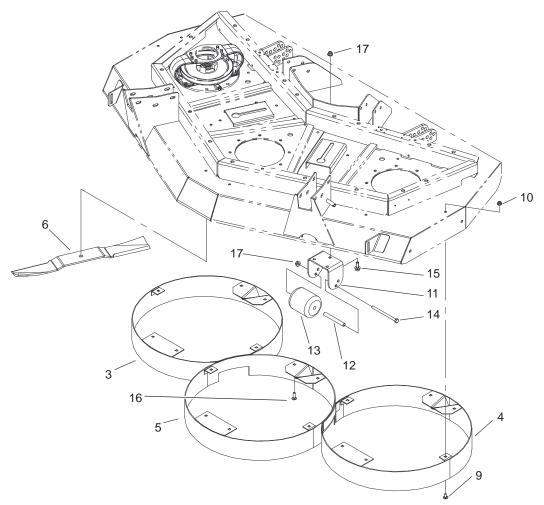


Center Chamber, Roller and Blade Assembly

Ref. No.	Part No.	Qty.	Description
3 4 4 5 6 9 10 11 12 13 14 15 16 17	3230–18 104–8300 104–0754–01 105–4549 93–4803 322–29 3234–42	1 1 1 7 38 45 3 3 3 3 9 4 9	RH Chamber ASM LH Chamber ASM Center Chamber ASM Blade Screw-CARR Nut-Flange, NI Bracket-Roller Spacer-Roller Roller-Deck Screw-HH Screw-HHF Screw-CARR Nut-Flange, NI

Ref. No.	Part No.	Qty.	Description

Sheet No.:0

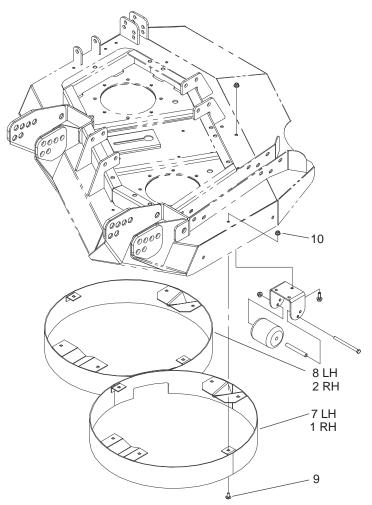

Sheet No.:1

Right and Left Chamber Assembly Ref No Part No. Qtv.

Ref. No.	Part No.	Qty.	Description
1	99–5538–01	1	RH Outer Chamber ASM
2	99–5539–01	1	RH Inner Chamber ASM
7	100–5533–01	1	LH Outer Chamber ASM
8	100–5534–01	1	LH Inner Chamber ASM
9	3230–18	38	Screw-CARR
10	104-8300	45	Nut–Flange, NI

Ref. No.	Part No.	Qty.	Description

