



11 Blade Cutting Unit

Greensmaster® Flex 21

Model No. 04200—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Right and Left Side Plate Assembly	3	Roller Assembly	5
Reel Assembly	4	Reel Drive Assembly	6

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

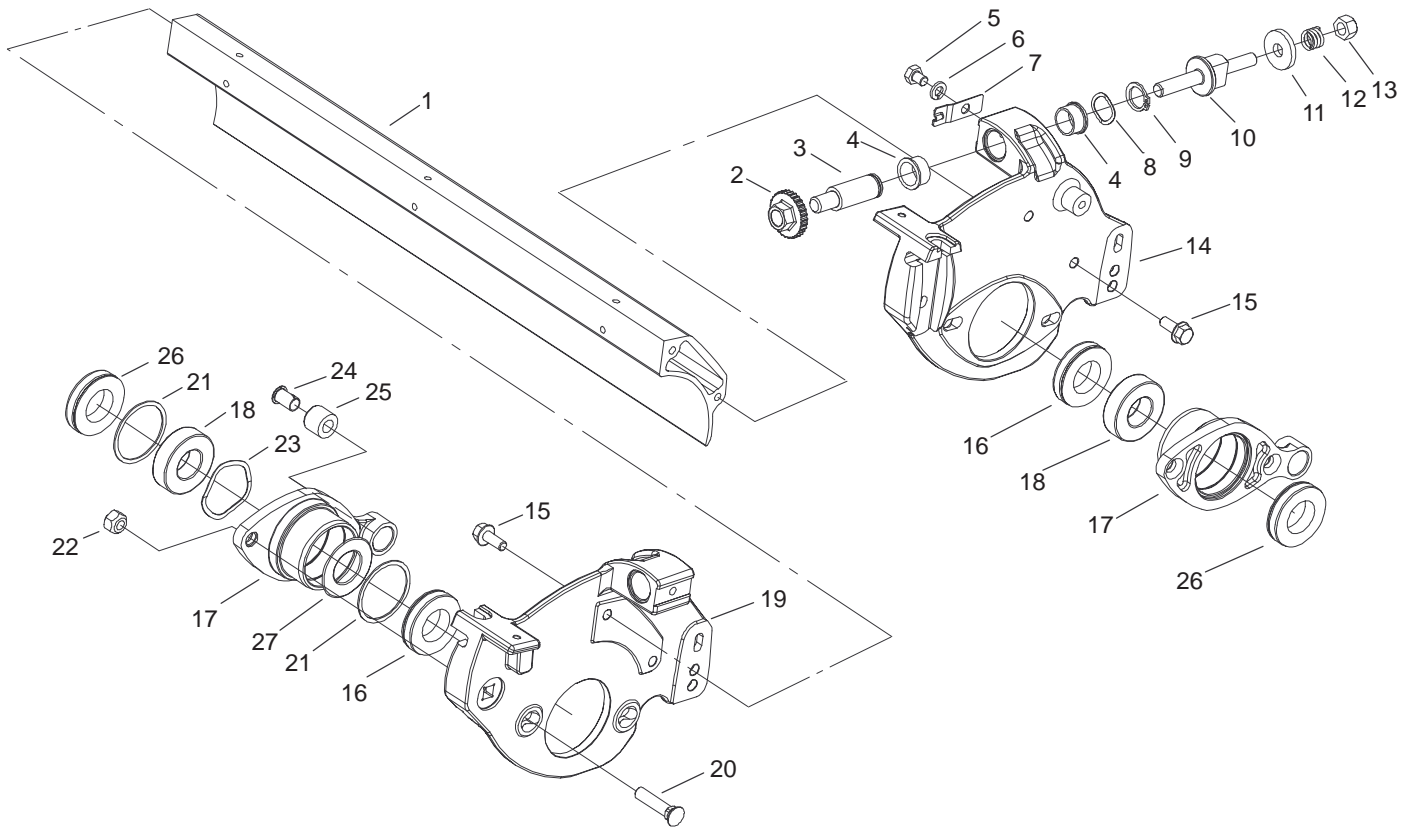


Sheet No.:2

Right and Left Side Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	99-2091	1	Frame-Shield, Extrusion
2	93-2549	2	Nut-Adjust
3	99-2093	2	Nut-Adjuster, Bedbar
4	256-252	4	Bearing-Flange
5	33114-010	2	Screw-HH
6	3253-4	2	Washer-Lock
7	99-2097	2	Detent
8	95-3703	2	Washer-Spring, Wave
9	32120-93	2	Ring-Retaining
10	99-2096	2	Screw-Adjuster, Bedbar
11	99-2098	2	Washer
12	99-3755	2	Spring-Compression
13	33025-00	2	Nut-Lock
14	105-5348	1	Plate-Side, LH
15	33104-020	4	Screw-HHF
16	105-9945	2	Seal-Grease, Blue
17	99-3766	2	Housing-Bearing, Reel
18	251-342	2	Bearing-Ball
19	105-5347	1	Plate-Side, RH
20	105-5342	4	Bolt-Plow
21	32151-92	2	Ring-Retaining
22	105-5344	4	Nut-Tapered
23	3290-485	1	Washer-Wave

Ref. No.	Part No.	Qty.	Description
24	52-2890	2	Bushing-Nylon
25	63-9510	2	Bushing
26	105-9945	2	Seal-Grease, Blue
27	105-9943	1	Washer-Thrust

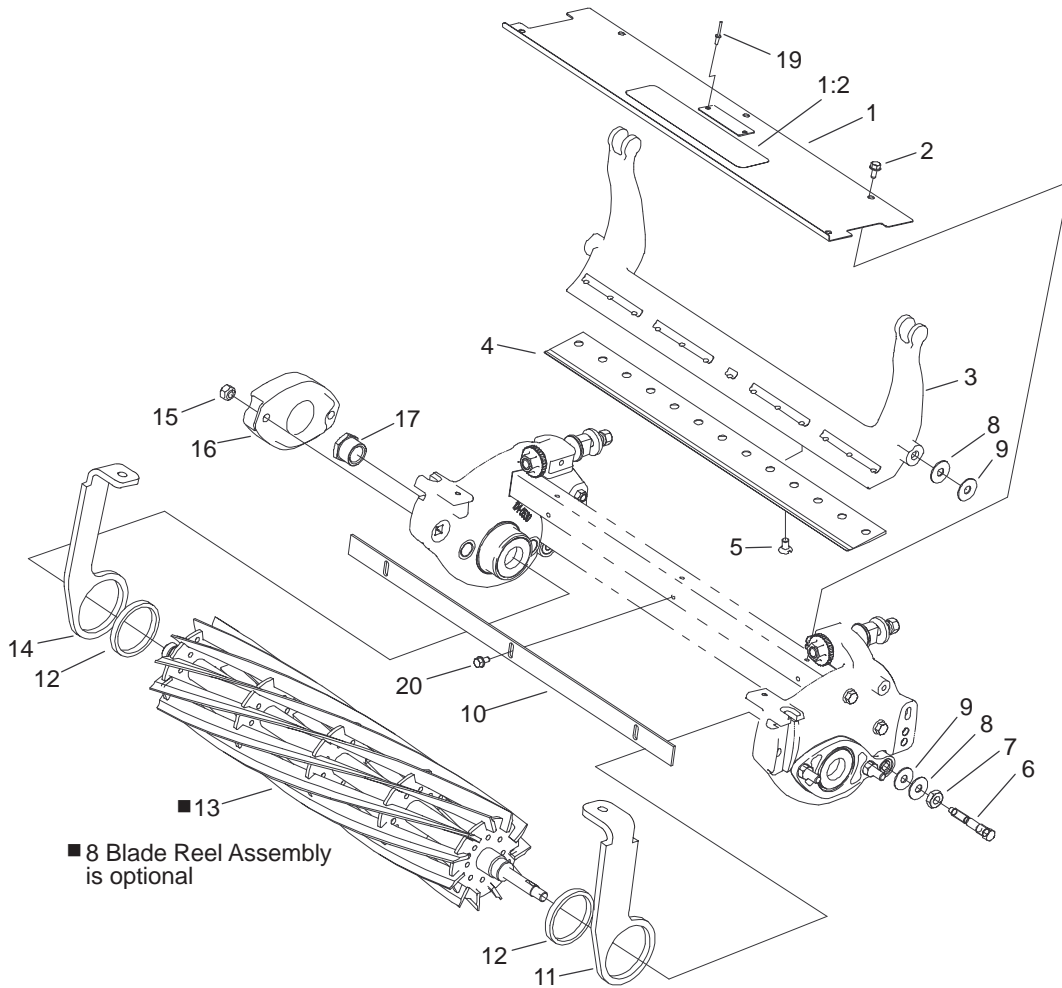


Sheet No.:3

Reel Assembly

Ref. No.	Part No.	Qty.	Description
1	104-2632	1	Grass Shield ASM
1:2	84-6560	1	Decal-Warning (Japan)
1:2	93-8064	1	Decal-Danger (Europe)
2	104-2628	5	Screw-HWH
3	99-3794-01	1	Bedbar
4	104-7720	1	Bedknife-Microcut, Extended
4	93-4262	1	Bedknife-Microcut
4	93-4263	1	Bedknife-Tournament
4	93-4264	1	Bedknife-Lowcut
5	57-4910	13	Screw
6	65-6270	2	Bolt-Bedbar
7	3220-26	2	Nut-Jam
8	52-2860	4	Washer
9	52-2900	4	Washer
10	104-2602-03	1	Bar-Off, Cut
11	105-2448-01	1	Arm-Pitch, LH
12	99-2047	2	Bushing
13	104-0500	1	11 Blade Reel ASM
13	105-2400	1	8 Blade Reel ASM
14	105-2447-01	1	Arm-Pitch, RH
15	104-2611	2	Nut-HF
16	104-0534-03	1	Weight-Reel
17	99-3767	1	Nut-Lock, Bearing

Ref. No.	Part No.	Qty.	Description
19	3290-271	2	Rivet-Pop
20	56-6380	3	Screw

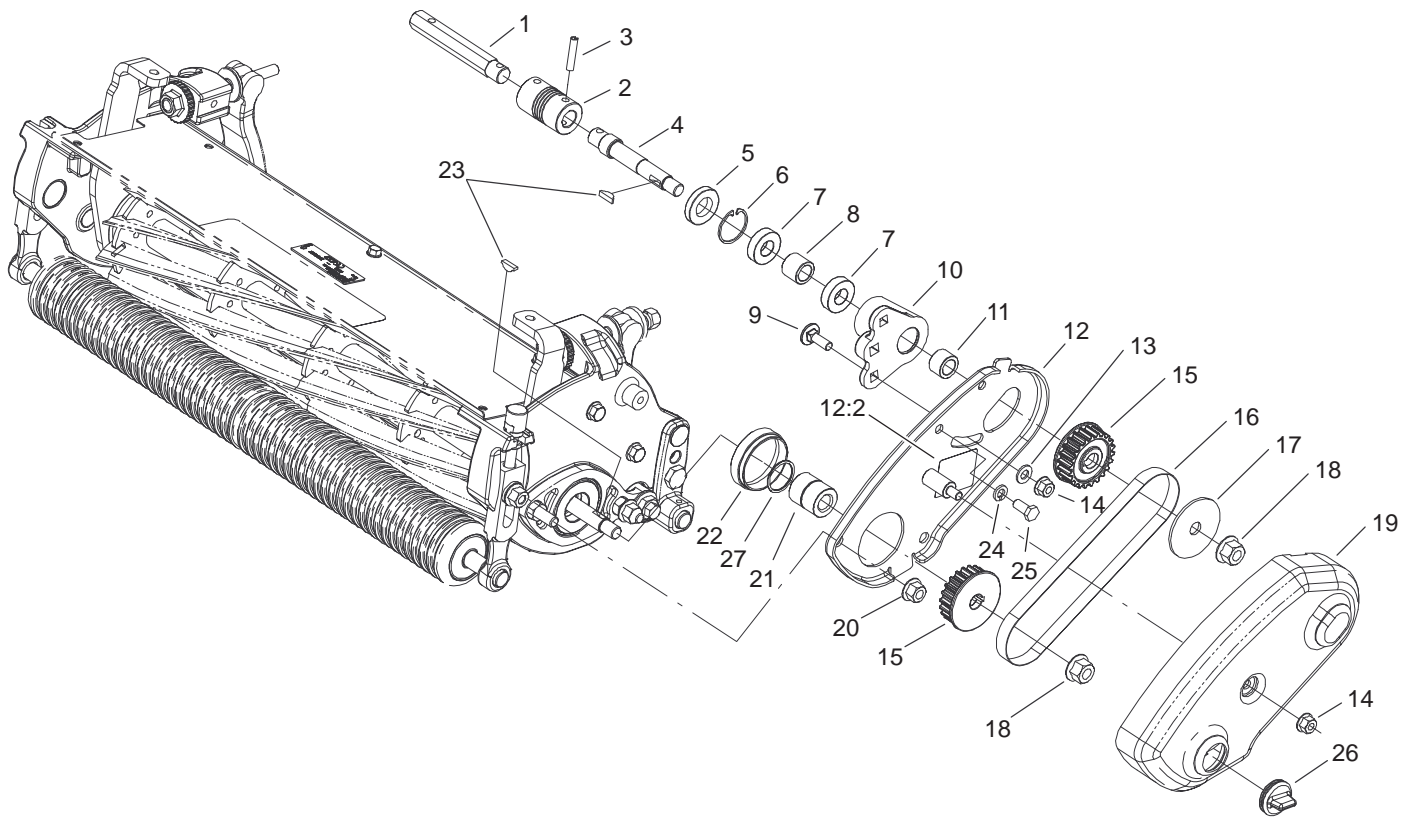

Sheet No.:5

Reel Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	99-3760	1	Shaft-Hex
2	99-3757	1	Coupling-Flex
3	32121-69	2	Pin-Spring
4	99-3756	1	Shaft
5	253-120	1	Seal-Oil
6	32151-51	1	Ring-Retaining
7	251-336	2	Bearing
8	99-2079	1	Spacer
9	33124-025	2	Screw-CARR
10	99-2083	1	Housing-Bearing
11	99-2080	1	Spacer
12	104-2631	1	Reel Drive Plate ASM
12:2	93-9356	1	Decal-Warning, Belt
12:2	93-9389	1	Decal-Warning, Belt (Japan)
13	3256-23	2	Washer-Flat
14	104-2612	3	Nut-HF
15	99-2081	2	Pulley-22 Tooth
16	99-2022	1	Belt
17	104-0532	1	Washer-Pulley
18	104-2610	2	Nut-HF
19	99-3793	1	Cover-Drive, Reel
20	104-2611	2	Nut-HF
21	99-2032	1	Spacer
22	99-2087	1	Spacer
23	3257-30	2	Key-Woodruff

Ref. No.	Part No.	Qty.	Description
24	3253-4	1	Washer-Lock
25	33114-016	1	Screw-HH
26	105-2438	1	Plug
27	32120-69	1	Ring-Snap

