



Seat Spring Kit

TimeCutter™ Z Riding Mowers

Part No. 105-6994

Form No. 3326-960

Installation Instructions

Loose Parts

Description	Qty.	Use
Screw, 5/16 x 1 in.	2	Attaching the springs
Spring	2	
Locknut, 5/16 in.	2	
Cap	2	
Nylon spacer, 1/2 in.	2	Attaching the seat
Nylon spacer, 11/32 in.	2	
Shoulder bolt, 5/16 x 7/8 in.	2	
Washer, 11/32 in.	2	
Knob	2	

1. Position the machine on a level surface. Set the parking brake, turn the ignition off, and remove the key.

⚠
Caution
⚠

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition switch before you do any maintenance.

2. Tip the seat forward and remove it from the seat support. Discard the existing knobs, washers, and shoulder bolts.
3. Lower the seat support. Locate, mark, and drill 2 (11/32 in.) holes in the seat plate as shown in Figure 1.

Note: Some mowers may already have the holes drilled in the seat support.

4. Attach the springs to the seat support with the 2 screws (5/16 x 1 in.) and locknuts (Fig. 1).
5. Attach the caps to the ends of the springs.
6. Attach the nylon spacers (1/2 in.) and shoulder bolts to the seat.
7. Slide the shoulder bolts on the bottom of the seat into the slots on the seat support (Fig. 1).

8. Slide the nylon spacers (11/32 in.) between the seat and seat support and secure the seat to the seat support with the knobs and washers (Fig. 1).
9. Lower the seat and adjust it if necessary; refer to Positioning the Seat in the Operator's Manual.

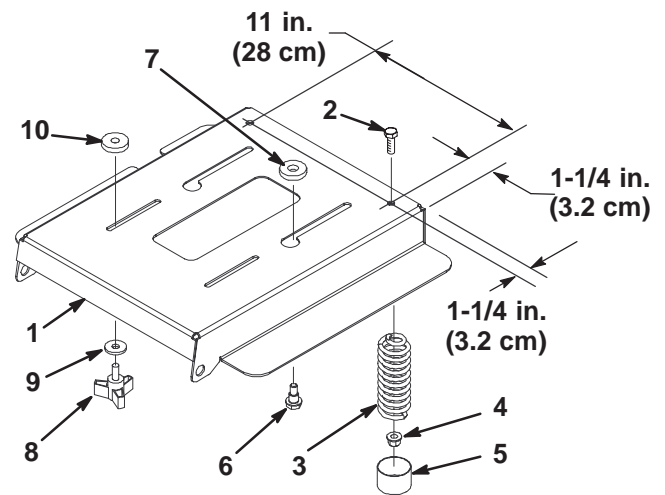


Figure 1

- | | |
|-----------------|-----------------------------|
| 1. Seat support | 6. Shoulder bolt |
| 2. Screw | 7. Nylon spacer, 1/2 in. |
| 3. Spring | 8. Knob |
| 4. Locknut | 9. Washer |
| 5. Cap | 10. Nylon spacer, 11/32 in. |