



Form No. 3449-655 Rev C

**Count on it.**

# Parts Catalog

## TimeCutter® 4200

### Riding Mower

Model No. 75740—Serial No. 410900000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

|                                                       |    |
|-------------------------------------------------------|----|
| Frame Assembly . . . . .                              | 4  |
| Deck Lift Assembly . . . . .                          | 6  |
| Tire and Caster Assembly . . . . .                    | 8  |
| Traction Drive Assembly . . . . .                     | 10 |
| LH Hydro Transmission Assembly No. 139-7450 . . . . . | 12 |
| RH Hydro Transmission Assembly No. 139-7451 . . . . . | 14 |
| Brake Assembly . . . . .                              | 16 |
| Rear Tire Assembly . . . . .                          | 18 |
| Seat Pan Assembly . . . . .                           | 20 |
| Seat Assembly No. 147-5157 . . . . .                  | 22 |
| Motion Control Assembly . . . . .                     | 24 |
| Engine and Muffler Assembly . . . . .                 | 26 |
| Fuel System Assembly . . . . .                        | 28 |
| Air Intake and Filtration Assembly . . . . .          | 30 |
| Ignition and Electrical Assembly . . . . .            | 32 |
| Crankcase Assembly . . . . .                          | 34 |
| Governor Control Assembly . . . . .                   | 36 |
| Piston and Cylinder Head Assembly . . . . .           | 38 |
| Blower Housing Assembly . . . . .                     | 40 |
| Gasket and Seal Kit . . . . .                         | 42 |
| Body Styling and Fuel Pod Assembly . . . . .          | 44 |
| Electrical Assembly . . . . .                         | 46 |
| 42 Inch Deck Assembly . . . . .                       | 48 |
| Decal Assembly . . . . .                              | 50 |
| Clutch Assembly . . . . .                             | 52 |
| Attachments and Accessories . . . . .                 | 54 |

## Frame Assembly

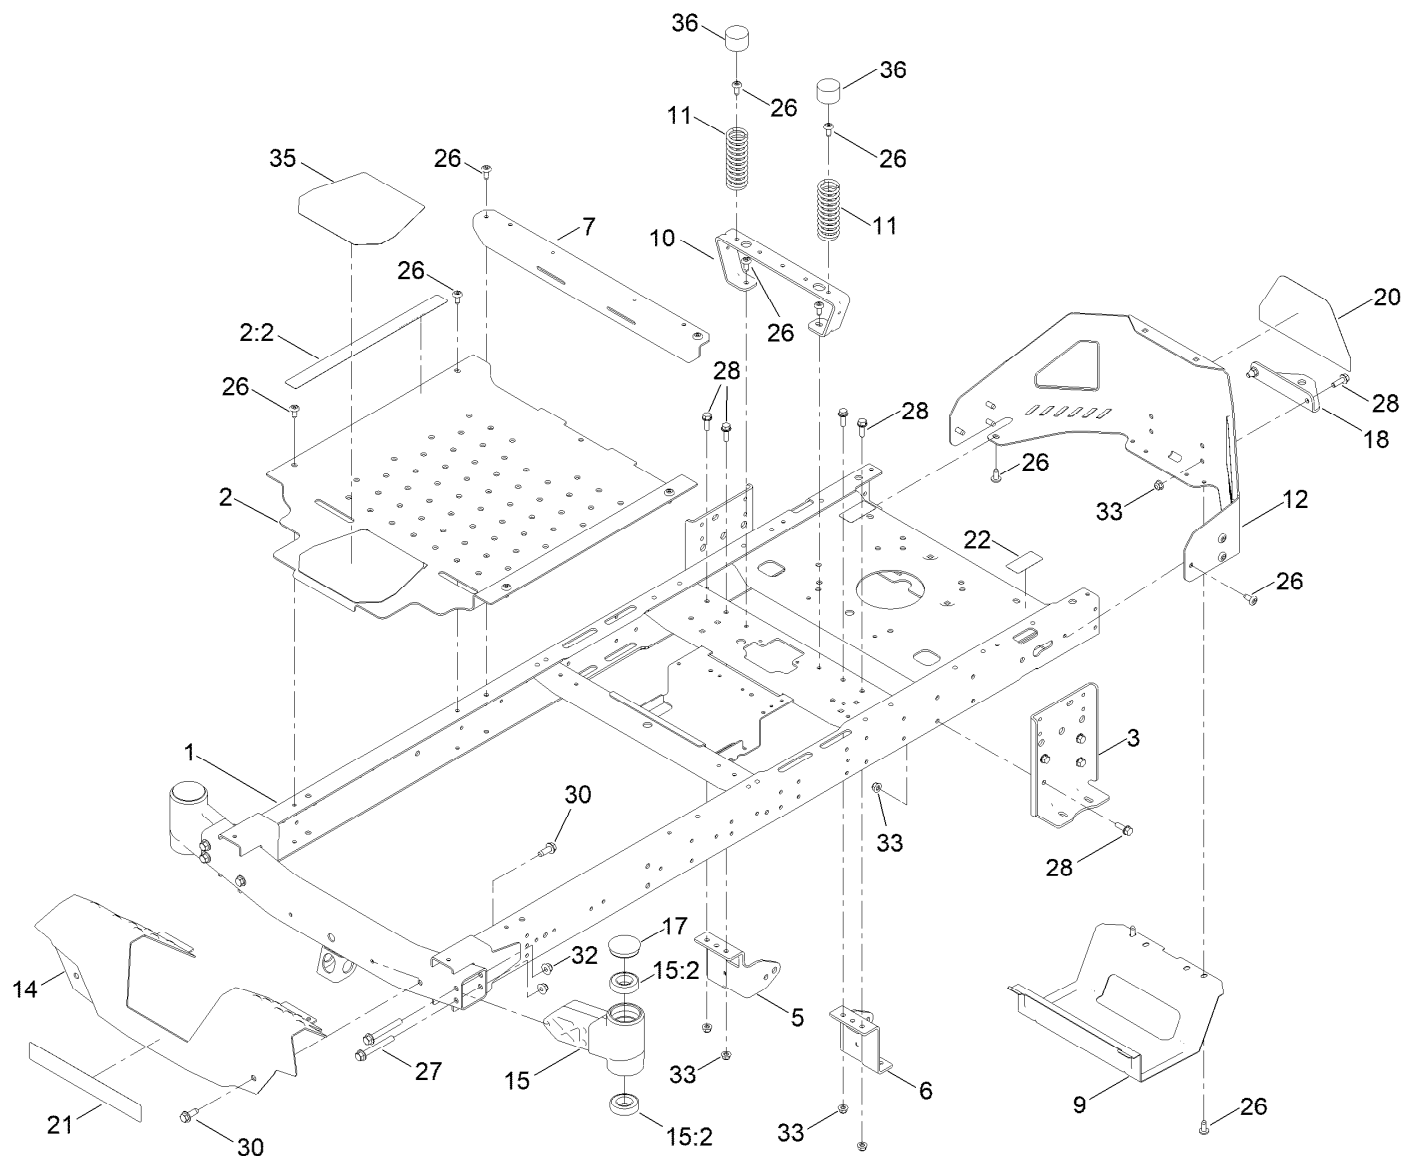

## Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-9820-01        | 1           | Frame Assembly             | 17          | 138-7200           | 2           | Cap-Grease         |
| 2           | 140-5045           | 1           | Pan-Floor ASM              | 18          | 117-1232-03        | 1           | Bracket-Hitch      |
| 2:2         | 144-5288           | 1           | Decal-Warning              | 20          | 139-5890           | 1           | Decal-Timecutter   |
| 3           | 138-7520-01        | 2           | Plate-Mount, Hydro         | 21          | 139-2387           | 1           | Decal-Timecutter   |
| 5           | 137-7020-01        | 1           | Mount-Hydro, Front (Right) | 22          | 121-2989           | 2           | Decal-Bypass       |
| 6           | 139-3211-01        | 1           | Mount-Hydro, Front (Left)  | 26          | 138-9753           | 20          | Screw              |
| 7           | 138-9791-01        | 1           | Brace-Cross                | 27          | 139-2429           | 4           | Screw-HHF          |
| 9           | 138-0867-03        | 1           | Guard-Muffler              | 28          | 3234-29            | 14          | Screw-HHF          |
| 10          | 138-6036-03        | 1           | Support-Seat               | 30          | 139-2428           | 4           | Screw-HWH          |
| 11          | 138-2548           | 2           | Spring-Compression         | 32          | 139-2430           | 4           | Nut-HF, NI         |
| 12          | 138-9820-03        | 1           | Guard-Engine               | 33          | 104-8300           | 14          | Nut-HF, NI         |
| 14          | 138-9827-01        | 1           | Footrest                   | 35          | 139-3220           | 1           | Tread-Step         |
| 15          | 140-2098           | 2           | Axle Stub ASM              | 36          | 701178             | 2           | Cap-Protector      |
| 15:2        | 109-3678           | 2           | Bearing-Ball               |             |                    |             |                    |

# Deck Lift Assembly



## Deck Lift Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 137-7093-03        | 1           | Deck Lift ASM           | 15          | 138-9753           | 5           | Screw              |
| 2           | 138-6021           | 2           | Bracket-Pivot, Decklift | 16          | 3234-29            | 1           | Screw-HHF          |
| 3           | 137-9844           | 1           | LH Arm ASM              | 18          | 137-9847           | 2           | Screw-Shoulder     |
| 4           | 137-9846           | 1           | RH Arm ASM              | 20          | 93-8806            | 2           | Washer-Hardened    |
| 5           | 139-2350-01        | 1           | Bracket-HOC             | 21          | 3256-26            | 7           | Washer-Flat        |
| 6           | 138-2564           | 2           | Plate-Adjustment, HOC   | 23          | 104-8300           | 1           | Nut-HF, NI         |
| 7           | 137-7087-03        | 1           | Lever-Lift              | 24          | 104-8301           | 2           | Nut-HF, NI         |
| 8           | 138-6050           | 1           | Rod-Mount, Deck         | 25          | 3296-19            | 1           | Nut-Hex            |
| 9           | 119-8810           | 1           | Pin-Pivot               | 26          | 139-2392           | 1           | Decal-HOC          |
| 14          | 1-806005           | 7           | Pin-Cotter              | 27          | 1-633268           | 1           | Grip-Lever         |

# Tire and Caster Assembly



## Tire and Caster Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-3274-01        | 2           | Fork ASM           | 2:99        | 105-0844           | 1           | Tube-Inner●■       |
| 2           | 139-5842           | 2           | Tire ASM           | 5           | 138-7240           | 2           | Bushing-Spanner    |
| 2:1         | 140-2736           | 1           | Tire               | 6           | 325-22             | 2           | Screw-HH           |
| 2:3         | 114-1640           | 2           | Bushing-Flange     | 7           | 3296-45            | 2           | Nut-Hex            |
| 2:4         | 232-27             | 1           | Stem-Valve         | 8           | 3256-68            | 2           | Washer-Flat        |
| 2:5         | 302-5              | 1           | Fitting-Grease     | 9           | 3234-47            | 2           | Screw-HHF          |

● Not illustrated

■ Optional Equipment

# Traction Drive Assembly



## Traction Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-7450           | 1           | LH Hydro Transaxle ASM | 14          | 3230-8             | 1           | Screw-CARR         |
| 2           | 139-7451           | 1           | RH Hydro Transaxle ASM | 15          | 115-1794           | 1           | Screw-HHF          |
| 3           | 138-2571-03        | 1           | Crossplate-Hydro       | 16          | 138-7590           | 4           | Screw-HHF          |
| 4           | 139-2399           | 1           | V-Belt                 | 17          | 322-11             | 4           | Screw-HH           |
| 5           | 138-9809           | 1           | Spacer                 | 18          | 324-8              | 2           | Screw-HH           |
| 6           | 138-7276           | 1           | Arm-Idler              | 19          | 324-10             | 4           | Screw-HH           |
| 7           | 138-7277           | 1           | Spacer-Arm, Idler      | 21          | 5-4460             | 1           | Washer-Pivot       |
| 8           | 68-0030            | 1           | Idler                  | 22          | 104-8300           | 10          | Nut-HF, NI         |
| 9           | 138-7597           | 1           | Pulley-Idler, Flat     | 24          | 3296-48            | 6           | Nut-Hex            |
| 10          | 137-7040           | 1           | Spring-Return, Pedal   | 25          | 242-50             | 8           | Nut-Lug            |
| 11          | 138-7245           | 1           | Rod-Bypass, RH         | 32          | 3256-25            | 6           | Washer-Flat        |
| 12          | 138-7243           | 1           | Rod-Bypass, LH         | 33          | 3256-23            | 2           | Washer-Plain       |
| 13          | 3290-307           | 2           | Pin-Cotter             | 34          | 119-8952           | 2           | Washer             |

# LH Hydro Transmission Assembly No. 139-7450




# LH Hydro Transmission Assembly No. 139-7450 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5532           | 1           | Main Housing ASM         | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5534           | 1           | Housing Side Kit         | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight    | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 10          |                    | 1           | Seal-Lip ●               | 94          | 120-5540           | 1           | Shaft-Axle                |
| 31          | 106-8677           | 1           | Ring-Retaining, External | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 32          | 106-8678           | 1           | Rod-Bypass               | 96          | 120-5542           | 1           | Seal-Lip                  |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 110         | 106-8677           | 1           | Ring-Retaining, External  |
| 42          | 104-2116           | 1           | Stud                     | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction            | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                   | 132         | 117-5362           | 1           | Control Arm Kit           |
| 47          | 105-1872           | 1           | Nut                      | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 50          | 133-1793           | 1           | Spring-Block             | 134         | 112-9861           | 1           | Center Section Filter Kit |
| 51          | 120-5538           | 1           | Washer                   | 135         | 114-1634           | 1           | Filter Kit                |
| 52          | 104-5306           | 1           | Shaft-Input              | 136         | 121-5730           | 1           | RH Expansion Tank Kit     |
| 53          | 104-5311           | 1           | Bearing-Ball             | 137         | 120-5549           | 1           | Bypass Kit                |
| 54          | 104-5307           | 1           | Ring-Retaining           | 138         | 121-5731           | 1           | Hub Kit                   |
| 55          | 104-5308           | 1           | Spacer                   | 139         | 135-7349           | 1           | Fan And Pulley Kit        |
| 56          | 104-5310           | 1           | Seal-Lip                 | 139:1       | 116-9714           | 1           | Nut-HJ                    |
| 57          | 104-5309           | 1           | Ring-Retaining           | 139:2       | 116-9708           | 1           | Washer-Slotted            |
| 58          | 104-2147           | 1           | Sealant                  | 139:4       | 135-7364           | 1           | Fan 7.0 X 10 Blade        |
| 60          | 94-6922            | 2           | Bearing-Thrust           | 150         | 104-5349           | 1           | Fitting-SAE               |
| 70          | 104-5339           | 1           | Washer-Flat              | 151         | 115-8302           | 1           | Hose                      |
| 71          | 104-5340           | 1           | Ring-Retaining           | 152         | 104-5361           | 1           | O-Ring                    |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T        | 157         | 120-7102           | 1           | Ring-Retaining            |
| 73          | 106-8683           | 1           | Shaft-Motor              | 159         | 121-5728           | 1           | Case-Tube                 |
| 74          | 104-5360           | 1           | Washer                   | 160         | 125-0041           | 1           | Cap-Axle                  |
| 80          | 119-5541           | 1           | Washer                   | 162         | 139-3278           | 1           | Breather ASM Kit          |
| 81          | 104-5317           | 1           | Gear-10T/48T             | 163         | 120-7103           | 1           | Seal And Ring Kit         |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T      |             |                    |             |                           |

● Not serviced separately

# RH Hydro Transmission Assembly No. 139-7451

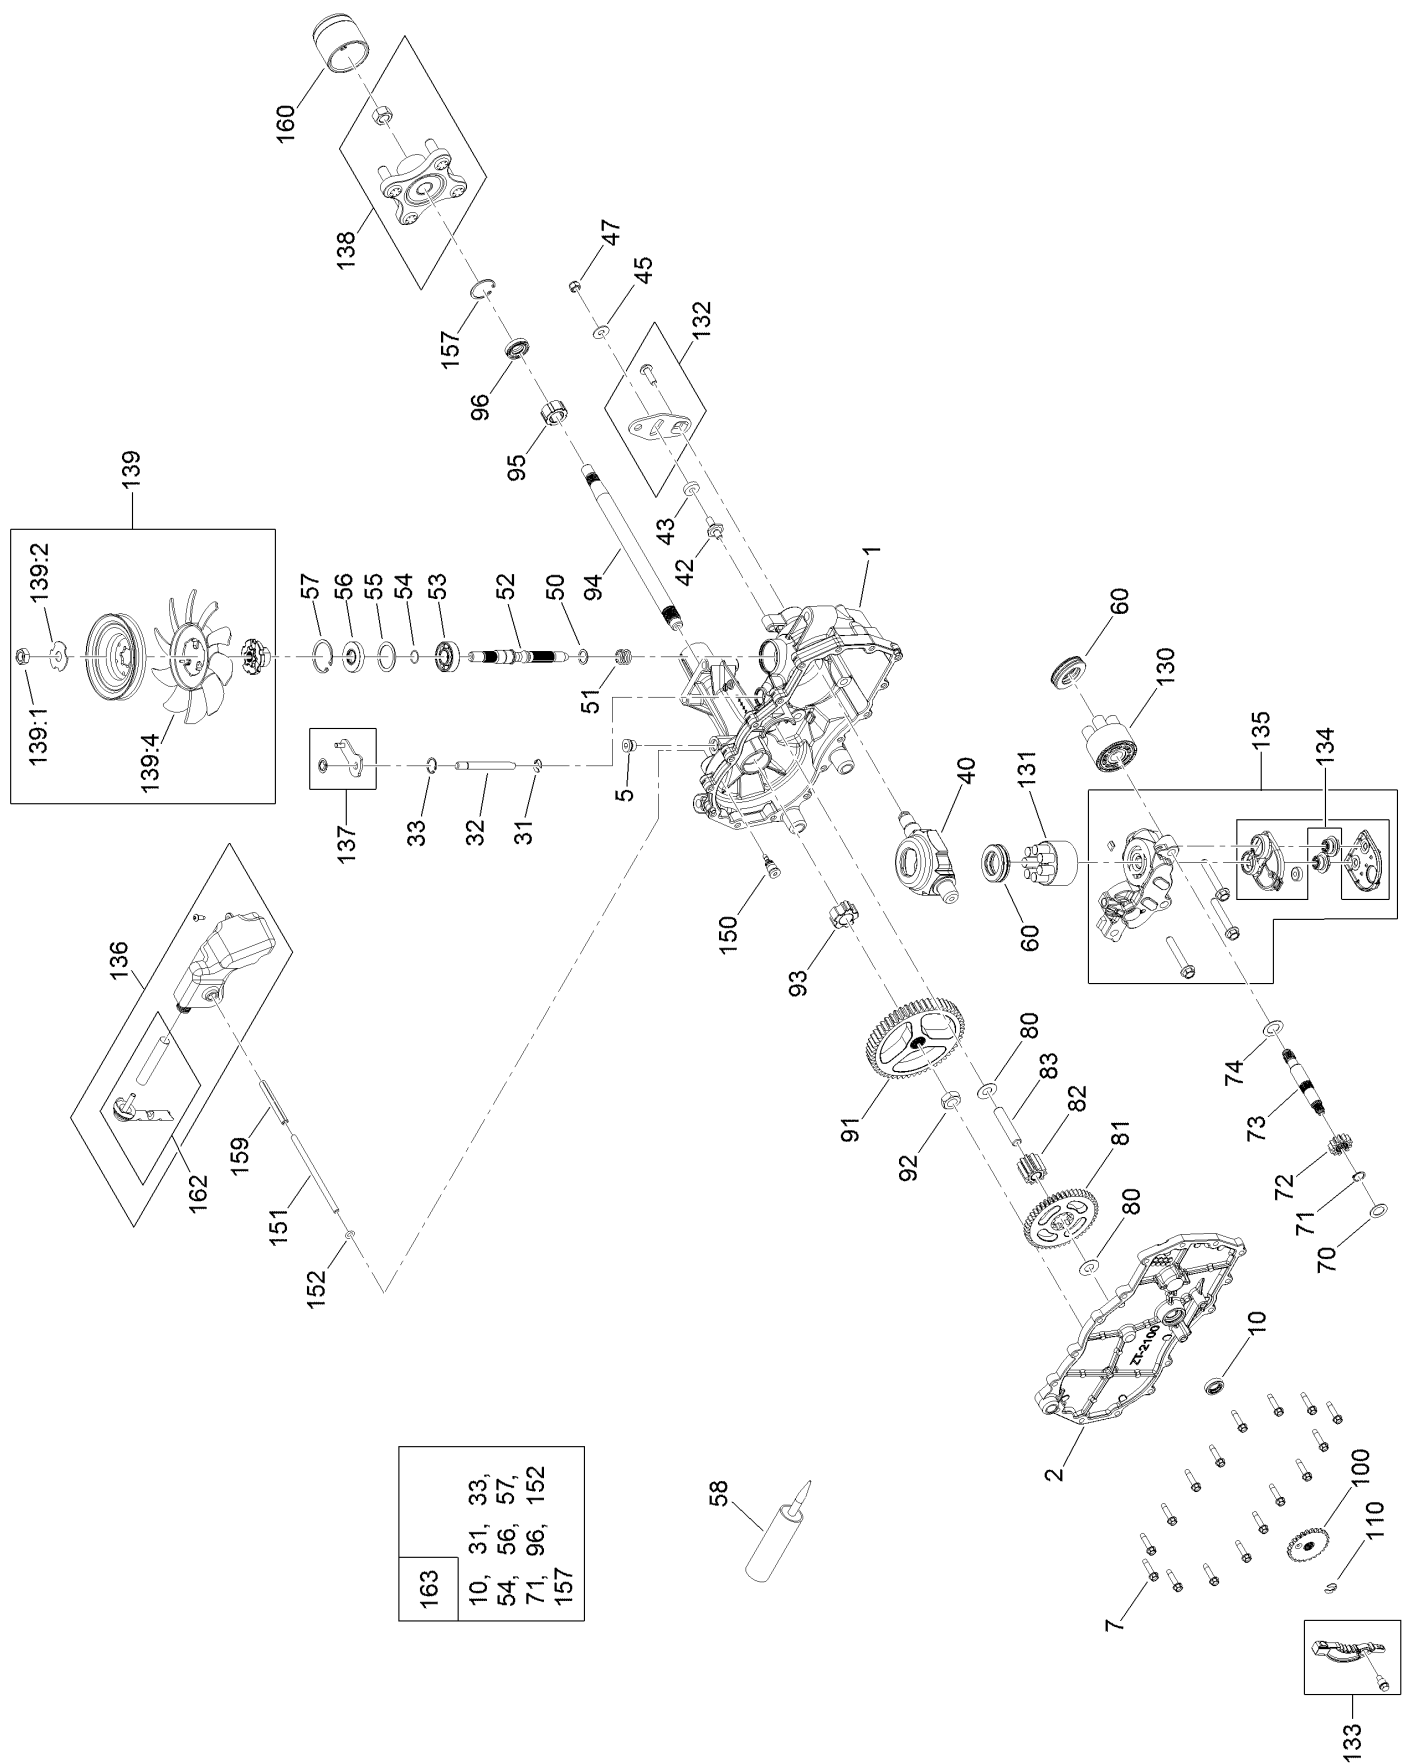

# RH Hydro Transmission Assembly No. 139-7451 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|---------------------------|
| 1           | 120-5531           | 1           | Main Housing ASM         | 83          | 104-5329           | 1           | Pin-Jackshaft             |
| 2           | 120-5533           | 1           | Housing Side Kit         | 91          | 120-5539           | 1           | Gear-Bull                 |
| 5           | 104-2189           | 1           | Plug-Thread, Straight    | 92          | 104-2142           | 1           | Nut-HJ                    |
| 7           | 117-5359           | 16          | Screw-HHF                | 93          | 115-8314           | 1           | Bushing-Inboard           |
| 10          |                    | 1           | Seal-Lip ●               | 94          | 120-5540           | 1           | Shaft-Axle                |
| 31          | 106-8677           | 2           | Ring-Retaining, External | 95          | 120-5541           | 1           | Bearing-Sleeve            |
| 32          | 106-8678           | 1           | Rod-Bypass               | 96          | 120-5542           | 1           | Seal-Lip                  |
| 33          | 106-8679           | 1           | Ring-Retaining, Internal | 100         | 106-8694           | 1           | Disc-Brake, Cog           |
| 40          | 104-5304           | 1           | Swashplate-Trunnion      | 110         | 106-8677           | 1           | Ring-Retaining, External  |
| 42          | 104-2116           | 1           | Stud                     | 130         | 103-2666           | 1           | Cylinder Block Kit        |
| 43          | 112-9853           | 1           | Puck-Friction            | 131         | 110-8561           | 1           | Pump Block ASM            |
| 45          | 114-8491           | 1           | Washer                   | 132         | 117-5362           | 1           | Control Arm Kit           |
| 47          | 105-1872           | 1           | Nut                      | 133         | 106-8688           | 1           | Brake Arm Kit             |
| 50          | 120-5538           | 1           | Washer                   | 134         | 112-9862           | 1           | Center Section Filter Kit |
| 51          | 133-1793           | 1           | Spring-Block             | 135         | 114-1634           | 1           | Filter Kit                |
| 52          | 104-5306           | 1           | Shaft-Input              | 136         | 121-5735           | 1           | LH Expansion Tank Kit     |
| 53          | 104-5311           | 1           | Bearing-Ball             | 137         | 107-2489           | 1           | Bypass Arm Kit            |
| 54          | 104-5307           | 1           | Ring-Retaining           | 138         | 121-5731           | 1           | Hub Kit                   |
| 55          | 104-5308           | 1           | Spacer                   | 139         | 135-7349           | 1           | Fan And Pulley Kit        |
| 56          | 104-5310           | 1           | Seal-Lip                 | 139:1       | 116-9714           | 1           | Nut-HJ                    |
| 57          | 104-5309           | 1           | Ring-Retaining           | 139:2       | 116-9708           | 1           | Washer-Slotted            |
| 58          | 104-2147           | 1           | Sealant                  | 139:4       | 135-7364           | 1           | Fan 7.0 X 10 Blade        |
| 60          | 94-6922            | 2           | Bearing-Thrust           | 150         | 104-5349           | 1           | Fitting-SAE               |
| 70          | 104-5339           | 1           | Washer-Flat              | 151         | 115-8302           | 1           | Hose                      |
| 71          | 104-5340           | 1           | Ring-Retaining           | 152         | 104-5361           | 1           | O-Ring                    |
| 72          | 104-5316           | 1           | Gear-Pinnion, 13T        | 157         | 120-7102           | 1           | Ring-Retaining            |
| 73          | 106-8683           | 1           | Shaft-Motor              | 159         | 121-5728           | 1           | Case-Tube                 |
| 74          | 104-5360           | 1           | Washer                   | 160         | 125-0041           | 1           | Cap-Axle                  |
| 80          | 119-5541           | 1           | Washer                   | 162         | 139-3278           | 1           | Breather ASM Kit          |
| 81          | 104-5317           | 1           | Gear-10T/48T             | 163         | 120-7103           | 1           | Seal And Ring Kit         |
| 82          | 104-5318           | 1           | Gear-Jackshaft, 10T      |             |                    |             |                           |

● Not serviced separately

# Brake Assembly



## Brake Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-2514           | 1           | Brake Box ASM        | 7           | 3290-307           | 2           | Pin-Cotter         |
| 2           | 133-9284-03        | 1           | Bracket-Mount, Brake | 8           | 32144-36           | 4           | Screw-PPH          |
| 3           | 138-2591           | 1           | Rod-Brake, LH        | 9           | 32144-4            | 2           | Screw-HWH          |
| 4           | 138-2592           | 1           | Rod-Brake, RH        | 10          | 119-8952           | 6           | Washer             |
| 5           | 117-1169           | 4           | Spring-Compression   | 11          | 3296-42            | 2           | Nut-Lock, NI       |

# Rear Tire Assembly



# Rear Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 139-5846           | 2           | Tire ASM           | 1:3         | 232-27             | 1           | Stem-Valve         |
| 1:1         | 140-2729           | 1           | Tire               | 1:99        | 107-2491           | 1           | Tube-Tire ●        |

● Not illustrated

# Seat Pan Assembly



## Seat Pan Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-9781-03        | 1           | Pan-Seat           | 8           | 5-4460             | 2           | Washer-Pivot       |
| 2           | 138-7555           | 1           | Rod-Pivot          | 9           | 322-2              | 2           | Screw-HH           |
| 3           | 108-0035           | 2           | Screw              | 12          | 139-2398           | 1           | Cable-Lanyard      |
| 4           | 147-5157           | 1           | Seat-16 In         | 13          | 120-7950           | 1           | Screw-Torx         |
| 6           | 37-8771            | 2           | Bolt-Shoulder, HF  |             |                    |             |                    |


# Seat Assembly No. 147-5157



## Seat Assembly No. 147-5157 (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 139-5891           | 1           | Seat-16 In         |
| 2           | 147-2983           | 1           | Cover-Seat         |
| 3           | 82-2190            | 1           | Switch-Bail        |


# Motion Control Assembly

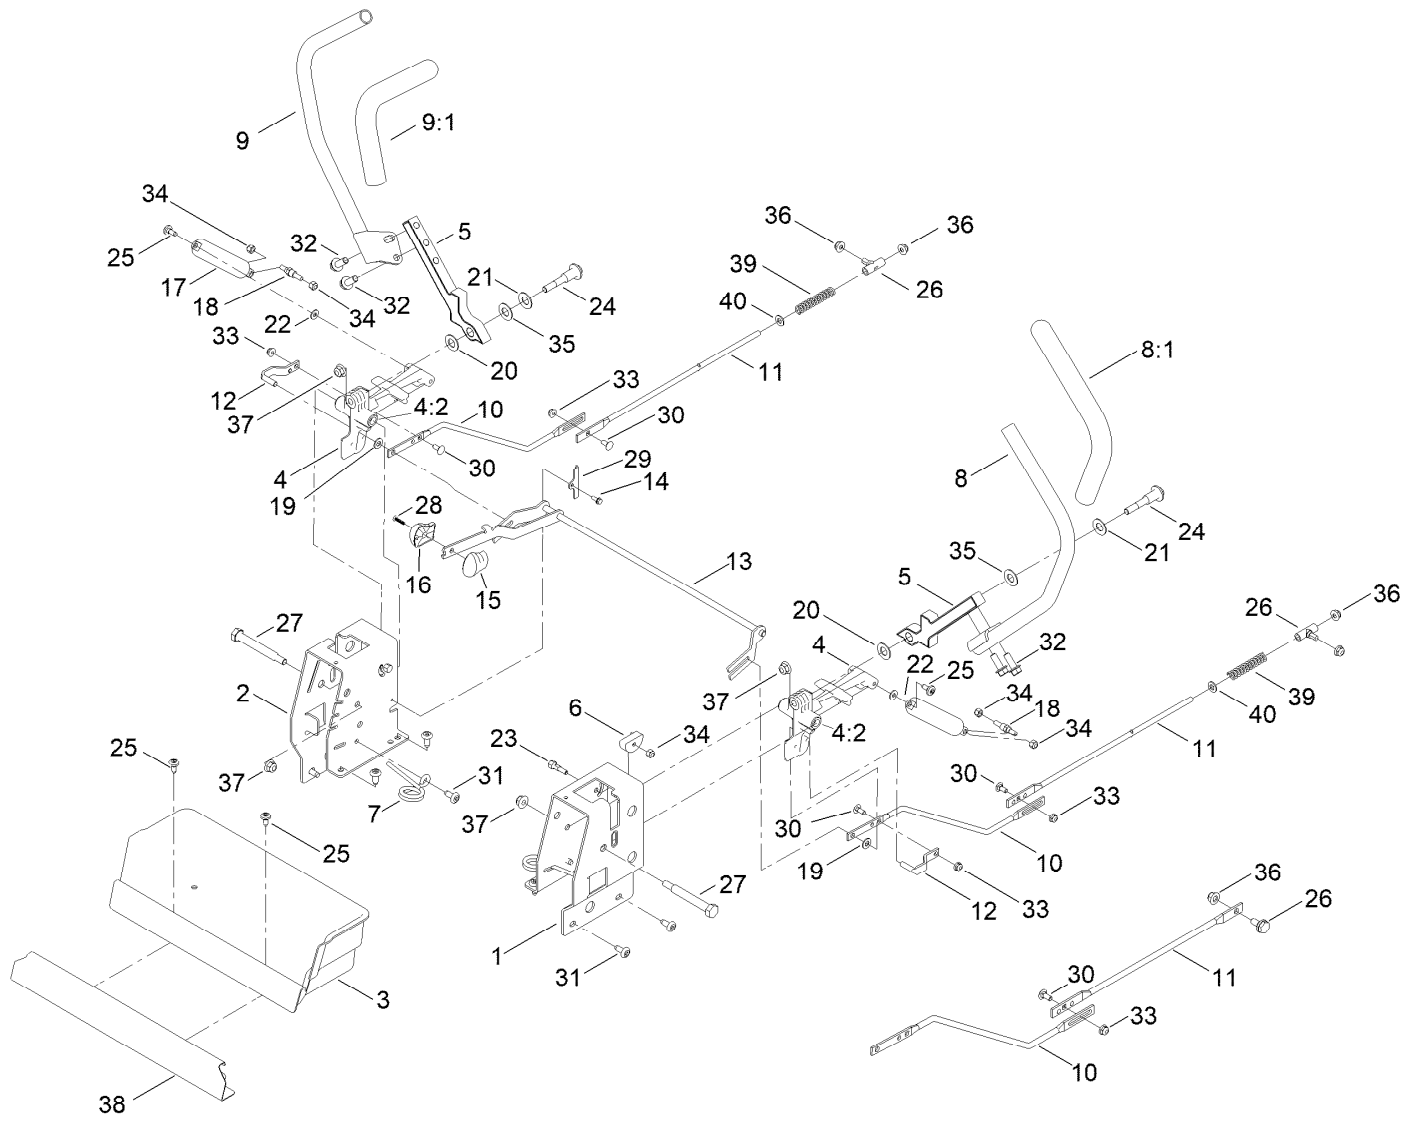

## Motion Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 138-7598-03        | 1           | Plate-Control Box, LH | 20          | 120-2273           | 2           | Washer-Nylon          |
| 2           | 138-7599-03        | 1           | Plate-Control Box, RH | 21          | 119-8925           | 2           | Washer-Belleville     |
| 3           | 139-3279           | 1           | Box-Storage           | 22          | 119-8952           | 2           | Washer                |
| 4           | 119-3470           | 2           | Actuator Arm ASM      | 23          | 139-5811           | 2           | Bolt-Pivot, Eccentric |
| 4:2         | 256-156            | 2           | Bushing-Flange        | 24          | 117-1198           | 2           | Bolt-Pivot            |
| 5           | 133-9299-05        | 2           | Arm-Control           | 25          | 120-7950           | 4           | Screw-Torx            |
| 6           | 139-5803           | 2           | Eccentric             | 26          | 138-7218           | 2           | Mount-Rod, Hydro      |
| 7           | 138-7539           | 2           | Spring-Torsion        | 27          | 115-5099           | 2           | Bolt-Pivot            |
| 8           | 133-7055           | 1           | Handle-Control, LH    | 28          | 94-4496            | 1           | Screw-PPH             |
| 8:1         | 121-0726           | 1           | Grip                  | 29          | 32144-1            | 2           | Screw-Taptite         |
| 9           | 133-7057           | 1           | Handle-Control, RH    | 30          | 3229-11            | 4           | Screw-CARR            |
| 9:1         | 121-0726           | 1           | Grip                  | 31          | 138-9753           | 10          | Screw                 |
| 10          | 138-2580           | 2           | Rod-Hydro, Front      | 32          | 3234-42            | 4           | Screw-HHF             |
| 11          | 144-1818           | 2           | Rod-Hydro, Rear       | 33          | 104-7201           | 4           | Nut-HF, NI            |
| 12          | 121-1753           | 2           | Pin-Rod, Hydro        | 34          | 3296-42            | 6           | Nut-Lock, NI          |
| 13          | 138-9750           | 1           | Speed Control ASM     | 35          | 117-1240           | 2           | Washer                |
| 14          | 138-7541           | 2           | Plate-Retainer        | 36          | 119-4041           | 2           | Nut-HF                |
| 15          | 132-9368           | 1           | Knob-RH               | 37          | 104-8301           | 4           | Nut-HF, NI            |
| 16          | 132-9369           | 1           | Knob-LH               | 38          | 139-3280-01        | 1           | Plate-Kick            |
| 17          | 132-6853           | 2           | Damper-Non Cavitating | 39          | 138-7252           | 2           | Spring-Compression    |
| 18          | 138-7215           | 2           | Stud-Damper           | 40          | 120-9683           | 2           | Washer-Plain          |
| 19          | 93-6079            | 2           | Spacer-Nylon          |             |                    |             |                       |


# Engine and Muffler Assembly

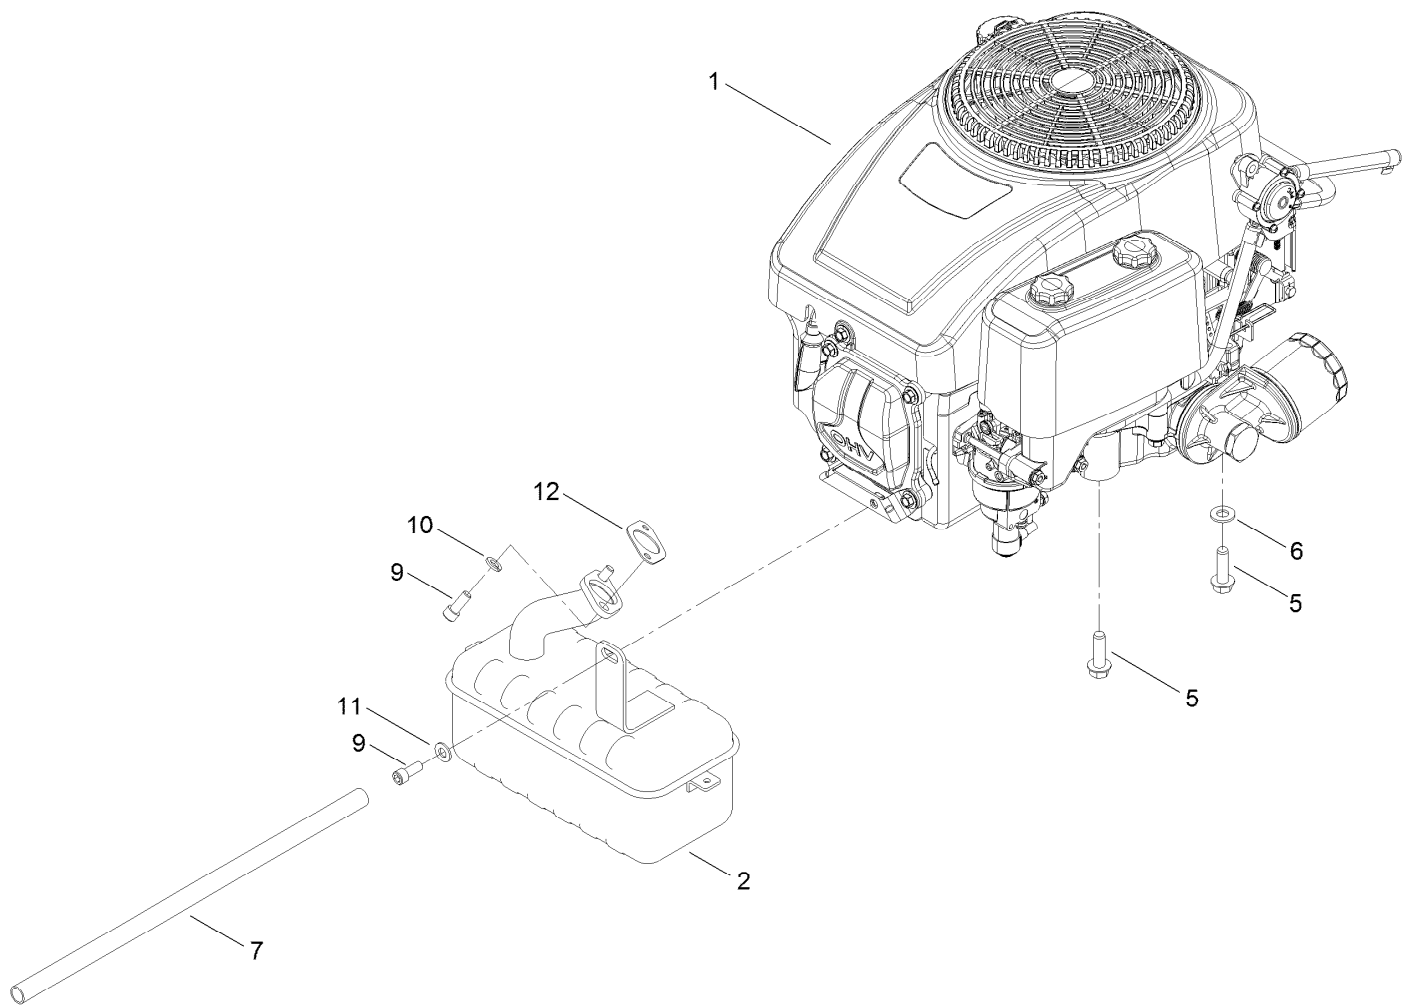

## Engine and Muffler Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 133-9971           | 1           | Engine-1P92F-1     | 9           | 3274-10            | 3           | Screw-HSH          |
| 2           | 130-0691           | 1           | Muffler            | 10          | 3253-4             | 2           | Washer-Lock        |
| 5           | 32144-109          | 4           | Screw-Thd          | 11          | 3256-23            | 1           | Washer-Plain       |
| 6           | 3256-24            | 3           | Washer-Flat        | 12          | 120-4317           | 1           | Gasket-Exhaust     |
| 7           | 106-7022           | 1           | Tube-Drain, Oil    |             |                    |             |                    |

# Fuel System Assembly

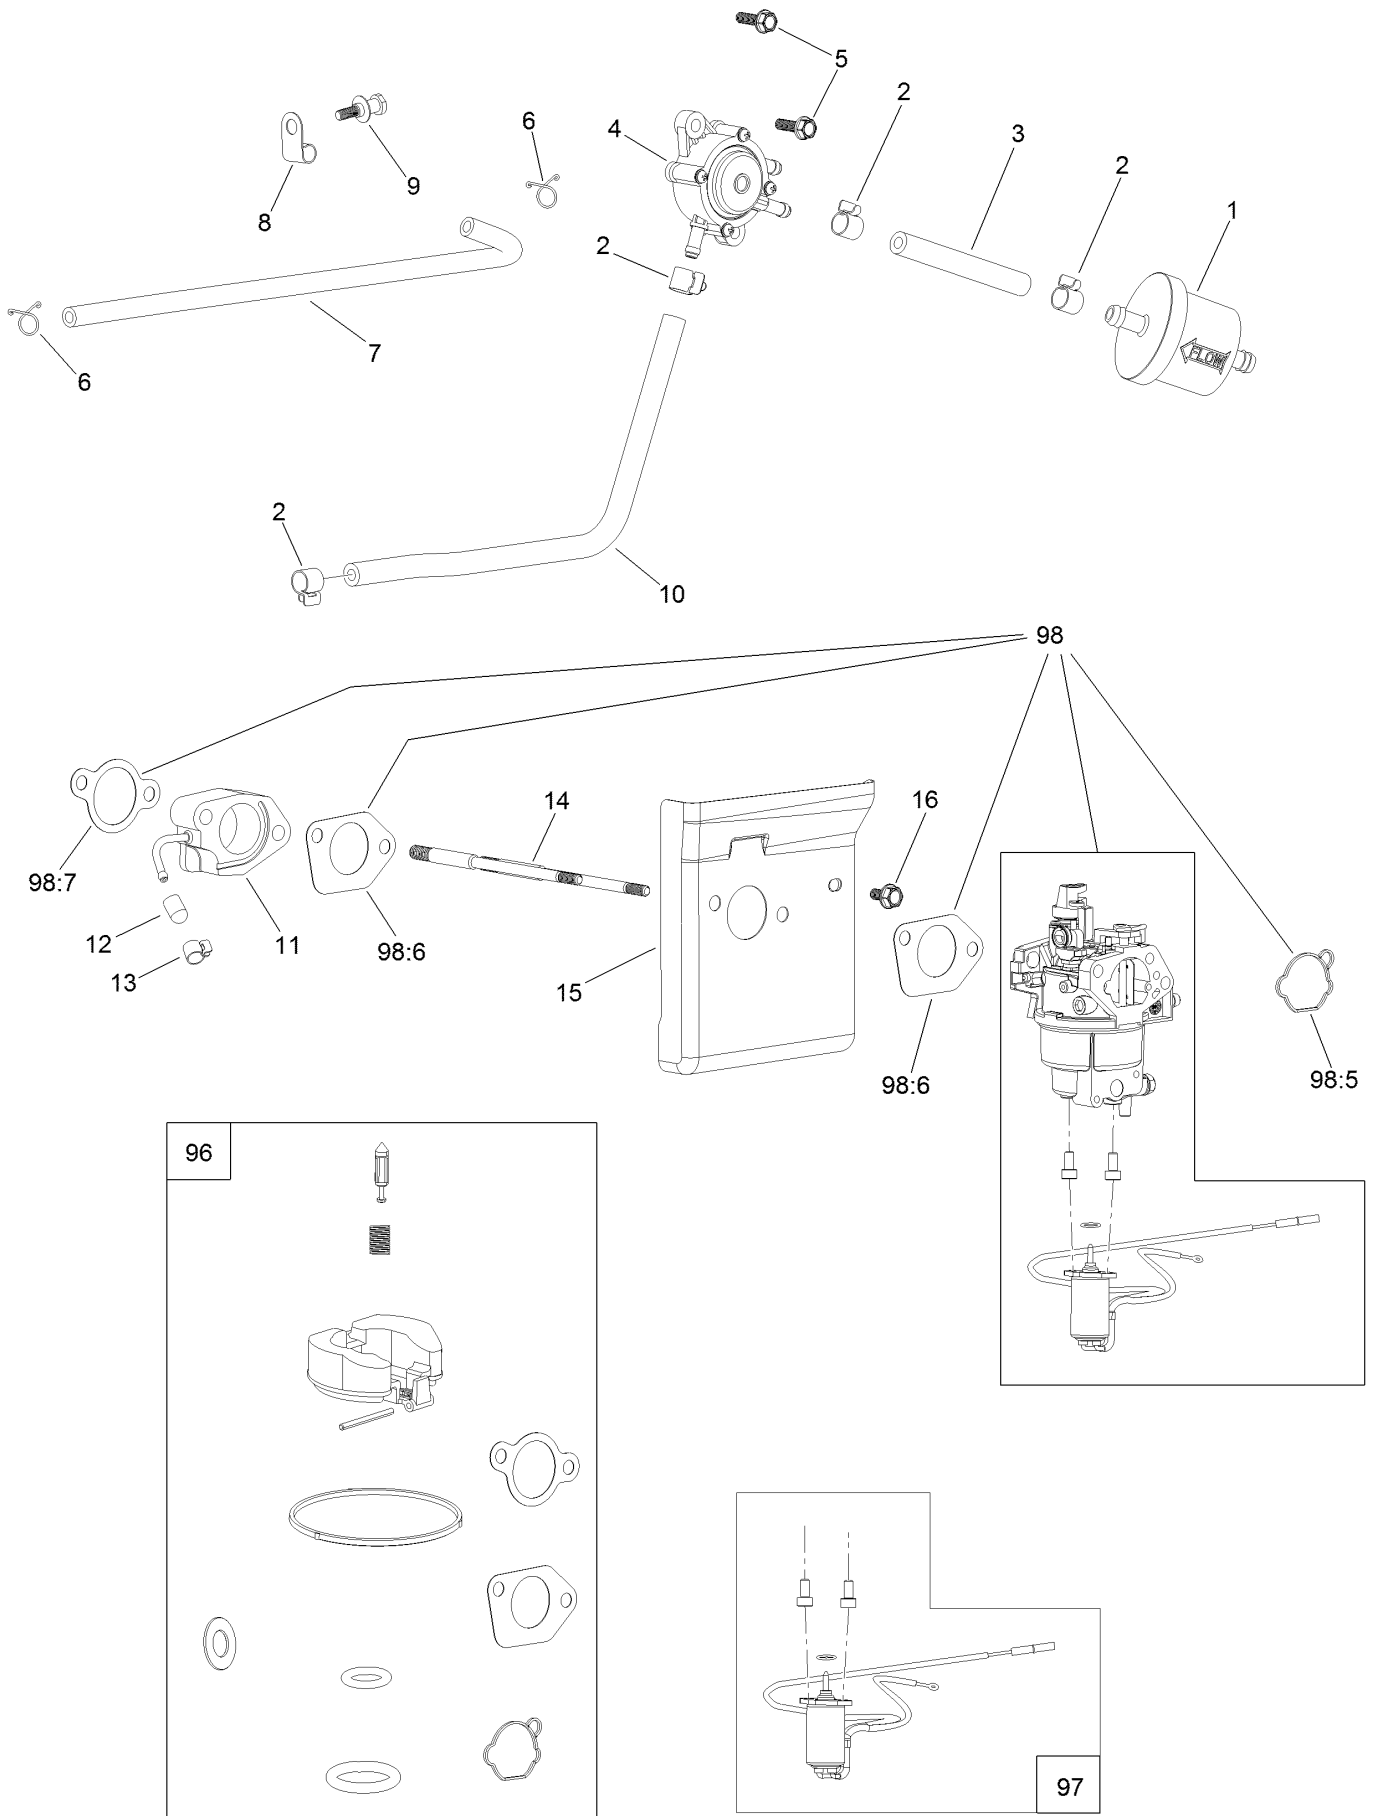


## Fuel System Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|---------------------------------|
| 1           | 139-0717           | 1           | Filter-Fuel          | 13          | 127-9187           | 1           | Clamp-Hose                      |
| 2           | 139-0719           | 4           | Clamp-Fuel Hose      | 14          | 120-4202           | 2           | Stud-Mount, Carburetor          |
| 3           | 120-4371           | 1           | Line-Fuel            | 15          | 127-9182           | 1           | Shroud                          |
| 4           | 139-0685           | 1           | Pump-Fuel            | 16          | 120-4216           | 1           | Screw-HHF                       |
| 5           | 120-4232           | 2           | Screw-HHF            | 96          | 127-9194           | 1           | Carb Repair Kit With<br>Gaskets |
| 6           | 121-0114           | 2           | Clamp-Hose           | 97          | 127-9190           | 1           | Solenoid Kit                    |
| 7           | 136-7830           | 1           | Line-Pulse           | 98          | 136-7826           | 1           | Carburetor Kit                  |
| 8           | 120-4287           | 1           | Clamp-J              | 98:5        | 127-9185           | 1           | Gasket-Carburetor               |
| 9           | 120-4217           | 1           | Screw-Shoulder, HH   | 98:6        | 120-4247           | 2           | Gasket-Carburetor               |
| 10          | 120-4370           | 1           | Line-Fuel            | 98:7        | 120-4250           | 1           | Gasket-Carburetor               |
| 11          | 136-7835           | 1           | Insulator-Carburetor | 99          | 133-9929           | 1           | High Altitude Kit ●             |
| 12          | 127-9189           | 1           | Cap-Seal             |             |                    |             |                                 |

● Not illustrated

# Air Intake and Filtration Assembly

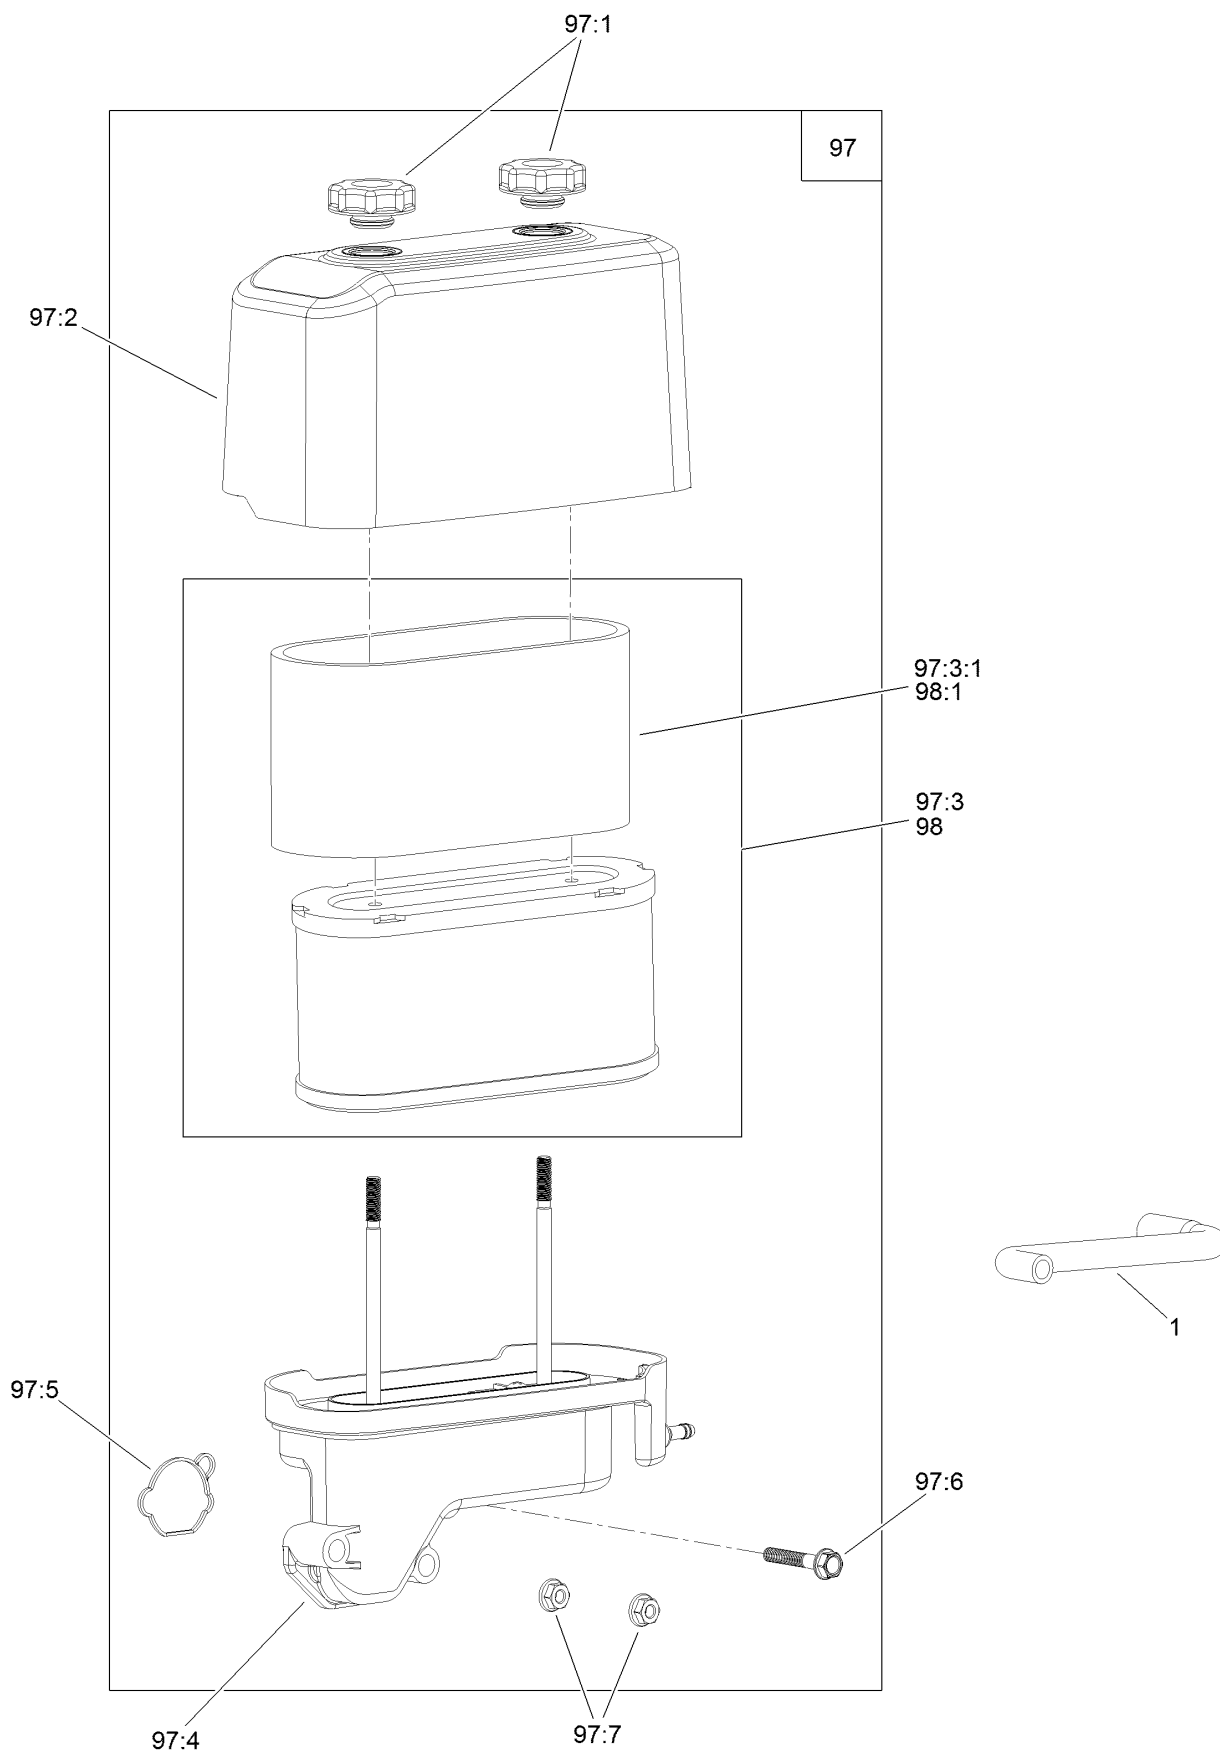


## Air Intake and Filtration Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 136-7829           | 1           | Tube-Breather      |
| 97          | 136-7814           | 1           | Air Filter ASM     |
| 97:1        | 120-4312           | 2           | Nut-Speed          |
| 97:2        | 120-4311           | 1           | Cover-Filter, Air  |
| 97:3        | 136-7809           | 1           | Air Filter Kit     |
| 97:3:1      | 136-7807           | 1           | Prefilter          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 97:4        | 127-9191           | 1           | Base-Filter, Air   |
| 97:5        | 127-9185           | 1           | Gasket-Carburetor  |
| 97:6        | 120-4284           | 1           | Screw-HHF          |
| 97:7        | 120-4236           | 2           | Nut-Flange         |
| 98          | 136-7809           | 1           | Air Filter Kit     |
| 98:1        | 136-7807           | 1           | Prefilter          |

# Ignition and Electrical Assembly

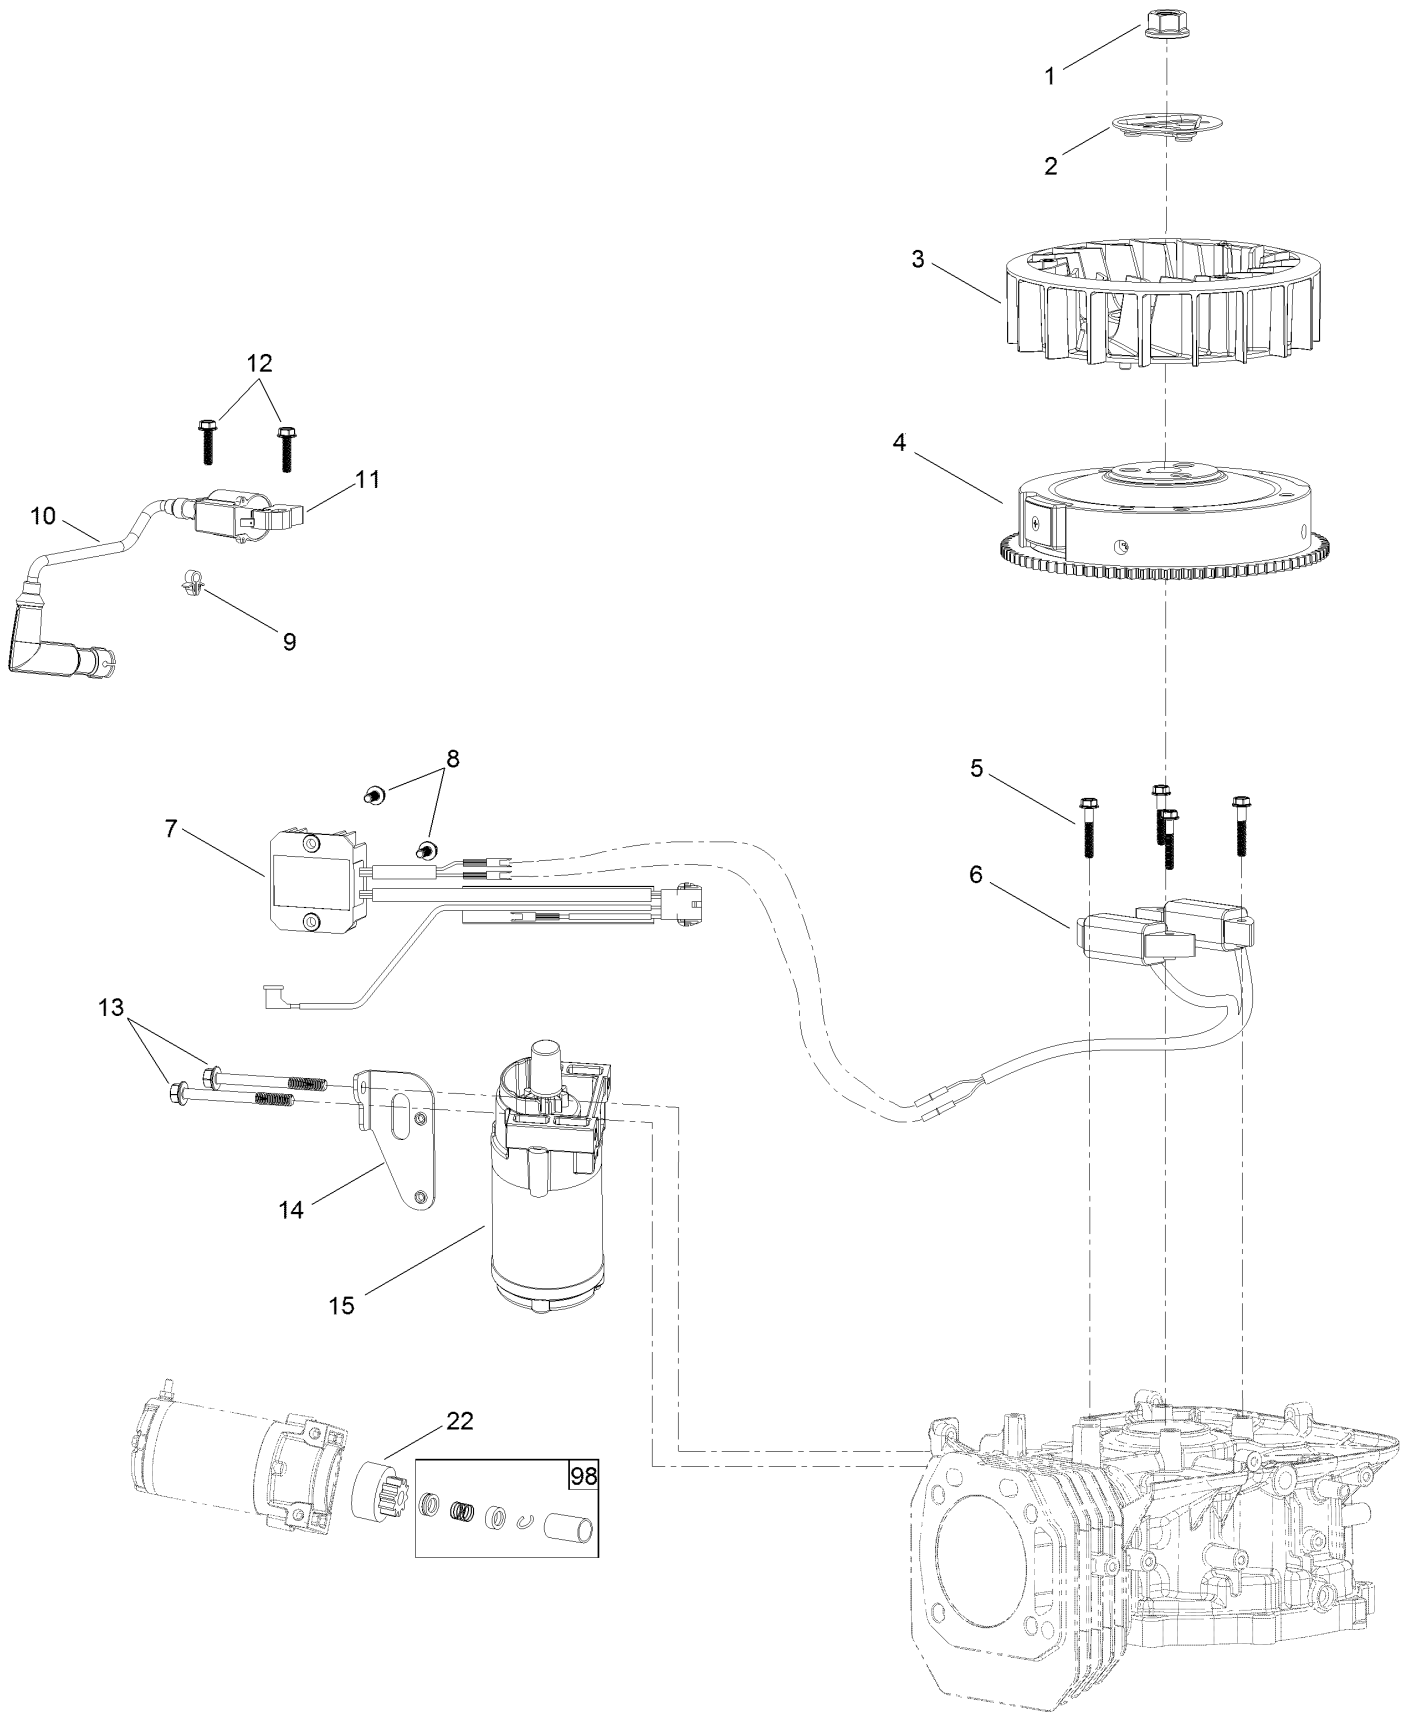


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-4213           | 1           | Nut-Flange         |
| 2           | 120-4212           | 1           | Pulley-Starter     |
| 3           | 120-4211           | 1           | Fan-Cooling        |
| 4           | 120-4399           | 1           | Flywheel           |
| 5           | 120-4223           | 4           | Screw-HHF          |
| 6           | 136-7833           | 1           | Alternator         |
| 7           | 136-7836           | 1           | Voltage Regulator  |
| 8           | 120-4216           | 3           | Screw-HHF          |
| 9           | 120-4316           | 1           | Clamp-Wire         |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 10          | 120-4226           | 1           | Boot-Plug, Spark   |
| 11          | 136-7831           | 1           | Ignition Coil ASM  |
| 12          | 120-4225           | 2           | Screw-HHF          |
| 13          | 120-4231           | 2           | Screw-HHF          |
| 14          | 120-4230           | 1           | Bracket-Starter    |
| 15          | 136-7832           | 1           | Motor-Starter      |
| 22          | 133-1562           | 1           | Pinion-Starter     |
| 98          | 120-4392           | 1           | Starter Repair Kit |


# Crankcase Assembly

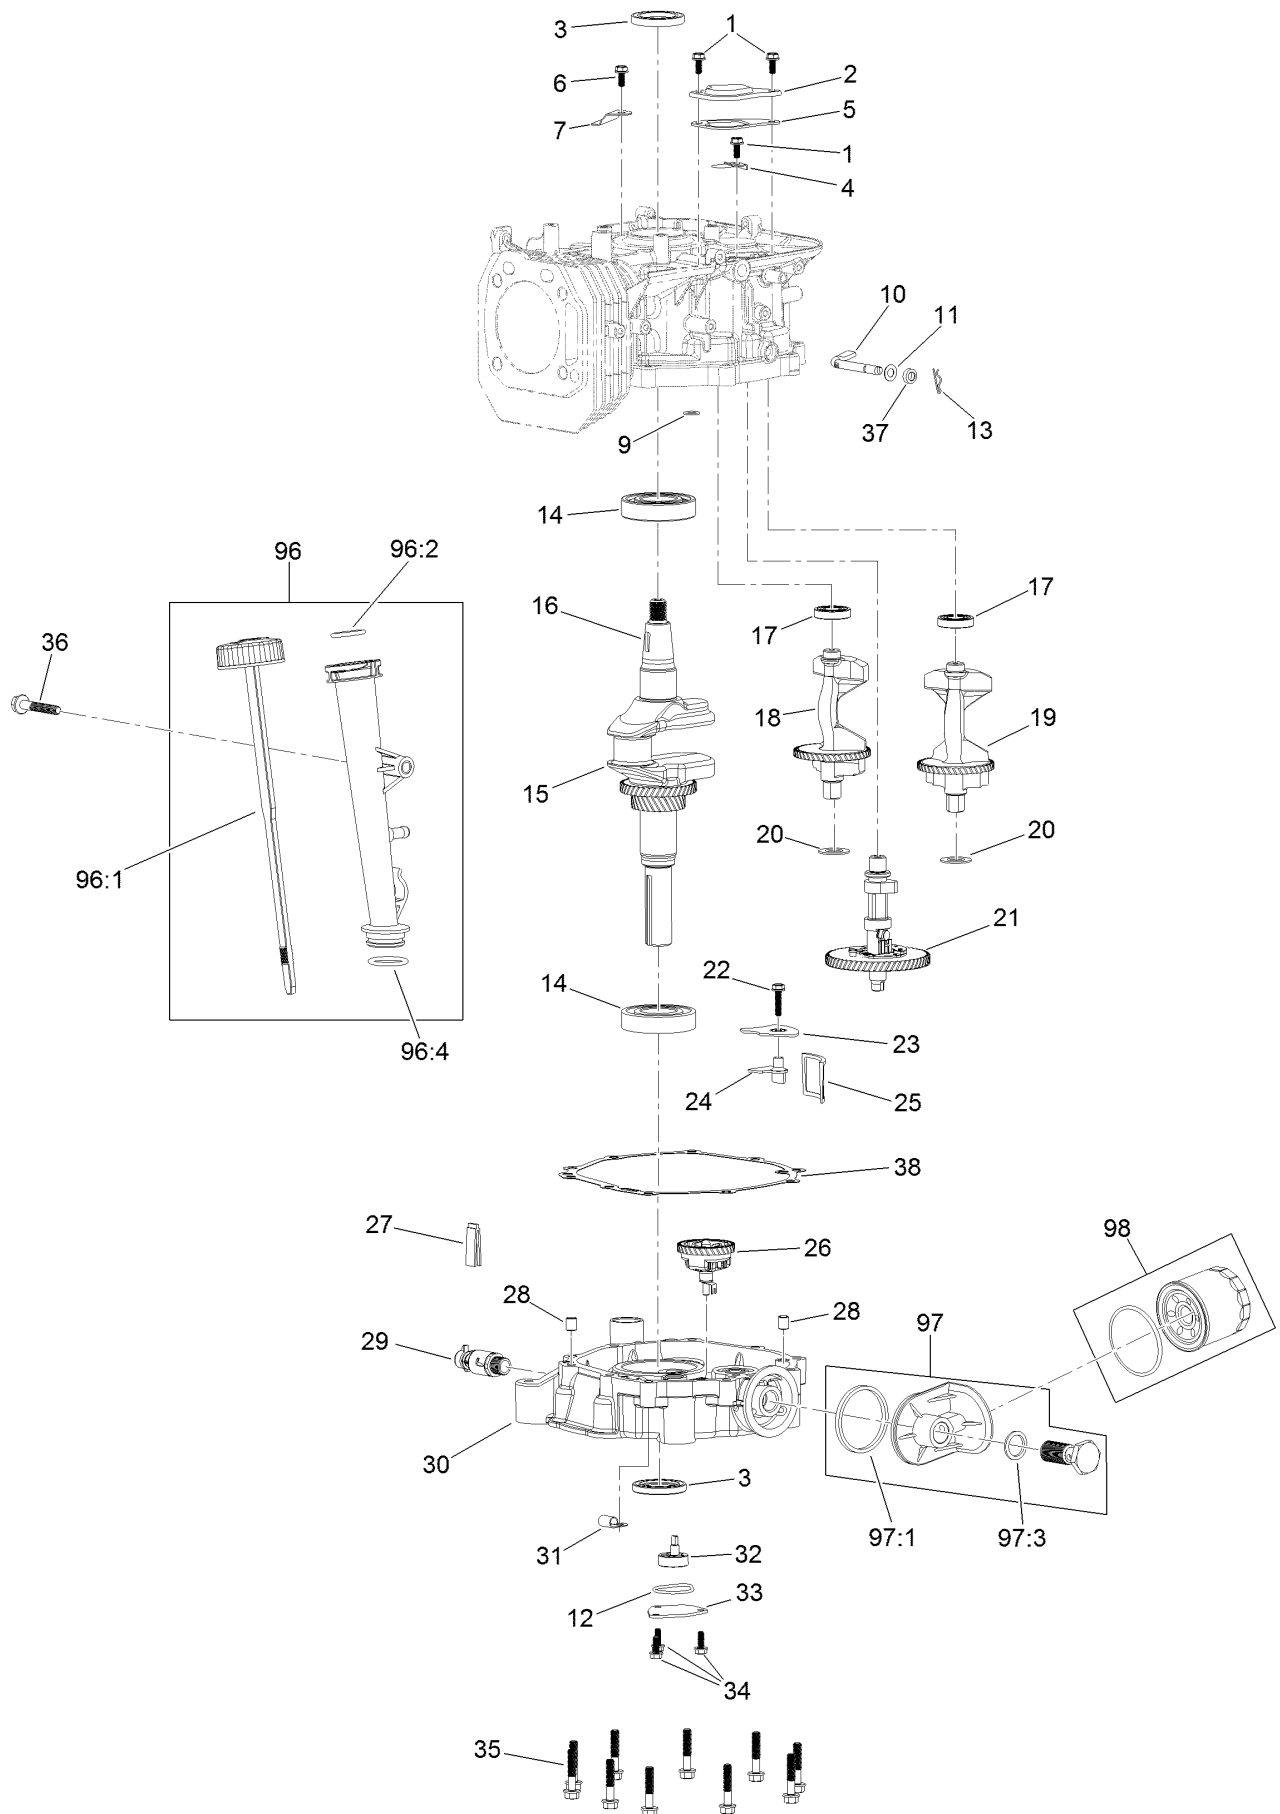

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 120-4216           | 3           | Screw-HHF           | 25          | 120-4341           | 1           | Strainer-Oil          |
| 2           | 120-4265           | 1           | Plate-Breather      | 26          | 136-7834           | 1           | Gear-Governor         |
| 3           | 120-4267           | 2           | Seal-Oil            | 27          | 120-4275           | 1           | Deflector-Oil, Rubber |
| 4           | 120-4263           | 1           | Valve-Reed          | 28          | 120-4274           | 2           | Pin-Dowel             |
| 5           | 120-4264           | 1           | Gasket-Breather     | 29          | 120-4321           | 1           | Valve-Drain, Oil      |
| 6           | 120-4234           | 1           | Screw-HHF           | 30          | 136-7828           | 1           | Cover-Crankcase       |
| 7           | 120-4268           | 1           | Retainer            | 31          | 127-9188           | 1           | Clamp-Hose            |
| 9           | 120-4262           | 1           | O-Ring              | 32          | 120-4344           | 1           | Oil Pump ASM          |
| 10          | 136-7887           | 1           | Shaft-Governor      | 33          | 120-4270           | 1           | Cover-Pump, Oil       |
| 11          | 120-4258           | 1           | Washer-Plain        | 34          | 120-4232           | 3           | Screw-HHF             |
| 12          | 120-4343           | 1           | Seal-Pump, Oil      | 35          | 120-4273           | 10          | Screw-HHF             |
| 13          | 120-4256           | 1           | Pin-Hair            | 36          | 120-4284           | 1           | Screw-HHF             |
| 14          | 120-4261           | 2           | Bearing-Ball        | 37          | 120-4257           | 1           | Seal-Oil              |
| 15          | 120-4293           | 1           | Crankshaft          | 38          | 120-4260           | 1           | Gasket-Crankcase      |
| 16          | 120-4320           | 1           | Key-Woodruff        | 96          | 120-4355           | 1           | Dipstick And Tube Kit |
| 17          | 120-4266           | 2           | Bearing-Ball        | 96:1        | 120-4350           | 1           | Dipstick ASM          |
| 18          | 127-9179           | 1           | Shaft-Balance, R    | 96:2        | 120-4348           | 1           | O-Ring                |
| 19          | 127-9180           | 1           | Shaft-Balance, L    | 96:4        | 120-4282           | 1           | O-Ring                |
| 20          | 136-7886           | 2           | Washer              | 97          | 120-4363           | 1           | Oil Adaptor Kit       |
| 21          | 120-4297           | 1           | Camshaft            | 97:1        | 120-4362           | 1           | Seal-Adaptor, Oil     |
| 22          | 120-4225           | 1           | Screw-HHF           | 97:3        | 120-4360           | 1           | Washer-Filter, Oil    |
| 23          | 120-4342           | 1           | Cover-Strainer, Oil | 98          | 136-7848           | 1           | Filter-Oil            |
| 24          | 120-4279           | 1           | Plate-Baffle, Oil   |             |                    |             |                       |


# Governor Control Assembly

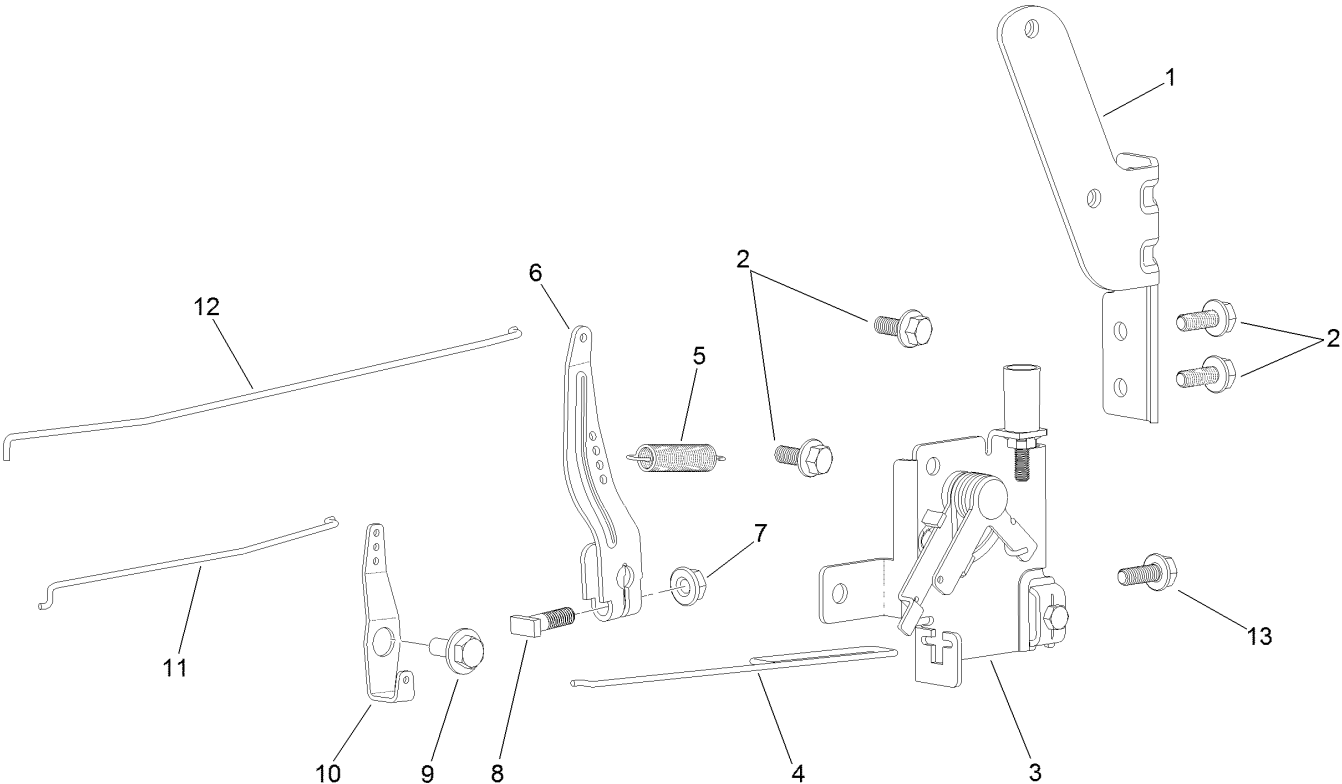

## Governor Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|---------------------|
| 1           | 120-4357           | 1           | Bracket-Pump, Fuel | 8           | 120-4238           | 1           | Bolt-Arm, Governor  |
| 2           | 120-4234           | 4           | Screw-HHF          | 9           | 120-4241           | 1           | Screw-Shoulder, HHF |
| 3           | 120-4358           | 1           | Control-Throttle   | 10          | 120-4242           | 1           | Bellcrank-Choke     |
| 4           | 120-4243           | 1           | Rod-Throttle       | 11          | 120-4240           | 1           | Rod-Choke           |
| 5           | 120-4337           | 1           | Spring-Governor    | 12          | 120-4239           | 1           | Rod-Governor        |
| 6           | 120-4352           | 1           | Arm-Governor       | 13          | 120-4232           | 1           | Screw-HHF           |
| 7           | 120-4236           | 1           | Nut-Flange         |             |                    |             |                     |


# Piston and Cylinder Head Assembly

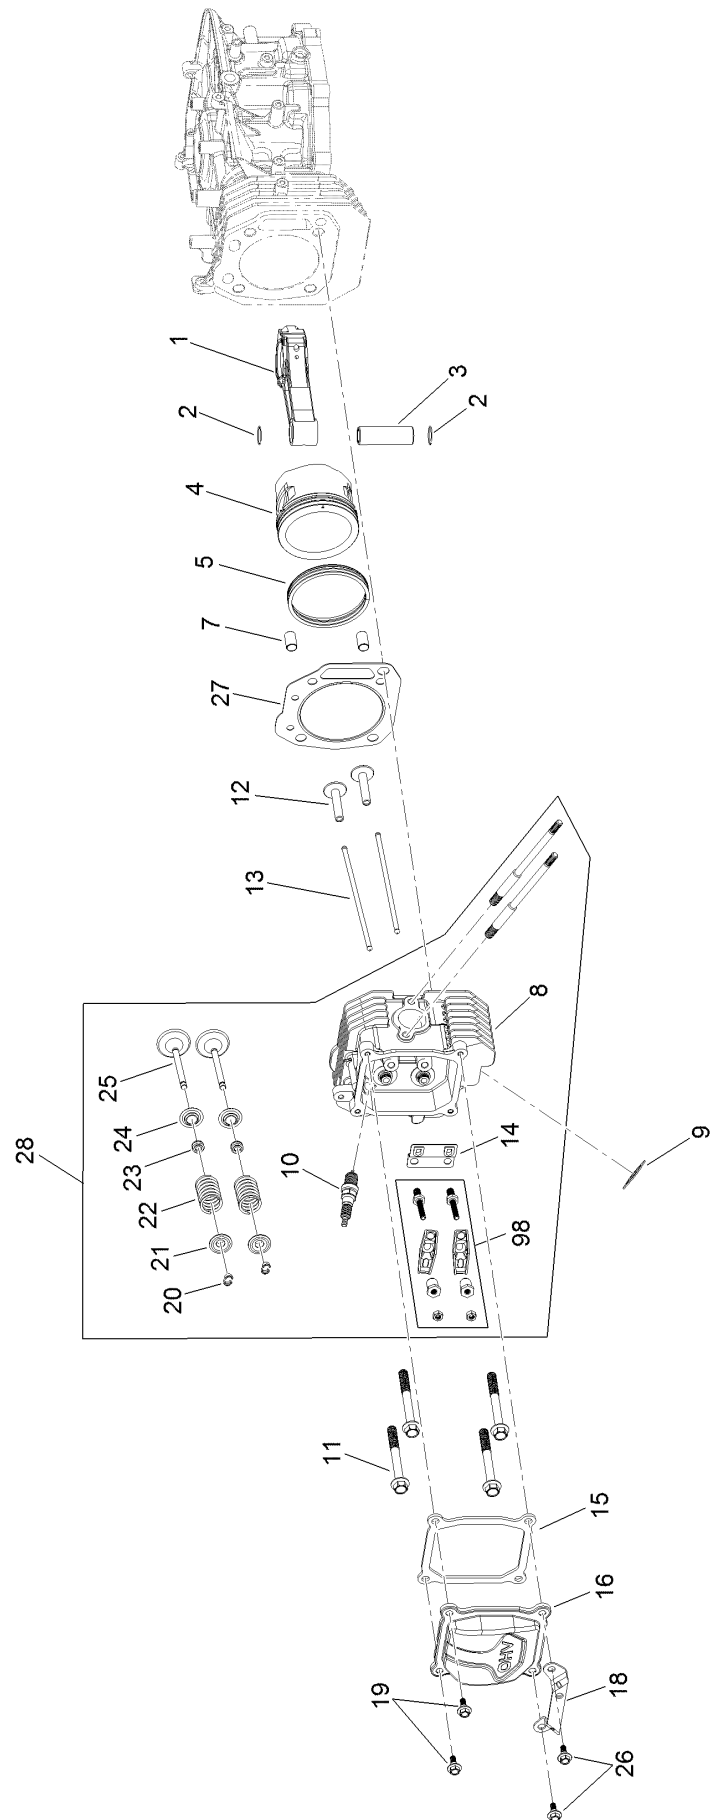

## Piston and Cylinder Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|----------------------------|-------------|--------------------|-------------|------------------------|
| 1           | 120-4292           | 1           | Connecting Rod ASM         | 16          | 120-4207           | 1           | Cover-Valve            |
| 2           | 120-4288           | 2           | Ring-Retaining, Piston Pin | 18          | 120-4345           | 1           | Bracket-Muffler        |
| 3           | 120-4291           | 1           | Pin-Piston                 | 19          | 120-4209           | 2           | Screw-Shoulder, HHF    |
| 4           | 120-4290           | 1           | Piston                     | 20          | 120-4307           | 4           | Keeper-Valve           |
| 5           | 120-4289           | 1           | Ring Set                   | 21          | 120-4306           | 2           | Retainer-Spring, Valve |
| 7           | 120-4200           | 2           | Pin-Dowel                  | 22          | 120-4305           | 2           | Spring-Valve           |
| 8           | 120-4203           | 1           | Head-Cylinder              | 23          | 120-4304           | 2           | Seal-Stem, Valve       |
| 9           | 120-4317           | 1           | Gasket-Exhaust             | 24          | 120-4303           | 2           | Seat-Spring, Valve     |
| 10          | 77-7330            | 1           | Plug-Spark                 | 25          | 120-4302           | 2           | Valve Set              |
| 11          | 120-4205           | 4           | Screw-HHF                  | 26          | 120-4210           | 2           | Screw-Shoulder, HHF    |
| 12          | 120-4298           | 2           | Lifter-Valve               | 27          | 120-4201           | 1           | Gasket-Cylinder        |
| 13          | 120-4340           | 2           | Rod-Push                   | 28          | 136-7888           | 1           | Complete Head ASM      |
| 14          | 120-4300           | 1           | Plate-Guide, Push Rod      | 98          | 136-7885           | 1           | Rocker Arm Kit         |
| 15          | 120-4206           | 1           | Gasket-Cover, Valve        |             |                    |             |                        |

# Blower Housing Assembly

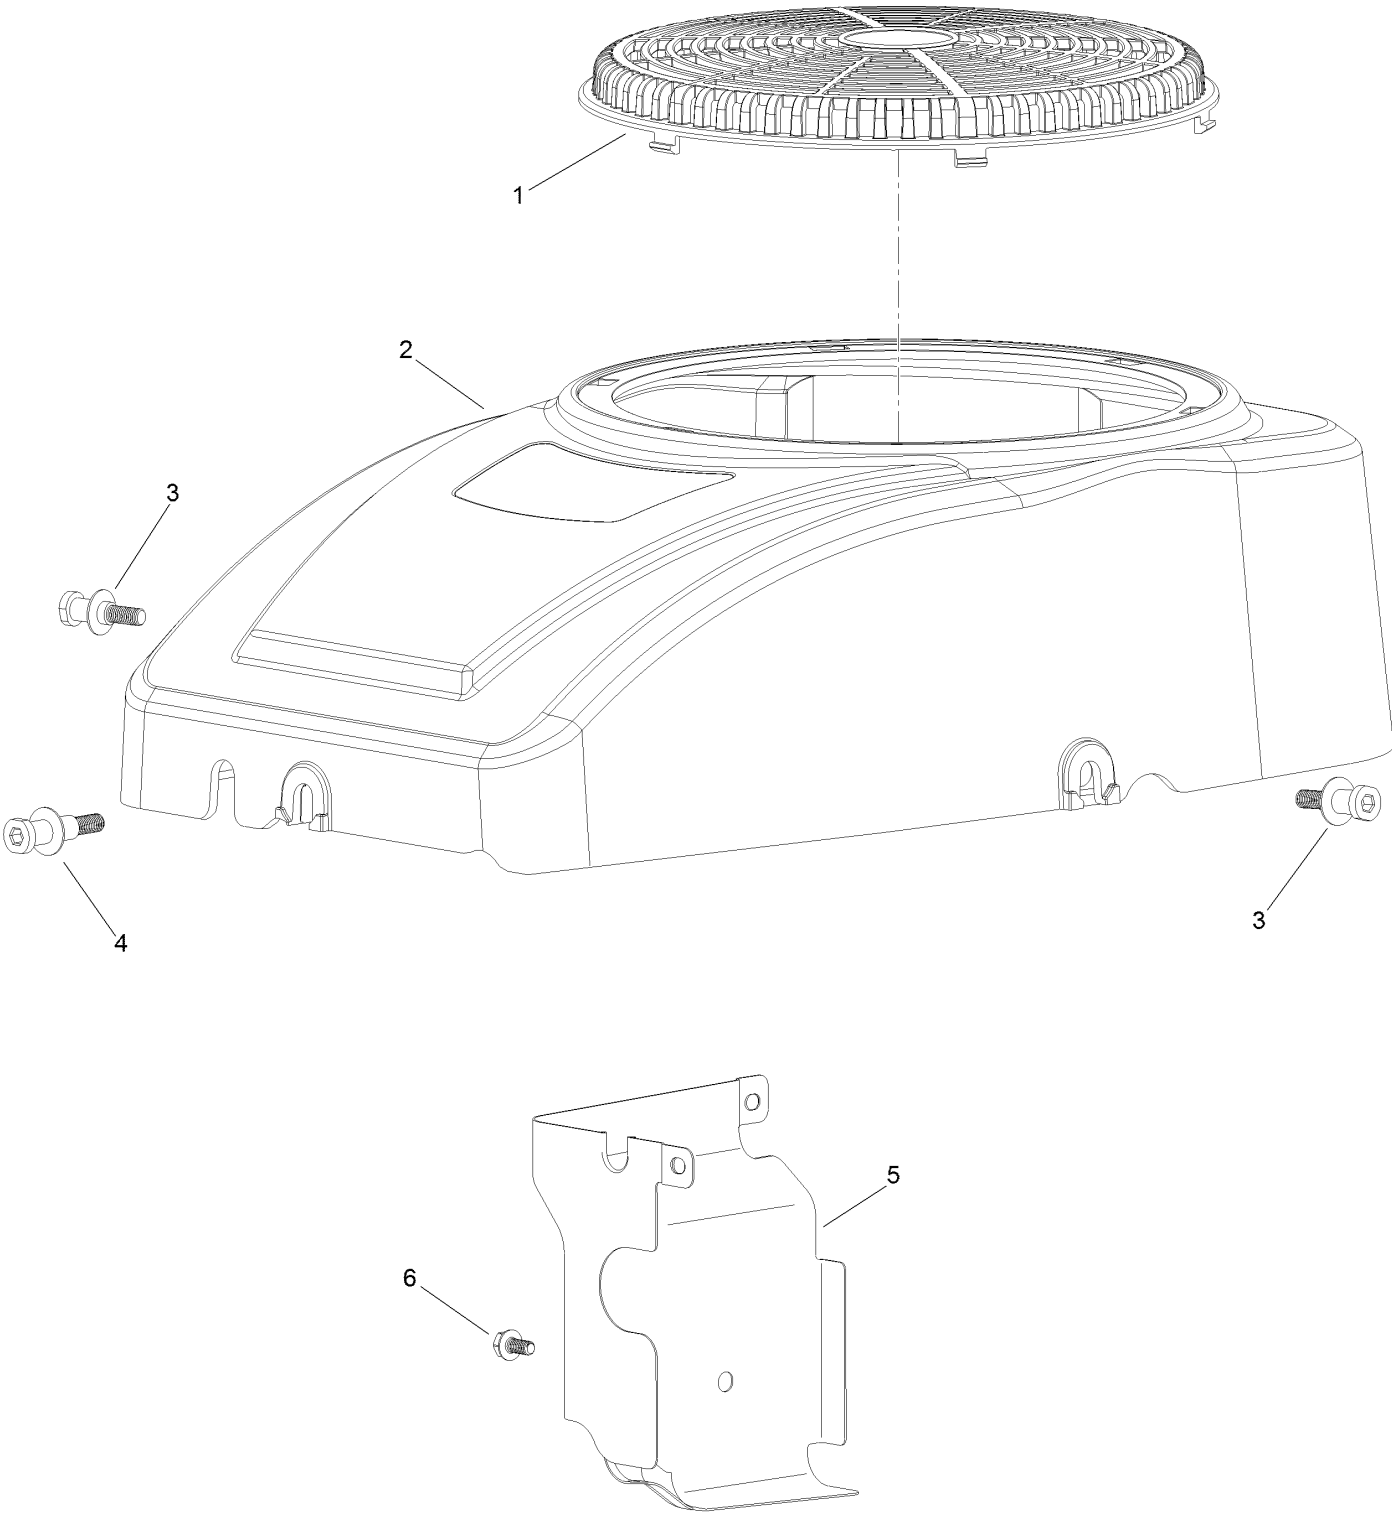


## Blower Housing Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 120-4219           | 1           | Screen-Stationary  |
| 2           | 120-4218           | 1           | Shroud-Fan         |
| 3           | 120-4217           | 2           | Screw-Shoulder, HH |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 4           | 120-4214           | 1           | Screw-Shoulder, HH |
| 5           | 120-4215           | 1           | Shield             |
| 6           | 120-4216           | 1           | Screw-HHF          |

# Gasket and Seal Kit

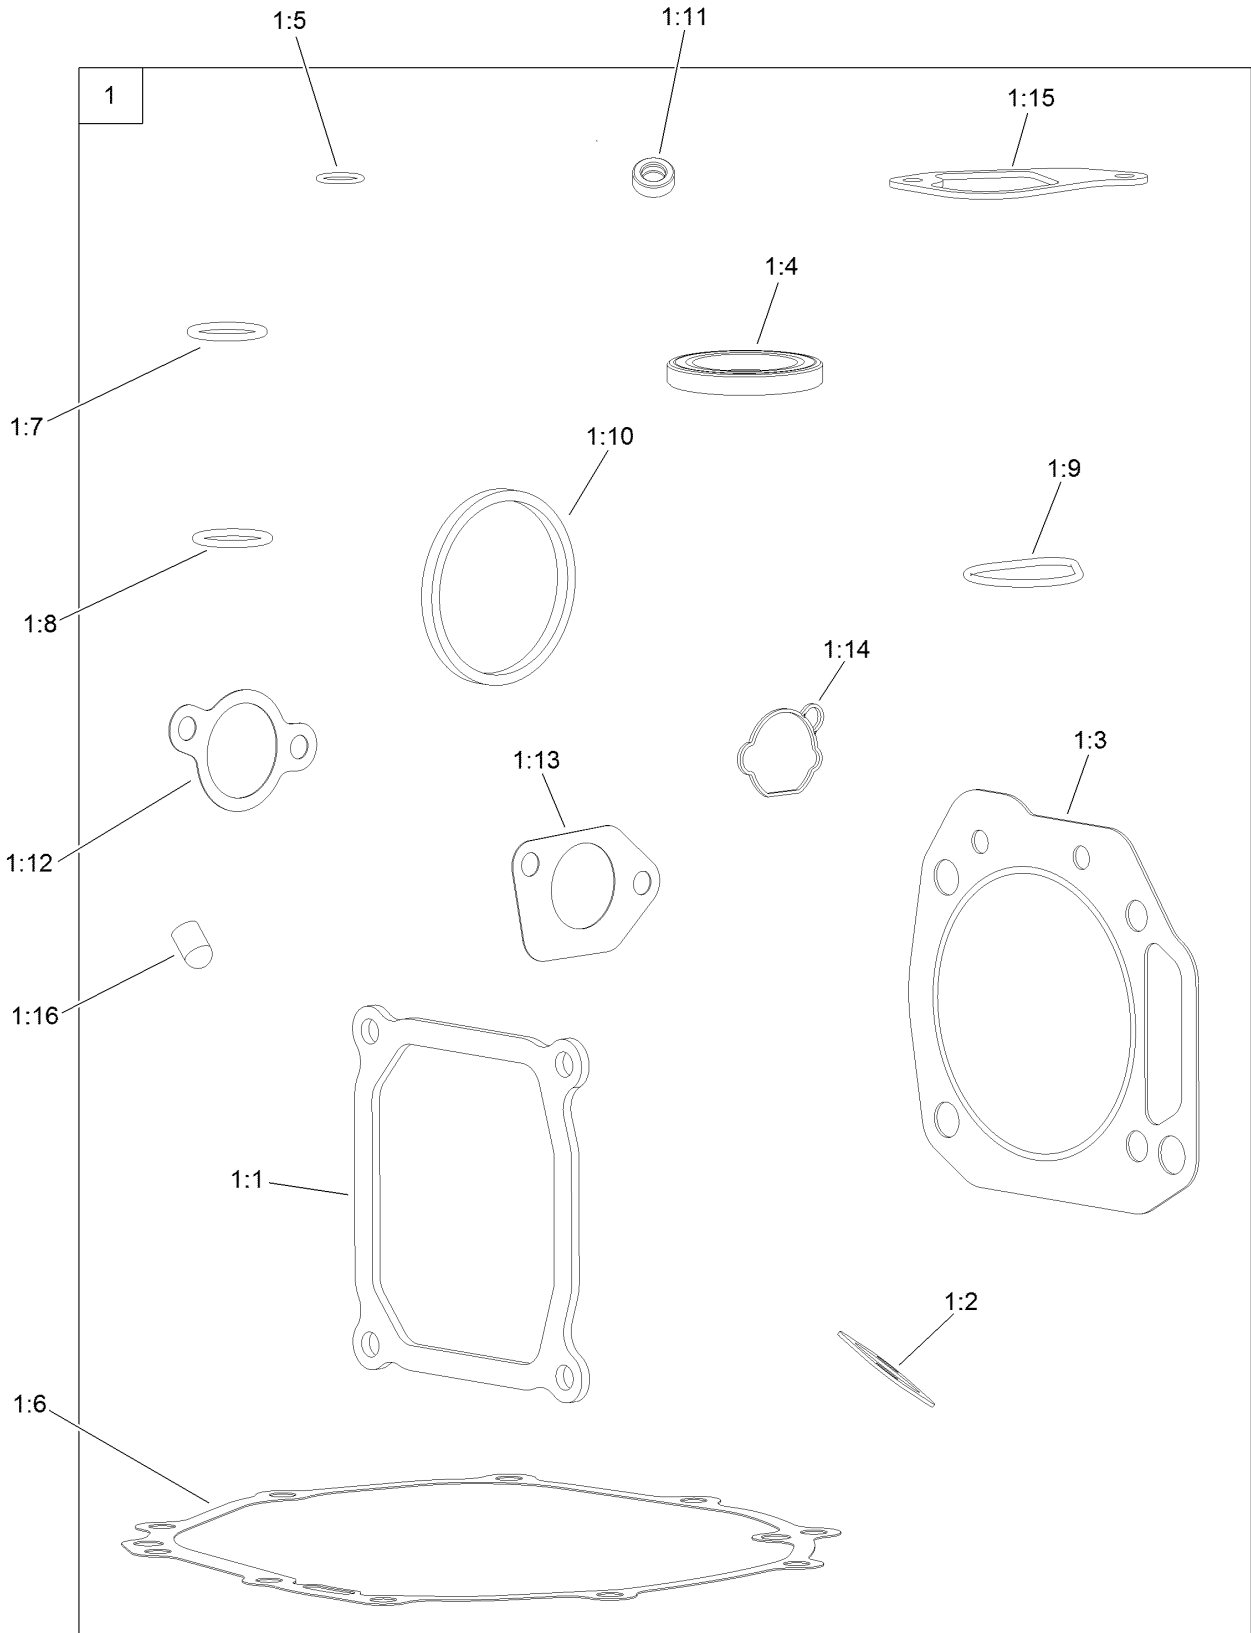


## Gasket and Seal Kit (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  |
|-------------|--------------------|-------------|---------------------|
| 1           | 127-9192           | 1           | Gasket And Seal Kit |
| 1:1         | 120-4206           | 1           | Gasket-Cover, Valve |
| 1:2         | 120-4317           | 1           | Gasket-Exhaust      |
| 1:3         | 120-4201           | 1           | Gasket-Cyclinder    |
| 1:4         | 120-4267           | 2           | Seal-Oil            |
| 1:5         | 120-4262           | 1           | O-Ring              |
| 1:6         | 120-4260           | 1           | Gasket-Crankcase    |
| 1:7         | 120-4348           | 1           | O-Ring              |
| 1:8         | 120-4282           | 1           | O-Ring              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1:9         | 120-4343           | 1           | Seal-Pump, Oil     |
| 1:10        | 120-4362           | 1           | Seal-Adaptor, Oil  |
| 1:11        | 120-4257           | 1           | Seal-Oil           |
| 1:12        | 120-4250           | 1           | Gasket-Carburetor  |
| 1:13        | 120-4247           | 2           | Gasket-Carburetor  |
| 1:14        | 127-9185           | 1           | Gasket-Carburetor  |
| 1:15        | 120-4264           | 1           | Gasket-Breather    |
| 1:16        | 127-9189           | 1           | Cap-Seal           |


# Body Styling and Fuel Pod Assembly

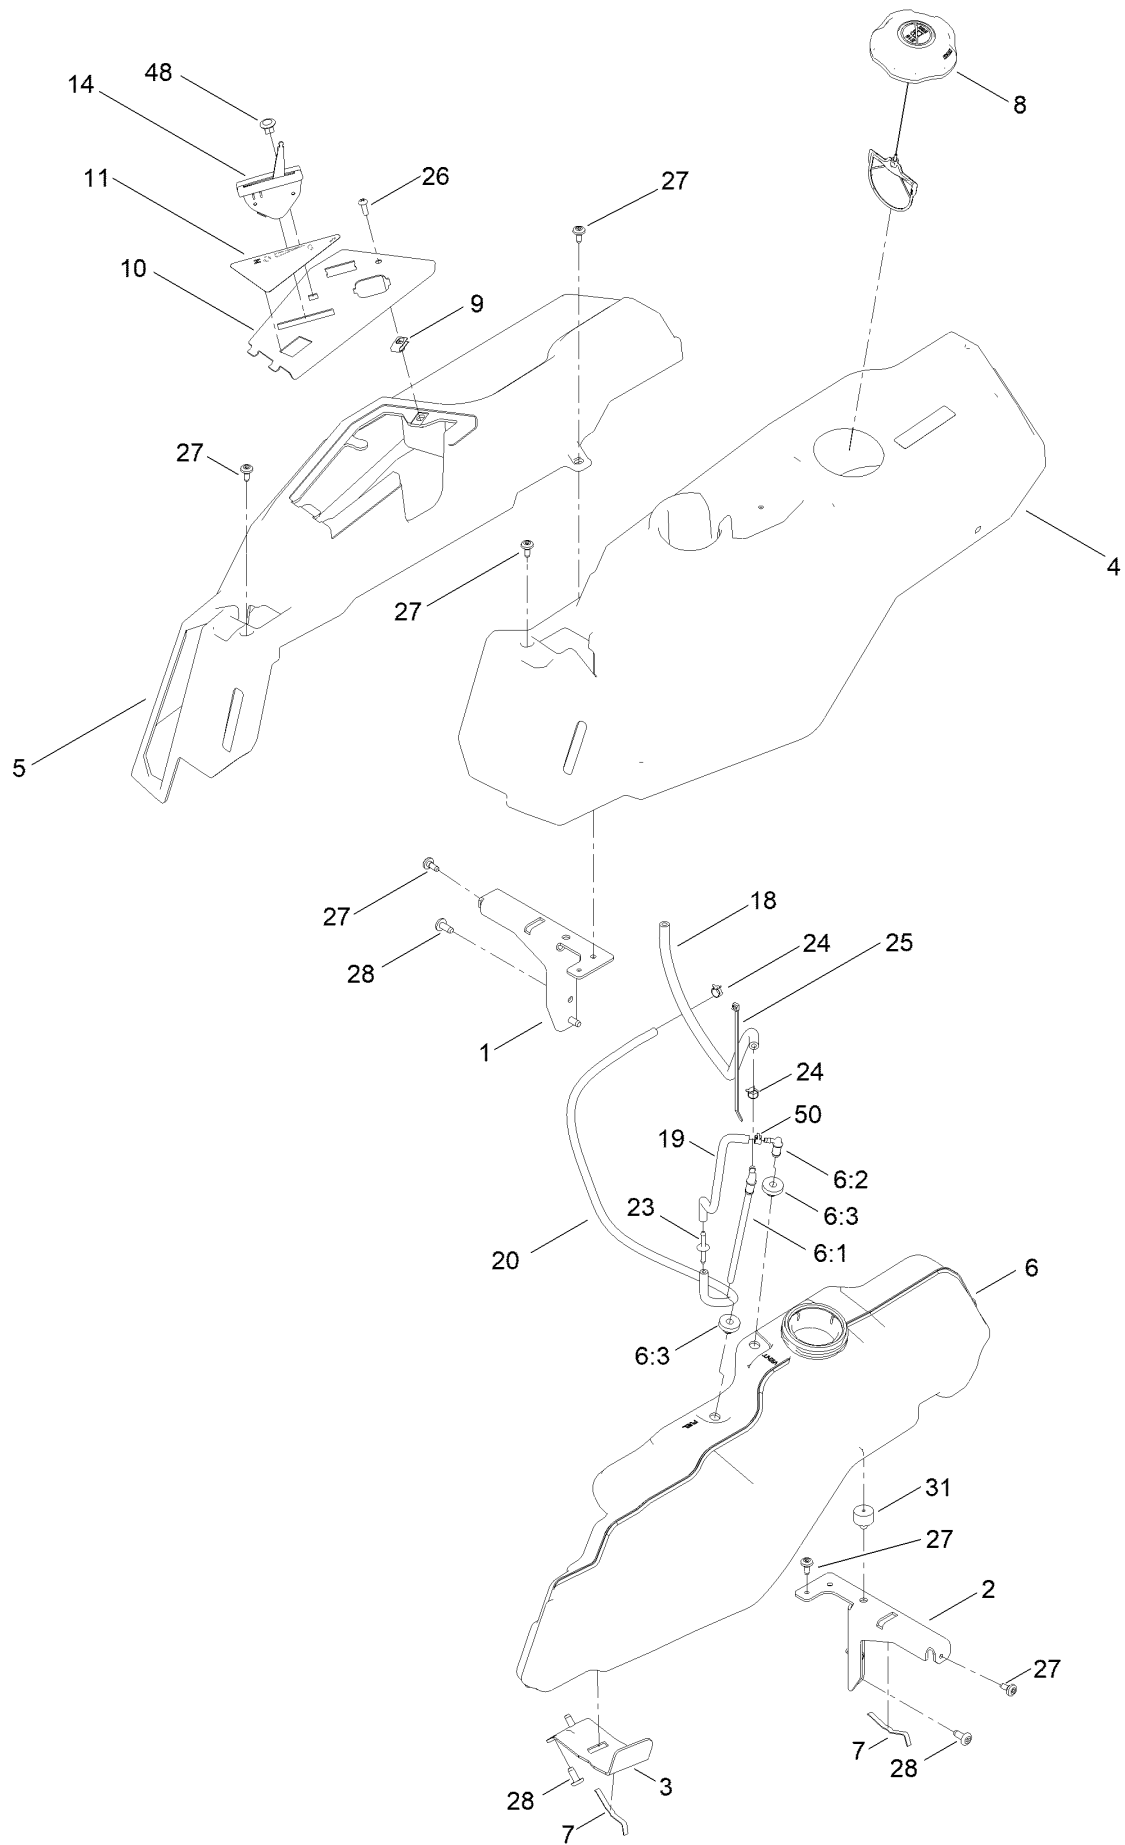

## Body Styling and Fuel Pod Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------------|
| 1           | 138-6070-03        | 1           | Support-Pod, RH         | 14          | 139-3266           | 1           | Cable-Throttle And Choke |
| 2           | 138-6071-03        | 1           | Support-Pod, LH         | 18          | 108-4582           | 1           | Hose-Fuel                |
| 3           | 139-3271-03        | 1           | Support-Tank, Fuel      | 19          | 136-6345           | 1           | Hose-Fuel                |
| 4           | 138-6074           | 1           | Pod-LH                  | 20          | 110-3254           | 1           | Hose-Fuel                |
| 5           | 138-6075           | 1           | Pod-RH                  | 23          | 144-1983           | 1           | Adapter Orifice          |
| 6           | 144-5304           | 1           | Tank-Fuel ASM           | 24          | 2412-98            | 2           | Clamp-Hose               |
| 6:1         | 139-1091           | 1           | Connector-Elbow, 90 DEG | 25          | 614249             | 1           | Tie-Cable                |
| 6:2         | 144-5302           | 1           | Fitting-Elbow 90        | 26          | 3258-166           | 1           | Screw-PRH                |
| 6:3         | 46-6560            | 2           | Bushing                 | 27          | 120-7950           | 6           | Screw-Torx               |
| 7           | 609830             | 2           | Spring                  | 28          | 138-9753           | 6           | Screw                    |
| 8           | 137-4119           | 1           | Cap-Fuel, Ratcheting    | 31          | 120-7893           | 1           | Bumper-Grommet           |
| 9           | 107069             | 1           | Clip                    | 48          | 140-2750           | 1           | Plug-Dash                |
| 10          | 139-2380-03        | 1           | Panel - Control         | 50          | 2412-80            | 1           | Clamp-Hose               |
| 11          | 140-2716           | 1           | Decal-Panel Control     |             |                    |             |                          |


# Electrical Assembly

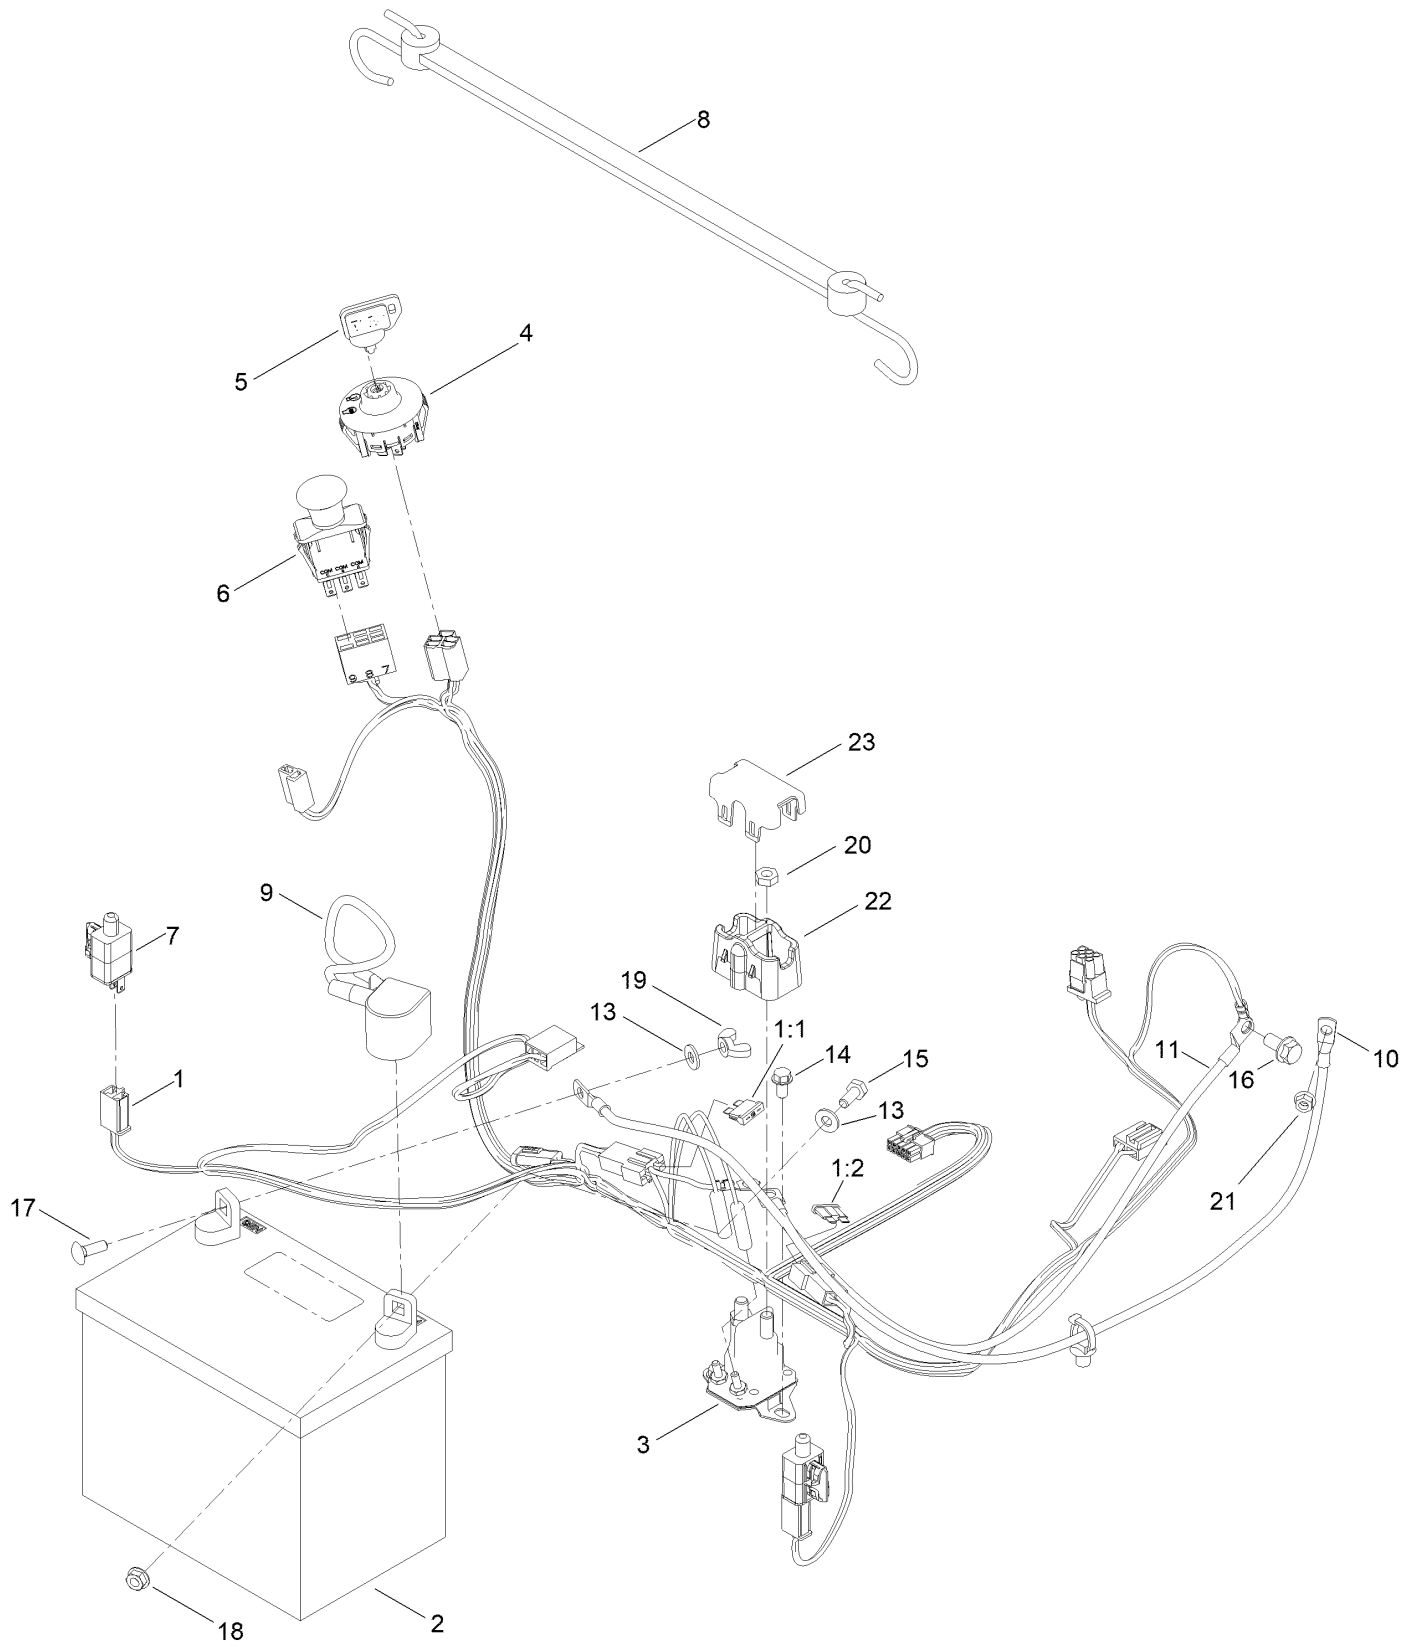

## Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>              | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|---------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 138-2521           | 1           | Harness-Wire                    | 11          | 110-6793           | 1           | Cable-Battery, Black |
| 1:1         | 109355             | 1           | Fuse-Blade, 15 Amp              | 13          | 3256-22            | 2           | Washer-Flat          |
| 1:2         | 109102             | 1           | Fuse-Blade, 25 Amp              | 14          | 32144-4            | 2           | Screw-HWH            |
| 2           | 105-1692           | 1           | Battery, 230CCA W/O Electrolyte | 15          | 321-3              | 1           | Screw-HH             |
| 3           | 117-1197           | 1           | Solenoid                        | 16          | 3234-14            | 1           | Screw-HHF            |
| 4           | 137-4100           | 1           | Switch-Ignition                 | 17          | 3229-1             | 1           | Screw-CARR           |
| 5           | 63-8360            | 1           | Key-Ignition                    | 18          | 32128-33           | 1           | Nut-HF               |
| 6           | 103-5221           | 1           | Switch-PTO                      | 19          | 32103-22           | 1           | Nut-Wing             |
| 7           | 110-6765           | 2           | Switch                          | 20          | 3220-2             | 2           | Nut-Jam              |
| 8           | 139-2381           | 1           | Strap-Rubber                    | 21          | 33003-00           | 1           | Nut-HF               |
| 9           | 140-2713           | 1           | Cable-Battery, Pos              | 22          | 140-2080           | 1           | Cover-Solenoid       |
| 10          | 139-2431           | 1           | Cable-Battery, Red (8 Gauge)    | 23          | 140-2081           | 1           | Cap-Solenoid         |


# 42 Inch Deck Assembly

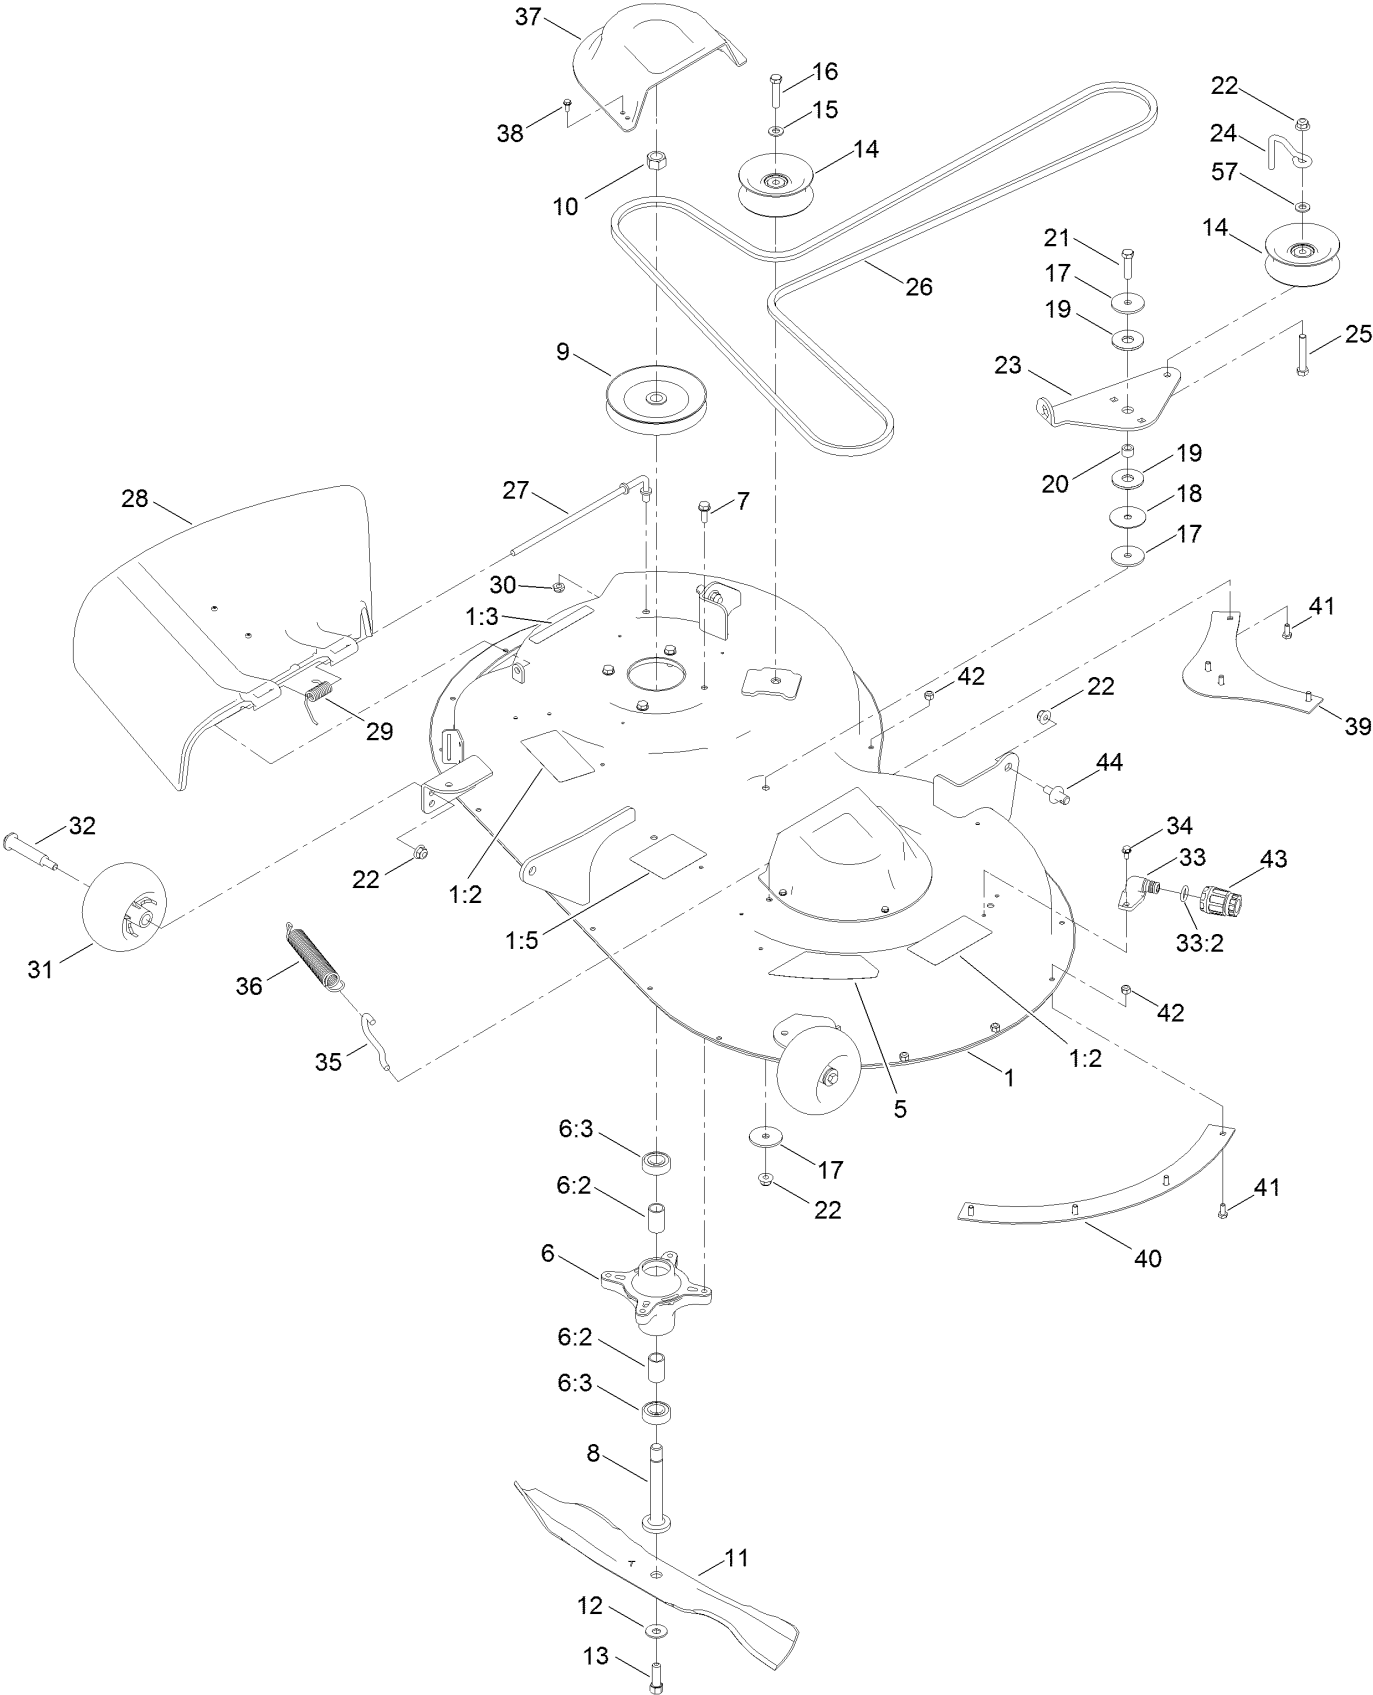

## 42 Inch Deck Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-------------------------------|-------------|--------------------|-------------|----------------------|
| 1           | 138-9761           | 1           | 42 Inch Deck And Decal<br>ASM | 23          | 138-7262           | 1           | Arm-Idler            |
| 1:2         | 132-0872           | 2           | Decal-Danger, Deck            | 24          | 138-7270           | 1           | Guide-Belt, Idler    |
| 1:3         | 93-7009            | 1           | Decal-Danger                  | 25          | 323-11             | 1           | Screw-HH             |
| 1:5         | 105-7015           | 1           | Decal-Routing, Belt           | 26          | 119-8819           | 1           | V-Belt               |
| 5           | 117-1222           | 1           | Decal                         | 27          | 137-2019           | 1           | Rod-Pivot            |
| 6           | 139-3214           | 2           | Spindle ASM                   | 28          | 137-7046           | 1           | Deflector            |
| 6:2         | 120-7935           | 2           | Spacer                        | 29          | 138-7268           | 1           | Spring-Torsion       |
| 6:3         | 138-9770           | 2           | Bearing-Ball                  | 30          | 3296-59            | 1           | Nut-Lock, NI         |
| 7           | 32144-41           | 8           | Screw-Taptite                 | 31          | 1-603299           | 2           | Roller-Scalp, Anti   |
| 8           | 117-7268           | 2           | Shaft-Spindle                 | 32          | 112-3977           | 2           | Bolt-Shoulder        |
| 9           | 139-2433           | 2           | Pulley                        | 33          | 133-9289           | 1           | Fitting-Washout      |
| 10          | 3219-6             | 2           | Nut-Hex                       | 33:2        | 133-9290           | 1           | O-Ring               |
| 11          | 137-1999-03        | 2           | Blade                         | 34          | 32144-4            | 2           | Screw-HWH            |
| 12          | 3290-465           | 2           | Washer-Belleville             | 35          | 138-7267           | 1           | Hook-Spring, Return  |
| 13          | 26-0671            | 2           | Screw-HH                      | 36          | 138-7265           | 1           | Spring Extension     |
| 14          | 132-9420           | 2           | Pulley-Idler, Flat            | 37          | 108-7889           | 2           | Cover-Belt           |
| 15          | 3256-24            | 1           | Washer-Flat                   | 38          | 32144-1            | 6           | Screw-Taptite        |
| 16          | 323-9              | 1           | Screw-HH                      | 39          | 137-2036-03        | 1           | Baffle-Blowout, Rear |
| 17          | 63-7400            | 3           | Washer-Rebound                | 40          | 137-2037-03        | 1           | Baffle-Blowout, Side |
| 18          | 120-2229           | 1           | Washer                        | 41          | 321-3              | 8           | Screw-HH             |
| 19          | 114-0463           | 2           | Washer-Friction, Composite    | 42          | 3296-42            | 8           | Nut-Lock, NI         |
| 20          | 115-4986           | 1           | Spacer                        | 43          | 95-3270            | 1           | Connector-Hose       |
| 21          | 323-8              | 1           | Screw-HH                      | 44          | 139-5871           | 2           | Pin-Deck             |
| 22          | 104-8301           | 6           | Nut-HF, NI                    | 57          | 138-7207           | 1           | Spacer-Hub, Blower   |


# Decal Assembly

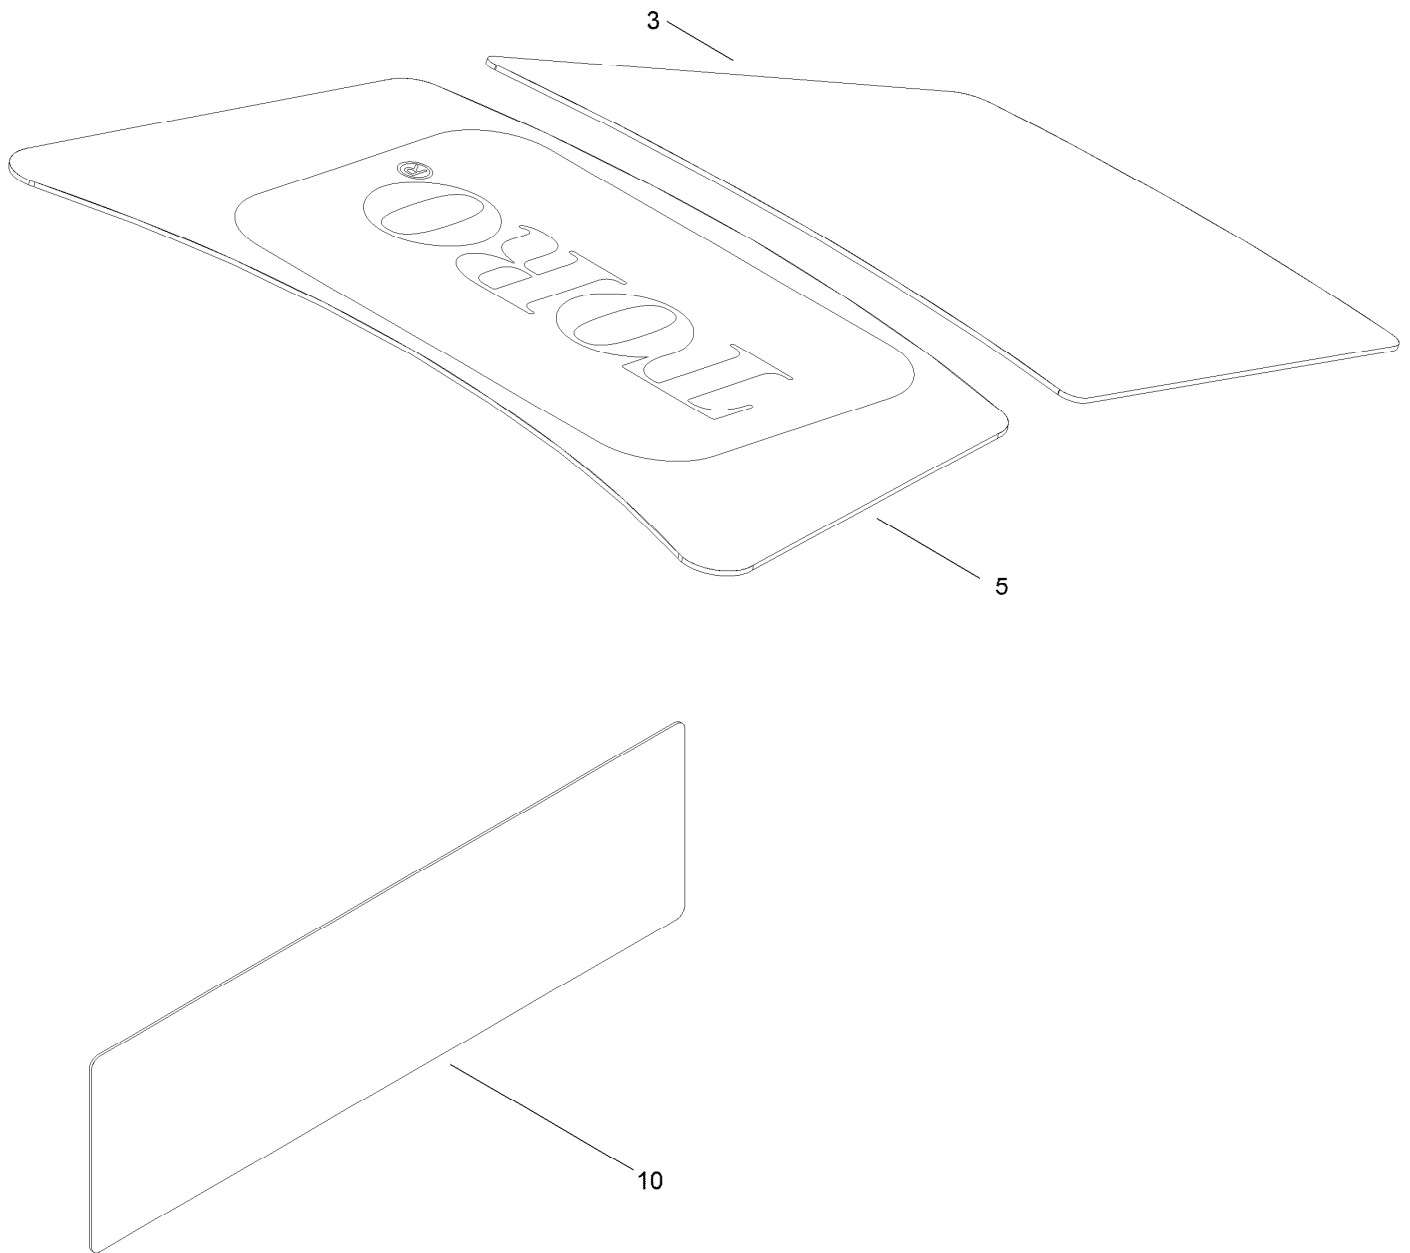

## Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>            |
|-------------|--------------------|-------------|-------------------------------|
| 3           | 130-0682           | 1           | Decal-Displacement,<br>Engine |
| 5           | 125-1700           | 1           | Decal-Engine                  |
| 10          | 140-2099           | 1           | Decal                         |

# Clutch Assembly

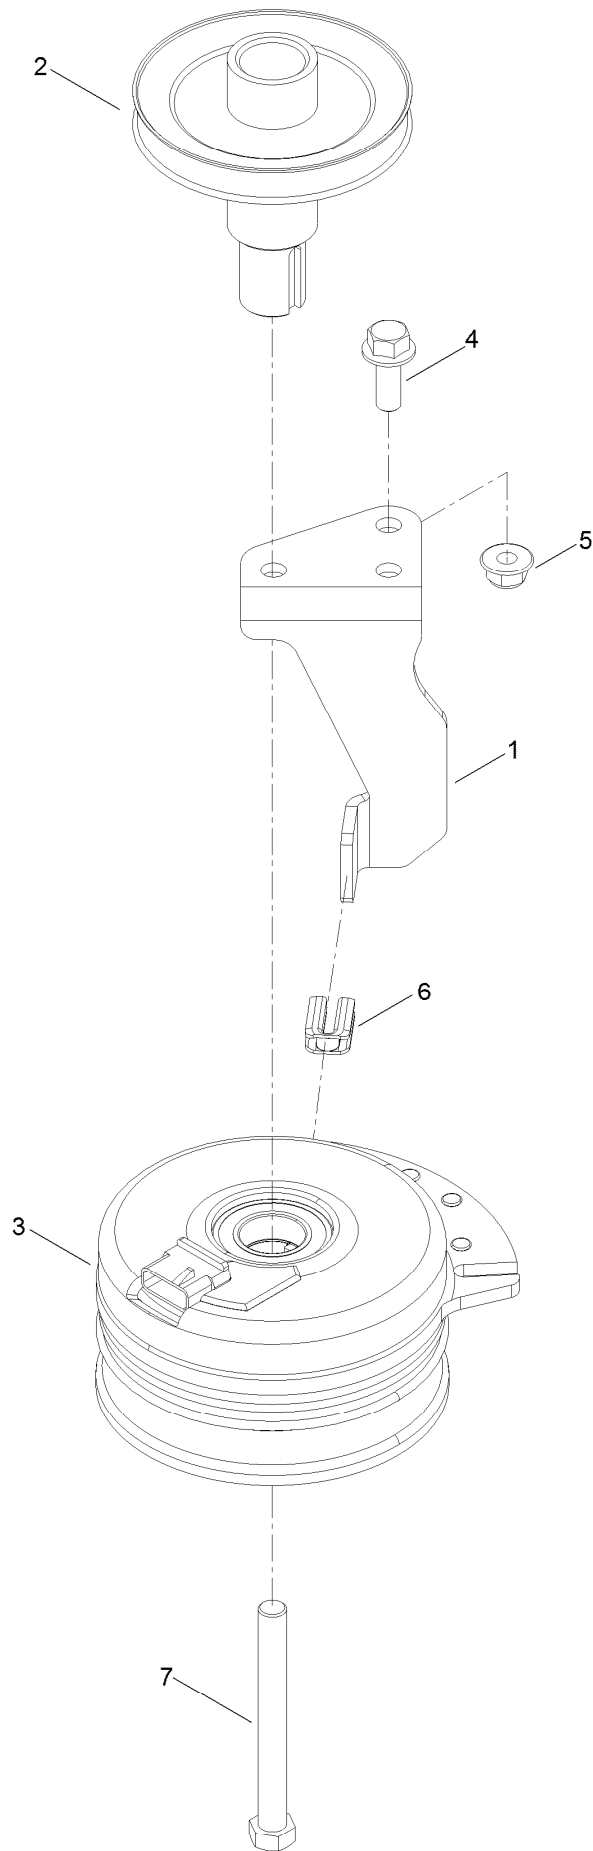

## Clutch Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 138-7275           | 1           | Stop-Clutch (Narrow) | 5           | 104-8301           | 1           | Nut-HF, NI         |
| 2           | 138-9792           | 1           | Pulley-Engine        | 6           | 120-2217           | 1           | Isolator-Clutch    |
| 3           | 117-7468           | 1           | Clutch-Electric      | 7           | 3212-16            | 1           | Screw-HH           |
| 4           | 3234-42            | 1           | Screw-HHF            |             |                    |             |                    |

# Attachments and Accessories

## For 75740 TimeCutter 4200 Riding Mower

| Product Name                                                                    | Model/Part   |
|---------------------------------------------------------------------------------|--------------|
| Hourmeter Kit .....                                                             | 116-5461     |
| Seat Cover W/O Arm Rest - TC 18in.....                                          | 117-0096     |
| Jack Kit .....                                                                  | 127-6666     |
| Fuel Stabilizer .05 oz .....                                                    | 130-2393     |
| 4-Cycle Fuel, Snow And Lawn 32oz Can .....                                      | 131-3823     |
| Toro Premium Fuel Treatment 12 Oz Bottle .....                                  | 131-6572     |
| Replacement Blade Kit .....                                                     | 137-1999-03P |
| 42in Recycler Kit.....                                                          | 137-7042     |
| Bagging Enhancement Kit .....                                                   | 137-7048     |
| Maintenance Kit.....                                                            | 139-0650     |
| Front Weight Kit .....                                                          | 140-2050     |
| Assist Bar Kit .....                                                            | 140-2052     |
| LED Light Kit.....                                                              | 140-2056     |
| Deluxe Seat Kit.....                                                            | 140-2057     |
| Armrest Kit.....                                                                | 140-2058     |
| Deck Footlift Assist Kit .....                                                  | 140-2059     |
| Floormat Kit .....                                                              | 140-2060     |
| Jack Mount Kit .....                                                            | 140-2711     |
| Striping Kit, 42in and Riding Mowers .....                                      | 140-5198     |
| 10w30 4-Cycle Engine Oil (32oz Bottle).....                                     | 38280        |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....                                     | 38903        |
| Storage Cover .....                                                             | 490-7516     |
| Mower Deck Drive Belt, TimeCutter SS Riding Mower with 42-inch Mowing Deck..... | 79004        |
| Twin Bagger, Timecutter 42in Stamped .....                                      | 79410        |
| ROPS Kit .....                                                                  | 79485        |
| Slope Sensor Kit.....                                                           | 79486        |

**Notes:**



**Count on it.**