



Mid-Size Mower

ProLine T-Bar Gear 12.5 hp with 91cm SD Mower

Model No. 30261TE—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Engine and Clutch Assembly	3	Valves and Camshaft Assembly	
Frame and Fuel Tank Assembly	4	Kawasaki Model FB460V-LS08	19
Lower Control Assembly	5	Lubrication Equipment Assembly	
Transmission and Drive System Assembly	6	Kawasaki Model FB460V-LS08	20
Wheel Drive and Brake System Assembly	7	Cooling Equipment Assembly	
Upper Handle Assembly	8	Kawasaki Model FB460V-LS08	21
Control Panel Assembly	9	Electric Equipment Assembly	
Carrier Frame Assembly	10	Kawasaki Model FB460V-LS08	22
Spindle, Pulley and Belt Assembly	11	Control Equipment Assembly	
Spindle Housing Assembly No. 104-6319	12	Kawasaki Model FB460V-LS08	23
Spindle Housing Assembly No. 104-6317	13	Carburetor Assembly	
Carrier Frame Assembly	14	Kawasaki Model FB460V-LS08	24
Carrier Frame Assembly	15	Air Filter Assembly	
Electrical Schematic	16	Kawasaki Model FB460V-LS08	25
Crankcase Assembly		Starter Assembly	
Kawasaki Model FB460V-LS08	17	Kawasaki Model FB460V-LS08	26
Piston and Crankshaft Assembly		Muffler Assembly	
Kawasaki Model FB460V-LS08	18	Kawasaki Model FB460V-LS08	27

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

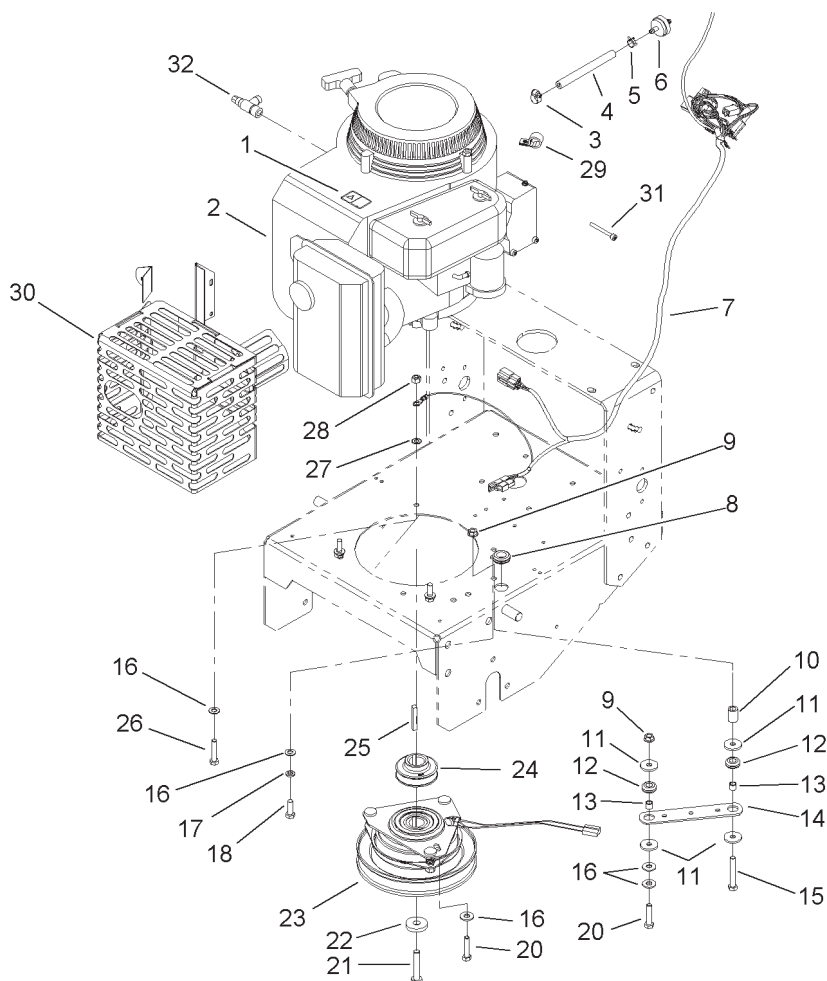


Sheet No.:2

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-5517	1	Decal-Surface, Hot	27	3255-8	1	Washer-Lock
☆2		1	Engine-Kawasaki, FB460V-LS08	28	33024-00	1	Nut-Lock
3	2412-108	1	Clamp-W orm	29	2412-87	1	Clamp-Cable
4	47-2966	1	Hose-Fuel	30	105-0857-03	1	Muffler Guard ASM
5	2412-98	1	Clamp	31	105-2681	2	Screw-Torx
6	56-6360	1	Filter-Fuel	32	103-1965	1	Valve-Drain, Oil
7	104-8135	1	Harness-Wire	99	103-1964	1	Hose-Drain, Oil
8	237-124	1	Grommet				
9	32128-20	2	Nut-HF				
10	104-6373	1	Tube-Retainer				
11	1-613235	4	Washer				
12	1-633630	2	Grommet-Brake				
13	1-633545	2	Spacer-Grommet				
14	1-633543	1	Strap-Clutch/Brake				
15	322-11	1	Screw-HH				
16	3256-23	7	Washer-Flat				
17	3253-4	3	Washer-Lock				
18	33114-025	3	Screw-HH				
20	322-7	1	Screw-HH				
21	57-6360	1	Screw-Clutch				
22	112843	1	Washer				
23	105-2635	1	Clutch/Brake				
24	105-0827	1	Pulley-Drive				
25	92-5436	1	Key-Square				
26	57-6370	1	Screw				

☆ Not serviced separately

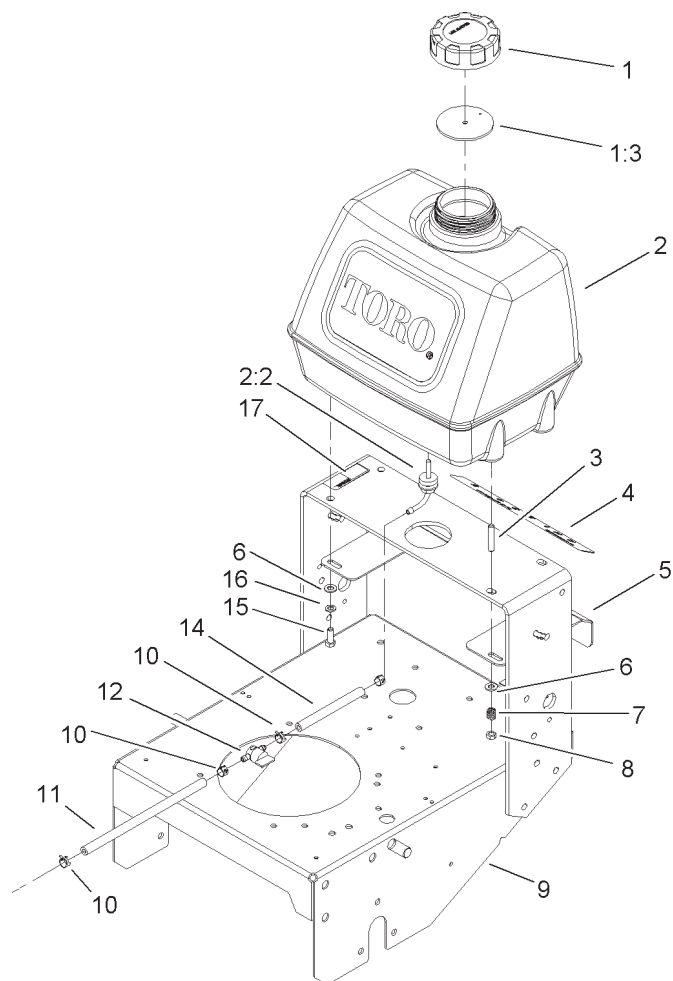


Sheet No.:5

Frame and Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
4	106-5495	1	Decal-Speed, Ground
5	104-8102-01	1	Plate-Gate, Shift
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2966	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	93-9353	1	Decal-Shut Off, Fuel

Ref. No.	Part No.	Qty.	Description

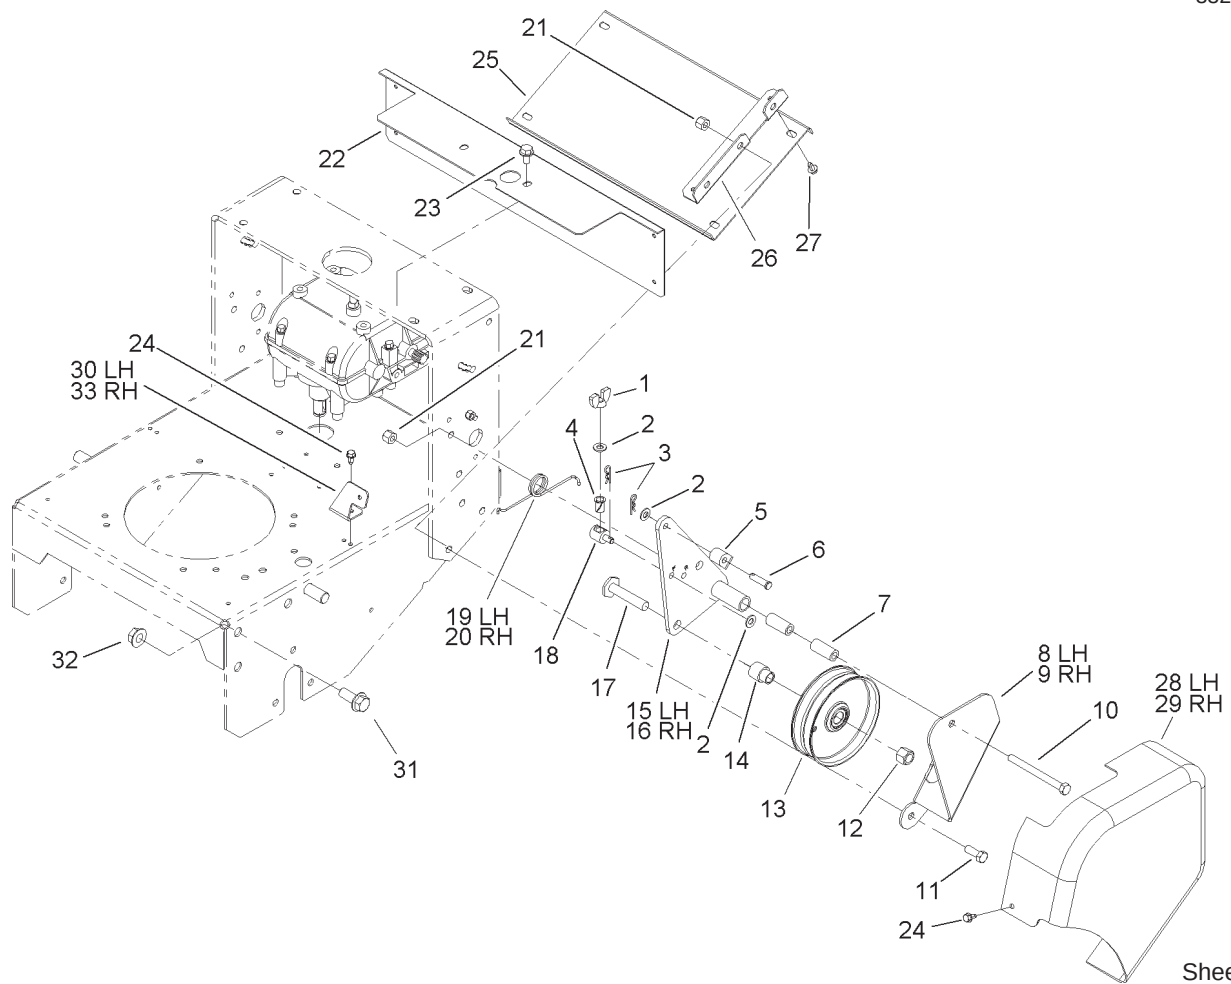


Sheet No.:6

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	67-6380-01	1	Bracket-Support, LH
9	67-6370-01	1	Bracket-Support, RH
10	323-16	2	Screw-HH
11	323-6	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	74-0220-01	1	Bracket-Idler, LH
16	74-0230-01	1	Bracket-Idler, RH
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
22	104-8158-03	1	Guard-Shaft, Transmission
23	32144-14	2	Screw-HWH
24	12-3270	10	Screw
25	93-7437-01	1	Panel-Bottom

Ref. No.	Part No.	Qty.	Description
26	93-7436-03	2	Angle-Mounting
27	12-3270	4	Screw
28	105-4659	1	Guard-Belt, LH
29	105-4660	1	Guard-Belt, RH
30	105-4657-01	1	Bracket-Mounting Guard, LH
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF
33	105-4658-01	1	Bracket-Mounting Guard, RH

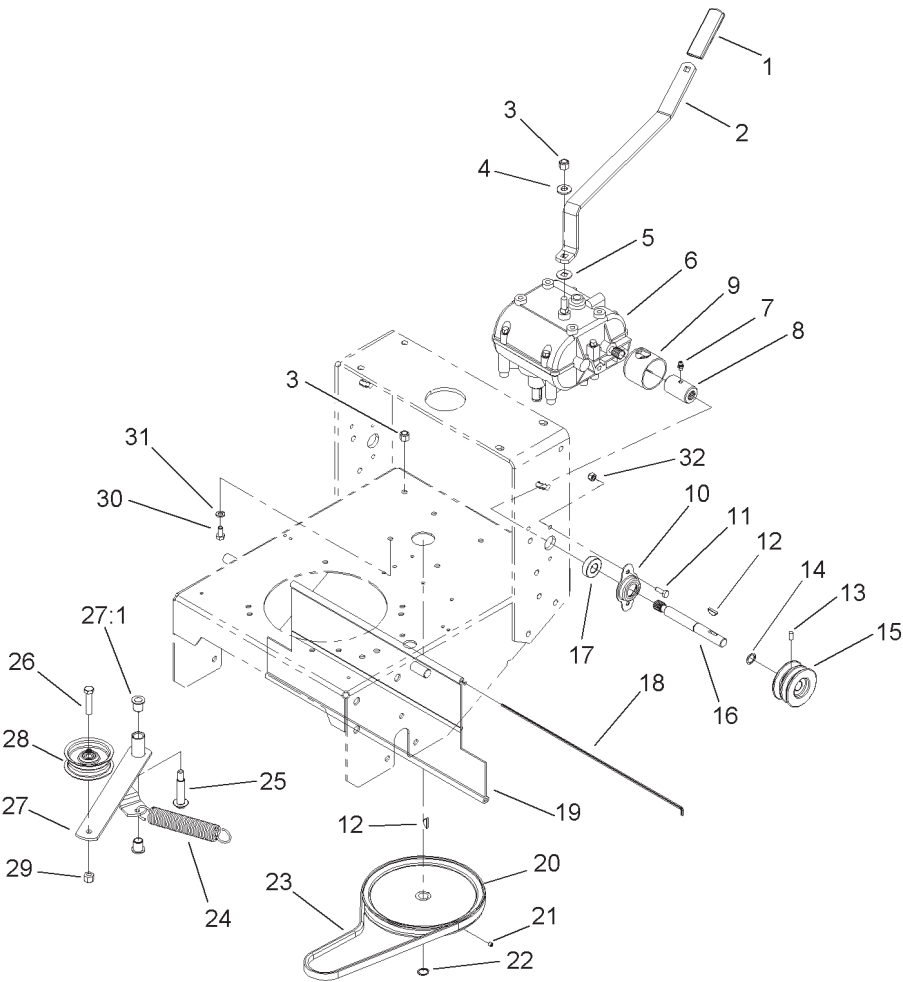


Sheet No.:7

Transmission and Drive System Assembly

Ref. No.	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock, NI
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH


Ref. No.	Part No.	Qty.	Description
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI

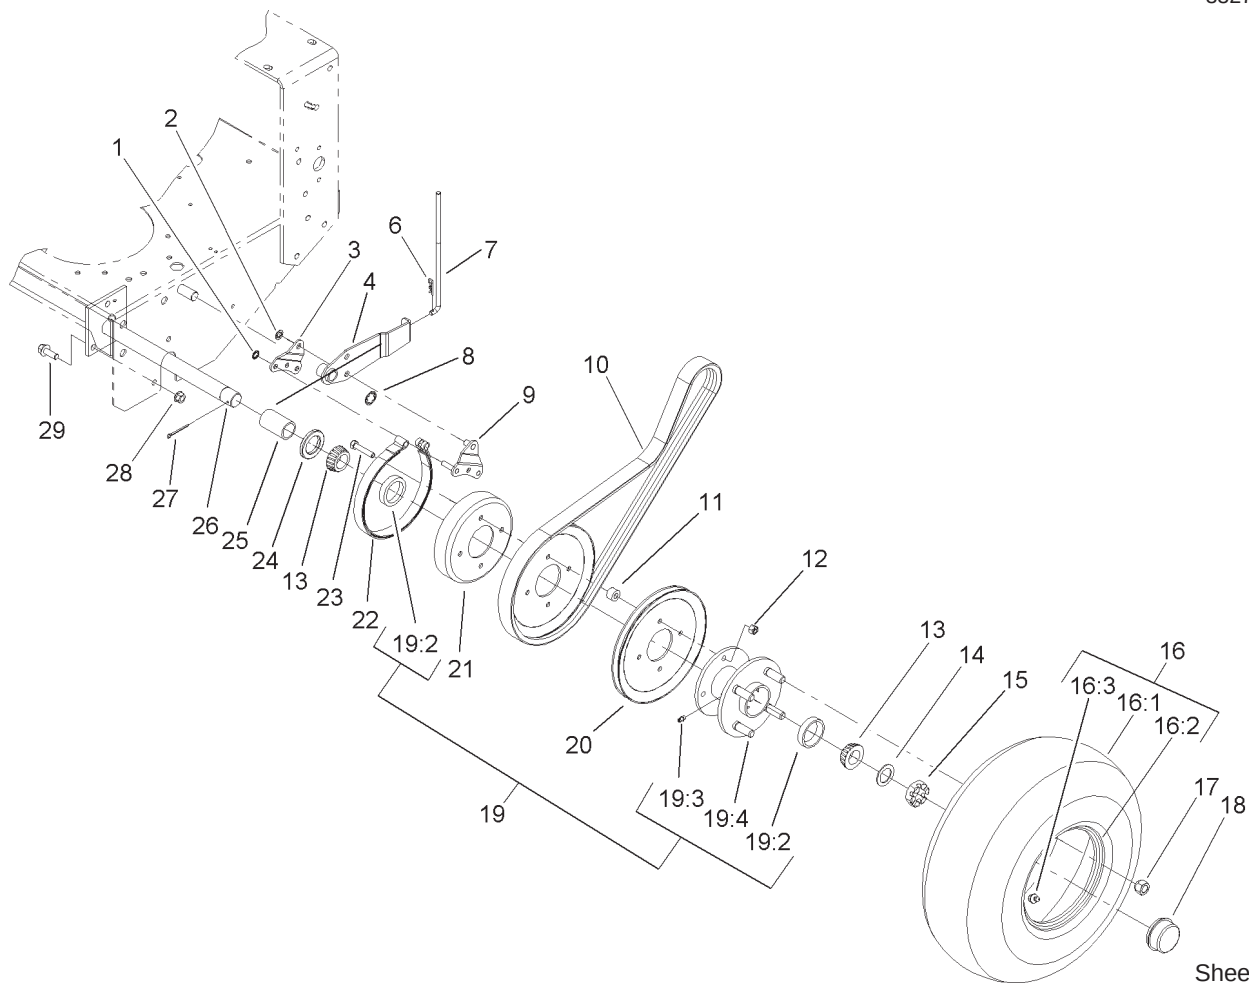

Sheet No.:8

Wheel Drive and Brake System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining	21	1-323261	2	Drum-Brake
2	32151-56	2	Ring-Retaining, External	22	1-323262	2	Band-Brake
3	105-4651-01	2	Plate-Link, Brake	23	322-8	8	Screw-HH
4	106-5537-01	2	Brake Arm ASM	24	1-543511	2	Seal-Grease
6	3290-307	2	Pin-Hair	25	104-1197	2	Spacer-Wheel
7	51-4580	2	Rod-Brake	26	104-1196-01	1	Axle ASM
8	32151-40	2	Ring-Retaining	27	1-806800	2	Pin-Cotter
9	105-4652-01	2	Brake Link ASM	28	32128-21	6	Nut-HF
10	51-4290	2	V-Belt	29	3234-11	6	Screw-HHF
11	51-4170	8	Spacer-Pulley				
12	3296-29	8	Nut-Lock, NI				
13	254-94	4	Bearing-Cone, Taper				
14	1-523157	2	Washer-Spacer				
15	1-809082	2	Nut-SHH				
16	104-6321	2	Wheel And Tire ASM				
16:1	104-6322	1	Tire				
16:2	104-6323	1	Wheel				
16:3	232-27	1	Stem-V valve				
17	242-50	8	Nut-Lug				
18	241-119	2	Cap-Dust				
19	1-413333	2	Hub/Wheel ASM				
19:2	254-72	2	Bearing-Cup, Tapered				
19:3	302-19	1	Fitting-Grease				
19:4	1-633926	4	Stud-Wheel				
20	51-4160-03	4	Pulley-Wheel				

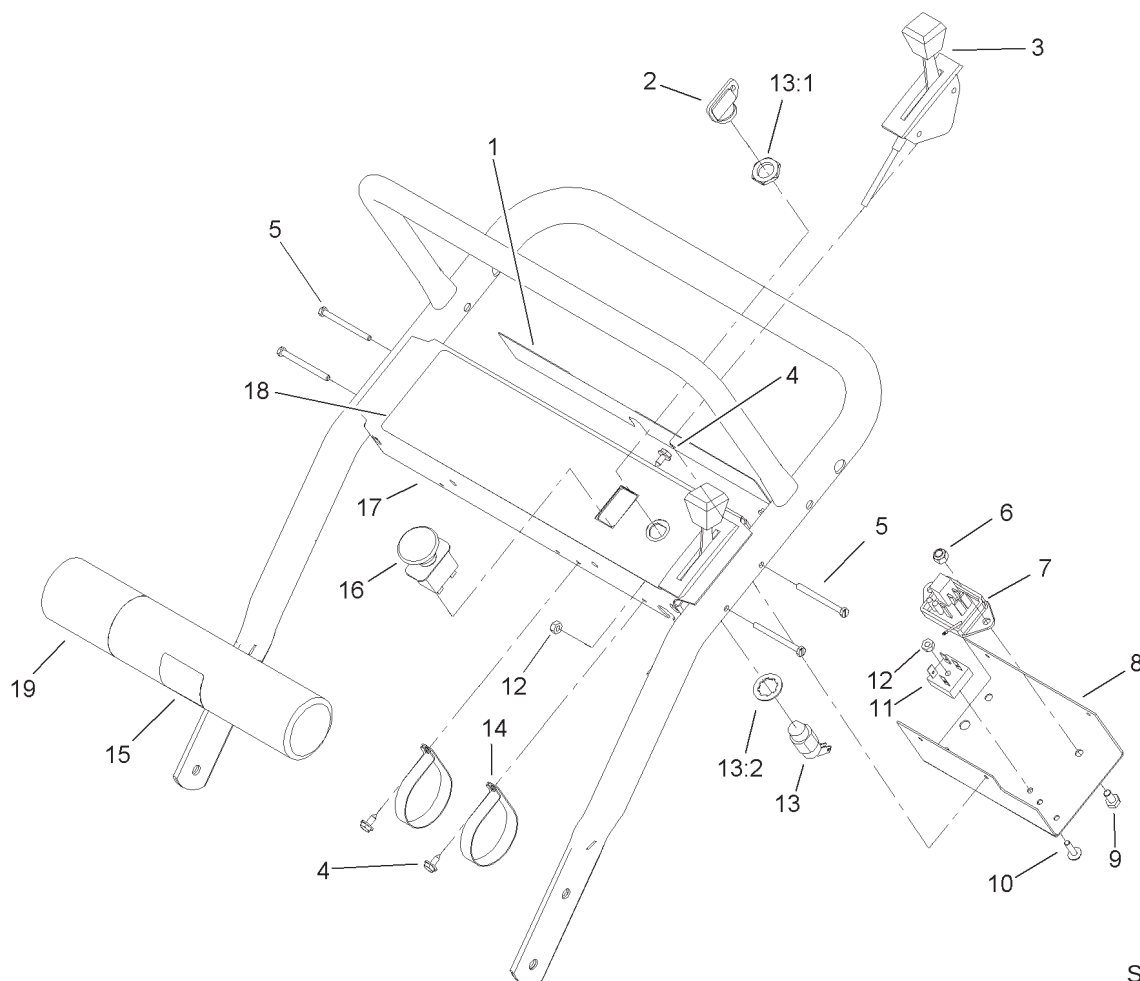


Sheet No.:10

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	106-5519	1	Decal-Danger
2	63-8360	2	Key-Ignition
3	74-0740	1	Control-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1 187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
10	32105-13	1	Screw-SHH
11	37-7600	1	Rectifier-Bridge
12	3296-2	5	Nut-Lock
13	29-5560	1	Switch-On/Of f
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-T ooth
14	2412-120	2	R-Clamp
15	104-7050	1	Housing-Manual
16	104-8140	1	Switch-PT O
17	104-8177-03	1	Panel-Control
18	106-5500	1	Decal
19	104-7048	1	Cap-Housing

Ref. No.	Part No.	Qty.	Description

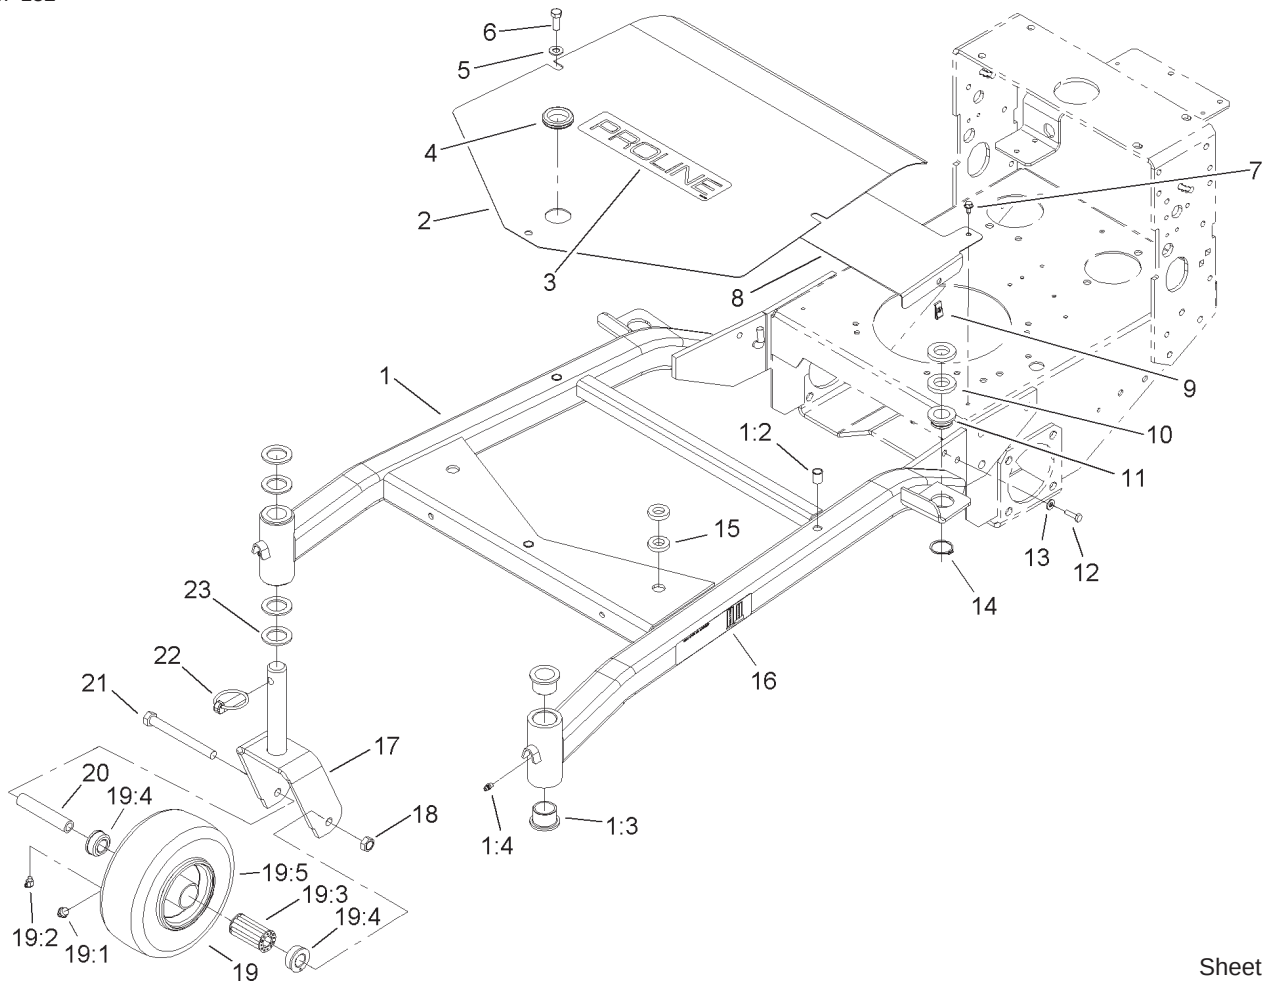


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0706	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing-Special
1:4	302-5	2	Fitting-Grease
2	106-5536-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	3256-24	3	Washer-Flat
6	323-6	3	Screw-HH
7	12-3270	2	Screw
8	106-5473-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0636	2	Decal
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-V valve
19:2	302-11	1	Fitting-Lube, 45°
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside


Ref. No.	Part No.	Qty.	Description
19:5	100-6452	1	Tire-T ubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-L ync
23	3-6781	8	Washer-Thrust

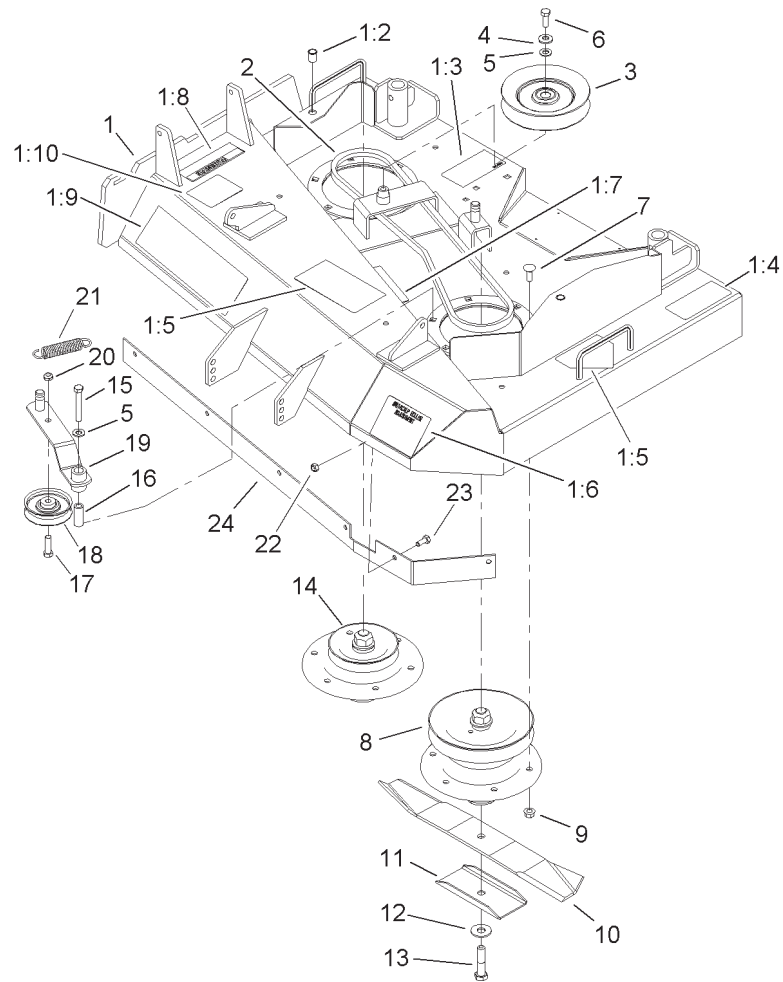

Sheet No.:3

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-0616	1	Deck ASM	17	3211-5	1	Screw-HH
1:2	32148-9	2	Insert-Nut	18	51-3660	1	Pulley-Idler
1:3	104-8185	1	Decal	19	105-0889	1	Idler Arm ASM
1:4	93-7818	1	Decal-Torque, Blade Bolt	20	3296-5	1	Nut-Lock, NI
1:5	93-7010	2	Decal-Danger	21	105-2673	1	Spring-Extension
1:6	106-5533	1	Decal-Antiscalp, Ce	22	3296-47	6	Nut-Lock, NI
1:7	98-1977	1	Decal-Warning	23	322-3	6	Screw-HH
1:8	93-7828	1	Decal-Danger	24	93-9479-01	1	Baffle-Front
1:9	106-5518	1	Decal				
1:10	105-2699	1	Decal-Noise				
2	51-3530	1	V-Belt-Drive, Deck				
3	1-633166	1	Pulley-Idler				
4	98-5975	1	Washer-Belleville				
5	3256-24	2	Washer-Flat				
6	323-6	1	Screw-HH				
7	3231-22	11	Screw-CARR				
8	106-0788	1	Spindle Housing ASM				
9	32128-21	12	Nut-HF				
10	56-2390	2	Blade				
11	92-9820	2	Stiffener-Blade				
12	3256-6	2	Washer-Flat				
13	44-2200	2	Screw-Blade				
14	106-0787	1	Spindle Housing ASM				
15	323-12	1	Screw-HH				
16	51-3641	1	Sleeve-Pivot, Idler				

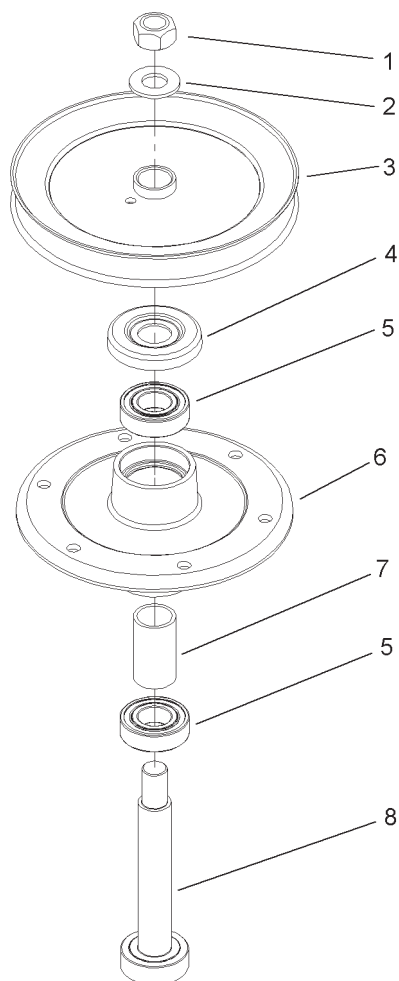


Sheet No.:A1

Spindle Housing Assembly No. 106-0788

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1180	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0781	1	Shaft-Spindle


Ref. No.	Part No.	Qty.	Description

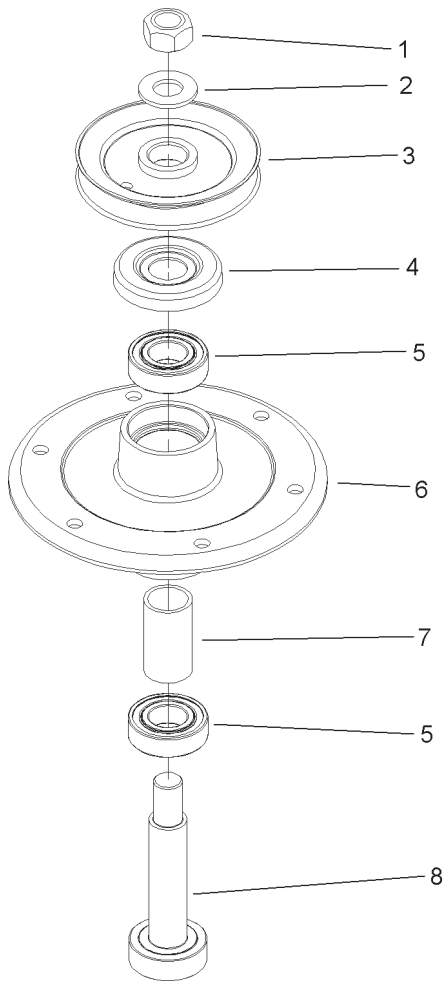

Sheet No.:A2

Spindle Housing Assembly No. 106-0787

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1 118	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0782	1	Shaft-Spindle

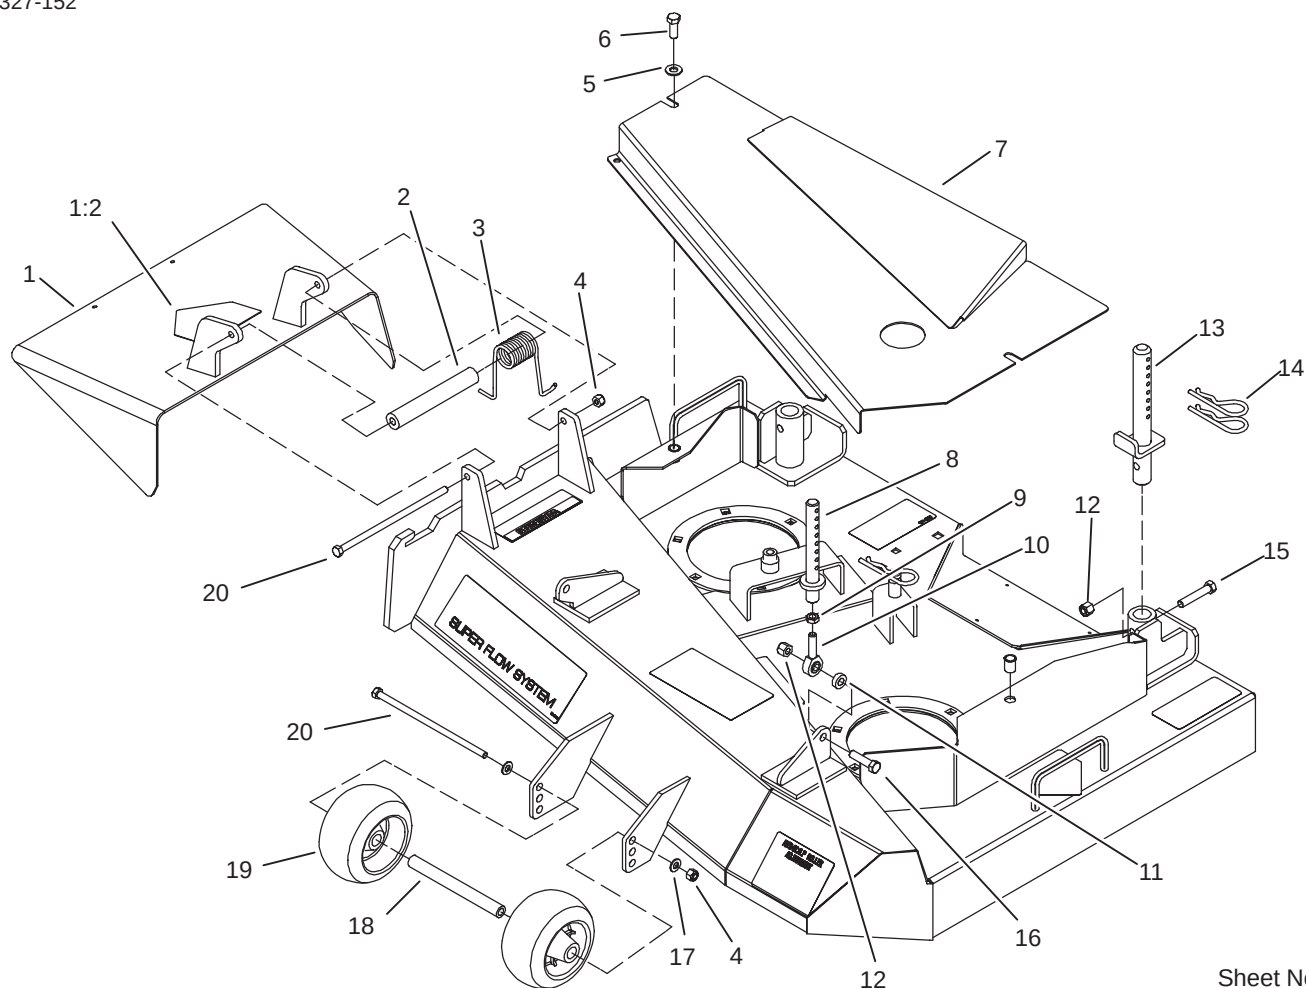


Sheet No.:4

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4624	1	Deflector ASM
1:2	93-7316	1	Decal-Danger
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	2	Nut-Lock, NI
5	3256-24	2	Washer-Flat
6	323-6	2	Screw-HH
7	106-5508-01	1	Cover ASM
8	106-0684	2	Front Pin ASM
9	3220-3	2	Nut-Jam
10	1-613204	2	Balljoint
11	104-1156	2	Spacer
12	3296-39	4	Nut-Lock, NI
13	106-3365	2	Rear Pin ASM
14	3290-256	6	Pin-Hair
15	323-10	2	Screw-HH
16	323-8	2	Screw-HH
17	3256-23	2	Washer-Flat
18	98-5967	1	Spacer
19	68-2730	2	Wheel-Gage
20	322-50	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

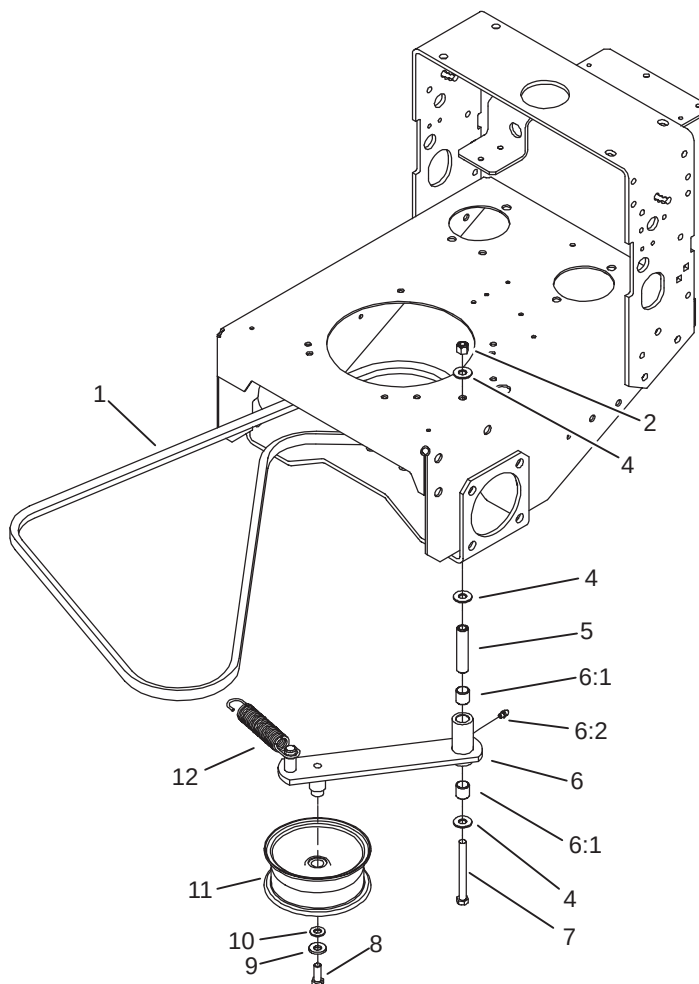

Sheet No.:5


Carrier Frame Assembly


Ref. No.	Part No.	Qty.	Description
1	106-5493	1	Belt-Drive, PTO
2	3296-39	1	Nut-Lock, NI
4	1-809107	3	Washer-Hardened
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description

Electrical Schematic

12.5 KAWASAKI GEAR M.S.

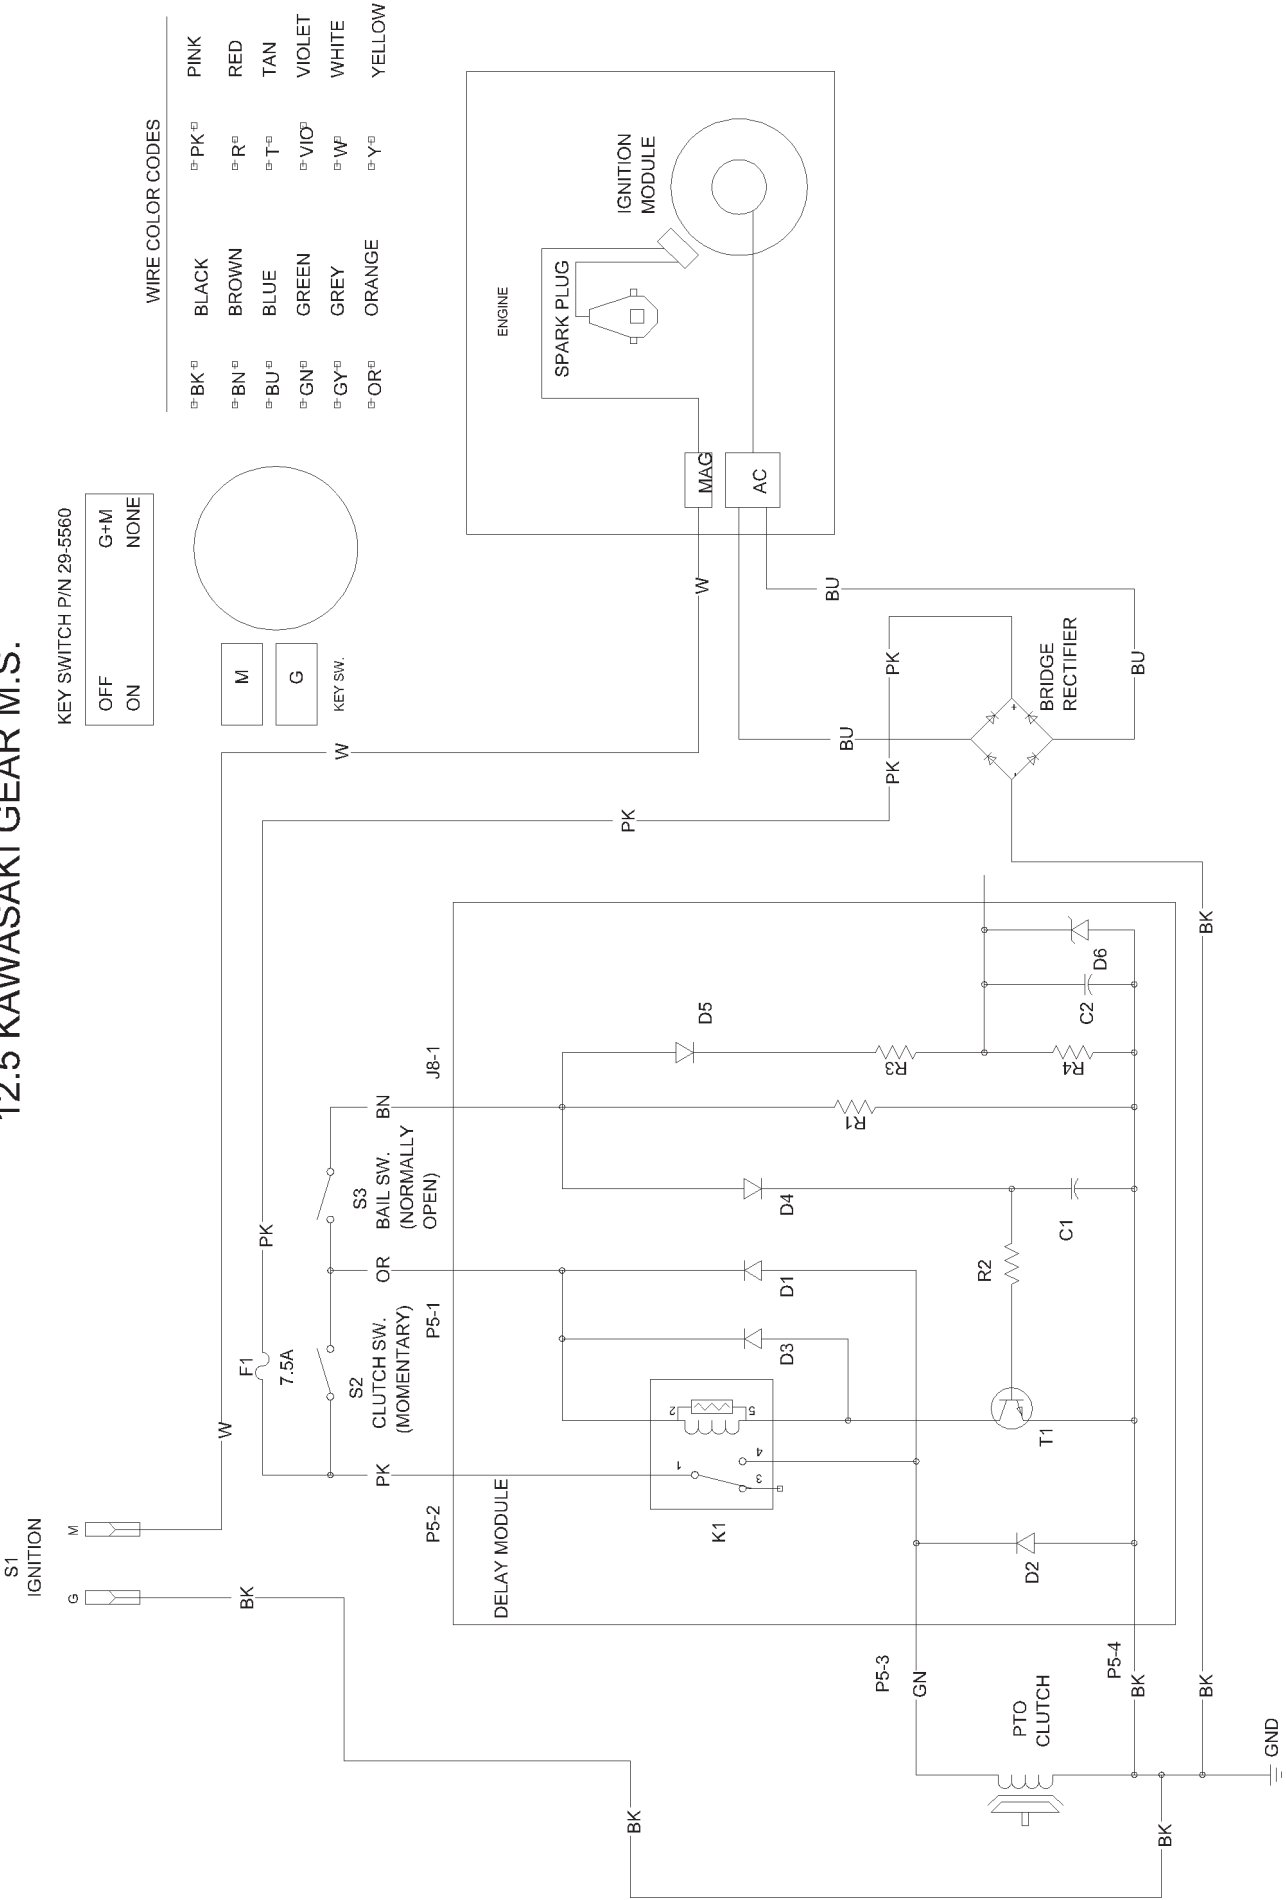

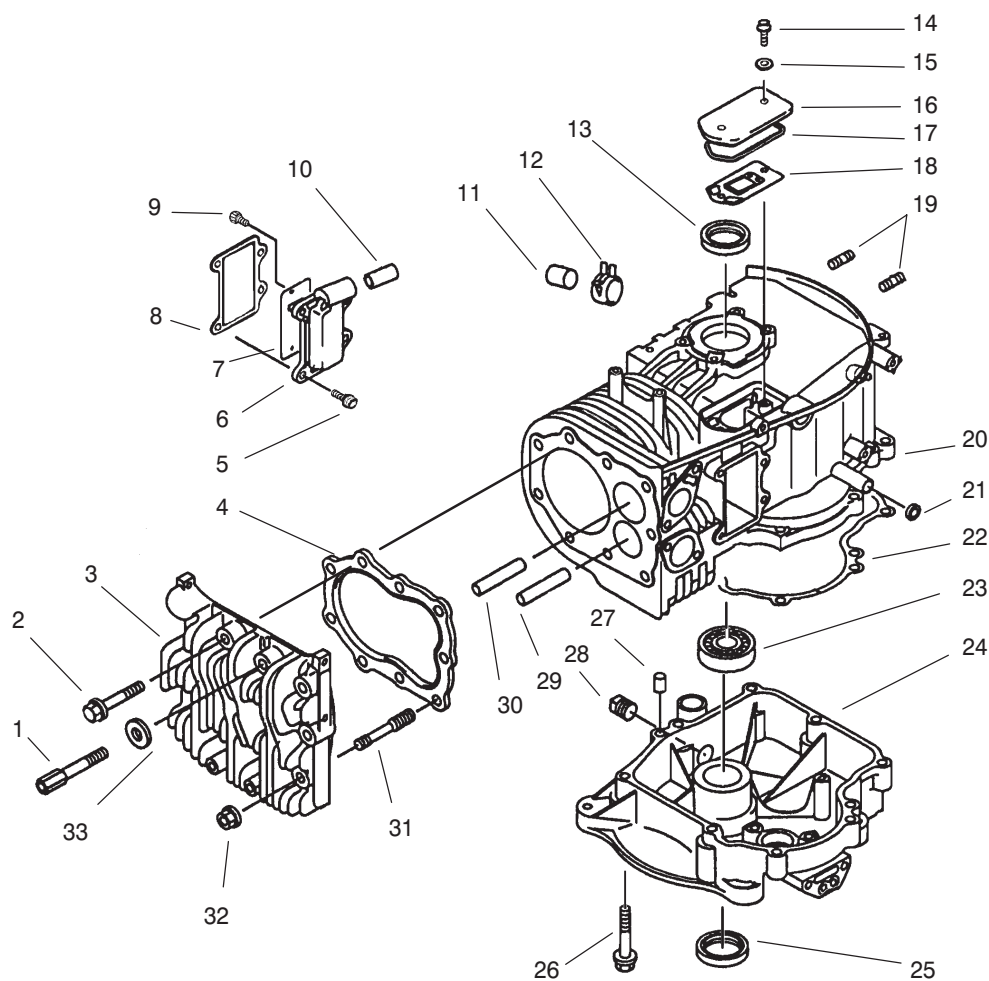


Crankcase Assembly - Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	92002-2258	2	Bolt
2	130g1055	4	Bolt-Flange
3	11001-2151	1	Head-Cylinder
4	11004-2091	1	Gasket-Head
5	130g0616	4	Bolt-Flange
6	49108-2011	1	Cover-V valve Chamber
7	14025-2143	1	Cover
8	11060-2059	1	Gasket
9	92009-2307	2	Screw
10	92059-2142	1	Tube
11	92066-2096	1	Plug
12	92170-2088	1	Clamp
13	92049-2096	1	Seal-Oil
14	92002-2087	2	Bolt
15	11060-2323	2	Gasket
16	14025-2040	1	Cover-Breather
17	11009-2339	1	Gasket-Cover
18	14069-2062	1	Breather
19	92004-2083	4	Stud-6 X 14
20	49120-6108	1	Crankcase-Complete
21	92049-2097	1	Seal-Oil
22	11060-2015	1	Gasket-Crankcase
23	601a6207	1	Bearing-Ball
24	49015-6176	1	Cover-Crankcase
25	92049-2227	1	Seal-Oil
26	130g0845	8	Bolt-Flange

Ref. No.	Part No.	Qty.	Description
27	92043-1263	2	Pin
28	92066-2097	1	Plug
29	49002-2071	1	Guide-V valve Exhaust
30	49002-2070	1	Guide-V valve Intake
31	92004-2082	3	Stud
32	92015-2115	3	Nut
33	410b1000	2	Washer-Plain

*Order Parts from Kawasaki

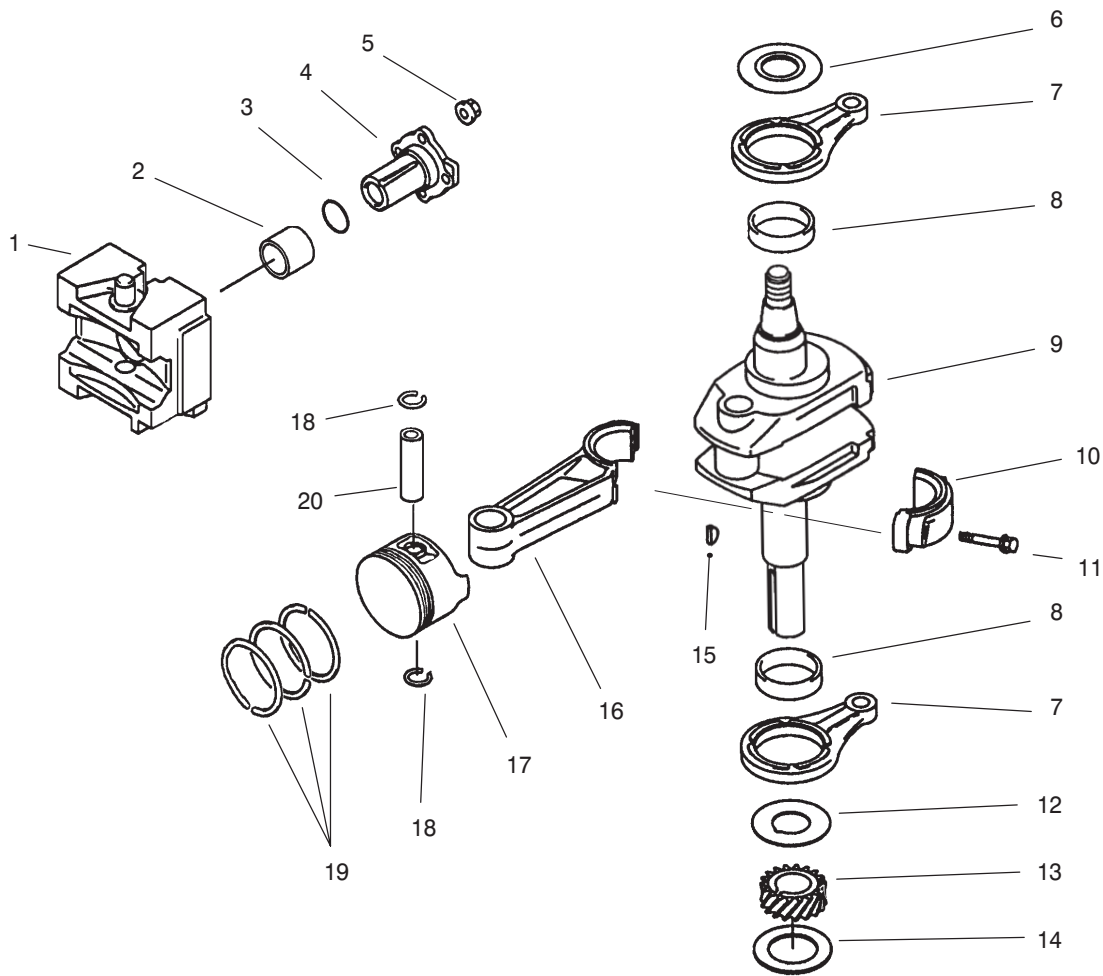


Piston and Crankshaft Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	13042-6006	1	Weight Incl #2
2	92141-2097	1	Bearing-Plane
3	92055-2072	1	O-Ring
4	13107-2253	1	Shaft
5	92015-1193	4	Nut
6	92026-2164	1	Spacer
7	46102-6007	2	Rod Incl #8
8	92141-2108	2	Bearing-Plane
9	49119-2177	1	Crankshaft ASM
11	92050-2193	2	Bolt
12	92026-2156	1	Spacer
13	59056-2105	1	Gear-Helical
14	92025-2145	A/R	Shim T=1.18
14	92025-2146	A/R	Shim T=1.25
14	92025-2147	A/R	Shim T=1.32
14	92025-2148	A/R	Shim T=1.39
14	92025-2149	A/R	Shim T=1.46
14	92025-2150	A/R	Shim T=1.53
14	92025-2151	A/R	Shim T=1.60
14	92025-2152	A/R	Shim T=1.67
14	92025-2153	A/R	Shim T=1.74
14	92180-2015	A/R	Shim T=1.11
14	92180-2016	A/R	Shim T=1.81
15	92038-2094	1	Key

Ref. No.	Part No.	Qty.	Description
16	13251-6005	1	Rod ASM Incl #10 11
16	13251-6007	A/R	Rod ASM Incl #10 11 0.50
17	13001-2084	1	Piston
17	13029-2019	A/R	Piston 0.25
17	13029-2020	A/R	Piston 0.50
18	92033-2066	2	Ring-Snap
19	13008-6001	1	Set-Ring Piston
19	13008-6002	A/R	Set-Ring Piston 0.25
19	13008-6003	A/R	Set-Ring Piston 0.50
20	13002-2066	1	Pin-Piston

*Order Parts from Kawasaki

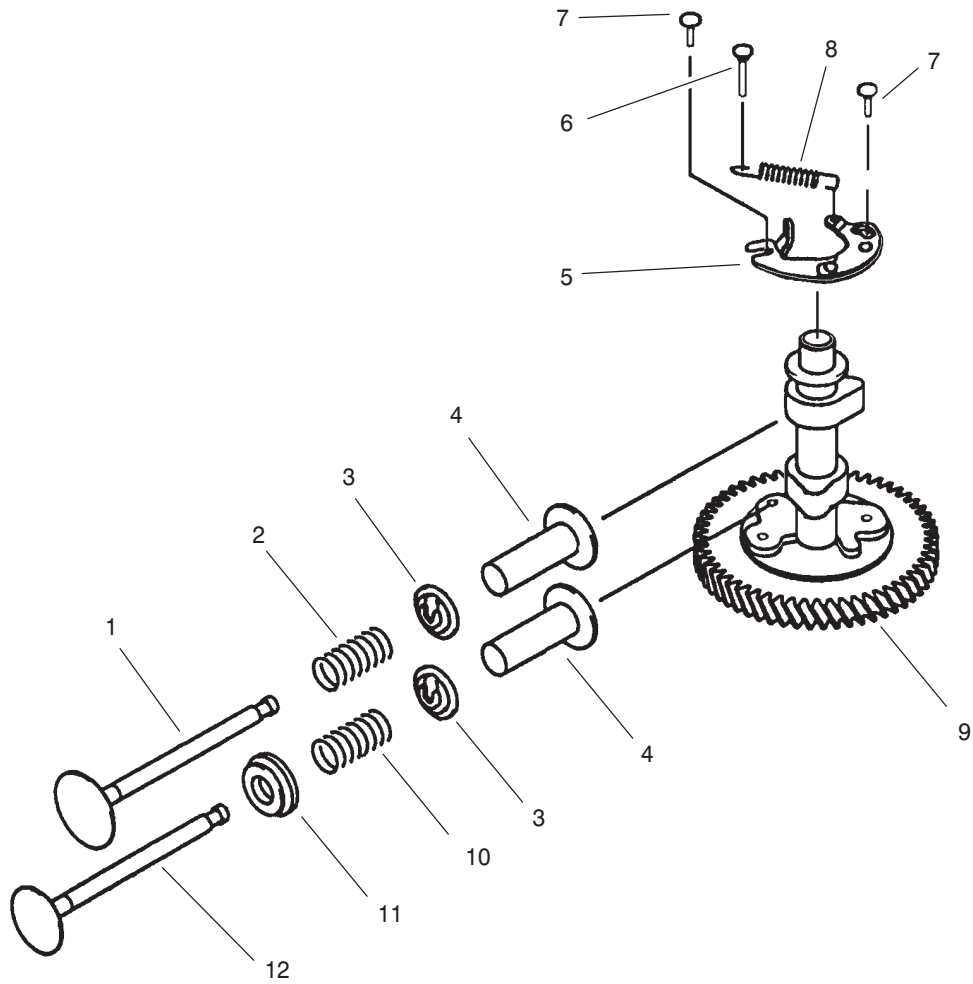


Valves and Camshaft Assembly
Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	12004-2076	1	Valve-Intake
2	49078-2059	1	Spring-Valve
3	39108-2054	2	Retainer-Spring
4	12032-2058	2	Tappet
5	21118-2068	1	Decompressor
6	92043-2167	1	Pin
7	92043-2113	2	Pin
8	92144-2171	1	Spring
9	49118-2134	1	Camshaft Incl # 5-8
10	49078-2058	1	Spring-Valve
11	12039-2052	1	Rotator
12	12005-2066	1	Valve-Exhaust

Ref. No.	Part No.	Qty.	Description


*Order Parts from Kawasaki

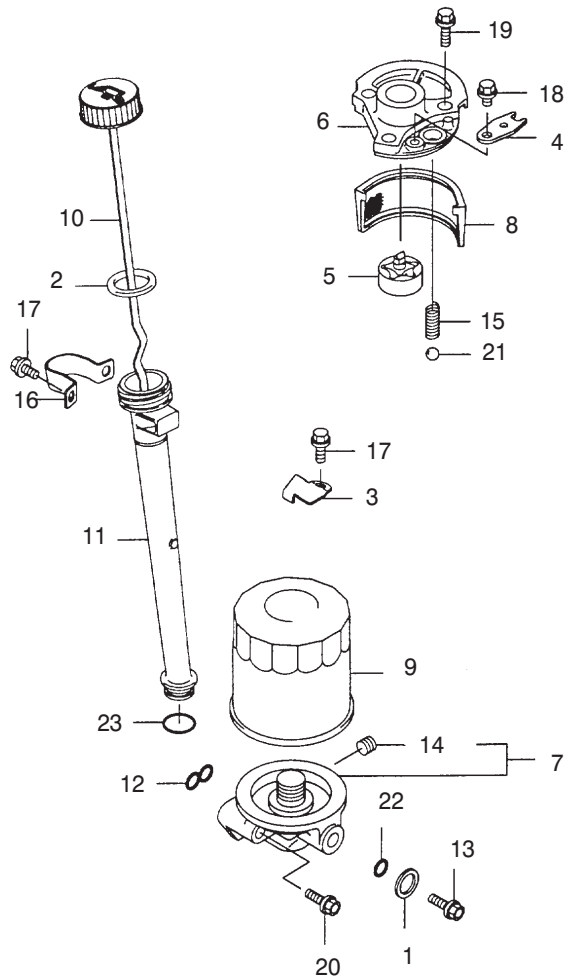

Lubrication Equipment Assembly
Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2175	1	Gasket				
2	11009-2346	1	Gasket-Oil Gauge				
3	13169-2359	1	Plate				
4	13270-2054	1	Plate				
5	16082-2057	1	Pump Assy-Oil				
6	16142-6001	1	Cover-Pump				
7	23062-6001	1	Bracket-Comp				
8	49065-2056	1	Filter-Oil				
9	49065-2071	1	Filter-Oil				
10	52005-2058	1	Gauge-Oil				
11	59231-2059	1	Filler				
12	92055-2063	1	Ring-O				
13	92066-2093	1	Plug				
14	92066-2211	1	Plug				
15	92081-2216	1	Spring				
16	92170-2014-9H	1	Clamp				
17	130B0508	3	Bolt-Flanged				
18	130B610	1	Bolt-Flanged				
19	130G0825	3	Bolt-Flanged				
20	130G0845	2	Bolt-Flanged				
21	600A1000	1	Ball-Steel				
22	670D1507	1	O Ring				
23	670D2016	1	O Ring				


*Order Parts from Kawasaki

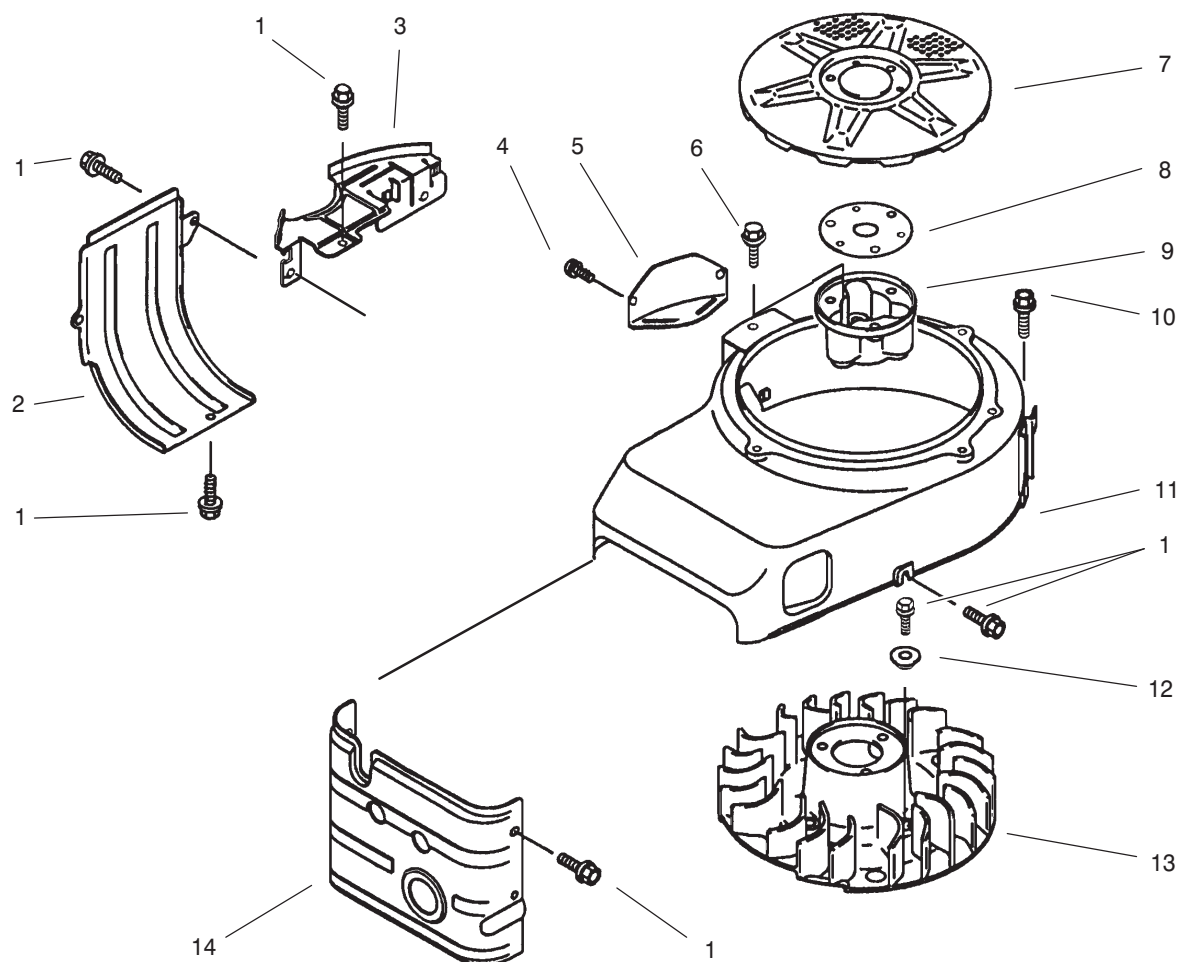

Cooling Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	130g0610	9	Bolt-Flange
2	49089-2199-9H	1	Shroud-Engine
3	59066-2295-9H	1	Housing-Fan
4	234b0408	2	Screw
5	14024-2038-9H	1	Cover
6	130b0820	3	Bolt-Flange
7	14037-2104-9H	1	Screen
8	92025-2003	1	Shim T-1.20
9	11044-2084	1	Bracket
10	130go614	6	Bolt-Flange
11	59066-2677-9H	1	Housing-Fan
12	92143-2179	4	Collar
13	59041-2081	1	Fan
14	49089-2181-9H	1	Shroud-Engine

*Order Parts from Kawasaki

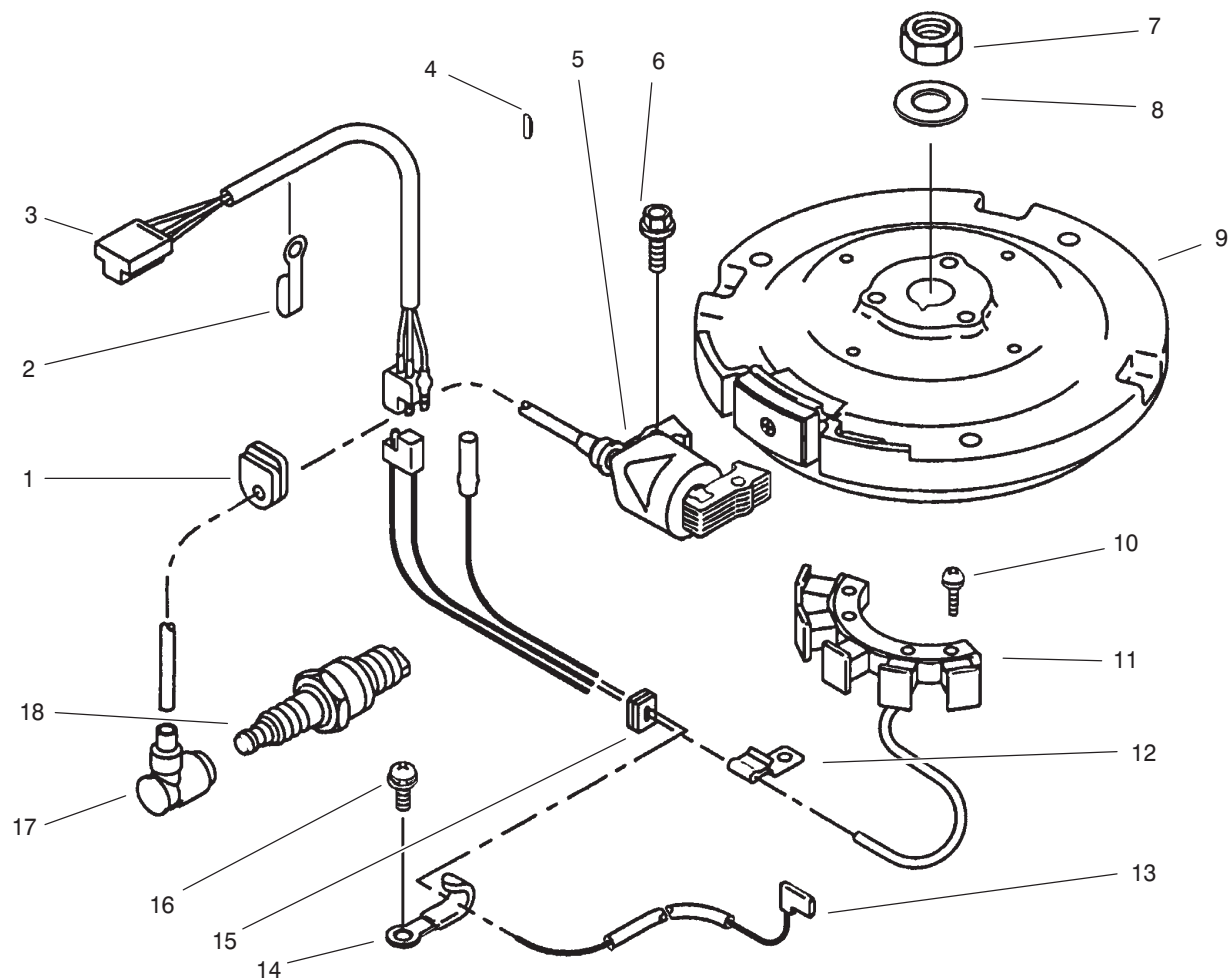


Electric Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	92071-2100	1	Grommet
2	92037-2063	1	Clamp
3	26001-2113	1	Harness-Wire
4	92038-2094	1	Key
5	21121-2086	1	Coil-Ignition
6	130b0520	2	Bolt-Flange
7	314g1800	1	Nut-Hex
8	92022-2178	1	Washer
9	21194-2323	1	Flywheel
10	224b0620	2	Screw
11	59031-2106	1	Coil-Charging
12	92037-2158	1	Clamp
13	26011-2329	1	Wire-Lead
14	92170-2029	1	Clamp
15	92071-2099	1	Grommet
16	234b0408	1	Screw
17	21130-2060	1	Cap-Spark Plug
18	92070-2101	1	Spark Plug-Rcj8

Ref. No.	Part No.	Qty.	Description


*Order Parts from Kawasaki

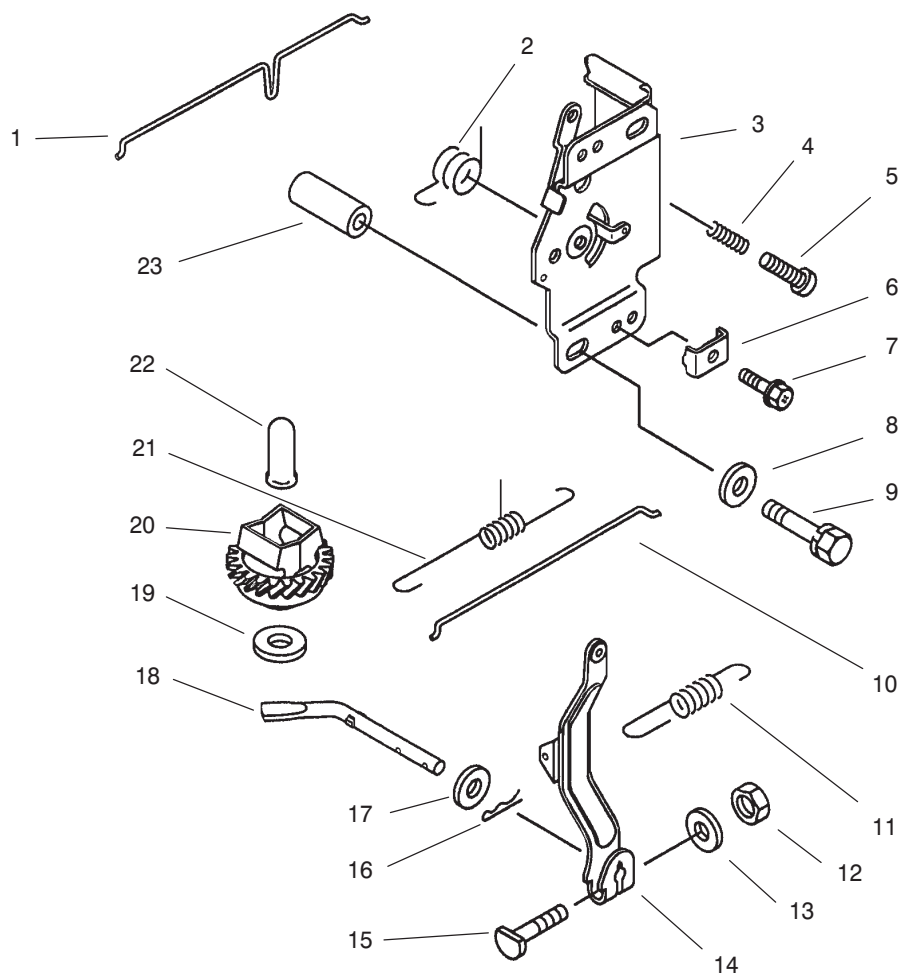

Control Equipment Assembly Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	16169-2126	1	Link-Choke
2	92081-2316	1	Spring
3	49113-2067	1	Panel Incl #2 4-7
4	92144-2266	1	Spring
5	214b0425	1	Screw
6	92037-2020	1	Clamp
7	92150-2128	1	Bolt
8	92200-2070	2	Washer
9		2	Bolt
10	16171-2083	1	Link
11	39129-2019	1	Spring-Governor
12	311b0600	1	Nut-HH
13	411b0600	1	Washer
14	21187-2052	1	Arm ASM
15	92002-2269	1	Bolt
16	554a0600	1	Pin-Snap
17	92200-2029	1	Washer
18	39003-2072	1	Arm-Pivot
19	92200-2036	1	Washer
20	49110-2067	1	Governor ASM
21	92081-2213	1	Spring
22	42036-2060	1	Sleeve
23	92027-2071	2	Collar

*Order Parts from Kawasaki

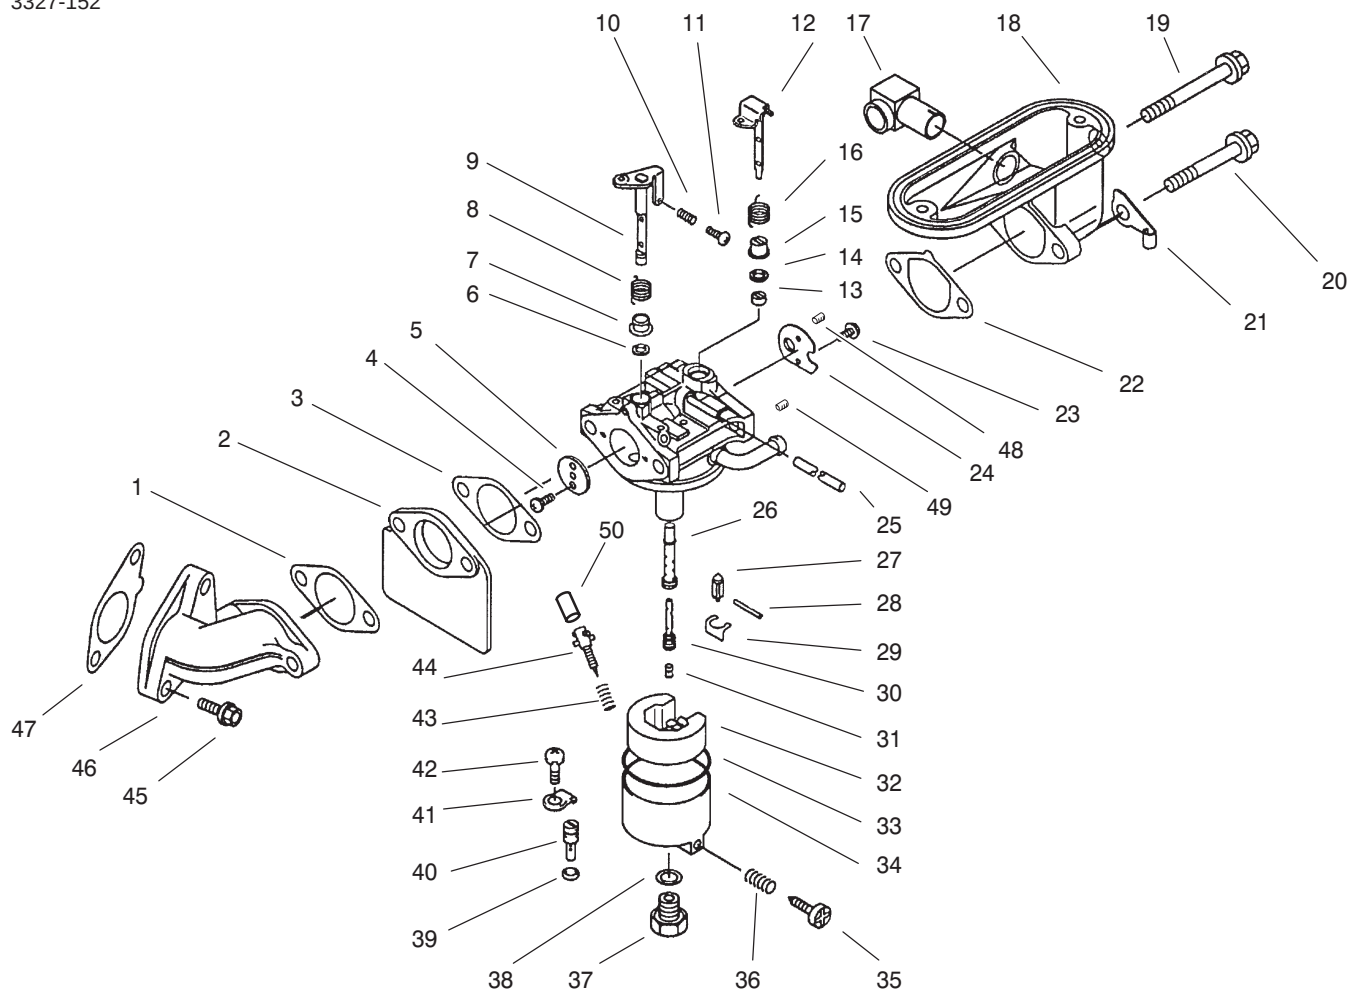


Carburetor Assembly - Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
0	15003-2467	1	Carburetor ASM
1	11060-2338	1	Gasket-Intake Pipe
2	16073-2091	1	Insulator
3	11060-2339	2	Gasket-Carburetor
4	92009-2080	2	Screw
5	16025-2141	1	Valve-Throttle #110
6	92093-2082	1	Seal
7	92027-2025	1	Collar
8	92081-2077	1	Spring
9	16041-2009	1	Shaft-Throttle
10	92081-2046	1	Spring
11	92009-2079	1	Screw
12	16041-2010	1	Shaft-Choke
13	92027-2003	1	Collar
14	92093-2069	1	Seal
15	92143-2142	1	Collar
16	92144-2160	1	Spring
17	59071-2062	1	Joint
18	16060-2108	1	Pipe-Intake
19	92002-2254	1	Bolt
20	92002-2253	1	Bolt
21	92170-2019	1	Clamp
22	11009-2025	1	Gasket
23	92009-2081	2	Screw
24	16126-2206	1	Valve-Choke
25	92059-2266	1	Tube

Ref. No.	Part No.	Qty.	Description
26	49121-2207	1	Nozzle-Main
27	16030-2073	1	Valve-Float
28	92043-2006	1	Pin
29	92033-2067	1	Ring-Snap
30	49123-2078	1	Holder-Main Jet
31	92063-2294	1	Jet-Main
32	16031-2066	1	Float
33	11009-2024	1	Gasket
34	16020-2109	1	Chamber-Float Incl 35 36
35	92009-2015	1	Screw
36	92081-2009	1	Spring
37	92150-2146	1	Bolt
38	1100a-2025	1	Gasket
39	16038-024	1	Gasket
40	92064-2108	1	Jet-Pilot
41	13183-2252	1	Plate
42	92009-2244	1	Screw
43	92081-2008	1	Spring
44	16014-2076	1	Screw-Pilot Air
45	130g0825	2	Bolt-Flange
46	16060-2109	1	Pipe-Intake
47	11060-2337	1	Gasket-Intake Pipe
48	16035-2063	1	Jet-Air #0.9
49	16035-2051	1	Jet-Air #1.4
50	39076-2053	1	Limiter

*Order Parts from Kawasaki

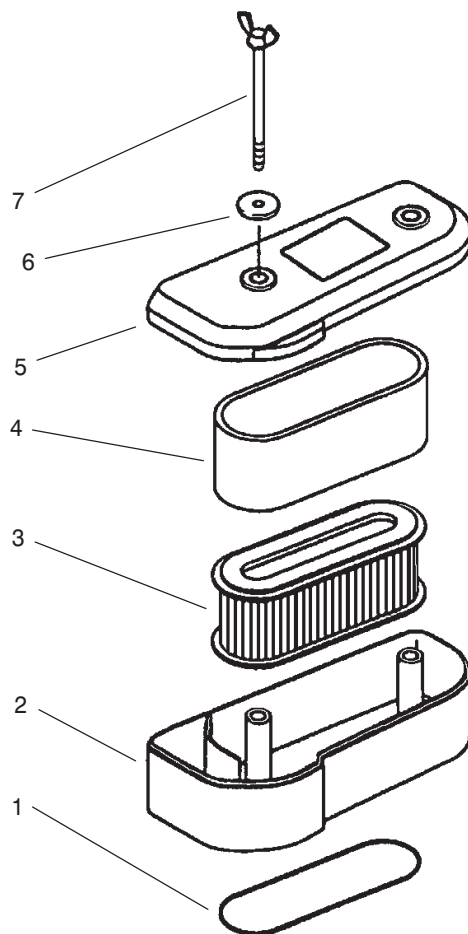

Air Filter Assembly - Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	11009-2443	1	Gasket-Air Filter
2	11011-2174	1	Case-Air Filter
3	11013-2021	1	Element-Air Filter
4	11013-2020	1	Element-Air Filter
5	11012-2192	1	Cap-Air Filter
6	92022-2220	2	Washer
7	92002-2230	2	Bolt
	11010-2291	1	Filter ASM


*Order Parts from Kawasaki

Starter Assembly - Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	90281-2267	1	Spring-Recoil
2	32099-2060	1	Case-Spring
3	32099-2239-yk	1	Case-Recoil Starter
4	130b0610	4	Bolt-Flange
5	59106-2060	1	Rope-Starter
6	46075-2059	1	Grip-Starter Rope
7	92022-2248	1	Washer
8	59101-2054	1	Reel-Recoil Starter
9	92081-2021	3	Spring
10	92081-2268	1	Spring-Return
11	13165-2073	3	Pawl-Recoil Starter
12	14020-2054	1	Retainer-Recoil
13	92001-2027	1	Bolt
14	49080-2144	1	Pulley-Starting
15	120p0620	3	Bolt-Socket
	49088-2412-yk	1	Starter Incl #1-5 8-14

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

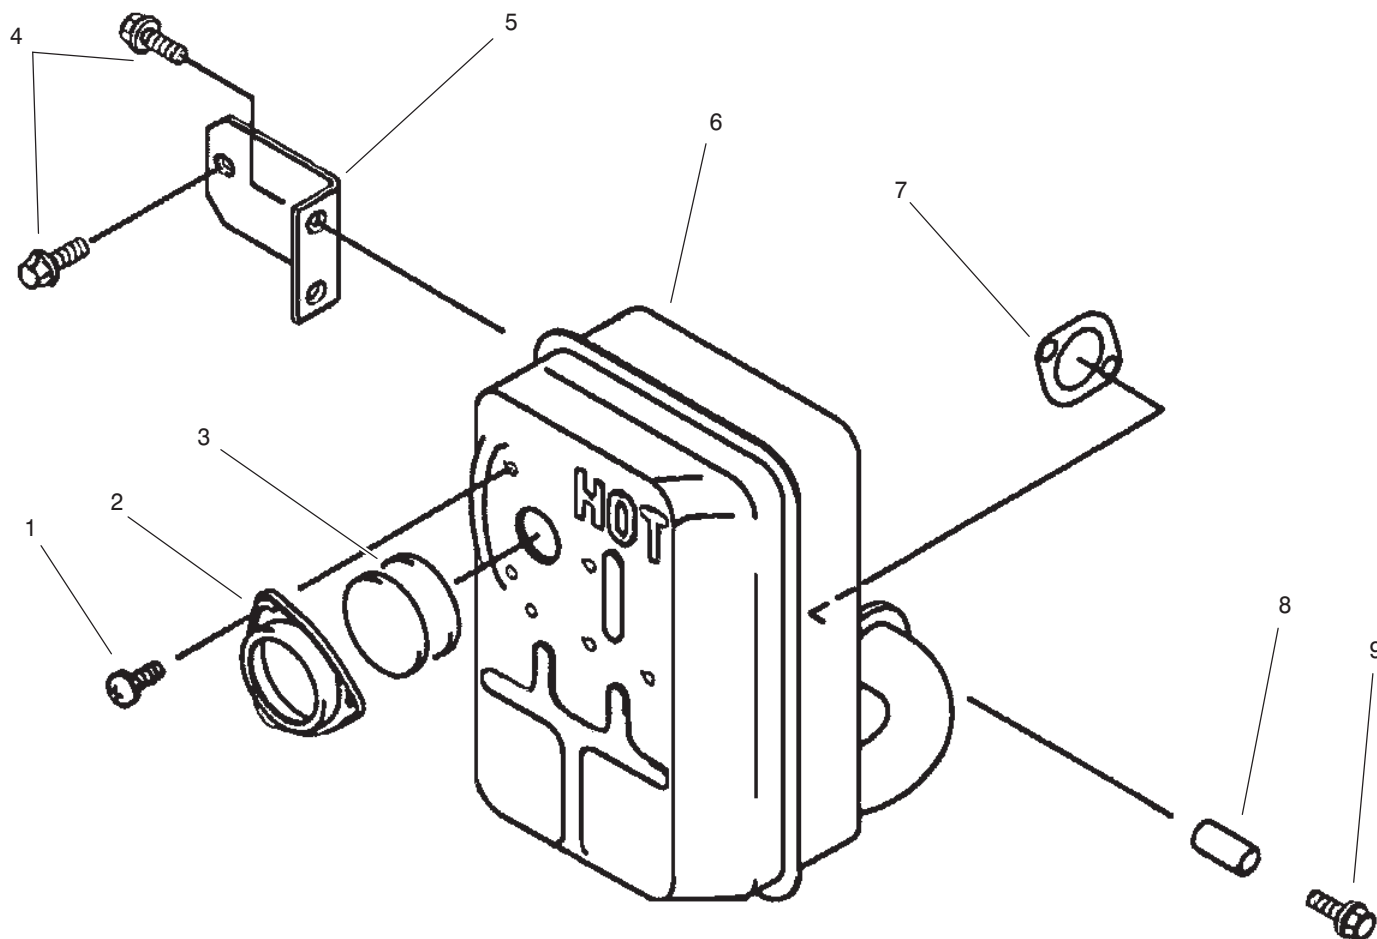

Muffler Assembly - Kawasaki Model FB460V-LS08

Ref. No.	Part No.	Qty.	Description
1	92009-2166	2	Screw
2	11012-2165-9Y	1	Cap-Spark Arrestor
3	18077-2054	2	Arrestor-Spark
4	130b0812	4	Bolt-Flange
5	11044-2069-9Y	1	Bracket
6	49069-2190-9Y	1	Muffler ASM
7	11009-2527	1	Gasket-Muffler
8	92027-2081	1	Collar
9	130g0845	1	Bolt-Flange

Ref. No.	Part No.	Qty.	Description

*Order Parts from Kawasaki

