



53cm Rear Bagger Lawnmower

Model No. 26634-210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Deck Assembly	3	Cylinder Head Assembly	12
Engine and Belt Guide Assembly	4	Crankshaft Assembly	13
Blade and Brake Assembly	5	Carburetor Assembly	14
Handle Assembly	6	Governor Assembly	15
Bag Assembly	7	Air Cleaner Assembly	16
Rear Drive Assembly	8	Fuel Tank Assembly	17
Gear Case Assembly No. 62–6673	9	Blower Housing and Flywheel Assembly	18
Control Assembly	10	Rewind Starter Assembly	19
Cylinder Assembly	11	Gasket Assembly	20

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Dethatcher Kit	59131	Leaf Shredder Kit	59180

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

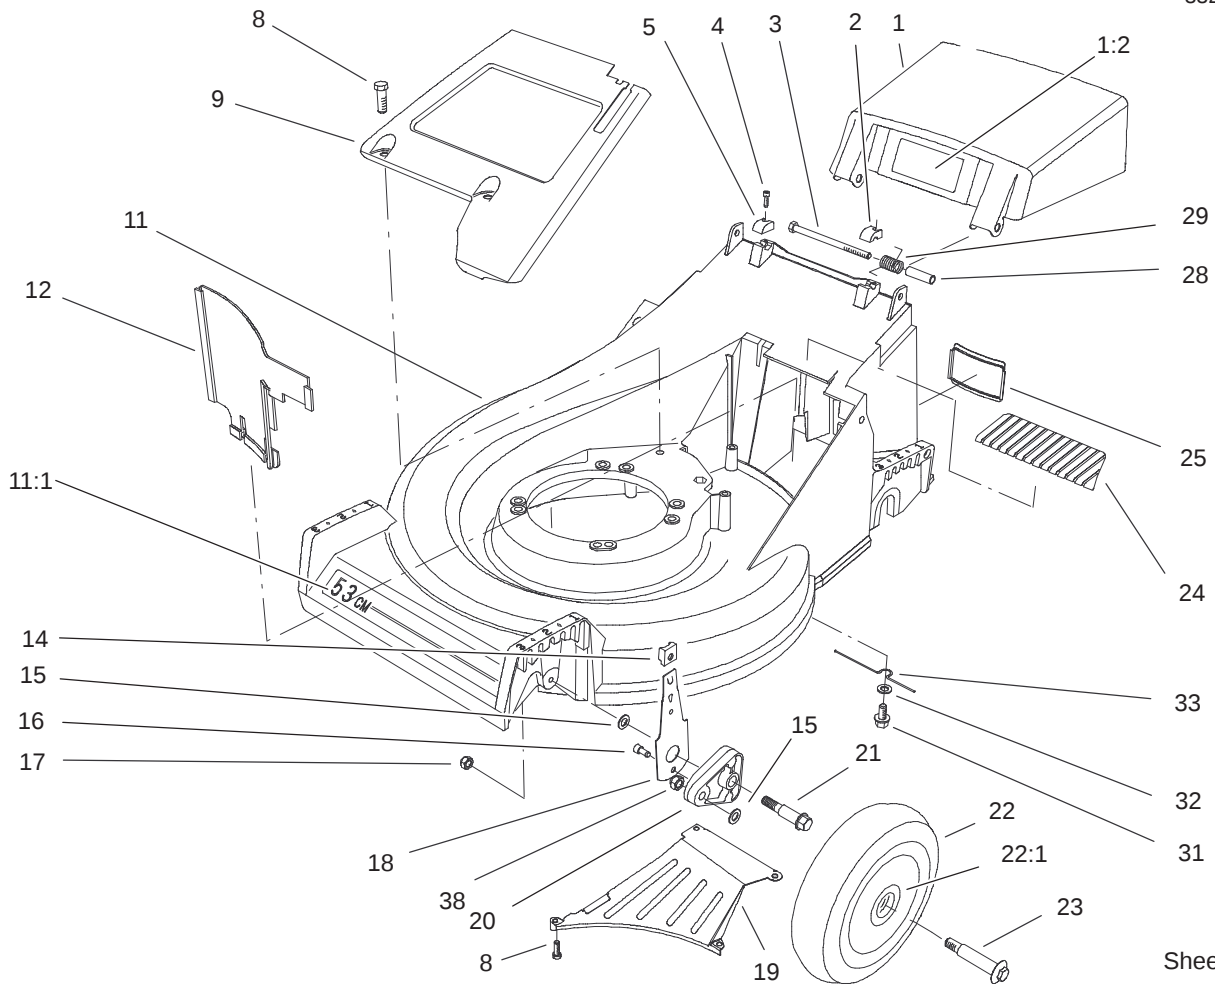

Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	17-1569	1	Door-Bag	31	32144-15	1	Screw
1:2	93-4105	1	Decal-Danger	32	3256-24	1	Washer-Flat
2	71-7900	1	Cap-Hinge Bolt, LH	33	66-0620	1	Retainer-Belt
3	322-29	2	Screw-HH	38	603773	2	Nut
4	65-5210	2	Screw-Allen Hd				
5	71-7910	1	Cap-Hinge Bolt, RH				
8	32144-70	6	Screw-HH				
9	65-5660-03	1	Panel-Screen				
11	16-1769	1	Deck W/Decals				
11:1	71-9870	1	Decal-Deck				
12	66-0020	1	Panel-Vertical				
14	25-7740	2	Knob-Arm				
15	40-1940	4	Washer				
16	32144-85	2	Screw-HH				
17	3296-6	2	Nut-Lock, NI				
18	66-0540	2	Front Spring Arm ASM				
19	71-9640-03	1	Ramp-Discharge				
20	66-0580	2	Arm-Pivot, Front				
21	66-0560	2	Bolt-Shoulder				
22	92-9592	2	Wheel ASM				
22:1	27-6250	2	Bushing				
23	92-1057	2	Bolt-Shoulder				
24	71-9920	1	Cover-Top				
25	71-9650	1	Cover-Access				
28	71-8580	2	Spacer-Door				
29	71-9840	2	Spring-Door				

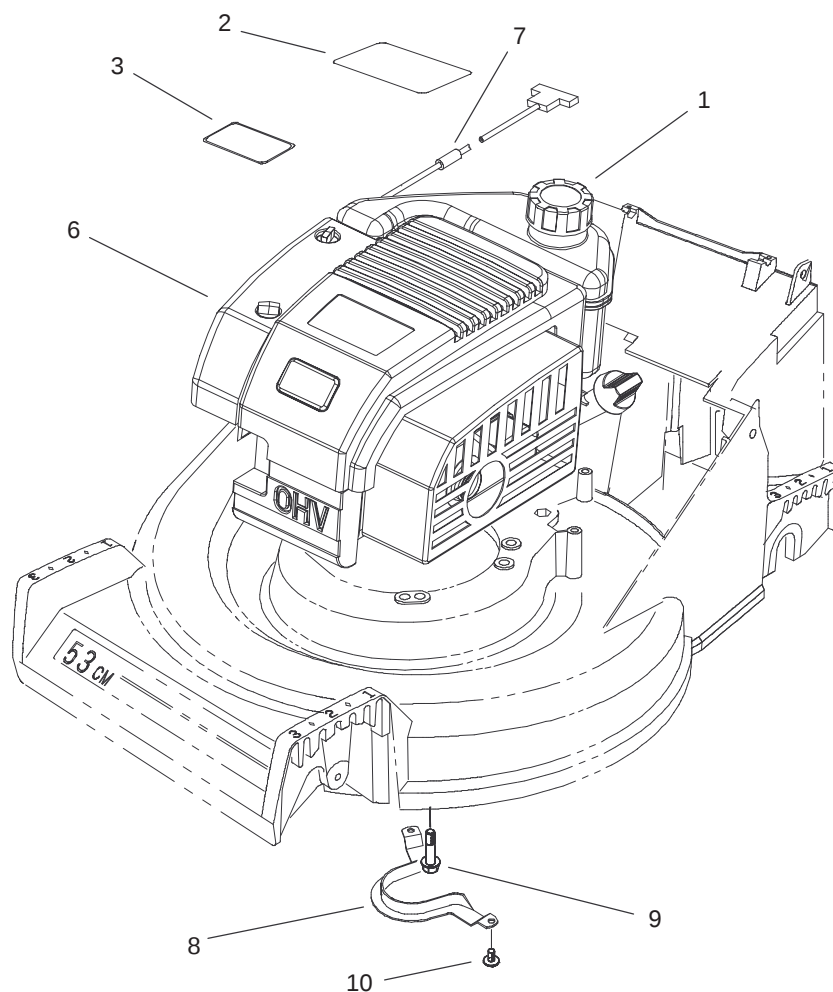 


Sheet No.:3

Engine and Belt Guide Assembly

Ref. No.	Part No.	Qty.	Description
1	93-7198	1	Gas Cap ASM
2	98-2004	1	Decal-Engine
3	92-2289	1	Plate-Logo
☆6		1	Engine-Gts 200
7	2210-316	1	Stop-Rope
8	66-0570-03	1	Bracket-Guide, Belt
9	32144-102	3	Screw-HWH
10	32144-70	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

 
☆ Not serviced separately

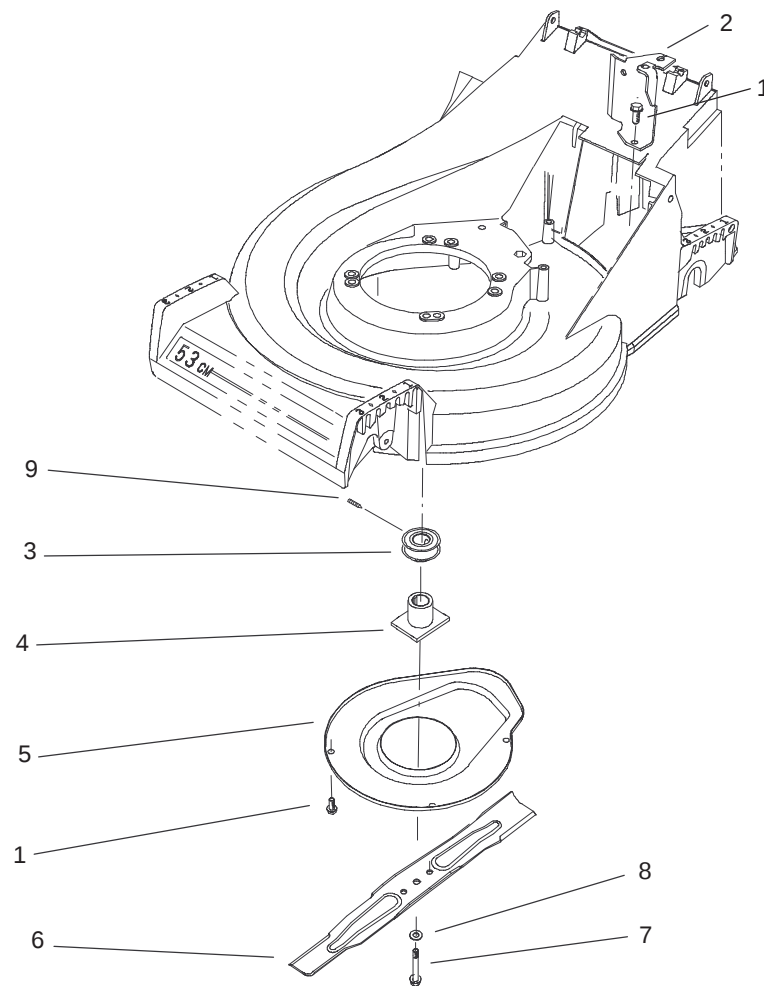

Sheet No.:4

Blade and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-70	5	Screw-HH
2	66-0030-03	1	Bracket-Cable, Support
3	95-1878	1	Pulley
4	99-5287	1	Blade Driver ASM
5	65-5200-03	1	Shield
6	42-1000-03	1	Blade
7	95-1748	1	Screw-Blade
8	3253-22	1	Washer-Lock
9	104-0214	1	Screw-Set

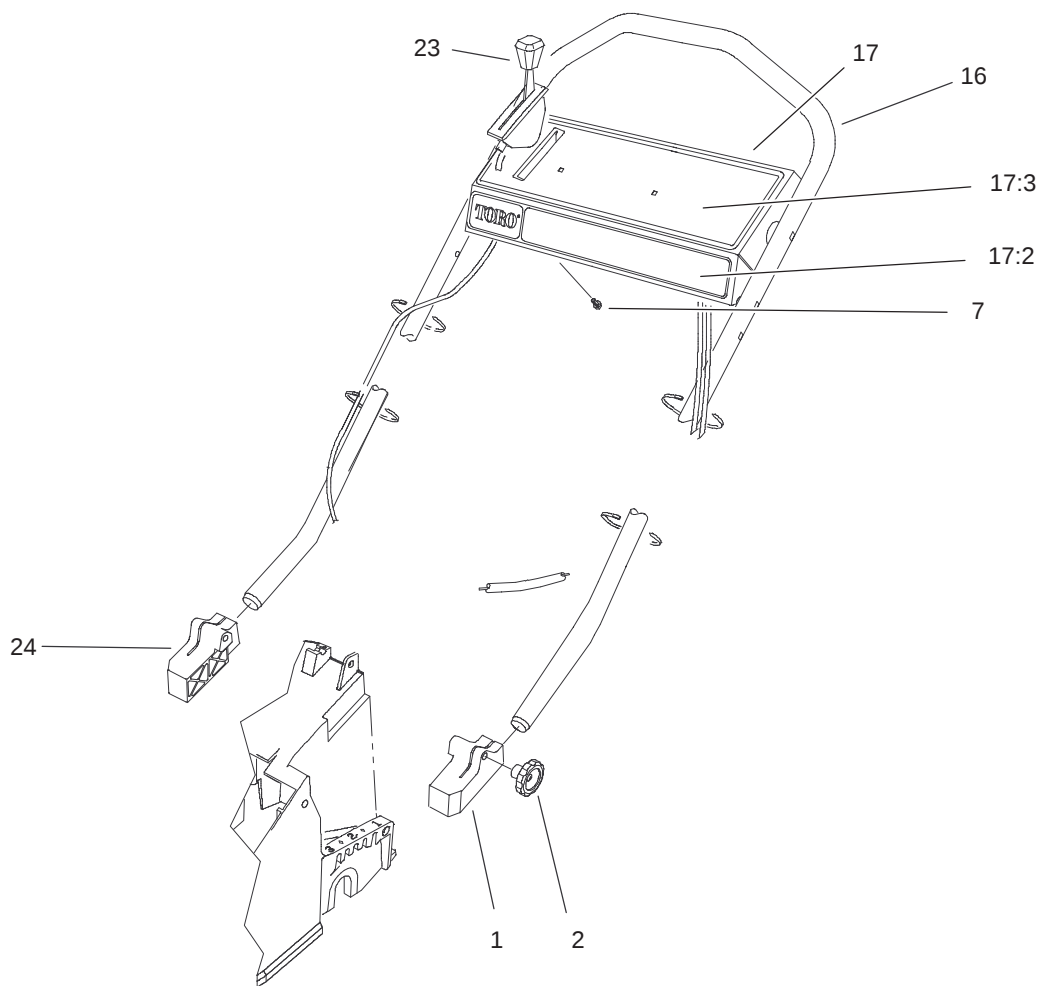 


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	71-8090	1	Handle-Mount, LH
2	19-4050	2	Knob
7	92-9665	5	Screw
16	94-4910	1	Handle-Dipped
17	104-7942	1	Panel-Service
17:2	71-9873	1	Decal-Panel Ohv
17:3	105-1339	1	Decal-Instruction
23	93-6632	1	Control-Ground Speed
24	71-8100	1	Handle-Mount, RH

Ref. No.	Part No.	Qty.	Description

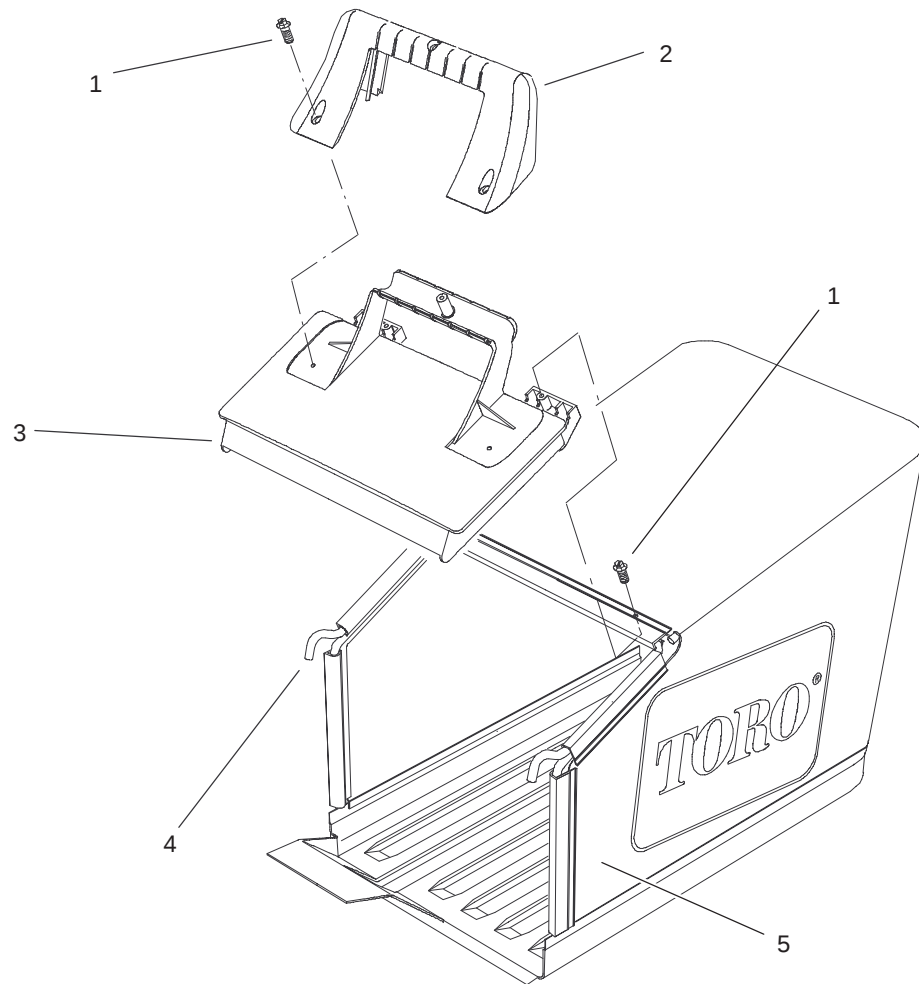 


Sheet No.:6

Bag Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-111	5	Screw-PPH
2	71-9480	1	Handle-Door
3	71-9470	1	Door-Bag
4	71-9930-03	1	Frame
5	71-9680	1	Grass Bag W/Pan

Ref. No.	Part No.	Qty.	Description

 3327-200

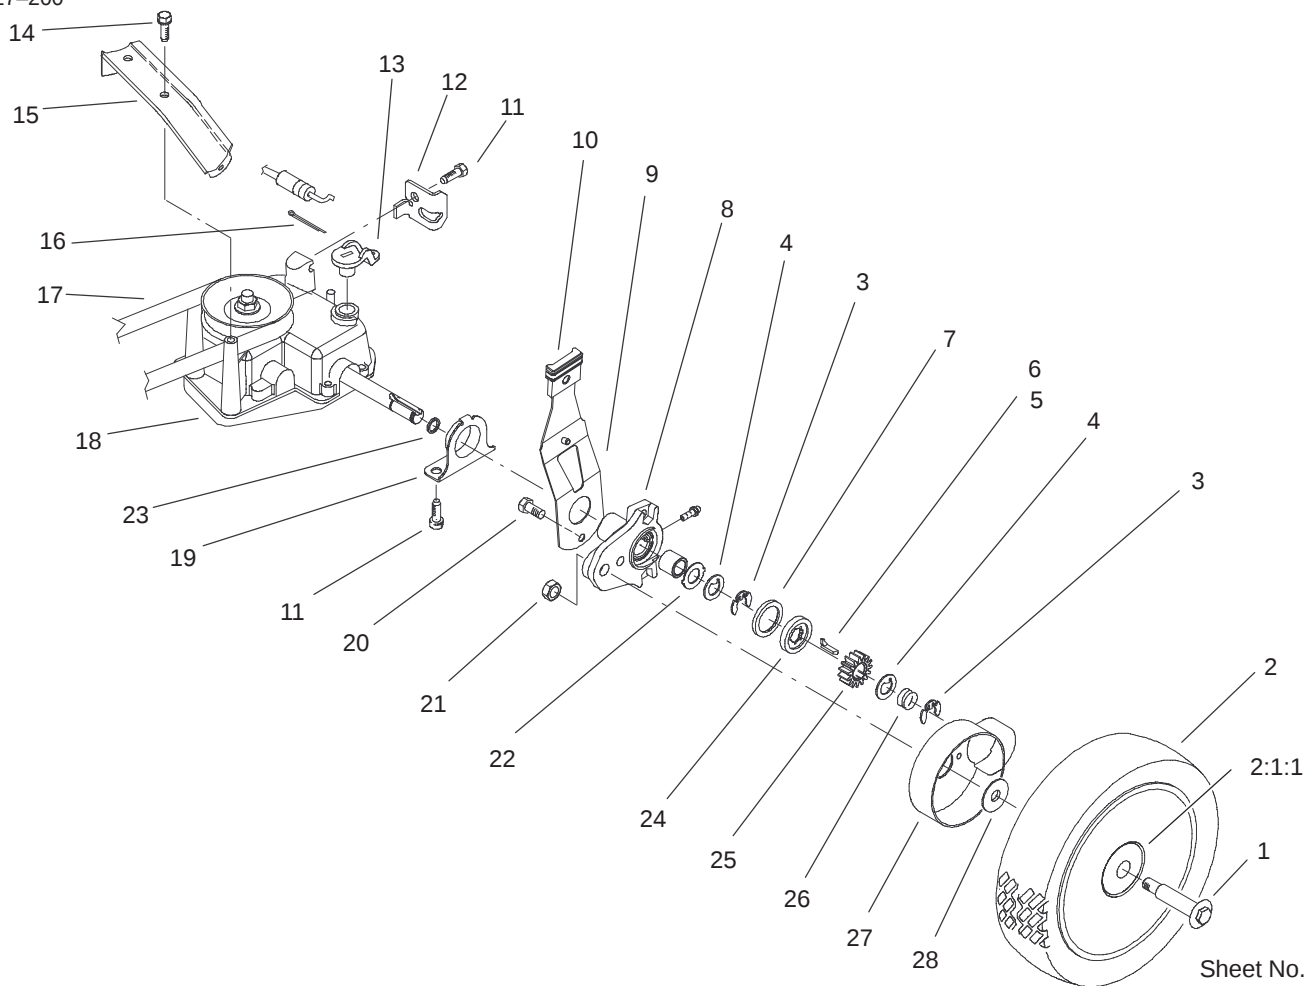


Sheet No.:7

Rear Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	99-8136	2	Wheel And Gear ASM
☆2:1		1	Wheel ASM
2:1:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	65-5042	2	Pivot Arm ASM
9	65-5440	2	Spring Arm ASM
10	25-7740	2	Knob-Arm
11	32144-70	5	Screw-HH
12	76-2930	1	Retainer-Cable
13	76-0920	1	Lever-Shift
14	49-2040	2	Screw-Tapping
15	65-5190-03	1	Bracket-Guide, Belt
16	3272-5	1	Pin-Cotter
17	36-8070	1	V-Belt
18	62-6673	1	Gearcase ASM
19	66-0360	2	Cap-End
20	32144-85	2	Screw-HH
21	603773	2	Nut
22	65-4730	2	Washer-Arm, Pivot
23	237-153	2	O-Ring

Ref. No.	Part No.	Qty.	Description
24	65-4760	2	Washer-Clutch
25	65-4750	2	Gear-Pinion
26	65-4720	2	Spring-Compression
27	74-1660	2	Cover-Wheel
28	74-1671	2	Spacer-Cover, Wheel

 
☆ Not serviced separately

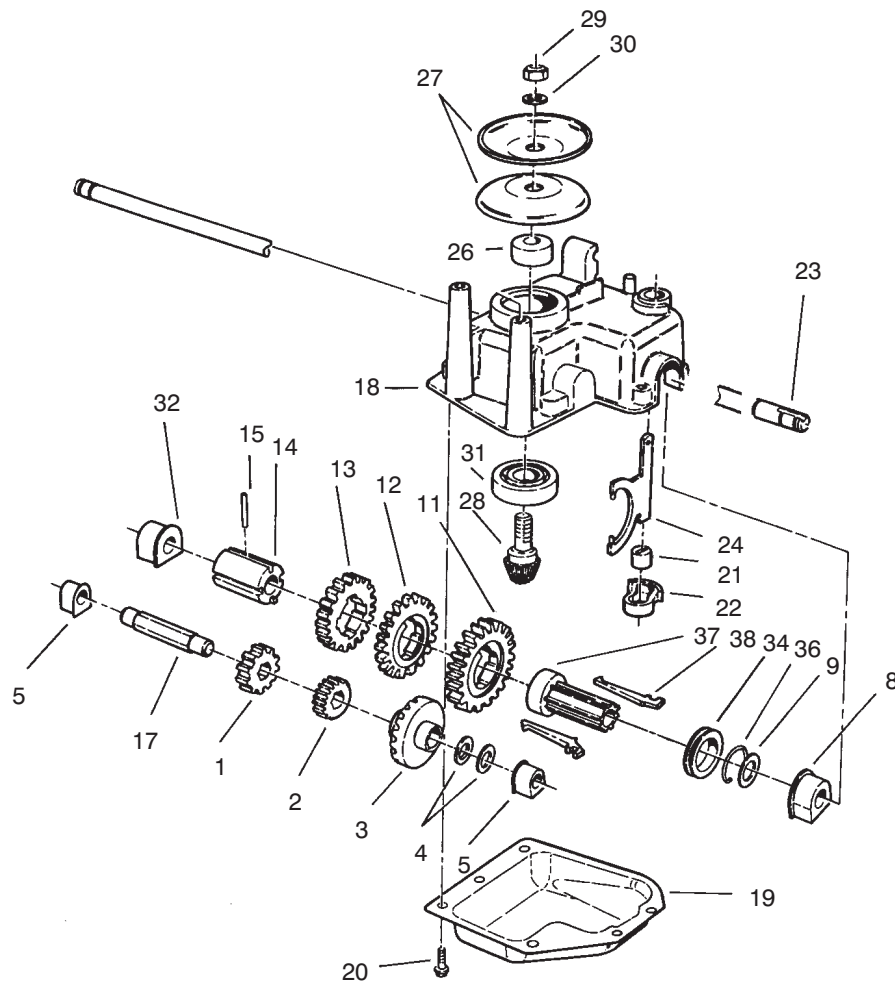

Sheet No.:A1

Gear Case Assembly No. 62-6673

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3800	1	Pinion-25 T	31	100-1048	1	Bearing-Ball
2	55-3780	1	Pinion-20 T	32	60-8850	1	Bushing-Output
3	104-7668	1	Gear-15t Spur, 37t Bevel	34	76-0770	1	Collar-Shift
4	36-4791	2	Washer-Thrust	36	65-5250	1	Clip-Spring
5	60-8750	2	Bushing	37	76-0780	1	Sleeve-Key, Shift
8	60-8770	1	Bushing-Output	38	76-0760	2	Key-Shift
9	36-4780	1	Washer				
11	55-3770	1	Gear-49 T				
12	55-3790	1	Gear-44 T				
13	55-3810	1	Gear-39 T				
14	60-8790	1	Sleeve-Gear				
15	32121-120	1	Pin-Spring				
17	60-8800	1	Shaft-Intermediate				
18	60-8710	1	Case-Gear, Upper				
19	60-8730-03	1	Cover-Case, Gear				
20	49-2040	6	Screw-Tapping				
21	29-9570	1	Bushing-Yoke				
22	60-8810	1	Retainer-Fork, Shift				
23	65-4770	1	Shaft-Output				
24	60-8870	1	Yoke-Shift				
26	62-6660	1	Spacer				
27	100-1176	2	Pulley-Half				
28	104-7667	1	Gear-Pinion, Bevel				
29	3296-5	1	Nut-Lock, NI				
30	3256-24	1	Washer-Flat				

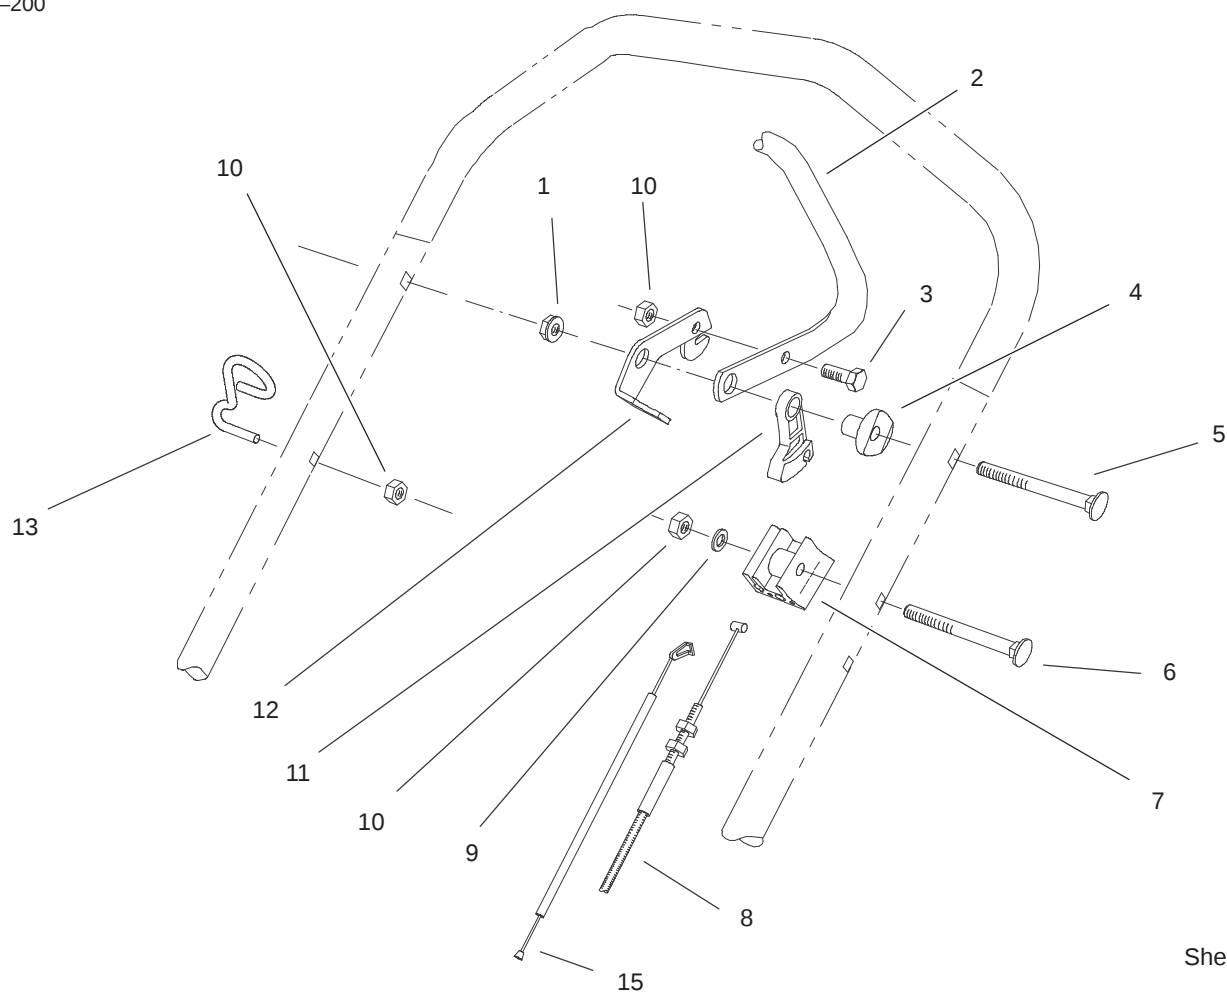 


Sheet No.:8

Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-58	2	Nut-Lock NI
2	52-7430-03	1	Bar-Control
3	321-3	1	Screw-HH
4	66-0330	2	Spacer-Support
5	17-9426	2	Screw-Handle
6	46-6432	1	Screw-Handle
7	71-0960	1	Support-Cable
8	93-6634	1	Cable-Traction
9	3256-22	1	Washer-Flat
10	3296-42	3	Nut-Lock, NI
11	46-5520	1	Lever-Traction
12	66-5350	1	Lever-Control
13	95-4478	1	Guide-Rope
15	93-6628	1	Cable-Brake

Ref. No.	Part No.	Qty.	Description

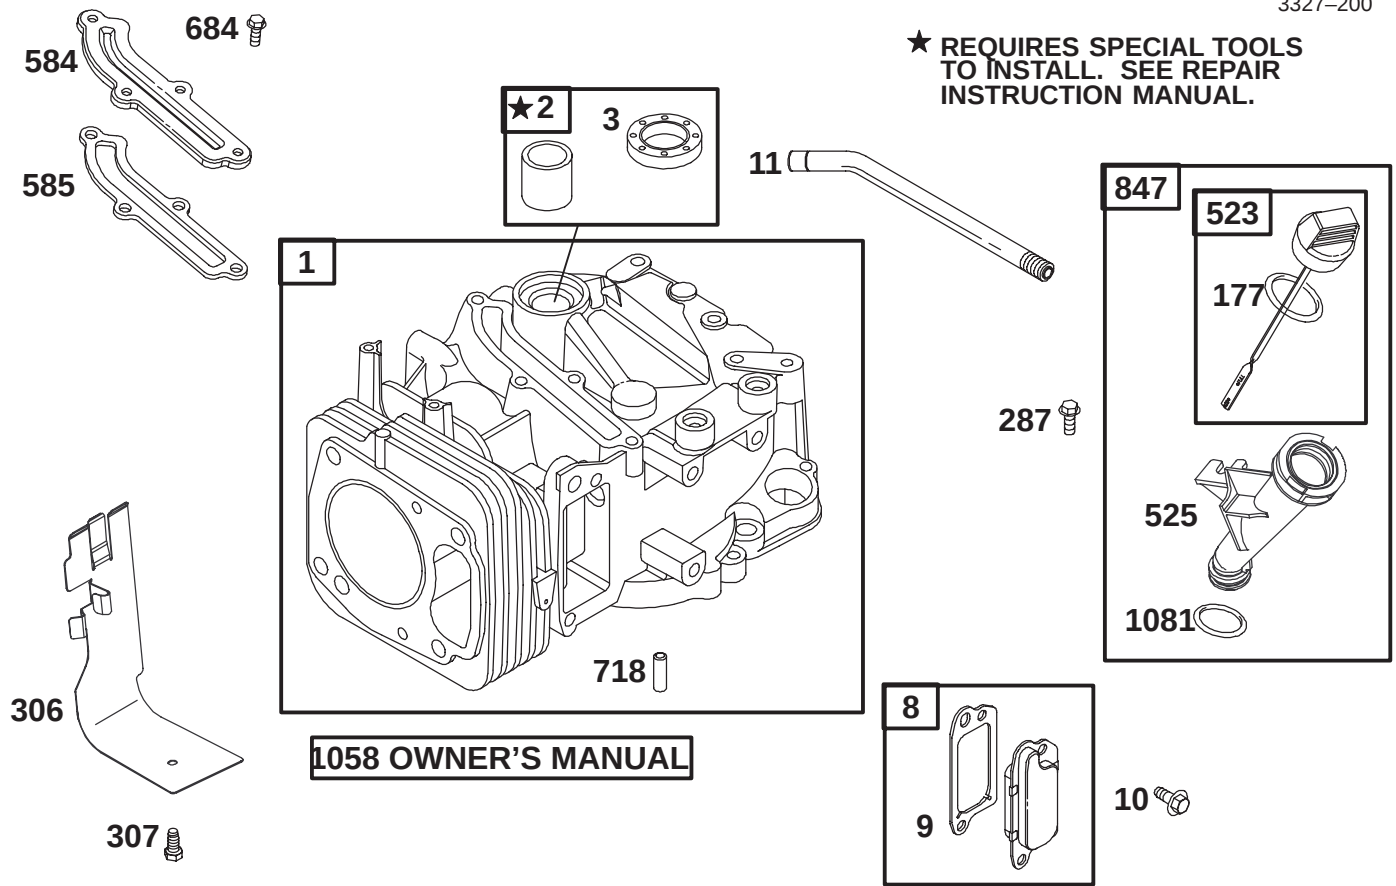 


Assemblies include all parts shown in frames.

Cylinder Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-0900	1	Cylinder Assembly		105-8616	1	---Not Illustrated--- Block-Short, ZS (Incl. Ref. # 1-3, 684, 584, 585, 9, 718. Page 23: 51, 122, 883, 1022, 7, 45, 933. Page 24: 4, 20, 15, 12, 25-29, 16, 146, 741, 32, 46, 43, 22. Page 26: 404, 615, 616.
2	99-0911	1	Bushing/Seal Kit				
★3	99-0912	1	Oil Seal				
8	77-9260	1	Breather Assembly				
★△9	99-0913	1	Breather Gasket				
10	99-0914	1	Screw (Breather Assembly)				
11	99-0915	1	Breather Tube				
★177	99-0916	1	O Ring Seal(Dipstick)				
287	99-0927	1	Screw (Oil Fill Tube)				
306	99-0919	1	Shield-Cylinder				
307	99-0920	1	Screw(Cylinder Shield)				
523	77-7260	1	Dipstick				
525	99-0906	1	Dipstick Tube				
584	99-0922	1	Breather Passage Cover				
★585	99-0923	1	Breather Passage Gasket				
684	99-0920	1	Screw (Breather Passage)				
718	99-0928	1	Pin-Locating				
847	99-9209	1	Dipstick/Tube Assembly				
1058		1	Owner's Manual				
★1081	99-0916	1	O-Ring Seal(Dipstick Tube)				

★ Included in Gasket Set-See Ref. 358.

 △ Included in Valve Overhaul Gasket Set-See Ref. 1003.

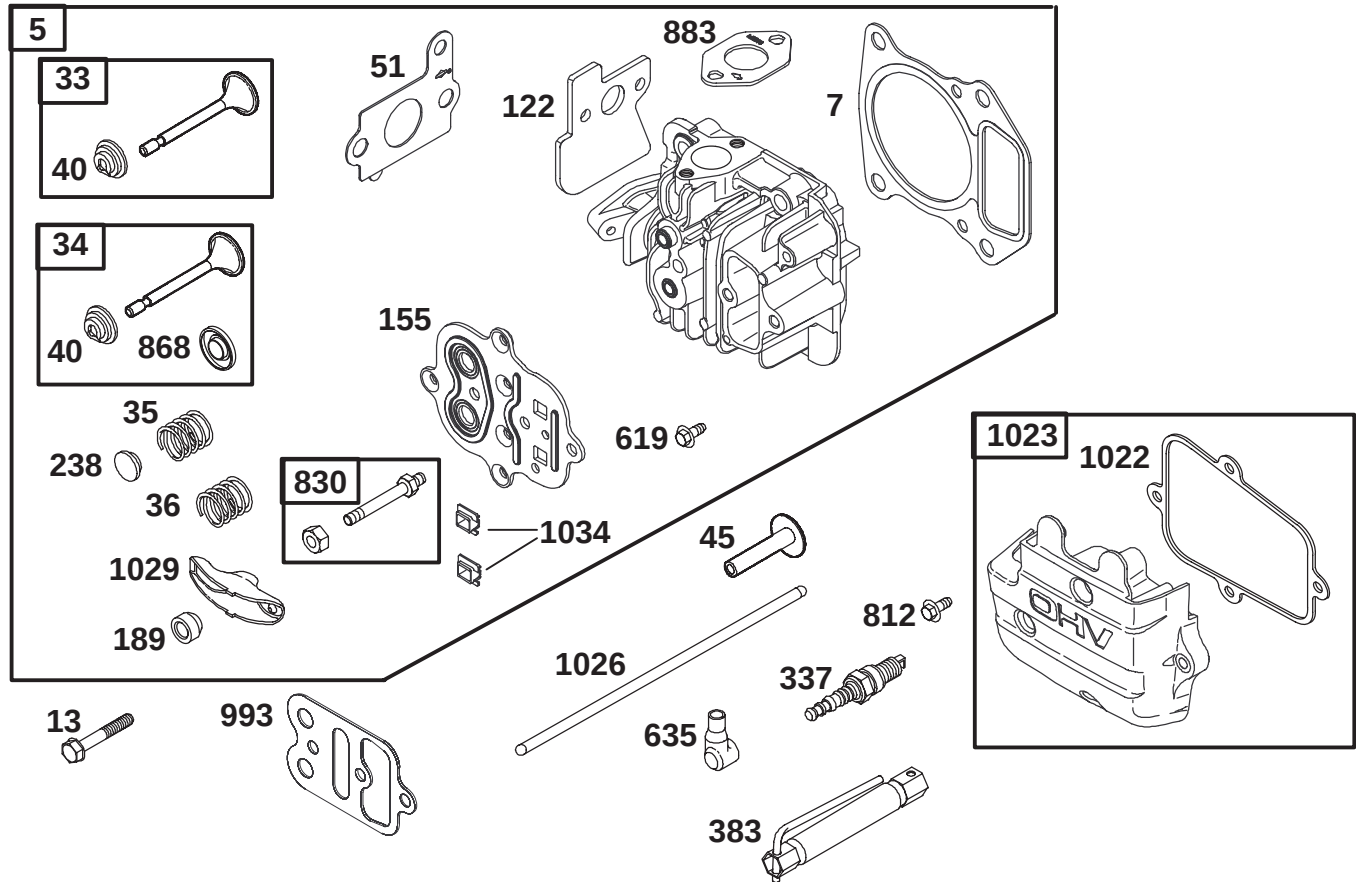

Assemblies include all parts shown in frames.

Cylinder Head Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
5	99-0929	1	Cylinder Head	1029	99-0950	1	Rocker Arm
★△7	99-0930	1	Cylinder Head Gasket	1034	99-0951	1	Push Rod Guide
13	99-0931	1	Screw(Cylinder Head)	337	77-7330	1	Plug-Spark
33	99-0932	1	Exhaust Valve				
34	99-0933	1	Intake Valve				
35	99-0934	1	Valve Spring (Intake)				
36	99-0934	1	Valve Spring (Exhaust)				
40	99-0935	1	Valve Retainer				
45	99-0936	1	Valve Tappet				
51	99-0968	1	Intake Gasket				
★◆△122	99-0978	1	Carburetor Spacer				
155	99-0938	1	Cylinder Head Plate				
189	99-0939	1	Rocker Arm Ball				
238	99-0940	1	Valve Cap				
383	99-0944	1	Spark Plug Wrench				
619	99-0941	1	Screw (Cylinder Head Plate)				
635	77-9190	1	Spark Plug Boot				
812	99-0942	1	Screw (Rocker Cover)				
830	99-0945	1	Stud(Rocker Arm)				
★△868	99-0946	1	Seal-Valve				
★△883	99-0947	1	Exhaust Gasket				
★△993	99-6264	1	Plate Gasket				
★△1022	98-9211	1	Rocker Cover Gasket				
1023	98-9211	1	Rocker Cover				
1026	99-0949	1	Push Rod				

★ Included in Gasket Set-See Ref. 358.

◆ Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

 △ Included in Valve Overhaul Gasket Set-See Ref. 1003.

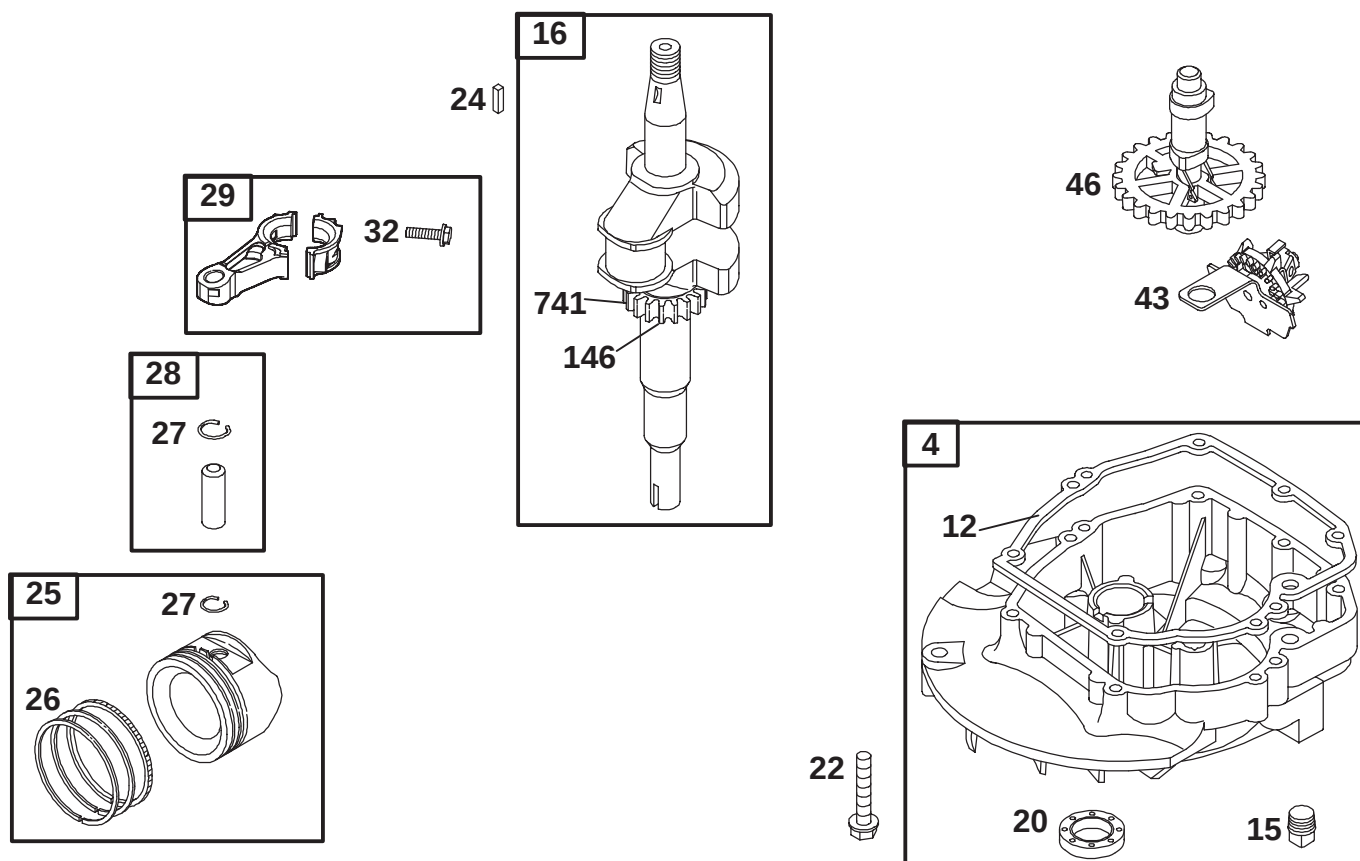


Assemblies include all parts shown in frames.

Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	99-0952	1	Engine Sump	28	99-0961	1	Piston Pin
★12	99-0953	1	Crankcase Gasket	29	99-0962	1	Connecting Rod
15	99-0954	1	Oil Drain Plug	32	99-0963	1	Screw(Connecting Rod)
16	100-8796	1	Crankshaft	43	99-0964	1	Governor/Oil Slinger
★20	99-0955	1	Oil Seal	46	99-0965	1	Camshaft
22	99-0956	1	Screw (Engine Sump)	146	99-0966	1	Timing Key
			----- Note -----	741	99-0967	1	Gear-Timing
	99-1040	1	Screw (Engine Sump)				
			(Used in Hole Nearest Breather)				
24	99-0957	1	Flywheel Key				
25	99-0958	1	Piston Assembly (Standard)				
			----- Note -----				
	100-5030	1	Piston Assembly (.010 O/S)				
	100-5029	1	Piston Assembly (.020 O/S)				
	100-5028	1	Piston Assembly (.030 O/S)				
26	99-0959	1	Ring Set (Standard)				
			----- Note -----				
	100-5027	1	Ring Set(.010 O/S)				
	100-5026	1	Ring Set(.020 O/S)				
	100-5025	1	Ring Set(.030 O/S)				
27	99-0960	1	Piston Pin Lock				

 ★ Included in Gasket Set-See Ref. 358.

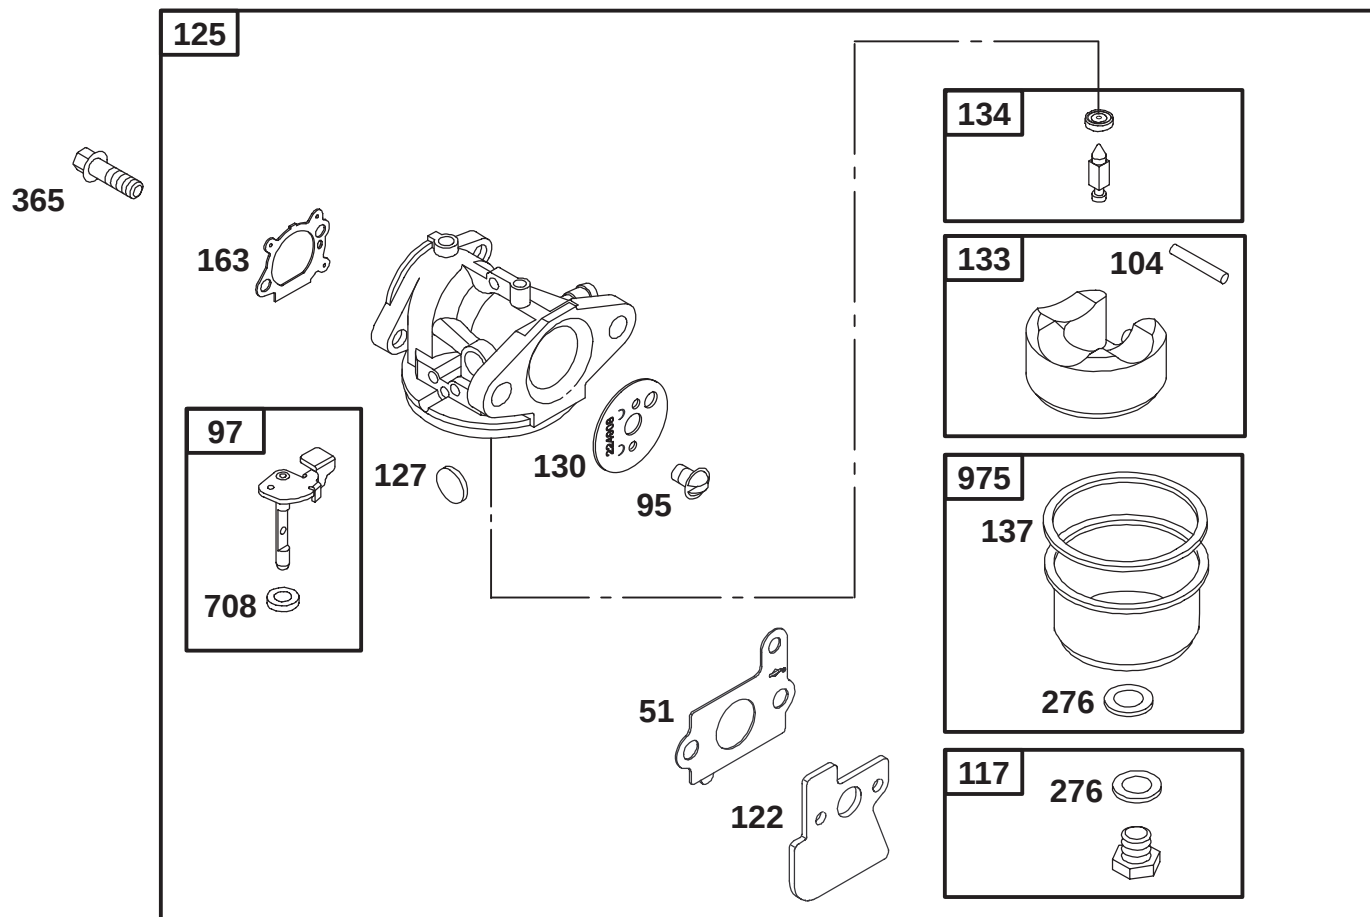

Assemblies include all parts shown in frames.

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
★◆△51	99-0968	1	Intake Gasket
95	99-0969	1	Screw(Throttle Valve)
◆104	99-0970	1	Float Hinge Pin
117	99-0971	1	Main Jet (Standard)
			----- Note -----
	99-1041	1	Main Jet (High Altitude)
★◆△122	99-0978	1	Carburetor Spacer
125	99-0973	1	Carburetor
●127			Welch Plug
		1	(Sold in Kit Only)
130	99-0974	1	Throttle Valve
131	99-0975	1	Throttle Shaft
133	77-8170	1	Carburetor Float
●134	77-8110	1	Needle/Seat Kit
●◆137			Float Bowl Gasket
		1	(Sold in Kit Only)
★◆●163	99-0976	1	Air Cleaner Gasket
●◆276	100-5038	1	Sealing Washer
365	99-0972	1	Screw (Carburetor)
●◆708	100-5037	1	Seal-Dust
975	99-0977	1	Bowl-Float


Ref. No.	Part No.	Qty.	Description

★ Included in Gasket Set—See Ref. 358.

- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

 Δ Included in Valve Overhaul Gasket Set—See Ref. 1003.

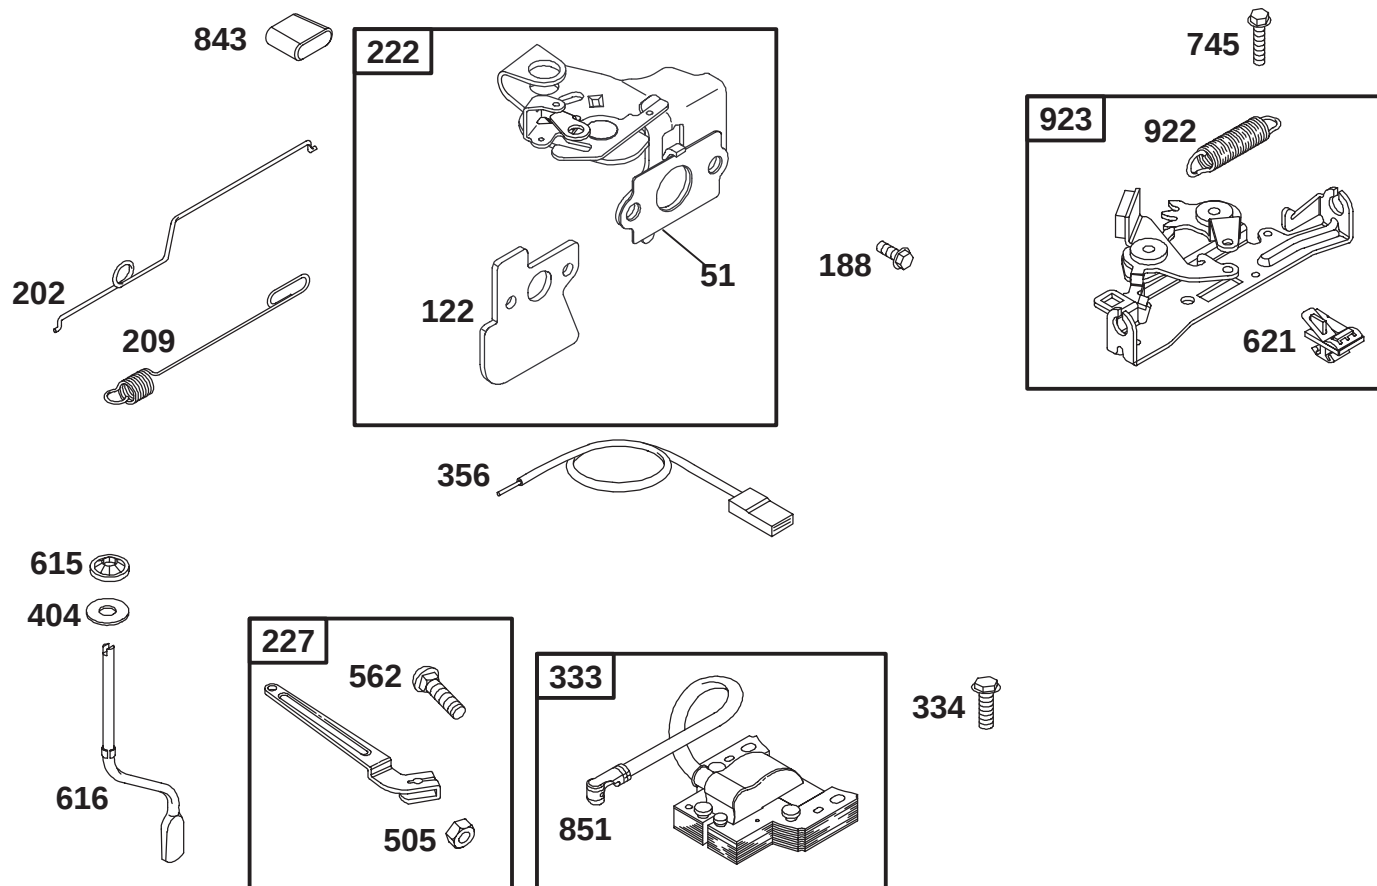

Assemblies include all parts shown in frames.

Governor Assembly





Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
★◆◆△51	99-0968	1	Intake Gasket				
★◆◆△122	99-0978	1	Carburetor Spacer				
188	100-5031	1	Screw (Control Bracket)				
202	99-0981	1	Governor Link				
209	99-0982	1	Governor Spring				
222	100-2891	1	Control Bracket				
227	99-0917	1	Governor Control Lever				
333	99-1005	1	Magneto Armature				
334	99-1006	1	Screw.(Magneto Armature)				
356	99-1007	1	Stop Wire				
404	99-0918	1	Washer(Governor Crank)				
505	99-0924	1	Nut(Governor Control Lever)				
562	99-0921	1	Bolt(Governor Control Lever)				
615	99-0925	1	Governor Shaft Retainer				
616	99-0926	1	Governor Crank				
621	99-0986	1	Stop Switch				
745	99-0983	1	Screw (Brake)				
851	77-9450	1	Spark Plug Terminal				
922	99-0987	1	Brake Spring				
923	99-0988	1	Brake Assembly				

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

    △ Included in Valve Overhaul Gasket Set—See Ref. 1003.

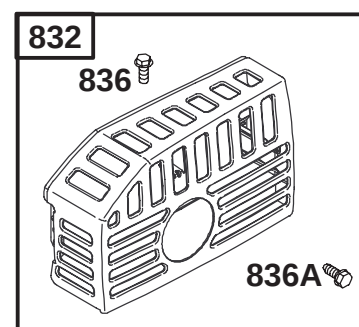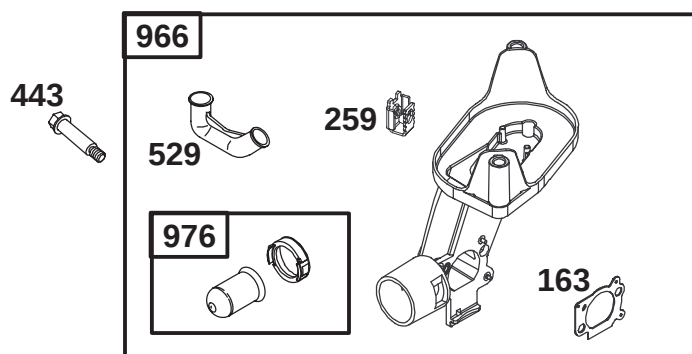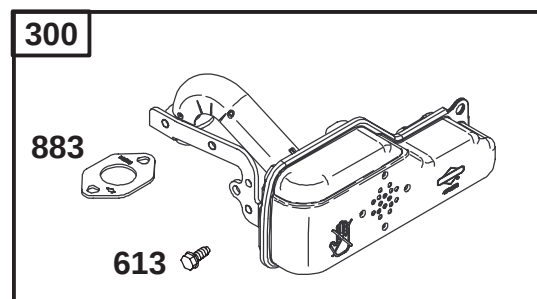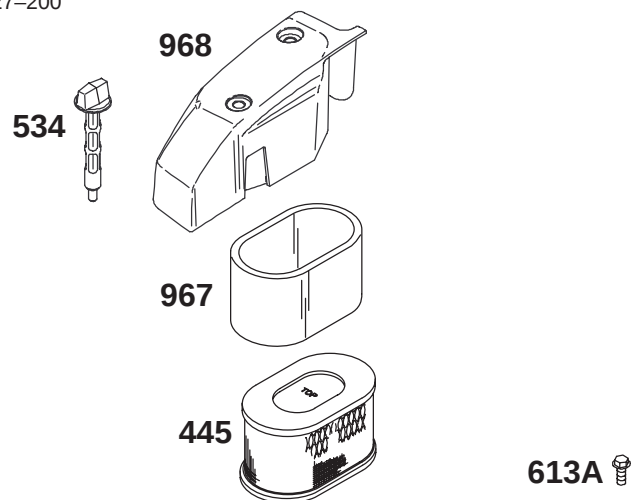

Assemblies include all parts shown in frames.


Air Cleaner Assembly

Ref. No.	Part No.	Qty.	Description
★◆●163	99-0976	1	Air Cleaner Gasket
259	99-0984	1	Casing Clamp Bracket
300	99-0995	1	Muffler-Exhaust
443	99-0990	1	Screw(Air Cleaner Primer Base)
445	98-9212	1	Filter-A/C Cartridge
529	100-5032	1	Grommet
534	98-9208	1	Knob-Air Cleaner
613	99-1047	1	Screw (Exhaust Muffler)
613A	99-0941	1	Screw (ExhaustMuffler)
832	98-9206	1	Guard-Muffler
836	94-1674	1	Screw (Muffler Guard)
836A	99-0999	1	Screw (Muffler Guard)
★△883	99-0947	1	Gasket-Exhaust
966	99-0979	1	Air Cleaner Primer Base
967	99-0989	1	Filter-Pre-Cleaner
968	98-9207	1	Air Cleaner Cover
976	99-0991	1	Primer-Carburetor

Ref. No.	Part No.	Qty.	Description

- ★ Included in Gasket Set—See Ref. 358.
- Included in Carburetor Kit—See Ref. 121.

 ◆ Included in Carburetor Gasket Set—See Ref. 977.
 △ Included in Valve Overhaul Gasket Set—See Ref. 1003.

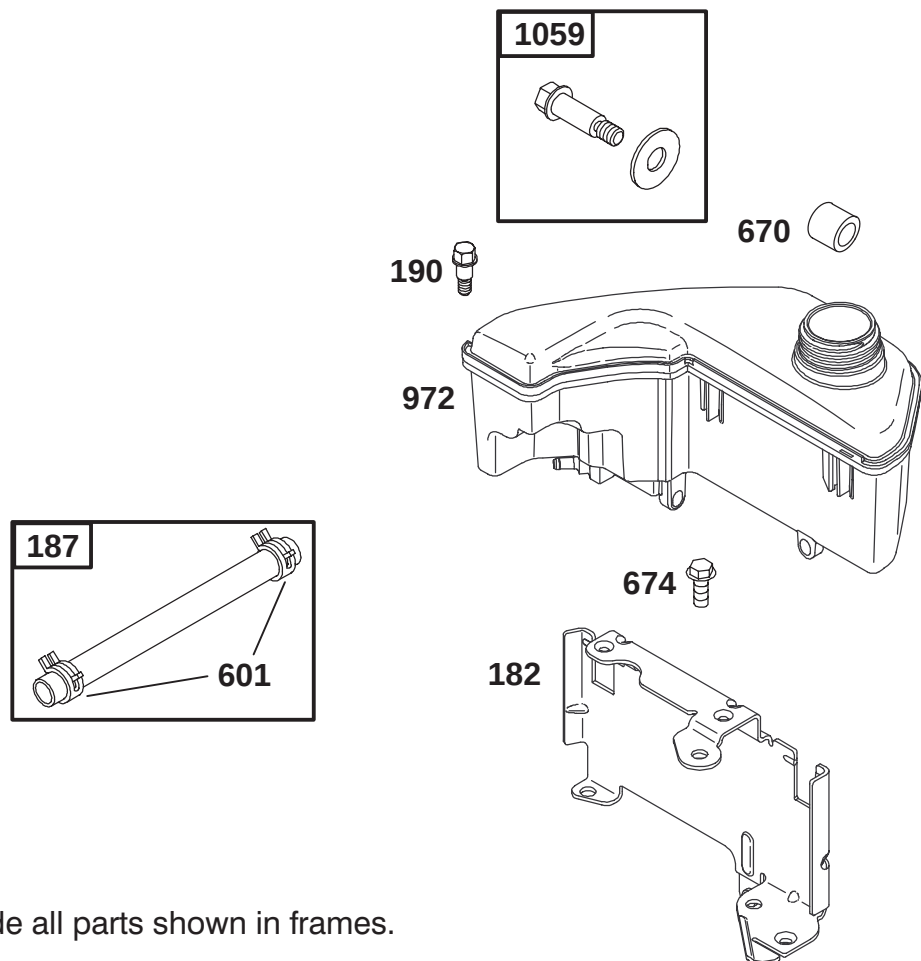


Assemblies include all parts shown in frames.

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
182	98-9205	1	Fuel Tank Bracket
187	99-0992	1	Fuel Line (Cut to Required Length)
190	99-0994	1	Screw (Fuel Tank)
601	78-4690	1	Clamp-Hose
670	99-0997	1	Spacer-Fuel Tank
674	98-9202	1	Screw (Fuel Tank Bracket)
972	99-1000	1	Fuel Tank
1059	99-0993	1	Screw/Washer Kit

Ref. No.	Part No.	Qty.	Description

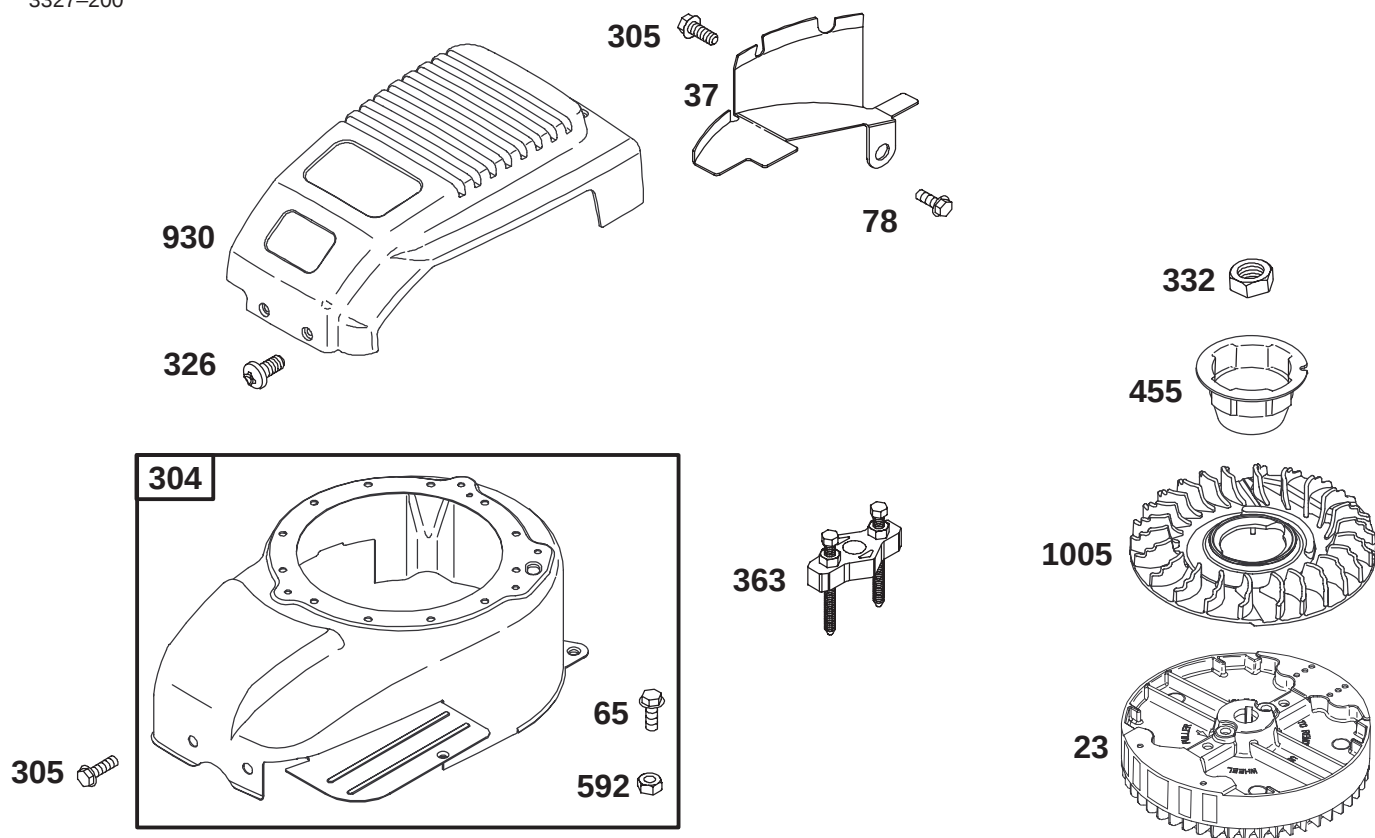 


1036 EMISSIONS LABEL

Assemblies include all parts shown in frames.

Blower Housing and Flywheel Assembly

Ref. No.	Part No.	Qty.	Description
23	99-1001	1	Flywheel
37	99-0950	1	Flywheel Guard
65	99-1002	1	Screw (Rewind Starter)
78	99-0941	1	Screw (Flywheel Guard)
304	99-1003	1	Housing-Blower
305	99-0941	1	Screw (Blower Housing)
326	98-9204	1	Screw (Rewind Guard)
332	94-1673	1	Nut (Flywheel)
363	99-1008	1	Flywheel Puller
455	99-1010	1	Cup-Flywheel
592	99-1009	1	Nut (Rewind Starter)
930	98-9203	1	Rewind Guard
1005	99-1015	1	Fan-Flywheel
1036	99-1016	1	Emissions Label

Ref. No.	Part No.	Qty.	Description




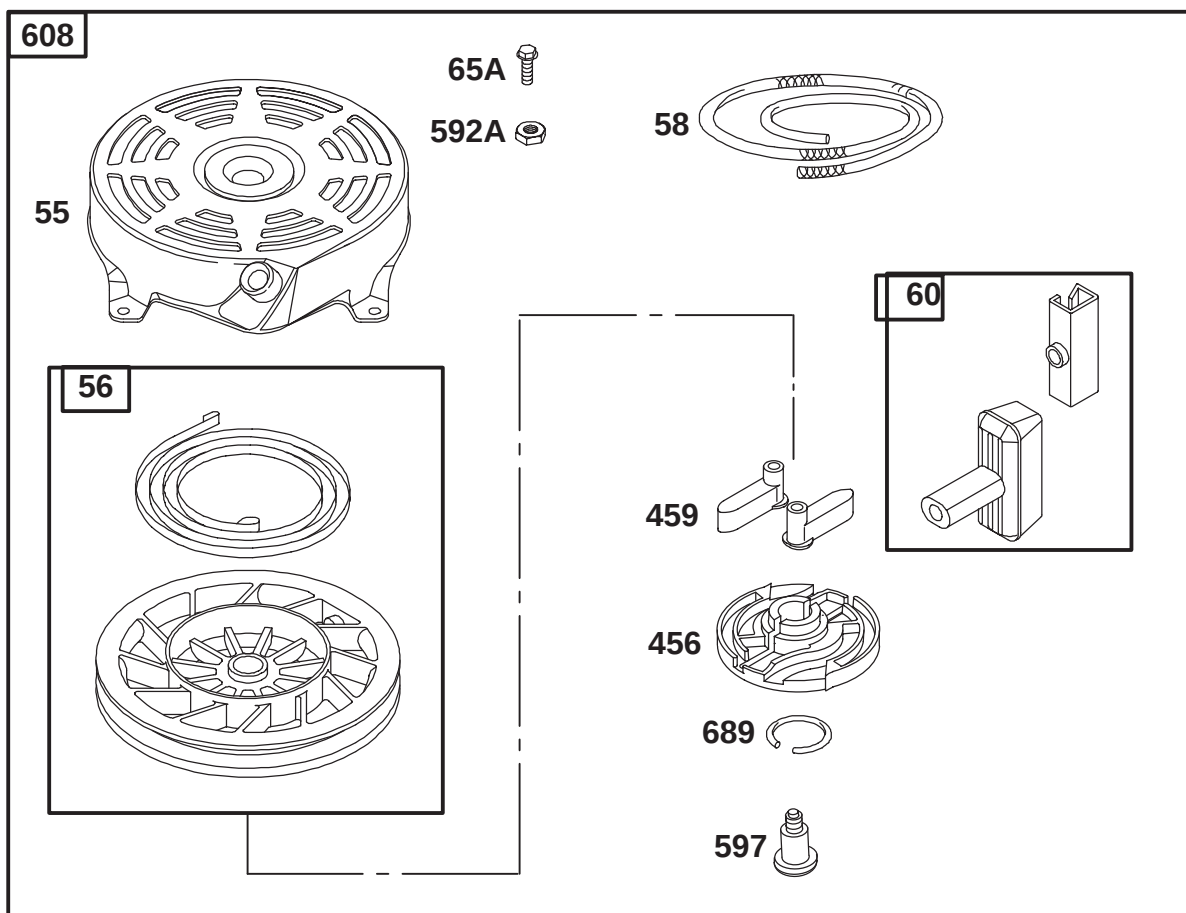 


Assemblies include all parts shown in frames.

Rewind Starter Assembly

Ref. No.	Part No.	Qty.	Description
55	99-1048	1	Rewind Starter Housing
56	94-1657	1	Starter Pulley
58	94-1668	1	Starter Rope
60	77-8510	1	Starter Rope Grip
65A	99-1002	1	Screw (Rewind Starter)
456	94-1659	1	Retainer-Spring
459	94-1654	1	Pawl-Ratchet
592A	99-1009	1	Nut (Rewind Starter)
597	94-1660	1	Screw (Pawl Friction Plate)
608	98-9215	1	Starter-Rewind
689	94-1655	1	Friction Spring

Ref. No.	Part No.	Qty.	Description

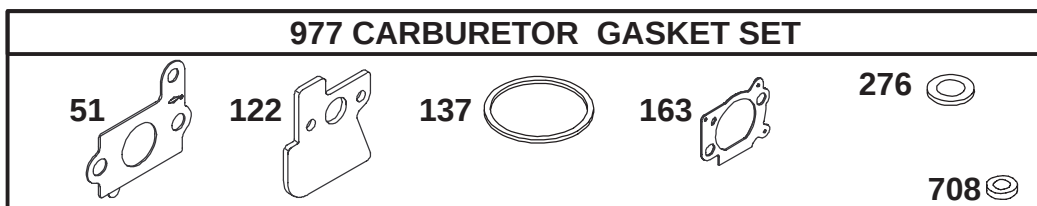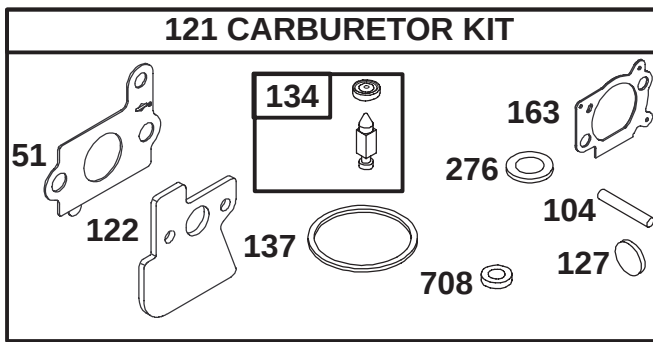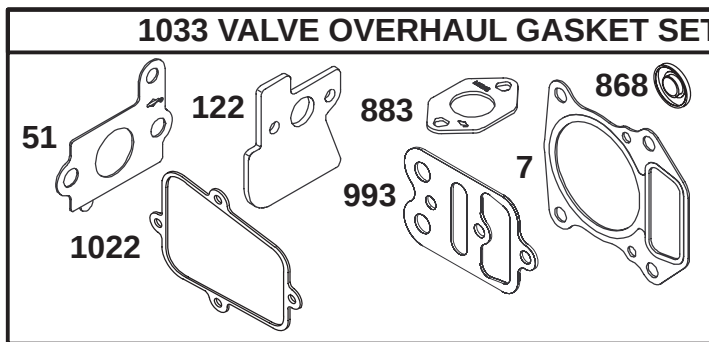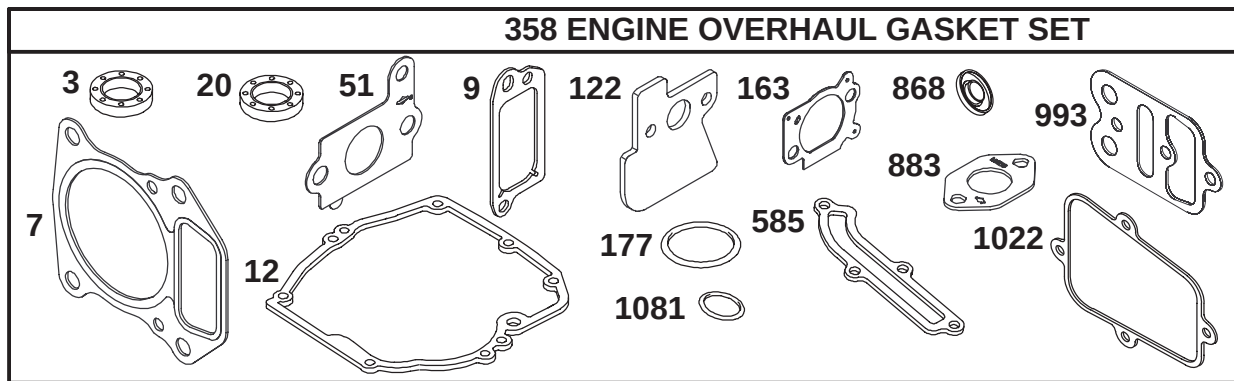    

Gasket Assembly

Ref. No.	Part No.	Qty.	Description
★3	99-0912	1	Oil Seal
★Δ7	99-0930	1	Cylinder Head Gasket
★Δ9	99-0913	1	Breather Gasket
★12	99-0953	1	Crankcase Gasket
★20	99-0955	1	Oil Seal
★◆Δ51	99-0968	1	Intake Gasket
●104	99-0970	1	Float Hinge Pin
121	100-5036	1	Carburetor Kit
★◆Δ122	99-0978	1	Carburetor Spacer
●127		1	Welch Plug
			(Sold in Kit Only)
●134	77-8110	1	Needle/Seat Kit
●◆137		1	Float Bow IGasket
			(Sold in Kit Only)
★◆●163	99-0976	1	Air Cleaner Gasket
★177	99-0916	1	O-Ring Seal (Dipstick)
●◆276	100-5038	1	Sealing Washer
358	100-5035	1	Engine Overhaul Gasket Set
★585	99-0923	1	Breather Passage Gasket
●◆708	100-5037	1	Seal-Dust
★Δ868	99-0946	1	Seal-Valve
★Δ883	99-0947	1	Exhaust Gasket
977	100-5034	1	Gasket Set-Carburetor
★Δ993	99-0948	1	Plate Gasket

Ref. No.	Part No.	Qty.	Description
★Δ1022	99-0907	1	Gasket-Rocker Cover
1033	100-5033	1	Valve Overhaul Gasket Set
★1081	99-0916	1	O-Ring Seal (Dipstick Tube)

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

Δ Included in Valve Overhaul Gasket Set-See Ref. 1003.

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

