



Count on it.

Parts Catalog

Log Splitter

Model No. 23618HD—Serial No. 412400000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Engine and Axle Assembly 4

Frame and Jack Assembly 6

Hydraulic Pump Assembly 8

Attachments and Accessories 10


Engine and Axle Assembly

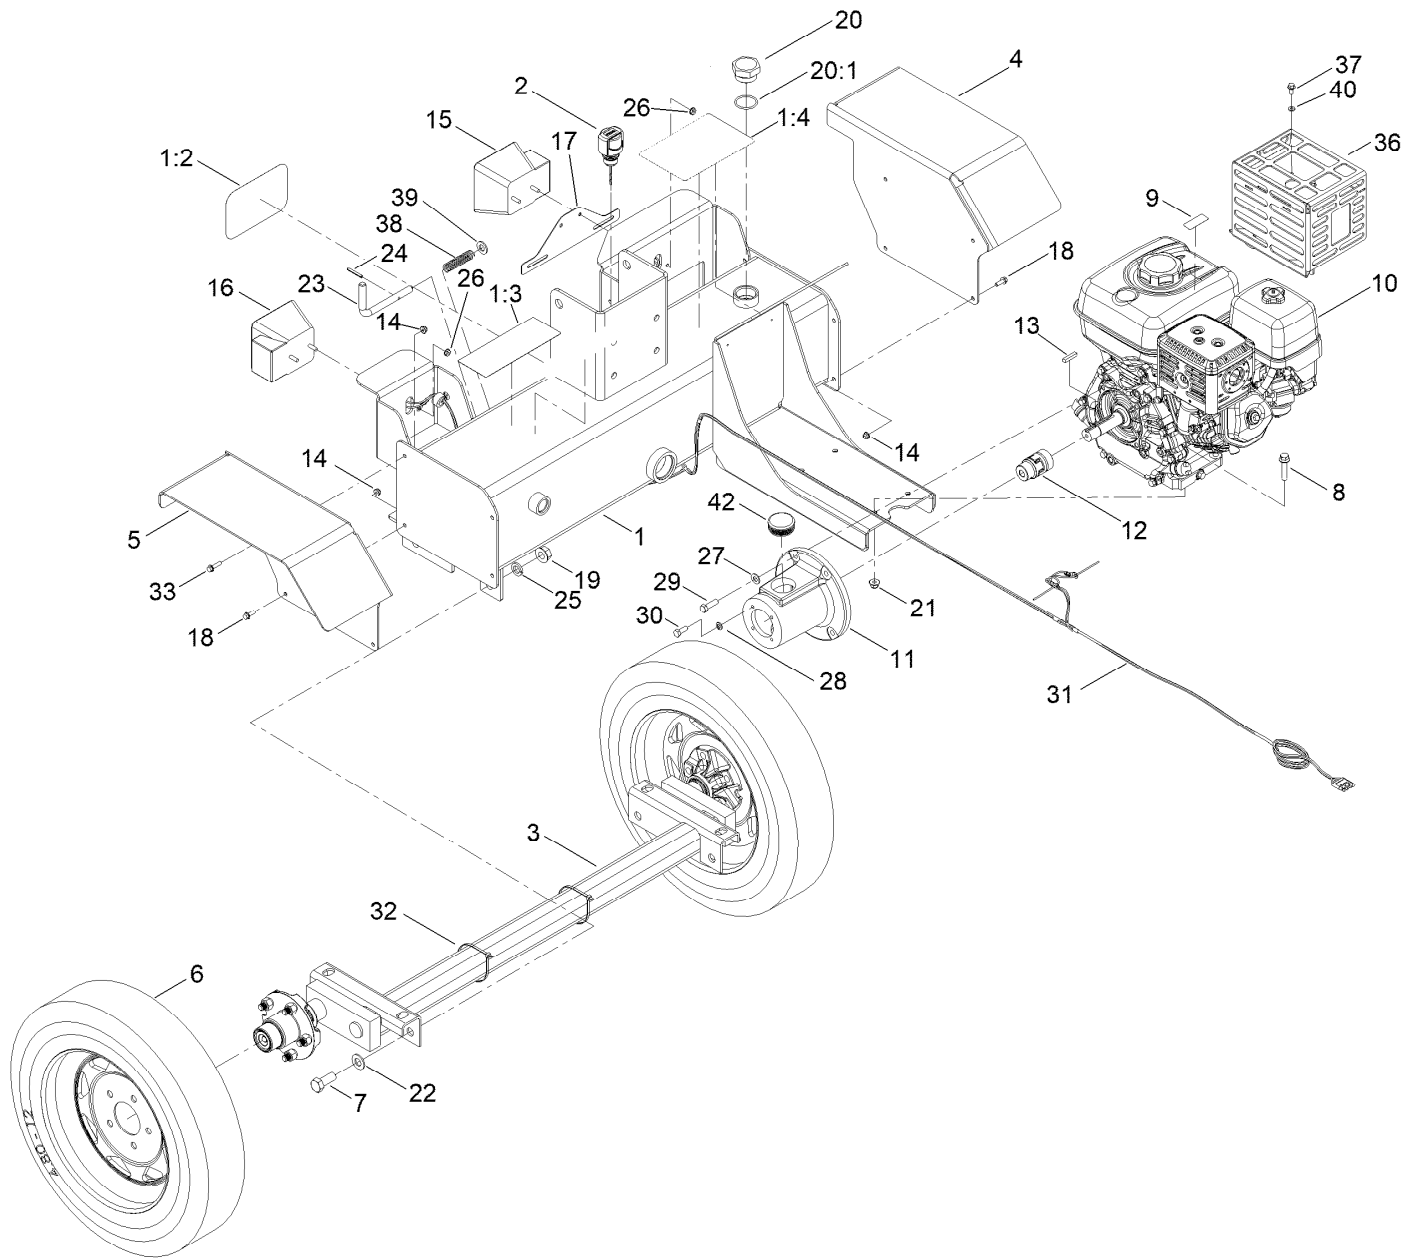

Engine and Axle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0637	1	HYD Tank ASM	20	108-8468	1	Plug-HH
1:2	62-5550	1	Decal	20:1	237-101	1	O-Ring
1:3	137-0551	1	Decal-Warning	21	104-8301	4	Nut-HF, NI
1:4	145-4999	1	Decal-Service , 23618[hd]]	22	119-1868	4	Washer
2	132-9292	1	Breather	23	137-0601	1	Pin-Latch
3	136-4575	1	Axle ASM	24	32121-34	1	Pin-Roll
4	137-0639-03	1	Fender-LH	25	3253-23	4	Washer-Lock
5	137-0638-03	1	Fender-RH	26	32149-2	4	Nut-Keps
6	120-1206	2	Wheel And Tire ASM	27	3256-24	4	Washer-Flat
7	327-4	4	Screw-HH	28	3253-4	4	Washer-Lock
8	3234-19	4	Screw-HHF	29	323-7	4	Screw-HH
9	130-8322	1	Decal-Warning, Ethanol	30	322-4	4	Screw-HH
10	145-3189	1	Engine-Honda, Gx270	31	136-4571	1	Harness-Wire
11	144-7106-03	1	Mount-Pump [black]	32	3290-379	2	Tie-Cable
12	137-0566	1	Coupler-Flex	33	120-4654	2	Screw-HHF
13	13-2840	1	Key-Square	36	137-0595-03	1	Guard-Muffler
14	104-7201	8	Nut-HF, NI	37	33103-016	2	Screw-HHF
15	120-3735	1	Light-Tail, LH	38	95-4256	1	Spring-Compression
16	120-3734	1	Light-Tail, RH	39	106-9888	1	Washer-Flat
17	125-8659-03	1	Holder-Plate, License	40	3256-14	2	Washer-Flat
18	115-5103	6	Screw-HHF	42	137-6827	1	Plug-Plastic
19	32128-50	4	Nut-Flange				


Frame and Jack Assembly

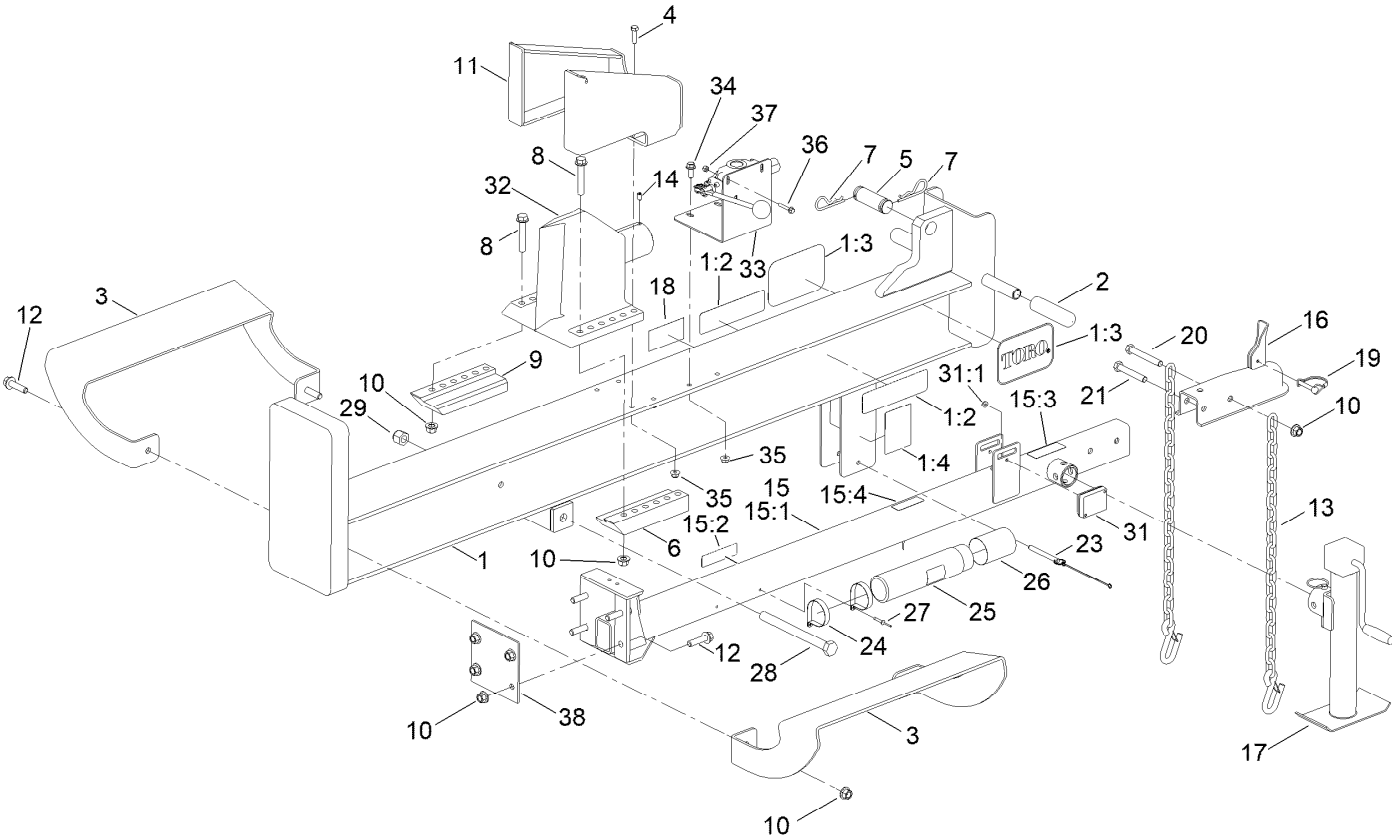

Frame and Jack Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	137-0634	1	Beam ASM	16	145-3188	1	Receiver-Ball Hitch
1:2	137-0552	2	Decal	17	145-3186	1	Jack
1:3	62-5550	2	Decal	18	139-0451	2	Decal-Tool, Thd
1:4	137-0588	1	Decal-Warning, Pin	19	105-9245	1	Pin-Lock
2	120-1333	2	Grip-Handle	20	325-15	1	Screw-HH
3	136-4668-03	2	Plate-Catch	21	325-13	1	Screw-HH
4	323-7	4	Screw-HH	23	136-4588	1	Pin
5	120-1420	1	Pin-Pivot	24	2412-120	2	Clamp-R
6	145-0635-03	1	Bar-Slide, LH	25	104-7050	1	Tube-Manual
7	3290-256	2	Pin-Hair	26	104-7048	1	Cap-Housing
8	3234-40	12	Screw-HF	27	107-0386	3	Rivet-Blind
9	145-0634-03	1	Bar-Slide, RH	28	120-1796	1	Bolt-HH
10	99-5107	20	Nut-Lock	29	3296-51	1	Nut-Lock, NI
11	140-3617	1	Dislodger Bracket ASM	31	127-7562	2	Lamp-Marker, Front Side
12	133-0041	6	Screw-HF	31:1	32149-2	1	Nut-Keps
13	119-3045	2	Chain-Safety, Trailer	32	136-4674-03	1	Wedge [black]
14	3247-4	1	Screw-Set	33	137-0571-03	1	Bracket-Valve
15	147-3205	1	Decal ASM-Tube	34	3234-42	2	Screw-HHF
15:1	145-4996-01	1	Tongue ASM [red]	35	104-8301	6	Nut-HF, NI
15:2	133-8062	1	Decal-Arrestor, Spark	36	94-5781	3	Screw-HHF
15:3	137-0554	1	Decal-Caution	37	3296-42	3	Nut-Lock, NI
15:4	120-0625	1	Decal-Warning	38	144-2034-01	1	Plate - Backing

Hydraulic Pump Assembly

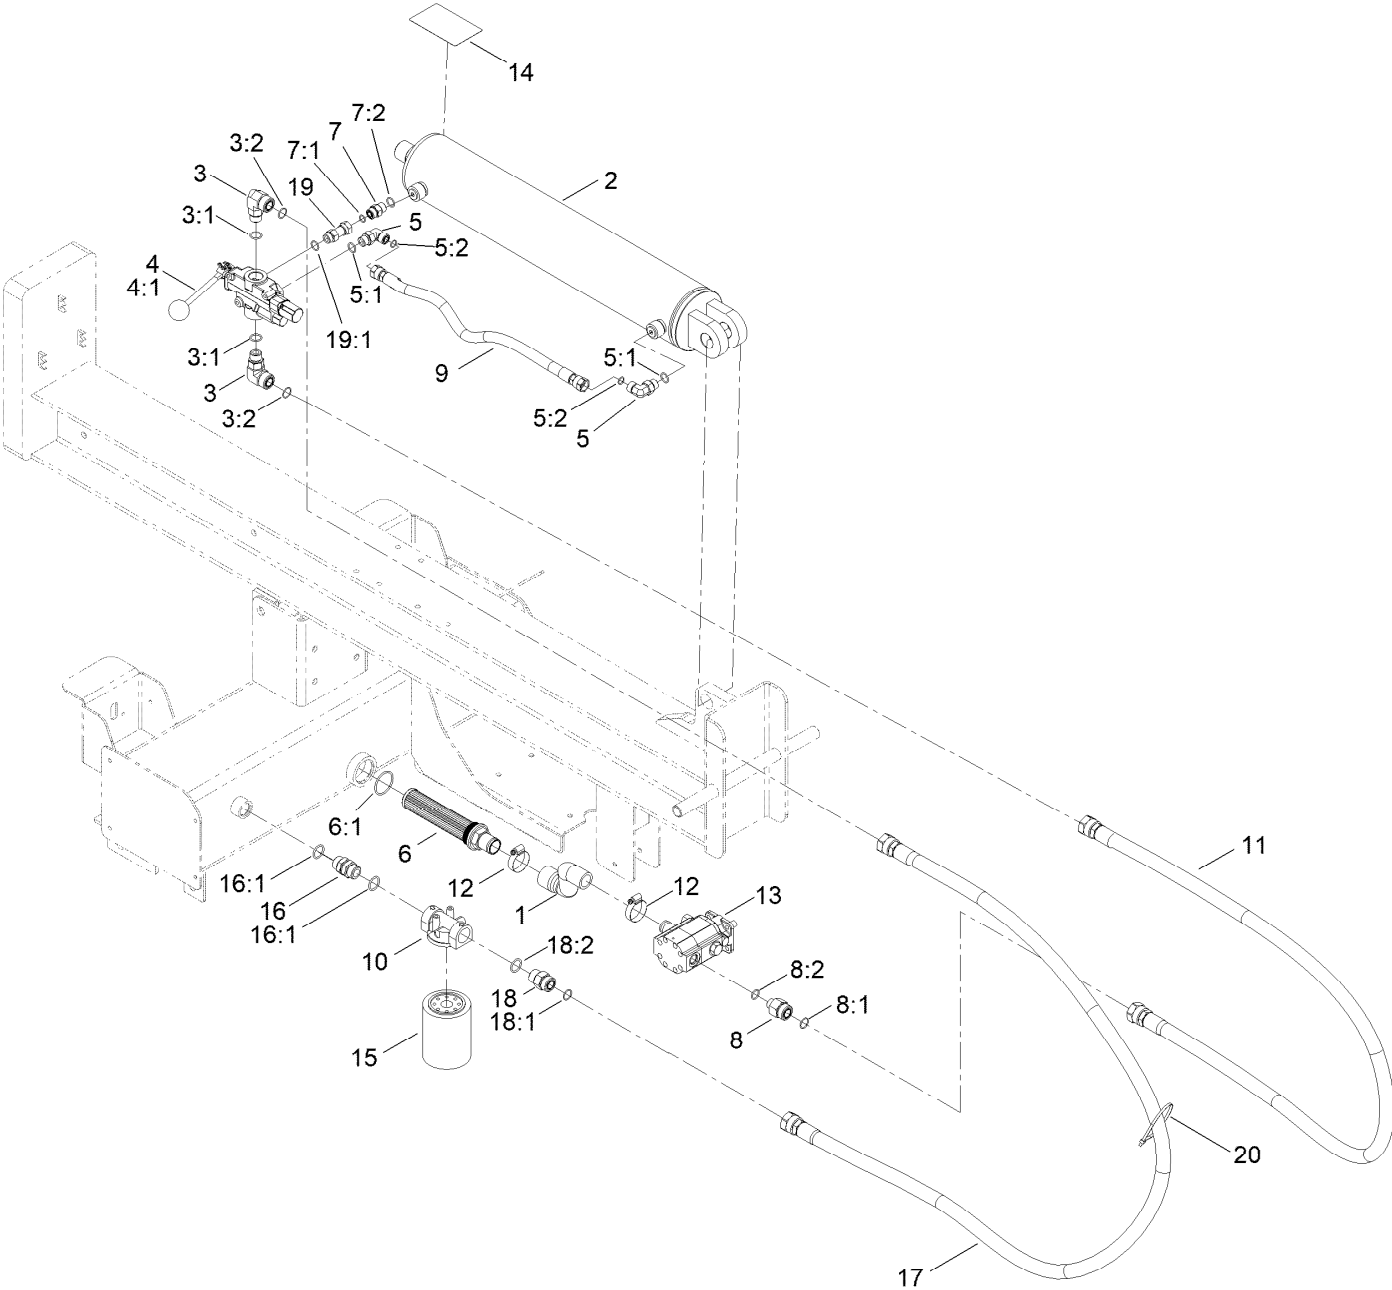

Hydraulic Pump Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4675	1	Hose-Molded	8:2	237-79	1	O-Ring
2	136-4562	1	Cylinder- HYD	9	144-7460	1	Hose ASM-HYD
3	340-16	2	Fitting-HYD, 90 DEG	10	92-5821	1	Head-Filter
3:1	237-80	1	O-Ring	11	144-7461	1	Hose ASM-HYD
3:2	237-58	1	O-Ring	12	2412-111	2	Clamp-Hose, W/Liner
4	136-4583	1	Valve-Control	13	136-4569	1	Pump-HYD
4:1	144-2041	1	Kit-Handle, Valve	14	137-0587	1	Decal- Caution, Control
5	340-98	2	Fitting-Elbow, 90 DEG	15	54-0110	1	Filter-Oil, Transmission
5:1	237-79	1	O-Ring	16	98-9906	1	Fitting-Thread, Straight
5:2	237-30	1	O-Ring	16:1	237-81	2	O-Ring
6	145-2463	1	Strainer-Tank, Hydraulic	17	144-7462	1	Hose ASM-HYD
6:1	340-136	1	O-Ring	18	340-9	1	Fitting-STR
7	340-4	1	Fitting-Straight	18:1	237-58	1	O-Ring
7:1	237-30	1	O-Ring	18:2	237-81	1	O-Ring
7:2	237-79	1	O-Ring	19	100-7671	1	Adapter-HYD
8	98-9921	1	Fitting-Straight	19:1	237-79	1	O-Ring
8:1	237-145	1	O-Ring	20	3290-379	3	Tie-Cable

Attachments and Accessories

For 23618HD Log Splitter

Product Name	Model/Part
Spark Arrester Kit	137-0592
Pump Service Kit	137-4850
Cylinder Service Kit	137-4852

Notes:



Count on it.