



Groomer Kit

Greensmaster® Flex 21

Model No. 04201

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Groomer Assembly	3	Left Hand Adjuster Arm Assembly	6
Right Hand Side Plate Assembly	4	Right Hand Adjuster Arm Assembly	7
Left Hand Side Plate Assembly	5		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

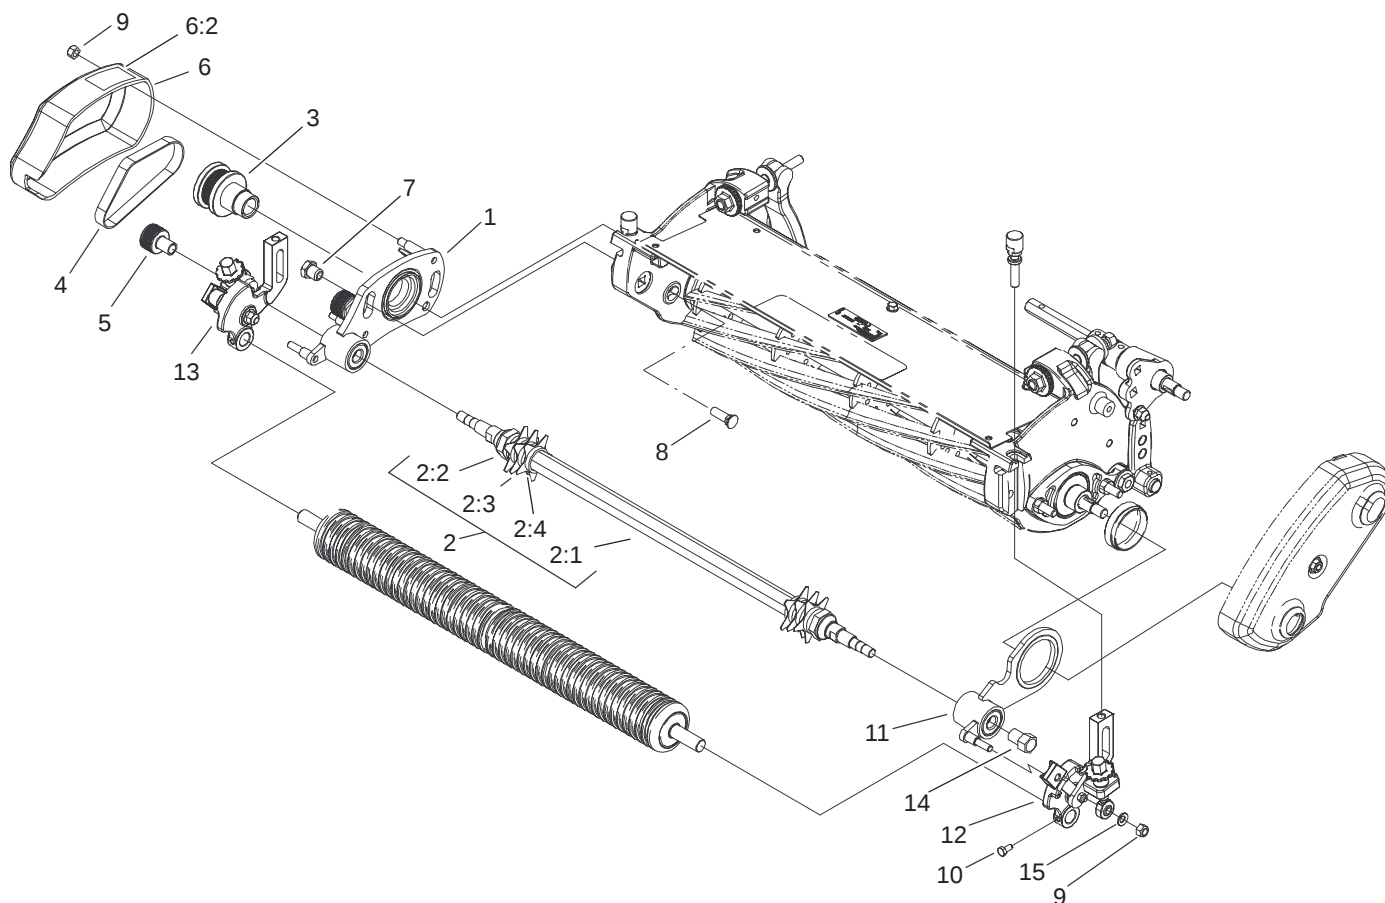


Sheet No.:2

Groomer Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	RH Side Plate ASM
2	104-4707	1	Groomer Shaft ASM
2:1	104-4785	1	Groomer Shaft ASM
2:2	3296-60	2	Nut-Lock, NI
2:3	95-5719	41	Blade-Groomer
2:4	70-1350	84	Spacer
3	104-4702	1	Pulley-Driver
4	104-4705	1	Belt-Groomer
5	104-4703	1	Pulley-Driven
6	104-4795	1	Cover ASM
6:2	93-9356	1	Decal-Warning, Belt
7	104-4726	2	Nut-Taper
8	901635	2	Bolt-Plow
9	33024-00	4	Nut-Lock
10	33113-012	2	Screw-HH
☆11		1	LH Side Plate ASM
☆12		1	LH Adjuster Arm ASM
☆13		1	RH Adjuster Arm ASM
14	104-4730	1	Nut-Seal
15	3290-475	2	Washer-Belleville

☆ Not serviced separately

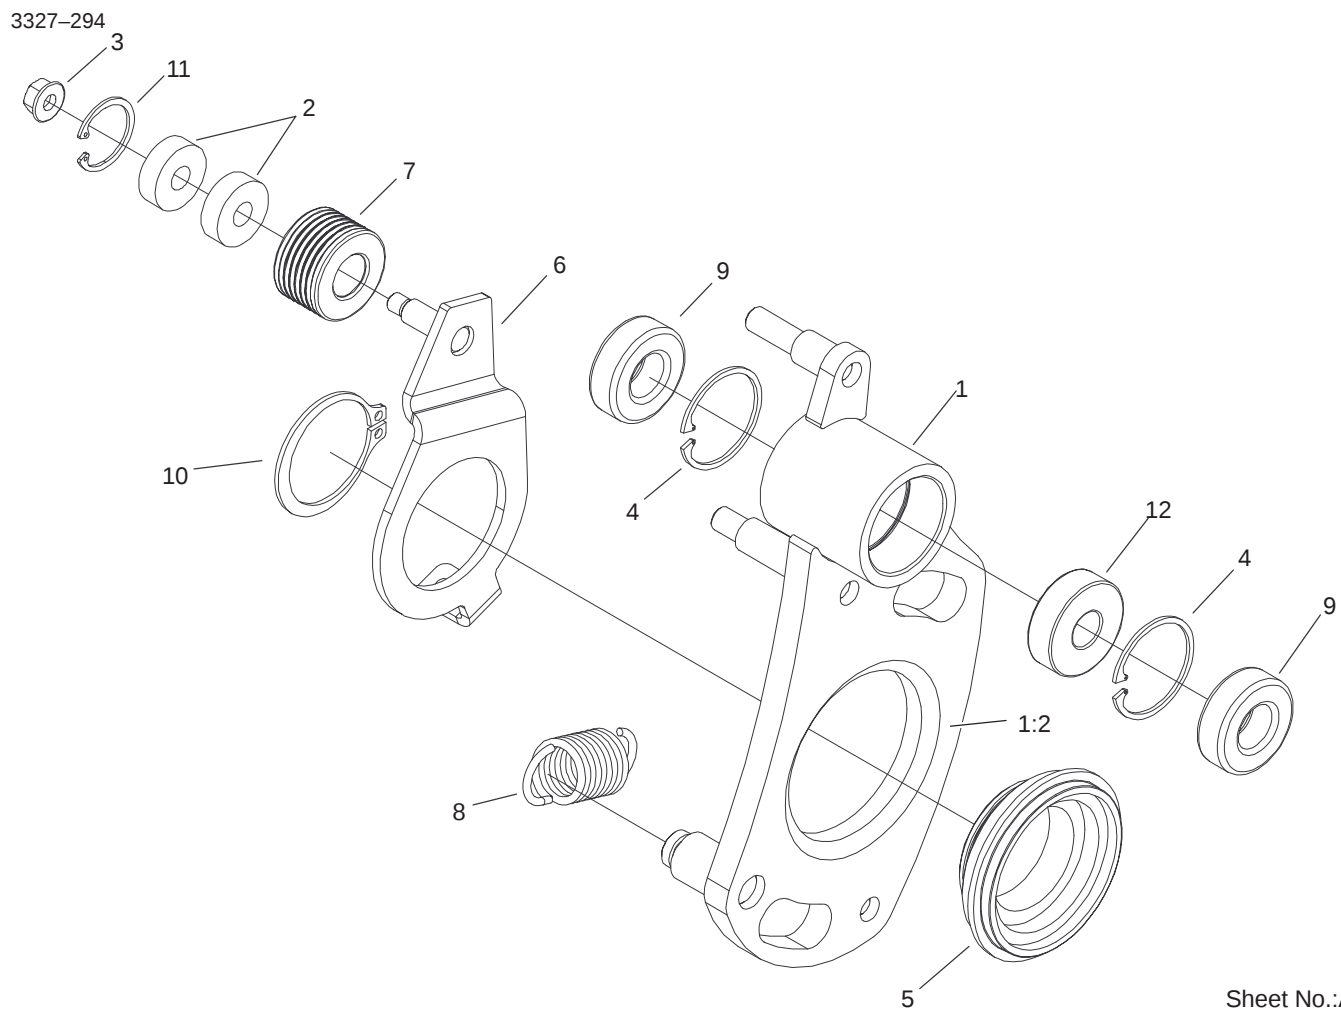


Sheet No.:A1

Right Hand Side Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	104-4741	1	RH Support ASM
1:2	104-4729	1	Bushing
2	251-259	2	Bearing
3	33003-00	1	Nut-HF
4	32151-51	2	Ring-Retaining
5	104-4724	1	Hub-Pivot
6	104-4721	1	Idler ASM
7	104-4704	1	Pulley-Idler
8	66-4460	1	Spring-Lever, Shift
9	104-4739	2	Seal-Special
10	32151-95	1	Ring-Retaining
11	104-4727	1	Ring-Retaining
12	49-2410	1	Bearing-Ball

Ref. No.	Part No.	Qty.	Description

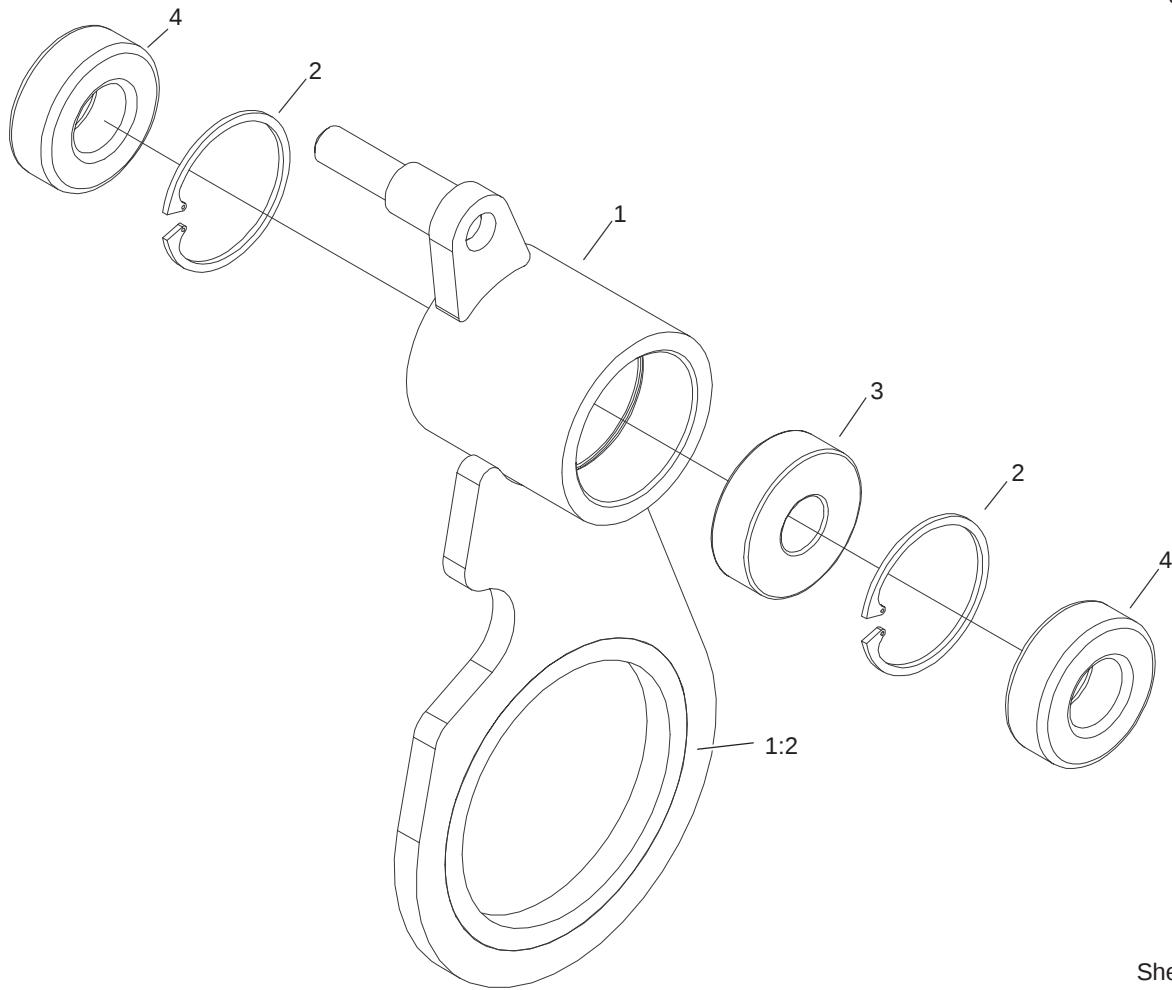


Sheet No.:A2

Left Hand Side Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	104-4740	1	LH Support ASM
1:2	104-4729	1	Bushing
2	32151-51	2	Ring-Retaining
3	49-2410	1	Bearing-Ball
4	104-4739	2	Seal-Special

Ref. No.	Part No.	Qty.	Description

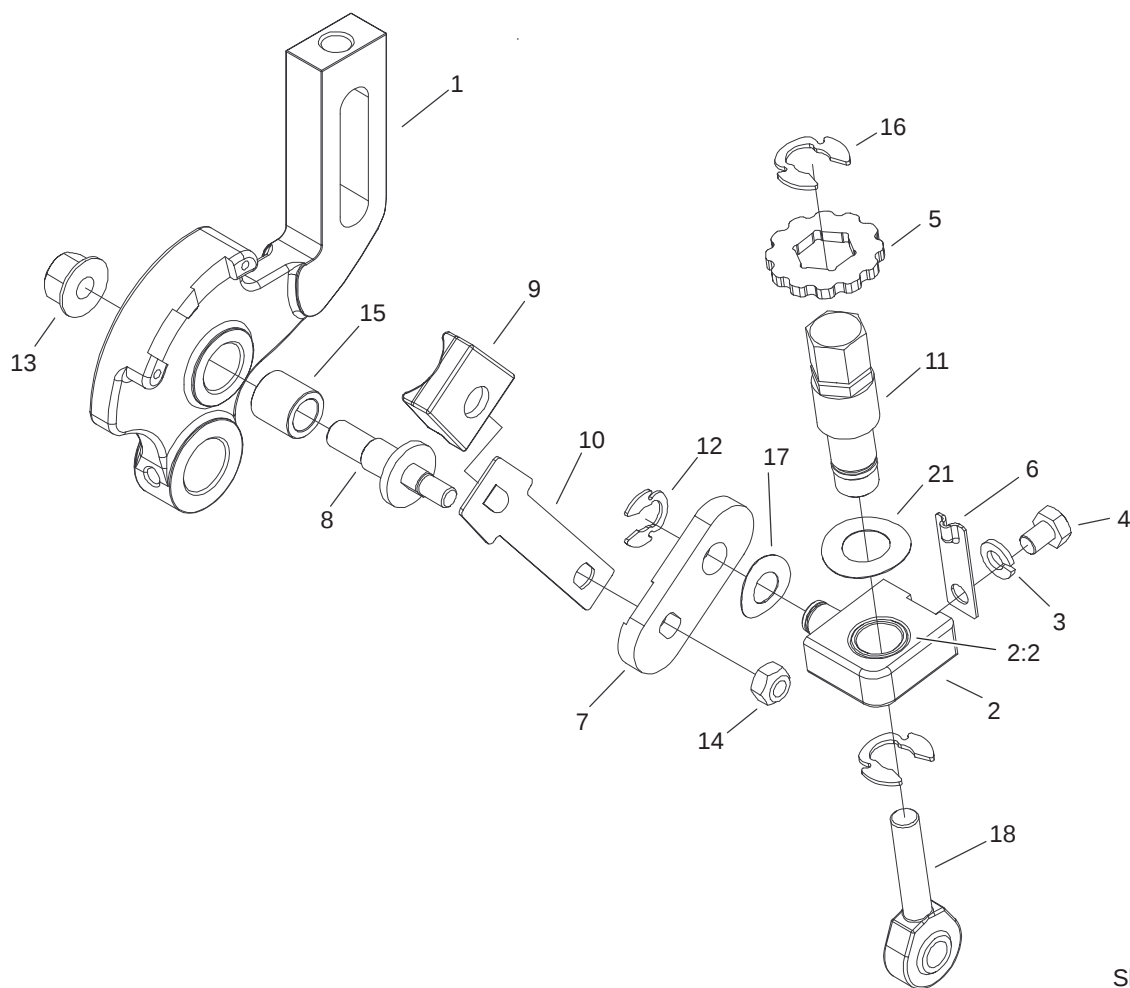


Sheet No.:A3

Left Hand Adjuster Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	104-4782	1	Arm-HOC, LH
2	104-4758	1	Block ASM
2:2	256-1	1	Bushing
3	43-5930	1	Washer-Spring
4	33113-008	1	Screw-HH
5	104-4755	1	Plate-Engage
6	104-4754	1	Spring-Detent
7	104-4765	1	Cam-Lift
8	104-4767	1	Pivot-Lift
9	25-7740	1	Knob-Arm
10	104-4769	1	Arm-Lift
11	104-4752	1	Shaft-Adjust, Fine
12	32151-47	1	Ring-Retaining
13	104-2612	1	Nut-HF
14	33023-00	1	Nut-Lock
15	104-4768	1	Spacer-Lift
16	32151-68	2	Ring-Retaining
17	3290-301	1	Washer-Spring
18	2411-52	1	Bearing-Rod End, RH
21	104-4777	1	Washer-Spring, Curved

Ref. No.	Part No.	Qty.	Description

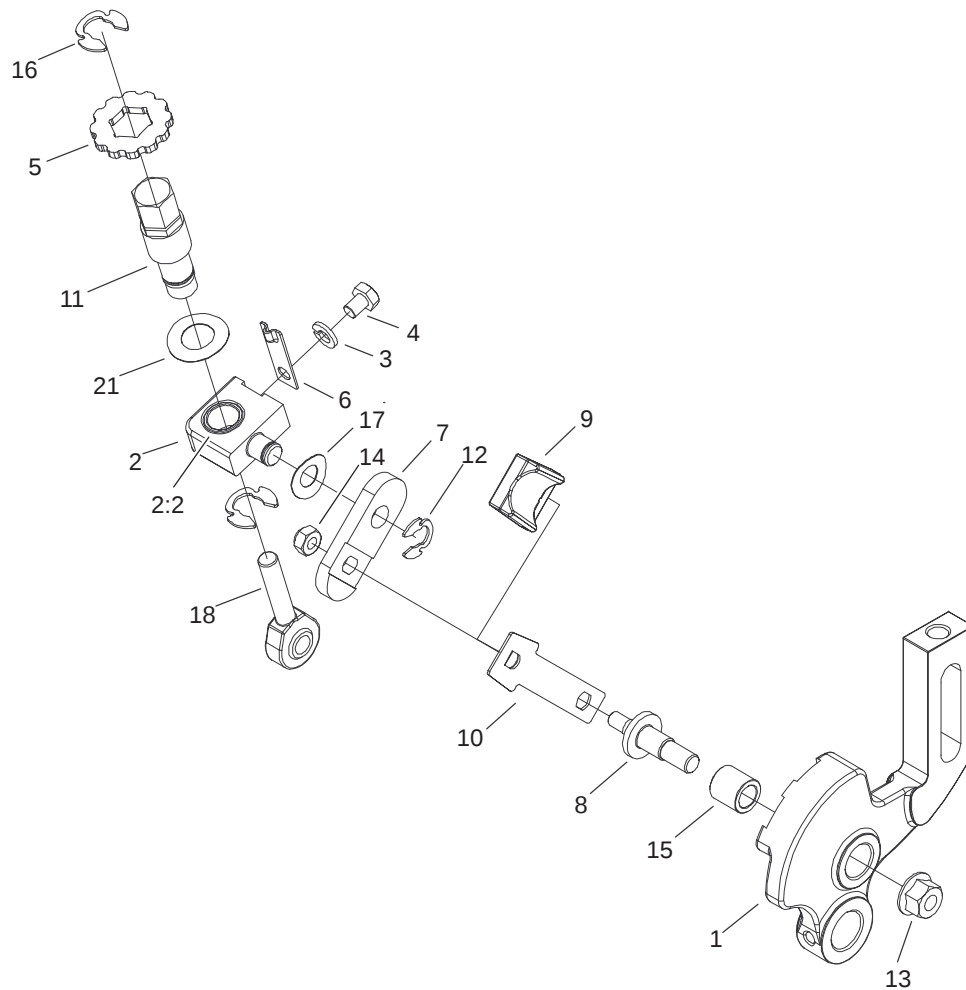

Sheet No.:A4

Right Hand Adjuster Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	104-4781	1	Arm-HOC, RH
2	104-4758	1	Block ASM
2:2	256-1	1	Bushing
3	43-5930	1	Washer-Spring
4	33113-008	1	Screw-HH
5	104-4755	1	Plate-Engage
6	104-4754	1	Spring-Detent
7	104-4765	1	Cam-Lift
8	104-4767	1	Pivot-Lift
9	25-7740	1	Knob-Arm
10	104-4769	1	Arm-Lift
11	104-4752	1	Shaft-Adjust, Fine
12	32151-47	1	Ring-Retaining
13	104-2612	1	Nut-HF
14	33023-00	1	Nut-Lock
15	104-4768	1	Spacer-Lift
16	32151-68	2	Ring-Retaining
17	3290-301	1	Washer-Spring
18	2411-52	1	Bearing-Rod End, RH
21	104-4777	1	Washer-Spring, Curved

