
TORO

MODEL NO. 18060 - 9000001 & UP

PARTS CATALOG


21" S. P. MULCHER DELUXE

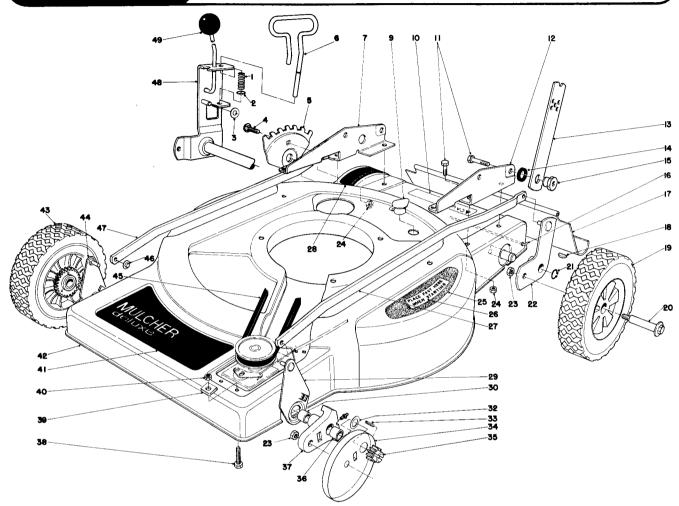

HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-2340	Spring - Compression	1
2	32120-18	Ring — Retaining	1
3	3256-22	Washer	1
4	37-7190	Carriage Bolt	1
5	36-0010	Plate – Adjustment	1
6	38-2350	Stop Rod	1
7	38-2260	Handle Bracket R.H.	1
9	6-4500	Washout Port	1
10	36-6590	Decal — Caution	1
11	322-2	Capscrew	8
12	38-2250	Handle Bracket L.H.	1
13	27-7080	Handle Latch	2
14	3-3287	Rubber Spacer	2
15	27-6520	Pivot Nut	2
16	33-3204	Rod Shield	1

Ref. No.	Part No.	Description	No. Used
17	33-5560	Safety Shield	1
18	3257-32	Key Woodruff	1
19	27-6200	Wheel & Tire Assembly	2
20	27-6230	Wheel Bolt	4
21	32151-62	Retaining Ring	1
22	38-7390	Pivot Arm Rear L.H.	1
23	32146-6	Nut	4
24	32152-1	Nut	7
25	36-0410	Step Pad	1
26	36-2820	Decal Step Pad	1
27	36-5060	Spanner Link L.H.	1
28	36-0030	Decal — Height of Cut	1
29	38-2420	Link — Pivot Arm L.H.	1
30	256-206	Bushing	2
32	18-9810	Washer	2

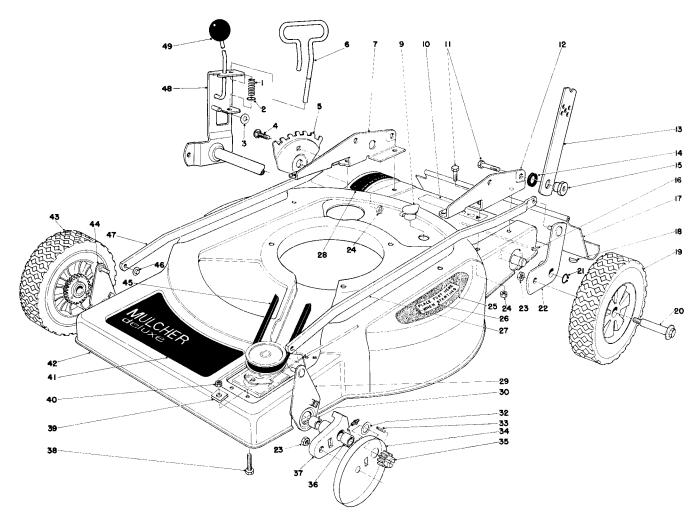


HOUSING ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
33	32121-98	Pin	2
34	18-9820	Wheel Cover	2
35	18-9690	Pinion	2
36	256-1	Bushing	2
37	38-2220	Pivot Arm (Incl. Ref. 30 & 36)	2
38	3-7281	Screw	1
39	37-7370	Speed Nut	2
40	32146-17	Nut	1
41	36-0120	Decal - Front Deck	1

Ref. No.	Part No.	Description	No. Used
42	38-2210	Housing	1
43	36-7790	Wheel & Tire Assembly	2
44	38-2430	Link Pivot Arm R.H.	1
45	5-4505	V-Belt	1
46	3290-337	Retainer – Push On	4
47	36-0370	Spanner Link R.H.	1
48	38-7400	Pivot Arm Bracket	1
49	233-21	Knob	1
**	8-3419	Loose Parts	1


^{*}Not Illustrated

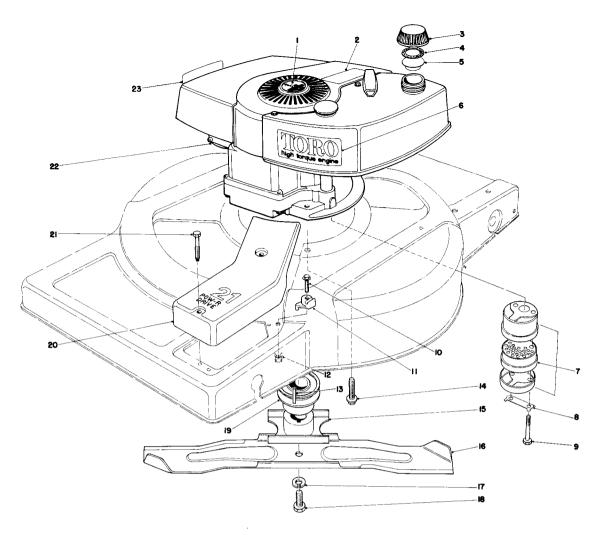

ENGINE ASSEMBLY

	Ref. No.	Part No.	Description	No. Used
	1	38-1480	Plug Button	1
	2	25-1050	Decal Lockout	1
	3	27-7870	Gas Cap (Incl. Ref. #4 & 5)	1
	4	2210-144	Gasket	1
	5	2210-143	Baffle	1
Ī	6	23-1260	Decal Engine — Toro High Torque	1
	7	5-4769	Muffler Assy. (Incl. Ref. #8&9)	1
	8	3-5094	Locking Clip	1
į	9	321-20	Screw	2
	10	32144-22	Screw Thread Forming	1
	11	38-6400	Boss Cable	1
	12	32115-2	Nut Retainer	1

Ref. No.	Part No.	Description	No. Used
13	27-8590	Key Square	1
14	11-0590	Screw	3
15	23-0110	Blade Retainer	1
16	36-8220	Blade	1
17	3253-22	Lockwasher	1
18	23-0080	Blade Bolt	1
19	23-0130	Driver Pulley	1
20	36-0390	Belt Cover	1
21	37-7260	Capscrew Special	2
22	221-619	Engine	1
23	37-1580	Decal — Maintenance	1

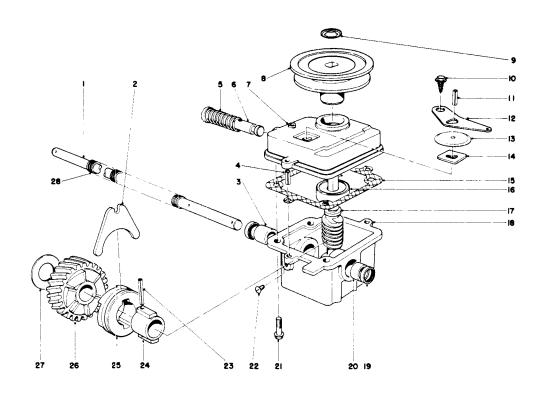


GEAR CASE ASSEMBLY

Ref.	Part No.	Description	No.
No.			Used
1	37-9440	Drive Shaft	1
2	5-3247	Shifter Fork	1
3	256-263	Bushing	1
4	32121-1	Roll Pin	2
5	3-0731	Spring	1
6	5-3248	Shifter Rod	1
†7	33-2080	Cover Gear Case	1
‡	39-1100	Cover Gear Case	1
8	20-2780	Pulley	1
9	3290-346	Push On Retainer	1
10	32140-64	Self Tapping Screw	1
11	32121-23	Roll Pin	1
12	5-3252	Shifter Arm	1
13	3-2615	Transmission Dust Cover	1
14	3-0681	Latch Plate	1
15	36-1000	Gasket – Gear Case	1
†16	251-144	Ball Bearing	1
14 15	3-0681 36-1000	Latch Plate Gasket — Gear Case	1 1

Ref. No.	Part No.	Description	No. Used
‡	251-284	Ball Bearing	1
†17	6-9949	Worm Shaft (Incl. Ref. #26)	1
‡	8-5679	Worm Shaft (Incl. Ref. #26)	1
18	8-0479	Gear Case (Incl. Ref. #3,	
		19-20)	1
19	253-140	Oil Seal	2
20	256-110	Bushing	1
21	11-9760	Screw	4
22	28-1550	Screw Nylon	1
23	32121-98	Spiral Pin	1
24	3-0721	Sleeve	1
25	19-5660	Clutch Jaw	1
26		Helical Gear	1
27	3-0724	Thrust Washer	1
28	24-7920	Drive Shaft Cover	1
*	33-2151	Gear Case Assembly	1
[
L	<u> </u>		<u> </u>

^{*}Not Illustrated

[†]Used on units with serial no. 9000001 thru 9499999 ‡Used on units with serial no. 9500000 & up

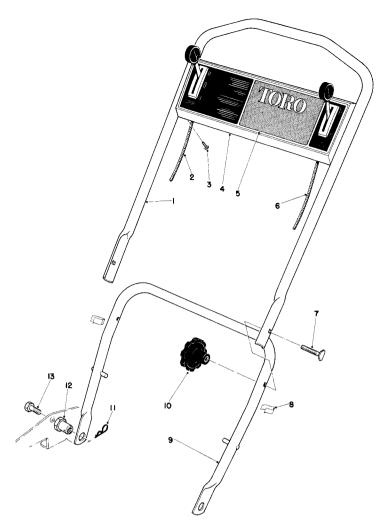


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	36-0110	Upper Handle	1
2	36-3272	Throttle Control	1
3	32104-76	Screw	4
4	38-1181	Control Plate	1
5	38-2290	Decal Control Plate	1
6	33-2567	Control — Traction	1
7	17-9420	Handle Screw	2

Ref. No.	Part No.	Description	No. Used
8	218-466	Clip Conduit	2
9	38-2450	Lower Handle	1
10	19-4050	Knob Handle	2
11	3290-255	Hair Pin Cotter	2
12	12-2080	Pivot-Nut	2 2 2 2
13	322-2	Capscrew	2


ENGINE TECUMSEH MODEL NO. TNT 100-10062C

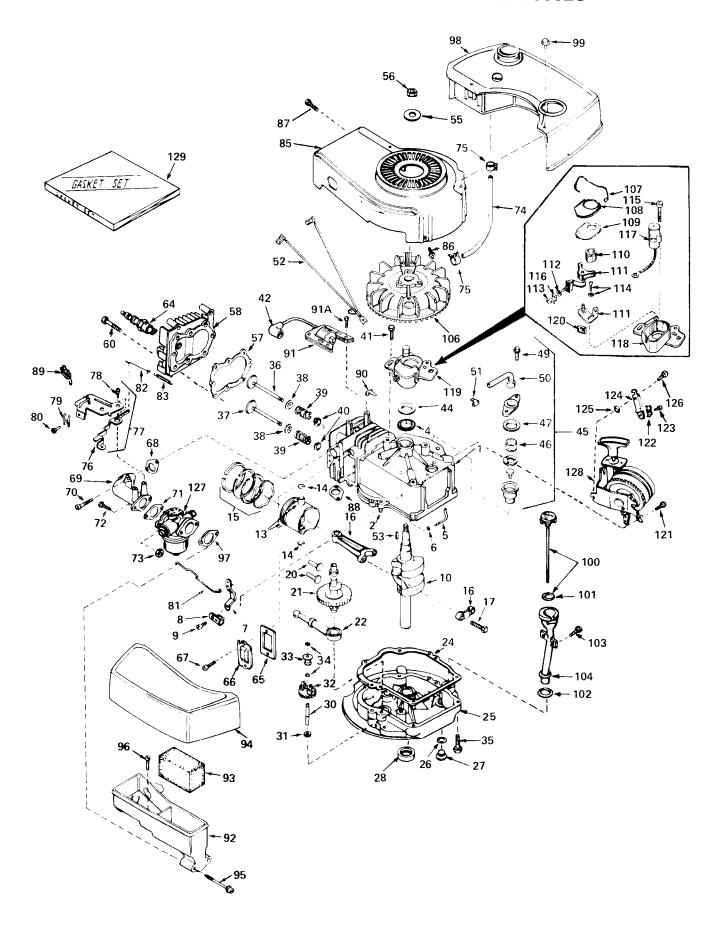

ENGINE TECUMSEH MODEL NO. TNT 100-10062C

	_					
Ref. No.	Part No.	Description	No. Used		Ref. No.	Part No.
1	34429	Cylinder Assy. (Incl. #2 & 4)	1		67	650128
2	26727	Pin, Dowel	2		68	*32649
4	32600	Seal, Oil	1		69	33004
5 6	30589 28277	Rod, Governor (Incl. #6)	1 1		70 71	650451 *31688
7	32651	Washer, Flat Lever, Governor	1 1		72	6201
8	31335	Clamp, Governor Lever	1		73	29752
9	650548	Screw, Hex Washer Hd.	1		74	30705
10	34430	Crankshaft	1		75	26460
13	32603A	Piston, Pin & Ring Assy. (Incl.	1		76	34310
13	32604A	#14 & 15) (Std.) Piston, Pin & Ring Assy. (Incl.	1		77	33889A
'3	320047	#14 & 15) (.010 oversize)	1		78	650804
13	32605A	Piston, Pin & Ring Assy. (Incl.				
		#14 & 15) (.020 oversize)	1		79	27793
14	20381	Ring, Piston Pin Retaining	2		80	28942
15 15	32606 32607	Ring Set, Piston (Std.) Ring Set, Piston (.010 oversize)	1 1		81 82	34336 33151
15	32608	Ring Set, Piston (.020 oversize)	1		83	33890
16	30963B	Rod Assy., Connecting (Incl. #17)	1		85	33891A
17	32610A	Bolt, Connecting Rod	2	ļ	86	650497
20	27241	Lifter, Valve	2	1	87	30200
21	33553	Camshaft (Mech. Compression Release)	1		88	*30081
22	29914	Pump Assy., Oil		1	88	610973
24	*26750A	Gasket, Mounting Flange	1		90	29443
25	30594B	Flange Assy., Mounting (Incl.			91	34431
		#26 thru 30)	1			650814
26	*28833	Gasket, Oil Drain Plug	1		92	33895
27 28	27244 26208	Plug, Oil Drain Seal, Oil	1		93 94	33896 33897
30	30574	Shaft, Mechanical Governor			95	650762
31	30590A	Washer, Flat	i i		96	650784
32	30591	Gear Assy., Governor (Incl. #31)	1			
33	30588A	Spool, Governor	1		97	*33051
34	29193 650488	Ring, Retaining Screw, Hex Hd. Sems	2 6		98	33904A 28763
36	29314A	Valve, Intake (Std.) (Incl. #38, 39	"		99	20/03
		& 40)	1		100	33894A
36	29315B	Valve, Intake (1/32" oversize)			_	
37	29313B	(Incl. Nos. 38, 39 & 40)	1		101	33590
37	293136	Valve, Exhaust (Std.) (Incl. #38, 39 & 40)	1		102 103	34265 650562
37	29315B	Valve, Exhaust (1/32" oversize)	l '		103	030302
		(Incl. #38, 39 & 40)	1	ł	104	34380
38	31671	Cap, Upper Valve Spring	2		106	611007
39 40	31672 31673	Spring, Valve Spring	2 2 2 2		107	30551
41	650489	Cap, Lower Valve Spring Screw, Hex Hd, Sems	2		108	610947
42	610118	Cover, Spark Plug	1	İ	109	610955
44	33876	Gasket, Stator	1		110	30992
45	34214	Breather Assy. (Incl. #46, 47, 49,	_		111	30547A
46	33734	50 & 51) Element, Breather	1		112	610385 610408
47	*33735	Gasket, Breather			113	29181
49	650768	Screw, Hex Hd. Thread Forming			115	610593
	22002	w/Conical Washer	2		116	33356
50 51	33886 33887	Tube, Breather Clip, Breather Tube	1	ļ	117	30548B
52	34432	Wire, Ground	1 1	1	118 119	611008 611006
53	610995	Key, Flywheel	1	ĺ	'''	31,000
55	650815	Washer, Belleville	1		120	30549
56 57	650816	Nut, Flywheel	1		121	650737
57 58	*33015 34342	Gasket, Cylinder Head Head, Cylinder	1 1		122 123	27793 28942
60	6021A	Screw, Hex Flange Hd.	8	 	123	34099
64	33636	Plug, Spark (Champion J-8 or			125	27070
64	24254	equivalent) Except for Canada	1		126	650738
64	34251 Canada	Resistor Spark Plug (Canadian Regulations require RJ-17LM			107	622050
	Carrada	resistor spark plug)	1		127 128	632050 590519
6 5	*27234	Gasket, Valve Spring Cover	i		129	33906
66	32755	Cover, Valve Spring Box	1		_	
]			
			1			
			ŀ			
	·		·	.		


Ref. No.	Part No.	Description	No. Used
	650128 *32649 33004 650451 *31688 6201 29752 30705 26460 34310 33889A 650804 27793 28942 34336 33151 33890 33891A 650497 30200 *30081 610973 29443 34431	Screw, Fil. Hd. Sems Gasket, Intake Pipe Pipe, Intake Screw, Hex Hd. Sems Gasket, Carburetor Screw, Hex Hd. Nut & Lockwasher Assy. Line, Fuel Clamp, Fuel Line Lever, Control Control Assy., Speed (Incl. #76, 78 & 89) Screw, Hex Washer Hd. Shoulder Self-Tap. Clip, Conduit Screw, Hex Hd. Sems Link, Governor-to-Throttle Link, Governor Spring Spring, Governor Housing, Blower Screw, Flex Pan Hd. Screw, Hex Washer Hd. Self-Tap Sems Gasket, Exhaust Terminal Assy. Clip, Fuel Line Lamination Screw, Hex Washer Hd. Sems Body, Air Cleaner Filter, Air Cleaner Cover, Fil. Hd. Sems Screw, Hex Hd. Taptite w/flattwasher Gasket, Air Cleaner Tank, Fuel Screw, Hex Washer Hd., Shakeproof Dipstick, Oil (Incl. #101) (Twist Lock) "O" Ring Gasket Screw, Hex Washer Hd. Shakeproof Tube, Oil Filler (Plastic) Flywheel Spring, Breaker Box Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Dust Gasket, Dust Cover Cover, Breaker Box Cover Cover Cover, Breaker Cover Cover Cover Cover Cover Cover Cover Cover Cove	

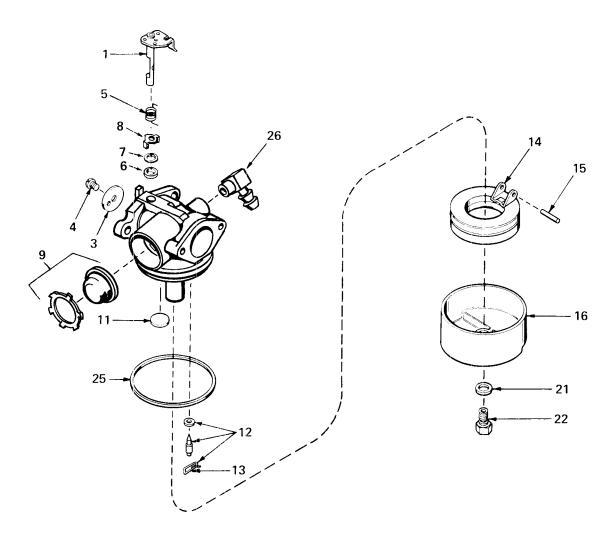

CARBURETOR NO. 632050

Г				
	Ref. No.	Part No.	Description	No. Used
	1	631615	Shaft & Lever Assy., Throttle	1
	3	631616	Shutter, Throttle	1
	4	650506	Screw, Throttle Shutter	1
	5	632016	Spring, Return	1
	6	631971	Seal, Dust	1
	7	631184	Washer	1
	8	631972	Retainer, Dust Seal	1
	9	632047	Bulb & Retainer, Primer	1
l	11	631027	Plug, Welch	1
Ì	12	631021	Inlet Needle, Seat & Clip	
			Assy. (Incl. #13)	1
İ				
İ				

Ref. No.	Part No.	Description	No. Used
13	631022	Clip, Inlet Needle	1
14	632019	Float, Carburetor	1
15	631024	Shaft, Float	1
16	631700	Bowl, Float	1 .
21	631334	Gasket, Bowl-to-Body	1
22	631935	Nut, Float Bowl	1
25	631028	Gasket, Bowl-to-Body	1
26	631807	Fitting, Fuel Inlet	1
1			
	1		1

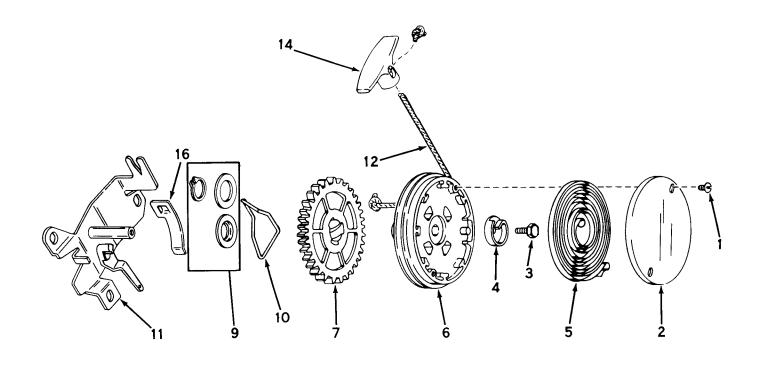

REWIND STARTER NO. 590519

-				
	Ref. No.	Part No.	Description	No. Used
ĺ	1	590477	Screw, Cover	2
	2	590431	Cover, Spring	1
	3	590472	Screw, Hex Washer Hd. Taptite	
			Left Hand Thread	1
	4	590432	Hub, Spring	1
	5	590433	Spring, Rewind	1
	6	590434A	Pulley Assy. (Incl. #9)	1
	7	590435B	Gear	1
İ	:			
1				

Ref. No.	Part No,	Description	No. Used
9	590470	Kit, Thrust Washer & Snap	
		Ring	1
10	590438	Brake	1
11	590520	Bracket Assy., Mounting	1
12	590451A	Rope, Starter (Length 69" and 5/32" Diameter)	1
14	590452	Handle, Starter	1
16	590446	Clip, Rope	1
L			

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes the unit to fall below the normal high

level of TORO performance. Invariably, such a defect will be noticed in a residential product within one year after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This quarantee statement is as follows:

The Toro Promise

A One Year Limited Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

> Residential Product Residential Products Used Commercially . . . 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- 1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference
- 2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
- 3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
- 4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts,

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise, In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Compliance with Radio Interference Regulations Certified. Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the mower housing between the rear wheels. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information.

- 1. Model and serial numbers of the mower.
- 2. Part number, description, and quantity of part(s) desired

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

Date	Hours Used	Oil Change	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap
				31 May 10			

MAINTENANCE RECORD

Date	Hours Used	Oil Change	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap
						ļ	
					 	<u> </u>	
					<u> </u>		-
							1
						:	
				· · · · · · · · · · · · · · · · · · ·			
-							
and the same states of the same of							
						1	