



Count on it.

Form No. 3443-995 Rev B

Parts Catalog

Wheel Kit AccuraSeed 620 Model No. 46431



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.



Contents

Drawbar Assembly..... 4

Wheel Assembly..... 6

Hydraulics Assembly..... 8


Drawbar Assembly

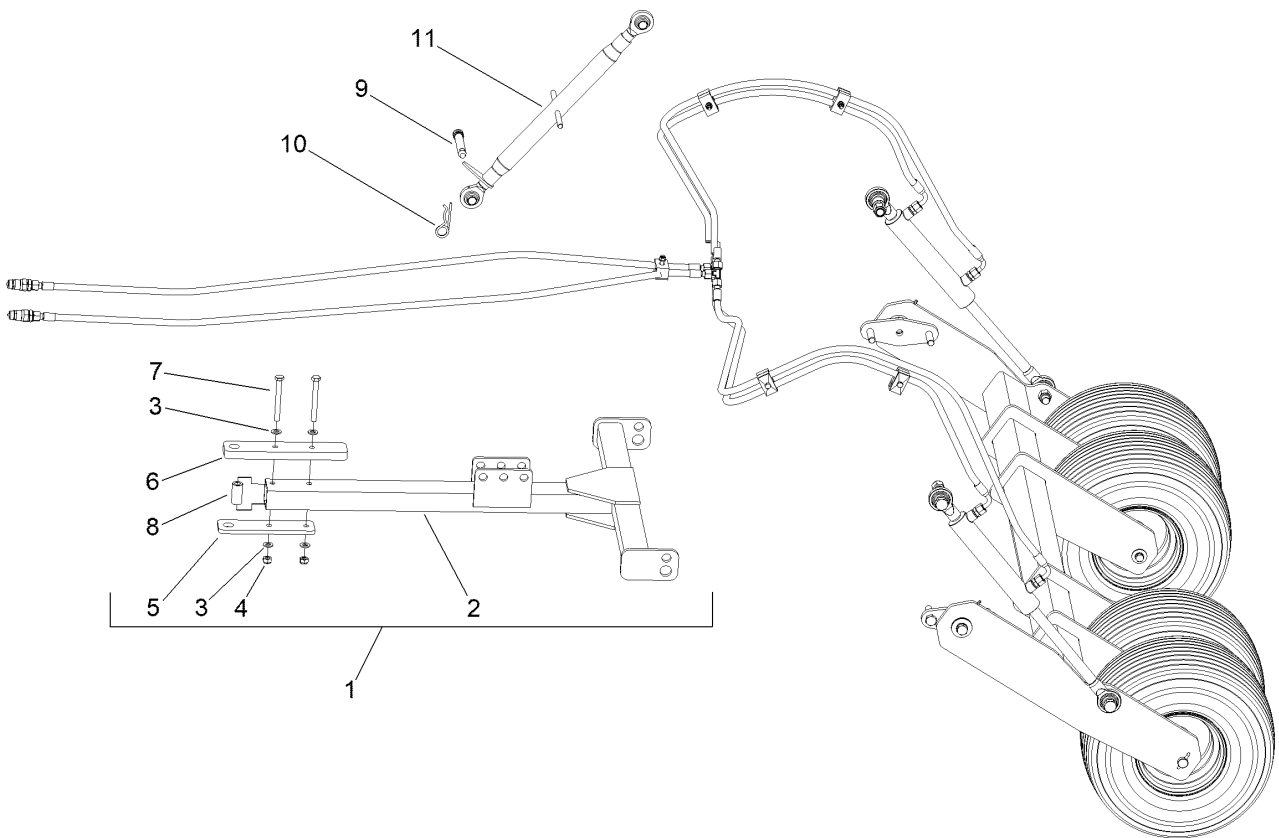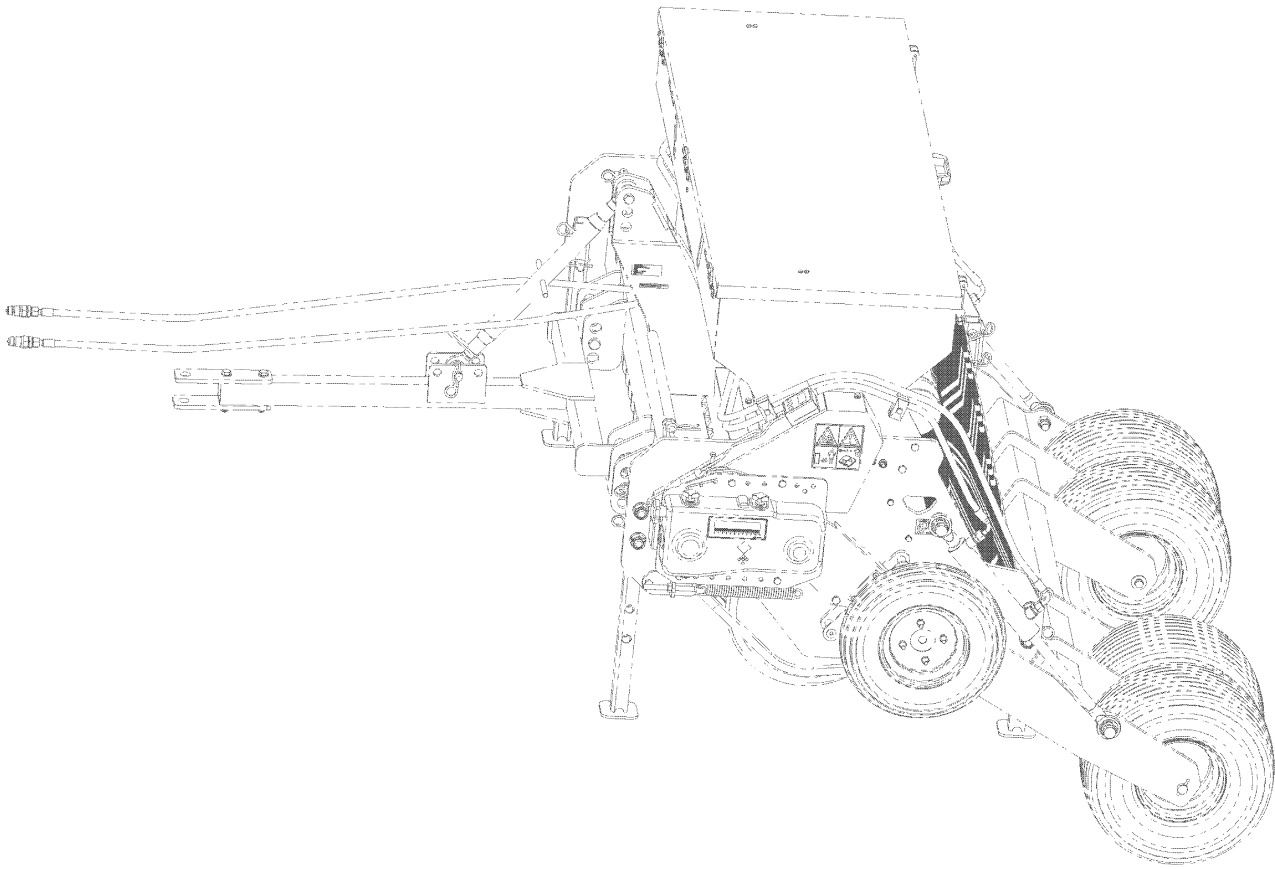

Drawbar Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-8697	1	Drawbar Bogy Double Eye Coupling	6	145-5292	1	Plate Double Eye Coupling
2	144-8537	1	Drawbar Weldment	7	145-5291	2	Bolt M12 X 110-ISO 4014
3	144-7922	4	Washer M12 - ISO 7089	8	145-5293	1	Distance Bush
4	144-7905	2	Decal-Safety	9	144-8171	1	Top Link Pin
5	144-8539	1	Plate Double Eye Coupling	10	144-7710	1	R Clip
				11	144-8698	1	Toplink


Wheel Assembly

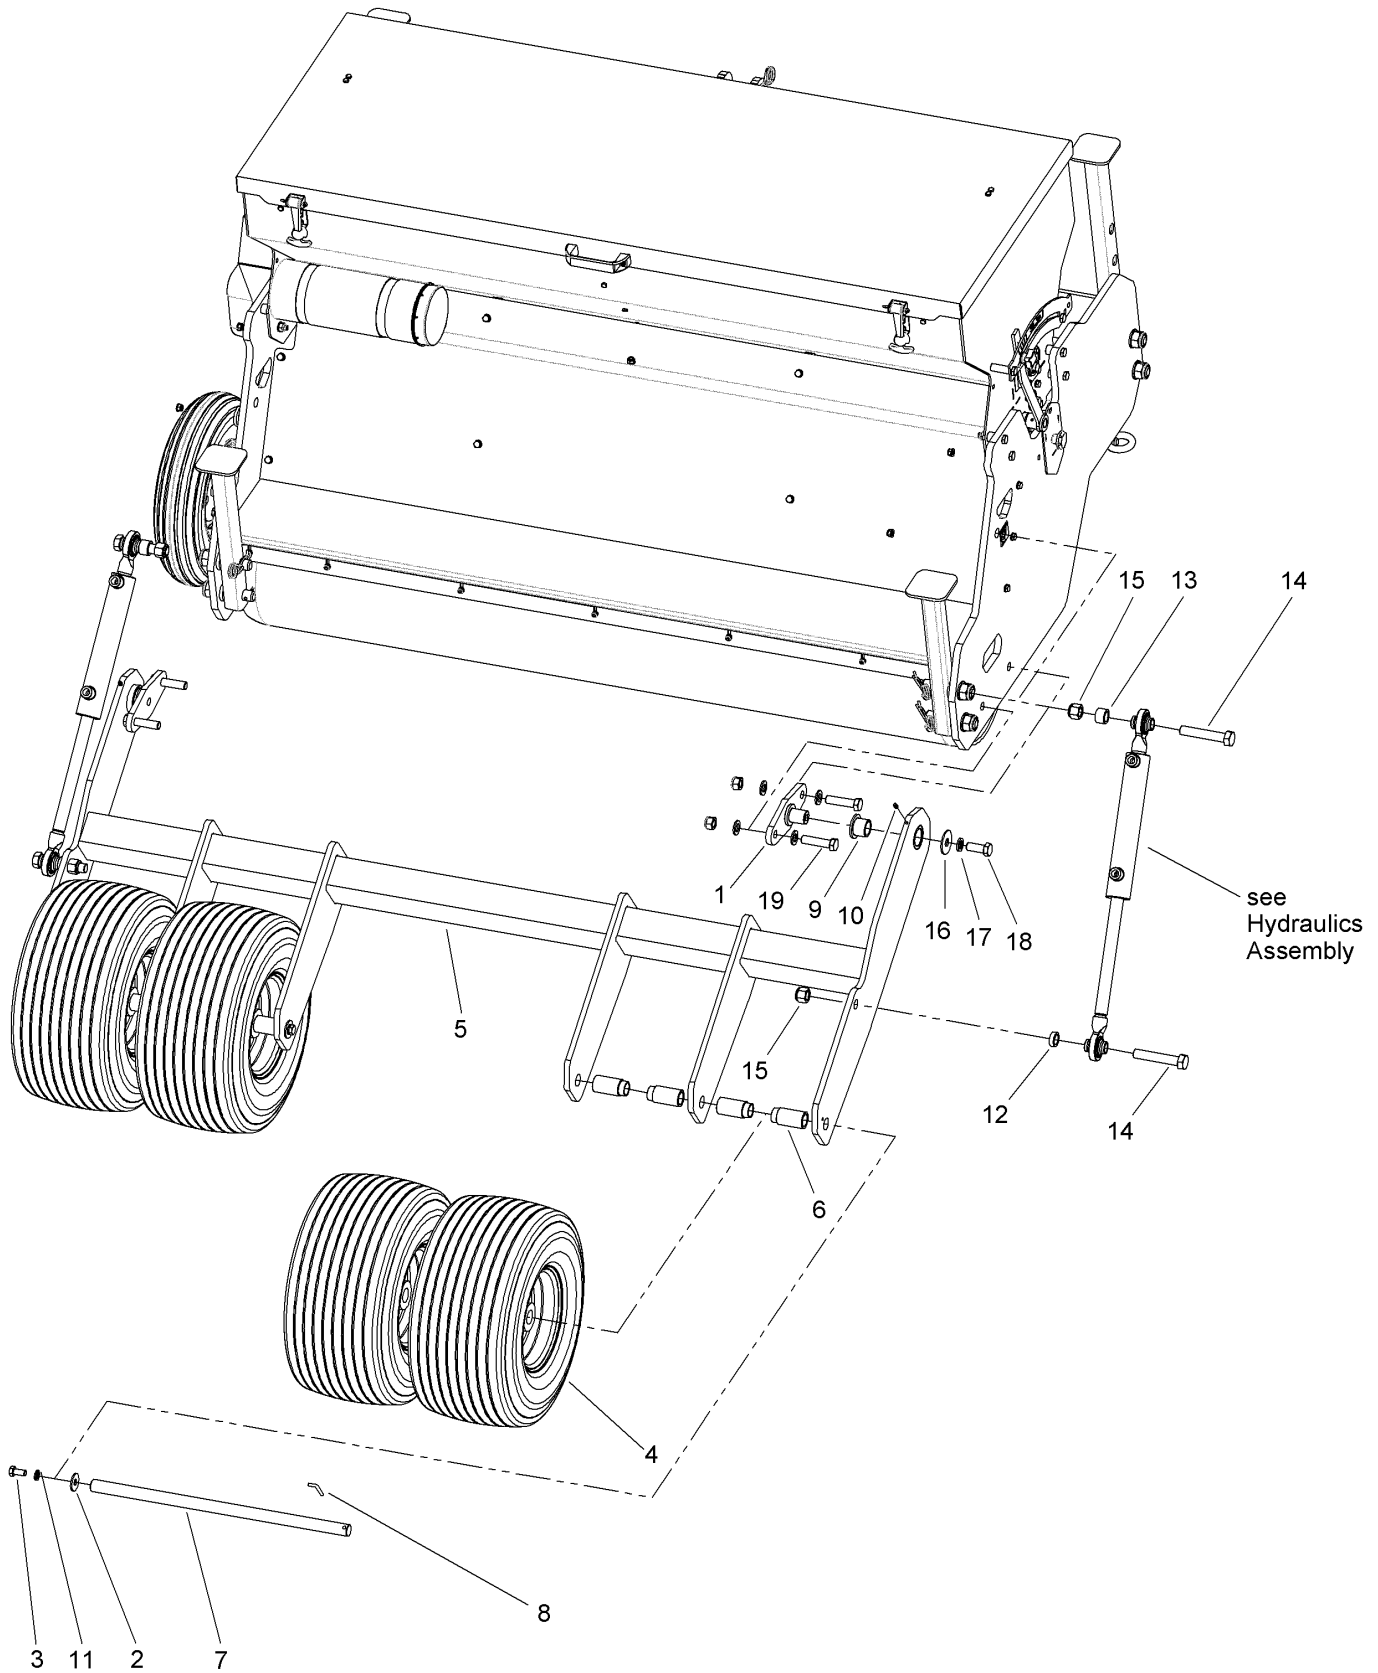

Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-8699	2	Pivot Plate	12	144-8706	2	Distance Bushing Ø30/Ø20
2	144-7953	2	Large Washer M12 - Din 9021				L=10
3	144-7955	2	Bolt M12 X 25 - ISO 4017	13	144-8707	2	Distance Bushing
4	144-8700	4	Wheel Complete	14	144-7975	4	Hex Bolt 0.75"-16X4" Unf -
5	144-8701	1	Weld ASM Bogey As620				Ansi B18.2.1
6	144-8702	8	Distance Bushing Wheel	15	144-7983	4	SI Nut 3/4"-16 Unf
7	144-8703	2	Wheel Shaft Bogey	16	144-8138	2	Large Washer M16 - Din 9021
8	144-8704	2	Lock Pin	17	144-8708	2	Tooth Washer M16
9	144-8705	2	Bearing Bushing	18	144-8141	2	Bolt M16 X 40 - ISO 4017
10	144-7961	2	Grease Nipple M6 Din 71412A	19	144-7957	4	Bolt M16 X 65 - ISO 4014 -
11	144-7954	2	Tooth Washer M12				10.9

Hydraulics Assembly

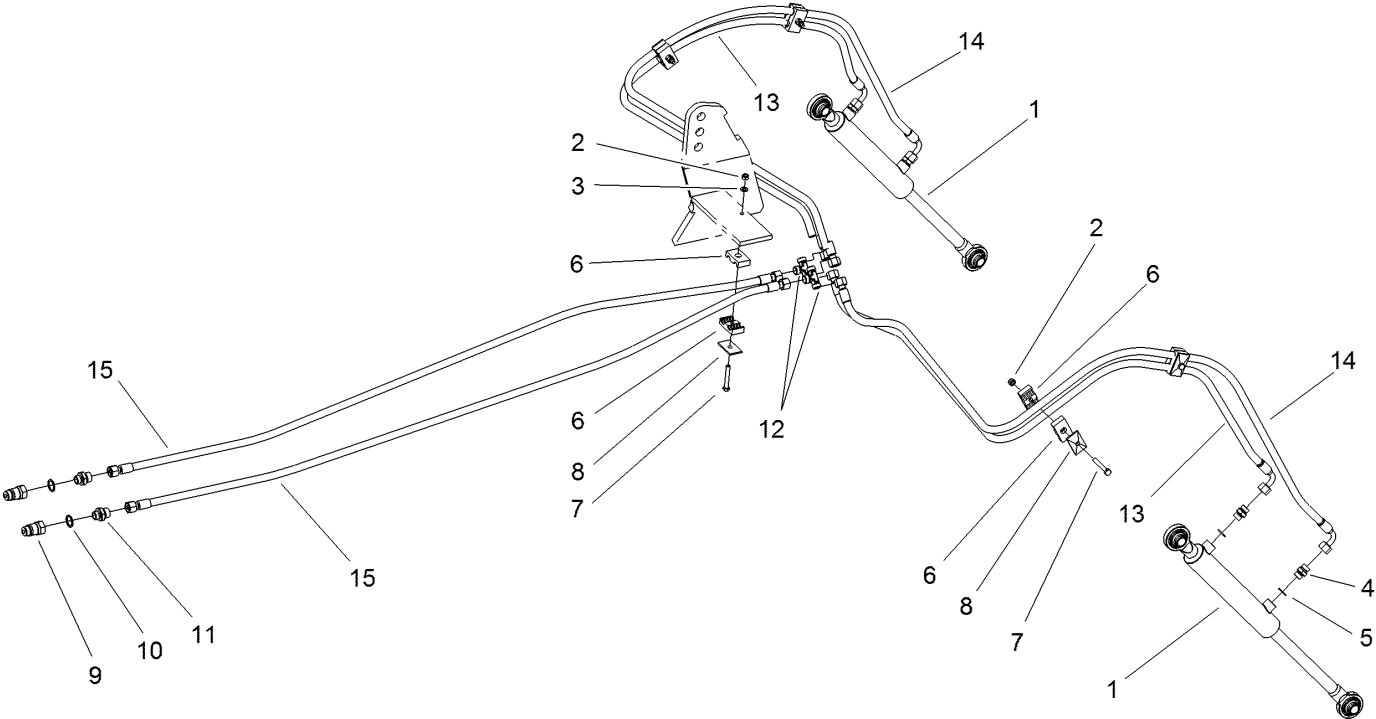

Hydraulics Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-8709	2	HYD. Cylinder 25/40, Stroke 200	8	144-8712	5	Cover Plate Hose Clamp 2X15 - 2X18
2	144-7944	5	Self Lock Nut M8 - ISO 10511	9	144-8073	2	Quick Connector Male 1/2"
3	144-7929	1	Washer M8 - ISO 7089	10	144-8074	2	Copper Washer 1_2
4	144-8710	4	Nipple BSP 3_8" X Pipe 12 (M18)	11	144-8713	2	Nipple BSP 1_2" X Pipe 12 (M18)
5	144-8049	4	Copper Washer 3_8	12	144-8714	2	T-Connector 12X12X12
6	144-8711	10	Hose Clamp Double 15MM	13	144-8715	2	Hose Nsk10-3/8"
7	144-8466	5	Bolt M8 X 55 - ISO 4014	14	144-8716	2	Hose Nsk10-3/8"
				15	144-8717	2	Hose Nsk10-3/8"

Notes:

Notes:



Count on it.