

Count on it.

Parts Catalog

EU Light Kit

Groundsmaster® 5900 Series Rotary Mower with Cab

Model No. 31695



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.


Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Headight Assembly for Machines with a Cab only	. 4
Light Mount Kit Assembly No. 140-6698	. 5
Headight Assembly for Machines with ROPS only	. 6
Tail Light Assembly	
Pivot Bracket Assembly No. 140-6882	. 8
Light, Mounting Plates and Decal Assembly	
Flectrical Parts Assembly	10

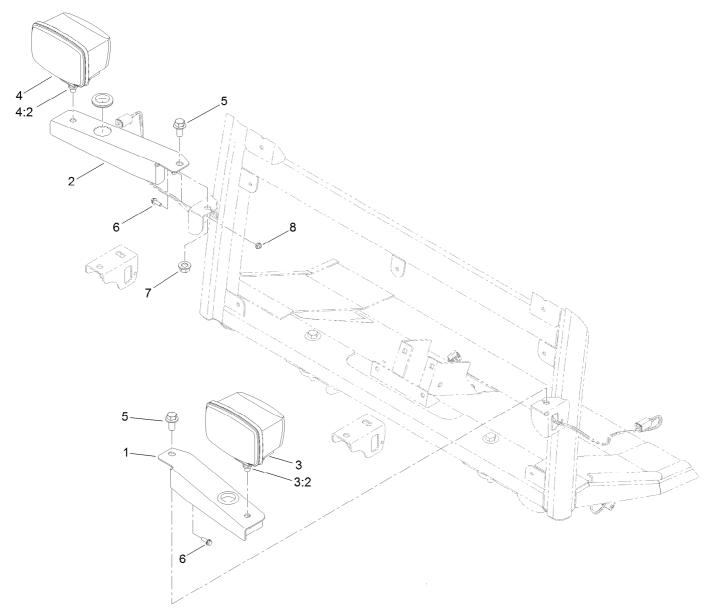


Headight Assembly for Machines with a Cab only

 Ref.	Part Number	Qty.	Description
1	144-3298-03	1	Mount-Light, LH
2	144-3295-03	1	Mount-Light, RH
3	140-6773	1	LH Light ASM
3:2	140-6698	1	Light Mount Kit
4	140-6772	1	RH Light ASM
4:2	140-6698	1	Light Mount Kit
5	3234-6	2	Screw-HHF
6	115-5103	2	Screw-HHF
7	99-5107	2	Nut-Lock
8	104-7201	2	Nut-HF, NI

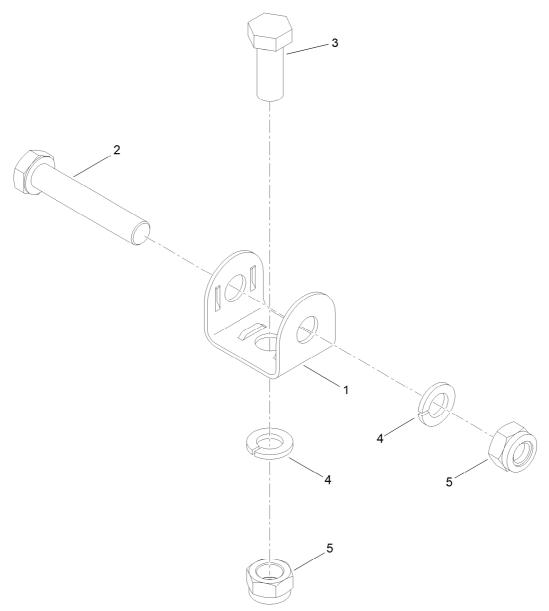


Light Mount Kit Assembly No. 140-6698

_	Ref.	Part Number	Qty.	Description
	1	139-2092	1	Mount-Light
	2	107-7983	1	Screw-HH
	3	33116-030	1	Screw-HH
	4	48-8070	2	Washer-Lock
	5	33026-00	2	Nut-Hex

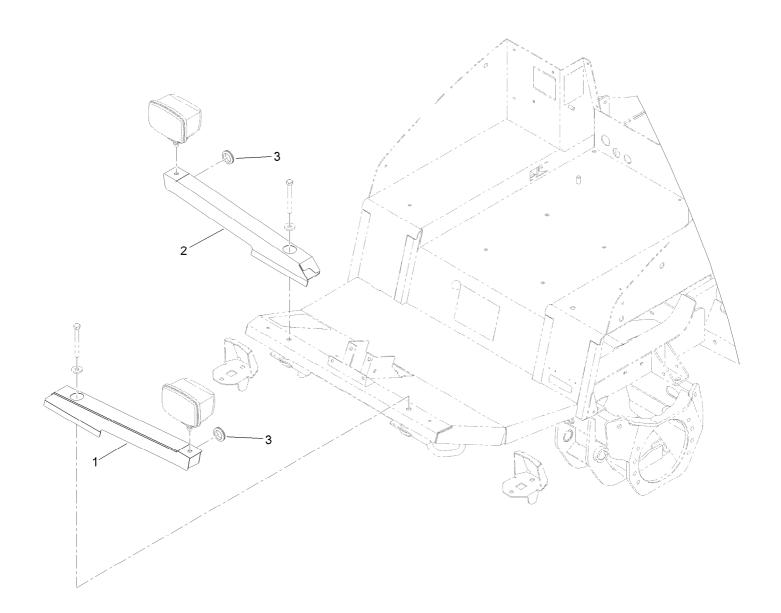


Headight Assembly for Machines with ROPS only

Ref.	Part Number	Qty.	Description
1	140-6926-03	1	Light-Bracket, LH
2	140-6915-03	1	Light-Bracket, RH
3	240-3	2	Grommet-Rubber

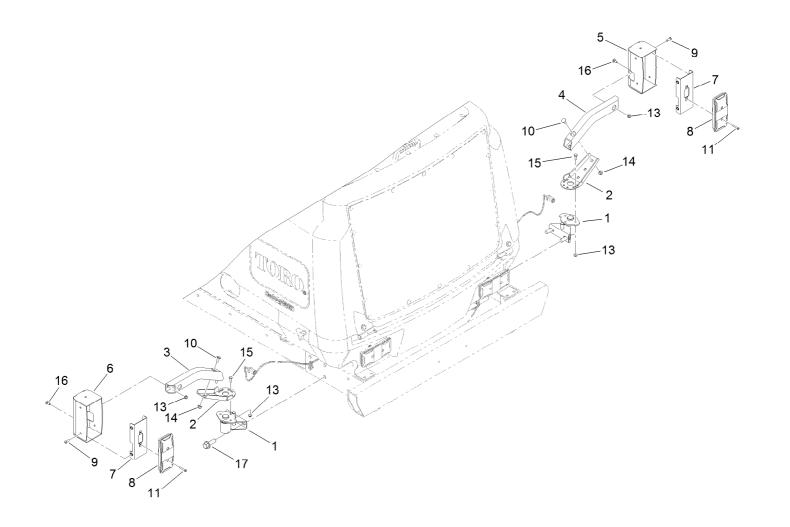


Tail Light Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	140-6882	2	Pivot Bracket ASM	9	3274-69	8	Screw-HSBH
2	144-3251-03	2	Mount-Light	10	3230-23	4	Bolt-CARR
3	140-6705-03	1	Tube-Mount, LH	11	3250-23	4	Screw-PPH
4	140-6706-03	1	Tube-Mount, RH	13	104-7201	10	Nut-HF, NI
5	140-6829-03	1	Housing-Light, RH	14	104-8300	4	Nut-HF, NI
6	140-6828-03	1	Housing-Light, LH	15	321-4	6	Screw-HH
7	140-6835	2	Inner Mount ASM	16	3229-11	4	Screw-CARR
8	139-2071	2	Light-Rear Tail/Stop/Turn	17	100-6116	4	Screw-HHF

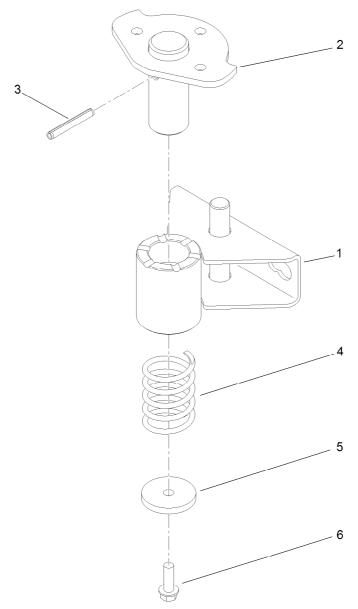


Pivot Bracket Assembly No. 140-6882

_	Ref.	Part Number	Qty.	Description
_	1	140-6923-03	1	Bracket-Pivot
	2	140-6682-03	1	Pivot
	3	32121-34	1	Pin-Roll
	4	61-3270-03	1	Spring-Compression
	5	119-9875	1	Washer
	6	32105-15	1	Screw-HWH

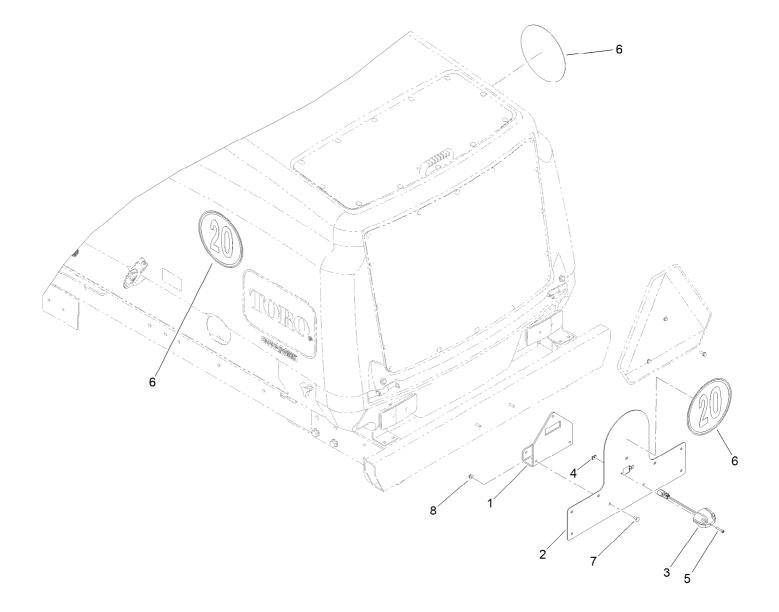

Light, Mounting Plates and Decal Assembly

Ref.	Part Number	Qty.	Description
1	140-6842-03	1	Mount-Smv
2	140-6841-03	1	Mount-License, Speed
3	139-2074	1	Light-Plate, License (Ece)
4	107-1013	2	Nut-Speed
5	3274-81	2	Screw-HSH
6	140-1519	3	Decal-Speed (20Kpm)
7	3229-11	3	Screw-CARR
8	104-7201	3	Nut-HF, NI

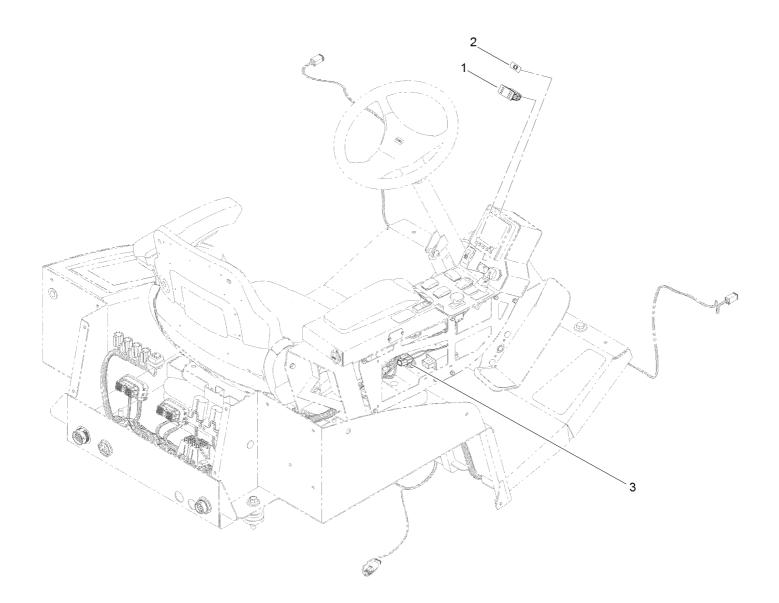

Electrical Parts Assembly

Ref.	Part Number	Qty.	Description
1	122-0978	1	Switch
2	136-0007	1	Decal-Brake, Auxiliary
3	122-1070	1	Harness-Wire



