



Mid-Size Mower

ProLine T-Bar Gear 17hp with 44in SD Mower

Model No. 30321—2300000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Engine Installation Assembly	3	Piston / Crankshaft Assembly	
Fuel Tank Assembly	4	Kawasaki FH500V–AS29	22
Lower Control Assembly	5	Lubrication Equipment Assembly	
Transmission Drive Assembly	6	Kawasaki FH500V–AS29	23
Wheel Drive and Brake Assembly	7	Cooling Equipment Assembly	
Upper Handle Assembly	8	Kawasaki FH500V–AS29	24
Control Panel Assembly	9	Electrical Equipment Assembly	
Carrier Frame Assembly	10	Kawasaki FH500V–AS29	26
Spindle, Pulley and Belt Assembly	11	Control Equipment Assembly	
Spindle Assembly No. 106–0786	12	Kawasaki FH500V–AS29	28
Spindle Assembly No. 106–0784	13	Carburetor Assembly	
Deck Assembly	14	Kawasaki FH500V–AS29	30
Drive Belt and Tensioner Assembly	15	Air Filter / Muffler Assembly	
Electrical Schematic	16	Kawasaki FH500V–AS29	32
Decal Assembly		Fuel Tank / Fuel Valve Assembly	
Kawasaki FH500V–AS29	17	Kawasaki FH500V–AS29	33
Cylinder / Crankcase Assembly		Starter Assembly	
Kawasaki FH500V–AS29	18	Kawasaki FH500V–AS29	34
Valve / Camshaft Assembly			
Kawasaki FH500V–AS29	20		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

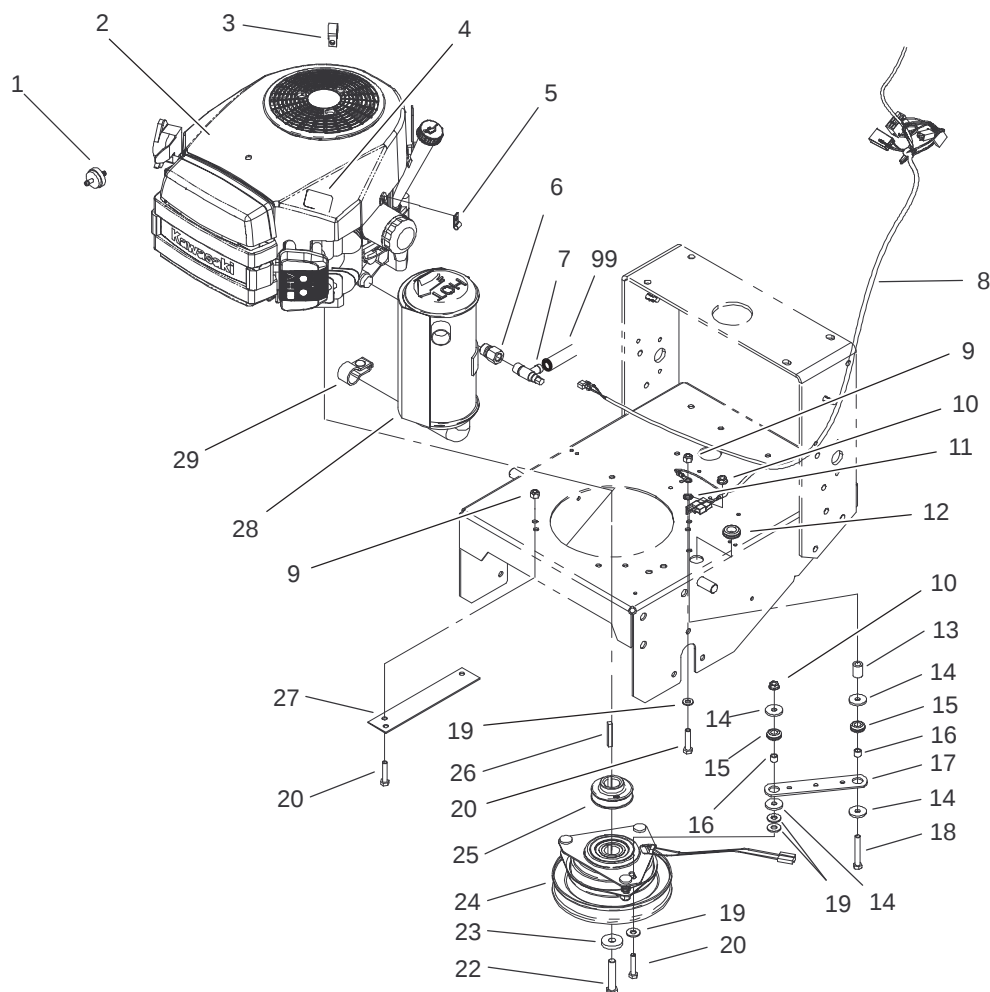


Sheet No.:4

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	56-6360	1	Filter-Fuel	26	608006	1	Key-Square
☆2		1	Engine-Kawasaki, Fh500v-As29	27	94-5847-01	1	Cover-Pulley
3	2412-87	1	Clamp-Cable	28	100-6467	1	Muffler
4	106-0699	1	Decal-Warning, Hot Surfaces	29	100-6468	1	Clamp-Muffler
5	2412-72	1	Clip-Closed, Insulated	99	103-1964	1	Hose-Drain, Oil
6	103-1966	1	Adapter				
7	103-1965	1	Valve-Drain, Oil				
8	104-8137	1	Harness-Wire				
9	3296-29	4	Nut-Lock, NI				
10	32128-20	2	Nut-HF				
11	3255-8	1	Washer-Lock				
12	237-124	1	Grommet				
13	104-6373	1	Tube-Retainer				
14	1-613235	4	Washer				
15	1-633630	2	Grommet-Brake				
16	1-633545	2	Spacer-Grommet				
17	1-633543	1	Strap-Clutch/Brake				
18	322-11	1	Screw-HH				
19	3256-23	5	Washer-Flat				
20	322-7	5	Screw-HH				
22	3212-9	1	Screw-HH				
23	112843	1	Washer				
24	105-2635	1	Clutch/Brake				
25	105-0827	1	Pulley-Drive				

☆ Not serviced separately

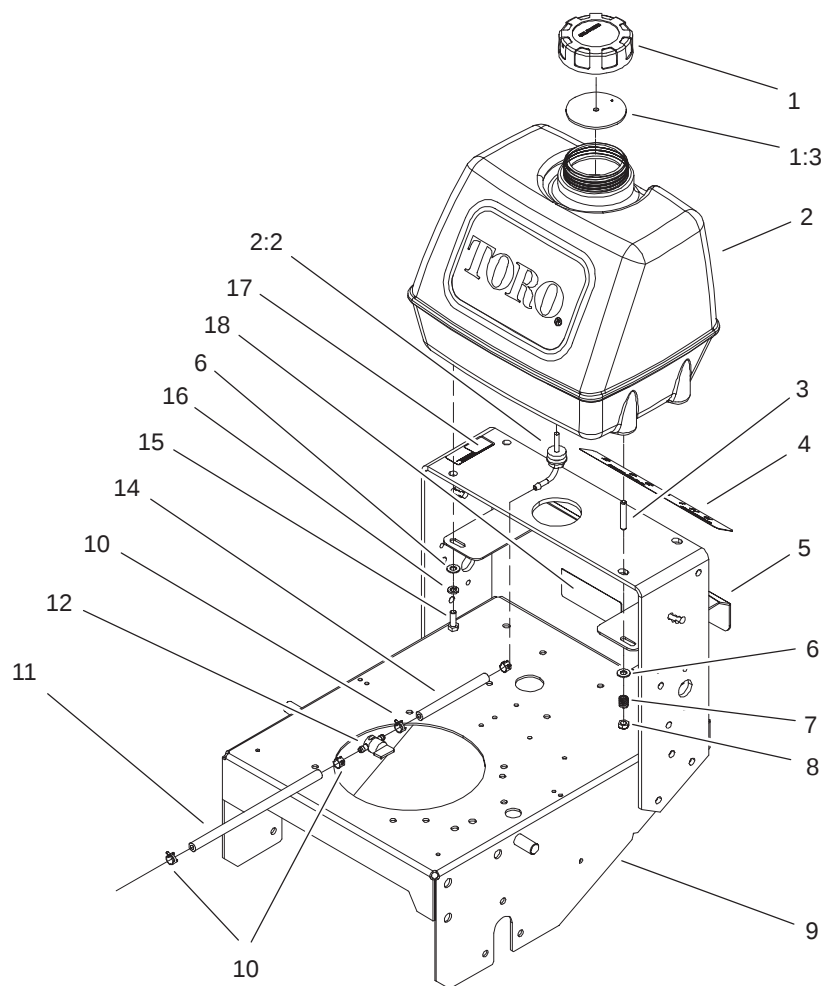


Sheet No.:5

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
4	106-5494	1	Decal-Ground Speed
5	104-8102-01	1	Plate-Gate, Shift
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2980	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

Ref. No.	Part No.	Qty.	Description

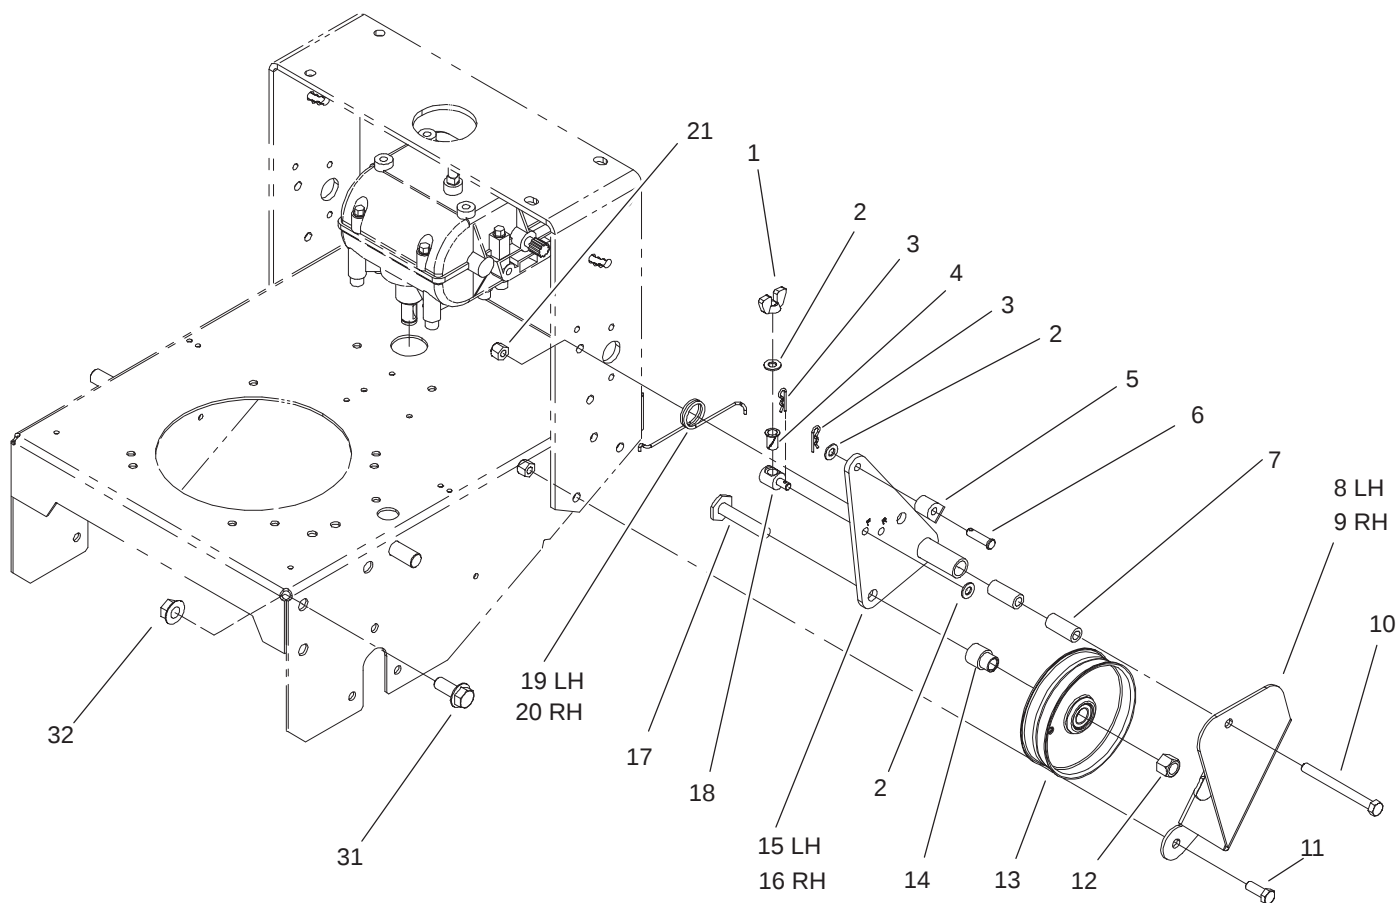


Sheet No.:6

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	67-6380-01	1	Bracket-Support, LH
9	67-6370-01	1	Bracket-Support, RH
10	323-16	2	Screw-HH
11	323-6	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	74-0220-01	1	Bracket-Idler, LH
16	74-0230-01	1	Bracket-Idler, RH
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

Ref. No.	Part No.	Qty.	Description

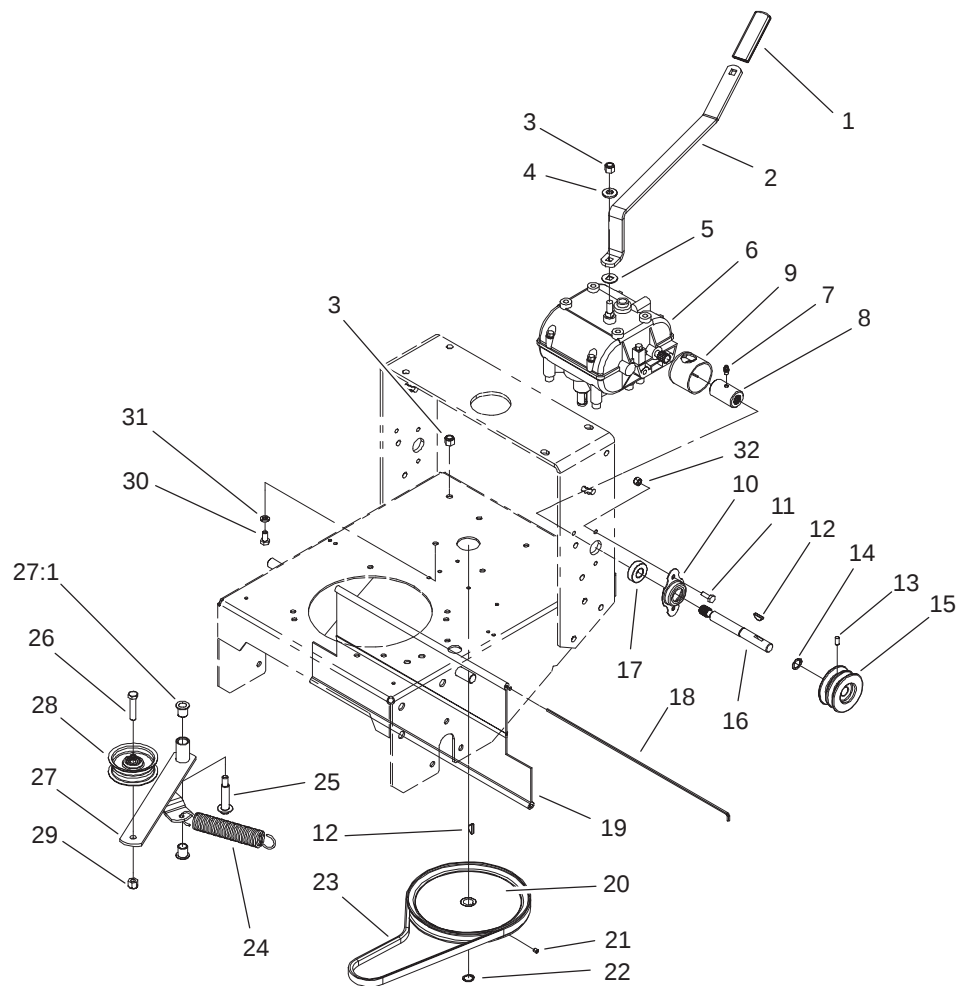


Sheet No.:7

Transmission Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock, NI
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI

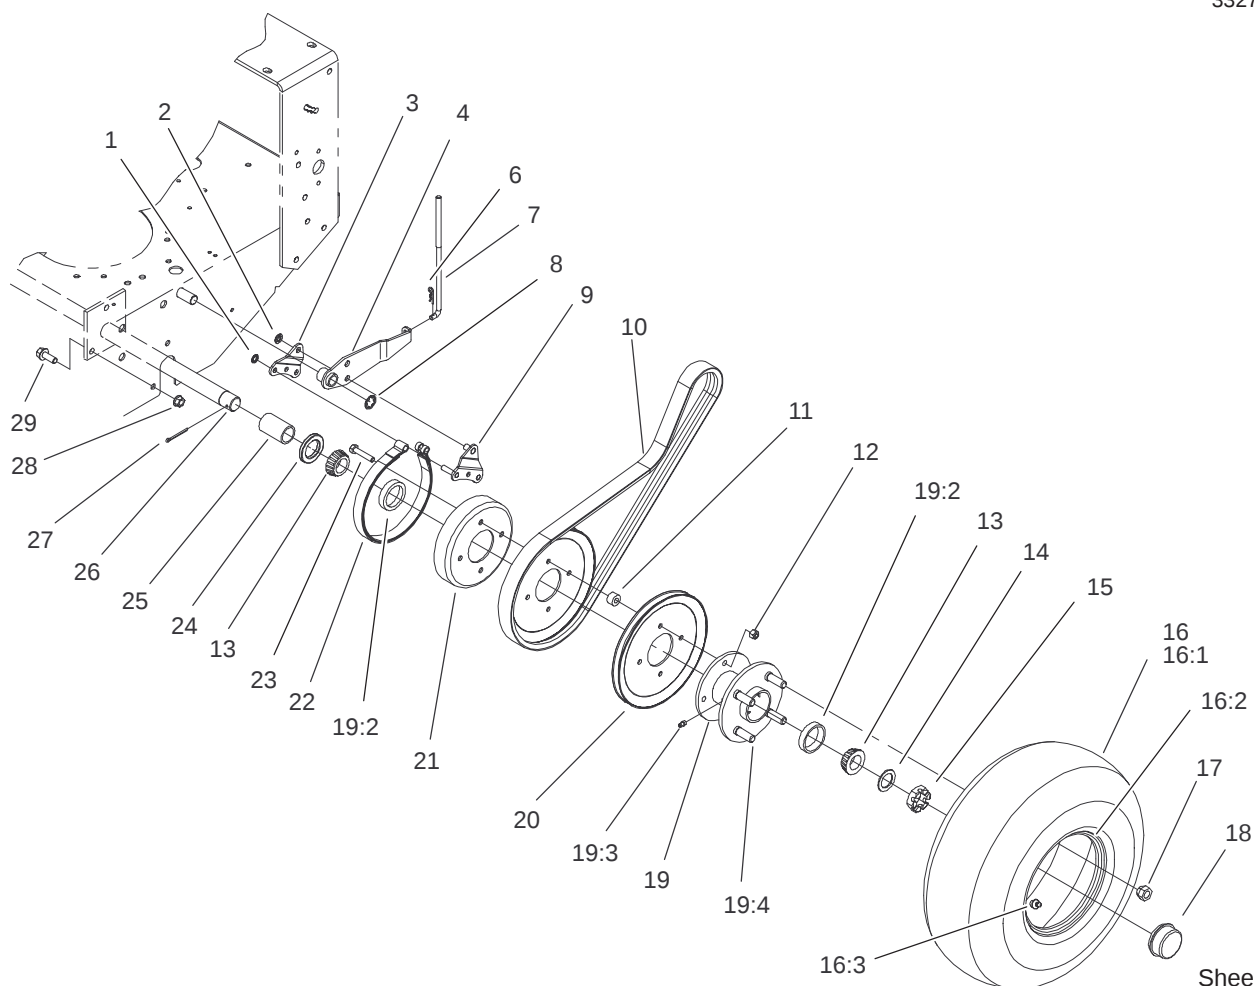


Wheel Drive and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	105-4651-01	2	Plate-Link, Brake
4	106-5537-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	105-4652-01	2	Brake Link ASM
10	51-4290	2	V-Belt
11	51-4170	8	Spacer-Pulley
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Taper
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	104-6321	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	104-6323	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub-Wheel ASM
☆19:1		1	Hub-Wheel
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel

Ref. No.	Part No.	Qty.	Description
20	51-4160-03	4	Pulley-Wheel
21	1-323261	2	Drum-Brake
22	1-323262	2	Band-Brake
23	322-8	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

☆ Not serviced separately

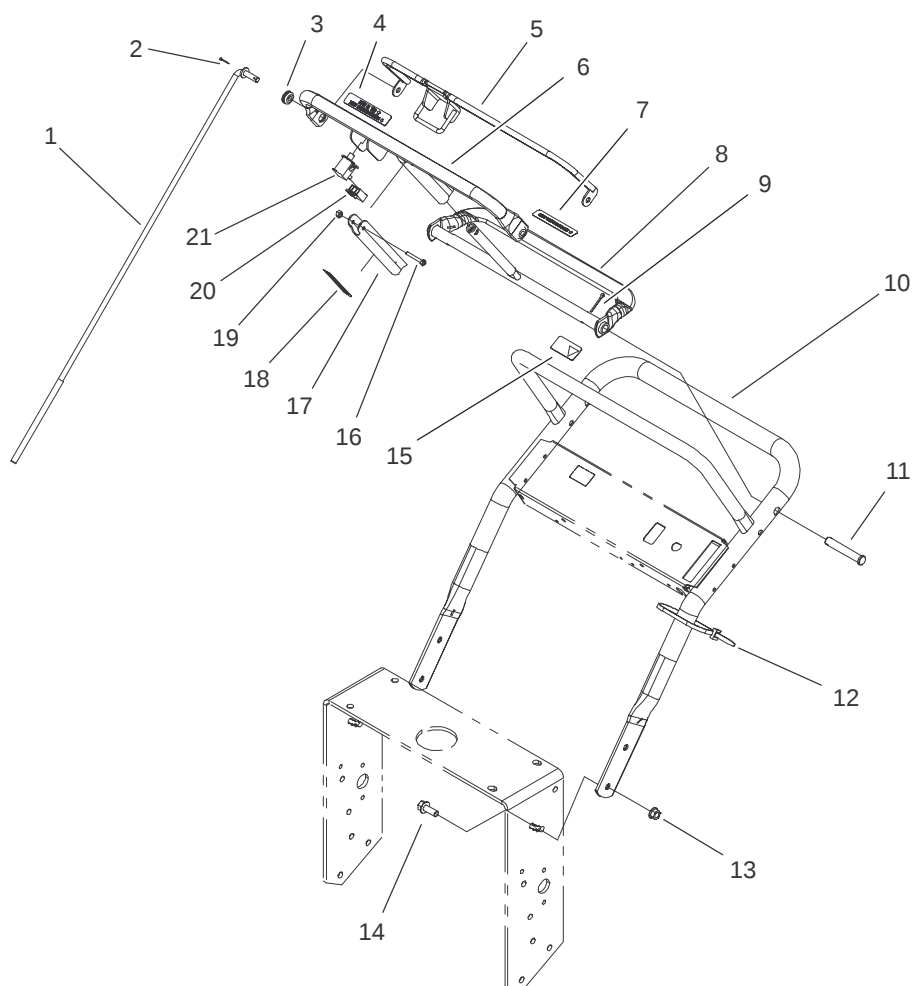


Sheet No.:9

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4677	2	Rod-Control
2	3272-4	2	Pin-Cotter
3	237-141	2	Grommet-Rubber
4	82-2290	1	Decal-Bar, Control
5	82-7680-03	1	Bail
6	82-7690-03	1	Bar-Control
7	82-2280	1	Decal-Handle, Reverse
8	106-5477-03	1	Control Pivot ASM
9	3272-11	2	Pin-Cotter
10	105-3158-03	1	Upper Handle ASM
11	283-55	2	Pin-Clevis
12	3290-378	1	Tie-Cable
13	32128-21	4	Nut-HF
14	3234-11	4	Screw-HHF
15	98-4387	1	Decal-Protection, Ear
16	32105-1	1	Screw-SHH
17	51-4850-03	1	Lever-Brake, Parking
18	52-2010	1	Decal-Lever, Parking
19	3296-2	1	Nut-Lock
20	218-595	1	Connector-Body
21	82-2190	1	Switch-Bail

Ref. No.	Part No.	Qty.	Description

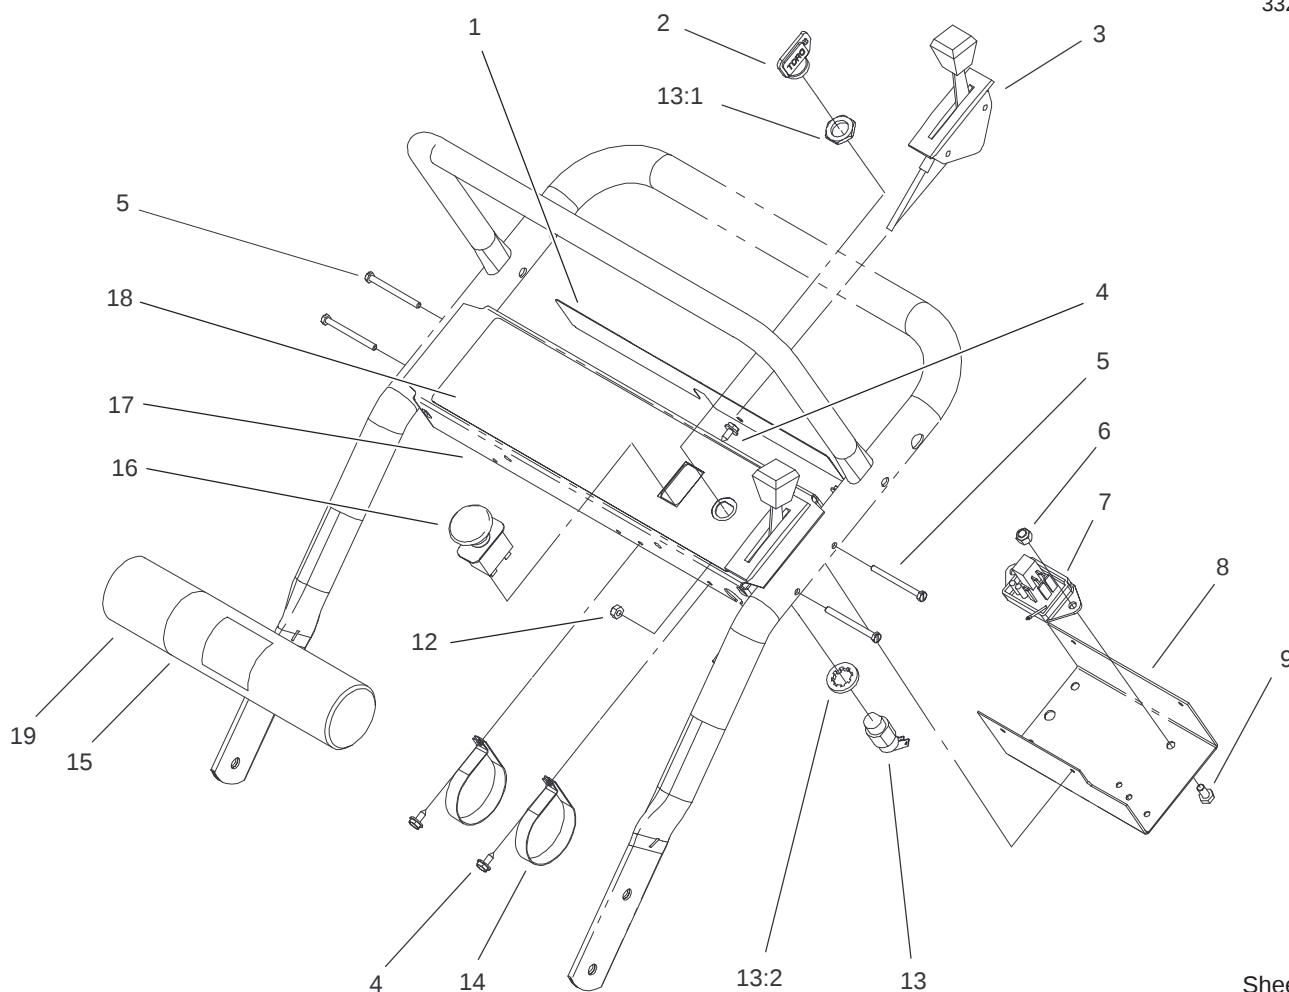


Sheet No.:10

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105-0884	1	Decal-Danger
2	63-8360	2	Key-Ignition
3	100-6450	1	Control-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
12	3296-2	4	Nut-Lock
13	29-5560	1	Switch-On/Off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	2412-120	2	R-Clamp
15	104-7050	1	Housing-Manual
16	104-8140	1	Switch-PTO
17	104-8177-03	1	Panel-Control
18	106-5499	1	Decal-Control Panel
19	104-7048	1	Cap-Housing

Ref. No.	Part No.	Qty.	Description

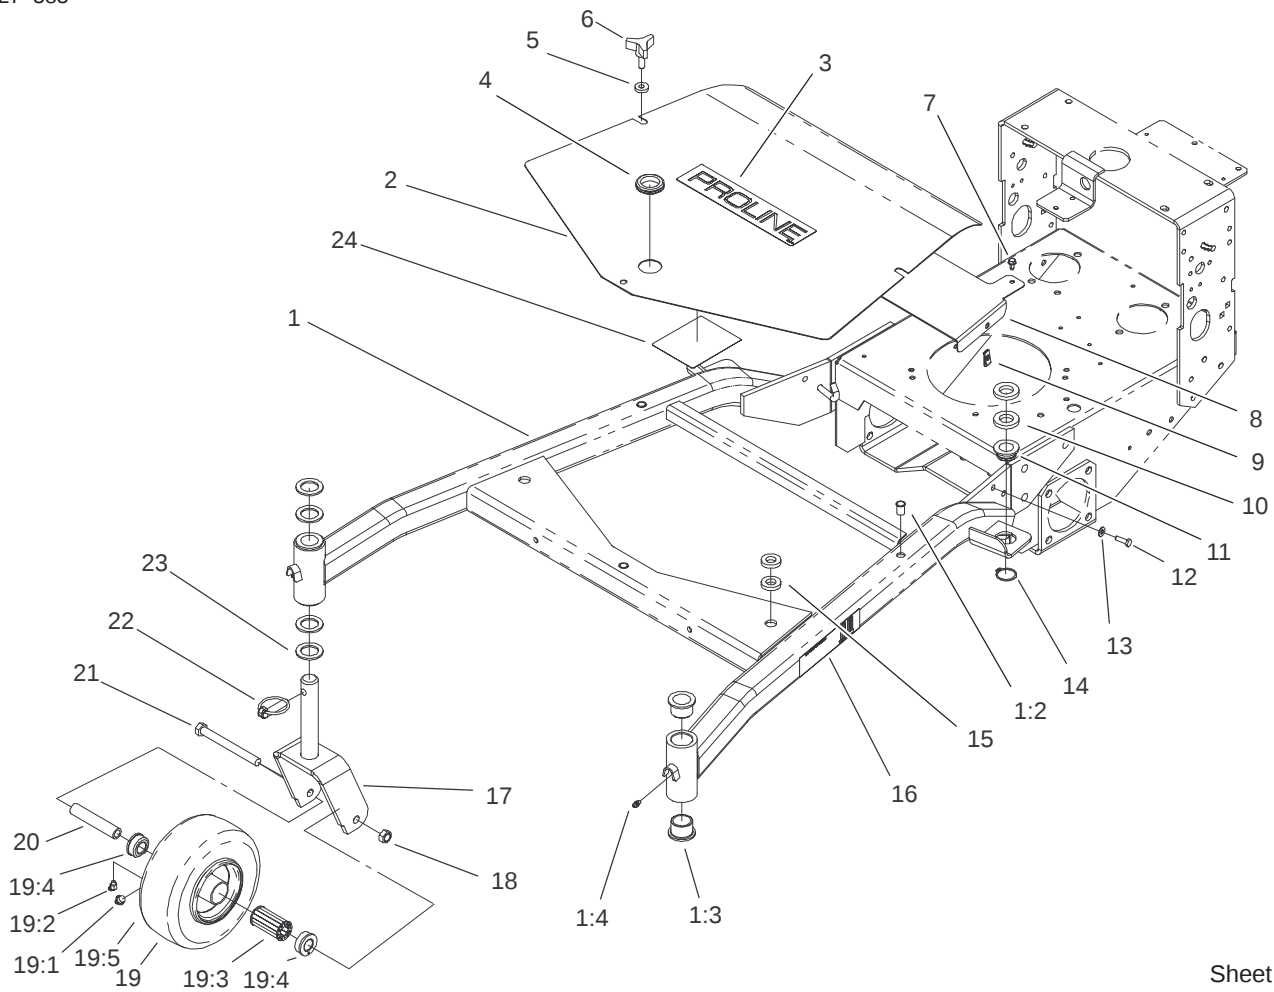


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0707	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing-Special
1:4	302-5	2	Fitting-Grease
2	106-0537-01	1	Cover
3	106-0719	1	Decal-Proline
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	104-8587	3	Knob
7	12-3270	2	Screw
8	105-9389-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45°
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside


Ref. No.	Part No.	Qty.	Description
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5505	1	Decal-Service

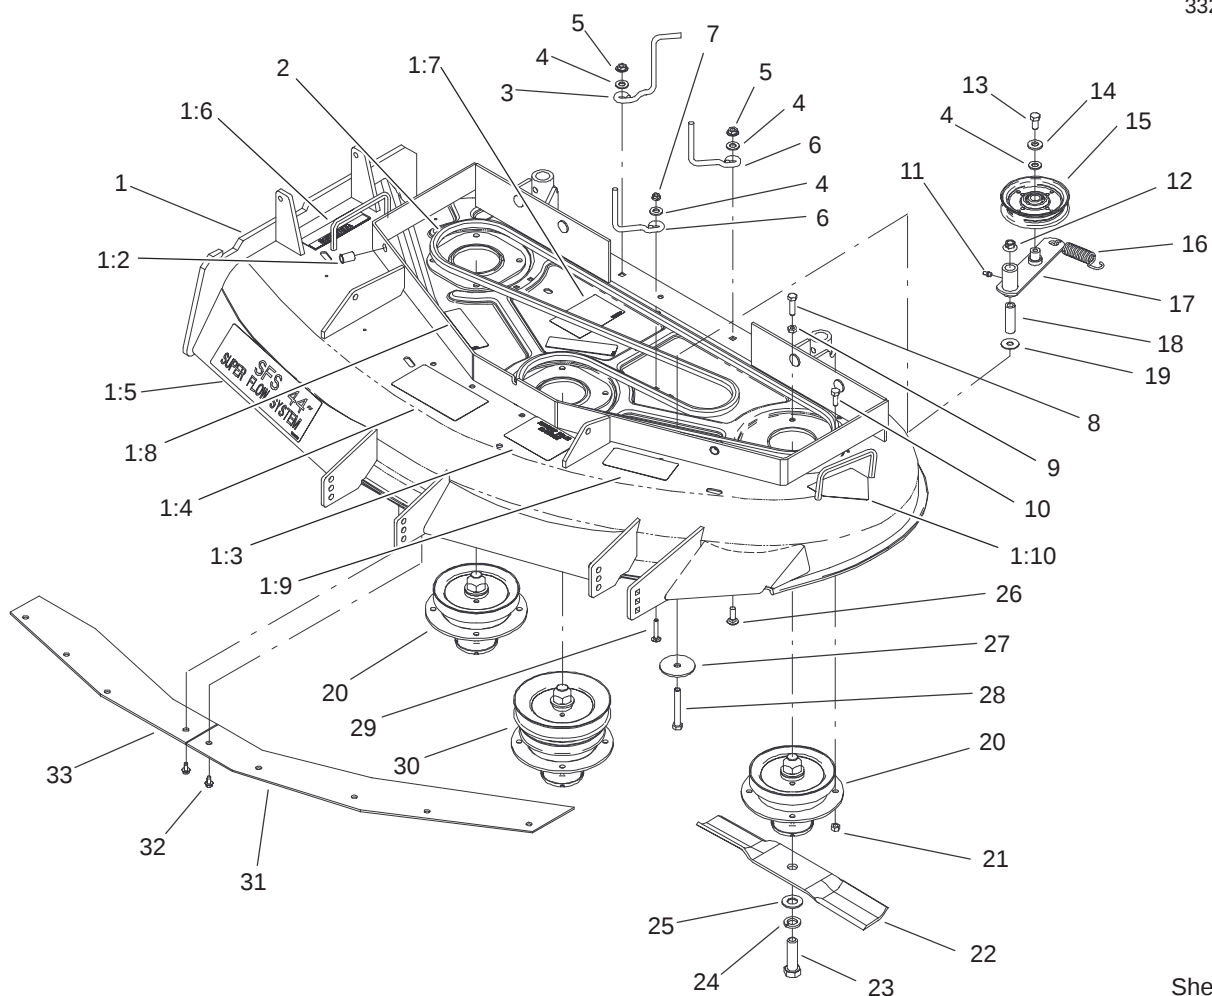

Sheet No.:3

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-0617	1	Deck ASM	18	104-8113	1	Tube-Idler
1:2	32148-10	2	Insert-Threaded	19	52-2860	1	Washer
1:3	106-5532	1	Decal-Antiscalp	20	106-0786	2	Spindle Housing ASM
1:4	66-1340	1	Decal-Danger	21	32152-1	12	Nut-Lock, NI
1:5	106-0704	1	Decal-Sfs, 44"	22	54-0010	3	Blade
1:6	104-8569	1	Decal-Warning	23	51-4060	3	Screw-Blade
1:7	104-8186	1	Decal-Routing, Belt	24	3253-8	3	Washer-Lock
1:8	67-5360	3	Decal-Danger	25	3256-27	3	Washer-Flat
1:9	68-8340	1	Decal-Torque	26	3230-2	2	Bolt-CARR
1:10	43-8480	1	Decal-Danger	27	20-9530	1	Washer-End
2	27-1160	1	V-Belt	28	323-13	1	Screw-HH
3	106-5488	1	Guide-Belt	29	3229-4	1	Screw-CARR
4	3256-24	4	Washer-Flat	30	106-0784	1	Spindle Housing ASM
5	32128-13	2	Nut-HF	31	100-3258-03	1	Plate-Blowout, LH
6	52-4780	2	Rod-Belt	32	12-3270	9	Screw
7	32128-10	1	Locknut-Flange	33	100-3257-03	1	Plate-Blowout, RH
8	322-6	1	Screw-HH				
9	3218-2	1	Nut-Jam				
10	322-4	11	Screw-HH				
11	302-19	1	Fitting-Grease				
12	32128-19	1	Nut-HF				
13	323-4	1	Screw-HH				
14	98-5975	1	Washer-Belleville				
15	65-5940	1	Pulley-Idler				
16	54-2730	1	Spring-Extension				
17	104-8110	1	Idler Arm ASM				

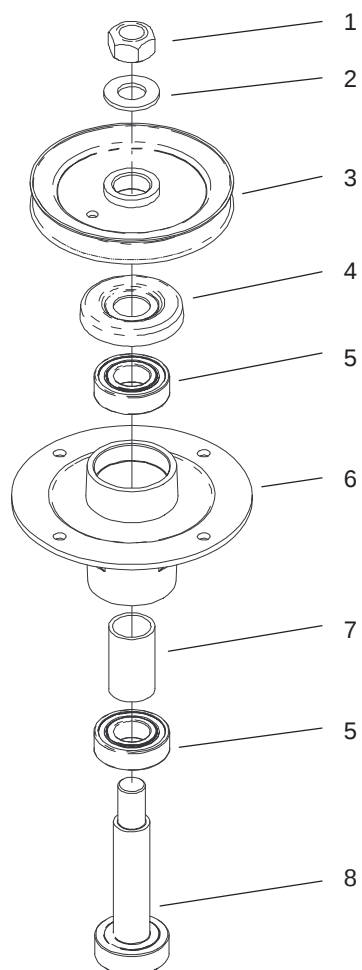


Sheet No.:A1

Spindle Assembly No. 106-0786

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1181	1	Pulley ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0780	1	Shaft-Spindle


Ref. No.	Part No.	Qty.	Description

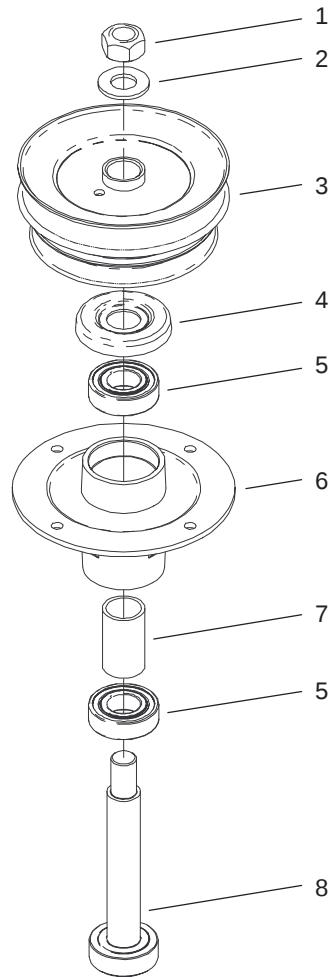

Sheet No.:A2

Spindle Assembly No. 106-0784


Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1116	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0818	1	Housing-Spindle
7	106-0794	1	Spacer-Bearing
8	106-0779	1	Shaft-Spindle

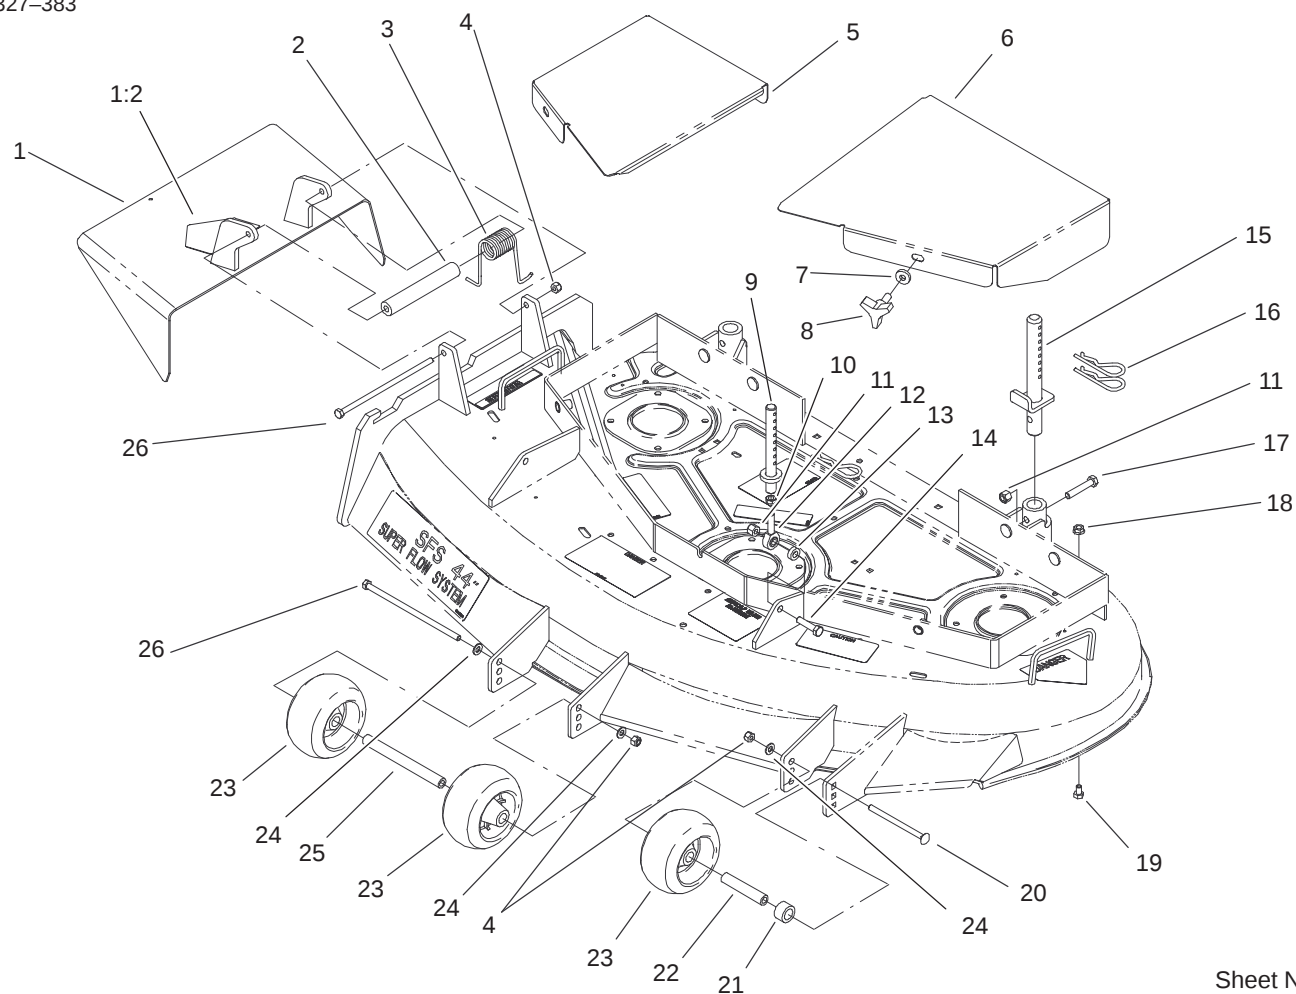

Sheet No.:4

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	105-4625	1	Deflector ASM	25	98-5967	1	Spacer
1:2	93-1122	1	Decal-Danger	26	322-50	2	Screw-HH
2	105-4622	1	Spacer				
3	104-8554	1	Spring-Torsion				
4	3296-29	3	Nut-Lock, NI				
5	106-3363-01	1	Cover-Belt, RH				
6	106-3362-01	1	Cover-Belt, LH				
7	106-0565	2	Washer-Rubber				
8	104-8587	2	Knob				
9	106-0684	2	Front Pin ASM				
10	3220-3	2	Nut-Jam				
11	3296-39	4	Nut-Lock, NI				
12	1-613204	2	Balljoint				
13	104-1156	2	Spacer				
14	323-8	2	Screw-HH				
15	106-3365	2	Rear Pin ASM				
16	3290-256	6	Pin-Hair				
17	323-10	2	Screw-HH				
18	32128-20	4	Nut-HF				
19	322-1	4	Screw-HH				
20	3230-30	1	Screw-CARR				
21	106-0563	1	Spacer-Wheel				
22	106-0545	1	Bushing-Roller				
23	68-2730	3	Wheel-Gage				
24	3256-23	3	Washer-Flat				

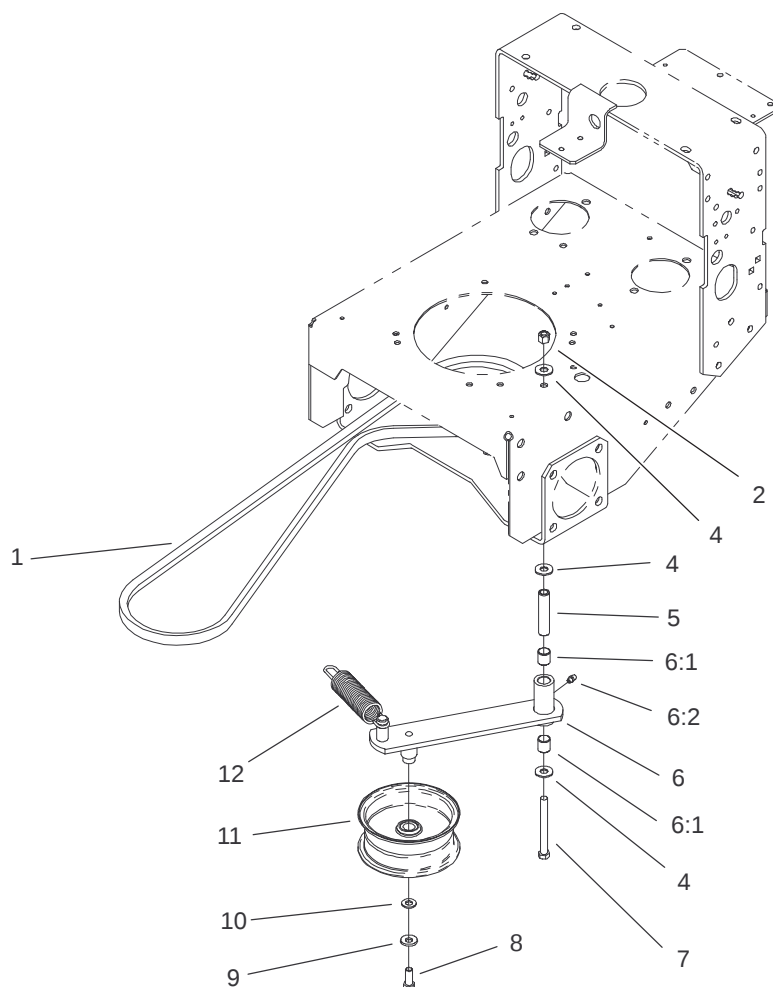


Sheet No.:5



Drive Belt and Tensioner Assembly

Ref. No.	Part No.	Qty.	Description
1	104-8120	1	V-Belt, PTO
2	3296-39	1	Nut-Lock, NI
4	1-809107	3	Washer-Hardened
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description

Electrical Schematic

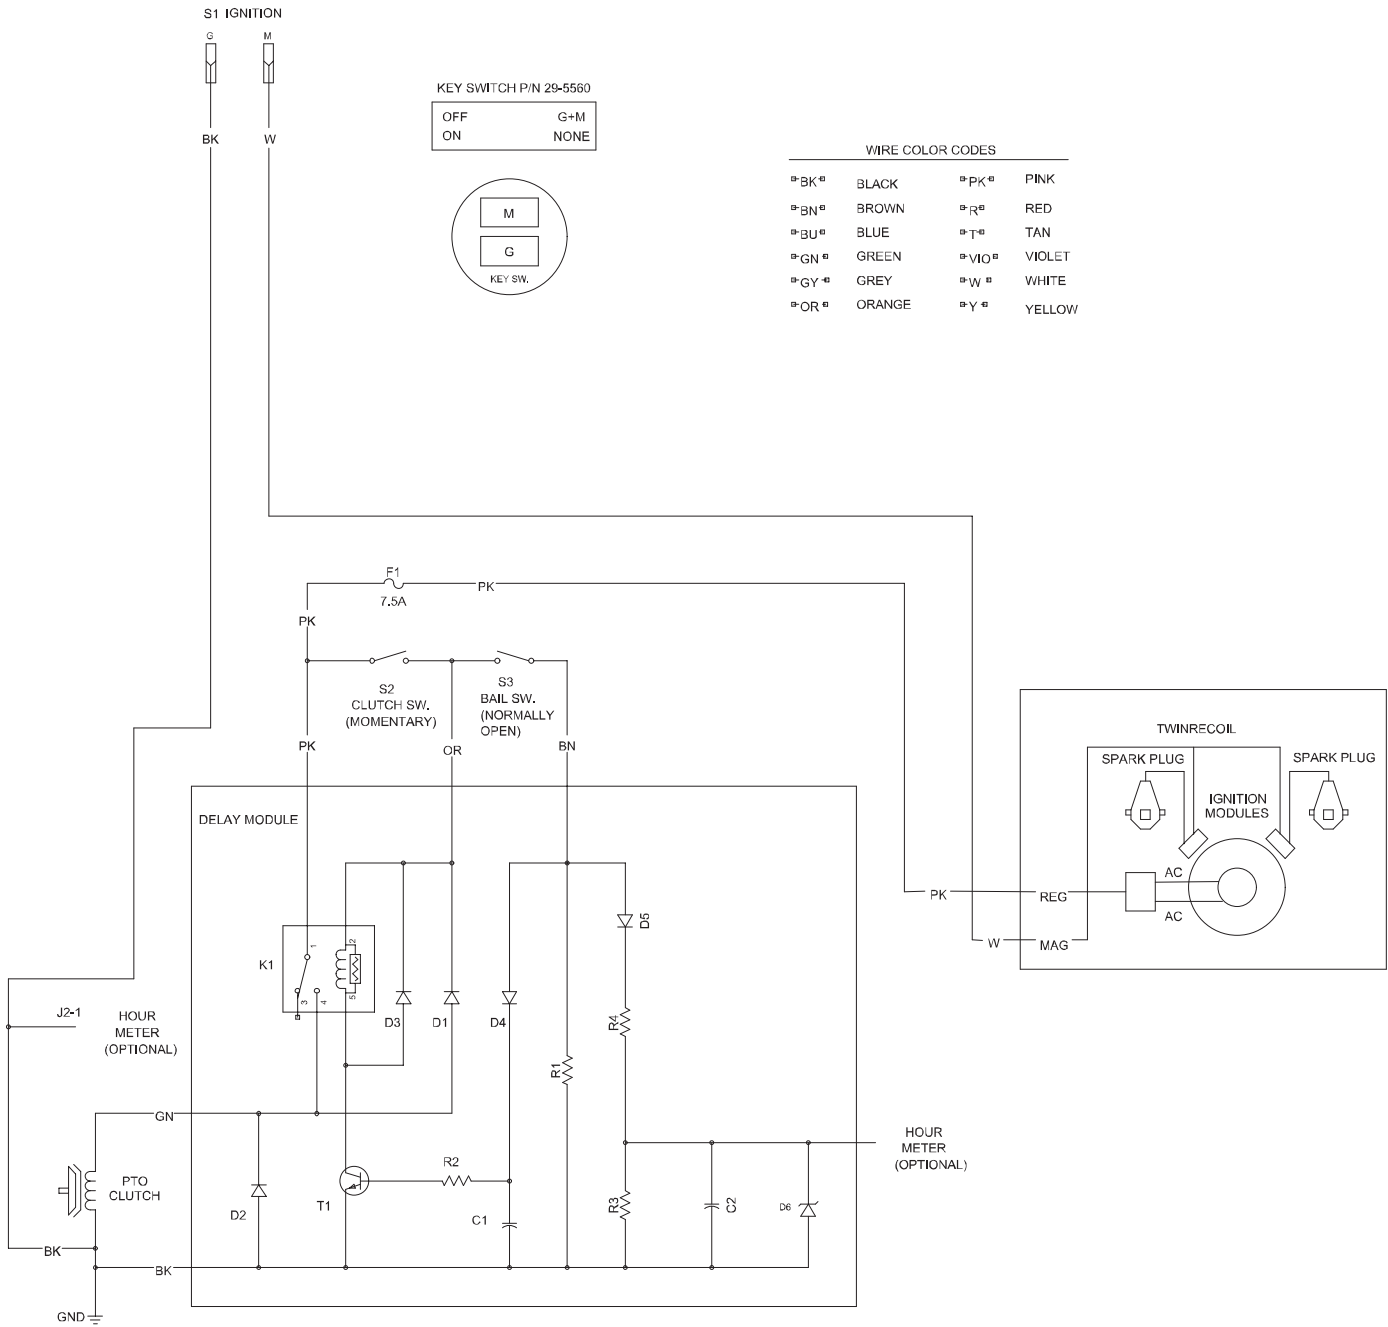

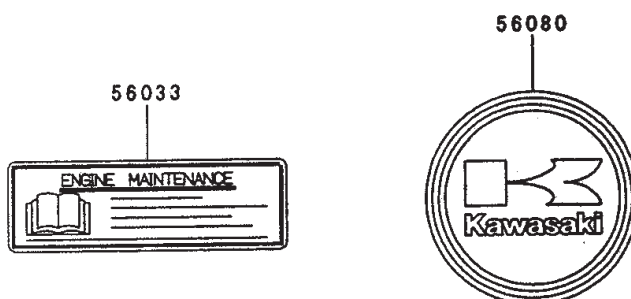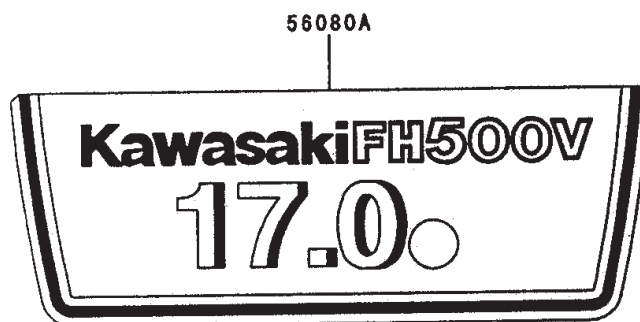


Decal Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
56033	56033-7001	1	Label-Manual
56080	56080-2077	1	Label-Brand
56080A	56080-7001	1	Label-Brand

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

Cylinder / Crankcase Assembly Kawasaki FH500V-AS29

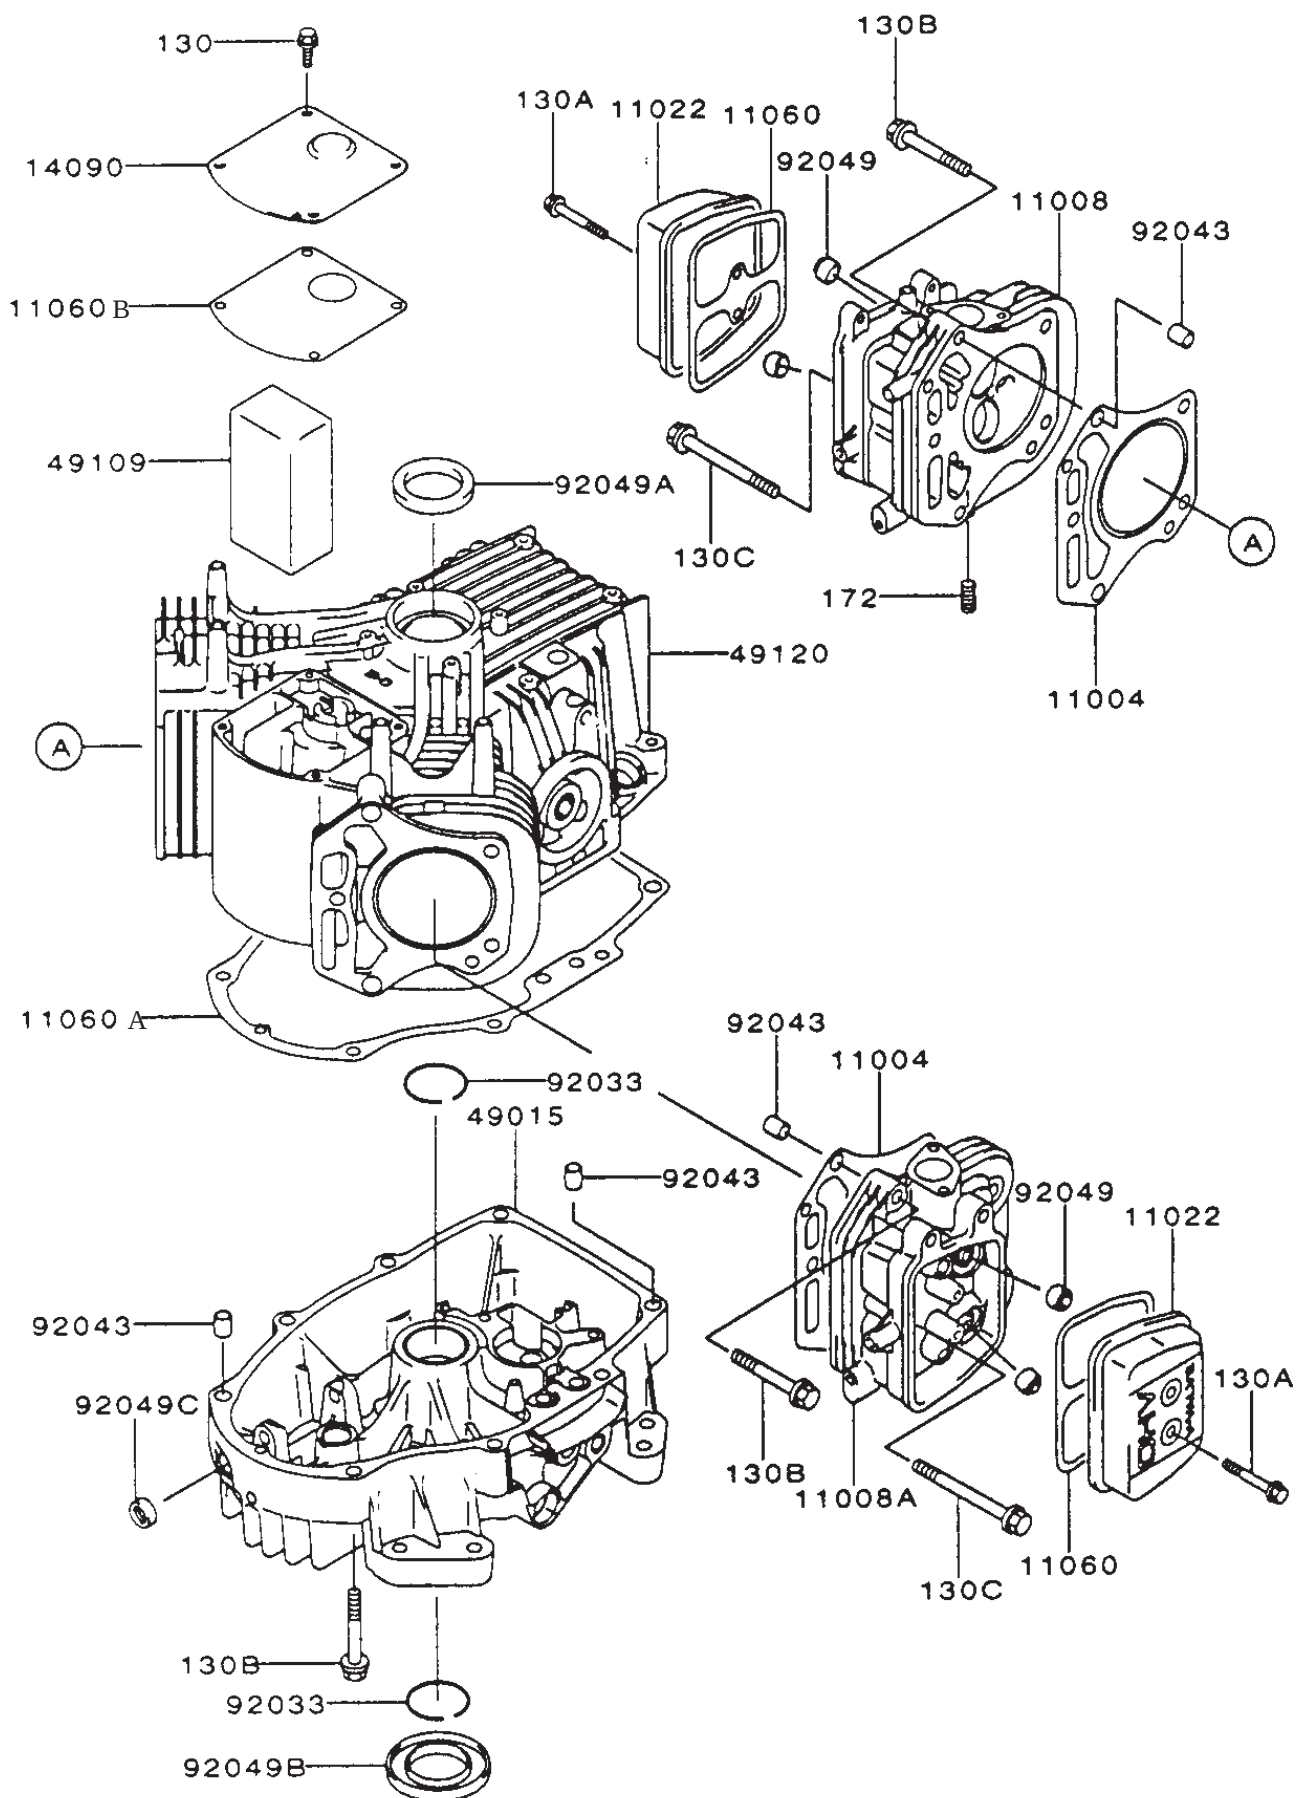


Cylinder / Crankcase Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11004	11004-7001	2	Gasket-Head				
11008	11008-7001	1	Head-Comp-Cylinder No. 1				
11008A	11008-7002	1	Head-Comp-Cylinder No. 2				
11022	11022-7001	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11060A	11060-7008	1	Gasket, Crankcase Cover				
11060B	11060-7015	1	Gasket, Breather				
14090	14090-7001	1	Cover, Breather				
49015	49015-6215	1	Cover-Crankcase				
49109	49109-7002	1	Element-Breather				
49120	49120-6119	1	Crankcase-Comp				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7002	1	Seal-Oil				
92049B	92049-7004	1	Seal-Oil				
92049C	92049-7005	1	Seal-Oil				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				

Obtain parts from your local Kawasaki dealer.

Valve / Camshaft Assembly Kawasaki FH500V-AS29

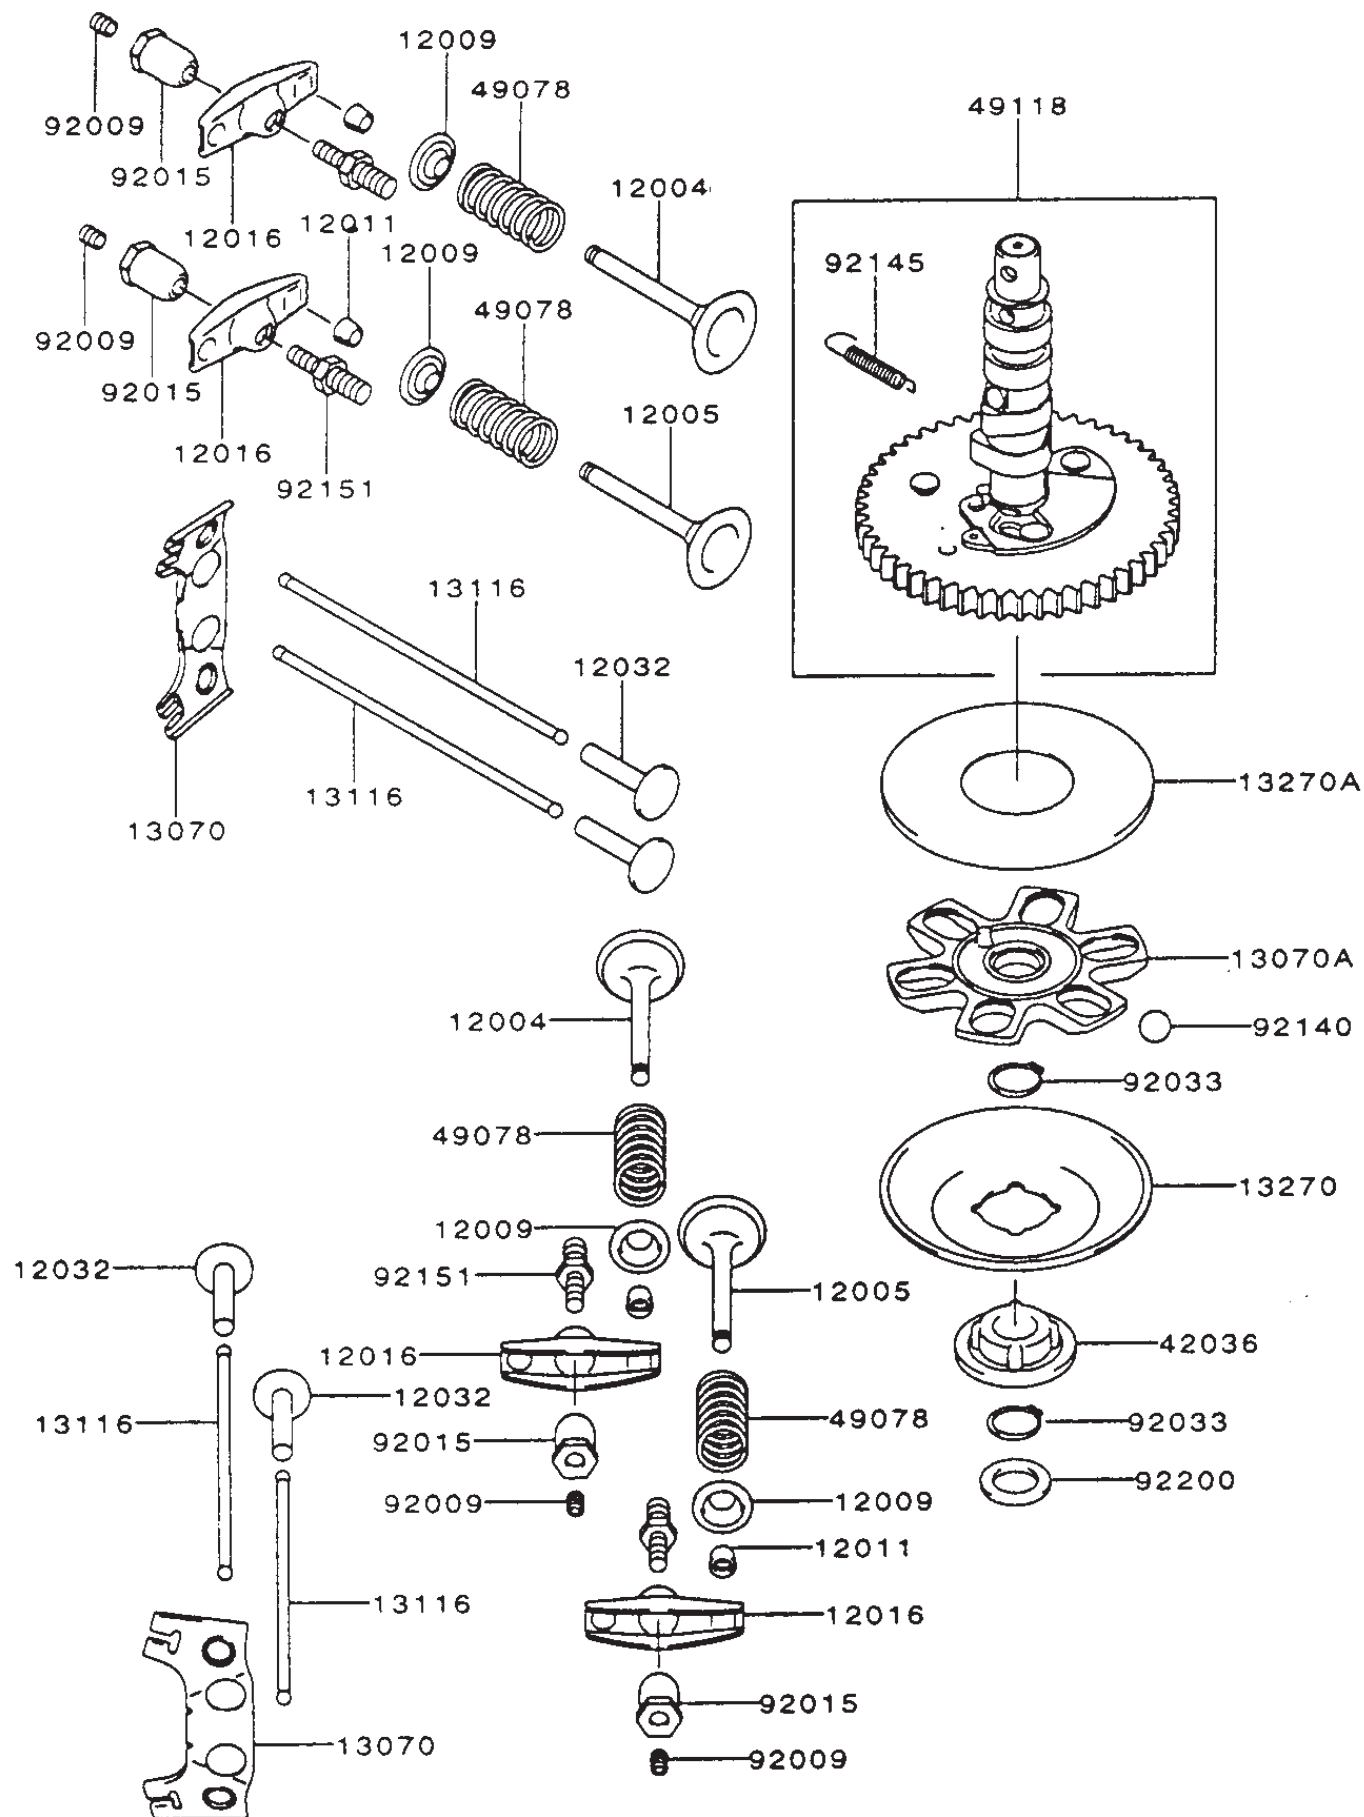


Valve / Camshaft Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
12004	12004-7001	2	Valve-Intake				
12005	12005-7001	2	Valve-Exhaust				
12009	12009-7001	4	Retainer-Valve Spring				
12011	12011-2056	8	Collet				
12016	12016-7001	4	Arm-Rocker				
12032	12032-7001	4	Tappet				
13070	13070-7001	2	Guide				
13070A	13070-7002	1	Guide				
13116	13116-2057	4	Rod-Push				
13270	13270-7002	1	Plate				
13270A	13270-7003	1	Plate				
42036	42036-7001	1	Sleeve				
49078	49078-7001	4	Spring-Engine Valve				
49118	49118-7002	1	Camshaft-Comp				
92009	92009-2341	4	Screw				
92015	92015-2253	4	Nut				
92033	92033-7001	2	Ring-Snap				
92140	92140-7002	6	Ball				
92145	92145-7001	1	Spring				
92151	92151-7001	4	Bolt				
92200	92200-7001	1	Washer				

Obtain parts from your local Kawasaki dealer.

Description	

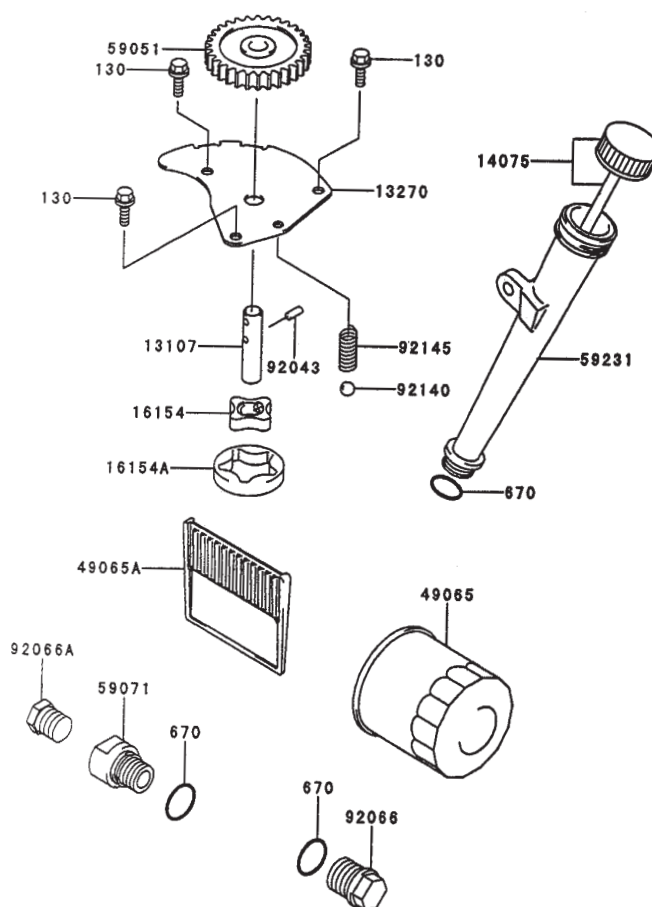


Lubrication Equipment Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
13107	13107-2099	1	Shaft, Oil Pump
13270	13270-7004	1	Plate
14075	14075-7001	1	Cap-Assy
16154	16154-2053	1	Rotor-Pump, Out
16154A	16154-2054	1	Rotor-Pump, Out
49065	49065-2078	1	Filter-Oil
49065A	49065-7001	1	Filter-Oil
59051	59051-7004	1	Gear-Spur
59071	59071-7004	1	Joint
59231	59231-7001	1	Filler
92043	92043-7003	1	Pin
92066	92066-7003	1	Plug
92066A	92066-7006	1	Plug
92140	92140-7003	1	Ball
92145	92145-7002	1	Spring
130	130B0612	3	Bolt-Flanged
670	670D2016	3	O-Ring

Obtain parts from your local Kawasaki dealer.

Cooling Equipment Assembly Kawasaki FH500V-AS29

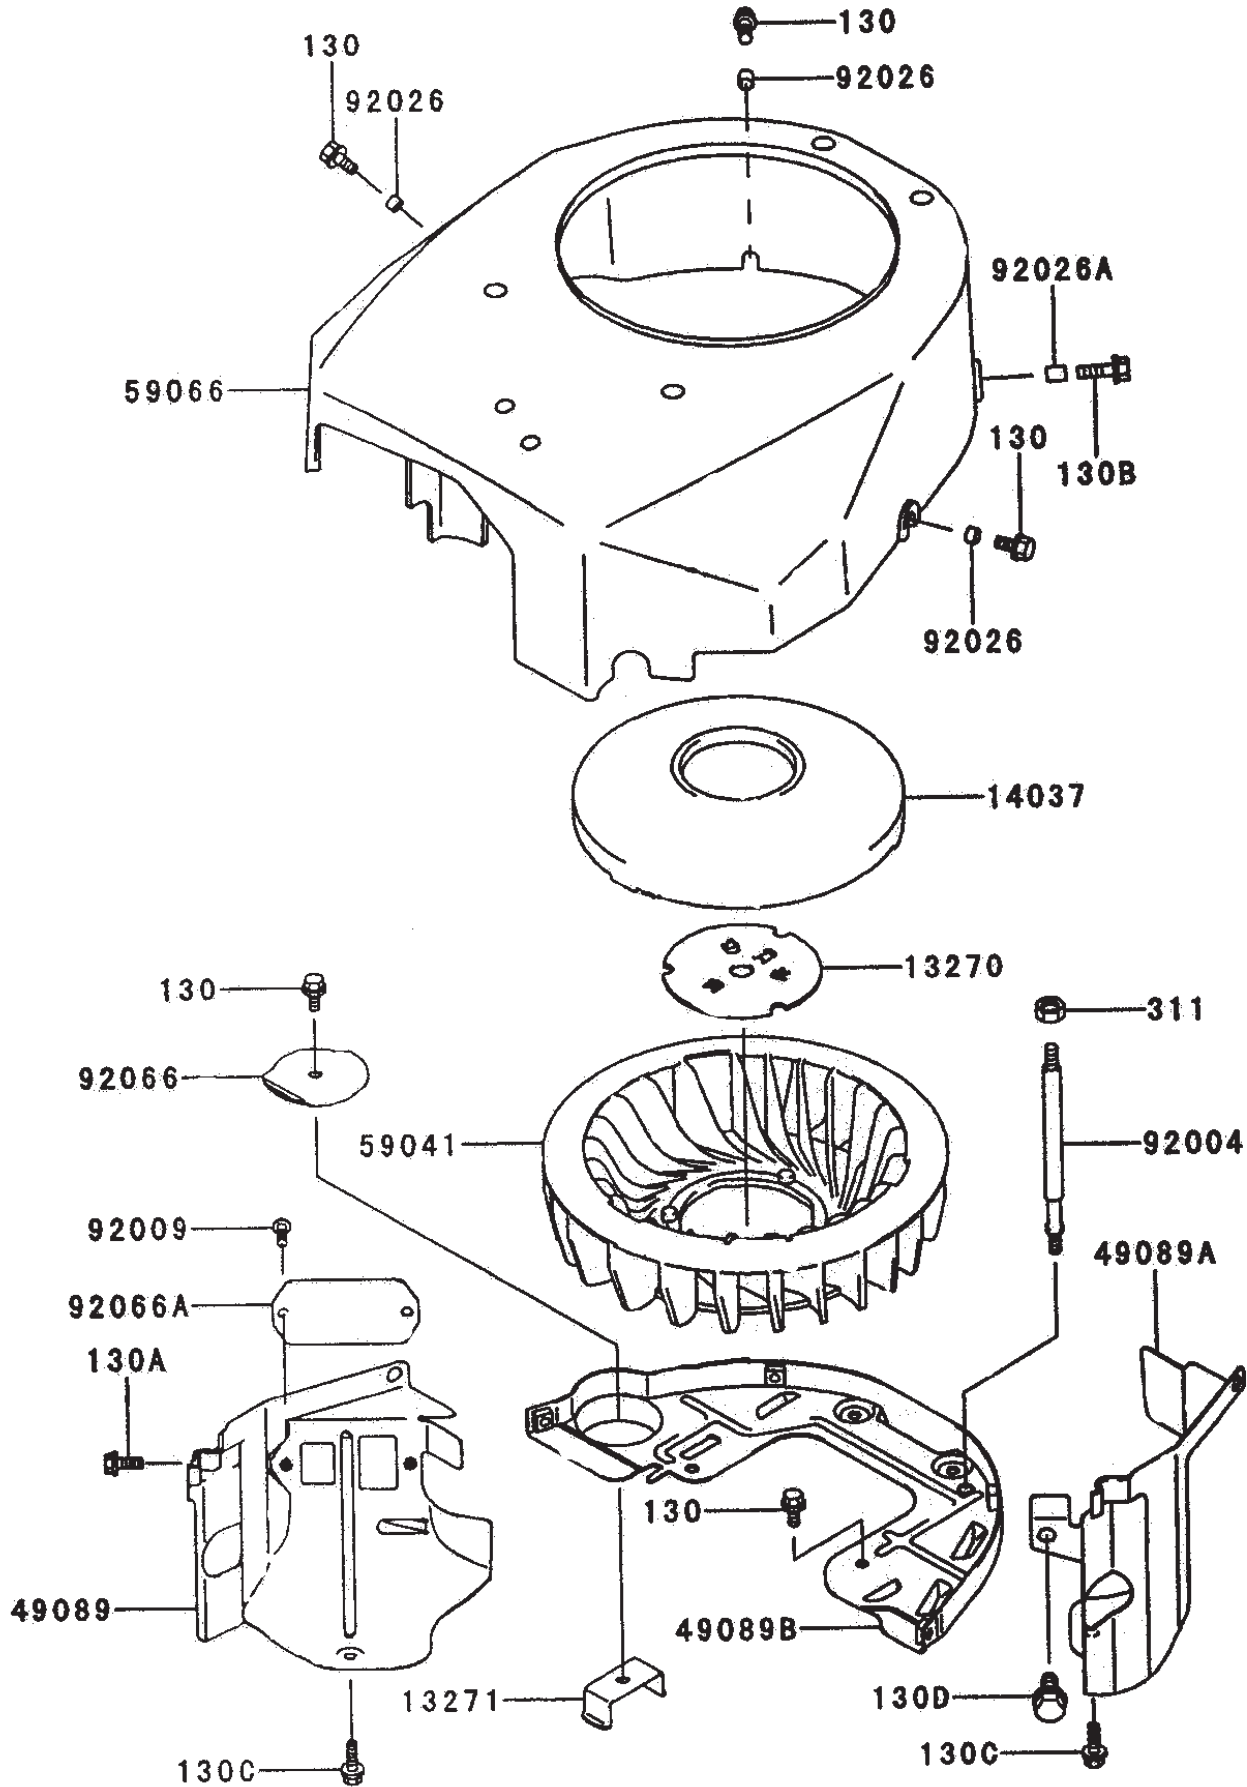

Cooling Equipment Assembly (Continued)


Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
130	130B0612	6	Bolt-Flanged				
130A	130B0616	2	Bolt-Flanged				
130B	130B0620	1	Bolt-Flanged				
130C	130B0625	2	Bolt-Flanged				
130D	130B0816	1	Bolt-Flanged				
13270	13270-7007	1	Plate				
13271	13271-7002	1	Plate				
14037	14037-7002	1	Screen				
311	311B0600	2	Nut-Hex				
49089	49089-7001	1	Shroud-Engine				
49089A	49089-7002	1	Shroud-Engine				
49089B	49089-7003	1	Shroud-Engine				
59041	59041-7001	1	Fan				
59066	59066-7002	1	Housing-Fan				
92004	92004-7006	2	Stud				
92009	92009-2308	2	Screw				
92026	92026-7001	3	Spacer, 6.2x7.9x5				
92026A	92026-7003	1	Spacer, 6.5x7.9x10.5				
92066	92066-7004	1	Plug				
92066A	92066-7004	1	Plug				

Obtain parts from your local Kawasaki dealer.

Electrical Equipment Assembly

Kawasaki FH500V-AS29

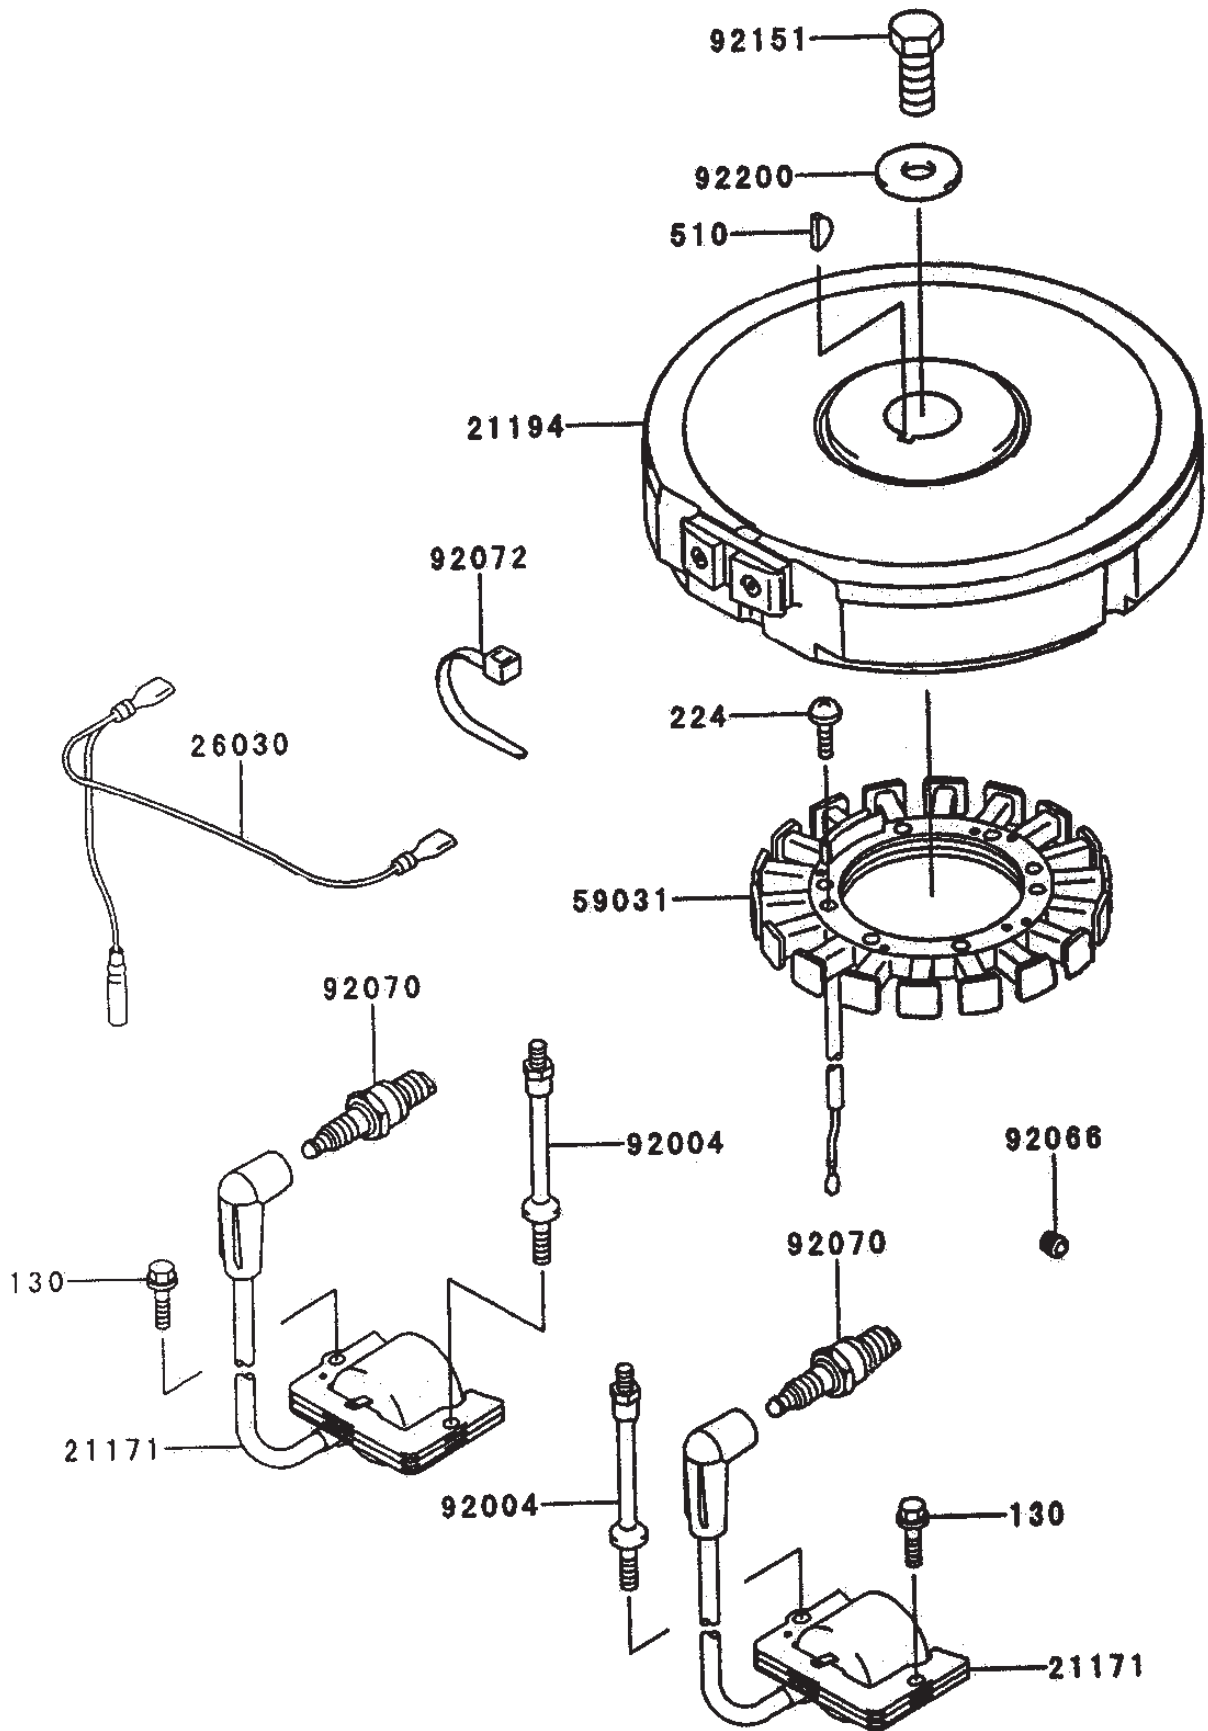


Electrical Equipment Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
21171	21171-7001	2	Coil-Assy-Ignition				
21194	21193-7001	1	Flywheel-Assy				
26030	26030-7001	1	Harness				
59031	59031-7002	1	Coil-Charging				
92004	92004-2147	2	Stud				
92066	92066-7002	1	Plug				
92070	92070-7001	2	Plug-Spark (RCJ8Y)				
92072	92072-7001	2	Band				
92151	92151-2097	1	Bolt, 12x30				
92220	92220-7002	1	Washer				
130	130B0620	2	Bolt-Flanged				
224	224B0520	4	Screw-Pan-WP-Cros				
510	510A5100	1	Key-Woodruff				

Obtain parts from your local Kawasaki dealer.

Control Equipment Assembly
Kawasaki FH500V-AS29

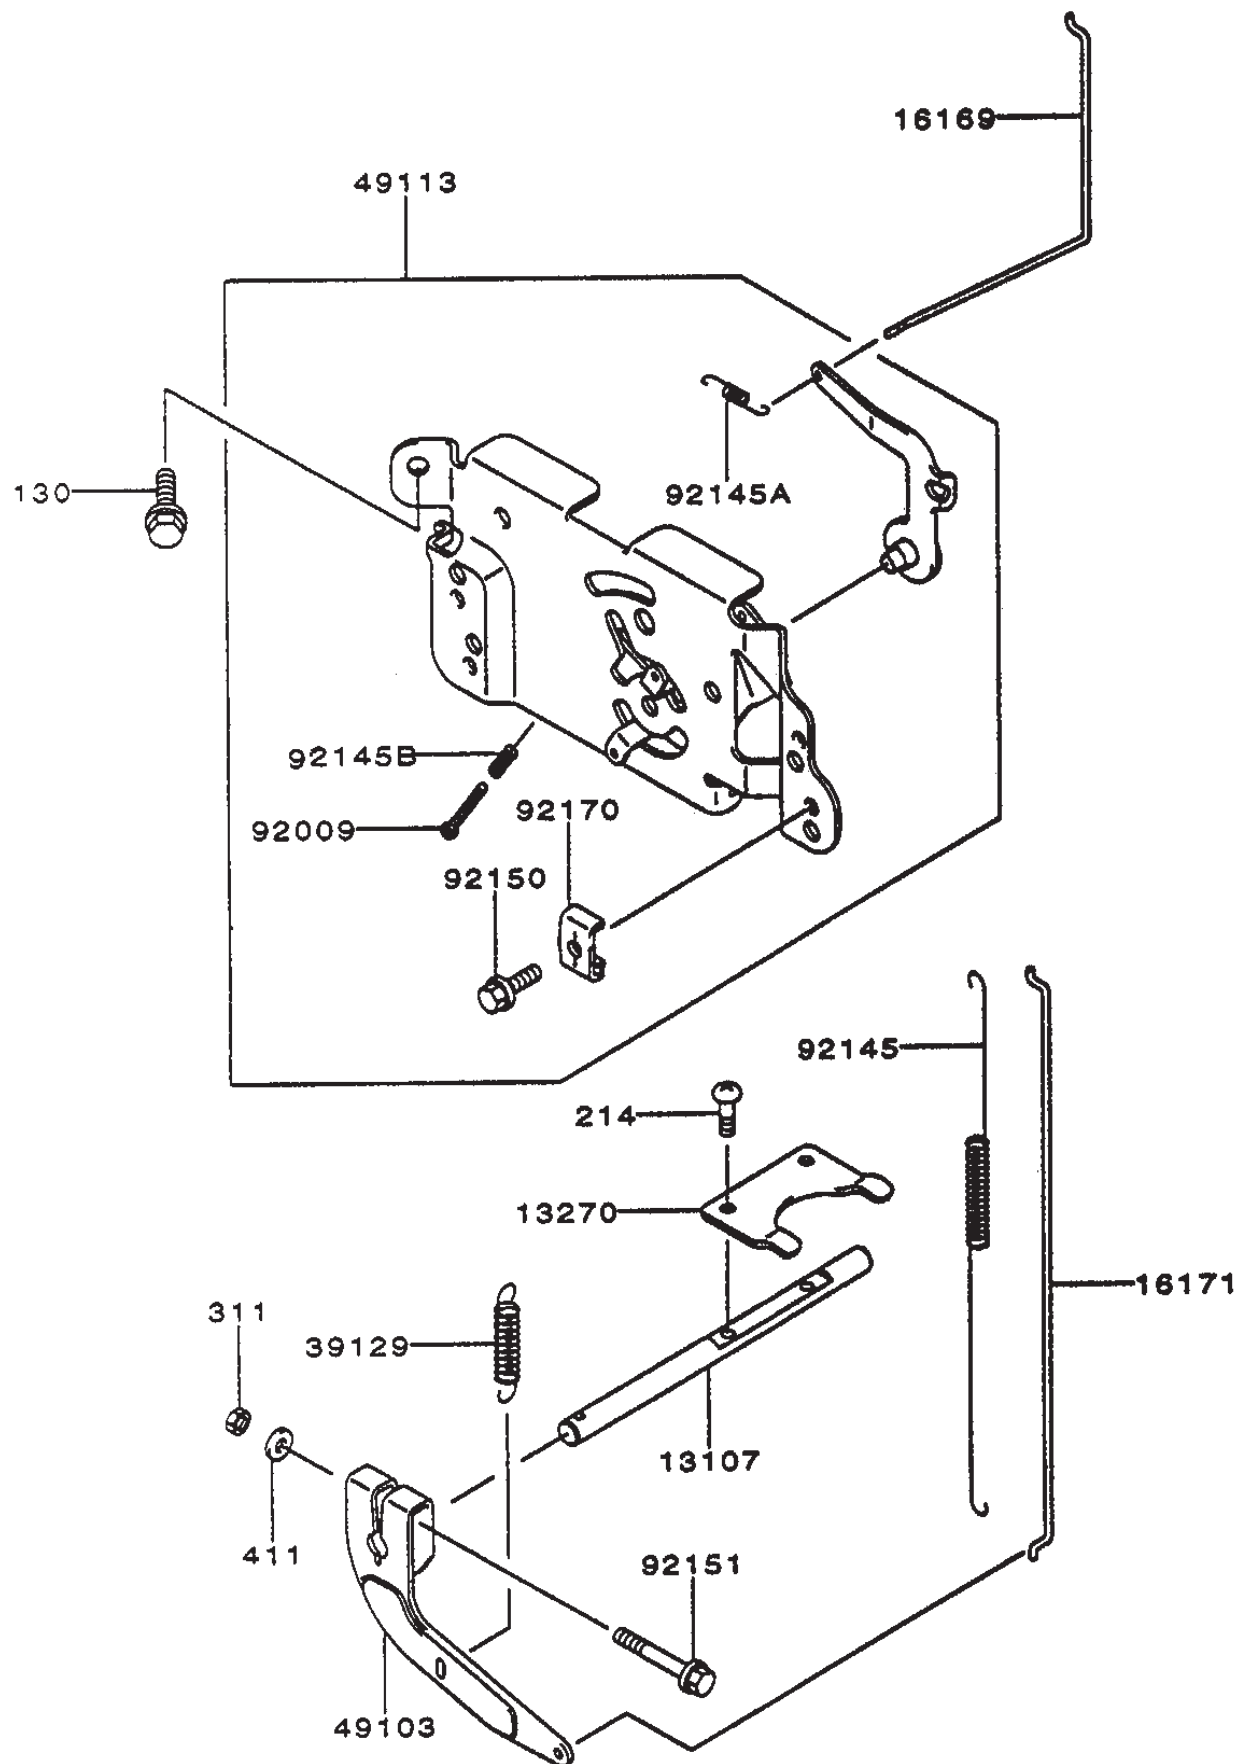


Control Equipment Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-7002	1	Shaft				
13270	13270-7006	1	Plate				
16169	16169-7001	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7001	1	Arm-Governor				
49113	49113-7001	1	Panel-Comp-Control				
92009	92009-7002	1	Screw, 4x30				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	1	Spring				
92150	92150-2182	1	Bolt, 5x18				
92151	92151-7006	1	Bolt, 6x30				
92170	92170-7001	1	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan				
311	311B0600	1	Nut-Hex				
411	411B0600	1	Washer-Plain				

Obtain parts from your local Kawasaki dealer.

Carburetor Assembly Kawasaki FH500V-AS29

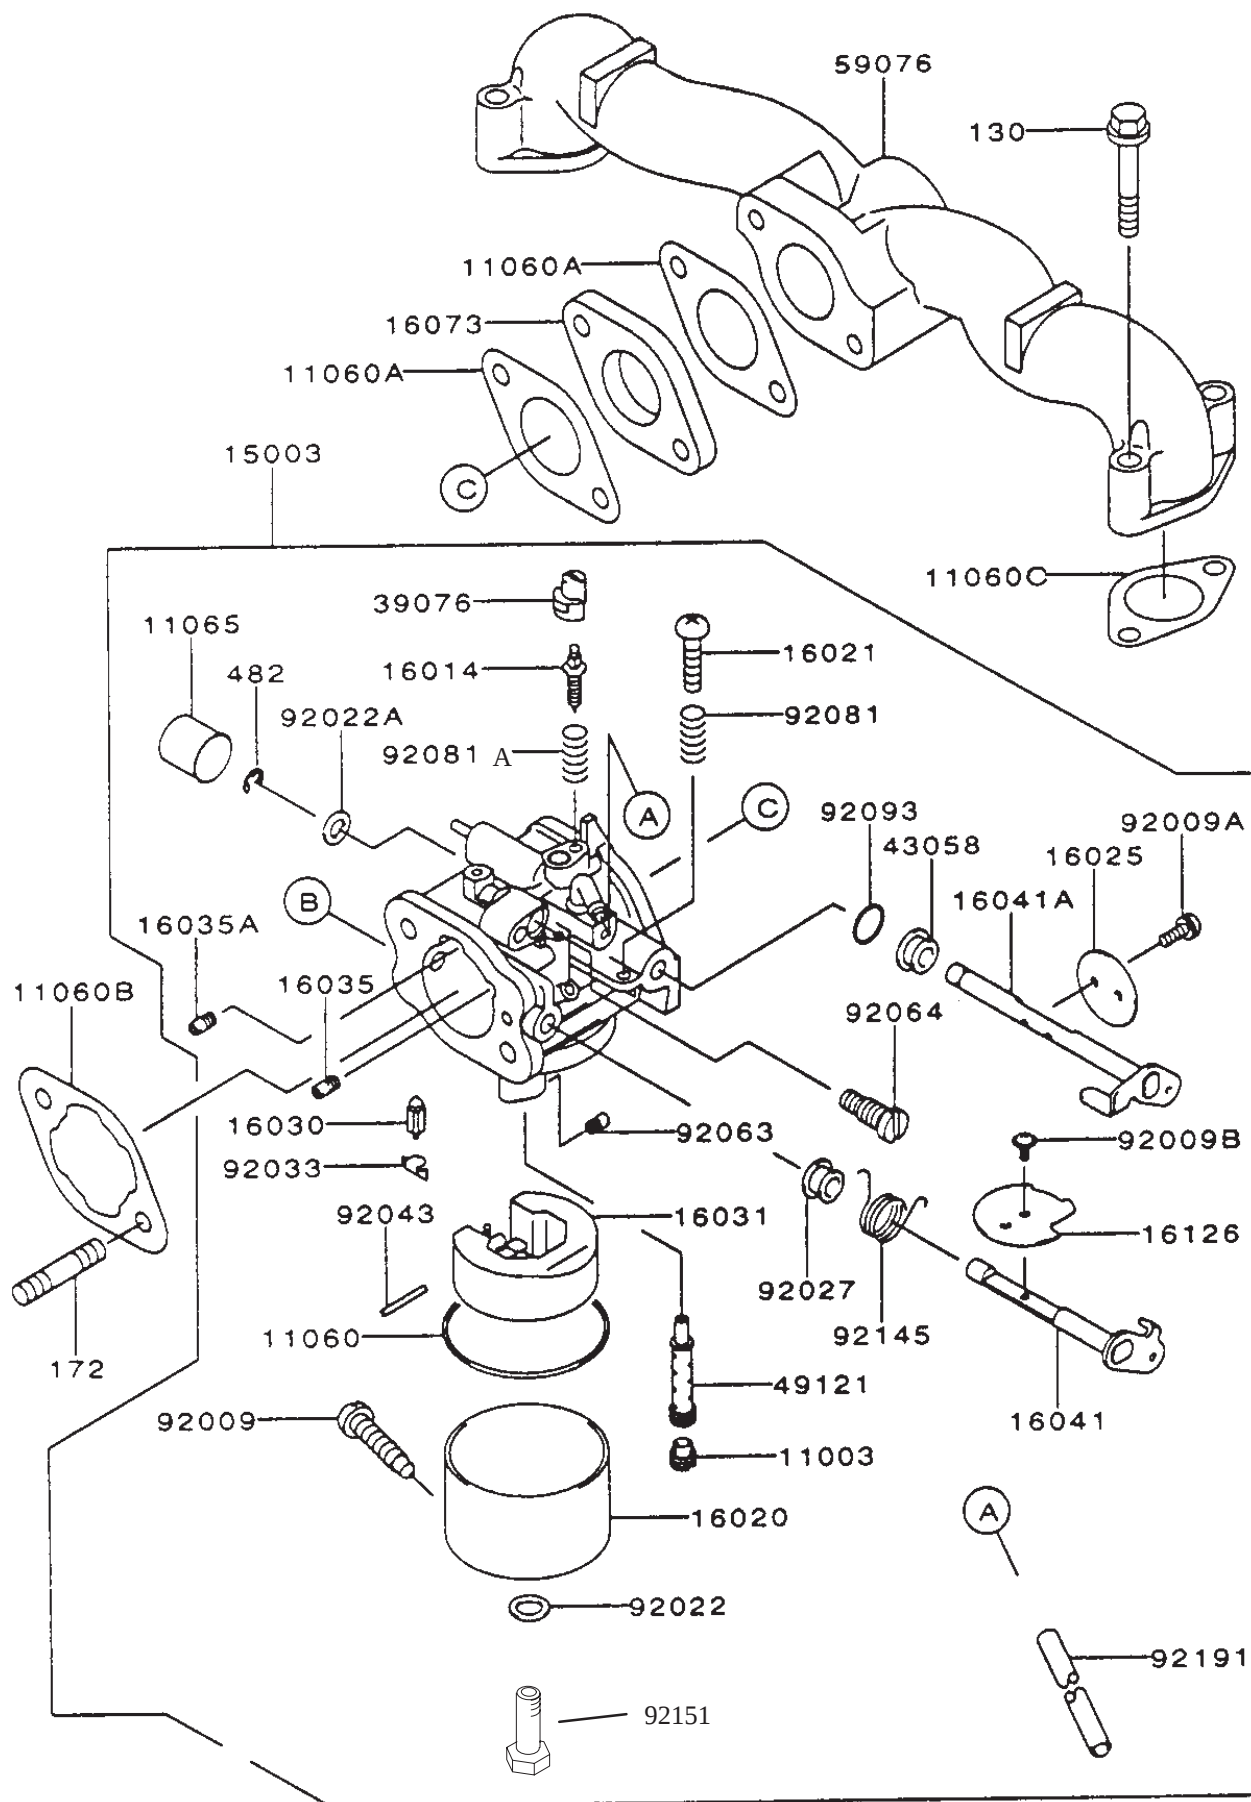


Carburetor Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve				
11060	11060-2406	1	Gasket				
11060A	11060-7003	2	Gasket, Insulator				
11060B	11060-7004	1	Gasket, Air Filter				
11060C	11060-7005	2	Gasket				
11065	11065-2061	1	Cap				
15003	15003-2698	1	Carburetor-Assy				
16014	16014-2080	1	Screw-Pilot Air				
16020	16020-2141	1	Chamber-Float				
16021	16021-2060	1	Screw-Throttlestop				
16025	16025-2193	1	Valve-Throttle, #130				
16030	16030-2067	1	Valve-Float				
16031	16031-2066	1	Float				
16035	16035-2060	1	Jet-Air, #1.7				
16035A	16035-2061	1	Jet-Air, #1.2				
16041	16041-2252	1	Shaft-Carburetor, Choke				
16041A	16041-2253	1	Shaft-Carburetor Throttle				
16073	16073-7001	1	Insulator				
16126	16126-2219	1	Valve				
39076	39076-2053	1	Limiter				
43058	43058-3716	1	Ring				
49121	49121-2222	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2015	1	Screw				
92009A	92009-2024	2	Screw				
92009B	92009-2081	1	Screw				
92022	92022-2231	1	Washer				
92022A	92022-2239	1	Washer				
92027	92027-2025	1	Collar				
92033	92033-2067	1	Ring-Snap				
92043	92043-2226	1	Pin				
92063	92063-2358	1	Jet-Main				
92064	92064-2125	1	Jet-Pilot				
92081	92081-2009	2	Spring				
92081A	92081-2256	1	Spring				
92093	92093-2002	1	Seal				
92145	92145-2061	1	Spring				
92151	92151-2092	1	Bolt				
92191	92191-7008	1	Tube				
130	130B0635	4	Bolt-Flanged				
172	172G0685	2	Bolt-Stud				
482	482L4000	1	Circlip-Type-E				

Obtain parts from your local Kawasaki dealer.

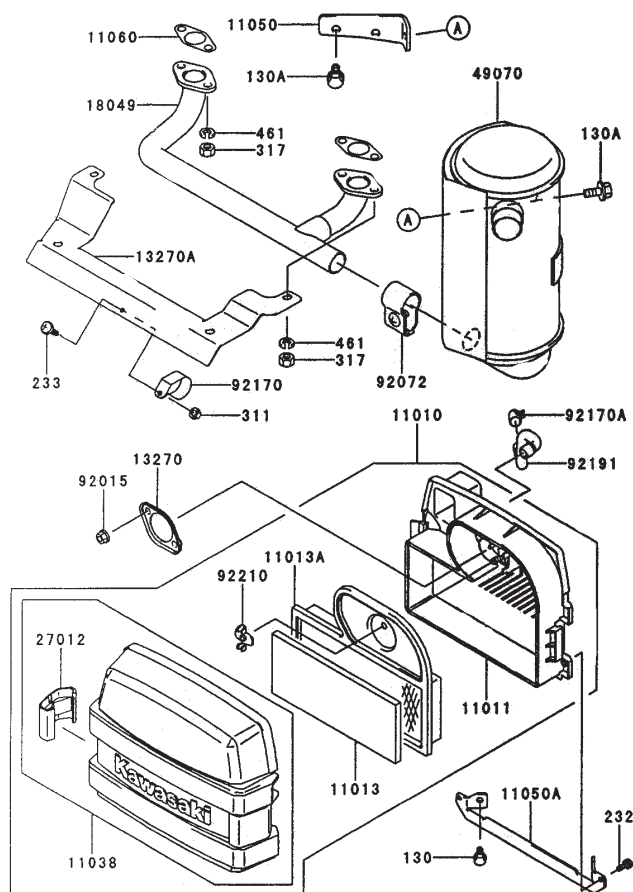


Air Filter / Muffler Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11011	11011-7001	1	Case-Air Filter
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11050	11050-7004	1	Bracket
11050A	11050-7006	1	Bracket
11060	11060-7006	2	Gasket, Muffler
13270	13270-7001	1	Plate
13270A	13270-7008	1	Plate
18049	18049-7001	1	Pipe-Exhaust
27012	27012-7001	2	Hook, Air Filter
49070	49070-7002	1	Muffler-Comp
92072	92072-7002	1	Band
92015	92015-1193	2	Nut
92170	92170-7002	1	Clamp
92170A	92170-7003	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
130A	130B0816	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS
233	233B0416	1	Screw-Pan WP
311	311B0400	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description
317	317R0800	4	Nut-Hex-Small
461	461F0800	4	Washer-Spring


Obtain parts from your local Kawasaki dealer.

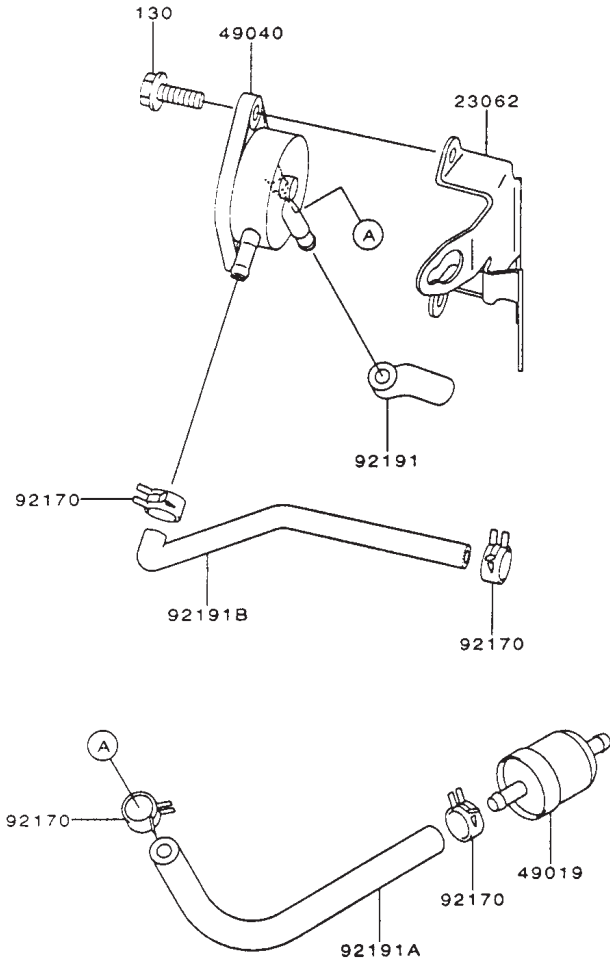

Fuel Tank / Fuel Valve Assembly
Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23062	23062-7001-9H	1	Bracket-Comp				
49019	49019-7001	1	Filter-Fuel				
49040	49040-2075	1	Pump-Fuel				
92170	92170-2088	4	Clamp				
92191	92191-7002	1	Tube				
92191A	92191-7003	1	Tube,6.35x12.7x160				
92191B	92191-7004	1	Tube				
130	130B0620	2	Bolt-Flanged				

Obtain parts from your local Kawasaki dealer.

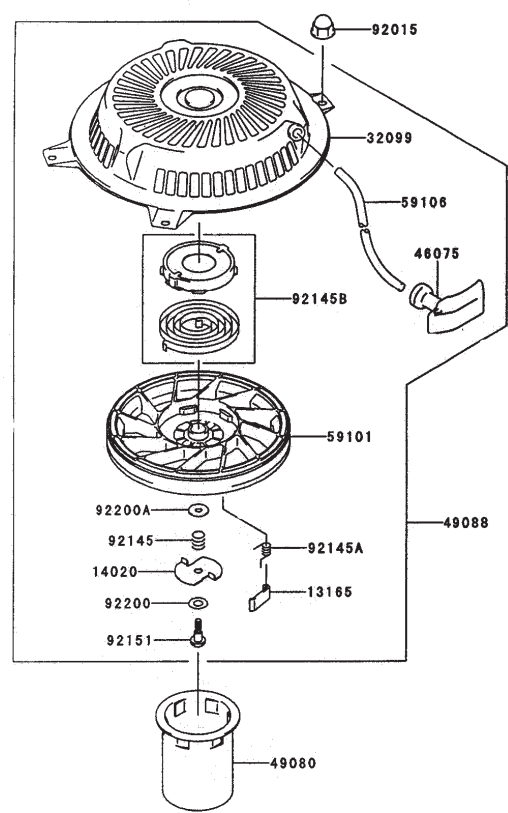

Starter Assembly **Kawasaki FH500V-AS29**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13165	13165-700	2	Pawl, Recoil Starter				
14020	14020-7001	1	Retainer				
32099	32099-7001	1	Case, Recoil Starter				
46075	46075-7001	1	Grip-Recoil Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7001	1	Starter-Recoil				
59101	59101-7001	1	Reel, Recoil Starter				
59106	59106-7001	1	Rope				
92015	92015-1170	4	Nut				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				

Obtain parts from your local Kawasaki dealer.

Maintenance Record

[illegible]

