



Mid–Size Mower

ProLine Pistol Grip Gear 15 HP with 36in Side–Discharge Mower

Model No. 30430—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Engine and Clutch Assembly	3	Cylinder Head, Valves And Breather Assembly	
Fuel Tank Assembly	4	Kohler Model CV15T–41604	19
Lower Control Assembly	5	Ignition and Electrical Assembly	
Transmission Drive Assembly	6	Kohler Model CV15T–41604	20
Wheel Drive and Brake Assembly	7	Blower Housing And Baffles Assembly	
Handle Assembly	8	Kohler Model CV15T–41604	21
Control Panel Assembly	9	Starter Assembly	
Carrier Frame Assembly	10	Kohler Model CV15T–41604	22
Spindle, Pulley and Belt Assembly	11	Fuel System Assembly	
Spindle Assembly No. 106–0785	12	Kohler Model CV15T–41604	23
Spindle Assembly No. 106–0787	13	Engine Controls Assembly	
Deck Assembly	14	Kohler Model CV15T–41604	24
Drive Belt and Tensioner Assembly	15	Air Cleaner Assembly	
Electrical Schematic	16	Kohler Model CV15T–41604	25
Crankcase Assembly		Exhaust Assembly	
Kohler Model CV15T–41604	17	Kohler Model CV15T–41604	26
Oil Pan and Lubrication Assembly			
Kohler Model CV15T–41604	18		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

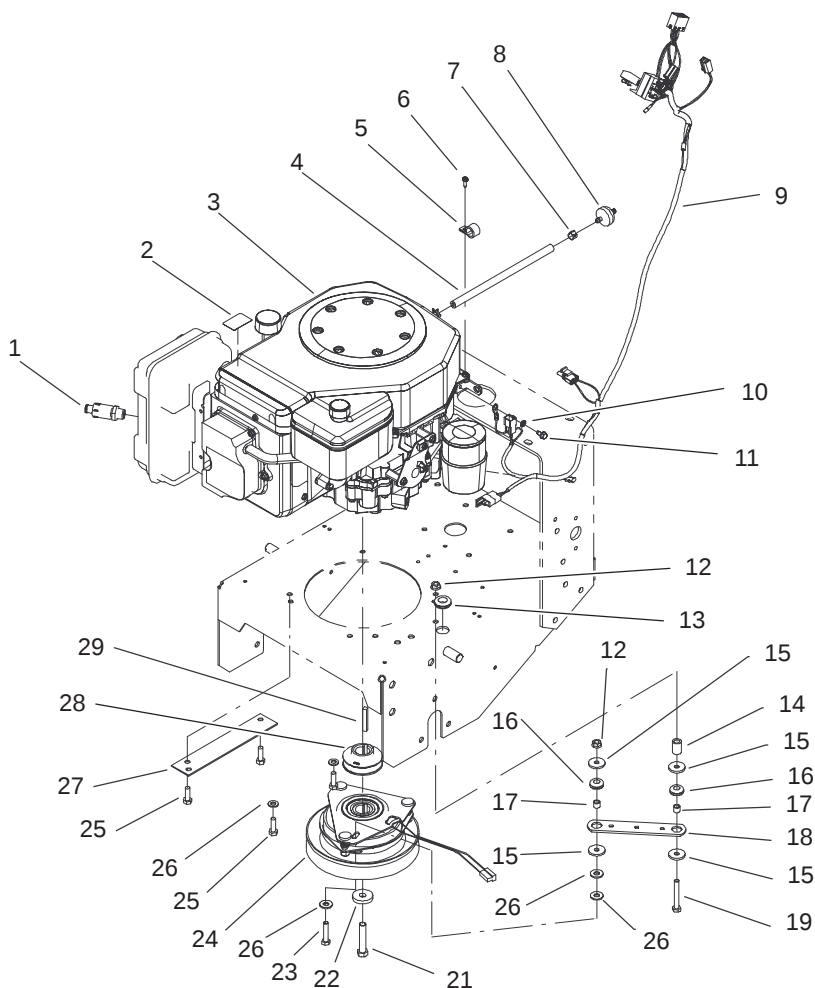


Sheet No.: 2

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-6877	1	Valve-Drain, Oil	25	33114-025	4	Screw-HH
2	106-0699	1	Decal-Warning, Hot Surfaces	26	3256-23	5	Washer-Flat
☆3		1	Engine-Kohler, Cv15t-41604	27	94-5847-01	1	Cover-Pulley
4	47-2982	1	Hose-Fuel	28	105-0827	1	Pulley-Drive
5	2412-87	1	Clamp-Cable	29	608006	1	Key-Square
6	32144-19	1	Screw-Forming, Thread	*99	103-1964	1	Hose-Drain, Oil
7	2412-98	2	Clamp				
8	56-6360	1	Filter-Fuel				
9	104-9824	1	Wire Harness				
10	3255-7	1	Washer-Lock/Ext				
11	12-3270	1	Screw				
12	32128-20	2	Nut-HF				
13	237-124	1	Grommet				
14	104-6373	1	Tube-Retainer				
15	1-613235	4	Washer				
16	1-633630	2	Grommet-Brake				
17	1-633545	2	Spacer-Grommet				
18	1-633543	1	Strap-Clutch/Brake				
19	322-11	1	Screw-HH				
21	3212-9	1	Screw-HH				
22	112843	1	Washer				
23	322-7	1	Screw-HH				
24	105-2635	1	Clutch/Brake				

☆ Not serviced separately

* Not illustrated

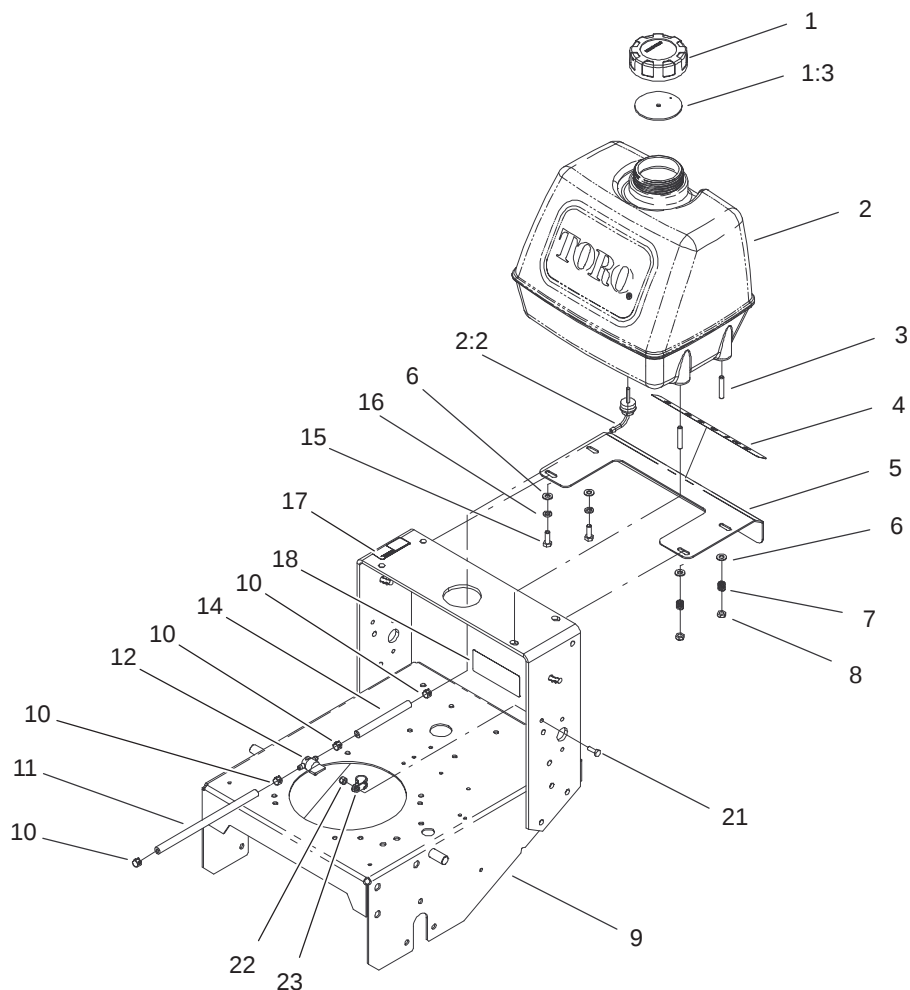


Sheet No.: 4

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
4	106-5496	1	Decal-Ground Speed
5	104-8102-01	1	Plate-Gate, Shift
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2966	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution
21	321-4	1	Screw-HH
22	3296-42	1	Nut-Lock, NI
23	2412-134	1	R-Clamp

Ref. No.	Part No.	Qty.	Description

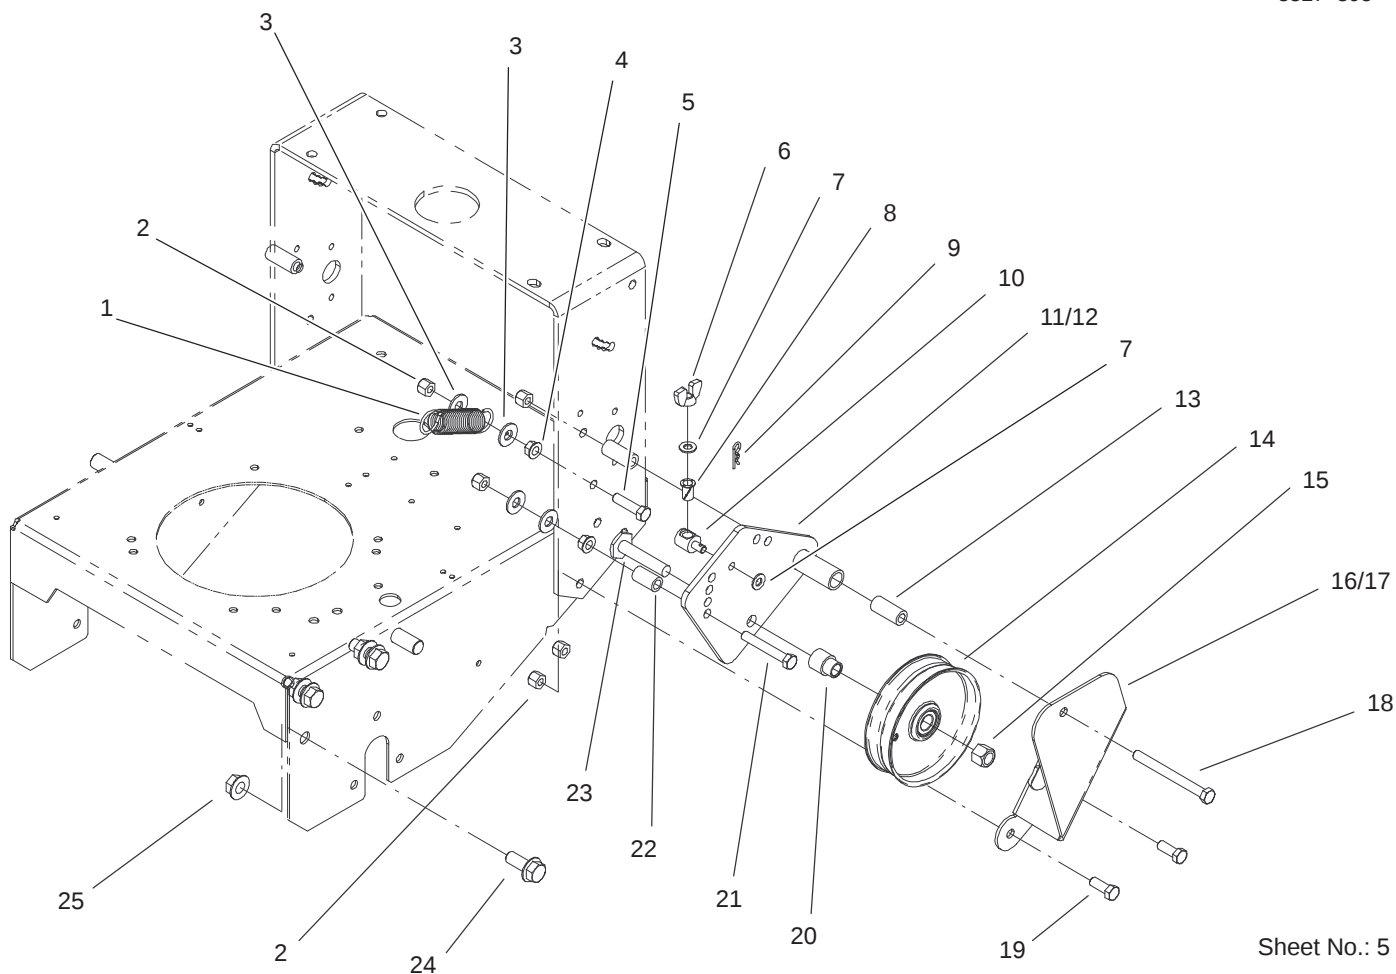


Sheet No.: 5

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	1-603402	2	Spring-Extension
2	3296-39	10	Nut-Lock, NI
3	3256-4	8	Washer-Flat
4	32128-40	4	Nut-Flange
5	323-8	2	Screw-HH
6	32103-25	2	Nut-Wing
7	3256-23	4	Washer-Flat
8	52-2890	2	Bushing-Nylon
9	3290-307	2	Pin-Hair
10	68-9690	2	Fitting-Rod
11	106-0611-01	1	LH Idler Bracket ASM
12	106-0612-01	1	RH Idler Bracket ASM
13	74-0040	4	Spacer-Pivot, Idler
14	95-2800	2	Pulley-Idler
15	3296-23	2	Nut-Lock, NI
16	67-6380-01	1	Bracket-Support, LH
17	67-6370-01	1	Bracket-Support, RH
18	323-16	2	Screw-HH
19	323-6	4	Screw-HH
20	95-2801	2	Spacer-Pulley
21	323-12	2	Screw-HH
22	106-0564	2	Spacer
23	51-4450	2	Screw-Leveler
24	3234-32	6	Screw-HHF
25	32128-23	6	Nut-HF

Ref. No.	Part No.	Qty.	Description

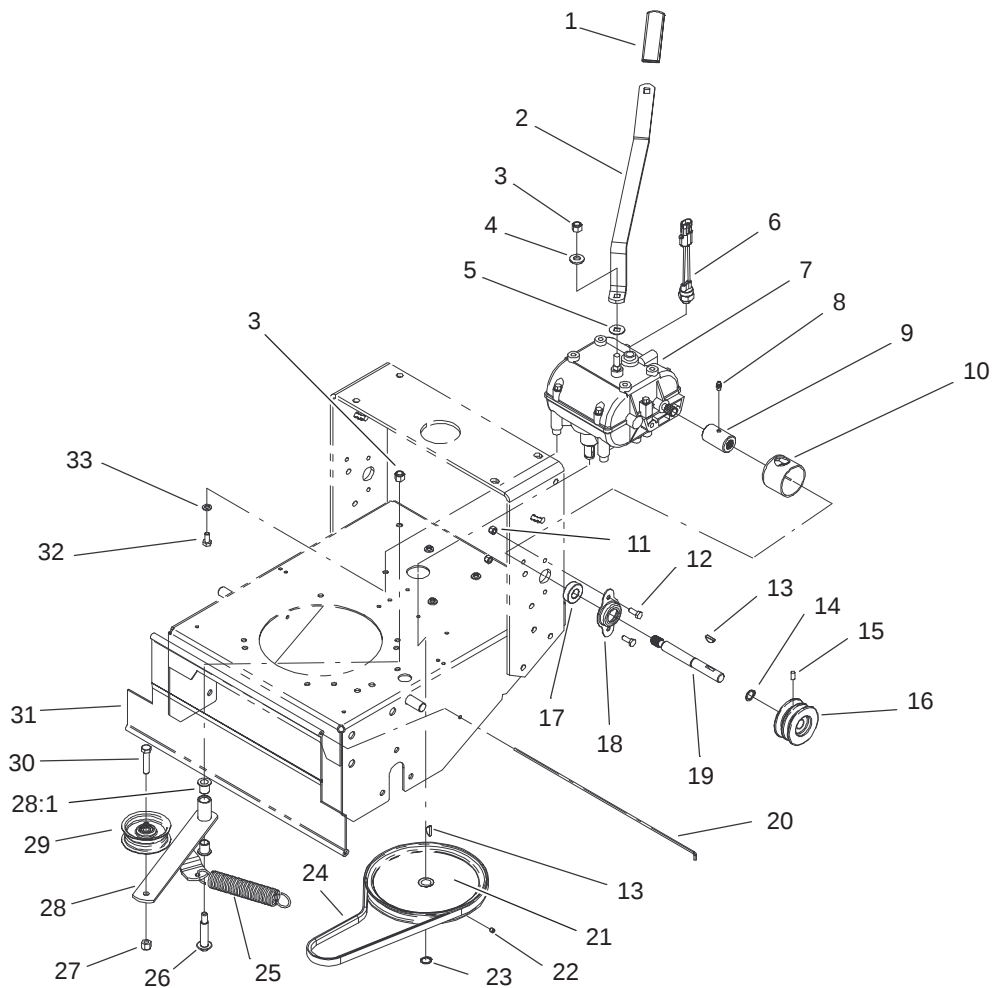


Sheet No.: 6

Transmission Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock, NI
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	72-4320	1	Switch-Ball, N.o.
7	1-323500	1	Transmission
8	302-5	2	Fitting-Grease
9	1-323680	2	Coupler
10	51-4220	2	Guard-Coupler
11	3296-42	4	Nut-Lock, NI
12	321-4	4	Screw-HH
13	3257-5	3	Key-Woodruff
14	32151-62	2	Ring-Retaining
15	3245-9	2	Screw-Set
16	105-2698	2	Pulley-Transmission
17	1-323252	2	Bearing-Shaft
18	1-323254	2	Flange-Output
19	104-1102	2	Shaft-Output
20	95-1529	1	Rod-Shield
21	105-5646	1	Pulley-Driven
22	3245-1	1	Screw-Set, HSH
23	32120-64	1	Ring-Snap, External
24	105-5668	1	V-Belt
25	68-2190	1	Spring
26	27-6230	1	Bolt-Wheel


Ref. No.	Part No.	Qty.	Description
27	3296-39	1	Nut-Lock, NI
28	16-7509	1	Lever-Idler
28:1	256-155	2	Bushing-Flange
29	62-4540	1	Pulley
30	323-9	1	Screw-HH
31	95-1526	1	Shield-Trailing
32	322-2	4	Screw-HH
33	3253-4	4	Washer-Lock

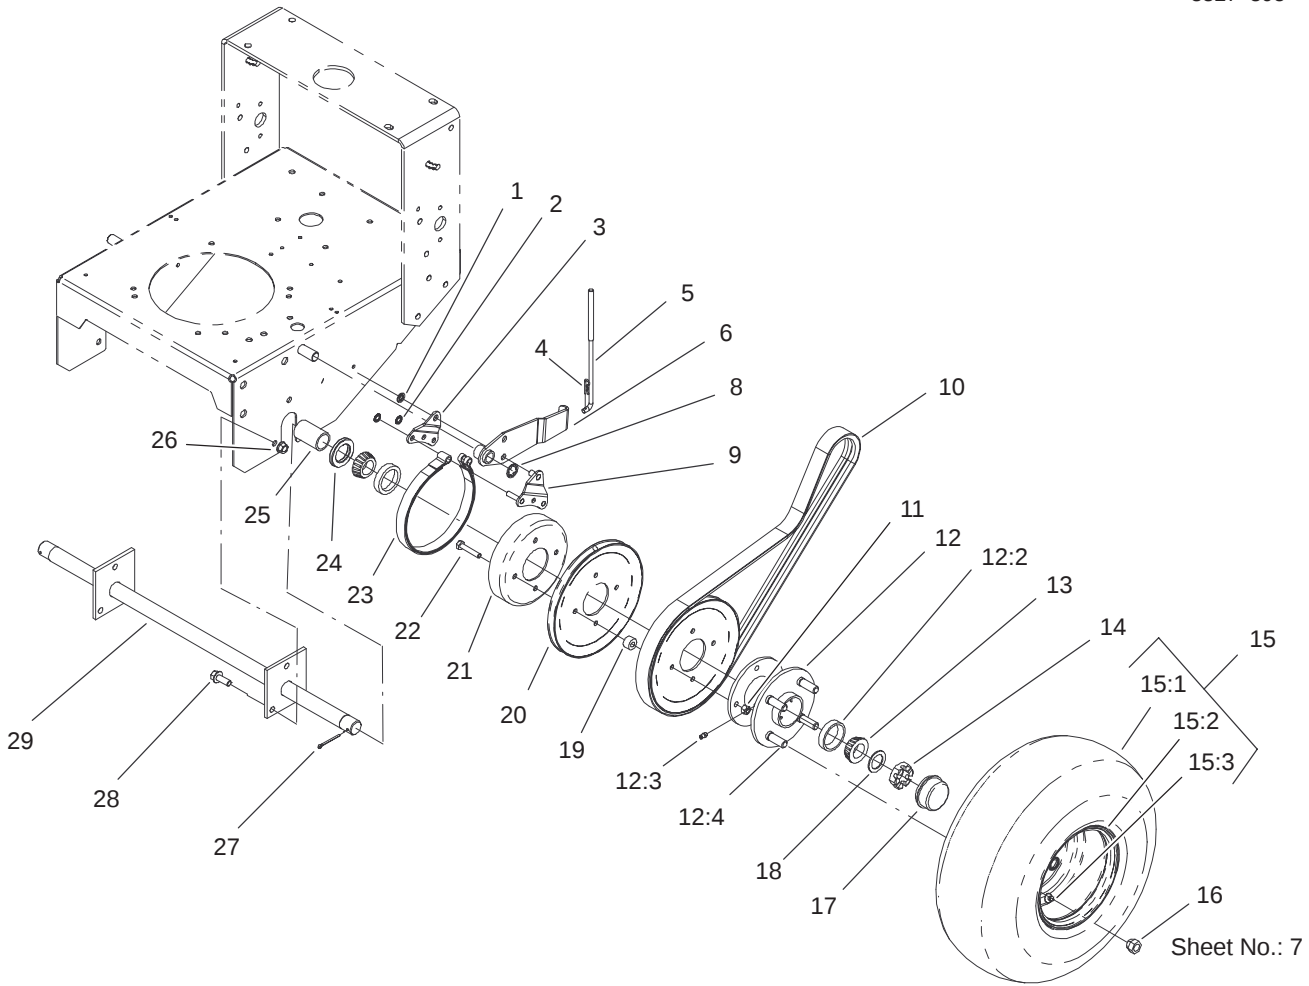

Wheel Drive and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-56	2	Ring-Retaining, External
2	32151-72	4	Ring-Retaining
3	105-4651-01	2	Plate-Link, Brake
4	3290-307	2	Pin-Hair
5	51-4580	2	Rod-Brake
6	106-5537-01	2	Brake Arm ASM
8	32151-40	2	Ring-Retaining
9	105-4652-01	2	Brake Link ASM
10	51-4290	2	V-Belt
11	3296-29	8	Nut-Lock, NI
12	1-413333	2	Hub-Wheel ASM
12:2	254-72	2	Bearing-Cup, Tapered
12:3	302-19	1	Fitting-Grease
12:4	1-633926	4	Stud-Wheel
13	254-94	4	Bearing-Cone, Taper
14	1-809082	2	Nut-SHH
15	104-6321	2	Wheel And Tire ASM
15:1	104-6322	1	Tire
15:2	104-6323	1	Wheel
15:3	232-27	1	Stem-Valve
16	242-50	8	Nut-Lug
17	241-119	2	Cap-Dust
18	1-523157	2	Washer-Spacer
19	51-4170	8	Spacer-Pulley
20	51-4160-03	4	Pulley-Wheel

Ref. No.	Part No.	Qty.	Description
21	1-323261	2	Drum-Brake
22	322-8	8	Screw-HH
23	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	32128-21	6	Nut-HF
27	1-806800	2	Pin-Cotter
28	3234-11	6	Screw-HHF
29	104-1196-01	1	Axle ASM

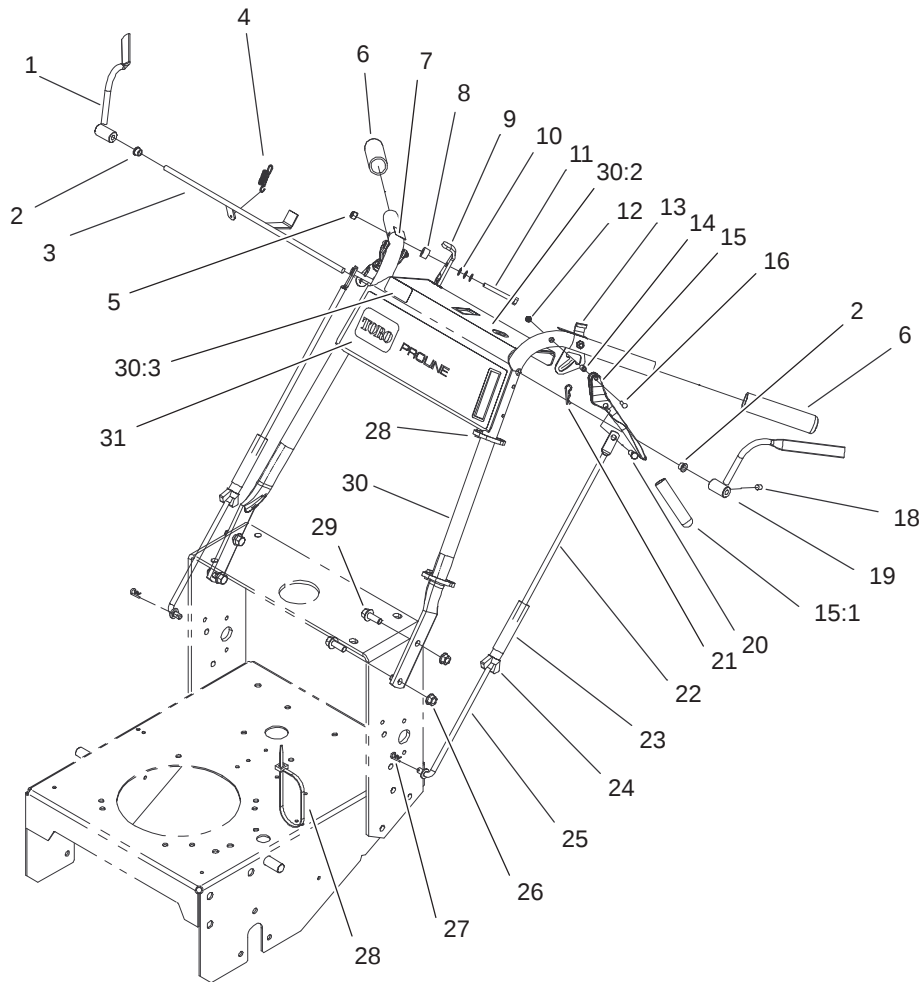


Sheet No.: 8

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	106-5486	1	RH Opc Lever ASM
2	1-303365	2	Bushing-Nylon
3	104-9803	1	Rod ASM
4	1-303363	1	Spring-Extension
5	3296-42	2	Nut-Lock, NI
6	104-9838	2	Grip-Foam
7	105-4111	2	Decal-Lock, Neutral
8	1-323549	2	Spacer
9	106-5521	1	Latch-Thumb, RH
10	1-303435	6	Washer-Spring
11	321-18	2	Screw-HH
12	1-803001	2	Nut
13	106-5520	1	Latch-Thumb, LH
14	1-806340	2	Pin-Roll
15	1-302006	2	Drive Lever ASM
15:1	1-303021	1	Grip-Lever, Drive
16	1-808250	2	Pin-Clevis
18	1-803322	2	Screw-Set
19	106-5485	1	LH Opc Lever ASM
20	1-808286	2	Pin-Clevis
21	1-806003	2	Pin-Hair
22	106-0613	2	Linkage-Drive Wheel
23	95-1504	2	Turnbuckle
24	32103-3	2	Nut-Wing
25	95-1506	2	Rod-Control, Lower
26	32128-21	4	Nut-HF


Ref. No.	Part No.	Qty.	Description
27	3290-307	2	Pin-Hair
28	3290-378	3	Tie-Cable
29	3234-11	4	Screw-HHF
30	105-3174	1	Gear/Pg Handle ASM
30:2	106-5514	1	Decal-Control Panel
30:3	98-4387	1	Decal-Protection, Ear
31	106-5501	1	Decal-Control, Throttle

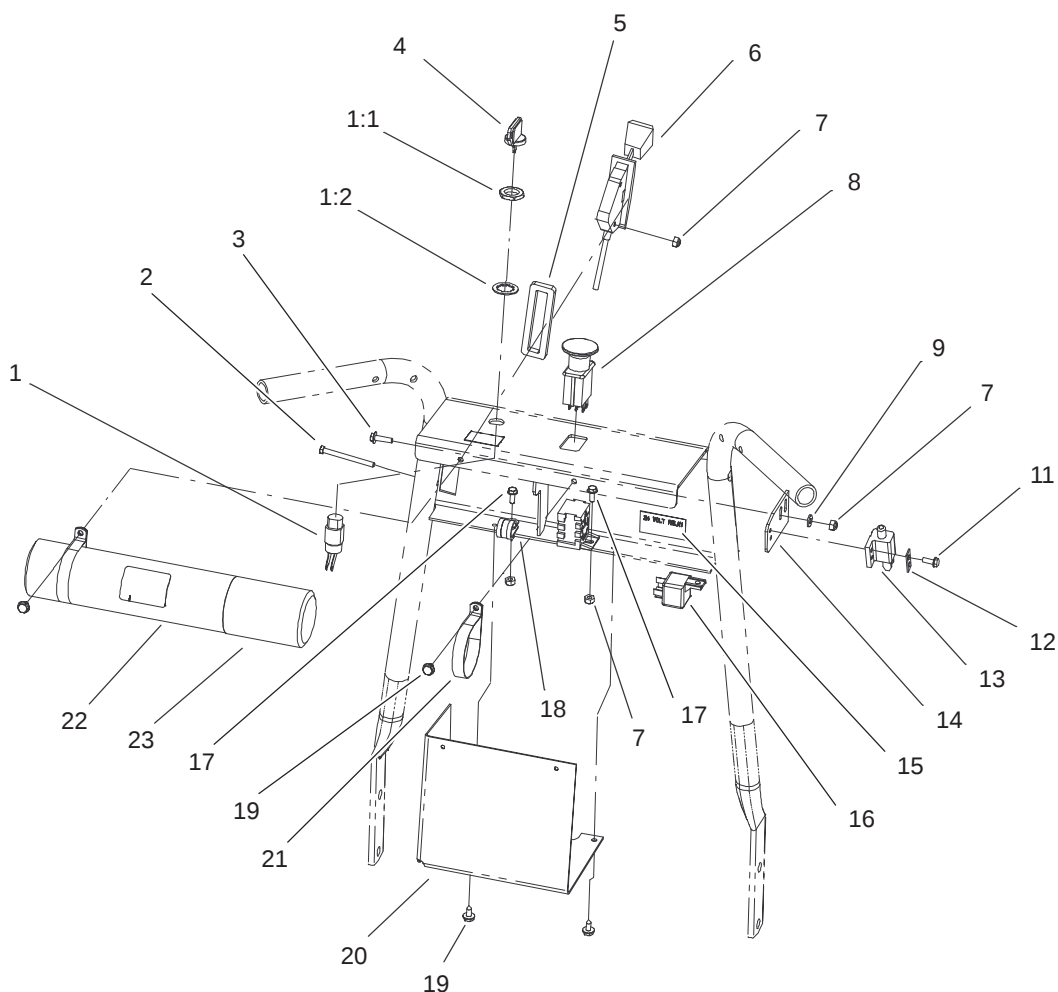

Sheet No.: 9

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	29-5560	1	Switch-On/Off
1:1	218-461	1	Nut-HH
1:2	3254-5	1	Washer-Tooth
2	32105-14	2	Screw
3	32105-13	2	Screw-SHH
4	63-8360	1	Key-Ignition
5	106-5487	1	Gasket-Throttle
6	105-4114	1	Control-Throttle
7	3296-2	6	Nut-Lock
8	95-7489	1	Switch-PTO
9	3256-14	2	Washer-Flat
11	32144-1	2	Screw-Taptite
12	82-4570	1	Plate-Switch
13	95-1653	1	Switch-Pole, Single
14	105-4137-03	1	Plate-Mounting, Switch
15	105-4146	1	Decal-Relay, 24 Volt
16	105-4145	1	Relay-Speedometer
17	3290-321	2	Screw-HWH
18	2412-134	1	R-Clamp
19	32104-76	4	Screw
20	105-4112-03	1	Bracket-Cover
21	2412-120	2	R-Clamp
22	104-7050	1	Housing-Manual
23	104-7048	1	Cap-Housing

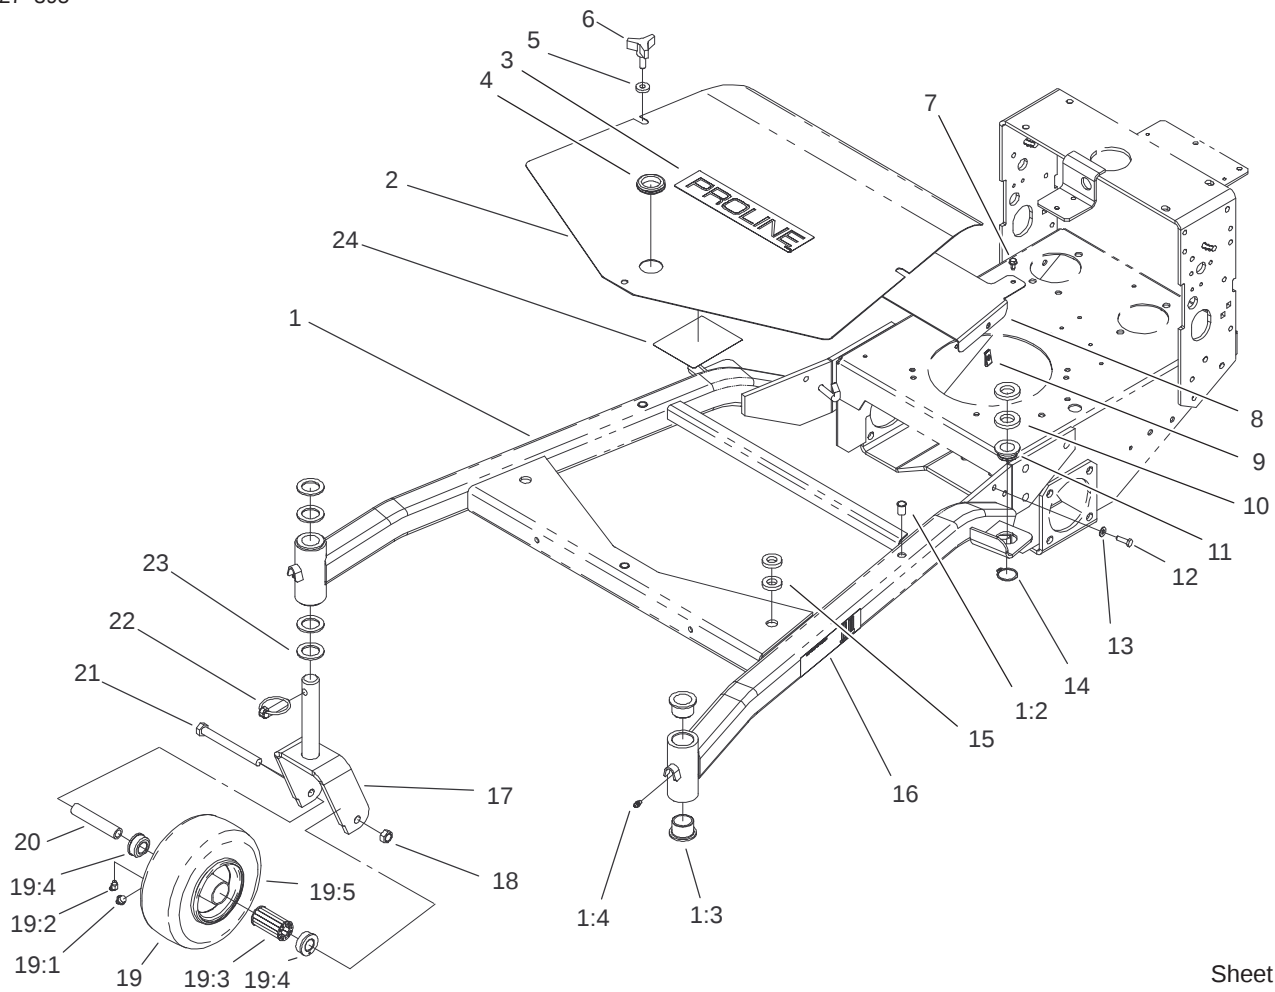


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0706	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing-Special
1:4	302-5	2	Fitting-Grease
2	105-3165-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal-Proline
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	104-8587	3	Knob
7	12-3270	2	Screw
8	106-5473-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45°
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside


Ref. No.	Part No.	Qty.	Description
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5510	1	Decal-Service, Gear Tb

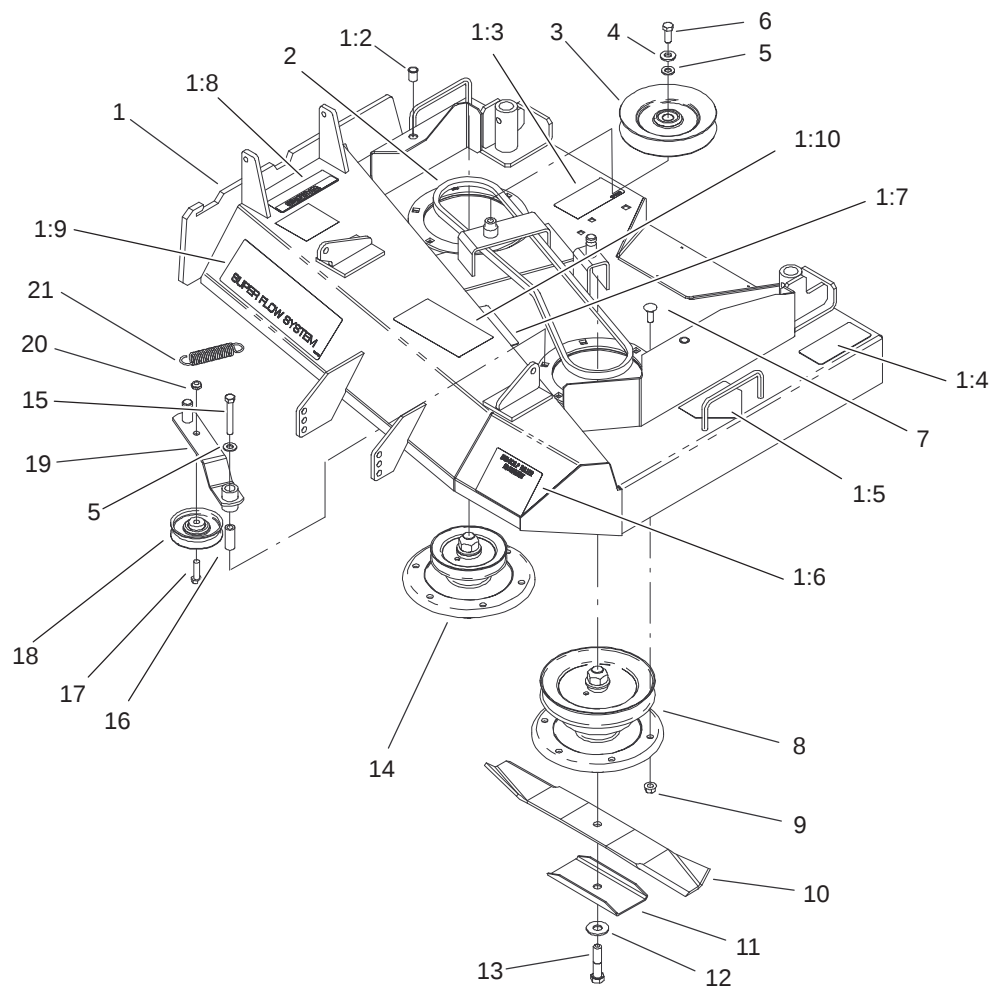

Sheet No.:3

Spindle, Pulley and Belt Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-0615	1	36" Deck ASM	18	51-3660	1	Pulley-Idler
1:2	32148-9	2	Insert-Nut	19	105-0889	1	Idler Arm ASM
1:3	104-8185	1	Decal-Belt Routing	20	3296-5	1	Nut-Lock, NI
1:4	68-8340	1	Decal-Torque	21	105-2673	1	Spring-Extension
1:5	43-8480	1	Decal-Danger				
1:6	106-5532	1	Decal-Antiscalp				
1:7	67-5360	1	Decal-Danger				
1:8	104-8569	1	Decal-Warning				
1:9	106-0703	1	Decal				
1:10	66-1340	1	Decal-Danger				
2	51-3530	1	V-Belt-Drive, Deck				
3	1-633166	1	Pulley-Idler				
4	98-5975	1	Washer-Belleville				
5	3256-24	2	Washer-Flat				
6	323-6	1	Screw-HH				
7	3231-22	11	Screw-CARR				
8	106-0785	1	Spindle Housing ASM				
9	32128-21	12	Nut-HF				
10	56-2390	2	Blade				
11	92-9820	2	Stiffener-Blade				
12	3256-6	2	Washer-Flat				
13	44-2200	2	Screw-Blade				
14	106-0787	1	Spindle Housing ASM				
15	323-12	1	Screw-HH				
16	51-3641	1	Sleeve-Pivot, Idler				
17	3211-5	1	Screw-HH				

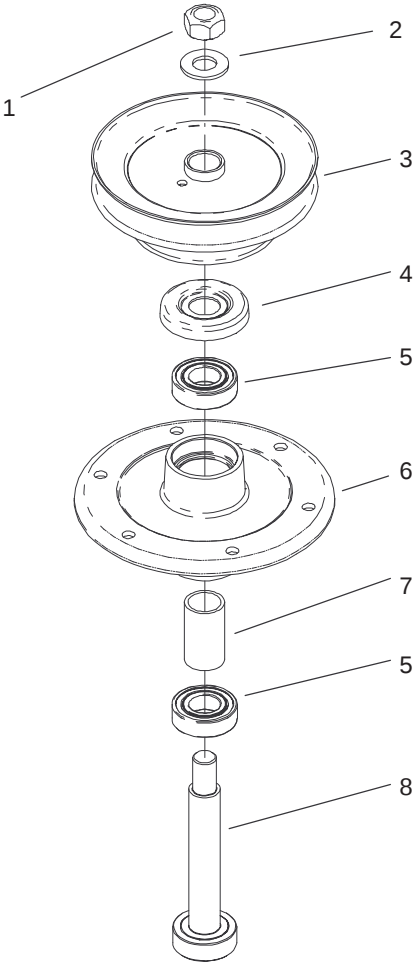

Sheet No.:A1

Spindle Assembly No. 106-0785


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1117	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0781	1	Shaft-Spindle				

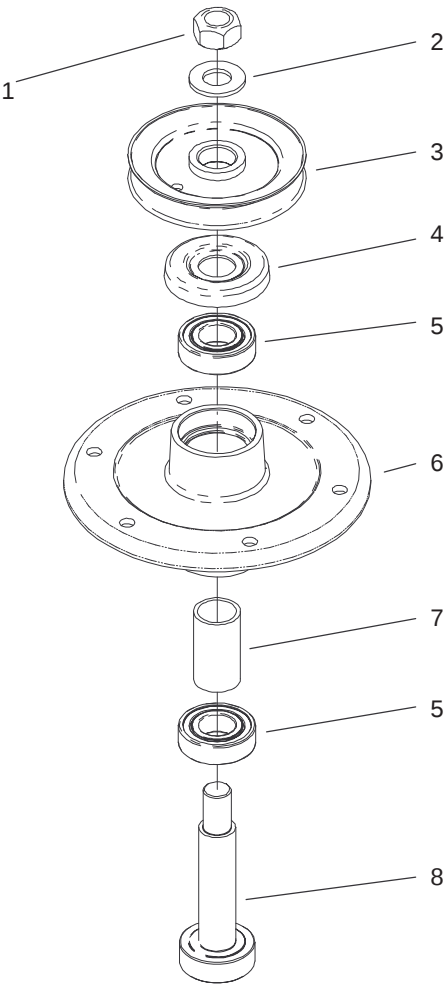

Sheet No.:A2

Spindle Assembly No. 106-0787

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1118	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0782	1	Shaft-Spindle				

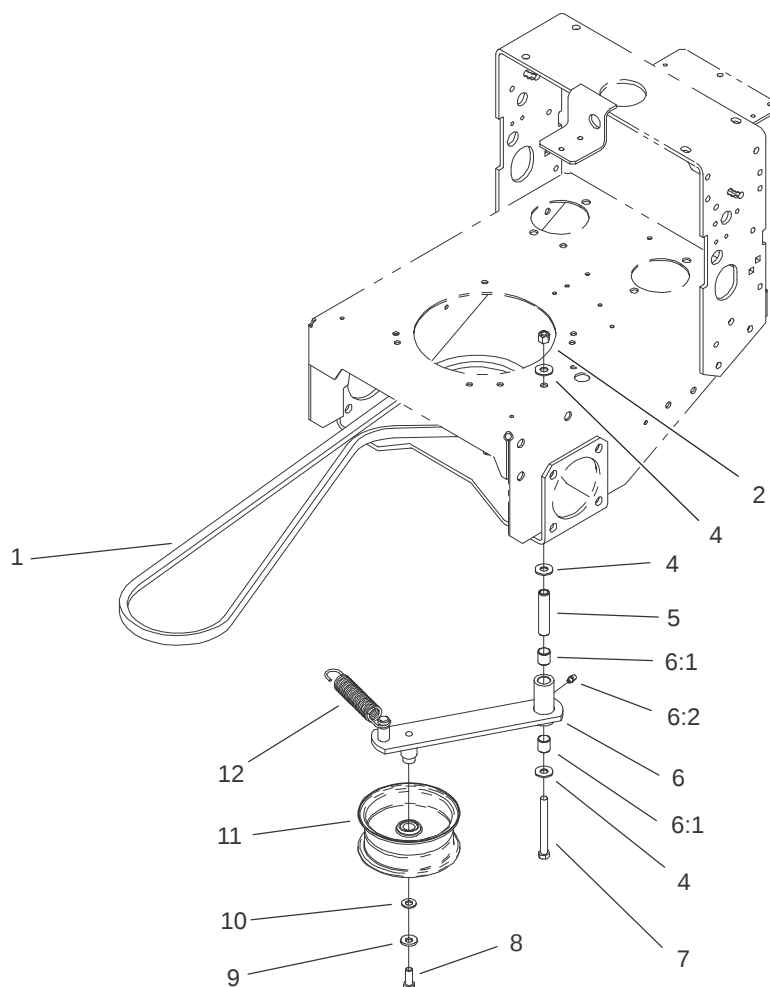


Sheet No.:5


Drive Belt and Tensioner Assembly

Ref. No.	Part No.	Qty.	Description
1	106-5492	1	Belt-Drive, PTO
2	3296-39	1	Nut-Lock, NI
4	1-809107	3	Washer-Hardened
5	104-6377	1	Tube-Idler
6	106-0734	1	Idler Arm ASM
6:1	1-513034	2	Sleeve-Bearing
6:2	302-5	1	Fitting-Grease
7	323-42	1	Screw-HH
8	323-6	1	Screw-HH
9	98-5975	1	Washer-Belleville
10	3256-24	1	Washer-Flat
11	1-413099	1	Pulley-Idler
12	105-8443	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description

Electrical Schematic

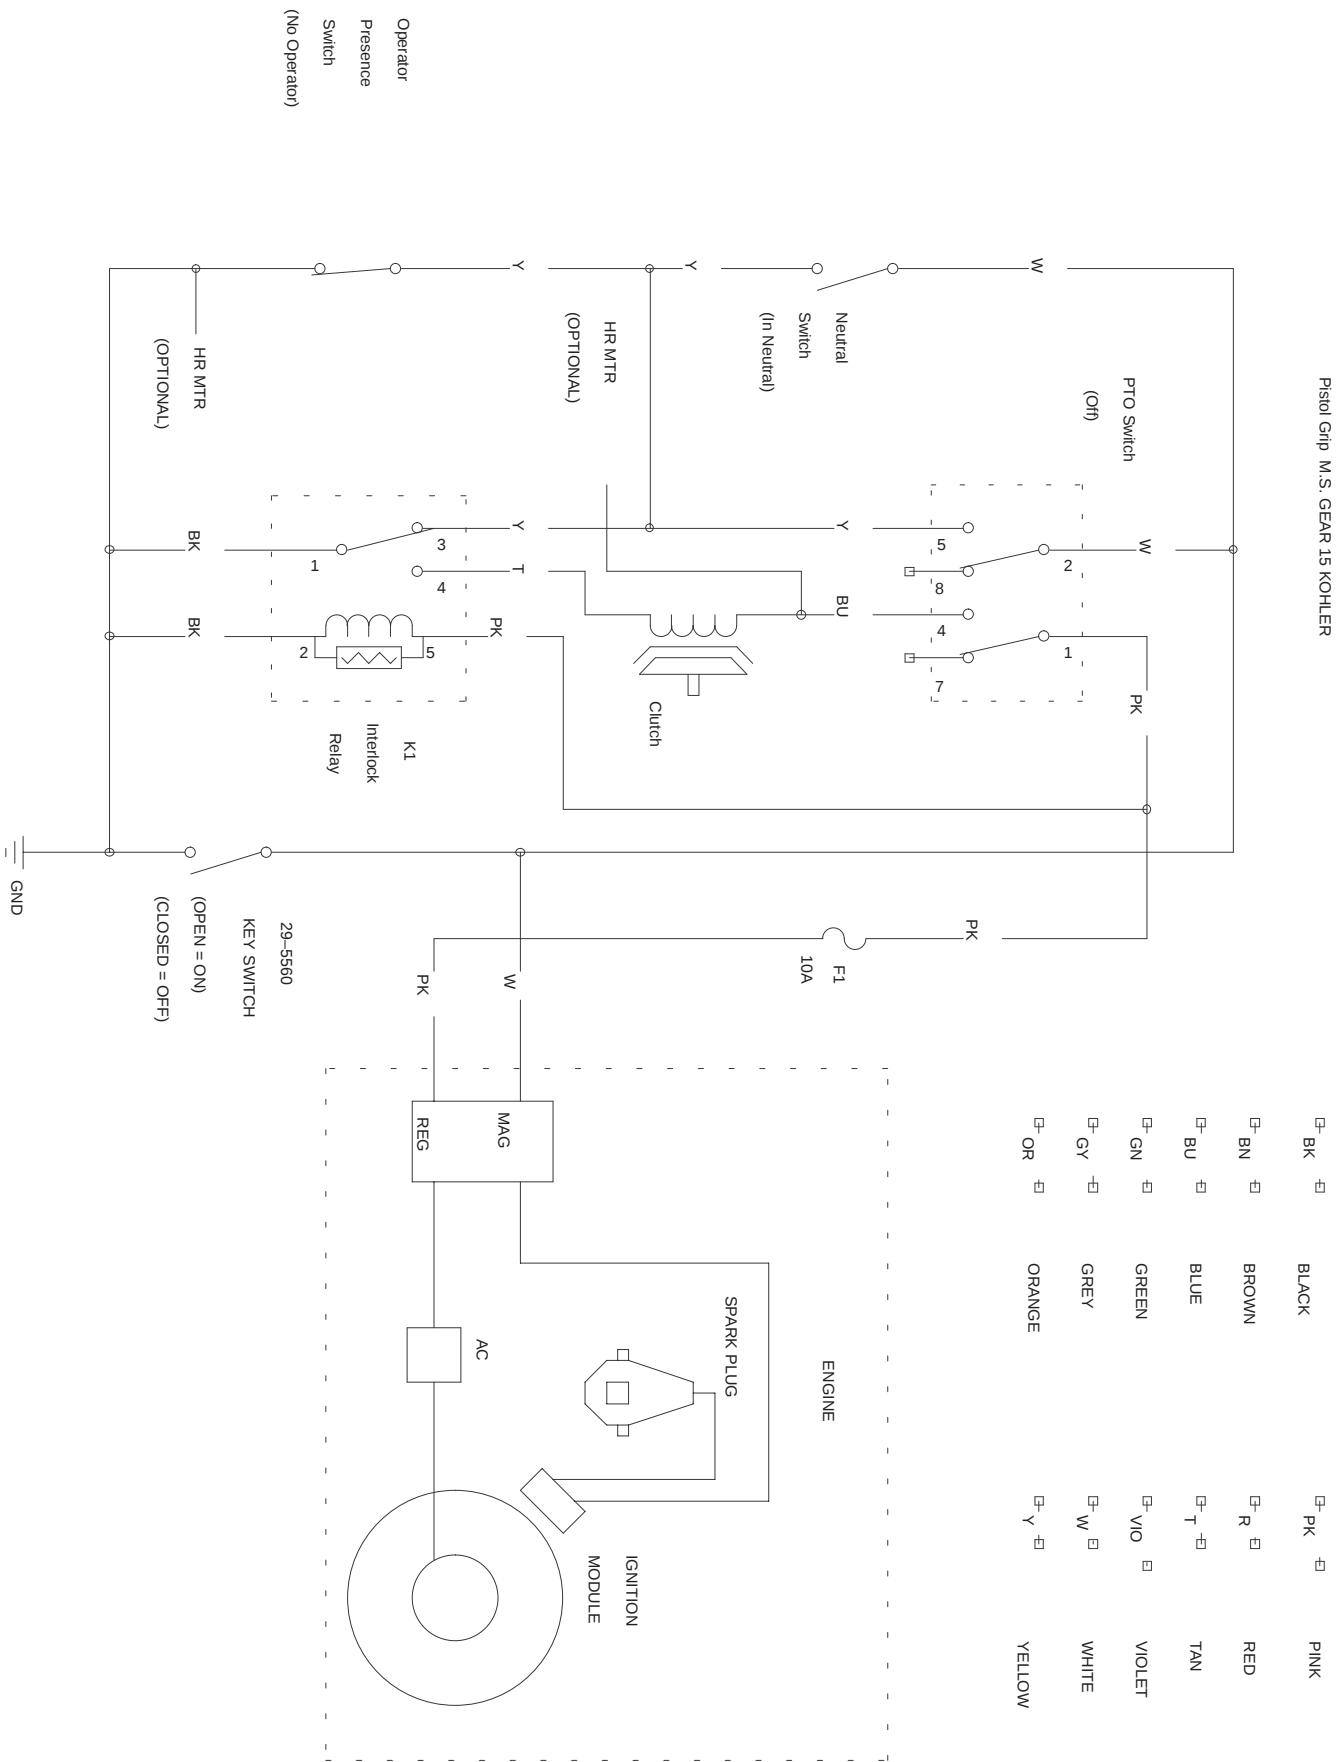


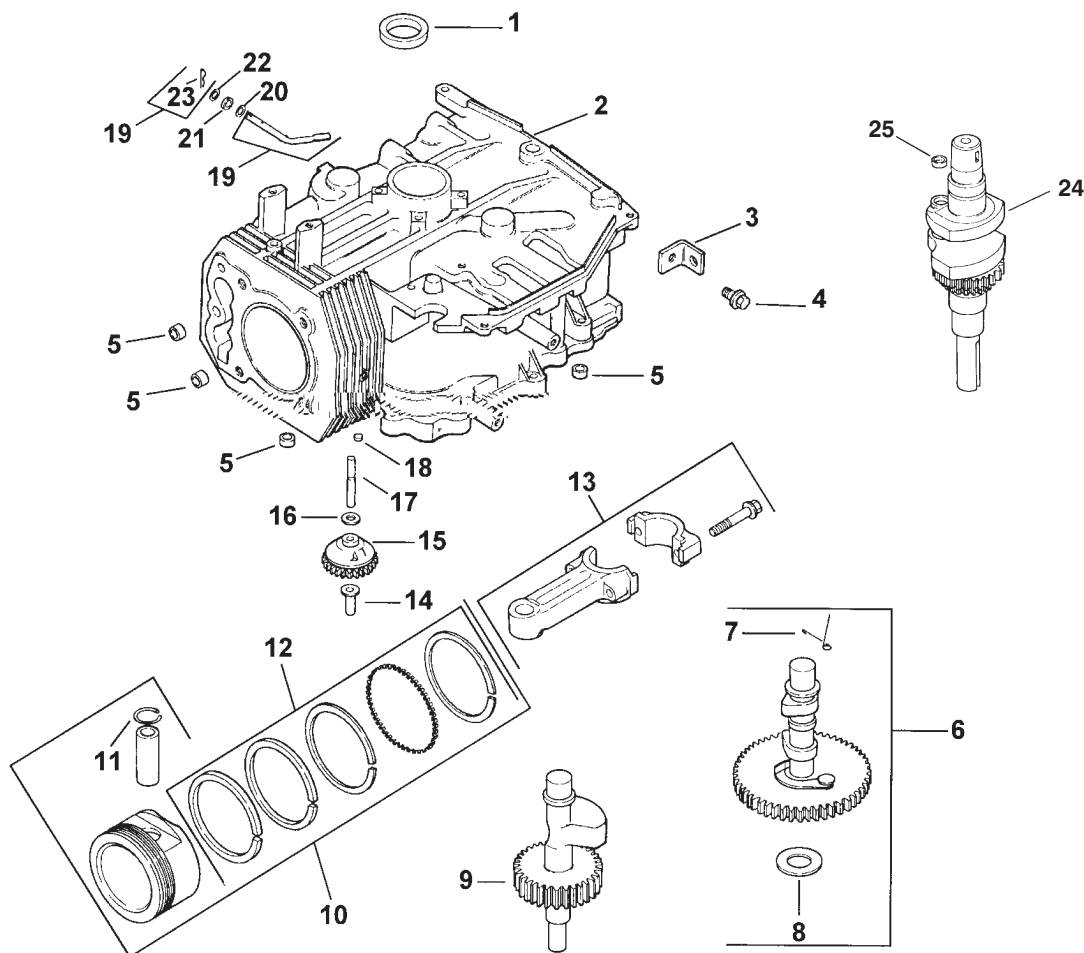

Crankcase Assembly – Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Crankshaft	14	12 380 01-S	1	Pin-Governor Regulating
2	12 522 18-S	1	Shortblock	15	12 043 05-S	1	Gear-Governor
3	12 445 02-S	1	Strap-Lifting	16	M-631005-S	1	Washer-Plain, 6mm
4	M-839025-S	1	Screw-HF M8x1.25x22	17	12 144 02-S	1	Shaft-Governor Gear
5	24 380 13-S	4	Dowel-Locating	18	52 139 09-S	1	Plug-Cup
6	12 755 49-S	1	Kit-Camshaft (Incl. 7-8)	19	12 755 64-S	1	Kit-Governor Cross Shaft (Incl. 23)
7	12 089 31-S	1	Spring-Actuating	20	X-25-102-S	1	Washer-Plain, 1/4
8	12 422 07-S	A/R	Shim-Camshaft, White	21	12 032 01-S	1	Seal-Governor Cross Shaft
8	12 422 08-S	1	Shim-Camshaft, Blue	22	M-631015-S	1	Washer-Plain, 6mm
8	12 422 09-S	A/R	Shim-Camshaft, Red	23	12 154 05-S	1	Clip-Hitch Pin
8	12 422 10-S	A/R	Shim-Camshaft, Yellow	24	12 014 30-S	1	Crankshaft ASM (Incl. 25)
8	12 422 11-S	A/R	Shim-Camshaft, Green	25	12 139 01-S	1	Plug-Cup
8	12 422 12-S	A/R	Shim-Camshaft, Gray	*	12 755 93-S	1	Set-Gasket
8	12 422 13-S	A/R	Shim-Camshaft, Black				
9	12 144 27-S	1	Shaft-Balance				
10	12 874 07-S	1	Piston w/Ring Set STD (Incl. 11,12)				
10	12 874 08-S	1	Set-Piston w/Ring .25				
10	12 874 09-S	1	Set-Piston w/Ring .50				
10	12 874 11-S	1	Set-Piston w/Ring .08				
11	12 018 02-S	2	Retainer-Piston Pin				
12	12 108 07-S	1	Ring Set STD				
12	12 108 08-S	1	Ring Set .25				
12	12 108 09-S	1	Ring Set .50				
13	12 067 05-S	1	Rod-Connecting, STD				
13	12 067 06-S	1	Rod-Connecting .25				

* Not illustrated
Order Parts from Kohler

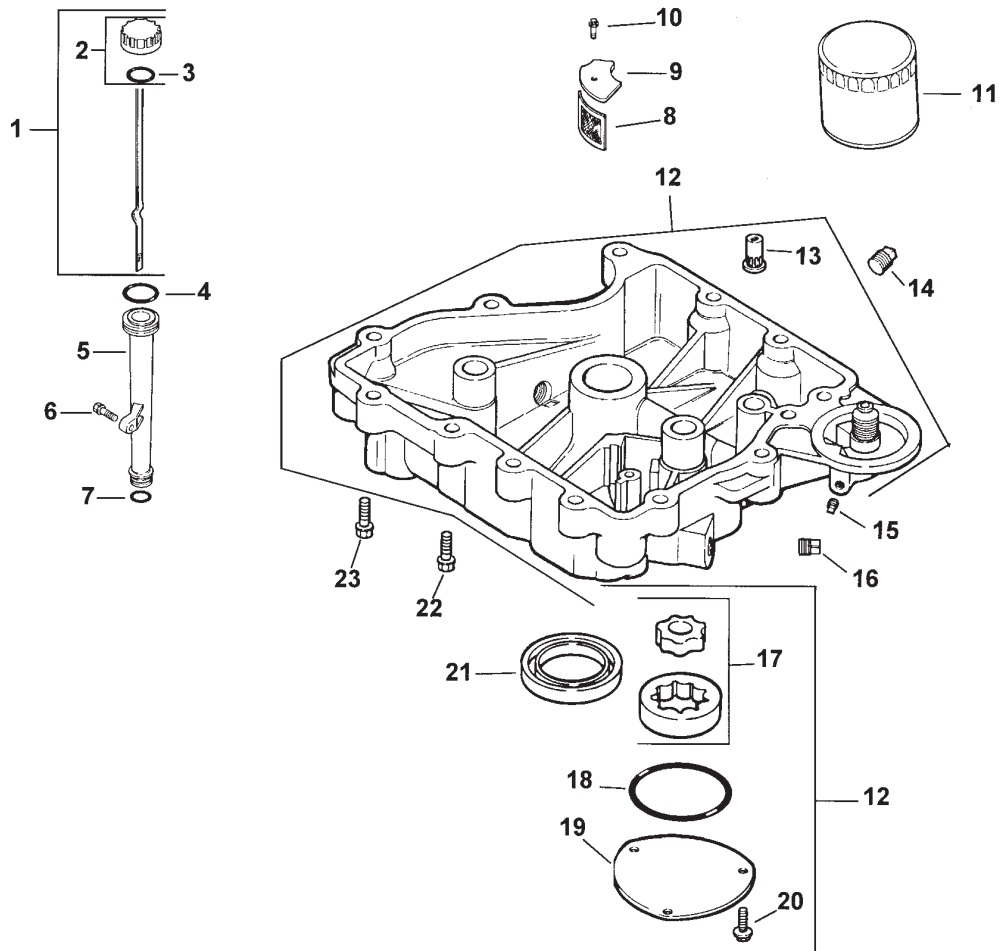


Oil Pan and Lubrication Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 038 01-S	1	Dipstick ASM(Incl. 2-3)
2	25 755 13-S	1	Kit-Oil Fill Cap (Incl. 3)
3	12 153 03-S	1	O Ring-Dipstick
4	12 153 02-S	1	O Ring-Upper Oil Fill Tube
5	12 123 04-S	1	Tube-Oil Fill
6	M-545020-S	1	Screw-HF, M5x0.8x20
7	12 153 01-S	1	O Ring-Lower Oil Fill Tube
8	25 162 07-S	1	Screen-Oil Pickup
9	12 096 03-S	1	Cover-Oil Pickup Screen
10	M-545016-S	1	Screw-HF, M5x0.8x16
11	52 050 02-S	1	Filter-Oil
12	12 199 50-S	1	Pan ASM - Oil (Incl.13, 17-20)
13	25 462 09-S	1	Valve-Oil Pressure Relief
14	25 139 57-S	1	Plug-Pipe, 3/8 SH
15	25 139 52-S	1	Plug-Pipe, 1/8
16	25 139 62-S	1	Plug-Pipe, 3/8 HSH
17	12 393 01-S	1	Pump-Oil
18	12 153 06-S	1	O Ring-Oil Pump Cover

Ref. No.	Part No.	Qty.	Description
19	12 096 34-S	1	Cover-Oil Pump
20	M-545016-S	3	Screw-HF, M5x0.8x16
21	12 032 03-S	1	Seal-Oil (PTO End)
22	24 086 16-S	11	Screw-HF, M8x1.25x45
23	24 086 17-S	1	Screw-HF, M8x1.25x45

Order Parts From Kohler

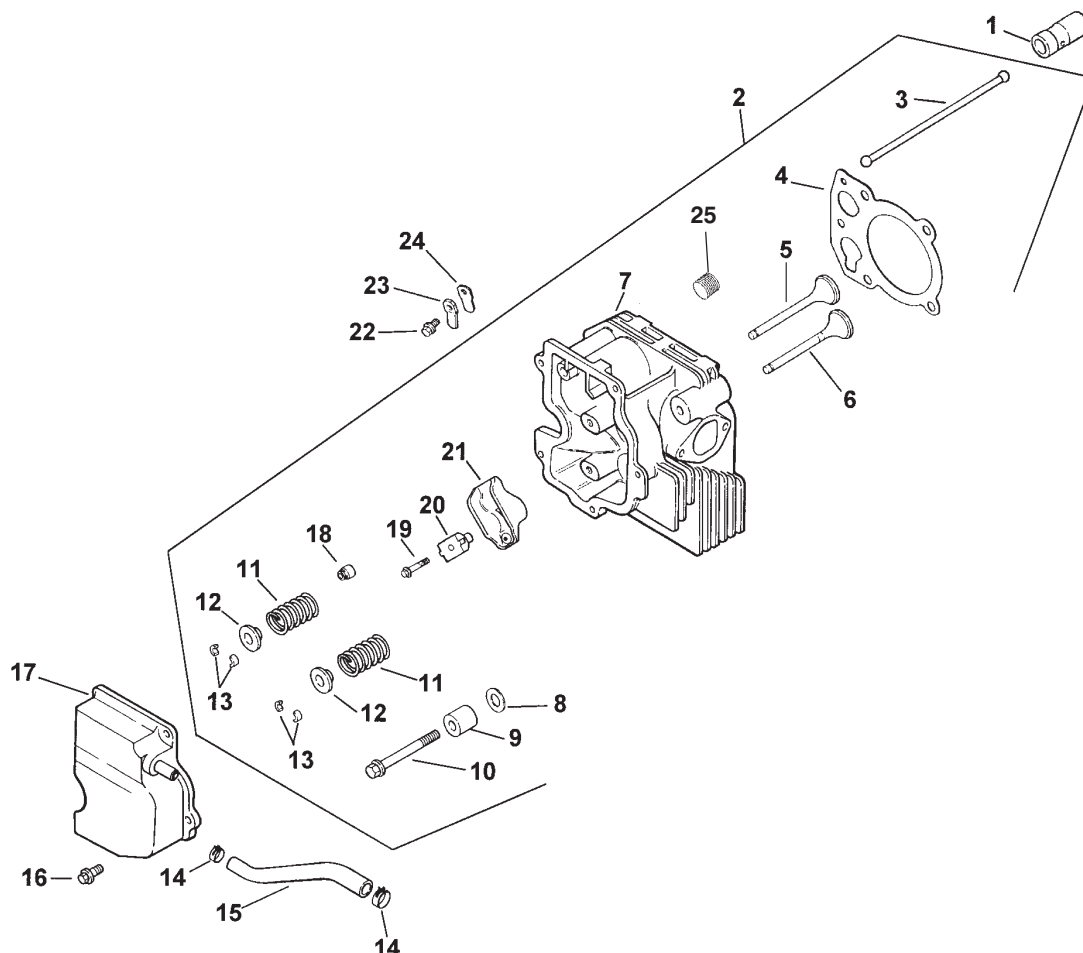


Cylinder Head, Valves And Breather Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 351 01-S	2	Lifter-Valve
2	12 755 81-S	1	Kit-Cylinder Head (Incl. 3-13, 18-21, 25, Carburator Gasket 12 041 01-S(2), Exhaust Manifold Gasket 12 041 03-S, Air Cleaner Gasket 12 041 02-S)
3	12 411 01-S	2	Rod-Push
4	12 041 10-S	1	Gasket-Cylinder Head
5	12 017 01-S	1	Valve-Intake STD
5	12 017 02-S	1	Valve-Intake .25
6	12 016 01-S	1	Valve-Exhaust STD
6	12 016 02-S	1	Valve-Exhaust, .25
7	12 318 19-S	1	Head - Cylinder
8	12 468 05-S	1	Washer-Plain 13/32
9	12 112 13-S	1	Spacer-Head Bolt Exhaust Port
10	12 086 15-S	5	Screw-HF M10x1.5x81
11	12 089 01-S	2	Spring-Valve
12	12 173 01-S	2	Cap-Valve Spring
13	12 755 03-S	2	Kit-Retainer
14	25 237 14-S	2	Clamp-Hose

Ref. No.	Part No.	Qty.	Description
15	12 326 03-S	1	Hose-Breather
16	M-645020-S	3	Screw-HF M6x1.0x20
17	12 096 07-S	1	Cover-Valve w/Nipple
18	24 032 05-S	1	Seal-Valve Stem
19	M-640034-S	2	Screw-HF M6x1.0x34
20	12 599 03-S	2	Pivot-Rocker Arm
21	25 186 01-S	2	Arm-Rocker
22	M-545010-S	1	Screw-HF M5x0.8x10
23	12 018 01-S	1	Retainer-Breather Reed
24	12 402 02-S	1	Reed-Breather
25	25 139 60-S	1	Plug-Pipe, HSH 1/8

Order Parts From Kohler

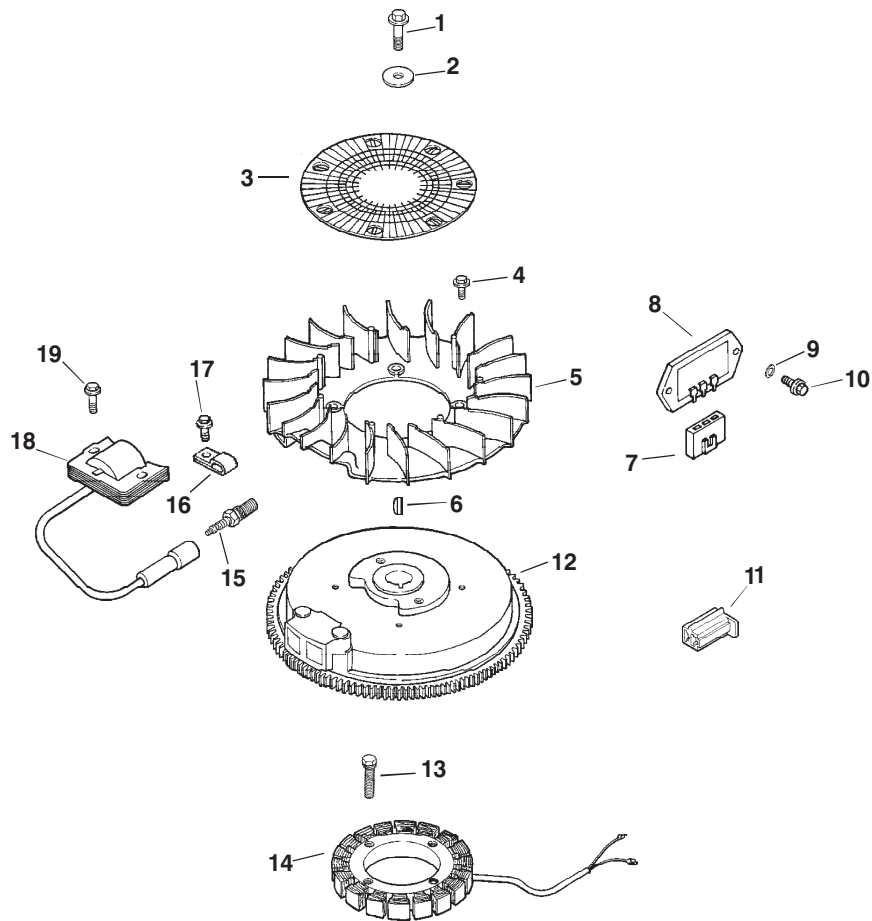


Ignition and Electrical Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 086 14-S	1	Screw-HF,M10x1.5x46
2	12 468 03-S	1	Washer-Plain, 3/8
3	12 162 03-S	1	Screen-Grass
4	25 086 47-S	4	Bolt-Shoulder
5	12 157 03-S	4	Fan
6	X-42-15-S	1	Key
7	236602-S	1	Connector-Rectifier, Regulator(3 contact)
8	12 403 01-S	1	Rectifier-Unregulated, 15 amp
9	X-22-11-S	2	Washer - Lock
10	M-639016-S	2	Screw-HF, M6x1.0x16
11	41 155 03-S	1	Connector
12	12 025 33-S	1	Flywheel
13	M-548025-S	2	Screw-HH M5x0.8x25
14	237878-S	1	Kit-Stator, 15 Amp
15	12 132 06-S	1	Spark Plug
16	X-728-1-S	2	Clip-Cable
17	M-545010-S	2	Screw-HF, M5x0.8x10
18	12 584 05-S	1	Module-Ignition
19	M-545020-S	2	Screw-HF, M5x0.8x20
*	25 518 05-S	1	Lead-Black, Rectifier/Regulator,(5"-14Gauge Uninsulated Push On

Ref. No.	Part No.	Qty.	Description
*	12 518 01-S	1	Tab Terminals) Lead-White, Ground To Kill, (19"-18 Gauge Fully Insulated Push On Tab and Uninsulated Push On Tab Terminals
*	25 518 12-S	1	Lead-Black,Ground, (5"-12Gauge-Insulated Grip Barrel Eyelet Terminals


* Not illustrated
Order Parts From Kohler

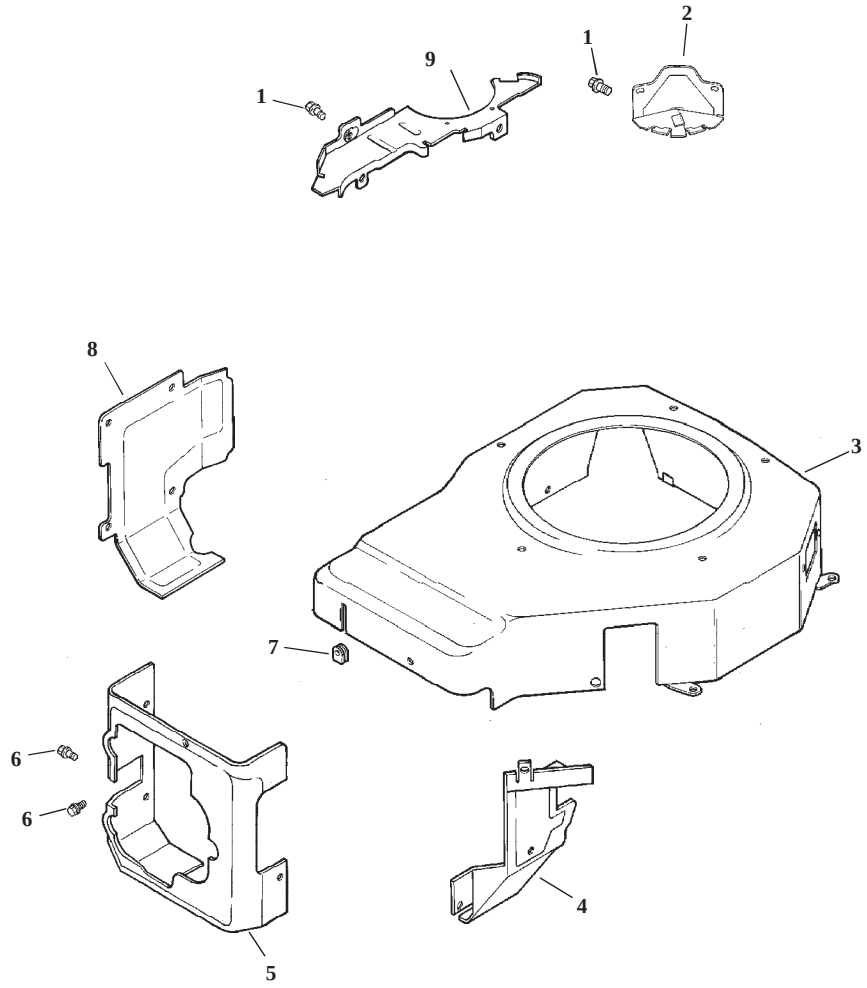

**Blower Housing And Baffles Assembly
Kohler Model CV15T-41604**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-550010-S	6	Screw-HF, M5x0.8x10				
2	12 096 29-S	1	Cover-Starter				
3	12 027 68-S	1	Housing-Blower				
4	12 063 10-S	1	Baffle-Intake, Side				
5	12 063 08-S	1	Baffle-Cylinder Head				
6	M-545010-S	9	Screw-HF, M5x0.8x10				
7	12 313 03-S	1	Grommet-Spark Plug leads				
8	12 063 19-S	1	Baffle-Cylinder				
9	12 146 07-S	1	Plate-Blower Housing				
*	12 146 21-S	1	Decal-Horsepower				


* Not illustrated
Order Parts From Kohler

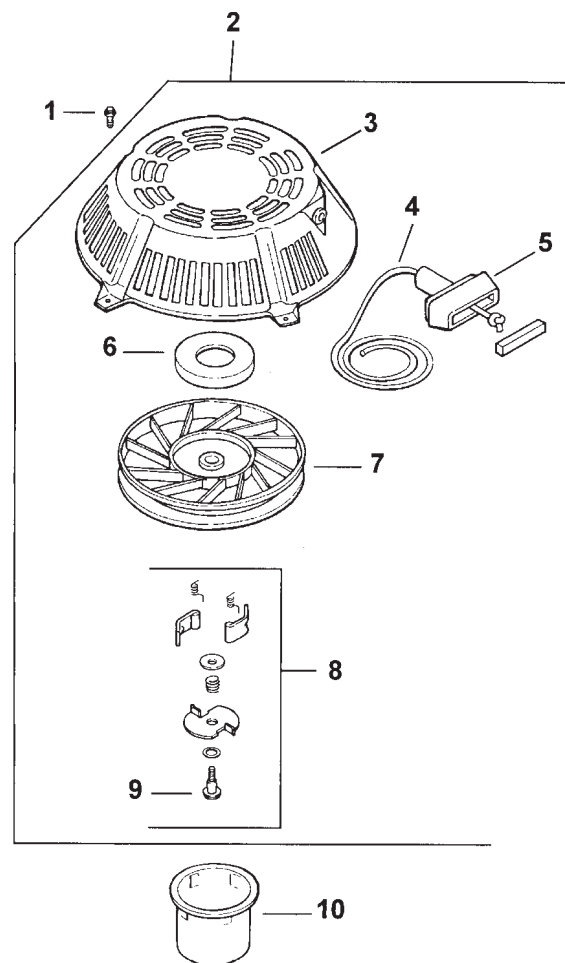

Starter Assembly
Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-550010-S	5	Screw-HF, M5x0.8x10				
2	12 165 01-S	1	Starter ASM Retractable (Incl. 3-9)				
3	12 081 01-S	1	Housing-Starter				
4	12 160 01-S	1	Rope-Starter				
5	25 166 01-S	1	Handle-Recoil				
6	12 089 06-S	1	Spring & Keeper				
7	12 093 01-S	1	Pulley				
8	12 757 06-S	1	Kit-Dog Repair (incl. 9)				
9	41 086 09-S	1	Screw-Posidrive				
10	15 109 01-S	1	Cup-Drive				
*	12 113 07-S	1	Decal-Starting				


* Not illustrated
Order Parts From Kohler

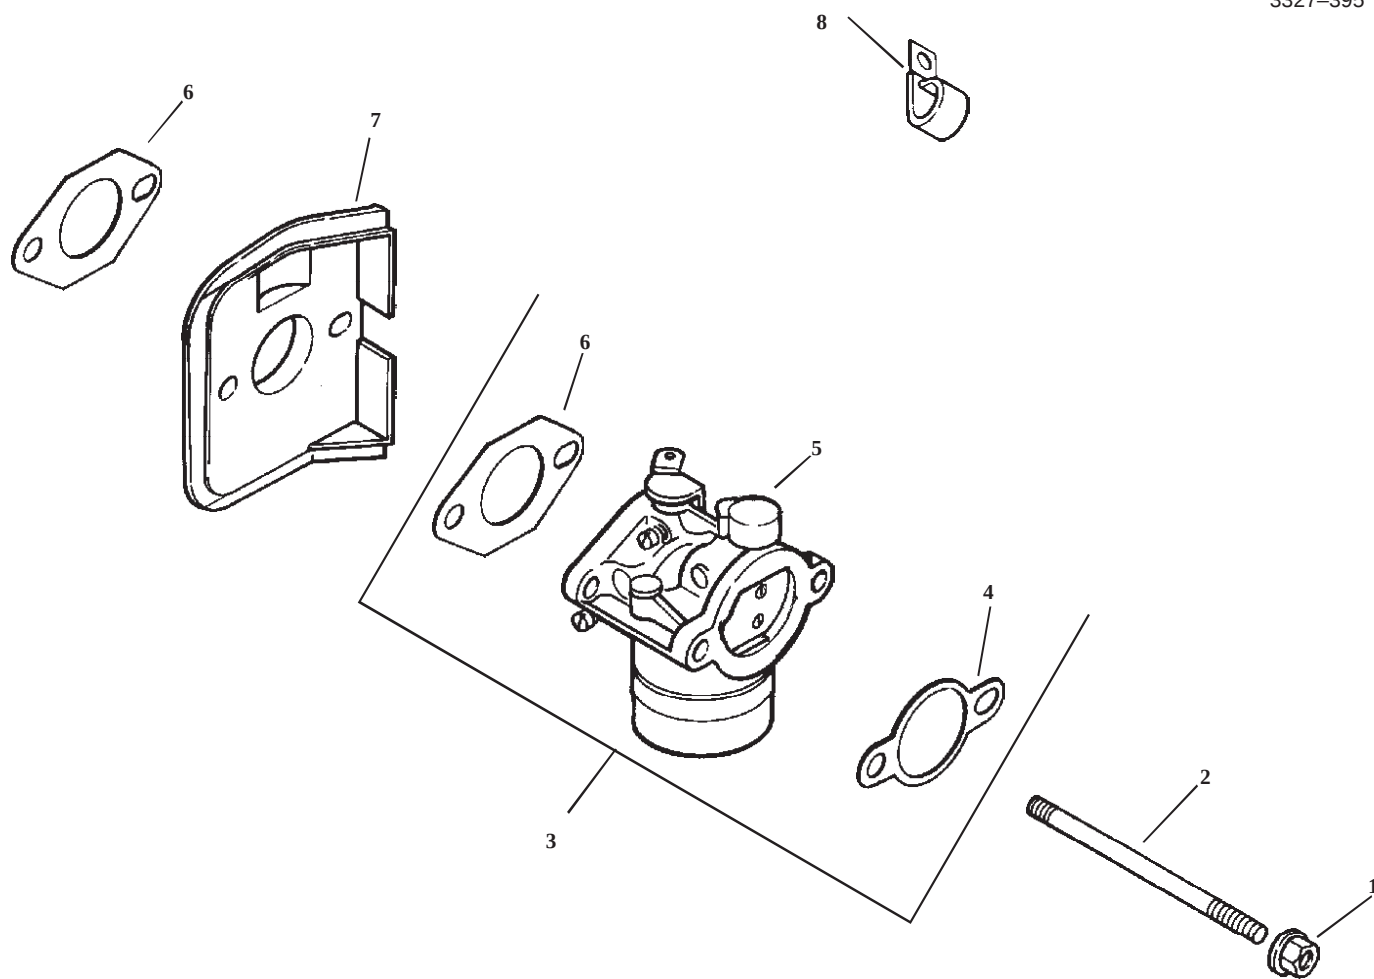

Fuel System Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	M-641060-S	2	Nut-HF M6x1.0
2	M-629116-S	2	Stud M6x1.0x116
3	12 853 80-S	1	Kit-Carburetor w/Gaskets (Incl. 4-6)
4	12 041 02-S	1	Gasket-Air Cleaner
5	12 053 80	1	Carburetor ASM (For Information Only Not Available Separately) (Service With Kits 12 757 02-S Float Kit 12 757 03-S Carb. Repair Kit and 12 757 08-S Choke Repair Kit)
6	12 041 01-S	2	Gasket-Carburetor
7	12 265 04-S	1	Deflector-Heat
8	47 154 01-S	1	Clip-Cable
*	12 757 02-S	1	Kit-Float
*	12 757 08-S	1	Kit-Choke Repair
*	12 757 03-S	1	Kit-Carburetor Repair

* Not illustrated
Order Parts From Kohler

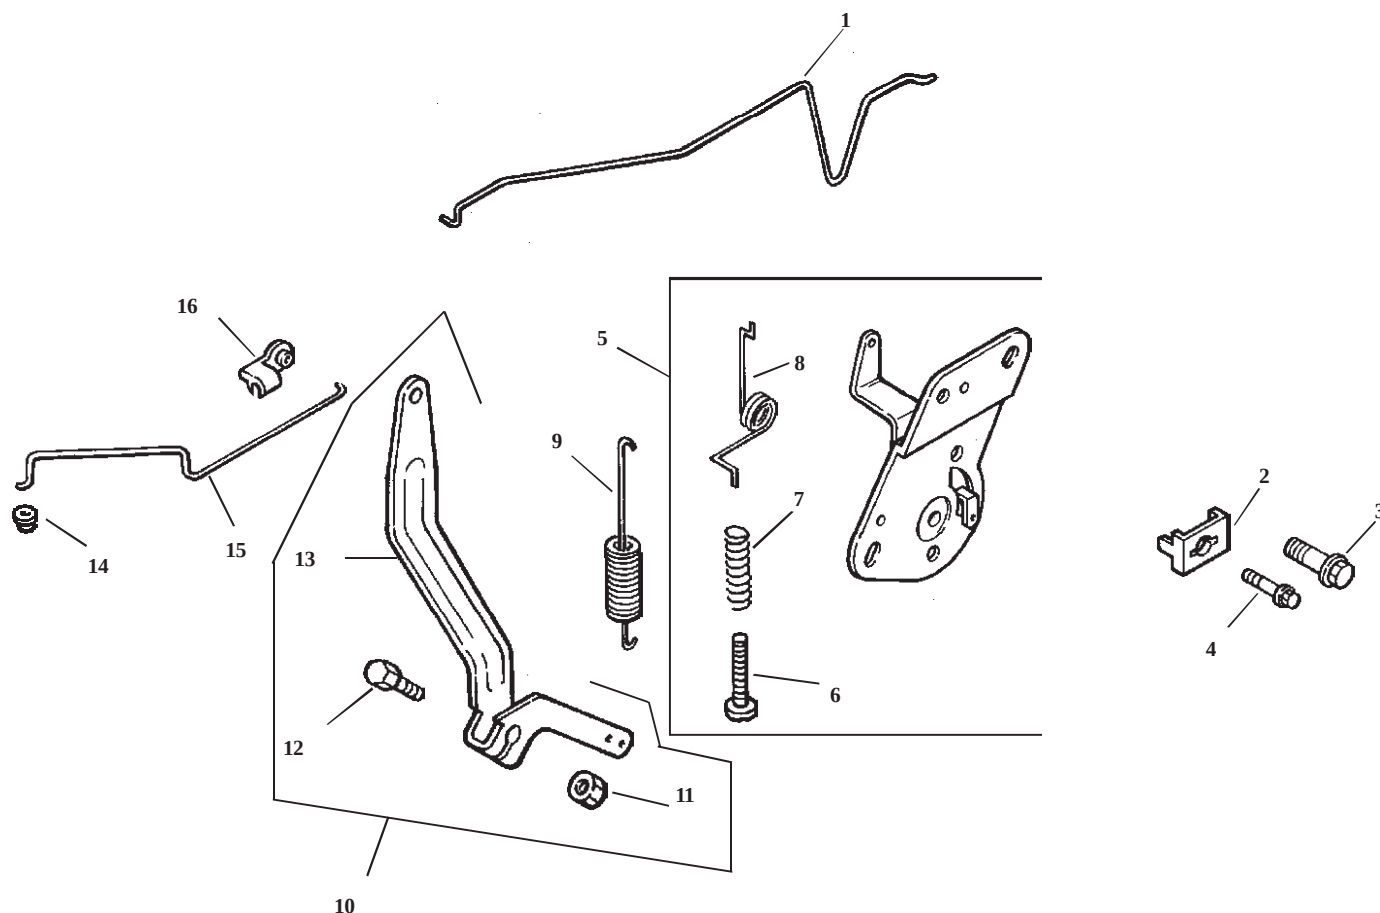


Engine Controls Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 079 07-S	1	Linkage-Choke
2	12 237 01-S	1	Clamp-Cable
3	M-664020-S	2	Screw-Lobed Socket M6x1.0x20
4	M-545016-S	1	Screw-HF M5x .08x16
5	12 536 01-S	1	Control-Speed ASM (Incl. 6-8)
6	M-443025-S	1	Screw-SPH, M4x0.7x25
7	12 089 11-S	1	Spring-Choke Adjustment
8	12 089 23-S	1	Spring-Choke Return
9	12 089 19-S	1	Spring-Governor
10	12 755 83-S	1	Kit - Governor Lever (Incl. 11-13)
11	12 100 07-S	1	Nut-HF
12	52 211 04-S	1	Bolt - Round HD
13	12 090 28-S	1	Lever-Governor
14	25 158 08-S	1	Bushing-Linkage Retaining
15	12 079 01-S	1	Linkage-Throttle
16	25 158 11-S	1	Bushing-Throttle Linkage

Ref. No.	Part No.	Qty.	Description


Order Parts From Kohler

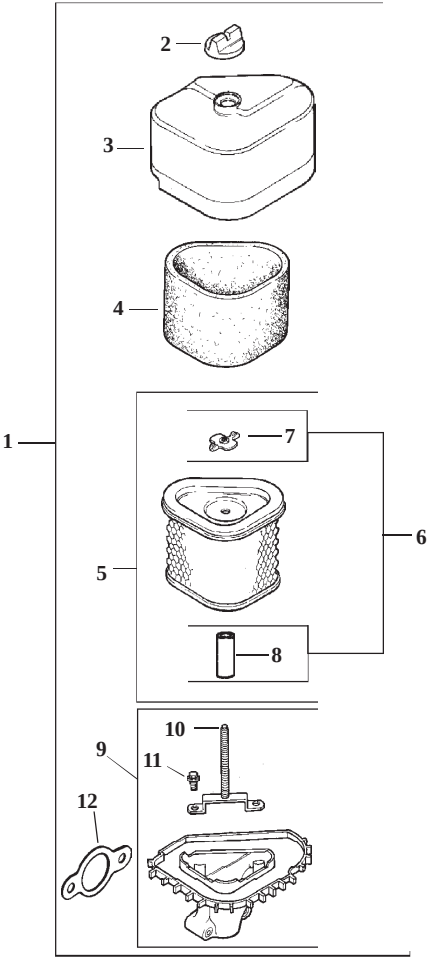

Air Cleaner Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 743 02-S	1	Kit-Air Cleaner (Incl. 2-12)				
2	25 341 03-S	1	Knob-Air Cleaner Cover				
3	12 096 38-S	1	Cover-Air Cleaner				
4	12 083 12-S	1	Element-Precleaner				
5	12 083 10-S	1	Element-Air Cleaner (Incl. 6-8)				
6	12 743 12-S	1	Kit-Seal (Incl. 7-8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 07-S	1	Base-Air Cleaner (Incl. 10,11)				
10	12 072 04-S	1	Stud-M6x1.0x66				
11	12 086 01-S	2	Screw-#10 Hi-Lo Thread Forming				
12	12 041 02-S	1	Gasket-Air Cleaner				
*	12 113 04-S	1	Decal-Air Cleaner				

* Not illustrated
Order Parts From Kohler

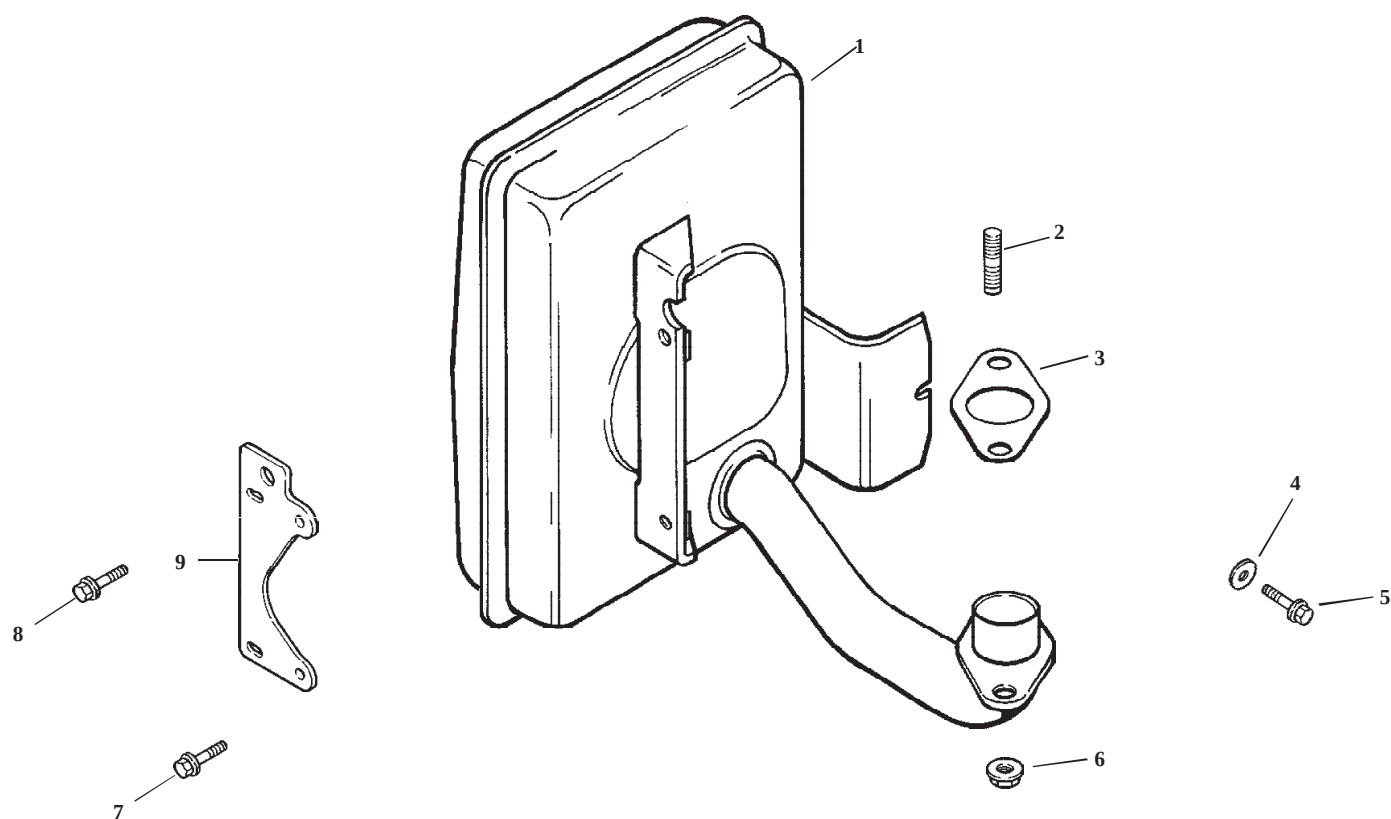

Exhaust Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 068 44-S	1	Muffler				
2	25 072 04-S	2	Stud M8x1.25x33				
3	12 041 03-S	1	Gasket-Exhaust Manifold				
4	X-25-78-S	1	Washer-Plain, 1/4				
5	M-545016-S	1	Screw-HF, M5x0.8x16				
6	M-841080-S	2	Nut-HF, M8x1.25				
7	M-645016-S	2	Screw-HF, M6x1.0x16				
8	M-645025-S	2	Screw-HF, M6x1.0x25				
9	12 126 71-S	1	Bracket-Muffler				

Obtain Parts From Kohler

Maintenance Record

[illegible]

