



## **Mid–Size Mower**

### **ProLine Gear 17 HP with 52 in. Side Discharge Mower**

**Model No. 30432—Serial No. 230000001 and Up**

**Operator's Manual**



## Warning



### CALIFORNIA

#### Proposition 65 Warning

**The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.**

**Important** This engine is not equipped with a spark arrester muffler. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on any forest-covered, brush-covered or grass-covered land. Other states or federal areas may have similar laws.

This spark ignition system complies with Canadian ICES-002.

Ce système d'allumage par étincelle de véhicule est conforme à la norme NMB-002 du Canada.

**The enclosed Engine Owner's Manual is supplied for information regarding The U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance and warranty.**

**Keep this engine Owner's Manual with your unit. Should this engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered through the engine manufacturer.**

# Contents


	Page
Introduction .....	2
Safety .....	2
Safe Operating Practices .....	3
Toro Mower Safety .....	4
Slope Chart .....	7
Safety and Instruction Decals .....	9
Gasoline and Oil .....	12
Recommended Gasoline .....	12
Using Stabilizer/Conditioner .....	12
Filling the Fuel Tank .....	12
Check Engine Oil Level .....	12
Setup .....	13
Loose Parts .....	13
Installing the Handle Assembly .....	14
Installing the Shift Lever Plate and Fuel Tank ....	14
Adjusting the Shift Lever Plate .....	15
Installing the Control Rods .....	16
Installing the Hairpin Cotter Pins and Washers ...	17
Checking the Tire Pressure .....	17

	Page
Installing the Mid Size Weight .....	17
Operation .....	18
Think Safety First .....	18
Controls .....	18
Parking Brake and Neutral Lock .....	19
Starting and Stopping the Engine .....	19
Operating Mower Blade Control (PTO) .....	20
The Safety Interlock System .....	20
Driving Forward or Backward .....	20
Stopping the Machine .....	21
Transporting Machines .....	21
Side Discharge or Mulch Grass .....	21
Adjusting the Height-of-Cut .....	22
Adjusting the Gage Wheels .....	22
Adjusting the Handle Height .....	23
Using the Mid-Size Weight .....	23
Maintenance .....	25
Recommended Maintenance Schedule .....	25
Air Cleaner Service .....	26
Engine Oil Service .....	27
Spark Plug Service .....	28
Greasing and Lubrication .....	29
Cleaning the Cooling System .....	30
Checking the Tire Pressure .....	30
Fuel Tank Service .....	31
Fuel Filter Service .....	31
Fuse Service .....	32
Adjusting the Electric Clutch .....	32
Servicing the Brakes .....	32
Servicing the Cutting Blades .....	33
Correcting the Mower Quality of Cut .....	35
Frame Set Up .....	35
Checking the Deck Front-to-Rear Pitch .....	37
Changing the Deck Front-to-Rear Pitch .....	37
Checking the Deck Side-to-Side Leveling .....	38
Changing the Side-to-Side Leveling .....	38
Matching Height of Cut .....	38
Adjusting the Traction Drive Belt Tension .....	39
Replacing the Traction Drive Belt .....	39
Replacing the Transmission Belt .....	40
Replacing the Mower Belt .....	40
Replacing the PTO Drive Belt .....	41
Replacing the Caster Wheel Fork Bushings .....	41
Caster Wheel and Bearings Service .....	42
Replacing the Grass Deflector .....	43
Wiring Diagram .....	44
Cleaning and Storage .....	45
Troubleshooting .....	45
The Toro Total Coverage Guarantee .....	48

# Introduction

Read this manual carefully to learn how to operate and maintain your product properly. The information in this manual can help you and others avoid injury and product damage. Although Toro designs and produces safe products, you are responsible for operating the product properly and safely.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 illustrates the location of the model and serial numbers on the product.

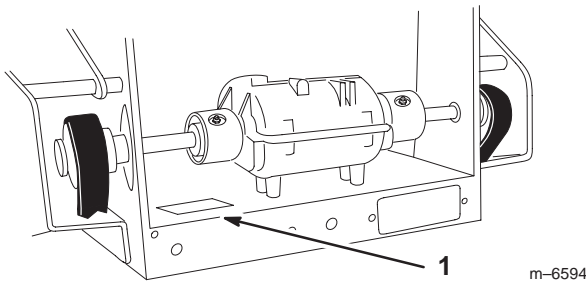

**Figure 1**

1. Location of the model and serial numbers

Write the product model and serial numbers in the space below:

<b>Model No.</b> _____
<b>Serial No.</b> _____

This manual identifies potential hazards and has special safety messages that help you and others avoid personal injury and even death. ***Danger***, ***Warning***, and ***Caution*** are signal words used to identify the level of hazard. However, regardless of the hazard, be extremely careful.

***Danger*** signals an extreme hazard that *will* cause serious injury or death if you do not follow the recommended precautions.

***Warning*** signals a hazard that *may* cause serious injury or death if you do not follow the recommended precautions.


***Caution*** signals a hazard that may cause minor or moderate injury if you do not follow the recommended precautions.

This manual uses two other words to highlight information.

**Important** calls attention to special mechanical information and **Note:** emphasizes general information worthy of special attention.

# Safety

**Note:** The addition of attachments made by other manufacturers that do not meet American National Standards Institute certification will cause noncompliance of this machine.

**Improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert  symbol, which means CAUTION, WARNING, or DANGER—“personal safety instruction.” Failure to comply with the instruction may result in personal injury or death.**

## Safe Operating Practices

The following instructions are from ANSI standard B71.4—1999.

### Training

- Read the Operator's Manual and other training material. If the operator(s) or mechanic(s) can not read English it is the owner's responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people or property.

### Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including hard hat, safety glasses and ear protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
  - Use only an approved container

- Never remove gas cap or add fuel with engine running. Allow engine to cool before refueling. Do not smoke.
- Never refuel or drain the machine indoors.
- Check that operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

## Operation

- Never run an engine in an enclosed area.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position.
- Slow down and use extra care on hillsides. Be sure to travel side-to-side on hillsides. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running.
- Never operate with the PTO shield, or other guards not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grass catcher.
- Do not change the engine governor setting or overspeed the engine.
- Stop on level ground, disengage drives, engage parking brake (if provided), shut off engine before leaving the operator's position for any reason including emptying the catchers or unclogging the chute.
- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting unit.
- Look behind and down before backing up to be sure of a clear path.
- Keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing.
- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the mower under the influence of alcohol or drugs

- Use care when loading or unloading the machine into or from a trailer or truck
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

## Maintenance and storage

- Disengage drives, set parking brake, stop engine and remove key or disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting unit, drives, mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Set parking brake. Never allow untrained personnel to service machine.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking blades. Wrap the blade(s) or wear gloves, and use caution when servicing them. Only replace blades. Never straighten or weld them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.

## Toro Mower Safety

The following list contains safety information specific to Toro products and other safety information you must know.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

This product is designed for cutting and recycling grass or, when equipped with a grass bagger, for catching cut grass. Any use for purposes other than these could prove dangerous to user and bystanders.

## General Operation

- Allow only responsible adults who are familiar with the instructions to operate the machine.
- Be sure the area is clear of other people before mowing. Stop the machine if anyone enters the area.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not point it at anyone. Do not operate the mower without either the entire grass catcher or the guard in place.
- Slow down before turning. Sharp turns on any terrain may cause loss of control.
- Turn off blades when not mowing.
- Keep hands, feet, hair and loose clothing away from attachment discharge area, underside of mower and any moving parts while engine is running.
- Stop the engine before removing the grass catcher or unclogging the chute.
- Mow only in daylight or good artificial light.
- Watch for traffic when operating near or crossing roadways.
- Do not touch equipment or attachment parts which may be hot from operation. Allow to cool before attempting to maintain, adjust or service.
- Use only Toro-approved attachments. Warranty may be voided if used with unapproved attachments.

## Slope Operation

Slopes and ramps are a major factor related to loss-of-control and accidents, which can result in severe injury or death. All slopes and ramps require extra caution. If you feel uneasy on a slope, do not mow it.

### DO

- Remove obstacles such as rocks, tree limbs, etc. from the mowing area. Watch for holes, ruts or bumps. Tall grass can hide obstacles.
- Use slow speed so that you will not have to stop while on the slope.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction.

- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before driving under any objects and do not contact them.
- Mow slopes side-to-side.

### DO NOT

- Do not mow slopes greater than 15 degrees.
- Avoid turning on slopes. If you must turn, turn slowly and gradually downhill, if possible.
- Do not mow near drop-offs, ditches, or embankments. The machine could suddenly turn over if a wheel goes over the edge of a cliff or ditch, or if an edge caves in.
- Do not mow on wet grass. Reduced traction could cause sliding.
- Do not use a grass catcher on steep slopes. Heavy grass bags could cause loss of control of the machine.
- Do not mow up and down slopes.

## Service

- Never store the machine or fuel container inside where there is an open flame, such as near a water heater or furnace.
- Keep nuts and bolts tight, especially the blade attachment bolts. Keep equipment in good condition.
- Never tamper with safety devices. Check safety systems for proper operation before each use.
- Use only genuine replacement parts to ensure that original standards are maintained.
- Check brake operation frequently. Adjust and service as required.
- Battery acid is poisonous and can cause burns. Avoid contact with skin, eyes and clothing. Protect your face, eyes and clothing when working with a battery.
- Battery gases can explode. Keep cigarettes, sparks and flames away from battery.
- Hydraulic fluid escaping under pressure can penetrate the skin and cause injury. Use cardboard or paper to find hydraulic leaks. Never use your hands.



# Slope Chart







## Safety and Instruction Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



43-8480



93-1122



66-1340



95-2814



67-5360



98-0776




68-8340



98-4387


1. Warning—wear hearing protection.

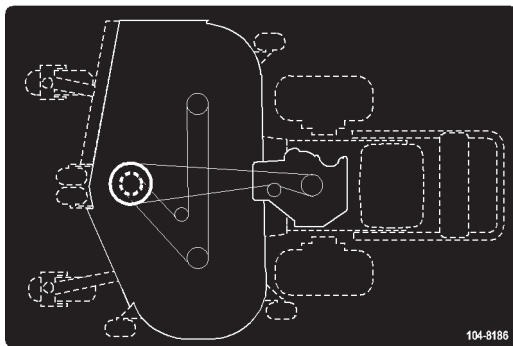


104-8186



 
104-8569



105-4111

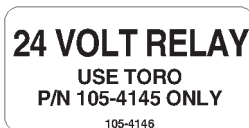


105-4146

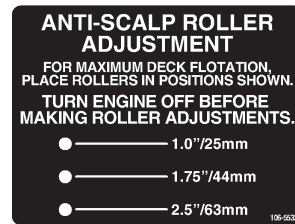


106-5532



106-0699

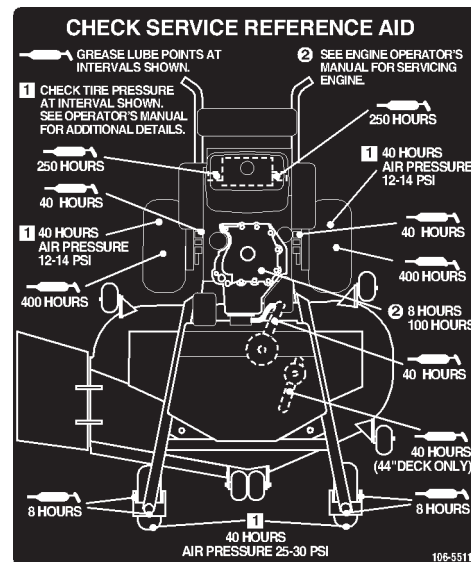

106-5511

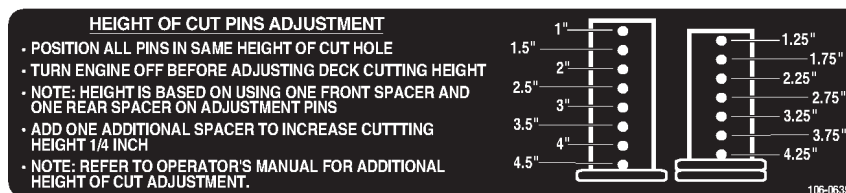

106-0635




106-5496

1. Reverse
2. Neutral
3. Forward speeds



106-5501

1. Choke
2. Fast
3. Continuous variable setting
4. Slow

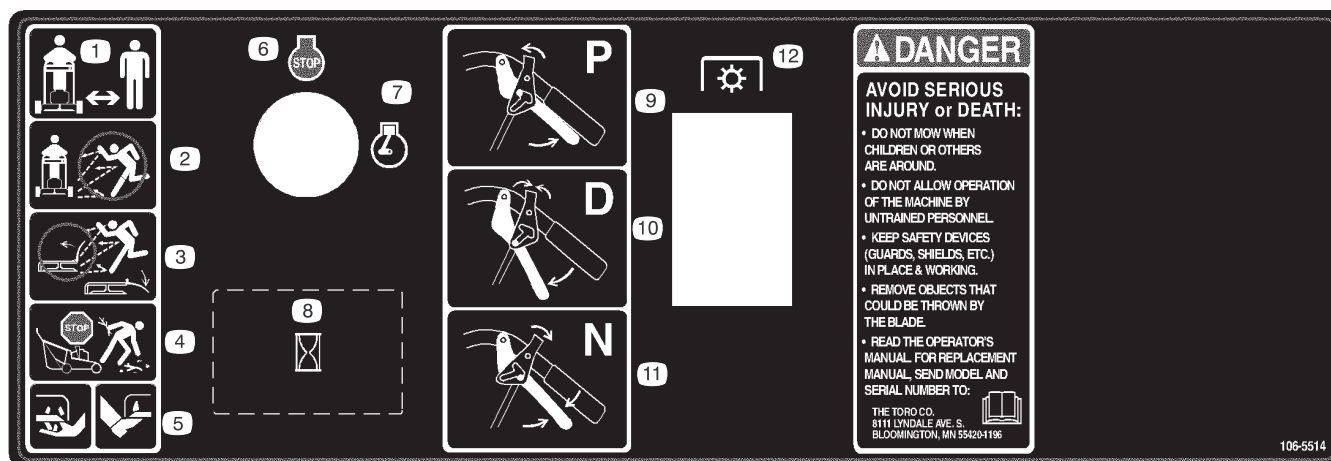

106-5514

1. Keep bystanders a safe distance from the machine.
2. Do not allow bystanders to be hit by thrown objects.
3. Do not operate the mower with the deflector up or removed.
4. Stop the engine and pick up debris before operating.
5. Cutting of hand or foot, mower.
6. Engine—stop
7. Engine—run
8. Hour meter
9. To park, move the controls as illustrated.
10. To drive, move the controls as illustrated.
11. To place the machine in neutral, move the controls as illustrated.
12. Power take-off (PTO)

# Gasoline and Oil

## Recommended Gasoline

Use UNLEADED Regular Gasoline suitable for automotive use (85 pump octane minimum). Leadless regular gasoline may be used if unleaded regular is not available.

**Important** Never use methanol, gasoline containing methanol, or gasohol containing more than 10% ethanol because the fuel system could be damaged. Do not mix oil with gasoline.



### Danger



In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.

- Fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any gasoline that spills.
- Do not fill the fuel tank completely full. Add gasoline to the fuel tank until the level is 1/4 inch to 1/2 inch (6 mm to 13 mm) below the bottom of the filler neck. This empty space in the tank allows gasoline to expand.
- Never smoke when handling gasoline, and stay away from an open flame or where gasoline fumes may be ignited by a spark.
- Store gasoline in an approved container and keep it out of the reach of children. Never buy more than a 30-day supply of gasoline.
- Always place gasoline containers on the ground away from your vehicle before filling.
- Do not fill gasoline containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.
- When practical, remove gas-powered equipment from the truck or trailer and refuel the equipment with its wheels on the ground.
- If this is not possible, then refuel such equipment on a truck or trailer from a portable container, rather than from a gasoline dispenser nozzle.
- If a gasoline dispenser nozzle must be used, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.



### Warning



Gasoline is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- Avoid prolonged breathing of vapors.
- Keep face away from nozzle and gas tank or conditioner opening.
- Keep gas away from eyes and skin.

## Using Stabilizer/Conditioner

Use a fuel stabilizer/conditioner in the machine to provide the following benefits:

- Keeps gasoline fresh during storage of 90 days or less. For longer storage it is recommended that the fuel tank be drained.
- Cleans the engine while it runs
- Eliminates gum-like varnish buildup in the fuel system, which causes hard starting

**Important** Do not use fuel additives containing methanol or ethanol.

Add the correct amount of gas stabilizer/conditioner to the gas.

**Note:** A fuel stabilizer/conditioner is most effective when mixed with fresh gasoline. To minimize the chance of varnish deposits in the fuel system, use fuel stabilizer at all times.

## Filling the Fuel Tank

1. Shut the engine off and set the parking brake.
2. Clean around fuel tank cap and remove the cap. Add unleaded regular gasoline to fuel tank, until the level is 1/4 to 1/2 inch (6 mm to 13 mm) below the bottom of the filler neck. This space in the tank allows gasoline to expand. Do not fill the fuel tank completely full.
3. Install fuel tank cap securely. Wipe up any gasoline that may have spilled.

## Check Engine Oil Level

Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to Checking Oil Level, page 27.

# Setup

**Note:** Determine the left and right sides of the machine from the normal operating position.

## Loose Parts

**Note:** Use the chart below to verify all parts have been shipped.

Step	Description	Qty.	Use
<b>1</b>	Handle assembly	1	Installing the handle assembly
	Flanged bolt 3/8 x 1 inch	4	
	Flange nut 3/8 inch	4	
<b>2</b>	Fuel tank with studs installed	1	Installing shift lever plate and fuel tank
	Shift lever plate	1	
	Bolt, 5/16 x 7/8 inch	2	
	Lock washer, 5/16 inch	2	
	Washer, 5/16 inch	4	
	Spring	2	
	Hose clamp	1	
<b>3</b>	No parts needed		Adjusting the shift lever plate
<b>4</b>	Clevis pin	2	Installing the control rods
	Washer	2	
	Hairpin cotter pin	2	
<b>5</b>	Hairpin cotter pin	2	Installing the hairpin cotter pins and washers
<b>6</b>	No parts needed		Checking the tire pressure
<b>7</b>	Rear weight	1	Installing the rear weight
	Screw, 5/16 x 1–1/2 inch	2	
	Washer, 5/16 inch	2	
	Nut, 5/16 inch	2	
<b>8</b>	Oil drain hose	1	Use for draining engine oil
	Operator's Manual	1	Read before operating machine
	Engine Operator's Manual	1	Read before operating machine
	Parts Catalog	1	
	Registration card	1	Fill out and return to Toro

## Step

# 1


### Parts needed for this step:

- 1 Handle assembly
- 4 Flange bolts, 3/8 x 1 inch
- 4 Flange nuts, 3/8 inch

## Installing the Handle Assembly

1. Align handle with upper mounting holes in rear frame (Fig. 2).
2. Secure the handle at each upper mounting hole with a flange bolt (3/8 x 1 inch) and flange nut (Fig. 2).
3. Select the low position for the lower mounting hole (Fig. 2).
4. Secure the handle at each lower mounting hole with a flange bolt (3/8 x 1 inch) and flange nut (Fig. 2).

**Note:** The handle position can be adjusted to match the operator's height preference.

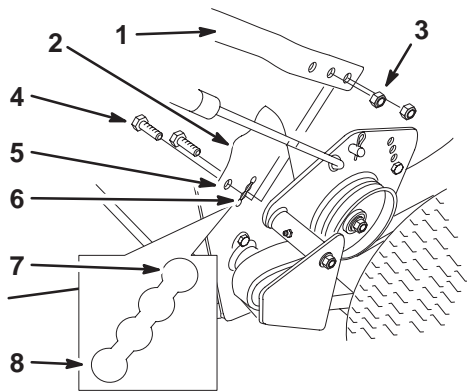

m-6591

**Figure 2**

- |                              |                         |
|------------------------------|-------------------------|
| 1. Upper handle              | 5. Upper mounting hole  |
| 2. Rear frame                | 6. Lower mounting holes |
| 3. Flange nut, 3/8 inch      | 7. Low position         |
| 4. Flange bolt, 3/8 x 1 inch | 8. High position        |

**Note:** Handle assembly must be installed before fuel tank is installed.

## Step


# 2

### Parts needed for this step:

- 1 Fuel tank with studs installed
- 1 Shift lever plate
- 2 Bolts, 5/16 x 7/8 inch
- 2 Lock washers, 5/16 inch
- 2 Flat washers, 5/16 inch
- 2 Springs
- 1 Hose clamp

## Installing the Shift Lever Plate and Fuel Tank

1. Remove the bolts and nuts holding the shift lever plate to the rear frame. Discard these nuts and bolts.
2. Slide the shift lever plate over the shift lever and under the bottom of the rear frame (Fig. 3).

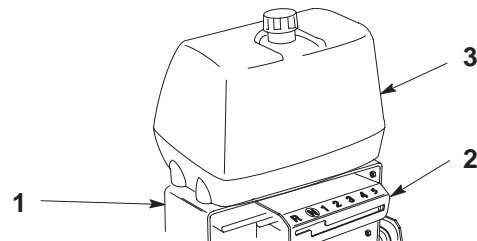

m-5221


**Figure 3**

- |                      |              |
|----------------------|--------------|
| 1. Rear frame        | 3. Fuel tank |
| 2. Shift lever plate |              |

3. Align fuel tank with the top of the rear frame (Fig. 3).
4. Push the fuel line onto the fuel tank connection and secure it with the hose clamp that is on the fuel line (Fig. 5).

**Note:** To ease assembly of the fuel line to fuel tank connection, apply a light lubricant, such as WD 40, to the end of the fuel line.

**Note:** Make sure the fuel line and clamp are on as shown in Figure 4.

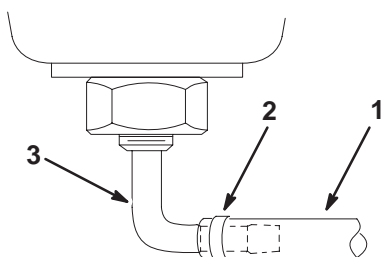


m-6504

**Figure 4**

- |              |                         |
|--------------|-------------------------|
| 1. Fuel line | 3. Fuel tank connection |
| 2. Clamp     |                         |

- Slide the shift lever plate over the shift lever (Fig. 6).
- Secure the right side of shift lever plate and fuel tank to the rear frame (Fig. 5) with 2 bolts (5/16 x 7/8 inch), lock washers (5/16 inch) and washers (5/16 inch) (Fig. 5).
- Secure the left side shift lever plate and fuel tank to the rear frame (Fig. 5) with washers (5/16 inch), springs and locknuts (5/16 inch) (Fig. 5).

**Note:** Tighten left side of shift lever plate until it is completely tight and then unscrew locknut one full turn. This will allow the spring to work.

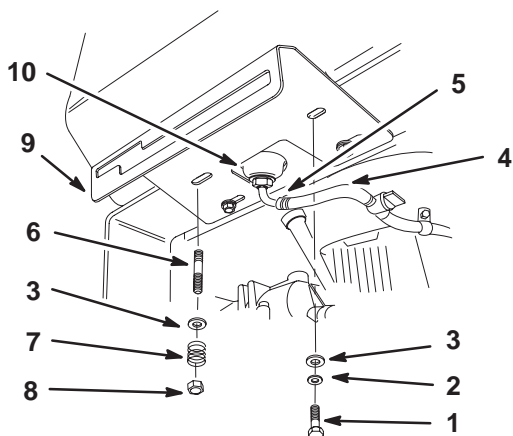

m-6465

**Figure 5**


- |                            |                          |
|----------------------------|--------------------------|
| 1. Bolt, 5/16 x 7/8 inch   | 6. Stud                  |
| 2. Lock washers, 5/16 inch | 7. Spring                |
| 3. Washer, 5/16 inch       | 8. Locknut               |
| 4. Fuel line               | 9. Shift lever plate     |
| 5. Hose clamp              | 10. Fuel tank connection |

## Step 3

**No parts needed for this step.**

## Adjusting the Shift Lever Plate

- Shift lever to second gear and check alignment of lever in slot of shifter lever plate. The clearance between top and bottom of the shift lever should be equal (Fig. 7).
- If clearance is not correct, remove lever and bend it slightly to adjust (Fig. 6).

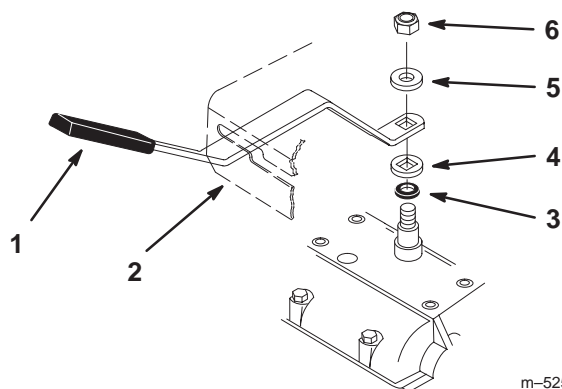

m-5250


**Figure 6**

- |                       |                       |
|-----------------------|-----------------------|
| 1. Shift lever        | 4. Square hole washer |
| 2. Shift lever plate  | 5. Spring washer      |
| 3. Rubber seal washer | 6. Locknut, 3/8 inch  |

**Note:** Do not bend lever while attached to transmission shaft or damage may occur.

- Shift lever to neutral and check alignment of lever in slot of shifter lever plate. The clearance on the sides of shift lever should be equal (Fig. 7).
- If clearance is not correct, loosen shift lever plate and adjust it side-to-side. Tighten the shift lever plate.

**Note:** Tighten the left side of the shift lever plate until it is completely tight and then unscrew the locknut one full turn. This will allow the spring to work.

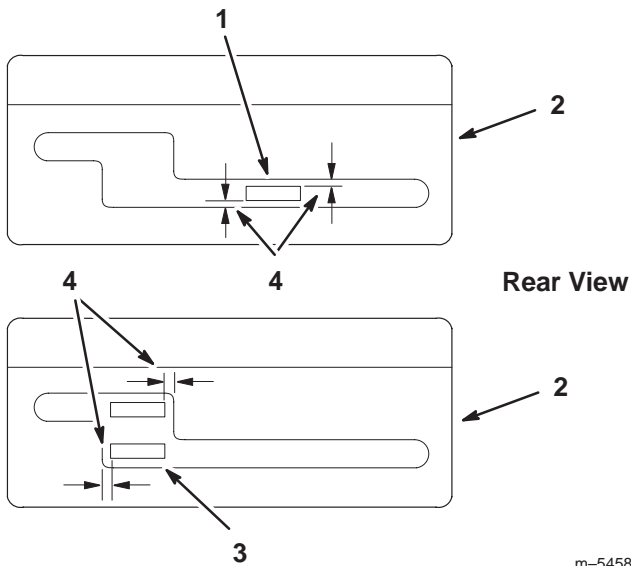

**Figure 7**

- |                          |                         |
|--------------------------|-------------------------|
| 1. Shift lever, 2nd gear | 3. Shift lever, neutral |
| 2. Shift lever plate     | 4. Equal distance       |

m-5458

**Step**

**4**


### Parts needed for this step:

- 2 Clevis pins
- 2 Washers
- 2 Hairpin cotter pins

## Installing the Control Rods

1. Install control rods into the bell cranks and secure with hairpin cottes (Fig. 8).

**Note:** Install rod fittings so the clevis pin is above the control rod, as shown in Figure 8.

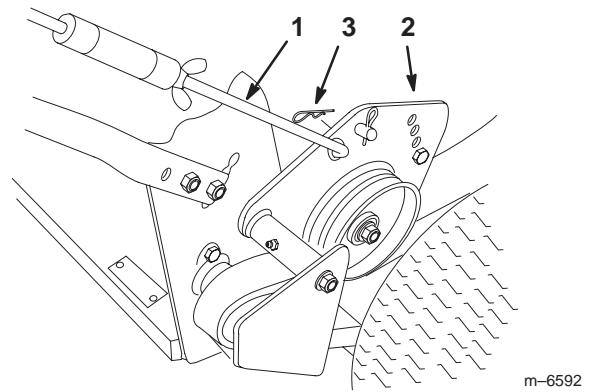


**Figure 8**

- |                |                   |
|----------------|-------------------|
| 1. Control rod | 3. Hairpin cotter |
| 2. Bell crank  |                   |

m-6592

2. Adjust control rod length by threading rod in or out of rod fitting until there is a 3/16 to 1/4 inch (5 mm to 6 mm) clearance between the control rod and bottom of neutral/brake lock (Fig. 9).
3. Install control rod to drive lever and neutral/brake lock. Secure with clevis pin and hairpin cotter.
4. Check operation. If adjustment is required, remove hairpin cotter and clevis pin securing rod to drive levers.
5. Adjust the control rod length by repeating steps 3 and 4 (Fig. 9).
6. Check the parking brake. Refer to Servicing the Brakes on page 32.

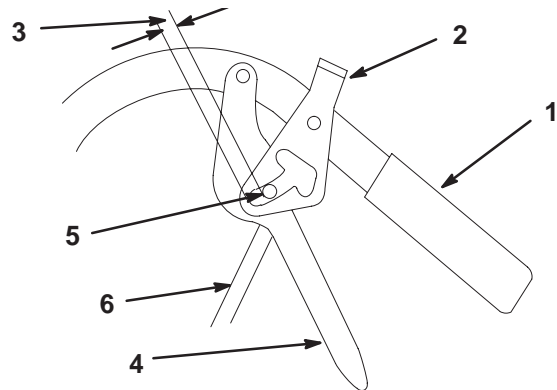

**Figure 9**

- |   |                  |
|---|------------------|
| 1. Handle   | 4. Drive lever   |
| 2. Neutral/Parking brake lock                     | 5. Forward speed |
| 3. 3/16 inch to 1/4 inch (5 mm to 6 mm) clearance | 6. Control Rod   |

m-6582



Step

5


### Parts needed for this step:

- 2 Hairpin cotter pins

## Installing the Hairpin Cotter Pins and Washers

Unused height-of-cut spacers may be stored on posts and retained by a hairpin cotter.

1. On the opposite side of the muffler, install unused washers and hairpin cotter pins into front and rear height-of-cut pins (Fig. 10).

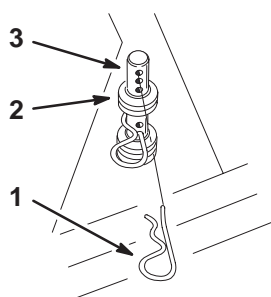

m-6505

Figure 10

1. Hairpin cotter
2. Unused spacers
3. Height-of-cut post

Step

6

No parts needed for this step.

## Checking the Tire Pressure

Refer to Page 30 for the correct correct tire pressure.

Step

7

### Parts needed for this step:

- 1 Rear weight
- 2 Capscrews
- 2 Washers
- 2 Nuts

## Installing the Mid Size Weight

1. Remove lag screws securing weight to the shipping crate. Remove the weight and discard the screws.
2. Secure the weight to **rear** of the frame with 2 capscrews, washers and nuts (Fig. 23).

**Note:** The weight mounted in the **rear** position is **recommended**, except when a Tru-Trak<sup>®</sup> Sulky is installed.

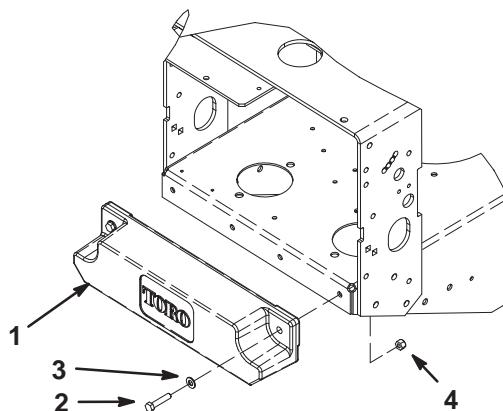


Figure 11

1. Weight
2. Capscrew
3. Washer
4. Nut



### Warning



With the weight installed in the rear position, the front end of the machine can rapidly raise up when the mower is removed. This could cause serious injury to you or bystanders.

- Support the rear of the machine when removing the mower from the carrier frame.



# Operation

**Note:** Determine the left and right sides of the machine from the normal operating position.

## Think Safety First


Carefully read all the safety instructions and decals in the safety section. Knowing this information could help you, your family, pets or bystanders avoid injury.

The use of protective equipment for eyes, hearing, feet and head is recommended.

**Caution**

**This machine produces sound levels in excess of 85dBA at the operator's ear and can cause hearing loss through extended periods of exposure.**

**Wear hearing protection when operating this machine.**

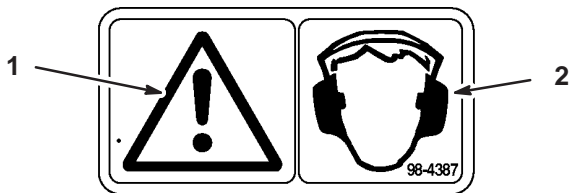

**Figure 12**

1. Caution                      2. Wear hearing protection

## Controls

Become familiar with all the controls (Fig. 13) before you start the engine and operate the machine.

**Throttle control** – The throttle control has three positions: CHOKE, FAST and SLOW.

**Operator Presence Control (OPC) levers** – OPC levers are used in conjunction with deck engagement switch (PTO) to release blade brake and engage clutch to drive mower blades. Release OPC levers to disengage mower blades.

**Blade control switch (PTO)** – Pull switch used in conjunction with OPC levers to release blade brake and engage clutch to drive mower blades.

**Gear shift lever** – Transmission has five forward speeds, neutral and reverse, and has an in-line shift pattern. Do not shift while unit is moving, as transmission damage may occur.


**Drive levers** – Shift to desired gear and release drive levers to engage forward traction operation and squeeze to reverse. Squeeze right side of drive lever to turn right and left side to turn left.

**Neutral lock and Parking brake locks** – Squeeze drive levers back and move locks to the rear for neutral lock. Squeeze drive levers back and move locks to the front for parking brake lock.

**Ignition Switch** – Key switch is used in conjunction with recoil starter. Switch has two positions: Run and Off.

**Recoil Starter** – Pull recoil Starter handle to start engine.

**Fuel Shut-off Valve** – (Under fuel tank) Close fuel shut-off valve when transporting or storing mower.

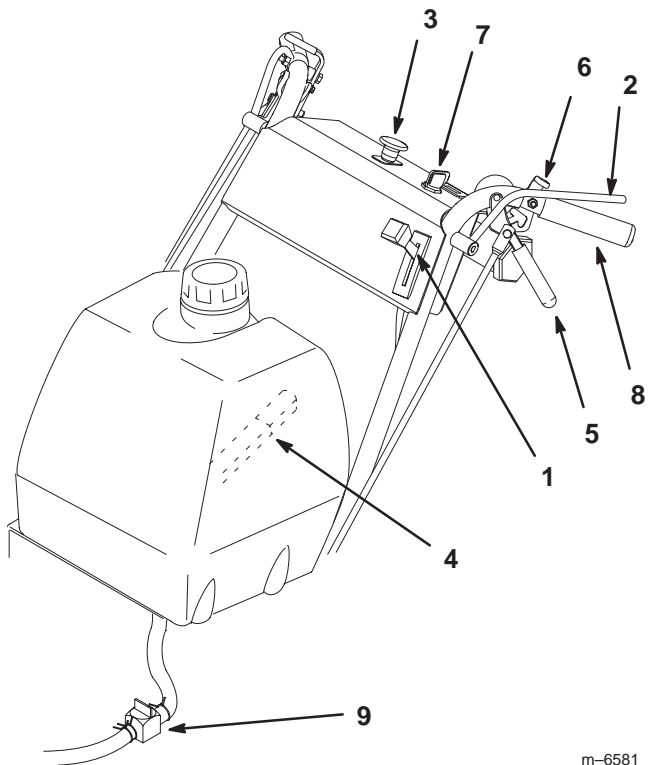

m-6581

**Figure 13**

- |   |   |
|---|---|
| 1. Throttle control                       | 5. Drive levers                         |
| 2. Operator Presence Control levers (OPC) | 6. Neutral lock and Parking brake locks |
| 3. Blade control switch (PTO)             | 7. Ignition switch                      |
| 4. Gear shift lever                       | 8. Handle                               |
|   | 9. Fuel shut-off valve                  |

# Parking Brake and Neutral Lock

Always set the parking brake when you stop the machine or leave it unattended.

## Setting the Parking Brake

1. Squeeze the drive levers back to the grip (Fig. 14).
2. Place thumbs on the upper part of the locks and rotate them forward (Fig. 14).
3. Release the drive levers.

## Releasing the Parking Brake

1. Squeeze the drive levers back to the grip (Fig. 14).
2. Place thumbs on the upper part of of locks and rotate them rearward until in forward speed slot (Fig. 14).

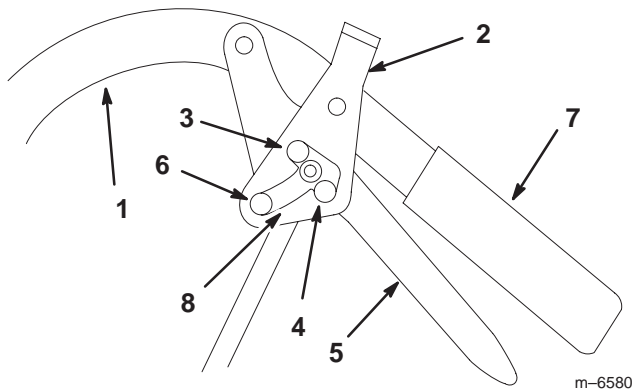


Figure 14

- |                               |                                |
|-------------------------------|--------------------------------|
| 1. Handle                     | 5. Drive lever                 |
| 2. Neutral/Parking brake lock | 6. Full speed forward position |
| 3. Park position              | 7. Grip                        |
| 4. Neutral position           | 8. Forward speed slot          |

## Setting the Neutral Lock

1. Squeeze the drive levers back to the grip (Fig. 14).
2. Place thumbs on the upper part of of locks and rotate them rearward (Fig. 14).

## Releasing the Neutral Lock

1. Squeeze the drive levers back to the grip (Fig. 14).
2. Place thumbs on the upper part of of locks and rotate them forward until in forward speed slot (Fig. 14).

# Starting and Stopping the Engine

## Starting

1. Make sure spark plug wire(s) are installed on spark plug(s) and fuel valve is open.
2. Move the shift lever to neutral, set the parking brake, and turn ignition key to the Run position.
3. Move the throttle control to the Choke position before starting a cold engine.

**Note:** A warm or hot engine usually does not require any choking. To start a warm engine, move throttle control to the Fast position.

4. Grasp recoil starter handle firmly and pull out until positive engagement results; then pull handle vigorously to start engine and allow rope to recoil slowly.

**Important** Do not pull recoil rope to its limit or let go of the starter handle when rope is pulled out because rope may break or recoil assembly may be damaged.

## Stopping

1. Move the throttle lever to the Slow position (Fig. 15).
2. Let engine idle for 30 to 60 seconds before turning the ignition key to off.
3. Set the parking brake.
4. Turn the ignition key to the Off position (Fig. 15).

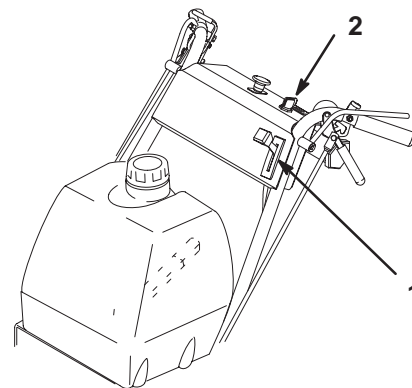


Figure 15

- |                   |                 |
|-------------------|-----------------|
| 1. Throttle lever | 2. Ignition key |
|-------------------|-----------------|

**Important** Make sure fuel shut off valve is closed before transporting or storing machine, as fuel leakage may occur. Before storing the machine, pull the wire off the spark plug(s) to prevent possibility of accidental starting.

## Operating Mower Blade Control (PTO)

The blade control switch (PTO) in conjunction with the Operator Presence Control (OPC) levers engage and disengage power to the electric clutch and mower blades.

### Engaging the Mower Blades (PTO)

1. To engage blade, squeeze the Operator Presence Control (OPC) levers against handle grips (Fig. 16).
2. Pull blade switch (PTO) up and release. Hold the Operator Presence Control (OPC) levers against handle grip.
3. Repeat procedure to engage mower blades if OPC levers are released.

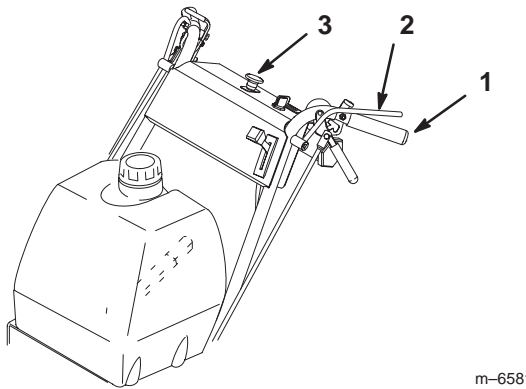


Figure 16

1. Handle
2. Operator Presence Control levers (OPC)
3. Blade control switch (PTO)

### Disengaging the Mower Blades (PTO)

1. Release Operator Presence Control (OPC) levers to disengage blades (Fig. 16). This will also kill the engine.

## The Safety Interlock System



### Caution



If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

## Understanding the Safety Interlock System

The safety interlock system is designed to prevent the engine from starting unless:

- The blade control switch (PTO) is off.
- The machine is shifted into neutral.

The safety interlock system is designed to kill the engine when:

- The Operator Presence Control (OPC) levers are released while the machine is in gear and/or the mower is engaged.
- The machine is shifted into gear without holding OPC levers.
- The blade control switch (PTO) is pulled on without holding the OPC levers.

### Testing the Safety Interlock System

Test the safety interlock system before each use of the machine. If the safety system does not operate as described, have an Authorized Service Dealer repair the safety system immediately.

1. Set the parking brake and place shift lever in neutral. Start the engine; refer to Starting and Stopping the Engine, page 19.
2. Without holding the Operator Presence Control (OPC) levers, pull the blade control switch (PTO) up. **The engine should kill.**
3. Release the blade control switch (PTO).
4. With engine running, hold down the OPC levers. Pull the blade control switch (PTO) up and then release. The clutch should engage and **the mower blades begin rotating.**
5. Release the OPC levers. **The engine should kill.**
6. With the engine is running and holding the OPC levers down, move shift lever into a gear. Release the OPC levers. **The engine should kill.**
7. If all the above conditions are not met have an Authorized Service Dealer repair the safety system immediately.

## Driving Forward or Backward

The throttle control regulates the engine speed as measured in rpm (revolutions per minute). Place the throttle control in the **Fast** position for best performance.


### Driving Forward

1. To go forward, move the shift lever to a forward gear.

2. Release the parking brake; refer to Releasing the Parking Brake, page 19.
3. Slowly release the drive levers to move forward (Fig. 17).

To go straight, release drive levers equally (Fig. 17).

To turn, squeeze the drive lever on the side and direction you want to turn (Fig. 17).

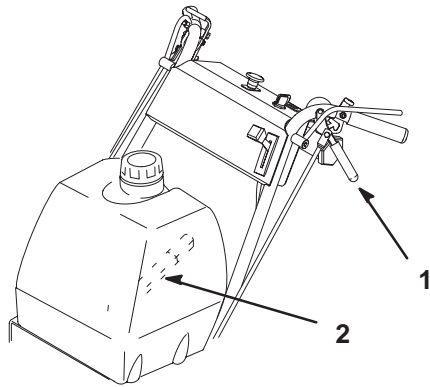

m-6581

**Figure 17**

1. Drive lever
2. Gear shift lever

## Driving Backward

**Note:** To drive backward, the machine may need to be assisted by pulling the machine backwards.

1. To go backward, move the shift lever to the reverse gear.
2. Release the parking brake; refer to Releasing the Parking Brake, page 19.
3. Slowly release the drive levers together to move rearward (Fig. 17).

## Stopping the Machine

1. To stop the machine, squeeze the drive levers back to the grips to engage brakes.
2. Move neutral/brake locks into the park position. Refer to Setting the Parking Brake on page 19.
3. Shift transmission into neutral.
4. Turn the ignition key to Off.

**Note:** Remember to remove the key from the ignition switch if you leave the machine.



## Caution



**Children or bystanders may be injured if they move or attempt to operate the machine while it is unattended.**

**Always remove the ignition key and set the parking brake when leaving the machine unattended, even if just for a few minutes.**

## Transporting Machines

Use a heavy-duty trailer or truck to transport the machine. Ensure that the trailer or truck has all necessary lighting and marking as required by law. Please carefully read all the safety instructions. Knowing this information could help you, your family, pets or bystanders avoid injury.

To transport the machine:

- Set the brake and block wheels.
- Securely fasten the machine to the trailer or truck with straps, chains, cable, or ropes.
- Secure a trailer to towing vehicle with safety chains.

## Side Discharge or Mulch Grass

This mower has a hinged grass deflector that disperses clippings to the side and down toward the turf.



## Danger



**Without the grass deflector, discharge cover, or complete grass catcher assembly mounted in place, you and others are exposed to blade contact and thrown debris. Contact with rotating mower blade(s) and thrown debris will cause injury or death.**

- **Never remove the grass deflector from the mower because the grass deflector routes material down toward the turf. If the grass deflector is ever damaged, replace it immediately.**
- **Never put your hands or feet under the mower.**
- **Never try to clear discharge area or mower blades unless you release the bail and the power take off (PTO) is off. Rotate the ignition key to Off. Also remove the key and pull the wire off the spark plug(s).**

## Adjusting the Height-of-Cut

The height-of-cut can be adjusted from 1 to 4-1/2 inch (25 to 114 mm) in 1/4 inch (6 mm) increments. Adjustment is done by relocating four hairpin cotter pins in different hole location and by adding or removing spacers.

**Note:** All height-of-cut pins need at least one spacer or damage can occur to bushing if none are used.

**Note:** All height-of-cut pins can use only two spacers maximum.

1. Select hole in height-of-cut post and number of spacers corresponding to the height-of-cut desired (Fig. 18).
2. Using lift handle, raise side of deck and remove hairpin cotter (Fig. 18).
3. Add or remove spacers if needed and then align holes and insert hairpin cotter (Fig. 18).

**Note:** Spare height-of-cut spacers may be stored on posts and retained by a hairpin cotter.

**Important** All four hairpin cotter pins must be in the same hole location and with the correct number of spacers for a level cut.

**HEIGHT OF CUT PINS ADJUSTMENT**

- POSITION ALL PINS IN SAME HEIGHT OF CUT HOLE
- TURN ENGINE OFF BEFORE ADJUSTING DECK CUTTING HEIGHT
- NOTE: HEIGHT IS BASED ON USING ONE FRONT SPACER AND ONE REAR SPACER ON ADJUSTMENT PINS
- ADD ONE ADDITIONAL SPACER TO INCREASE CUTTING HEIGHT 1/4 INCH
- NOTE: REFER TO OPERATOR'S MANUAL FOR ADDITIONAL HEIGHT OF CUT ADJUSTMENT.

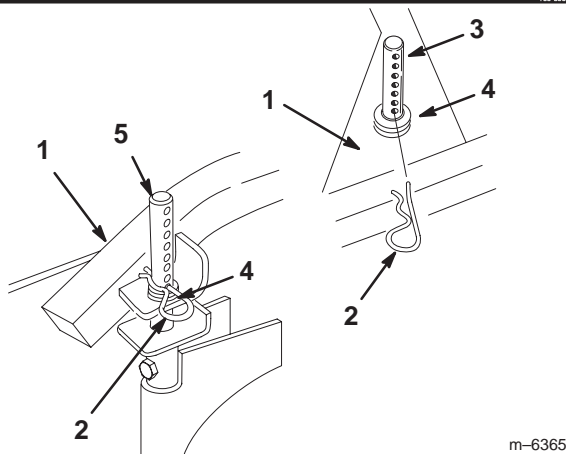


Figure 18

1. Carrier Frame
2. Hairpin Cotter
3. Front height-of-cut post
4. Spacers
5. Back height-of-cut post

## Adjusting the Gage Wheels

The gage wheels need to be adjusted in the proper hole location for each height-of-cut position. There needs to be 3/8 inch (10 mm) minimum clearance above the ground.

1. After adjusting height-of-cut, check the gage wheels so that there is a minimum of 3/8 inch (10 mm) clearance above the ground (Figures 19, 20, and 21).
2. If adjustment is needed, remove the bolt, washer(s) and nut (Figures 19, 20, and 21).
3. Select a hole position so the gage wheels are a minimum of 3/8 inch (10 mm) off the ground (Figures 19, 20, and 21).
4. Install the bolt, washer(s) and nut (Figures 19, 20, and 21).


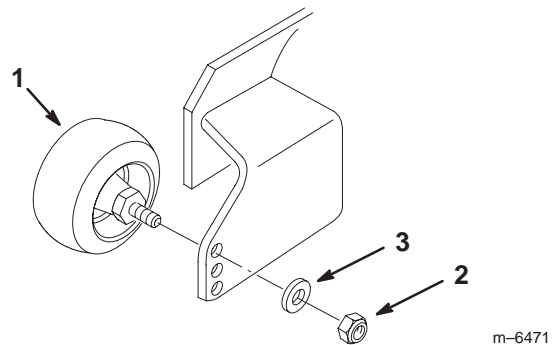



Figure 19

1. Gage wheel
2. Nut
3. Washer

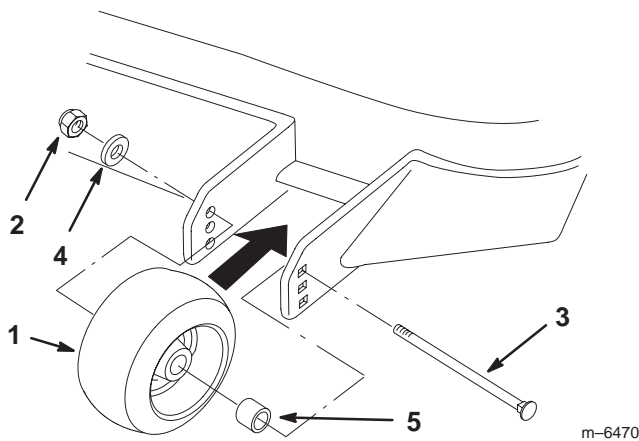

**Figure 20**

- |               |           |
|---------------|-----------|
| 1. Gage wheel | 4. Washer |
| 2. Nut        | 5. Spacer |
| 3. Bolt       |           |

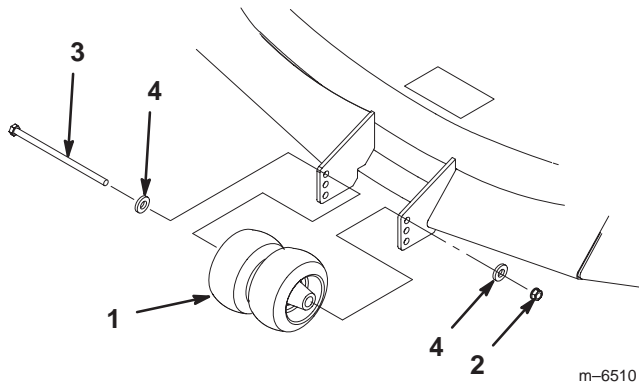


**Figure 21**

- |                                     |           |
|-------------------------------------|-----------|
| 1. Center Gage Wheels and<br>Spacer | 3. Bolt   |
| 2. Nut                              | 4. Washer |

## Adjusting the Handle Height

The handle position can be adjusted to match the operator's height preference.

1. Remove hairpin cotter, washer and clevis pin securing control rod fitting to idler bracket (Fig. 22).

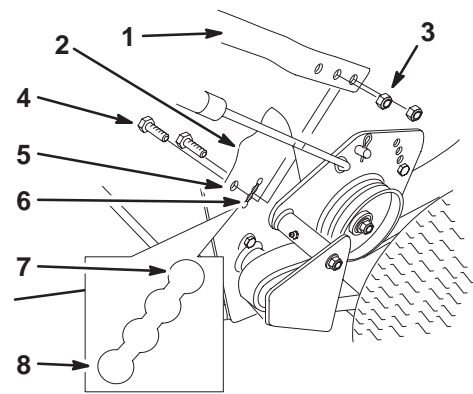

**Figure 22**

- |                              |                         |
|------------------------------|-------------------------|
| 1. Upper handle              | 5. Upper mounting hole  |
| 2. Rear frame                | 6. Lower mounting holes |
| 3. Flange nut, 3/8 inch      | 7. Low position         |
| 4. Flange bolt, 3/8 x 1 inch | 8. High position        |

2. Loosen the upper flange bolts (3/8 x 1 inch) and flange nut securing handle to rear frame (Fig. 22).
3. Remove the lower flange bolts (3/8 x 1 inch) and flange nuts securing handle to rear frame (Fig. 22).
4. Pivot handle to desired operating position and install lower flange bolts (3/8 x 1 inch) and flange nuts into mounting holes. Tighten all flange bolts.
5. Thread rod fitting up or down on rod until proper position is attained and install into fitting to idler bracket with clevis pin, washer and hairpin cotter.
6. Check the parking brake adjustment; refer to Checking the Brakes, page 32.

## Using the Mid-Size Weight

This machine includes a weight installed in the rear position (Fig. 23).

- The weight mounted in the **rear** position is **recommended**, except when a Tru-Trak<sup>®</sup> Sulky is installed.
- The weight mounted in the back position, must be removed when the when a Tru-Trak<sup>®</sup> Sulky is installed.






## Warning



With the weight installed in the rear position, the front end of the machine can rapidly raise up when the mower is removed. This could cause serious injury to you or bystanders.

- Support the rear of the machine when removing the mower from the carrier frame.

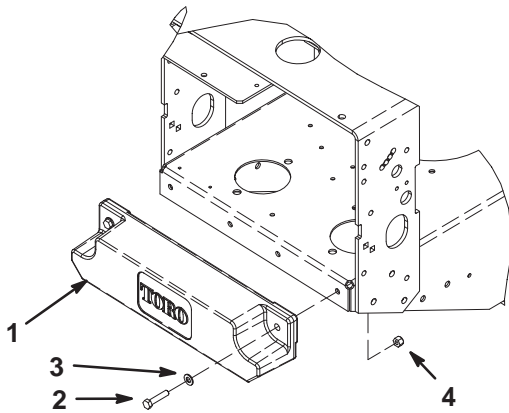

**Figure 23**

- |                                    |           |
|------------------------------------|-----------|
| 1. Weight mounted in rear position | 3. Washer |
| 2. Capscrew                        | 4. Nut    |



# Maintenance

**Note:** Determine the left and right sides of the machine from the normal operating position.

## Recommended Maintenance Schedule

Maintenance Service Interval	Maintenance Procedure
Each Use	<ul style="list-style-type: none"> <li>• Oil—check level</li> <li>• Safety System—check</li> <li>• Brake—check</li> <li>• Engine—clean outside</li> <li>• Mower Housing—clean</li> </ul>
After first 8 Hours	<ul style="list-style-type: none"> <li>• Oil—change</li> </ul>
8 Hours	<ul style="list-style-type: none"> <li>• Cutting Blades—check</li> <li>• Mower Housing—clean</li> <li>• Caster Wheels—grease</li> </ul>
25 Hours	<ul style="list-style-type: none"> <li>• Foam Air Cleaner—service<sup>1</sup></li> </ul>
40 Hours	<ul style="list-style-type: none"> <li>• PTO Belt Idler Arm—grease</li> <li>• Tires—check pressure</li> </ul>
50 Hours	<ul style="list-style-type: none"> <li>• Belts—check for wear/cracks</li> <li>• Paper Air Cleaner—clean<sup>1</sup></li> </ul>
100 Hours	<ul style="list-style-type: none"> <li>• Oil—change<sup>1</sup></li> <li>• Spark Plug(s)—check</li> <li>• Electric Clutch—adjust</li> <li>• Engine—clean outside</li> </ul>
200 Hours	<ul style="list-style-type: none"> <li>• Oil Filter—change (200 hours or every other oil change)</li> <li>• Fuel Filter—replace</li> <li>• Paper Air Cleaner—replace<sup>1</sup></li> </ul>
250 Hours	<ul style="list-style-type: none"> <li>• Transmission Couplings—grease<sup>1</sup></li> </ul>
400 Hours	<ul style="list-style-type: none"> <li>• Wheel Bearings—grease<sup>1</sup></li> </ul>
At storage	<ul style="list-style-type: none"> <li>• Chipped Surfaces—paint</li> <li>• Perform all maintenance procedures listed above before storage</li> </ul>

<sup>1</sup>More often in dusty, dirty conditions.

**Important** Refer to your engine operator's manual for additional maintenance procedures.



### Caution



**If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.**

**Remove the key from the ignition and disconnect the wire from the spark plug(s) before you do any maintenance. Set the wire aside so that it does not accidentally contact the spark plug.**

# Air Cleaner Service

## Service Interval/Specification

Foam Element: Clean and re-oil after every 25 operating hours.

Paper Element: Clean after every 50 operating hours.  
Replace after every 200 operating hours.

**Note:** Service the air cleaner more frequently (every few hours) if operating conditions are extremely dusty or sandy.

## Removing the Foam and Paper Elements

1. Disengage the power take off (PTO), chock or block tires, and turn the ignition key to Off. Remove the key.
2. Clean around the air cleaner to prevent dirt from getting into the engine and causing damage. Pull out on retaining latches and remove the air cleaner cover (Fig. 24).
3. Unscrew nut and remove the air cleaner assembly (Fig. 24).
4. Carefully pull the foam element off the paper element (Fig. 24).

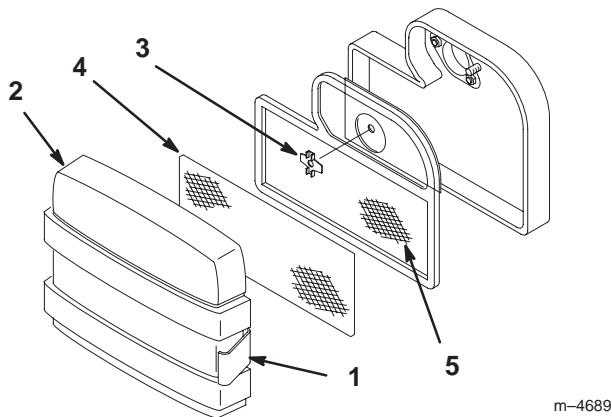


Figure 24

- |                    |                  |
|--------------------|------------------|
| 1. Retaining latch | 4. Foam element  |
| 2. Cover           | 5. Paper element |
| 3. Nut             |                  |

## Cleaning the Foam

1. Wash the foam element in liquid soap and warm water. When the element is clean, rinse it thoroughly.
2. Dry the element by squeezing it in a clean cloth.
3. Put one or two ounces of oil on the element (Fig. 25). Squeeze the element to distribute the oil.

**Important** Replace the foam element if it is torn or worn.

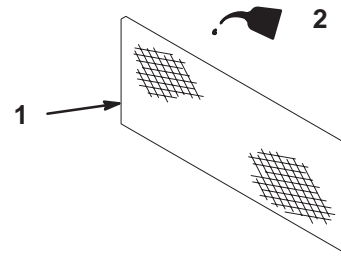


Figure 25

- |                 |        |
|-----------------|--------|
| 1. Foam element | 2. Oil |
|-----------------|--------|

## Cleaning the Paper Element

1. Lightly tap the element on a flat surface to remove dust and dirt (Fig. 26).
2. Inspect the element for tears, an oily film, and damage to the rubber seal.

**Important** Never clean the paper element with pressurized air or liquids, such as solvent, gas, or kerosene. Replace the paper element if it is damaged, defective, or cannot be cleaned thoroughly.

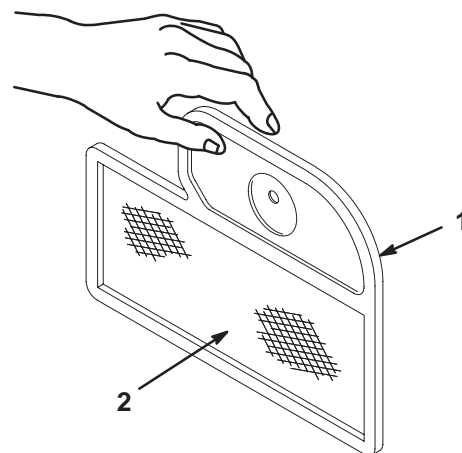


Figure 26

- |                  |                |
|------------------|----------------|
| 1. Paper element | 2. Rubber seal |
|------------------|----------------|

## Installing the Foam and Paper Elements

**Important** To prevent engine damage, always operate the engine with the complete foam and paper air cleaner assembly installed.

1. Carefully place the foam element onto the paper air cleaner element (Fig. 24).
2. Place the air cleaner assembly onto the air cleaner base (Fig. 24). Secure with nut.
3. Install the air cleaner cover and secure latches (Fig. 24).

# Engine Oil Service

## Service Interval/Specification

Change oil:

- After the first 8 operating hours.
- After every 100 operating hours.


**Note:** Change oil more frequently when operating conditions are extremely dusty or sandy.

Oil Type: Detergent oil (API service SE, SF or SG)

Crankcase Capacity: with new filter, 57-1/2 oz. (1.7 l)

without new filter, 51 oz. (1.5 l)

Viscosity: See table below

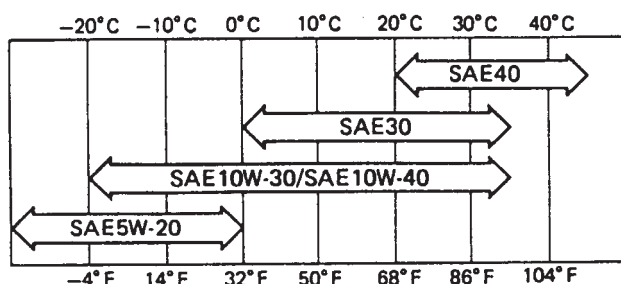

## Checking Oil Level

1. Park the machine on a level surface, disengage the power take off (PTO), chock or block tires, and turn the ignition key to Off. Remove the key.
2. Clean around the oil dipstick (Fig. 27) so dirt cannot fall into the filler hole and damage the engine.
3. Unscrew the oil dipstick and wipe the metal end clean (Fig. 27).
4. Thread the oil dipstick fully onto the filler tube (Fig. 27). Pull the dipstick out and look at the metal end. If oil level is low, slowly pour only enough oil into the filler tube to raise the level to the Full mark.

**Important** Do not overfill the crankcase with oil because the engine may be damaged.

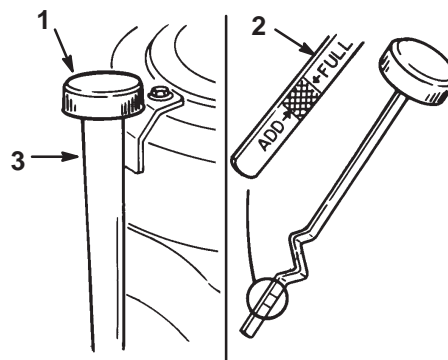


Figure 27

1. Oil dipstick
2. Metal end
3. Filler tube

## Changing/Draining Oil

1. Start the engine and let it run five minutes. This warms the oil so it drains better.
2. Park the machine so that the drain side is slightly lower than the opposite side to assure the oil drains completely.
3. Disengage the PTO and set the parking brake.
4. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
5. Slide the drain hose over the oil drain valve.
6. Place a pan below the drain hose. Rotate oil drain valve to allow oil to drain (Fig. 28).
7. When oil has drained completely, close the drain valve.
8. Remove the drain hose (Fig. 28).

**Note:** Dispose of the used oil at a recycling center.

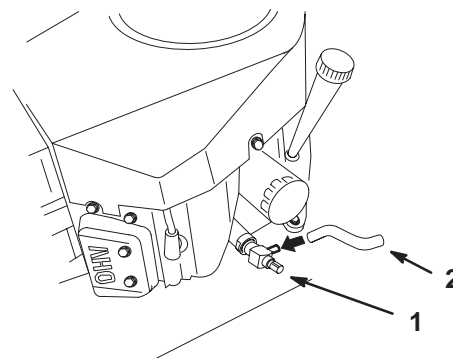


Figure 28

1. Oil drain valve
2. Drain hose

9. Slowly pour approximately 80% of the specified oil, page 27, into the filler tube (Fig. 27).

10. Check the oil level; refer to Checking Oil Level, page 27.
11. If needed, slowly add additional oil to bring to the **full** mark on dipstick.

## Change Oil Filter

### Service Interval/Specification

Replace the oil filter every 200 hours or every other oil change.

**Note:** Change oil filter more frequently when operating conditions are extremely dusty or sandy.

1. Drain the oil from the engine; refer to Changing/Draining Oil, page 27.
2. Remove the old filter (Fig. 29).
3. Apply a thin coat of new oil to the rubber gasket on the replacement filter (Fig. 29).

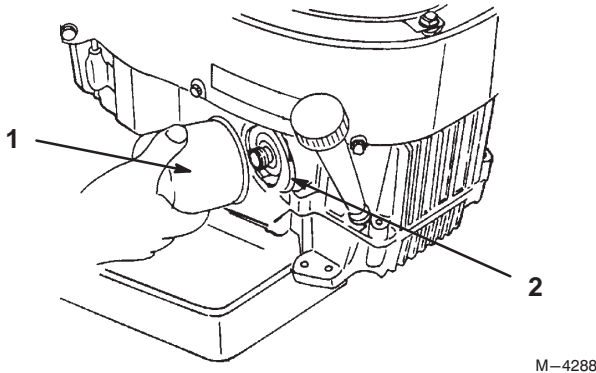


Figure 29

1. Oil filter
2. Adapter

4. Install the replacement oil filter to the filter adapter. Turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 3/4 turn (Fig. 29).
5. Fill the crankcase with the proper type of new oil; refer to Engine Oil Service, page 27.

## Spark Plug Service

### Service Interval/Specification

Check the spark plug(s) after every 100 operating hours. Make sure the air gap between the center and side electrodes is correct before installing the spark plug. Use a spark plug wrench for removing and installing the spark plug(s) and a gapping tool/feeler gauge to check and adjust the air gap. Install a new spark plug(s) if necessary.

Type: Champion® RCJ8Y or NGK® BPR4ES  
Air Gap: 0.030 inch (.75 mm)

### Removing the Spark Plug(s)

1. Disengage the power take off (PTO), chock or block tires, and turn the ignition key to Off. Remove the key.
2. Pull the wire(s) off the spark plug(s) (Fig. 30). Now clean around the spark plug(s) to prevent dirt from falling into the engine and potentially causing damage.
3. Remove the spark plug(s).

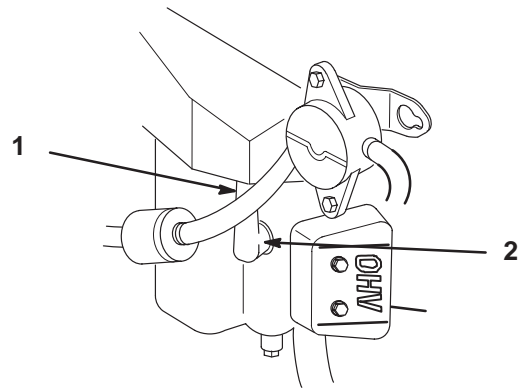


Figure 30

1. Spark plug wire installed
2. Spark plug

### Checking the Spark Plug

1. Remove spark plug.
2. Look at the center of the spark plug(s) (Fig. 31). If you see light brown or gray on the insulator, the engine is operating properly. A black coating on the insulator usually means the air cleaner is dirty.

**Important** Never clean the spark plug(s). Always replace the spark plug(s) when it has: a black coating, worn electrodes, an oily film, or cracks.

3. Check the gap between the center and side electrodes (Fig. 31). Bend the side electrode (Fig. 31) if the gap is not correct.

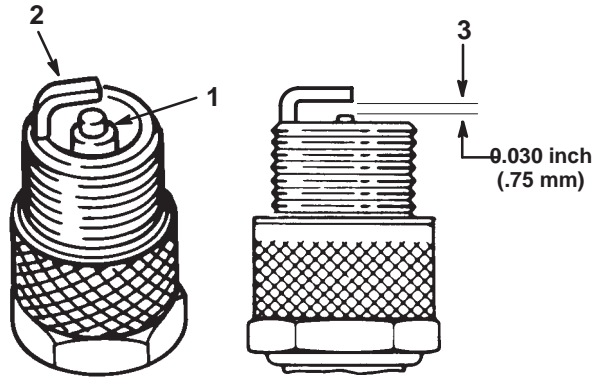


Figure 31

1. Center electrode insulator
2. Side electrode
3. Air gap (not to scale)

## Installing the Spark Plug(s)

1. Install the spark plug(s). Make sure the air gap is set correctly.
2. Tighten the spark plug(s) to 11 ft-lb (15 N•m).
3. Push the wire(s) onto the spark plug(s) (Fig. 30).

## Greasing and Lubrication

### Service Interval/Specification

Refer to the **Check Service Reference Aid** decal for location and interval of greasing and lubrication (Figure 32).

Grease with No. 2 general purpose lithium base or molybdenum base grease.

### How to Grease

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to Off. Remove the key.
2. Clean the grease fittings with a rag. Make sure to scrape any paint off the front of the fitting(s).

3. Connect a grease gun to the fitting. Pump grease into the fittings until grease begins to ooze out of the bearings.
4. Wipe up any excess grease.

## Where to Add Grease

Lubricate the grease fittings as shown on the **Check Service Reference Aid** decals (Fig. 32).


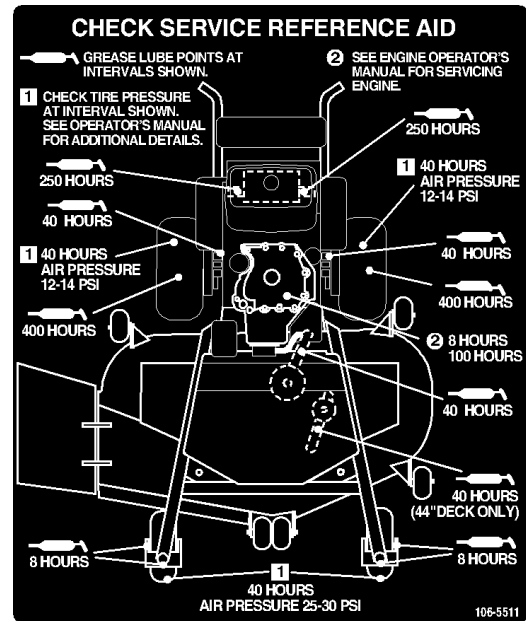


Figure 32

## Lubricating the Caster and Wheel Bearings

1. Lubricate the front wheel bearings and front spindles until grease begins to ooze out of the bearings (Fig. 33).
2. Raise the rear of the machine and use jack stands to support the machine.
3. Remove the rear wheel and tire assembly.
4. Remove rear wheel grease cap. Lubricate the rear wheel bearing (Fig. 33).
5. Install the grease cap.
6. Install the rear wheel and tire assembly.

**Note:** Make sure the rear wheel grease caps are removed before lubricating rear wheels.

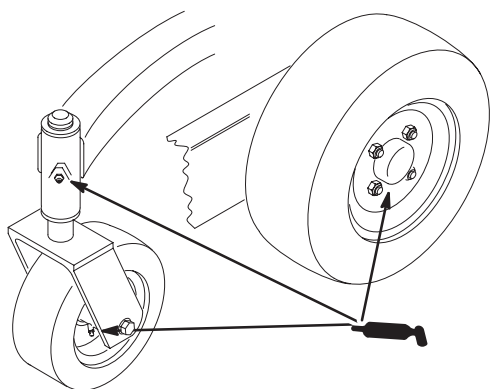


m-6367

**Figure 33**

## Lubricate the Transmission and Idler Bracket

1. Lubricate the transmission couplers located in the back of the machine (Fig. 34).

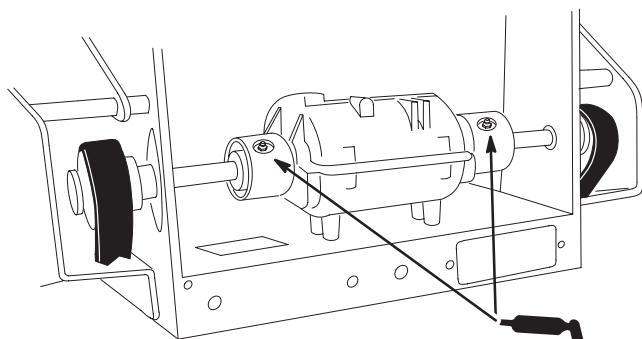


m-6594

**Figure 34**

## Greasing the PTO Drive Belt Idler

1. Stop the engine, chock or block tires, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Grease the idler pulley pivot for the deck (Fig. 35).

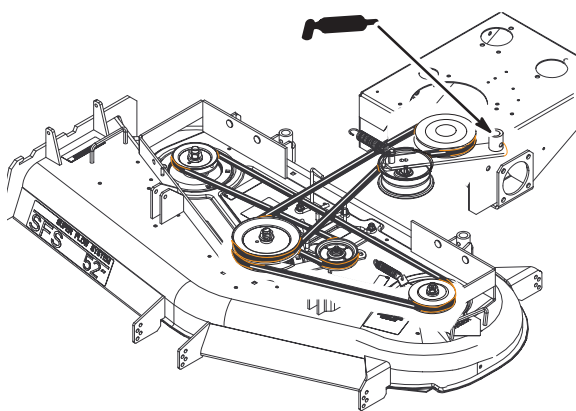

m-5196

**Figure 35**

## Cleaning the Cooling System

### Service Interval/Specification

Before each use, check and clean engine cooling system. Remove any build-up of grass, dirt or other debris from the cylinder and cylinder head cooling fins, air intake screen on flywheel end, and carburetor-governor levers and linkage. This will help insure adequate cooling and correct engine speed and will reduce the possibility of overheating and mechanical damage to the engine.


## Checking the Tire Pressure

### Service Interval/Specification

Maintain the air pressure in the front and rear tires as specified. Check the pressure at the valve stem after every 40 operating hours or monthly, whichever occurs first (Fig. 36). Check the tires when they are cold to get the most accurate pressure reading.


Rear Tire Pressure: 12–14 psi (83–97 kPa)

Caster Tire Pressure: 25–30 psi (172–207 kPa)

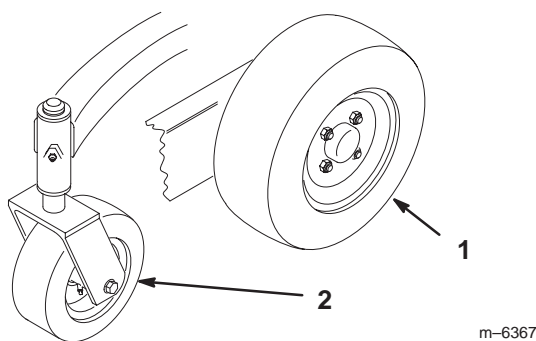

**Figure 36**

1. Rear Tire
2. Caster tire

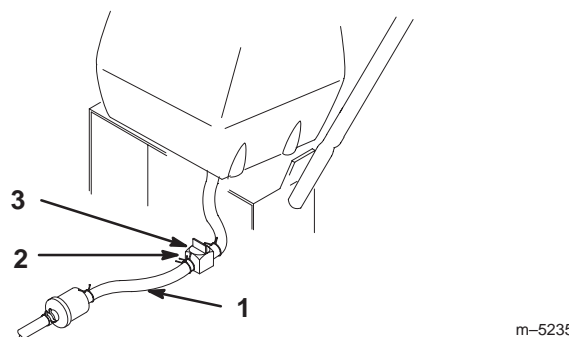

**Figure 37**

1. Fuel line
2. Hose clamp
3. Fuel shut off valve

## Fuel Tank Service

Danger

**In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.**

- Drain gasoline from the fuel tank when the engine is cold. Do this outdoors in an open area. Wipe up any gasoline that spills.**
- Never smoke when draining gasoline, and stay away from an open flame or where a spark may ignite the gasoline fumes.**

### Draining The Fuel Tank

1. Park the machine on a level surface, to assure fuel tank drains completely. Then disengage the power take off (PTO) and turn the ignition key to Off. Remove the key.
2. Close fuel shut-off valve (Fig. 37).

**Note:** Remove fuel line from fuel valve that is closest to the engine.

3. Squeeze the ends of the hose clamp together and slide it away from valve (Fig. 37).
4. Pull the fuel line off the valve (Fig. 37). Open fuel shut-off valve and allow gasoline to drain into a gas can or drain pan.

**Note:** Now is the best time to install a new fuel filter because the fuel tank is empty. Refer to Replacing the Fuel Filter; page 31.

5. Install the fuel line onto the valve. Slide the hose clamp close to the valve to secure the fuel line.

## Fuel Filter Service

Replace the fuel filter after every 200 operating hours or yearly, whichever occurs first.


### Replacing the Fuel Filter

Never install a dirty filter if it is removed from the fuel line.

**Note:** Note how the fuel filter is installed.

1. Disengage the power take off (PTO) and turn the ignition key to Off. Remove the key.
2. Close fuel shut-off valve at fuel tank (Fig. 38).
3. Squeeze the ends of the hose clamps together and slide them away from the filter (Fig. 38).
4. Remove the filter from the fuel lines.
5. Install a new filter and move the hose clamps close to the filter.
6. Open fuel shut-off valve at fuel tank (Fig. 38).
7. Check for fuel leaks and repair if needed (Fig. 38).



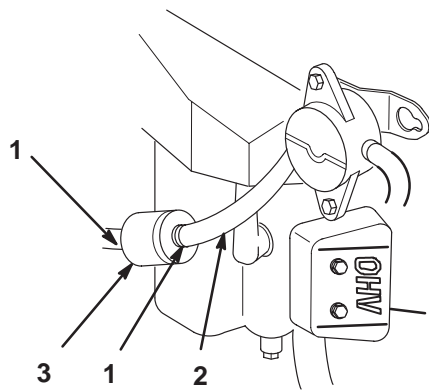

M-4294

**Figure 38**


1. Hose clamp
2. Fuel line
3. Filter

## Fuse Service

### Service Interval/Specification

The electrical system is protected by a fuse. It requires no maintenance. If the fuse blows check component or circuit for malfunction or short. To replace fuse, pull out on the fuse (Fig. 39) and push in new fuse.

Fuse: F1-10 amp, blade-type

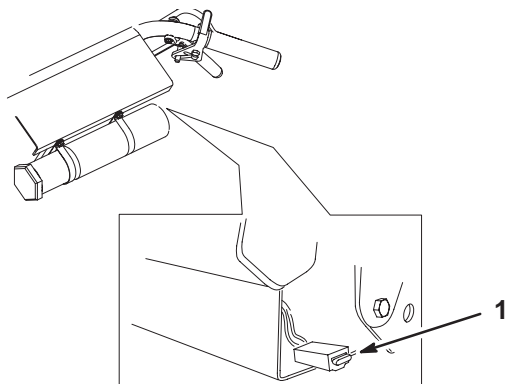

m-5391

**Figure 39**


1. Fuse 10 amp

## Adjusting the Electric Clutch

The clutch is adjustable to ensure proper engagement and proper braking. Check adjustment after every 100 hours of operation.

1. To adjust clutch, tighten or loosen lock nuts on flange studs (Fig. 40).
2. Check adjustment by inserting feeler gauge thru slots next to studs (Fig. 40).

3. The proper disengaged clearance between the clutch plates is 0.012–0.018 inch (0.30-0.45 mm). It will be necessary to check this clearance at each of the three slots to ensure the plates are parallel to each other.

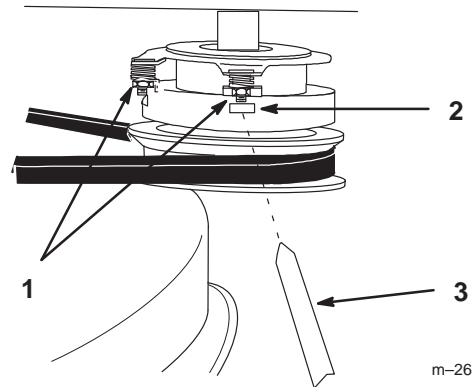

m-2600

**Figure 40**

1. Adjusting nut
2. Slot
3. Feeler gauge

## Servicing the Brakes

### Service Interval/Specification

Before each use, check brakes on both a level surface and slope.

Always set the parking brake when you stop the machine or leave it unattended. If the parking brake does not hold securely, an adjustment is required.

### Checking the Brake

1. Park the machine on a level surface, disengage the PTO.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Push the neutral/brake lock forward to set the brake.
4. Rear wheels must lock when you try to push the machine forward or backward. Adjustment is required if the wheels turn and do not lock. Refer to Adjusting the Brake on page 33.
5. Release the brake and move neutral/brake lock to the neutral position. Move the machine lightly, approximately 1/2 in. (13 mm). Wheels should rotate freely.
6. If both conditions are met, no adjustment is required.




## Adjusting the Brakes

The brake lever is on the upper control bar (Fig. 13). If the parking brake does not hold securely, an adjustment is required.

**Note:** For the initial adjustment, adjust the wing nut until it is 1–1/4 inches from the top of the rod (Fig. 41).

1. Park the machine on a level surface, disengage the PTO, and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Check the brake before you adjust it; refer to Checking the Brakes, page 32.
4. Release the parking brake; refer to Releasing the Parking Brake, page 19.
5. To adjust the brake remove the hair pin cotter and washer from the bell crank and trunnion (Fig. 41).
6. Rotate the wing nut clockwise to increase the braking pressure.
7. Rotate the wing nut counterclockwise to decrease the braking pressure.
8. Install the trunnion into the hole for the brake rod (Fig. 41). Tighten the wing nut.
9. Secure trunnion to brake lever with washer and hair pin cotter (Fig. 41).
10. Check the brake operation again; refer to Checking the Brake, page 32.

**Important** With the parking brake released, the rear wheels must rotate freely when you push the mower. If brake action and free wheel rotation cannot be achieved contact your service dealer immediately.

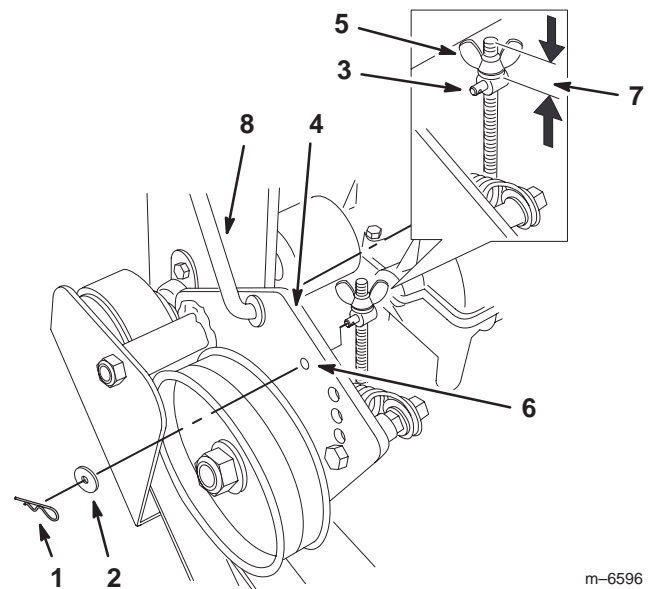

m-6596

**Figure 41**

- |                   |  |
|-------------------|--|
| 1. Hairpin cotter | 6. Hole for brake rod                        |
| 2. Washer         | 7. Initial adjustment—<br>1–1/4 inch (32 mm) |
| 3. Trunnion       | 8. Rod                                       |
| 4. Bell crank     |  |
| 5.                |  |

## Servicing the Cutting Blades

To ensure a superior quality of cut, keep the blades sharp. For convenient sharpening and replacement, you may want to keep extra blades on hand.



### Warning



**A worn or damaged blade can break, and a piece of the blade could be thrown into the operator's or bystander's area, resulting in serious personal injury or death.**

- Inspect the blade periodically for wear or damage.
- Replace a worn or damaged blade.

## Before Inspecting or Servicing the Blades

Park the machine on a level surface, disengage the blade control (PTO) and set the parking brake. Turn the ignition key to **off**. Remove the key and disconnect the spark plug wire(s) from the spark plug(s).

## Inspecting the Blades

1. Inspect the cutting edges (Fig 42). If the edges are not sharp or have nicks, remove and sharpen the blades. Refer to Sharpening the Blades on page 35.
2. Inspect the blades, especially the curved area (Fig. 42). If you notice any damage, wear, or a slot forming in this area (item 3 in Fig. 42), immediately install a new blade.

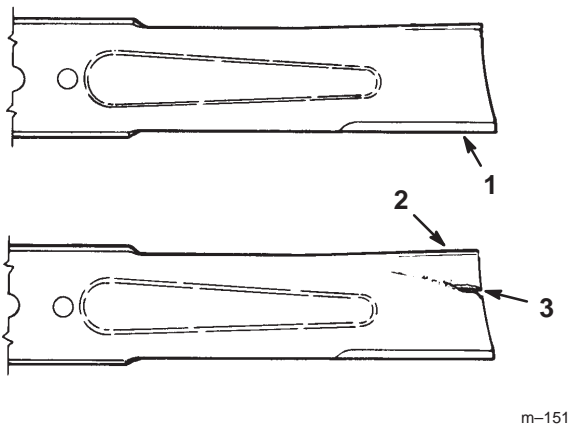


Figure 42

1. Cutting Edge
2. Curved Area
3. Wear/slot Forming

## Checking for Bent Blades

1. Rotate the blades until the ends face forward and backward (Fig. 43). Measure from a level surface to the cutting edge, position A, of the blades (Fig. 44). Note this dimension.

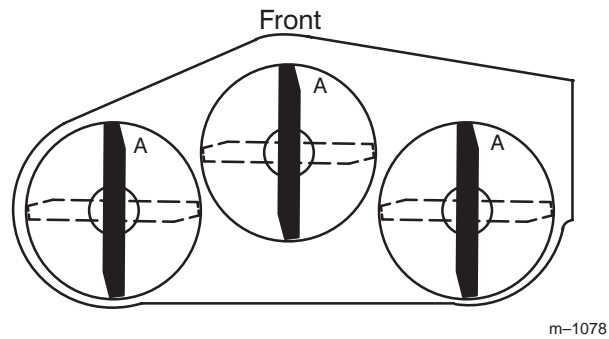


Figure 43

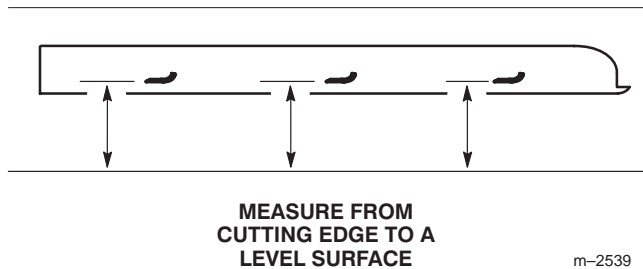


Figure 44

2. Rotate the opposite ends of the blades forward.
3. Measure from a level surface to the cutting edge of the blades at the same position as in step 1. The difference between the dimensions obtained in steps 1 and 2 must not exceed 1/8 inch (3 mm). If this dimension exceeds 1/8 inch (3 mm), the blade is bent and must be replaced. Refer to Removing the Blades, and Installing the Blades on page 35.



## Warning



A blade that is bent or damaged could break apart and could seriously injure or kill you or bystanders.

- Always replace bent or damaged blade with a new blade.
- Never file or create sharp notches in the edges or surfaces of blade.

## Removing the Blades

Blades must be replaced if a solid object is hit, if the blade is out of balance or is bent. To ensure optimum performance and continued safety conformance of the machine, use genuine TORO replacement blades. Replacement blades made by other manufacturers may result in non-conformance with safety standards.

1. Hold the blade end using a rag or thickly-padded glove. Remove the blade bolt, blade stiffener, washer, and blade from the spindle shaft (Fig. 45).

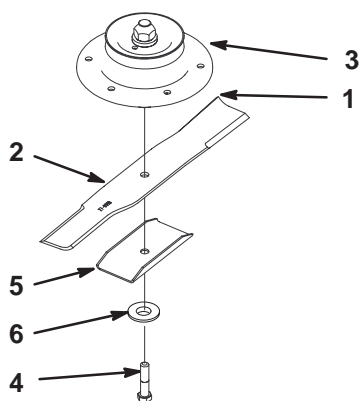


Figure 45

- |                       |                    |
|-----------------------|--------------------|
| 1. Sail Area of Blade | 4. Blade Bolt      |
| 2. Blade              | 5. Blade stiffener |
| 3. Blade spindle      | 6. Flat washer     |

## Sharpening the Blades

1. Use a file to sharpen the cutting edge at both ends of the blade (Fig. 46). Maintain the original angle. The blade retains its balance if the same amount of material is removed from both cutting edges.

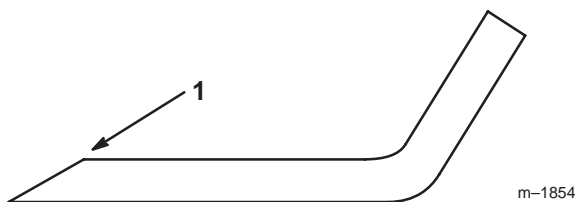


Figure 46

1. Sharpen at original angle

2. Check the balance of the blade by putting it on a blade balancer (Fig. 47). If the blade stays in a horizontal position, the blade is balanced and can be used. If the blade is not balanced, file some metal off the end of the sail area only (Fig. 45). Repeat this procedure until the blade is balanced.

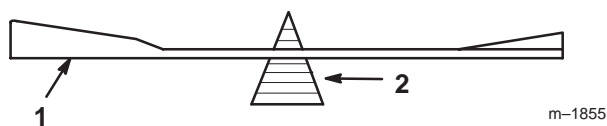


Figure 47

1. Blade
2. Balancer

## Installing the Blades

1. Install the blade onto the spindle shaft (Fig. 45).

**Important** The sail part of the blade must be pointing upward, toward the inside of the mower to ensure proper cutting (Fig. 45).

2. Install the lock washer and blade bolt (Fig. 45). Torque the blade bolt to 85–110 ft-lb (115–140 N•m).

## Correcting the Mower Quality of Cut

If one deck blade cuts lower than the other, correct as follows.

**Note:** Tire air pressure is critical in these procedures. Make sure all tires have correct pressure.


1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position. Disconnect the spark plug wire(s) from the spark plug(s).
3. Adjust the tire pressure in all tires to specifications on page 30.
4. Check that the blades and spindle shafts are not bent. Refer to Checking for Bent Blades on page 34.
5. Set the height-of-cut to the 4 inch (101.6 mm) position. Refer to Adjusting the Height-Of-Cut in the Operation section.
6. Perform steps in the following sections Frame Set Up, Checking Front-to-Rear Pitch and Checking Side-to-Side Leveling.

## Frame Set Up

### Checking Carrier Frame and Deck Alignment

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.

- Place a long straight edge on top of the engine deck as shown in figure 48.
- At the carrier frame cross tube, measure location **A** height (Fig. 48). This measurement must be 1–5/16 inch (33 mm), plus or minus a 1/4 inch (6 mm).
- If the height at location **A** is not correct, adjustment is needed.
- Loosen the carrier frame mounting bolts on both sides of the machine (Fig. 48).
- Align the carrier frame and engine deck to match 1–5/16 inch (33 mm), plus or minus a 1/4 inch (6 mm) at location **A** (Fig. 48).
- Tighten the carrier frame mounting bolts on both sides of the machine.

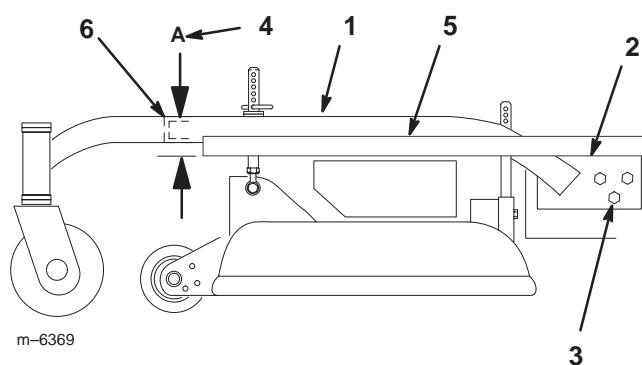


**Figure 48**

- |                                 |  |
|---------------------------------|--|
| 1. Carrier Frame                | 4. Location <b>A</b> , 1–5/16 inch (33 mm) $\pm$ 1/4 inch (6 mm) |
| 2. Top of engine deck           | 5. Straight edge   |
| 3. Carrier frame mounting bolts | 6. Carrier frame cross tube                                      |

## Checking Engine Deck Height

- Disengage the PTO and set the parking brake.
- Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
- Adjust the tire pressure in all tires to specifications on page 30.

- Measure engine deck height at location **A** (Fig. 49).
- Measure engine deck height at location **B** (Fig. 49).
- If the height at location **A** and **B** are not the same, change tire pressure slightly to make them the same.

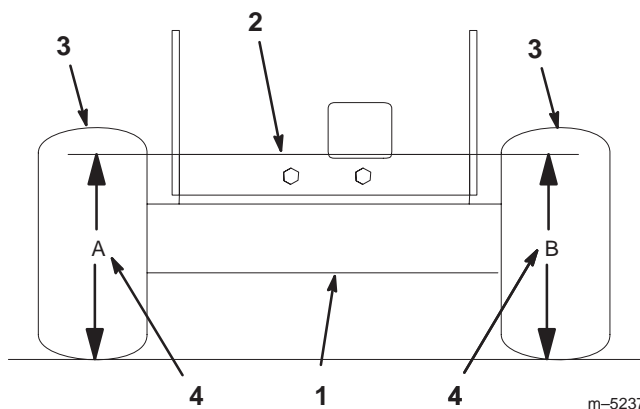


**Figure 49**

- |                         |   |
|-------------------------|---|
| 1. Back view of machine | 4. Same height at locations <b>A</b> and <b>B</b> |
| 2. Top of engine deck   |   |
| 3. Tires                |   |

## Checking Carrier Frame Front-to-Rear Pitch

The carrier frame must have a pitch of a 1/4 inch (6 mm) over the length of 24 inches (61 cm) on the carrier frame (Fig. 50).

- Measure out 24 inches (61cm) on the carrier frame (Fig. 50).
- Measure carrier frame height at location **A** (Fig. 50).
- Measure carrier frame height at location **B** (Fig. 50).
- The height at location **A** must be a 1/4–3/8 inch (6 mm – 10 mm) lower than location **B** (Fig. 50).
- If the carrier frame is not correct, move caster spacers to make it a 1/4–3/8 inch (6 – 10 mm) pitch (Fig. 50). Move spacers from top or bottom to make the correct pitch.
- The tire pressure may also be adjusted slightly to make a 1/4 inch (6 mm) pitch.

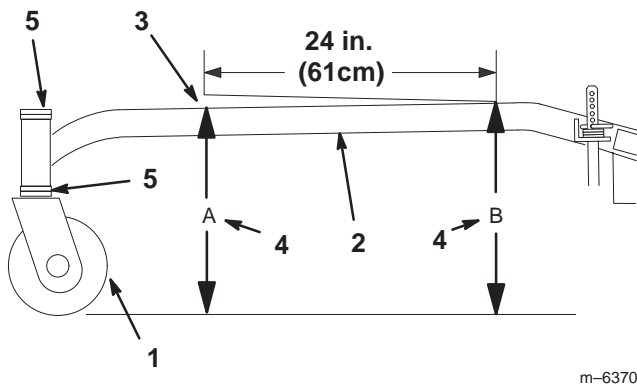


**Figure 50**

1. Caster Wheel
2. Carrier Frame
3. 1/4-3/8 inch (6 mm-10 mm) pitch over 24 inch (61 cm) length
4. Height at locations A and B
5. Caster spacers

## Checking Carrier Frame Side-to-Side

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Adjust the tire pressure in all tires to specifications on page 30.
4. Measure carrier frame height at location **A** (Fig. 51).
5. Measure carrier frame height at location **B** (Fig. 51).
6. If the carrier frame height is not the same move spacers from top or bottom of caster wheel, to make it level. The tire pressure may also be adjusted slightly to make it level.

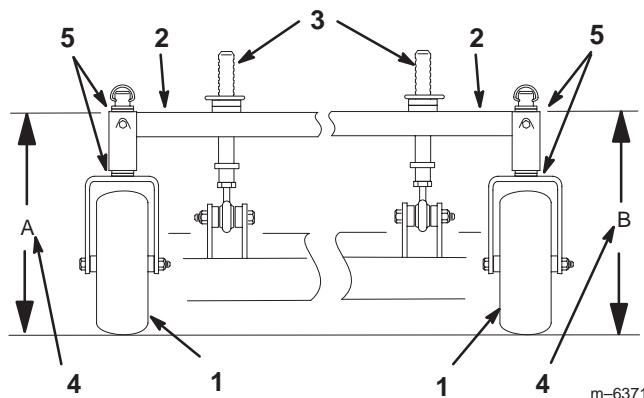


**Figure 51**


1. Caster Wheel
2. Carrier Frame
3. Front height-of-cut pins
4. Same height at locations A and B
5. Caster spacers

## Checking the Deck Front-to-Rear Pitch

1. Check the tire pressure on both deck and traction unit.
2. Position one blade front-to-rear (Fig. 52). Measure at **C** and **D** locations (Fig. 52) from a level surface to the cutting edge of the blade tips (Fig. 53).
3. The mower blade should be **1/4 inch (6 mm) lower in front at C than in the rear at D**. Rotate blades and repeat for other blades. If it is not correct, proceed to Changing the Deck Front-to-Rear Pitch.

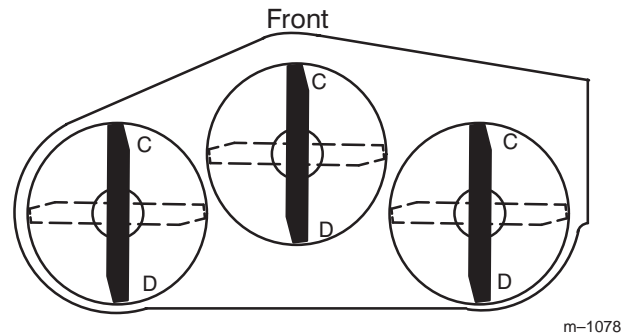

**Figure 52**

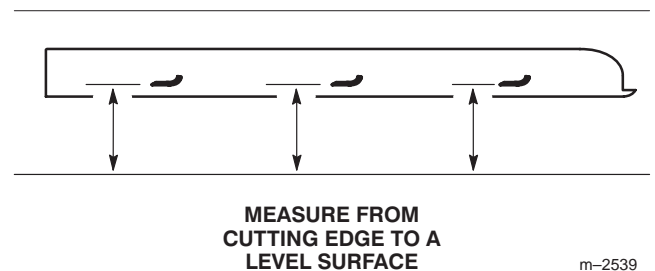


**Figure 53**

## Changing the Deck Front-to-Rear Pitch

Changing the front-to-rear pitch is done by adjusting the front height-of-cut posts.

### Changing the Deck Front-to-Rear Pitch by Adjusting Front Height-of-Cut Posts

1. To change the front-to-rear pitch, the front height-of-cut posts can be adjusted (Fig. 54).
2. To raise the front of the deck, loosen jam nut and rotate the front pin clockwise (Fig. 54).
3. To lower the front of the deck, loosen jam nut and rotate the front pin counter clockwise (Fig. 54).

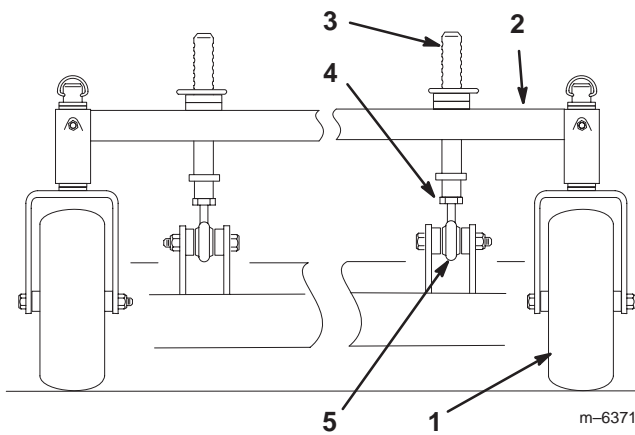


**Figure 54**

1. Caster Wheel
2. Carrier Frame
3. Front height-of-cut pins
4. Jam nut
5. Ball joint


4. Position the blades front-to-rear (Fig. 52). Measure at **C** and **D** locations (Fig. 52) from a level surface to the cutting edge of the blades (Fig. 53).
5. Check the side-to-side leveling of the cutting unit.

## Checking the Deck Side-to-Side Leveling

1. Check the tire pressure on both deck and traction unit.
2. Position the blades side-to-side (Fig. 55). Measure at **A** and **B** locations (Fig. 55) from a level surface to the cutting edge of blade tips (Fig. 56).
3. The difference between measurements **A** and **B** should be no more than 1/4 inch (6 mm).

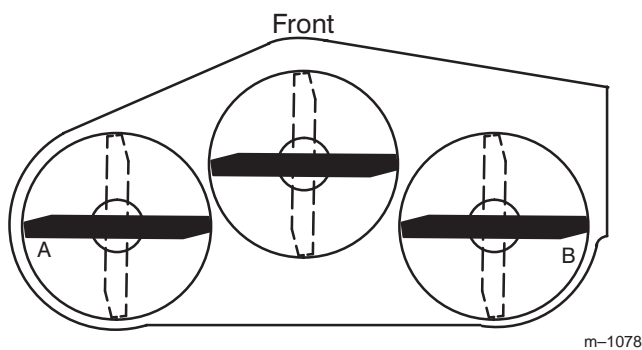

**Figure 55**

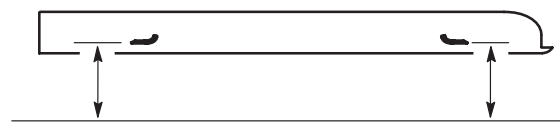

MEASURE FROM  
CUTTING EDGE TO  
A LEVEL SURFACE

**Figure 56**

## Changing the Side-to-Side Leveling


Changing the side-to-side leveling is done by adjusting tire pressure.

### Changing the Side-to-Side Leveling with Tire Pressure


1. Change the tire pressure on both deck and traction unit. Do this to the corresponding side that needs adjustment.
2. Recheck the front-to-rear pitch and side to side leveling of the cutting unit.

## Matching Height of Cut

1. Check the tire pressure on both deck and traction unit.
2. Set the height-of-cut to the 4 inch (101.6 mm) position following the height-of-cut decal.
3. With the machine on level surface, position one blade front-to-rear (Fig. 57). Measure at **A** and from level surface to the cutting edge of the blade tips (Fig. 58).
4. The measurement should be 4 inch (101.6 mm).

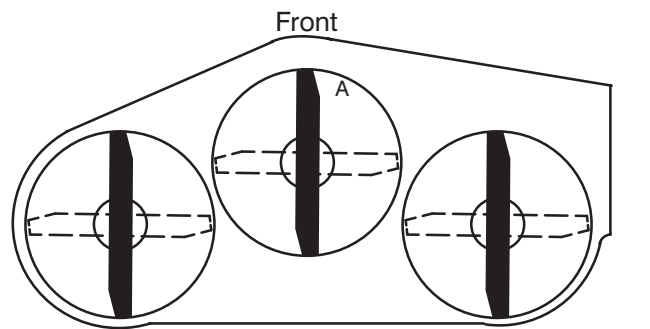

**Figure 57**

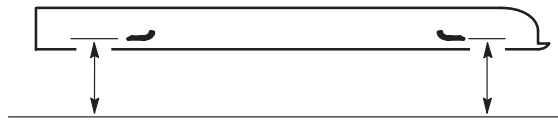

MEASURE FROM  
CUTTING EDGE TO  
A LEVEL SURFACE

m-2550

**Figure 58**

5. If it does not measure correctly, add air pressure in rear tires to raise height-of-cut
6. If it does not measure correctly, decrease air pressure in rear tires to lower height-of-cut.
7. Check carrier frame front-to-rear pitch.


## Adjusting the Traction Drive Belt Tension

It may be necessary to increase the drive belt tension as the belt wears.

1. Stop engine and remove spark plug wire(s).
2. Disengage neutral/brake locks and release drive levers to lower spring force.
3. Remove drive spring from adjustment bolt assembly (Fig. 59).
4. Remove the adjustment bolt assembly (Fig. 59).
5. Locate the adjustment bolt assembly into the desired tension position as follows.
  - Position **A** – New belt
  - Position **B** – Low belt wear
  - Position **C** – Medium belt wear
  - Position **D** – Most severe belt wear

**Note:** Do not over extend the spring. The spring length should not exceed 7–5/8 inches with the parking brake engaged (Fig. 59).

6. Install adjustment bolt assembly and spring.
7. Repeat for opposite side.

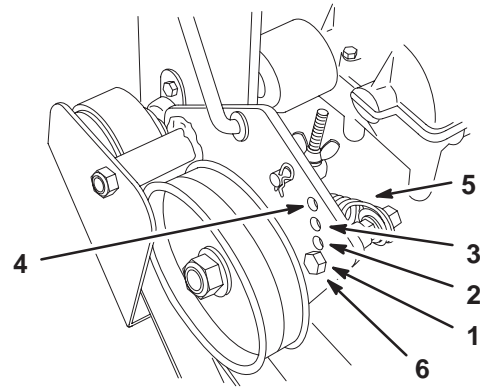

m-6595

**Figure 59**

- |                                 |                                      |
|---------------------------------|--------------------------------------|
| 1. Position A, New belt         | 4. Position D, Most severe belt wear |
| 2. Position B, Low belt wear    | 5. Spring                            |
| 3. Position C, Medium belt wear | 6. Adjustment bolt, In position A    |


## Replacing the Traction Drive Belt

### Service Interval/Specification

Check all belts after every 50 operating hours or monthly, whichever occurs first. Look for cracks, wear, and signs of overheating.


1. Remove the top capscrew securing idler support and idler bracket to rear frame (Fig. 60).
2. Loosen bottom two mounting screws enough to allow belt to pass between drive pulley and idler support (Fig. 60).
3. Raise the wheel off the ground, to allow the belt to be removed, and remove the belt.
4. Install a new belt.
5. Install the top capscrew securing the idler support and idler bracket to the rear frame (Fig. 60).
6. Tighten the bottom two mounting screws enough to allow the belt to pass between the drive pulley and idler support (Fig. 60).



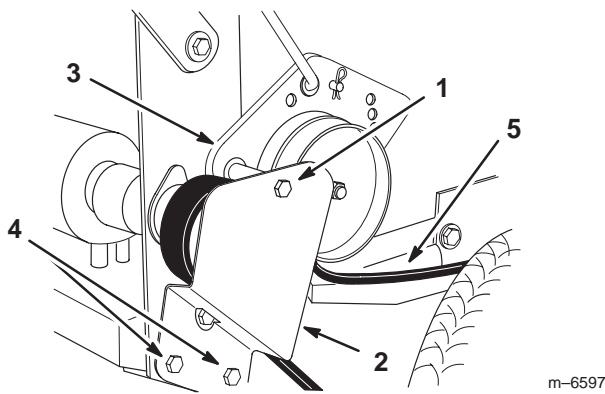

**Figure 60**

- |                  |                        |
|------------------|------------------------|
| 1. Top cap screw | 4. Bottom cap screw    |
| 2. Idler bracket | 5. Traction drive belt |
| 3. Idler support |                        |

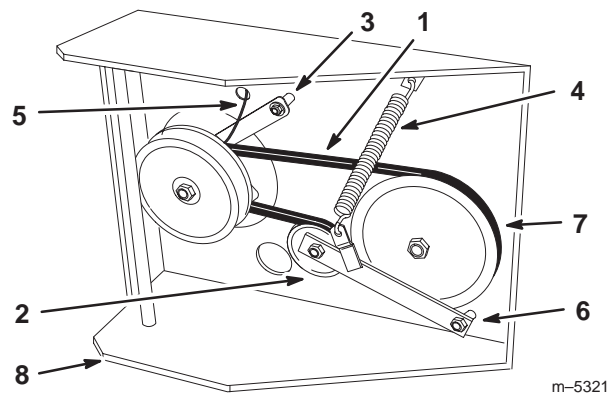

**Figure 61**

- |                      |                          |
|----------------------|--------------------------|
| 1. Transmission belt | 5. Clutch wire connector |
| 2. Idler pulley      | 6. Pivot bolt            |
| 3. Clutch retainer   | 7. Drive pulley          |
| 4. Tension spring    | 8. Engine deck           |

## Replacing the Transmission Belt

1. Disengage the PTO and set the parking brake.
2. Stop the engine, remove the key, and wait for all moving parts to stop before leaving the operating position.
3. Remove PTO drive belt. Refer to Replacing the PTO Drive Belt on page 41.
4. Raise the front of the machine and hold with jack stands.
5. Disconnect clutch wire connector from wire harness.
6. Disconnect clutch retainer from the engine deck (Fig. 61).
7. Unhook tension spring from side of frame (Fig. 61).
8. Loosen pivot bolt enough to remove traction belt from the drive pulley and clutch.
9. Install new belt around clutch and drive pulley.
10. Torque pivot bolt to 35-40 ft-lb (47-54 N•m). Install tension spring between idler arm and frame bracket (Fig. 61).
11. Install clutch retainer to the engine deck (Fig. 61).
12. Connect clutch wire connector to wire harness.
13. Install PTO drive belt.


## Replacing the Mower Belt

Squealing when the belt is rotating, blades slipping when cutting grass, frayed belt edges, burn marks and cracks are signs of a worn deck belt. Replace the deck belt if any of these conditions are evident.

1. Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Remove the knobs and rubber washers holding the carrier frame cover and remove the carrier frame cover.
3. Remove the knobs and rubber washers holding the belt covers to the cutting unit and remove the belt covers.
4. Remove the PTO drive belt. Refer to Replacing the PTO Drive Belt on page 41.
5. Disconnect the idler arm spring to relieve tension on the idler arm and idler pulley, then remove the worn deck belt (Fig. 62).
6. Install the new deck belt around the two outside spindle pulleys, the idler pulley, and in the lower groove of the center spindle pulley (Fig. 62).
7. Connect the idler arm spring (Fig. 62).
8. Reinstall the PTO drive belt. Refer to Replacing the PTO Drive Belt page 41.
9. Adjust deck belt guide an 1/8 inch (3 mm) from belt (Fig. 62).
10. Reinstall the deck covers onto the cutting unit, then reinstall and tighten the knobs.



11. Install the carrier frame cover onto the cutting unit, then install and tighten the hand knobs.

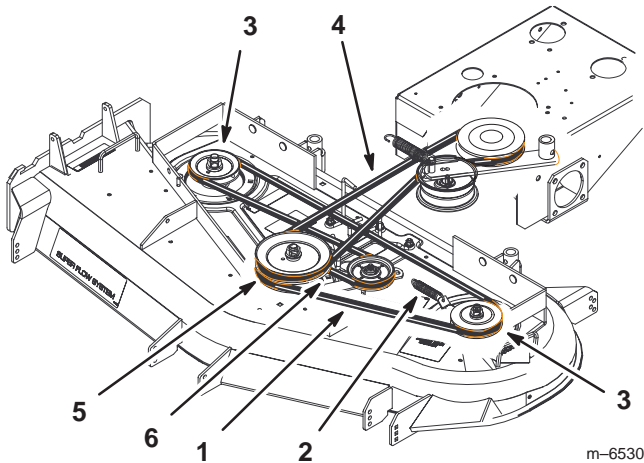

**Figure 62**


- |                     |                          |
|---------------------|--------------------------|
| 1. Deck belt        | 4. PTO drive Belt        |
| 2. Idler arm spring | 5. Center Spindle Pulley |
| 3. Outside pulley   | 6. Deck belt guide       |

## Replacing the PTO Drive Belt

Squealing when the belt is rotating, blades slipping when cutting grass, frayed belt edges, burn marks and cracks are signs of a worn drive belt. Replace the drive belt if any of these conditions are evident.

1. Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Remove the knobs holding the carrier frame cover and remove the carrier frame cover.
3. Remove the knobs and rubber washers holding the belt covers to the top of the cutting unit and remove the belt covers.
4. Remove the idler spring from idler arm. Remove the drive belt from the PTO engagement pulley and the center spindle pulley (Fig. 63).
5. Remove the worn drive belt (Fig. 63).
6. Install the new drive belt onto the PTO engagement pulley and the top groove of the center spindle pulley (Fig. 63).

7. Install belt onto idler pulley and then install idler spring (Fig. 63).
8. Adjust PTO drive belt guides an 1/8 inch (3 mm) from belt (Fig. 63).
9. Install the belt covers onto the cutting unit, then install and tighten the knobs.
10. Install the carrier frame cover onto the cutting unit, then install and tighten the hand knobs.

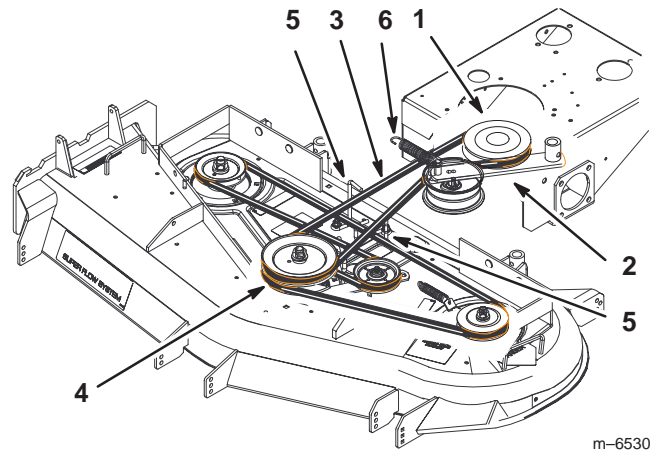

**Figure 63**


- |                          |                          |
|--------------------------|--------------------------|
| 1. PTO engagement pulley | 4. Center Spindle Pulley |
| 2. PTO drive belt idler  | 5. PTO Drive belt guide  |
| 3. PTO drive Belt        | 6. Idler Spring          |

## Replacing the Caster Wheel Fork Bushings

The caster wheel forks are mounted in bushings pressed into the top and bottom of the carrier frame mounting tubes. To check the bushings, move the caster forks back and forth and side-to-side. If a caster fork is loose, the bushings are worn and must be replaced.

1. Raise the cutting unit so the caster wheels are off the floor, then block up the front of the mower with jack stands.
2. Remove the locking pin and spacer(s) from the top of the caster wheel fork (Fig. 64).

3. Pull the caster wheel fork out of the mounting tube, leaving the spacer(s) on the bottom of the fork. Remember the location of the spacers on each fork to ensure correct installation, and to maintain a level deck.

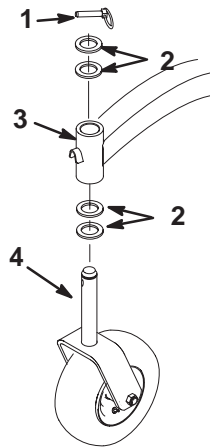


**Figure 64**

m-6372

- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. Locking Pin                  | 3. Carrier frame mounting tube |
| 2. Spacers (locate as required) | 4. Caster wheel fork           |
4. Insert a pin punch into the mounting tube and carefully drive out the bushings (Fig. 65). Clean the inside of the mounting tube.
  5. Grease the inside and outside of the new bushings. Use a hammer and flat plate to carefully drive the bushings into the mounting tube.
  6. Inspect the caster wheel fork for wear and replace if necessary (Fig. 64).
  7. Slide the caster wheel fork through the bushings in the mounting tube. Replace the spacer(s) onto the fork and secure with the retaining ring (Fig 64).

**Important** The inside diameter of the bushings may collapse slightly when installed. If the caster wheel fork does not slide into the new bushings, ream both bushings to an inside diameter of 1.126 inch (29 mm).

8. Grease the fitting on the carrier frame mounting tube using No. 2 general purpose lithium base or molybdenum base grease.

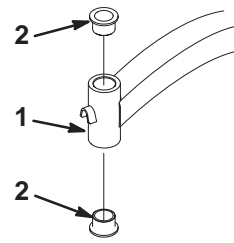

**Figure 65**


m-6373

- |                  |            |
|------------------|------------|
| 1. Mounting Tube | 2. Bushing |
|------------------|------------|

## Caster Wheel and Bearings Service

The caster wheels rotate on a roller bearing supported by a spanner bushing. If the bearing is kept well lubricated, wear will be minimal. Failure to keep the bearing well lubricated will cause rapid wear. A wobbly caster wheel usually indicates a worn bearing.

1. Remove the locknut and wheel bolt holding the caster wheel to the caster fork (Fig. 66).
2. Remove one bushing, then pull the spanner bushing and roller bearing out of the wheel hub (Fig. 66).
3. Remove the other bushing from the wheel hub and clean any grease and dirt from the wheel hub (Fig. 66).
4. Inspect the roller bearing, bushings, spanner bushing and inside of the wheel hub for wear. Replace any defective or worn parts (Fig. 66).

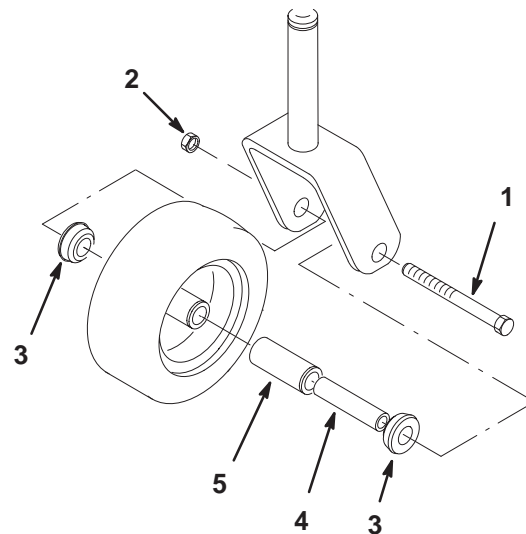

**Figure 66**

m-5210

- |               |                    |
|---------------|--------------------|
| 1. Locknut    | 4. Spanner Bushing |
| 2. Wheel Bolt | 5. Roller Bearing  |
| 3. Bushing    |                    |

5. To assemble, place one bushing into the wheel hub. Grease the roller bearing and spanner bushing and slide them into the wheel hub. Place the second bushing into the wheel hub (Fig. 66).
6. Install the caster wheel into the caster fork and secure with the wheel bolt and locknut. Tighten the locknut until the spanner bushing bottoms against the inside of the caster forks (Fig. 66).
7. Grease the fitting on the caster wheel.

## Replacing the Grass Deflector



### Warning



An uncovered discharge opening could allow the lawn mower to throw objects in the operator's or bystander's direction and result in serious injury. Also, contact with the blade could occur.

Never operate the lawn mower unless you install a cover plate, a mulch plate, or a grass chute and catcher.

1. Remove the locknut, bolt, spring and spacer holding the deflector to the pivot brackets (Fig. 67). Remove damaged or worn grass deflector.
2. Place spacer and spring onto grass deflector. Place the **L** end of spring behind deck edge.

**Note:** Make sure the **L** end of spring is installed behind deck edge before installing the bolt as shown in figure 67.

3. Install bolt and nut. Place the **J** hook end of spring around grass deflector (Fig. 67).

**Important** The grass deflector must be able to lower down into position. Lift the deflector up to test that it lowers into the full down position.

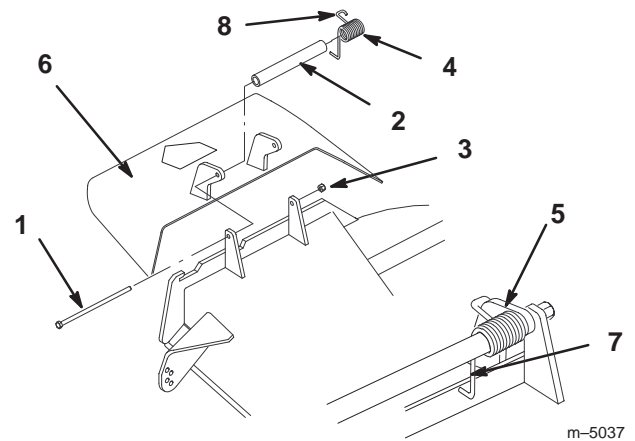



Figure 67

- |                     |  |
|---------------------|--|
| 1. Bolt             | 6. Grass Deflector   |
| 2. Spacer           | 7. <b>L</b> end of spring, place behind deck edge before installing bolt |
| 3. Locknut          | 8. <b>J</b> hook end of spring   |
| 4. Spring           |  |
| 5. Spring installed |  |

# Wiring Diagram

## WIRE COLOR CODES

▣BK▣	BLACK	▣PK▣	PINK
▣BN▣	BROWN	▣R▣	RED
▣BU▣	BLUE	▣T▣	TAN
▣GN▣	GREEN	▣VIO▣	VIOLET
▣GY▣	GREY	▣W▣	WHITE
▣OR▣	ORANGE	▣Y▣	YELLOW

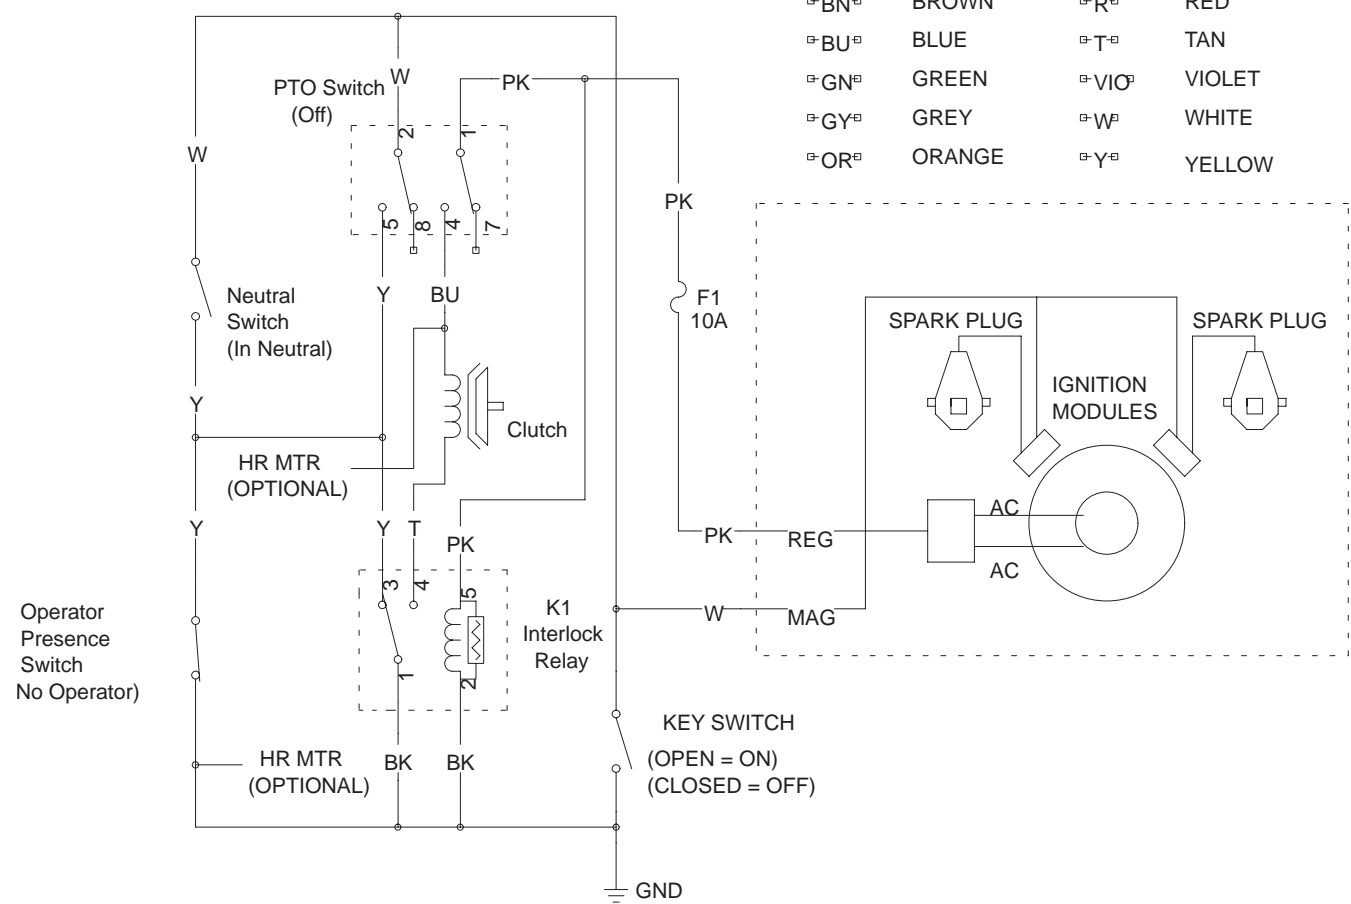

## Cleaning and Storage

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to Off. Remove the key.
2. Remove grass clippings, dirt, and grime from the external parts of the entire machine, especially the engine. Clean dirt and chaff from the outside of the engine's cylinder head fins and blower housing.

**Important** You can wash the machine with mild detergent and water. Do not pressure wash the machine. Avoid excessive use of water, especially near the control panel, and engine.

3. Check the brake; refer to Servicing the Brakes, page 32.
4. Service the air cleaner; refer to Servicing the Air Cleaner, page 26.
5. Grease the machine; refer to Greasing and Lubrication, page 29.
6. Change the crankcase oil; refer to Servicing the Engine Oil, page 27.
7. Check the tire pressure; refer to Checking the Tire Pressure, page 30.
8. For long-term storage (more than 90 days) add stabilizer/conditioner additive to fuel in the tank.

- A. Run engine to distribute conditioned fuel through the fuel system (5 minutes).
- B. Stop engine, allow to cool and drain the fuel tank; refer to Servicing the Fuel Tank, page 31, or operate engine until it stops.
- C. Restart engine and run until it stops. Repeat, on Choke until engine will not restart.
- D. Dispose of fuel properly. Recycle as per local codes.

**Note:** Do not store stabilizer/conditioned gasoline over 90 days.

9. Remove the spark plug(s) and check its condition; refer to Servicing the Spark Plug, page 28. With the spark plug(s) removed from the engine, pour two tablespoons of engine oil into the spark plug hole. Now use the starter to crank the engine and distribute the oil inside the cylinder. Install the spark plug(s). Do not install the wire on the spark plug(s).
10. Check and tighten all bolts, nuts, and screws. Repair or replace any part that is damaged or defective.
11. Paint all scratched or bare metal surfaces. Paint is available from your Authorized Service Dealer.
12. Store the machine in a clean, dry garage or storage area. Remove the key from the ignition switch and keep it in a memorable place. Cover the machine to protect it and keep it clean.

## Troubleshooting

PROBLEM	POSSIBLE CAUSES	CORRECTIVE ACTION
Engine will not start, starts hard, or fails to keep running.	<ol style="list-style-type: none"><li>1. Fuel tank is empty.</li><li>2. Fuel valve is closed.</li><li>3. Shift lever is in gear.</li><li>4. Choke is not ON.</li><li>5. Air cleaner is dirty.</li><li>6. Spark plug wire is loose or disconnected.</li><li>7. Spark plug is pitted, fouled, or gap is incorrect.</li><li>8. Dirt in fuel filter.</li><li>9. Dirt, water, or stale fuel is in fuel system.</li></ol>	<ol style="list-style-type: none"><li>1. Fill fuel tank with gasoline.</li><li>2. Open the fuel valve.</li><li>3. Move shift lever to neutral.</li><li>4. Move throttle lever to choke position.</li><li>5. Clean or replace air cleaner element.</li><li>6. Install wire on spark plug.</li><li>7. Install new, correctly gapped spark plug.</li><li>8. Replace fuel filter.</li><li>9. Contact Authorized Service Dealer.</li></ol>

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>CORRECTIVE ACTION</b>
Engine loses power.	<ol style="list-style-type: none"> <li>1. Engine load is excessive.</li> <li>2. Air cleaner is dirty.</li> <li>3. Oil level in crankcase is low.</li> <li>4. Cooling fins and air passages under engine blower housing are plugged.</li> <li>5. Spark plug is pitted, fouled, or gap is incorrect.</li> <li>6. Vent hole in fuel cap is plugged.</li> <li>7. Dirt in fuel filter.</li> <li>8. Dirt, water, or stale fuel is in fuel system.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reduce ground speed.</li> <li>2. Clean air cleaner element.</li> <li>3. Add oil to crankcase.</li> <li>4. Remove obstruction from cooling fins and air passages.</li> <li>5. Install new, correctly gapped spark plug.</li> <li>6. Clean or replace the fuel cap.</li> <li>7. Replace fuel filter.</li> <li>8. Contact Authorized Service Dealer.</li> </ol>
Engine overheats.	<ol style="list-style-type: none"> <li>1. Engine load is excessive.</li> <li>2. Oil level in crankcase is low.</li> <li>3. Cooling fins and air passages under engine blower housing are plugged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reduce ground speed.</li> <li>2. Add oil to crankcase.</li> <li>3. Remove obstruction from cooling fins and air passages.</li> </ol>
Machine does not drive.	<ol style="list-style-type: none"> <li>1. Shift lever is in Neutral.</li> <li>2. Traction belt is worn, loose or broken.</li> <li>3. Traction belt is off pulley.</li> <li>4. Neutral/Parking brake lock is in neutral or park position.</li> </ol>	<ol style="list-style-type: none"> <li>1. Move shift lever to a drive gear position.</li> <li>2. Change Belt.</li> <li>3. Change Belt.</li> <li>4. Move Neutral/Parking brake lock to forward position.</li> </ol>
Abnormal vibration.	<ol style="list-style-type: none"> <li>1. Cutting blade(s) is/are bent or unbalanced.</li> <li>2. Blade mounting bolt is loose.</li> <li>3. Engine mounting bolts are loose.</li> <li>4. Loose engine pulley, idler pulley, or blade pulley.</li> <li>5. Engine pulley is damaged.</li> <li>6. Blade spindle bent.</li> </ol>	<ol style="list-style-type: none"> <li>1. Install new cutting blade(s).</li> <li>2. Tighten blade mounting bolt.</li> <li>3. Tighten engine mounting bolts.</li> <li>4. Tighten the appropriate pulley.</li> <li>5. Contact Authorized Service Dealer.</li> <li>6. Contact Authorized Service Dealer.</li> </ol>

<b>PROBLEM</b>	<b>POSSIBLE CAUSES</b>	<b>CORRECTIVE ACTION</b>
Uneven cutting height.	<ol style="list-style-type: none"> <li>1. Blade(s) not sharp.</li> <li>2. Cutting blade(s) is/are bent.</li> <li>3. Mower is not level.</li> <li>4. Underside of mower is dirty.</li> <li>5. Tire pressure is incorrect.</li> <li>6. Blade spindle bent.</li> </ol>	<ol style="list-style-type: none"> <li>1. Sharpen blade(s).</li> <li>2. Install new cutting blade(s).</li> <li>3. Level mower from side-to-side and front-to-rear.</li> <li>4. Clean the underside of the mower.</li> <li>5. Adjust tire pressure.</li> <li>6. Contact Authorized Service Dealer.</li> </ol>
Blades do not rotate.	<ol style="list-style-type: none"> <li>1. PTO Drive belt is worn, loose or broken.</li> <li>2. PTO Drive belt is off pulley.</li> <li>3. Deck belt is worn, loose or broken.</li> <li>4. Deck belt is off pulley.</li> </ol>	<ol style="list-style-type: none"> <li>1. Install new drive belt.</li> <li>2. Install drive belt and check adjusting shafts and belt guides for correct position.</li> <li>3. Install new deck belt.</li> <li>4. Install deck pulley and check the idler pulley, idler arm and spring for correct position and function.</li> </ol>



LCE

## The Toro Total Coverage Guarantee

### A Limited Warranty

#### Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly promise to repair the listed Toro Products if defective in materials or workmanship. The following time periods apply from the date of purchase:

<u>Products</u>	<u>Warranty Period</u>
• All Products	1 year
• All Spindles	2 years parts and labor; third year, parts only
• Engines/Hydraulic Systems* on the following: Outfront and Mid-Mount Z's ProLine Mid-Size Mowers Groundsmaster® Riding Mowers Backpack Blowers	2 years
• Deck Shells (36"–72") on the following: ProLine Mid-Size Mowers Mid-Mount Z's	2 years
• Electric Clutch on 200 Series Mid-Mount Z's	2 years

This warranty includes the cost of parts and labor, but you must pay transportation costs.

This warranty applies to:

- Outfront and Mid-Mount Z's
- ProLine Mid-Size Mowers
- Groundsmaster Riding Mowers
- Turf Maintenance Equipment
- Debris Management Equipment

\* Some engines used on Toro LCE Products are warranted by the engine manufacturer.

#### Instructions for Obtaining Warranty Service

If you think that your Toro Product contains a defect in materials or workmanship, follow this procedure:

1. Contact any Toro Authorized or Master Service Dealer to arrange service at their dealership. To locate a dealer convenient to you, access our website at [www.Toro.com](http://www.Toro.com). U.S. Customers may also call 800-348-2424.
2. Bring the product and your proof of purchase (sales receipt) to the Service Dealer.

If for any reason you are dissatisfied with the Service Dealer's analysis or with the assistance provided, contact us at:

LCB Customer Service Department  
Toro Warranty Company  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196  
888-577-7466 (U.S. customers)  
877-484-9255 (Canada customers)

#### Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

#### Owner Responsibilities

You must maintain your Toro Product by following the maintenance procedures described in the operator's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

#### Items and Conditions Not Covered

There is no other express warranty except for special emission system coverage on some products. This express warranty does not cover the following:

- Cost of regular maintenance service or parts, such as filters, fuel, lubricants, tune-up parts, blade sharpening, brake and clutch adjustments.
- Any product or part which has been altered or misused or required replacement or repair due to normal wear, accidents, or lack of proper maintenance.
- Repairs necessary due to improper fuel, contaminants in the fuel system, or failure to properly prepare the fuel system prior to any period of non-use over three months.
- Pickup and delivery charges.

All repairs covered by this warranty must be performed by an Authorized Toro Service Dealer using Toro approved replacement parts.

#### General Conditions

Repair by an Authorized Toro Service Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

All implied warranties of merchantability (that the product is fit for ordinary use) and fitness for use (that the product is fit for a particular purpose) are limited to the duration of the express warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.