



Mid-Size Mower

ProLine Pistol Grip Gear 17 HP with 52in Side Discharge Mower

Model No. 30432—2300000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Engine Installation Assembly	3	Lubrication Equipment Assembly	
Fuel Tank Assembly	4	Kawasaki FH500V–AS25	23
Lower Control Assembly	5	Cooling Equipment Assembly	
Transmission Drive Assembly	6	Kawasaki FH500V–AS25	24
Wheel Drive and Brake Assembly	7	Cooling Equipment Assembly (Continued)	
Upper Handle Assembly	8	Kawasaki FH500V–AS25	25
Control Panel Assembly	9	Electrical Equipment Assembly	
Carrier Frame Assembly	10	Kawasaki FH500V–AS25	26
Spindle, Pulley and Belt Assembly	11	Electrical Equipment Assembly (Continued)	
Spindle Assembly No. 104–6317	12	Kawasaki FH500V–AS25	27
Spindle Assembly No. 104–6315	13	Control Equipment Assembly	
Deck Assembly	14	Kawasaki FH500V–AS25	28
Drive Belt and Tensioner Assembly	15	Control Equipment Assembly (Continued)	
Electrical Schematic	16	Kawasaki FH500V–AS25	29
Starter Assembly		Carburetor Assembly	
Kawasaki FH500V–AS25	17	Kawasaki FH500V–AS25	30
Cylinder / Crankcase Assembly		Carburetor Assembly (Continued)	
Kawasaki FH500V–AS25	18	Kawasaki FH500V–AS25	31
Cylinder / Crankcase Assembly (Continued)		Air Filter / Muffler Assembly	
Kawasaki FH500V–AS25	19	Kawasaki FH500V–AS25	32
Valve / Camshaft Assembly		Fuel Tank / Fuel Valve Assembly	
Kawasaki FH500V–AS25	20	Kawasaki FH500V–AS25	33
Valve / Camshaft Assembly (Continued)		Decals	
Kawasaki FH500V–AS25	21	Kawasaki FH500V–AS25	34
Piston / Crankshaft Assembly			
Kawasaki FH500V–AS25	22		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

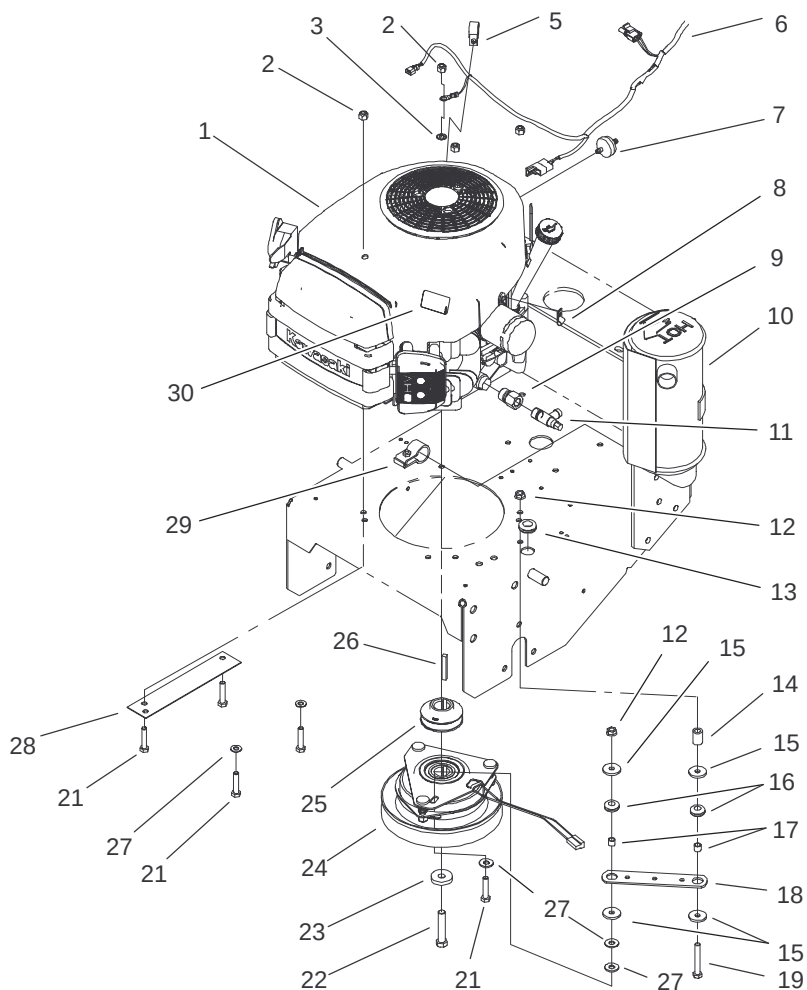


Sheet No.:3

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		1	Engine-Kawasaki, Fh500v-As29	28	94-5847-01	1	Cover-Pulley
2	3296-29	4	Nut-Lock, NI	29	100-6468	1	Clamp-Muffler
3	3255-8	1	Washer-Lock	30	106-0699	1	Decal-Warning, Hot Surfaces
5	2412-87	1	Clamp-Cable	*99	103-1964	1	Hose-Drain, Oil
6	104-9825	1	Harness-Wire				
7	56-6360	1	Filter-Fuel				
8	2412-72	1	Clip-Closed, Insulated				
9	103-1966	1	Adapter				
10	100-6467	1	Muffler				
11	103-1965	1	Valve-Drain, Oil				
12	32128-20	2	Nut-HF				
13	237-124	1	Grommet				
14	104-6373	1	Tube-Retainer				
15	1-613235	4	Washer				
16	1-633630	2	Grommet-Brake				
17	1-633545	2	Spacer-Grommet				
18	1-633543-03	1	Strap-Clutch, Brake				
19	322-11	1	Screw-HH				
21	322-7	5	Screw-HH				
22	3212-9	1	Screw-HH				
23	112843	1	Washer				
24	105-2635	1	Clutch/Brake				
25	105-0827	1	Pulley-Drive				
26	608006	1	Key-Square				
27	3256-23	5	Washer-Flat				

☆ Not serviced separately

* Not illustrated

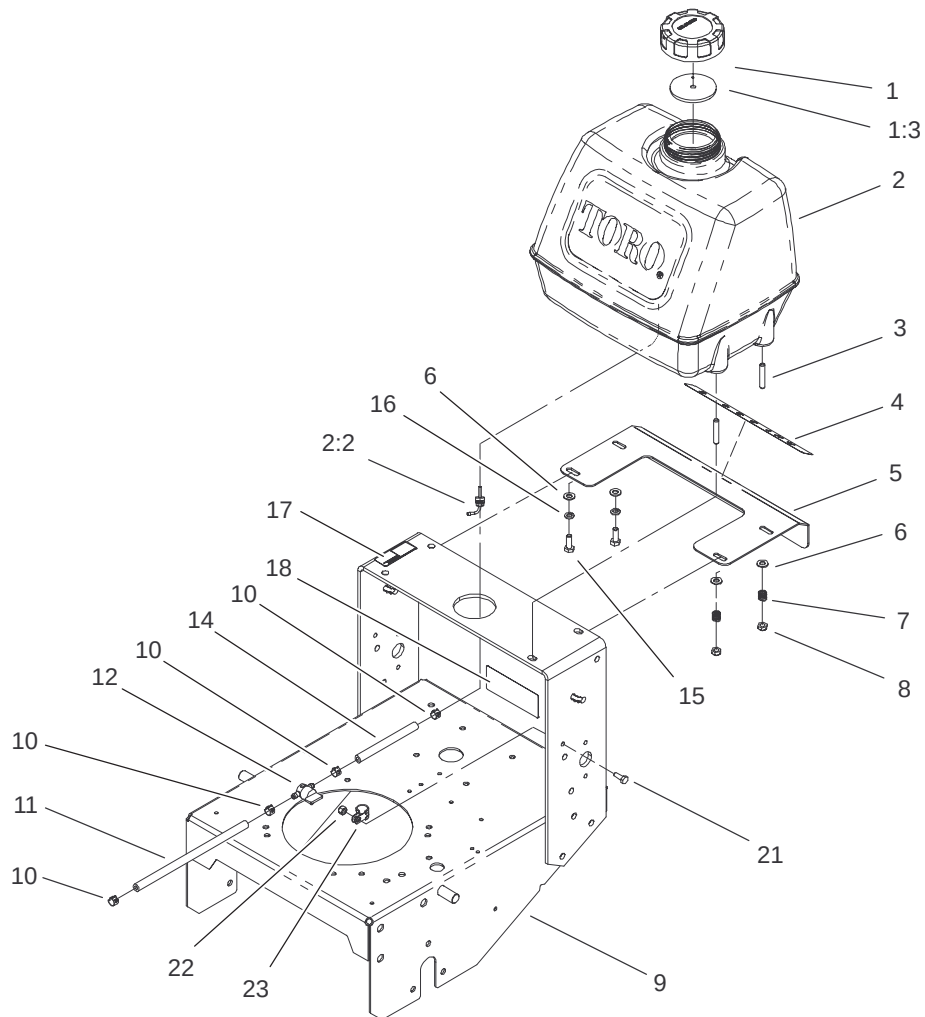


Sheet No.:4

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
4	106-5496	1	Decal-Ground Speed
5	104-8102-01	1	Plate-Gate, Shift
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2980	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution
21	321-4	1	Screw-HH
22	3296-42	1	Nut-Lock, NI
23	2412-134	1	R-Clamp

Ref. No.	Part No.	Qty.	Description

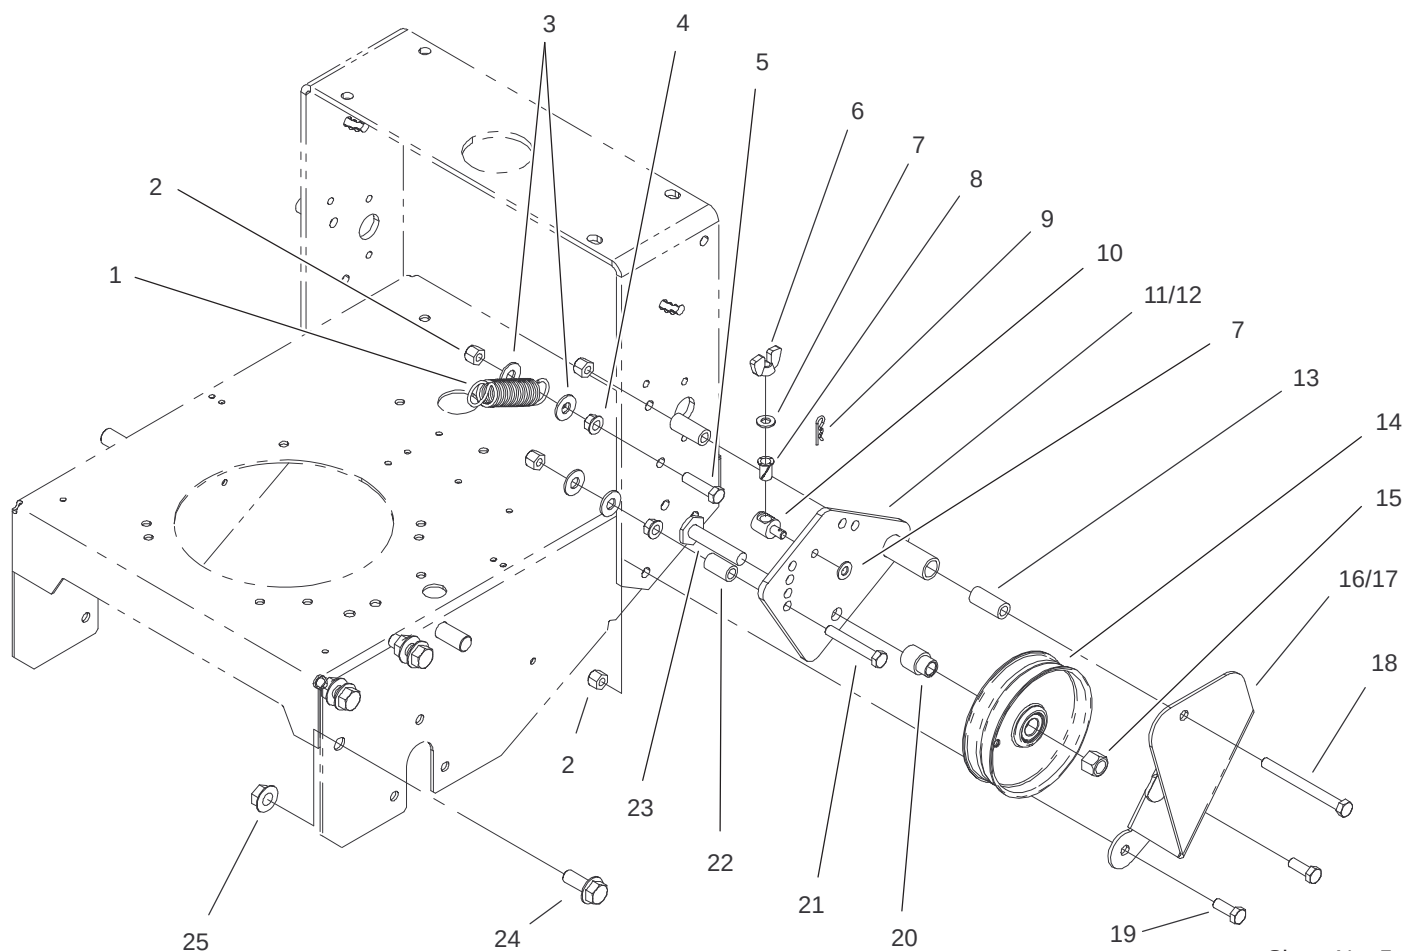


Sheet No.:5

Lower Control Assembly

Ref. No.	Part No.	Qty.	Description
1	1-603402	2	Spring-Extension
2	3296-39	10	Nut-Lock, NI
3	3256-4	8	Washer-Flat
4	32128-40	4	Nut-Flange
5	323-8	2	Screw-HH
6	32103-25	2	Nut-Wing
7	3256-23	4	Washer-Flat
8	52-2890	2	Bushing-Nylon
9	3290-307	2	Pin-Hair
10	68-9690	2	Fitting-Rod
11	106-0611-01	1	LH Idler Bracket ASM
12	106-0612-01	1	RH Idler Bracket ASM
13	74-0040	4	Spacer-Pivot, Idler
14	95-2800	2	Pulley-Idler
15	3296-23	2	Nut-Lock, NI
16	67-6380-01	1	Bracket-Support, LH
17	67-6370-01	1	Bracket-Support, RH
18	323-16	2	Screw-HH
19	323-6	4	Screw-HH
20	95-2801	2	Spacer-Pulley
21	323-12	2	Screw-HH
22	106-0564	2	Spacer
23	51-4450	2	Screw-Leveler
24	3234-32	6	Screw-HHF
25	32128-23	6	Nut-HF

Ref. No.	Part No.	Qty.	Description

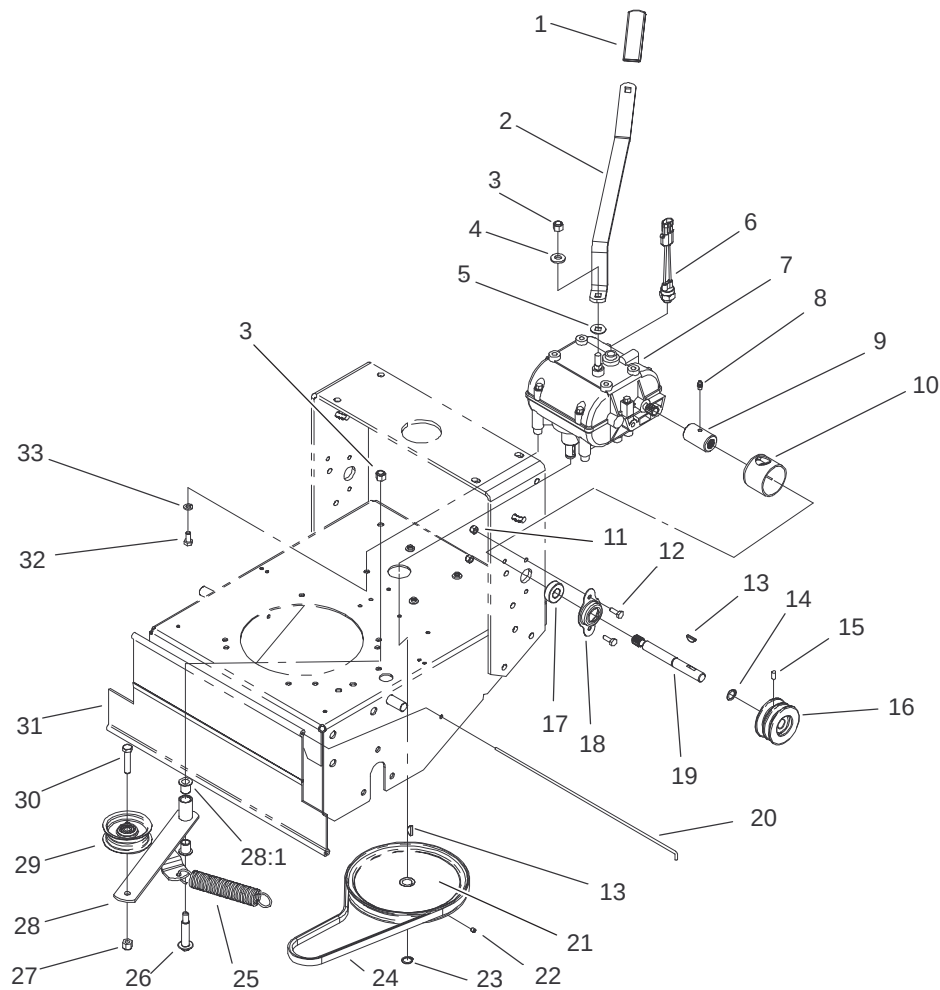


Sheet No.:6

Transmission Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock, NI
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	72-4320	1	Switch-Ball, N.o.
7	1-323500	1	Transmission
8	302-5	2	Fitting-Grease
9	1-323680	2	Coupler
10	51-4220	2	Guard-Coupler
11	3296-42	4	Nut-Lock, NI
12	321-4	4	Screw-HH
13	3257-5	3	Key-Woodruff
14	32151-62	2	Ring-Retaining
15	3245-9	2	Screw-Set
16	105-2698	2	Pulley-Transmission
17	1-323252	2	Bearing-Shaft
18	1-323254	2	Flange-Output
19	104-1102	2	Shaft-Output
20	95-1529	1	Rod-Shield
21	105-5646	1	Pulley-Driven
22	3245-1	1	Screw-Set, HSH
23	32120-64	1	Ring-Snap, External
24	105-5668	1	V-Belt
25	68-2190	1	Spring
26	27-6230	1	Bolt-Wheel

Ref. No.	Part No.	Qty.	Description
27	3296-39	1	Nut-Lock, NI
28	16-7509	1	Lever-Idler
28:1	256-155	2	Bushing-Flange
29	62-4540	1	Pulley
30	323-9	1	Screw-HH
31	95-1526	1	Shield-Trailing
32	322-2	4	Screw-HH
33	3253-4	4	Washer-Lock

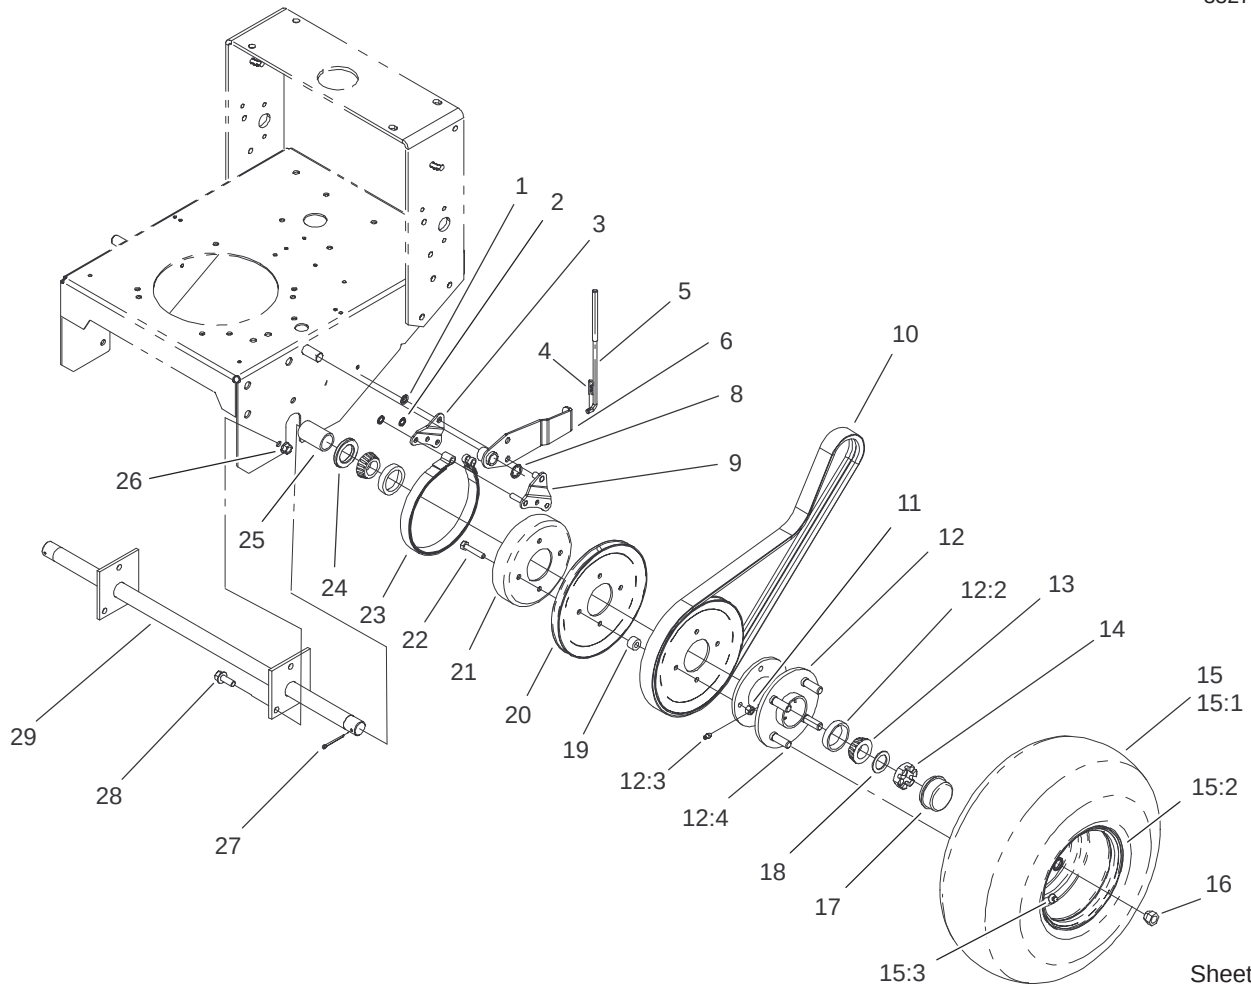


Sheet No.:7

Wheel Drive and Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-56	2	Ring-Retaining, External
2	32151-72	4	Ring-Retaining
3	105-4651-01	2	Plate-Link, Brake
4	3290-307	2	Pin-Hair
5	51-4580	2	Rod-Brake
6	106-5537-01	2	Brake Arm ASM
8	32151-40	2	Ring-Retaining
9	105-4652-01	2	Brake Link ASM
10	51-4290	2	V-Belt
11	3296-29	8	Nut-Lock, NI
12	1-413333	2	Hub/Wheel ASM
12:2	254-72	2	Bearing-Cup, Tapered
12:3	302-19	1	Fitting-Grease
12:4	1-633926	4	Stud-Wheel
13	254-94	4	Bearing-Cone, Taper
14	1-809082	2	Nut-SHH
15	104-6321	2	Wheel And Tire ASM
15:1	104-6322	1	Tire
15:2	104-6323	1	Wheel
15:3	232-27	1	Stem-Valve
16	242-50	8	Nut-Lug
17	241-119	2	Cap-Dust
18	1-523157	2	Washer-Spacer
19	51-4170	8	Spacer-Pulley
20	51-4160-03	4	Pulley-Wheel

Ref. No.	Part No.	Qty.	Description
21	1-323261	2	Drum-Brake
22	322-8	8	Screw-HH
23	1-323262	2	Band-Brake
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	32128-21	6	Nut-HF
27	1-806800	2	Pin-Cotter
28	3234-11	6	Screw-HHF
29	104-1196-01	1	Axle ASM

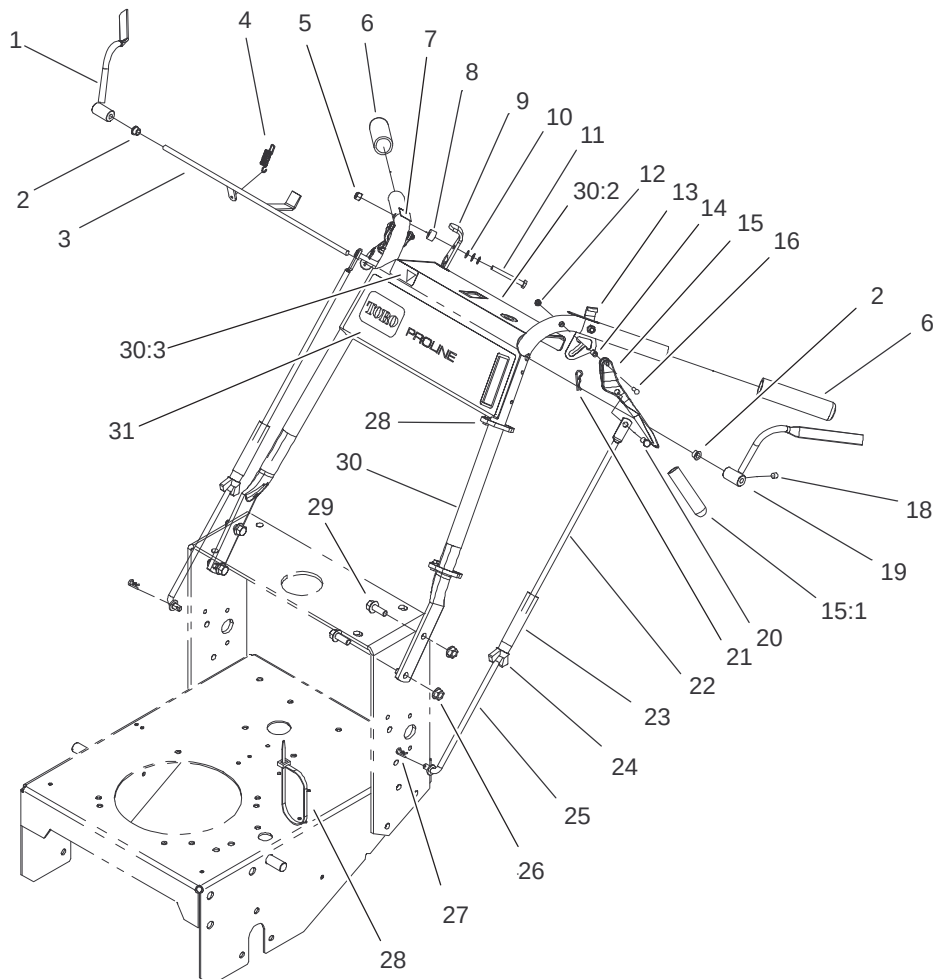


Sheet No.:8

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	106-5486	1	RH Control Lever ASM
2	1-303365	2	Bushing-Nylon
3	104-9803	1	Rod ASM
4	1-303363	1	Spring-Extension
5	3296-42	2	Nut-Lock, NI
6	104-9838	2	Grip-Foam
7	105-4111	2	Decal-Lock, Neutral
8	1-323549	2	Spacer
9	106-5521	1	Latch-Thumb, RH
10	1-303435	6	Washer-Spring
11	321-18	2	Screw-HH
12	1-803001	2	Nut
13	106-5520	1	Latch-Thumb, LH
14	1-806340	2	Pin-Roll
15	1-302006	2	Drive Lever ASM
15:1	1-303021	1	Grip-Lever, Drive
16	1-808250	2	Pin-Clevis
18	1-803322	2	Screw-Set
19	106-5485	1	LH Control Lever ASM
20	1-808286	2	Pin-Clevis
21	1-806003	2	Pin-Hair
22	106-0613	2	Linkage-Drive Wheel
23	95-1504	2	Turnbuckle
24	32103-3	2	Nut-Wing
25	95-1506	2	Rod-Control, Lower
26	32128-21	4	Nut-HF


Ref. No.	Part No.	Qty.	Description
27	3290-307	2	Pin-Hair
28	3290-378	3	Tie-Cable
29	3234-11	4	Screw-HHF
30	105-3174	1	Gear/Pg Handle ASM
30:2	106-5514	1	Decal-Control Panel
30:3	98-4387	1	Decal-Protection, Ear
31	106-5501	1	Decal-Control, Throttle

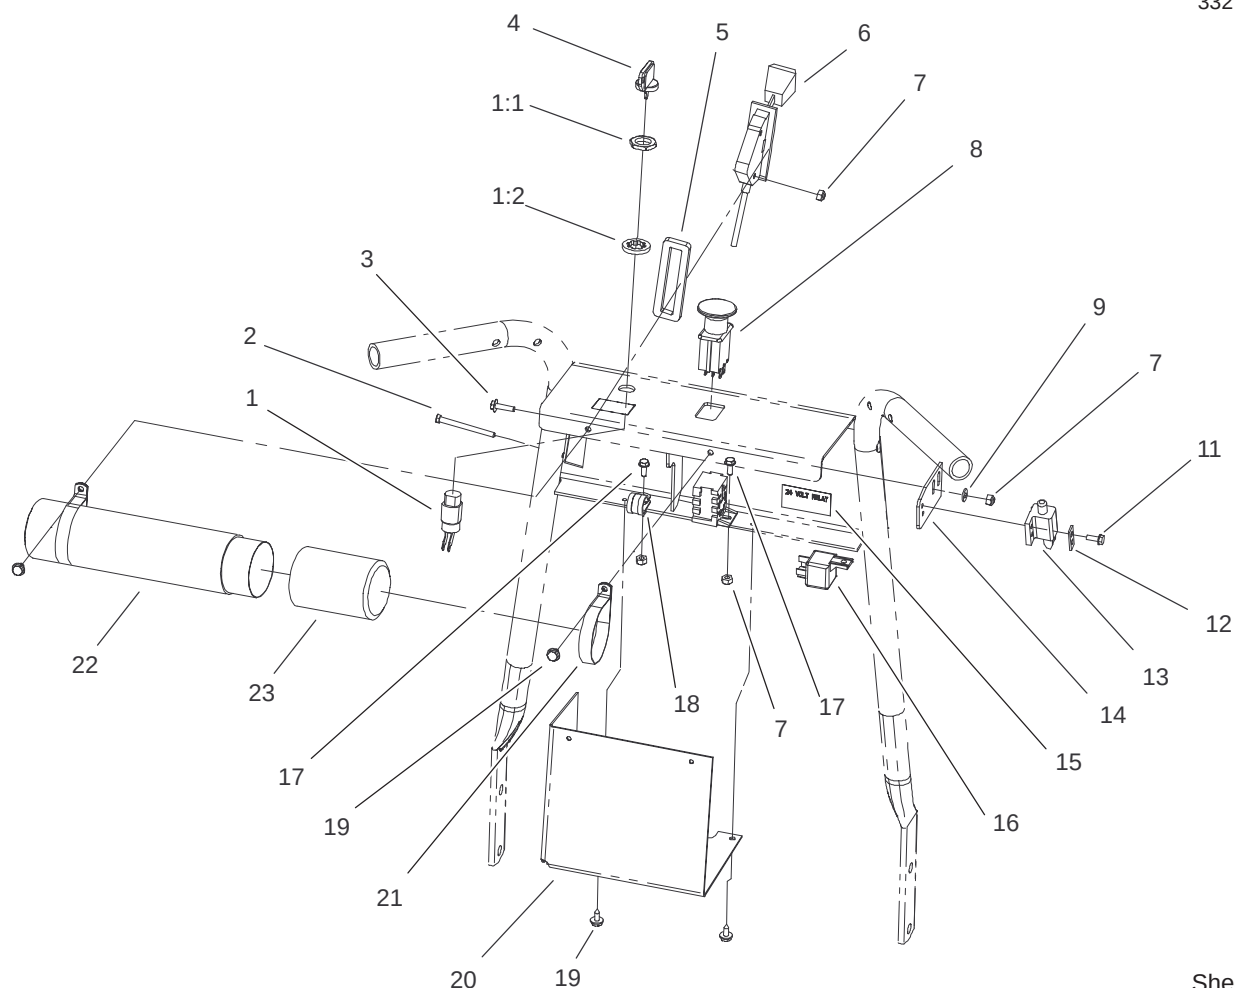

Sheet No.:9

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	29-5560	1	Switch-On/Off
1:1	218-461	1	Nut-HH
1:2	3254-5	1	Washer-Tooth
2	32105-14	2	Screw
3	32105-13	2	Screw-SHH
4	63-8360	1	Key-Ignition
5	106-5487	1	Gasket-Throttle
6	105-4113	1	Control-Throttle
7	3296-2	6	Nut-Lock
8	95-7489	1	Switch-PTO
9	3256-14	2	Washer-Flat
11	32144-1	2	Screw-Taptite
12	82-4570	1	Plate-Switch
13	95-1653	1	Switch-Pole, Single
14	105-4137-03	1	Plate-Mounting, Switch
15	105-4146	1	Decal-Relay, 24 Volt
16	105-4145	1	Relay
17	3290-321	2	Screw-HWH
18	2412-134	1	R-Clamp
19	32104-76	4	Screw
20	105-4112-03	1	Bracket-Cover
21	2412-120	2	R-Clamp
22	104-7050	1	Housing-Manual
23	104-7048	1	Cap-Housing

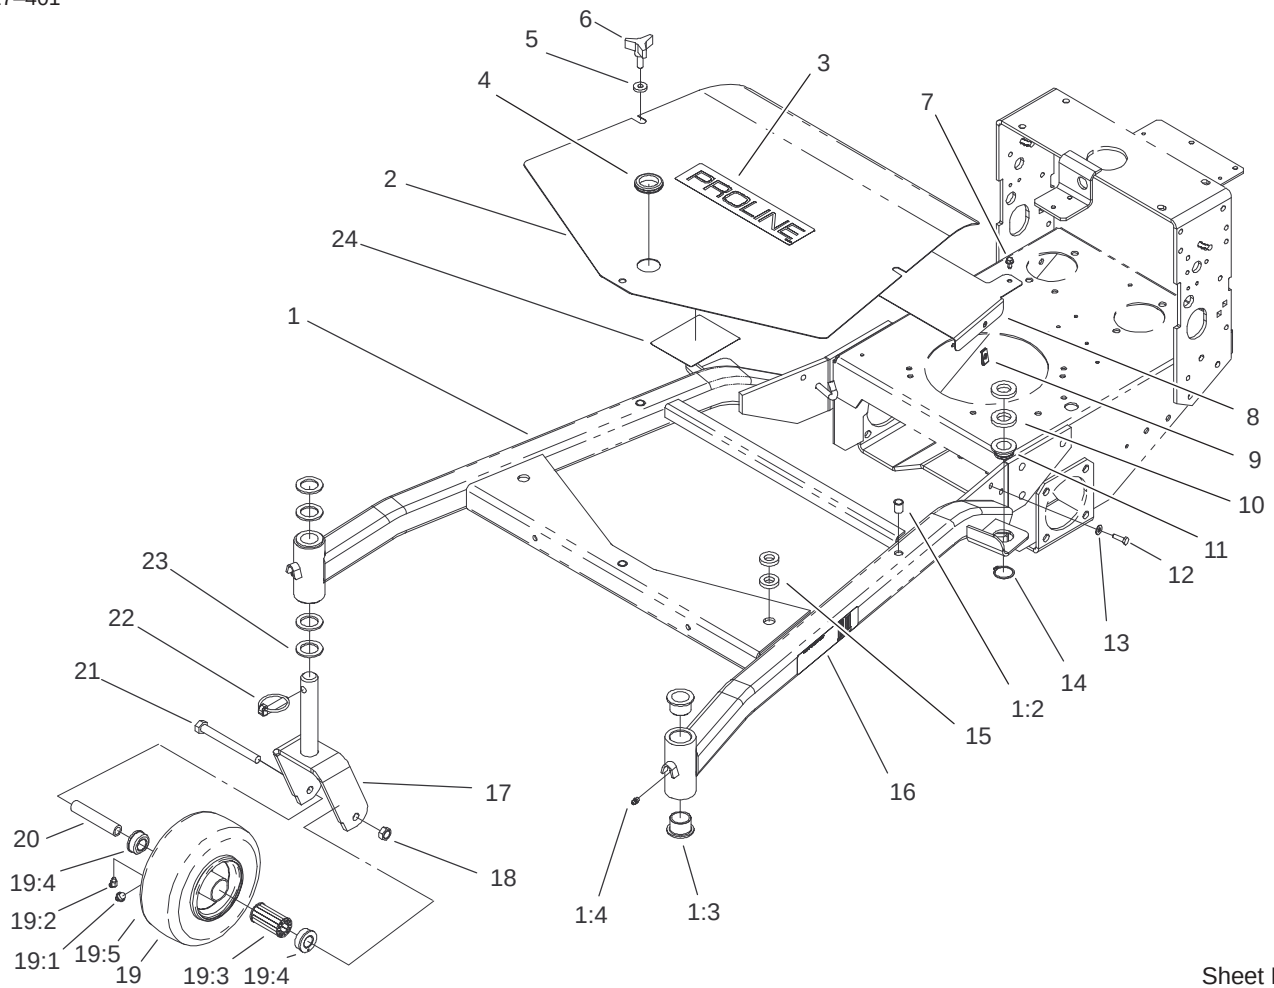


Sheet No.:2

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing-Special
1:4	302-5	2	Fitting-Grease
2	106-3360-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	104-8587	3	Knob
7	12-3270	2	Screw
8	106-3361-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45°
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside

Ref. No.	Part No.	Qty.	Description
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5511	1	Decal-Service, Gear Pistol Grip

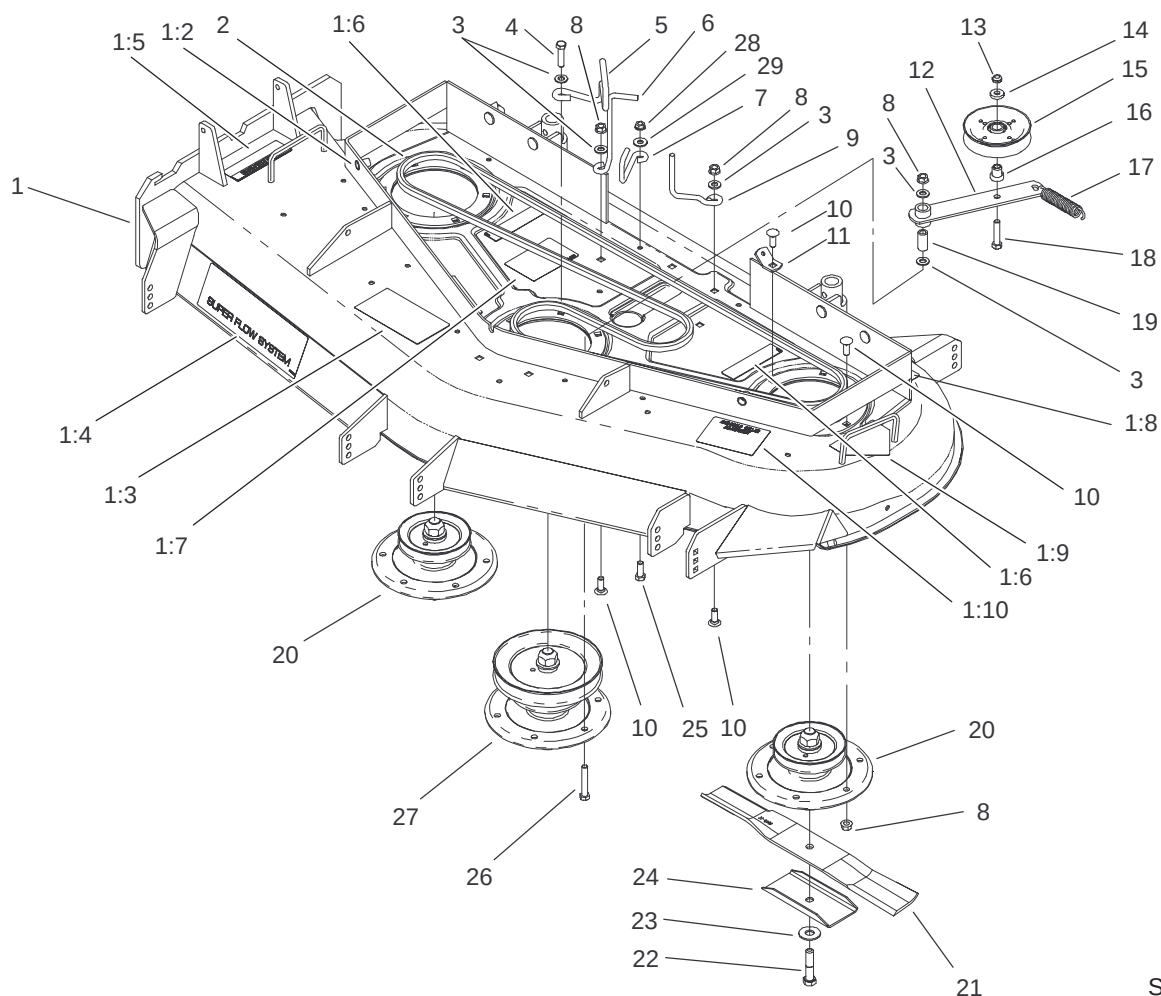


Sheet No.:3

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	106-0619	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	66-1340	1	Decal-Danger
1:4	106-0705	1	Decal
1:5	104-8569	1	Decal-Warning
1:6	67-5360	3	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	68-8340	1	Decal-Torque
1:9	43-8480	1	Decal-Danger
1:10	106-5532	1	Decal-Anti Scalp
2	104-6397	1	V-Belt
3	3256-24	5	Washer-Flat
4	323-8	1	Screw-HH
5	105-0850	1	Guide-Belt
6	98-5980	1	Guide-Belt
7	104-6396	1	Guide-Belt
8	32128-21	20	Nut-HF
9	52-4780	1	Rod-Belt
10	3231-22	18	Screw-CARR
11	104-6374	1	Plate-Spring
12	104-6375	1	Idler Arm ASM
13	3296-5	1	Nut-Lock, NI
14	7-0081	1	Washer-Flat
15	65-5940	1	Pulley-Idler
16	104-6379	1	Bushing-Pulley
17	51-3650	1	Spring-Extension

Ref. No.	Part No.	Qty.	Description
18	3211-8	1	Screw-HH
19	51-3640	1	Sleeve
20	106-0787	2	Spindle Housing ASM
21	27-0990	3	Blade
22	44-2200	3	Screw-Blade
23	3256-6	3	Washer-Flat
24	92-9820	3	Stiffener-Blade
25	323-6	1	Screw-HH
26	323-11	1	Screw-HH
27	106-0785	1	Spindle Housing ASM
28	32128-25	1	Nut-Flange
29	3256-3	1	Washer-Flat

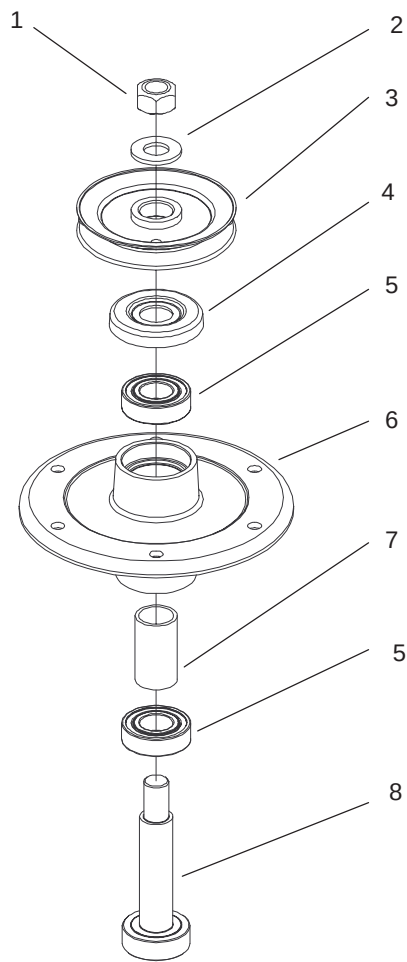


Sheet No.:A1

Spindle Assembly No. 106-0787

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1118	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0782	1	Shaft-Spindle


Ref. No.	Part No.	Qty.	Description

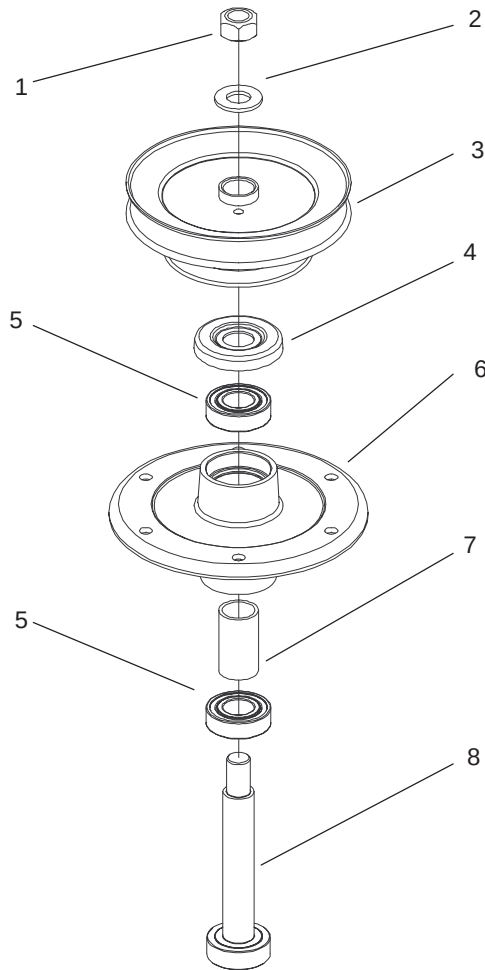

Sheet No.:A2

Spindle Assembly No. 106-0785

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer				
3	104-1117	1	Pulley And Hub ASM				
4	106-0873	1	Shield-Bearing				
5	104-6325	2	Bearing				
6	106-0819	1	Housing-Spindle				
7	106-0795	1	Spacer-Bearing				
8	106-0781	1	Shaft-Spindle				

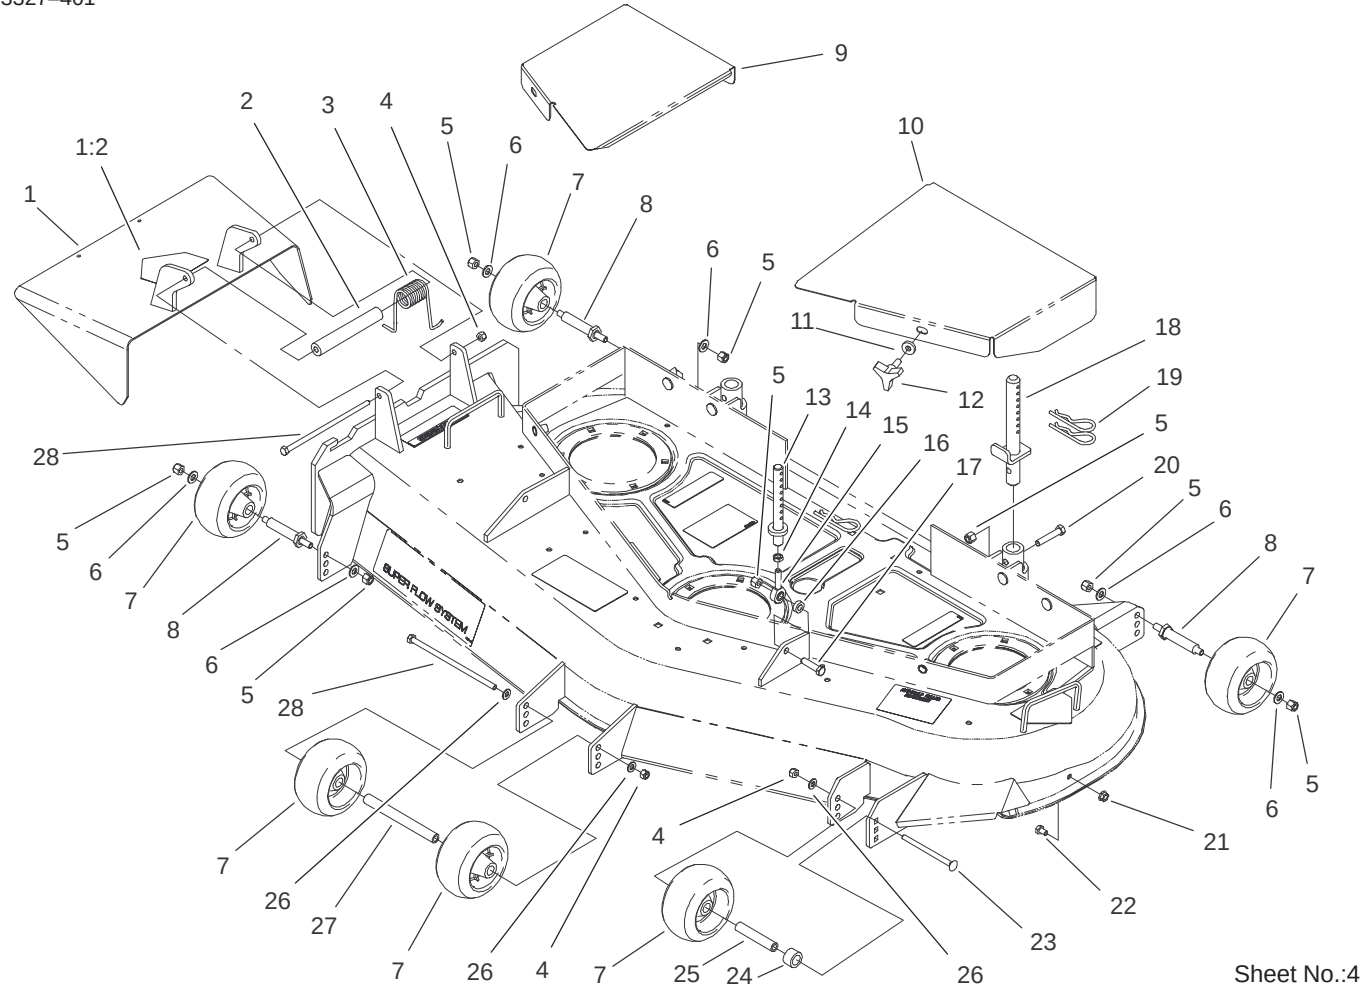


Sheet No.:4

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4623	1	Deflector ASM
1:2	93-1122	1	Decal-Danger
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	3296-39	10	Nut-Lock, NI
6	3256-24	6	Washer-Flat
7	68-2730	6	Wheel-Gage
8	99-2842	3	Spacer
9	106-3363-01	1	Cover-Belt, RH
10	106-3362-01	1	Cover-Belt, LH
11	106-0565	2	Washer-Rubber
12	104-8587	2	Knob
13	106-0684	2	Front Pin ASM
14	3220-3	2	Nut-Jam
15	1-613204	2	Balljoint
16	104-1156	2	Spacer
17	323-8	2	Screw-HH
18	106-3365	2	Rear Pin ASM
19	3290-256	6	Pin-Hair
20	323-10	2	Screw-HH
21	32128-20	6	Nut-HF
22	322-1	6	Screw-HH
23	3230-30	1	Screw-CARR
24	106-0563	1	Spacer-Wheel
25	106-0545	1	Bushing-Roller

Ref. No.	Part No.	Qty.	Description
26	3256-23	3	Washer-Flat
27	98-5967	1	Spacer
28	322-50	2	Screw-HH

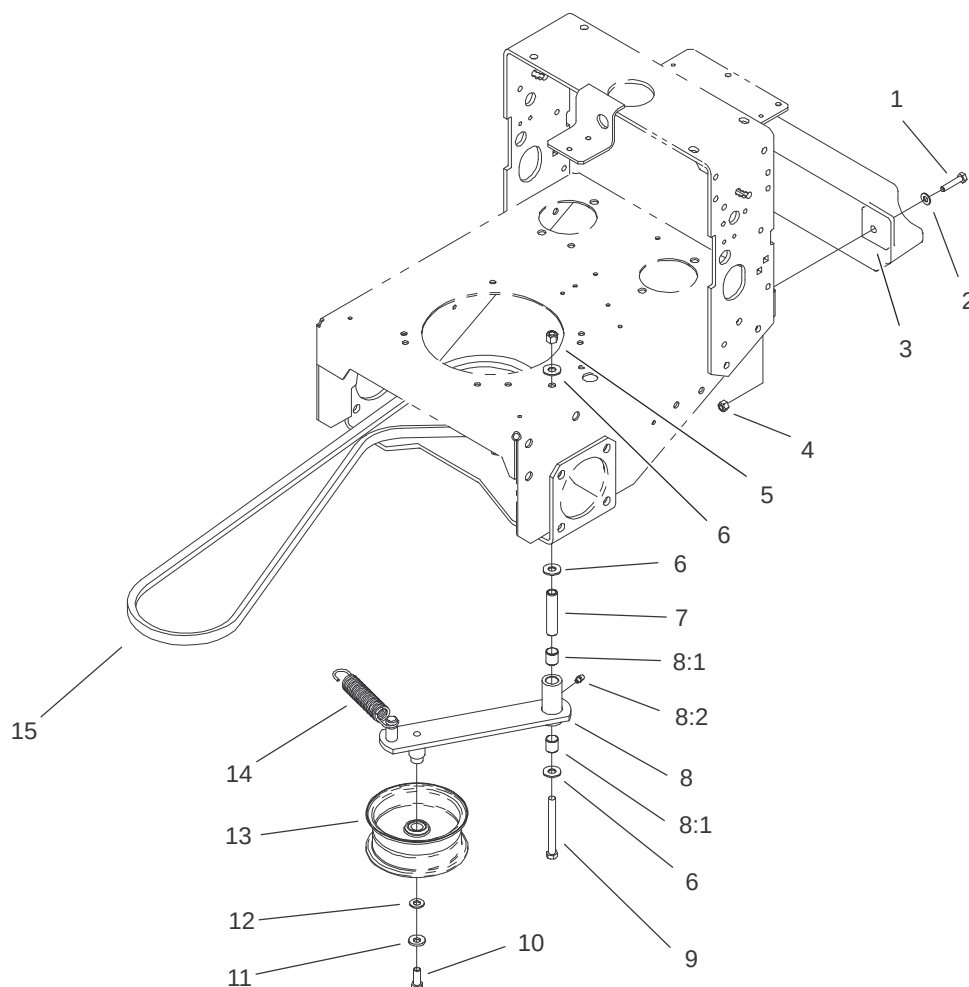

Sheet No.:5


Drive Belt and Tensioner Assembly

Ref. No.	Part No.	Qty.	Description
1	322-7	2	Screw-HH
2	3256-23	2	Washer-Flat
3	105-3173-01	1	Weight-Rear
4	3296-29	2	Nut-Lock, NI
5	3296-39	1	Nut-Lock, NI
6	1-809107	3	Washer-Hardened
7	104-6377	1	Tube-Idler
8	106-0734	1	Idler Arm ASM
8:1	1-513034	2	Sleeve-Bearing
8:2	302-5	1	Fitting-Grease
9	323-42	1	Screw-HH
10	323-6	1	Screw-HH
11	98-5975	1	Washer-Belleville
12	3256-24	1	Washer-Flat
13	1-413099	1	Pulley-Idler
14	105-8443	1	Spring-Extension
15	106-0632	1	V-Belt



Ref. No.	Part No.	Qty.	Description

Electrical Schematic

Operator
Presence
Switch
(No Operator)

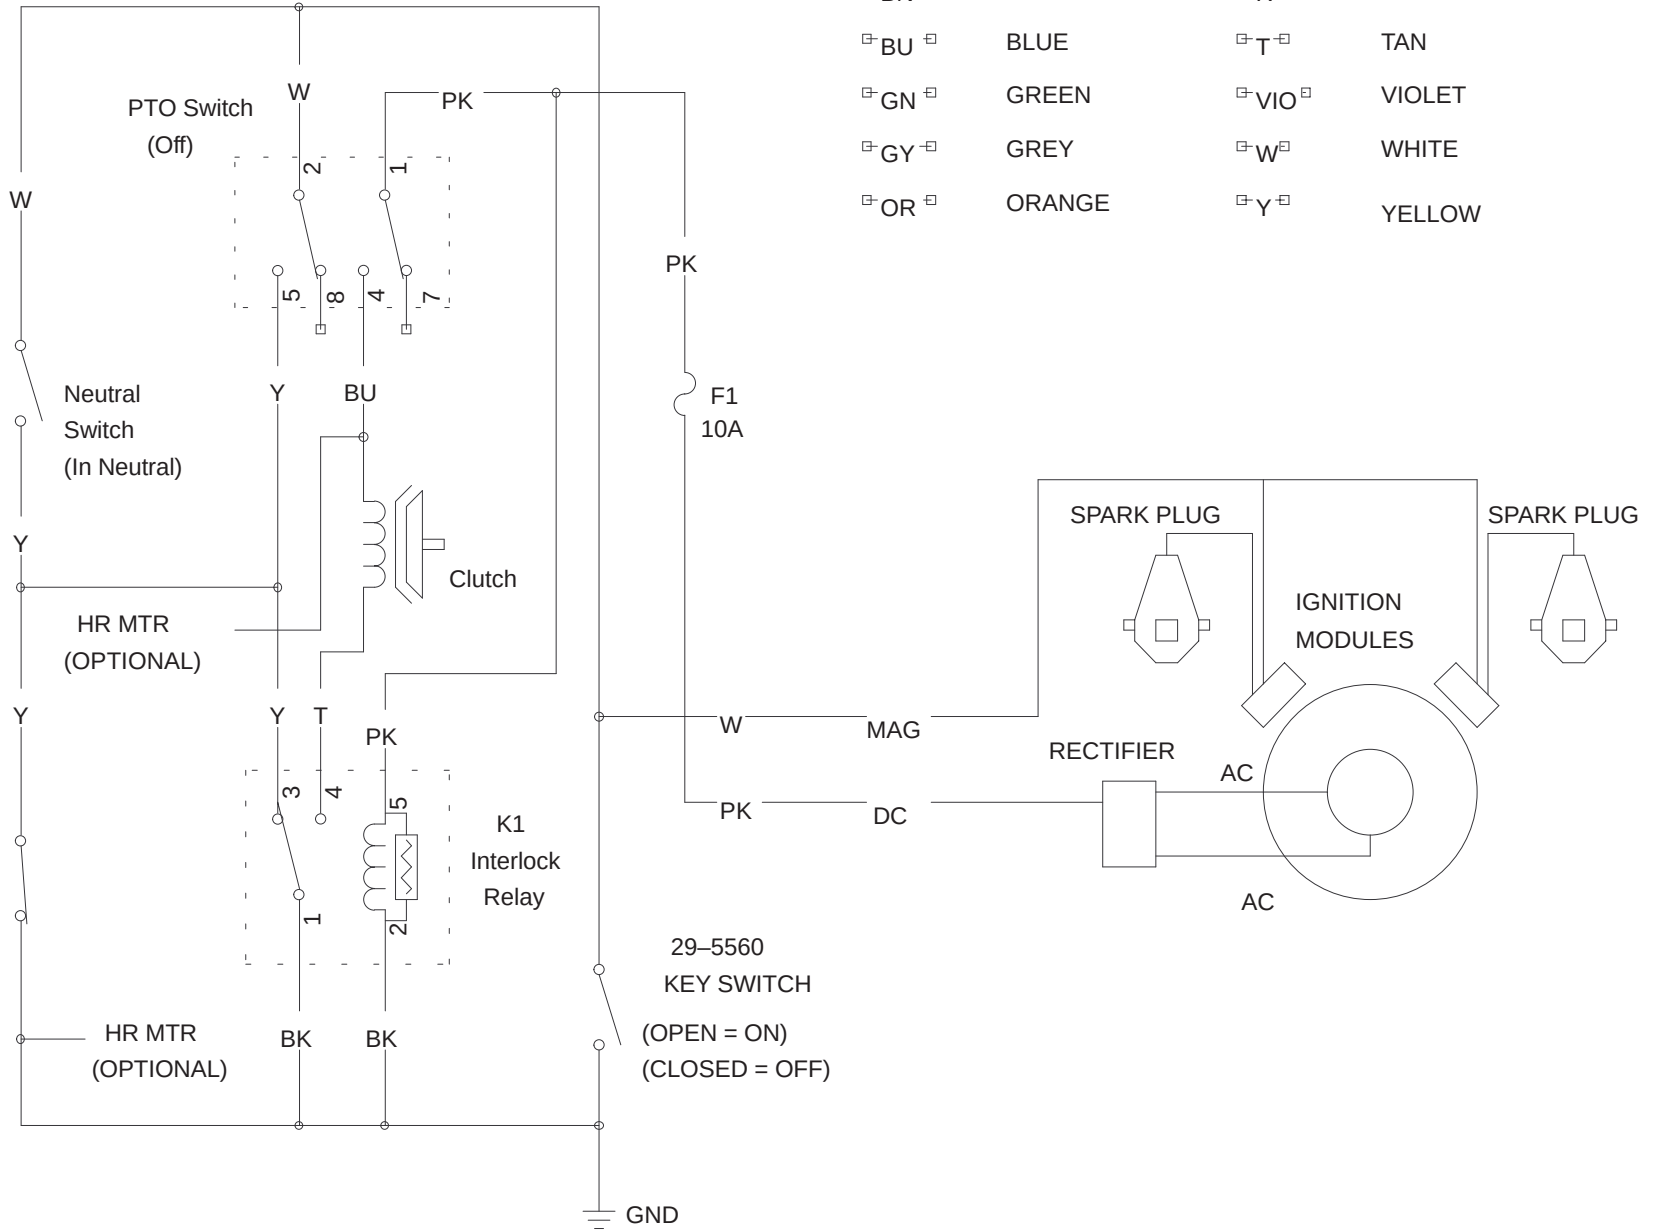

WIRE COLOR CODES			
□BK □	BLACK	□PK □	PINK
□BN □	BROWN	□R □	RED
□BU □	BLUE	□T □	TAN
□GN □	GREEN	□VIO □	VIOLET
□GY □	GREY	□W □	WHITE
□OR □	ORANGE	□Y □	YELLOW

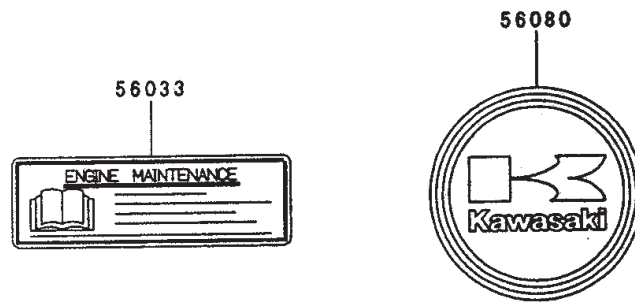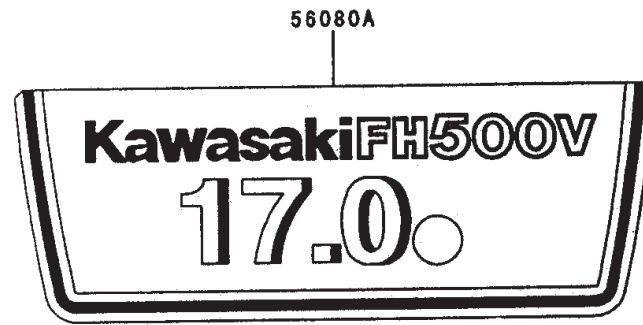

Decals

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
56033	56033-7001	1	Label-Manual
56080	56080-2077	1	Label-Brand
56080A	56080-7001	1	Label-Brand

Obtain parts from your local Kawasaki dealer.


Cylinder / Crankcase Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11004	11004-7001	2	Gasket-Head				
11008	11008-7001	1	Head-Comp-Cylinder No. 1				
11008A	11008-7002	1	Head-Comp-Cylinder No. 2				
11022	11022-7001	2	Case-Rocker				
11060	11060-7001	2	Gasket, Rocker Case				
11060A	11060-7008	1	Gasket, Crankcase Cover				
11060B	11060-7015	1	Gasket, Breather				
14090	14090-7001	1	Cover, Breather				
49015	49015-6215	1	Cover-Crankcase				
49109	49109-7002	1	Element-Breather				
49120	49120-6119	1	Crankcase-Comp				
92033	92033-7003	2	Ring-Snap				
92043	92043-7001	6	Pin				
92049	92049-7001	4	Seal-Oil				
92049A	92049-7002	1	Seal-Oil				
92049B	92049-7004	1	Seal-Oil				
92049C	92049-7005	1	Seal-Oil				
130	130B0612	4	Bolt-Flanged				
130A	130B0640	4	Bolt-Flanged				
130B	130T0850	17	Bolt-Flanged				
130C	130T0875	2	Bolt-Flanged				
172	172G0818	4	Bolt-Stud				

Obtain parts from your local Kawasaki dealer.

Valve / Camshaft Assembly Kawasaki FH500V-AS29

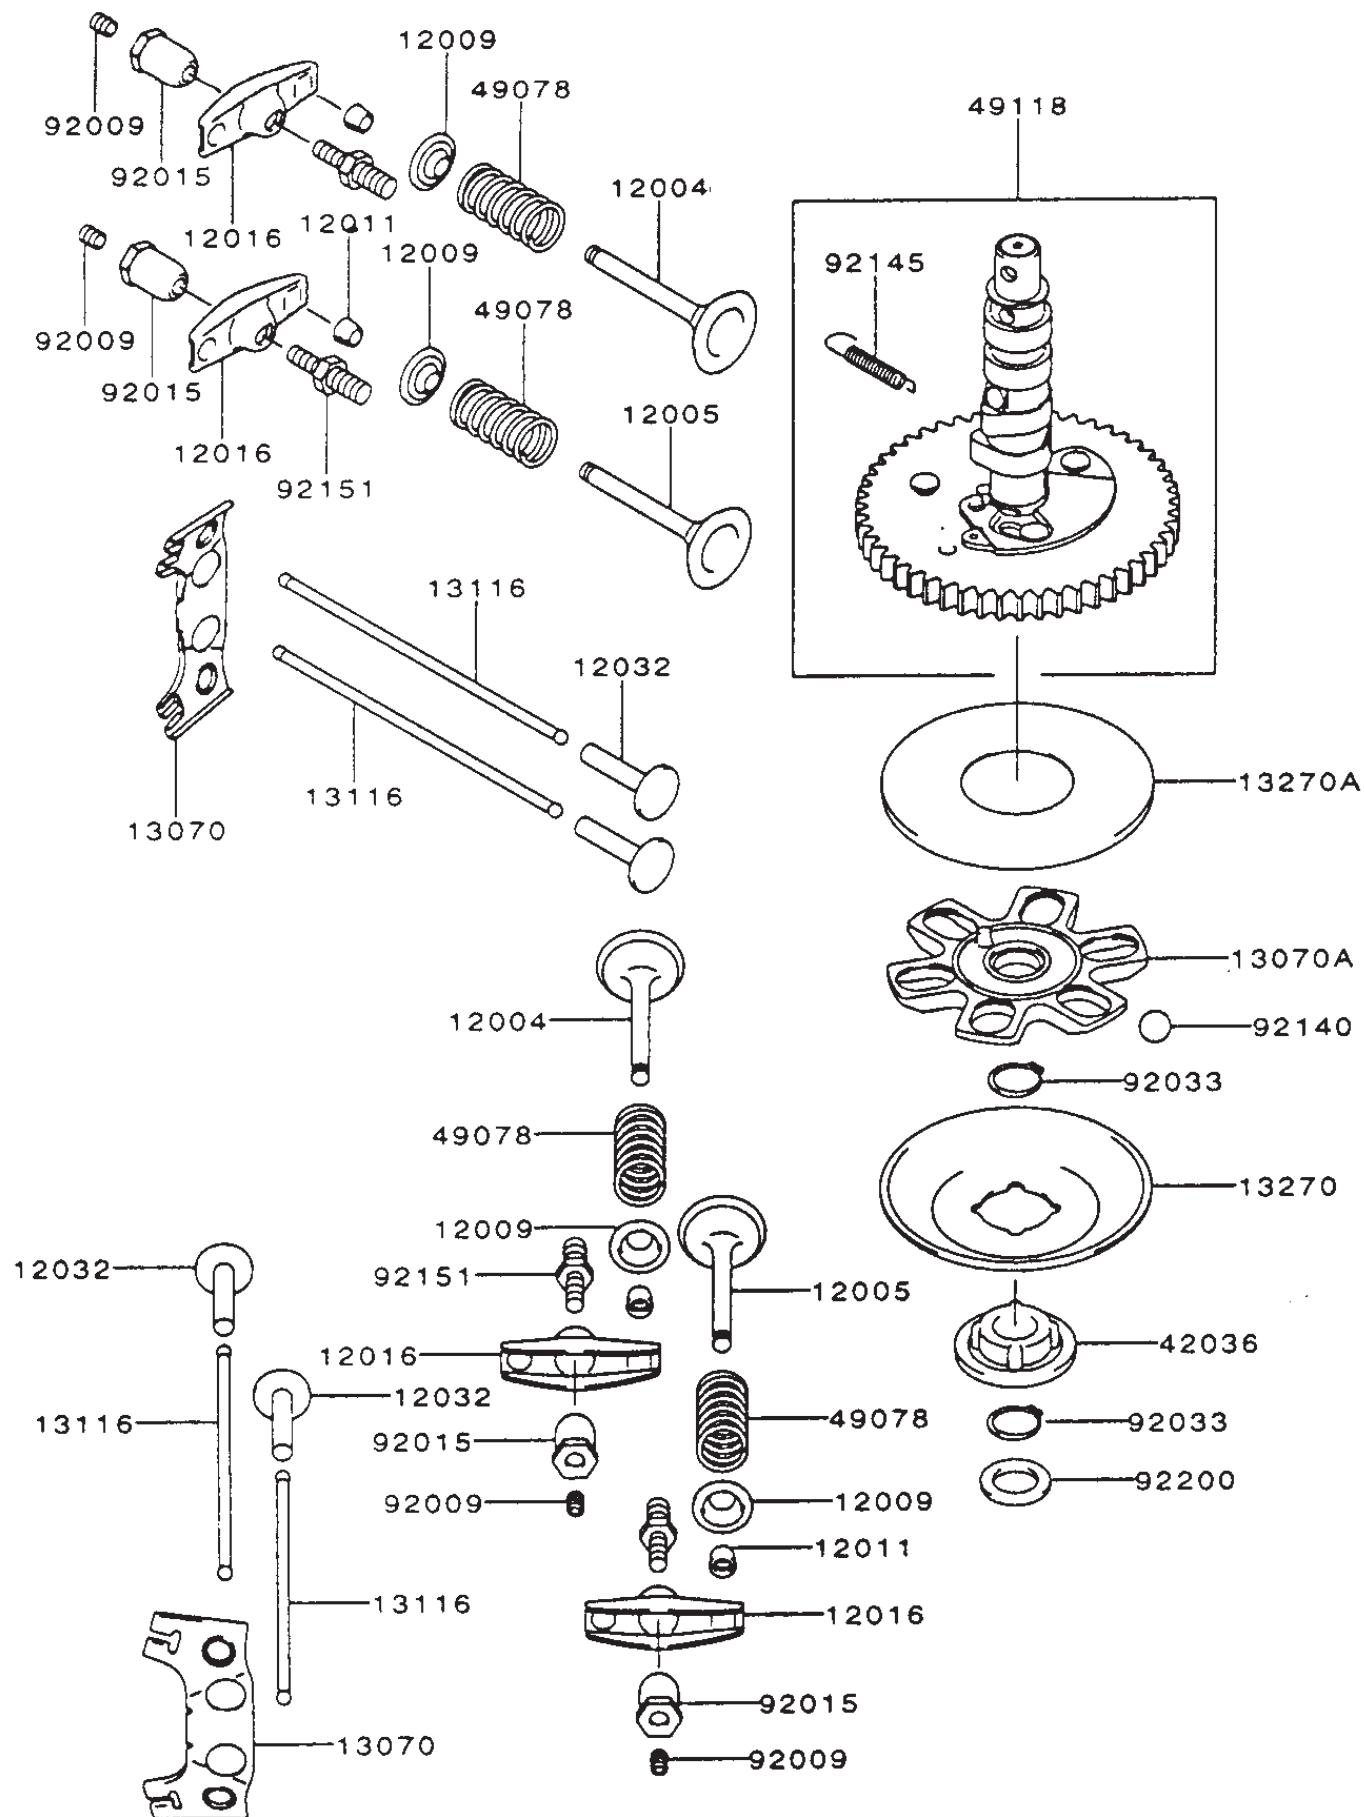


Valve / Camshaft Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
12004	12004-7001	2	Valve-Intake				
12005	12005-7001	2	Valve-Exhaust				
12009	12009-7001	4	Retainer-Valve Spring				
12011	12011-2056	8	Collet				
12016	12016-7001	4	Arm-Rocker				
12032	12032-7001	4	Tappet				
13070	13070-7001	2	Guide				
13070A	13070-7002	1	Guide				
13116	13116-2057	4	Rod-Push				
13270	13270-7002	1	Plate				
13270A	13270-7003	1	Plate				
42036	42036-7001	1	Sleeve				
49078	49078-7001	4	Spring-Engine Valve				
49118	49118-7002	1	Camshaft-Comp				
92009	92009-2341	4	Screw				
92015	92015-2253	4	Nut				
92033	92033-7001	2	Ring-Snap				
92140	92140-7002	6	Ball				
92145	92145-7001	1	Spring				
92151	92151-7001	4	Bolt				
92200	92200-7001	1	Washer				

Obtain parts from your local Kawasaki dealer.

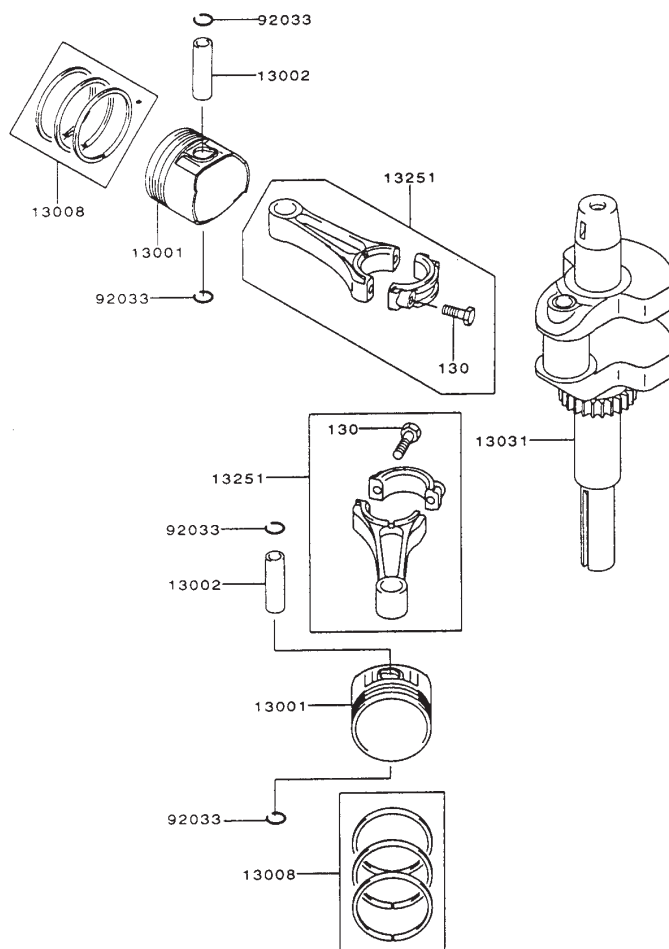


Piston / Crankshaft Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
13001	13001-7001	2	Piston-Engine
13002	13002-7001	2	Pin-Piston
13008	13008-6055	2	Ring-Set-Piston
13031	13031-7001	1	Crankshaft-Comp
13251	13251-7001	2	Rod-Assy-Connecting
92033	92033-7002	4	Ring-Snap
130	130G0630	4	Bolt-Flanged

Ref. No.	Part No.	Qty.	Description

Obtain parts from your local Kawasaki dealer.

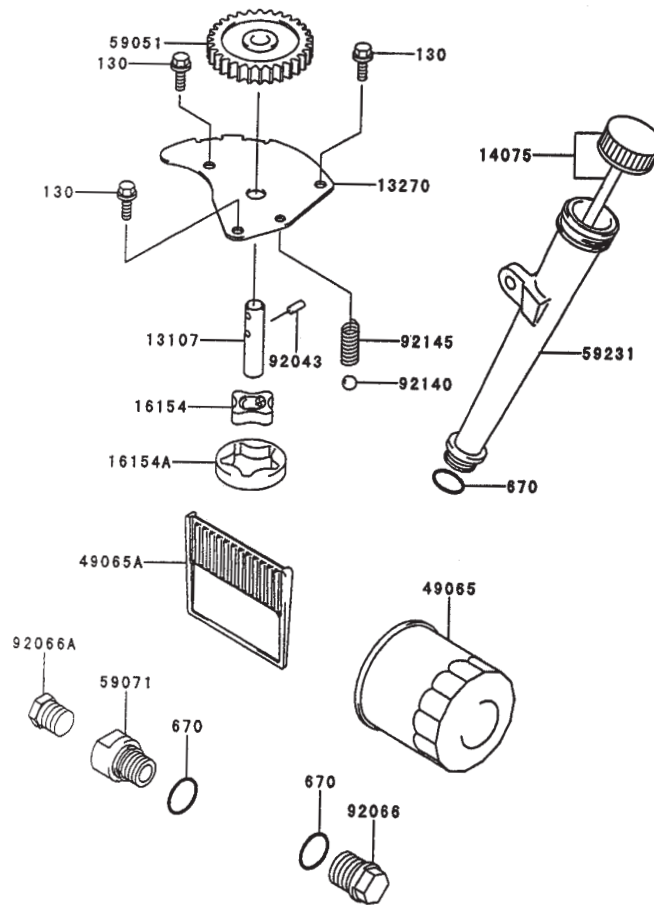


Lubrication Equipment Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-2099	1	Shaft, Oil Pump				
13270	13270-7004	1	Plate				
14075	14075-7001	1	Cap-Assy				
16154	16154-2053	1	Rotor-Pump, Out				
16154A	16154-2054	1	Rotor-Pump, Out				
49065	49065-2078	1	Filter-Oil				
49065A	49065-7001	1	Filter-Oil				
59051	59051-7004	1	Gear-Spur				
59071	59071-7004	1	Joint				
59231	59231-7001	1	Filler				
92043	92043-7003	1	Pin				
92066	92066-7003	1	Plug				
92066A	92066-7006	1	Plug				
92140	92140-7003	1	Ball				
92145	92145-7002	1	Spring				
130	130B0612	3	Bolt-Flanged				
670	670D2016	3	O-Ring				

Obtain parts from your local Kawasaki dealer.

Cooling Equipment Assembly Kawasaki FH500V-AS29

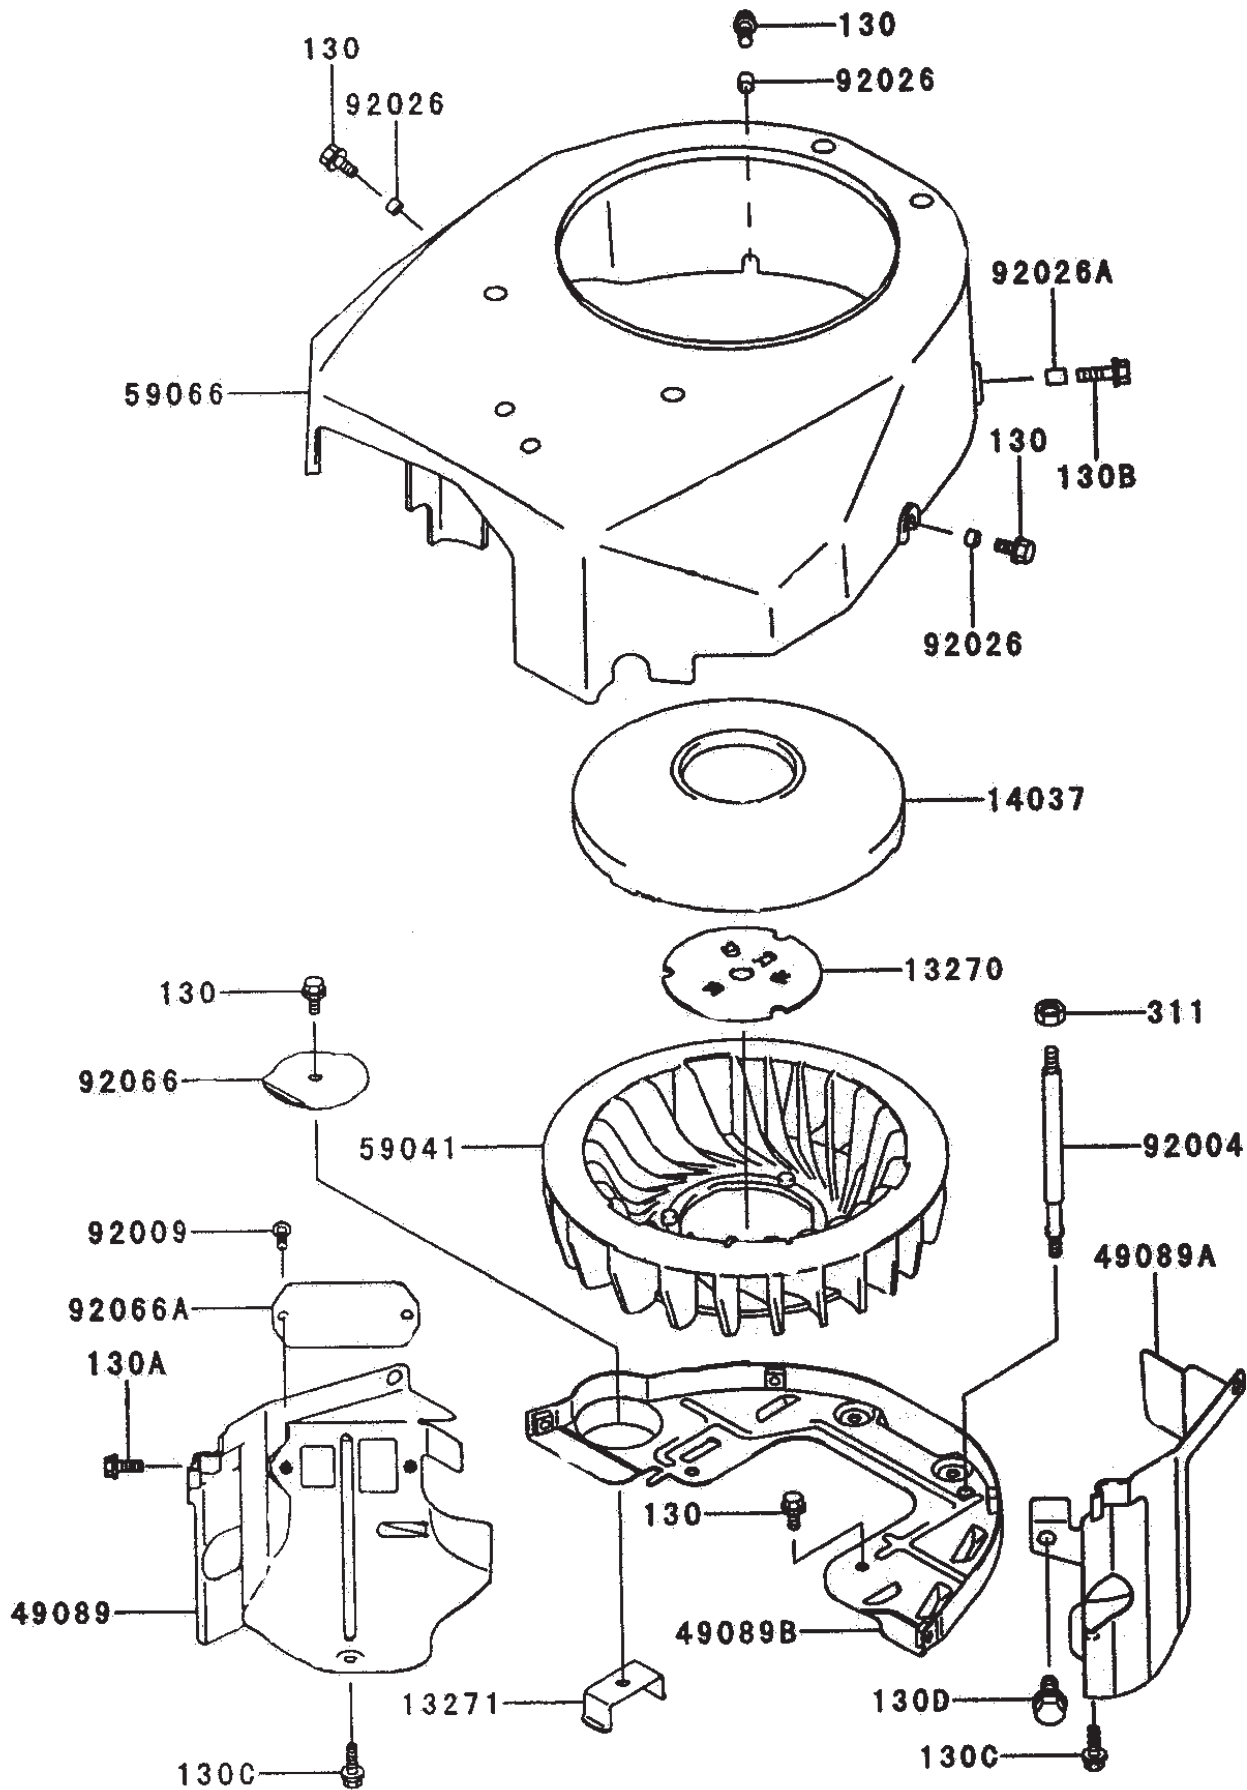

Cooling Equipment Assembly (Continued)


Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
130	130B0612	6	Bolt-Flanged				
130A	130B0616	2	Bolt-Flanged				
130B	130B0620	1	Bolt-Flanged				
130C	130B0625	2	Bolt-Flanged				
130D	130B0816	1	Bolt-Flanged				
13270	13270-7007	1	Plate				
13271	13271-7002	1	Plate				
14037	14037-7002	1	Screen				
311	311B0600	2	Nut-Hex				
49089	49089-7001	1	Shroud-Engine				
49089A	49089-7002	1	Shroud-Engine				
49089B	49089-7003	1	Shroud-Engine				
59041	59041-7001	1	Fan				
59066	59066-7002	1	Housing-Fan				
92004	92004-7006	2	Stud				
92009	92009-2308	2	Screw				
92026	92026-7001	3	Spacer, 6.2x7.9x5				
92026A	92026-7003	1	Spacer, 6.5x7.9x10.5				
92066	92066-7004	1	Plug				
92066A	92066-7004	1	Plug				

Obtain parts from your local Kawasaki dealer.


Electrical Equipment Assembly

Kawasaki FH500V-AS29

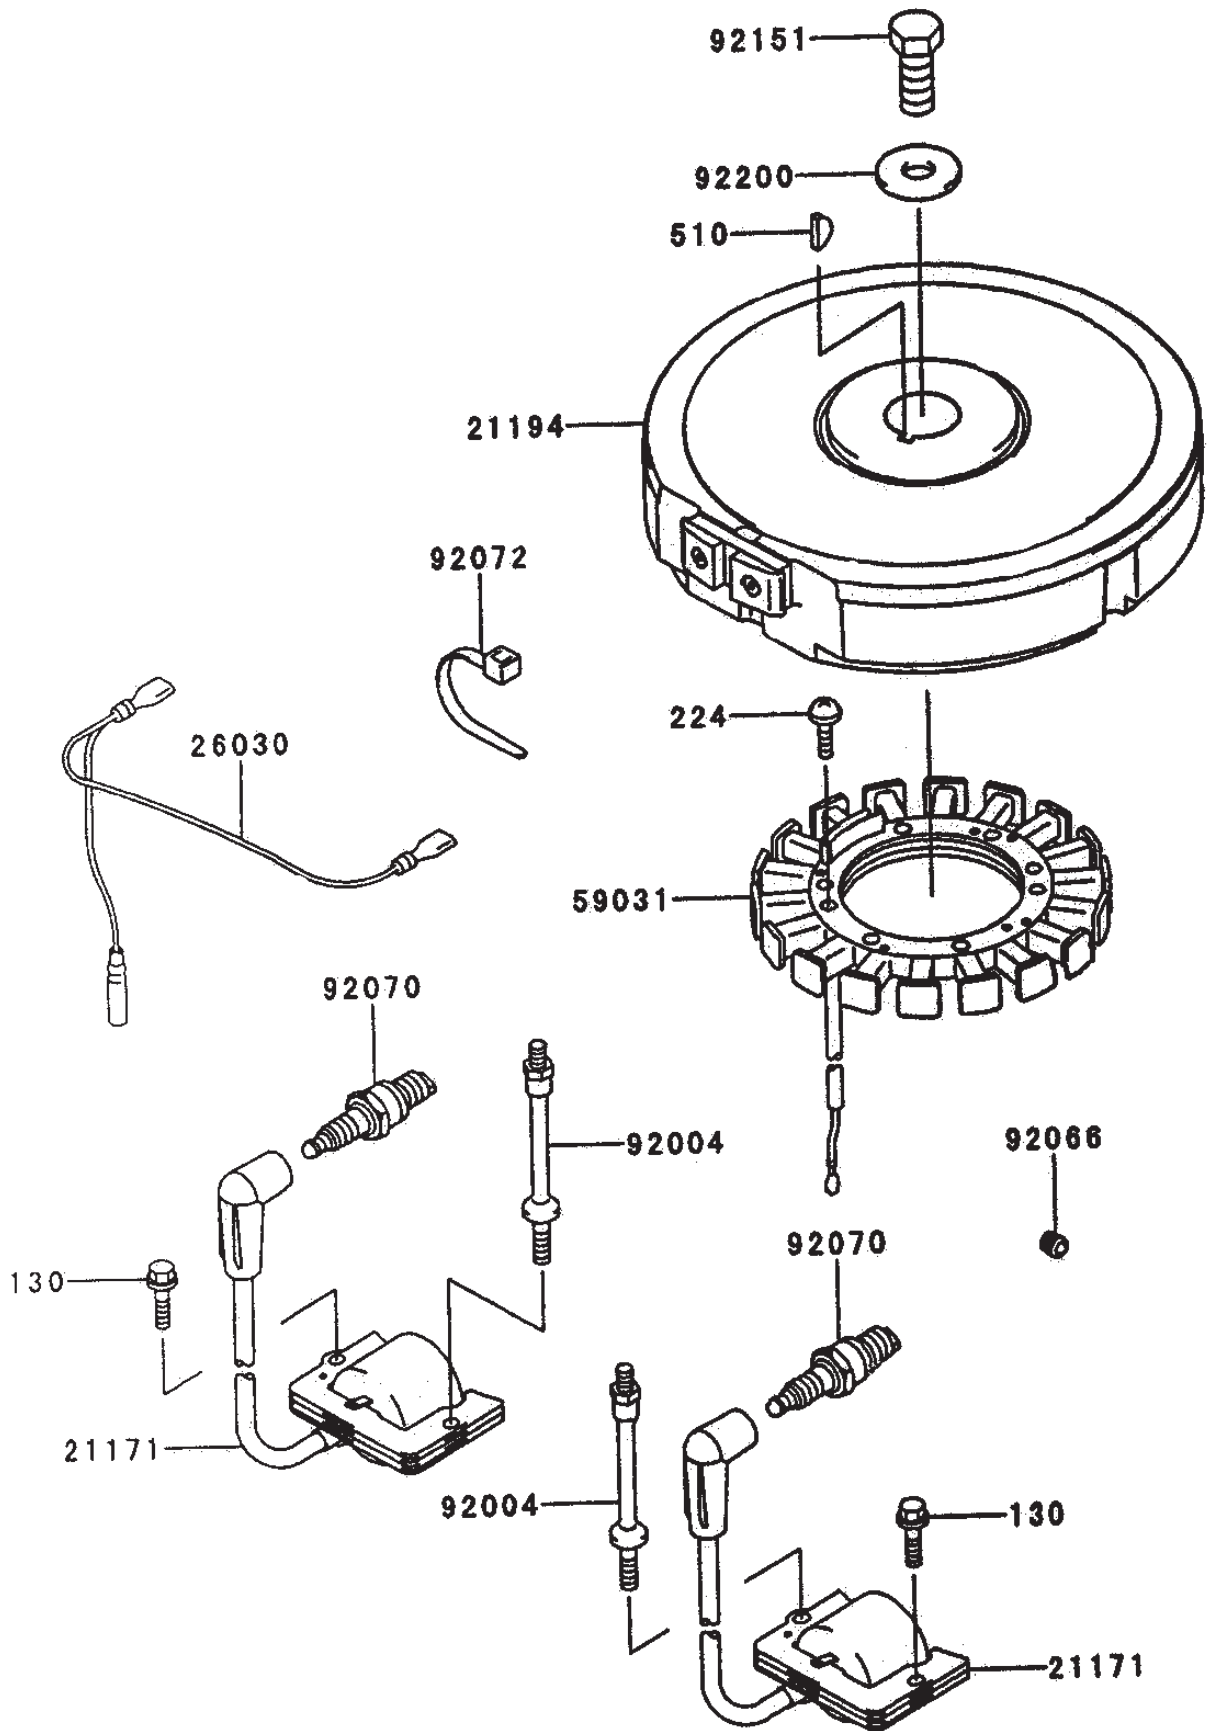

Obtain parts from your local Kawasaki dealer.

Control Equipment Assembly
Kawasaki FH500V-AS29

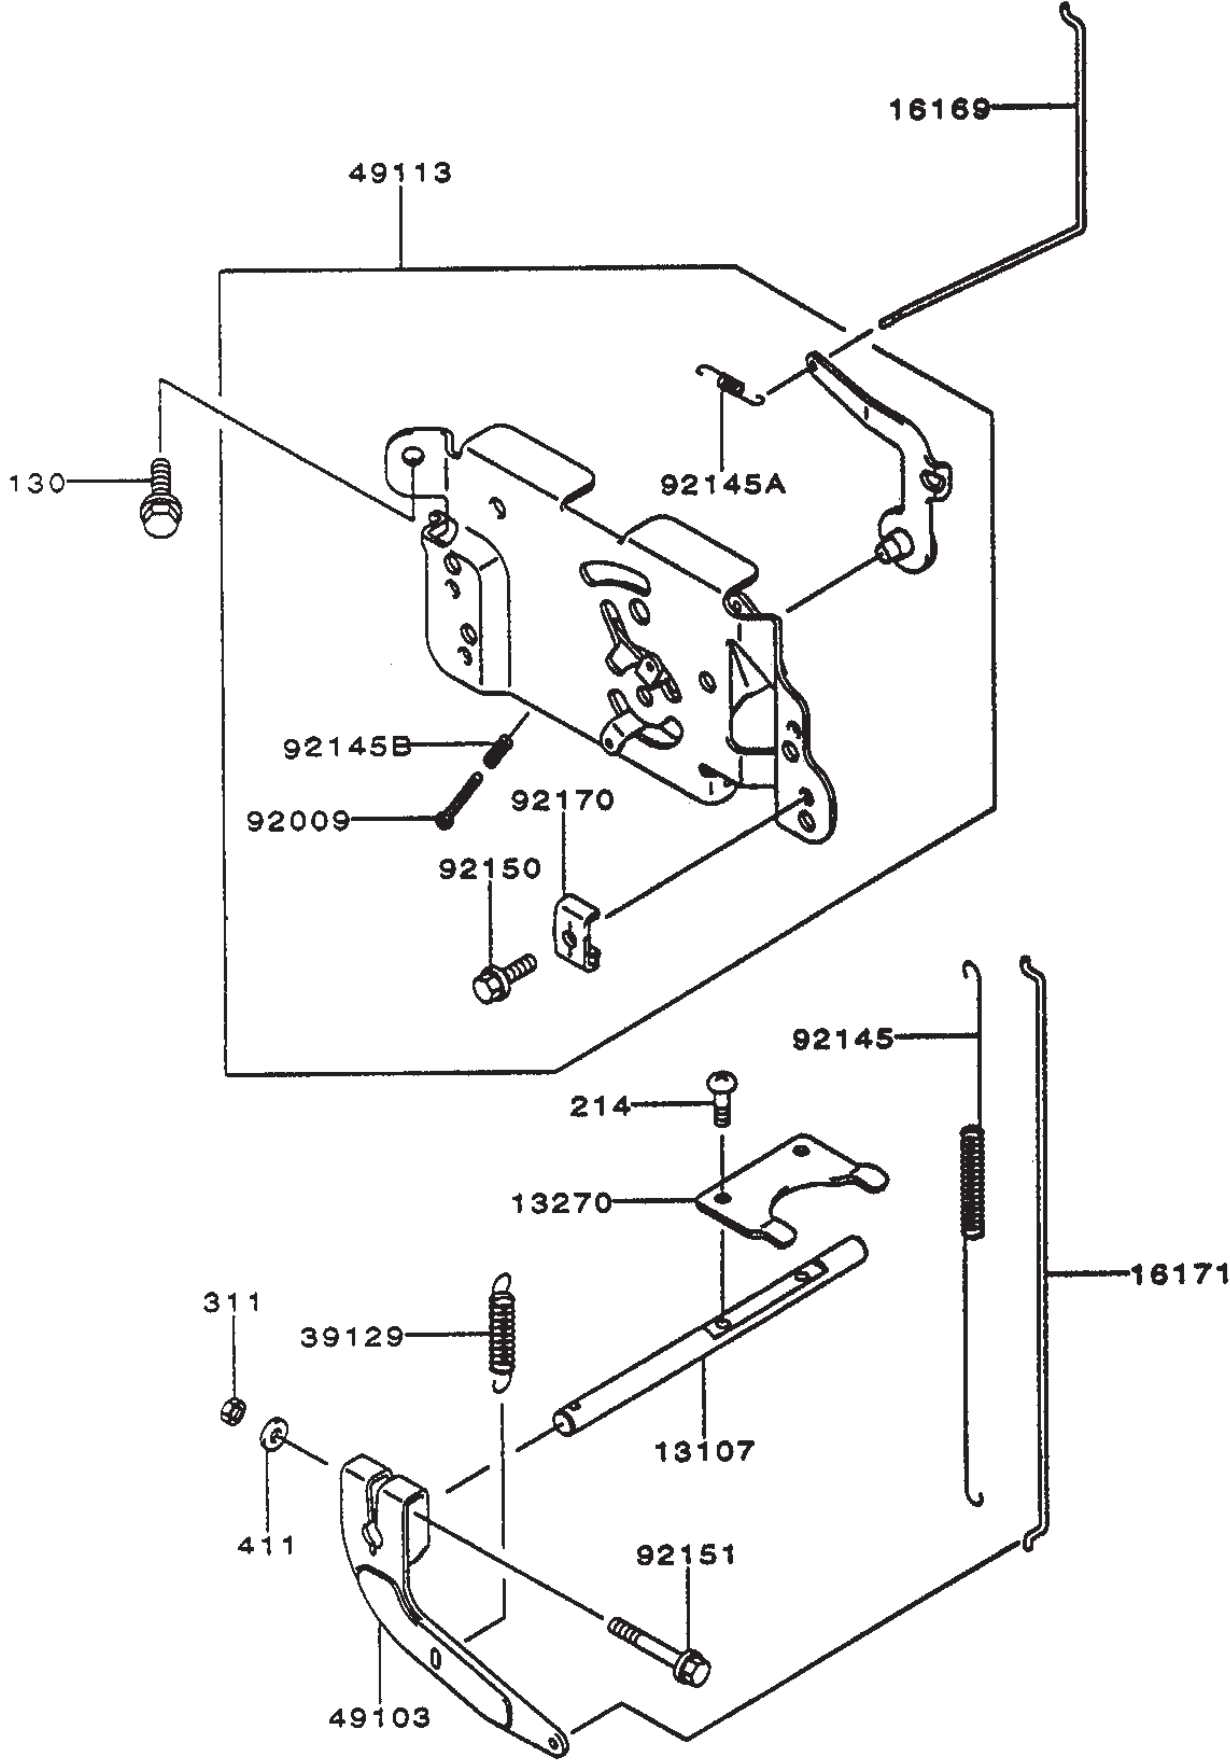


Control Equipment Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13107	13107-7002	1	Shaft				
13270	13270-7006	1	Plate				
16169	16169-7001	1	Link-Choke				
16171	16171-7001	1	Link				
39129	39129-7003	1	Spring-Governor				
49103	49103-7001	1	Arm-Governor				
49113	49113-7001	1	Panel-Comp-Control				
92009	92009-7002	1	Screw, 4x30				
92145	92145-7003	1	Spring				
92145A	92145-7004	1	Spring				
92145B	92145-7005	1	Spring				
92150	92150-2182	1	Bolt, 5x18				
92151	92151-7006	1	Bolt, 6x30				
92170	92170-7001	1	Clamp				
130	130B0612	2	Bolt-Flanged				
214	214B0408	2	Screw-Pan				
311	311B0600	1	Nut-Hex				
411	411B0600	1	Washer-Plain				

Obtain parts from your local Kawasaki dealer.

Carburetor Assembly Kawasaki FH500V-AS29

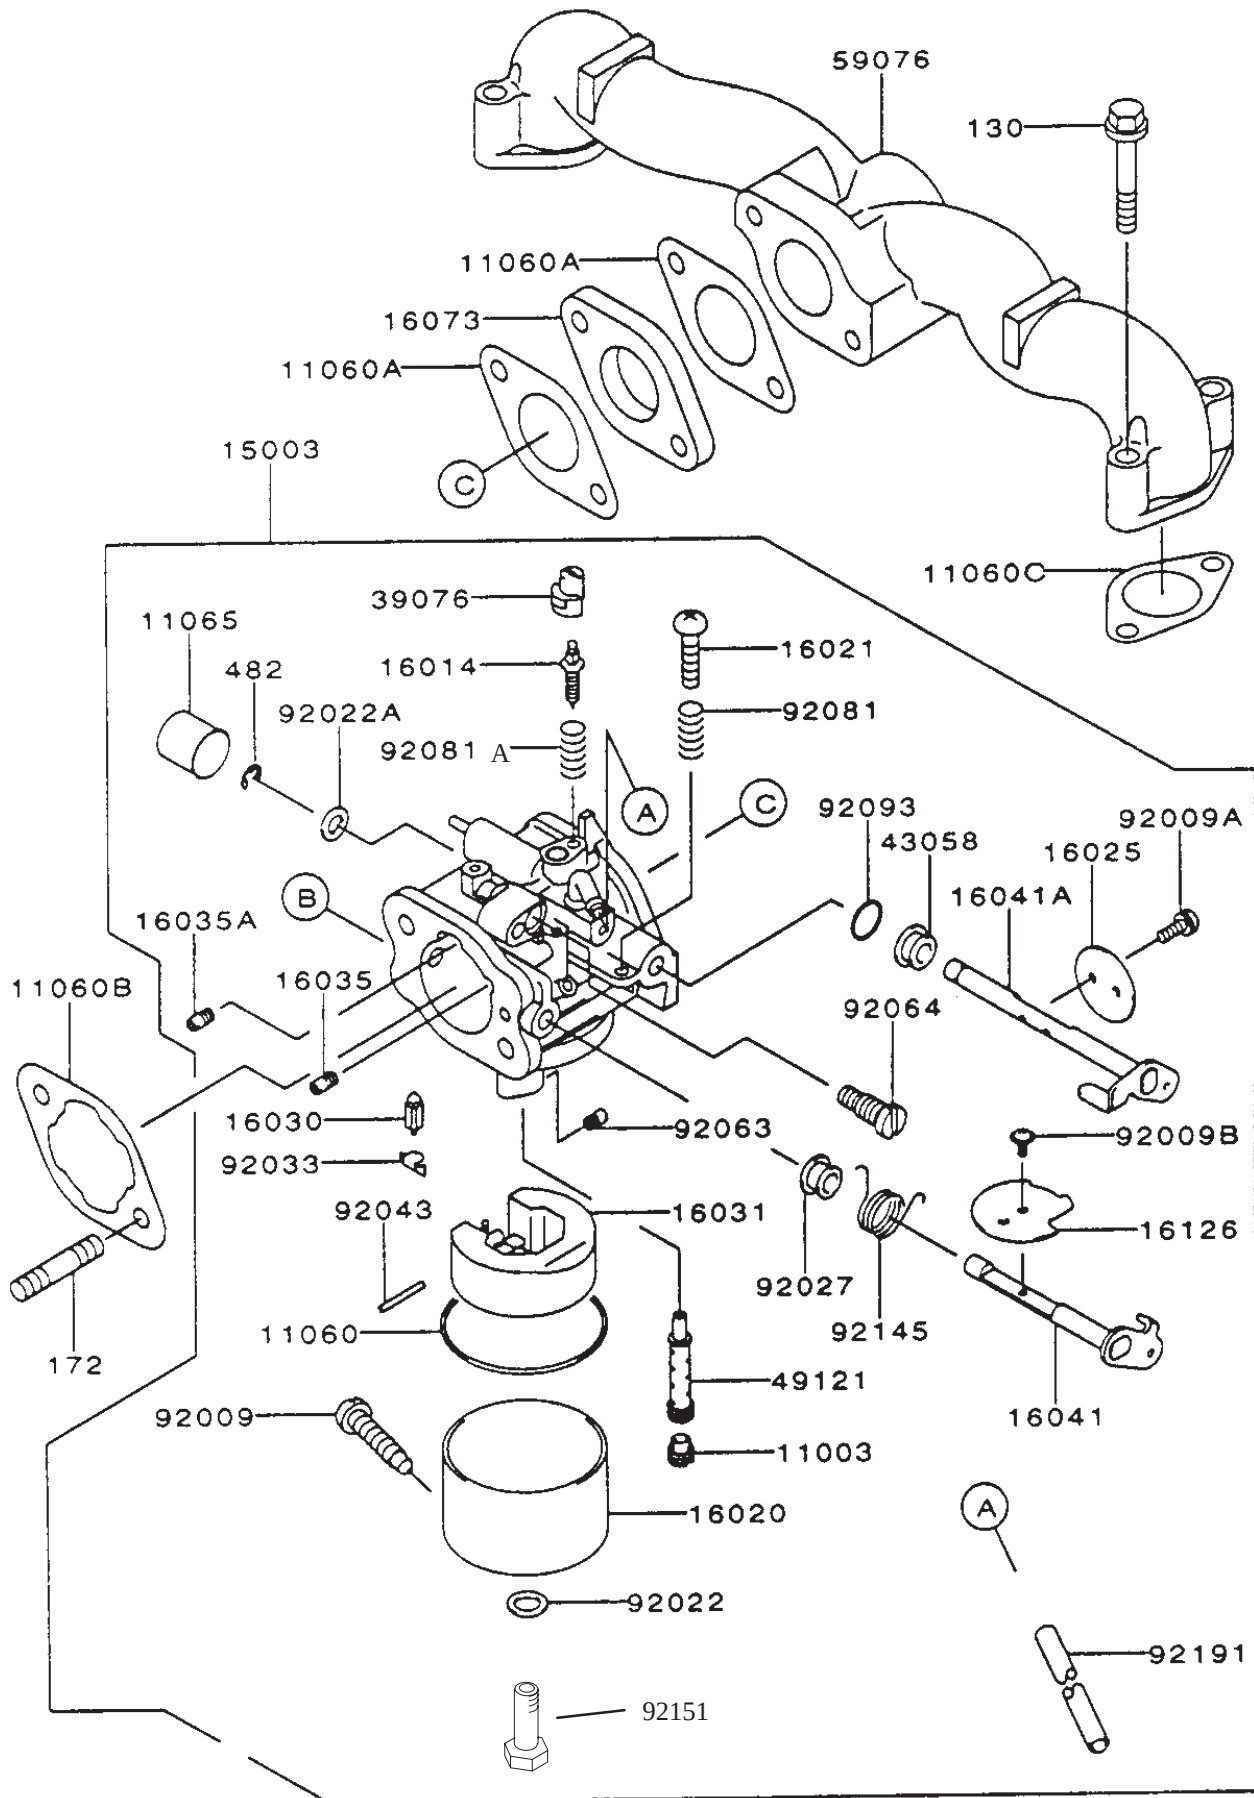


Carburetor Assembly (Continued)

Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11003	11003-2105	1	Seat-Valve				
11060	11060-2406	1	Gasket				
11060A	11060-7003	2	Gasket, Insulator				
11060B	11060-7004	1	Gasket, Air Filter				
11060C	11060-7005	2	Gasket				
11065	11065-2061	1	Cap				
15003	15003-2698	1	Carburetor-Assy				
16014	16014-2080	1	Screw-Pilot Air				
16020	16020-2141	1	Chamber-Float				
16021	16021-2060	1	Screw-Throttlestop				
16025	16025-2193	1	Valve-Throttle, #130				
16030	16030-2067	1	Valve-Float				
16031	16031-2066	1	Float				
16035	16035-2060	1	Jet-Air, #1.7				
16035A	16035-2061	1	Jet-Air, #1.2				
16041	16041-2252	1	Shaft-Carburetor, Choke				
16041A	16041-2253	1	Shaft-Carburetor Throttle				
16073	16073-7001	1	Insulator				
16126	16126-2219	1	Valve				
39076	39076-2053	1	Limiter				
43058	43058-3716	1	Ring				
49121	49121-2222	1	Nozzle-Main				
59076	59076-7001	1	Manifold-Intake				
92009	92009-2015	1	Screw				
92009A	92009-2024	2	Screw				
92009B	92009-2081	1	Screw				
92022	92022-2231	1	Washer				
92022A	92022-2239	1	Washer				
92027	92027-2025	1	Collar				
92033	92033-2067	1	Ring-Snap				
92043	92043-2226	1	Pin				
92063	92063-2358	1	Jet-Main				
92064	92064-2125	1	Jet-Pilot				
92081	92081-2009	2	Spring				
92081A	92081-2256	1	Spring				
92093	92093-2002	1	Seal				
92145	92145-2061	1	Spring				
92151	92151-2092	1	Bolt				
92191	92191-7008	1	Tube				
130	130B0635	4	Bolt-Flanged				
172	172G0685	2	Bolt-Stud				
482	482L4000	1	Circlip-Type-E				

Obtain parts from your local Kawasaki dealer.

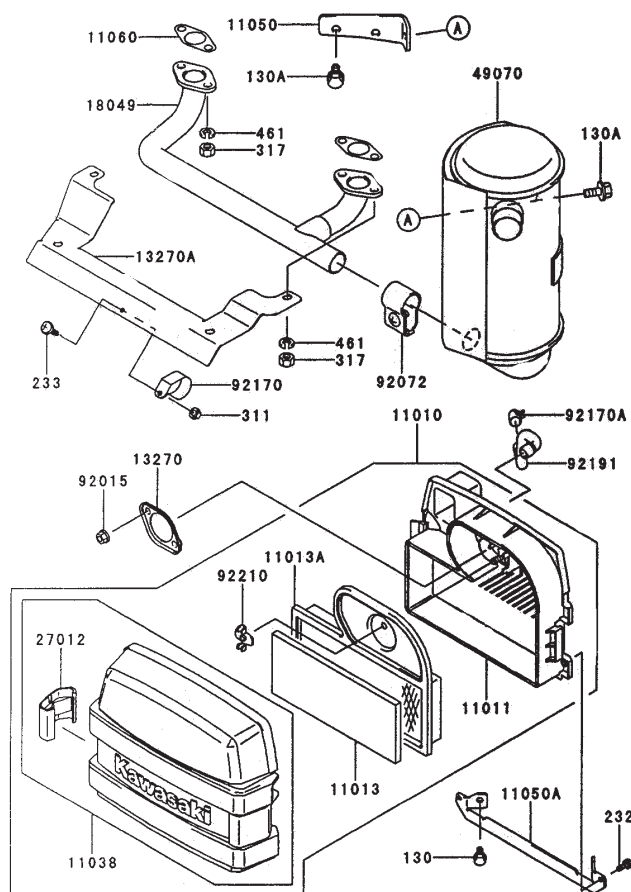


Air Filter / Muffler Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
11010	11010-7001	1	Filter-Assy-Air
11011	11011-7001	1	Case-Air Filter
11013	11013-7001	1	Element-Air Filter
11013A	11013-7002	1	Element-Air Filter
11038	11038-7001	1	Case-Assy-Air Filter
11050	11050-7004	1	Bracket
11050A	11050-7006	1	Bracket
11060	11060-7006	2	Gasket, Muffler
13270	13270-7001	1	Plate
13270A	13270-7008	1	Plate
18049	18049-7001	1	Pipe-Exhaust
27012	27012-7001	2	Hook, Air Filter
49070	49070-7002	1	Muffler-Comp
92072	92072-7002	1	Band
92015	92015-1193	2	Nut
92170	92170-7002	1	Clamp
92170A	92170-7003	1	Clamp
92191	92191-7001	1	Tube
92210	92210-7004	1	Nut
130	130B0612	2	Bolt-Flanged
130A	130B0816	2	Bolt-Flanged
232	232B0514	2	Screw-Pan-WS
233	233B0416	1	Screw-Pan WP
311	311B0400	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description
317	317R0800	4	Nut-Hex-Small
461	461F0800	4	Washer-Spring


Obtain parts from your local Kawasaki dealer.

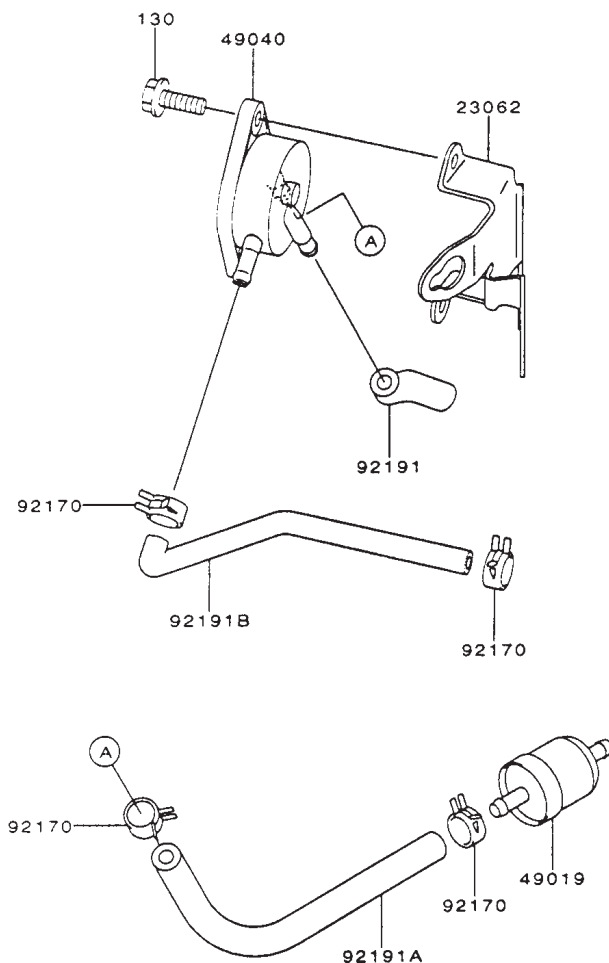

Fuel Tank / Fuel Valve Assembly Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description
23062	23062-7001-9H	1	Bracket-Comp
49019	49019-7001	1	Filter-Fuel
49040	49040-2075	1	Pump-Fuel
92170	92170-2088	4	Clamp
92191	92191-7002	1	Tube
92191A	92191-7003	1	Tube,6.35x12.7x160
92191B	92191-7004	1	Tube
130	130B0620	2	Bolt-Flanged

Obtain parts from your local Kawasaki dealer.

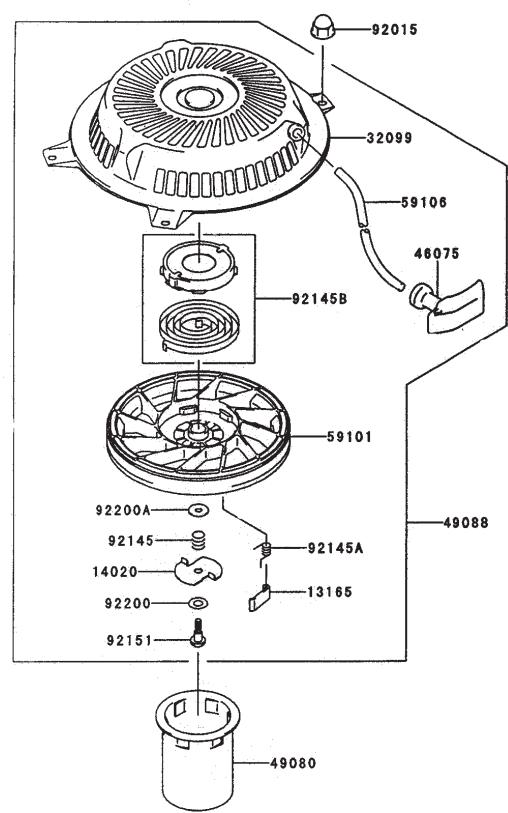

Starter Assembly
Kawasaki FH500V-AS29

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
13165	13165-700	2	Pawl, Recoil Starter				
14020	14020-7001	1	Retainer				
32099	32099-7001	1	Case, Recoil Starter				
46075	46075-7001	1	Grip-Recoil Starter				
49080	49080-7001	1	Pulley-Starting				
49088	49088-7001	1	Starter-Recoil				
59101	59101-7001	1	Reel, Recoil Starter				
59106	59106-7001	1	Rope				
92015	92015-1170	4	Nut				
92145	92145-7006	1	Spring				
92145A	92145-7007	2	Spring				
92145B	92145-7008	1	Spring				
92151	92151-7008	1	Bolt				
92200	92200-7004	1	Washer				
92200A	92200-7005	1	Washer				

Obtain parts from your local Kawasaki dealer.

Maintenance Record

[illegible]

