TORO_®

Tree Fork Dingo[®] Attachment Model No. 22438—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002 All Rights Reserved 3327-460

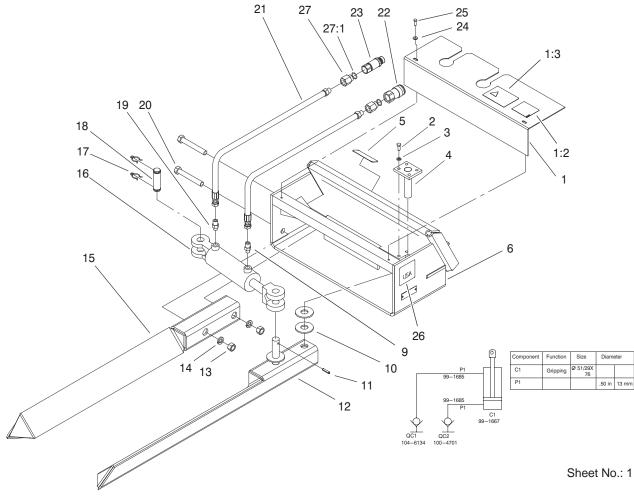

Tree Fork Assembly

Ref. No.	Part No.	Qty.	Description	1	Ref. No.	Part No.	Qty.	Description
1	99–1669	1	Shield ASM		23	100–4701	1	Nipple–Connect,
1:2	100–4650	1	Decal-Warning					Pressure
1:3	100–4690	1	Decal–Load Rating		*23:1	100–6120	1	Kit–Seal
2	3274–10	4	Screw–HSH		24	3256–1	2	Washer-Flat
3	3253–4	4	Washer-Lock		25	3274–8	2	Screw–HSH
4	99–1672	1	Pin		26	98–3269	1	Decal–Made In USA
5	98–3206	1	Decal–Logo, Toro		27	100–4618	2	Adapter–HYD
6	99–1680	1	Frame		27:1	237–80	1	O–Ring
9	99–1686	1	Connector–Straight					_
10	3256–10	2	Washer-Flat					
11	32121–9	1	Pin–Spring					
12	99–1683	1	Arm–Pivot, LH					
13	3219–6	2	Nut–Hex					
14	3253–8	2	Washer–Lock					
15	99–1682	1	Arm–Pivot, RH					
16	99–1667	1	Cylinder–Fork, Tree					
*16:1	100–4695	1	Kit–Seal					
17	99–1689	2	Clip–Pin					
18		1	Pin–Pivot, Cylinder					
19	99–1687	1	Connector–Oriface,					
			Straight					
20	3214–15	2	Screw–HH					
21	99–1685	2	HYD Hose ASM					
22	104–6134	1	Coupler–Face, Flush					
*22:1	105-8396	1	Kit–Seal					

* Not illustrated