



Mid–Size Mower

ProLine Gear 12.5hp with 36in Side Discharge Mower

Model No. 30521—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine and Fuel System Assembly	3	Valve / Camshaft (Kawasaki FB460V–MS14) ..	16
Transmission and Drive Pulley Assembly	4	Lubrication Equipment	
Wheel Drive Assembly	6	(Kawasaki FB460V–MS14)	17
Upper Handle Assembly	8	Cooling Equipment (Kawasaki FB460V–MS14)	18
Handle Assembly No. 106–2719	9	Electric Equipment (Kawasaki FB460V–MS14)	19
Deck Assembly	10	Control Equipment (Kawasaki FB460V–MS14)	20
Front Caster and Blade Brake Assembly	11	Carburetor (Kawasaki FB460V–MS14)	21
Spindle Assembly	13	Air Filter (Kawasaki FB460V–MS14)	22
Crankcase (Kawasaki FB460V–MS14)	14	Starter (Kawasaki FB460V–MS14)	23
Piston/Crankshaft Crankcase		Starter (Kawasaki FB460V–MS14)	24
(Kawasaki FB460V–MS14)	15	Muffler (Kawasaki FB460V–MS14)	25


Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Kit	30142	Soft Bagger	30198
Lowsail Blade	103–2508	Atomic Blade	104–8590

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

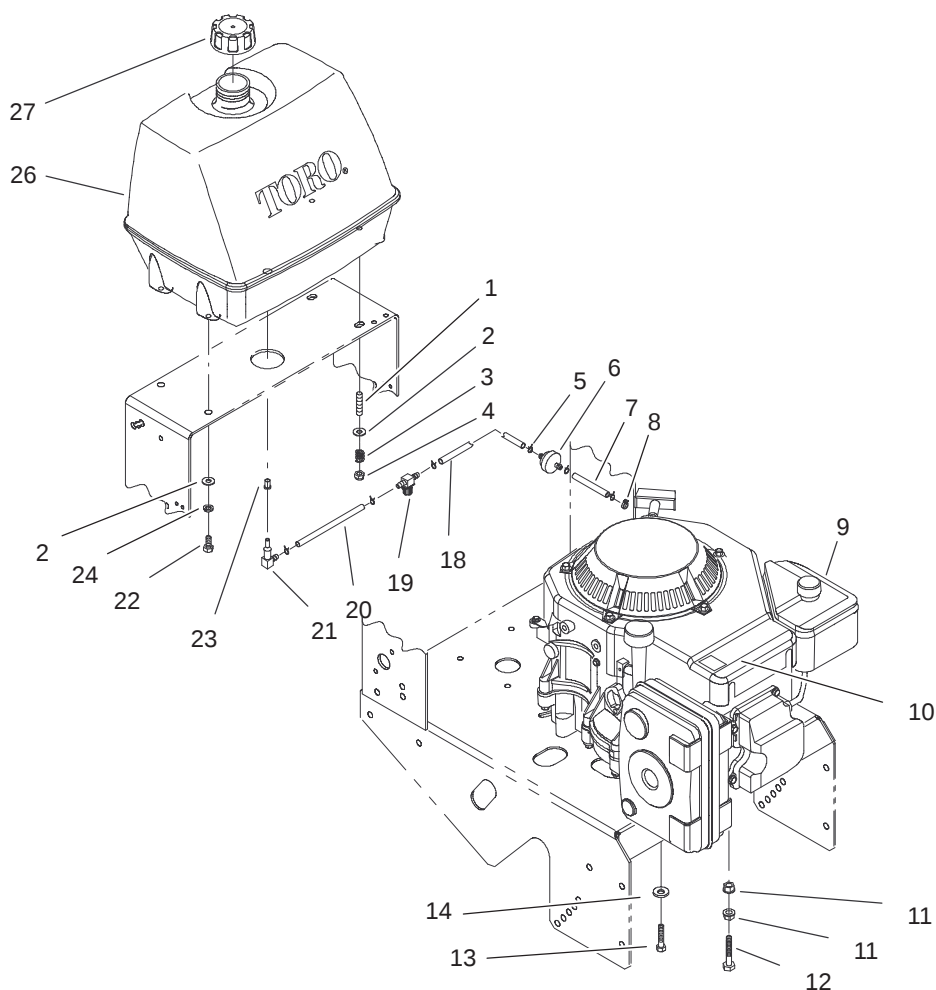


Sheet No.: 2

Engine and Fuel System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-633023	2	Stud				
2	3256-23	4	Washer-Flat				
3	1-633349	2	Spring-Tank, Fuel				
4	3296-47	2	Nut-Lock, NI				
5	1-303077	5	Clamp-Line, Fuel				
6	1-303197	1	Filter-Fuel				
7	1-603776	1	Hose-Line, Fuel				
8	1-303308	1	Clamp-Hose				
☆9		1	Engine-Kawasaki, (Fb460v-Ms14)				
10	63-8440	1	Decal-Surface, Hot				
11	3290-357	2	Nut-HHF				
12	323-13	1	Screw-HH				
13	33114-025	4	Screw-HH				
14	1-303334	4	Washer-Spring				
18	1-303022	1	Hose-Line, Fuel				
19	1-603770	1	Valve-Fuel				
20	1-603955	1	Hose-Line, Fuel				
21	1-543277	1	Elbow-Tank, Fuel				
22	322-3	2	Screw-HH				
23	1-513645	1	Bushing-Valve, Fuel				
24	1-805005	2	Washer-Lock				
26	1-323551	1	Tank-Fuel				
27	1-513508	1	Cap-Fuel				
*99	1-303335	1	Tie-Plastic				

☆ Not serviced separately

* Not illustrated

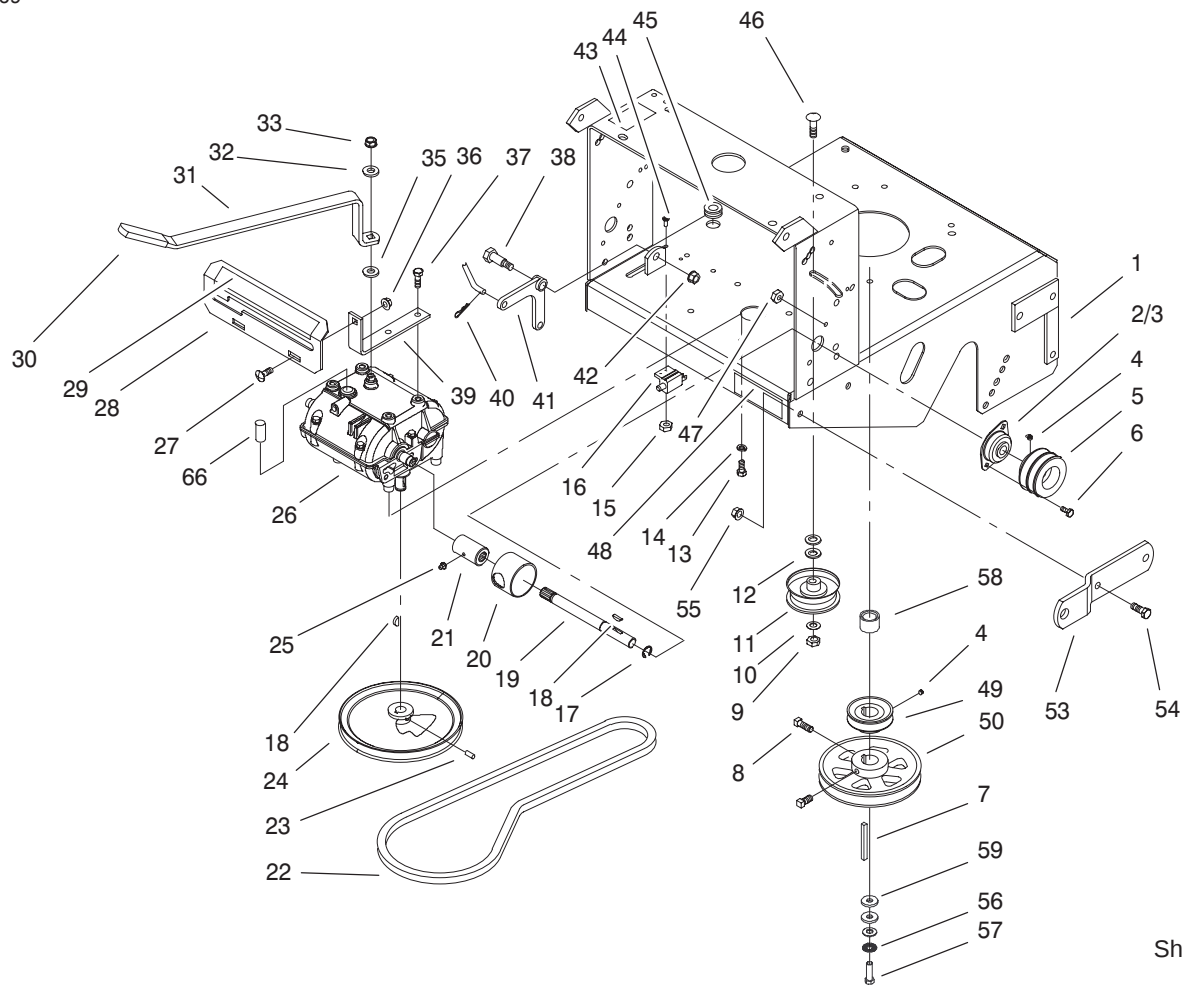


Sheet No.: 3

Transmission and Drive Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	1-402112-01	1	Deck-Rear
2	1-323252	2	Bearing-Shaft
3	1-323254	2	Flange-Output
4	1-803310	3	Screw-Set
5	1-323257-03	2	Sheave-Transmission
6	321-3	4	Screw-HH
7	5-1336	1	Key
8	3242-4	2	Screw-Set, SQH
9	3296-39	1	Nut-Lock, NI
10	3256-24	1	Washer-Flat
11	1-323285	1	Idler-Drive, Transmission
12	3256-5	2	Washer-Flat
13	322-3	4	Screw-HH
14	1-805005	4	Washer-Lock
15	3296-2	2	Nut-Lock
16	1-513051	1	Switch-Open, Normally
17	32151-62	2	Ring-Retaining
18	3257-5	3	Key-Woodruff
19	1-323502	2	Shaft-Transmission
20	51-4220	2	Guard-Coupler
21	1-323680	2	Coupler
22	1-323630	1	V-Belt
23	3245-41	2	Screw-HSH
24	1-323278	1	Sheave-Transmission

Ref. No.	Part No.	Qty.	Description
25	302-19	2	Fitting-Grease
26	1-323500	1	Transmission
27	3230-1	2	Screw-CARR
28	1-323387-03	1	Plate-Shift
29	105-4104	1	Decal-Speed, Ground
30	1-303020	1	Grip-Lever
31	98-3274-03	1	Lever-Shift
32	98-5975	1	Washer-Belleville
33	3296-6	1	Nut-Lock, NI
35	1-323379	1	Washer-Lever, Shifter
36	32128-20	2	Nut-HF
37	32104-32	4	Screw-HH
38	1-603403	1	Bolt-Shoulder
39	1-323389-03	2	Bracket-Plate, Shift
40	1-806003	1	Pin-Hair
41	1-303186	1	Bellcrank
42	3290-357	1	Nut-HHF
43	95-2814	1	Decal-Shut Off, Fuel
44	3290-500	2	Screw-PPH
45	1-543296	1	Grommet-Line, Fuel
46	3231-6	1	Screw-CARR
47	3296-42	4	Nut-Lock, NI
48	98-0776	1	Decal-Caution
49	103-1666	1	Sheave-Transmission
50	103-1668	1	Sheave
53	1-323318-01	2	Hitch-Sulky

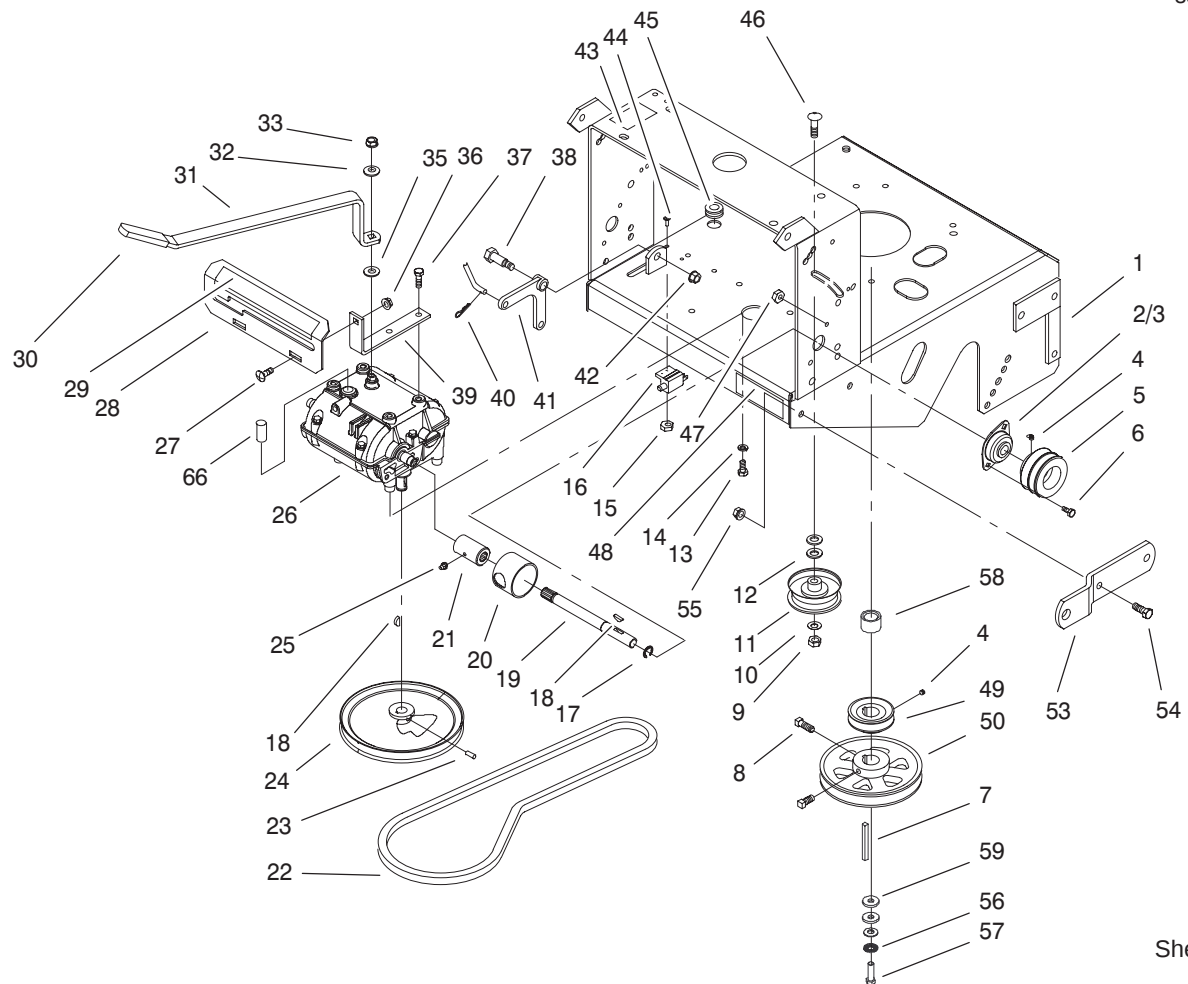


Sheet No.: 3

Transmission and Drive Pulley Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
54	323-6	4	Screw-HH
55	3290-357	4	Nut-HHF
56	98-5975	1	Washer-Belleville
57	33115-035	1	Screw-HH
58	1-633453	1	Spacer-Clutch
59	1-373034	2	Washer-Swivel
66	1-303282	1	Switch-Start, Neutral

Ref. No.	Part No.	Qty.	Description

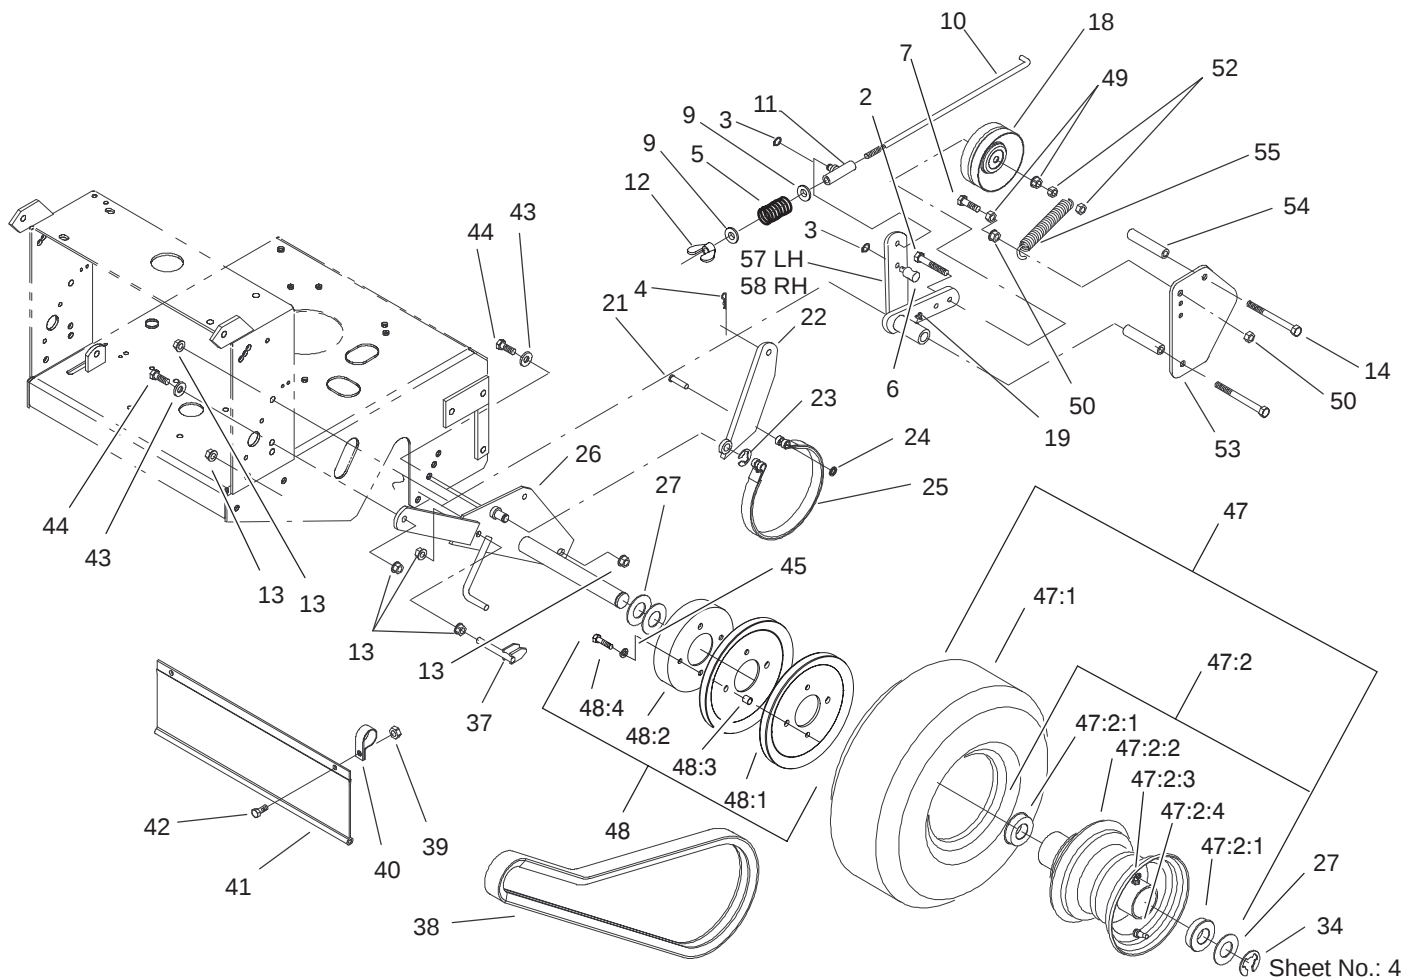


Sheet No.: 4

Wheel Drive Assembly

Ref. No.	Part No.	Qty.	Description
2	99-8664	2	Screw-HH
3	32151-47	6	Ring-Retaining
4	1-806003	4	Pin-Hair
5	1-323245	2	Spring-Compression
6	103-1864	2	Swivel-Lever, Drive
7	322-6	2	Screw-HH
9	3256-23	4	Washer-Flat
10	1-323548	2	Linkage-Brake
11	1-322125	2	Swivel-Brake
12	1-513959	2	Wingnut-Nylock
13	3290-357	14	Nut-HHF
14	323-39	4	Screw-HH
18	1-323352	2	Idler-Wheel, Drive
19	302-19	2	Fitting-Grease
21	1-323307	2	Pin-Clevis
22	103-1611-03	2	Arm-Brake
23	32120-47	2	Ring-Retaining, External
24	1-803051	2	Nut-Push
25	1-323262	2	Band-Brake
26	1-322117-03	1	Axle
27	1-523157	6	Washer-Spacer
27	1-543436	8	Washer-Spacer
34	1-808519	2	Ring-Snap
37	1-603430	2	Scraper
38	1-323631	2	V-Belt-Wheel, Drive

Ref. No.	Part No.	Qty.	Description
39	3296-29	4	Nut-Lock, NI
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
45	1-373034	8	Washer-Swivel
★47		2	Wheel & Tire ASM
47:1	1-323720	1	Tire-Turfmaster
47:2	1-323328	1	Wheel & Hub ASM
47:2:1	1-323329	2	Bearing-Flanged
★47:2:2		1	Rim ASM
★47:2:3		1	Fitting-Grease
★47:2:4		1	Valve Stem & Cap
★48		2	Drum & Sheave ASM
48:1	1-323253	2	Sheave-Wheel, Drive
48:2	1-323261	1	Drum-Brake
48:3	1-323260	4	Spacer-Sheave, Wheel
48:4	322-6	4	Screw-HH
49	3290-357	2	Nut-HHF
50	32128-20	2	Nut-HF
52	3296-39	8	Nut-Lock, NI
53	1-323287-01	2	Shield-Wheel, Drive
54	1-323419	4	Spacer-Shield, Lower
55	1-603402	2	Spring-Extension

★ Not serviced separately

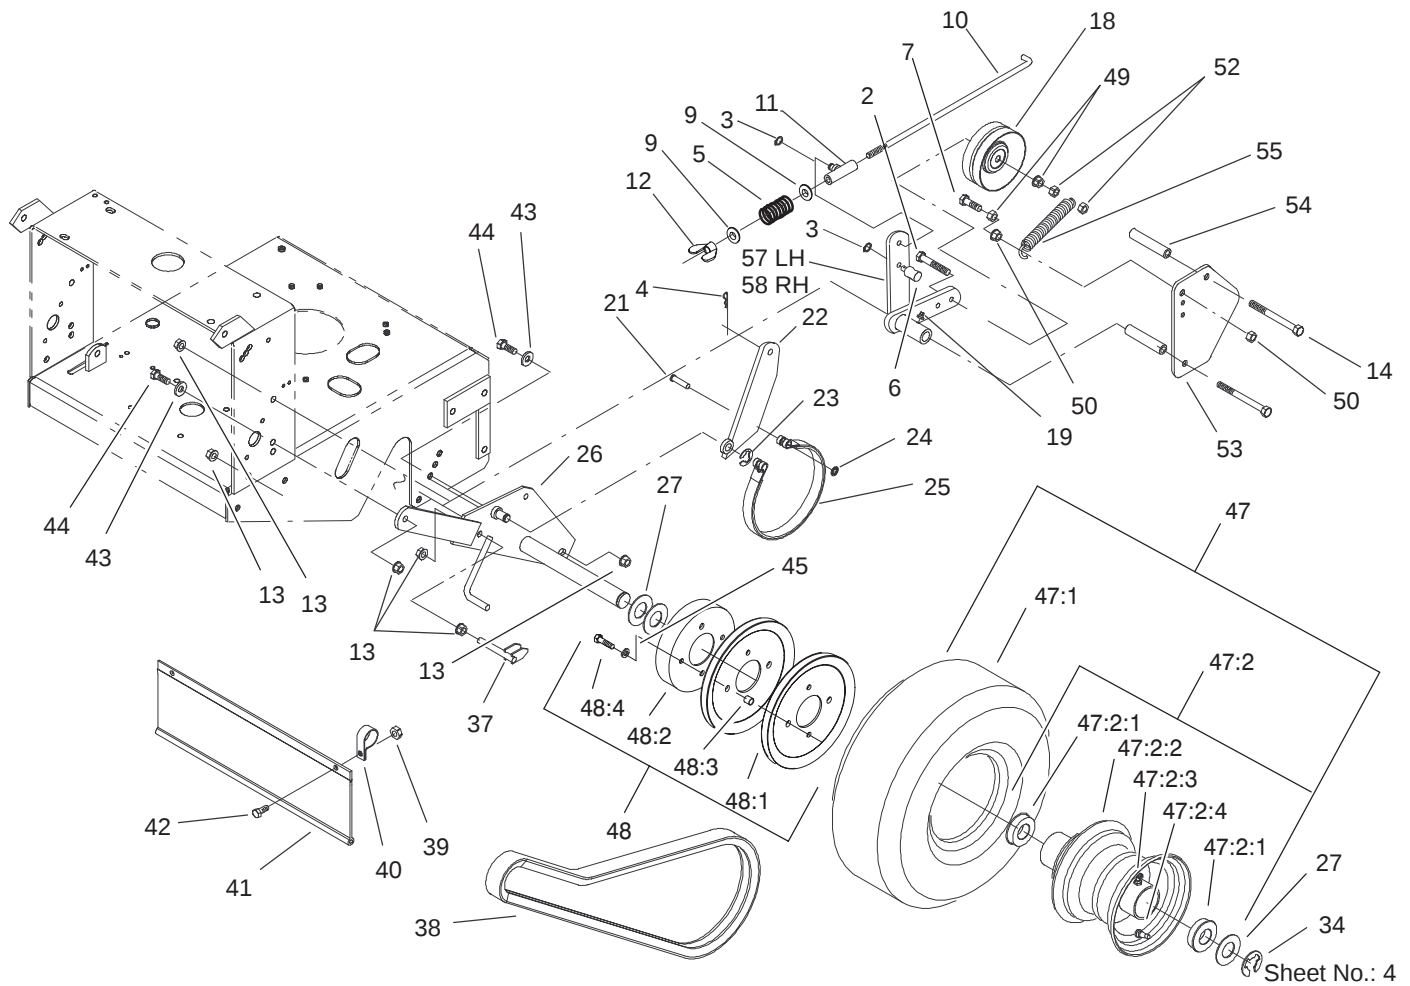


Wheel Drive Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
57	103-1615-03	1	Arm-Idler, LH
58	103-1616-03	1	Arm-Idler, RH

Ref. No.	Part No.	Qty.	Description

3327-569

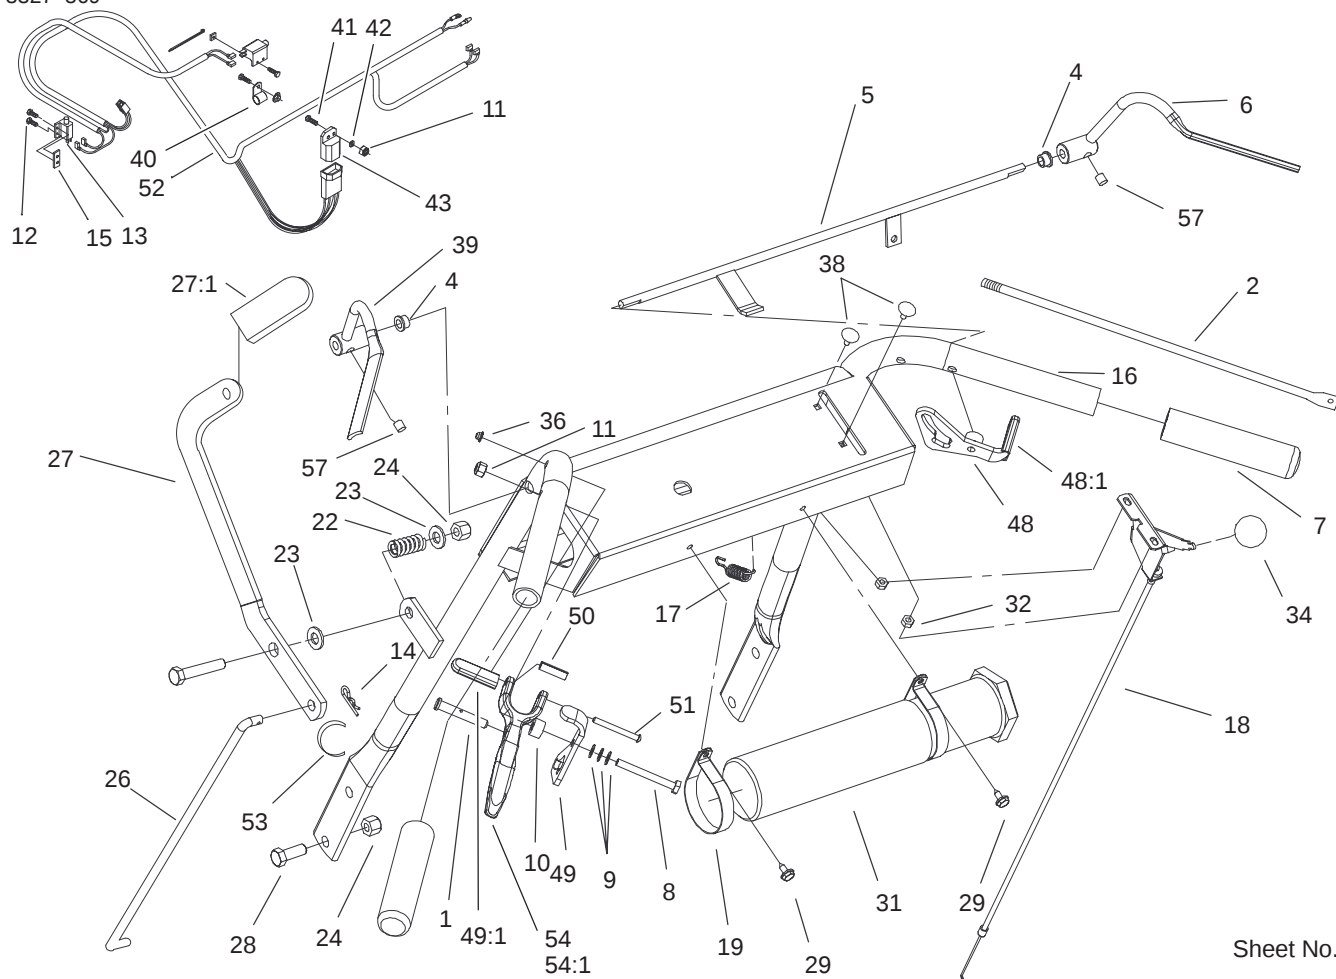


Sheet No.: 5

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	1-808286	2	Pin-Clevis
2	1-323359	2	Linkage-Wheel, Drive
4	1-303365	2	Bushing-Nylon
5	106-2717-03	1	Operator Presence Control Rod ASM
6	1-412185-03	1	Lever-RH
7	1-303097	2	Grip-Handle
8	321-18	2	Screw-HH
9	1-303435	6	Washer-Spring
10	1-323549	2	Spacer
11	3296-42	3	Nut-Lock, NI
12	3290-500	2	Screw-PPH
13	1-513051	1	Switch-Open, Normally
14	1-806003	2	Pin-Hair
15	1-633181	1	Plate-Tapped
16	106-2719	1	Handle ASM
17	1-303363	1	Spring-Extension
18	1-323322	1	Cable-Control, Throttle
19	2412-120	2	R-Clamp
22	1-303160	1	Spring-Compression
23	3256-4	2	Washer-Flat
24	3296-39	5	Nut-Lock, NI
26	1-323298	1	Linkage-Blade, Upper
27	1-322157	1	Lever ASM W/Grip


Ref. No.	Part No.	Qty.	Description
27:1	1-303020	1	Grip-Lever
28	323-6	4	Screw-HH
29	32104-76	2	Screw
31	74-0720	1	Tube-Manual
32	3296-2	2	Nut-Lock
34	1-513592	1	Knob-Ball
36	1-803001	2	Nut
38	1-807513	2	Bolt-CARR
39	1-412183-03	1	Lever-LH
40	1-323229	2	Clip-Loom
41	321-4	1	Screw-HH
42	3256-22	1	Washer-Flat
43	1-323430	1	Module-Harness, Wiring
48	1-324280	1	RH Thumb Latch ASM
48:1	1-303019	1	Grip-Latch
49	1-324279	1	LH Thumb Latch ASM
49:1	1-303019	1	Grip-Latch
50	1-806340	2	Pin-Roll
51	1-808250	2	Pin-Clevis
52	103-1660	1	Harness-Wiring
53	1-303088	1	Clip-Cable
54	1-302006	2	Drive Lever ASM
54:1	1-303021	1	Grip-Lever, Drive
57	1-803322	2	Screw-Set

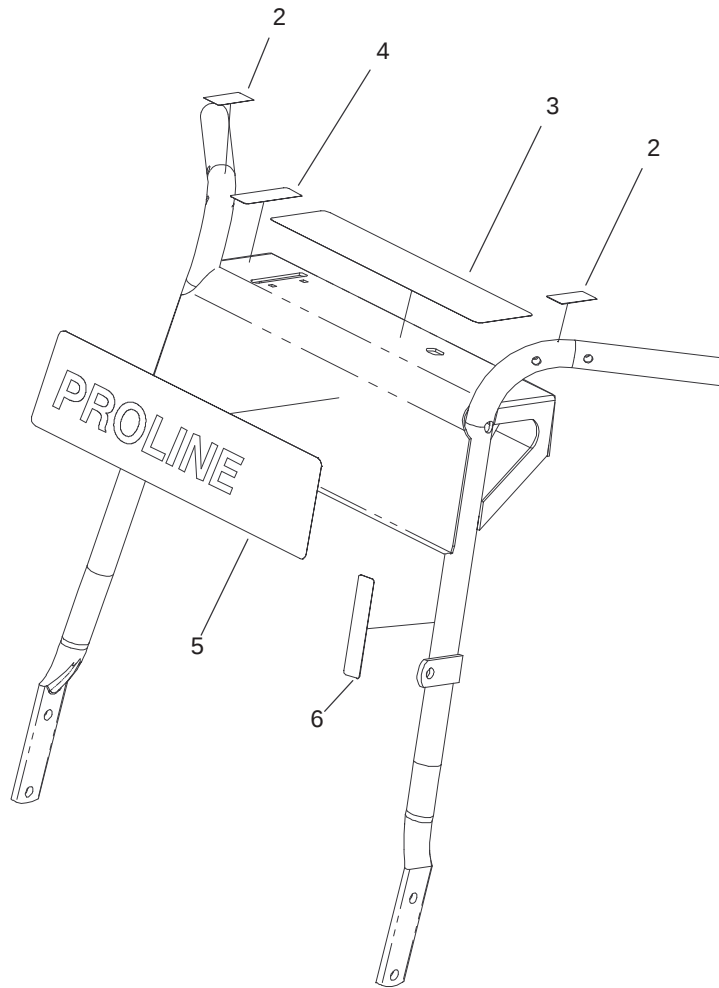

Sheet No.: A1

Handle Assembly No. 106-2719

Ref. No.	Part No.	Qty.	Description
2	105-4111	2	Decal-Lock, Neutral
3	106-2736	1	Decal-Warning
4	106-2734	1	Decal-Throttle
5	106-2735	1	Decal-Proline
6	95-5537	1	Decal-Engage, Deck

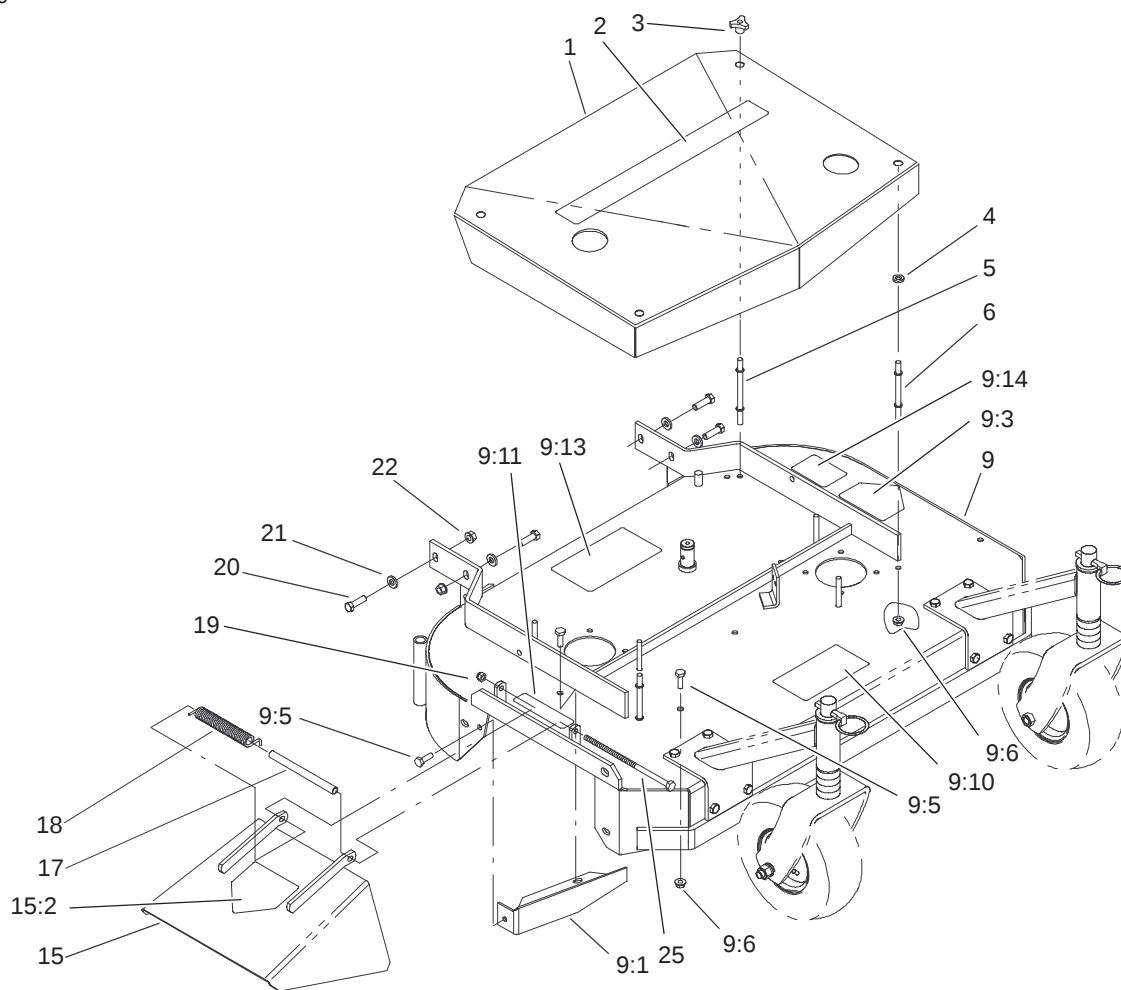


Sheet No.: 6

Deck Assembly

Ref. No.	Part No.	Qty.	Description
1	1-304258	1	Shield-Belt
2	95-5436	1	Decal-Proline
3	1-323385	4	Knob-3 Prong
4	1-323417	4	Washer
5	1-303536	2	Stud-Shield, Belt (Long)
6	1-303537	2	Stud-Shield, Belt (Short)
9	105-4680	1	Deck ASM
9:1	1-302189-01	1	Baffle
9:3	1-403005	1	Decal-Danger
9:5	322-2	8	Screw-HH
9:6	32128-20	8	Nut-HF
9:10	66-1340	1	Decal-Danger
9:11	67-5360	1	Decal-Danger
9:13	98-3296	1	Decal-Routing, Belt
9:14	98-5130	1	Decal-Torque
15	1-304256	1	Chute-Discharge
15:2	54-9220	1	Decal-Danger
17	98-3281	1	Spacer-Spring
18	98-3280	1	Spring-Deflector
19	3296-29	1	Nut-Lock, NI
20	323-8	6	Screw-HH
21	98-5975	6	Washer-Belleville
22	3290-357	6	Nut-HHF
25	322-50	1	Screw-Cap

Ref. No.	Part No.	Qty.	Description

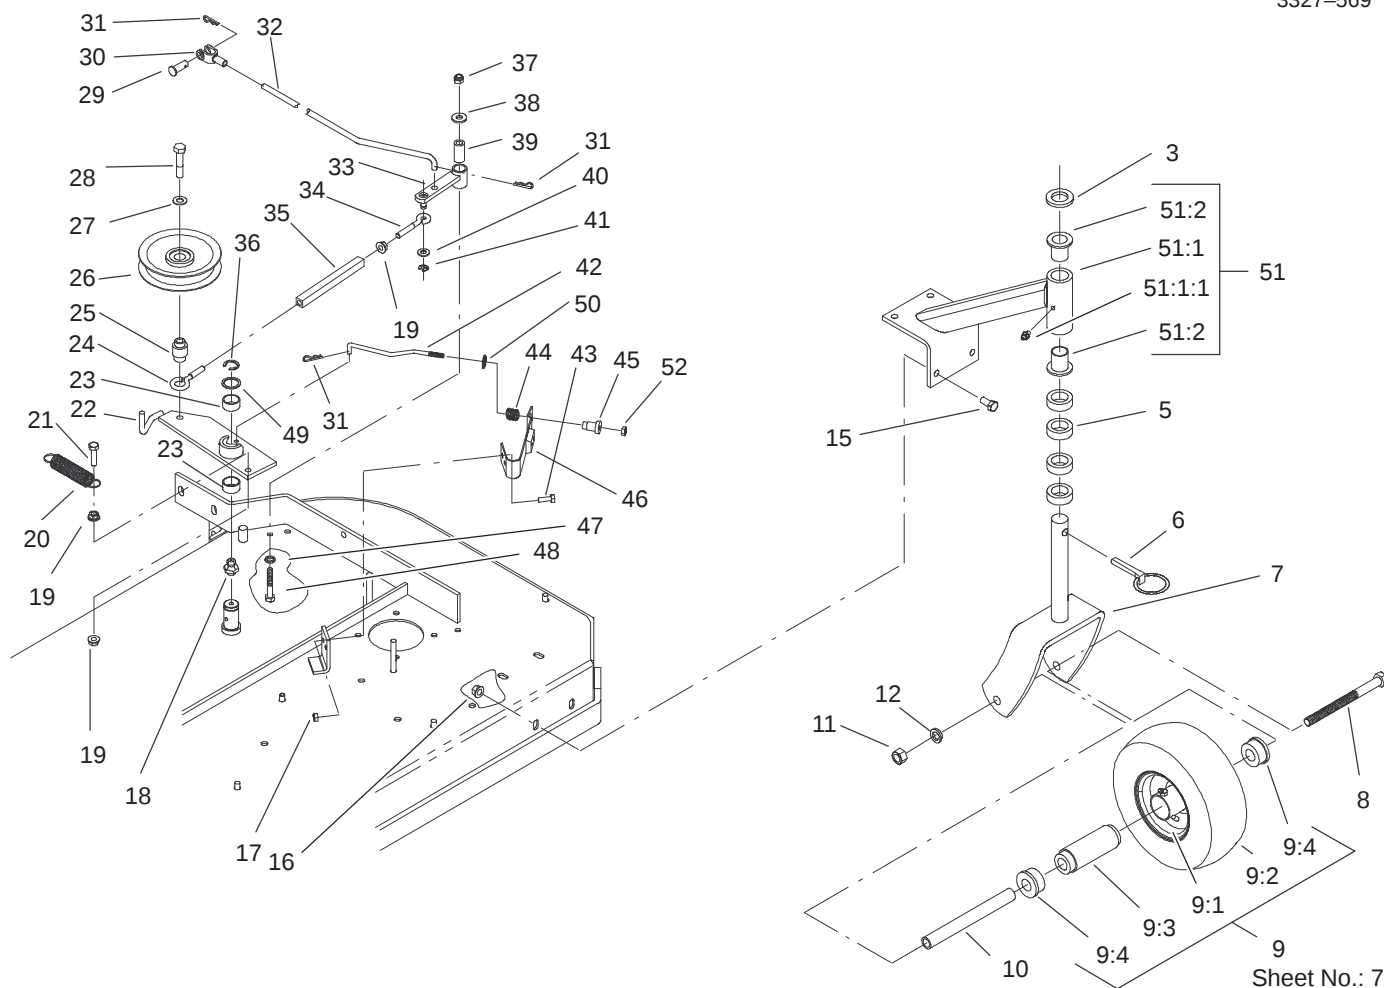


Front Caster and Blade Brake Assembly

Ref. No.	Part No.	Qty.	Description
3	1-513338	2	Washer-Flat
5	1-303314	8	Spacer-Caster
6	1-809020	2	Pin
7	1-322145-01	2	Fork
8	325-20	2	Screw-HH
9	1-513648	2	Wheel & Tire ASM
★9:1		1	Rim
9:2	1-513808	1	Tire
9:3	1-513809	1	Bearing
9:4	1-513810	2	Bushing
10	1-513547	2	Spacer
11	3217-9	2	Nut-HH
12	3253-7	2	Washer-Lock
15	323-4	8	Screw-HH
16	3290-357	8	Nut-HHF
17	3296-42	2	Nut-Lock, NI
18	302-19	1	Fitting-Grease
19	32128-20	3	Nut-HF
20	1-323071	1	Spring-Extension
21	322-6	2	Screw-HH
22	1-324408	1	Idler Arm/Bushings ASM
23	1-323729	2	Sleeve-Bearing
24	1-303348	1	Eyebolt-LH Thread
25	1-303434	1	Bushing-Engagement
26	1-603843	1	Pulley-Idler

Ref. No.	Part No.	Qty.	Description
27	98-5975	1	Washer-Belleville
28	323-10	1	Screw-HH
29	1-808280	1	Pin-Clevis
30	1-303105	1	Yoke-Adjustable
31	1-806003	3	Pin-Hair
32	1-323303	1	Linkage-Arm
33	1-322235	1	Arm
34	1-303238	1	Eyebolt-RH Thread
35	1-303236	1	Body-Turnbuckle
36	32151-103	1	Ring-Snap
37	3296-29	1	Nut-Lock, NI
38	3256-3	1	Washer-Flat
39	1-403179	1	Tube-Pivot
40	3256-23	1	Washer-Flat
41	32120-35	1	E-Ring
42	1-323715	1	Rod-Brake
43	321-4	2	Screw-HH
44	1-323747	1	Spring-Compression
45	1-323746	1	Spacer-Flanged
46	1-324372	1	Pad/Spring ASM
47	1-303334	1	Washer-Spring
48	322-10	1	Screw-HH
49	1-303352	1	Washer-Spindle
50	1-323748	1	Ring-Push On
51	1-302203	2	Support ASM
51:1	1-302194-01	1	Support-Caster

★ Not serviced separately

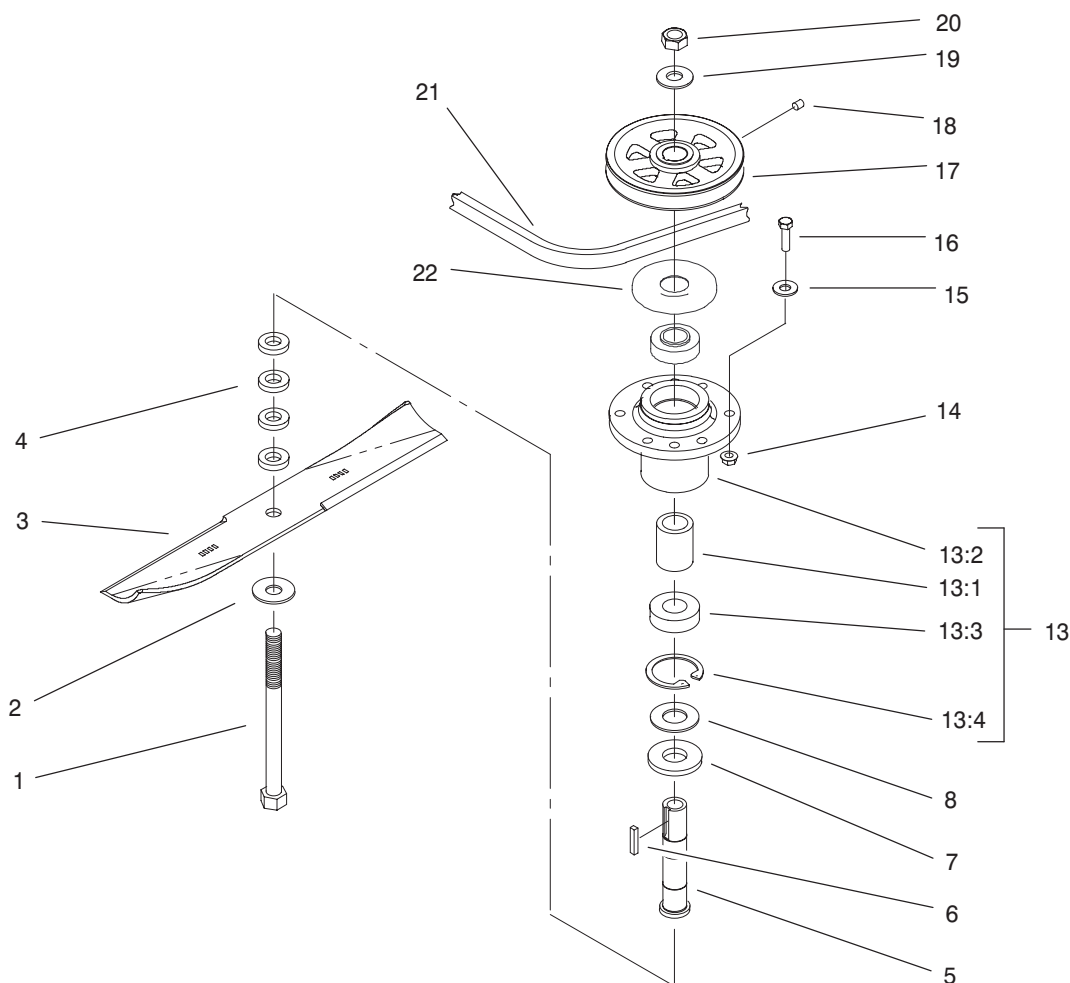


Sheet No.: 8

Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	1-800861	2	Screw-Cap, HH
2	1-513208	2	Washer-Spring
3	103-2508	2	Blade-Low Lift
3	103-2528	2	Blade-Notched
4	1-323539	8	Spacer-Drive, Blade
5	1-323529	2	Tube-Spindle, Short
6	1-807267	2	Key
7	1-633573	2	Guard-Bearing, Bottom
8	1-323533	2	Spacer-Pulley/Bearing
13	1-634619	2	Cutter Housing ASM
13:1	1-323528	1	Spacer-Bearing
13:2	1-323532	1	Housing-Spindle
13:3	1-513016	2	Bearing
13:4	32120-8	1	Ring-Snap
14	32128-20	8	Nut-HF
15	1-303334	8	Washer-Spring
16	322-6	8	Screw-HH
17	1-403183	2	Sheave
18	1-803310	2	Screw-Set
19	1-323339	2	Washer-Retainer, Sheave
20	3219-6	2	Nut-Hex
21	1-323737	1	Belt-Blade, Drive
22	103-1330	2	Guard-Bearing, Top

Ref. No.	Part No.	Qty.	Description

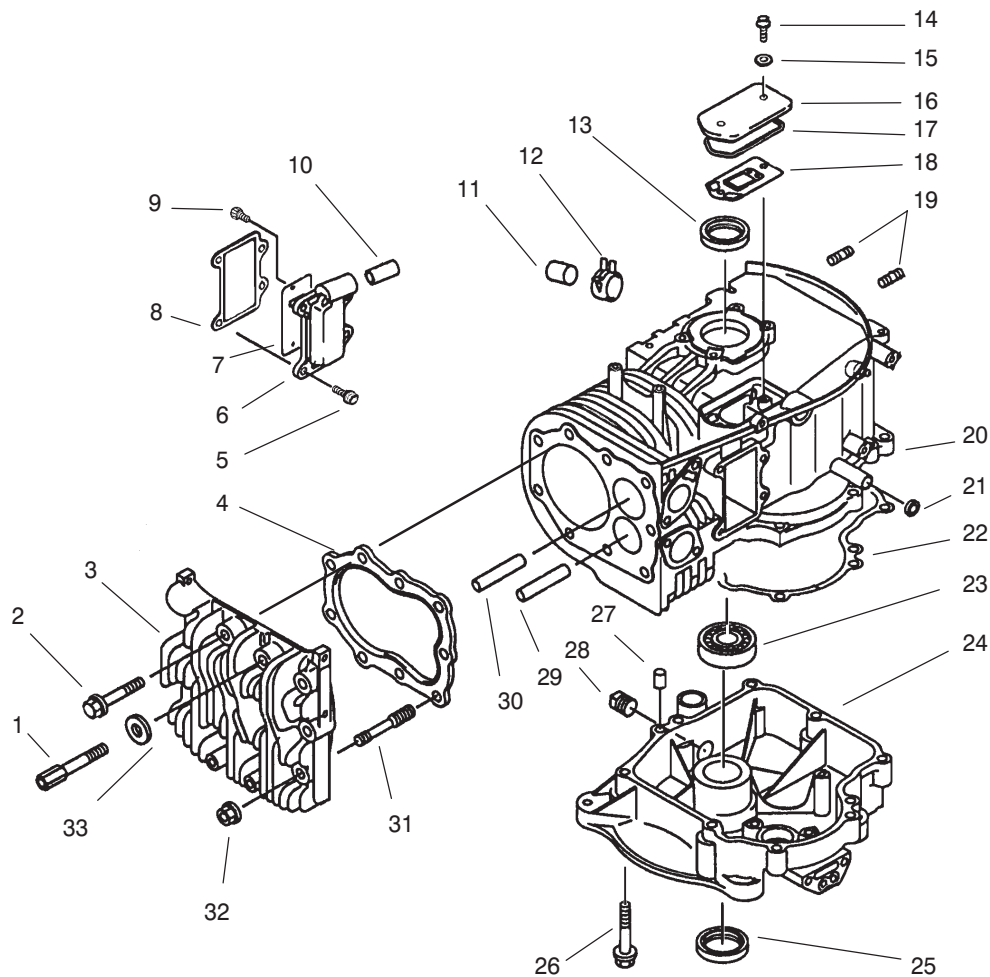


Sheet No.: 201

Crankcase (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	92002-2258	2	Bolt
2	130g1055	4	Bolt-Flange
3	11001-2151	1	Head-Cylinder
4	11004-2091	1	Gasket-Head
5	130g0616	4	Bolt-Flange
6	49108-2011	1	Cover-Valve Chamber
7	14025-2143	1	Cover
8	11060-2375	1	Gasket
9	92009-2307	2	Screw
10	92059-2142	1	Tube
11	92066-2096	1	Plug
12	92170-2088	1	Clamp
13	92049-2096	1	Seal-Oil
14	92002-2087	2	Bolt
15	11060-2323	2	Gasket
16	14025-2040	1	Cover-Breather
17	11009-2339	1	Gasket-Cover
18	14069-2062	1	Breather
19	92004-2083	4	Stud-6 X 14
20	49120-6108	1	Crankcase-Complete
21	92049-2097	1	Seal-Oil
22	11060-2015	1	Gasket-Crankcase
23	601a6207	1	Bearing-Ball
24	49015-6176	1	Cover-Crankcase
25	92049-2227	1	Seal-Oil
26	130g0845	8	Bolt-Flange

Ref. No.	Part No.	Qty.	Description
27	92043-1263	2	Pin
28	92066-2097	1	Plug
29	49002-2071	1	Guide-Valve Exhaust
30	49002-2070	1	Guide-Valve Intake
31	92004-2082	3	Stud
32	92015-2115	3	Nut
33	410b1000	2	Washer-Plain

Obtain Parts from Kawasaki

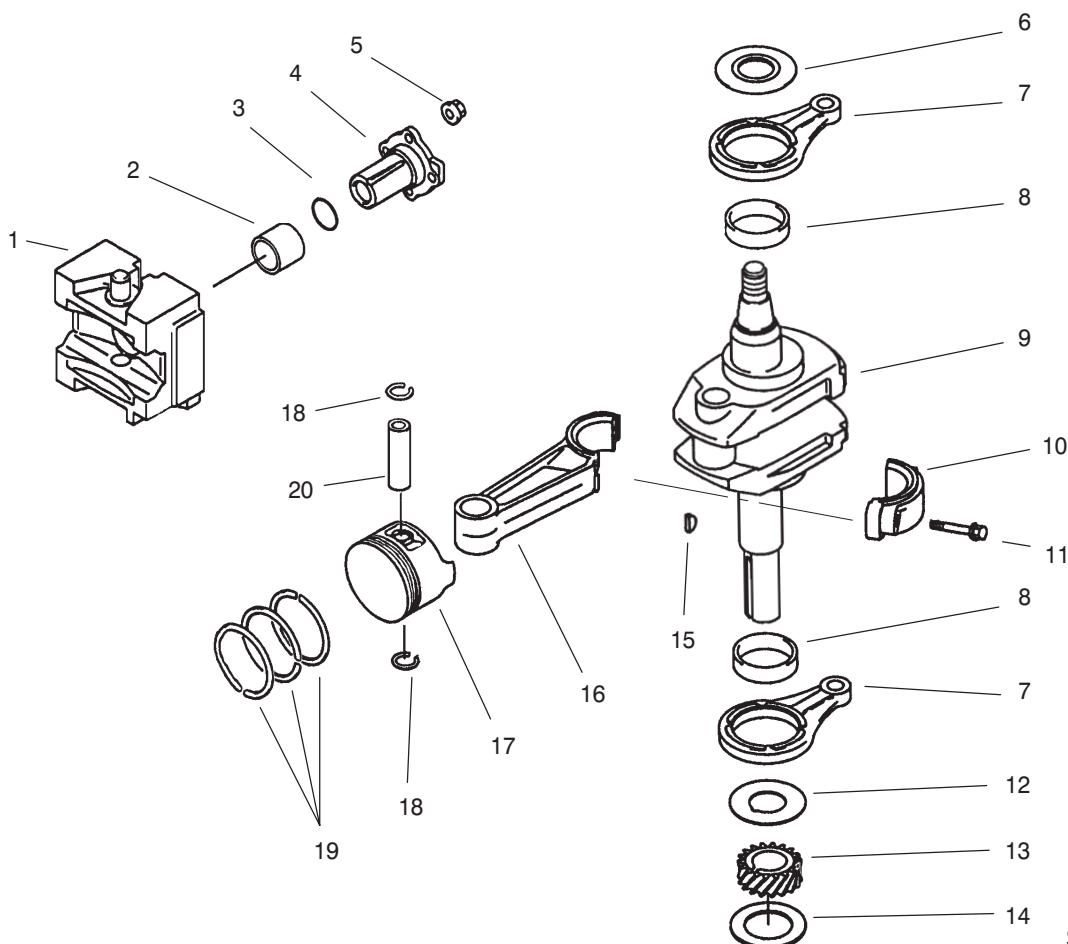


Sheet No.: 202

Piston/Crankshaft Crankcase (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	13042-6006	1	Weight Incl #2
2	92141-2097	1	Bearing-Plane
3	92055-2072	1	O-Ring
4	13107-2253	1	Shaft
5	92015-1193	4	Nut
6	92026-2164	1	Spacer
7	46102-6007	2	Rod Incl #8
8	92141-2108	2	Bearing-Plane
9	49119-2177	1	Crankshaft ASM
11	92150-2193	2	Bolt
12	92026-2156	1	Spacer
13	59056-2105	1	Gear-Helical
14	92025-2145	A/R	Shim T=1.18
14	92025-2146	A/R	Shim T=1.25
14	92025-2147	A/R	Shim T=1.32
14	92025-2148	A/R	Shim T=1.39
14	92025-2149	A/R	Shim T=1.46
14	92025-2150	A/R	Shim T=1.53
14	92025-2151	A/R	Shim T=1.60
14	92025-2152	A/R	Shim T=1.67
14	92025-2153	A/R	Shim T=1.74
14	92180-2015	A/R	Shim T=1.11
14	92180-2016	A/R	Shim T=1.81
15	92038-2094	1	Key
16	13251-6005	1	Rod ASM Incl #10 11

Ref. No.	Part No.	Qty.	Description
16	13251-6007	A/R	Rod ASM Incl #10 11 0.50
17	13001-2096	1	Piston
17	13029-2084	A/R	Piston 0.25
17	13029-2085	A/R	Piston 0.50
18	92033-2176	2	Ring-Snap
19	13008-6009	1	Set-Ring Piston
19	13008-6010	A/R	Set-Ring Piston 0.25
19	13008-6011	A/R	Set-Ring Piston 0.50
20	13002-2066	1	Pin-Piston

Obtain Parts from Kawasaki

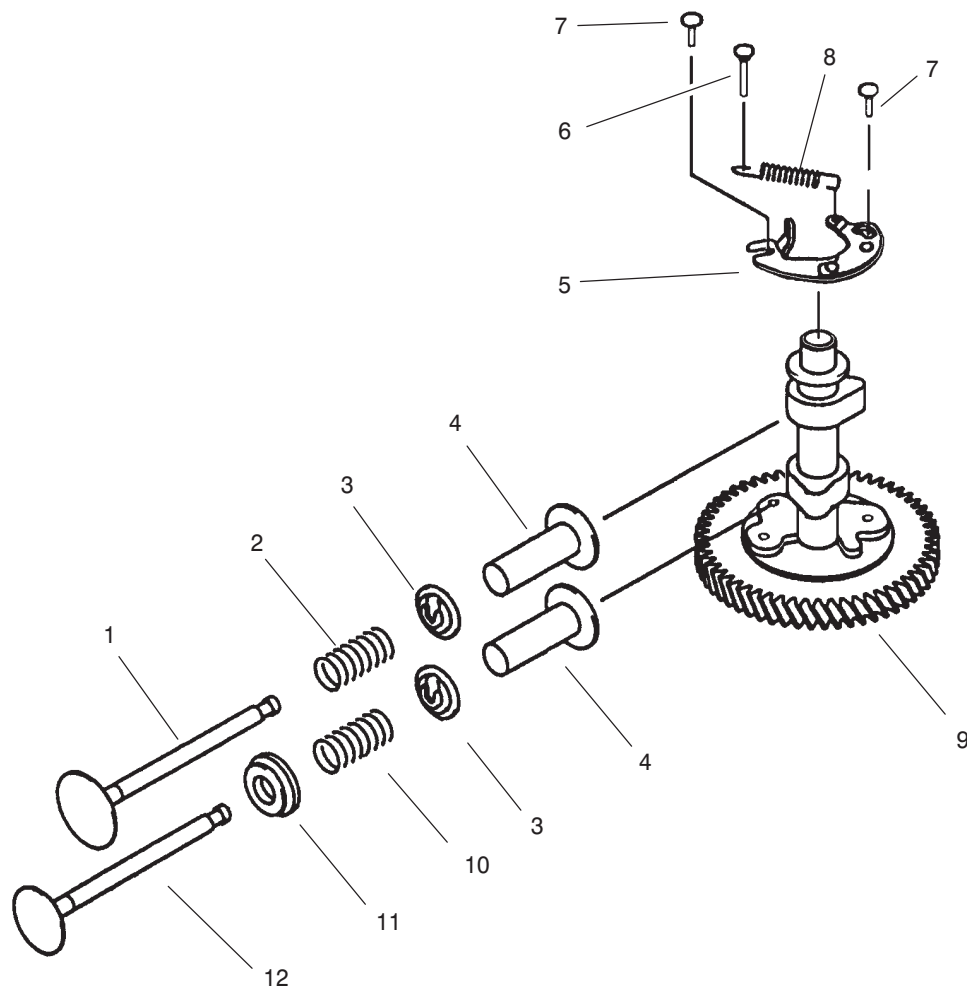


Sheet No.: 203

Valve / Camshaft (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	12004-2076	1	Valve-Intake
2	49078-2075	1	Spring-Valve
3	39108-2054	2	Retainer-Spring
4	12032-2058	2	Tappet
5	21118-2068	1	Decompressor
6	92043-2167	1	Pin
7	92043-2113	2	Pin
8	92144-2171	1	Spring
9	49118-2134	1	Camshaft Incl # 5-8
10	49078-2074	1	Spring-Valve
11	12039-2052	1	Rotator
12	12005-2066	1	Valve-Exhaust

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

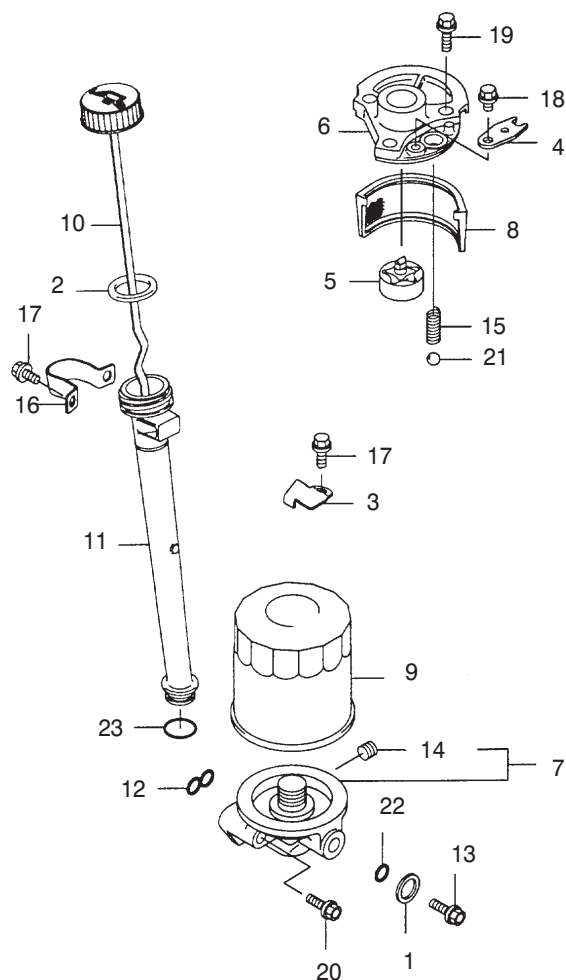

Sheet No.: 204

Lubrication Equipment (Kawasaki FB460V-MS14)


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	11009-2175	1	Gasket				
2	11009-2346	1	Gasket-Oil Gauge				
3	13169-2359	1	Plate				
4	13270-2054	1	Plate				
5	16082-2057	1	Pump Assy-Oil				
6	16142-6001	1	Cover-Pump				
7	23062-6001	1	Bracket-Comp				
8	49065-2056	1	Filter-Oil				
9	49065-2071	1	Filter-Oil				
10	52005-2058	1	Gauge-Oil				
11	59231-2059	1	Filler				
12	92055-2063	1	Ring-O				
13	92066-2093	1	Plug				
14	92066-2211	1	Plug				
15	92081-2216	1	Spring				
16	92170-2014-9H	1	Clamp				
17	130B0508	3	Bolt-Flanged				
18	130B610	1	Bolt-Flanged				
19	130G0825	3	Bolt-Flanged				
20	130G0845	2	Bolt-Flanged				
21	600A1000	1	Ball-Steel				
22	670D1507	1	O Ring				
23	670D2016	1	O Ring				

Obtain Parts from Kawasaki

Cooling Equipment (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description

18

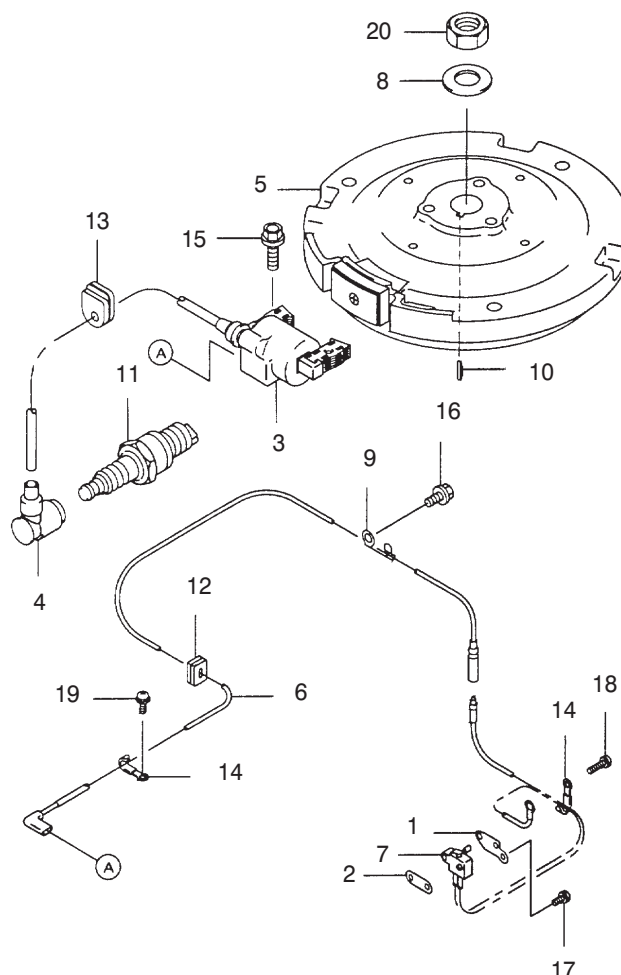


Sheet No.: 206

Electric Equipment (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	13183-2373	1	Plate				
2	13183-2374	1	Plate				
3	21121-2086	1	Coil-Ignition				
4	21130-2060	1	Cap-Spark Plug				
5	21194-2324	1	Flywheel-Comp				
6	26011-2326	1	Wire-Lead L530				
7	27010-2167	1	Switch				
8	92022-2178	1	Washer				
9	92037-2011	1	Clamp				
10	92038-2094	1	Key				
11	92070-2105	1	Plug-Spark BMR4A (NGK)				
12	92071-2099	1	Grommet				
13	92071-2100	1	Grommet				
14	92170-2029	2	Clamp				
15	130B0520	2	Bolt-Flanged				
16	130B0610	1	Bolt-Flanged				
17	223B0410	1	Screw-Pan Ws Cros				
18	233B0416	1	Screw-Pan Ws Cros				
19	234B0408	1	Screw-Pan Wsp				
20	314G1800	1	Nut-Hex Fine				

Obtain Parts from Kawasaki

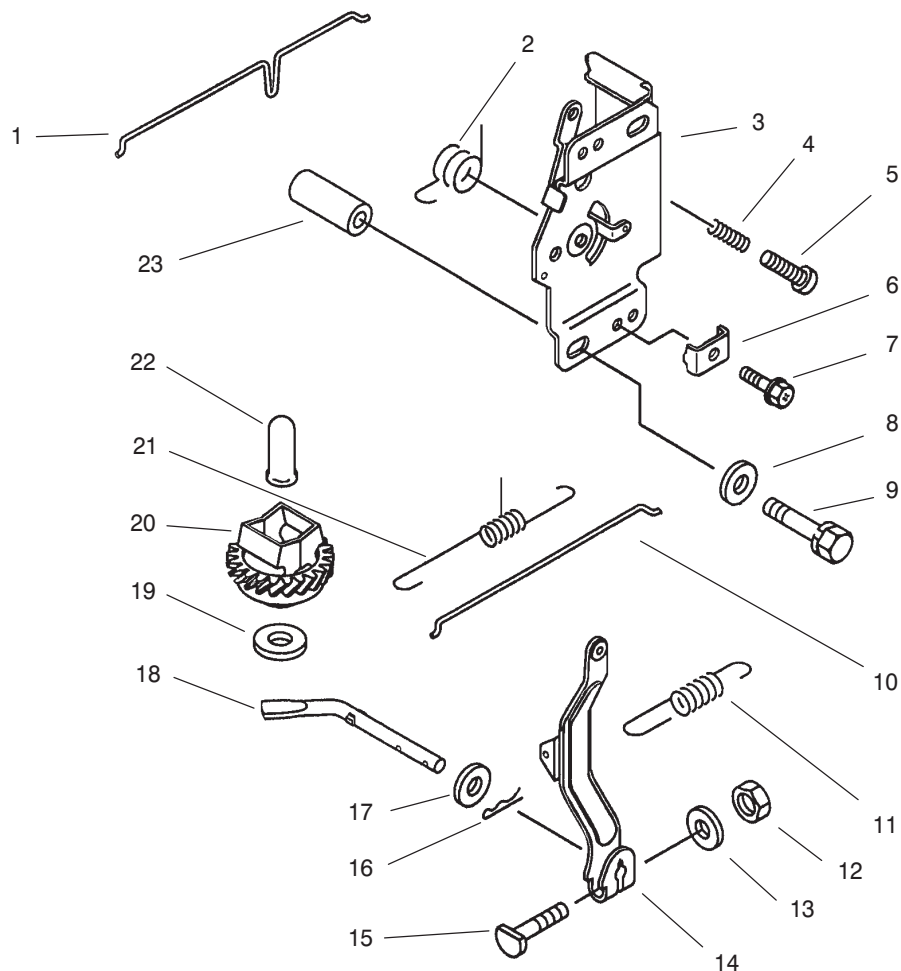


Sheet No.: 207

Control Equipment (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	16169-2126	1	Link-choke
2	92081-2316	1	Spring
3	49113-2090	1	Panel Incl #2 4-7
4	92144-2266	1	Spring
5	214b0416	1	Screw
6	92037-2020	1	Clamp
7	92002-2188	1	Bolt
8	92200-2070	2	Washer
9	180b0650	2	Bolt
10	16171-2083	1	Link
11	92144-2008	1	Spring-Governor
12	311b0600	1	Nut-HH
13	411b0600	1	Washer
14	21187-2052	1	Arm ASM
15	92002-2269	1	Bolt
16	554a0600	1	Pin-Snap
17	92200-2029	1	Washer
18	39003-2072	1	Arm-Pivot
19	92200-2036	1	Washer
20	49110-2084	1	Governor ASM
21	92081-2213	1	Spring
22	42036-2060	1	Sleeve
23	92027-2071	2	Collar

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

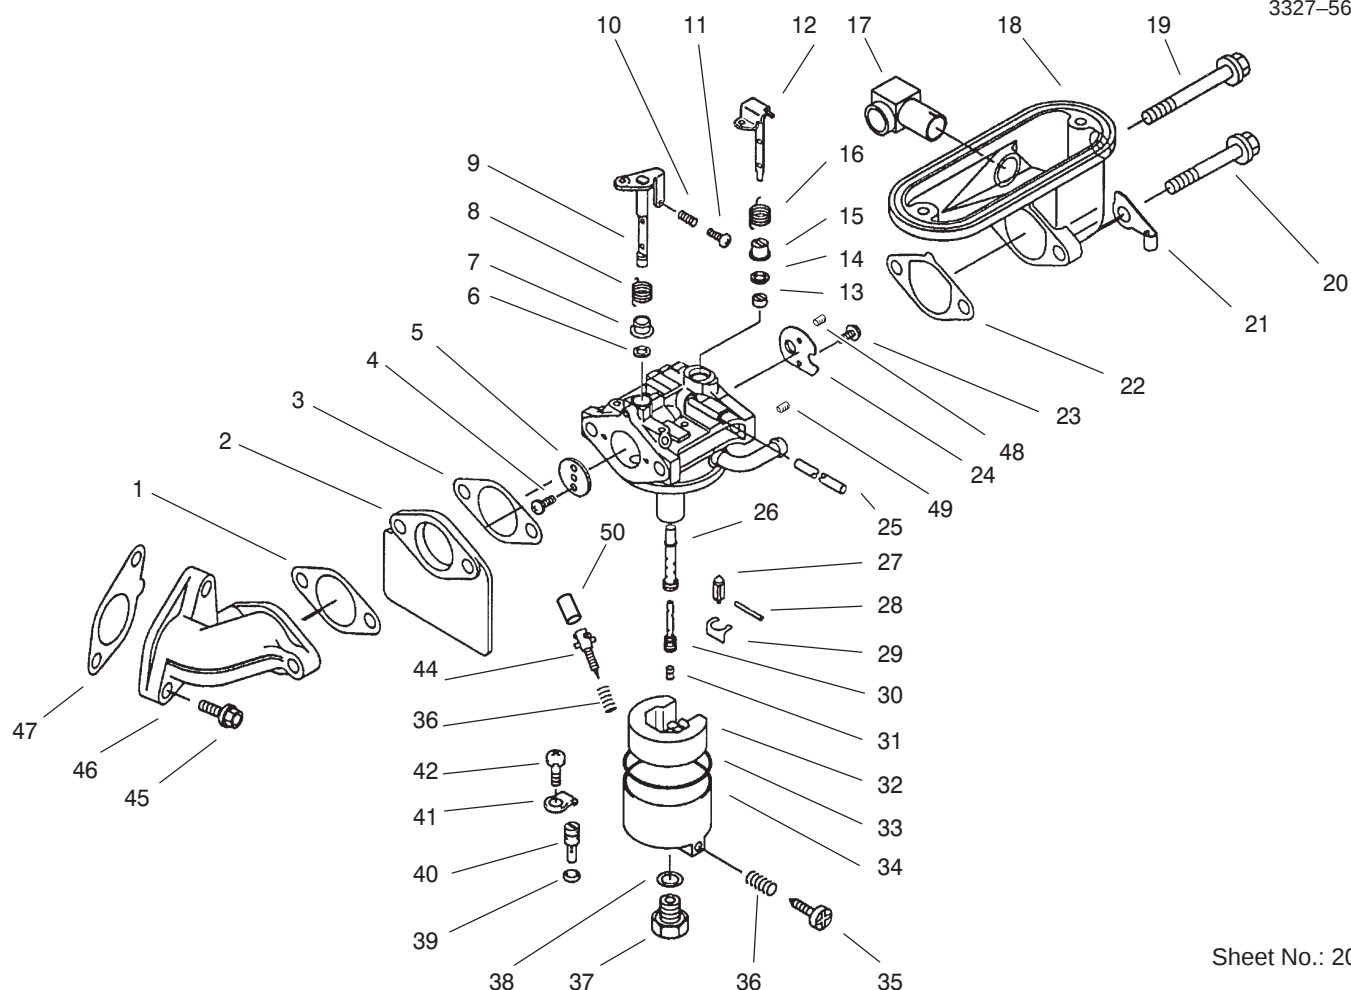


Sheet No.: 208

Carburetor (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
0	15003-2467	1	Carburetor ASM	26	49121-2207	1	Nozzle-Main #98A
1	11060-2338	1	Gasket-Intake Pipe	27	16030-2073	1	Valve-Float
2	16073-2091	1	Insulator	28	92043-2006	1	Pin
3	11060-2339	2	Gasket-Carburetor	29	92033-2067	1	Ring-Snap
4	92009-2080	2	Screw	30	49123-2078	1	Holder-Main Jet
5	16025-2141	1	Valve-Throttle #110	31	92063-2294	1	Jet-Main
6	92093-2082	1	Seal	32	16031-2066	1	Float
7	92027-2025	1	Collar	33	11009-2024	1	Gasket
8	92081-2077	1	Spring	34	16020-2109	1	Chamber-Float Incl 35
9	16041-2009	1	Shaft-Throttle	35	92009-2015	1	Screw
10	92081-2046	1	Spring	36	92081-2009	2	Spring
11	92009-2079	1	Screw	37	92150-2146	1	Bolt
12	16041-2010	1	Shaft-Choke	38	11009-2025	1	Gasket
13	92027-2003	1	Collar	39	16038-024	1	Gasket
14	92093-2069	1	Seal	40	92064-2108	1	Jet-Pilot
15	92143-2142	1	Collar	41	13183-2252	1	Plate
16	92144-2160	1	Spring	42	92009-2244	1	Screw
17	59071-2062	1	Joint	44	16014-2076	1	Screw-Pilot Air
18	16060-2108	1	Pipe-Intake	45	130g0825	2	Bolt-Flange
19	92002-2254	1	Bolt	46	16060-2109	1	Pipe-Intake
20	92002-2253	1	Bolt	47	11060-2337	1	Gasket-Intake Pipe
21	92170-2019	1	Clamp	48	16035-2063	1	Jet-Air #0.9
22	11060-2338	1	Gasket	49	16035-2051	1	Jet-Air #1.4
23	92009-2081	2	Screw	50	39076-2053	1	Limiter
24	16126-2206	1	Valve-Choke				
25	92059-2266	1	Tube				

Obtain Parts from Kawasaki

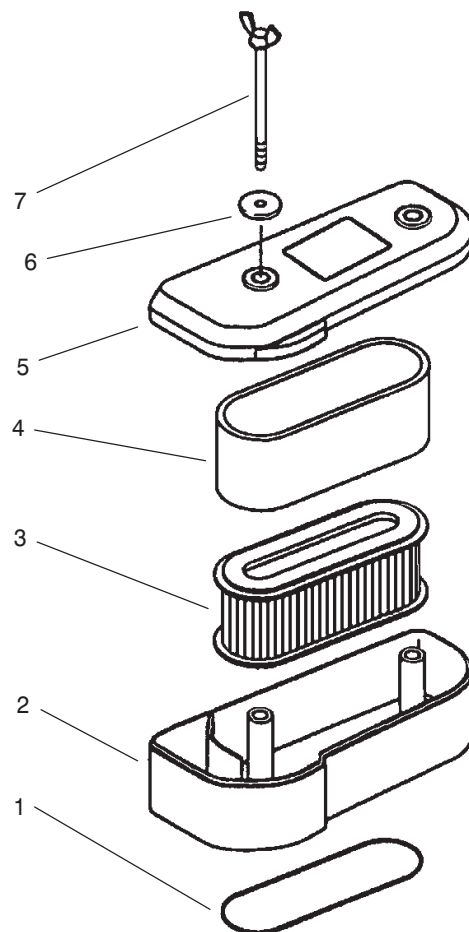


Sheet No.: 210

Air Filter (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	11009-2443	1	Gasket-Air Filter
2	11011-2174	1	Case-Air Filter
3	11013-2021	1	Element-Air Filter
4	11013-2020	1	Element-Air Filter
5	11012-2192	1	Cap-Air Filter
6	92022-2220	2	Washer
7	92002-2230	2	Bolt
	11010-2291	1	Filter ASM

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

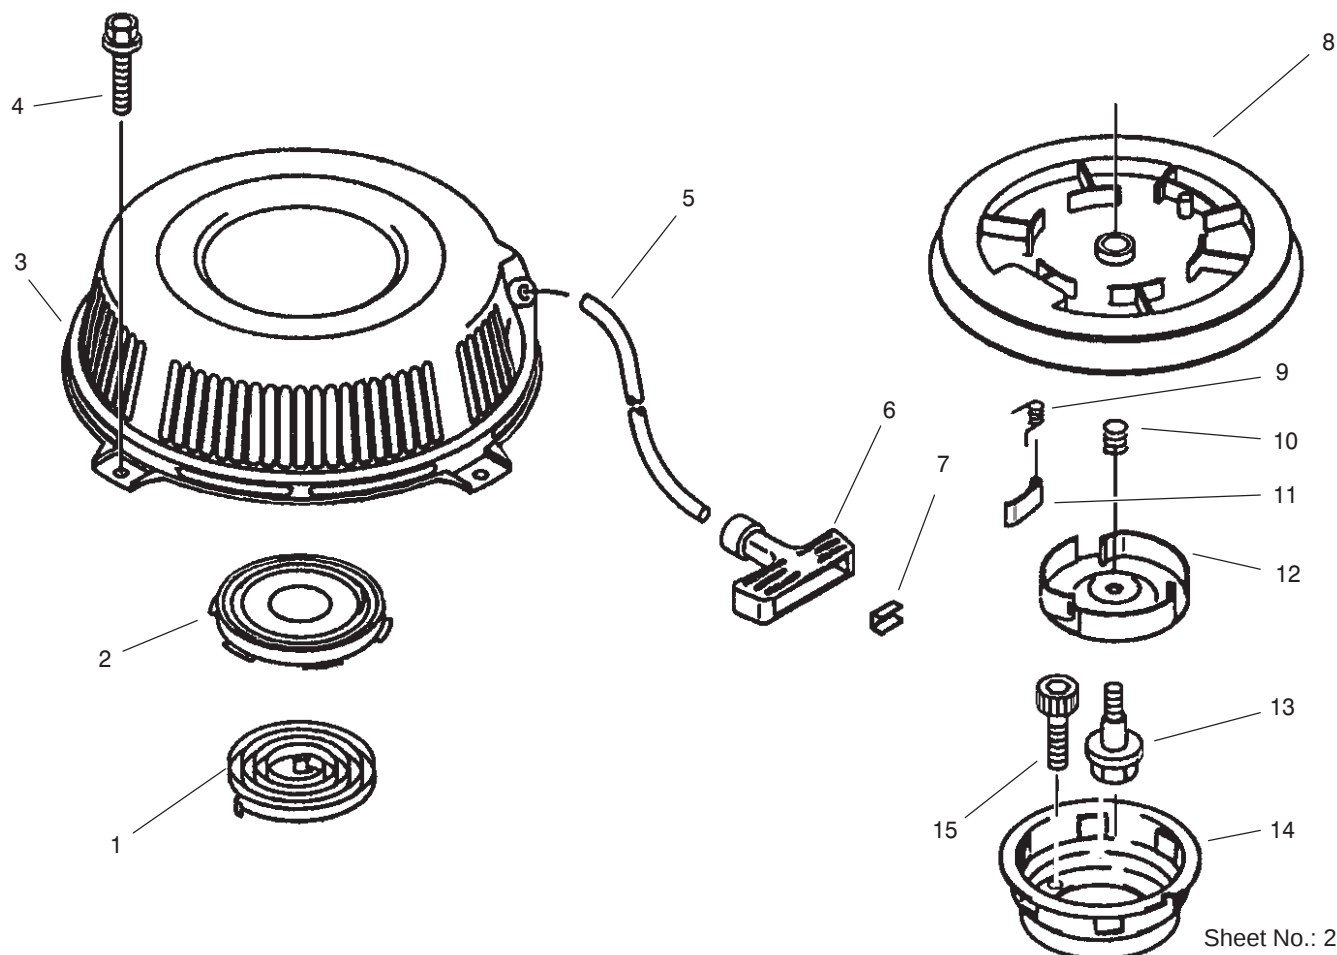

Sheet No.: 209

Starter (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	90281-2267	1	Spring-Recoil
2	32099-2060	1	Case-Spring
3	32099-2239-yk	1	Case-Recoil Starter
4	130b0610	4	Bolt-Flange
5	59106-2060	1	Rope-Starter
6	46075-2059	1	Grip-Starter Rope
7	92022-2248	1	Washer
8	59101-2054	1	Reel-Recoil Starter
9	92081-2021	3	Spring
10	92081-2268	1	Spring-Return
11	13165-2073	3	Pawl-Recoil Starter
12	14020-2054	1	Retainer-Recoil
13	92001-2027	1	Bolt
14	49080-2144	1	Pulley-Starting
15	120p0620	3	Bolt-Socket
16	49088-2412-yk	1	Starter Incl #1-5 8-14


Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

Starter (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description

24

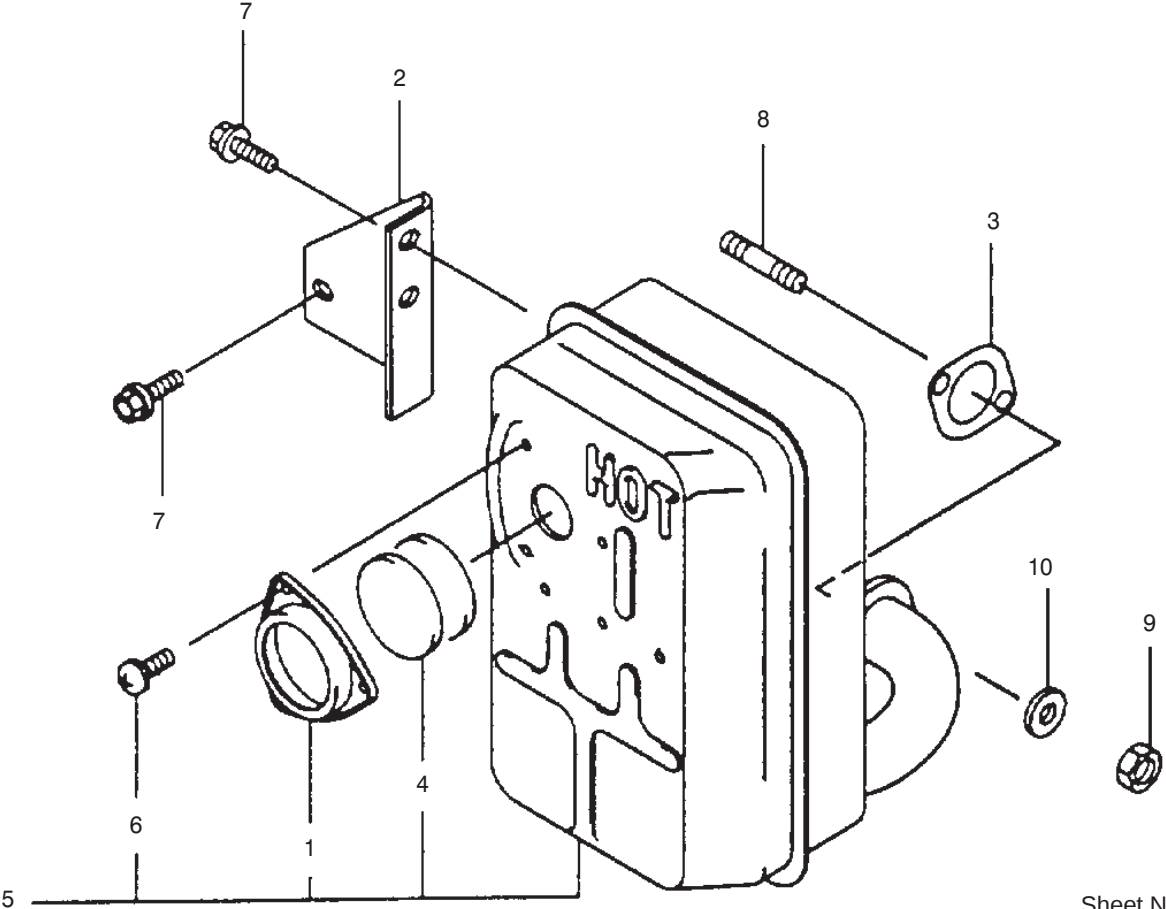

Sheet No.: 211

Muffler (Kawasaki FB460V-MS14)

Ref. No.	Part No.	Qty.	Description
1	11012-2251-9Y	1	Cap-Spark Arrester
2	11046-2163-9Y	1	Bracket
3	11060-2379	1	Gasket
4	18077-2052	2	Arrester-Spark
5	49069-2210-9Y	1	Muffler Assembly
6	92009-2166	3	Screw
7	130G0812	4	Bolt-Flanged
8	171G0818	2	Bolt-Stud
9	317R0800	2	Nut-Hex Small
10	461F0800	2	Washer-Spring

Ref. No.	Part No.	Qty.	Description

Obtain Parts from Kawasaki

Maintenance Record

[illegible]

Maintenance Record

[illegible]

