

LAWN-BOY®

Silver Series® Lawnmower

Model No. 10360—220000001 and Up

Model No. 10360C—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket and Wheel Assembly	3	Carburetor Assembly No. 640303	9
Gear Case Assembly No. 104-7671	5	Engine Assembly-LEV120-361545B	10
Rear Axle Assembly	6	Engine Assembly-LEV120-361545B	11
Engine and Blade Assembly	7	Recoil Starter Assembly No. 590737	13
Handle and Control Assembly	8	Recoil Starter Assembly No. 590694 (optional)	14


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Shredder Kit	89860
Rear Bagging Kit	89906	Leaf Bag Kit with Chute	89811
Leaf Bag	89804		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

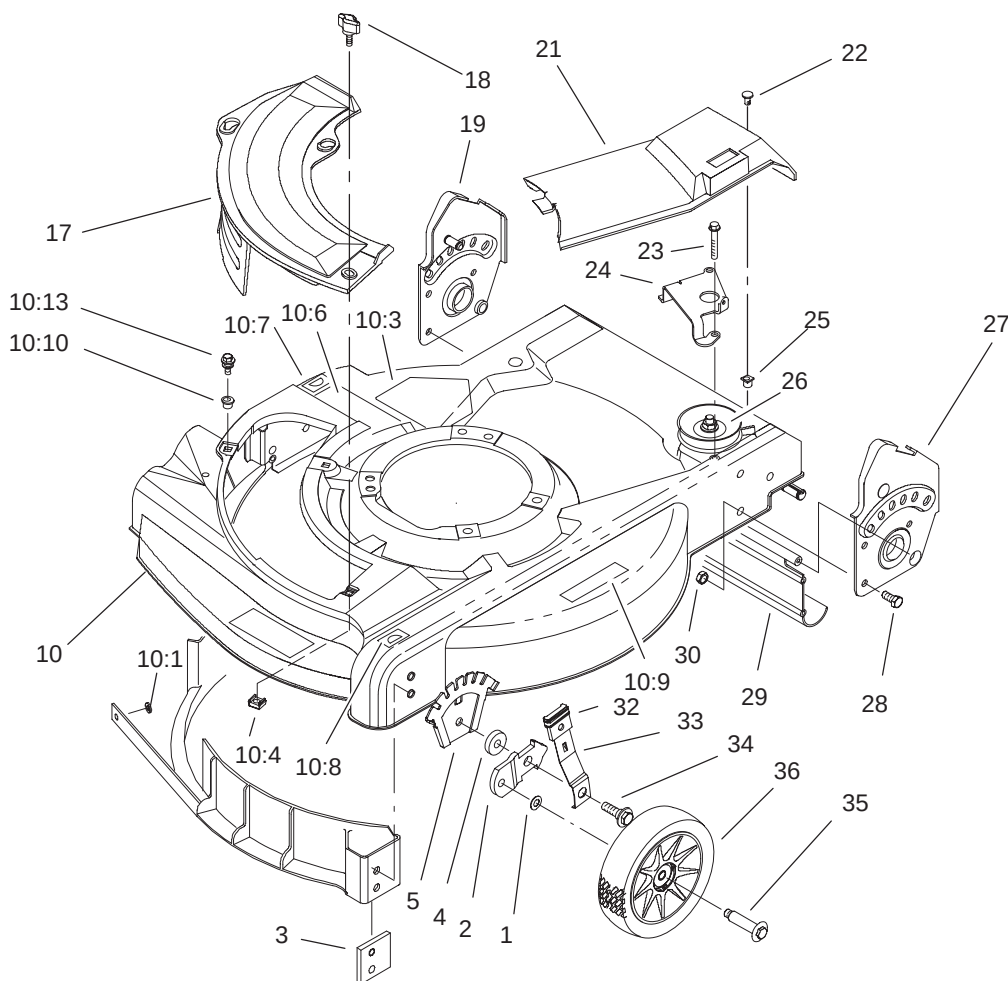

Sheet No.:2

Housing, Handle Bracket and Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	40-1940	2	Washer	10:8	92-2915	1	Decal-HOC, LH (only on: 10360)
2	95-7403-03	2	Bracket-Height Adjustment, Wheel	10:8	104-7617	1	Decal-HOC,LH (only on: 10360c)
3	92-7731	2	Plate-Baffle	10:9	93-7250	1	Decal-Warning (only on: 10360)
4	92-4890	2	Washer-Wheel	10:9	104-7627	1	Decal-Warning (only on: 10360c)
5	92-4881-03	2	Plate-Height, Adjustment	10:10	94-1610	2	Grommet-Plastic
10	105-1258	1	Housing (only on: 10360c)	10:13	614677	2	Screw-Sems
10	98-4477	1	Deck ASM (only on: 10360)	17	92-8630	1	Plate-Mulch
10:1	3269-26	1	Washer-Flat	18	98-8332	1	Knob
10:3	43-8480	1	Decal-Danger (only on: 10360)	19	105-8602	1	RH Bracket ASM
10:3	56-6270	1	Danger Decal (only on: 10360c)	21	95-7068	1	Cover-Drive
10:4	613765	1	Nut-Cage	22	92-9665	1	Screw
10:6	104-7629	1	Decal-Warning (only on: 10360c)	23	65-5221	2	Screw-HWHTF
10:6	99-6018	1	Decal-Warning (only on: 10360)	24	92-7728-03	1	Guide-Transmission
10:7	92-2914	1	Decal-HOC, RH (only on: 10360)	25	605120	1	Grommet
10:7	104-7616	1	Decal-HOC,RH (only on: 10360c)	26	104-7671	1	Gear Case ASM
				27	105-8604	1	LH Bracket ASM
				28	322-3	6	Screw-HH
				29	92-8647	1	Shield-Trailing
				30	3296-29	6	Nut-Lock, NI
				32	92-1008	2	Knob-Lever, Height Adjustment

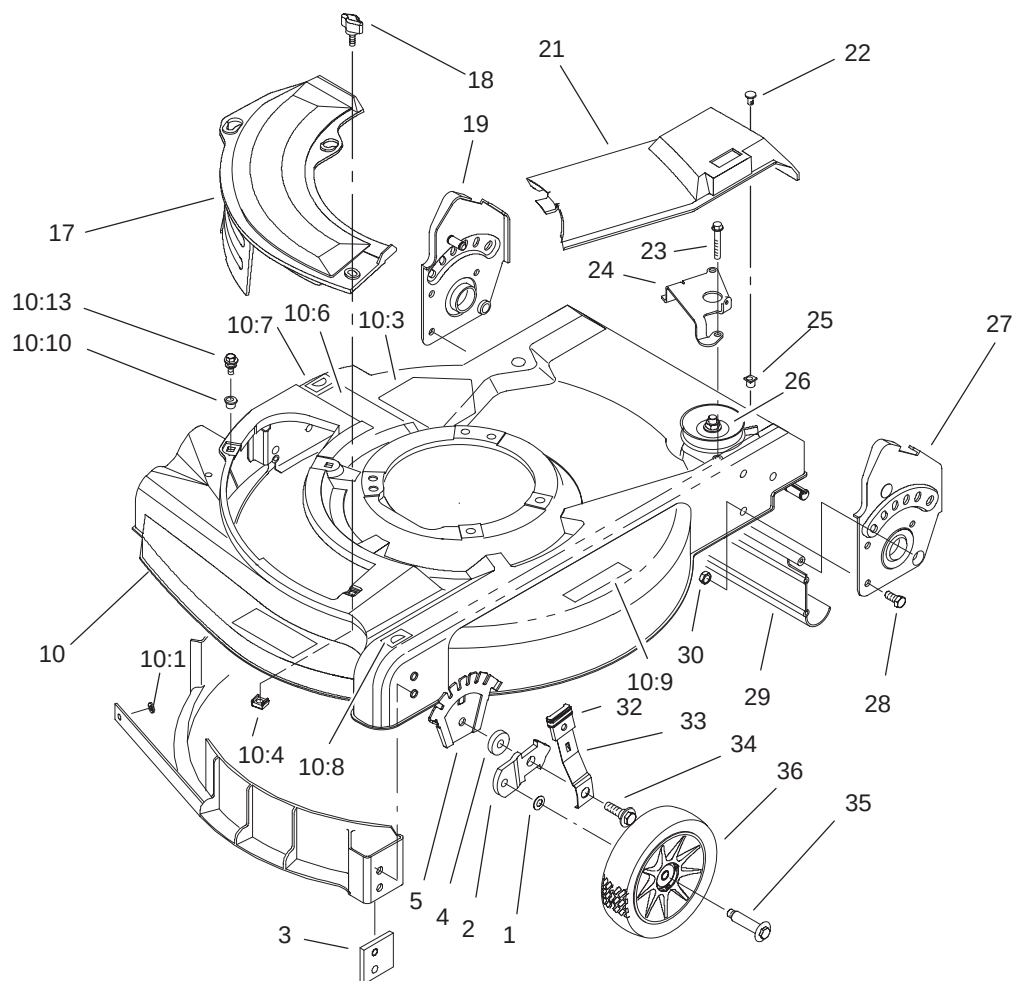


Sheet No.:2

Housing, Handle Bracket and Wheel Assembly (continued)

Ref. No.	Part No.	Qty.	Description
33	614687	2	Arm-Front Spring
34	614672	2	Bolt-Shoulder
35	92-1099	2	Bolt-Shoulder
36	684776	2	Wheel & Tire ASM
*99	95-7052	1	Plate-Opening, Chute

Ref. No.	Part No.	Qty.	Description


* Not illustrated

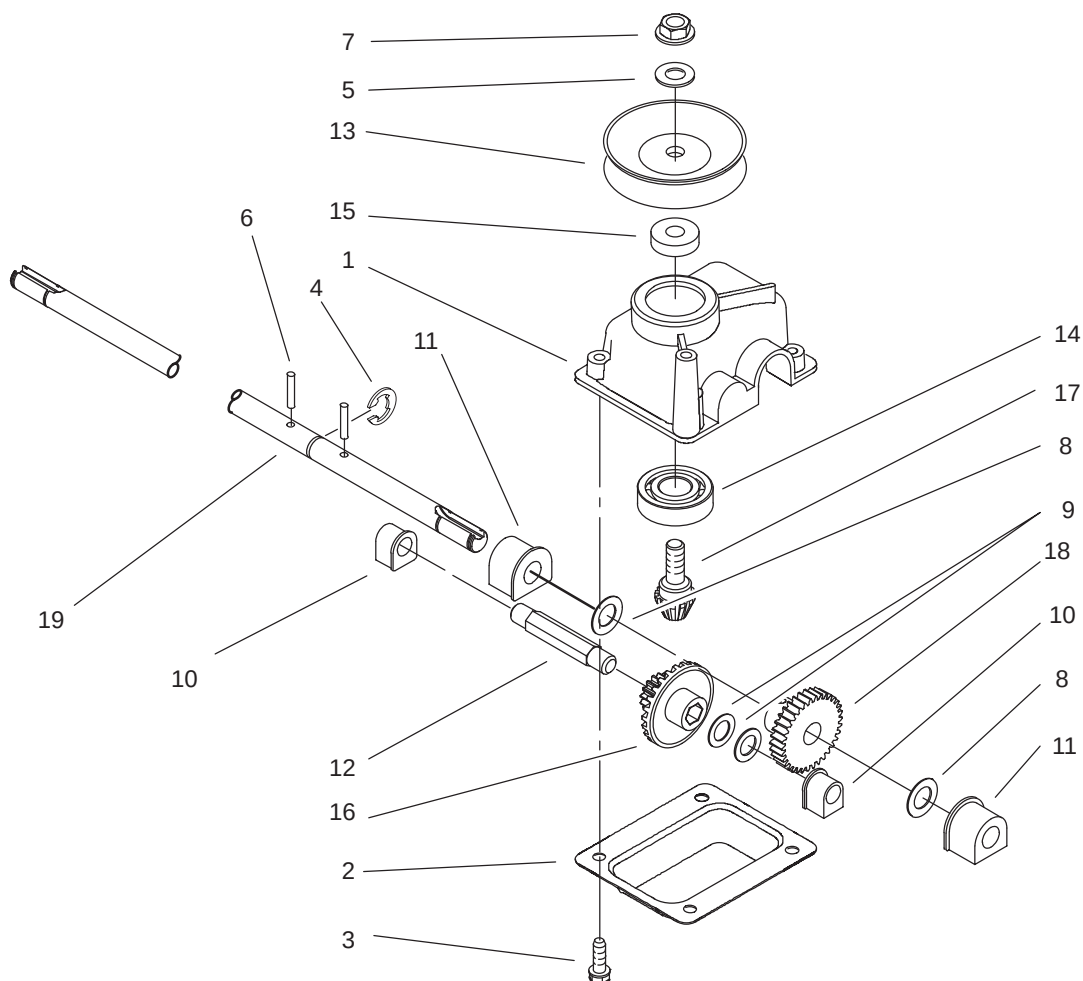

Sheet No.:A1

Gear Case Assembly No. 104-7671

Ref. No.	Part No.	Qty.	Description
1	104-7619	1	Case-Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock, NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	614696	1	Shaft-Intermediate
13	614669	2	Half-Pulley
14	100-1048	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-7668	1	Gear-15t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	614596	1	Gear
19	104-7670	1	Shaft-Output

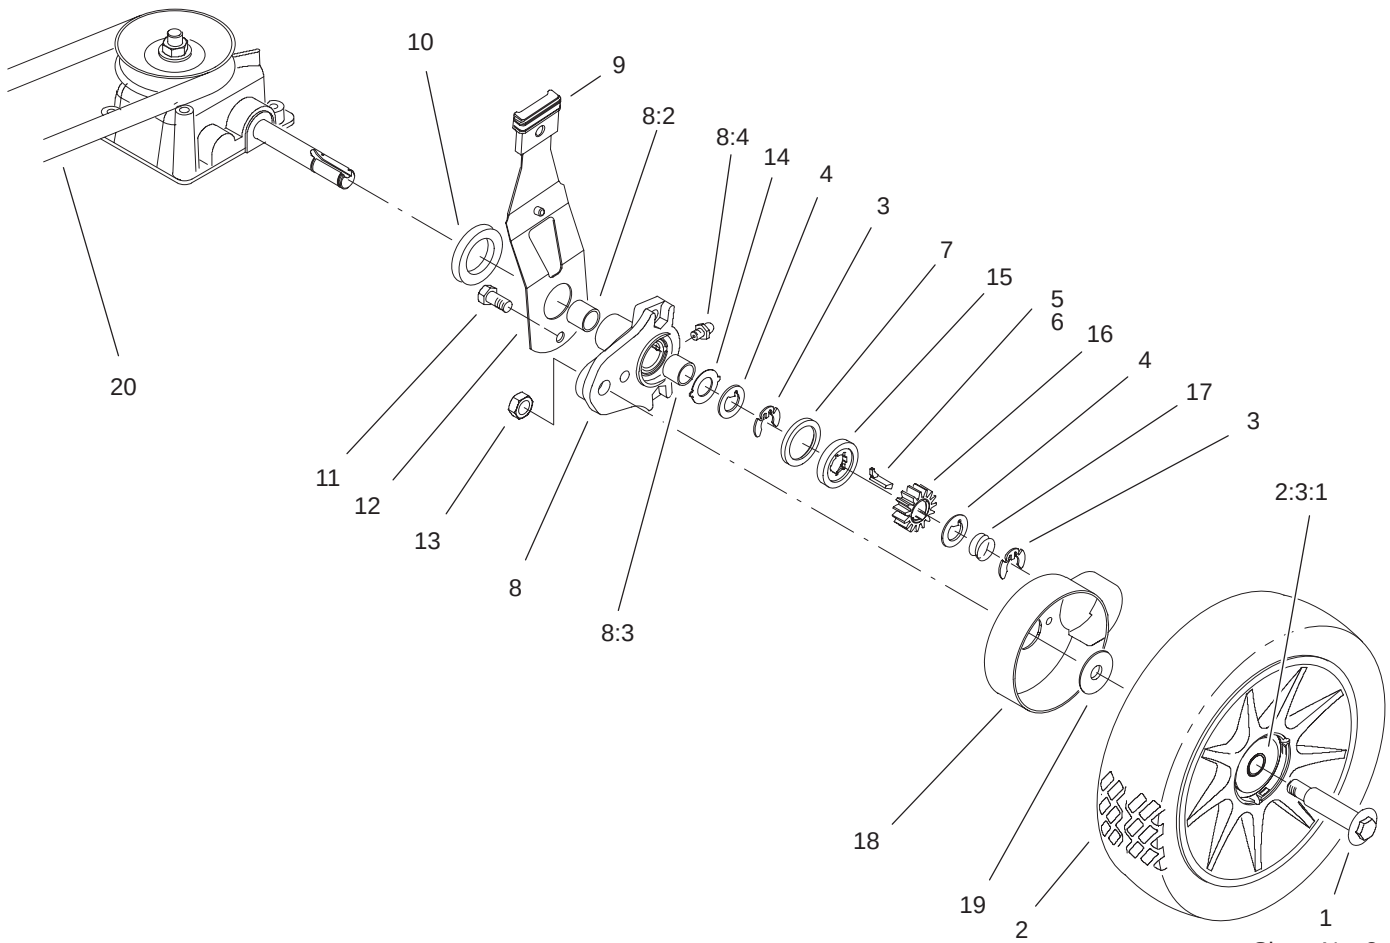

Sheet No.:3


Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
☆2:3		1	Wheel & Tire ASM
2:3:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
*6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Zerk
9	92-1008	2	Knob-Lever, Height Adjustment
10	614447	2	Spacer-Axle Shaft
11	32144-85	2	Screw-HH
12	92-1004	2	Rear Spring Arm ASM
13	603773	2	Nut
14	65-4730	2	Washer-Arm, Pivot
15	65-4760	2	Washer-Clutch
16	65-4750	2	Gear-Pinion
17	65-4720	2	Spring-Compression
18	94-1609	2	Cover-Wheel

Ref. No.	Part No.	Qty.	Description
19	614426	2	Washer-Stepped
20	93-7381	1	V-Belt

☆ Not serviced separately

* Not illustrated

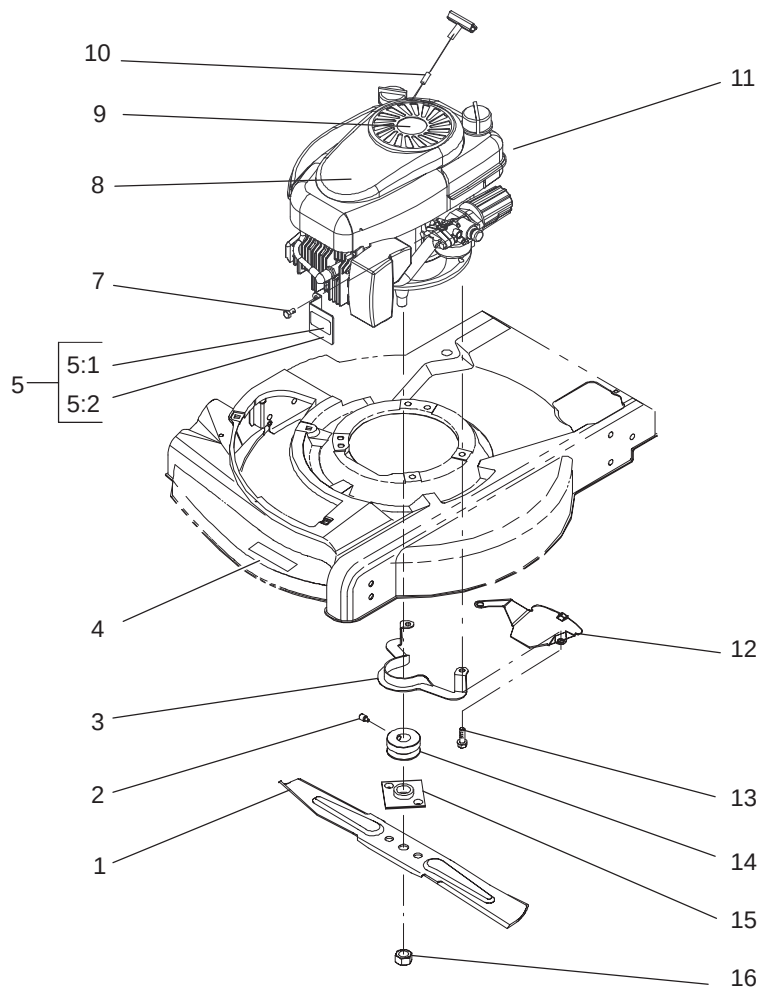


Sheet No.:4

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	612543-03	1	Blade				
2	104-0214	1	Screw-Set				
3	92-1024-03	1	Guide-Belt				
4	104-7955	1	Decal-Deck				
5	95-5569	1	Muffler Guard ASM (only on: 10360)				
5	105-1278	1	Muffler Guard ASM (only on: 10360c)				
5:1	65-2690	1	Decal-Surface, Hot (only on: 10360)				
5:1	104-8065	1	Decal-Surface, Hot (only on: 10360c)				
5:2	94-6066-03	1	Guard-Muffler				
7	32144-85	1	Screw-HH				
8	98-1593	1	Applique				
9	104-7684	1	Decal-Recoil,5hp				
10	92-1701	1	Stop-Rope				
☆11	105-8581	1	Engine LEV120-361545B				
12	93-4196-03	1	Shield-Grass				
13	95-1726	3	Screw-Taptite W/Patch				
14	95-1878	1	Pulley				
15	105-1256	1	Blade Retainer ASM				
16	603164	1	Nut-Blade				

☆ Not serviced separately

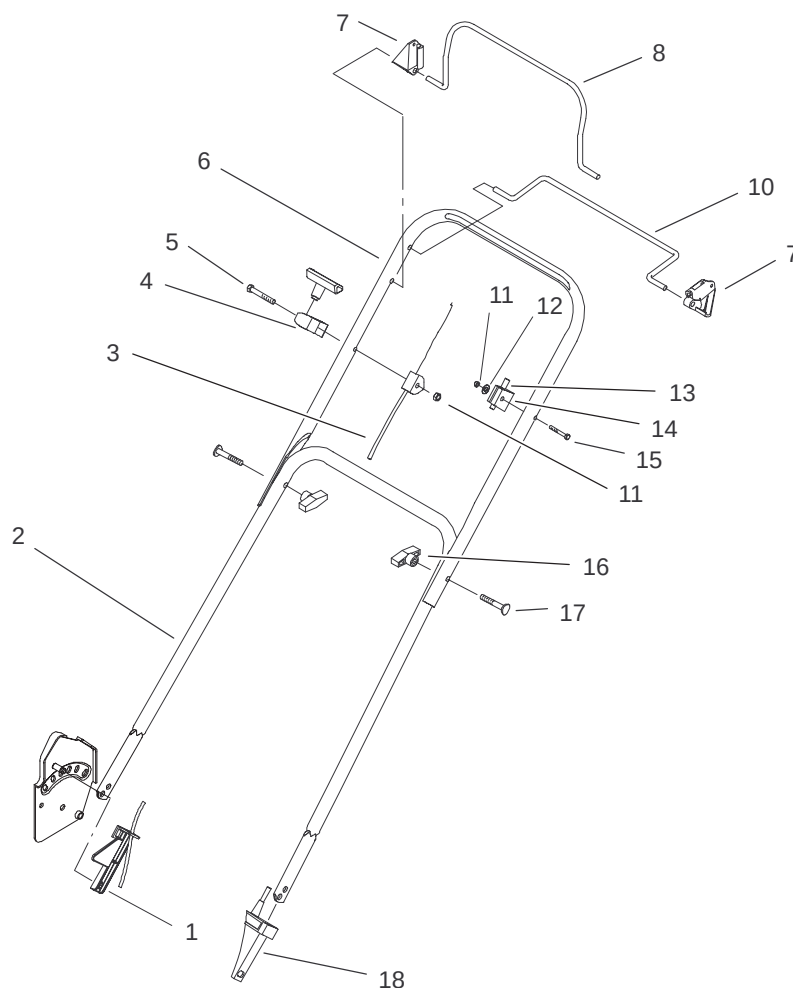


Sheet No.:7

Handle and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable
2	614643-05	1	Handle-Lower
3	100-5989	1	Brake Cable ASM
4	93-7383	1	Guide-Rope
5	321-50	1	Screw-HH
6	100-2888-05	1	Handle-Upper
7	92-5412	2	Stop-Pivot
8	93-4184-03	1	Bail-Brake
10	92-1001-03	1	Bail-Control
11	3296-73	2	Nut-Lock, NI
12	3256-1	1	Washer-Flat
13	100-5982	1	Cable-Ground Speed
14	92-7729	1	Anchor-Upper, Cable
15	92-2266	1	Screw-Handle
16	98-7134	2	Knob-Handle
17	614697	2	Screw
18	93-7380	1	Anchor-Cable

Ref. No.	Part No.	Qty.	Description

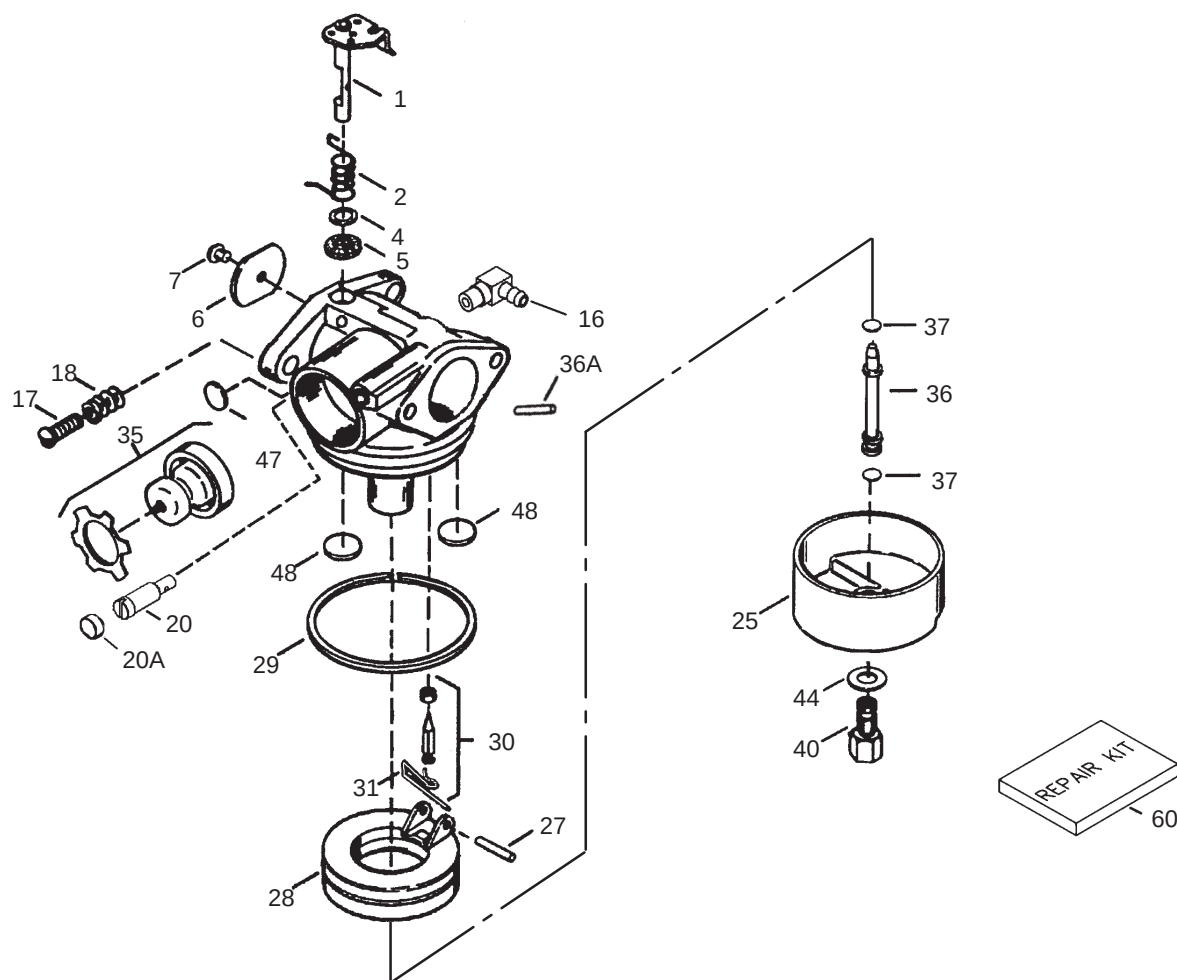


Carburetor Assembly No. 640303

Ref. No.	Part No.	Qty.	Description
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640018	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	632808	1	Float Bowl
27	631024	1	Float Shaft
28	632802	1	Float (Plastic)
29	631028	1	Float Bowl O-Ring
30	632807	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb (Red) /Retainer Ring
36	640019	1	Main Nozzle Tube
36A	632766	1	Bowl Vent Tube

Ref. No.	Part No.	Qty.	Description
37	632547	2	Extension O-Ring, Main Nozzle Tube
40	640087	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	2	Welch Plug, Atmospheric Vent
60	632809	1	Repair kit

Obtain parts from Tecumseh

Engine Assembly- LEV120-361545B

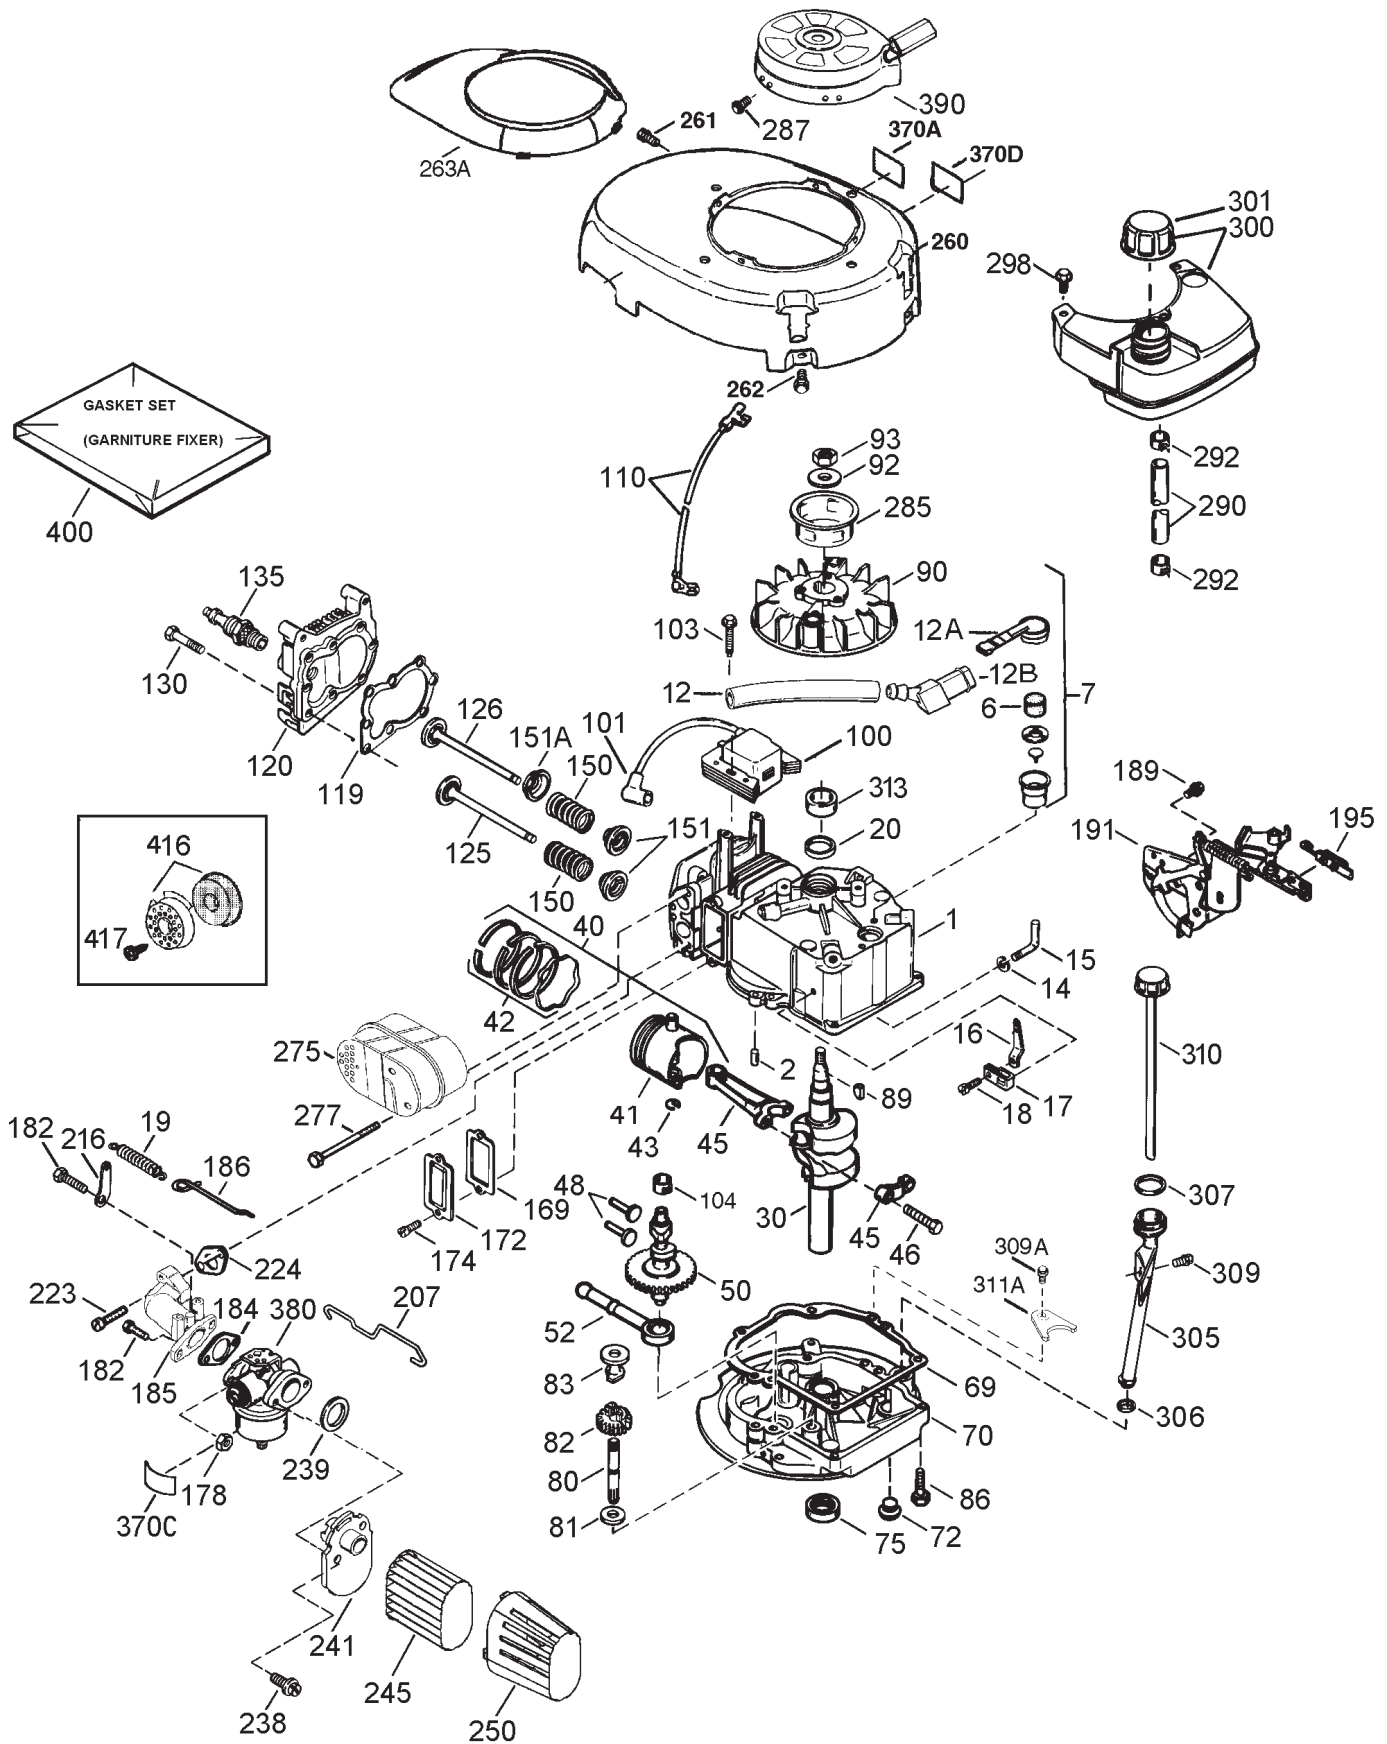

Engine Assembly– LEV120–361545B


Ref. No.	Part No.	Qty.	Description
1	37465	1	Cylinder (Incl. 2, 20 & 150)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Ass'y. (Incl. 6 & 12A)
12	36775	1	Breather Tube
12A	36558	1	Breather Cover & Tube (Incl. 12B)
12B	36694	1	Breather Tube Elbow
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw, T-15, 8-32 x 19/64"
19	36281	1	Extension Spring
20	32600	1	Oil Seal
30	37624	1	Crankshaft
40	40027	1	Piston, Pin & Ring Set (Std.)
41	40042	1	Piston & Pin Ass'y. (Std.) (Incl. 43)
42	40006	1	Ring Set (Std.)
43	20381	2	Piston Pin Retaining Ring
45	36777	1	Connecting Rod Ass'y. (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	37460	1	Camshaft (Exhaust) (MCR)(Incl. 104)
52	29914	1	Oil Pump Ass'y.
69	37609	1	Mounting Flange Gasket
70	37608	1	Mounting Flange (Incl. 72 thru 83)
72	37614	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear Ass'y. (Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw, 1/4-20 x 1-1/4"
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443C	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, T-15, 10-24 x 15/16"
104	37480	1	Cam Bushing
110	37047	1	Ground Wire
119	36787	1	Cylinder Head Gasket
120	36825	1	Cylinder Head
125	36780	1	Exhaust Valve (1/32" OS) (Incl. 151)

Ref. No.	Part No.	Qty.	Description
125	37288	1	Exhaust Valve (Std.) (Incl. 151)
126	37289	1	Intake Valve (Std.) (Incl. 151 & 151A)
130	6021A	8	Screw, 5/16-18x1-7/16"
135	35395	1	Resistor Spark Plug (RJ19LM)
150	31672	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40017	1	Intake Valve Seal
169	36783	1	Valve Cover Gasket
172	36784	1	Valve Cover
174	30200	2	Screw, 10-24 x 9/16"
178	29752	2	Nut & Lock Washer, 1/4-28
182	6201	2	Screw, 1/4-28 x 7/8"
184	26756	1	Carburetor To Intake Pipe Gasket
185	37466	1	Intake Pipe
186	32653	1	Governor Link
189	650839	2	Screw, 1/4-20 x 27/64"
191	36559A	1	S.E. Brake Bracket (Incl. 195)
195	610973	1	Terminal
207	34336	1	Throttle Link
216	33086	1	R.P.M. Adjusting Lever
223	650451	2	Screw, 1/4-20 x 1"
224	36786	1	Intake Pipe Gasket
238	650932	2	Screw, 10-32 x 49/64"
239	34338	1	Air Cleaner Gasket
241	35797	1	Air Cleaner Collar
245	35066	1	Air Cleaner Filter
250	35986	1	Air Cleaner Cover
260	37724	1	Blower Housing
261	30200	2	Screw, 10-24 x 9/16"
262	650831	2	Screw, 1/4-20 x 1/2"
263A	36758	1	Starter Grille
275	37498	1	Muffler
277	650988	2	Screw, 1/4-20 x 2-9/32"
285	35000A	1	Starter Cup
287	650926	2	Screw, 8-32 x 21/64"
290	34357	1	Fuel Line (6.75")
292	26460	2	Fuel Line Clamp
298	28763	2	Screw, 10-32 x 35/64"
300	36757	1	Fuel Tank (Incl. 292 & 301)
301	36246	1	Fuel Cap Ass'y
305	35577A	1	Oil Fill Tube (Incl. 306)
306	37610	1	"O"-Ring
307	35499	1	"O"-Ring
309	650562	1	Screw, 10-32 x 1/2"
309A	650783	1	Screw, 10-24 x 3/4"
310	36801	1	Dipstick
311A	37611	1	Hold Down Bracket

Obtain parts from Tecumseh

Ref. No.	Part No.	Qty.	Description

12

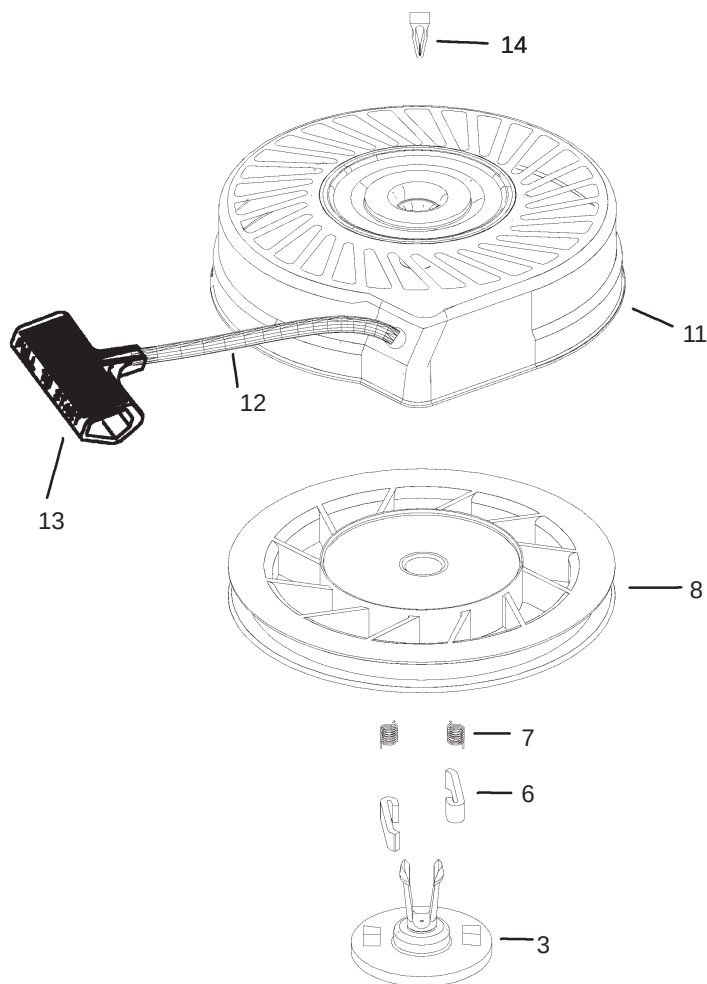


Sheet No.:
T-xxxx

Recoil Starter Assembly No. 590737

Ref. No.	Part No.	Qty.	Description
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A		Pulley & Rewind
		1	Spring ASM
11	590687A		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(Length 98" x 9/64" dia.)
13	590701	1	Starter Handle
14	590760	1	Spring Clip

Obtain parts from Tecumseh

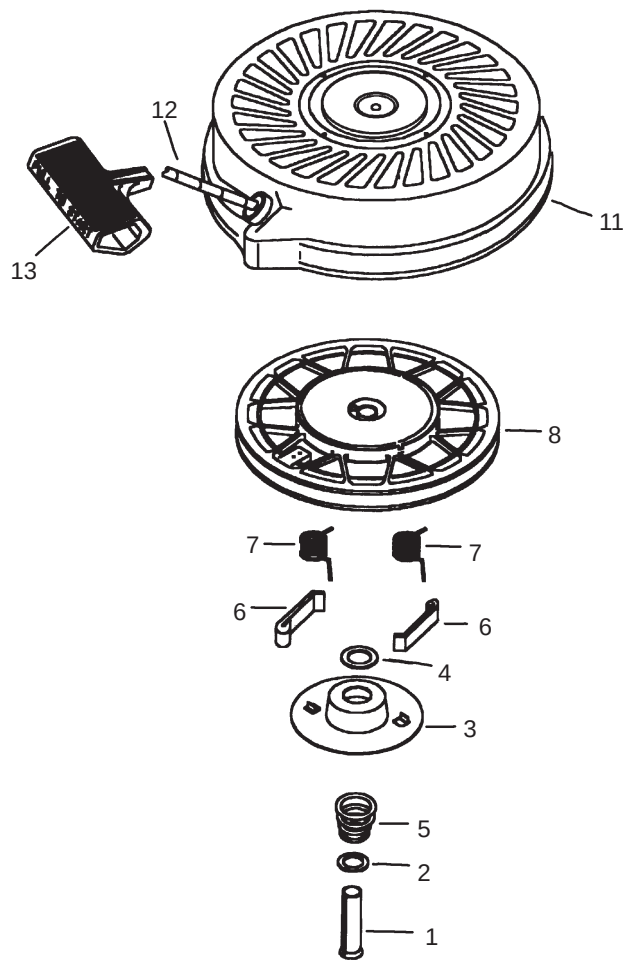

Recoil Starter Assembly No. 590694 (optional)

Ref. No.	Part No.	Qty.	Description
1	590599A	1	Spring Pin (Incl. 4)
2	590600	1	Washer
3	590696	1	Retainer
4	590601	2	Washer
5	590697	1	Brake Spring
6	590698	2	Starter Dog
7	590699	2	Dog Spring
8	590700		Pulley & Rewind Spring
		1	ASM
11	590695		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(98" X 9/64" dia.)
13	590701	1	Starter Handle

Ref. No.	Part No.	Qty.	Description

Obtain parts from Tecumseh

Maintenance Record

[illegible]

LAWN-BOY®