



21in Recycler Mower

Model No. 22166—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Fan Cover Assembly	
Housing Assembly No. 98-7139	5	Honda GXV160K1 A12	16
Wheel and Tire Assembly No. 100-2870	6	Carburetor Assembly	
Engine and Blade Assembly	7	Honda GXV160K1 A12	17
Handle Assembly	8	Air Cleaner Assembly	
Grass Bag Assembly No. 99-2535	9	Honda GXV160K1 A12	18
Cylinder Head Assembly		Muffler Assembly	
Honda GXV160K1 A12	10	Honda GXV160K1 A12	19
Cylinder Barrel Assembly		Flywheel Assembly	
Honda GXV160K1 A12	11	Honda GXV160K1 A12	20
Crankshaft and Piston Assembly		Control Assembly	
Honda GXV160K1 A12	13	Honda GXV160K1 A12	21
Camshaft Assembly		Label Assembly and Gasket Kits	
Honda GXV160K1 A12	14	Honda GXV160K1 A12	22
Recoil Starter Assembly			
Honda GXV160K1 A12	15		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	59199	Atomic Blade	105-9352

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

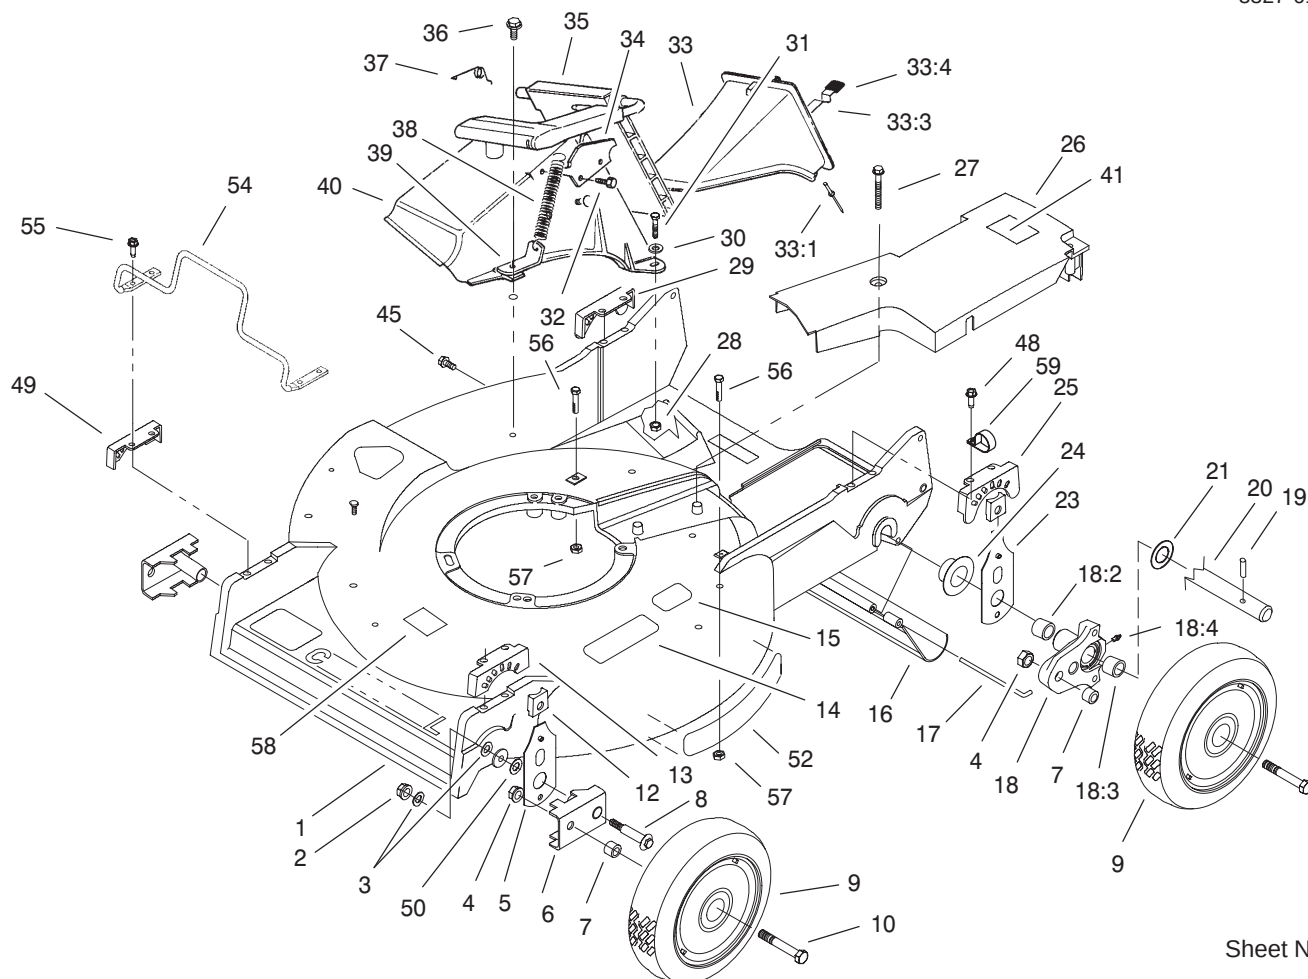

Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7139	1	Housing	26	63-9441	1	Cover-Belt
2	3296-6	2	Nut-Lock, NI	27	37-7260	2	Screw-HH
3	40-1940	4	Washer	28	3296-42	2	Nut-Lock, NI
4	32152-2	4	Nut-Hex	29	49-8750	1	Quadrant-Rear , RH
5	66-7560	2	Front Spring Arm ASM	30	3256-22	2	Washer-Flat
6	61-8300	2	Arm-Pivot, Front	31	321-7	2	Screw-HH
7	52-2480	4	Spacer-Wheel	32	46-8090	2	Screw-Plastite
8	27-6232	2	Bolt-Wheel	33	77-0500	1	Discharge Plug ASM
9	100-2870	4	Wheel and Tire ASM	33:1	3295-35	1	Rivet-Head, Flat
10	323-12	4	Screw-HH	33:3	76-4640	1	Latch-Plug, Discharge
12	25-7740	4	Knob-Arm	33:4	76-4650	1	Grip-Latch
13	49-8760	1	Quadrant-Front, LH	34	93-3154	1	Latch-Plate
14	104-8589	1	Decal-Warning	35	93-7351	1	Discharge Door ASM
15	105-2625	1	Decal-STD, Safety	36	46-6811	1	Screw-HWH
16	44-0580	1	Shield-T railing	37	80-3770	1	Retainer-Door
17	33-3208	1	Rod-Shield	38	76-4660	1	Spring-Door
18	42-3510	2	Pivot Arm ASM	39	71-9350	1	Bracket-Spring
18:2	302-56	1	Fitting-Grease	40	82-9152	1	Tunnel-Discharge
18:3	47-2890	1	Bushing	41	52-2610	1	Label-Grease, HP
18:4	47-2900	1	Bushing	45	46-6810	1	Screw And Washer ASM
19	32121-108	2	Pin-Spirol	48	49-2040	4	Screw-Tapping
20	49-8790	1	Shaft-Axle, Rear	49	49-8770	1	Quadrant-Front, RH
21	36-4780	4	Washer	50	257-3	2	Washer-Thrust
23	66-7561	2	Rear Spring Arm ASM	52	106-0689	1	Decal
24	48-2170	2	Cap-End	54	99-6722	1	Guard-Engine
25	49-8740	1	Quadrant-Rear , LH				

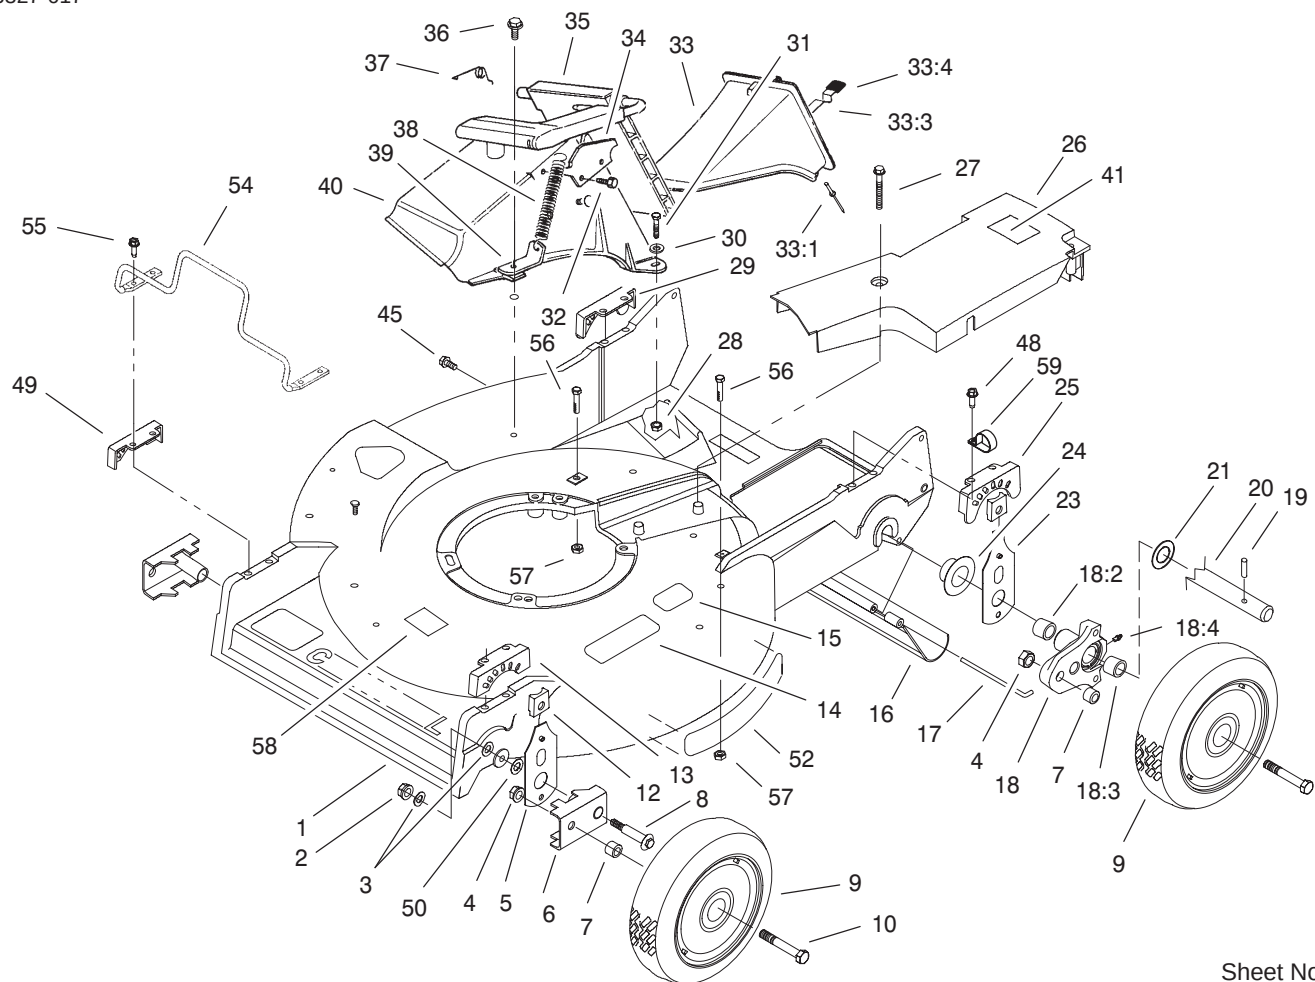 


Sheet No.:2

Housing Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
55	32144-86	4	Screw-HH
56	323-6	2	Screw-HH
57	3296-39	2	Nut-Lock, NI
58	68-7410	1	Decal-Blade
59	2412-72	1	Clip-Closed, Insulated

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 
PROTOTYPE

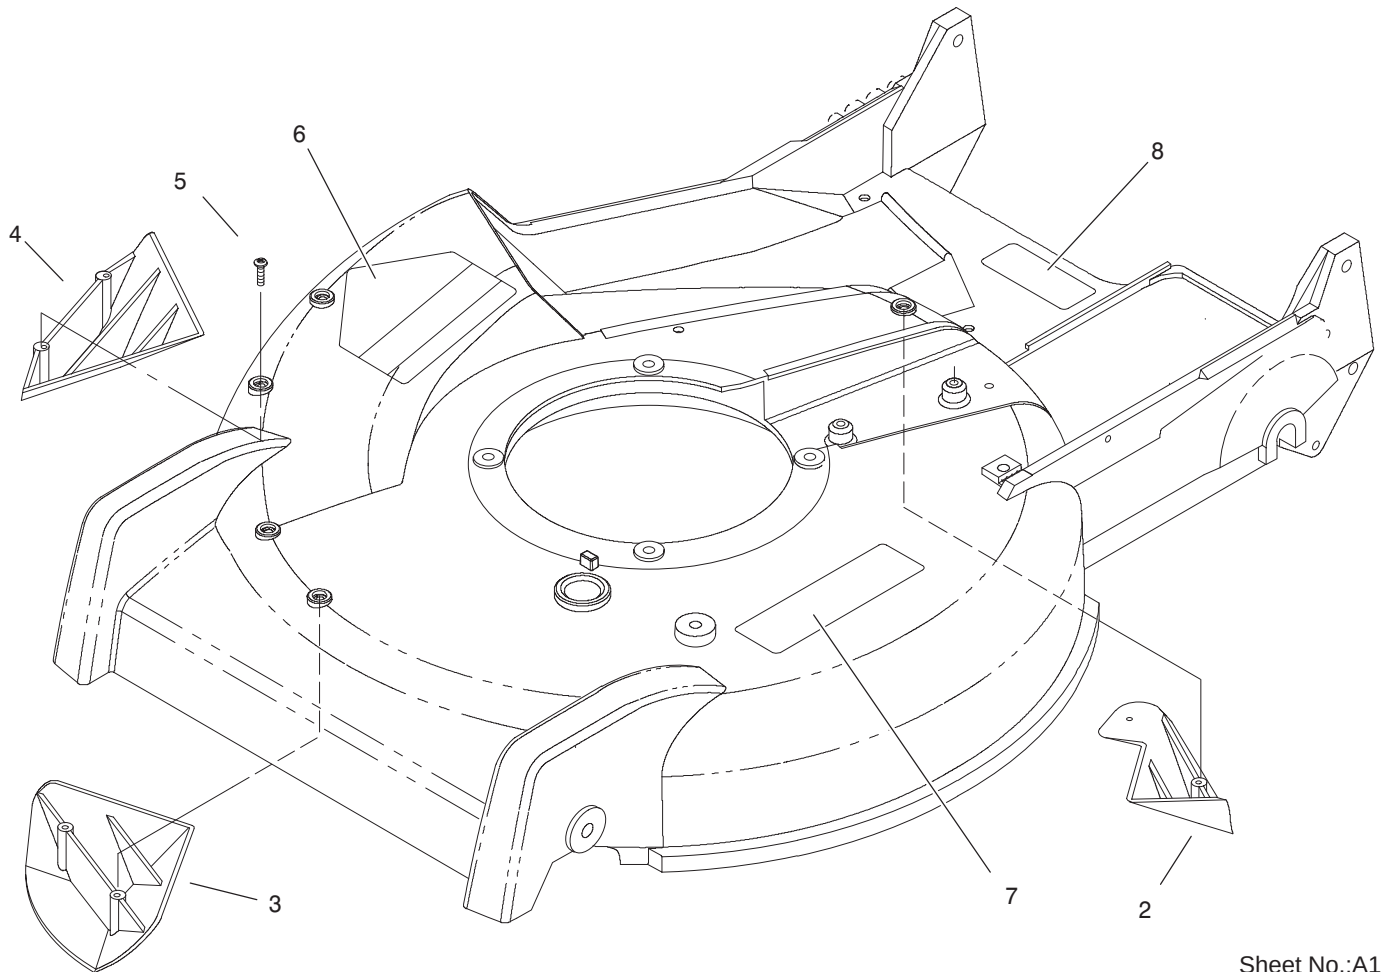

Sheet No.:A1

Housing Assembly No. 98-7139

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	92-1750	1	Kicker-Rear				
3	92-1720	1	Kicker-Front				
4	92-1730	1	Kicker-RH				
5	32144-1 11	6	Screw-PPH				
6	39-5770	1	Decal-Danger				
7	93-0248	1	Decal-W arning				
8	92-1779	1	Decal-W arning				

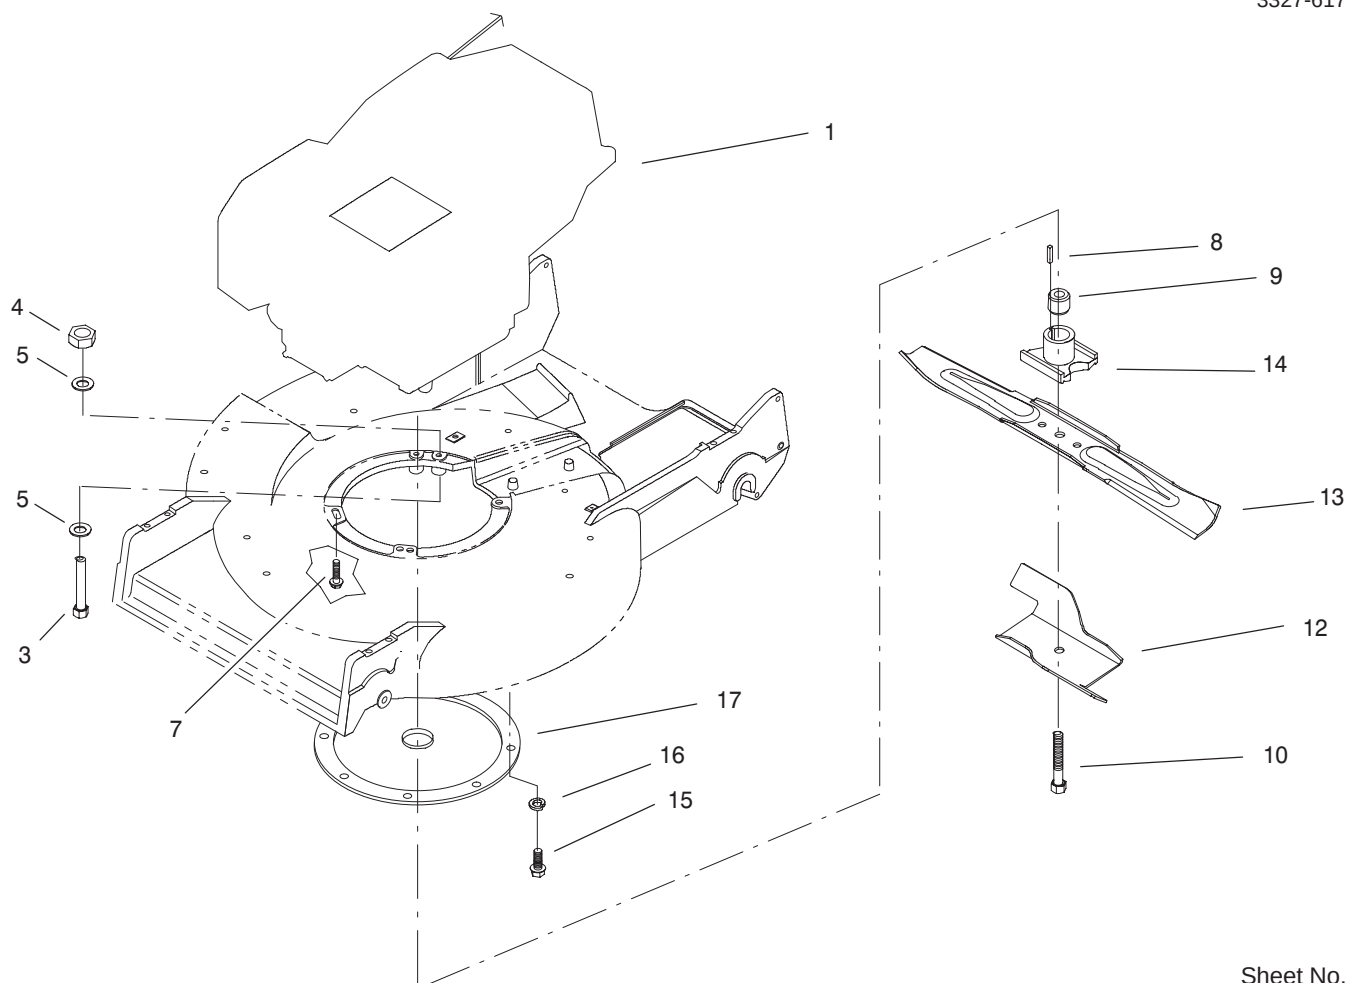 


Sheet No.:3

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	103-3380	1	Engine-Honda, 5.5hp
3	322-10	1	Screw-HH
4	3296-29	1	Nut-Lock, NI
5	3256-23	2	Washer-Flat
7	103-2678	3	Screw
8	7-0036	1	Key-Square
9	103-3795	1	Spacer-Retainer , Blade
10	105-8579	1	Bolt-Blade
12	92-1599-03	1	Stiffener-Blade
13	14-9419	1	Blade
14	52-2170	1	Retainer-Blade
15	32144-70	3	Screw-HH
16	3254-6	3	Washer-Lock, Internal
17	48-2591	1	Protector-Crankshaft

Ref. No.	Part No.	Qty.	Description
PROTOTYPE			

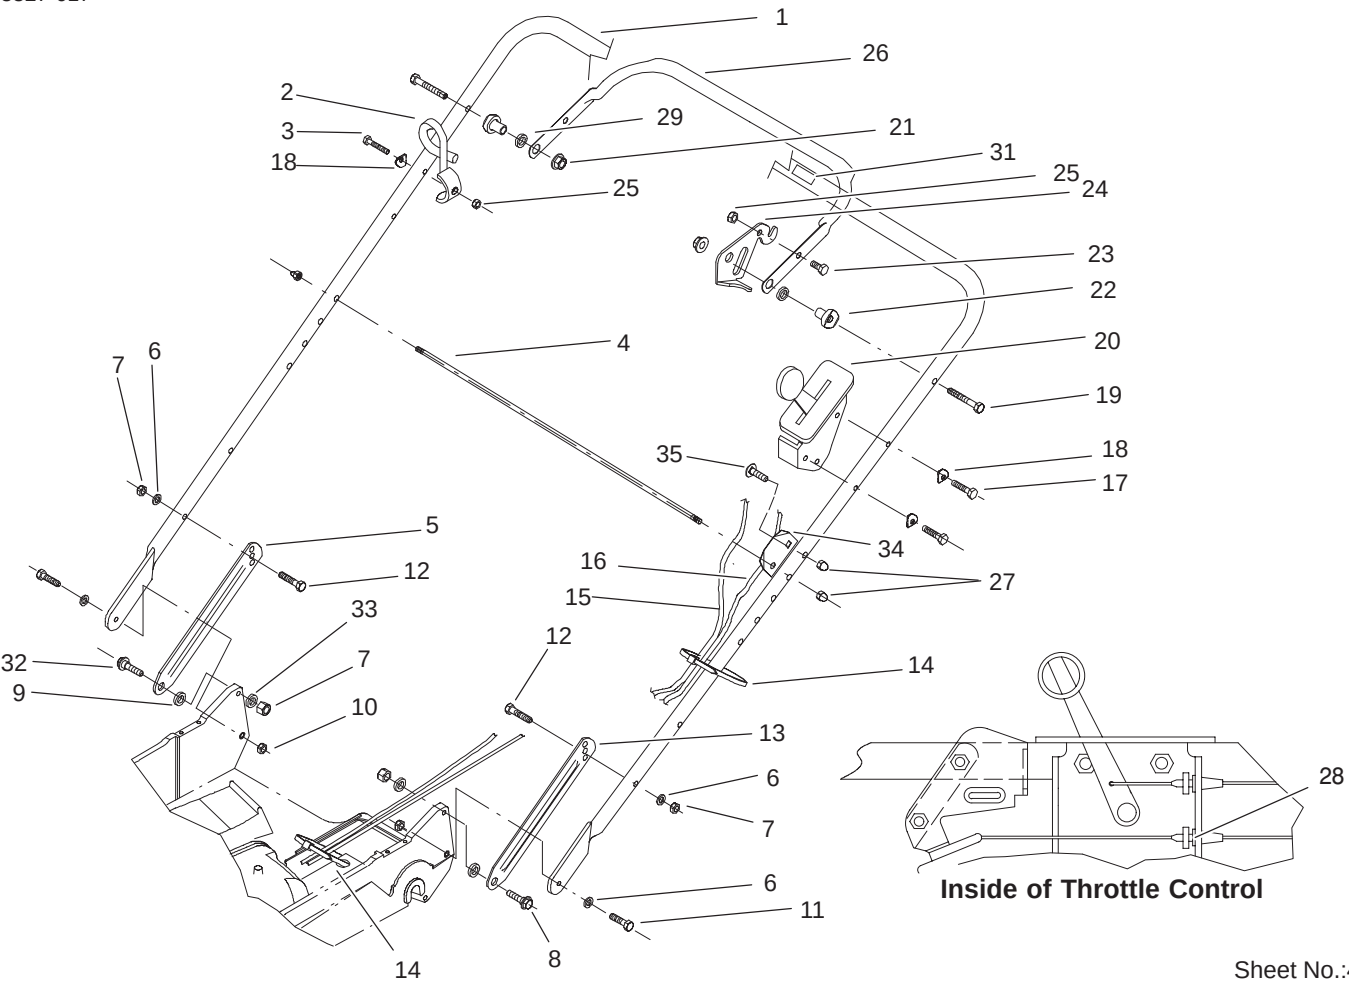 


Sheet No.:4

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2000-03	1	Handle
2	46-8081	1	Guide-Rope
3	321-9	1	Screw-HH
4	48-2810	1	Rod-Support, Bag
5	100-3297-03	1	Latch-Handle, RH
6	3290-456	4	Washer-Belleville
7	3296-29	4	Nut-Lock, NI
8	27-7210	1	Screw-Shoulder
9	3-3287	2	Spacer-Latch, Handle
10	3296-47	2	Nut-Lock, NI
11	322-6	2	Screw-HH
12	322-7	2	Screw-HH
13	100-3298-03	1	Latch-Handle, LH
14	3290-378	3	Tie-Cable
15	103-2684	1	Cable-Brake
16	70-1061	1	Cable-Throttle
17	321-13	2	Screw-HH
18	3-7501	3	Washer
19	322-11	2	Screw-HH
20	103-3385	1	Control-Throttle
21	3296-58	2	Nut-Lock NI
22	49-1630	2	Spacer-Support
23	321-4	1	Screw-HH
24	66-5350	1	Lever-Control
25	3296-42	2	Nut-Lock, NI
26	61-8270-03	1	Bar-Control

Ref. No.	Part No.	Qty.	Description
27	32111-7	3	Nut-Cap
28	32151-86	2	E-Ring
29	256-276	2	Spacer-Nylon
31	98-4387	1	Decal-Protection, Ear
32	27-7211	1	Screw-Shoulder
33	3256-23	2	Washer-Flat
34	104-1326	1	Plate-Aligning, Bag
35	3229-3	1	Screw-CARR
*99	99-2535	1	Grass Bag ASM

 
* Not illustrated

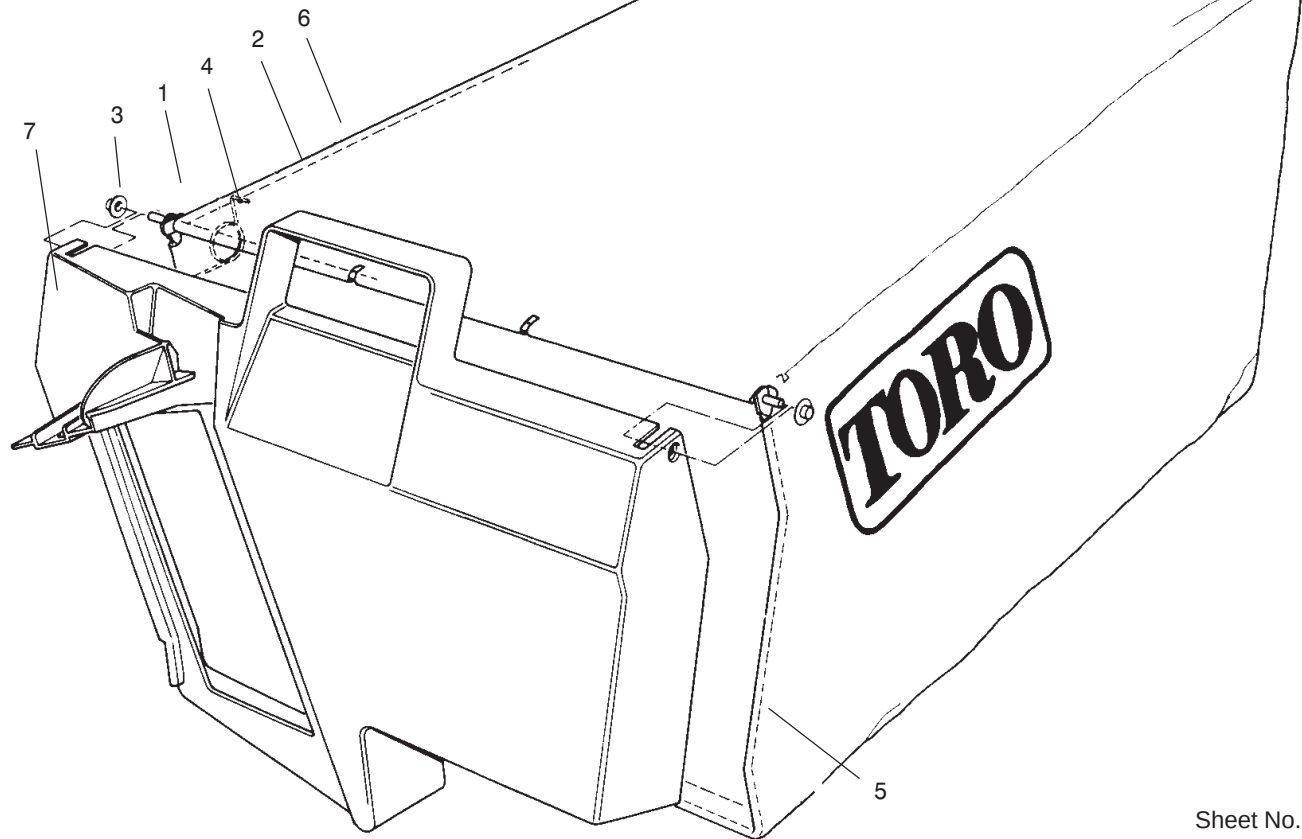

Sheet No.:A3
C-2992

Grass Bag Assembly No. 99-2535


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door , Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	98-9225	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

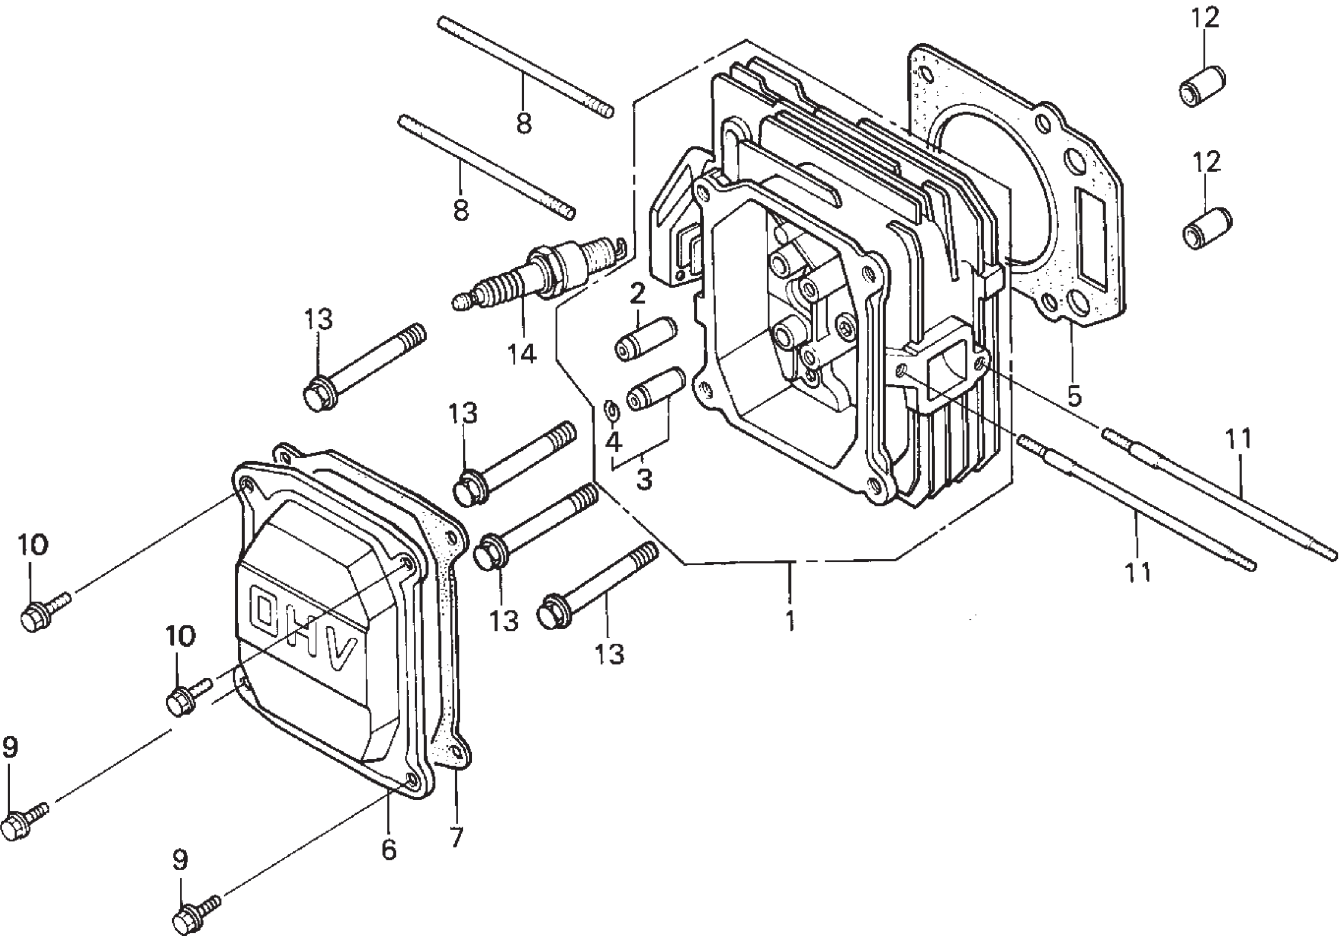 

Cylinder Head Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12200-ZE7-010	1	Cylinder Head				(W16EPRU) (DENSO)
2	12204-ZE1-306	1	Guide, Valve (OS)				
3	12205-ZE1-315	1	Guide, EX. Valve (OS)	98079-56846	1	Spark Plug	
4	12216-ZE5-300	1	Clip, Valve Guide				(BPR6ES) (NGK)
5	12251-ZE7-000	1	Gasket, Cylinder Head	98079-56855	1	Spark Plug	
6	12311-ZG9-800	1	Cover, Head				(W20EPRU) (DENSO)
7	12391-ZE7-T00	1	Gasket, Cylinder Head Cover				
8	90048-ZC3-000	2	Bolt, Stud (6x85) (CT200)				
9	90013-883-000	2	Bolt, Flange (6x12) (CT200)				
10	90013-883-000	2	Blot, Flange (6x12) (CT200)				
11	90043-ZE6-000	2	Bolt, Stud (6x109)				
12	94301-10160	2	Pin A, Dowel (10x16)				
13	95701-08050-00	4	Bolt, Flange (8X50)				
14	98079-54846	1	Spark Plug (BPR4ES) (NGK)				
	98079-54855	1	Spark Plug (W14EPRU) (DENSO)				
	98079-55846	1	Spark Plug (BPR5ES) (NGK)				
	98079-55855	1	Spark Plug				

 
Obtain Parts From Honda

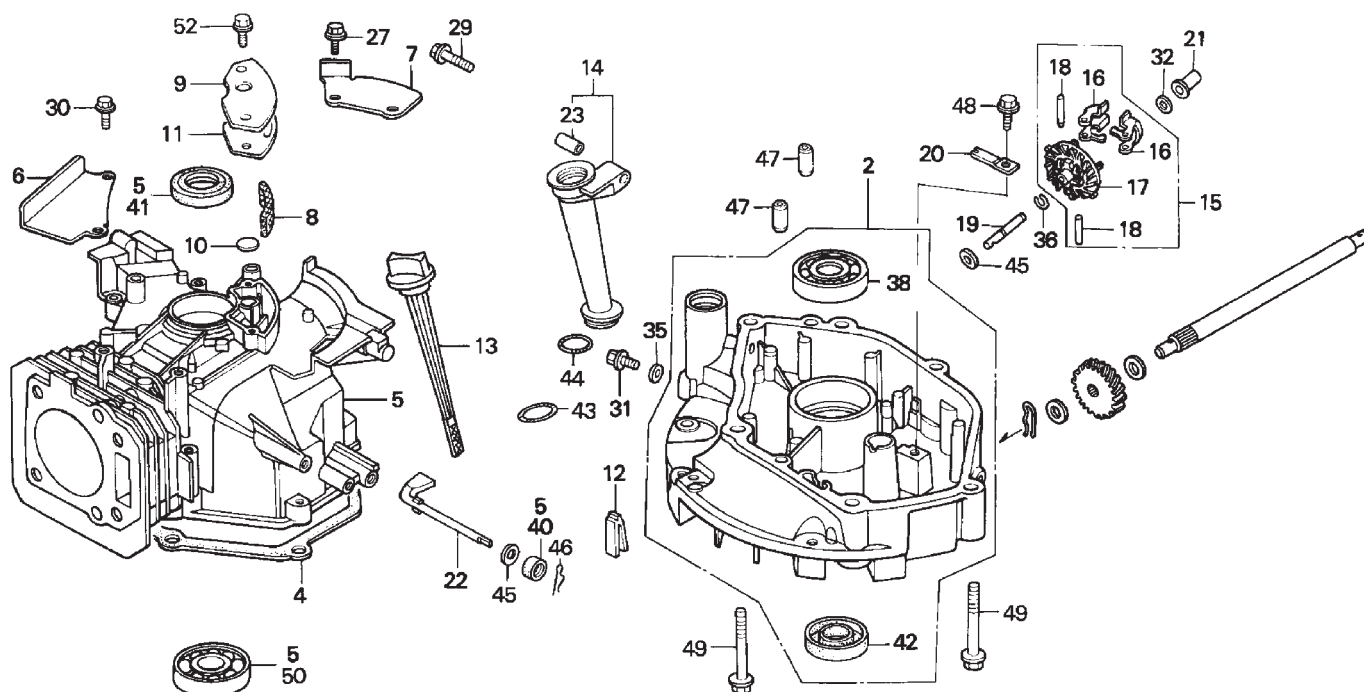

Cylinder Barrel Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	11300-ZE7-W00	1	Pan Assy., Oil (Push Type)	22	16541-ZE7-000	1	Shaft, Governor Arm
4	11381-ZE7-M10	1	Gasket, Oil Pan	23	17240-ZE6-000	1	Collar, Extension
5	12000-ZE7-405	1	Cylinder Assy.	27	90013-883-000	2	Bolt, Flange (6X12) (CT200)
6	12125-ZE7-000	1	Plate, Guide	29	90017-883-000	1	Bolt, Flange (6X32)
7	12126-ZE7-W00	1	Plate A, Guide	30	90022-888-010	2	Bolt, Flange (6X20) (CT200)
8	12367-883-003	1	Filter, Breather	31	90131-ZE1-000	1	Bolt, Drain Plug
9	12370-ZE7-000	1	Cover, Breather	32	90451-ZE1-000	1	Washer, Thrust (6MM)
10	12372-ZE7-000	1	Valve, Breather	35	90601-ZE1-000	1	Washer, Drain Plug (10.2MM)
11	12373-ZE7-000	1	Gasket, Breather Cover	36	30602-ZE1-000	1	Clip, Governor Holder
12	15355-ZE7-000	1	Rubber, Oil Return	40	91231-891-003	1	Oil Seal (6X11X4)
13	15620-ZE6-810	1	Dipstick, Oil	41	91201-ZG9-U71	1	Oil Seal (25X38X7)
14	15630-ZE6-810	1	Extension, Oil Filler (106MM)		91252-888-003	1	Oil Seal (25X38X7) (ARAI)
15	16510-ZE6-000	1	Governor Assy.	42	91252-894-004	1	Oil Seal (25.4X40X7)
16	16511-ZE1-000	2	Weight, Governor	43	91301-ZE9-003	1	O-Ring (22.5X2.2)
17	16512-ZE6-000	2	Holder, Governor Weight	44	91301-805-000	1	O-Ring (26X2.7)
18	16513-ZE1-000	2	Pin, Governor Weight	45	94101-06800	2	Washer, Plain (6MM)
19	16515-ZE6-010	1	Shaft, Governor Holder	46	94251-08000	1	Pin, Lock (8MM)
20	16525-ZE6-010	1	Plate, Governor Shaft Holder	47	94301-08140	2	Pin A, Dowel (8X14)
21	16531-ZE1-000	1	Slider, Governor	48	95701-06012-08	1	Bolt, Flange (6X12)
				49	95701-08050-00	6	Bolt, Flange (8X50)

 Obtain Parts From Honda

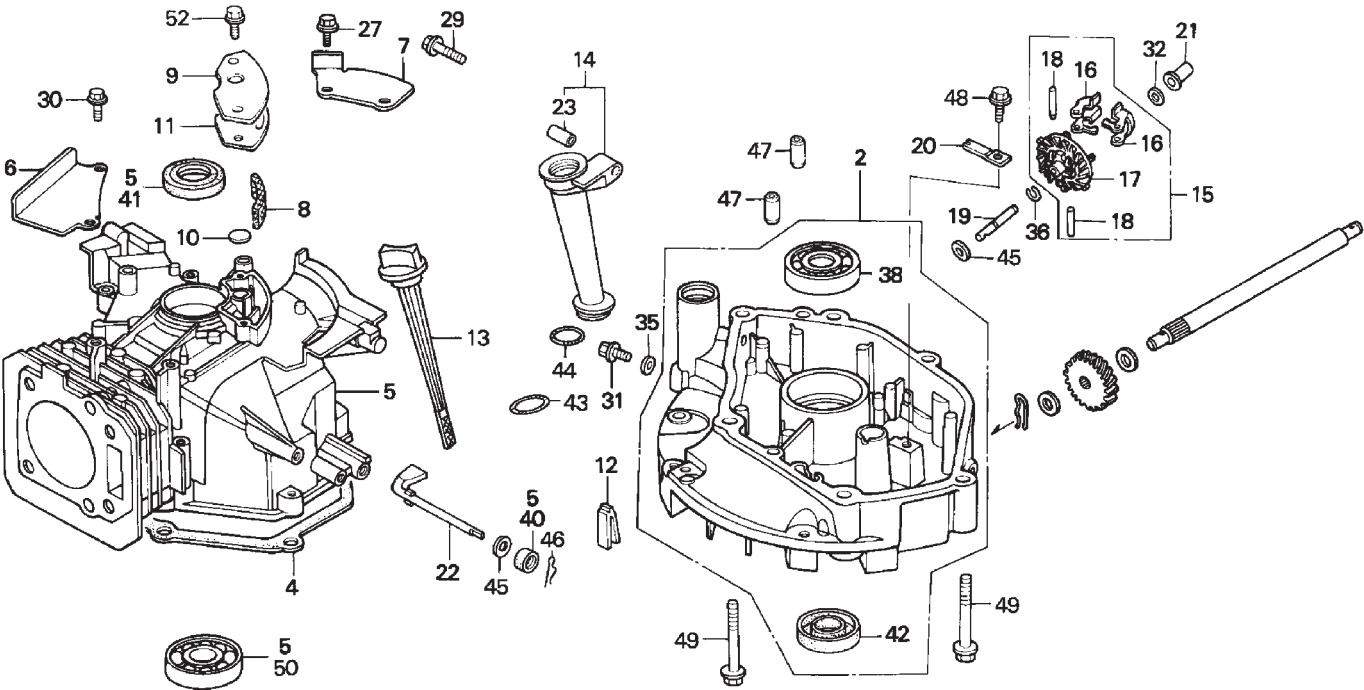


Cylinder Barrel Assembly (Continued)
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
50	96100-62050-00	1	Bearing, Radial Ball (6025)
52	90014-952-000	2	Bolt, Flange (6X14)

Ref. No.	Part No.	Qty.	Description

 
Obtain Parts From Honda

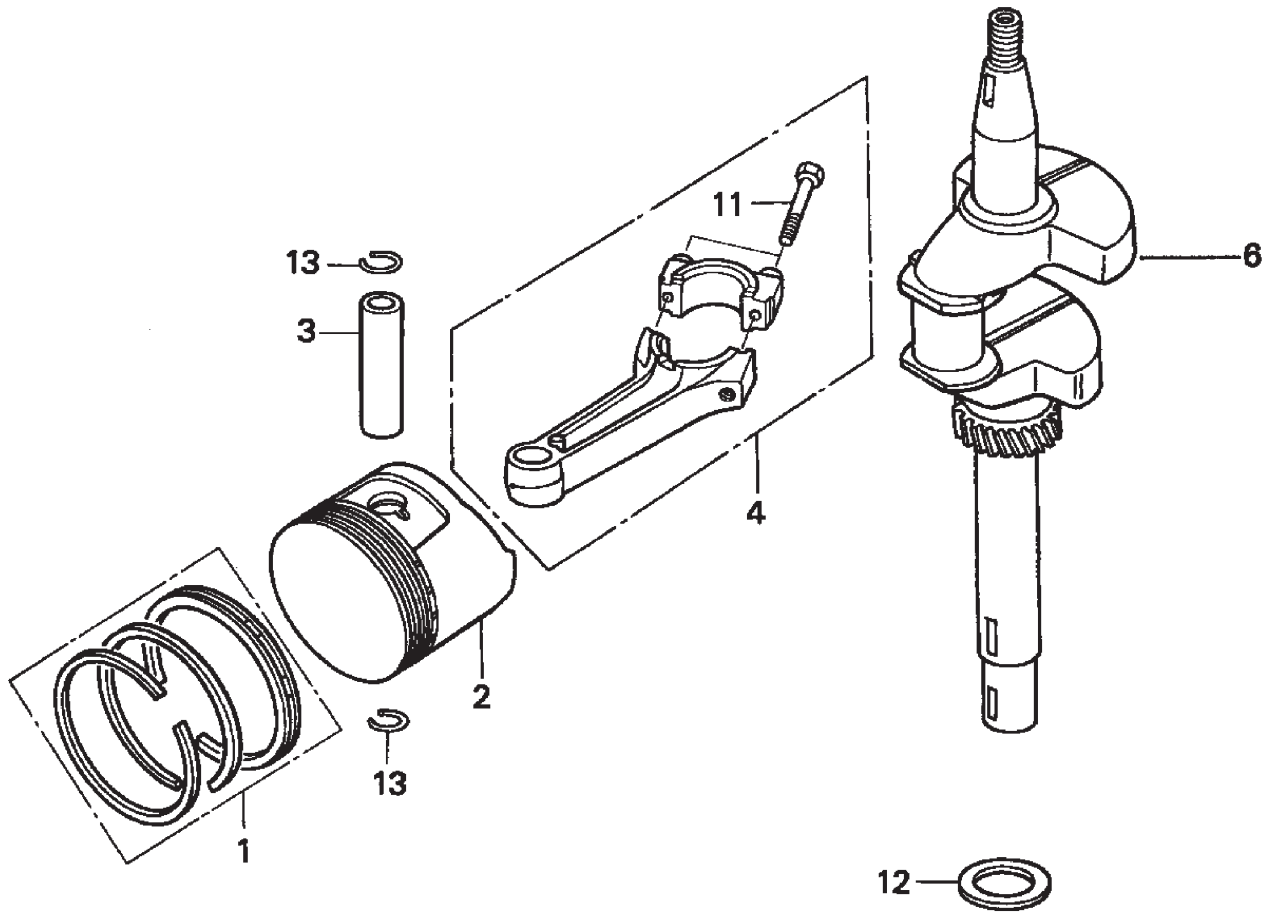

Crankshaft and Piston Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	13010-ZF1-023	1	Ring Set, Piston (STD)				
	13011-ZF1-023	1	Ring Set, Piston (OS 0.25)				
	13012-ZF1-023	1	Ring Set, Piston (OS 0.50)				
	13013-ZF1-023	1	Ring Set, Piston (0.75)				
2	13101-ZE7-010	1	Piston (STD)				
	13102-ZE7-010	1	Piston (OS 0.25)				
	13103-ZE7-010	1	Piston (OS 0.50)				
	13104-ZE7-010	1	Piston (0.75)				
3	13111-ZE1-000	1	Pin, Piston				
4	13200-ZE7-000	1	Rod Assy., Connecting				
	13200-ZE7-305	1	Ros Assy., Connecting (US 0.25)				
6	13310-ZE7-010	1	Crankshaft (N1 TYPE)				
11	90001-ZE1-000	2	Bolt, Connecting Rod				
12	90401-ZE7-W00	1	Washer, Thrust (25.6MM)				
13	90551-ZE1-000	2	Clip, Piston Pin (18MM)				

 Obtain Parts From Honda

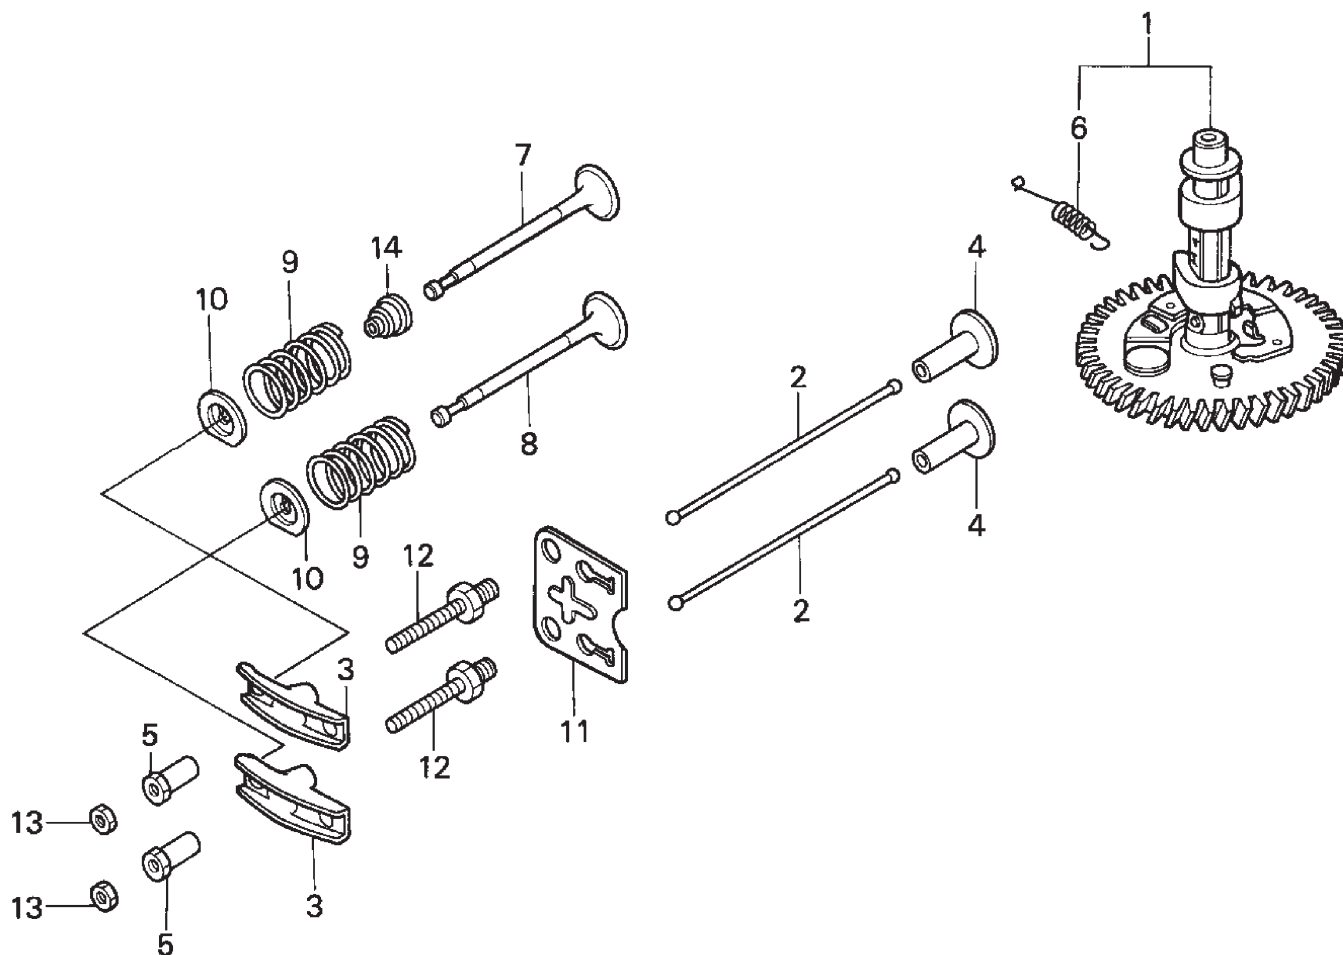


Camshaft Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
1	14100-ZE7-000	1	Camshaft Assy.
2	144100-ZE1-010	2	Rod, Push
3	14431-ZE1-000	2	Arm, Valve Rocker
4	14441-ZE1-010	2	Lifter, Valve
5	14451-ZE1-013	2	Pivot, Rocker Arm
6	14568-ZE1-000	1	Spring, Weight Return
7	14711-ZF1-000	1	Valve, In.
8	14721-ZE7-000	1	Valve, Ex.
9	14751-ZE1-000	2	Spring, Valve
10	14771-ZE1-000	2	Retainer, In. Valve Spring
11	14791-ZE1-010	1	Plate, Push Rod Guide
12	90012-ZE0-010	2	Bolt, Pivot (8MM)
13	90206-ZE1-000	2	Nut, Pivot ADJ
14	12209-ZE6-003	1	Seal, Valve Stem

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 
Obtain Parts From Honda

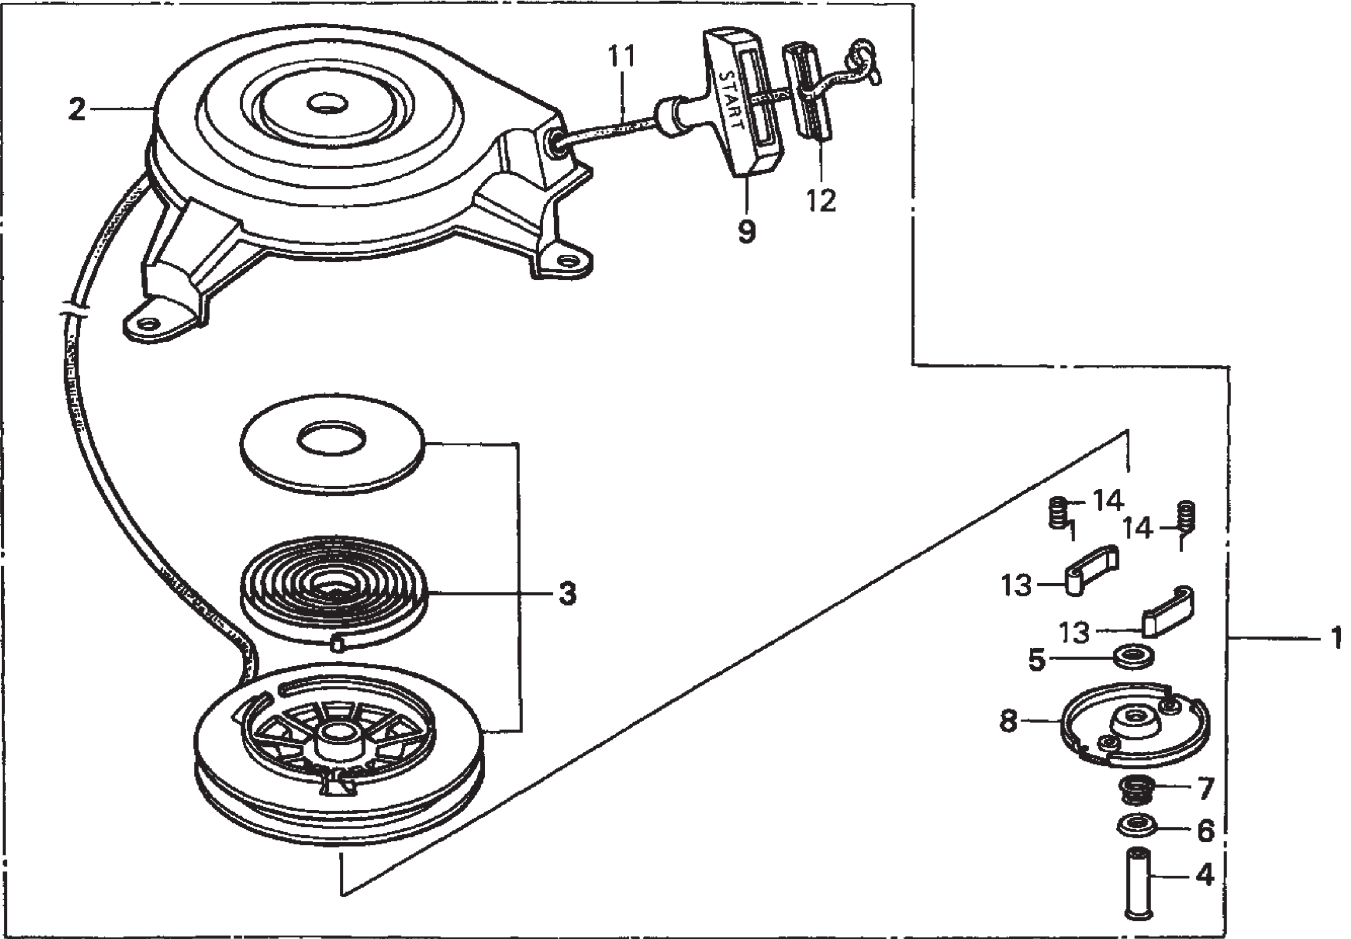

**Recoil Starter Assembly
Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	28400-ZG9-803	1	Starter Assy., Recoil				
2	28402-ZG9-802	1	Housing Assy.				
3	28415-ZG9-802	1	Pulley and Spring Assy.				
4	28419-ZG9-802	1	Pin, Center				
5	28431-ZG9-802	1	Plate A, Friction				
6	28432-ZG9-802	1	Plate B, Friction				
7	28441-ZG9-802	1	Spring, Friction				
8	28444-ZG9-802	1	Retainer				
9	28461-ZE6-T02	1	Handle				
11	28462-ZG9-802	1	Rope, Recoil Starter (#4X85")				
12	28463-ZE6-T02	1	Handle, Reinforcement				
13	28485-ZE6-T02	2	Ratchet, Starter				
14	28486-ZE6-T02	2	Spring, Dog				

 Obtain Parts From Honda

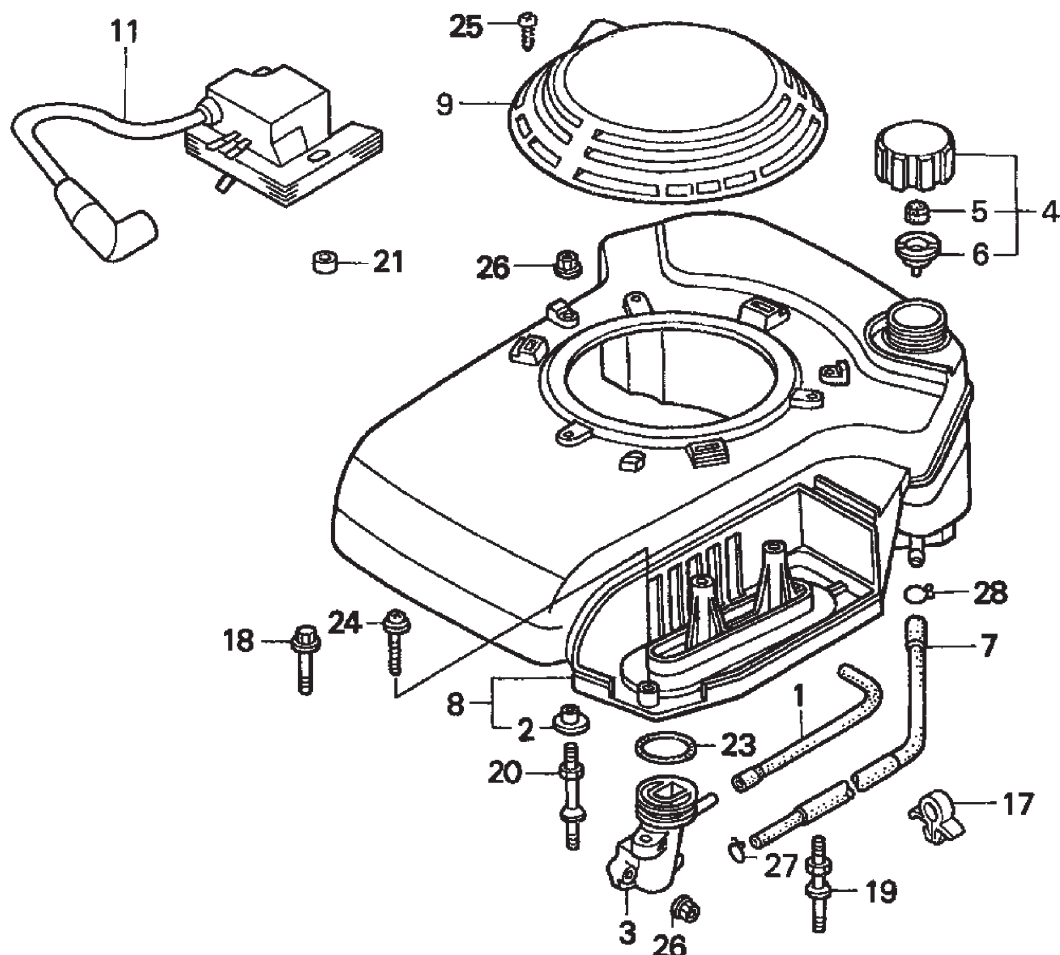


Fan Cover Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
1	15721-ZE7-000	1	Tube, Breather
2	17216-PE2-003	3	Collar, Air Cleaner
3	17410-ZE7-W00	1	Elbow, Air Cleaner
4	17620-ZE7-000	1	Cap Assy., Fuel Tank
5	17622-888-010	1	Sponge, Fuel Cap Breather
6	17624-ZE7-000	1	Gasket, Fuel Cap
7	17700-ZE7-W00	1	Tube Assy., Fuel Tank
8	19610-ZE7-W1 1ZA	1	Cover, Fan *NH* (Brake)(Black)
	19610-ZE7-W1 1ZB	1	Cover, Fan *R8* (Brake) (Bright Red)
9	19615-ZG9-801ZA	1	Hood, Fan Cover *NH1* (Black)
	19615-ZG9-801ZB	1	Hood, Fan Cover *R8* (Bright Red)
11	30500-ZG9-801	1	Coil Assy., Ignition
16	36103-ZE1-000	1	Holder, Stop Switch Wire
17	46392-SC2-003	1	Clamp, Brake Pipe
18	90015-883-000	1	Bolt, Flange (6X28)
19	90041-ZE7-W10	2	Bolt, Stud (Brake)
20	90042-ZE7-W00	1	Bolt, Stud (IGN COIL)
21	90402-ZE7-W00	2	Collar, Special

Ref. No.	Part No.	Qty.	Description
23	91301-ZG9-800	1	O-Ring (33.3X3.5)
24	93891-06035-10	1	Screw-Washer (6X35)
25	93913-24580	1	Screw, Tapping (4X20)
26	94050-06000	5	Nut, Flange (6MM)
27	95002-02080	1	Clip, Tube (B8)
28	95002-02100	1	Clip, Tube (B10)
			(engine serial number up to 6149216)
	95002-50000	1	Clip, Tube (C9)
			(engine serial number from 6149217)

 
Obtain Parts From Honda

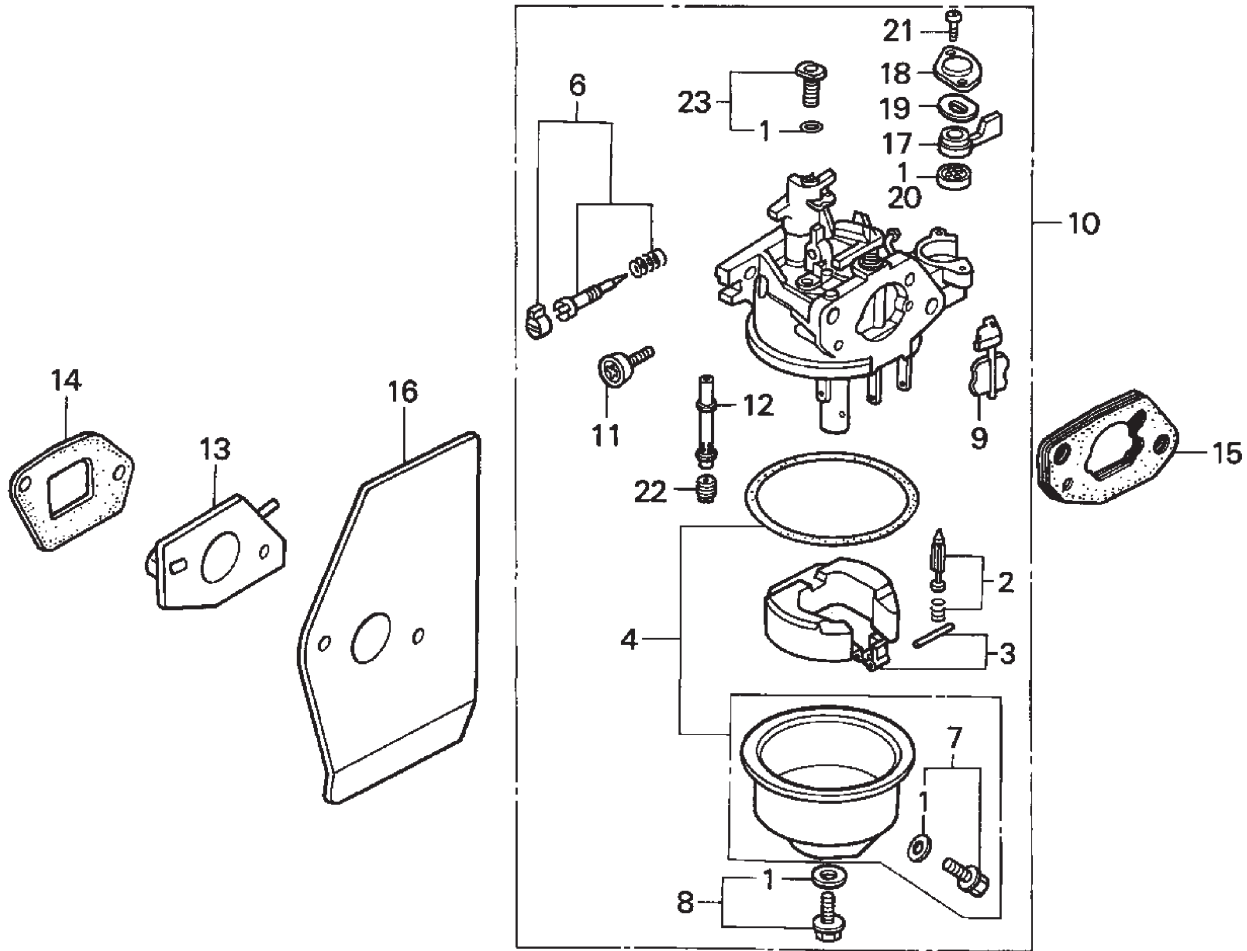

Carburetor Assembly **Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	16010-ZE0-025	1	Gasket, Set		16953-ZE1-812	1	Lever, Valve (engine serial number from BE66C B)
2	16011-ZE0-005	1	Valve Set, Float				
3	16013-ZE0-005	1	Float Set	18	16954-ZE1-81 1	1	Plate, Lever Setting (engine serial number up to BE66C A)
4	16015-ZE0-831	1	Chamber Set, Float		16954-ZE1-812	1	Plate, Lever Setting (engine serial number from BE66C B)
6	16016-ZH7-W01	1	Screw Set	19	16956-ZE1-81 1	1	Spring, Valve Lever
7	16024-ZE1-81 1	1	Screw Set, Drain	20	16957-ZE1-812	1	Gasket, Valve
8	16028-ZE0-005	1	Screw Set B	21	93500-03006	2	Screw, Pan (3X6) (engine serial number from BE66C B)
9	16045-ZE7-005	1	Choke Set		93500-03008	2	Screw, Pan (3X8) (engine serial number up to BE66C A)
10	16100-ZE7-W21	1	Carburetor Assy. (BE66C B)	22	99101-ZH8-0600	1	Jet, Main (#60)
					99101-ZH8-0620	1	Jet, Main (#62)
11	16124-ZE0-005	1	Screw, Throttle Stop		99101-ZH8-0650	1	Jet, Main (#65)
12	16166-ZE7-W10	1	Nozzle, Main	23	99204-ZE0-0350	1	Jet Set, Pilot (#35)
13	16211-ZE7-000	1	Insulator, Carburetor				
14	16212-ZE7-M10	1	Gasket, Insulator				
15	16220-ZE6-010	1	Spacer, Carburetor				
16	16221-ZE7-M1 1	1	Gasket, Carburetor				
17	16953-ZE1-406	1	Lever, Valve (engine serial number up to BE66C A)				
	16953-ZE1-81 1	1	Lever, Valve (engine serial number up to BE66C A)				

 Obtain Parts From Honda

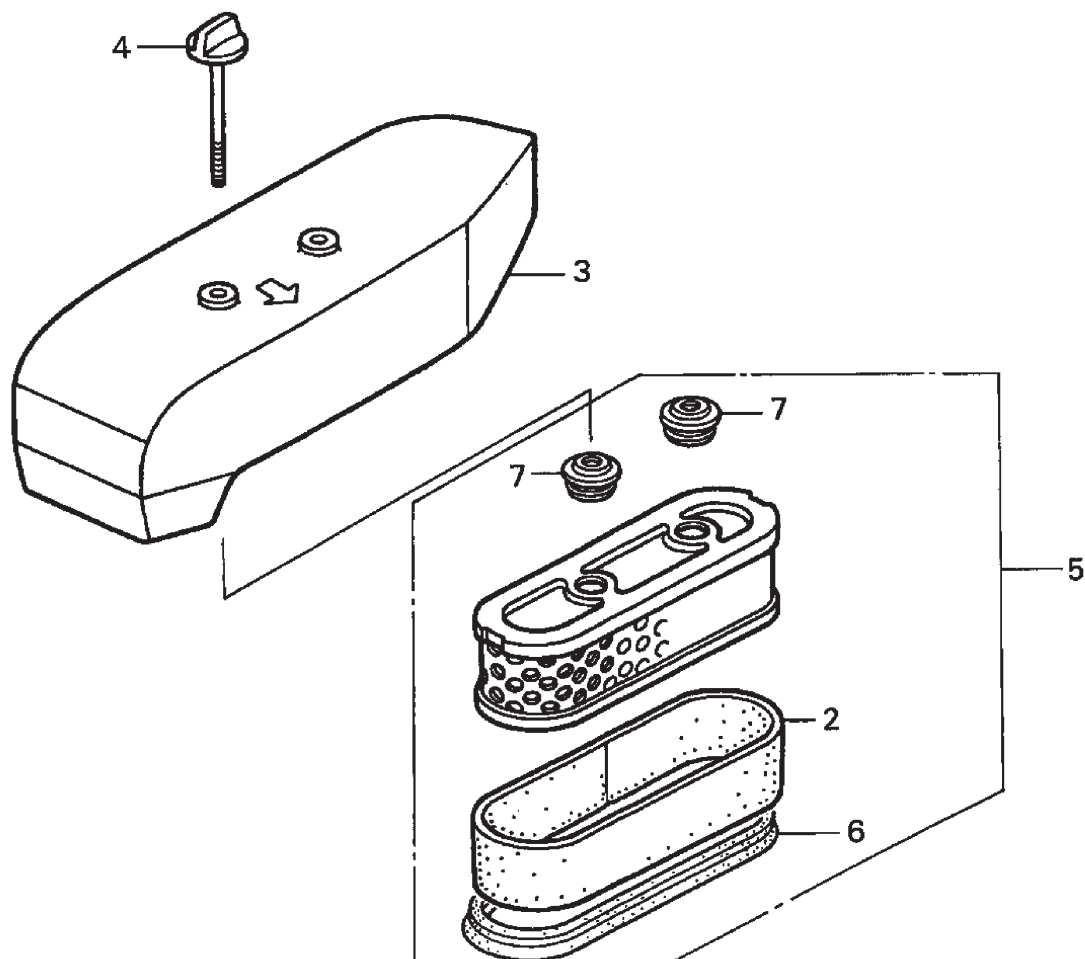


Air Cleaner Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
2	17218-ZE7-W02	1	Filter (Outer)
3	17231-ZE7-W00ZA	1	Cover, Air Cleaner *NH1* (Black)
4	90004-ZE7-W00	2	Bolt, Air Cleaner (6X73)
5	17211-ZE7-W03	1	Element, Air Cleaner (TOUYOU)
6	17217-ZE7-W00	1	Gasket, Element
7	17232-ZE7-W00	2	Grommet, Air Cleaner

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 
Obtain Parts From Honda

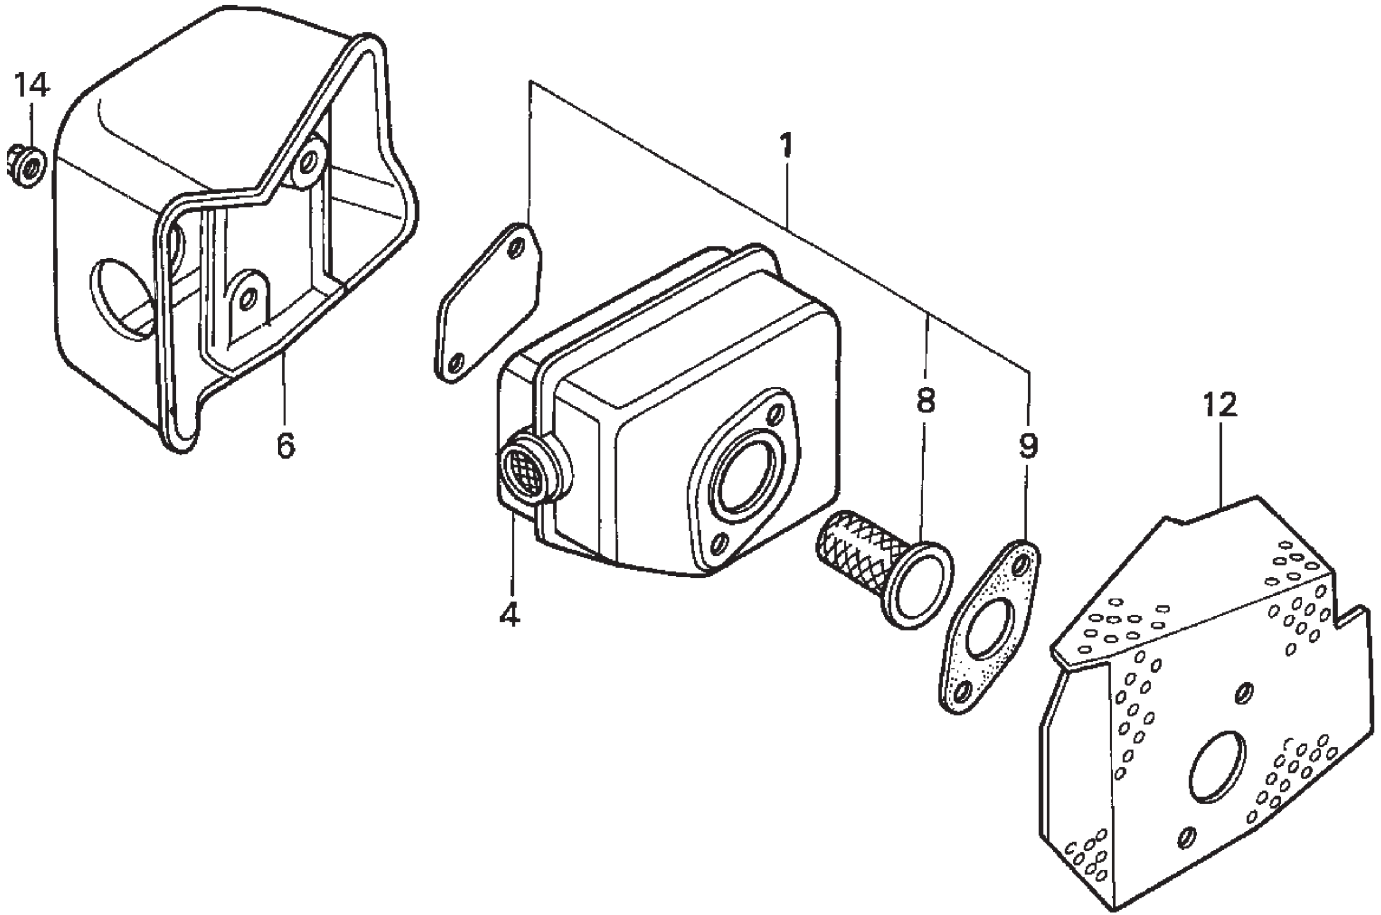

Muffler Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	06180-ZE6-820	1	Arrester, Spark				
4	18310-ZG9-J01	1	Muffler				
6	18320-ZG9-M01	1	Protector, Muffler				
8	06180-888-505	1	Arrester Kit, Spark				
	06180-888-810	1	Arrester Kit, Spark				
9	18381-ZE6-820	1	Gasket, Muffler				
12	18381-ZG9-M00	1	Gasket, Muffler				
14	90343-ZE6-000	2	Nut, Self-Lock (6MM)				

 
Obtain Parts From Honda

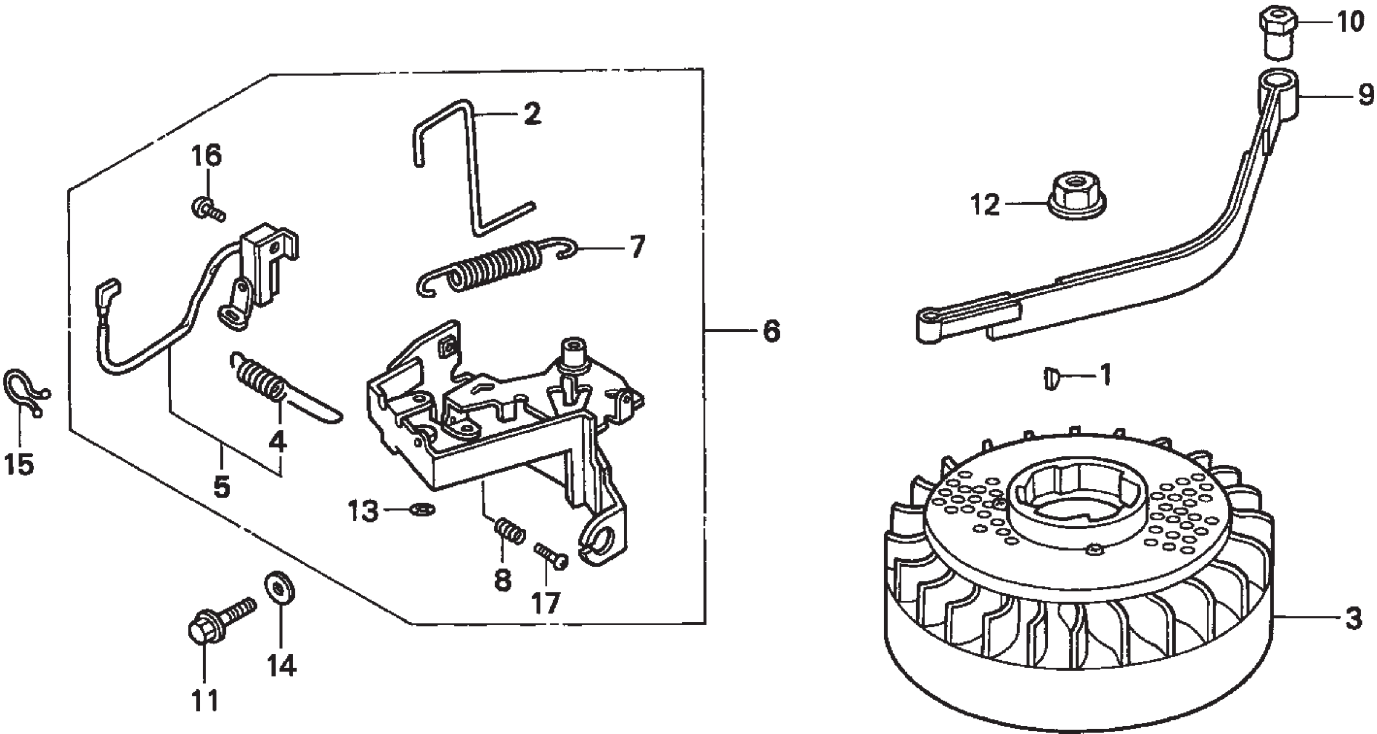

Flywheel Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	13331-357-000	1	Key, Special Woodruff (25X18)				
2	16566-ZE7-W00	1	Rod, Governor Arm Return				
3	31105-ZE7-W00	1	Flywheel Assy.				
4	35129-ZG9-800	1	Spring, Switch Control				
5	36100-ZE7-W01	1	Switch Assy., Engine Stop				
6	75101-ZE7-W00	1	Lever Assy., Brake				
7	75113-ZG9-800	1	Spring, Brake Lever				
8	75114-ZG9-800	1	Spring, Brake Adjusting				
9	75120-ZG9-305	1	Brake				
10	75123-ZG9-800	1	Collar, Brake Shaft				
11	90014-952-000	1	Bolt, Flange (6X14)				
12	90201-878-003	1	Nut, Special (14MM)				
13	90310-ZB7-701	1	Nut, Push (2.6)				
14	90461-357-000	1	Washer, Sealing (6.5X12)				
15	90630-ZE7-W01	1	Clip, Purse Lock				
16	93500-04008-0A	1	Screw, Pan (4X8)				
17	93500-05012-0A	1	Screw, Pan (5X12)				

 
Obtain Parts From Honda

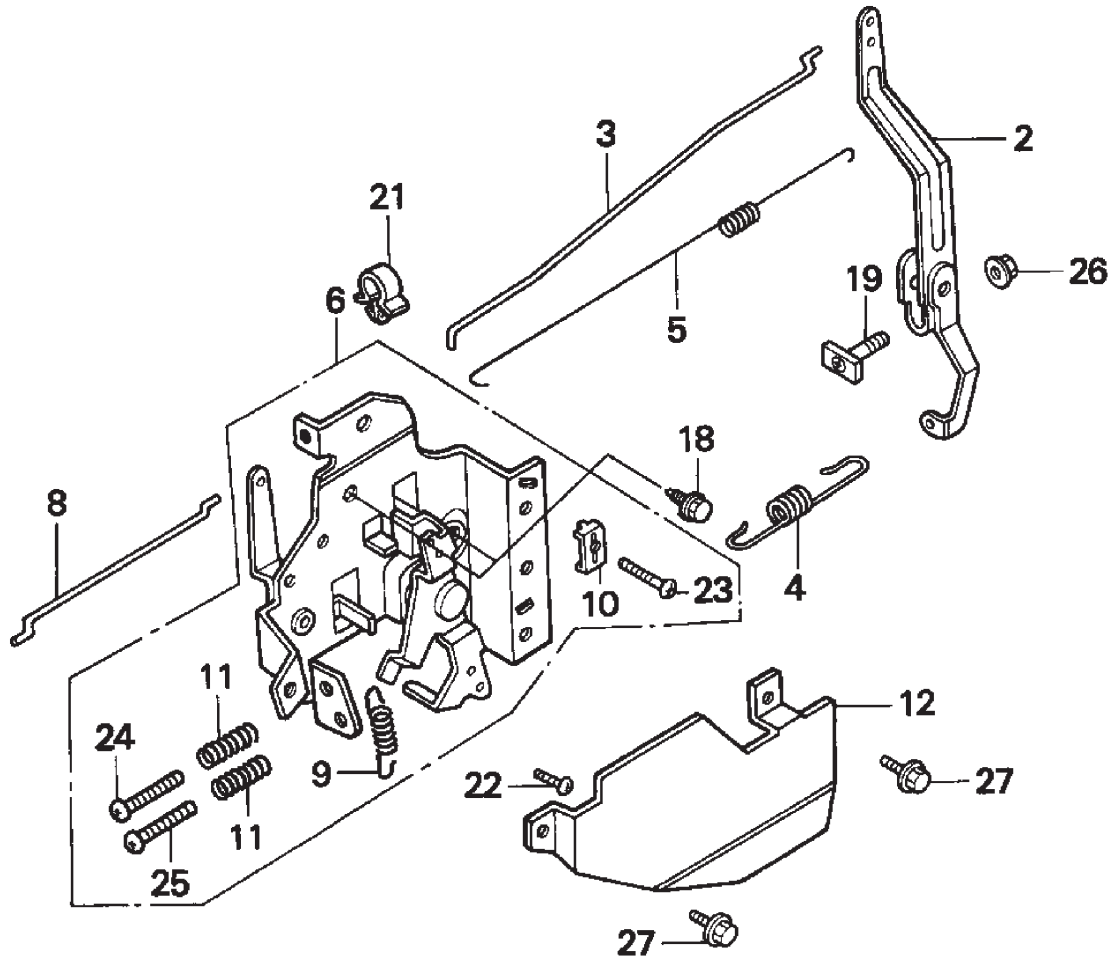

Control Assembly **Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	16551-ZE7-000	1	Arm, Governor				
3	16555-ZE7-000	1	Rod, Governor				
4	16561-ZE7-020	1	Spring, Governor (STD)				
5	16562-ZE6-000	1	Spring, Throttle Return				
6	16570-ZE7-020	1	Control Assy.				
8	16573-ZE7-000	1	Rod, Choke				
9	16576-ZE7-300	1	Spring, Lever				
10	16576-891-000	1	Holder, Cable				
11	16584-883-300	2	Spring, Control Adjusting				
12	16585-ZE7-000	1	Protector, Control				
18	90013-883-000	2	Bolt, Flange (6X12) (CT200)				
19	90015-ZE5-010	1	Bolt, Governor Arm				
21	90659-680-013	1	Clip, Wire Harness				
22	93500-04008-0A	1	Screw, Pan (4X8)				
23	93500-05016-0A	1	Screw, Pan (5X16)				
24	93500-05020-0A	1	Screw, Pan (5X20)				
25	93500-05028-0A	1	Screw, Pan (5X28)				
26	94050-06000	1	Nut, Flange (6MM)				
27	95701-06010-00	1	Bolt, Flange (6X10)				

 Obtain Parts From Honda

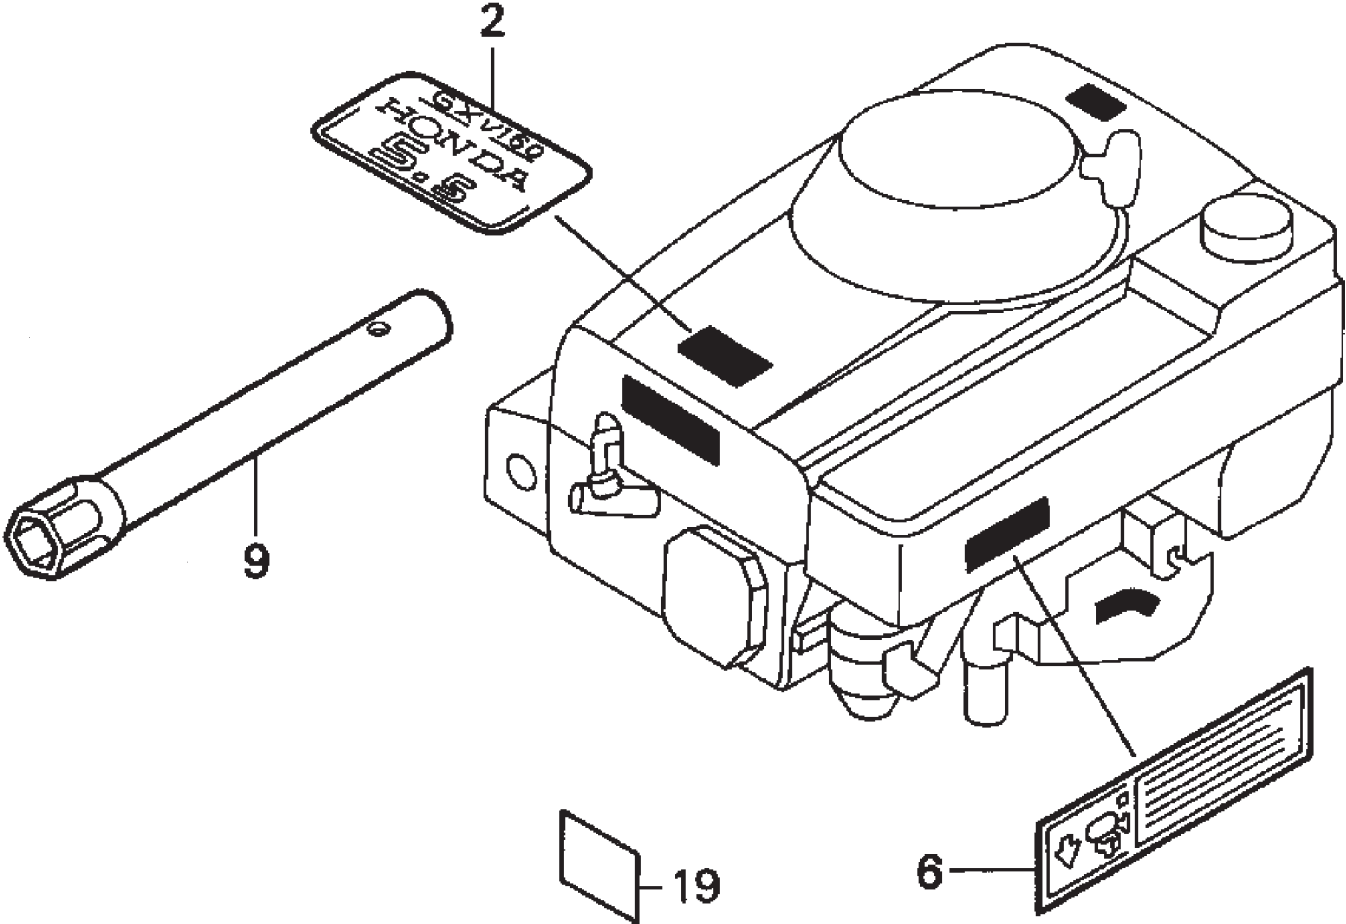

Label Assembly and Gasket Kits
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	87101-ZE7-W12	1	Mark, Emblem (5.5) (ES) engine s/n up to 6154807				
	87101-ZE7-W30	1	Mark, Emblem (5.5) (AH) engine s/n from 6154808				
6	87531-ZG9-800	1	Mark, Honda				
9	99004-21003	1	Wrench, Box (P21)				
19	87601-ZE7-W30	1	Mark, Type (A12)				
*	061A1-ZE7-801	1	Gasket Kit				
*	06111-ZE7-406	1	Gasket Kit				

* Not illustrated
Obtain Parts From Honda

Maintenance Record

[illegible]



PROTOTYPE