



21in Recycler Mower

Model No. 22167—230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing Assembly	3	Recoil Starter Assembly	
Housing Assembly No. 98-7139	4	Honda GXV160K1 A12	17
Wheel and Tire Assembly No. 100-2870	5	Fan Cover Assembly	
Gear Case Assembly No. 74-1861	6	Honda GXV160K1 A12	18
Engine and Blade Assembly	7	Carburetor Assembly	
Handle and Control Assembly	8	Honda GXV160K1 A12	19
Rear Axle Assembly	9	Air Cleaner Assembly	
Wheel and Tire Assembly No. 100-2860	10	Honda GXV160K1 A12	20
Grass Bag Assembly No. 99-2535	11	Muffler Assembly	
Cylinder Head Assembly		Honda GXV160K1 A12	21
Honda GXV160K1 A12	12	Flywheel Assembly	
Cylinder Barrel Assembly		Honda GXV160K1 A12	22
Honda GXV160K1 A12	13	Control Assembly	
Crankshaft and Piston Assembly		Honda GXV160K1 A12	23
Honda GXV160K1 A12	15	Label Assembly and Gasket Kits	
Camshaft Assembly		Honda GXV160K1 A12	24
Honda GXV160K1 A12	16		

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Discharge Kit	59199	Atomic Blade	105-9352

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

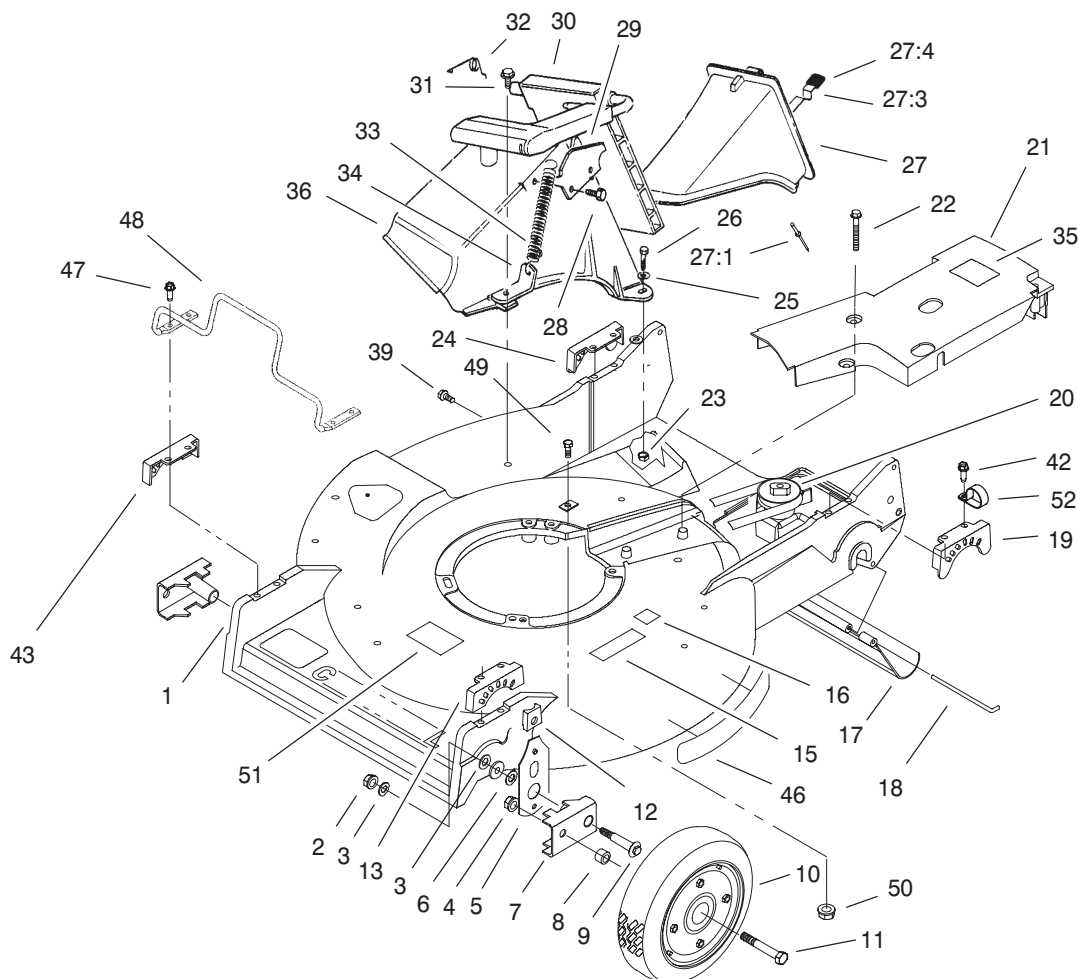

Sheet No.:2

Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7139	1	Housing	27:1	3295-35	1	Rivet-Head, Flat
2	3296-6	2	Nut-Lock, NI	27:3	76-4640	1	Latch-Plug, Discharge
3	40-1940	4	Washer	27:4	76-4650	1	Grip-Latch
4	32152-2	2	Nut-Hex	28	46-8090	2	Screw-Plastite
5	66-7560	2	Front Spring Arm ASM	29	93-3154	1	Latch-Plate
6	257-3	2	Washer-Thrust	30	93-7351	1	Discharge Door ASM
7	61-8300	2	Arm-Pivot, Front	31	46-6811	1	Screw-HWH
8	52-2480	2	Spacer-Wheel	32	80-3770	1	Retainer-Door
9	27-6232	2	Bolt-Wheel	33	76-4660	1	Spring-Door
10	100-2870	2	Wheel & Tire ASM	34	71-9350	1	Bracket-Spring
11	323-12	2	Screw-HH	35	52-2620	1	Label-Grease
12	25-7740	2	Knob-Arm	36	82-9152	1	Tunnel-Discharge
13	49-8760	1	Quadrant-Front, LH	39	46-6810	1	Screw And Washer ASM
14	104-8589	1	Decal-Warning	42	49-2040	4	Screw-Tapping
16	105-2625	1	Decal-STD, Safety	43	49-8770	1	Quadrant-Front, RH
17	44-0580	1	Shield-Trailing	46	106-0689	1	Decal
18	33-3208	1	Rod-Shield	47	32144-86	4	Screw-HH
19	49-8740	1	Quadrant-Rear, LH	48	99-6722	1	Guard-Engine
20	74-1861	1	Gear Case ASM	49	323-6	2	Screw-HH
21	74-1770	1	Cover-Belt	50	3296-39	2	Nut-Lock, NI
22	37-7260	2	Screw-HH	51	68-7410	1	Decal-Blade
23	3296-42	2	Nut-Lock, NI	52	2412-72	1	Clip-Closed, Insulated
24	49-8750	1	Quadrant-Rear, RH				
25	3256-22	2	Washer-Flat				
26	321-7	2	Screw-HH				
27	77-0500	1	Discharge Plug ASM				

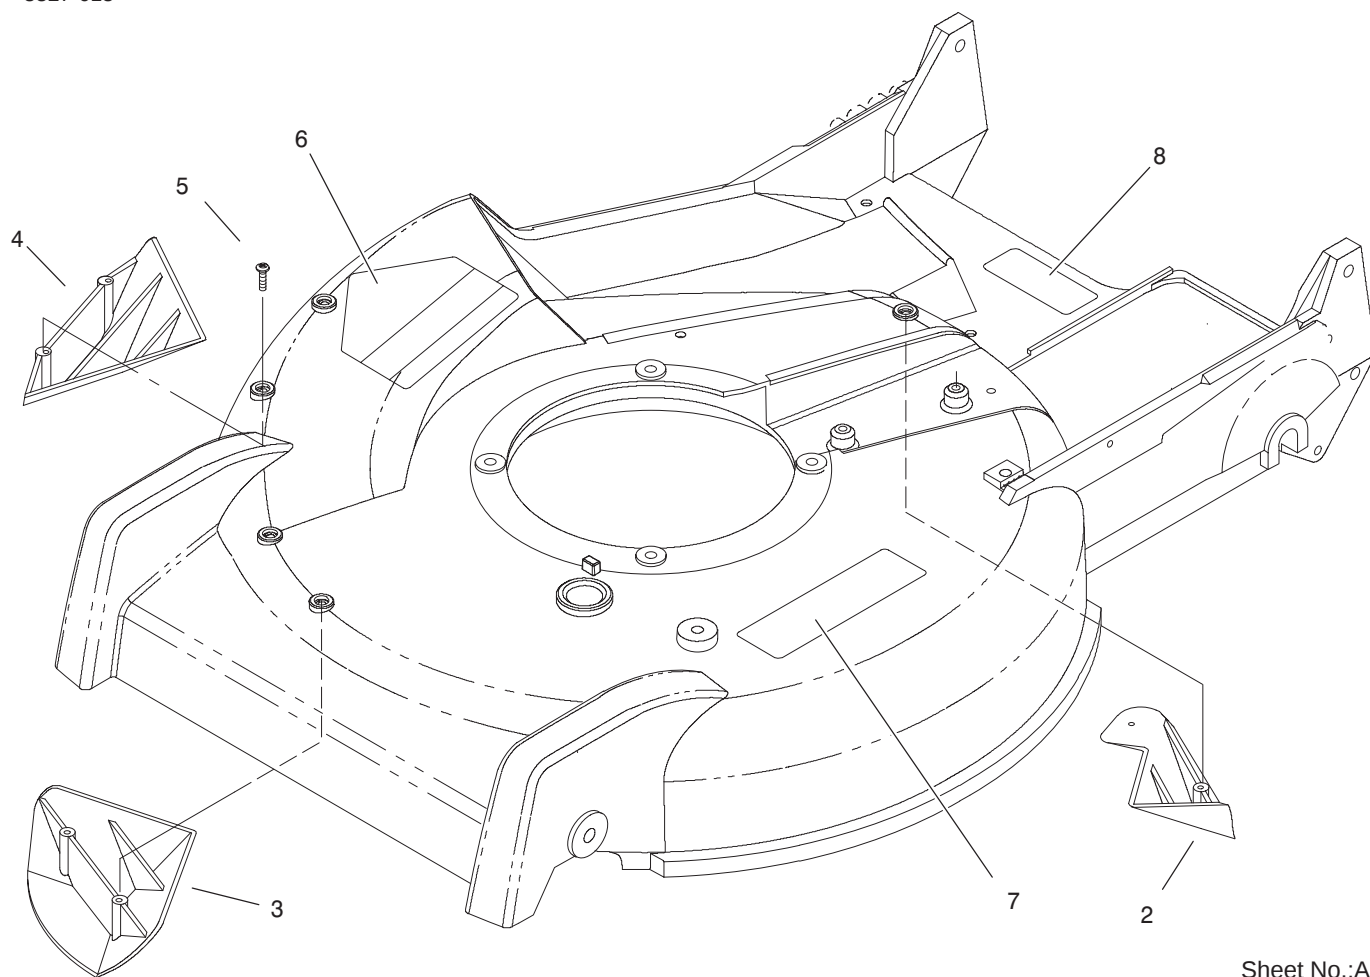 


Sheet No.:A1

Housing Assembly No. 98-7139

Ref. No.	Part No.	Qty.	Description
2	92-1750	1	Kicker-Rear
3	92-1720	1	Kicker-Front
4	92-1730	1	Kicker-RH
5	32144-1 11	6	Screw-PPH
6	39-5770	1	Decal-Danger
7	93-0248	1	Decal-W arning
8	92-1779	1	Decal-W arning

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 PROTOTYPE

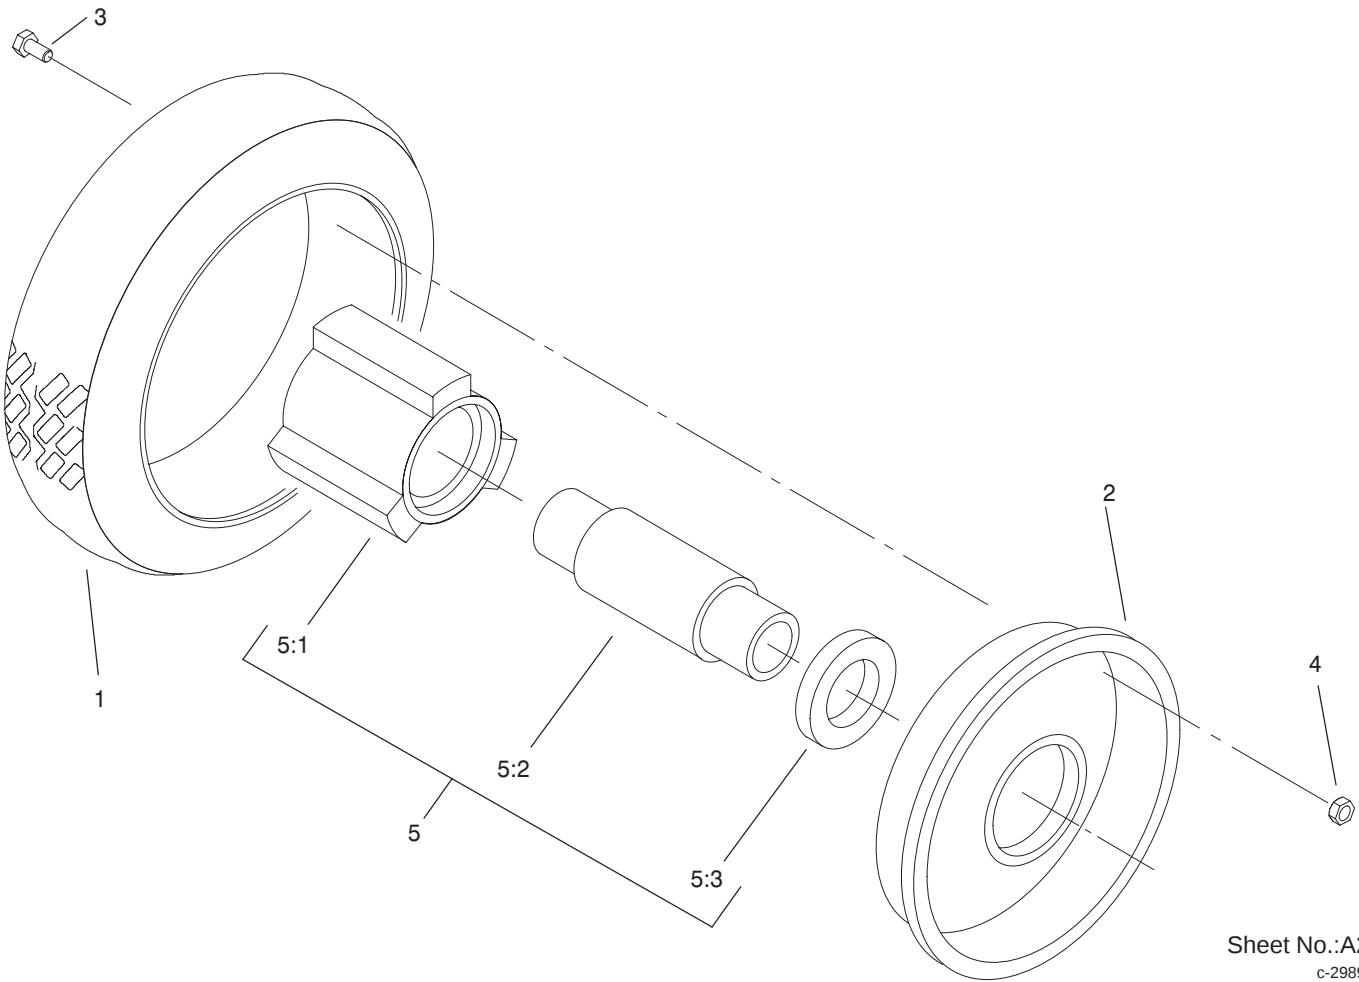


Sheet No.:A2
c-2989

Wheel and Tire Assembly No. 100-2870

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire				
2	53-7780-06	2	Plate-Wheel, Half				
3	321-2	4	Screw-HH				
4	3296-42	4	Nut-Lock, NI				
☆5		1	Hub & Bearing ASM				
5:1	52-2410	1	Hub-Bearing				
5:2	52-2440	1	Spacer-Bearing				
5:3	52-2450	2	Bearing-Wheel				

 ☆ Not serviced separately

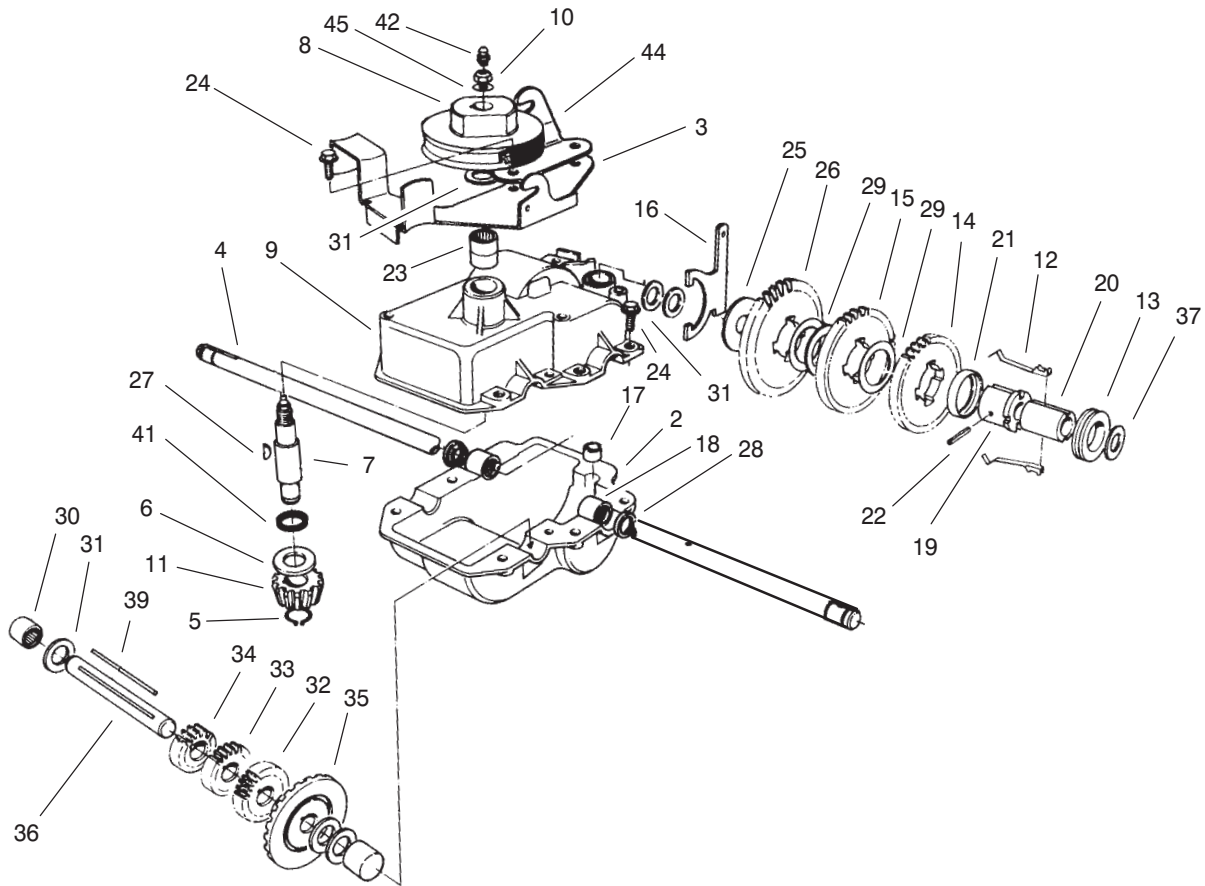


Sheet No.:A3

c-2990

Gear Case Assembly No. 74-1861

Ref. No.	Part No.	Qty.	Description
2	74-1920	1	Case-Gear , Lower
3	49-8461-03	1	Bracket-Guide, Belt
4	74-1890	1	Shaft-Output
5	32151-57	1	Ring-Retaining
6	47-2910	1	Washer-Thrust
7	68-8190	1	Shaft-Input
8	39-6740	1	Pulley
9	74-1880	1	Case-Gear , Upper
10	3296-5	1	Nut-Lock, NI
11	39-6660	1	Pinion-Bevel
12	29-9330	2	Key-Shift
13	29-9340	1	Collar-Shift
14	42-4740	1	Gear-38 Tooth
15	29-9271	1	Gear-42 Tooth
16	60-8870	1	Yoke-Shift
17	29-9570	1	Bushing-Yoke
18	47-6730	2	Seal-Oil
19	55-8010	1	Sleeve-Gear
20	39-6720	1	Sleeve
21	55-8020	1	Retainer-Key
22	3285-19	1	Pin-Groove
23	47-7270	2	Bearing
24	49-2040	6	Screw-Tapping
25	29-9690	1	Washer
26	46-3560	1	Gear
27	3257-1	2	Key-Woodruff


Ref. No.	Part No.	Qty.	Description
28	48-2060	2	Bearing-Roller
29	36-4770	3	Washer
30	252-103	2	Bearing-Closed
31	36-4792	4	Washer-Thrust
32	39-6650	1	Gear-18t
33	46-3550	1	Gear-14t
34	46-3540	1	Gear-12t
35	74-1760	1	Gear-Bevel
36	53-7950	1	Shaft-Intermediate
37	36-4780	3	Washer
39	39-7842	1	Key
41	47-7260	1	Seal
42	302-63	1	Zerk
44	74-1750-03	1	Brake-Engage, Traction
45	3256-45	1	Washer-Flat

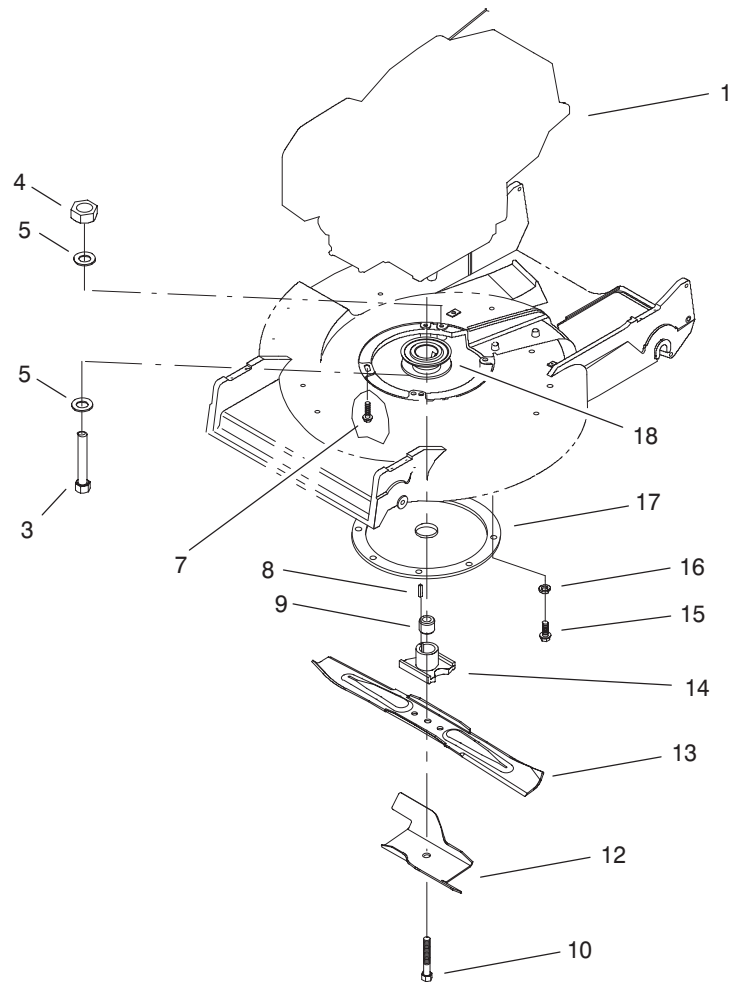 

Sheet No.:3

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	103-3380	1	Engine-Honda, 5.5hp				
3	322-10	1	Screw-HH				
4	3296-29	1	Nut-Lock, NI				
5	3256-23	2	Washer-Flat				
7	103-2678	3	Screw				
8	5-1077	1	Key-Square				
9	103-3795	1	Spacer-Retainer , Blade				
10	105-8579	1	Bolt-Blade, Sems				
12	92-1599-03	1	Stiffener-Blade				
13	14-9419	1	Blade				
14	52-2170	1	Retainer-Blade				
15	32144-70	3	Screw-HH				
16	3254-6	3	Washer-Lock, Internal				
17	65-5860	1	Protector-Crankshaft				
18	46-7910	1	Pulley-Driver				

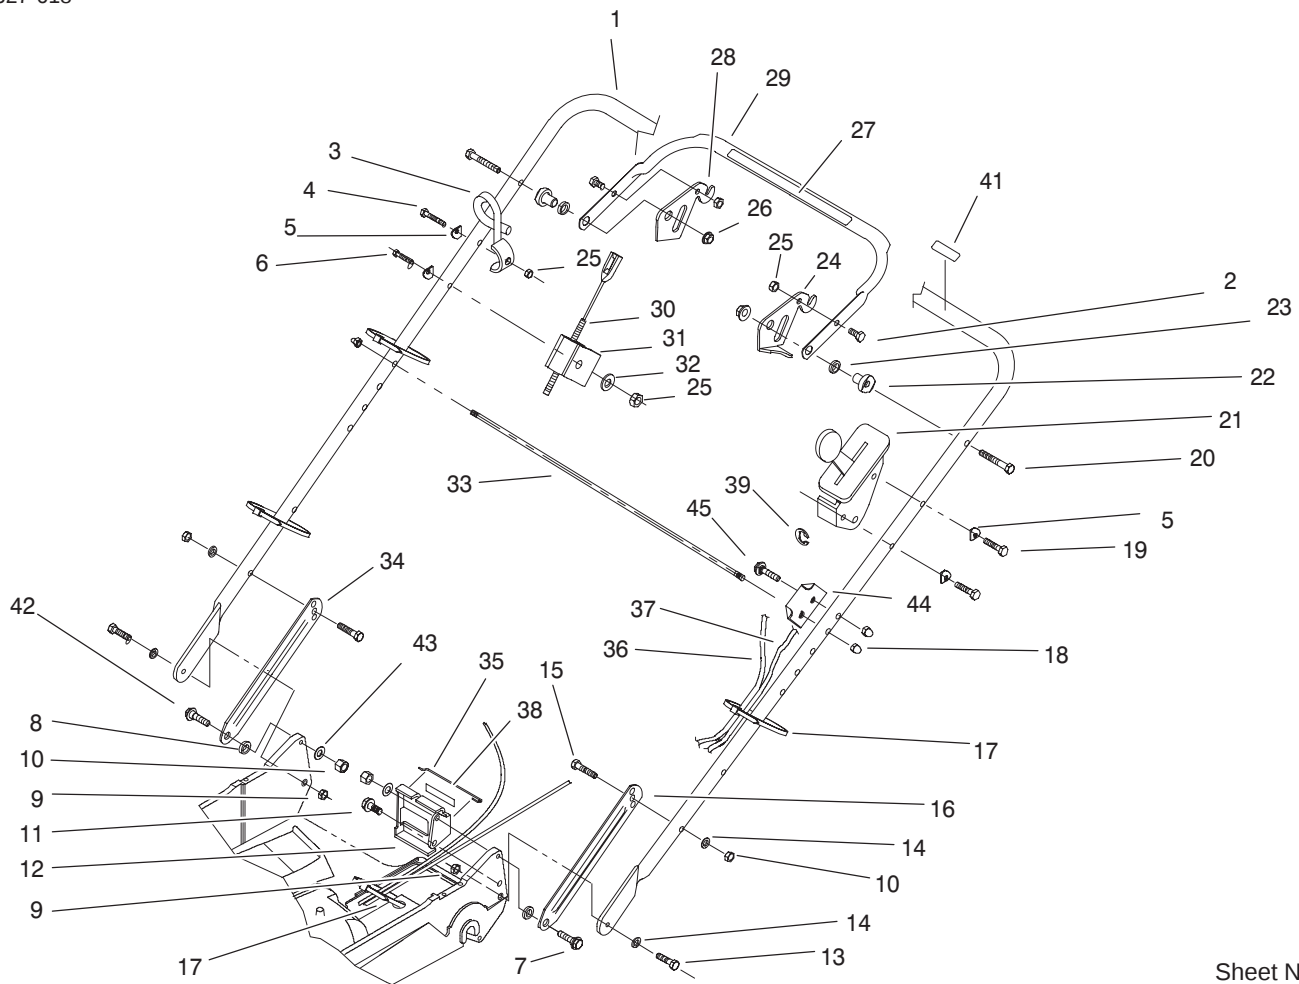 


Sheet No.:4

Handle and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2000-03	1	Handle
2	321-4	2	Screw-HH
3	46-8081	1	Guide-Rope
4	321-9	1	Screw-HH
5	3-7501	4	Washer
6	321-15	1	Screw-HH
7	27-7210	1	Screw-Shoulder
8	3-3287	2	Spacer-Latch, Handle
9	3296-47	2	Nut-Lock, NI
10	3296-29	4	Nut-Lock, NI
11	32144-70	1	Screw-HH
12	74-1741	1	Bracket-Adjustment, Traction
13	322-6	2	Screw-HH
14	3290-456	4	Washer-Belleville
15	322-7	2	Screw-HH
16	100-3298-03	1	Latch-Handle, LH
17	3290-378	5	Tie-Cable
18	32111-7	3	Nut-Cap
19	321-13	2	Screw-HH
20	322-11	2	Screw-HH
21	103-3385	1	Control-Throttle
22	49-1630	2	Spacer-Support
23	256-276	2	Spacer-Nylon
24	66-5350	1	Lever-Control
25	3296-42	4	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
26	3296-58	2	Nut-Lock NI
27	106-0690	1	Decal-Traction
28	77-5270	1	Lever-Control
29	61-8270-03	1	Bar-Control
30	103-2683	1	Cable-Brake, Sp
31	46-6980	1	Support-Cable
32	3256-22	1	Washer-Flat
33	48-2810	1	Rod-Support, Bag
34	100-3297-03	1	Latch-Handle, RH
35	46-7030	1	Retainer-Cable
36	74-1791	1	Cable-Traction
37	70-1061	1	Cable-Throttle
38	74-1970	1	Decal-Position, Gear
39	32151-86	2	E-Ring
41	98-4387	1	Decal-Protection, Ear
42	27-7211	1	Screw-Shoulder
43	3256-23	2	Washer-Flat
44	104-1326	1	Plate-Aligning, Bag
45	3229-3	1	Screw-CARR

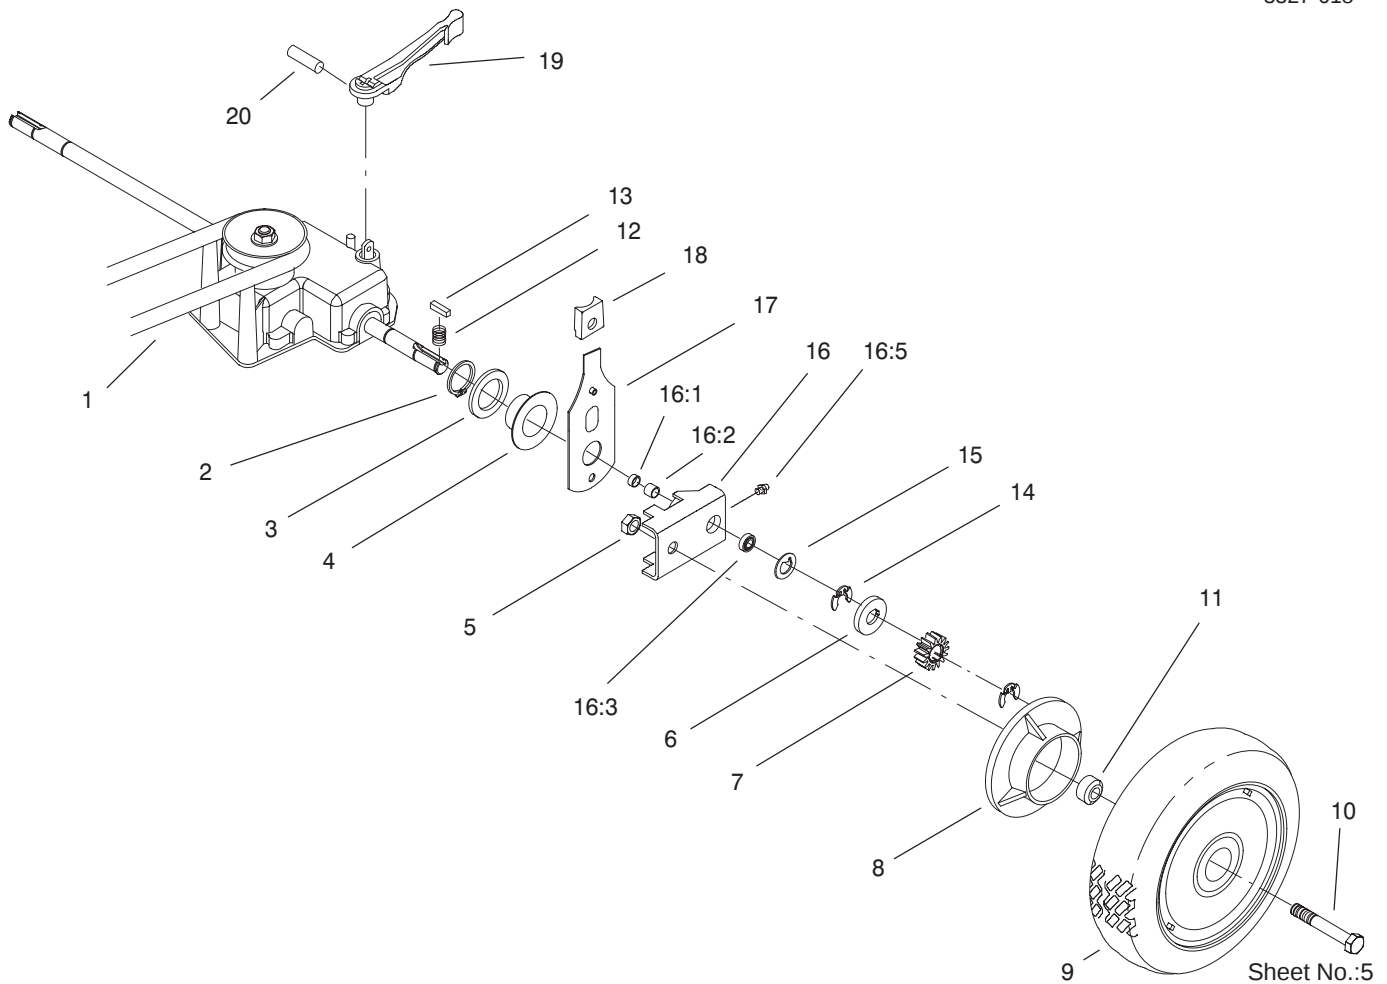 

Rear Axle Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	36-8070	1	V-Belt				
2	32151-36	2	Ring-Retaining				
3	74-1810	2	Washer				
4	48-2170	2	Cap-End				
5	32152-2	2	Nut-Hex				
6	62-3830	2	Washer-Thrust, Outer				
7	39-9160	2	Gear-Pinion				
8	74-1640	2	Cover-Wheel				
9	100-2860	2	Wheel And Tire ASM				
10	323-13	2	Screw-HH				
11	74-1650	2	Spacer-Cover, Wheel				
12	39-9650	2	Spring-Compression				
13	612066	2	Key				
14	32151-68	4	Ring-Retaining				
15	49-7700	2	Washer-Thrust, Outer				
16	74-1851	2	Pivot Arm ASM				
16:1	47-6730	1	Seal-Oil				
16:2	48-2060	1	Bearing-Roller				
16:3	52-2450	1	Bearing-Wheel				
16:5	92-6316	1	Zerk				
17	66-7561	2	Rear Spring Arm ASM				
18	25-7740	2	Knob-Arm				
19	74-1960	1	Lever-Shift				
20	32121-99	1	Pin-Coil				

Wheel and Tire Assembly No. 100-2860

Ref. No.	Part No.	Qty.	Description
1	53-7740	1	Tire
2	53-7780-06	1	Plate-Wheel, Half
3	321-2	4	Screw-HH
4	3296-42	4	Nut-Lock, NI
5	92-4957-06	1	Wheel Half/Gear ASM
☆6		1	Hub & Bearing ASM
6:1	52-2410	1	Hub-Bearing
6:2	52-2440	1	Spacer-Bearing
6:3	52-2450	2	Bearing-Wheel

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 
10

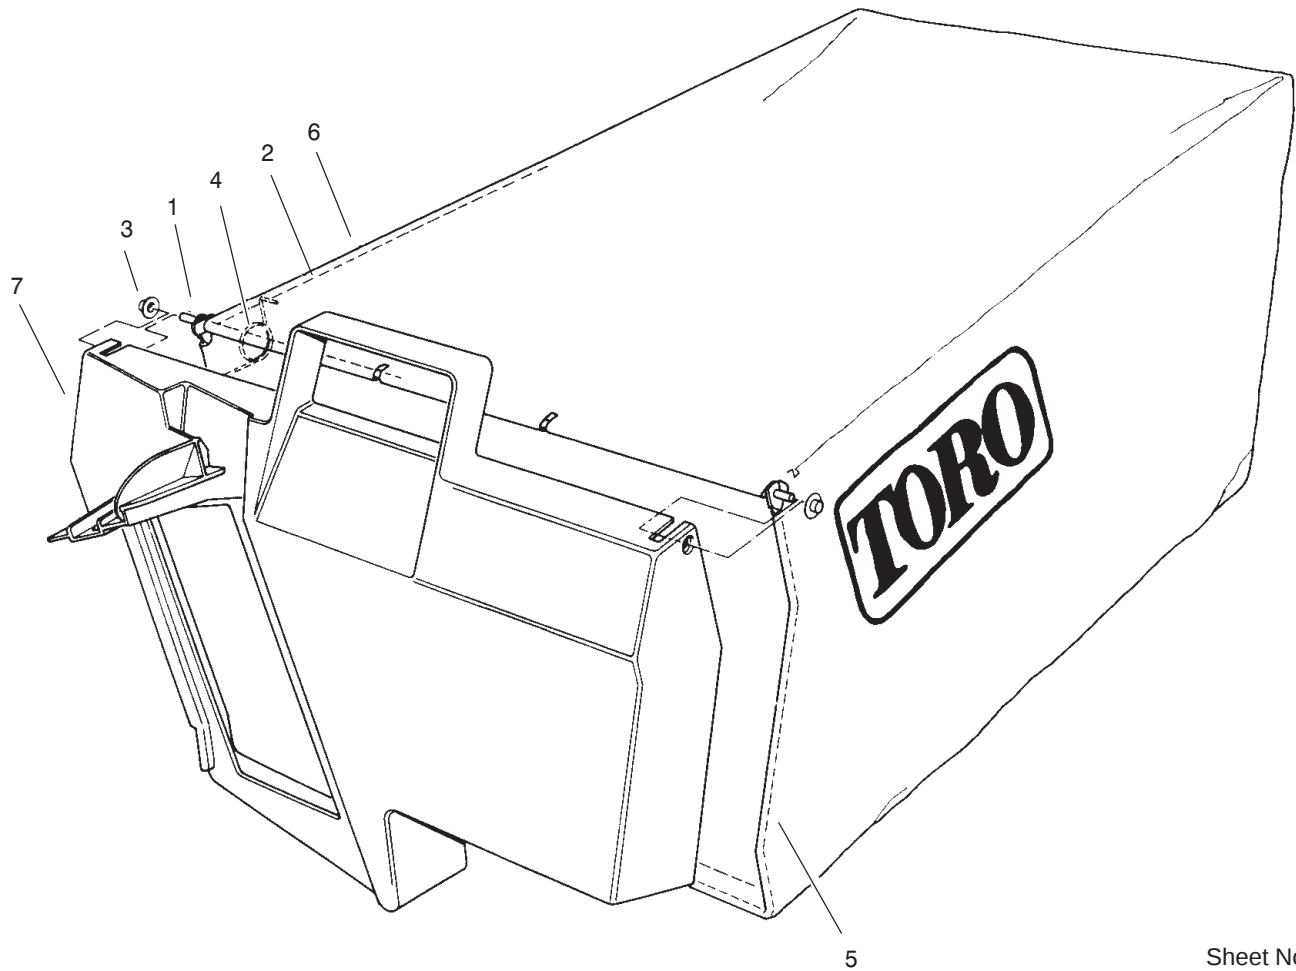

Sheet No.:A5

Grass Bag Assembly No. 99-2535


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	33-4820	1	Hinge-Door , Bag				
2	42-4030	1	Frame-Bag, Upper				
3	3290-422	2	Nut-Push				
4	36-6910	2	Spring				
5	42-4020	1	Frame-Bag				
6	98-9225	1	Bag-Grass				
7	48-2840	1	Door-Bag, Grass				

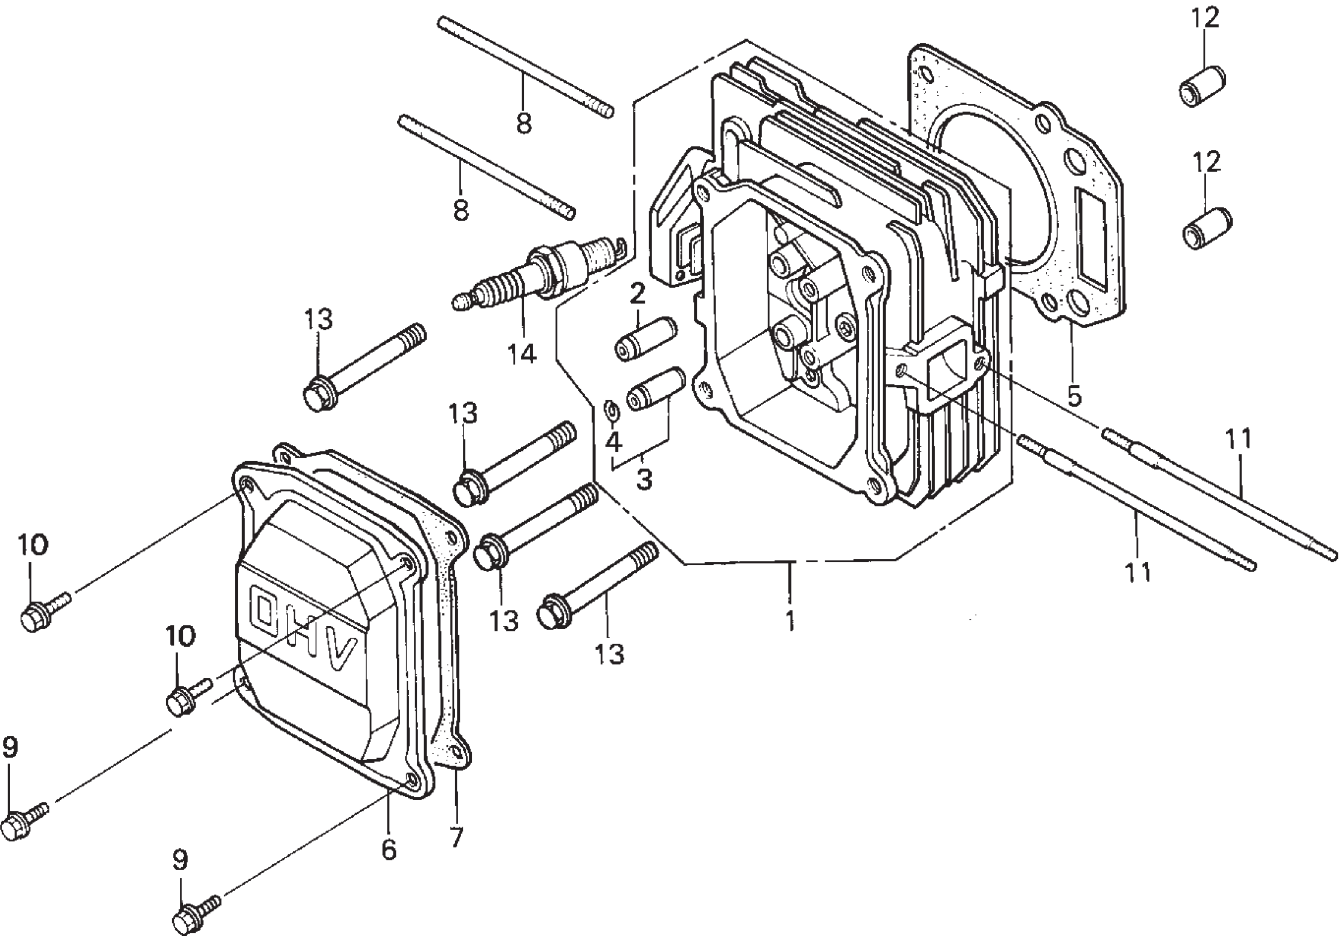 

Cylinder Head Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12200-ZE7-010	1	Cylinder Head				(W16EPRU) (DENSO)
2	12204-ZE1-306	1	Guide, Valve (OS)				
3	12205-ZE1-315	1	Guide, EX. Valve (OS)	98079-56846	1	Spark Plug	
4	12216-ZE5-300	1	Clip, Valve Guide				(BPR6ES) (NGK)
5	12251-ZE7-000	1	Gasket, Cylinder Head	98079-56855	1	Spark Plug	
6	12311-ZG9-800	1	Cover, Head				(W20EPRU) (DENSO)
7	12391-ZE7-T00	1	Gasket, Cylinder Head Cover				
8	90048-ZC3-000	2	Bolt, Stud (6x85) (CT200)				
9	90013-883-000	2	Bolt, Flange (6x12) (CT200)				
10	90013-883-000	2	Blot, Flange (6x12) (CT200)				
11	90043-ZE6-000	2	Bolt, Stud (6x109)				
12	94301-10160	2	Pin A, Dowel (10x16)				
13	95701-08050-00	4	Bolt, Flange (8X50)				
14	98079-54846	1	Spark Plug (BPR4ES) (NGK)				
	98079-54855	1	Spark Plug (W14EPRU) (DENSO)				
	98079-55846	1	Spark Plug (BPR5ES) (NGK)				
	98079-55855	1	Spark Plug				

 Obtain Parts From Honda

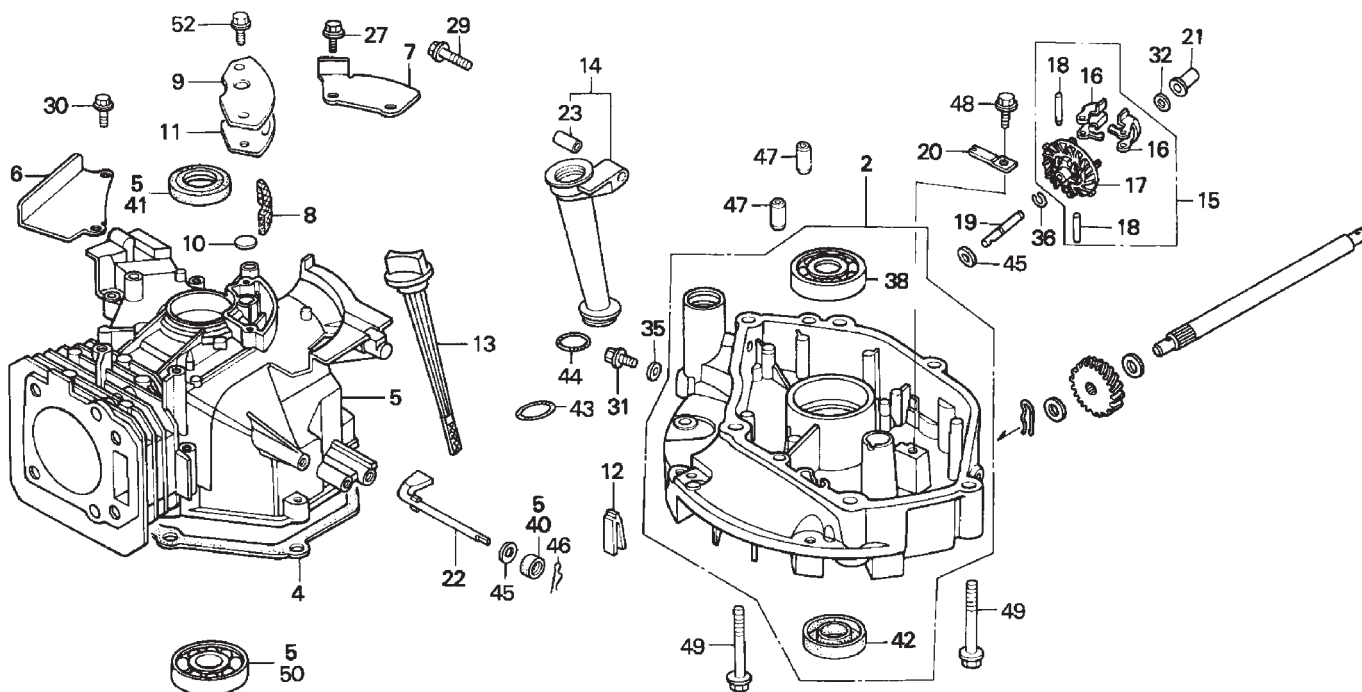


Cylinder Barrel Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
2	11300-ZE7-W00	1	Pan Assy., Oil (Push Type)
4	11381-ZE7-M10	1	Gasket, Oil Pan
5	12000-ZE7-405	1	Cylinder Assy.
6	12125-ZE7-000	1	Plate, Guide
7	12126-ZE7-W00	1	Plate A, Guide
8	12367-883-003	1	Filter, Breather
9	12370-ZE7-000	1	Cover, Breather
10	12372-ZE7-000	1	Valve, Breather
11	12373-ZE7-000	1	Gasket, Breather Cover
12	15355-ZE7-000	1	Rubber, Oil Return
13	15620-ZE6-810	1	Dipstick, Oil
14	15630-ZE6-810	1	Extension, Oil Filler (106MM)
15	16510-ZE6-000	1	Governor Assy.
16	16511-ZE1-000	2	Weight, Governor
17	16512-ZE6-000	2	Holder, Governor Weight
18	16513-ZE1-000	2	Pin, Governor Weight
19	16515-ZE6-010	1	Shaft, Governor Holder
20	16525-ZE6-010	1	Plate, Governor Shaft Holder
21	16531-ZE1-000	1	Slider, Governor

Ref. No.	Part No.	Qty.	Description
22	16541-ZE7-000	1	Shaft, Governor Arm
23	17240-ZE6-000	1	Collar, Extension
27	90013-883-000	2	Bolt, Flange (6X12) (CT200)
29	90017-883-000	1	Bolt, Flange (6X32)
30	90022-888-010	2	Bolt, Flange (6X20) (CT200)
31	90131-ZE1-000	1	Bolt, Drain Plug
32	90451-ZE1-000	1	Washer, Thrust (6MM)
35	90601-ZE1-000	1	Washer, Drain Plug (10.2MM)
36	30602-ZE1-000	1	Clip, Governor Holder
40	91231-891-003	1	Oil Seal (6X11X4)
41	91201-ZG9-U71	1	Oil Seal (25X38X7)
	91252-888-003	1	Oil Seal (25X38X7) (ARAI)
42	91252-894-004	1	Oil Seal (25.4X40X7)
43	91301-ZE9-003	1	O-Ring (22.5X2.2)
44	91301-805-000	1	O-Ring (26X2.7)
45	94101-06800	2	Washer, Plain (6MM)
46	94251-08000	1	Pin, Lock (8MM)
47	94301-08140	2	Pin A, Dowel (8X14)
48	95701-06012-08	1	Bolt, Flange (6X12)
49	95701-08050-00	6	Bolt, Flange (8X50)

 Obtain Parts From Honda

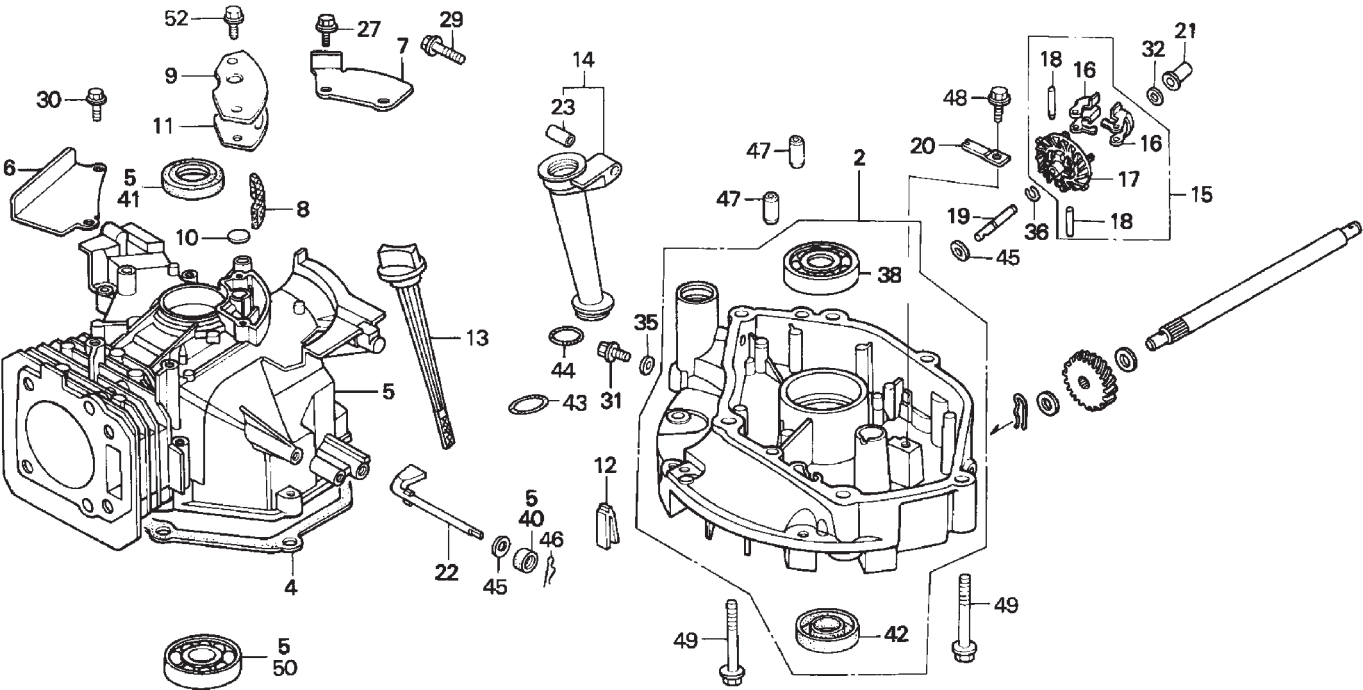


Cylinder Barrel Assembly (Continued)
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
50	96100-62050-00	1	Bearing, Radial Ball (6025)
52	90014-952-000	2	Bolt, Flange (6X14)

Ref. No.	Part No.	Qty.	Description

 
Obtain Parts From Honda

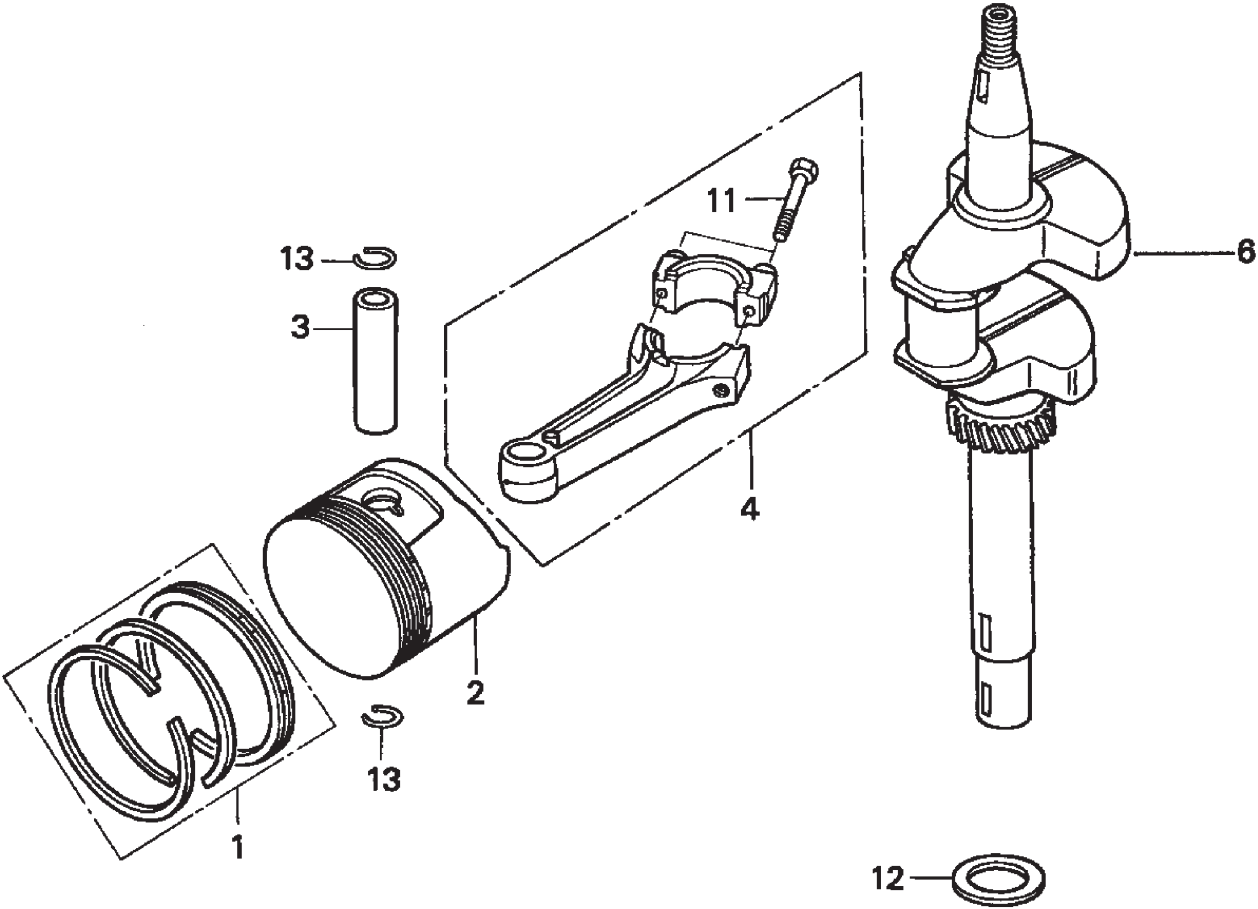

Crankshaft and Piston Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	13010-ZF1-023	1	Ring Set, Piston (STD)				
	13011-ZF1-023	1	Ring Set, Piston (OS 0.25)				
	13012-ZF1-023	1	Ring Set, Piston (OS 0.50)				
	13013-ZF1-023	1	Ring Set, Piston (0.75)				
2	13101-ZE7-010	1	Piston (STD)				
	13102-ZE7-010	1	Piston (OS 0.25)				
	13103-ZE7-010	1	Piston (OS 0.50)				
	13104-ZE7-010	1	Piston (0.75)				
3	13111-ZE1-000	1	Pin, Piston				
4	13200-ZE7-000	1	Rod Assy., Connecting				
	13200-ZE7-305	1	Ros Assy., Connecting (US 0.25)				
6	13310-ZE7-010	1	Crankshaft (N1 TYPE)				
11	90001-ZE1-000	2	Bolt, Connecting Rod				
12	90401-ZE7-W00	1	Washer, Thrust (25.6MM)				
13	90551-ZE1-000	2	Clip, Piston Pin (18MM)				

 Obtain Parts From Honda

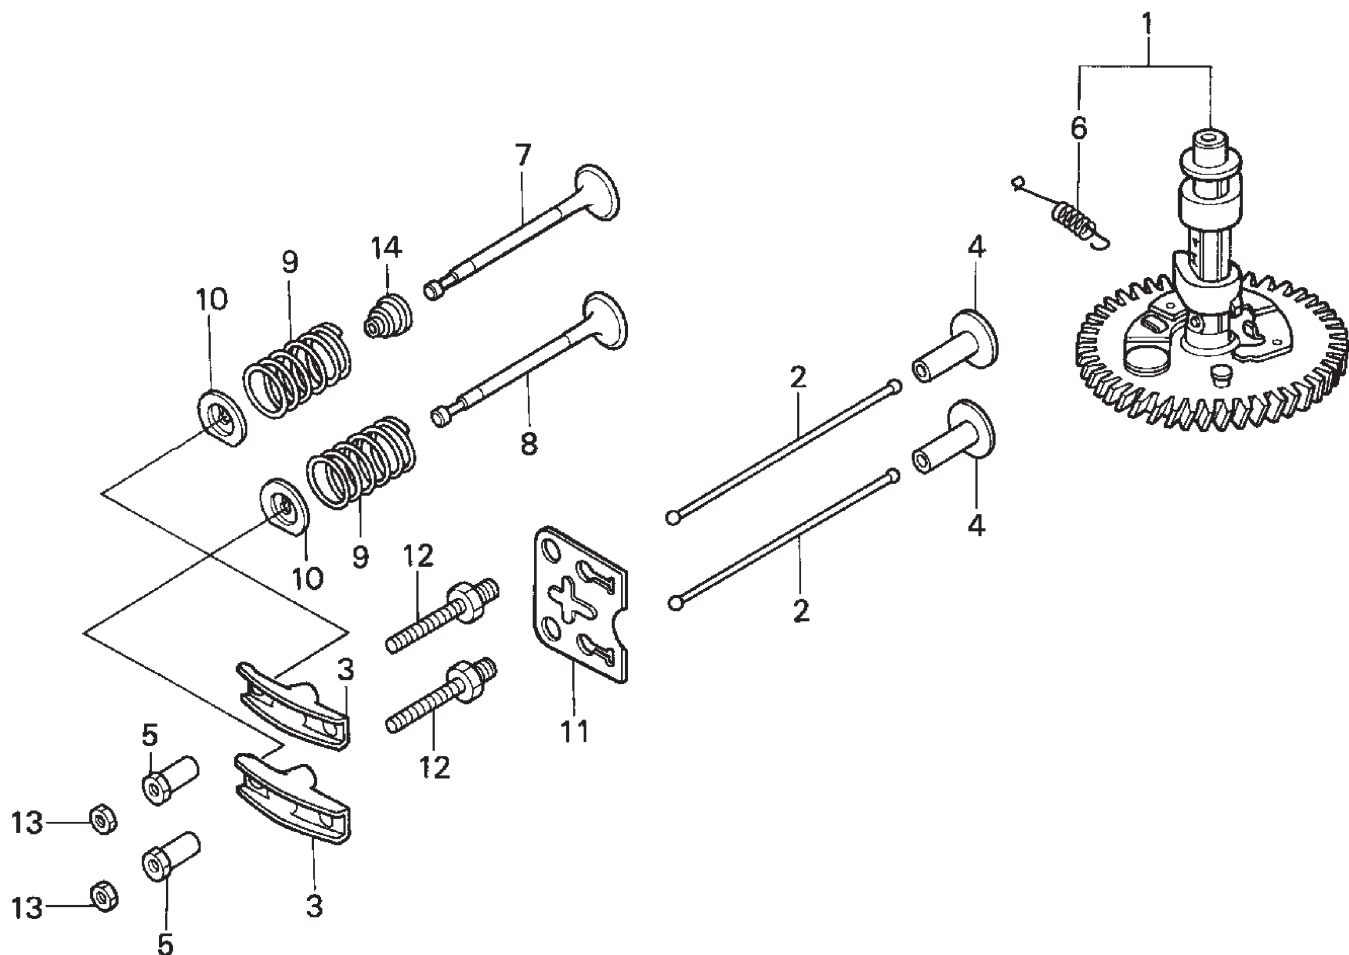


Camshaft Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
1	14100-ZE7-000	1	Camshaft Assy.
2	144100-ZE1-010	2	Rod, Push
3	14431-ZE1-000	2	Arm, Valve Rocker
4	14441-ZE1-010	2	Lifter, Valve
5	14451-ZE1-013	2	Pivot, Rocker Arm
6	14568-ZE1-000	1	Spring, Weight Return
7	14711-ZF1-000	1	Valve, In.
8	14721-ZE7-000	1	Valve, Ex.
9	14751-ZE1-000	2	Spring, Valve
10	14771-ZE1-000	2	Retainer, In. Valve Spring
11	14791-ZE1-010	1	Plate, Push Rod Guide
12	90012-ZE0-010	2	Bolt, Pivot (8MM)
13	90206-ZE1-000	2	Nut, Pivot ADJ
14	12209-ZE6-003	1	Seal, Valve Stem

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

 
Obtain Parts From Honda

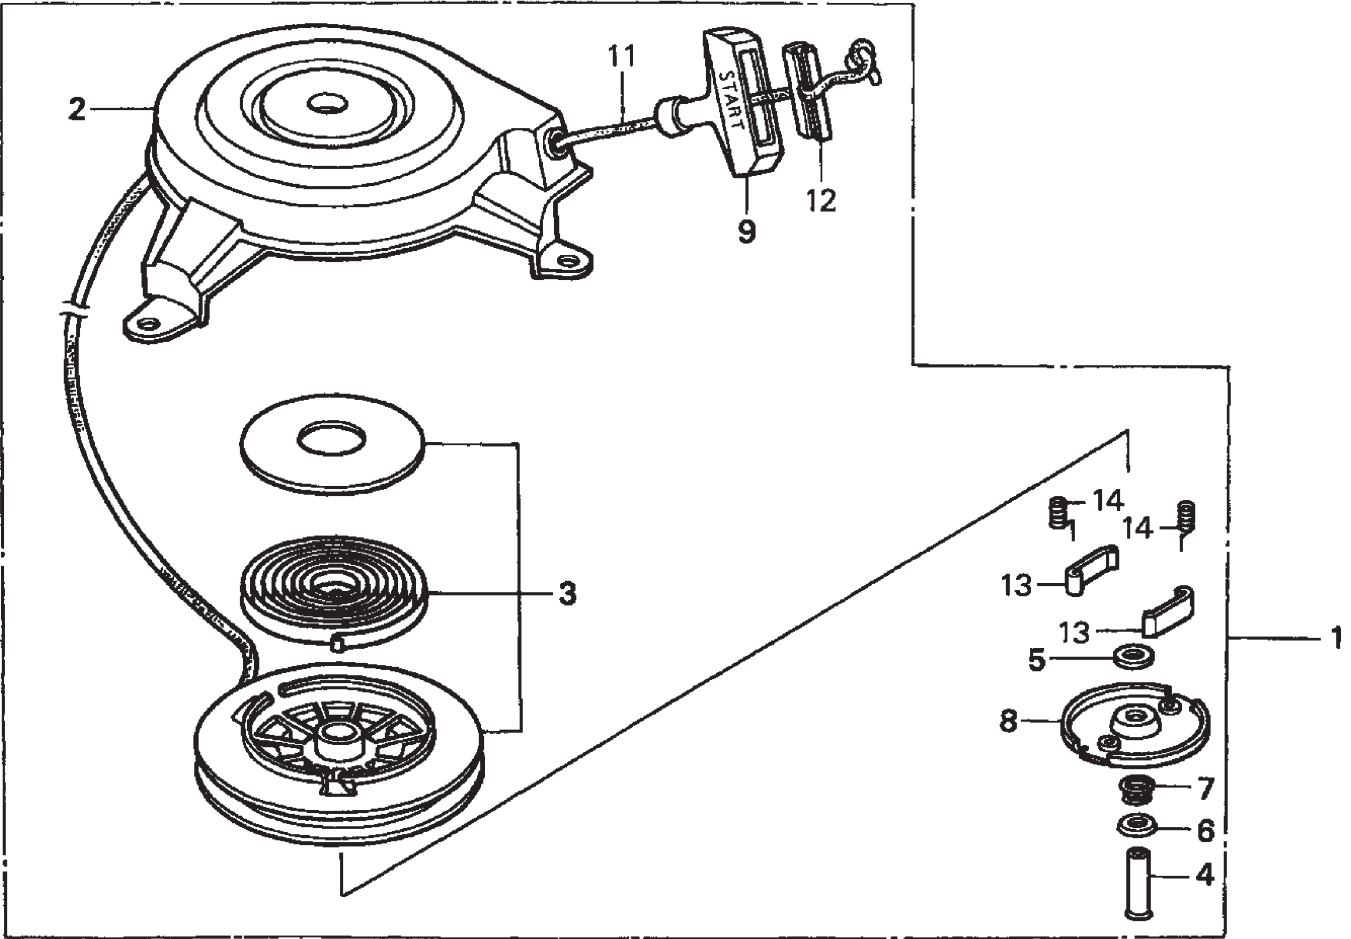

**Recoil Starter Assembly
Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	28400-ZG9-803	1	Starter Assy., Recoil				
2	28402-ZG9-802	1	Housing Assy.				
3	28415-ZG9-802	1	Pulley and Spring Assy.				
4	28419-ZG9-802	1	Pin, Center				
5	28431-ZG9-802	1	Plate A, Friction				
6	28432-ZG9-802	1	Plate B, Friction				
7	28441-ZG9-802	1	Spring, Friction				
8	28444-ZG9-802	1	Retainer				
9	28461-ZE6-T02	1	Handle				
11	28462-ZG9-802	1	Rope, Recoil Starter (#4X85")				
12	28463-ZE6-T02	1	Handle, Reinforcement				
13	28485-ZE6-T02	2	Ratchet, Starter				
14	28486-ZE6-T02	2	Spring, Dog				

 
Obtain Parts From Honda

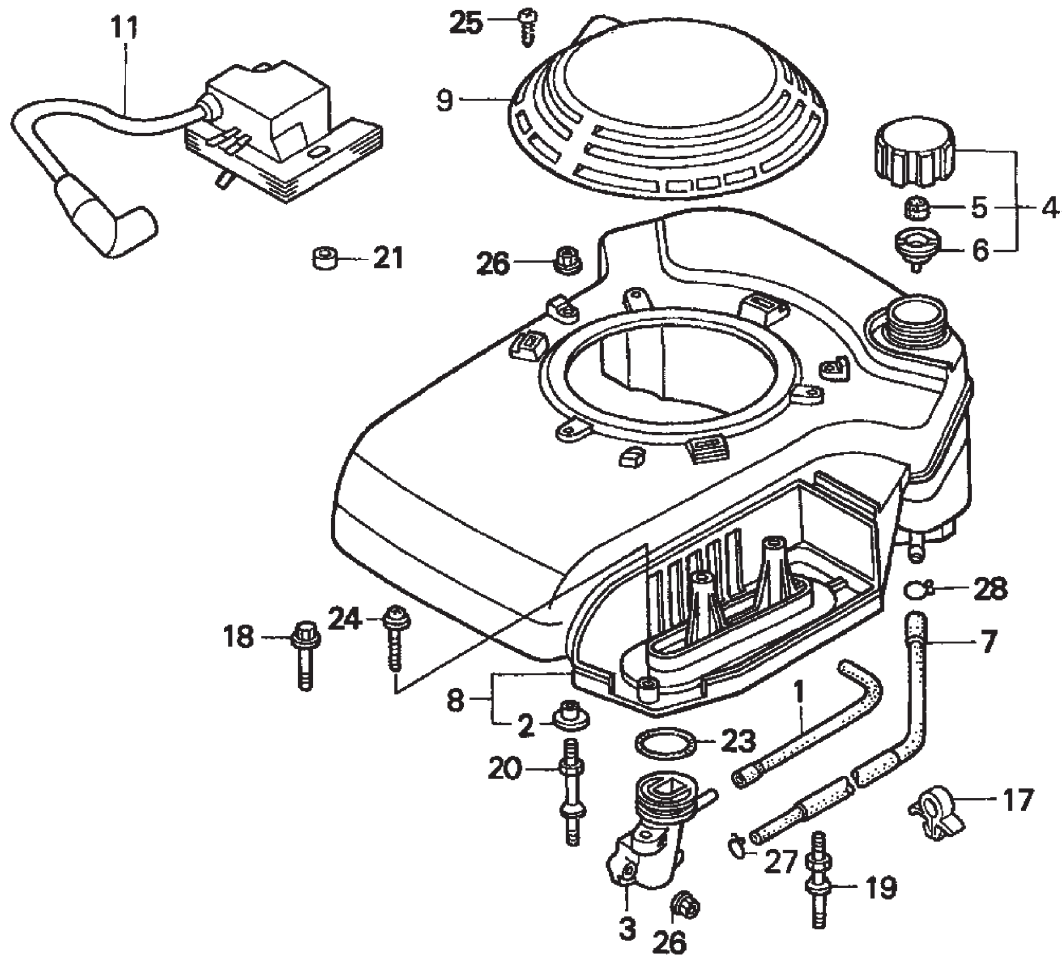

Fan Cover Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	15721-ZE7-000	1	Tube, Breather	23	91301-ZG9-800	1	O-Ring (33.3X3.5)
2	17216-PE2-003	3	Collar, Air Cleaner	24	93891-06035-10	1	Screw-Washer (6X35)
3	17410-ZE7-W00	1	Elbow, Air Cleaner	25	93913-24580	1	Screw, Tapping (4X20)
4	17620-ZE7-000	1	Cap Assy., Fuel Tank	26	94050-06000	5	Nut, Flange (6MM)
5	17622-888-010	1	Sponge, Fuel Cap	27	95002-02080	1	Clip, Tube (B8)
6	17624-ZE7-000	1	Gasket, Fuel Cap	28	95002-02100	1	Clip, Tube (B10)
7	17700-ZE7-W00	1	Tube Assy., Fuel Tank				(engine serial number up to 6149216)
8	19610-ZE7-W1 1ZA	1	Cover, Fan *NH* (Brake)(Black)		95002-50000	1	Clip, Tube (C9)
	19610-ZE7-W1 1ZB	1	Cover, Fan *R8* (Brake) (Bright Red)				(engine serial number from 6149217)
9	19615-ZG9-801ZA	1	Hood, Fan Cover *NH1* (Black)				
	19615-ZG9-801ZB	1	Hood, Fan Cover *R8* (Bright Red)				
11	30500-ZG9-801	1	Coil Assy., Ignition				
16	36103-ZE1-000	1	Holder, Stop Switch Wire				
17	46392-SC2-003	1	Clamp, Brake Pipe				
18	90015-883-000	1	Bolt, Flange (6X28)				
19	90041-ZE7-W10	2	Bolt, Stud (Brake)				
20	90042-ZE7-W00	1	Bolt, Stud (IGN COIL)				
21	90402-ZE7-W00	2	Collar, Special				

 
Obtain Parts From Honda

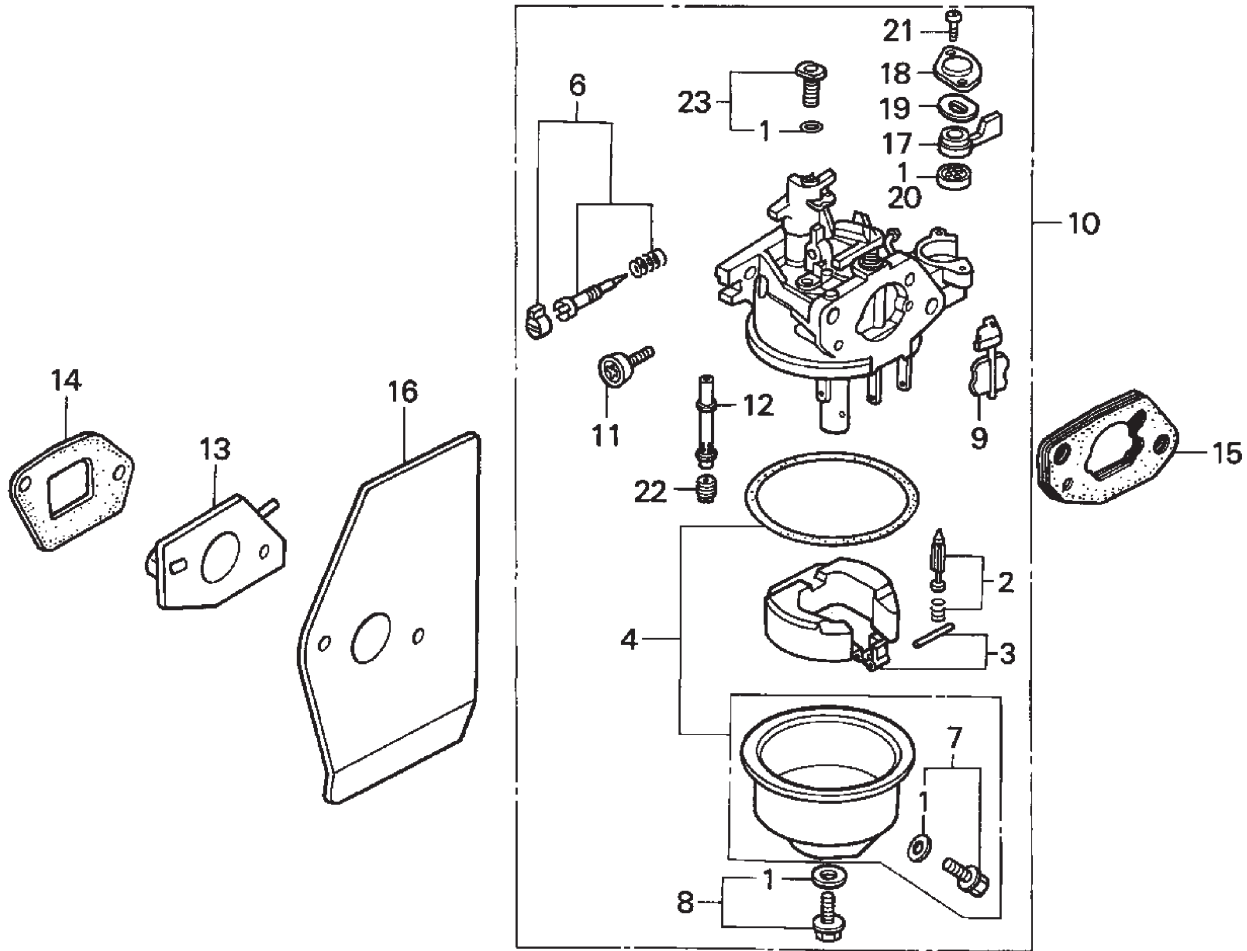

Carburetor Assembly Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	16010-ZE0-025	1	Gasket, Set		16953-ZE1-812	1	Lever, Valve (engine serial number from BE66C B)
2	16011-ZE0-005	1	Valve Set, Float	18	16954-ZE1-81 1	1	Plate, Lever Setting (engine serial number up to BE66C A)
3	16013-ZE0-005	1	Float Set		16954-ZE1-812	1	Plate, Lever Setting (engine serial number from BE66C B)
4	16015-ZE0-831	1	Chamber Set, Float	19	16956-ZE1-81 1	1	Spring, Valve Lever
6	16016-ZH7-W01	1	Screw Set	20	16957-ZE1-812	1	Gasket, Valve
7	16024-ZE1-81 1	1	Screw Set, Drain	21	93500-03006	2	Screw, Pan (3X6) (engine serial number from BE66C B)
8	16028-ZE0-005	1	Screw Set B		93500-03008	2	Screw, Pan (3X8) (engine serial number up to BE66C A)
9	16045-ZE7-005	1	Choke Set	22	99101-ZH8-0600	1	Jet, Main (#60)
10	16100-ZE7-W21	1	Carburetor Assy. (BE66C B)		99101-ZH8-0620	1	Jet, Main (#62)
11	16124-ZE0-005	1	Screw, Throttle Stop		99101-ZH8-0650	1	Jet, Main (#65)
12	16166-ZE7-W10	1	Nozzle, Main	23	99204-ZE0-0350	1	Jet Set, Pilot (#35)
13	16211-ZE7-000	1	Insulator, Carburetor				
14	16212-ZE7-M10	1	Gasket, Insulator				
15	16220-ZE6-010	1	Spacer, Carburetor				
16	16221-ZE7-M1 1	1	Gasket, Carburetor				
17	16953-ZE1-406	1	Lever, Valve (engine serial number up to BE66C A)				
	16953-ZE1-81 1	1	Lever, Valve (engine serial number up to BE66C A)				

 
Obtain Parts From Honda

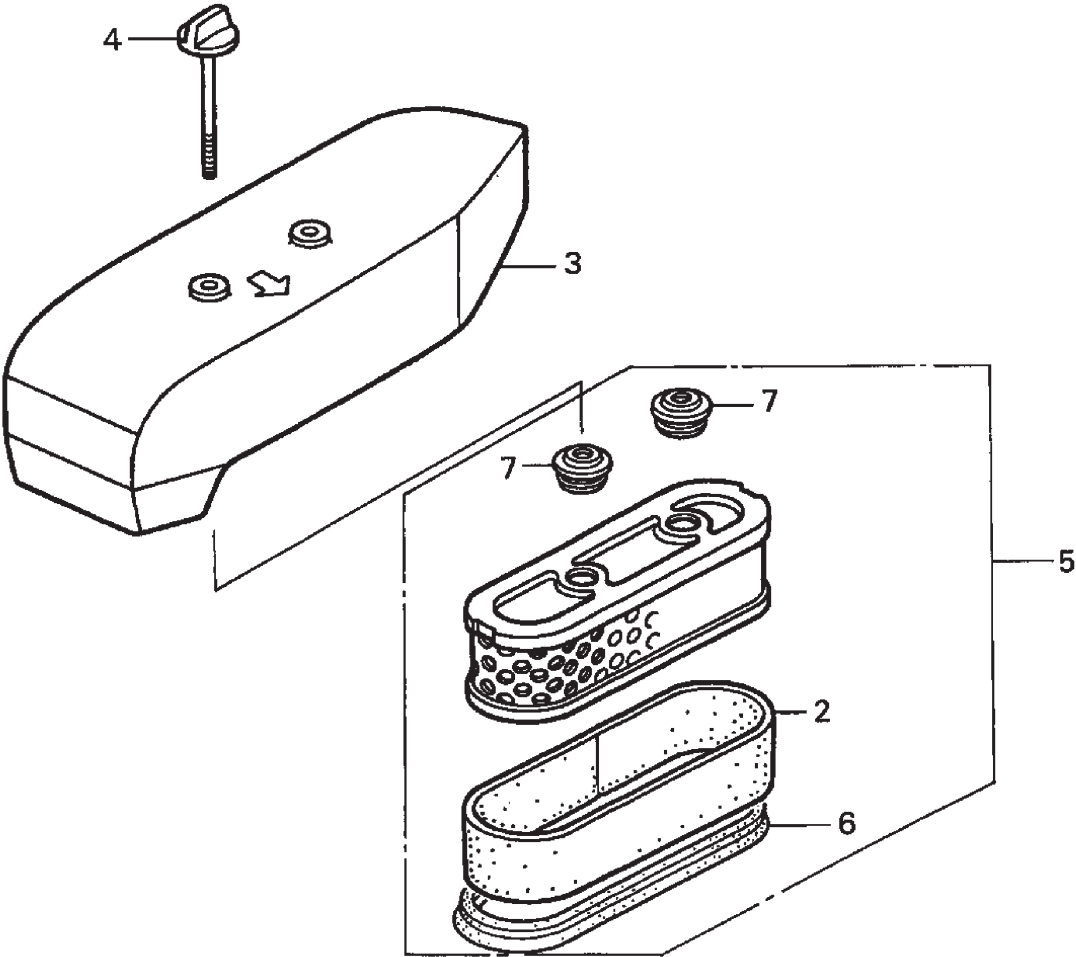

**Air Cleaner Assembly
Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	17218-ZE7-W02	1	Filter (Outer)				
3	17231-ZE7-W00ZA	1	Cover, Air Cleaner *NH1* (Black)				
4	90004-ZE7-W00	2	Bolt, Air Cleaner (6X73)				
5	17211-ZE7-W03	1	Element, Air Cleaner (TOUYOU)				
6	17217-ZE7-W00	1	Gasket, Element				
7	17232-ZE7-W00	2	Grommet, Air Cleaner				

 
Obtain Parts From Honda

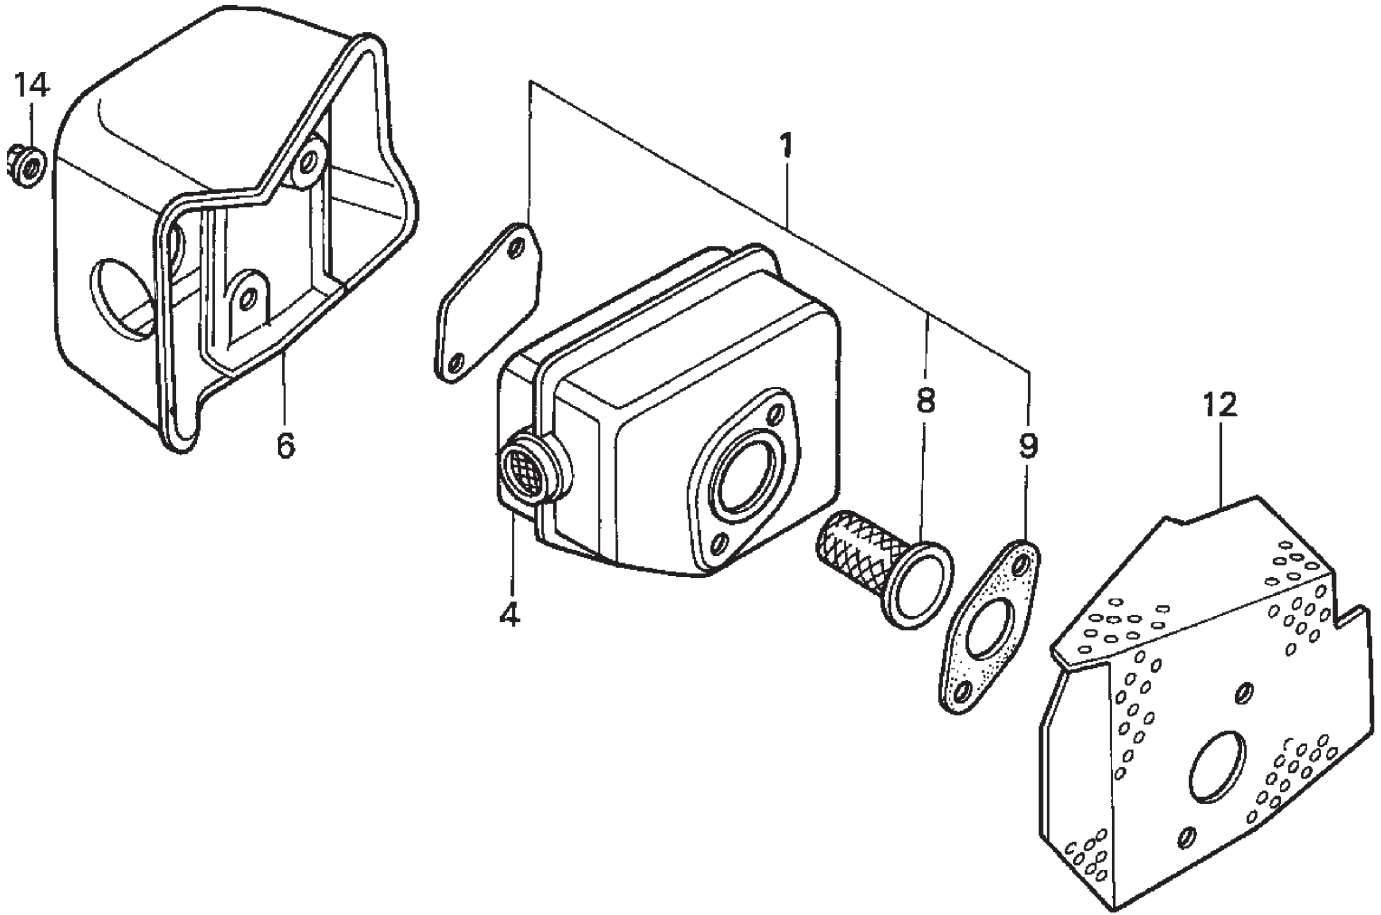

Muffler Assembly
Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	06180-ZE6-820	1	Arrester, Spark				
4	18310-ZG9-J01	1	Muffler				
6	18320-ZG9-M01	1	Protector, Muffler				
8	06180-888-505	1	Arrester Kit, Spark				
	06180-888-810	1	Arrester Kit, Spark				
9	18381-ZE6-820	1	Gasket, Muffler				
12	18381-ZG9-M00	1	Gasket, Muffler				
14	90343-ZE6-000	2	Nut, Self-Lock (6MM)				

 
Obtain Parts From Honda

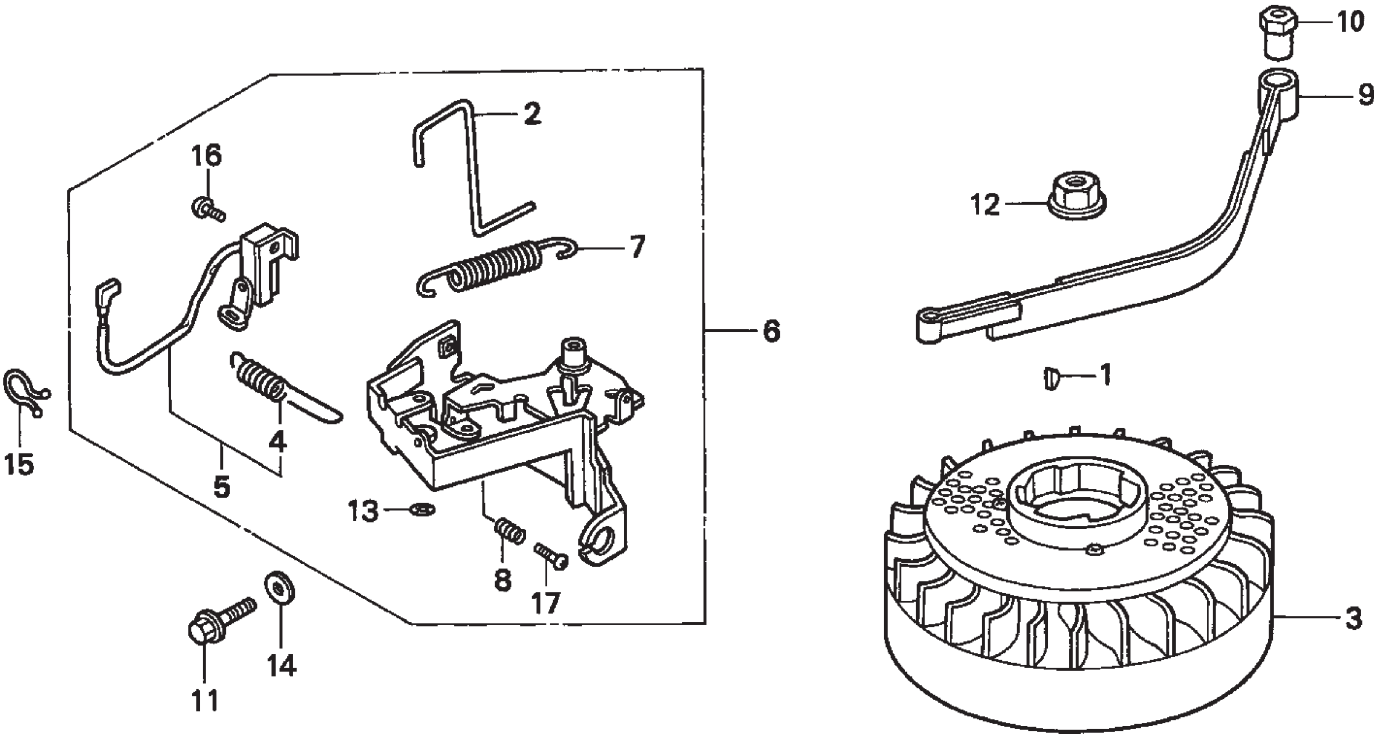

**Flywheel Assembly
Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	13331-357-000	1	Key, Special Woodruff (25X18)				
2	16566-ZE7-W00	1	Rod, Governor Arm Return				
3	31105-ZE7-W00	1	Flywheel Assy.				
4	35129-ZG9-800	1	Spring, Switch Control				
5	36100-ZE7-W01	1	Switch Assy., Engine Stop				
6	75101-ZE7-W00	1	Lever Assy., Brake				
7	75113-ZG9-800	1	Spring, Brake Lever				
8	75114-ZG9-800	1	Spring, Brake Adjusting				
9	75120-ZG9-305	1	Brake				
10	75123-ZG9-800	1	Collar, Brake Shaft				
11	90014-952-000	1	Bolt, Flange (6X14)				
12	90201-878-003	1	Nut, Special (14MM)				
13	90310-ZB7-701	1	Nut, Push (2.6)				
14	90461-357-000	1	Washer, Sealing (6.5X12)				
15	90630-ZE7-W01	1	Clip, Purse Lock				
16	93500-04008-0A	1	Screw, Pan (4X8)				
17	93500-05012-0A	1	Screw, Pan (5X12)				

 
Obtain Parts From Honda

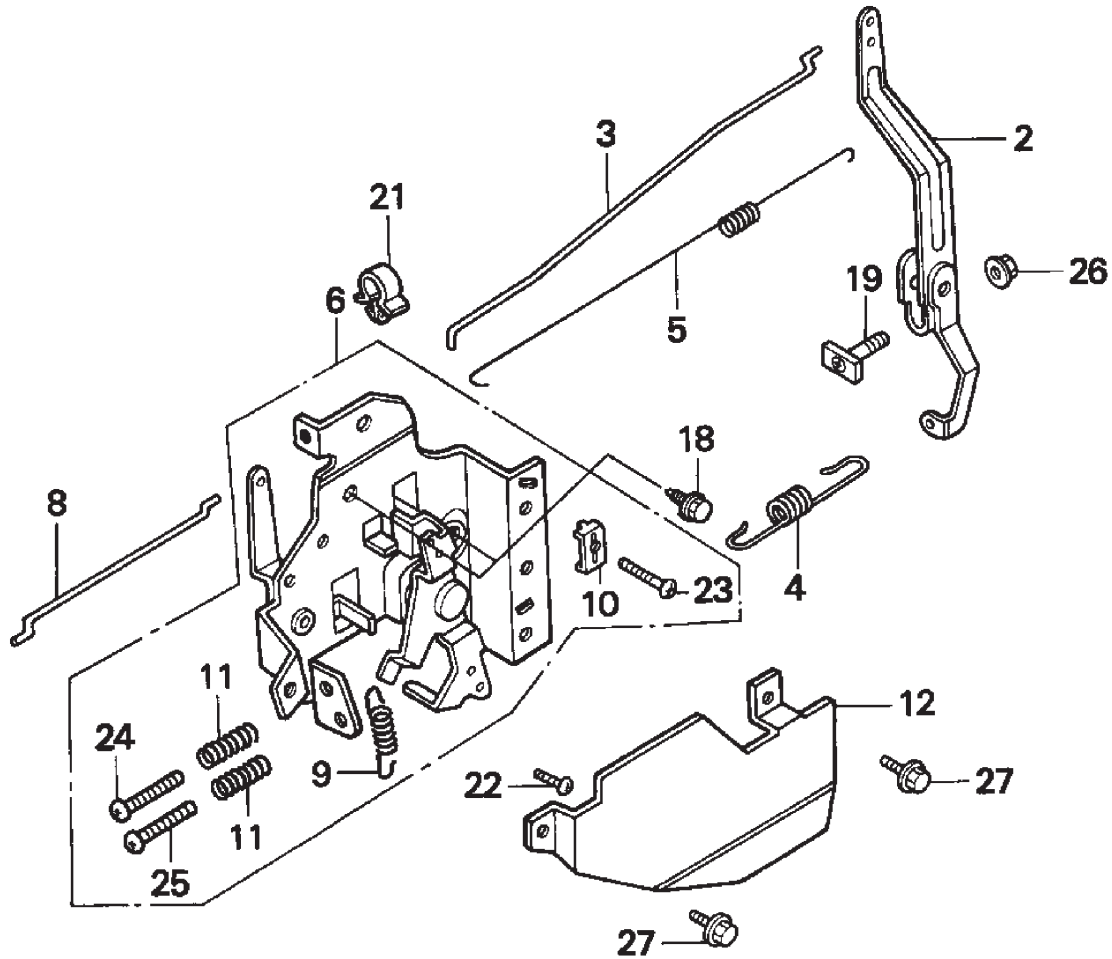

Control Assembly **Honda GXV160K1 A12**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	16551-ZE7-000	1	Arm, Governor				
3	16555-ZE7-000	1	Rod, Governor				
4	16561-ZE7-020	1	Spring, Governor (STD)				
5	16562-ZE6-000	1	Spring, Throttle Return				
6	16570-ZE7-020	1	Control Assy.				
8	16573-ZE7-000	1	Rod, Choke				
9	16576-ZE7-300	1	Spring, Lever				
10	16576-891-000	1	Holder, Cable				
11	16584-883-300	2	Spring, Control Adjusting				
12	16585-ZE7-000	1	Protector, Control				
18	90013-883-000	2	Bolt, Flange (6X12) (CT200)				
19	90015-ZE5-010	1	Bolt, Governor Arm				
21	90659-680-013	1	Clip, Wire Harness				
22	93500-04008-0A	1	Screw, Pan (4X8)				
23	93500-05016-0A	1	Screw, Pan (5X16)				
24	93500-05020-0A	1	Screw, Pan (5X20)				
25	93500-05028-0A	1	Screw, Pan (5X28)				
26	94050-06000	1	Nut, Flange (6MM)				
27	95701-06010-00	1	Bolt, Flange (6X10)				

 Obtain Parts From Honda

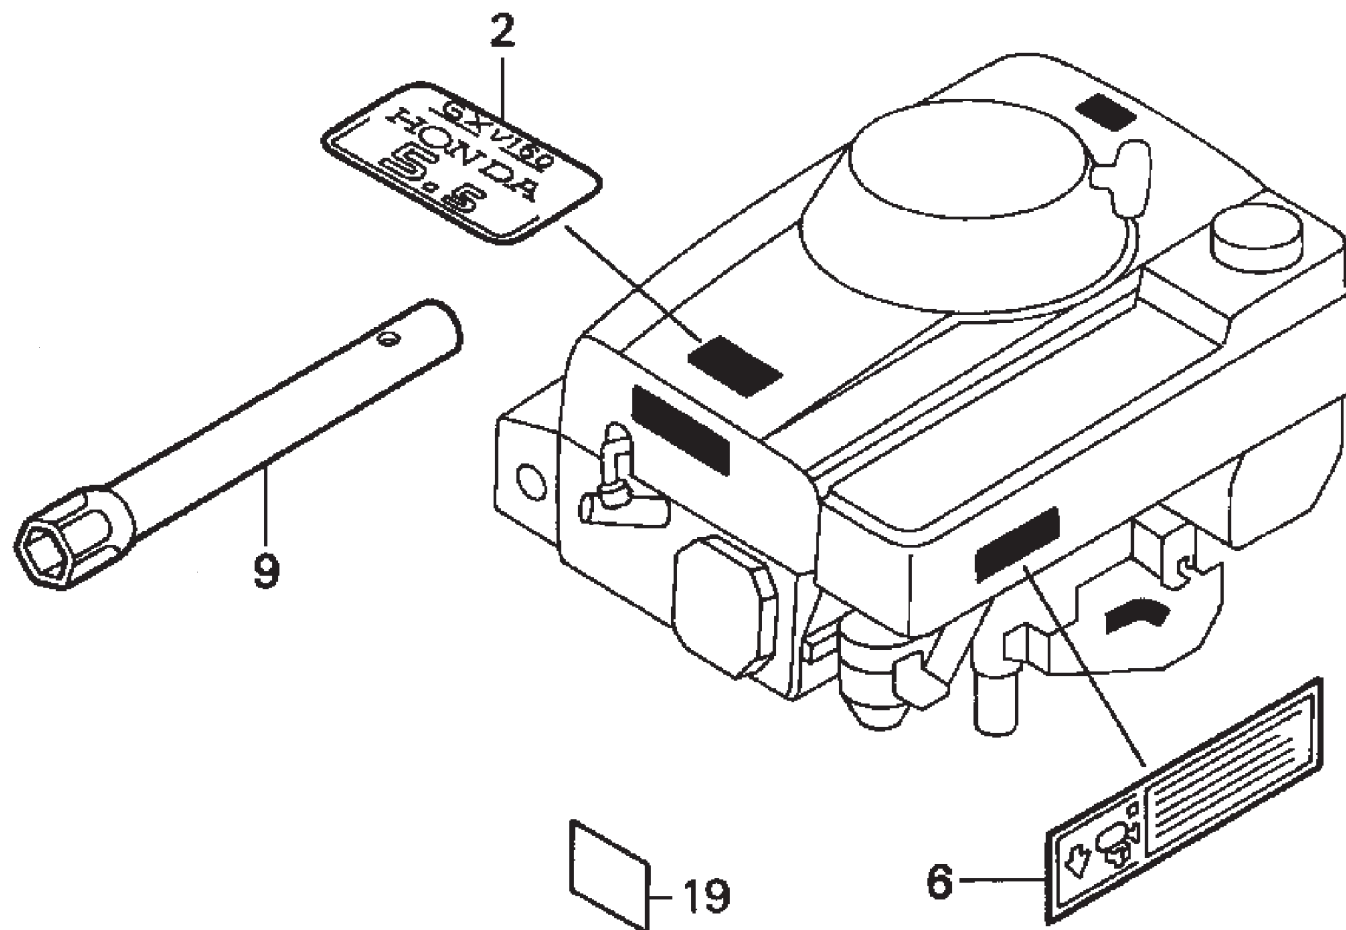

Label Assembly and Gasket Kits

Honda GXV160K1 A12

Ref. No.	Part No.	Qty.	Description
2	87101-ZE7-W12	1	Mark, Emblem (5.5) (ES) engine s/n up to 6154807
	87101-ZE7-W30	1	Mark, Emblem (5.5) (AH) engine s/n from 6154808
6	87531-ZG9-800	1	Mark, Honda
9	99004-21003	1	Wrench, Box (P21)
19	87601-ZE7-W30	1	Mark, Type (A12)
*	061A1-ZE7-801	1	Gasket Kit
*	06111-ZE7-406	1	Gasket Kit

Ref. No.	Part No.	Qty.	Description
OTOTYPE			

* Not illustrated
Obtain Parts From Honda

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]



PROTOTYPE