



Wheel Horse® 13-32G

Rear Engine Rider

Model No. 70125-220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

 
Contents

Description	Page	Description	Page
Body and Decal Assembly	3	28M707–1127–E1	19
Seat and Rear Bag Assembly	4	Carburetor Assembly	
Front Axle and Steering Assembly	5	Engine Briggs and Stratton Model	
Deck and Spindle Assembly	6	28M707–1127–E1	20
Deck Suspension Assembly	8	Air Cleaner Assembly	
Rear Wheel Assembly	9	Engine Briggs and Stratton Model	
Engine and Fuel Tank Assembly	10	28M707–1127–E1	21
Gear Transmission and Linkage Assembly	11	Muffler and Fuel Tank Assembly	
Electrical and Cable Assembly	12	Engine Briggs and Stratton Model	
Cover Assembly		28M707–1127–E1	22
Peerless No. MST205–542D	13	Governor Assembly	
Case Assembly		Engine Briggs and Stratton Model	
Peerless No. MST–542D	14	28M707–1127–E1	23
Case Assembly (continued)		Blower Housing Assembly	
Peerless No. MST205–542D	15	Engine Briggs and Stratton Model	
Cylinder Assembly		28M707–1127–E1	24
Engine Briggs and Stratton Model		Starter Assembly	
28M707–1127–E1	16	Engine Briggs and Stratton Model	
Crankshaft Assembly		28M707–1127–E1	25
Engine Briggs and Stratton Model		Gasket Assembly	
28M707–1127–E1	17	Engine Briggs and Stratton Model	
Crankshaft Assembly (continued)		28M707–1127–E1	26
Engine Briggs and Stratton Model		Carburetor Overhaul Kit Assembly	
28M707–1127–E1	18	Engine Briggs and Stratton Model	
Crankcase Assembly		28M707–1127–E1	27
Engine Briggs and Stratton Model			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

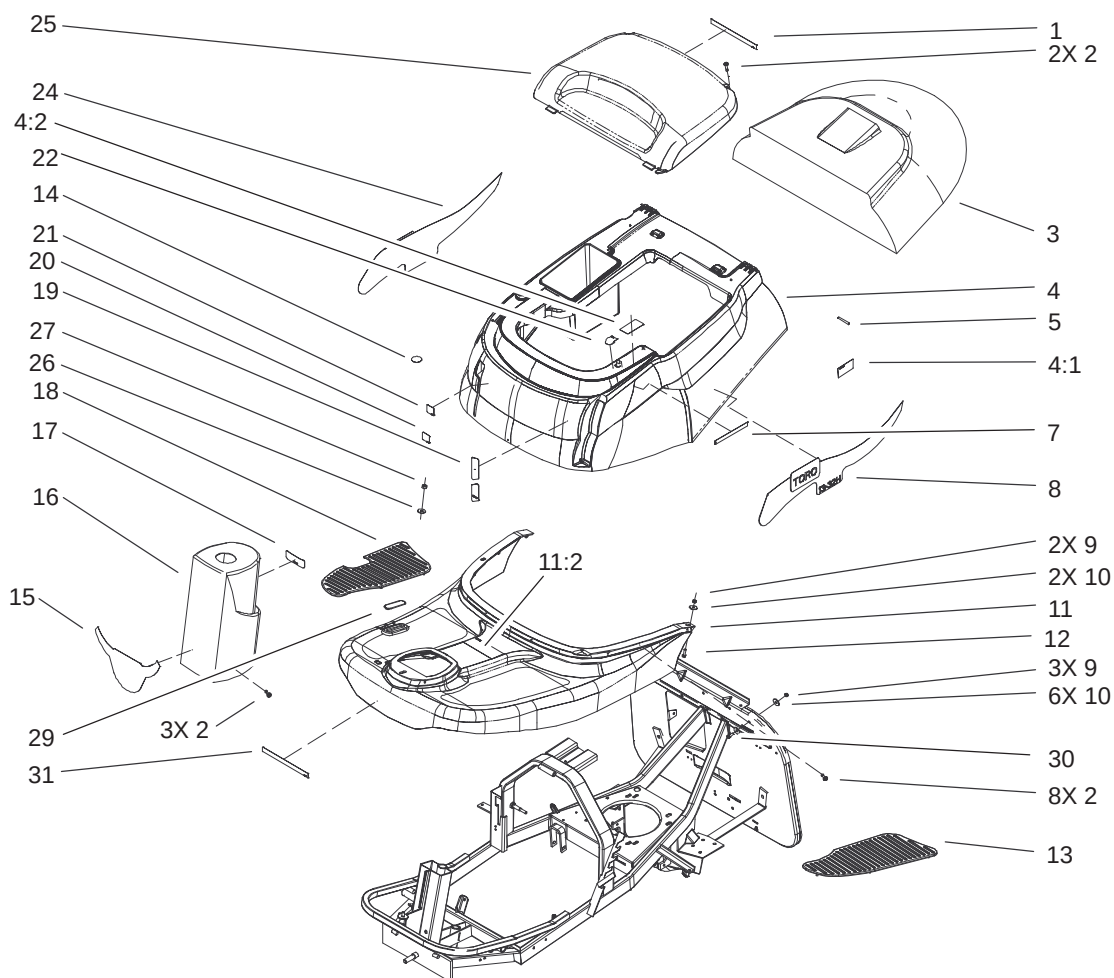


Sheet No.:2

Body and Decal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	105-0537	1	Decal-Logo, Wheelhorse	☆20		1	Decal-PTO, Disengage
2	106-2851	13	Screw-HH, TAP	☆21		1	Decal-PTO, Engage
3	106-1810	1	Cover- Grass Bag	☆22		1	Decal-Nmir
4	106-2885	1	Shroud And Decal ASM	24	106-1801	1	Decal-Shroud
☆4:1		1	Decal-Danger	25	106-2860	1	Cover-Engine
☆4:2		1	Decal-Warning, Hot	26	106-2854	1	Washer-Flat
5	106-2870	2	Pin-Dowel	27	46-0330	1	Nut-Lock
☆7		1	Decal-Shift	29	106-2987	1	Cover
8	106-1800	1	Decal-Shroud	30	33113-016	1	Screw-HH
9	49-7810	5	Nut-Lock	31	106-6509	1	Decal-Toro Intl Rer
10	106-2853	8	Washer-Flat	*	106-2887	1	Kit-Decals
11	106-2901	1	Foot Rest And Decals ASM				
☆11:2		1	Decal-Caution				
12	33113-020	2	Screw-HH				
13	106-2973	1	Floormat-LH				
☆14		1	Decal-Clutch, Intl Rer				
15	105-0528	1	Decal-Steering Column				
16	106-2906	1	Steering-Turret				
☆17		1	Decal-Run Lights				
18	106-2972	1	Floormat-RH				
☆19		1	Decal-HOC				

☆ Not serviced separately

 
* Not illustrated

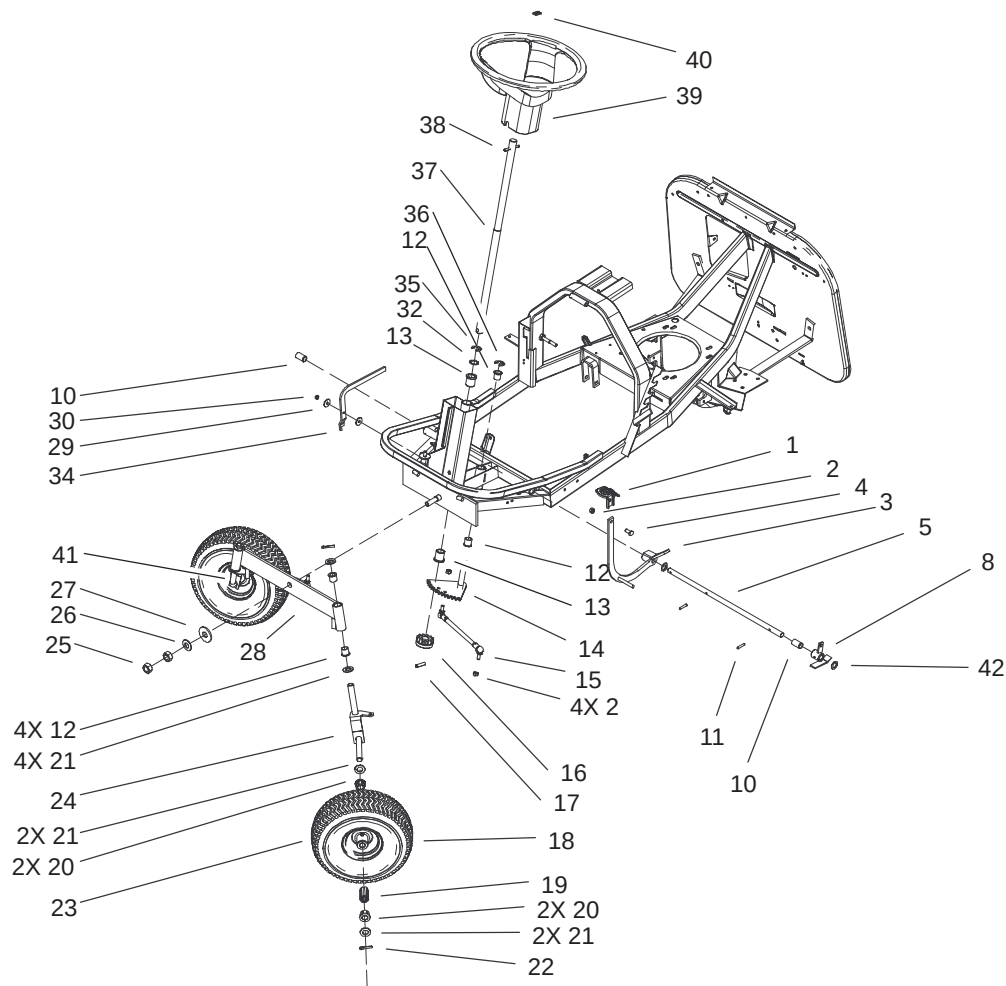

Sheet No.:4

Front Axle and Steering Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-2957	1	Pedal-Brake	30	49-7810	1	Nut-Lock
2	46-0330	6	Nut-Lock	32	106-1807	1	Spacer
3	106-2935	1	Lever-Clutch	34	106-2961	1	Lever
4	33114-020	1	Screw-HH	35	106-2909	1	Ring-Retaining,Ext
5	106-2985	1	Shaft	36	106-2908	1	Ring-Retaining,Ext
8	106-2978	1	Bushing	37	106-2872	1	Shaft-Steering
10	106-2962	2	Bushing	38	106-1846	1	Pin-Roll
11	106-2874	2	Pin-Dowel	39	106-2883	1	Wheel-Steering
12	106-1811	6	Bushing	40	98-1459	1	Decal-Toro
13	106-2873	2	Bushing	41	106-2952	1	Axle-Wheel,RH
14	106-2868	1	Rack-Steering	42	106-1835	3	Spacer
15	106-2933	2	Rod-Tie				
16	106-2878	1	Gear-Steering				
17	106-1845	1	Pin-Spiral				
18	106-2951	2	Wheel				
19	106-6507	2	Bearing				
20	106-6508	4	Bushing				
21	33098-00	8	Washer-Flat				
22	3272-21	4	Pin-Cotter				
23	106-2907	2	Tire				
24	106-2953	1	Axle-Wheel,LH				
25	33018-00	2	Nut-Hex				
26	106-2926	1	Washer-Bell				
27	106-2925	1	Washer-Flat				
28	106-2864	1	Axle-Front				
29	106-2853	2	Washer-Flat				

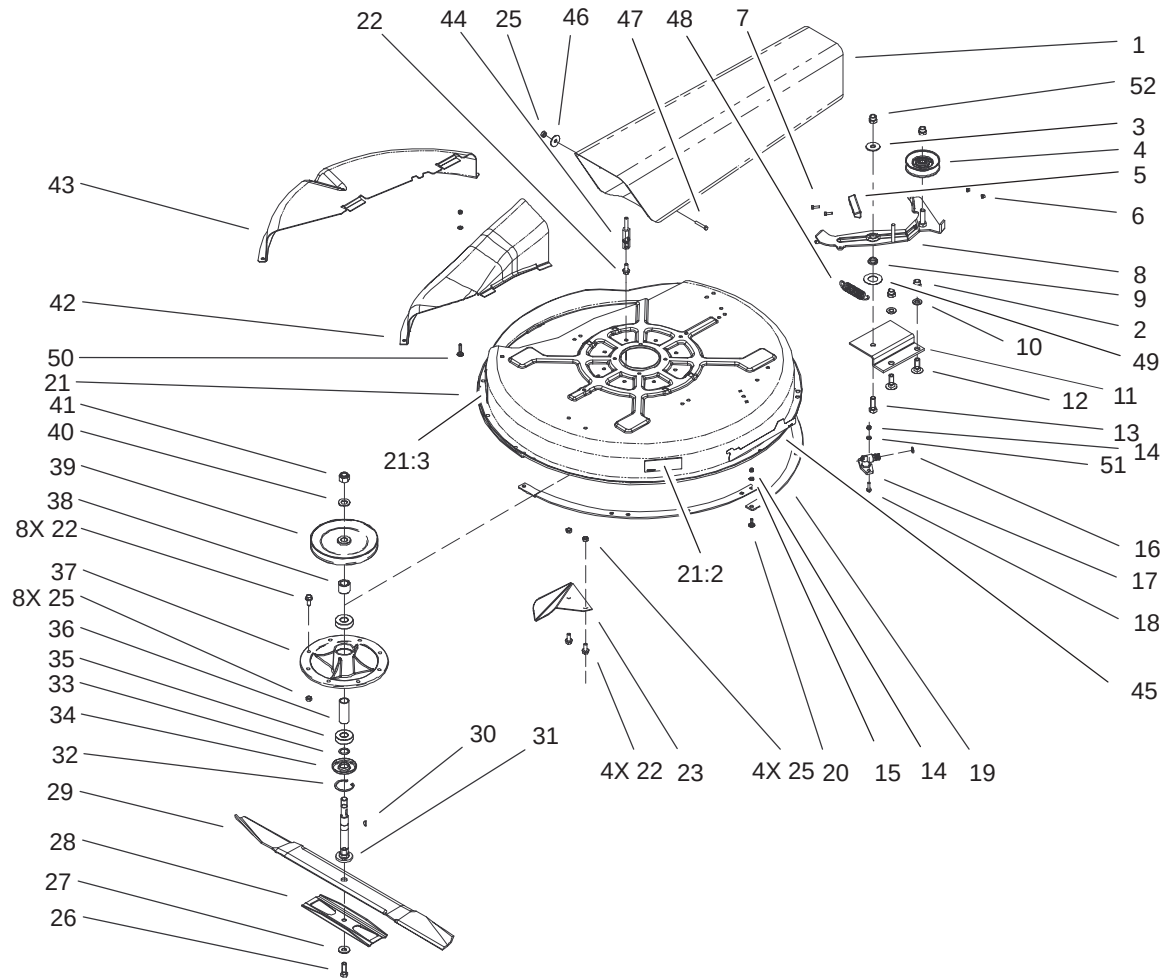 


Sheet No.:5

Deck and Spindle Assembly

Ref. No.	Part No.	Qty.	Description
1	106-2970	1	Tube-Discharge
2	46-0090	2	Nut-Lock
3	106-2922	1	Washer-Flat
4	106-1813	1	Pulley-Idler
5	106-1814	1	Brake-Rubber
6	46-0410	2	Nut-Lock
7	60-6910	2	Screw
8	106-2889	1	Brake ASM
9	106-2892	1	Bushing
10	33096-00	2	Washer-Flat
11	106-2884	1	Bracket-Deck
12	33126-035	2	Screw-CARR
13	33116-035	1	Screw-HH
14	49-7810	11	Nut-Lock
15	33093-00	9	Washer-Flat
16	106-1847	1	O-Ring
17	95-2747	1	Fitting-Washout
18	106-6515	2	Screw-Hfh
19	80-4490	4	Ring-32in Deck
20	106-6510	5	Screw-Sh
21	106-2900	1	Deck And Decals ASM
☆21:2		1	Decal-Caution
☆21:3		1	Decal-Discharge
22	33104-020	13	Screw-HHF
23	80-2630	2	Kicker

Ref. No.	Part No.	Qty.	Description
25	46-0330	13	Nut-Lock
26	3212-5	1	Screw-HH
27	106-2858	1	Washer-Bell
28	80-4570	1	Stiffener
29	105-0526	1	Blade - 32in
29	80-4430	1	Blade-Recycler
30	106-1805	1	Key
31	106-2902	1	Shaft-Spindle
32	106-2910	1	Ring-Snap
33	106-1807	1	Spacer
34	80-4370	1	Shield - Bearing
35	251-297	2	Bearing
36	106-2888	1	Spacer
37	56-7030	1	Spindle
38	106-1842	1	Spacer
39	106-1812	1	Pulley
40	33098-00	1	Washer-Flat
41	106-2914	1	Nut-Hex
42	106-2898	1	Tunnel-Discharge
43	106-2899	1	Cover-Recycler
44	106-2897	1	Guide-Belt
45	105-0536	1	Decal-Deck
46	106-2855	1	Washer-Flat
47	33114-030	1	Screw-HH
48	106-1838	1	Spring-Extension
49	106-2893	1	Spacer

 ☆ Not serviced separately

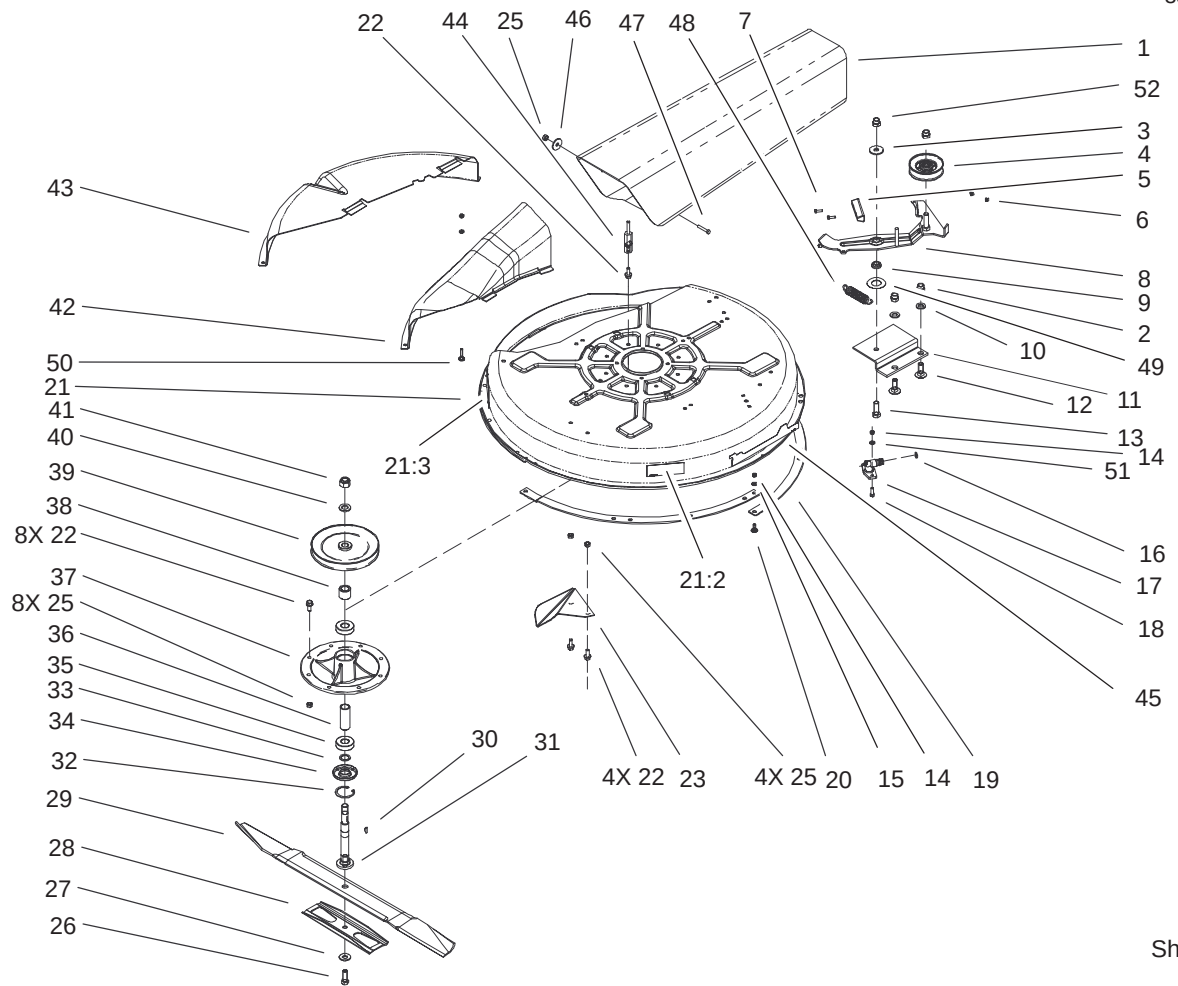


Sheet No.:5

Deck and Spindle Assembly

Ref. No.	Part No.	Qty.	Description
50	106-2890	4	Screw-Sh
51	106-2865	2	Washer-Flat
52	106-6513	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description

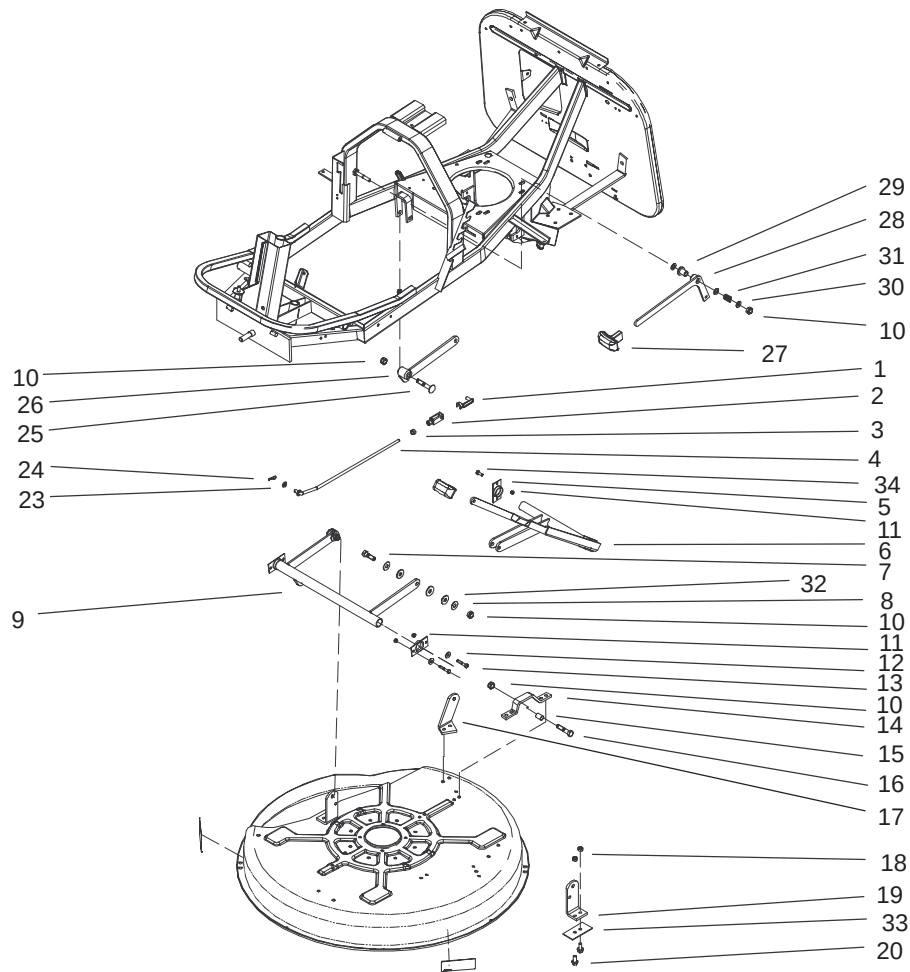 


Sheet No.:6

Deck Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	106-1809	1	Retainer-Yoke
2	106-1803	1	Yoke
3	33014-00	1	Nut-Hex
4	106-2937	1	Rod-Tie
5	106-2880	3	Bracket-Support
6	106-2966	1	Lever-Lift
7	33115-035	3	Screw-HH
8	106-6511	6	Washer-Flat
9	106-1829	1	Hanger Deck ASM
10	33025-00	5	Nut-Lock
11	49-7810	8	Nut-Lock
12	106-2865	4	Washer-Flat
13	33113-035	4	Screw-HH
14	106-2895	1	Bracket-Deck
15	106-2912	1	Bushing
16	33115-050	1	Screw-HH
17	106-2894	1	Bracket-Deck
18	46-0330	10	Nut-Lock
19	106-2896	2	Bracket-Deck
20	33104-020	10	Screw-HH
23	33094-00	1	Washer-Flat
24	106-2879	1	Pin-Hair
25	106-2882	1	Screw-CARR
26	106-1830	1	Hanger Deck ASM
27	106-2967	2	Handle
28	106-2954	1	Lever-Blade,Clutch


Ref. No.	Part No.	Qty.	Description
29	106-2955	1	Bushing
30	106-2869	3	Shim
31	106-2950	1	Spring-Compression
32	106-1806	9	Washer
33	106-6512	1	Plate
34	33113-016	4	Screw-HH

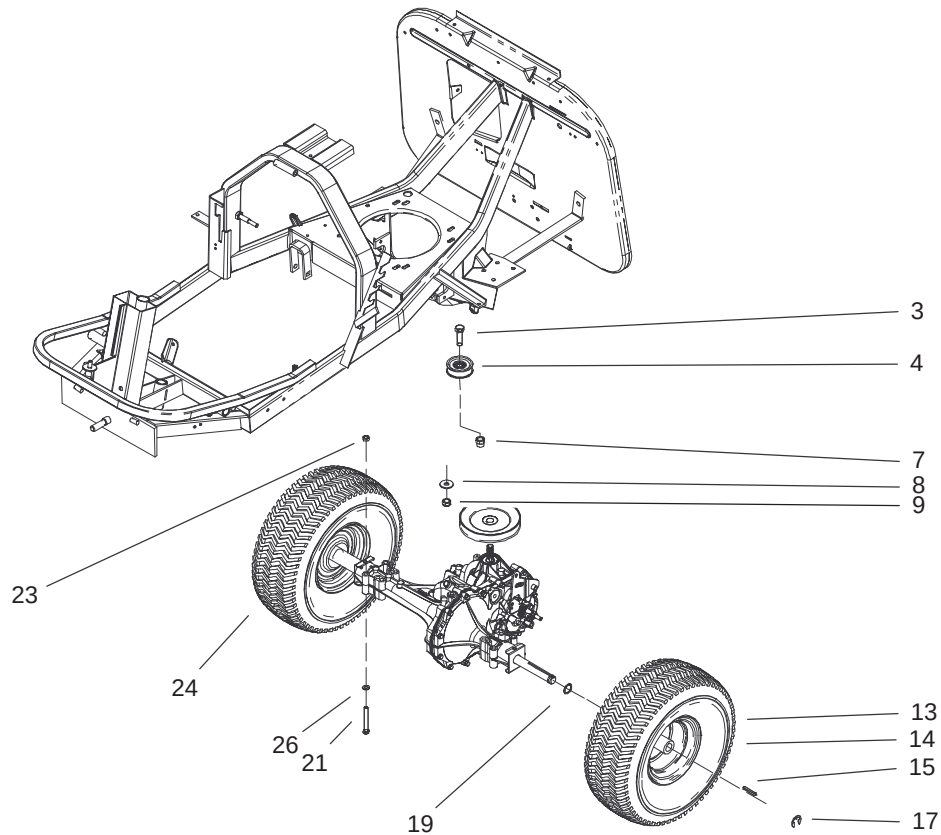 

Sheet No.:7

Rear Wheel Assembly

Ref. No.	Part No.	Qty.	Description
3	33116-035	1	Screw-HH
4	106-2877	1	Pulley ASM
7	106-6513	1	Nut-Lock
8	106-2921	1	Washer-Flat
9	33025-00	1	Nut-Lock
13	106-2948	1	Wheel-LH
14	106-2913	2	Tire
15	106-2994	2	Key-Square
17	106-2909	2	Ring-Retaining,Ext
19	106-2992	2	Washer-Flat
21	33114-060	4	Screw-HH
23	46-0330	4	Nut-Lock
24	106-2947	1	Wheel-RH
26	33094-00	4	Washer-Flat

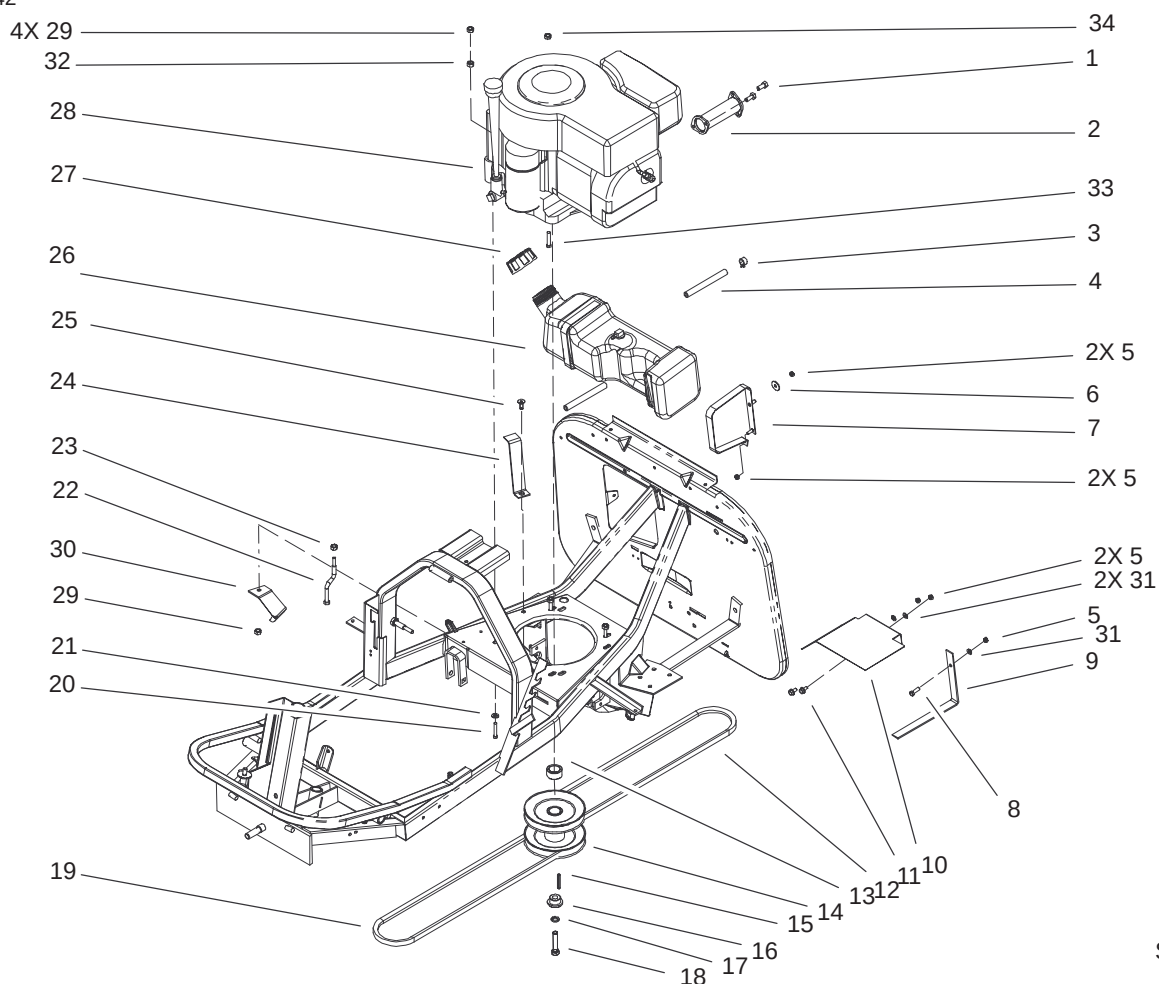 


Sheet No.:8

Engine and Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	3274-10	2	Screw-HSH
2	106-1832	1	Pipe-Muffler
3	106-2991	3	Clamp-Hose
4	106-2990	1	Hose-Fuel
5	49-7810	7	Nut-Lock
6	106-2853	2	Washer-Flat
7	106-1839	2	Strap-Fuel Tank
8	33113-020	1	Screw-HH
9	106-1828	1	Guard-Muffler
10	106-2971	1	Shield-Heat, Muffler
11	33103-012	2	Screw-HHF
12	106-2905	1	Belt
13	106-1836	1	Spacer
14	106-2915	1	Pulley
15	67-7490	1	Key
16	106-1837	1	Spacer
17	106-2856	1	Washer-Lock
18	3212-8	1	Screw-HH
19	106-1826	1	Belt-Deck
20	33114-035	3	Screw-HH
21	33094-00	5	Washer-Flat
22	106-2974	2	Guide-Belt
23	33014-00	2	Nut-Hex
24	106-2930	1	Bracket
25	106-2886	1	Screw-HSH
26	80-4580	1	Tank-Gas

Ref. No.	Part No.	Qty.	Description
27	55-3576	1	Gas Cap ASM
★28		1	Engine-13hp Briggs And Stratton Model 28m707-1127-E1
29	46-0330	5	Nut-Lock
30	106-2980	1	Bracket
31	33093-00	3	Washer-Flat
32	33014-00	1	Nut-Hex
33	33114-045	1	Screw-HH
34	106-2854	3	Washer-Flat

 
★ Not serviced separately. Obtain parts from Briggs and Stratton.

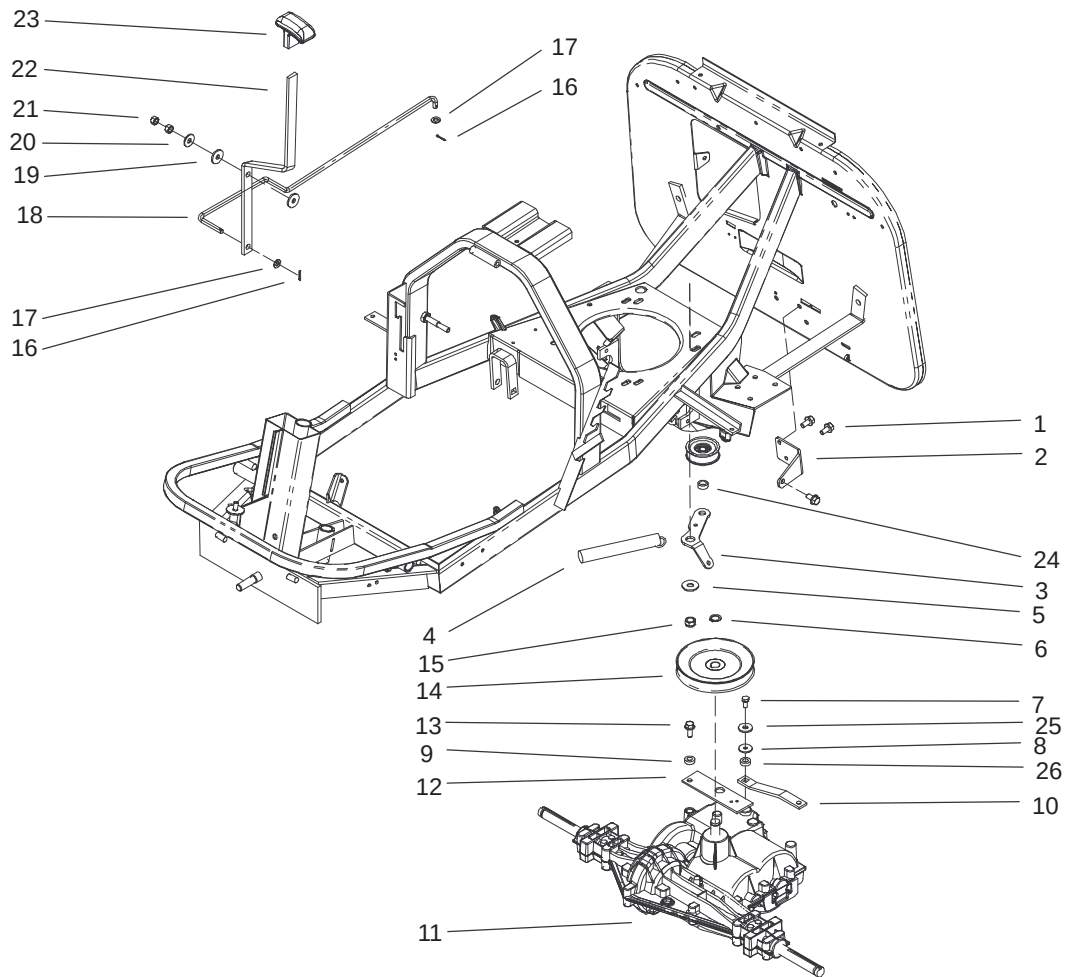

Sheet No.:9

Gear Transmission and Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	106-6516	3	Screw-Hfh TAP	25	106-6506	1	Washer-Lock/Sp
2	106-2979	1	Bracket	26	106-6514	1	Washer-Flat
3	106-2938	1	Bracket-Idler				
4	106-2936	1	Spring-Extension				
5	106-2921	1	Washer-Flat				
6	106-2862	1	Ring-External				
7	321-3	1	Screw-HH				
8	106-2853	1	Washer-Flat				
9	106-2999	1	Spacer				
10	106-2976	1	Bracket				
11	106-2876	1	Differential-Gear Peerless No. Mst205-542d				
12	106-2931	1	Plate				
13	33104-020	1	Screw-HHF				
14	106-2932	1	Pulley				
15	33025-00	1	Nut-Lock				
16	3272-21	2	Pin-Cotter				
17	33094-00	2	Washer-Flat				
18	106-2977	1	Link				
19	106-2975	2	Washer				
20	106-2854	2	Washer-Flat				
21	33014-00	2	Nut-Hex				
22	106-2935	1	Lever-Clutch				
23	106-2967	1	Handle				
24	106-2986	1	Spacer				

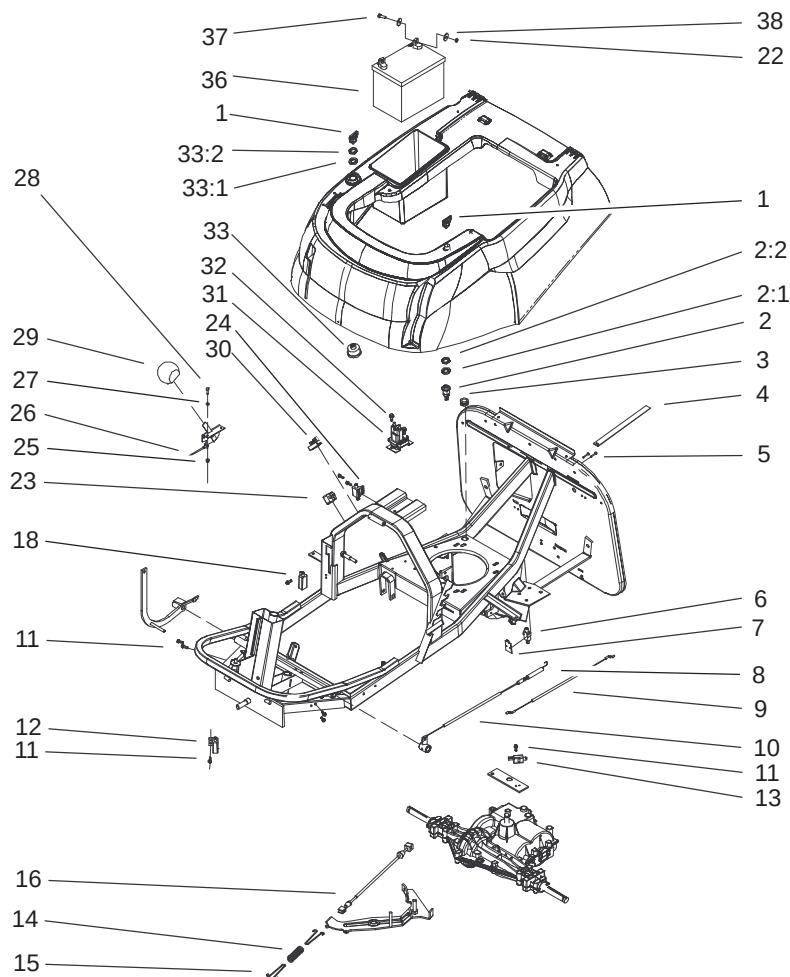 


Sheet No.:10

Electrical and Cable Assembly

Ref. No.	Part No.	Qty.	Description
1	63-8360	2	Key-Ignition
2	46-5780	1	Switch-Starter
2:1	3254-5	1	Washer-Lock, Internal
2:2	218-461	1	Nut-HH
3	106-2863	1	Grommet
4	106-1831	1	Lever-Bag Fill
5	106-2850	2	Screw
6	106-1843	1	Switch
7	106-1827	1	Clamp-Bag Fill
8	106-2981	1	Spring-Extension
9	106-2983	1	Cable
10	106-2982	1	Cable
11	106-1849	16	Screw-HH TAP
12	65-7410	1	Switch-Single Pole
13	106-2998	1	Switch
14	106-2917	1	Spring-Compression
15	106-2918	2	Hook-Spring
16	106-2956	1	Cable
18	86-4690	1	Switch-Interlock
22	33013-00	2	Nut-Hex
23	98-7249	1	Relay
24	65-7410	1	Switch-Single Pole
25	46-0410	2	Nut-Lock
26	106-2916	1	Throttle Cable ASM
27	52-6430	2	Washer
28	60-6910	2	Screw

Ref. No.	Part No.	Qty.	Description
29	106-2989	1	Knob
30	99-3700	1	Module
31	47-1910	1	Solenoid
32	106-2852	2	Screw-HHF TAP
33	88-9830	1	Key Switch ASM
33:1	3254-5	1	Washer-Lock, Internal
33:2	218-461	1	Nut-HH
36	104-1755	1	Battery-155 Cca-(Dry)
37	33113-020	2	Screw-HH
38	106-2853	4	Washer-Flat
*	106-1848	1	Harness-Wire

 * Not illustrated

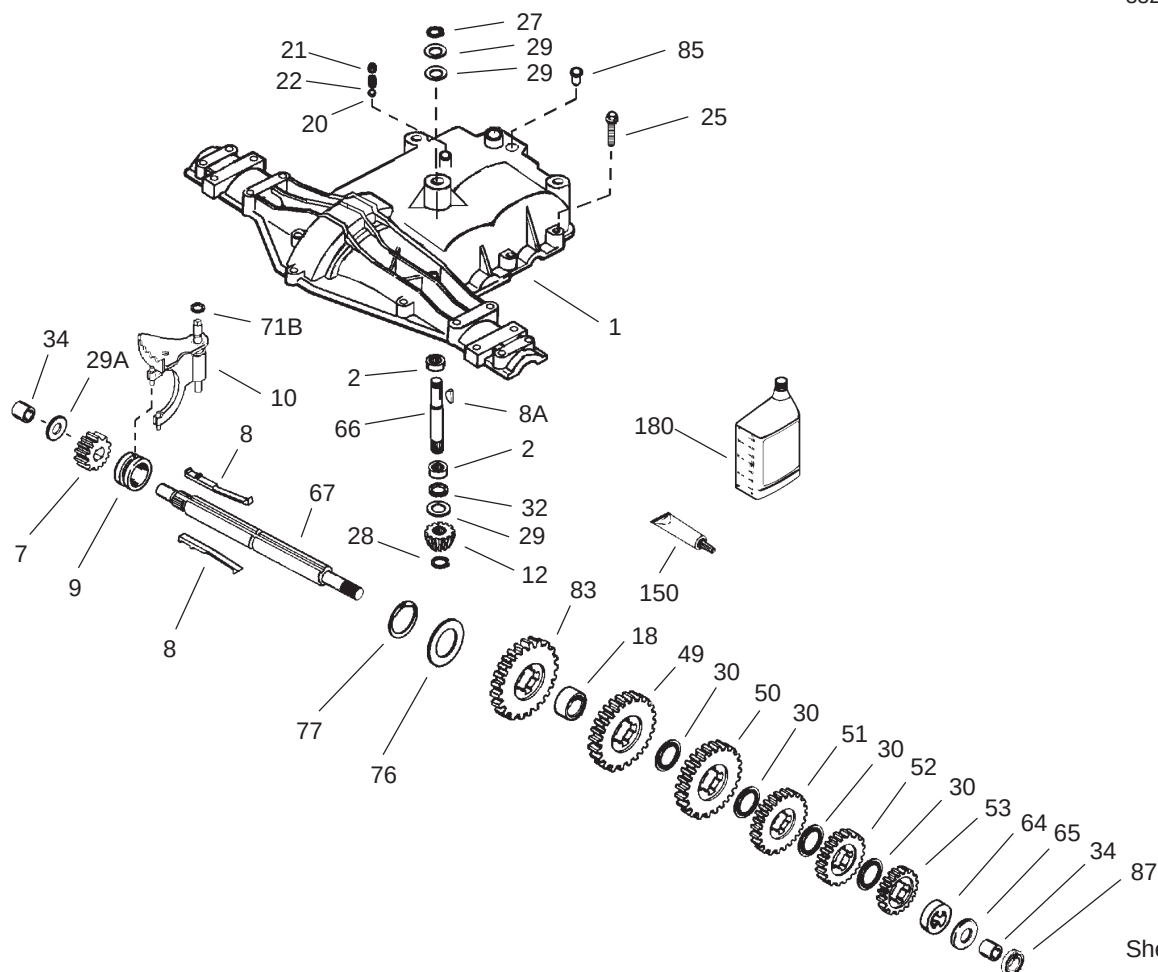


Sheet No.:

Cover Assembly Peerless No. MST205-542D

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	772147	1	Transaxle Cover	51	778342	1	Spur Gear (22 teeth)
2	780086A	2	Needle Bearing 5/8"	52	778352	1	Spur Gear (19 teeth)
7	778330	1	Spur Gear (11 teeth)	53	778346	1	Spur Gear (15 teeth)
8	792180	2	Shift Key	64	786072	1	Brake Shaft Spacer (1-3/8" x 3/8")
8A	792047	1	Woodruff Key #9	65	780189	1	Washer
9	784352	1	Shift Collar	66	776422	1	Input Shaft
10	784378	1	Shift Rod & Fork	67	776396	1	Shifter & Brake Shaft
12	778309	1	Input Bevel Pinion (13 teeth)	71B	788092	1	"O" Ring
18	786102	1	Spacer	76	780090	1	Washer
20	792077A	1	Ball 5/16" dia.	77	788078A	1	Inverted Retaining Ring
21	792211	1	Cap Screw 3/8-16 x 3/8"	83	778338	1	Spur Gear (27 teeth)
22	792079	1	Spring	85	792154	1	Oil Fill Plug
25	792073A	17	Screw 1/4-20 x 1-1/4"	87	788089A	1	Oil Seal 9/16"
27	792035	1	Retaining Ring	150	788093A	1	Liquid Gasket RTV Silicone
28	788040	1	Retaining Ring	180	730229A	1	Gear Oil 80W90
29	780072	5	Washer				
29A	780160	1	Washer				
30	780108	4	Washer				
32	788083	1	Oil Seal 5/8"				
34	780194	2	Bushing 9/16"				
49	778336	1	Spur Gear (30 teeth)				
50	778338	1	Spur Gear (27 teeth)				

 Obtain parts from local Peerless dealer.

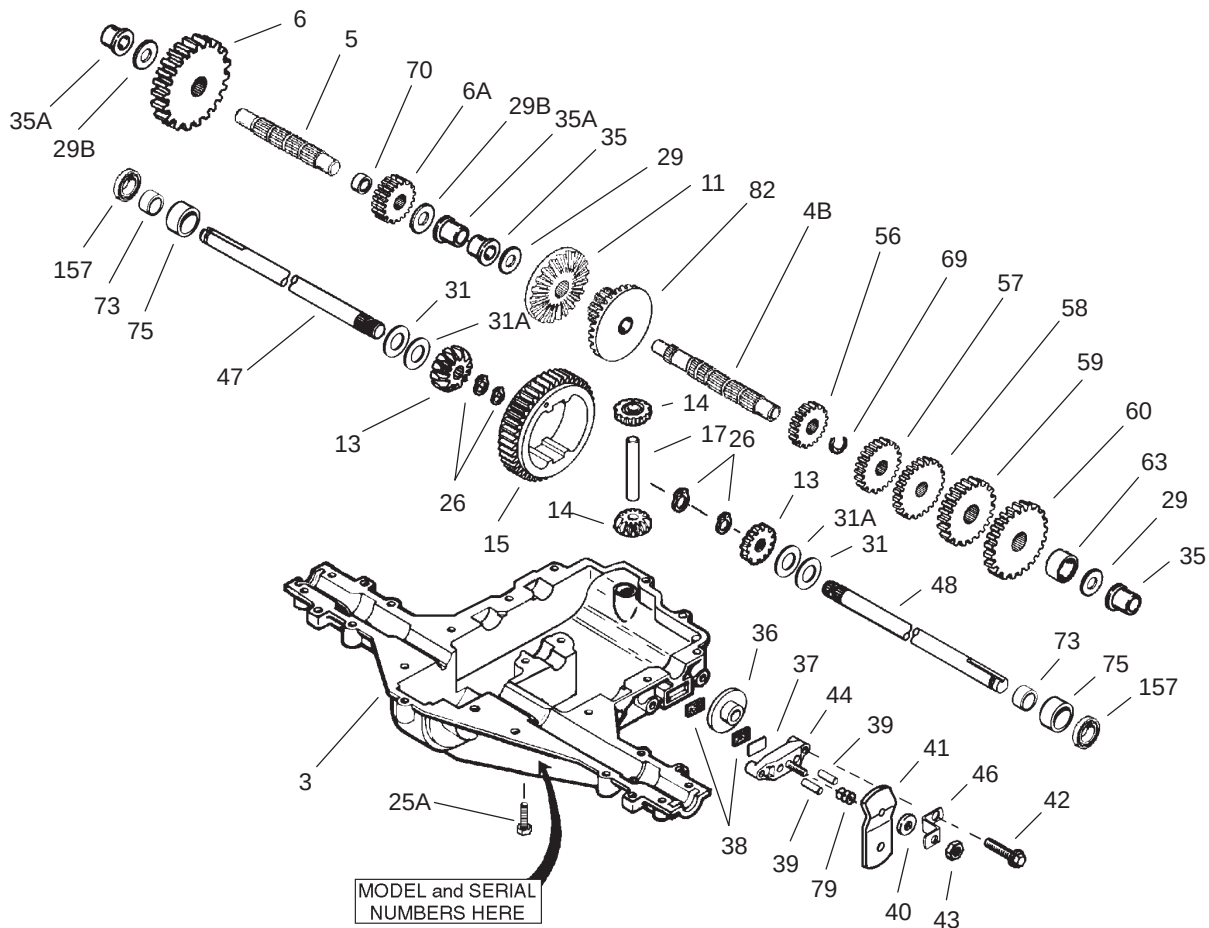


Sheet No.:

Case Assembly Peerless No. MST-542D

Ref. No.	Part No.	Qty.	Description
3	770128	1	Transaxle Case
4B	776406	1	Countershaft
5	776409	1	Output Shaft
6	778364	1	Spur Gear (38 teeth)
6A	778369	1	Spur Gear (15 teeth)
11	778334	1	Bevel Gear (30 teeth)
13	778368	2	Bevel Gear (13 teeth) (Incl. 14)
14	778368	2	Bevel Pinion (13 teeth) (Incl. 13)
15	778370	1	Ring Gear (43 teeth)
17	786188	1	Drive Pin
25A	792177	2	Screw 1/4-20 x 1-3/8"
26	792125	4	Retaining Ring (pkg of 2)
29	780072	5	Washer
29B	780051	2	Thrust Washer (.762 ID)
31	780001	2	Washer (.056 wide) (USE AS NEEDED)
31A	780195	2	Flat Washer (.062 wide)
35	780193	2	Flanged Bushing 5/8" ID

Ref. No.	Part No.	Qty.	Description
35A	780197	2	Flanged Bushing 3/4"
36	790075	1	Brake Disk
37	790007	1	Brake Pad Plate
38	799021	2	Brake Pad (pkg of 2)
39	786026	2	Dowel Pin
40	792076A	1	Washer
41	790008A	1	Brake Lever
42	792073A	2	Screw 1/4-20 x 1-1/4"
43	792075	1	Locknut 5/16-24
44	790025	1	Brake Pad Holder
46	786086	1	Brake Lever Bracket
47	775000	1	Axle (11-3/8" long)
48	774687	1	Axle (15-7/8" long)
56	778335	1	Spur Gear (10 teeth-steel)
57	778337	1	Spur Gear (13 teeth)
58	778341	1	Spur Gear (18 teeth)
59	778351	1	Spur Gear (21 teeth)
60	778345	1	Spur Gear (25 teeth)
63	786071	1	Countershaft Spacer (1-1/8" x 3/8")
69	792170	1	Retaining Ring
70	786187	1	Spacer .890

 Obtain parts from local Peerless dealer.

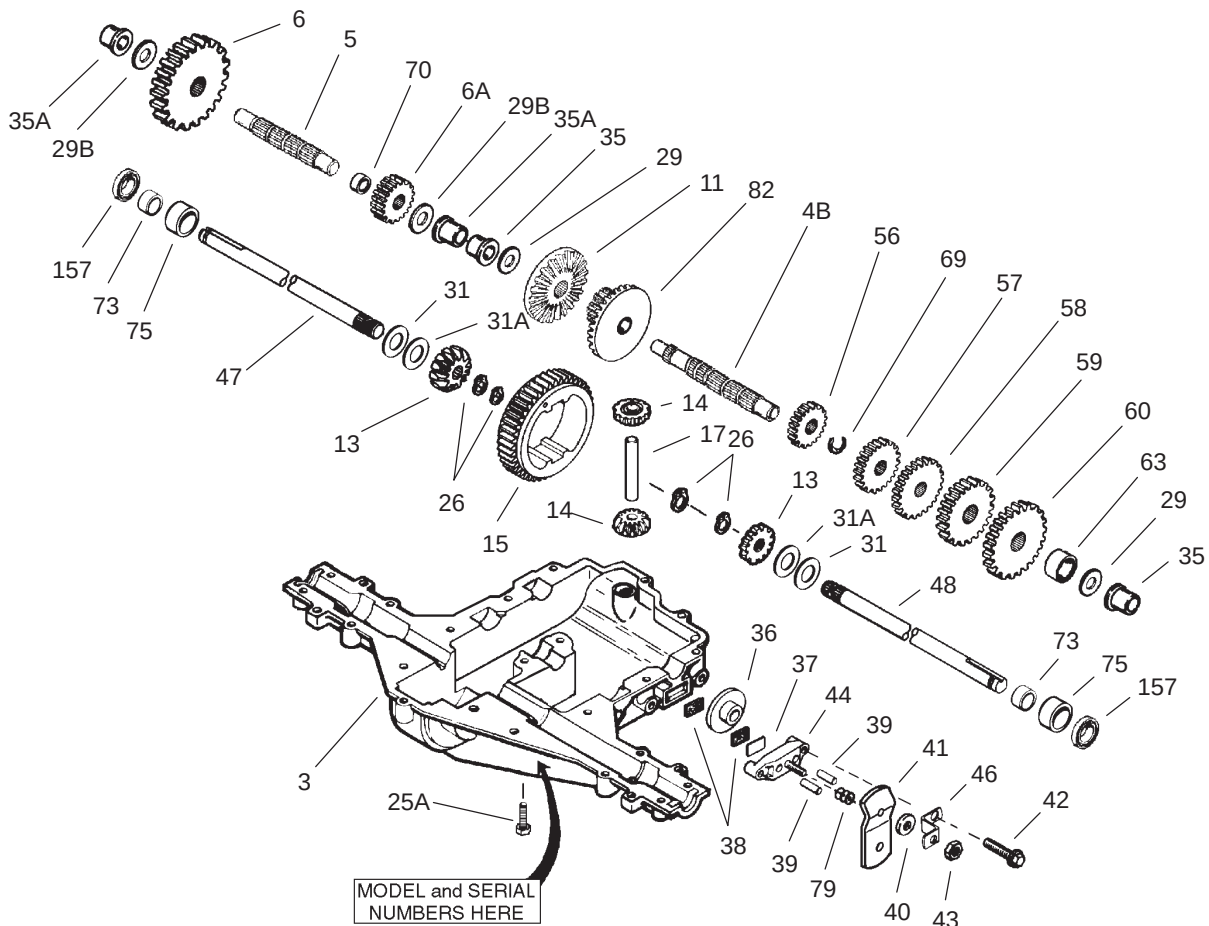

Sheet No.:


Case Assembly (continued)

Peerless No. MST205-542D

Ref. No.	Part No.	Qty.	Description
73	780140	2	Needle Bearing 3/4"
75	786084	2	Sleeve .999 ID
79	792144	1	Spring
82	778363	1	Bevel & Spur Gear (30 & 13 teeth)
157	788088A	2	Oil Seal 3/4"

Ref. No.	Part No.	Qty.	Description

 Obtain parts from local Peerless dealer.

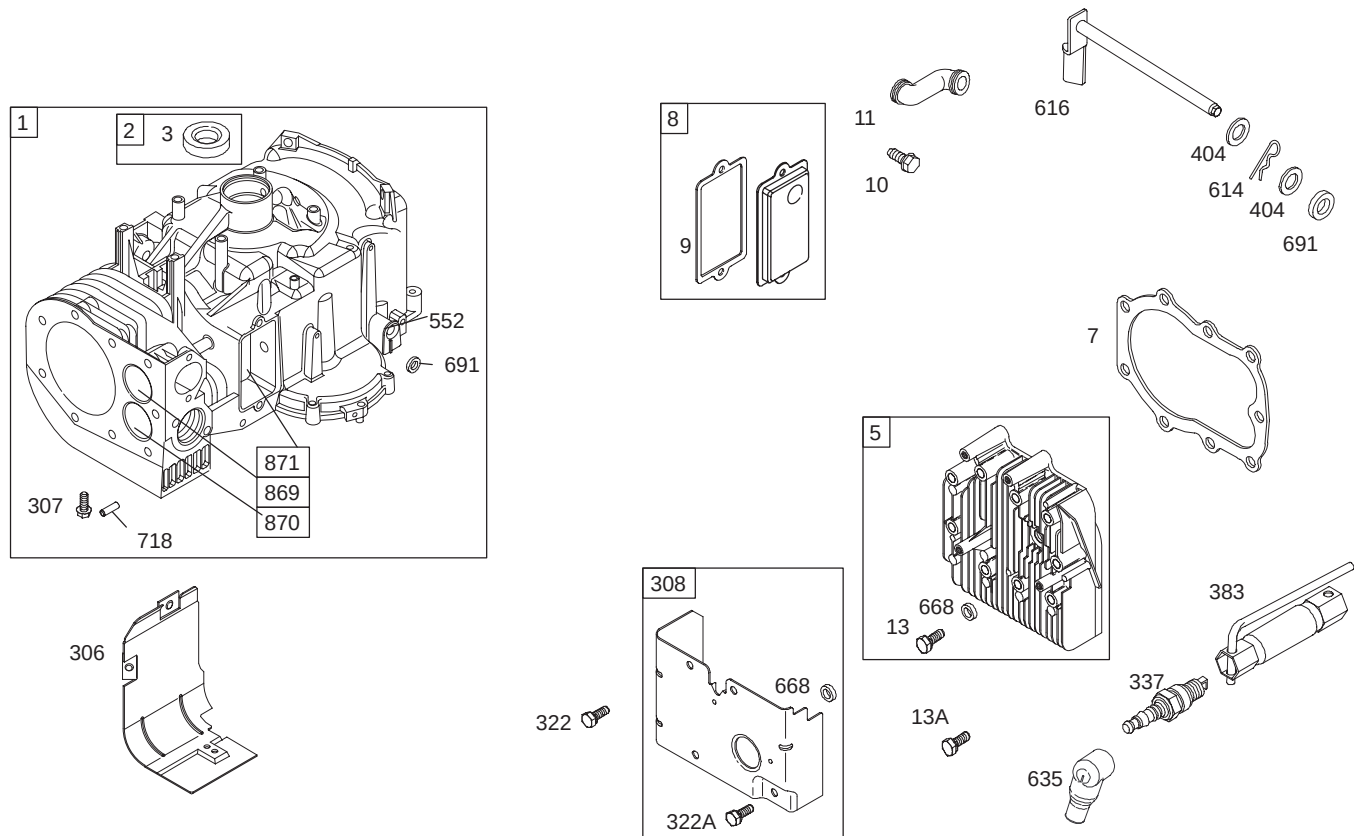

Assemblies include all parts shown in frames.








Cylinder Assembly Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
1	496413	1	Cylinder Assembly
2	399265	1	Kit-Bushing/Seal (Magneto Side)
★3	391086	1	Seal-Oil (Magneto Side)
5	494240	1	Head-Cylinder
Δ★7	271866	1	Cylinder Head Gasket
8	495735	1	Breather Assembly
Δ★9	27803	1	Gasket-Breather
10	691666	1	Screw (Breather Assembly)
11	691328	1	Tube-Breather
13	691681	1	Screw (Cylinder Head)
13A	690904	1	Screw (Cylinder Head)
306	690459	1	Shield-Cylinder
307	691003	1	Screw (Cylinder Shield)
308	491490	1	Cylinder Head Cover
322	690960	1	Screw (Cylinder Head Cover)

Ref. No.	Part No.	Qty.	Description
322A	691681	1	Screw (Cylinder Head Cover)
337	802592	1	Plug-Spark
383	89838	1	Sparkplug Wrench
404	691691	1	Washer (Governor Crank)
552	491986	1	Bushing-Governor Crank
614	691620	1	Pin-Cotter
616	692012	1	Governor Crank
635	66538	1	Boot-Sparkplug
668	690510	1	Spacer
★691	692407	1	Governor Shaft Seal
718	690959	1	Pin-Locating
869	691802	1	Seat-Valve(Intake)
870	691844	1	Seat-Valve(Exhaust)
871	261961	1	Guide-Bushing (Exhaust Valve)
	231218	1	Guide-Bushing (Intake Valve, Brass)

Δ Included in Valve Gasket Set-Ref. 1095.

       ★ Included in Engine Gasket Set-Ref. 358.

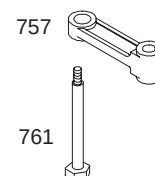
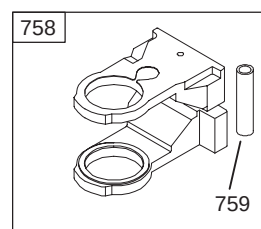
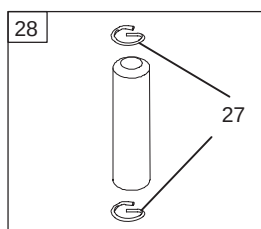
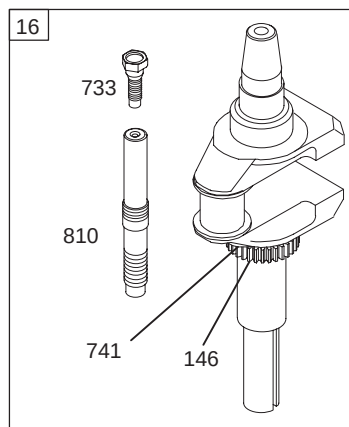
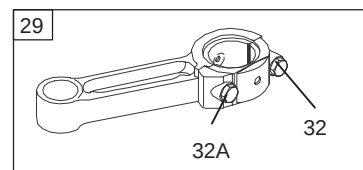
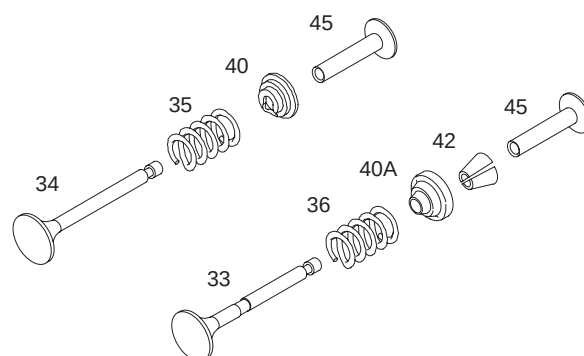
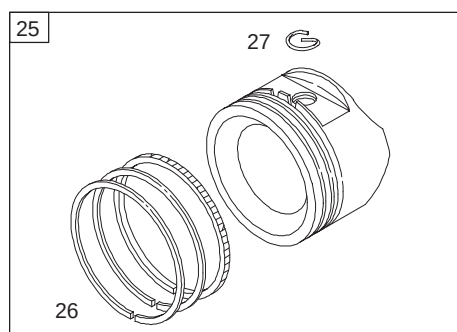


Assemblies include all parts shown in frames.

Crankshaft Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
16	693944	1	Crankshaft		495490	1	Rod-Connecting (.020" Undersize)
24	222698	1	Key-Flywheel	32	690356	1	Screw (Connecting Rod 1 7/8")
25	696397	1	Piston Assembly (Standard)	32A	690348	1	Screw (Connecting Rod 1 5/8")
	696398	1	Piston Assembly (.010" Oversized)	33	262246	1	Valve-Exhaust
	696399	1	Piston Assembly (.020" Oversized)	34	262247	1	Valve-Intake
	696400	1	Piston Assembly (.030" Oversized)	35	691605	1	Spring-Valve (Intake)
26	696403	1	Ring Set (Standard)	36	691597	1	Spring-Valve (Exhaust)
	696404	1	Ring Set (.010" Oversized)	40	690656	1	Retainer-Valve
	696405	1	Ring Set (.020" Oversized)	40A	691939	1	Retainer-Valve
	696406	1	Ring Set (.030" Oversized)	42	494553	1	Keeper-Valve
27	691299	1	Lock-Piston Pin	45	691811	1	Tappet-Valve
28	498319	1	Pin-Piston (Standard)	146	691639	1	Key-Timing
	498320	1	Pin-Piston (.005" Undersized)	733	691658	1	Screw (Crankshaft Extension)
29	494504	1	Rod-Connecting (Standard)	741	691284	1	Gear-Timing
				757	691714	1	Link-Counterweight
				758	692423	1	Counterweight

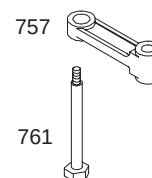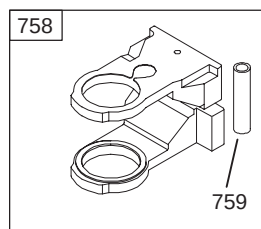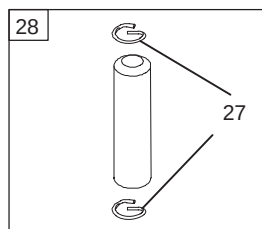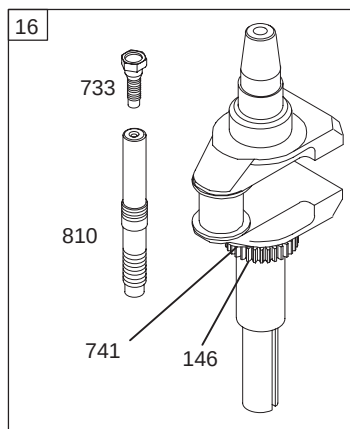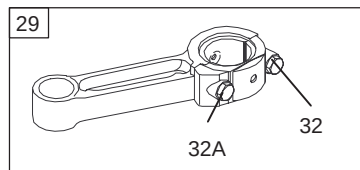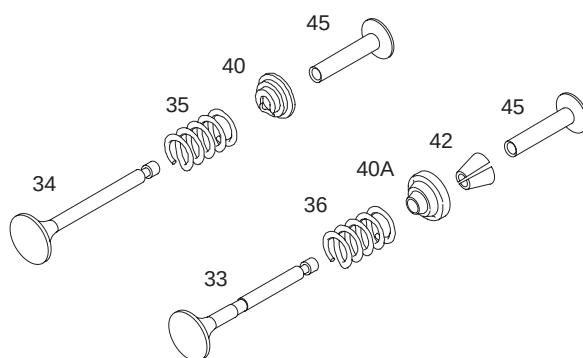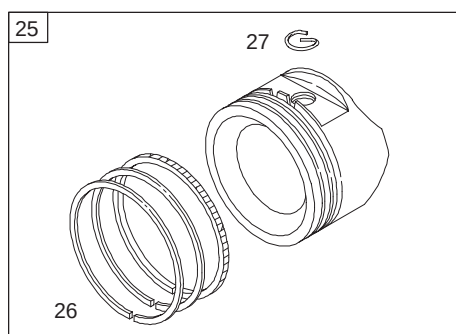       


Assemblies include all parts shown in frames.

Crankshaft Assembly (continued)

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
759	691239	1	Pin—Counterweight
761	691096	1	Screw (Counterweight)
810	691779	1	Extension—Crankshaft

Ref. No.	Part No.	Qty.	Description

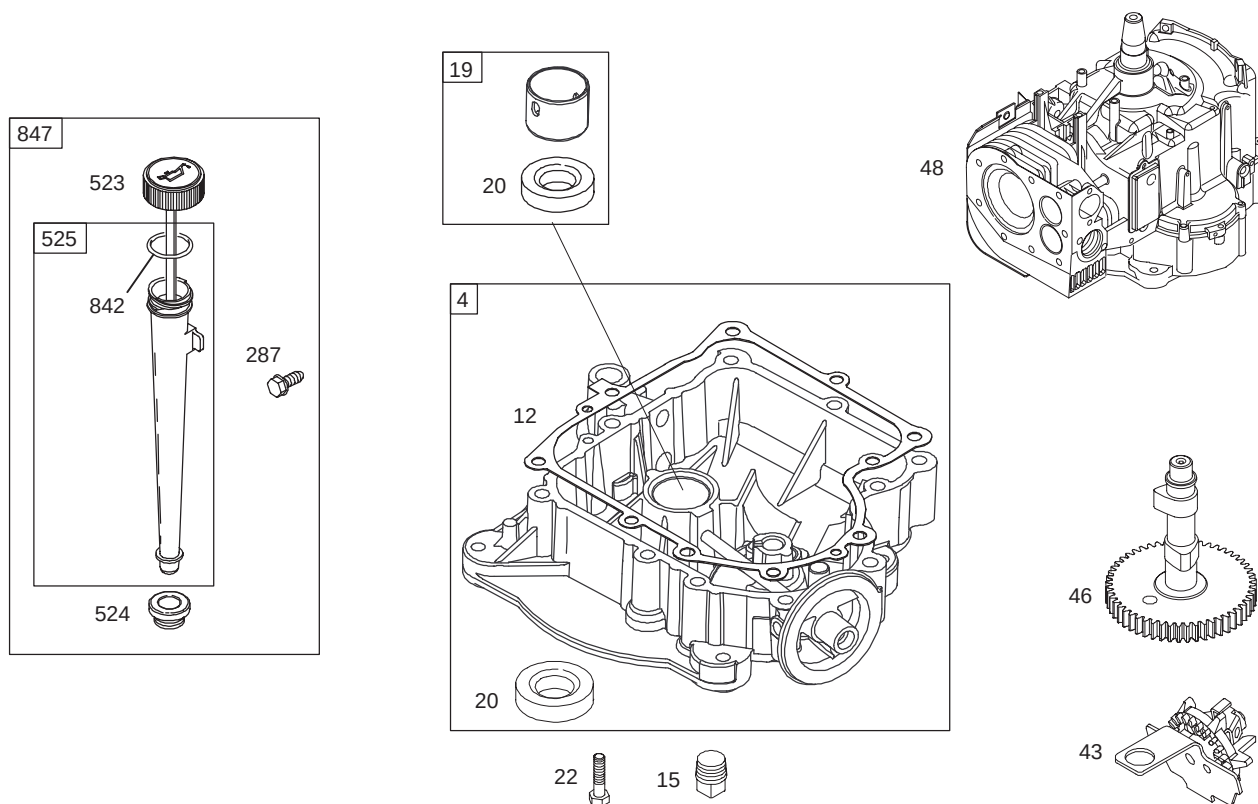 


Assemblies include all parts shown in frames.

Crankcase Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
4	494238	1	Sump—Engine
★12	692226	1	Gasket—Crankcase (.015" Thick, Std.)
★	692406	1	Gasket—Crankcase (.005" Thick)
★	692405	1	Gasket—Crankcase (.009" Thick)
15	690946	1	Plug—Oil Drain
19	490666	1	Kit—Bushing/Seal (PTO Side)
★20	291675	1	Seal—Oil (PTO Side)
22	692125	1	Screw (Engine Sump)
43	691968	1	Governor/Oil Slinger
46	697668	1	Camshaft
48	496606	1	Short Block
287	691002	1	Screw (Dipstick Tube)
523	692014	1	Dipstick
★524	281370	1	Seal—Dipstick Tube
525	691398	1	Tube—Dipstick
★842	691870	1	Seal—O Ring (Dipstick Tube)

 ★ Included in Engine Gasket Set—Ref. 358.

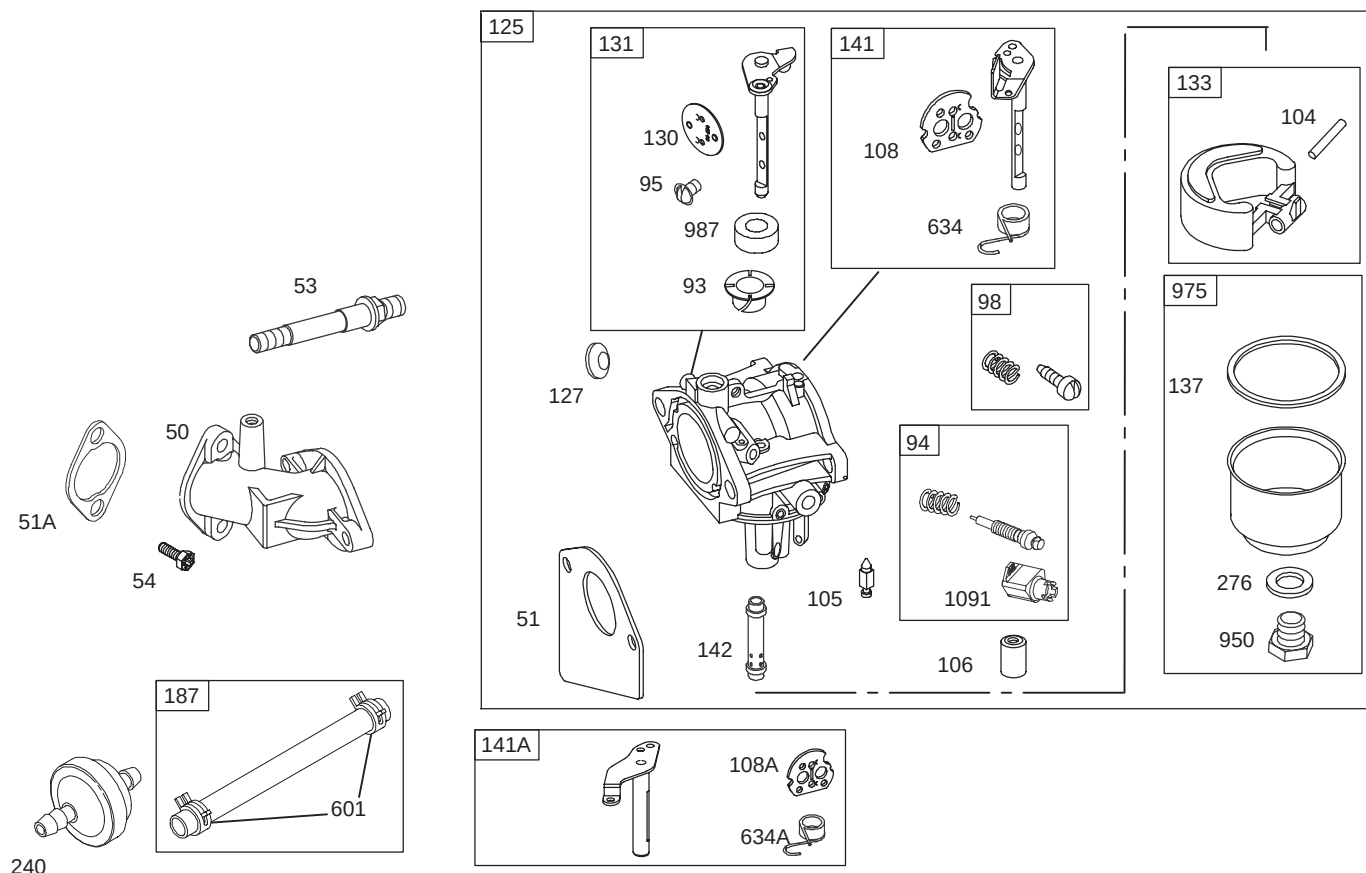

Assemblies include all parts shown in frames.

Carburetor Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
50	691711	1	Intake Manifold
◆51	692284	1	Intake Gasket
△★51A	272554	1	Intake Gasket
53	691098	1	Stud (Carburetor)
54	690953	1	Screw (Intake Manifold)
●93	690602	1	Throttle Shaft Bushing
94	498030	1	Idle Mixture Kit
●95	691636	1	Screw (Throttle Valve)
98	495800	1	Idle Speed Kit
●104	690525	1	Float Hinge Pin
●105	231855	1	Float Needle Valve
●106	690577	1	Inlet Seat
108	692344	1	Choke Valve (Manual Choke)
108A	690467	1	Valve-Choke (Choke A Matic)
125	697594	1	Carburetor
●127	694524	1	Welch Plug
130	691750	1	Throttle Valve
131	494379	1	Throttle Shaft Kit
133	494381	1	Carburetor Float


Ref. No.	Part No.	Qty.	Description
◆137	281165	1	Float Bowl Gasket
141	495097	1	Choke Shaft Kit (Manual Choke)
141A	495931	1	Choke Shaft Kit (Choke A Matic)
●142	697592	1	Carburetor Nozzle
187	691050	1	Fuel Line (Cut to Required Length)
240	298090	1	Filter-Fuel
◆276	692255	1	Sealing Washer
601	95162	1	Clamp-Hose
●634	690801	1	Spring/Seal Assembly
●634A	690802	1	Spring/Seal Assembly
950	691657	1	Float Bowl Screw
975	495933	1	Float Bowl
●987	691326	1	Throttle Shaft Seal
1091	691333	1	Cap-Limiter

△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

 ◆ Included in Carburetor Gasket Set-Ref. 977.

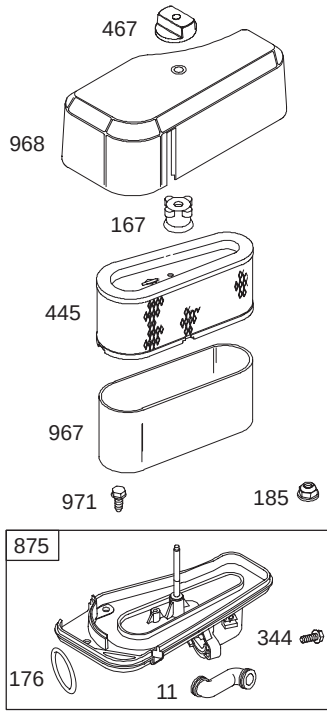

Assemblies include all parts shown in frames.


Air Cleaner Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
11	691328	1	Tube-Breather				
167	692297	1	Seal-Air Cleaner Nut				
Δ★176	691917	1	Seal-O Ring (Air Cleaner Base)				
185	690958	1	Nut (Air Cleaner Base)				
344	693675	1	Screw (Cable Clamp)				
445	496894	1	Filter-Air Cleaner Cartridge				
467	691668	1	Knob-Air Cleaner				
875	696129	1	Base-Air Cleaner				
967	272403	1	Filter-Pre Cleaner				
968	691332	1	Cover-Air Cleaner				
971	692126	1	Screw (Air Cleaner Base)				

Δ Included in Valve Gasket Set-Ref. 1095.

 ★ Included in Engine Gasket Set-Ref. 358.

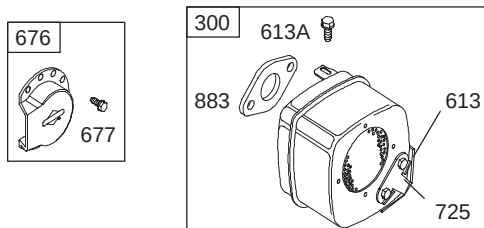

Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly


Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
300	691874	1	Muffler
613	691416	1	Screw (Muffler)
613A	692198	1	Screw (Muffler)
676	393761	1	Deflector–Muffler
677	690661	1	Screw (Muffler Deflector)
725	690420	1	Shield–Heat
Δ★883	692236	1	Gasket–Exhaust

Ref. No.	Part No.	Qty.	Description

Δ Included in Valve Gasket Set—Ref. 1095.

 ★ Included in Engine Gasket Set—Ref. 358.

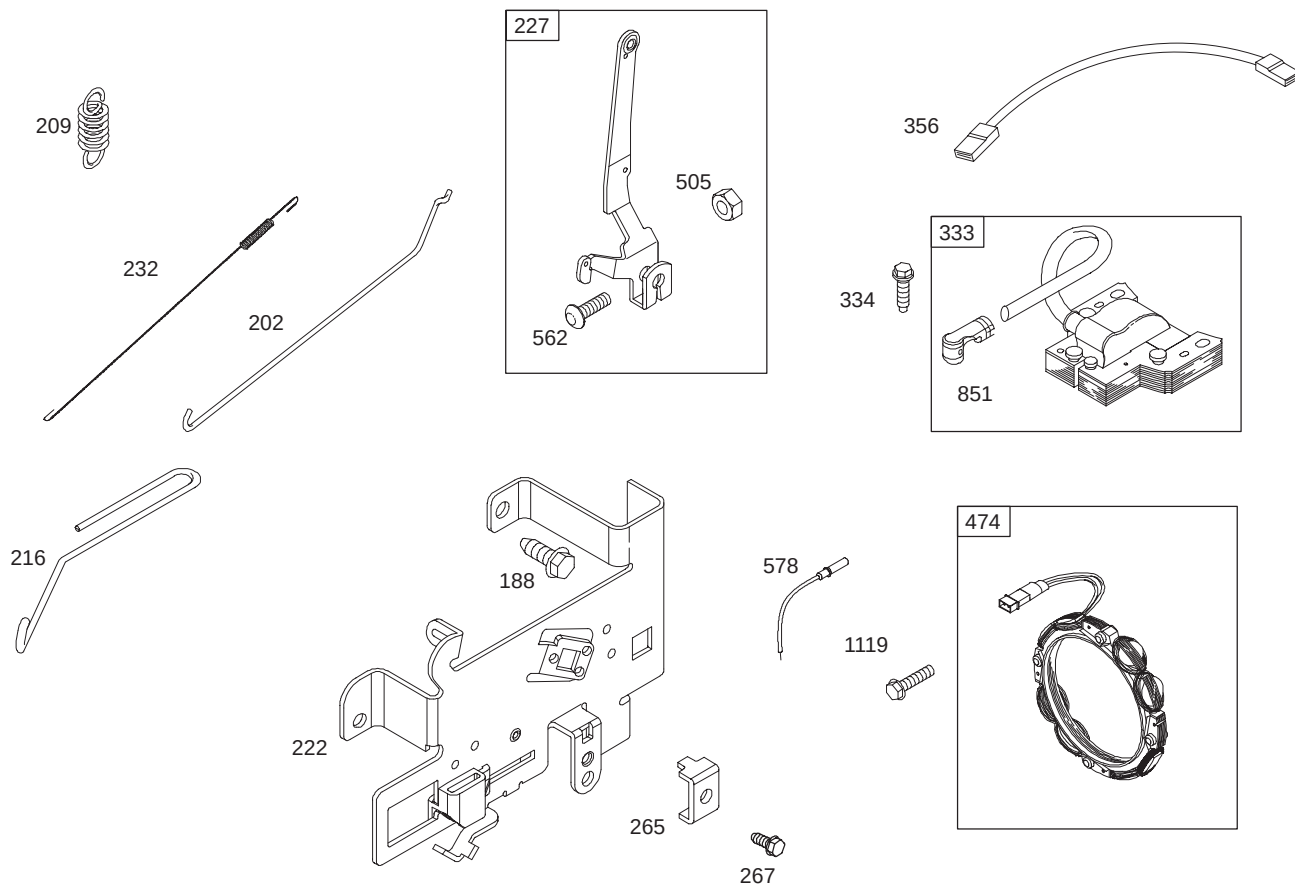


Assemblies include all parts shown in frames.

Governor Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
188	691693	1	Screw (Control Bracket)
202	691841	1	Link-Mechanical Governor
209	690576	1	Spring-Governor
216	691840	1	Link-Choke
222	694042	1	Bracket-Control
227	691374	1	Lever-Governor Control
232	691842	1	Spring-Governor Link
265	691024	1	Clamp-Casing
267	695134	1	Screw (Casing Clamp)
333	492341	1	Armature-Magneto
334	691061	1	Screw (Magneto Armature)
356	690799	1	Wire-Stop
474	696578	1	Alternator
505	691251	1	Nut (Governor Control Lever)
562	92613	1	Bolt (Governor Control Lever)
578	692306	1	Wire Assembly


Ref. No.	Part No.	Qty.	Description
851	493880	1	Terminal-Spark Plug
1119	691183	1	Screw (Alternator)

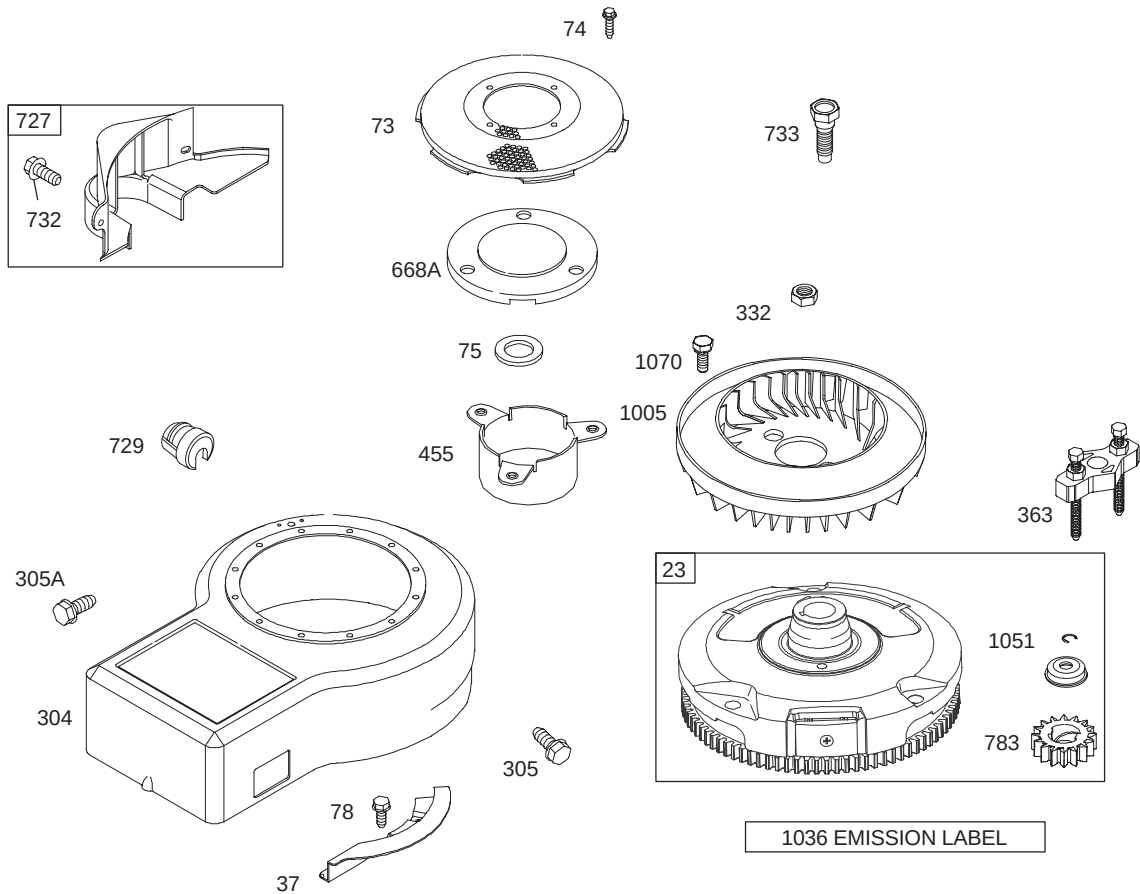 

Assemblies include all parts shown in frames.

Blower Housing Assembly
Engine Briggs and Stratton Model 28M707-1127-E1



Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
23	693557	1	Flywheel	733	691658	1	Screw (Crankshaft Extension)
37	690456	1	Guard-Flywheel	783	693713	1	Gear-Pinion
73	690492	1	Screen-Rotating	1005	695056	1	Fan-Flywheel
74	691655	1	Screw (Rotating Screen)	1036	696770	1	Label-Emission
75	690582	1	Washer (Flywheel)	1051	691265	1	Ring-Retaining
78	690661	1	Screw (Flywheel Guard)	1070	690372	1	Screw (Fan Retainer)
304	690847	1	Housing-Blower				
305	690960	1	Screw (Blower Housing)				
305A	692127	1	Screw (Blower Housing)				
332	691029	1	Nut (Flywheel)				
363	19203	1	Flywheel Puller				
455	691173	1	Cup-Flywheel				
668A	691323	1	Spacer				
727	490324	1	Cover-Starter Drive				
729	690596	1	Clip-Wire				
732	691002	1	Screw (Starter Drive Cover)				

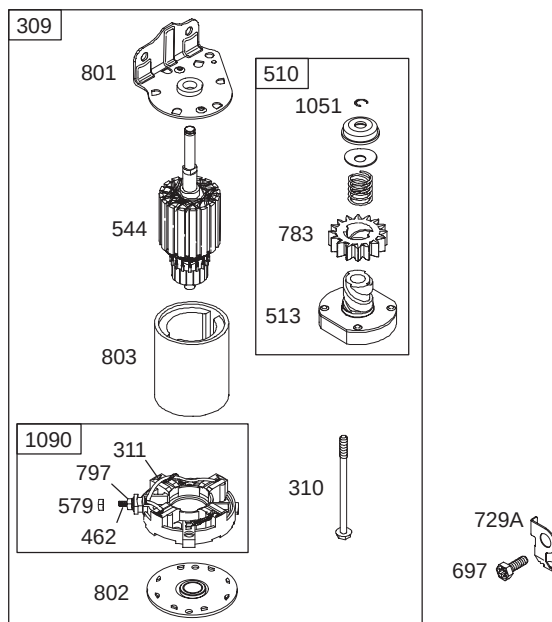 

Starter Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
309	693551	1	Motor—Starter
310	690323	1	Bolt (Starter Motor)
311	497608	1	Brush Set
462	691261	1	Washer (Brush Retainer)
510	693699	1	Drive—Starter
513	692024	1	Clutch—Drive
544	692034	1	Armature—Starter
579	691029	1	Nut (Brush Retainer)
697	690372	1	Screw (Drive Cap)
729A	691224	1	Clip—Wire
783	693713	1	Gear—Pinion
797	693167	1	Nut (Brush Retainer)
801	691283	1	Cap—Drive
802	691286	1	Cap—End
803	693757	1	Housing—Starter
1051	691265	1	Ring—Retaining
1090	691293	1	Retainer—Brush

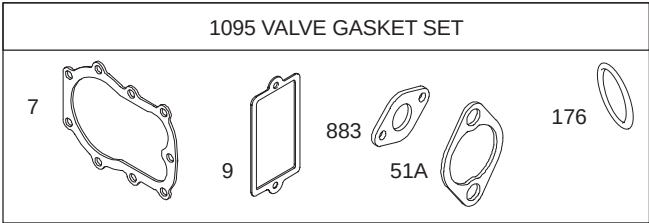 
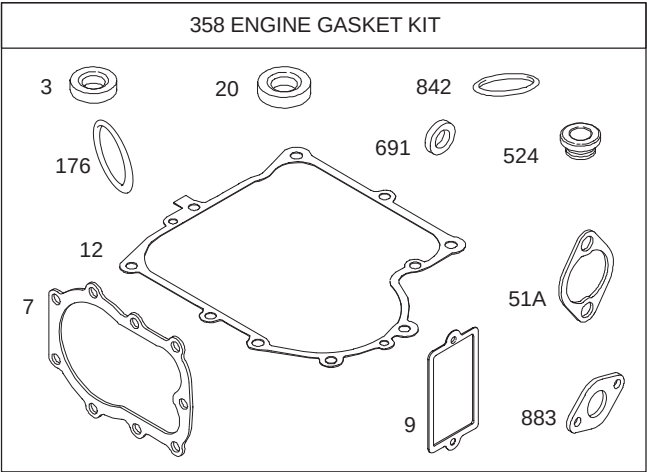 


Assemblies include all parts shown in frames.

Gasket Assembly
Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
★3	391086	1	Seal-Oil (Magneto Side)				
Δ★7	271866	1	Gasket-Cylinder Head				
Δ★9	27803	1	Gasket-Breather				
★12	692226	1	Gasket-Crankcase (.015" Thick)				
★	692406	1	Gasket-Crankcase (.005" Thick)				
★	692405	1	Gasket-Crankcase (.009" Thick)				
★20	291675	1	Seal-Oil				
Δ★51A	272554	1	Gasket-Intake				
Δ★176	691917	1	Seal-O Ring (Air Cleaner Base)				
358	494241	1	Gasket Set-Engine				
★524	281370	1	Seal-Dipstick Tube				
★691	692407	1	Seal-Governor Shaft				
★842	691870	1	Seal-O Ring (Dipstick Tube)				
Δ★883	692236	1	Gasket-Exhaust				
1095	498539	1	Gasket Set-Valve				

  Δ Included in Valve Gasket Set-Ref. 1095.
★ Included in Engine Gasket Set-Ref. 358.

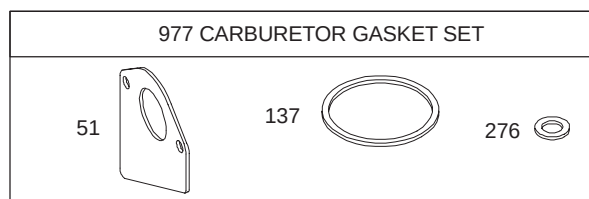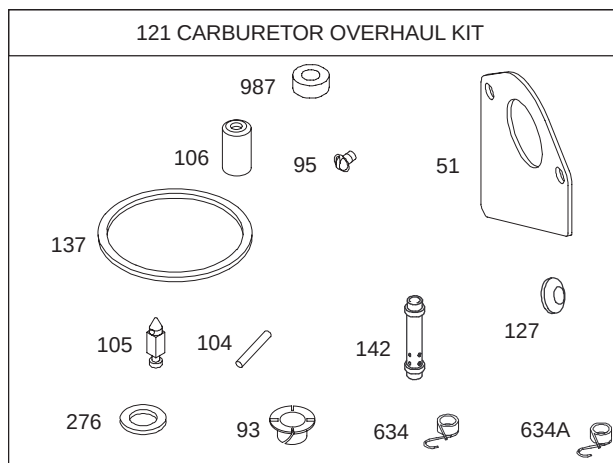

Assemblies include all parts shown in frames.

Carburetor Overhaul Kit Assembly

Engine Briggs and Stratton Model 28M707-1127-E1

Ref. No.	Part No.	Qty.	Description
●◆51	692284	1	Gasket—Intake
●93	690602	1	Bushing—Throttle Shaft
●95	691636	1	Screw (Throttle Valve)
●104	690525	1	Pin—Float Hinge
●105	231855	1	Valve—Float Needle
●106	690577	1	Seat—Inlet
121	499220	1	Kit— Carburetor Overhaul
●127	694524	1	Plug—Welch
●◆137	281165	1	Gasket—Float Bowl
●142	697592	1	Nozzle—Carburetor
●◆276	692255	1	Washer—Sealing
●634	690801	1	Spring/Seal Assembly
●634A	690802	1	Spring/Seal Assembly
977	494385	1	Gasket Set—Carburetor
●987	691326	1	Seal—Throttle Shaft

Ref. No.	Part No.	Qty.	Description

- Included in Carburetor Overhaul Kit—Ref. 121.
- ◆ Included in Carburetor Gasket Set—Ref. 977.

