



Count on it.

Parts Catalog

Traction Switch Bypass Kit TX 1000 Compact Tool Carrier

Model No. 140-5896



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Traction Switch Bypass Kit Assembly 4

Traction Control Valve Assembly No. 145-3279 6


Traction Switch Bypass Kit Assembly

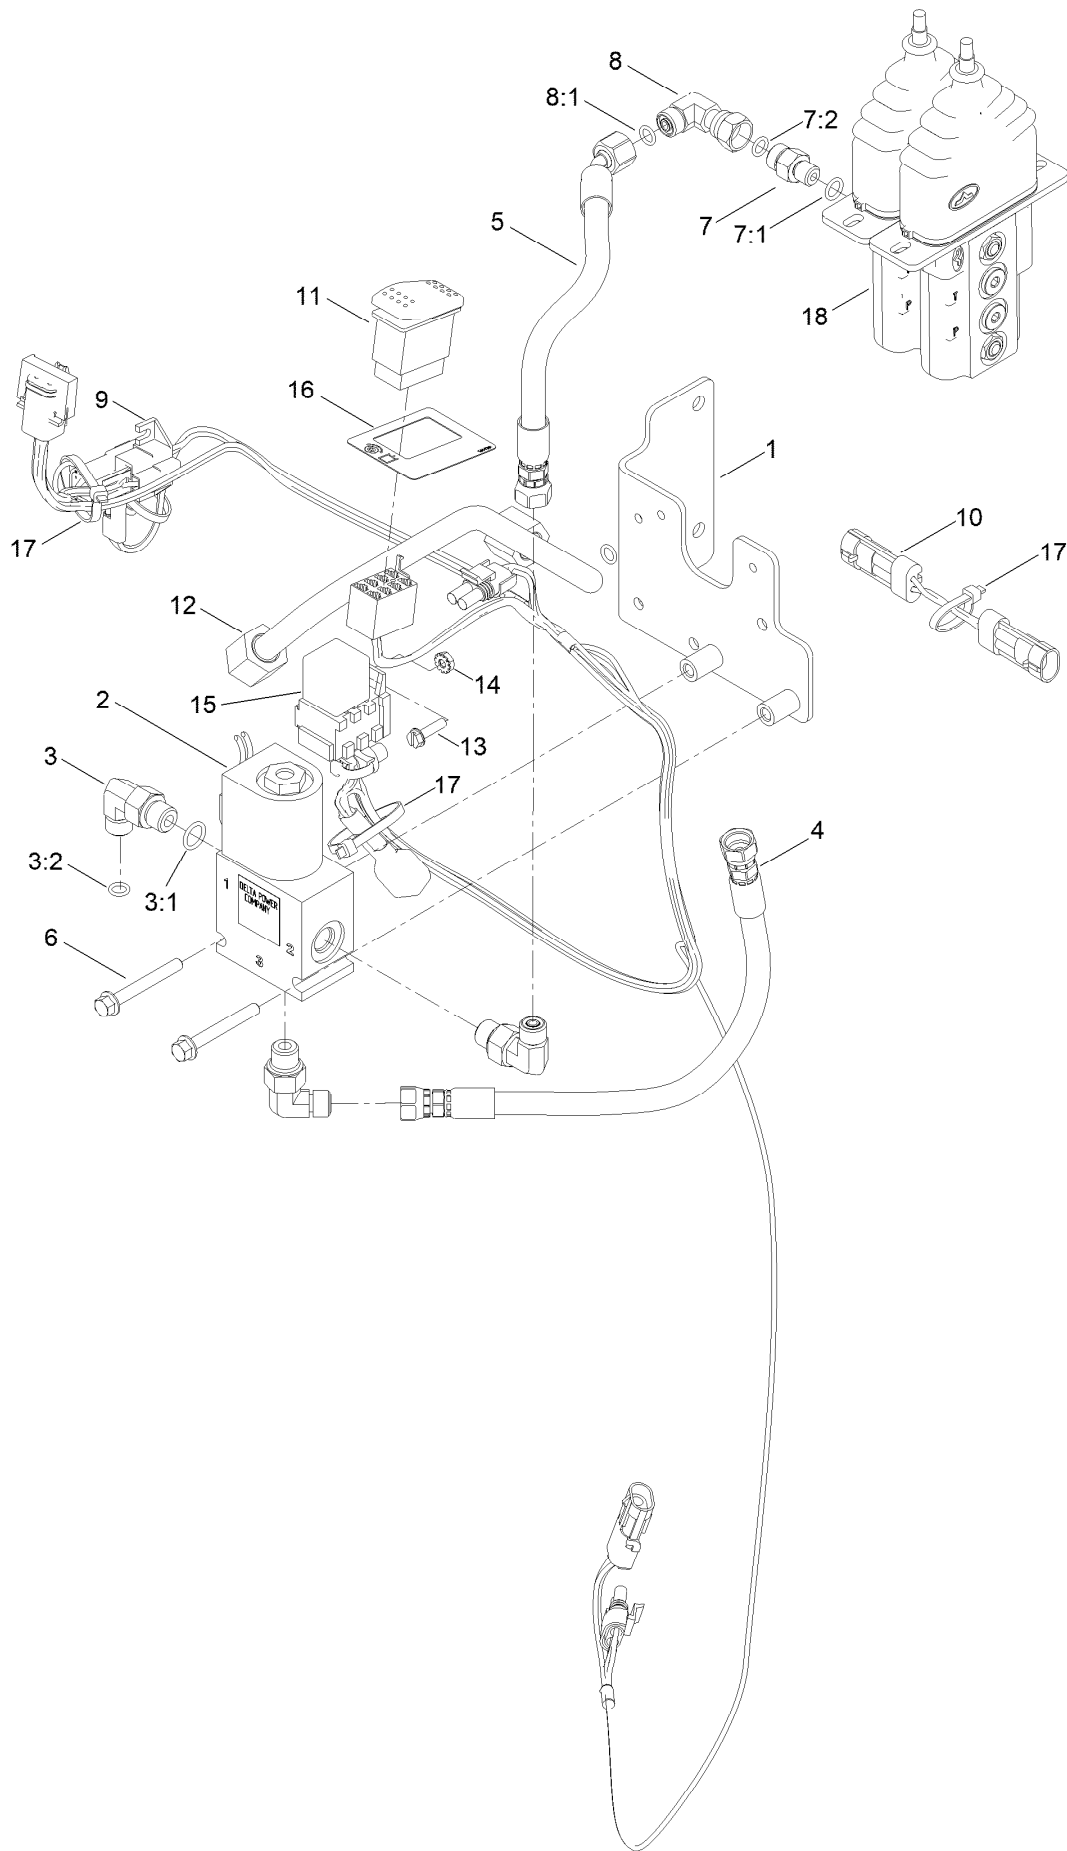

Traction Switch Bypass Kit Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	140-5895-0P	1	Bracket	9	138-0811	1	Harness-Wire, Traction Enable
2	158-627	1	Solenoid Valve	10	138-0810	1	Harness-Wire, Traction Enable Jumper
3	340-82	3	Fitting-Elbow, 90 DEG	11	106-2027	1	Switch-Intermittent
3:1	237-42	1	O-Ring	12	131-9226	1	Hydraulic Tube ASM
3:2	237-21	1	O-Ring	13	32105-13	1	Screw-HWH
4	140-5877	1	Hose ASM	14	32149-7	1	Nut-Keps
5	140-5878	1	Hose ASM	15	1-643275	1	Relay
6	3234-34	2	Screw-HHF	16	144-7365	1	Decal, Traction
7	340-92	2	Fitting-Straight	17	3290-378	3	Tie-Cable
7:1	237-78	1	O-Ring	18	145-3279	1	Valve-Control (Traction)
7:2	237-21	1	O-Ring				
8	92-2745	2	Elbow-90				
8:1	237-21	1	O-Ring				

Traction Control Valve Assembly No. 145-3279

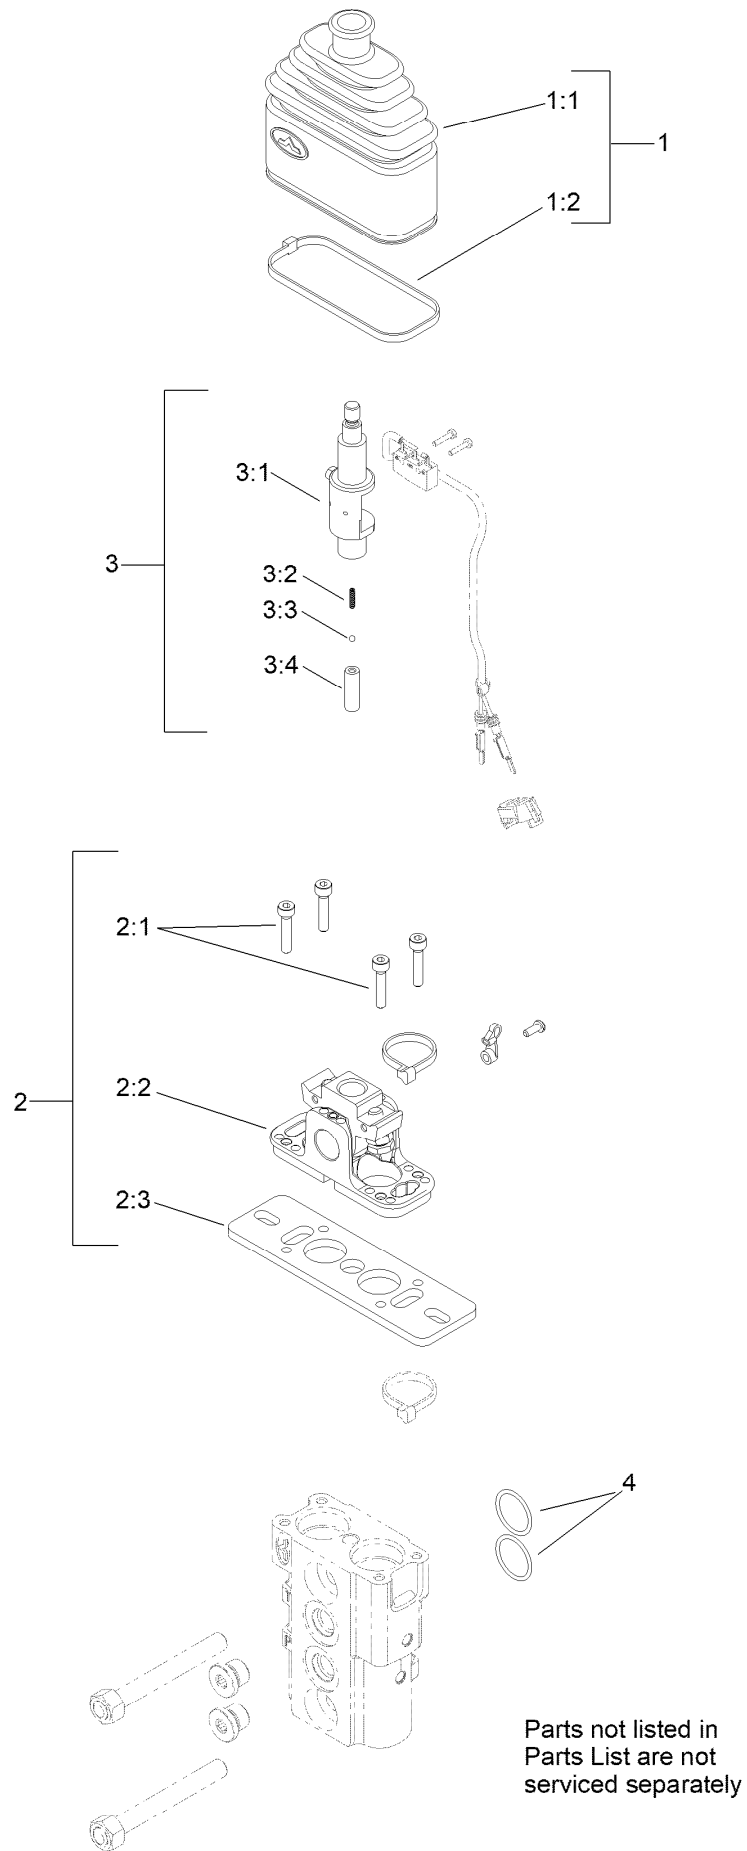

Traction Control Valve Assembly No. 145-3279 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-6034	2	Bellow Kit
1:1		1	Bellow-Rubber ●
1:2		1	Tie-Cable ●
2	132-6036	2	Fulcrum Kit
2:1		4	Screw ●
2:2		1	Support Kit ●
2:3		1	Plate-Mounting ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	132-6037	2	Switch Holder Lever Kit
3:1		1	Lever-Holder, Switch ●
3:2		1	Spring-Return ●
3:3		1	Sphere ●
3:4	100-7246	1	Holder-Spring ●
4		2	O-Ring

● Not serviced separately



Count on it.