



## 62in Mower Service Kit 200 Series Z Master®

Model No. 105-6176 - 240000001 and up.

### Parts Catalog

---

#### Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

#### Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

#### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. ....	as required	HYD. ....	hydraulic
ASM. ....	assembly	INC. ....	incorporated
CARR. ....	carriage	LH. ....	left hand
DEG. ....	degrees	NI. ....	nylon insert
FH. ....	flat head	PPH. ....	phillips pan head
GA. ....	gauge	PTH. ....	phillips truss head
HF. ....	hex flange	PTO. ....	power take off
HH. ....	hex head	RH. ....	right hand
HHF. ....	hex head flange	SFH. ....	slotted fillister head
HHFTF. ....	hex head flange thread forming	SHH. ....	slotted hex head
HJ. ....	hex jam	SHWH. ....	slotted hex washer head
HLH. ....	hex lag head	SPH. ....	slotted pan head
HOC. ....	height-of-cut	SQH. ....	square head
HS. ....	hex	SRH. ....	slotted round head
HSBH. ....	hex socket button head	STD. ....	standard
HSFH. ....	hex socket flat head	TAP. ....	self tapping
HS. ....	hex socket head	TTH. ....	torx truss head
HWH. ....	hex washer head	WH. ....	wing head
HWHTF. ....	hex washer head thread forming		

## Footnotes

- ❶ Not serviced separately
- ❷ For use only on Liquid Cooled and Electronic Fuel Injection (EFI) Models prior to 230000001 and all Models after 230000001.


## Contents

Description	Page
Deck and Wheel Gage Assembly	..... 3
Deck Spindle Assembly	..... 4
Belt and Idler Arm Assembly	..... 5
Deck and Deflector Assembly No. 106-5864	..... 6
Deck Decal Assembly No. 106-5863	..... 7

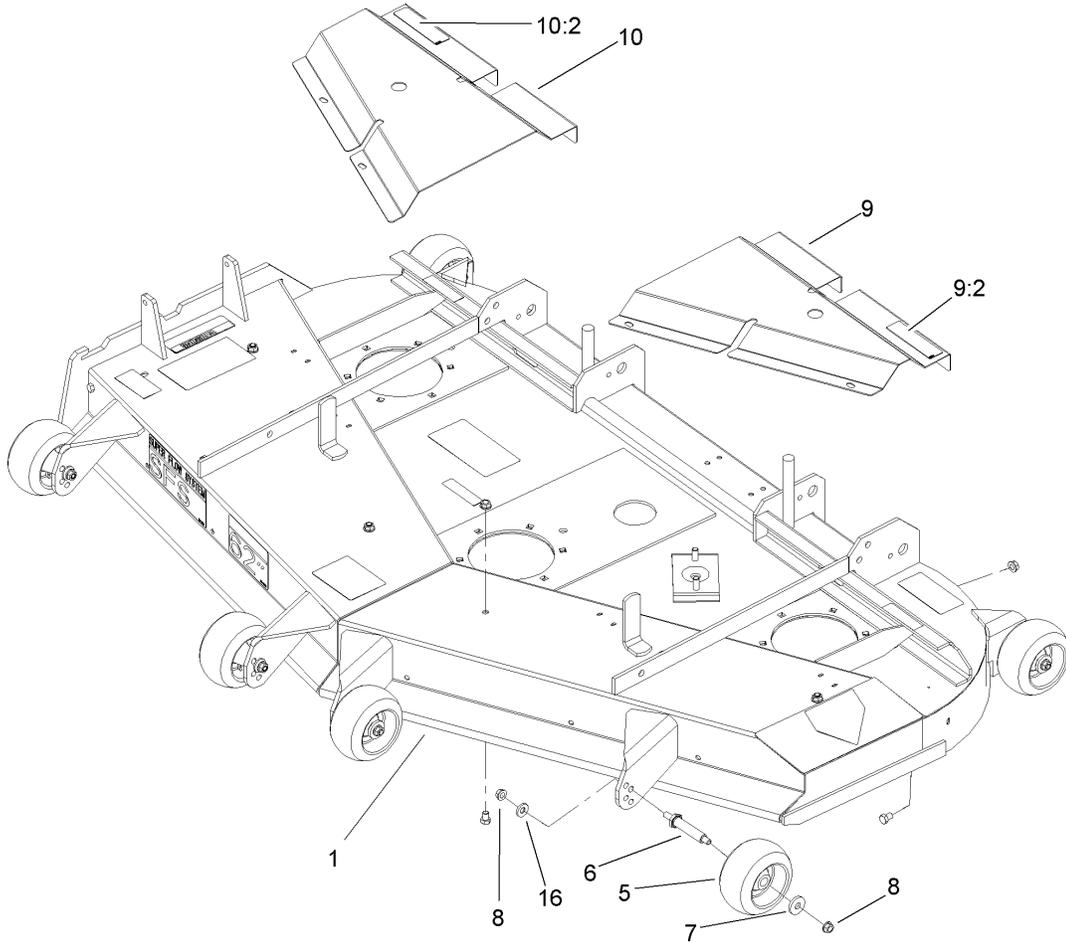

## Deck and Wheel Gage Assembly


Ref	Part No.	Qty.	Description	
1	106-5864	1	Deck ASM	
5	68-2730	6	Wheel-Gage	
6	99-2842	6	Spacer	
7	1-373034	6	Washer	
8	3290-357	18	Nut-HHF	
9	98-5955	1	LH Cover ASM	
9:2	67-5360	1	Decal-Danger	
10	98-5956	1	RH Cover ASM	
10:2	67-5360	1	Decal-Danger	
16	98-5975	6	Washer-Belleville	

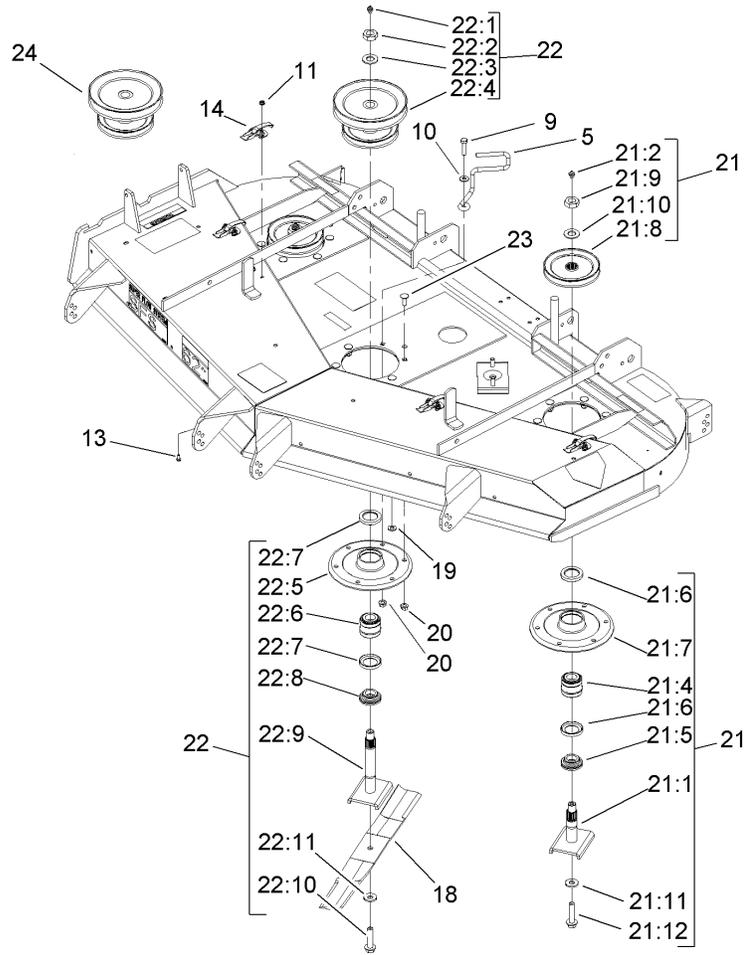

## Deck Spindle Assembly

Ref	Part No.	Qty.	Description
5	99-8933	1	Guide-Belt
9	323-8	1	Screw-HH
10	3256-3	1	Washer-Flat
11	32128-17	8	Nut-Lock, Flange
13	3290-321	8	Screw-HWH
14	249-21	4	Clamp-Slotted
18	44-6250	3	Blade
19	3256-24	1	Washer-Flat
20	32128-21	18	Nut-HF
21	99-4640	2	Outer Spindle ASM
21:1	27-0920	1	Shaft
21:2	302-2	1	Fitting-Grease
21:4	46-8530	1	Bearing ASM
21:5	27-0950	1	Spacer
21:6	253-139	2	Seal-Oil
21:7	61-4160	1	Housing-Spindle
21:8	99-4614	1	Pulley And Hub ASM
21:9	32146-20	1	Nut-Jam
21:10	7-4150	1	Washer
21:11	1-513435	1	Washer-Spring
21:12	92-5816	1	Bolt-Blade
22	105-1688	1	Spindle Housing ASM
22:1	302-2	1	Fitting-Grease
22:2	32146-20	1	Nut-Jam


Ref	Part No.	Qty.	Description
22:3	92-5836	1	Washer
22:4	99-4939	1	Pulley And Hub ASM
22:5	61-4160	1	Housing-Spindle
22:6	46-8530	1	Bearing ASM
22:7	253-139	2	Seal-Oil
22:8	27-0950	1	Spacer
22:9	105-1686	1	Spindle Shaft ASM
22:10	92-5816	1	Bolt-Blade
22:11	1-513435	1	Washer-Spring
23	3231-22	17	Screw-CARR
24	100-4307	1	Pulley/hub ASM

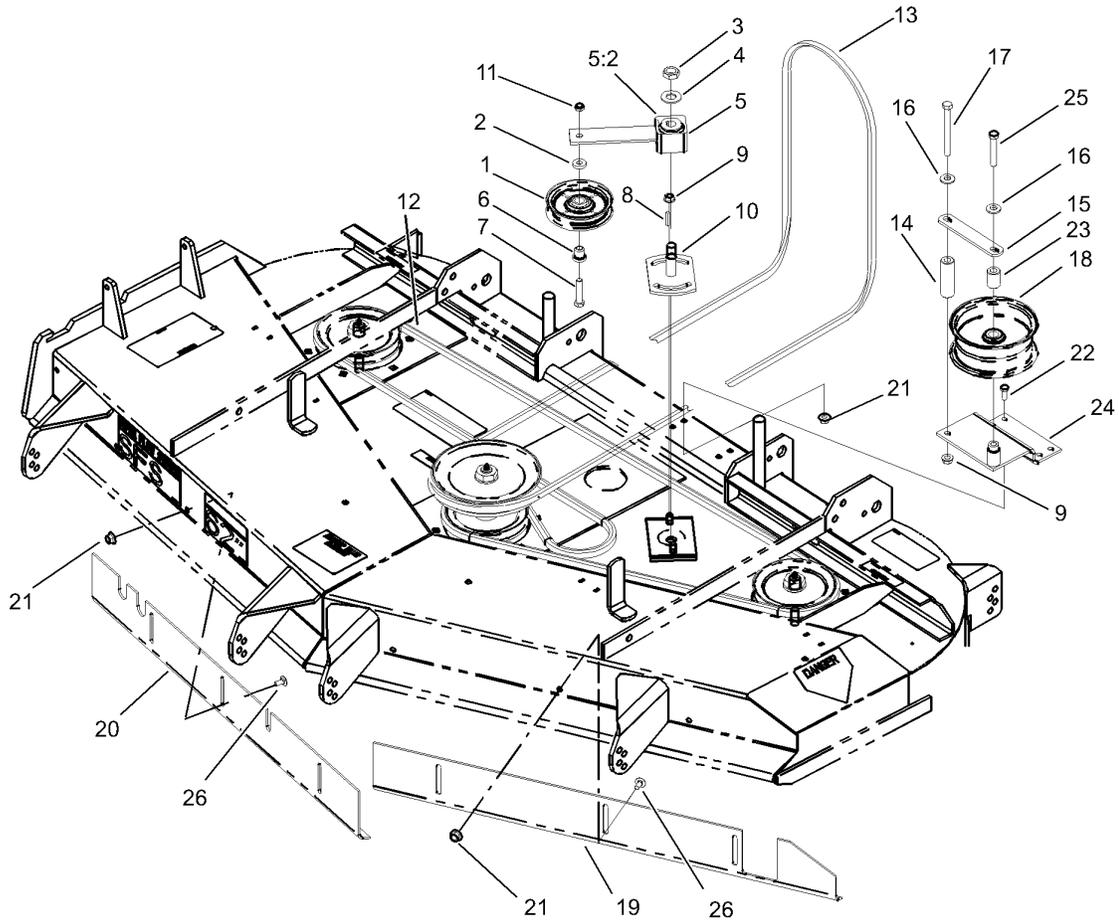

## Belt and Idler Arm Assembly

Ref	Part No.	Qty.	Description
1	65-5940	1	Pulley-Idler
2	7-0081	1	Washer-Flat
3	3296-71	1	Nut-Lock NI
4	3256-27	1	Washer-Flat
5	27-8580	1	Idler Arm ASM
5:2	27-8490	1	Bushing-Rubber
6	65-5950	1	Bushing-Pulley
7	3211-8	1	Screw-HH
8	5-1077	1	Key-Square
9	3290-357	3	Nut-HHF
10	44-6301	1	Plate-Idler, LH
11	3296-5	1	Nut-Lock, NI
12	44-6260	1	V-Belt
13	99-4647	1	V-Belt-Drive, Deck
14	99-4659	1	Spacer-Bracket
15	1-653189	1	Plate
16	98-5975	2	Washer-Belleville
17	323-42	1	Screw-HH
18	1-413099	1	Pulley-Idler
19	99-2833-03	1	Baffle-Front, LH
20	99-2834-03	1	Baffle-Front, RH
21	32128-20	10	Nut-HF
22	322-3	4	Screw-HH
23	1-653190	1	Spacer

Ref	Part No.	Qty.	Description
24	99-4684-01	1	Bracket-Pulley
25	323-11	1	Screw-HH
26	3230-18	6	Screw-CARR

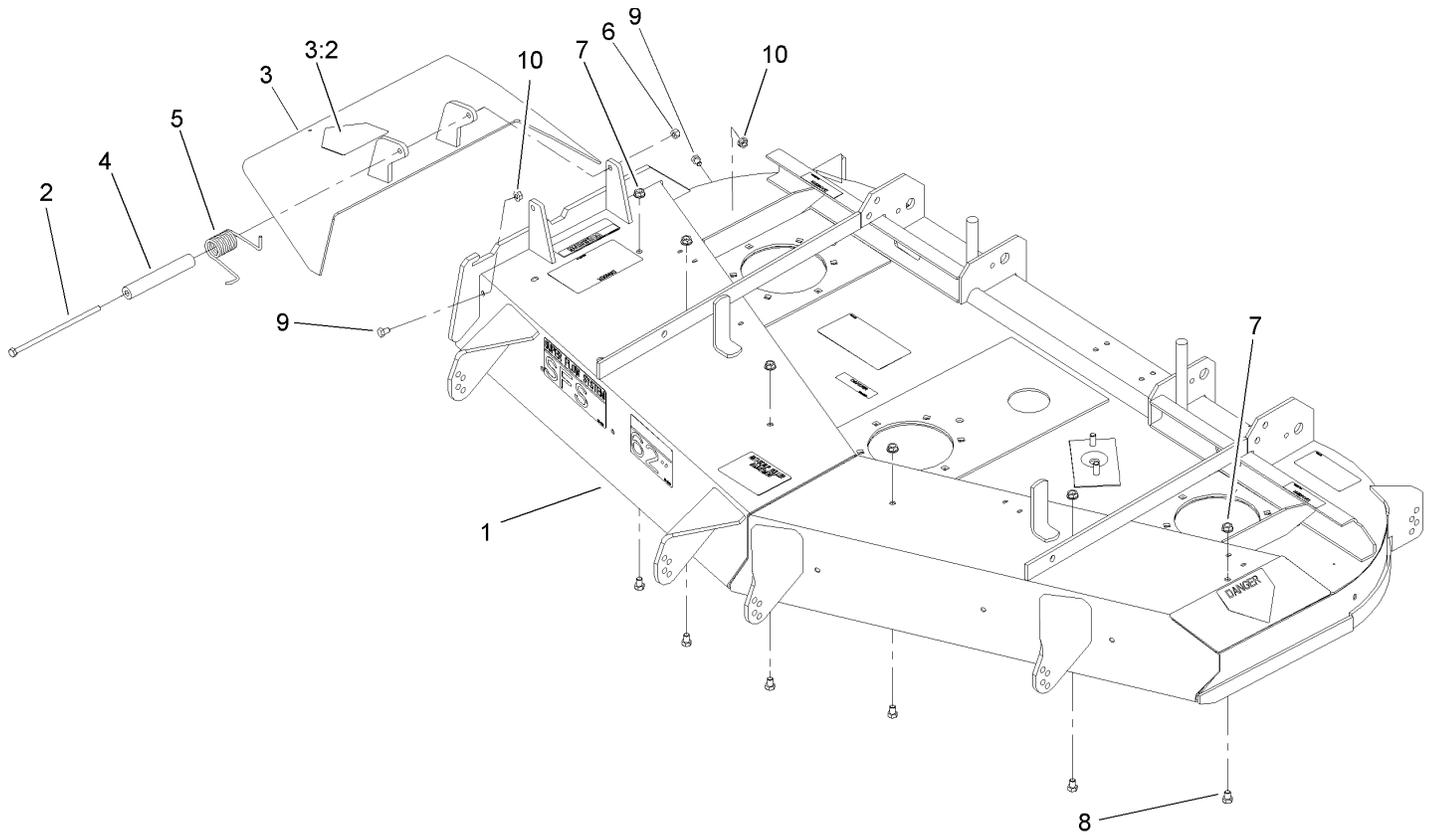

## Deck and Deflector Assembly No. 106-5864

Ref	Part No.	Qty.	Description
❶ 1		1	Deck ASM
2	322-50	1	Screw-HH
3	105-3605	1	Deflector ASM
3:2	93-1122	1	Decal-Danger
4	105-4622	1	Spacer
5	104-8554	1	Spring-Torsion
6	3296-29	1	Nut-Lock, NI
7	3290-357	6	Nut-HHF
8	323-2	6	Screw-HH
9	322-1	2	Screw-HH
10	32128-20	2	Nut-HF

--	--	--	--



