TORO_®

CE Decal Kit Dingo[®] TX 420 and TX 425 Compact Utility Loader Model No. 22362

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2003 All Rights Reserved

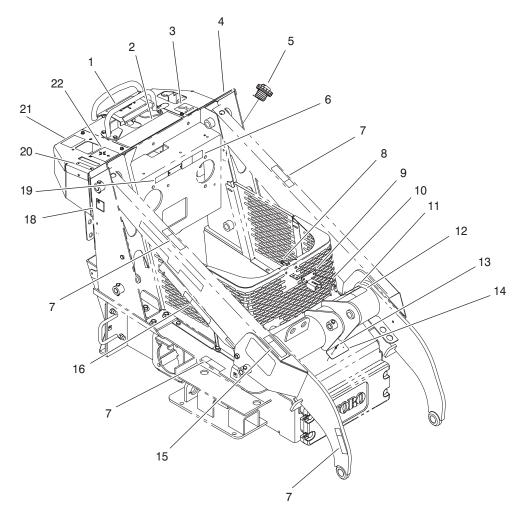

Sheet No.: 2

Decal Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104–9952	1	Decal-Traction				
2	104–9957	1	Decal–Danger				
3	104–9955	1	Decal–Auxilary				
4	104–9956	1	Decal–Panel				
5	93–7170	1	Cap–Fuel				
6	93–7814	1	Decal-Danger				
7	100-8821	6	Decal–Pinch				
8	3296–42	2	Nut–Lock, NI				
9	104–2845–03	1	Cover-Latch				
10	3229–28	2	Screw-CARR				
11	100-8822	1	Decal–No Rider				
12	104–9950	1	Decal-Caution				
13	3269–31	2	Rivet–Pop				
14	104–9983	1	Plate–Hot Surface				
15	104–9951	1	Decal-Caution				
16	104–9954	1	Decal–Danger				
18	105–7895	1	Decal–Lwa 106				
19	104–9981	1	Decal–Info 22306				
19	104–9984	1	Decal–Info 22307				
20	104–9958	1	Decal–Brake				
21	104–9977	1	Decal–Interlock				
22	104–9953	1	Decal–Loader				