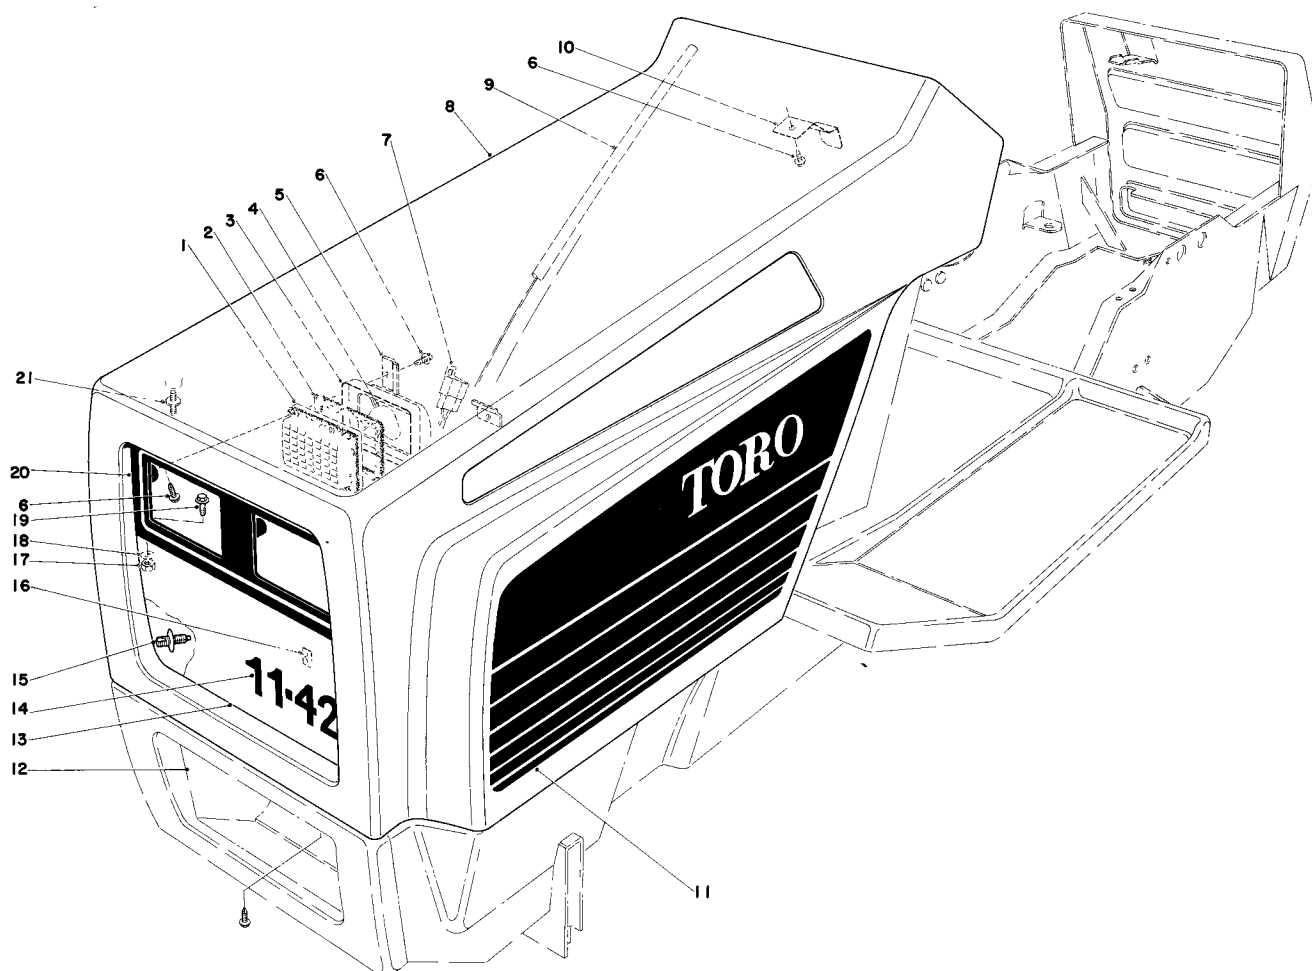 


1980

FORM NO. 3311-545

TORO®

MODEL NO. 57356 — 0000001 & UP

**PARTS
CATALOG****1142 FRONT ENGINE RIDER****HOOD ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	219-14	Lens	2
2	219-13	Lens Gasket	4
3	38-2580	Reflector Assembly	2
4		Bulb GE #1156	2
5	28-0050	Clamp Headlight	3
6	32104-76	Self Tapping Screw	12
7	218-493	Connector Body	1
8	8-6679	Hood (Incl. Ref. #15 & 21)	1
9	28-3810	Rubber Extrusion Seal	2
10	27-9130	Spring Latch	1
11	28-4230	Decal — Hood L.H.	1
*	28-4240	Decal — Hood R.H.	1
12	28-0010	Grille Lower	1

Ref. No.	Part No.	Description	No. Used
13	36-2090	Grille Headlight	1
14	36-2660	Name Plate — Grille	1
15	27-9120	Stud Hinge Bracket	4
16	3290-299	Tinnerman Nut	2
17	32153-1	Locknut	2
18	3256-21	Washer	2
19	3290-144	Hex Hd. Machine Screw	2
20	28-0040	Panel Headlight	1
21	39-6800	Stud Hood Duct	4
*	8-3579	Headlight Assy. (Incl. Ref. #1 - 4)	2
*	8-3599	Loose Parts Bag	1
*	3290-378	Cable Tie	2

 
*Not Illustrated

COPYRIGHT © ALL RIGHTS RESERVED

The Toro Company — 1979

MINNEAPOLIS, MN 55420 — U.S.A.


PRICE \$1.00

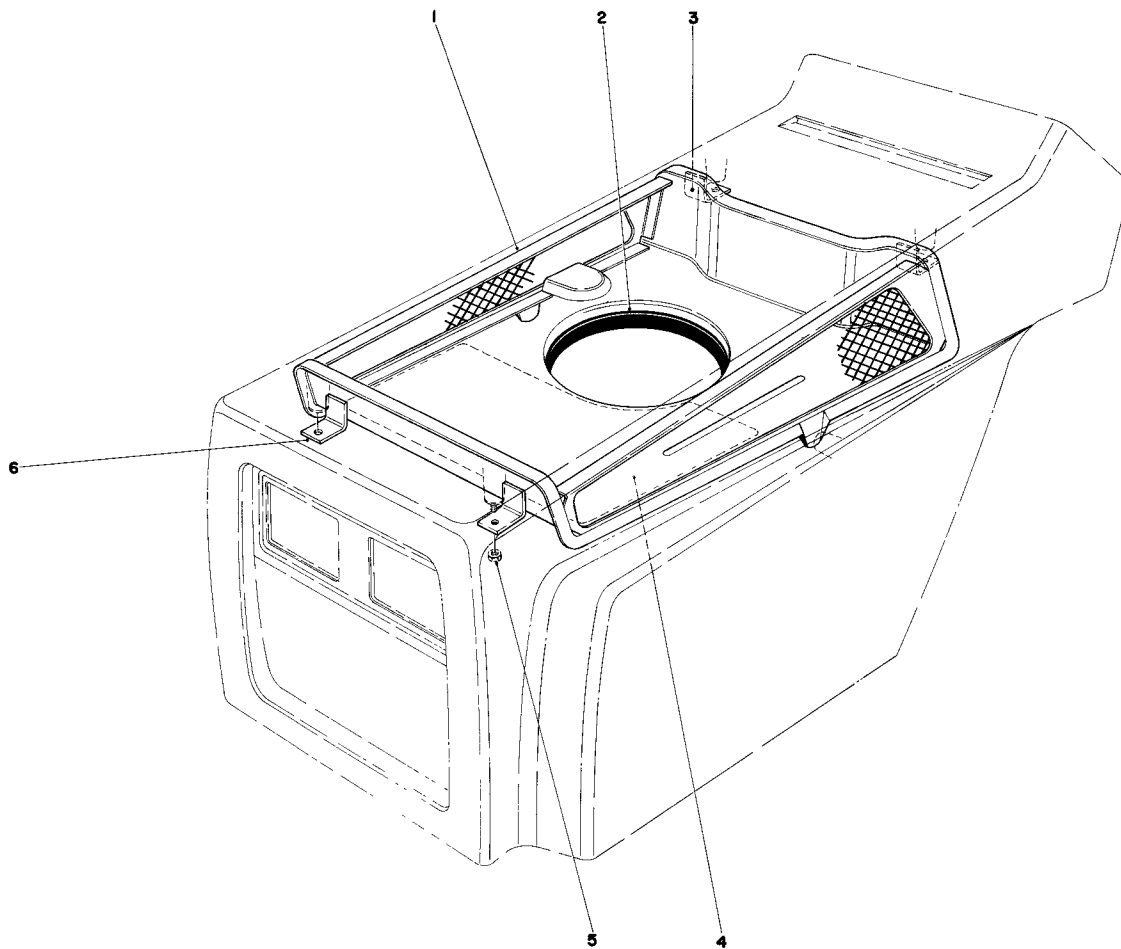

HOOD DUCT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	39-5090	Duct Hood	1
2	36-8160	Seal Engine	1
3	39-8880	Bracket — Duct Support Rear	2

Ref. No.	Part No.	Description	No. Used
4	36-5190	Decal — Service	1
5	32152-4	Locknut	4
6	39-5340	Bracket Duct Support	2

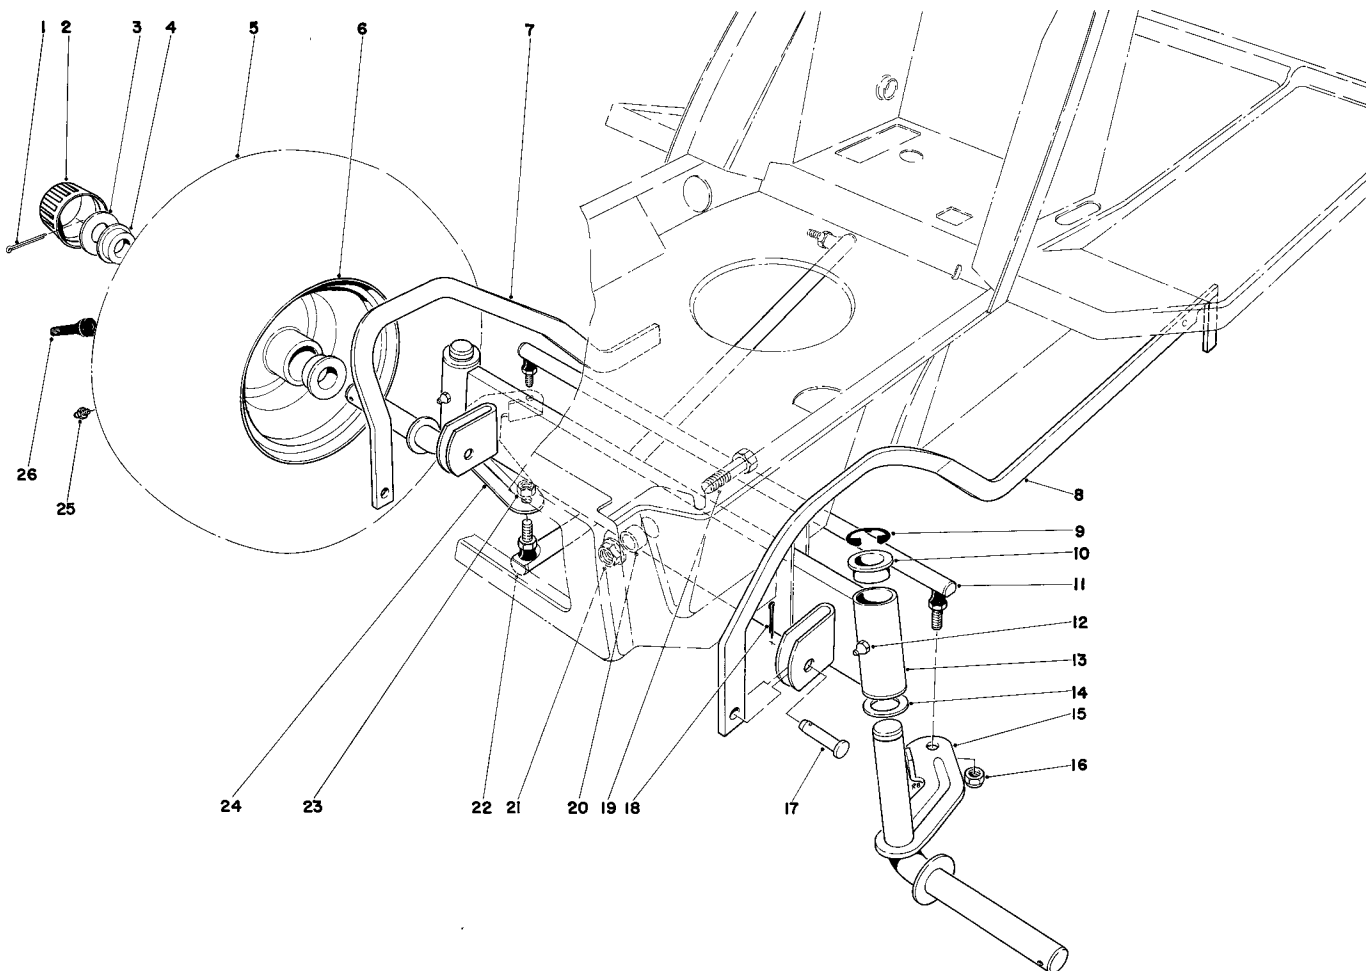 


FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-12	Cotter Pin	2
2	28-0060	Hub Cap	2
3	28-2480	Washer	2
4	251-210	Ball Bearing	4
5	231-99	Tire	2
6	242-65	Rim	2
7	40-1610	Scissors Link – Front R.H.	1
8	40-1620	Scissors Link – Front L.H.	1
9	32151-48	E-Ring	2
10	27-9080	Flange Bearing	4
11	28-0070	Tie Rod Steering	1
12	302-49	Grease Fitting	2
13	36-3420	Front Axle (Incl. Ref. #10)	1
14	3-6498	Thrust Washer	2

Ref. No.	Part No.	Description	No. Used
15	33-3170	Spindle L.H.	1
16	32146-4	Locknut	2
17	283-2	Clevis Pin	2
18	3272-6	Cotter Pin	2
19	325-6	Capscrew	1
20	28-0380	Spacer Front Axle	1
21	32128-23	Flange Nut	1
22	39-1910	Steering Arm	1
23	32146-6	Locknut	1
24	33-3180	Spindle R.H.	1
25	302-22	Grease Fitting	2
26	232-27	Valve Stem w/Cap	2
*	232-39	Tube (Optional)	2

 *Not Illustrated

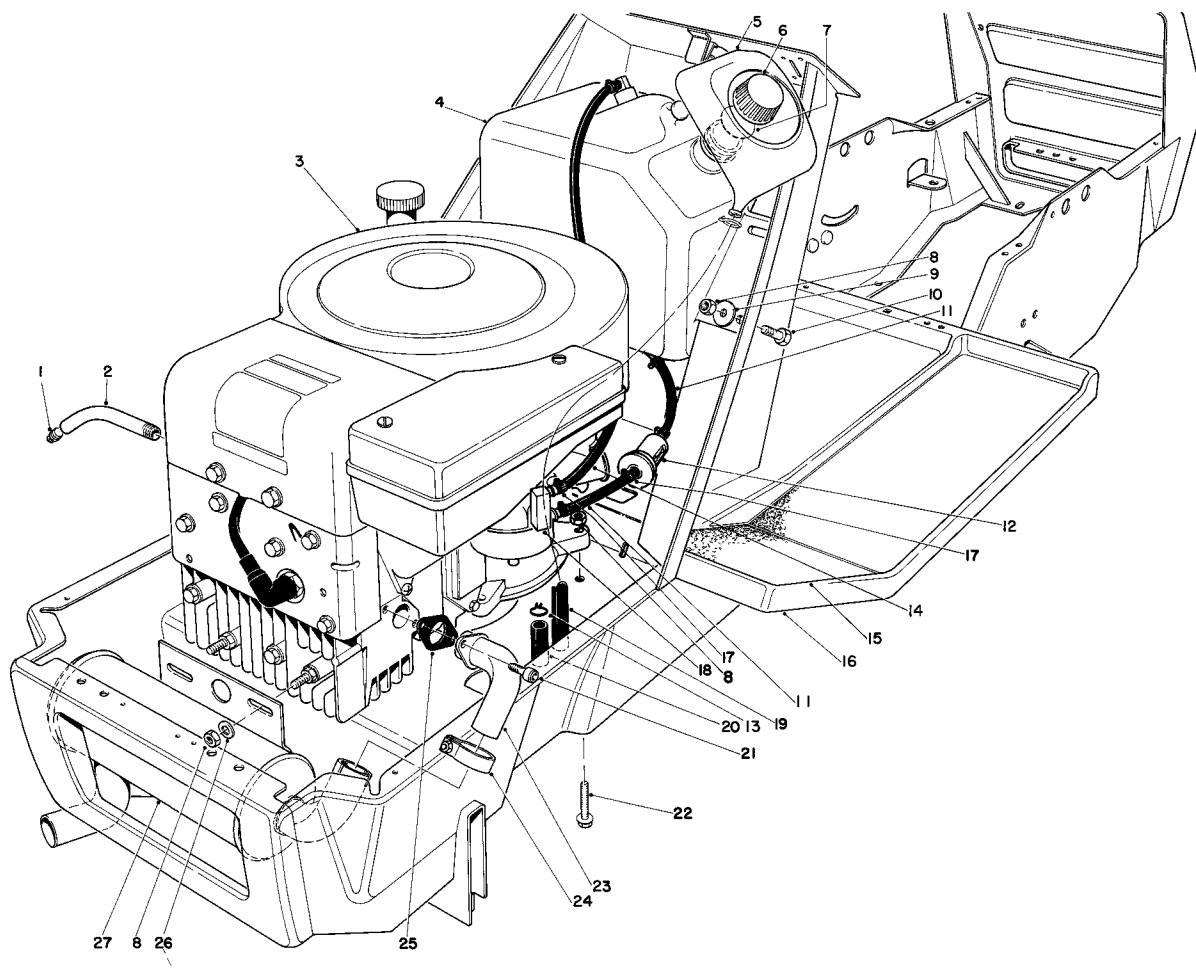


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	281-1	Pipe Plug	1
2	28-8650	Drain Tube Oil	1
3	221-606	Engine	1
4	36-3350	Gas Tank (Incl. Ref. #5)	1
5		Funnel Overflow	1
6	28-9680	Gas Cap Assembly (Incl. Ref. #7)	1
7	28-9670	Gasket Gas Cap	1
8	32152-1	Locknut	10
9	5-1350	Washer	4
10	322-3	Capscrew	4
11	33-2140	Gas Hose	2
12	38-8700	Fuel Filter	1
13	2412-62	Hose Clamp	2
14	29-7870	Hose Gas Return	1
15	27-9050	Foot Tread L.H.	1

Ref. No.	Part No.	Description	No. Used
*	27-9040	Foot Tread R.H.	1
16	38-0870	Frame	1
17	2412-36	Clamp Hose	6
18	33-2260	Fitting Carburetor	1
19	39-4030	Hose Funnel	1
20	39-4040	Hose Carburetor Drain	1
21	3274-53	Hex Socket Capscrew	2
22	322-6	Capscrew	4
23	28-0290	Exhaust Pipe	1
24	23-7760	Clamp Exhaust Pipe	1
†25		Gasket Exhaust	1
26	3256-23	Washer	2
27	28-0300	Muffler	1
*	3290-378	Cable Tie	2
*	36-7890	Muffler — Spark Arrestor (Optional)	1

*Not Illustrated

 †Obtain from your local Briggs & Stratton dealer.


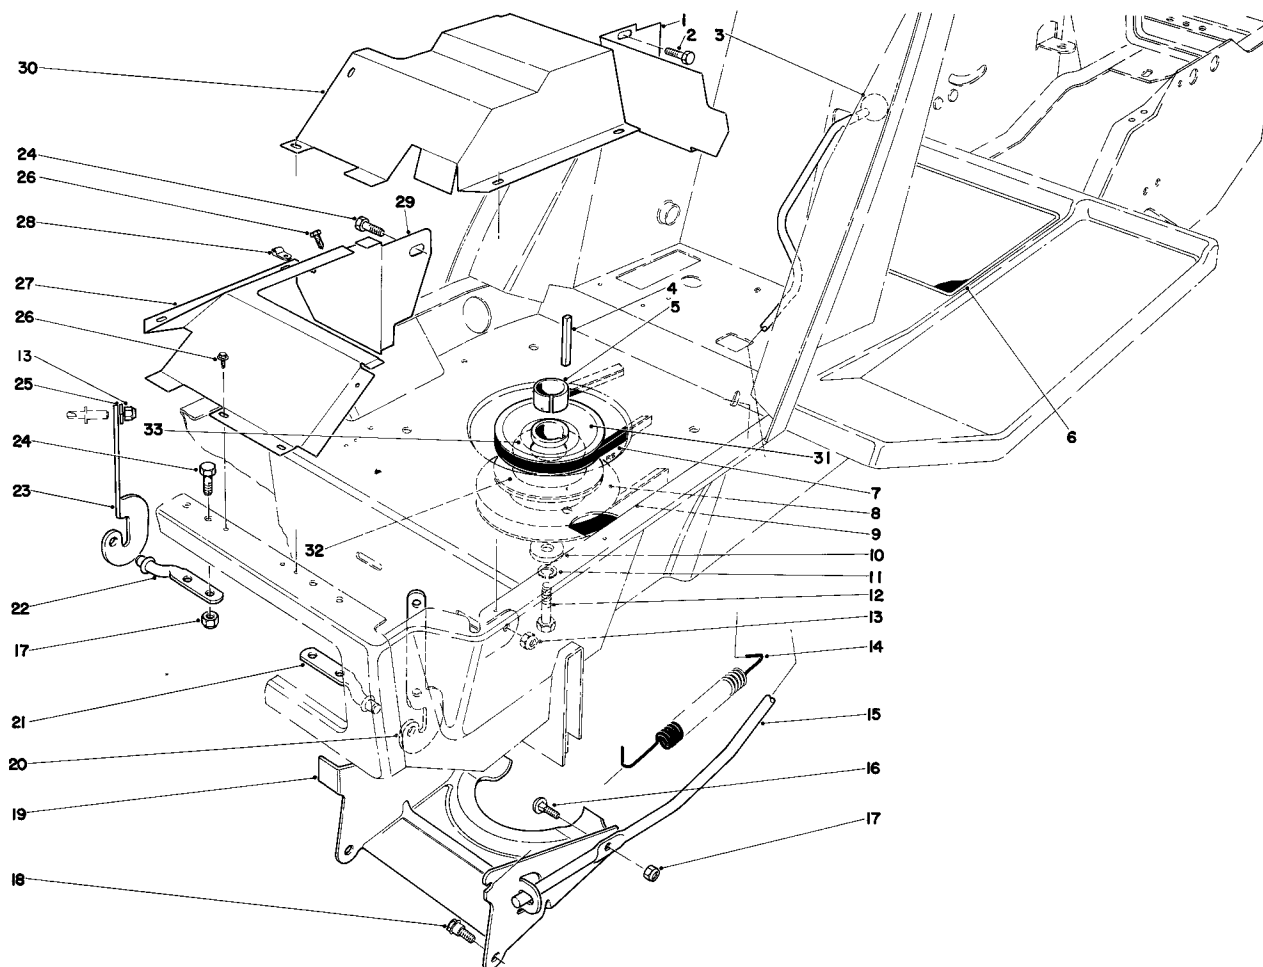


CLUTCH & ACTUATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-3990	Support Exhaust Shield	1
2	321-3	Capscrew	1
3	233-42	Knob	1
4	5-1336	Square Key	1
5	27-8910	Spacer	1
6	28-8140	Decal — Operation	1
7	28-2650	V-Belt Traction	1
8	8-7849	Clutch & Brake Deck	1
9	36-2920	V-Belt — Deck	1
10	27-8920	Washer	1
11	3253-22	Lockwasher	1
12	3212-21	Capscrew — Patchlock	1
13	32152-4	Locknut	6
14	27-8960	Spring Deck Engagement	1
15	28-2320	Engagement Lever	1
16	3-5861	Carriage Bolt	1
17	32152-1	Locknut	5
18	11-9030	Shoulder Screw	2

Ref. No.	Part No.	Description	No. Used
19	38-2800	Actuator Clutch	1
20	28-0120	Bracket Hinge L.H.	1
21	28-0110	Hinge Pin Hood L.H.	1
22	28-0100	Hinge Pin Hood R.H.	1
23	28-0130	Bracket — Hinge R.H.	1
24	322-2	Capscrew	5
25	37-0170	Bracket Screen Hood	2
26	32104-76	Self Tapping Screw	12
27	33-0840	Heat Shield	1
28	2412-51	Clamp	2
29	28-3980	Support Heat Shield	1
30	33-0820	Heat Shield	1
31	36-4810	Sheave	1
32	40-6560	Platter	1
33	40-6720	Washer — Spring	1
*	40-0560	Clip — Clutch (Incl. with Ref. #8)	1
*	29-9950	Spring (Incl. with Ref. #8)	1

  *Not Illustrated

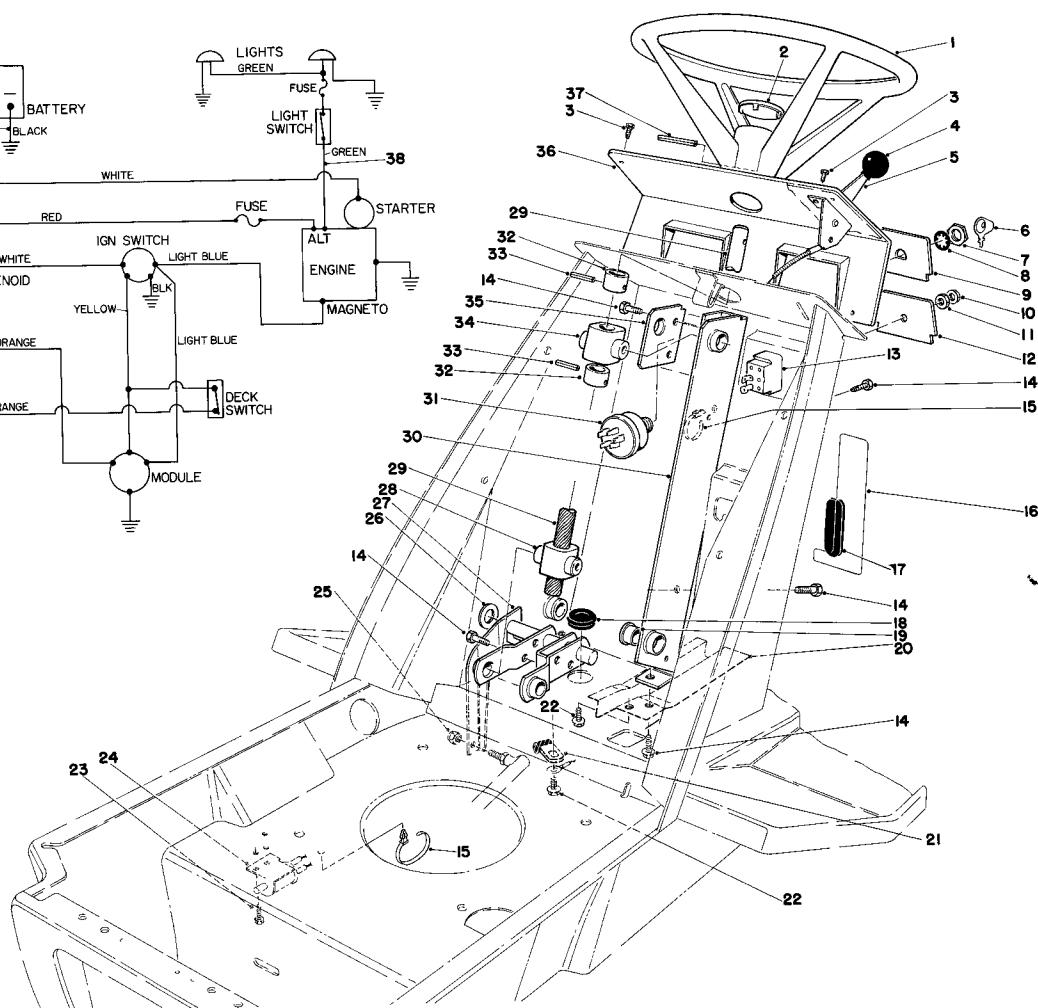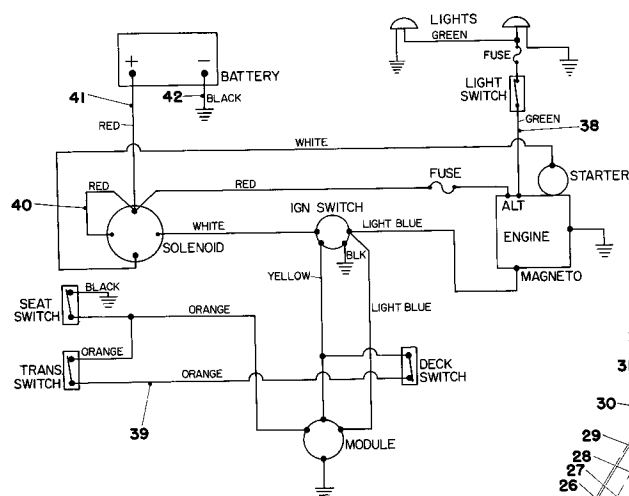


STEERING WHEEL & DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-0830	Steering Wheel	1
2	38-1080	Cap Steering Wheel	1
3	32104-76	Self Tapping Screw	7
4	233-25	Knob	1
5	38-0990	Throttle Control (Incl. Ref. #4)	1
6	218-412	Key	2
7	218-461	Nut	1
8	3254-5	Lockwasher	1
9	28-2690	Insert — Dash Panel (Ignition)	1
10	218-497	Beveled Facenut	1
11	218-498	Locknut	1
12	28-2510	Insert — Dash Panel	1
13	28-4110	LightSwitch (Incl. Ref. #10 & 11)	1
14	32144-11	Hex Hd. Self Tapping Screw	7
15	3290-410	Push Mount Tie	4
16	36-2230	Decal Deck Engagement	1
17	29-4780	Edge Molding	1
18	237-100	Grommet	1
19	27-9080	Flange Bearing	2
20	36-1570	Shield Wire Harness	1
21	18-2970	Clamp	1
22	32144-10	Screw Thread Forming	2

Ref. No.	Part No.	Description	No. Used
23	32144-1	Screw Thread Forming	2
24	28-4450	Interlock Deck Switch	1
25	32146-6	Locknut	1
26	11-6240	Washer	1
27	36-3470	Steering Link	1
28	37-0140	Follower — Steering Shaft	1
29	38-5310	Steering Shaft	1
30	36-2040	Bracket Steering	1
31	23-0660	Ignition Switch (Incl. Ref. #6-8)	1
32	28-3940	Collar Steering Shaft	2
33	32121-31	Roll Pin	2
34	37-0150	Bearing — Steering Shaft	1
35	28-0390	Bearing Support Steering	1
36	28-2460	Panel — Dash	1
37	32121-78	Roll Pin	1
38	38-1030	Wire Harness Light	1
39	38-0880	Wire Harness	1
40	28-7880	Wire Solenoid	1
41	28-3890	Wire Assembly (Battery to Solenoid)	1
42	28-3860	Wire Assembly (Battery to Ground)	1

 
*Not Illustrated

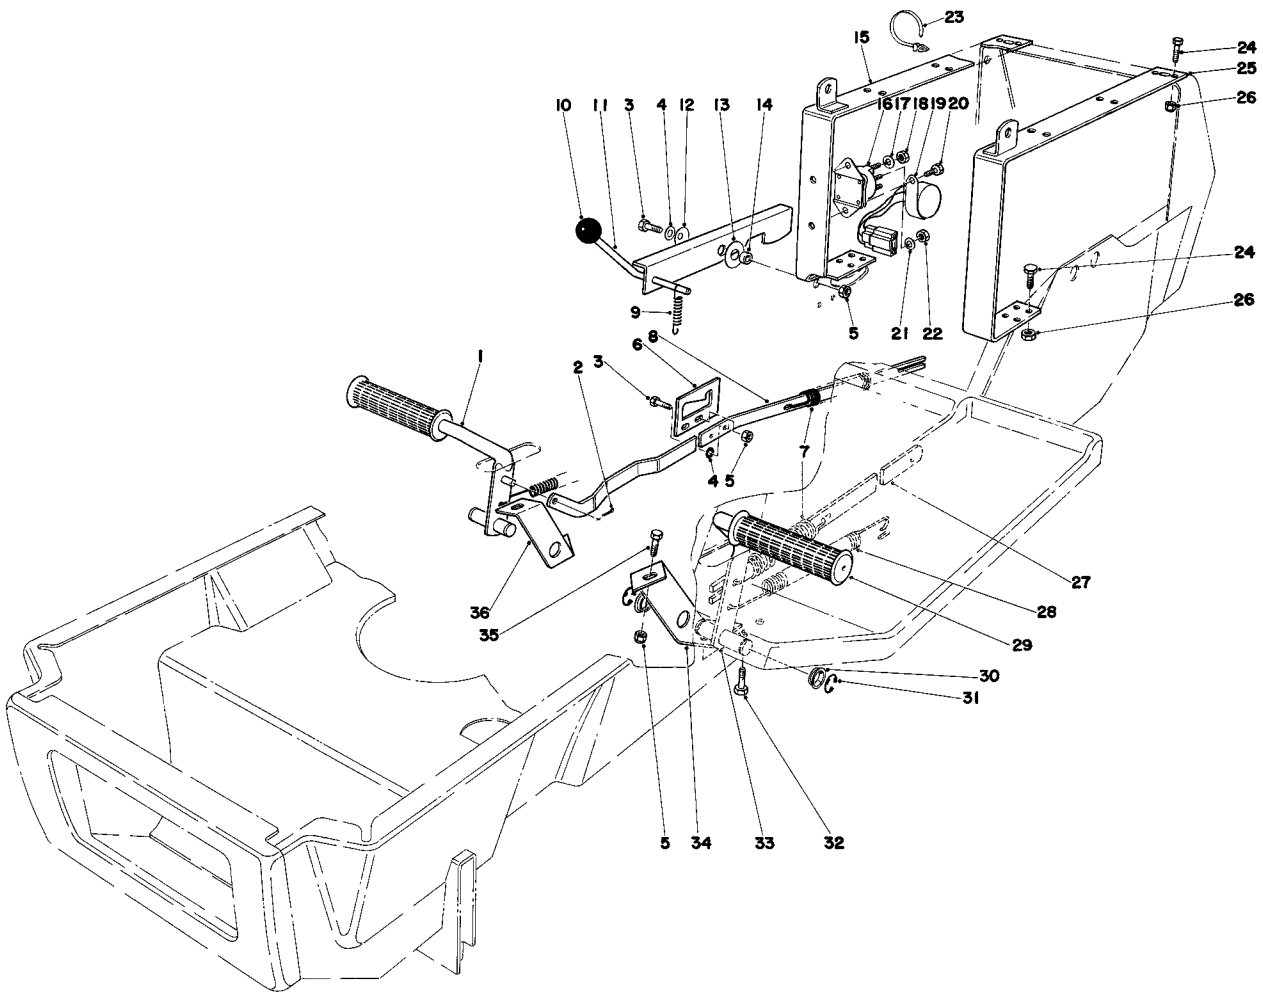

BRAKE & CLUTCH PEDAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-2530	Brake Pedal	1
2	3272-10	Cotter Pin	1
3	322-3	Capscrew	3
4	3256-23	Washer	3
5	32152-1	Locknut	5
6	28-9370	Latch Plate — Brake Rod	1
7	27-8950	Spring — Extension	2
8	28-9350	Link Brake Rod	1
9	8-9900	Spring — Control Rod	1
10	233-42	Knob	1
11	28-2570	Parking Brake Lever	1
12	3290-413	Belleville Washer	1
13	28-2450	Washer	1
14	28-2440	Spacer	1
15	38-0940	Strap — Rear Body R.H.	1
16	28-4210	Solenoid	1
17	3253-4	Lockwasher	2
18	3218-13	Nut	2


Ref. No.	Part No.	Description	No. Used
19	28-7890	Module Interlock	1
20	32144-10	Screw — Thread Forming	2
21	3253-17	Lockwasher	2
22	3219-14	Nut	2
23	3290-410	Push Mount Tie	1
24	321-3	Capscrew	8
25	38-0950	Strap — Rear Body L.H.	1
26	32152-4	Locknut	8
27	28-0430	Link Clutch Rod	1
28	27-8890	Spring Return	2
29	28-2470	Pad Foot	2
30	256-258	Nyliner	4
31	32120-19	E-Ring	4
32	32144-11	Hex Hd. Self Tapping Screw	4
33	28-2520	Clutch Pedal	1
34	28-0420	Support Pedal L.H.	1
35	322-2	Capscrew	2
36	28-0410	Support Pedal R.H.	1

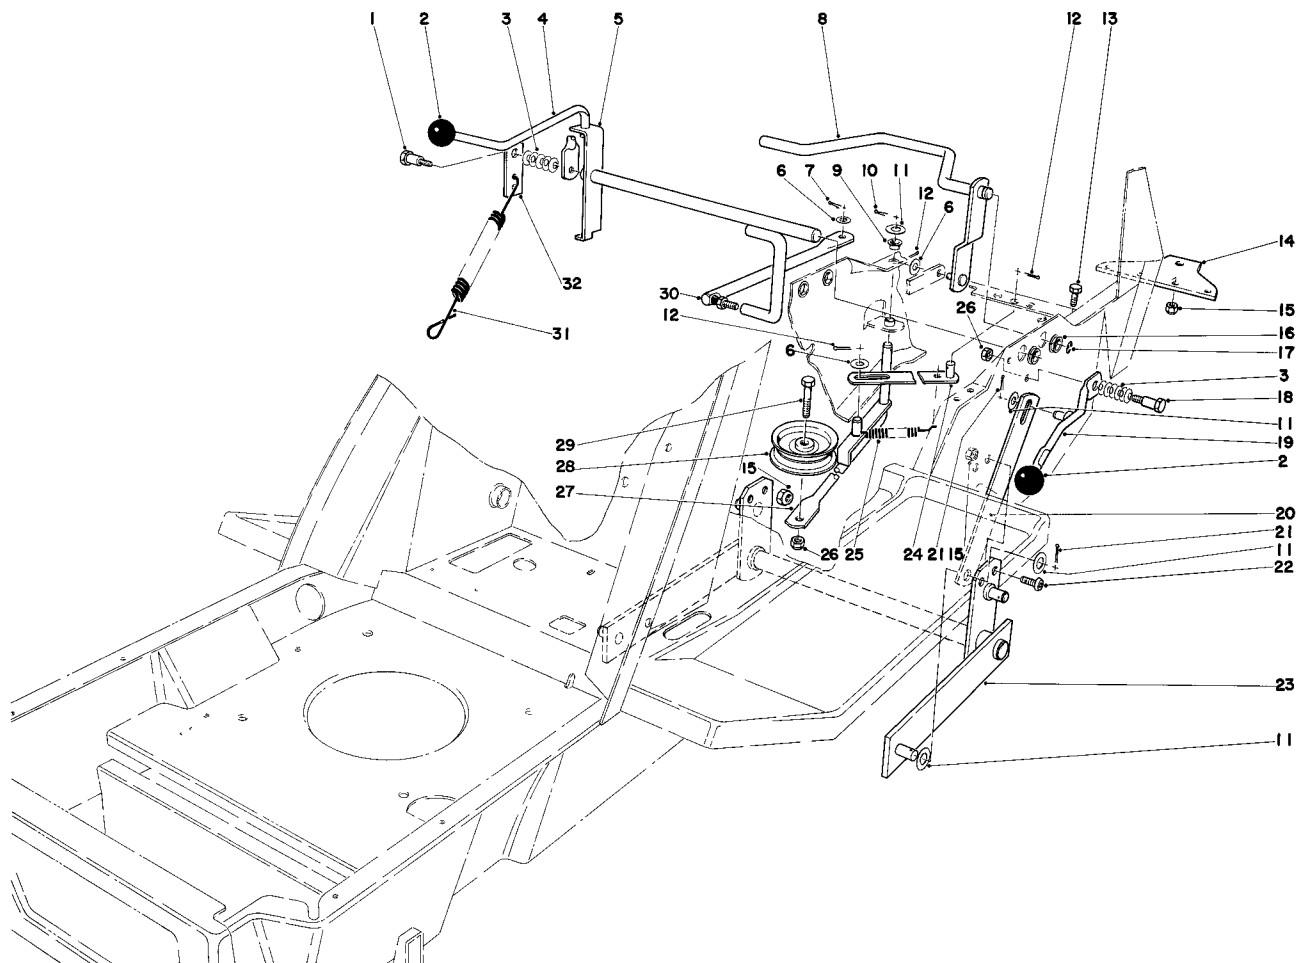 

SHIFT & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0540	Shoulder Bolt	1
2	233-48	Knob	2
3	3290-413	Belleville Washer	11
4	28-2190	Shift Lever	1
5	28-2590	Shift Lever	1
6	3256-23	Washer	3
7	3272-6	Cotter Pin	1
8	27-9090	Clutch Actuator	1
9	256-257	Flanged Nyliner	2
10	3272-11	Cotter Pin	1
11	3256-26	Washer	4
12	3272-10	Cotter Pin	3
13	3234-5	Capscrew	4
14	28-2250	Plate Hitch	1
15	32152-1	Locknut	8
16	256-258	Nyliner	4

Ref. No.	Part No.	Description	No. Used
17	32120-19	E-Ring	2
18	5-4015	Shoulder Bolt	1
19	36-1780	Height of Cut Handle	1
20	36-1300	Link Height of Cut	1
21	3272-7	Cotter Pin	3
22	3274-55	Button Soc. Hd. Capscrew	4
23	36-1860	Pivot Bar	1
24	28-2270	Spring Retainer	1
25	28-2340	Spring Deck Tension	1
26	32152-2	Locknut	2
27	28-0500	Idler Arm	1
28	36-1020	Pulley Idler	1
29	323-10	Hex Hd. Capscrew	1
30	28-2210	Shift Arm	1
31	36-4850	Spring Extension	1
32	36-4860	Bracket Counterbalance Spring	1

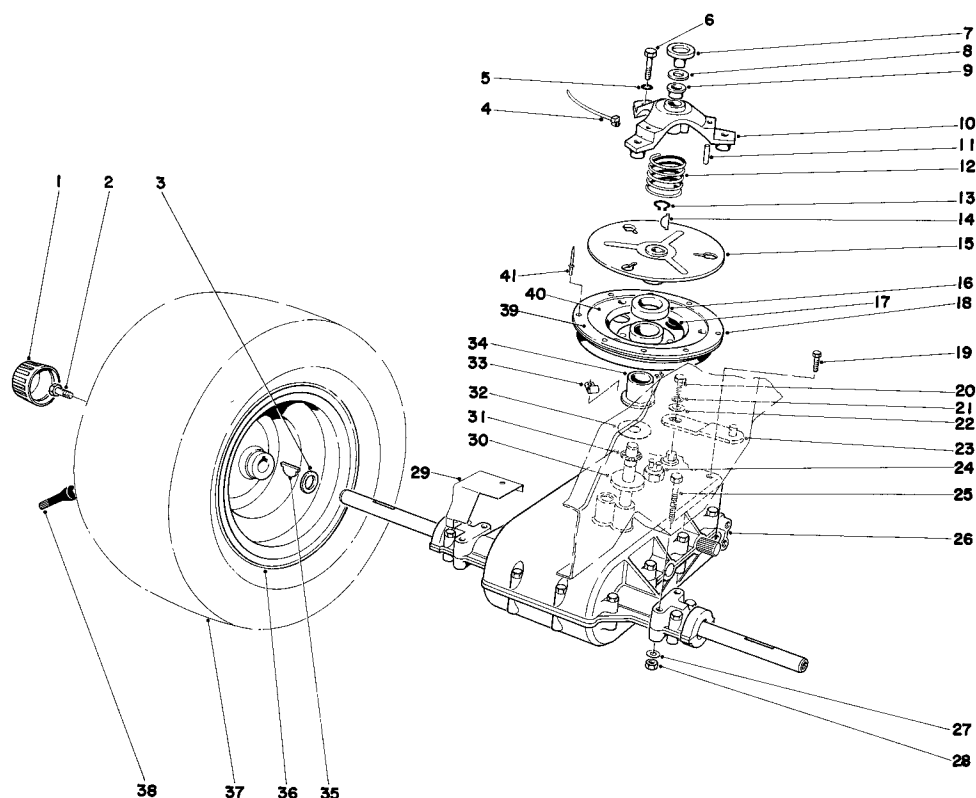 

TRANSAXLE & CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0060	Hub Cap	2
2	36-4030	Capscrew	2
3	37-4700	Spacer-Wheel	1
4	3290-410	Push Mount Tie	2
5	3254-8	Lockwasher	3
6	321-5	Capscrew	3
7	36-2130	Cap Clutch	1
8	252-94	Thrust Race	1
9	256-259	Bushing	1
10	28-2560	Cover Clutch (Incl. Ref. #15 & 17)	1
11	252-92	Needle Roller	3
12	36-2220	Spring Compression	1
13	32120-64	Retaining Ring	1
14	3257-30	Key Hi Pro	1
15	27-9030	Clutch Plate	1
16	28-4220	Washer Felt	1
17	2410-40	Plug	3
18	8-4899	Sheave Assembly (Incl. Ref. #34 & 39-41)	1
19	32144-11	Self Tapping Screw	2
20	329-2	Capscrew	1

Ref. No.	Part No.	Description	No. Used
21	3253-3	Lockwasher	1
22	3256-22	Washer	1
23	28-2380	Shift Bracket	1
24	28-4250	Switch - Neutral	1
25	322-11	Capscrew	4
26	39-4780	Transaxle	1
27	3256-23	Washer	4
28	32152-1	Locknut	4
29	29-6940	Shield - Grass	1
30	39-4770	Spacer	1
31	252-58	Thrust Bearing	1
32	27-8820	Thrust Washer	1
33	18-2970	Clamp	1
34	28-4150	Bushing	1
35	3257-40	Hi Pro Key	2
36	242-66	Rim	2
37	231-98	Tire	2
38	232-41	Valve Stem	2
39	27-8800	Pad - Clutch	1
40	27-8790	Retainer Ring	1
41	3295-13	Pop Rivet	12


100



PEERLESS TRANSAXLE MODEL 801 B

Ref. No.	Part No.	Description	No. Used
1	770069A	Case, Transaxle	1
2	778136	Gear, Spur (15 teeth)	1
3	778126	Gear, Spur (20 teeth)	1
4	778127	Gear, Spur (25 teeth)	1
5	778129	Gear, Spur (30 teeth)	1
6	778121A	Gear, Spur (20 teeth)	1
7	778123	Gear, Spur (25 teeth)	1
8	778124	Gear, Spur (30 teeth)	1
9	778122	Gear, Spur (22 teeth)	1
10	778128	Gear, Spur (28 teeth)	1
11	778125	Gear, Spur (35 teeth)	1
12	778137	Gear, Bevel (42 teeth)	1
13	784266	Collar, Shift	1
14	786083	Sprocket (18 teeth)	1
15	786082	Sprocket (9 teeth)	1
16	776181	Shaft, Counter	1
17	778113A	Bevel Pinion, Input	1
18	786074	Spacer	1
19	778138	Pinion, Output	1
20	778139	Gear, Output	1
21	790003	Disk, Brake	1
22	792089A	Key	1
23	786075	Spacer	1
24	780001	Washer	1
25	788040	Ring, Retaining	1
26	780105	Bushing, Flanged	1
27	780118	Bushing, Flanged	1
28	786081	Chain, Roller (No. 41 chain, 24 links)	1
29	780072	Washer, Thrust	1
30	780086	Bearing, Needle	1
31	792077	Ball, Steel	1
32	780109	Washer, Thrust	1
33	792078	Screw, Set	1
34	792079	Spring	1
35	792073	Screw, Hex Hd. Thread Forming	1
36	780108	Washer, Thrust	1
37	780111	Bearing, Needle	1


Ref. No.	Part No.	Description	No. Used
38	780113	Washer, Flat	1
39	530105	Bearing, Needle	1
40	788042	Seal, Oil	1
41	788051	Ring, Square Cut	1
42	792001	Ring, Square Cut	1
43	780112	Bearing, Needle	1
44	780114	Washer, Flat	1
45	788052	Ring, Square Cut	1
46	788053	Ring, Square Cut	1
47	772078A	Cover, Transaxle	1
48	784290	Rod & Fork Assy., Shift	1
49	776182	Shaft, Input	1
50	776183	Shaft, Brake	1
51	790007	Plate, Brake Pad	1
52	790006	Pad, Brake	1
53	786026	Pin, Dowel	1
54	792075	Locknut	1
55	792076	Washer, Flat	1
56	790022	Lever, Brake	1
57	792073	Screw, Hex Hd. Thread Forming	1
57A	792085	Screw, Hex Hd. Thread Forming	1
58	790020	Holder, Brake Pad	1
59	778053A	Gear Assy., Differential (Incl. 2 of No. 60)	1
60	780064	Bushing	1
61	778067	Gear, Bevel	1
62	778068	Pinion, Bevel	1
63	786034	Pin, Drive	1
64	780065	Washer, Thrust	1
65	792018	Ring, Retaining	1
66	792040	Pin, Roll	1
67	780001	Washer, Thrust	1
68	774364A	Axle (14-7/8" long)	1
69	774363A	Axle (13" long)	1
70	786067	Spacer	1
71	786084	Sleeve	1
72	792035	Ring, Retaining	1

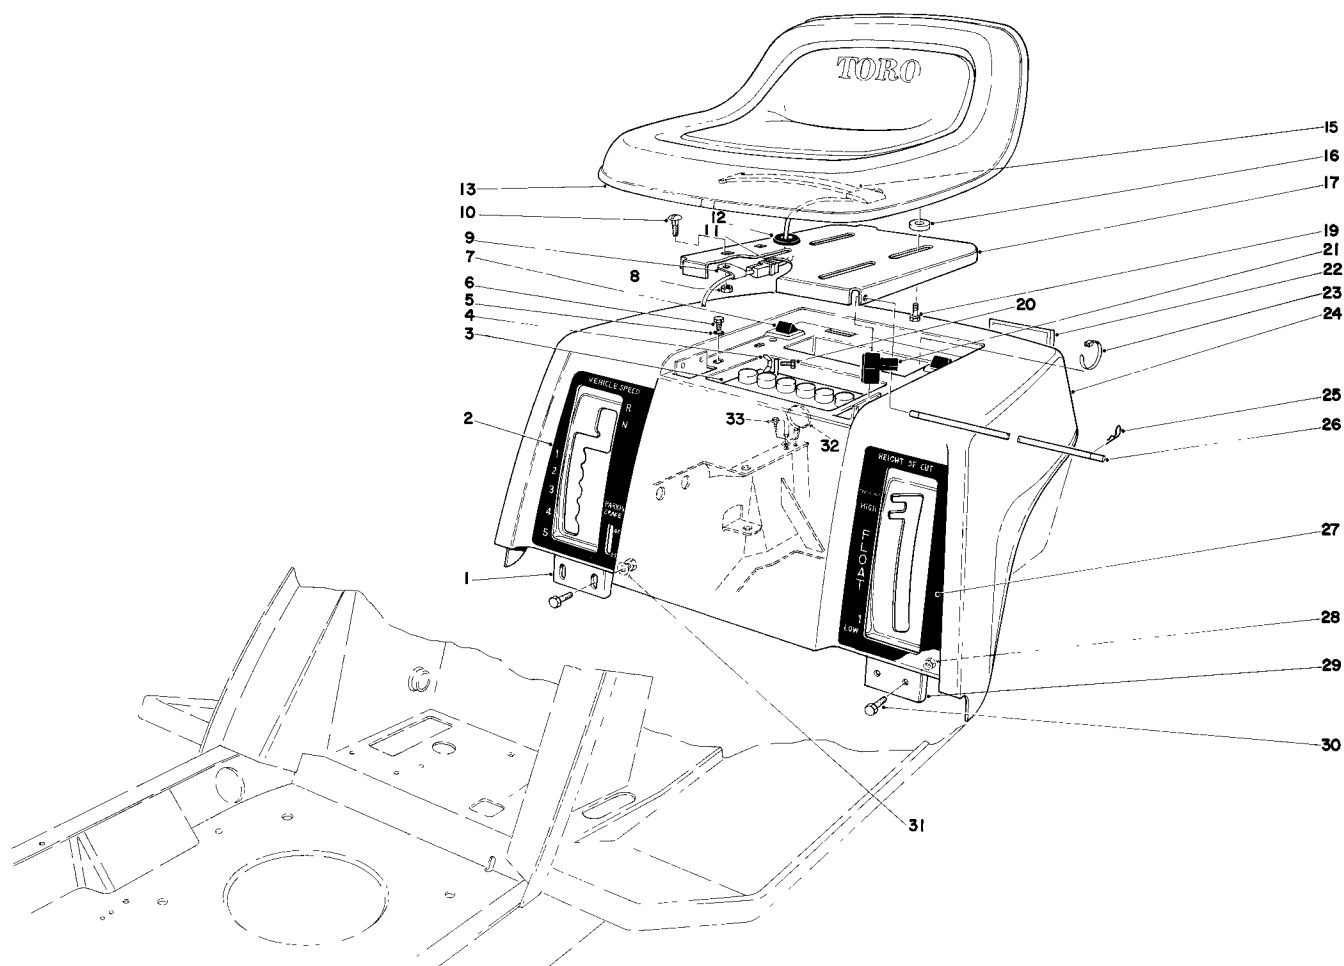 

REAR BODY & SEAT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0370	Plate Detent	1
2	36-2940	Decal – Transmission	1
3	29-9870	Battery	1
4	32103-22	Wing Nut	2
5	5-1350	Washer	4
6	32144-11	Hex Hd. Self Tapping Screw	4
7	28-9440	Seat Bumper	2
8	32149-2	Locknut	2
9	2412-66	Clamp	2
10	3229-11	Carriage Bolt	2
11		Female Connector	1
12	237-100	Grommet	1
13	38-0840	Seat	1
15	38-1420	Seat Switch	1
16	26-4840	Spacer	4


Ref. No.	Part No.	Description	No. Used
17	36-1490	Seat Support	1
19	3234-5	Capscrew	4
20	321-3	Capscrew	2
21	28-8080	Boot Terminal	1
22	218-491	Reflector	2
24	8-3229	Rear Body (Incl. Ref. #2 & 27)	1
25	3290-307	Hair Pin Cotter	2
26	28-2400	Pivot Roll Seat	1
27	36-2950	Decal – Height of Cut	1
28	32152-1	Locknut	4
29	36-1950	Quadrant Height of Cut	1
30	322-2	Capscrew	4
31	3256-23	Washer	2
32	3290-410	Push Mount Tie	1
33	32104-76	Self Tapping Screw	1

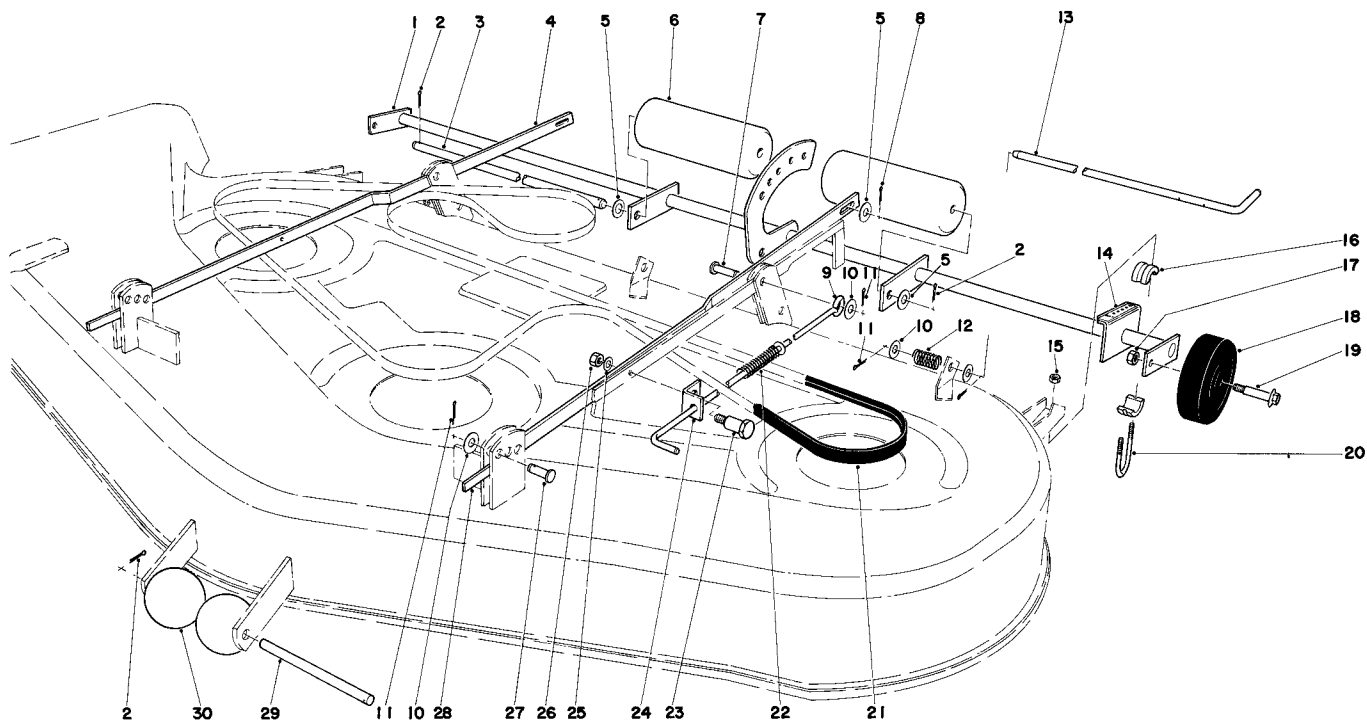 

MOWER LIFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	38-1380	Deck Wheel Shaft	1
2	3272-11	Cotter Pin	4
3	36-1360	Roller Shaft	1
4	36-3450	Scissors Link Rear R.H.	1
5	3256-26	Flat Washer	4
6	36-1740	Roller Deck	2
7	283-10	Clevis Pin	2
8	3272-7	Cotter Pin	2
9	38-0890	Pin Tension	2
10	3256-24	Washer	6
11	3272-6	Cotter Pin	6
12	3-3251	Spring Compression	1
13	36-1710	Rod Wheel Latch	1
14	38-1340	Decal — Height of Cut	1
15	32152-4	Nut	4

Ref. No.	Part No.	Description	No. Used
16	36-1310	Bearing Deck Shaft	4
17	32146-6	Hex Nut	2
18	29-6010	Wheel	2
19	3-2652	Wheel Bolt	2
20	298-11	U-Bolt	2
21	36-2930	V-Belt	1
22	38-0860	Spring-Deck	2
23	38-0930	Shoulder Bolt	2
24	38-0820	Bracket — Belt Tension	2
25	3256-23	Washer	2
26	32152-1	Locknut	2
27	283-2	Clevis Pin	2
28	36-3460	Scissors Link Rear L.H.	1
29	7-0277	Shaft	1
30	29-4820	Roller	2

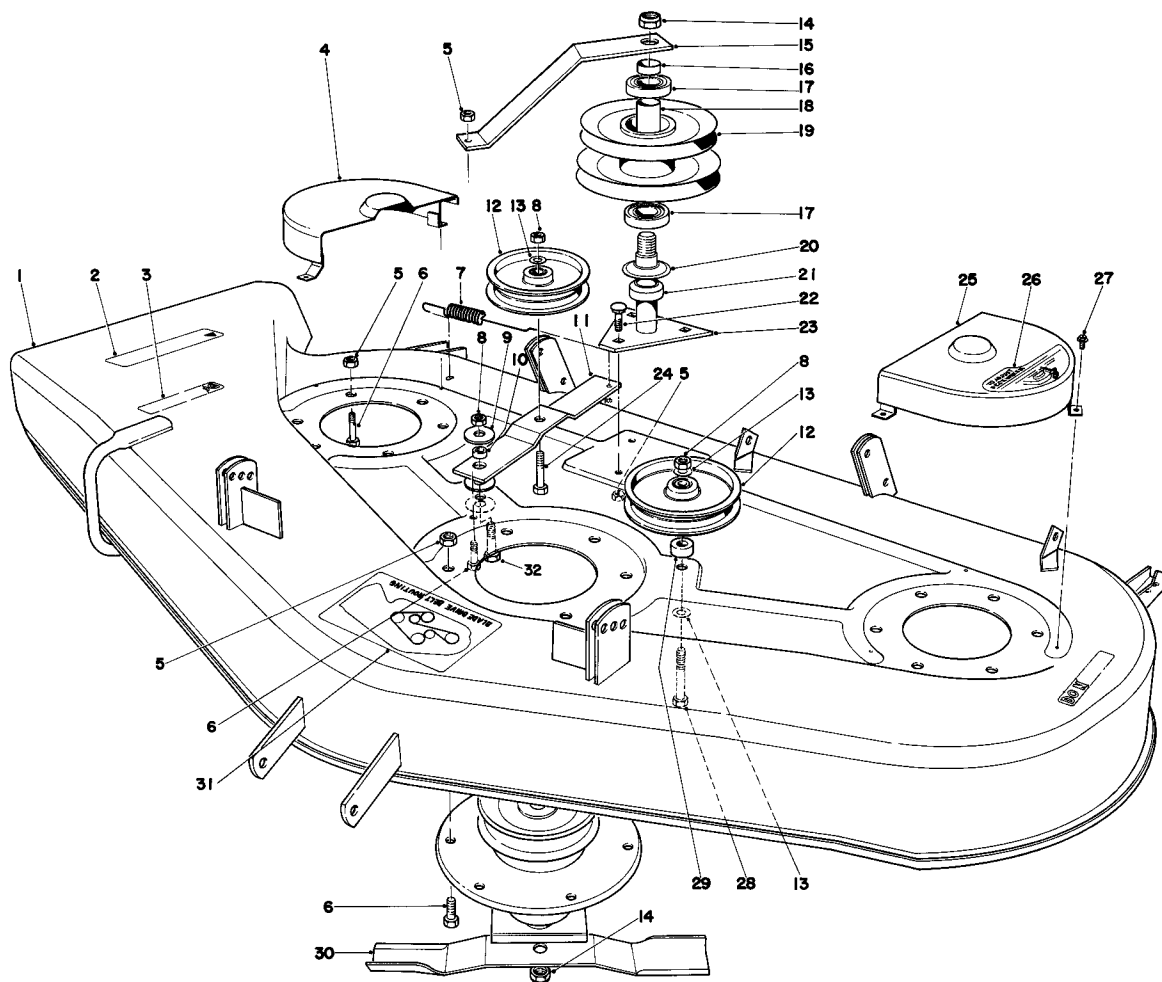 


CUTTING DECK

Ref. No.	Part No.	Description	No. Used
1	39-5750	Deck	1
2	36-3410	Decal — Caution	1
3	36-3400	Decal — Warning	2
4	37-9330	Belt Cover R.H.	1
5	32152-1	Nut	22
6	322-3	Capscrew	19
7	36-8040	Spring Extension	1
8	32152-2	Nut	3
9	36-8020	Washer	3
10	36-1430	Spacer Idler Bracket	1
11	36-1400	Idler Pulley Bracket	1
12	36-3220	Idler Pulley	2
13	3256-3	Washer	3
14	3296-33	Hex Nut	4
15	36-1460	Support Spindle	1
16	37-0180	Spacer	1
17	37-0200	Bearing	2

Ref. No.	Part No.	Description	No. Used
18	37-0190	Spacer	1
19	37-0210	Pulley & Bearing Assembly	1
20	38-0470	Dust Cover	1
21	38-3180	Spacer	1
22	3230-1	Carriage Bolt	3
23	37-0220	Shaft Saddle Assembly	1
24	323-9	Capscrew	1
25	37-9340	Belt Cover L.H.	1
26	38-1390	Decal — Wheel Adjustment	1
27	32104-76	Self Tapping Screw	6
28	323-11	Hex Hd. Capscrew	1
29	36-8030	Spacer	1
30	36-1790	Blade	3
31	36-5360	Decal — Belt Routing	1
32	323-6	Capscrew	1
*	8-1549	Loose Parts Bag	1

 
*Not Illustrated

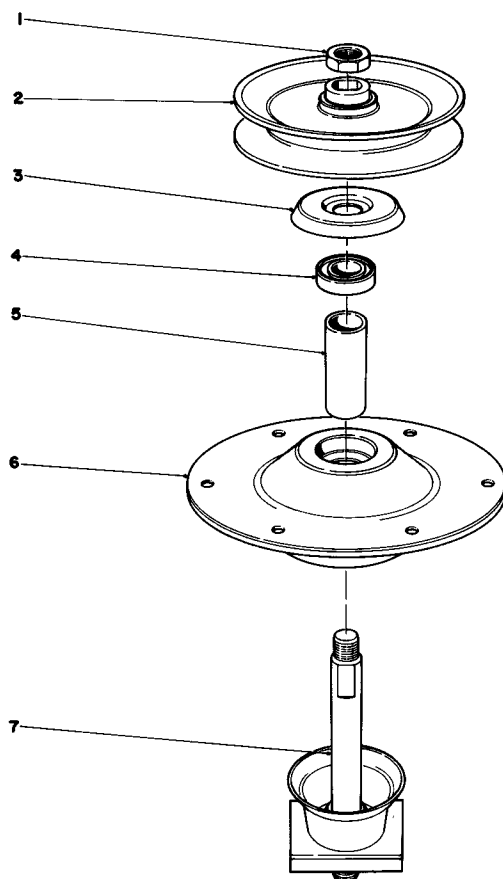

SPINDLE ASSEMBLY (39-5890)

Ref. No.	Part No.	Description	No. Used
1	32146-19	Locknut	3
2	37-9390	Pulley	3
3	39-7690	Dust Cover	3
4	39-7680	Bearing	3


Ref. No.	Part No.	Description	No. Used
5	39-7670	Spacer	3
6	39-7700	Housing	3
7	37-9480	Shaft & Saddle Assembly	3

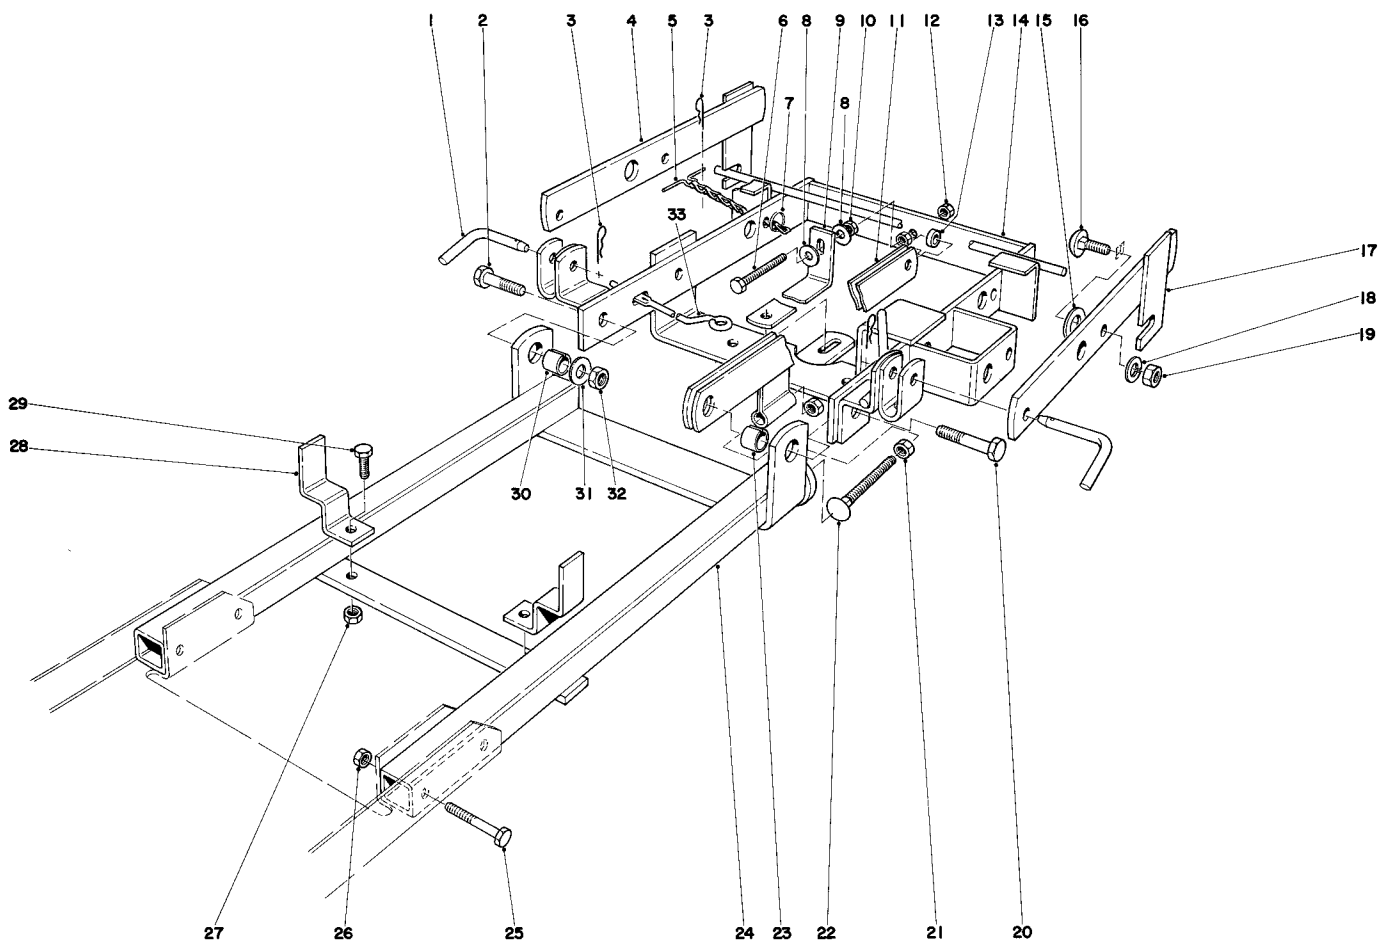 

36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	40-1330	Pin-Roller, Locating	2
2	325-7	Hex Head Capscrew	1
3	3290-225	Hair Pin Cotter	3
4	40-1340	Mounting Bracket — R.H.	1
5	40-1300	Chain & Toggle	1
6	323-15	Hex Head Capscrew	1
7	40-1310	Spring Clip	1
8	3256-4	Washer	2
9	40-1220	Bracket — Belt Adjust	1
10	3218-3	Jam Nut	2
11	40-0940	Lift Extension	1
12	3217-7	Nut	1
13	40-0980	Spacer	1
14	40-1200	Mounting Frame — Upper	1
15	40-1320	Washer — Flat	2
16	3233-23	Carriage Bolt	2
17	40-1350	Mounting Bracket — L.H.	1


Ref. No.	Part No.	Description	No. Used
18	3253-8	Lockwasher	2
19	3217-11	Nut	2
20	325-9	Hex Head Capscrew	1
21	3218-5	Jamnut	2
22	40-1590	Carriage Bolt	1
23	40-1360	Spacer — Bearing	1
24	40-0930	Mounting Frame	1
25	322-9	Hex Head Capscrew	4
26	32152-1	Locknut	4
27	32152-2	Locknut	2
28	40-0990	Stop — Position	2
29	323-6	Hex Head Capscrew	2
30	40-1370	Spacer — Idler Pulley	1
31	3256-26	Washer	2
32	32152-3	Locknut	2
33	40-1290	Wire — Belt Guide	1

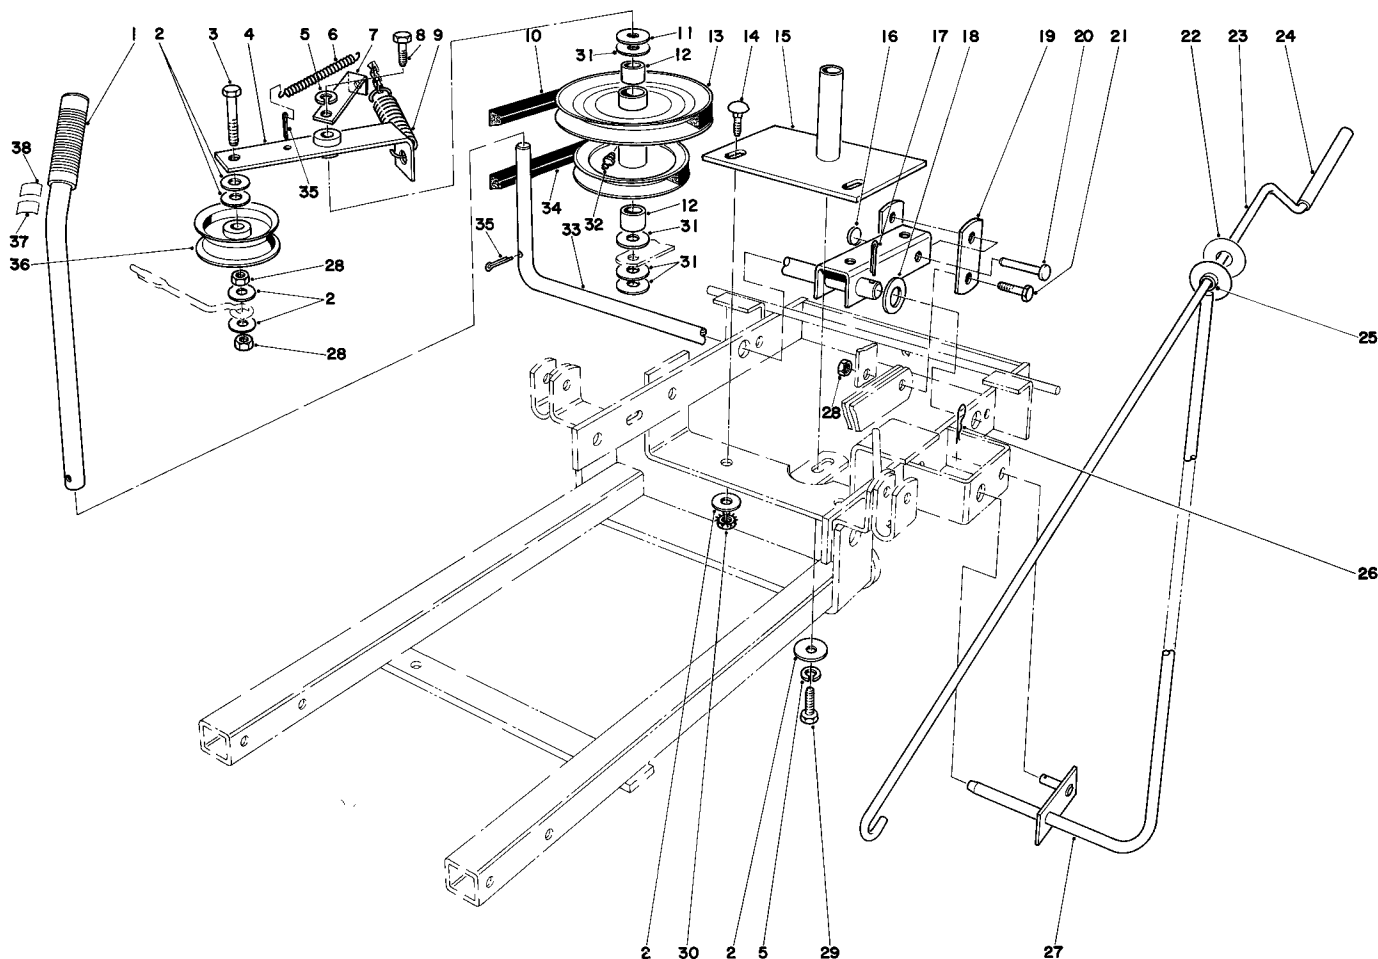 

36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	40-1010	Lift Handle (Incl. Ref. #37 & 38)	1
2	3256-4	Washer	7
3	323-12	Hex Head Capscrew	1
4	40-1250	Idler Arm	1
5	3253-21	Lockwasher	2
6	40-1280	Spring – Detent	1
7	40-1270	Bracket – Spring Anchor	1
8	323-4	Hex Head Capscrew	1
9	40-0730	Spring	1
10	40-1380	V-Belt	1
11	40-0740	Washer	1
12	40-1230	Roller Bearings	2
13	40-1240	Pulley Housing	1
14	3231-2	Carriage Bolt	2
15	40-1210	Mounting Bracket – Pulley	1
16	40-1310	Spring Clip	1
17	3272-12	Cotter Pin	1
18	40-0970	Spacer	1
19	40-0960	Strap – Lift Link	2

Ref. No.	Part No.	Description	No. Used
20	40-0950	Pin – Clevis, Handle	1
21	323-7	Hex Head Capscrew	1
22	40-1410	Decal – Spout Rotation	1
23	40-1110	Rod – Deflector Control	1
24	40-1100	Grip – Handle	1
25	40-1080	Nylon Bushing	1
26	3290-343	Hair Pin Cotter	1
27	40-1090	Crank Rod Support (Incl. Ref. #22 & 25)	1
28	32152-2	Locknut	3
29	323-6	Hex Head Capscrew	1
30	32149-10	Locknut	2
31	3-1000	Washer	4
32	302-5	Grease Fitting	1
33	40-1000	Lift Bar	1
34	40-1390	V-Belt	1
35	3272-21	Cotter Pin	2
36	40-1260	Idler Pulley	1
37	40-1020	Decal – Lift Control	1
38	40-1030	Decal – Raise & Lower	1

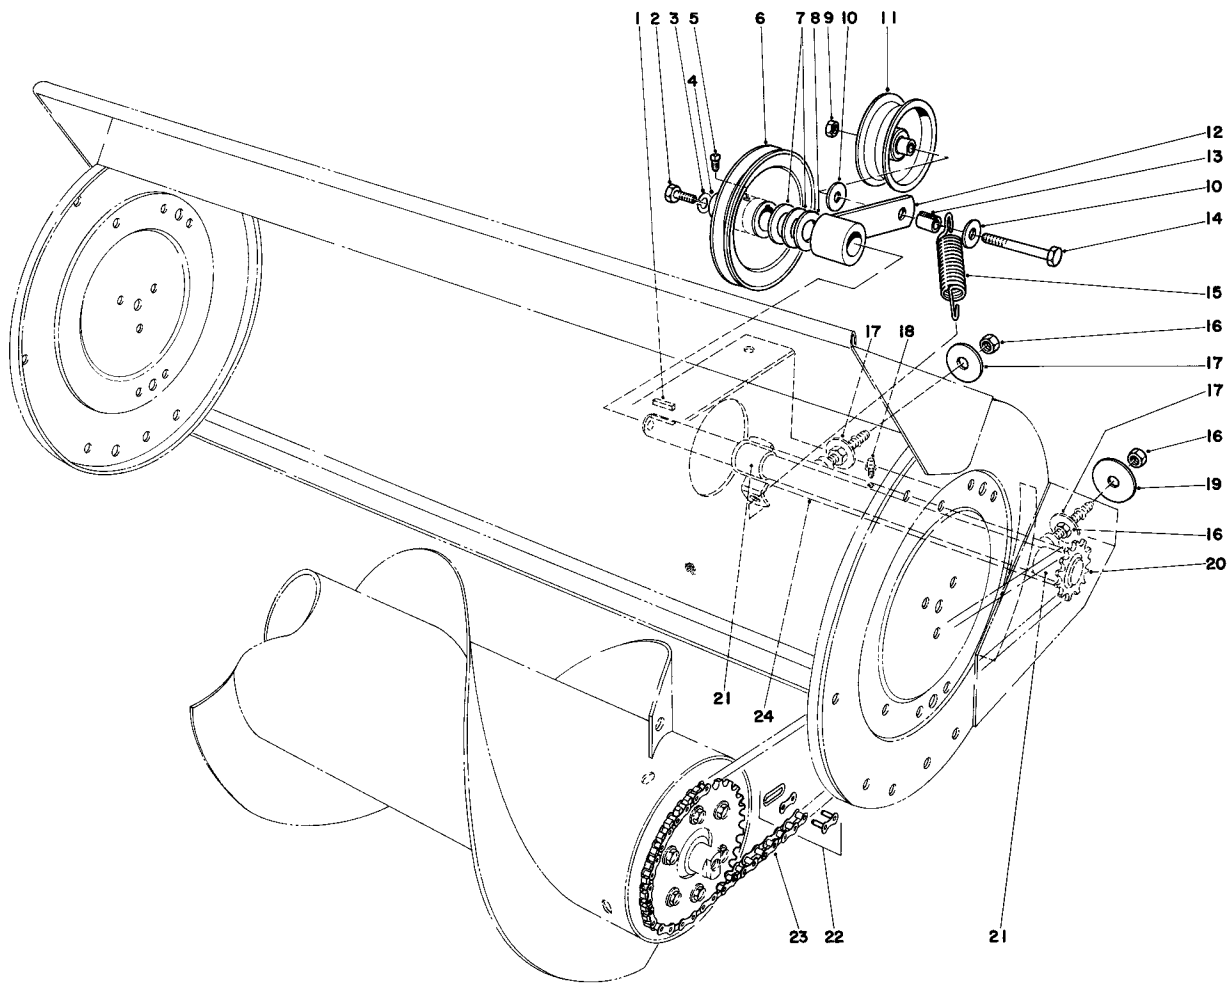 


36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	21-5070	Key	1
2	323-4	Hex Head Capscrew	1
3	3253-21	Lockwasher	1
4	3256-3	Washer	1
5	3242-2	Set Screw	2
6	40-0860	Pulley	1
7	3-1000	Washer	2
8	40-0740	Washer	1
9	32152-2	Locknut	1
10	3256-4	Washer	2
11	40-1260	Idler Pulley	1
12	40-0710	Idler Arm	1
13	40-0980	Spacer	1

Ref. No.	Part No.	Description	No. Used
14	323-12	Hex Head Capscrew	1
15	40-0730	Spring	1
16	3217-9	Nut	4
17	3256-5	Washer	3
18	302-5	Grease Fitting	1
19	40-0720	Flat Washer	1
20	40-0770	Shaft & Sprocket	1
21	40-0750	Bushing - Jackshaft	2
22	2710-6	Repair Kit - Roller Chain*	1
23	40-0700	Roller Chain - Endless	1
24	40-0760	Jackshaft Housing (Incl. Ref. #18)	1

 
*Repair only

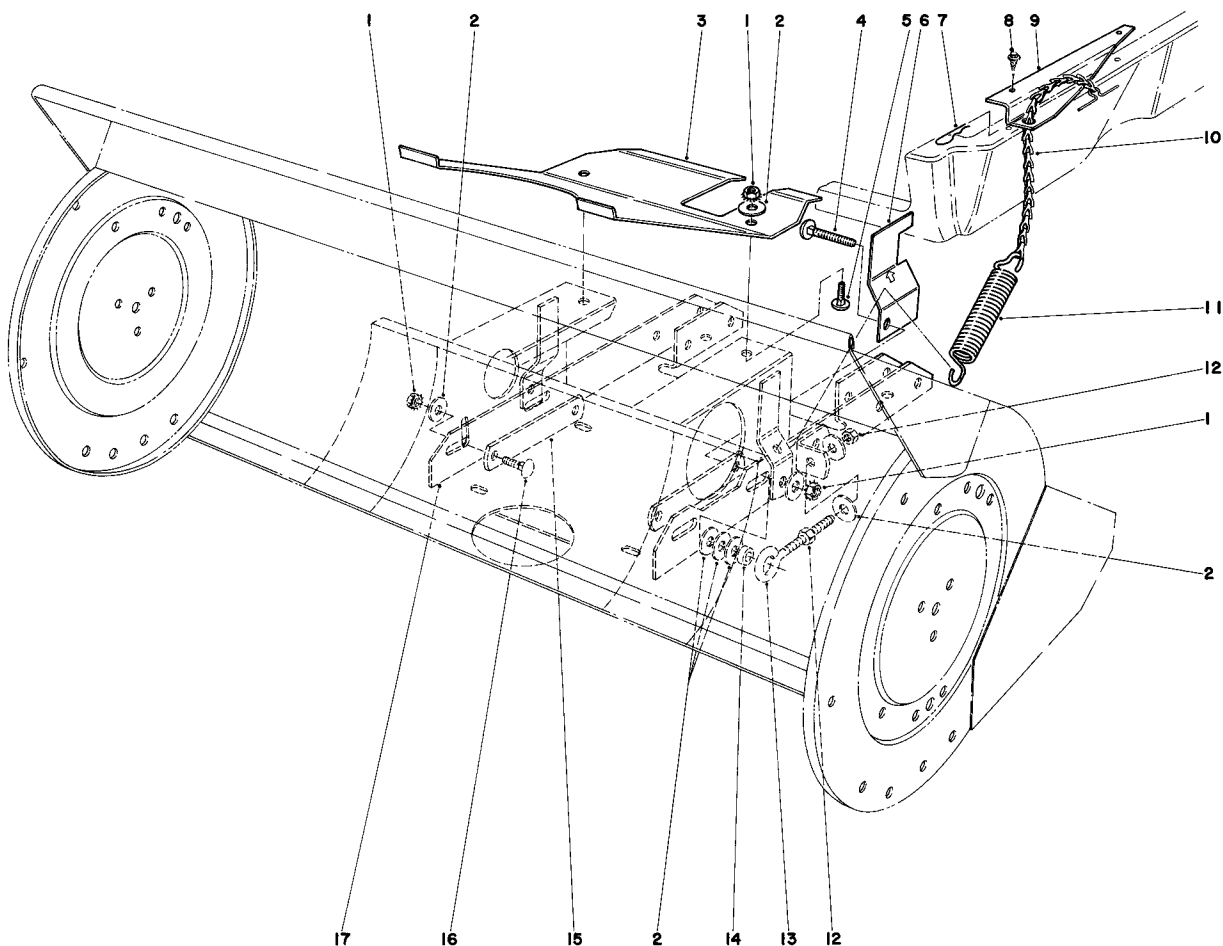

36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	32149-10	Locknut	6
2	3256-4	Washer	16
3	40-0920	Guard — Drive Pulley	1
4	3231-7	Carriage Bolt	2
5	3231-21	Carriage Bolt	2
6	40-0900	Bracket — Belt Adjust Guide	1
7	3290-343	Hair Pin Cotter	1
8	32104-76	Screw — Self Tapping	2
9	40-0680	Plate — Lift Spring Anchor	1

Ref. No.	Part No.	Description	No. Used
10	40-0660	Chain & Toggle	1
11	40-0670	Spring — Idler Arm	1
12	3217-7	Nut	4
13	40-0880	Eye Bolt	2
14	40-0980	Spacer	2
15	40-0890	Strap — Header Channel	2
16	3231-2	Carriage Bolt	2
17	40-0910	Pivot Bracket	1

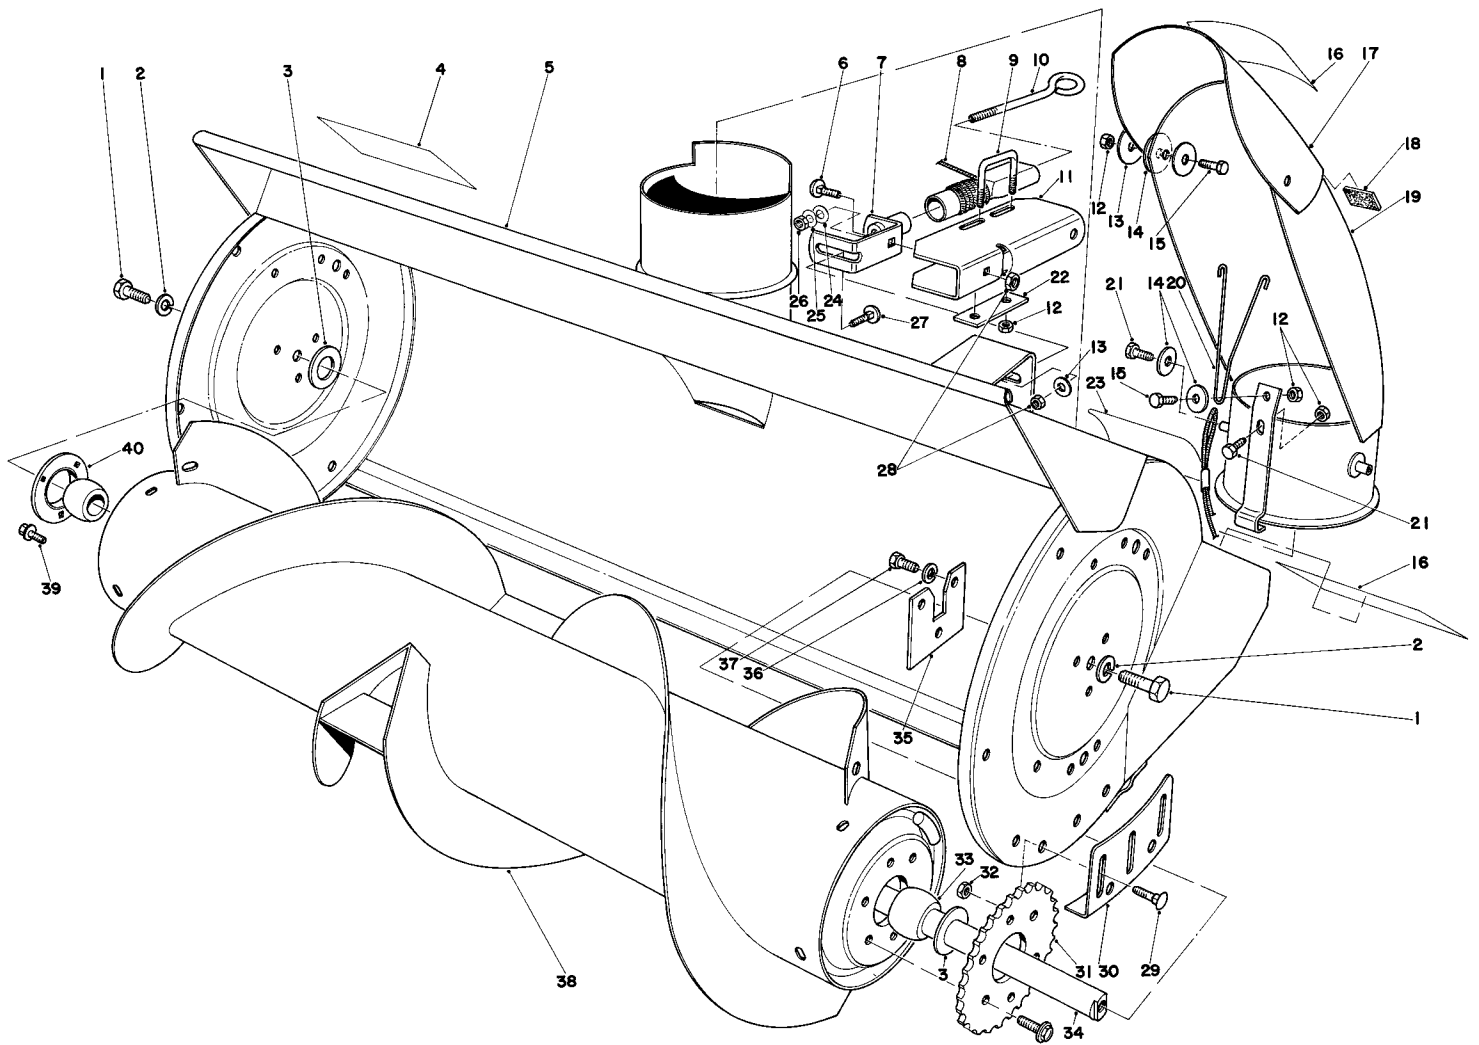 


36" SNOWTHROWER ATTACHMENT MODEL 59136

Ref. No.	Part No.	Description	No. Used
1	325-5	Hex Head Capscrew	2
2	3253-7	Lockwasher	2
3	40-0780	Washer — Auger Shaft	2
4	27-4600	Decal	1
5	40-1400	Header (Incl. Ref. #16 & 23)	1
6	3231-21	Carriage Bolt	1
7	40-1170	Bracket & Tube	1
8	40-1180	Cable & Tube	1
9	40-1160	U-Bolt	1
10	40-1150	Eye Bolt	1
11	40-1190	Shroud — Stack Drive	1
12	32153-4	Locknut	6
13	3-6916	Washer	6
14	40-1130	Washer	3
15	321-3	Hex Head Capscrew	3
16	29-6350	Decal — Auger Warning	2
17	40-1060	Deflector (Incl. Ref. #16)	1
18	40-1050	Molding — Deflector	1
19	40-1070	Deflector Elbow	1
20	40-1040	Hook — Lift Spring	1
21	321-2	Hex Head Capscrew	2
22	40-1140	Strap — Friction	1
23	29-6380	Decal — Hazards Caution	1
24	3256-4	Washer	1

Ref. No.	Part No.	Description	No. Used
25	40-1120	Spring Washer	1
26	32152-2	Locknut	1
27	3231-2	Carriage Bolt	1
28	32149-10	Locknut	2
29	3-5861	Carriage Bolt	6
30	40-0870	Skidshoe	2
31	40-0840	Sprocket — Auger Drive	1
32	32149-1	Locknut	6
33	40-0790	Bearing — Auger Shaft	2
34	40-0810	Shaft — Auger	1
35	40-0820	Plate — Auger Mounting	1
36	3253-4	Lockwasher	3
37	322-2	Hex Head Capscrew	3
38	40-0850	Auger Assembly	1
39	32104-58	Screw — Self Tapping	9
40	40-0800	Flangette	1
*	40-0690	Exhaust Pipe Extension	1
*	32140-42	Screw — Self Tapping (For use with exhaust pipe extension)	1
†	40-0830	Scraper Blade	1
†	3229-22	Carriage Bolt (For use with scraper blade)	7
†	32149-2	Locknut (For use with scraper blade)	7

*Not Illustrated

 20†Optional Equipment

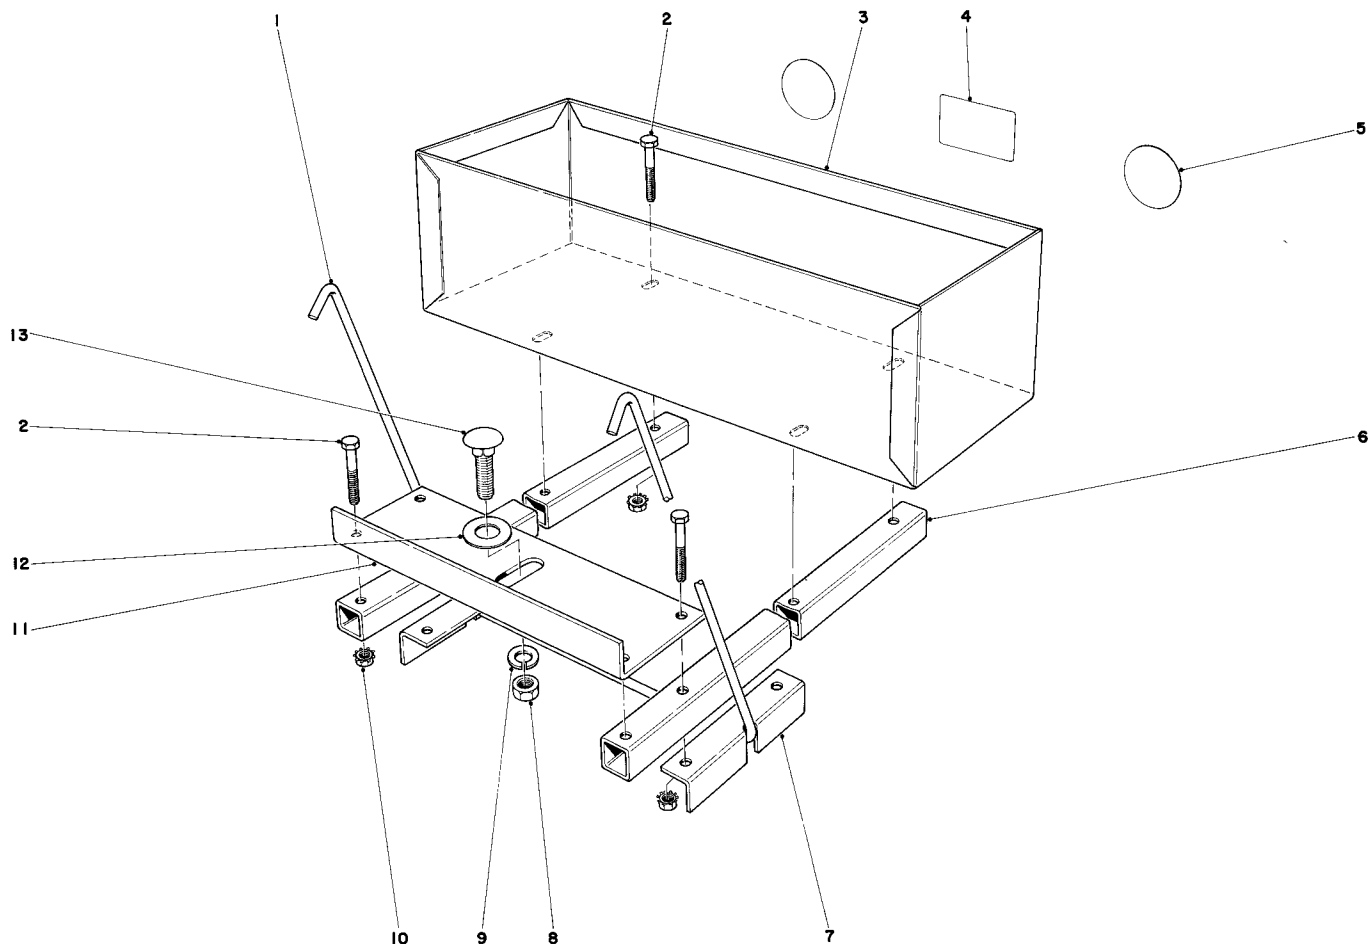


36" SNOWTHROWER WEIGHT BOX ASSEMBLY MODEL 59138

Ref. No.	Part No.	Description	No. Used
1	40-0640	Bracket — Support	1
2	322-9	Hex Head Capscrew	8
3	40-0600	Weight Box	1
4	40-0650	Decal — Weight Box	1
5	40-0590	Reflector	2
6	40-0620	Tube — Mounting	2
7	40-0630	Bracket — Mounting	2

Ref. No.	Part No.	Description	No. Used
8	3217-23	Nut	1
9	3253-7	Lockwasher	1
10	32149-1	Locknut	8
11	40-0610	Bracket — Mounting	1
12	3-1000	Washer	1
13	3233-2	Carriage Bolt	1

 BRIGGS & STRATTON MODEL 252707-0177-01

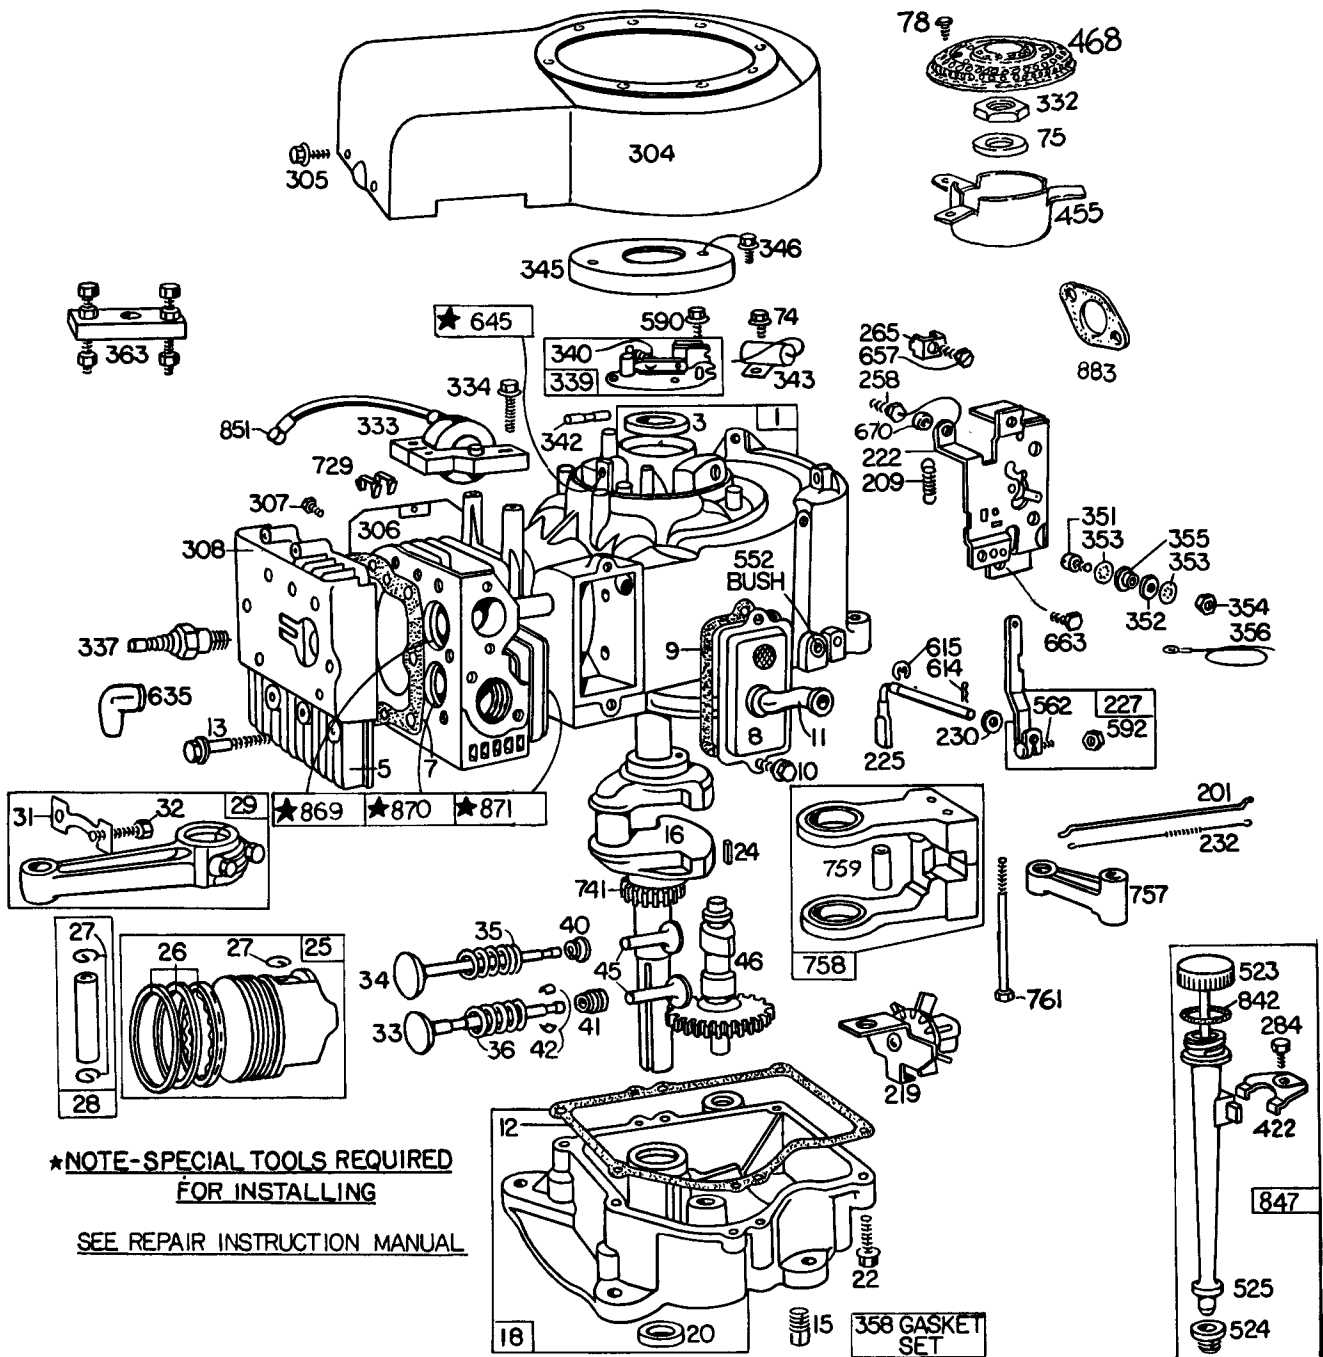


ENGINE BRIGGS & STRATTON MODEL 252707-0177-01

Ref. No.	Part No.	Description	No. Used
1	393409	Cylinder Assembly	1
3	391086	Seal — Oil	1
5	212300	Head — Cylinder	1
7	*271075	Gasket — Cylinder Head	1
8	391406	Breather Assembly	1
9	*27803	Gasket — Valve Cover	1
10	93394	Screw — Sem	1
11	280100	Tube — Breather	1
12	*270808	Gasket — Crankcase Cover — 1/64" Thick	1
	*270915	Gasket — Crankcase Cover — .005" Thick	1
	*270916	Gasket — Crankcase Cover — .009" Thick	1
13	93723	Screw — Cylinder Head (3" Long) Note: 93781 Stud — Cylinder Head 22963 Washer	1 2 2
15	91084	Plug — Oil Drain	1
16	391265	Crankshaft	1
18	391784	Sump — Oil	1
20	291675	Seal — Oil	1
22	93585	Screw — Sump Mounting Sem	1
24	61760	Key — Flywheel	1
25	391285	Piston Assy. — Standard	1
	391287	Piston Assy. — .010" O.S.	1
	391288	Piston Assy. — .020" O.S.	1
	391289	Piston Assy. — .030" O.S.	1
		PISTON RING SETS:	
26	391780	Ring Set — Piston — Std.	1
	391781	Ring Set — Piston — .010" O.S.	1
	391782	Ring Set — Piston — .020" O.S.	1
	391783	Ring Set — Piston — .030" O.S.	1
27	260924	Lock — Piston Pin	1
28	299691	Pin Assembly — Piston — Standard	1
	391286	Pin Assembly — Piston — .005" O.S.	1
29	391775	Rod Assy. — Connecting	1
31	222299	Lock — Conn. Rod Screw	1
32	92909	Screw — Conn. Rod	1
33	261185	Valve — Exhaust	1
34	261462	Valve — Intake	1
35	65906	Spring — Intake Valve	1
36	26828	Spring — Exhaust Valve	1
40	221596	Retainer — Intake Valve	1
41	292260	Rotocoil — Exhaust Valve	1
42	93630	Retainer — Exhaust Valve Rotocoil	2
45	261183	Tappet — Valve	1
46	212296	Gear — Cam	1
74	93042	Screw — Sem	1
75	220865	Washer — Spring	1
78	93808	Screw — Sem	1
201	261198	Link — Governor	1
209	261306	Spring — Governor	1
219	391764	Oil Slinger, Gov. Gear and Bracket Assembly	1
222	390662	Plate — Gov. Control	1
225	231058	Crank — Governor (1/4" Dia.)	1
227	391733	Lever Assy. — Governor (For 1/4" Dia. Crank)	1
230	222450	Washer — Gov. Crank (1/4" I.D.)	1
232	261197	Spring — Governor Link	1

Ref. No.	Part No.	Description	No. Used
258	93686	Screw — Control Bracket Mounting	1
265	221535	Clamp — Casing	1
284	93804	Screw — Clamp Mtg.	1
304	391556	Housing — Blower	1
305	93158	Screw — Blower Housing Mounting Sem	1
306	222744	Shield — Cylinder	1
307	93163	Screw — Cylinder Shield Mtg. Sem	1
308	222725	Cover — Cylinder Head	1
332	92284	Nut — Hex.	1
333	298968	Armature Assembly	1
334	93381	Screw — Armature Mounting Sem	1
337	293918	Plug — Spark (1-1/2" High — 37-42 M.M.)(Resistor Type) Note: Spark Plugs Use Ignition Cable Terminal No. 221798.	1
339	391284	Breaker Assy. — Ignition	1
340	26018	Spring — Breaker Arm	1
342	65704	Plunger — Breaker Point	1
343	391792	Condenser	1
345	222309	Cover — Breaker Point	1
346	93014	Screw — Sem	1
351	93735	Screw — Terminal	1
352	66068	Washer — Insulating	1
353	92791	Washer — Lock — Shakeproof	1
354	90576	Nut — Hex. — 8-32	2
355	66554	Collar — Insulating	1
356	391602	Wire — Ground	1
358	393411	Gasket Set	1
363	19203	Puller — Flywheel	1
422	222502	Clamp — Oil Filler Tube	1
455	222561	Cup — Screen Mounting	1
468	222562	Screen — Flush Rotating	1
523	391841	Cap and Dipstick — — Oil Filler	1
524	68838	Seal — Filler Tube	1
525	280134	Tube — Oil Filler	1
552	231055	Bushing — Gov. Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
590	93226	Screw — Breaker Adjusting Sem	1
592	231082	Nut — Hex., 10-24	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
635	66538	Elbow — Spark Plug	1
645	23513	Bushing — Plunger	1
657	93496	Screw — Sem	1
663	93572	Screw	1
670	231039	Spacer — Control Bracket Mounting	1
729	221907	Clip — Wire	1
741	261196	Gear — Timing	1
757	211675	Link — Counterweight	1
758	391373	Counterweight Assy.	1
759	298909	Pin — Counterweight	1
761	93875	Screw — Counterweight	1
842	270920	Seal — Oil Filler Cap	1
847	392067	Fill Group — Oil	1
851	221798	Terminal — Ignition Cable	1
869	261463	Seat — Intake Valve (Standard)	1
870	210940	Seat — Exhaust Valve (Std.)	1
871	230881	Guide — Exhaust Valve	1
883	270917	Gasket — Exhaust Pipe	1

 *Included in Gasket Set — Part No. 393411.

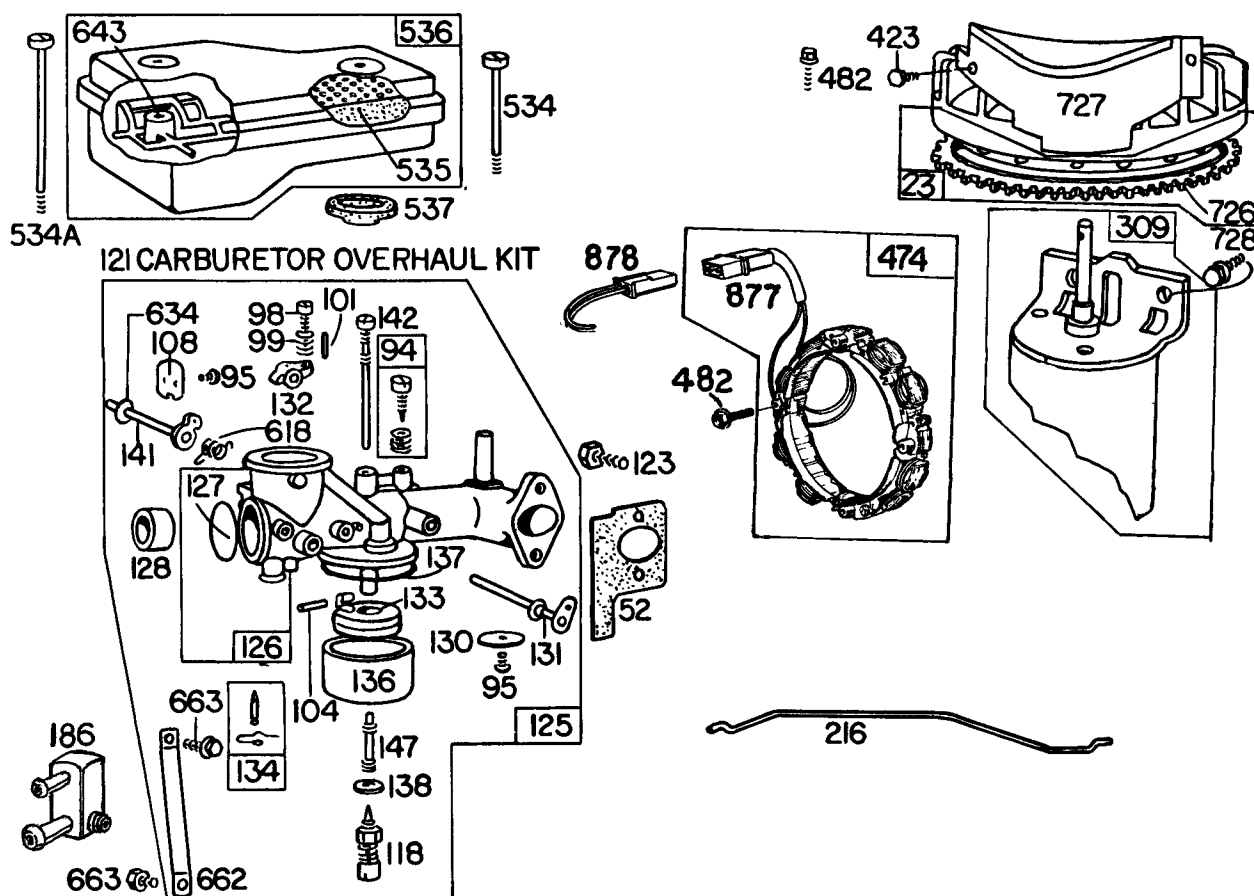


ENGINE BRIGGS & STRATTON MODEL 252707-0177-01

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
23	391988	Flywheel and Ring Gear Assembly — Magneto	1	142	†299740	Nozzle — Carburetor	1
52	*270872	Gasket — Carburetor Mounting	1	147	†230932	Screw — Nozzle	1
94	†292681	Valve Assembly — Carburetor Idle	1	186	212327	Fuel Pipe Connector (Is Supplied by Equipment Manufacturer)	1
95	93499	Screw — Throttle and Choke Valve Mtg. Sem	1	216	261274	Link — Choke	1
98	91920	Screw — Machine, Fill. Hd. 8-32 x 5/8"	1	309		Motor — Starting (12 Volt) See Chart on Page 29 for Replacement Parts for Starting Motors.	
99	26157	Spring — Throttle Adjustment	1	423	93410	Screw — Sem	1
101	93043	Pin — Throttle Stop	1	474	393474	Stator — Alternator	1
104	†230896	Pin — Float Hinge	1	482	93621	Screw — Sem	1
108	222010	Valve Choke	1	534	93622	Screw — Air Cleaner	1
118	†391233	Valve — Needle	1	534A	93323	Screw — Air Cleaner	1
121	299852	Carburetor Overhaul Kit	1	535	270843	Element — Air Cleaner	1
123	93357	Screw — Carburetor Mtg.	1	536	391786	Cleaner Assembly — Air	1
125	393410	Carburetor Assembly (Choke-A-Matic)	1	537	270853	Gasket — Air Cleaner	1
126	391787	Body Assembly Carburetor	1	618	261116	Spring — Choke Return	1
127	†221997	Plug — Welch	1	634	270382	Washer — Choke Shaft	1
128	211960	Venturi — Carburetor	1	643	280118	Support — Air Cleaner Element	1
130	222858	Valve — Throttle	1	662	222311	Bracket — Carburetor	1
131	391512	Shaft and Lever — Throttle	1	663	93572	Screw	1
132	211712	Stop — Throttle	1	726	392134	Gear — Ring (Includes Mounting Parts)	1
133	299707	Float — Carburetor	1	727	390233	Cover and Shield — Starter	1
134	†299096	Valve — Fuel Inlet	1	728	93523	Screw — Sem	1
136	221995	Bowl — Float	1	877	393456	Diode and Connector Assy.	1
137	†270511	Gasket — Float Bowl	1	878	393362	Alternator Harness Assy.	1
138	†222014	Washer — Float Bowl	1				
141	390684	Shaft and Lever — Choke	1				

*Included in Gasket Set — Part No. 393411.

 †Included in Carburetor Overhaul Kit — Part No. 299852.

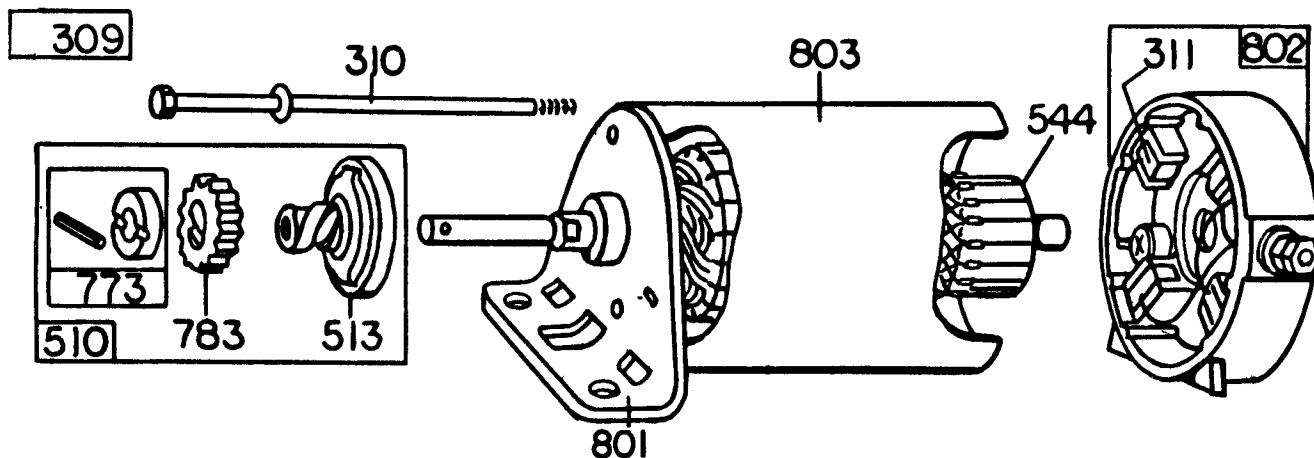

BRIGGS & STRATTON MODEL 252707-0177-01

Ref. No.	Part No.	Description	No. Used
309	393499	Motor and Drive Assy.	1
310	391790	Thru Bolt Assembly	1
311	391791	Brush Assembly	1
510	391461	Drive Assembly	1
513	391135	Clutch Assembly	1
544	391160	Armature Assembly	1

Ref. No.	Part No.	Description	No. Used
773	391462	Retainer and Pin	1
783	280104	Gear	1
801	392061	End Cap Assy. Drive	1
802	391172	End Cap Assy. Commutator	1
803	391167	Housing Assembly	1

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 1 Year
Residential Products Used Commercially . . . 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact

the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

International Group
Service Department
One Corporate Center
7401 Metro Boulevard
Minneapolis, Minnesota 55435 U.S.A.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on right hand side of frame ahead of brake pedal. In any correspondence concerning the Rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Rider.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]