



Form No. 3443-835 Rev C

**Count on it.**

# Parts Catalog

## Rear Tine Tiller

Model No. 58603—Serial No. 321000001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents


Tines and Transmission Assembly ..... 4

Wheels and Shield Assembly ..... 6

Handles and Controls Assembly ..... 8

Engine Assembly ..... 10


# Tines and Transmission Assembly

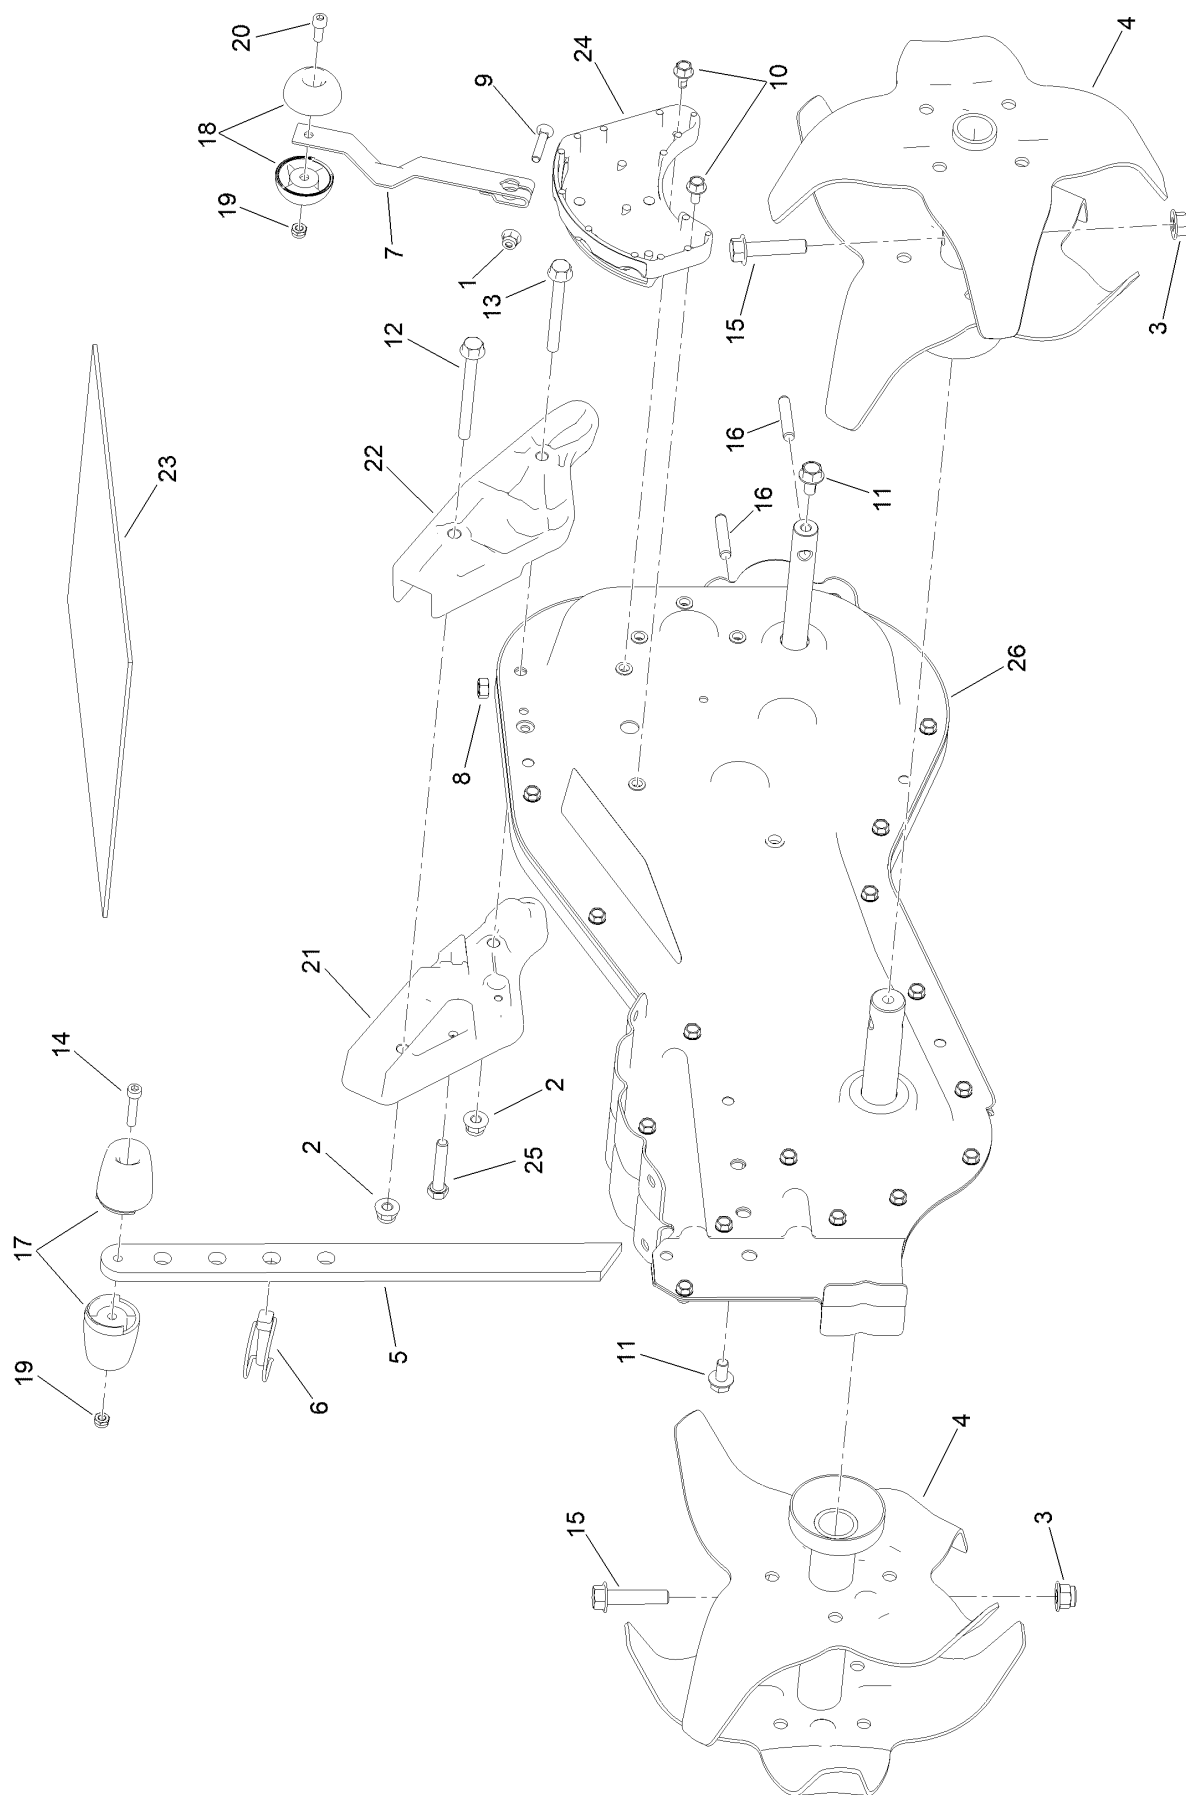

## Tines and Transmission Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|------------------------|
| 1           | 144-5022           | 1           | Nut-Hex            | 14          | 144-5077           | 1           | Screw-SHCS             |
| 2           | 144-4789           | 2           | Nut-Hex            | 15          | 144-5078           | 2           | Screw-HHF              |
| 3           | 144-4817           | 2           | Nut-Hex            | 16          | 144-5080           | 2           | Pin-Dowel              |
| 4           | 144-5030           | 2           | Tine               | 17          | 144-4946           | 2           | Handle                 |
| 5           | 144-5038           | 1           | Stake-Drag         | 18          | 144-5085           | 2           | Handle-Shift           |
| 6           | 144-5042           | 1           | Pin-Lock           | 19          | 144-5086           | 2           | Nut-Hex                |
| 7           | 144-5043           | 1           | Arm-Shifter        | 20          | 144-5087           | 1           | Screw-SHCS             |
| 8           | 144-4939           | 1           | Nut-Hex            | 21          | 144-5091           | 1           | Mount-Handlebar, Left  |
| 9           | 144-5070           | 1           | Screw-CRG          | 22          | 144-5101           | 1           | Mount-Handlebar, Right |
| 10          | 144-5071           | 2           | Screw-HF           | 23          | 144-5093           | 1           | Bag-Manual             |
| 11          | 144-5072           | 2           | Screw-HF           | 24          | 144-5095           | 1           | Shift Selector         |
| 12          | 144-5073           | 1           | Screw-HF           | 25          | 144-5100           | 1           | Screw-HHCS             |
| 13          | 144-5074           | 1           | Screw-HF           | 26          | 147-4291           | 1           | Transmission ASM       |


# Wheels and Shield Assembly

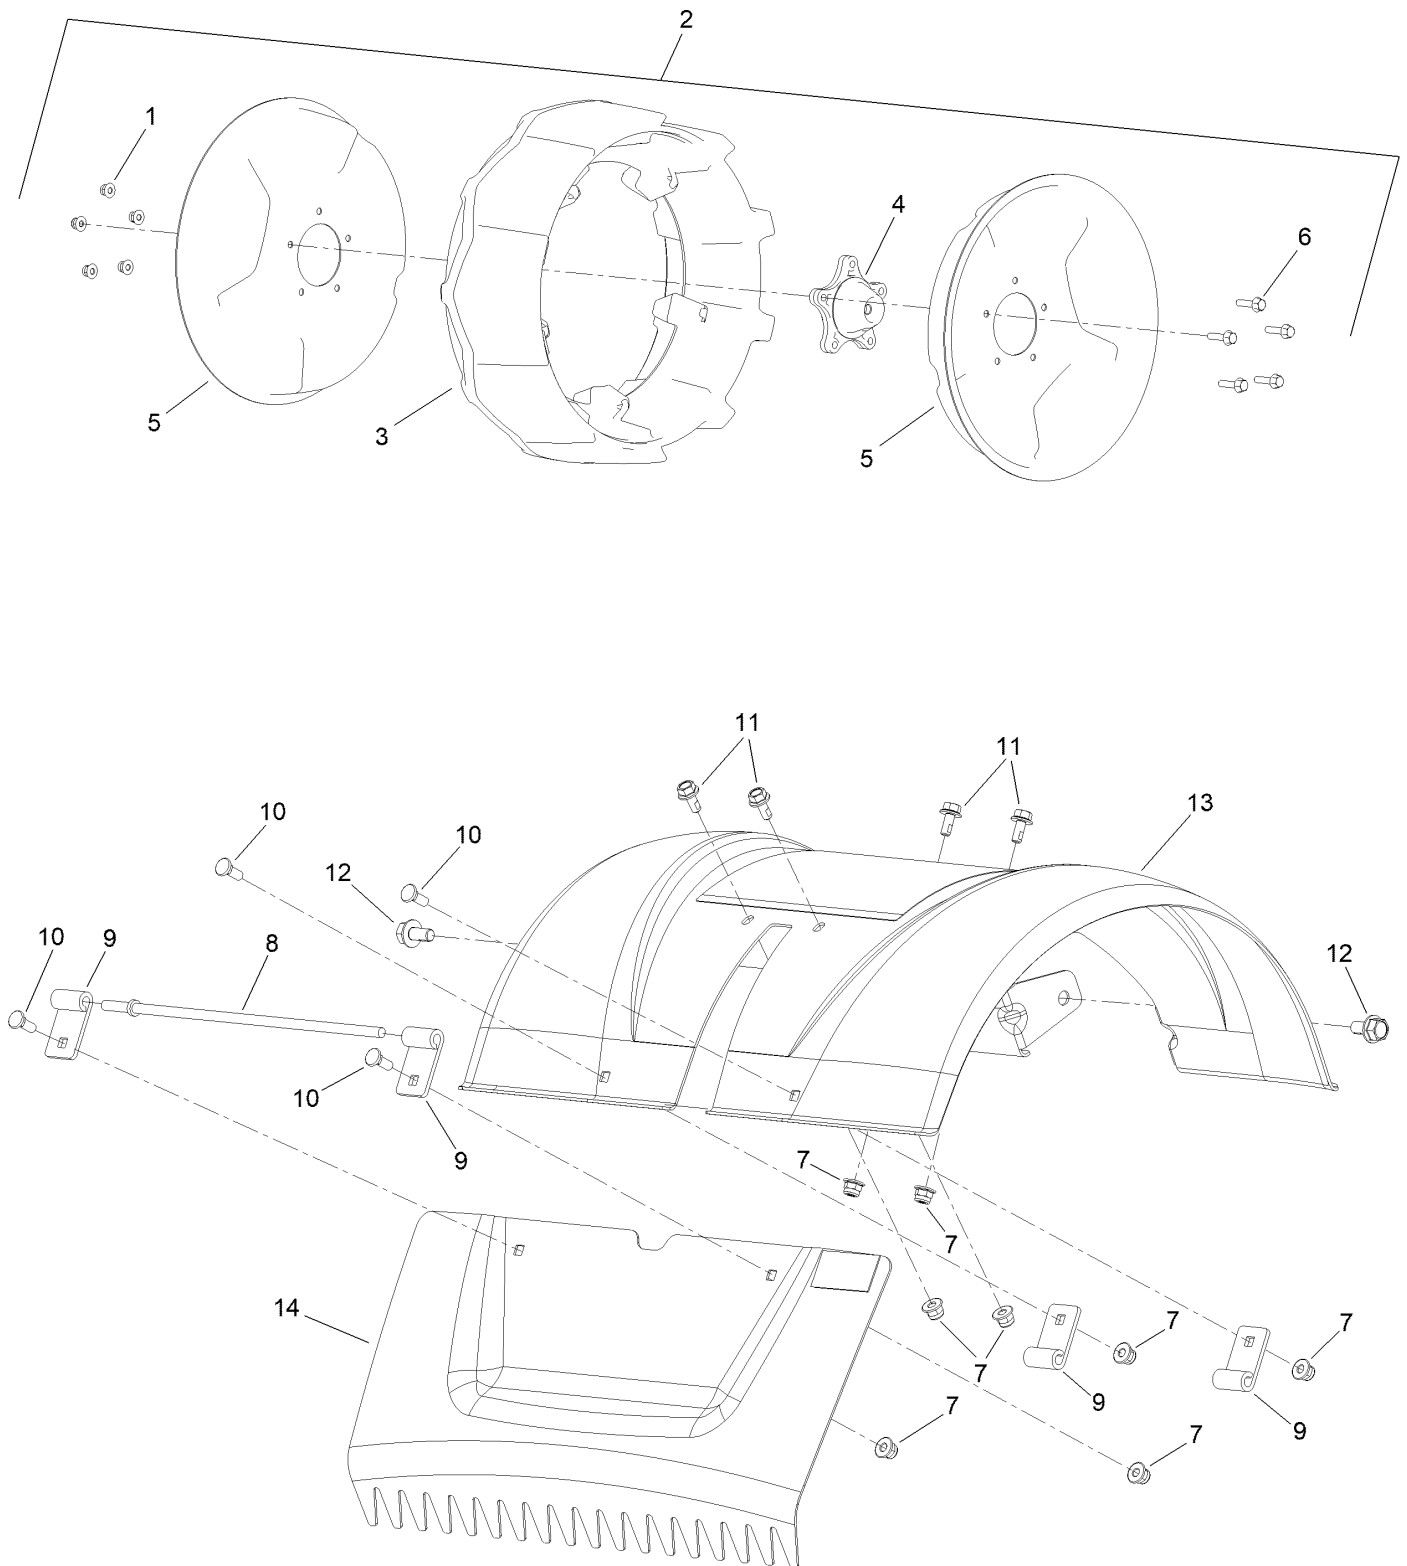

## Wheels and Shield Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 144-5022           | 5           | Nut-Hex            | 8           | 144-5023           | 1           | Rod-Hinge          |
| 2           | 144-5024           | 2           | Wheel              | 9           | 144-5053           | 4           | Bracket-Hinge      |
| 3           | 144-5025           | 1           | Tire               | 10          | 144-5054           | 4           | Screw-CRG          |
| 4           | 144-5026           | 1           | Hub                | 11          | 144-5071           | 4           | Screw-HF           |
| 5           | 144-5027           | 2           | Rim-Half           | 12          | 144-5072           | 2           | Screw-HF           |
| 6           | 144-5079           | 5           | Screw-HHF          | 13          | 144-5090           | 1           | Beaver Tail        |
| 7           | 144-5022           | 8           | Nut-Hex            | 14          | 144-5098           | 1           | Shield-Tine        |

# Handles and Controls Assembly

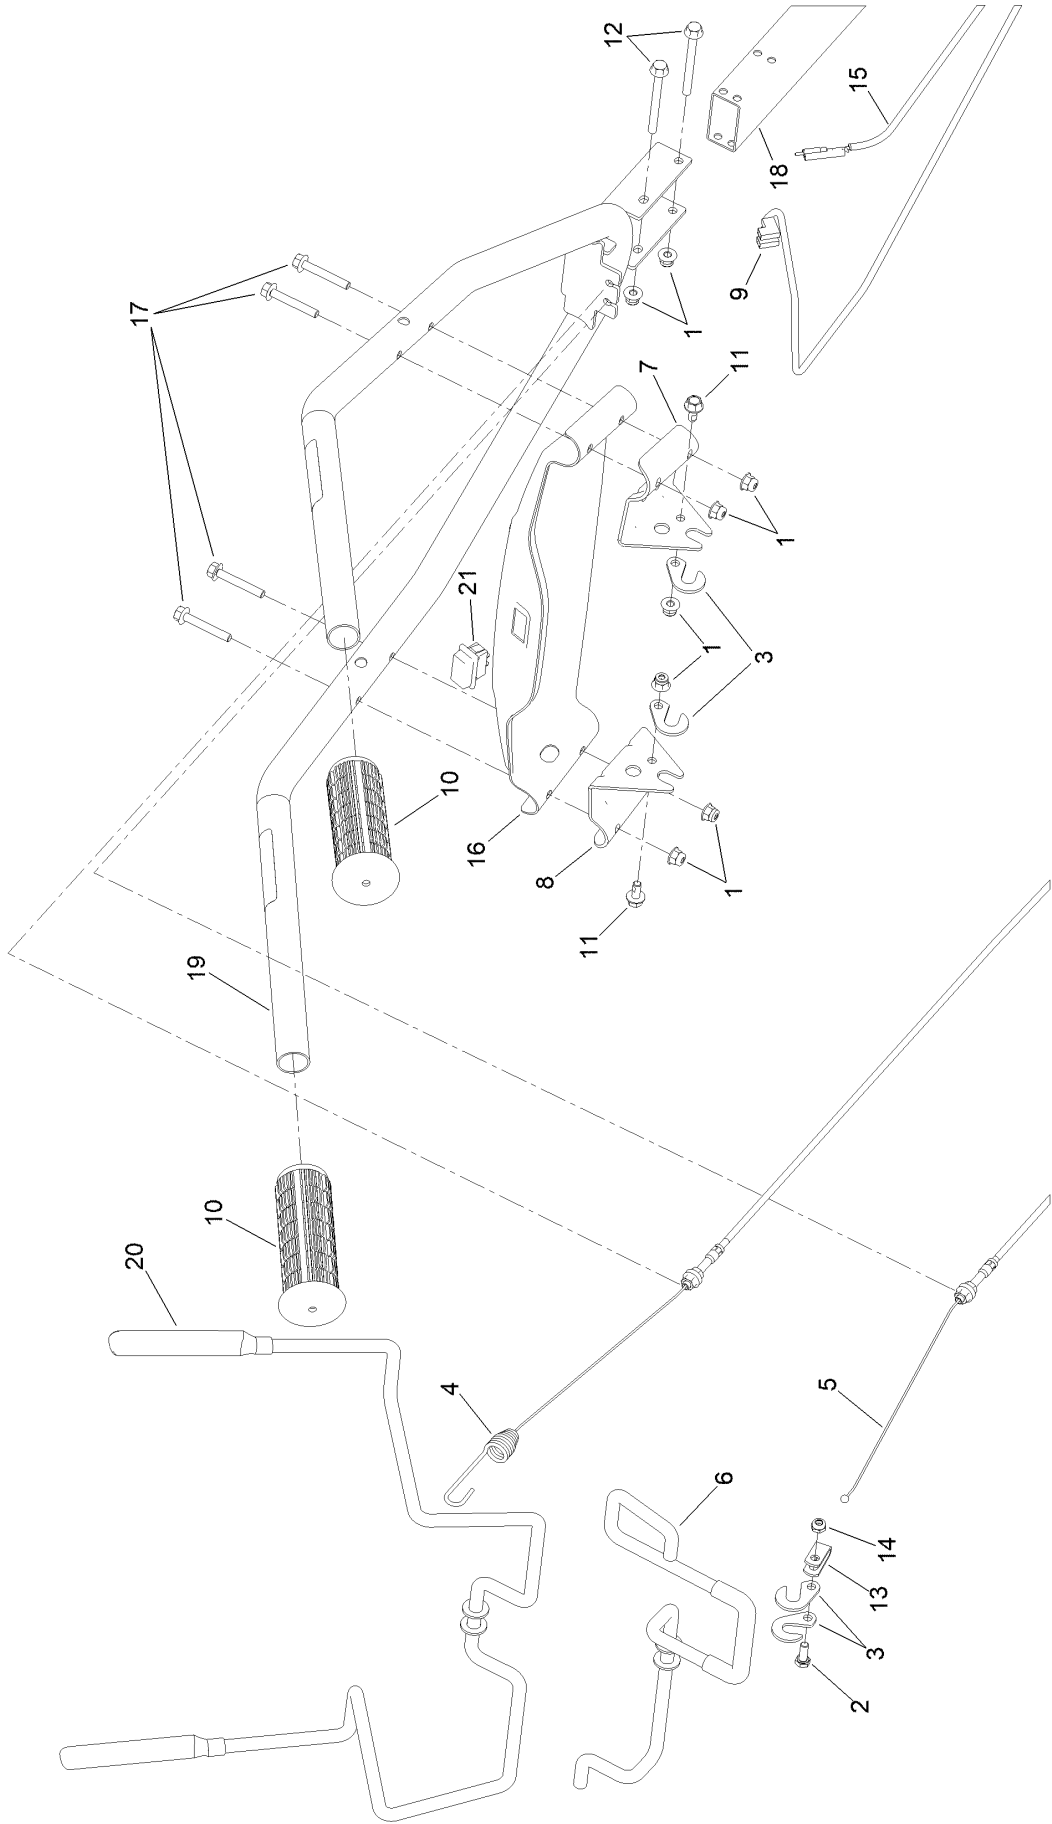




## Handles and Controls Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 144-5022           | 8           | Nut-Hex            |
| 2           | 144-4981           | 1           | Screw-HHCS         |
| 3           | 144-5028           | 4           | Hook               |
| 4           | 144-5039           | 1           | Cable-Forward      |
| 5           | 144-5040           | 1           | Cable-Reverse      |
| 6           | 144-5044           | 1           | Bail-Reverse       |
| 7           | 144-5045           | 1           | Bail-Right         |
| 8           | 144-5046           | 1           | Bail- Left         |
| 9           | 144-5051           | 1           | Harness-Wiring     |
| 10          | 144-5055           | 2           | Grip               |
| 11          | 144-5071           | 2           | Screw-HF           |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 12          | 144-5075           | 2           | Screw-HF              |
| 13          | 144-5082           | 1           | Yoke-Reverse Bail     |
| 14          | 144-5086           | 1           | Nut-Hex               |
| 15          | 144-5094           | 1           | Wiring Harness-Engine |
| 16          | 144-4953           | 1           | Dash-Tiller           |
| 17          | 144-4956           | 4           | Screw-HHF             |
| 18          | 144-5096           | 1           | Tube                  |
| 19          | 144-5097           | 1           | Handlebar             |
| 20          | 144-5099           | 1           | Lever-Forward         |
| 21          | 144-4960           | 1           | Switch                |

# Engine Assembly

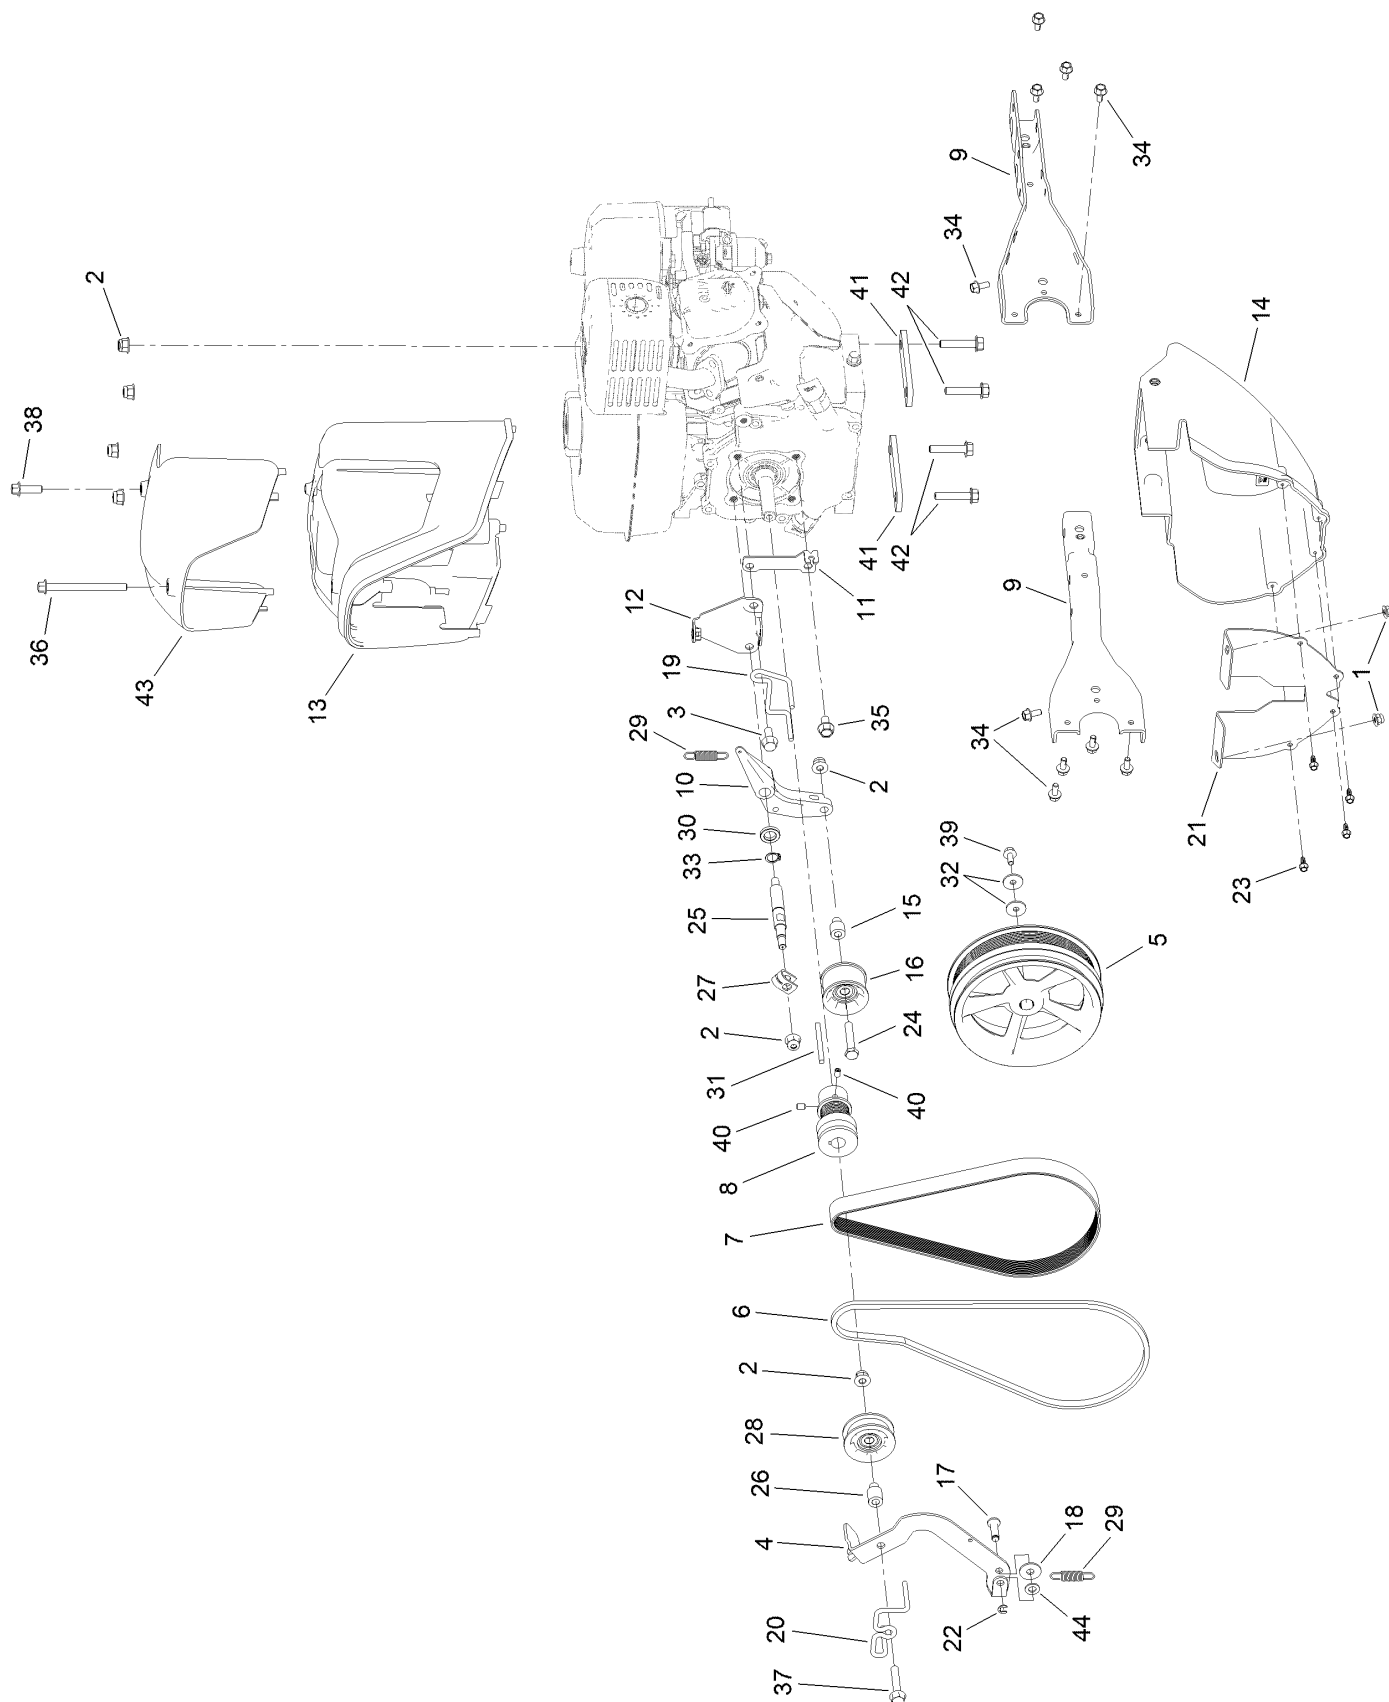

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 144-5022           | 2           | Nut-Hex               | 23          | 144-5060           | 4           | Screw-HHF          |
| 2           | 144-4789           | 7           | Nut-Hex               | 24          | 144-5000           | 1           | Screw-HHCS         |
| 3           | 144-4784           | 1           | Screw-HHF             | 25          | 144-5061           | 1           | Stud               |
| 4           | 144-5029           | 1           | Arm-Reverse           | 26          | 144-5062           | 1           | Bushing-Reverse    |
| 5           | 144-5031           | 1           | Pulley-Transmission   | 27          | 144-5063           | 1           | Yoke               |
| 6           | 144-5032           | 1           | Belt-V                | 28          | 144-5064           | 1           | Pulley-Reverse     |
| 7           | 144-5033           | 1           | Belt-Poly             | 29          | 144-5065           | 2           | Spring-Arm         |
| 8           | 144-5034           | 1           | Pulley-Engine         | 30          | 144-5066           | 1           | Bushing-Arm        |
| 9           | 144-5035           | 2           | Mount-Engine          | 31          | 144-5067           | 1           | Key                |
| 10          | 144-5036           | 1           | Arm-Forward           | 32          | 144-5068           | 2           | Washer-Flat        |
| 11          | 144-5037           | 1           | Bracket-Cable         | 33          | 144-5069           | 1           | Ring-Retaining     |
| 12          | 144-5041           | 1           | Bracket-Engine        | 34          | 144-5071           | 10          | Screw-HF           |
| 13          | 144-5047           | 1           | Guard-Upper           | 35          | 144-5072           | 1           | Screw-HF           |
| 14          | 144-5048           | 1           | Guard-Lower           | 36          | 144-5076           | 1           | Screw-HF           |
| 15          | 144-5049           | 1           | Bushing-Forward Idler | 37          | 144-5081           | 1           | Screw-HHF          |
| 16          | 144-5050           | 1           | Pulley-Forward Idler  | 38          | 144-5083           | 1           | Screw-HF           |
| 17          | 144-5052           | 1           | Pin-Clevis            | 39          | 144-5084           | 1           | Screw-HHF          |
| 18          | 144-4936           | 1           | Washer-Flat           | 40          | 144-4794           | 2           | Screw-Set          |
| 19          | 144-5056           | 1           | Guide-Forward         | 41          | 144-5088           | 2           | Plate-Engine       |
| 20          | 144-5057           | 1           | Guide-Reverse         | 42          | 144-5089           | 4           | Screw-HHF          |
| 21          | 144-5058           | 1           | Guard-Lower Pulley    | 43          | 144-5092           | 1           | Cover-Pulley       |
| 22          | 144-5059           | 1           | Clip-Clevis           | 44          | 144-4958           | 1           | Washer-Flat        |



**Count on it.**