



Form No. 3447-112 Rev B

Count on it.

Parts Catalog

Front Tine Tiller/Cultivator

Model No. 58604—Serial No. 321000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Chassis Assembly 4

Tines and Transmission Assembly 6

Handles and Controls Assembly 8

Engine Assembly No. 147-4289 10


Chassis Assembly

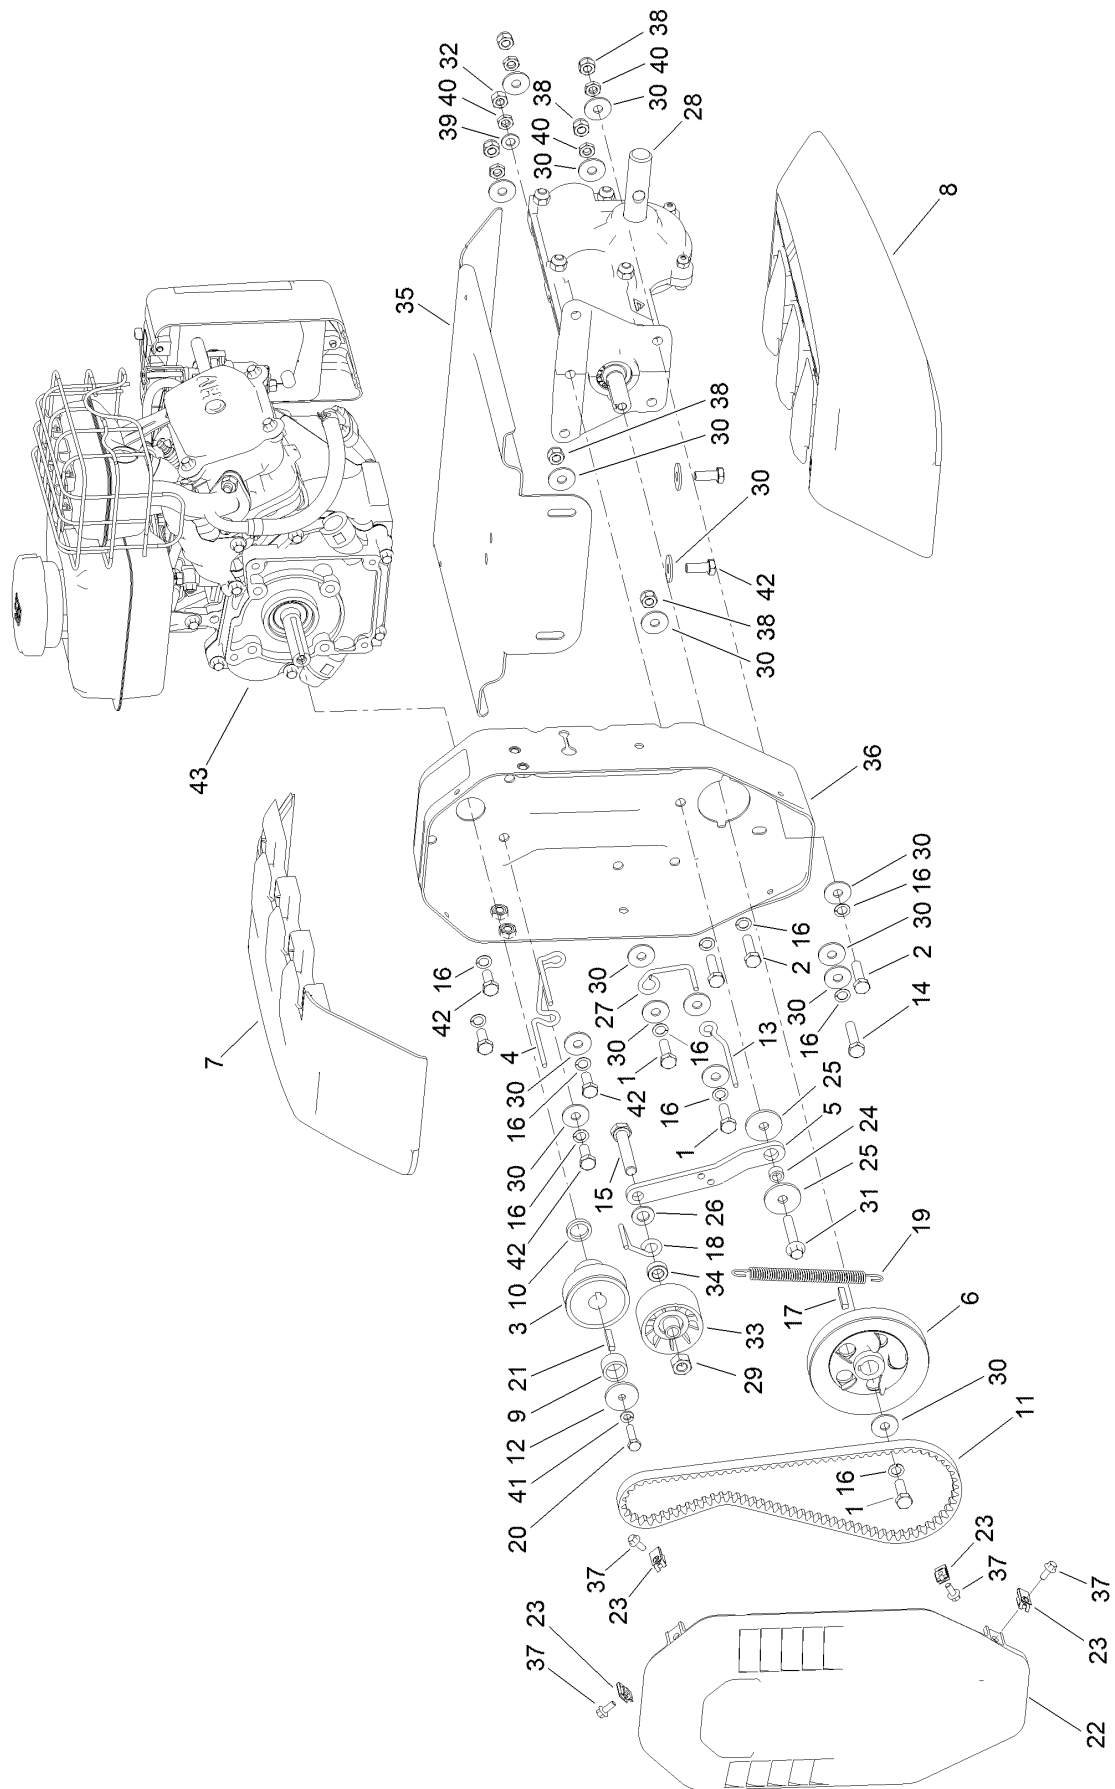

Chassis Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4880	3	Screw-HHCS	23	144-4922	4	Cage Nut
2	144-4887	3	Screw-HHCS	24	144-4923	1	Bushing
3	144-4889	1	Pulley-16MM	25	144-4924	2	Washer-Wide
4	144-4895	1	Belt Guide-Double	26	144-4688	1	Washer-Plain
5	144-4896	1	Arm	27	144-4828	1	Guide-Belt
6	144-4898	1	Pulley-Transmission	28	144-4929	1	Mount-Transmission
7	144-4899	1	Shield-Left	29	144-4935	1	Nut-Hex
8	144-4900	1	Shield-Right	30	144-4936	18	Washer-Flat
9	144-4901	1	Bushing	31	144-4937	1	Screw-HHF
10	144-4902	1	Bushing	32	144-4939	1	Nut-Hex
11	144-4903	1	Belt	33	144-4940	1	Pulley-Idler
12	144-4904	1	Washer-Flat	34	144-4945	1	Spacer-18MM
13	144-4905	1	Belt Guide-Single	35	144-4949	1	Shield-Center
14	144-4907	1	Screw-HHCS	36	144-4954	1	Box-Pulley
15	144-4908	1	Screw-HHCS	37	144-4955	4	Screw-HHF
16	144-4909	11	Washer-Lock	38	144-4738	6	Nut-Hex
17	144-4916	1	Key-Square	39	144-4958	1	Washer-Flat
18	144-4917	1	Belt Catch	40	144-4755	5	Nut
19	144-4918	1	Tension Spring	41	144-4962	1	Washer-Lock
20	144-4919	1	Screw-HHCS	42	144-4965	6	Screw-HHCS
21	144-4920	1	Key-Square	43	147-4289	1	Engine-Rato, R100
22	144-4921	1	Cover-Pulley				


Tines and Transmission Assembly

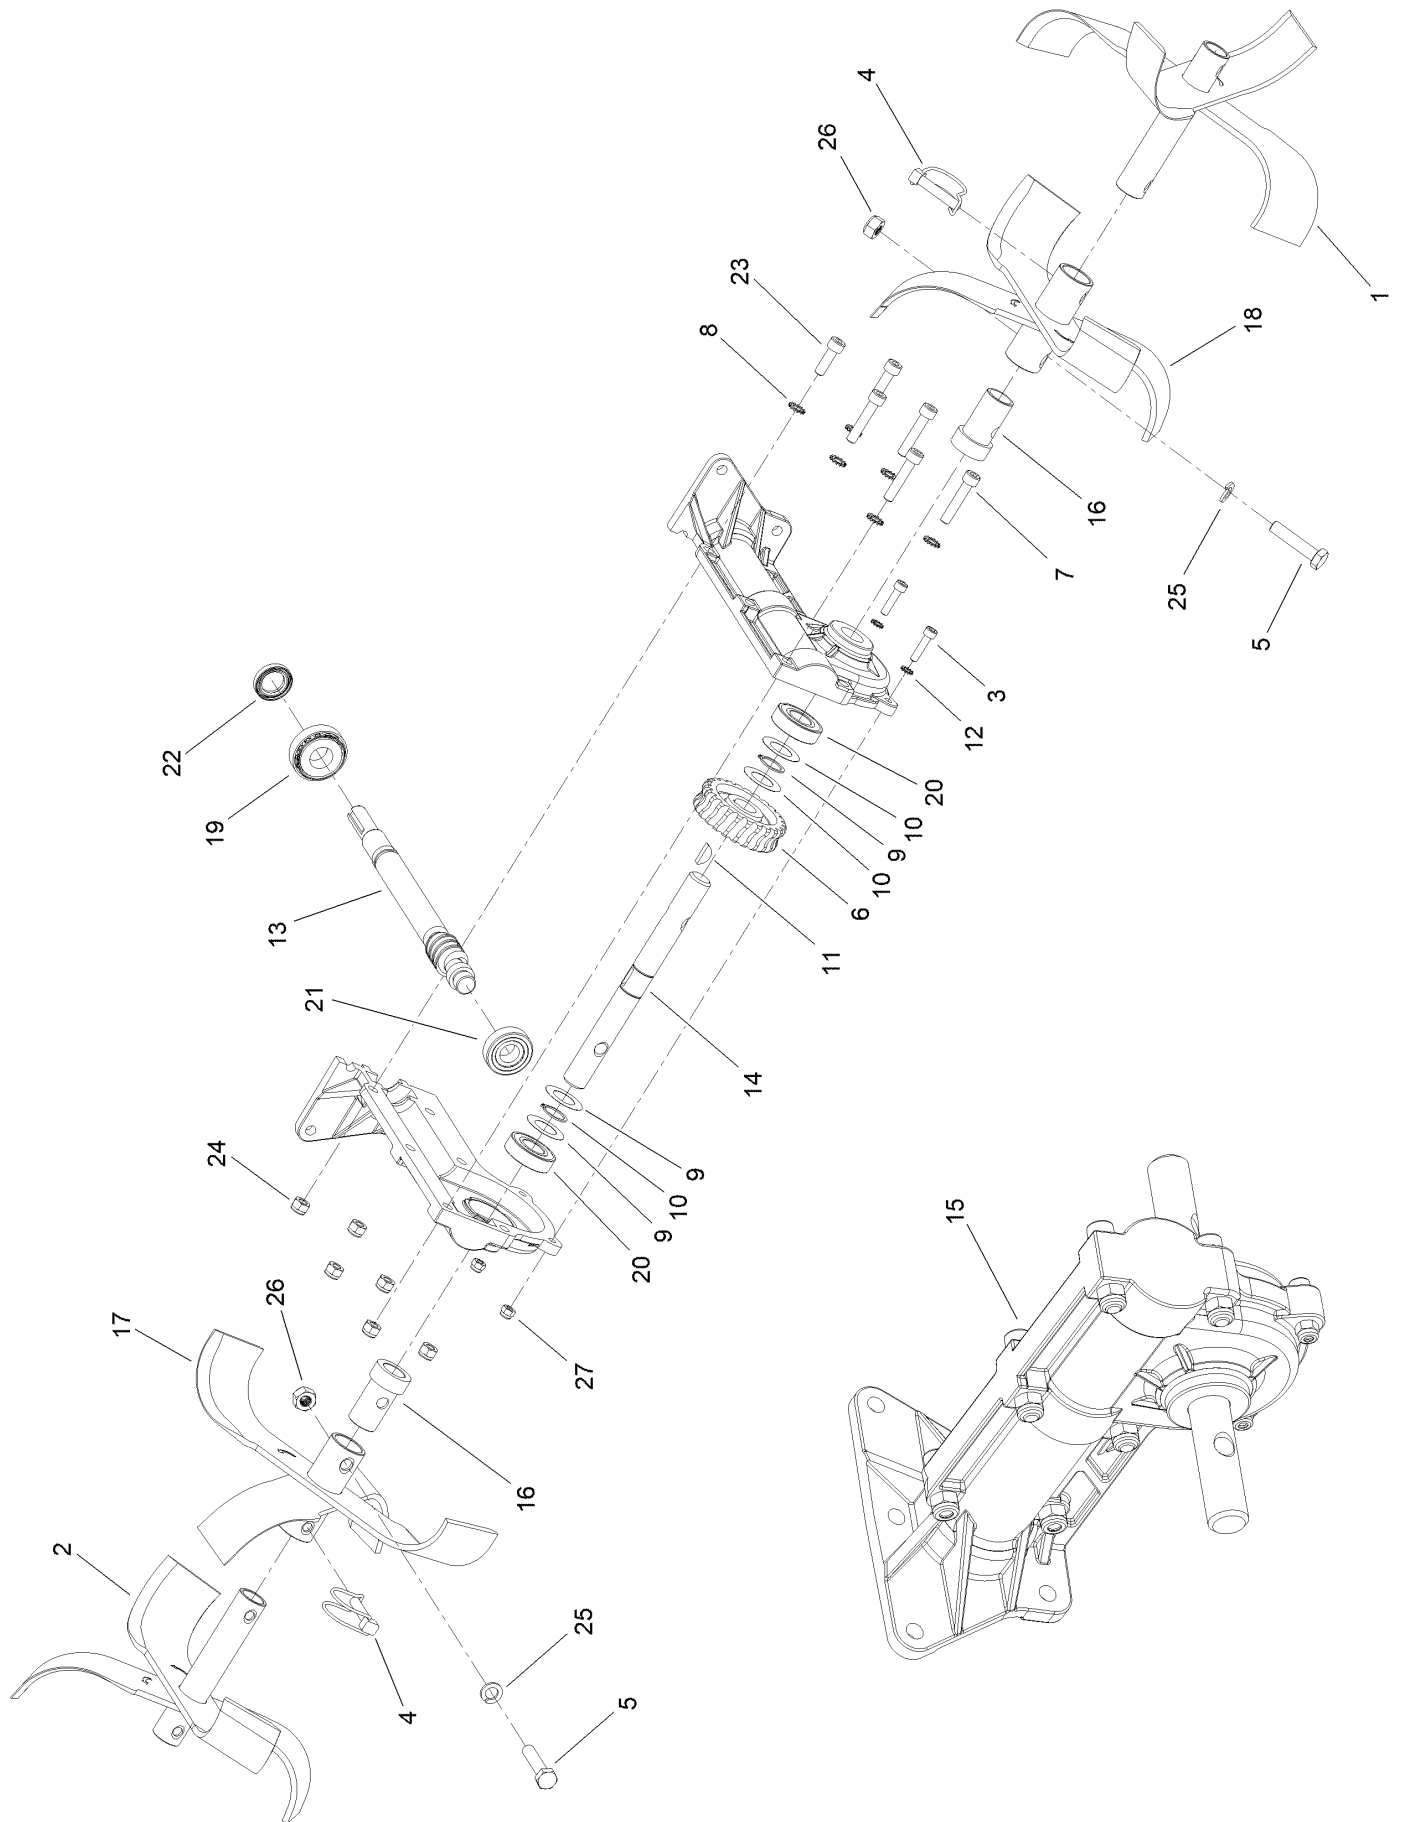

Tines and Transmission Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4882	1	Tine-Outside Left	15	144-4929	1	Mount-Transmission
2	144-4883	1	Tine-Outside Right	16	144-4930	2	Sleeve-Tine
3	144-4884	2	Screw-SHCS	17	144-4931	1	Tine-Inside Right
4	144-4685	2	Pin-Clevis, Locking	18	144-4932	1	Tine-Inside Left
5	144-4892	2	Screw-HHCS	19	144-4934	1	Bearing-Roller
6	144-4897	1	Gear	20	144-4942	2	Bearing-Roller
7	144-4910	4	Screw-SHCS	21	144-4943	1	Bearing-Roller
8	144-4911	6	Washer-Tooth Lock	22	144-4944	1	Seal-Oil
9	144-4912	4	Spacer-Bearing	23	144-4957	2	Screw-SHCS
10	144-4913	2	Ring-Retaining	24	144-4738	6	Nut-Hex
11	144-4914	1	Key-Woodruff	25	144-4963	2	Washer-Lock
12	144-4915	2	Washer-Tooth Lock	26	144-4964	2	Nut-Hex
13	144-4925	1	Drive Shaft	27	144-4836	2	Nut-Hex
14	144-4928	1	Tine Shaft				

Handles and Controls Assembly

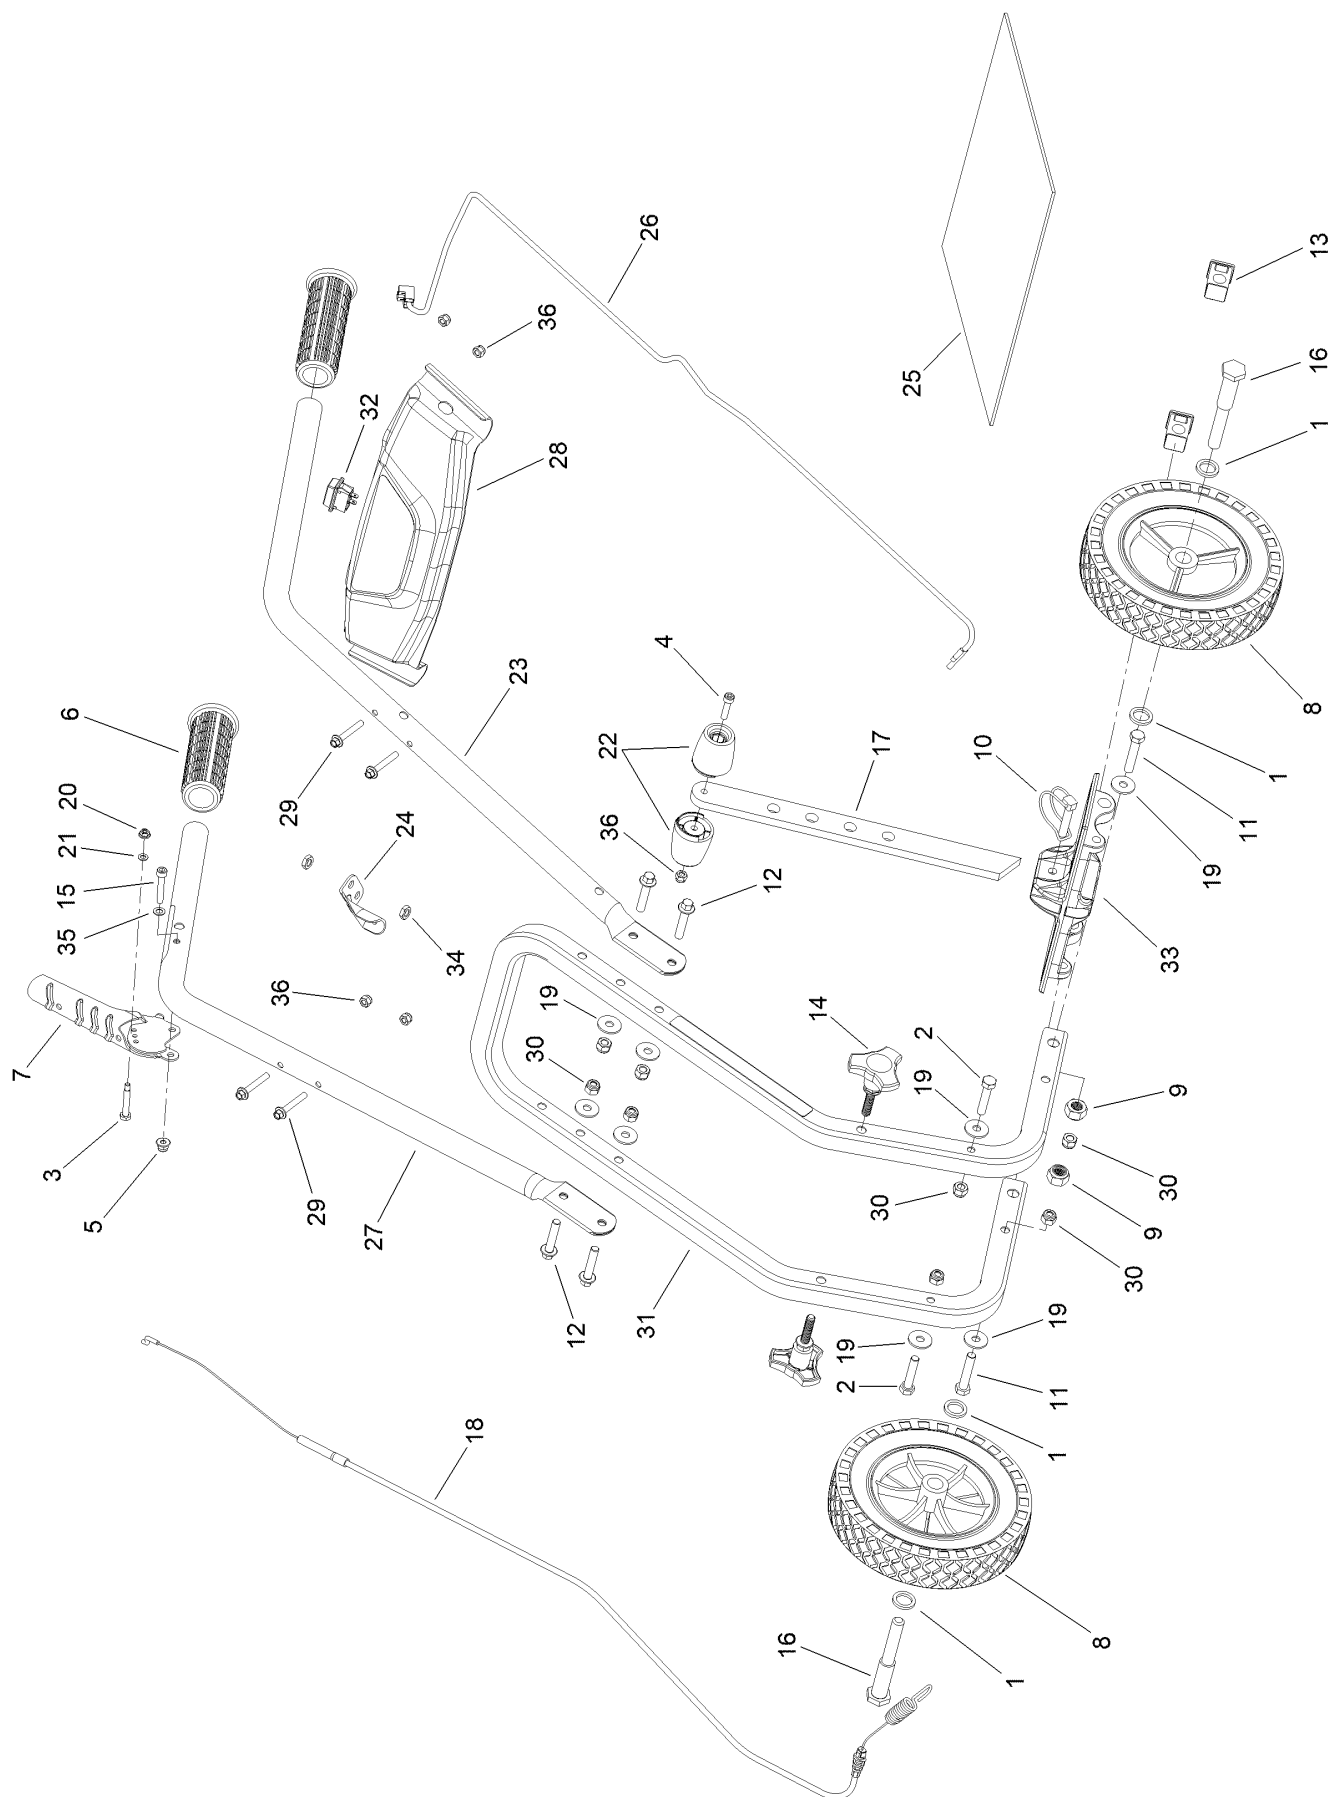


Handles and Controls Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-4875	4	Washer-Flat
2	144-4876	2	Screw-HH
3	144-4877	1	Screw-HH
4	144-4878	1	Screw-SHCS
5	144-4879	1	Nut-Hex
6	144-4881	2	Grip
7	144-4885	1	Lever-Clutch
8	144-4886	2	Wheel
9	144-4888	2	Nut-Hex
10	144-4685	1	Pin-Clevis, Locking
11	144-4890	2	Screw-HH
12	144-4891	4	Screw-RHF
13	144-4893	2	Plug-Square
14	144-4894	2	Knob
15	144-4906	1	Screw-SHCS
16	144-4926	2	Screw-Shoulder
17	144-4927	1	Drag Stake
18	144-4933	1	Cable

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
19	144-4936	8	Washer-Flat
20	144-4938	1	Nut-Hex
21	144-4941	1	Washer-Flat
22	144-4946	2	Handle
23	144-4947	1	Handlebar-Left
24	144-4948	1	Bracket-Cable
25	144-4950	1	Bag-Manual
26	144-4951	1	Harness-Wiring
27	144-4952	1	Handlebar-Right
28	144-4953	1	Dash-Tiller
29	144-4956	4	Screw-HHF
30	144-4738	8	Nut-Hex
31	144-4959	1	Frame
32	144-4960	1	Switch
33	144-4961	1	Holder-Drag Stake
34	144-4755	2	Nut
35	144-4777	1	Washer
36	144-4836	5	Nut-Hex

Engine Assembly No. 147-4289

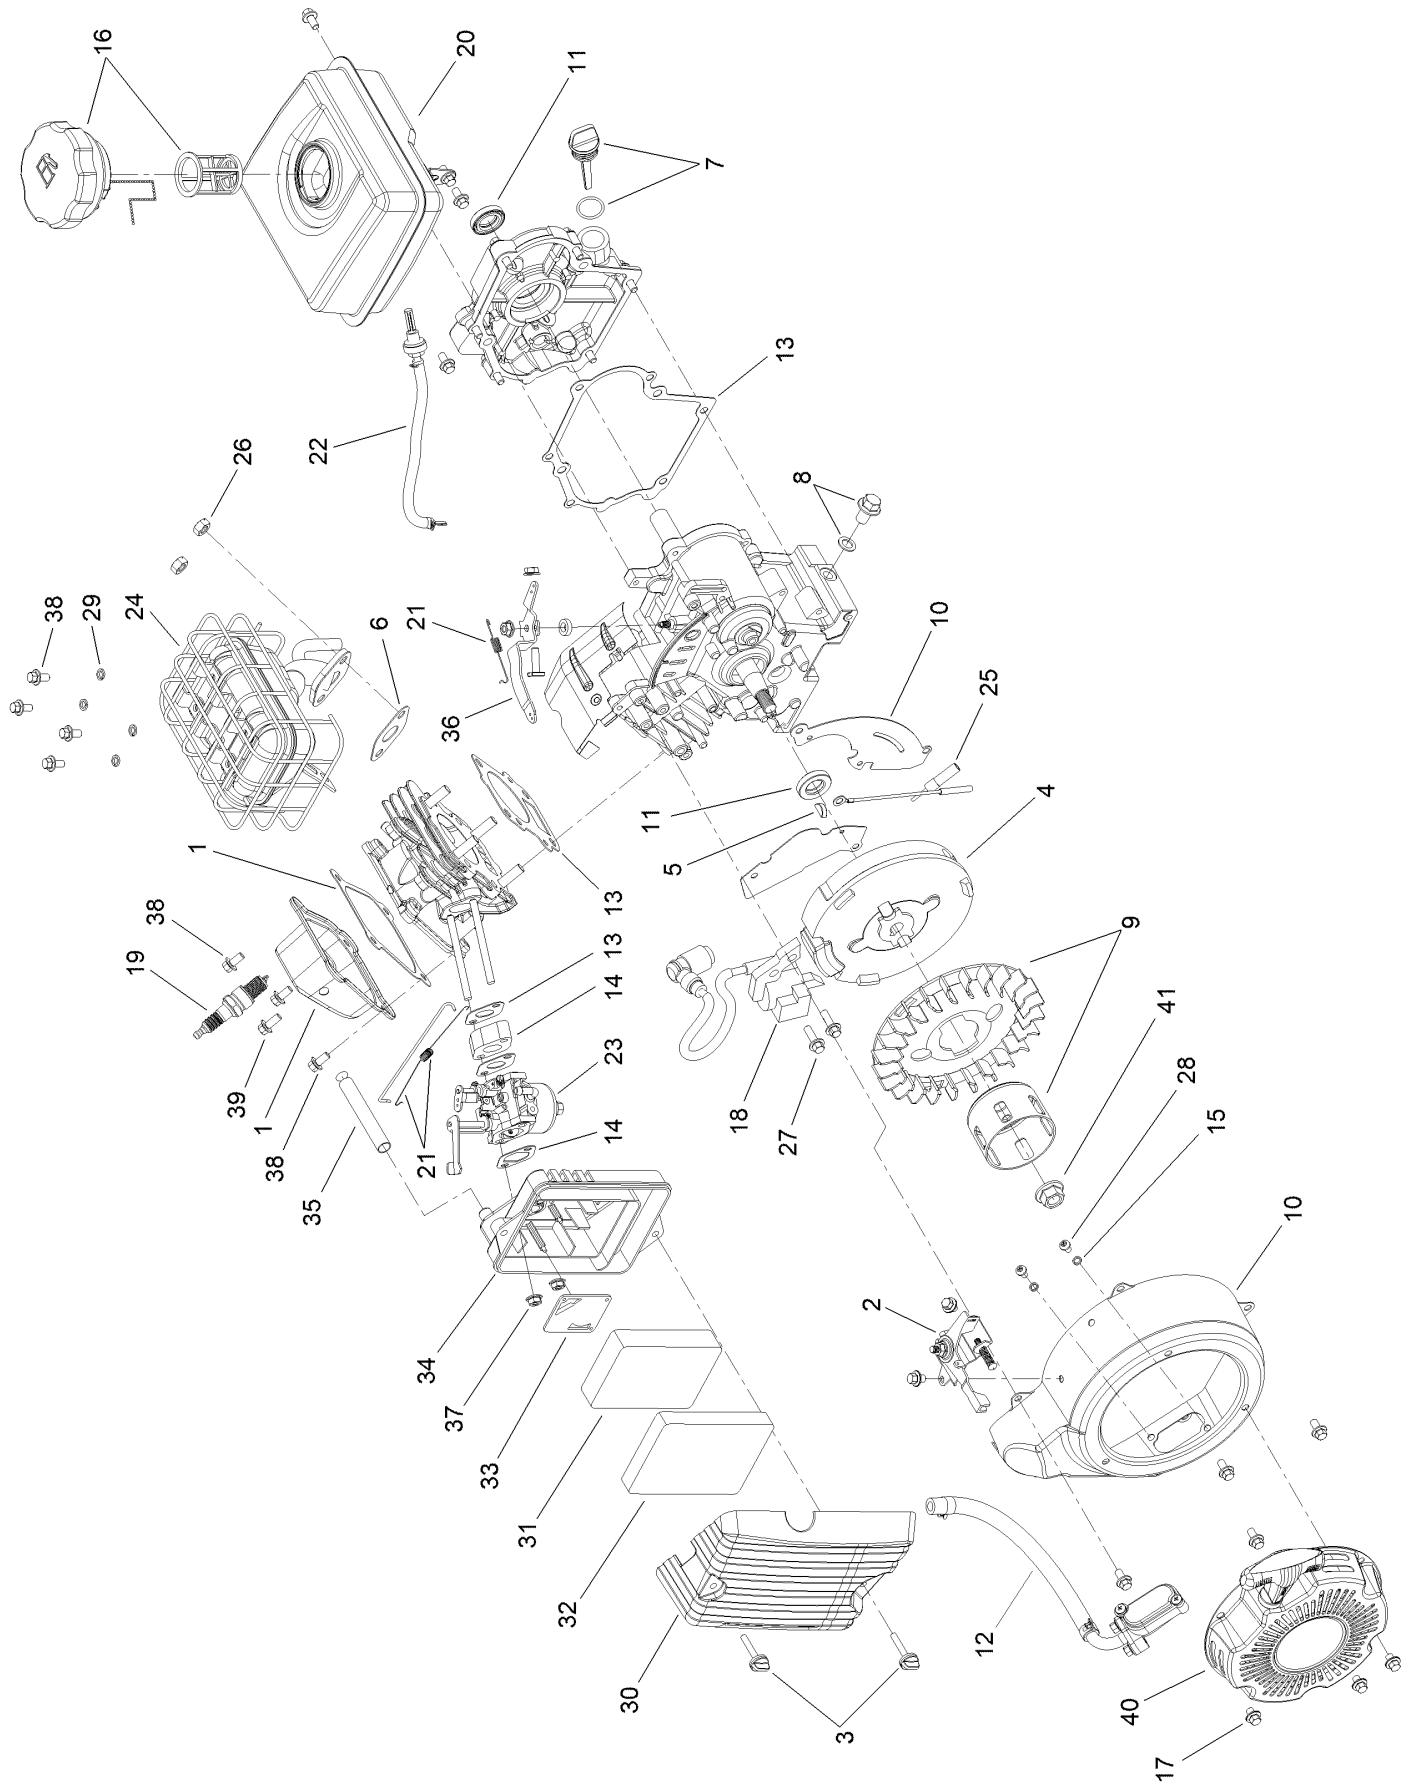

Engine Assembly No. 147-4289 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-5102	1	Valve Cover Kit
2	144-5103	1	Conrol-Throttle
3	144-5104	2	Screw-TMBS
4	144-5105	1	Flywheel
5	144-5106	1	Key-Woodruff
6	144-5107	1	Gasket-Exhaust
7	144-5108	1	Dipstick
8	144-5109	1	Plug-Oil
9	144-5110	1	Fan Kit
10	144-5111	1	Blower Housing Kit
11	144-5112	2	Seal-Oil
12	144-5113	1	Auxiliary Intake Kit
13	144-5114	1	Gaskets-Engine
14	144-5115	1	Gaskets-Carburetor
15	144-5116	2	Washer-Lock
16	144-5117	1	Fuel Cap Kit
17	144-5118	5	Screw-RHF
18	144-5119	1	Coil-Ignition
19	144-5120	1	Spark Plug
20	144-5121	1	Fuel Tank Kit
21	144-5122	1	Throttle Linkage Kit

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
22	144-5123	1	Fuel Line Kit
23	144-5124	1	Carburetor
24	144-5125	1	Muffler
25	144-5126	1	Ignition Kit
26	144-4939	2	Nut-Hex
27	144-5127	2	Screw-RHF
28	144-5128	2	Screw-PPHMS
29	144-5129	4	Washer-Lock
30	144-5130	1	Cover-Air Cleaner
31	144-5131	1	Cap-Air Filter
32	144-5132	1	Base-Air Filter
33	144-5133	1	Plate-Air Filter
34	144-5134	1	Box-Air Filter
35	144-5135	1	Tube-Breather
36	144-5136	1	Arm-Governor
37	144-5137	4	Nut-Hex
38	144-5138	14	Screw-RHF
39	144-5139	1	Screw-RHF
40	144-5140	1	Recoil
41	144-5141	1	Nut-Hex



Count on it.