

Boot and Tube Kit Z Master® **200 Series with 62in Mower**Model No. 78495

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

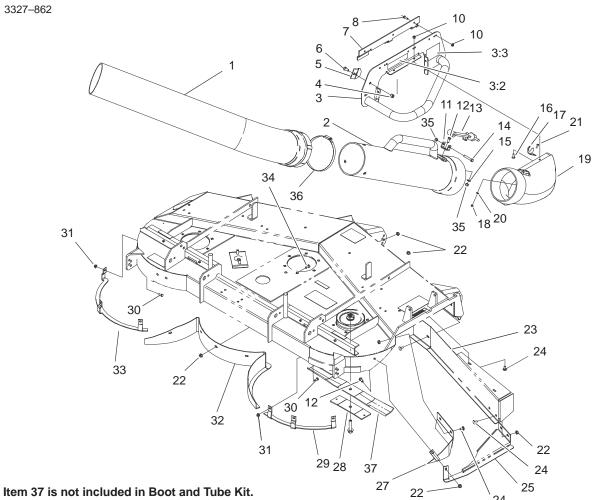

Boot Assembly

Ref. No.	Part No.	Qty.	Description
1	105–8159	1	Tube-Elbow
2	105-8160	1	Tube-Straight
3	106-3340	1	Plate-Mounting
3:2	104-8569	1	Decal-Warning,
			Deflector
3:3	106-3339	1	Decal-Warning,
			Counter Weight
4	3296–39	1	Nut-Lock, NI
5	104–8575	1	Bracket–Clamp
6	323–4	1	Screw-HH
7	104-8573-03	1	Bracket-Mounting
8	321–4	3	Screw-HH
10	3296–42	9	Nut-Lock, NI
11	105–9707	1	Bracket–Anchor
12	322–3	2	Screw-HH
13	105–8155	1	Holddown-Hood
14	322–10	1	Screw-HH
15		1	Washer–Flat
16		6	
17	105–9709	1	Bracket-Hood
18		2	Nut-Lock
19		1	Boot
20		2	Washer–Flat
21		2	
22		13	
23	105–5535–01	1	Baffle–Front

Ref. No.	Part No.	Qty.	Description
24 25 27 28 29 30 31 32 33 34 35 36 37	105–9731–01 105–8234–01 105–6198–03 105–5884–01 321–3 32128–32 105–8230–01 105–5883–01 322–2 3296–29	7 1 1 3 1 6 6 1 1 5 2 1 1	Screw-CARR Baffle-Cross Rear Baffle ASM Stiffener-Blade Plate-Shelf, Right Rear Screw-HH Nut-HHF Bottom Baffle ASM Plate-Shelf, Left Rear Screw-HH Nut-Lock, NI Clamp-Hose Blade-Bagging

Sheet No.: 2