



NEW HOLLAND ..

44in Two-Stage Snowthrower New Holland GT Series Lawn and Garden Tractors

Model No. 716505006 - T05BL0001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Description	Page	Description	Page
Discharge Chute Assembly 3	Pulley Box Assembly 6
Jack Shaft Assembly 4	Crank Assembly 7
Worm Gear Assembly 5	Installation Assembly 8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


AR. as required	INC. incorporated
ASM. assembly	LH. left hand
CARR. carriage	NI. nylon insert
DEG. degrees	PPH. phillips pan head
FH. flat head	PTH. phillips truss head
GA. gauge	PTO. power take off
HF. hex flange	RH. right hand
HH. hex head	SFH. slotted fillister head
HHF. hex head flange	SHH. slotted hex head
HHFTF. hex head flange thread forming	SHWH. slotted hex washer head
HJ. hex jam	SPH. slotted pan head
HLH. hex lag head	SQH. square head
HOC. height-of-cut	SRH. slotted round head
HS. hex	STD. standard
HSBH. hex socket button head	TAP. self tapping
HSFH. hex socket flat head	TTH. torx truss head
HSH. hex socket head	WH. wing head
HWH. hex washer head	
HWHTF. hex washer head thread forming	
HYD. hydraulic	

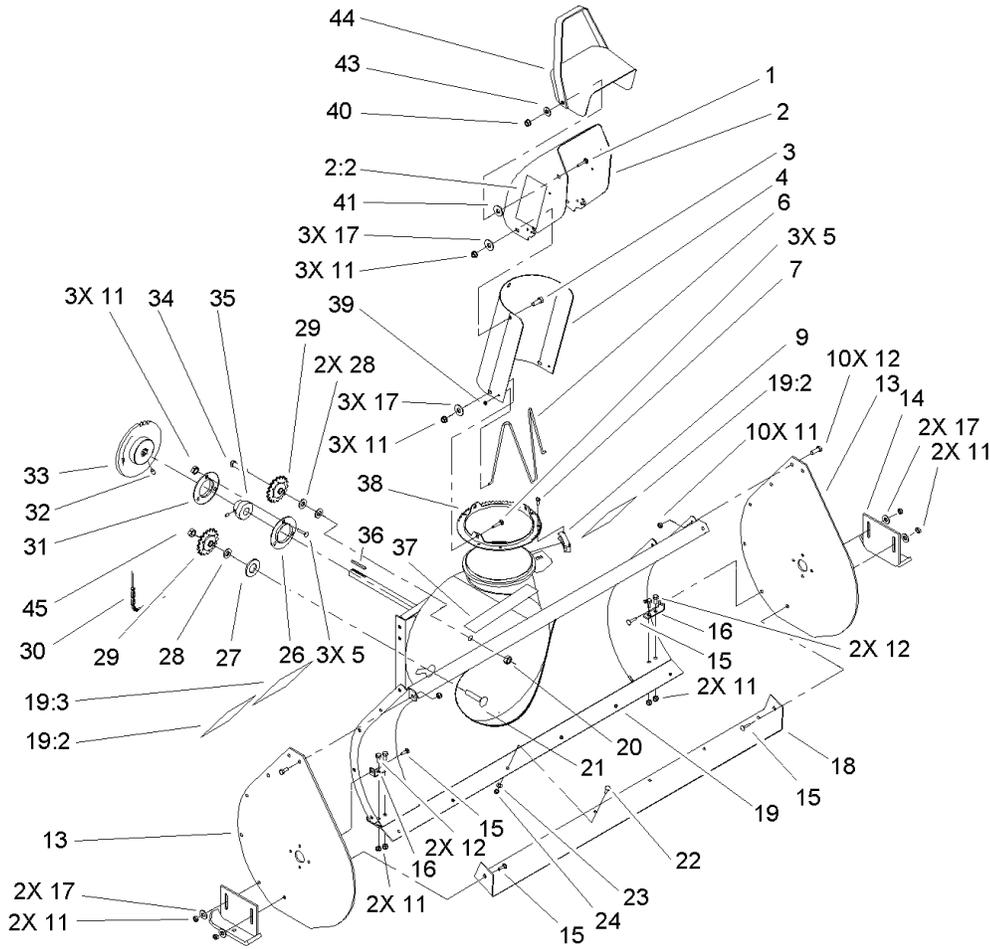

Discharge Chute Assembly

Ref	Part No.	Qty.	Description
1	3231-2	2	Screw-CARR
2	100-5007	1	Chute
2:2	94-8079	1	Decal-Danger
3	322-2	3	Screw-HH
4	26-1110-03	1	Extender-Chute, Upper
5	3230-1	6	Bolt-CARR
6	12-2040	1	Wire-Chute
7	27-0220	6	Screw-Special
9	25-5450	3	Retainer-Chute
11	3296-29	27	Nut-Lock, NI
12	322-3	14	Screw-HH
13	57-3510-03	2	Plate-Side
14	78-0800-03	2	Skid
15	3230-2	4	Bolt-CARR
16	99-2304-03	2	Bracket-Blade Support
17	3256-23	10	Washer-Flat
18	99-2303-03	1	Blade-Scraper
19	100-8029	1	Auger Housing/decals ASM
19:2	63-2380	2	Decal-Danger
19:3	92-8652	1	Decal-Warning
20	3218-5	1	Nut-Jam
21	3233-4	1	Screw-CARR
22	3229-25	6	Screw-CARR
23	3256-22	6	Washer-Flat


Ref	Part No.	Qty.	Description
24	3296-42	6	Nut-Lock, NI
26	110568	1	Flange
27	3256-28	1	Washer-Flat
28	3256-26	3	Washer-Flat
29	93-1614	2	Sprocket-Idler
30	98-3098	1	Chain-Drive
31	119020	1	Flange-Relube
32	909546	2	Screw-SQH Set
33	95-3867-03	1	Sprocket-38 Tooth
34	325-7	1	Screw-HH
35	110569	1	Bearing And Collar
36	6366	1	Key
37	94-3535	1	Decal-New Holland
38	25-5290-03	1	Ring-Swivel, Chute
39	3290-326	2	Nut-Push
40	3296-39	2	Nut-Lock, NI
41	20-4320	2	Washer-Rubber
43	3290-340	2	Washer-Belleville
44	11-7120-03	1	Deflector
45	3296-23	1	Nut-Lock, NI

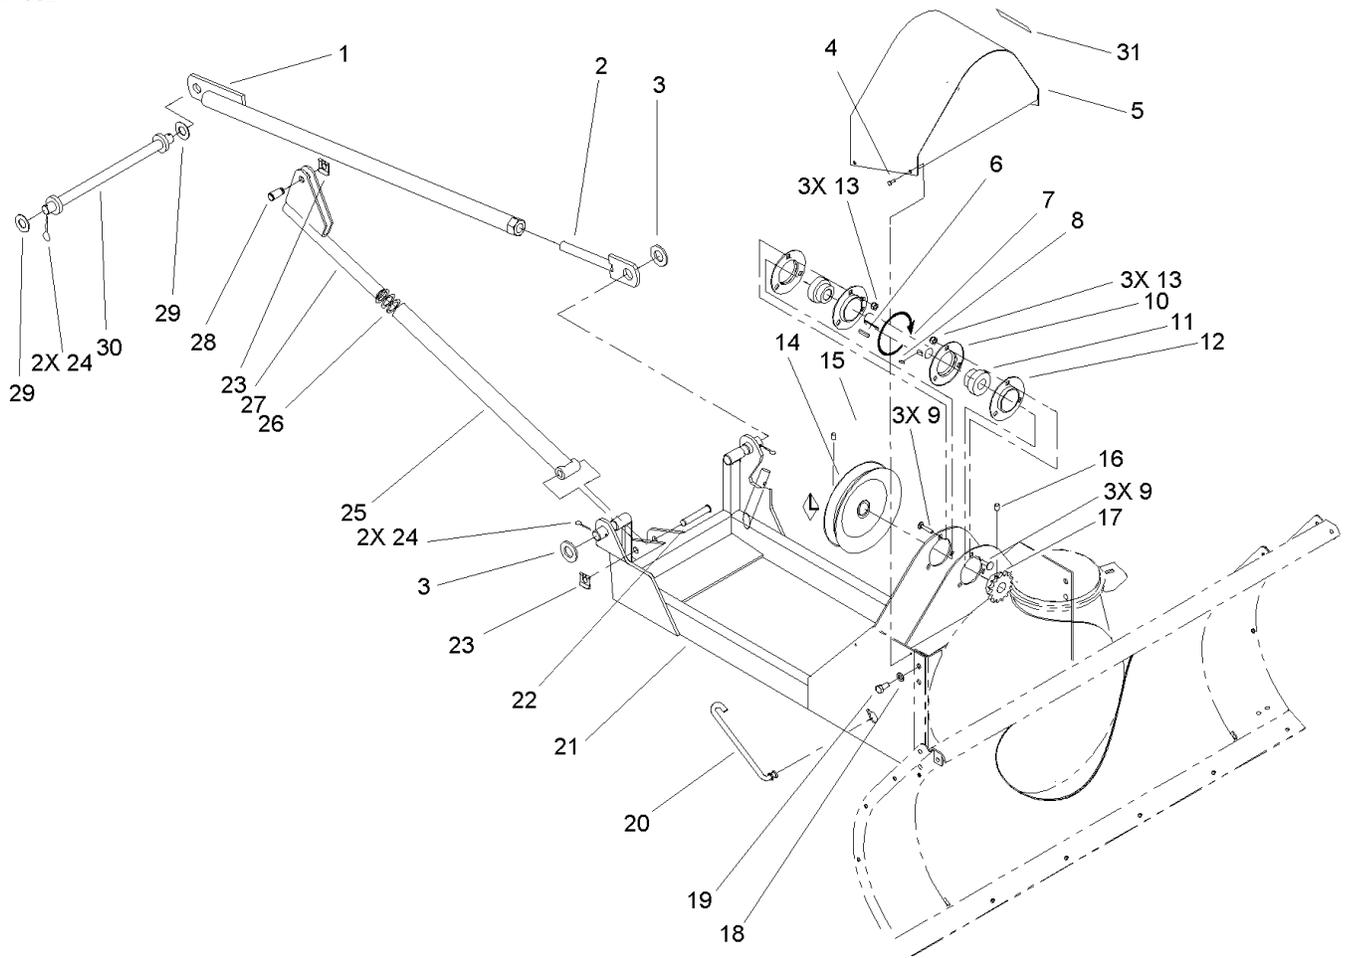

Jack Shaft Assembly

Ref	Part No.	Qty.	Description
1	95-3999-03	2	Brace
2	95-4023-03	2	Adjuster
3	3256-29	2	Washer-Flat
4	32144-1	4	Screw-Taprite
5	95-3859-03	1	Pulley Cover ASM
6	6366	1	Key
7	95-3836	1	Shaft - Jack
8	937221	1	Key-Hi Pro
9	3296-29	6	Nut-Lock, NI
10	119020	2	Flange-Relube
11	110569	2	Bearing And Collar
12	110568	2	Flange
13	3230-1	6	Bolt-CARR
14	94-7841	1	Pulley-Drive
15	3242-2	2	Screw-SQH
16	3241-5	2	Screw-Set
17	117338-03	1	Sprocket-15t
18	3253-5	6	Washer-Lock
19	323-4	6	Screw-HH
20	99-6455	1	Link-Spring Tension
21	95-3848-03	1	Frame
22	98-1640	1	Pin-Clevis
23	95-4064	2	Clip-Pin
24	9335064	4	Pin-Cotter, Hair


Ref	Part No.	Qty.	Description
25	100-5022-03	1	Rod-Lift
26	3256-62	5	Washer-Flat
27	94-7671-03	1	Yoke
28	98-1639	1	Pin-Clevis
29	3256-28	2	Washer-Flat
30	95-3993-03	1	Link
31	98-8705	1	Decal-Important

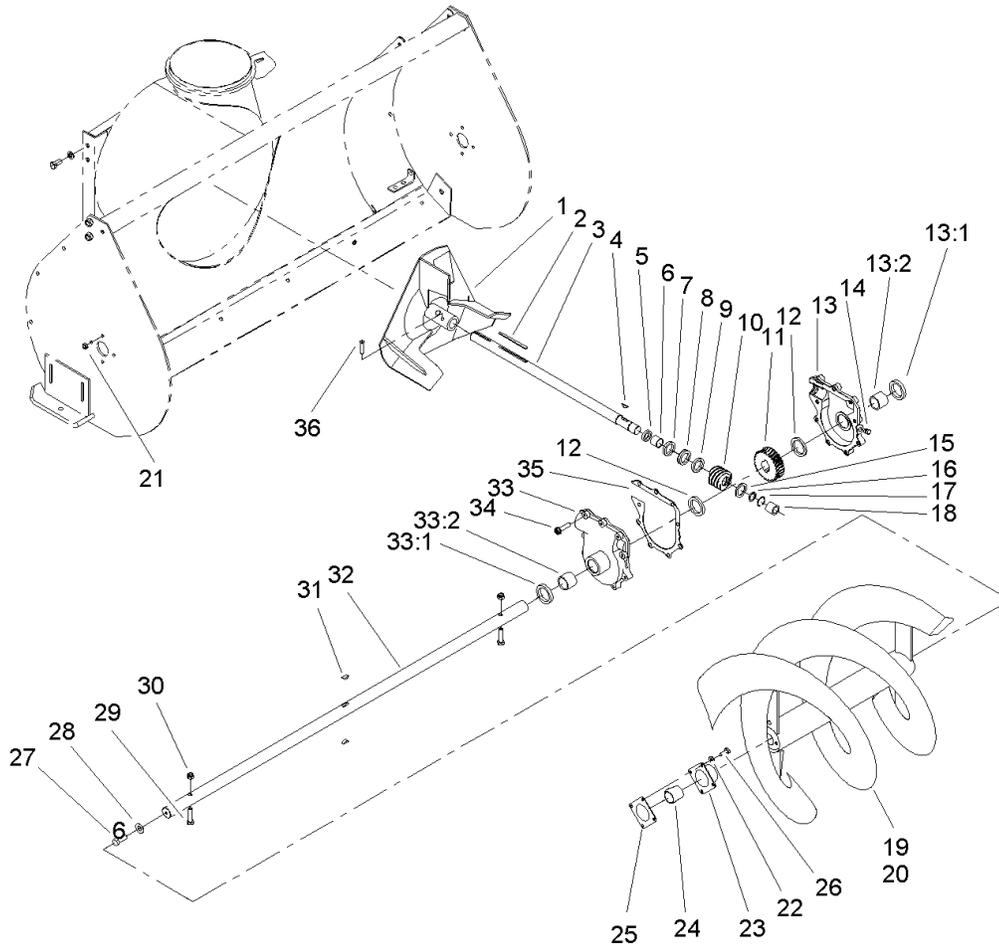

Worm Gear Assembly

Ref	Part No.	Qty.	Description
1	19-8890-03	1	Impeller
2	6-8590	1	Key
3	19-8540	1	Shaft-Impeller
4	3257-23	1	Key-Woodruff
5	237-87	1	Ring-Quad
6	20-3210	1	Bushing-Special
7	252-78	1	Bearing-Thrust
8	252-76	1	Bearing-Thrust
9	252-77	1	Thrust-Washer
10	5-7170	1	Gear
11	5-7180	1	Gear-Worm 27t
12	252-71	2	Washer-Thrust
13	14-2459	1	Case-LH Gear
13:1	7-0045	1	Seal-Oil
13:2	256-237	1	Bushing-St
14	281-1	1	Plug-Pipe, SQH
15	3-8664	1	Washer-Thrust
16	5210	1	Washer-Shim
17	32120-72	1	Ring-Snap
18	256-32	1	Bushing
19	57-3300-03	1	Auger-R.h.
20	57-3370-03	1	Auger-L.h.
21	321-4	8	Screw-HH
22	3256-22	8	Washer-Flat


Ref	Part No.	Qty.	Description
23	20-0990	2	Bearing-Flange, Front
24	20-0980	2	Bearing
25	20-1000	2	Bearing-Flange, Rear
26	3296-42	8	Nut-Lock, NI
27	3235-22	2	Screw-HH Lock
28	2844	2	Washer
29	322-14	2	Screw-HH
30	3296-29	2	Nut-Lock, NI
31	3257-33	2	Key-Woodruff
32	57-3500	1	Shaft-Auger
33	14-2449	1	Case-RH Gear
33:1	7-0045	1	Seal-Oil
33:2	256-237	1	Bushing-St
34	32144-41	8	Screw-Taprite
35	105-1404	1	Gasket-Gear Box
36	3242-6	2	Screw-Set, SQH

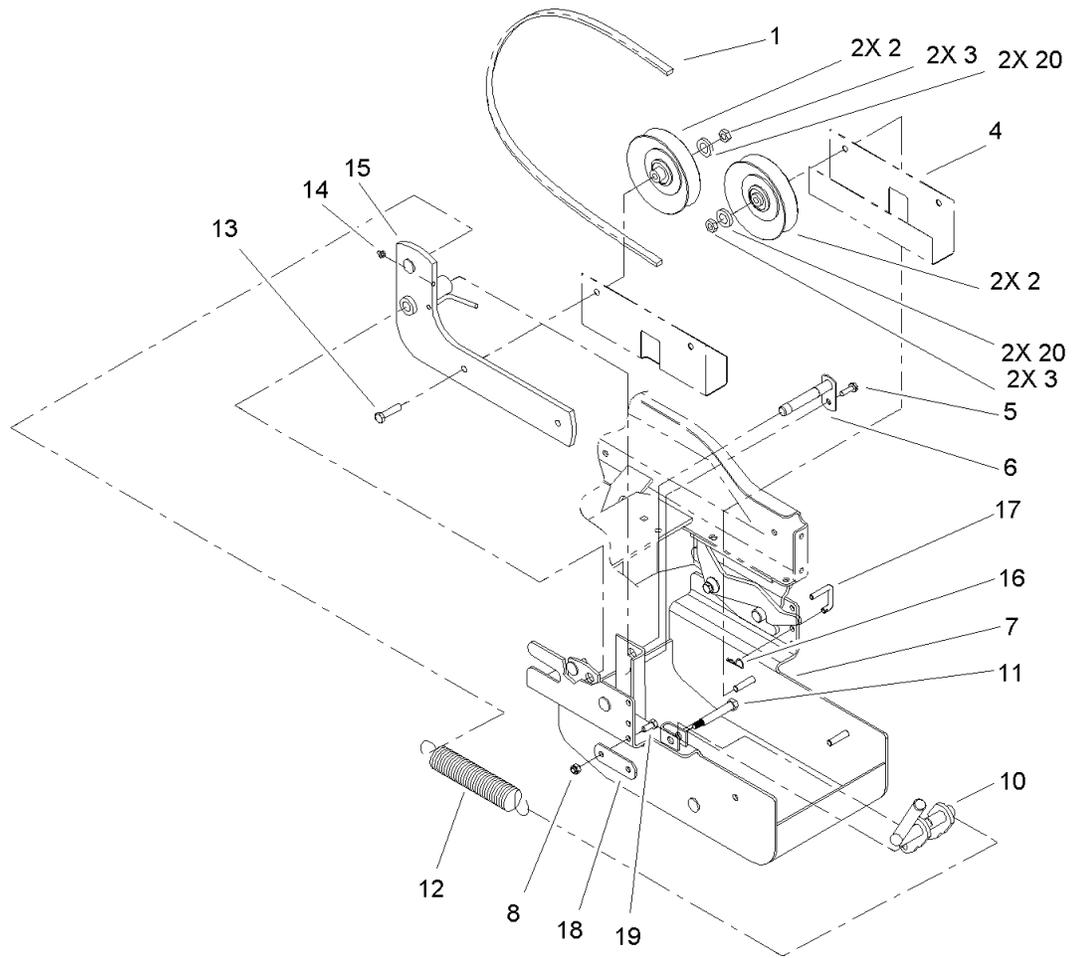

Pulley Box Assembly

Ref	Part No.	Qty.	Description
1	100-4164	1	V-Belt
2	94-2447	4	Pulley-Idler
3	32146-2	4	Nut-Lock, Insert
4	95-3984-03	2	Cover-Belt
5	32144-70	1	Screw-HH
6	94-7686	1	Pivot Rod ASM
7	95-3850-03	1	Box-Pulley
8	3296-29	2	Nut-Lock, NI
10	99-6452-03	1	Lever ASM
11	99-6453	1	Shoulder Bolt
12	99-6456	1	Spring-Ext
13	323-9	2	Screw-HH
14	302-5	1	Fitting-Grease
15	95-3851-03	1	Lever-Idler
16	9335044	2	Pin-Hair
17	99-6884	2	Pin
18	99-6454-03	1	Bracket-Pivot
19	322-3	1	Screw-HH
20	48-9220	4	Washer

--	--	--	--

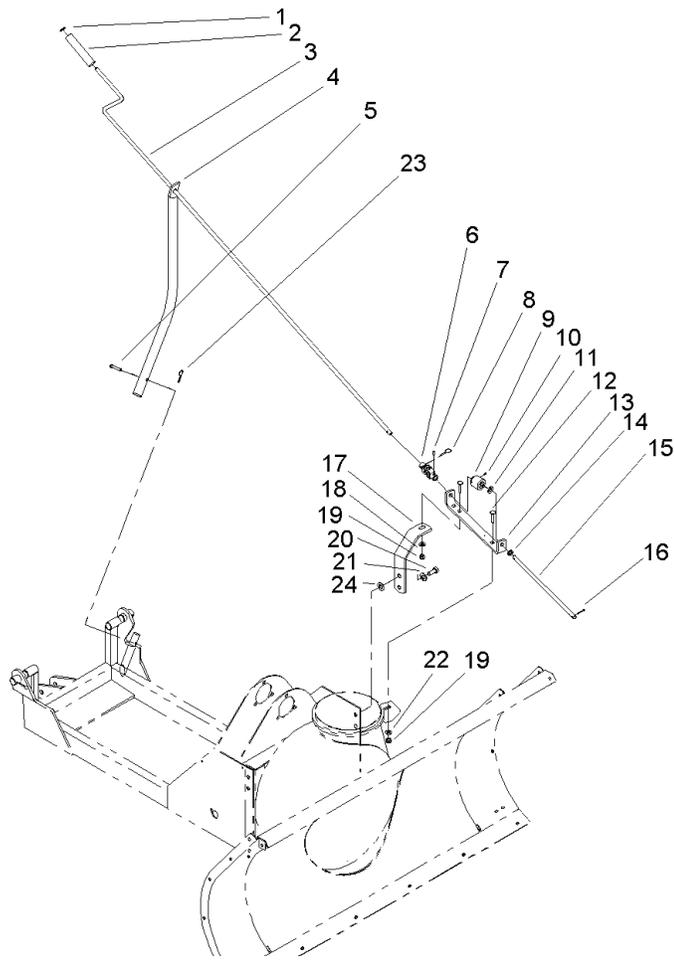

Crank Assembly

Ref	Part No.	Qty.	Description
1	99-6885	1	Nut-Push
2	40-8230	1	Grip-Chute Control
3	98-3090	1	Rod
4	95-3864-03	1	Tube - Crank Support
5	283-66	1	Pin-Clevis
6	94-2686	1	Joint-Universal
7	32121-47	1	Pin-Spring
8	9335054	1	Pin-Hair
9	8-8600	1	Gear-Worm, Chute
10	32121-50	1	Pin-Spring
11	3290-212	1	Washer-Spring
12	3230-2	2	Bolt-CARR
13	98-3089-03	1	Bracket-Gear
14	3256-24	1	Washer-Flat
15	92-7046	1	Rod
16	3272-10	1	Pin-Cotter
17	98-3094-03	1	Bracket-Crank Supt
18	3256-23	1	Washer-Flat
19	3296-29	2	Nut-Lock, NI
20	323-6	2	Screw-HH
21	3253-21	2	Washer-Lock
22	3290-238	1	Washer-Lock
23	9335044	1	Pin-Hair
24	9202414	2	Washer-Spacer

--	--	--	--

NOTES

NOTES

NOTES



NEW HOLLAND

