



ProLine 21-inch Side Discharge

Walk Power Lawn Mower

Model No. 22026-210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing & Wheel Assembly	3	Muffler Assembly	10
Engine Assembly	5	Ignition Assembly	11
Fuel Tank Assembly	6	Governor Assembly	12
Brake Assembly	7	Recoil Assembly	13
Handle Assembly	8	Carburetor Assembly	14
Crankshaft Assembly	9		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Bagging Kit	38–0050		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

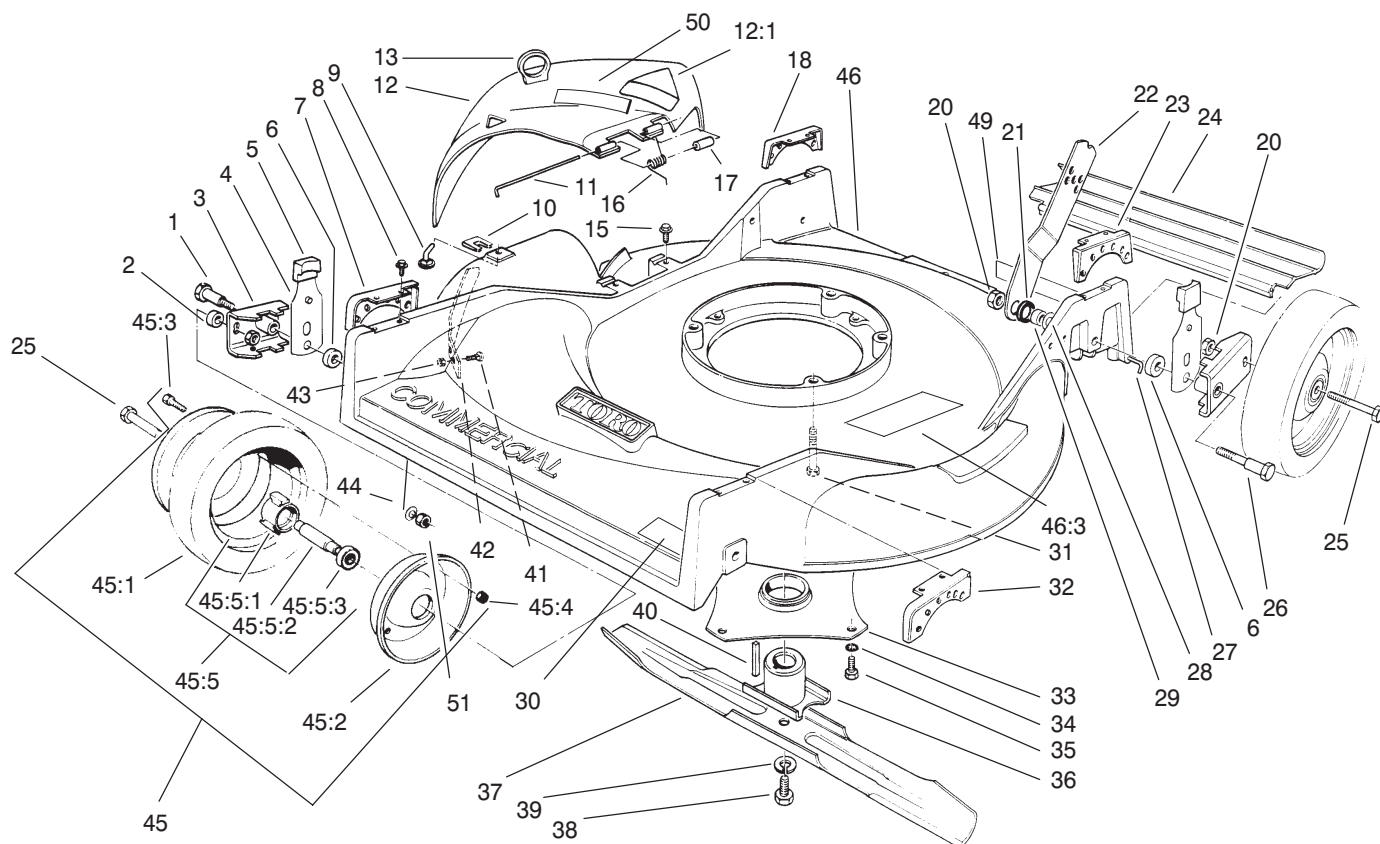


Sheet No.: 2

Housing & Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	49-9180	2	Pivot Screw	27	33-3201	1	Shield Rod
2	52-2480	4	Spacer-Wheel	28	3290-340	2	Washer-Belleville
3	49-9160	4	Pivot Arm	29	52-2360	2	Handle Latch Spacer
4	49-8800	4	Spring Arm	30	68-7410	1	Blade Decal
			ASM-Front	31	100-2592	4	Screw-Hfh
5	25-7740	4	Knob-Arm	32	52-2520	1	Frt Left Quad
6	53-7930	4	Pivot Spacer	33	52-2500	1	Crnkshft Protect ASM
7	52-2510	1	Frt Right Quad	34	3254-6	4	Washer-Lock, Internal
8	49-2040	8	Screw-Tapping	35	32144-70	4	Screw-HH
9	28-3260	1	Bag Chute Pin	36	52-2170	1	Retainer-Blade
10	28-3250	1	Bag Chute Clip Pin	37	8-5230	1	Blade - 21"
11	52-2570	1	Deflector Hinge Pin	38	26-0671	1	Screw-Blade
12	12-4739	1	Deflector	39	3253-22	1	Washer-Lock
12:1	39-5770	1	Decal-Danger	40	27-8590	1	Key-Square
13	28-1430	1	Lift Loop	41	3230-16	2	Screw-CARR
15	46-6811	2	Screw-HWH	42	52-2650-01	1	Safety Bar (Red)
16	52-2560	1	Deflector Spring	43	3296-29	2	Nut-Lock
17	28-3270	1	Sleeve	44	3290-455	2	Washer-Belleville Spring
18	52-2530	1	Rear Right Quad	45	53-7720	4	Wheel & Tire ASM
20	3296-39	6	Nut-Lock, NI	45:1	53-7740	1	Tire
21	27-6510	2	Handle Latch Spacer	45:2	53-7780-06	2	Plate-Wheel, Half
22	100-3296-03	2	Latch-Handle	45:3	321-2	4	Screw-HH
23	52-2540	1	Rear Left Quad	45:4	3296-42	4	Nut-Lock, NI
24	52-2640	1	Shield - Trailing	★45:5		1	Hub & Bearing ASM
25	323-12	4	Screw-HH	45:5:1	52-2410	1	Hub-Bearing
26	52-2260	2	Rear Pivot Screw				

★ Not serviced

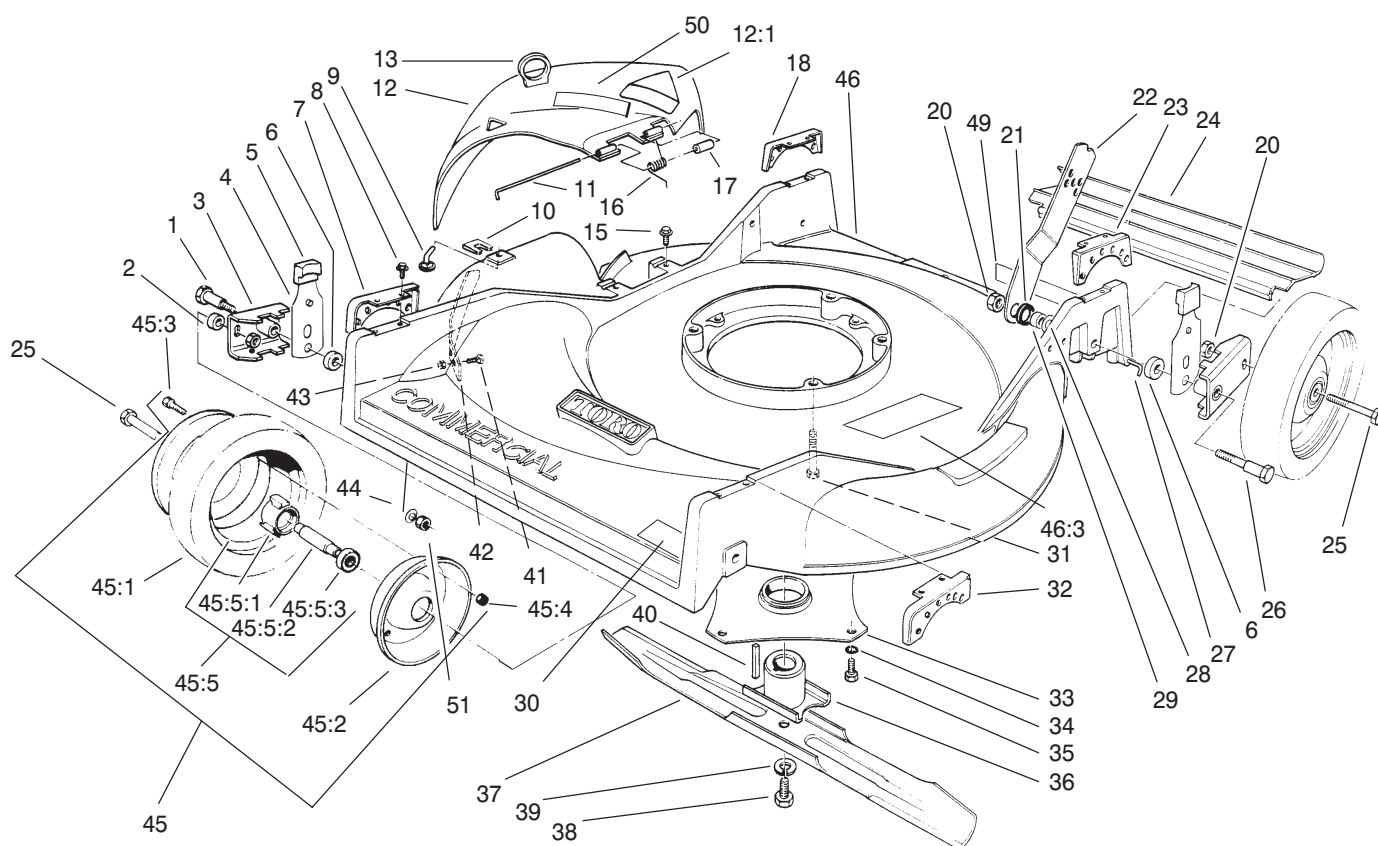


Sheet No.: 2

Housing & Wheel Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
45:5:2	52-2440	1	Spacer-Bearing
45:5:3	52-2450	2	Bearing-Wheel
46	12-4729	1	21 Comm Sd Hsg/Decal
46:3	93-0248	1	Decal - Warning
49	92-1779	1	Decal-Warning
50	71-8650	1	Decal-Danger Deflector
51	32152-2	2	Nut-Conelock

Ref. No.	Part No.	Qty.	Description

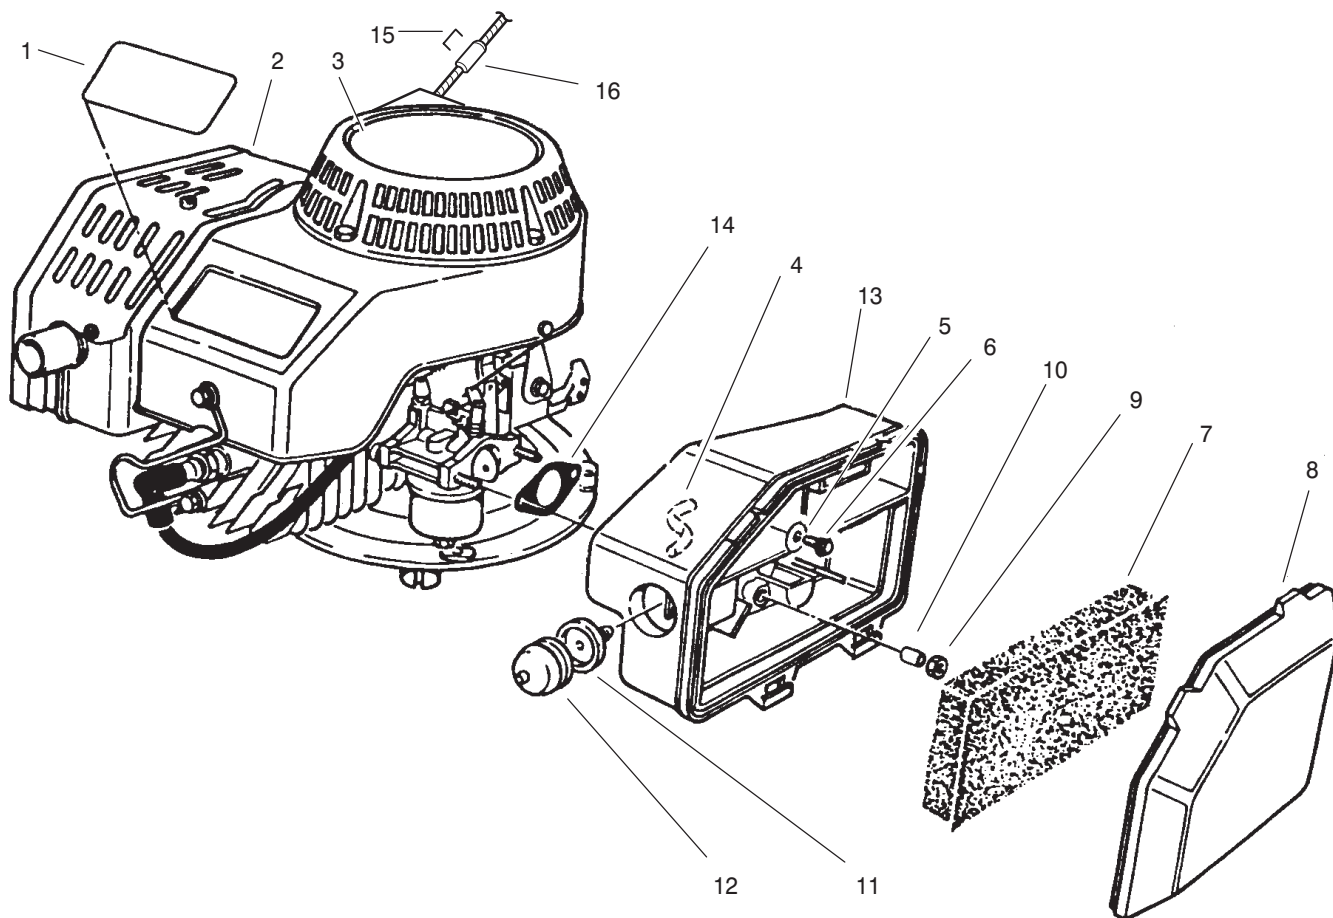


Sheet No.: 3

Engine Assembly

Ref. No.	Part No.	Qty.	Description
1	71-1260	1	Decal – Proline
2	98-2040	1	Engine-121cc 2 Cyc
3	104-1334	1	Decal-2 Cyc Recoil
4	44-3172	1	Hose-Primer
5	3256-16	1	Washer-Flat
6	51-2690	1	Screw-HH
7	63-9380	1	Element-Air Cleaner
8	63-9340	1	Cover-Air Cleaner
9	50-7180	2	Nut
10	62-3980	2	Spacer
11	44-2750	1	Body-Primer
12	66-7460	1	Bulb-Primer
13	63-9330	1	Body-Air Cleaner
14	81-0090	1	Gasket-Air Cleaner
15	3290-443	1	Staple
16	47-2480	1	Stop-Rope

Ref. No.	Part No.	Qty.	Description

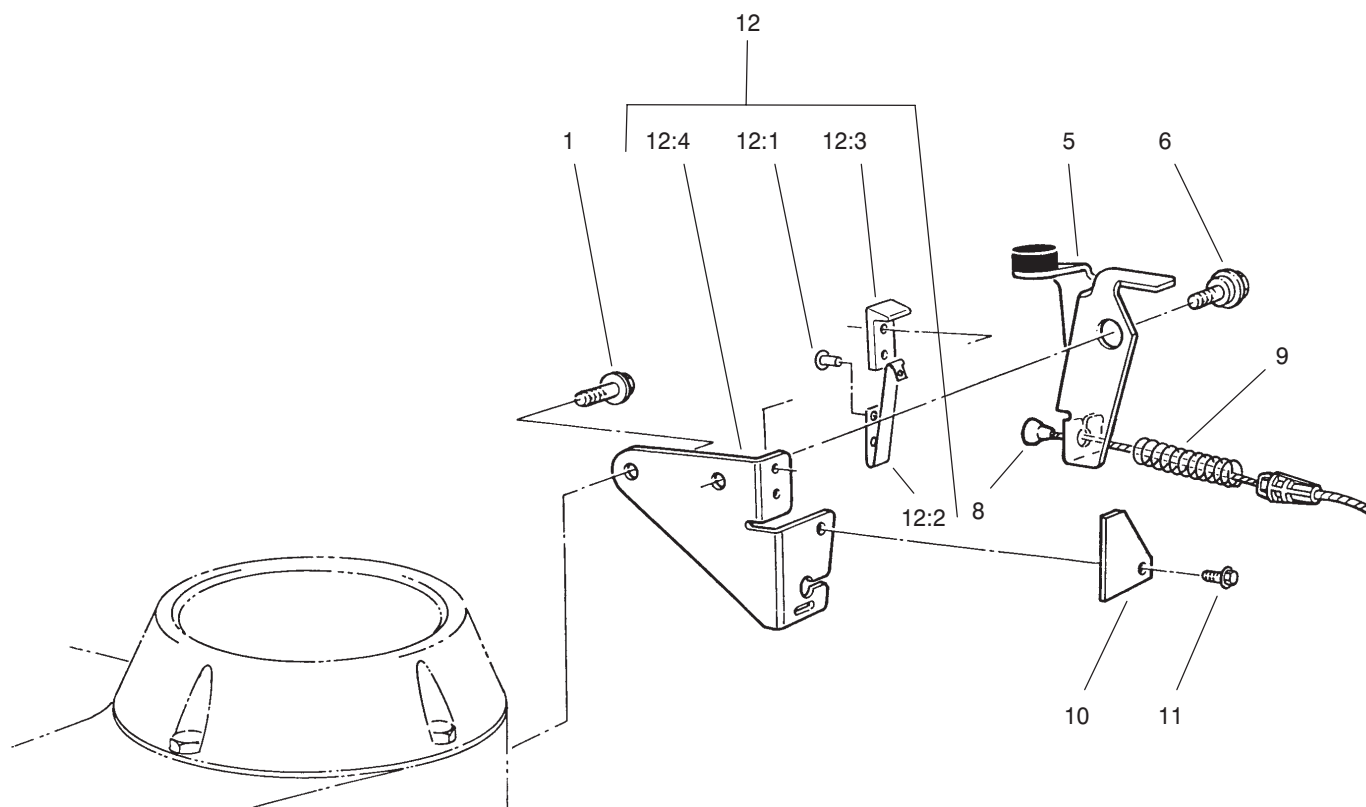


Sheet No.: 5

Brake Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-10	1	Screw-HWH
5	66-5380	1	Brake Plate ASM
6	92-9698	1	Screw-Shoulder
8	85-6870	1	Brake Cable
9	66-5370	1	Spring-Compression
10	53-4690	1	Stop-Ground Strap
11	32144-112	1	Screw-HWHTF
12	14-6009	1	Mtg Plate ASM
12:1	3290-459	2	Rivet-Plastic
12:2	60-9010	1	Strap-Ground
12:3	77-5260	1	Strap-Insulating
12:4	84-7820	1	Plate-Brake

Ref. No.	Part No.	Qty.	Description

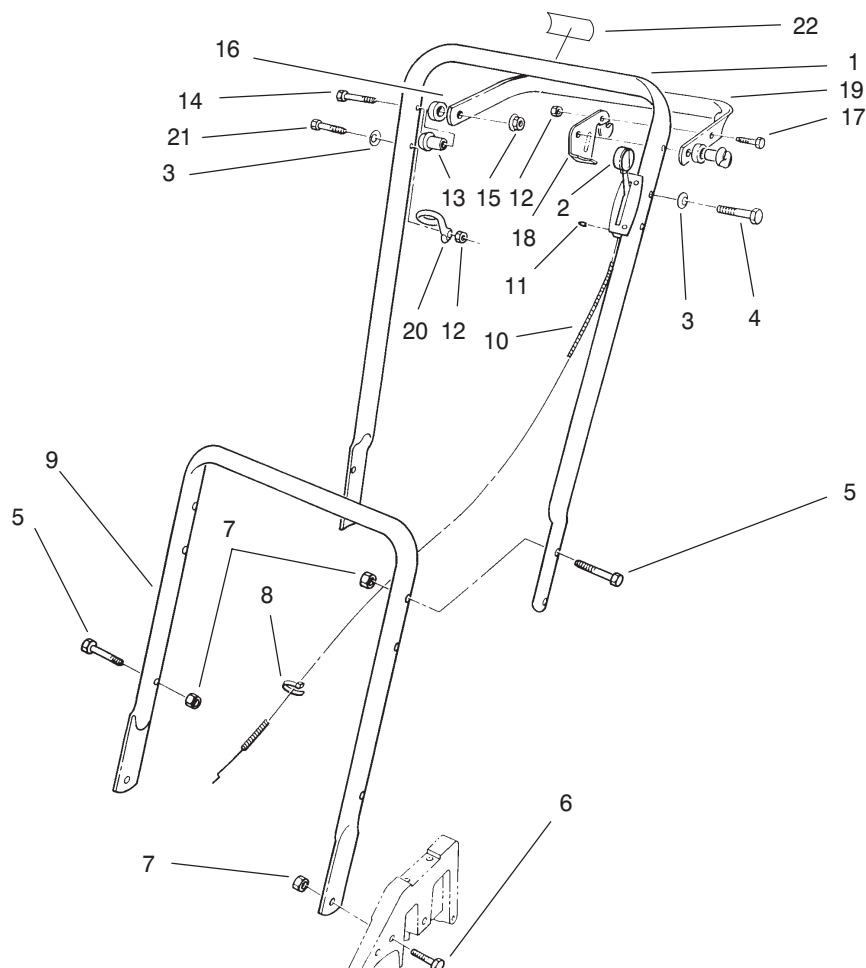


Sheet No.: 6

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	74-2150-03	1	Upper Handle
2	82-9950	1	Control-Throttle
3	3-7501	3	Washer
4	321-13	2	Screw-HH
5	322-7	6	Screw-HH
6	322-6	2	Screw-HH
7	3296-29	8	Nut-Lock
8	3290-378	2	Tie-Cable
9	52-2370-03	1	Lower Handle
10	70-1062	1	Cable-Throttle
11	32151-86	2	E-Ring
12	3296-42	2	Nut-Lock, NI
13	49-1630	2	Spacer-Support
14	322-11	2	Screw-HH
15	3296-58	2	Nut-Lock NI
16	256-276	1	Spacer-Nylon
17	321-4	1	Screw-HH
18	66-5350	1	Lever-Control
19	61-8270-03	1	Bar-Control
20	46-8081	1	Guide-Rope
21	321-9	1	Screw-HH
22	98-4387	1	Decal-Protection, Ear

Ref. No.	Part No.	Qty.	Description

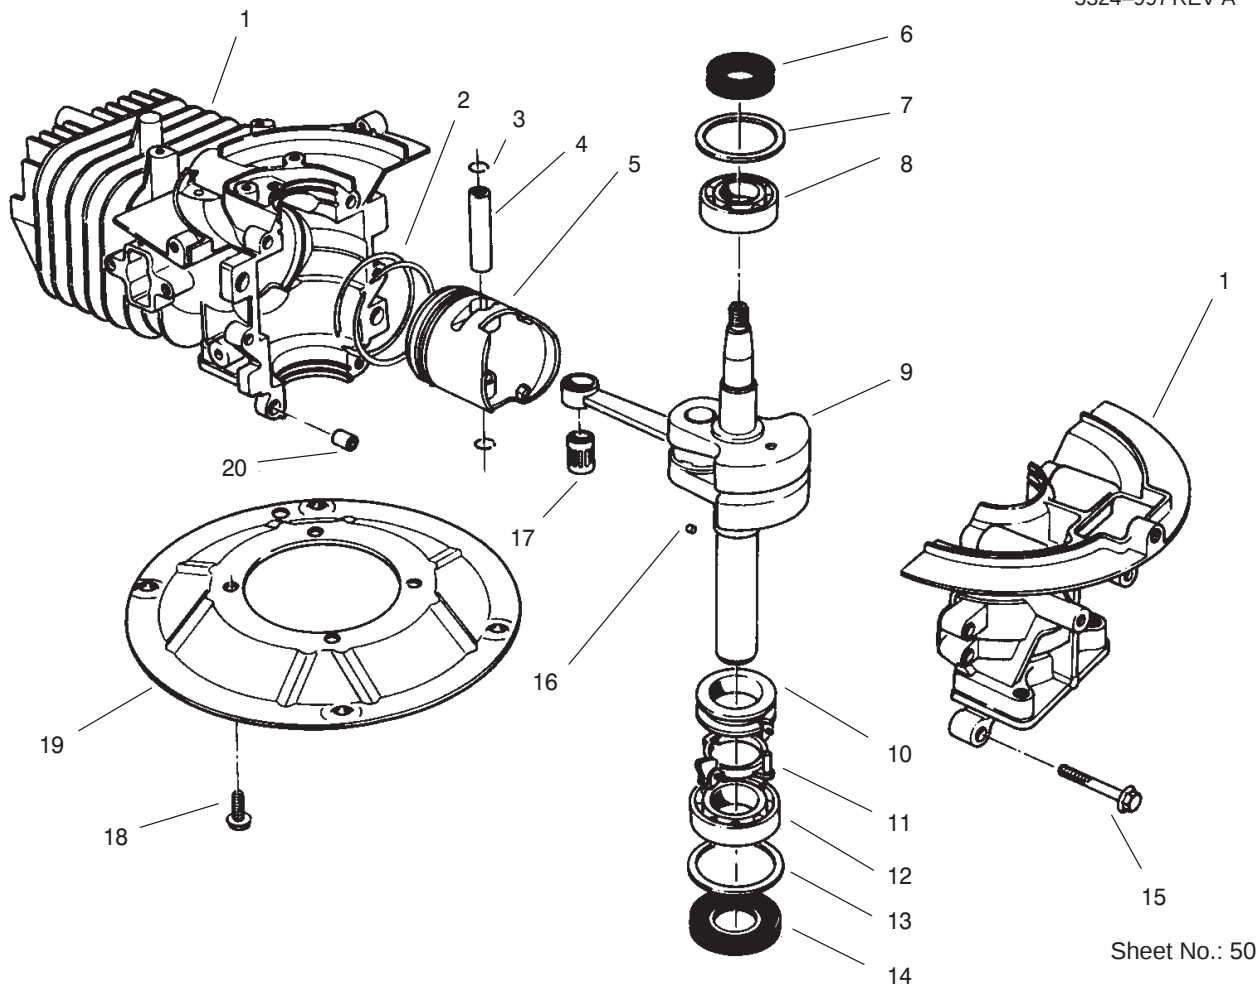


Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	94-1685	1	ASM – Crankcase
2	81-0590	1	Ring Set
3	81-0620	2	Clip
4	81-0600	1	Pin-Piston
5	81-2140	1	Piston
6	81-0720	1	Seal-Oil
7	81-0710	1	Washer-Upper
8	81-0690	1	Bearing-Upper
9	81-4680	1	Crankshaft
10	81-0770	1	Spacer
11	81-0750	1	Bracket
12	81-0700	1	Bearing-Lower
13	81-0730	1	Washer-Lower
14	81-0740	1	Seal-Oil
15	81-0540	5	Bolt
16	81-0760	1	Pin
17	81-0610	1	Bearing
18	81-0570	4	Bolt
19	81-0560	1	Plate-Mounting
20	81-0520	2	Pin

Ref. No.	Part No.	Qty.	Description

‡ Obtain locally.

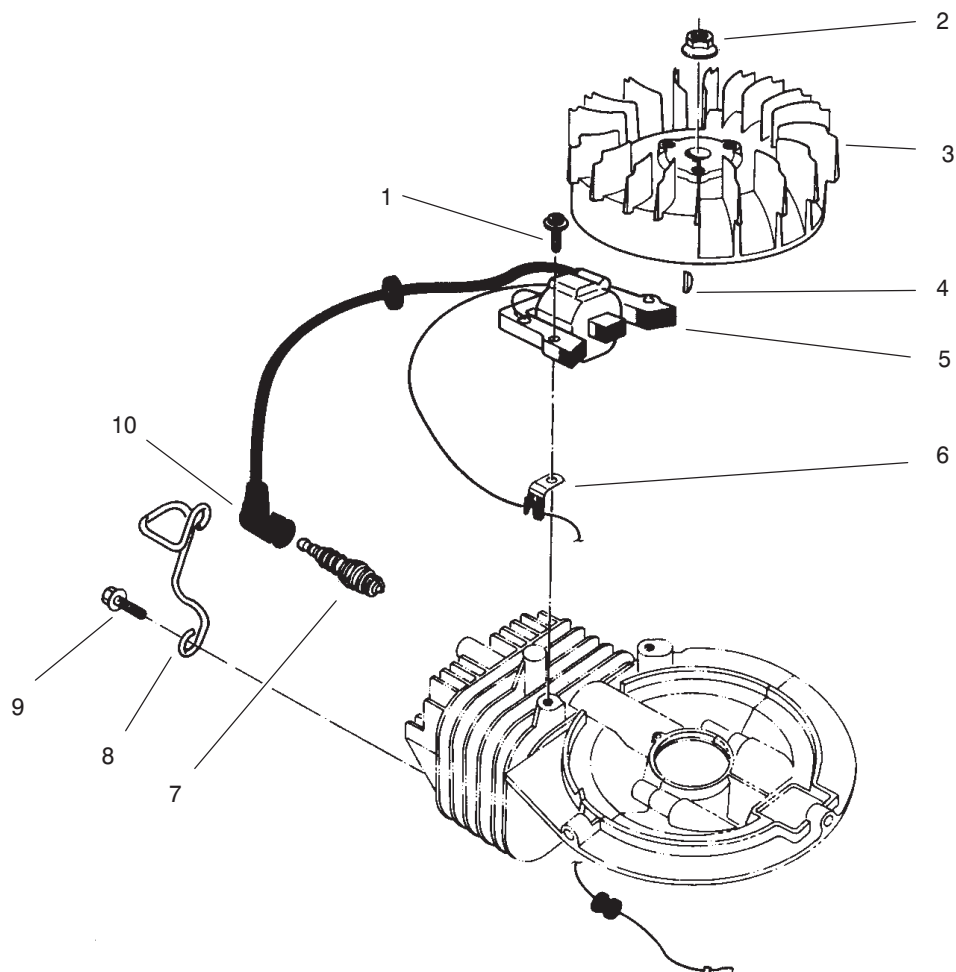


Sheet No.: 52

Ignition Assembly

Ref. No.	Part No.	Qty.	Description
1	81-5680	2	Screw
2	81-1330	1	Nut
3	81-2810	1	Flywheel
4	81-2370	1	Key
5	81-2820	1	Coil-Magneto
6	81-1480	1	Clamp
7	81-0181	1	Sparkplug
8	81-2120	1	Protector-Plug
9	81-2350	2	Screw
10	81-1500	1	Cap-Sparkplug
*11	41-7650	1	Puller-Flywheel

Ref. No.	Part No.	Qty.	Description

* Not illustrated

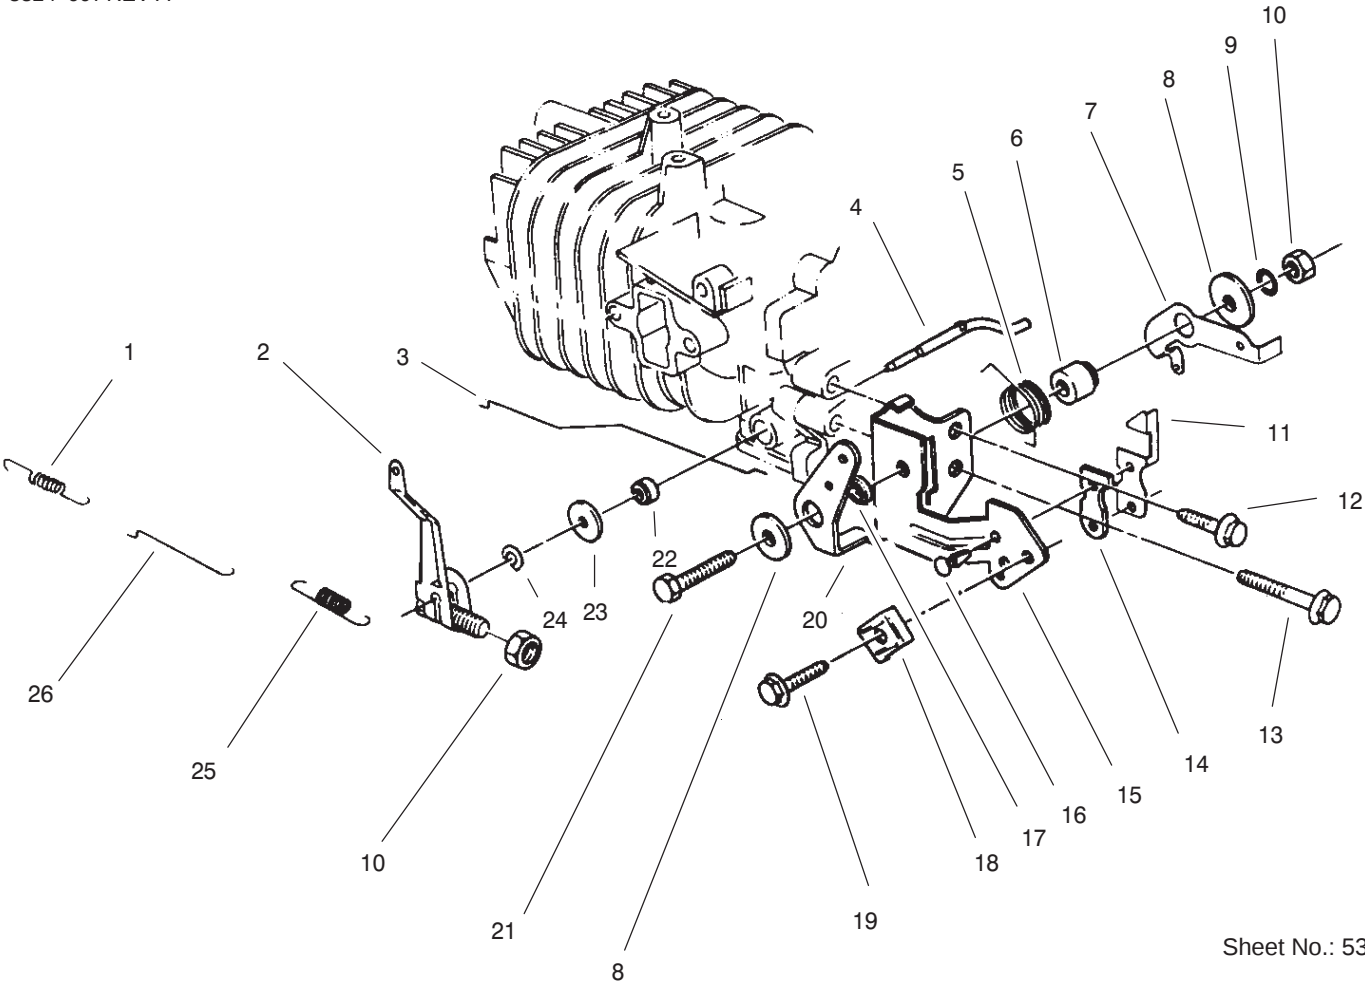


Sheet No.: 53

Governor Assembly

Ref. No.	Part No.	Qty.	Description
1	81-0920	1	Spring
2	81-5420	1	Arm-Governor
3	81-5410	1	Rod-Choke
4	81-2880	1	Shaft
5	81-2460	1	Spring-Choke Lever
6	81-1770	1	Spacer-Governor Lever
7	81-2850	1	Lever-Spring, Governor
8	81-1750	2	Washer
9	81-1450	1	Lockwasher
10	81-0900	2	Nut
11	81-1840	1	Terminal-Kill Switch
12	81-1170	1	Bolt
13	81-0540	1	Bolt
14	81-1830	1	Insulator-Kill Switch
15	81-2420	1	Bracket-Throttle, Control
16	81-4530	2	Rivet
17	81-2470	1	Spacer-Choke Lever
18	81-2430	1	Clamp
19	50-0130	1	Bolt
20	81-1710	1	Lever-Control, Choke
21	81-1730	1	Bolt
22	81-0850	1	Seal-Oil
23	81-0860	1	Washer


Ref. No.	Part No.	Qty.	Description
24	81-0870	1	E-Ring
25	81-2830	1	Spring-Governor
26	81-0910	1	Rod-Carburetor

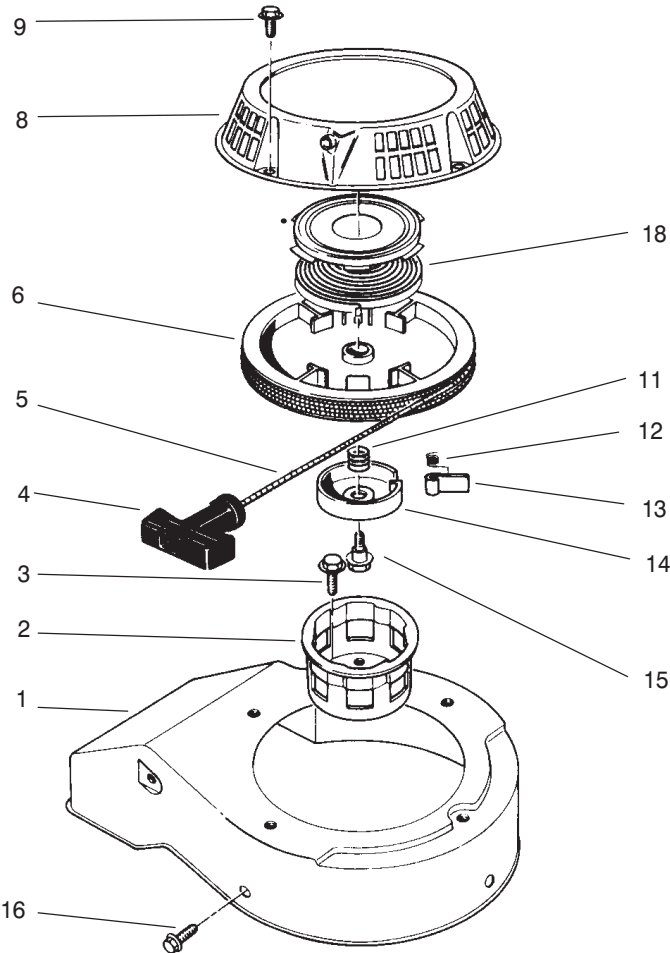

Sheet No.: 54

Recoil Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	81-2080	1	Cover-Fan, Cooling				
2	81-2170	1	Pulley-Cup, Starter				
3	81-1300	3	Bolt				
4	81-1630	1	Handle-Recoil				
5	81-1270	1	Rope				
6	81-1210	1	Reel				
8	81-2100	1	Case-Starter				
9	81-1280	4	Bolt				
11	81-1240	1	Spring				
12	81-1220	1	Spring				
13	81-1230	1	Dog				
14	81-1250	1	Retainer				
15	81-1260	1	Bolt				
16	53-1340	3	Bolt				
18	81-2300	1	Spring & Retainer ASM				

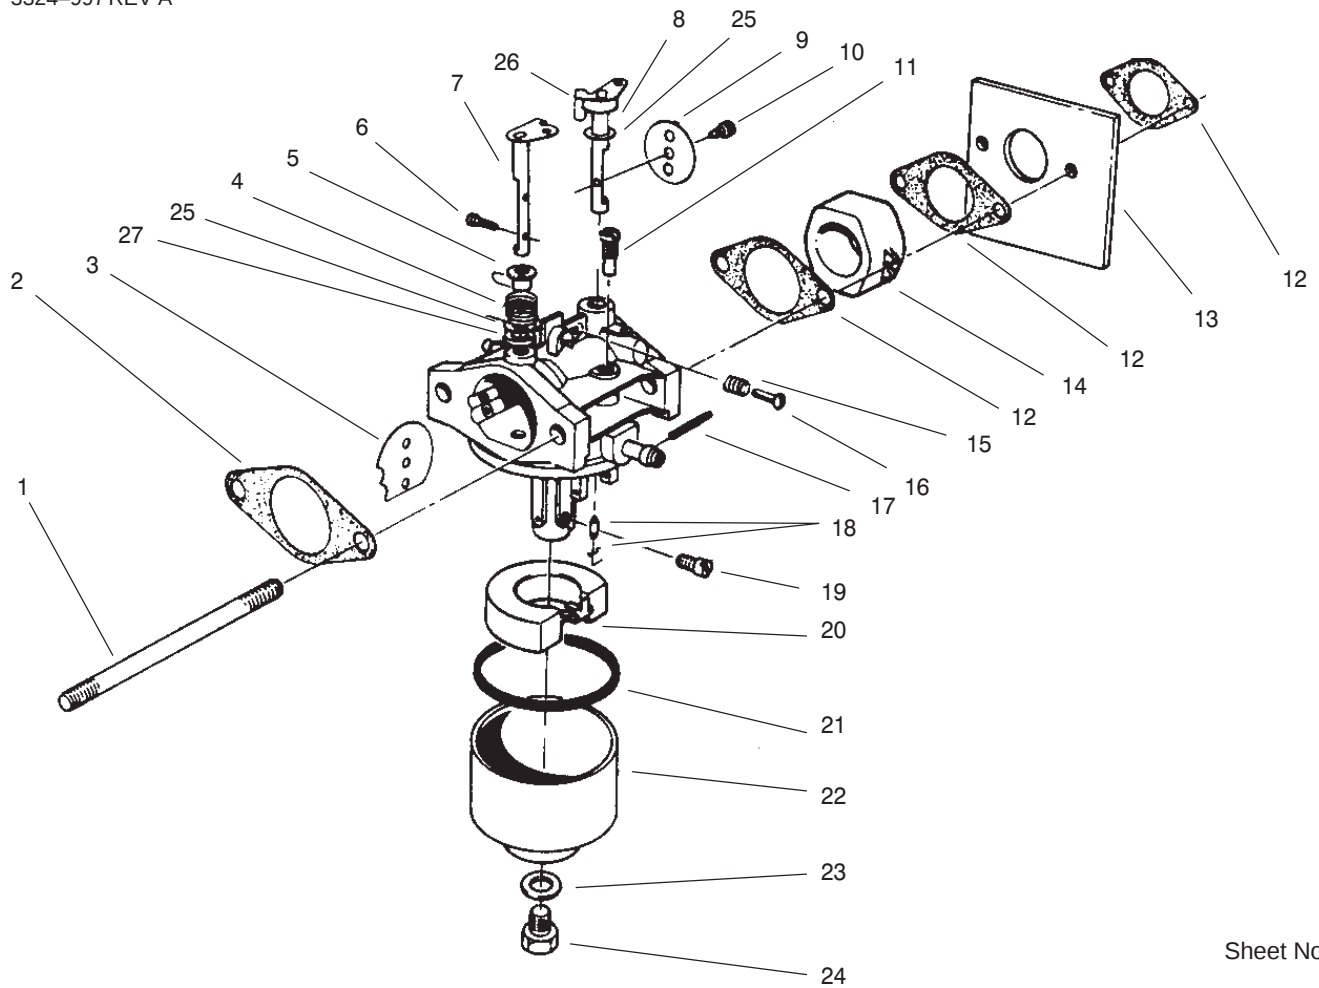

Sheet No.: 55

Carburetor Assembly

Ref. No.	Part No.	Qty.	Description
1	81-5450	2	Stud-Carburetor
2	81-0090	1	Gasket-Air Cleaner
3	81-0240	1	Plate
4	81-0230	1	Spring
5	81-0220	1	Bushing
6	81-2160	2	Screw
7	81-1950	1	Shaft-Choke
8	81-0250	1	Shaft
9	81-0260	1	Plate
10	81-2160	1	Screw
11	94-1684	1	Jet-Pilot
12	81-0780	3	Gasket-Carburetor
13	81-5490	1	Shield-Carburetor
14	81-5440	1	Insulator-Carburetor
15	81-2580	1	Spring-Pilot Screw
16	50-0250	1	Screw
17	81-2600	1	Pin-Hinge
18	81-4910	1	Needle
19	81-1060	1	Jet-Main
19	81-2340	1	Jet-High Altitude
20	81-0970	1	Float
21	81-1010	1	Gasket
22	81-5660	1	Bowl - Float
23	81-1020	1	Gasket
24	81-5670	1	Screw
25	81-2530	2	Seal

Ref. No.	Part No.	Qty.	Description
26	81-2540	1	Ring
27	81-2550	1	Packing
*29	81-2520	1	Carburetor ASM, Complete
*30	94-1687	1	Carburetor ASM With Primer
*31	81-5810	1	Needle-Seat Set

* Not illustrated

Maintenance Record

[illegible]

