



Count on it.

Form No. 3461-429 Rev A

Parts Catalog

Greensmaster® eTriFlex 3360 Traction Unit

Model No. 04580—Serial No. 413000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Frame Assembly.....	4
ROPS Assembly.....	5
Platform Assembly.....	6
Traction Pedal Assembly.....	7
Brake Pedal Assembly.....	8
Brake Actuator Assembly.....	9
Brake Rod Assembly No. 137-2185.....	10
Steering Assembly.....	11
Wheel and Tire Assembly.....	12
Wheel Spindle Assembly No. 119-4490.....	13
Console Assembly.....	14
Joystick Bracket Assembly No. 120-5280.....	15
Seat Plate Assembly.....	16
Engine Assembly.....	17
Generator/Controller Assembly No. 127-2580.....	19
Generator Assembly No. 127-2579.....	20
Generator Service Assembly No. 127-2578.....	21
Traction Assembly.....	22
RH Wheel Motor Assembly No. 139-8565.....	23
Gearbox Assembly No. 127-1529.....	24
LH Wheel Motor Assembly No. 139-8567.....	25
Lift Assembly.....	26
Suspension, Reel Motor and Basket Assembly.....	27
Electric Reel Motor Assembly No. 138-8905.....	28
Electric Motor Assembly.....	29
Basket Assembly No. 132-9599.....	30
Suspension Pin Position Assembly.....	31
Fuel Tank and Hood Assembly.....	32
Hood Assembly No. 139-8316.....	33
Electrical Assembly.....	34
Wire Harness Assembly No. 122-1921.....	36
Controller Assembly.....	37
Battery Assembly.....	38
Suspension A-Arm Assembly.....	39
Suspension Crossarm Assembly.....	40
Attachments and Accessories.....	41

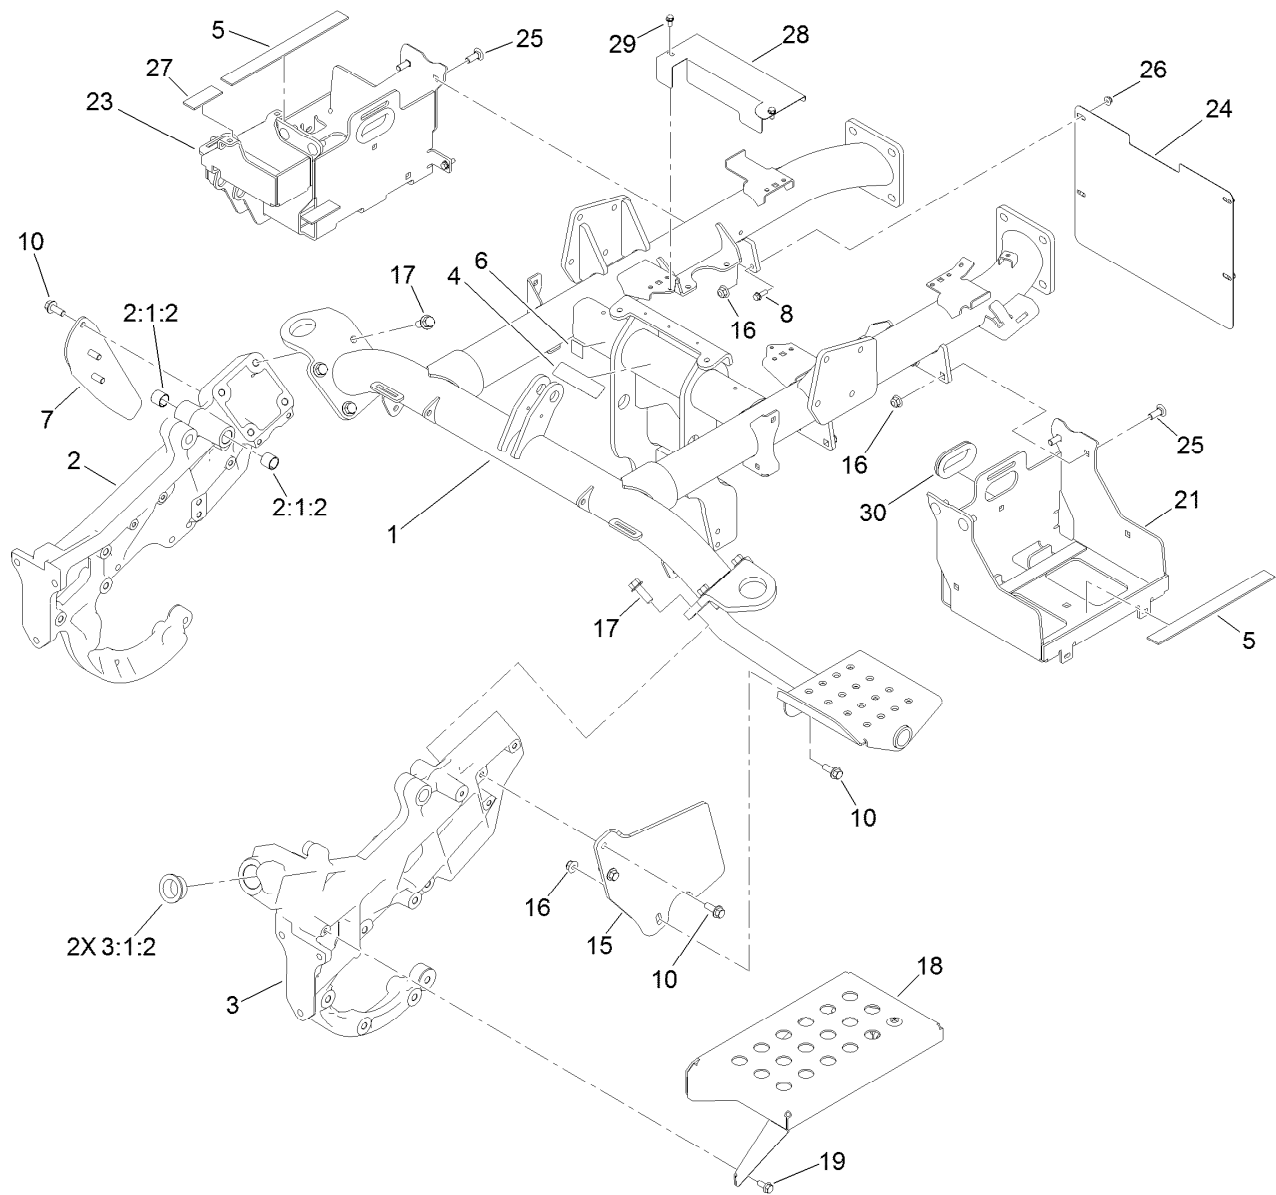

Frame Assembly


Ref.	Part Number	Qty.	Description
1	139-8585SP	1	Frame ASM
2	139-8318	1	Side Casting, RH
2:1:2	94-9609	2	Bushing-Straight
3	139-8319	1	Side Casting, LH
3:1:2	60-0080	2	Bushing
4	133-8062	1	Decal-Arrestor, Spark
5	133-5782	4	Strip-Foam
6	138-9470	1	Decal-Markings, CE-Uk
7	133-0062-01	1	Bracket-Jack
8	115-5103	4	Screw-HHF
10	3234-42	6	Screw-HHF
15	133-0004-01	1	Bracket-Step
16	104-8301	9	Nut-HF, NI

Ref.	Part Number	Qty.	Description
17	117-9035	8	Screw-HHF
18	132-9994-01	1	Step
19	3234-47	4	Screw-HHF
21	137-7972-01	1	Tray-Battery
23	137-7797-01	1	Tray-Battery, RH
24	137-7799-01	1	Shield-Heat
25	3231-22	8	Screw-CARR
26	104-7201	4	Nut-HF, NI
27	133-0081	2	Strip-Foam
28	139-8571-03	1	Cover-Pulley
29	32144-4	2	Screw-HWH
30	240-12	2	Grommet-Rubber

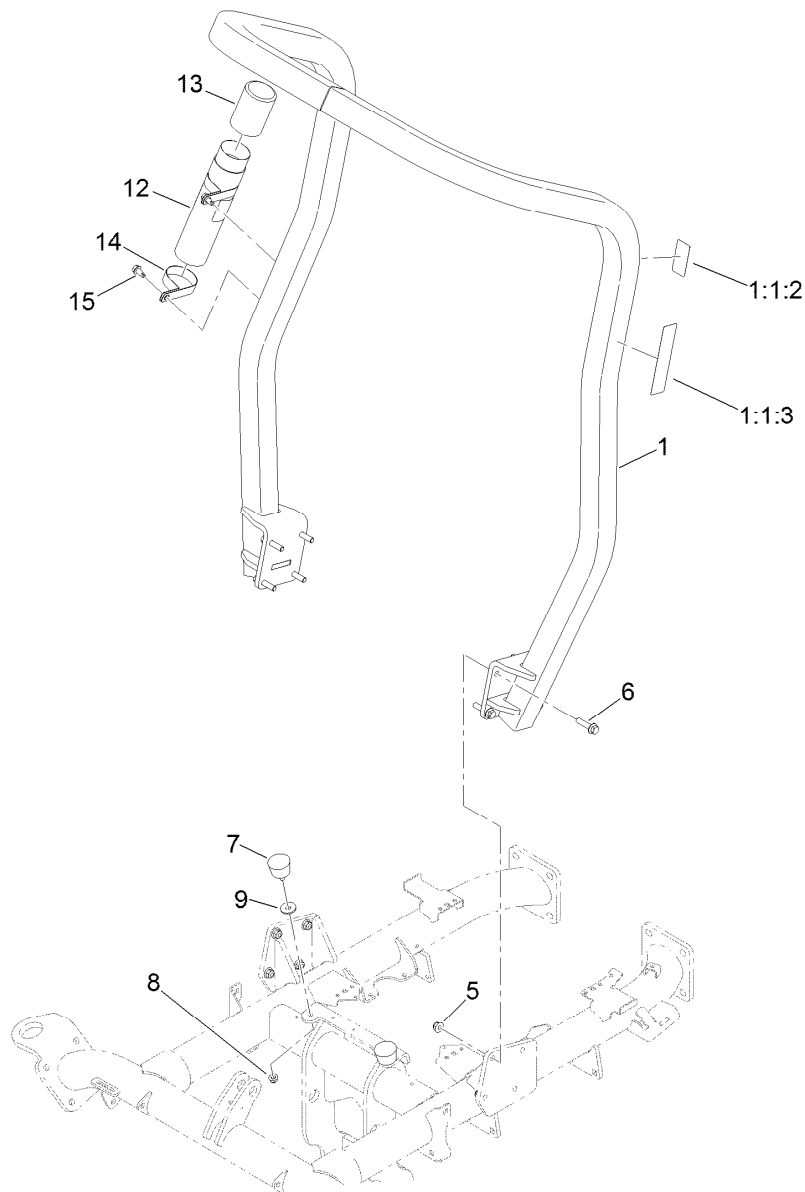 

ROPS Assembly


Ref.	Part Number	Qty.	Description
1	139-8311	1	ROPS ASM
1:1:2	115-8199	1	Decal-ROPS
1:1:3	115-8226	1	Decal-ROPS
5	104-8301	8	Nut-HF, NI
6	137-7951	8	Screw-HHF
7	68-3270	2	Bumper-Rubber
8	104-8300	2	Nut-HF, NI
9	52-2861	2	Washer
12	104-7050	1	Tube-Manual
13	104-7048	1	Cap-Housing
14	2412-133	2	Clamp-R
15	32104-32	2	Screw-HWH

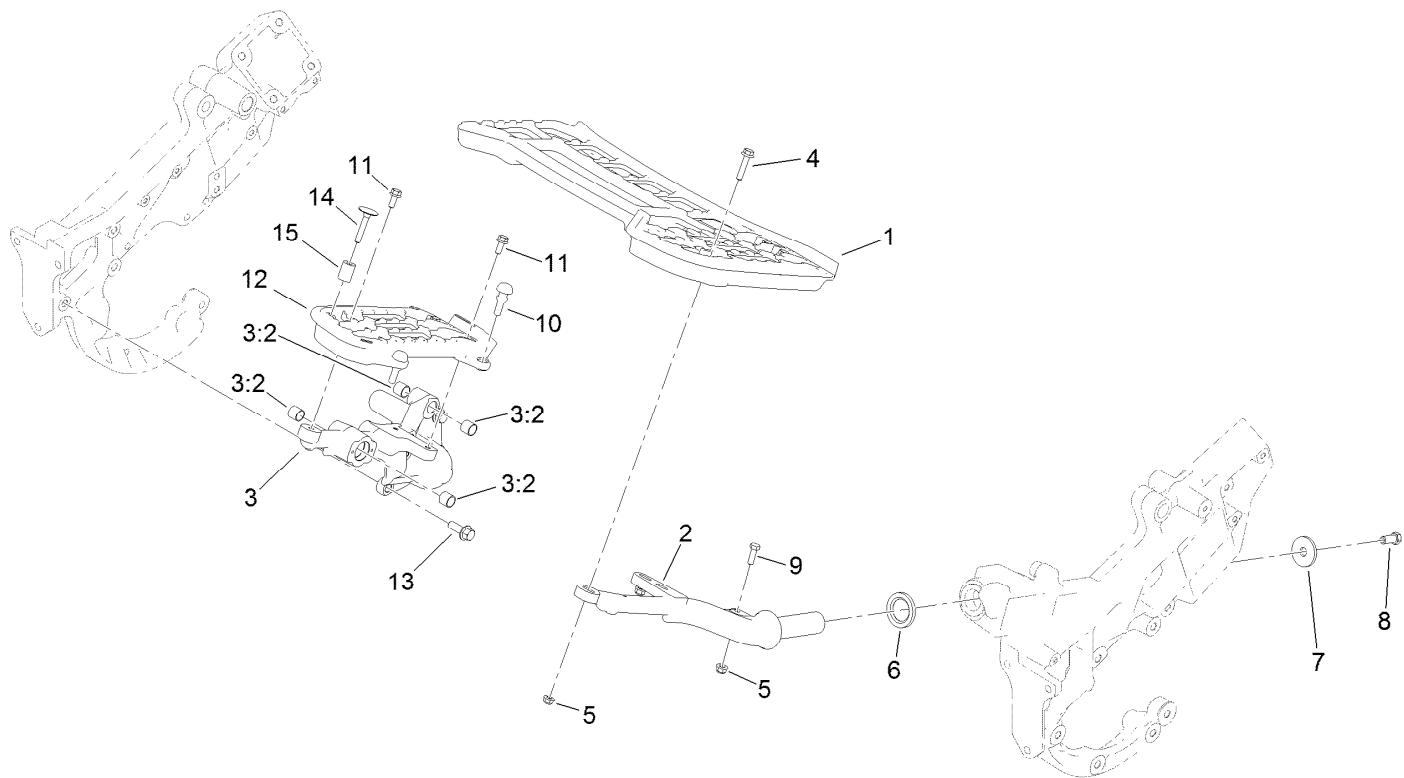 

Platform Assembly

Ref.	Part Number	Qty.	Description
1	137-7768	1	Platform-LH
2	117-9006-01	1	Support-Platform, LH
3	132-9895	1	Support-Platform, RH
3:2	256-311	4	Bushing-Split
4	115-1794	3	Screw-HHF
5	104-8300	4	Nut-HF, NI
6	94-8946	1	Washer-Thrust
7	84-1560	1	Washer-Thrust


Ref.	Part Number	Qty.	Description
8	324-4	1	Screw-HH
9	322-5	1	Screw-HH
10	117-9072	2	Bumper-Rubber
11	3234-47	3	Screw-HHF
12	117-9008	1	Platform-RH
13	117-9035	3	Screw-HHF
14	115-8240	1	Screw-Elevator
15	119-0718	1	Spacer

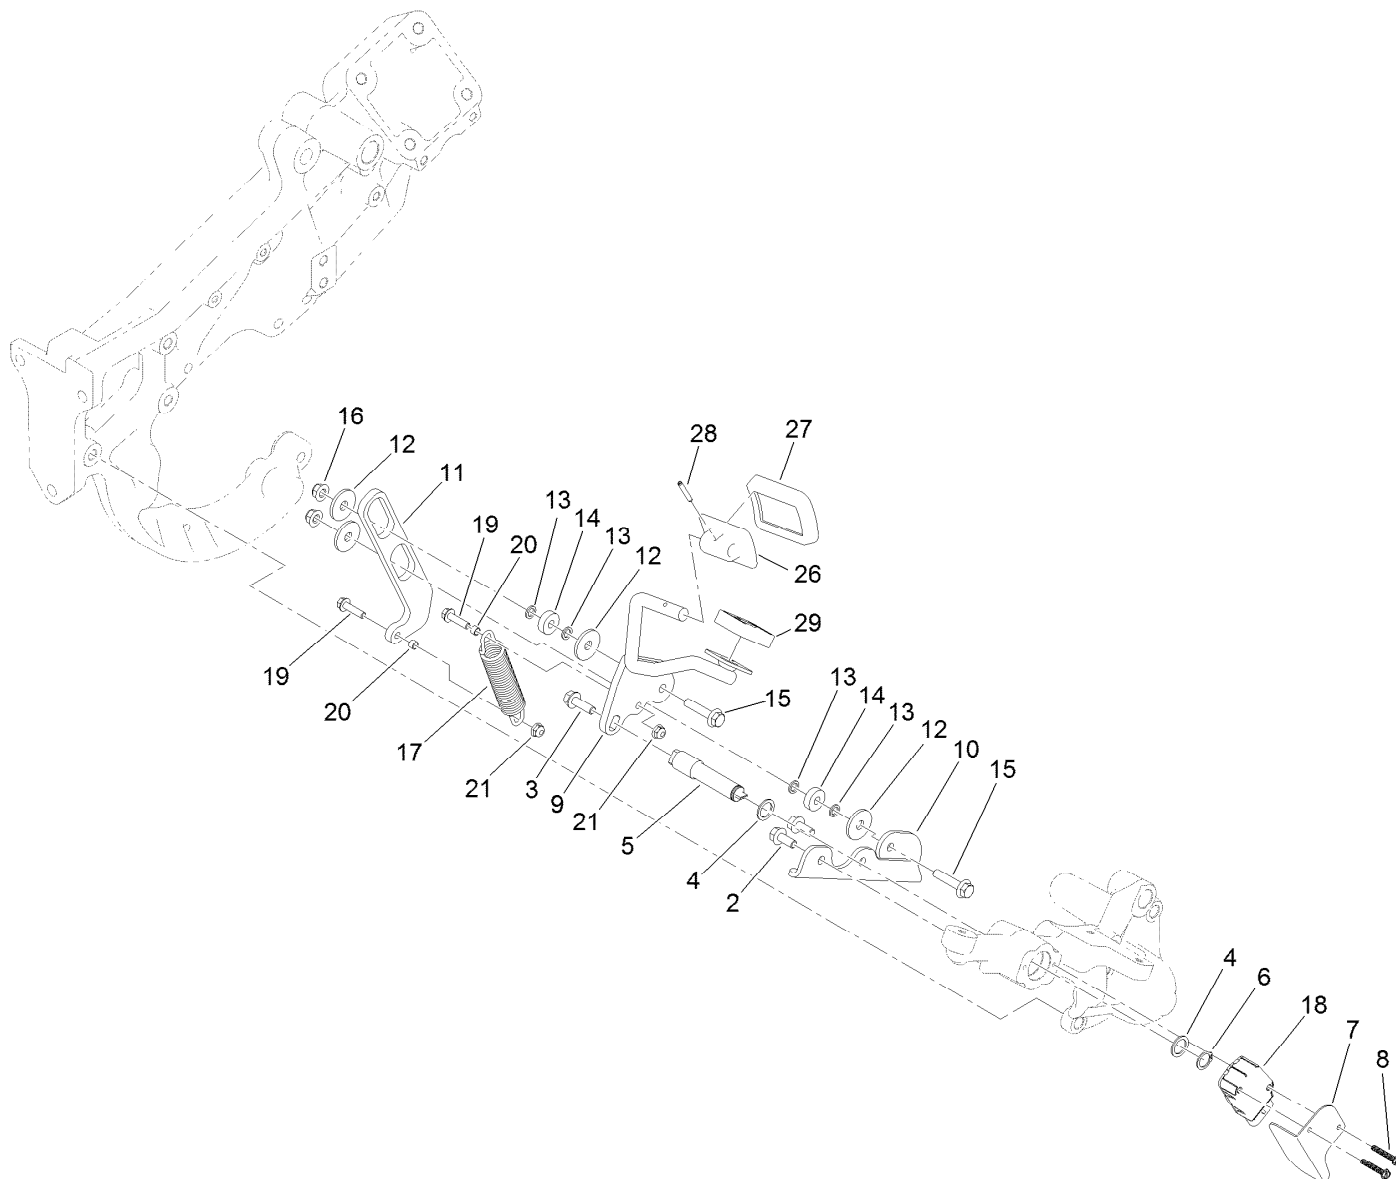 

Traction Pedal Assembly

Ref.	Part Number	Qty.	Description
2	98-9940	2	Screw-HHF
3	115-5142	1	Screw-HHF
4	7-3590	2	Washer
5	132-9852	1	Shaft-Pedal
6	32151-62	1	Ring-Retaining
7	121-7035	1	Shield-Sensor
8	692501	2	Screw-SHWH
9	137-7814-01	1	Rod-Traction
10	137-7811-01	1	Bracket-Control, Motion
11	145-1063	1	Link-Connecting
12	107675	4	Washer
13	75-5470	4	Spacer-Bearing


Ref.	Part Number	Qty.	Description
14	251-259	2	Bearing-Ball
15	115-1794	2	Screw-HHF
16	104-8300	2	Nut-HF, NI
17	137-7944	1	Spring-Extension
18	122-0917	1	Sensor-Position
19	120-4654	2	Screw-HHF
20	121-2015	2	Spacer
21	104-7201	2	Nut-HF, NI
26	117-9507	1	Pedal-Accelerator
27	74-9100	1	Pad-Pedal, Forward
28	32121-45	1	Pin-Spring
29	74-9110	1	Pad-Pedal, Reverse

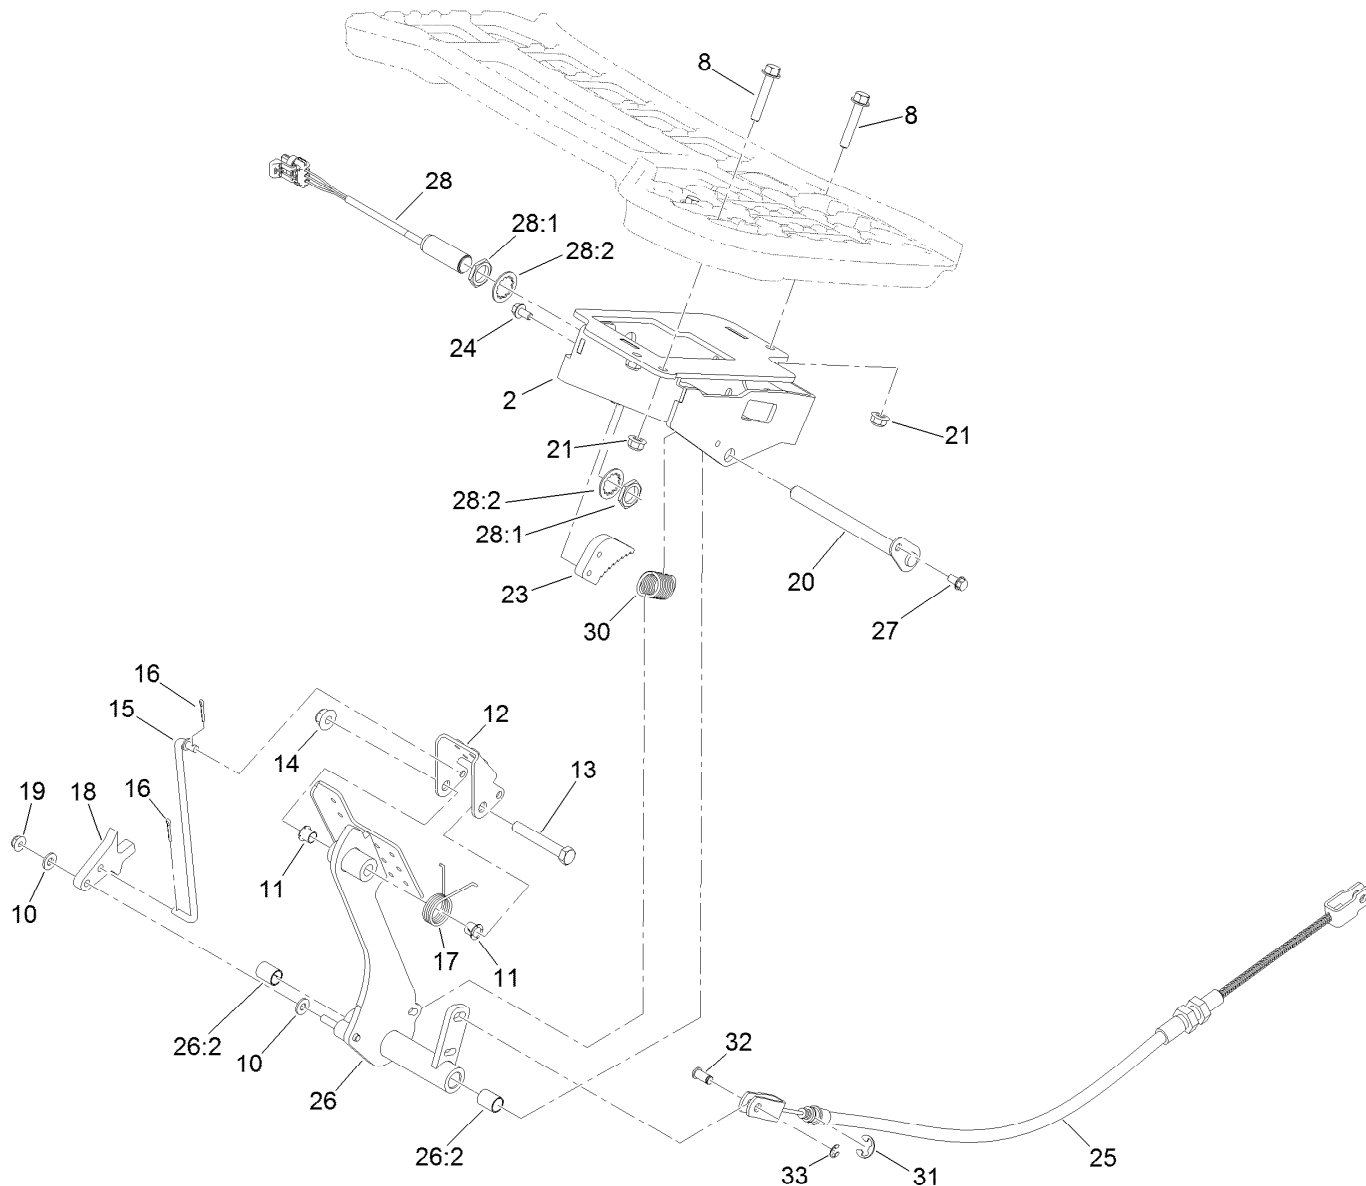 

Brake Pedal Assembly


Ref.	Part Number	Qty.	Description
2	132-9890-03	1	Support-Pedal
8	94-5780	3	Screw-HWH
10	3256-22	2	Washer-Flat
11	52-2891	2	Bushing-Flanged, Nylon
12	99-7963-03	1	Pedal-Park
13	323-12	1	Screw-HH
14	104-8301	1	Nut-HF, NI
15	115-0129	1	Rod-Pawl, Brake
16	3272-6	2	Pin-Cotter
17	99-7140	1	Spring-Torsion
18	117-0238	1	Detent
19	104-7201	1	Nut-HF, NI
20	133-0089	1	Pivot-Pedals
21	104-8300	3	Nut-HF, NI

Ref.	Part Number	Qty.	Description
23	99-7214	1	Pawl-Brake
24	119-1065	2	Screw-HWH
25	137-7770	1	Cable-Brake
26	137-8109	1	Brake Pedal ASM
26:2	133-0090	2	Bushing-Split
27	32144-4	1	Screw-HWH
28	115-5300	1	Proximity Switch ASM
28:1	117-3207	2	Nut-Hex
28:2	117-3208	2	Washer-Lock, Internal Tooth
30	136-7316	1	Spring-Extension
31	32120-47	1	Ring-Retaining, External
32	109-6887	1	Pin-Clevis
33	701197	1	E-Ring

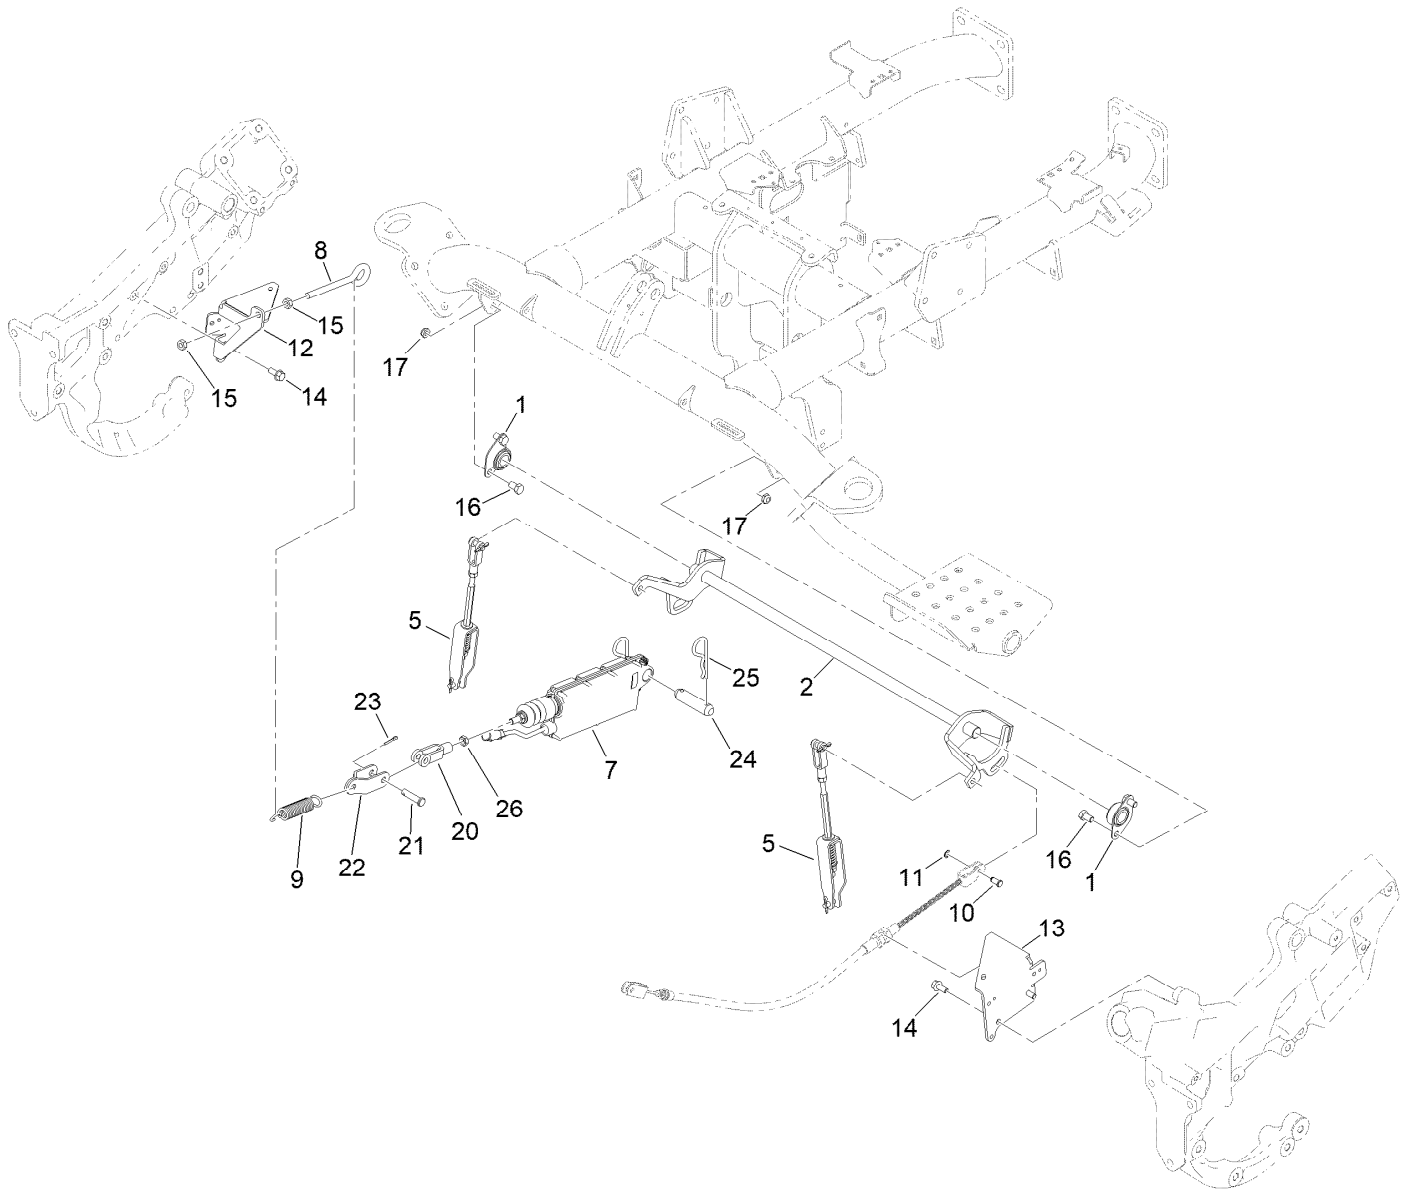 


Brake Actuator Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-633102	2	Bearing-Flange, Side	15	3217-7	2	Nut-Hex
2	145-0060-03	1	Cross Shaft-Brake [black]	16	323-34	4	Screw-HH
5	137-2185	2	Brake Rod ASM	17	3296-59	4	Nut-Lock, NI
7	139-8587	1	Actuator-Brake	20	1-633131	1	Yoke-Linkage, Brake
8	137-8026	1	Bolt-Eye	21	283-10	1	Pin-Clevis
9	93-5985	1	Spring-Extension	22	137-7838	1	Link ASM
10	109-6887	1	Pin-Clevis	23	3272-10	1	Pin-Cotter
11	701197	1	E-Ring	24	27-4240	1	Pin-Cylinder
12	137-7790-03	1	Bracket-Spring	25	3290-256	2	Pin-Hair
13	137-7769-03	1	Bracket-Cable	26	3220-3	1	Nut-HJ
14	98-9940	4	Screw-HHF				

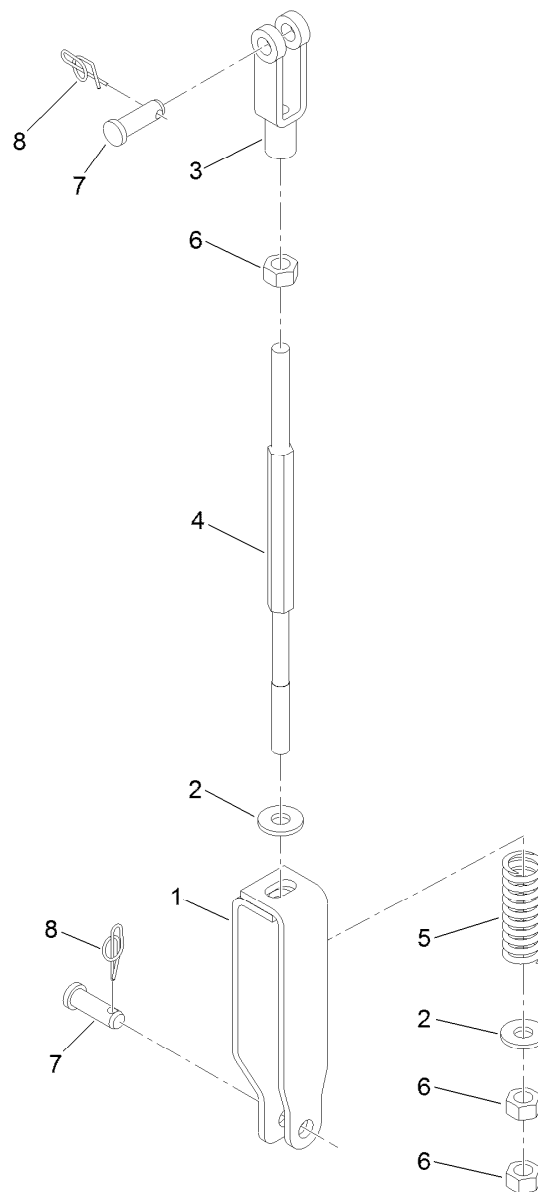 

Brake Rod Assembly No. 137-2185


Ref.	Part Number	Qty.	Description
1	137-2180	1	Brake Clevis ASM
2	120-9646	2	Washer-Flat
3	282-2	1	Yoke
4	137-8056	1	Rod-Brake
5	137-8085	1	Spring-Seat, Compression
6	3219-2	3	Nut-Hex
7	283-1	2	Pin-Clevis
8	116-6639	2	Pin-Cotter, Locking

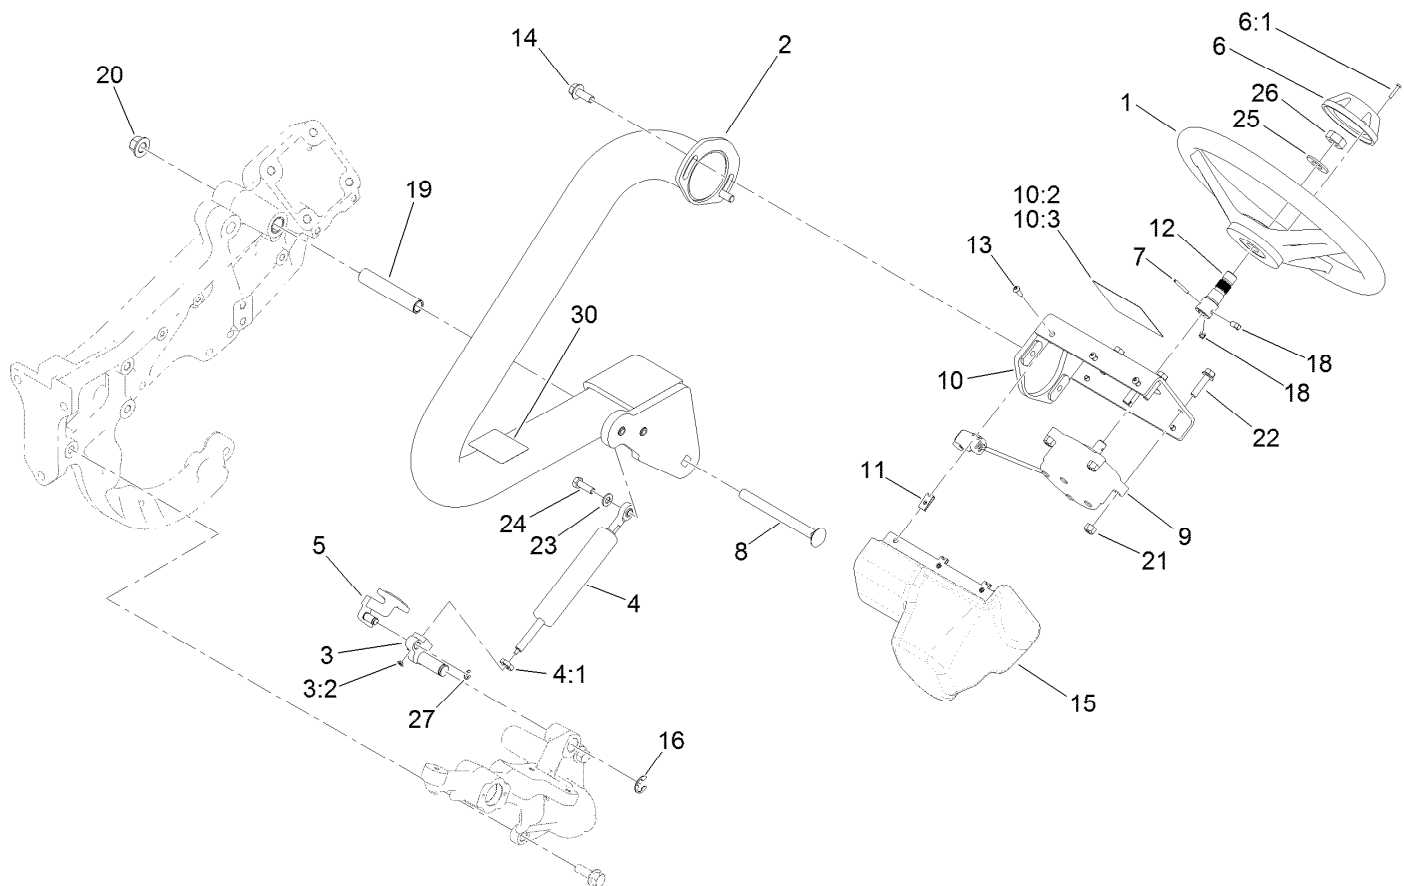 

Steering Assembly


Ref.	Part Number	Qty.	Description
1	145-0051	1	Steering Wheel
2	145-0093-01	1	Steering Arm ASM [red]
3	133-9030	1	Pivot Lever ASM
3:2	133-8995	1	Bushing
4	133-9036	1	Cylinder-Gas
4:1	112-8617	1	Nut-Hex
5	138-6456	1	Lever (Mach)
6	68-5140	1	Cap-Wheel, Steering
6:1	32144-21	1	Screw
7	933156	1	Pin-Roll
8	140-7029	1	Screw-CARR
9	132-9935	1	Steering Unit
10	137-8092	1	Steering Mount ASM
10:2	139-8320	1	Decal-Danger
10:3	139-8321	1	Decal-Danger, CE
11	3290-277	6	Nut-Speed

Ref.	Part Number	Qty.	Description
12	136-4262	1	Shaft-Adapter, Steering
13	3274-39	6	Screw-HSBH
14	3234-42	2	Screw-HHF
15	119-9300	1	Cover-Valve, Steering
16	32120-19	1	E-Ring
18	126-3824	2	Screw-Set, SQH
19	117-9002	1	Spacer
20	99-5107	1	Nut-Lock
21	3296-29	4	Nut-Lock, NI
22	119-4036	4	Screw-HHF
23	3256-23	1	Washer-Plain
24	322-5	1	Screw-HH
25	3256-27	1	Washer-Flat
26	3296-33	1	Nut-Lock, NI
27	701197	1	E-Ring
30	119-9346	1	Decal-Arm, Steering

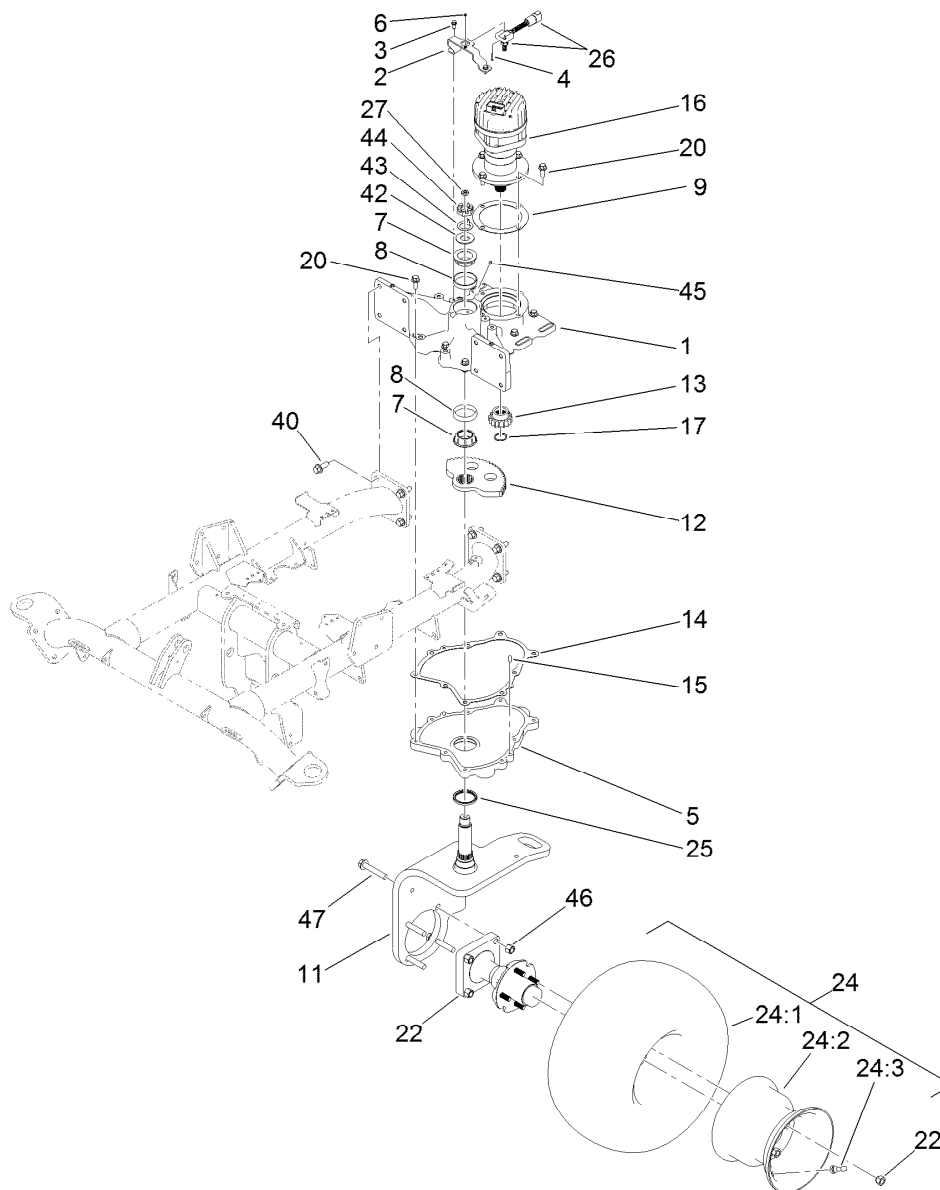 


Wheel and Tire Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	139-8314	1	Housing-Steering	22	119-4490	1	Wheel Spindle ASM
2	137-7868-03	1	Bracket-Sensor, Steering	24	117-9033	1	Wheel And Tire ASM
3	32144-10	2	Screw-HWH	24:1	120-2783	1	Tire
4	3290-313	2	Screw-SPH	24:2	217-60	1	Rim
5	137-8166-03	1	Housing	24:3	232-27	1	Stem-Valve
6	3296-52	2	Nut-Lock, NI	25	108-7019	1	Seal-Shaft
7	107-7589	2	Cone-Bearing (W/ Seal)	26	122-0914	1	Sensor-Rotary, Body/Magnet Matched Set
8	107-7590	2	Cup-Bearing	27	112-8617	1	Nut-Hex
9	133-0347	1	Gasket	40	117-9035	8	Screw-HHF
11	139-8313	1	Fork-Caster	42	137-8171	1	Washer
12	137-8170	1	Gear-Spur, 64T	43	137-7943	1	Washer-Tang
13	133-0346	1	Pinion-16T	44	137-7942	1	Nut-Castle
14	133-0348	1	Gasket	45	302-59	1	Plug-EXT Hex Spl
15	136-2667	2	Pin-Dowel	46	3296-23	4	Nut-Lock, NI
16	133-0349	1	Steering Unit ASM	47	3234-40	4	Screw-HF
17	32120-2	1	Ring-Retaining				
20	3234-42	13	Screw-HHF				

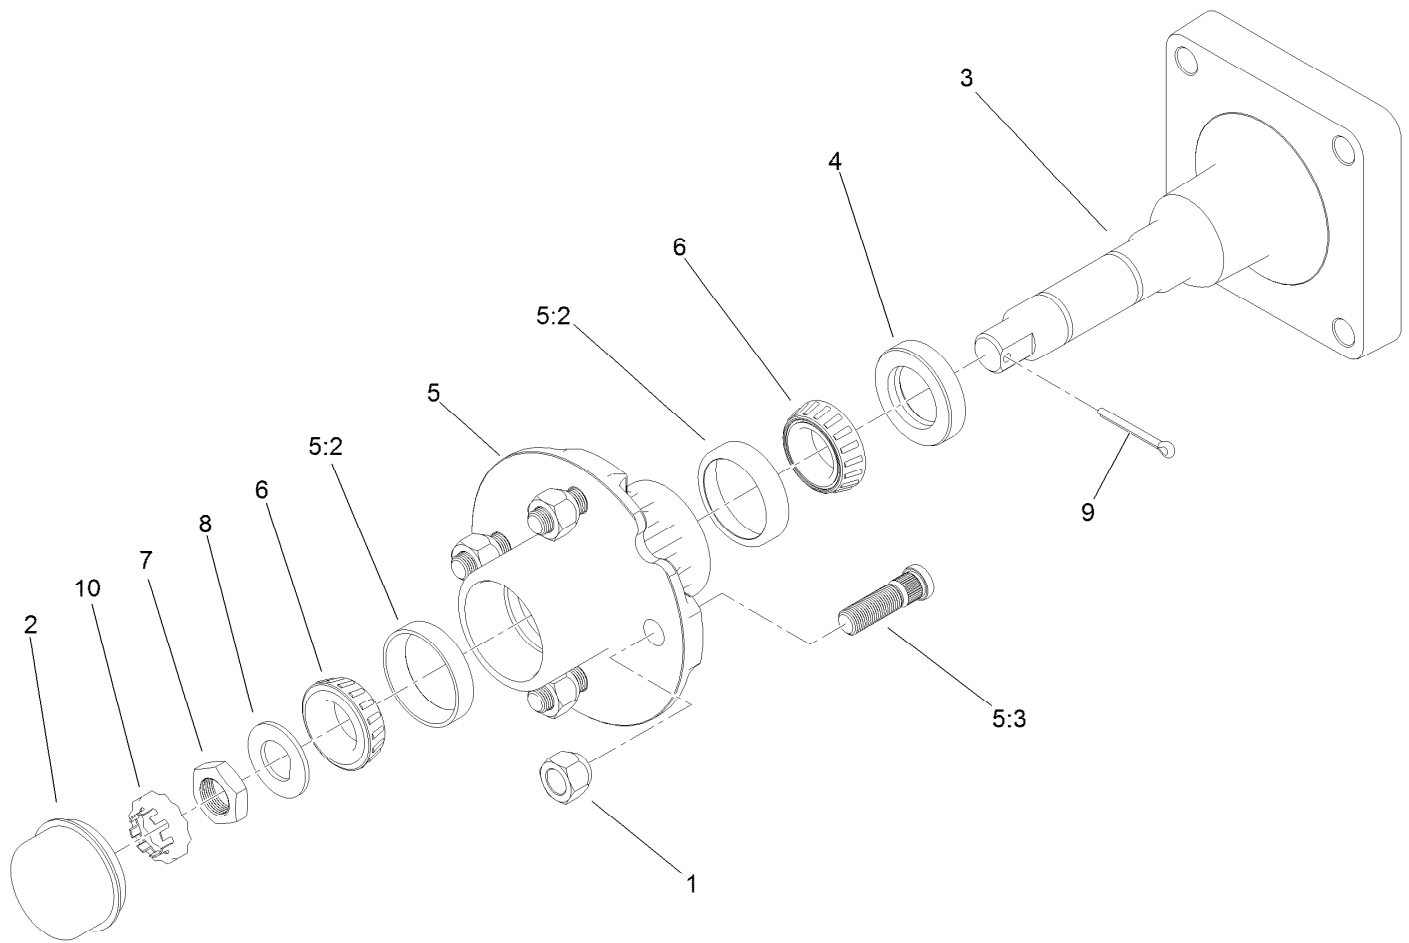 

Wheel Spindle Assembly No. 119-4490


Ref.	Part Number	Qty.	Description
1	242-50	4	Nut-Lug
2	241-119	1	Cap-Dust
3	112-7173	1	Spindle
4	112-1690	1	Seal-Oil
5	117-9093	1	Hub ASM
5:2	254-72	2	Bearing-Cup, Tapered
5:3	114-3918	4	Stud-Wheel
6	254-92	2	Cone-Bearing, Outer
7	117-8260	1	Nut
8	117-8259	1	Washer-Spindle
9	3272-18	1	Pin-Cotter
10	93-0307	1	Nut-Lock, Retainer

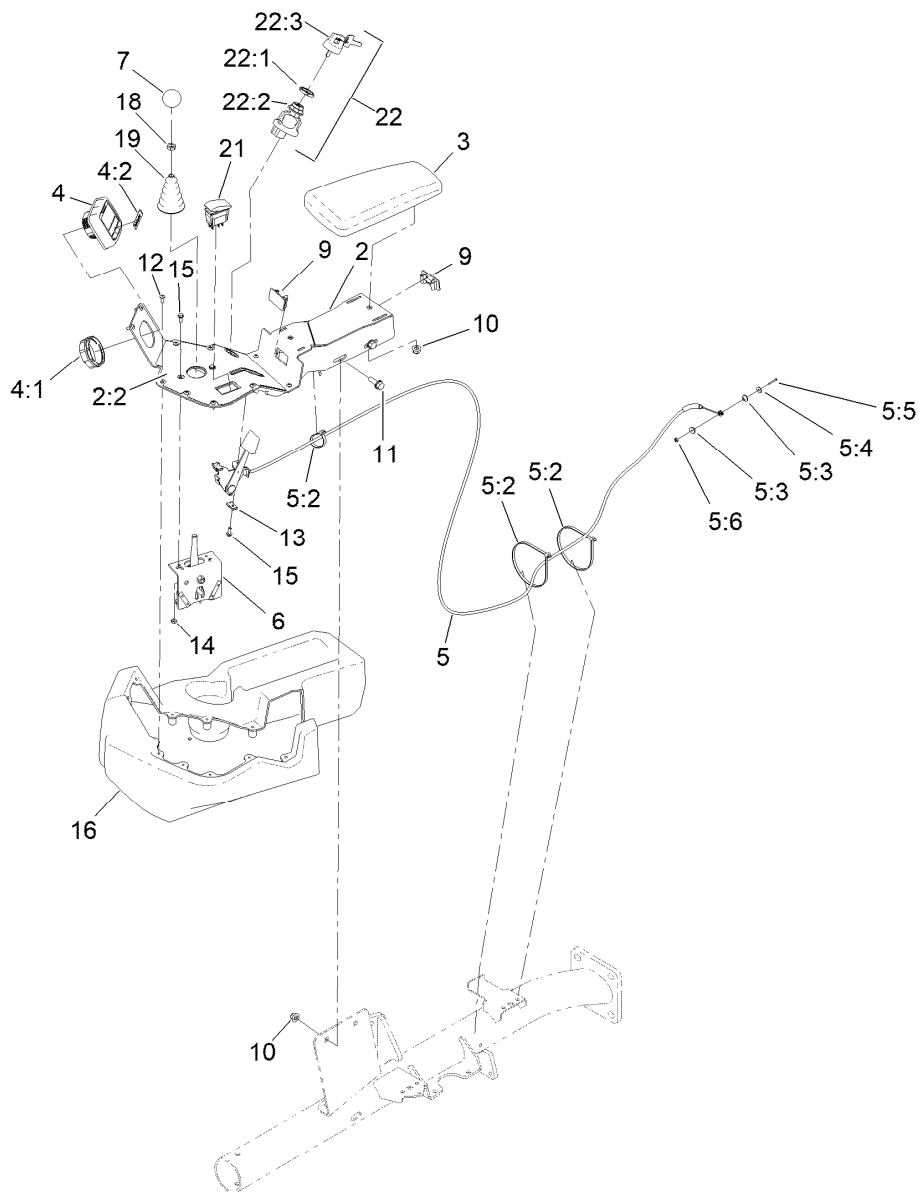 

Console Assembly

Ref.	Part Number	Qty.	Description
2	137-8093	1	Console ASM
2:2	139-8588	1	Decal-Console
3	108-7602	1	Rest-Arm
4	120-6310	1	LCD Display ASM
4:1	120-4630	1	Nut-Display
4:2	120-6311	1	Decal-Display
5	147-3066	1	Choke Cable Kit
5:2	3290-379	3	Tie-Cable
5:3	145-4596	2	Spacer, Choke Cable Adapter
5:4	3269-10	1	Washer-Back
5:5	147-3074	1	Screw, HSBH
5:6	147-3075	1	Nut-Hex
6	120-5280	1	Bracket-Joystick
7	120-9752	1	Knob-Round, Yellow


Ref.	Part Number	Qty.	Description
9	99-7420	2	Plug-Hole
10	104-8300	4	Nut-HF, NI
11	3234-29	2	Screw-HHF
12	115-9830	10	Screw-HSBH
13	3290-277	2	Nut-Speed
14	3296-12	2	Nut-Lock, NI
15	3290-321	4	Screw-HWH
16	132-9955	1	Cover-Console
18	3218-3	1	Nut-Jam
19	93-5961	1	Boot-Lever
21	112-3530	1	Switch-Rocker, On-On-On
22	121-5159	1	Switch-Ignition
22:1	121-5160	1	Nut-Hex
22:2	122-2704	1	Nut-Face, M22 (Plastic)
22:3	121-5162	1	Set-Key, Ignition

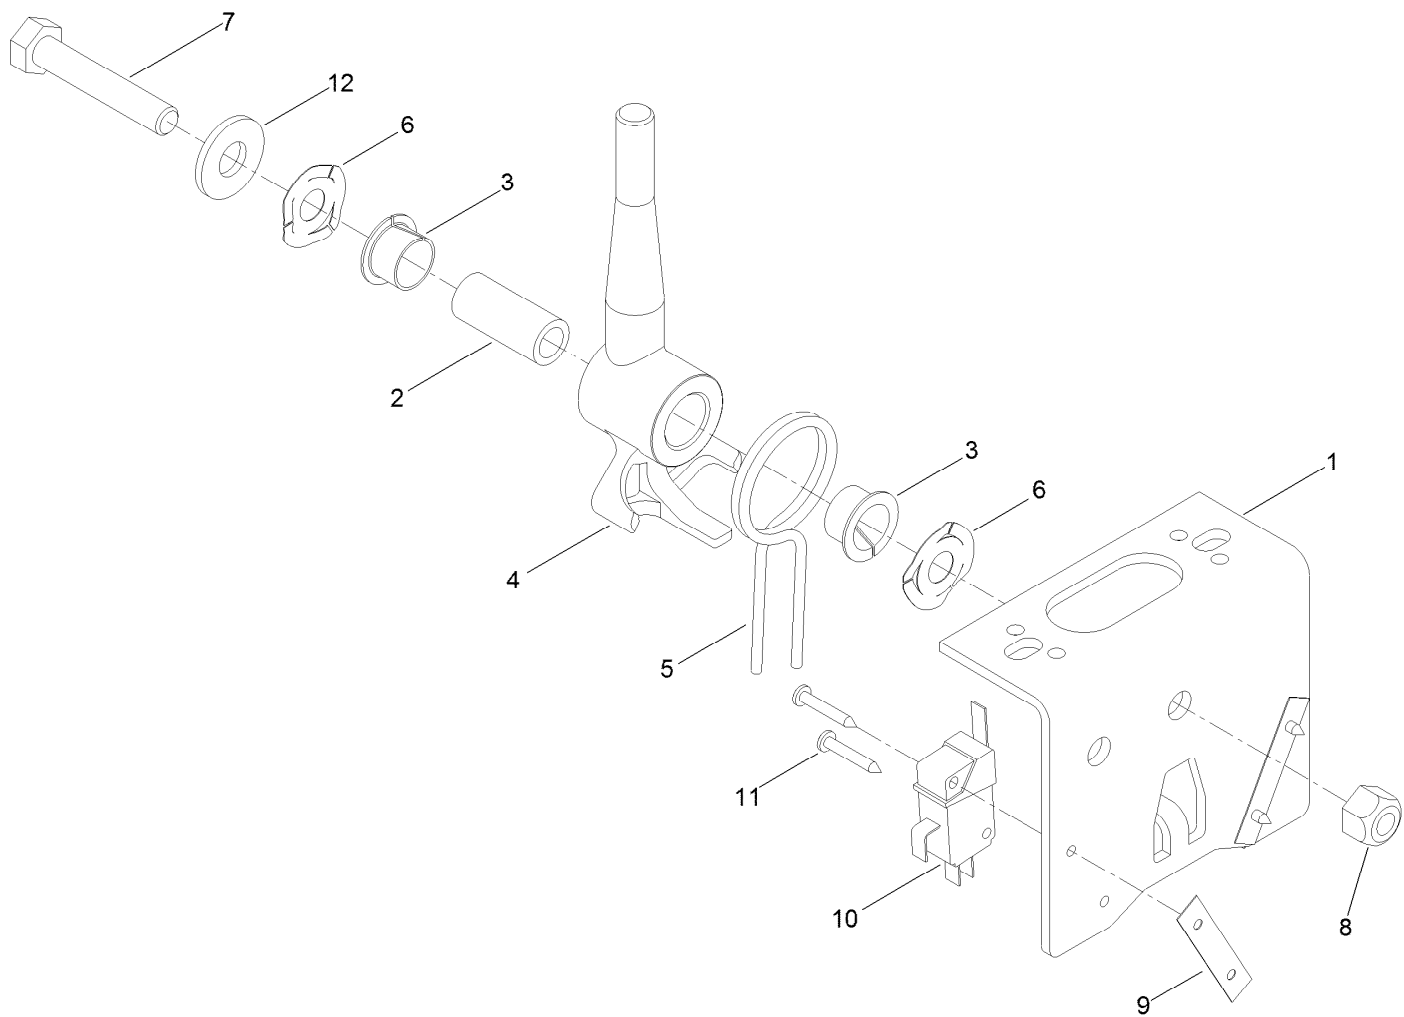 

Joystick Bracket Assembly No. 120-5280

Ref.	Part Number	Qty.	Description
1	115-5357-03	1	Bracket-Joystick
2	106-4192	1	Spacer
3	93-5547	2	Bushing-Nylon
4	119-3540	1	Hub-Pivot, Joystick
5	105-8289	1	Spring-Torsion
6	106-4193	2	Washer-Finger, Spring
7	322-9	1	Screw-HH
8	3296-29	1	Nut-Lock, NI
9	3290-354	2	Nut-Speed
10	108-6496	2	Switch (W/Boot)
11	95-3003	4	Screw-PPHTF
12	3256-3	1	Washer-Flat

 D3

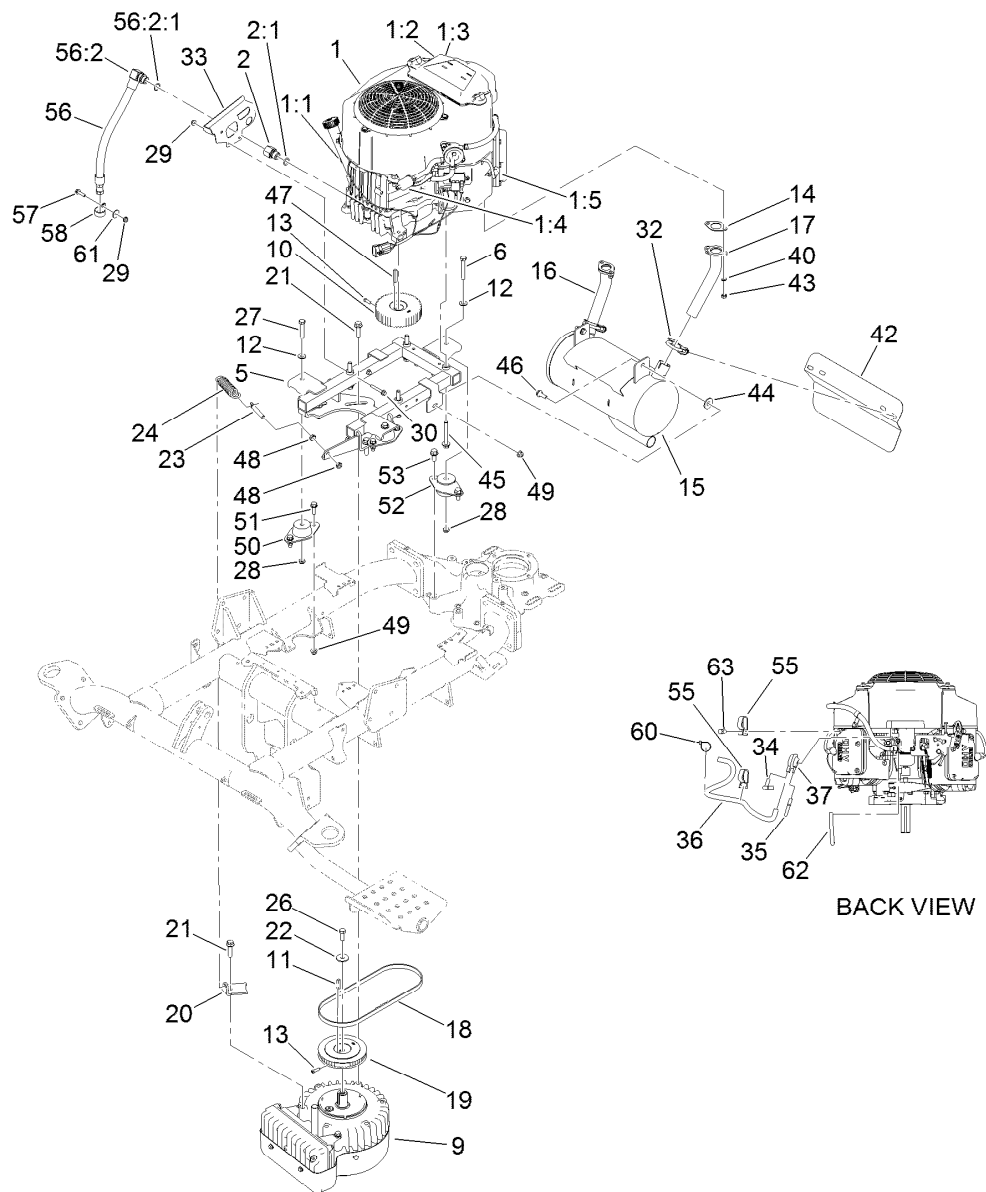


Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-S34 ●■
1:1	119-5852	1	Filter-Oil
1:2	120-7447	1	Filter-Air, Foam
1:3	120-7448	1	Filter-Air, Paper
1:4	121-4570	1	Filter-Fuel
1:5	92-2153	1	Plug-Spark
2	139-8416	1	Fitting-Straight
2:1	237-69	1	O-Ring
5	133-5797-03	1	Frame-Engine
6	323-12	1	Screw-HH
9	127-2580	1	Generator/Controller ASM
10	137-8128	1	Pulley-Belt
11	5-0698	1	Key
12	3256-24	3	Washer-Flat
13	3241-6	4	Screw-SQH
14	1-653313	2	Gasket-Exhaust
15	133-5745	1	Muffler

Ref.	Part Number	Qty.	Description
16	133-5750	1	Pipe-Exhaust, LH
17	133-5751	1	Pipe-Exhaust, RH
18	137-7828	1	Belt-Timing
19	137-8131	1	Pulley ASM
20	133-5737	1	Bracket-Spring
21	114-4681	5	Screw-HHF
22	63-8410	1	Washer
23	133-0332	1	Pin-Adjustment, Generator
24	133-5738	1	Spring-Extension
26	3211-4	1	Screw-HH
27	323-10	2	Screw-HH
28	3296-59	3	Nut-Lock, NI
29	104-7201	3	Nut-HF, NI
30	32105-18	2	Screw-HHF
32	104-4090	2	Clamp-Muffler
33	132-9908	1	Shield-Drip
34	119-8502	1	Hose-Vent, Formed
35	119-8501	1	Hose-Vent, Formed

● Not serviced separately

 ■ Obtain parts from www.kawpower.com

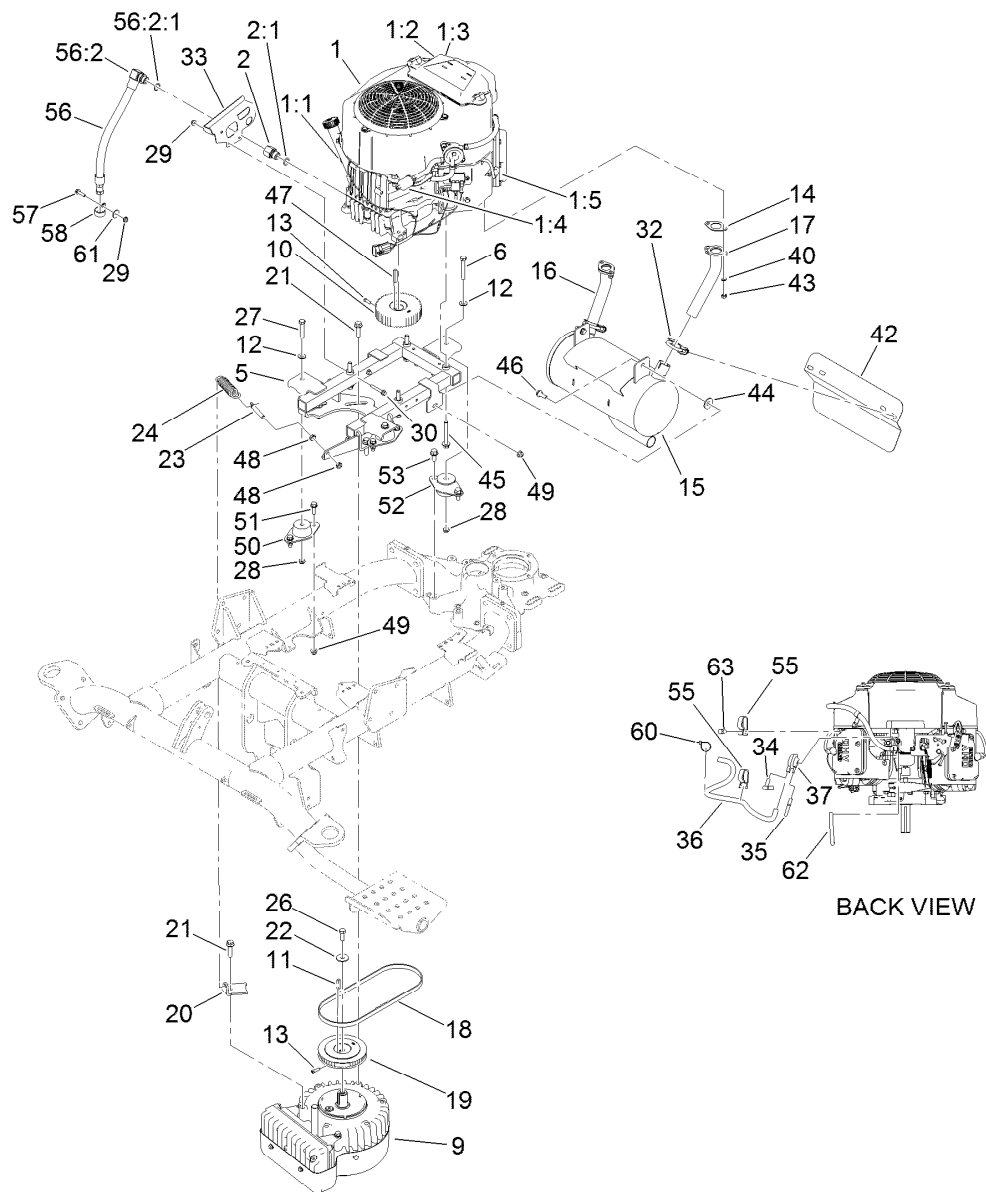


Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
36	110-5701	1	Hose-Fuel
37	116-2232	1	Valve-Control, Vacuum
40	114-3550	4	Washer-Lock
42	132-9915-03	1	Shield-Exhaust, Rear
43	114-3549	4	Nut
44	3290-465	2	Washer-Belleville
45	132-9947	4	Screw-Hfh
46	27-0410	2	Screw-Shoulder
47	67-7490	1	Key-Square
48	3220-3	2	Nut-HJ
49	104-8300	6	Nut-HF, NI
50	121-9076	2	Mount-Engine
51	3234-29	4	Screw-HHF

Ref.	Part Number	Qty.	Description
52	131-1821	1	Mount-Engine
53	3234-25	2	Screw-HHF
55	92-5753	2	Clamp-Hose
56	137-7864	1	Drain Hose ASM
56:2		1	Plug-HH ●
56:2:1	237-42	1	O-Ring
57	120-4654	1	Screw-HHF
58	2412-106	1	Clamp-R
60	3290-379	1	Tie-Cable
61	3256-67	1	Washer
62	139-8415	1	Tubing-Convolved, Slit
63	33114-016	1	Screw-HH


● Not serviced separately

 ■ Obtain parts from www.kawpower.com

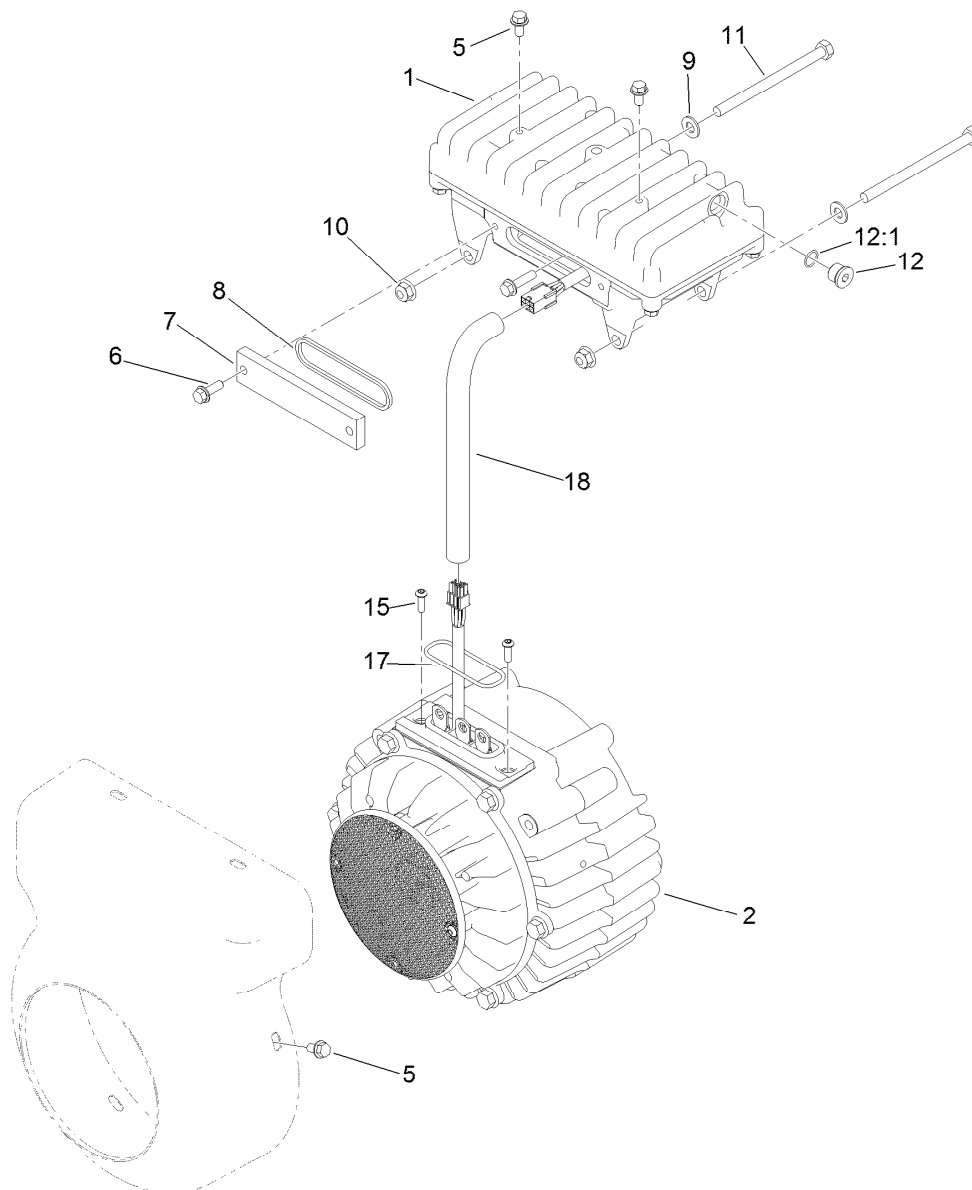


Generator/Controller Assembly No. 127-2580

Ref.	Part Number	Qty.	Description
1	117-8181	1	Controller ASM
2	127-2579	1	Generator ASM
5	119-1065	6	Screw-HWH
6	119-1138	2	Screw-HHF
7	120-4511	1	Cover-Access
8	120-4513	1	Gasket-Cover, Access
9	3256-23	2	Washer-Plain
10	104-8300	2	Nut-HF, NI
11	322-38	2	Screw-HH
12	353-989	1	Plug-Hex, Hollow
12:1	237-42	1	O-Ring
15	119-7568	2	Screw-HSBH
17	117-8176	1	O-Ring
18	127-2747	1	Sleeve-Harness, Expandable

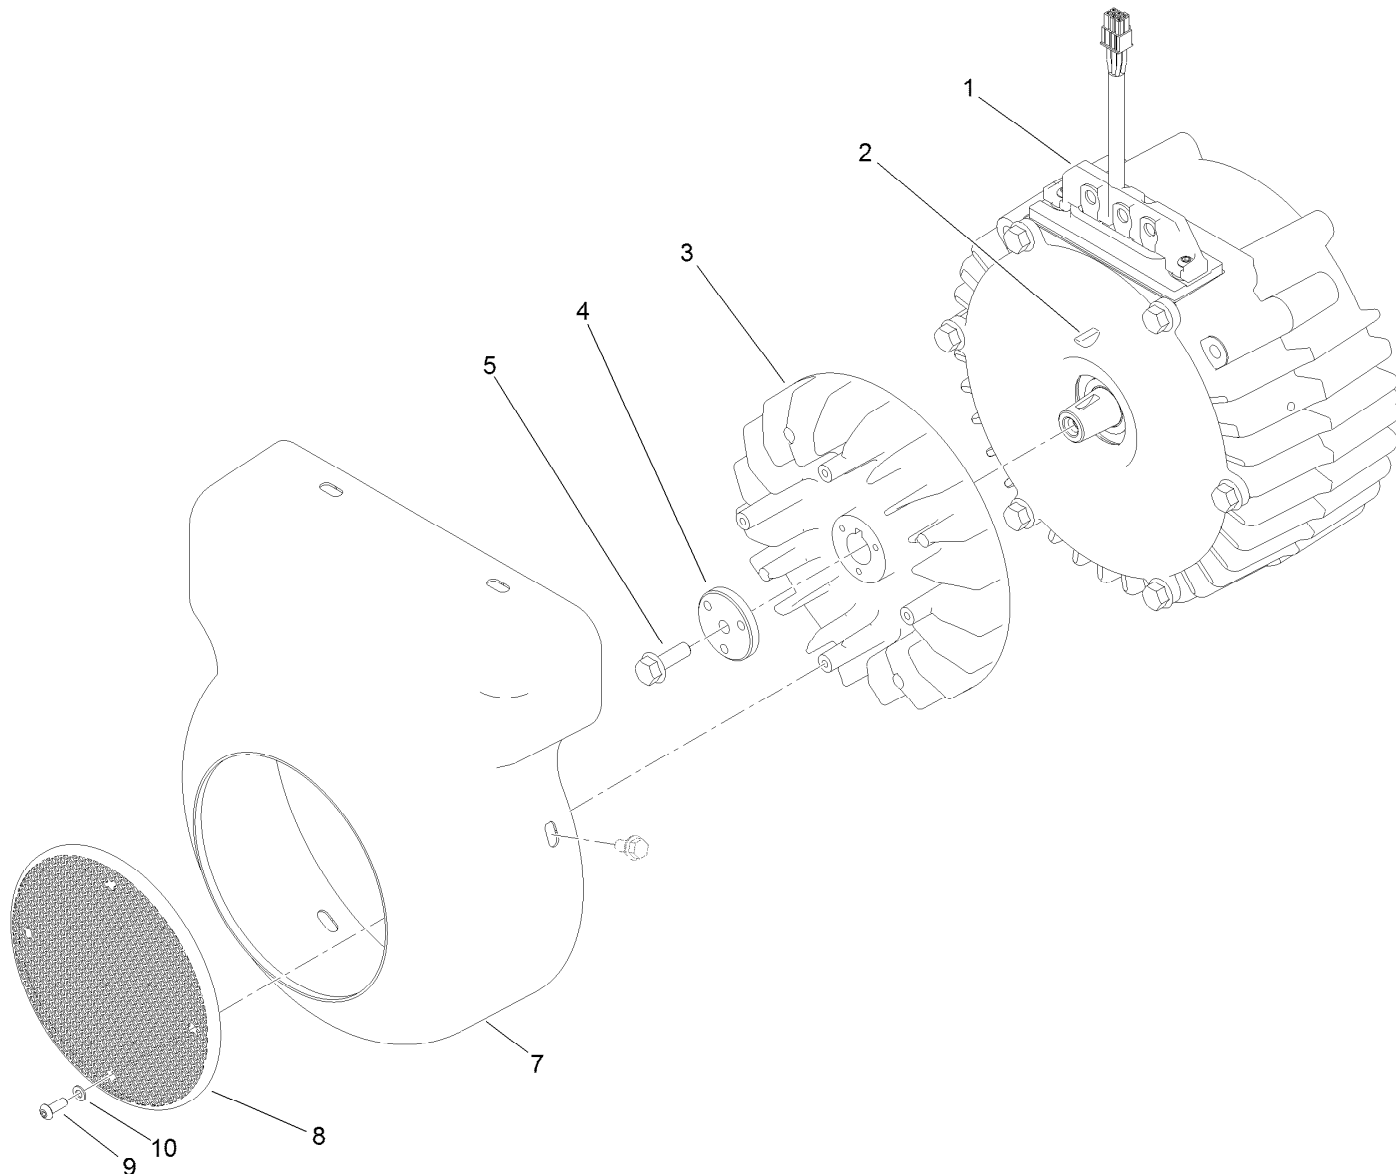 


Generator Assembly No. 127-2579

Ref.	Part Number	Qty.	Description
1	127-2578	1	Generator Service ASM
2	112-5193	1	Key-Woodruff
3	117-8184	1	Fan-Generator
4	112-9604	1	Collar
5	33104-025	1	Screw-HHF
7	121-7082	1	Cover-Generator
8	120-4582	1	Screen-Fan
9	120-4564	4	Screw-BHCS
10	120-4563	4	Washer-Flat

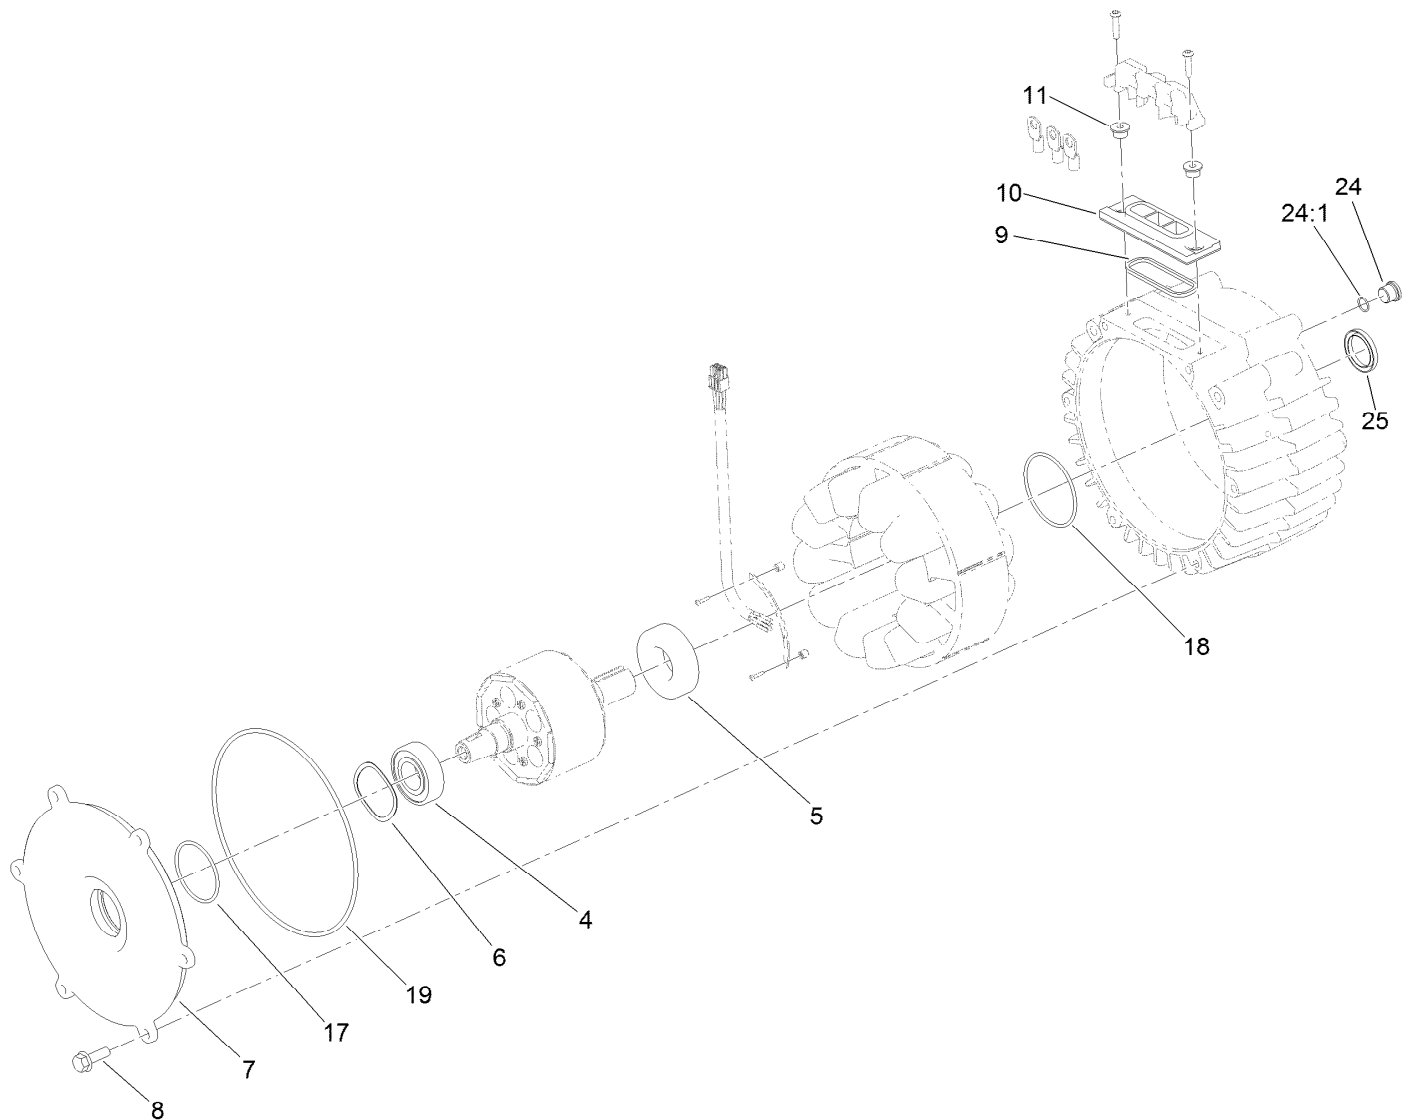 

Generator Service Assembly No. 127-2578


Ref.	Part Number	Qty.	Description
4	120-4621	1	Bearing
5	120-4622	1	Bearing
6	117-8148	1	Washer-Wave
7	117-4514	1	Cover-Generator
8	33104-025	6	Screw-HHF
9	120-4518	1	Gasket-Isolator
10	112-5155	1	Isolator-Thermal
11	117-4501	2	Spacer-Shoulder
17	107-3244	1	O-Ring
18	117-8177	1	O-Ring
19	112-5199	1	O-Ring
24	353-989	1	Plug-Hex, Hollow
24:1	237-42	1	O-Ring
25	125-1509	1	Seal

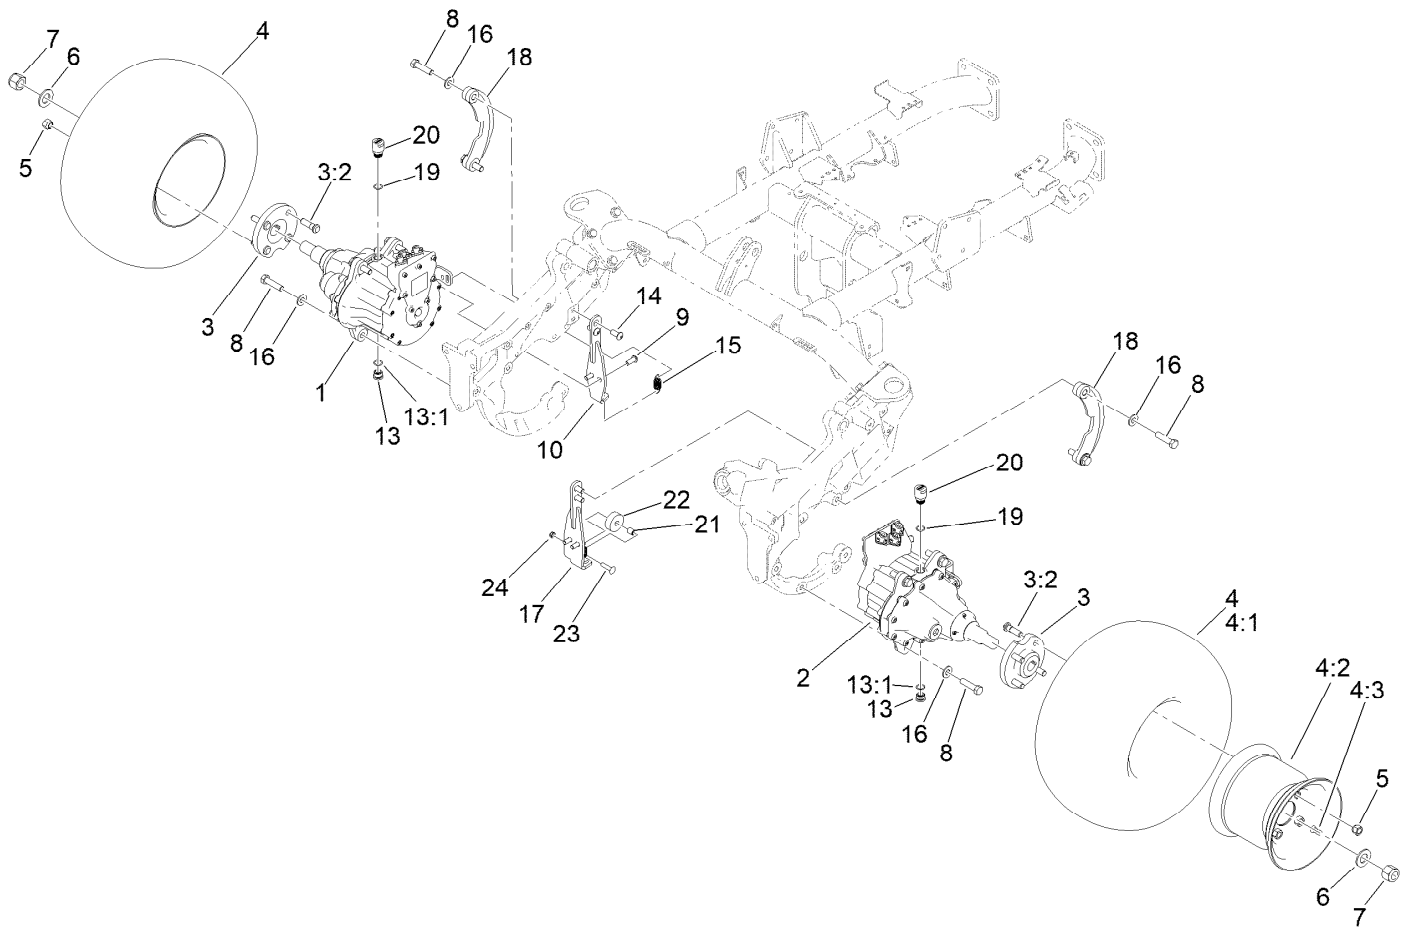 

Traction Assembly


Ref.	Part Number	Qty.	Description
1	139-8565	1	RH Wheel Motor ASM
2	139-8567	1	LH Wheel Motor ASM
3	140-6228	2	Hub ASM-Wheel
3:2	10-6830	4	Stud-Type, Drive
4	117-9030	2	Wheel And Tire ASM
4:1	120-2783	1	Tire
4:2	117-9032	1	Rim
4:3	232-27	1	Stem-Valve
5	242-50	8	Nut-Lug
6	AU496-11094	2	Washer-Flat
7	137-7973	2	Nut-Hex
8	325-8	12	Screw-HH
9	3274-94	4	Screw-HSBH
10	137-7727-01	1	Gusset-Motor, RH

Ref.	Part Number	Qty.	Description
13	133-7659	2	Plug ASM
13:1	237-79	1	O-Ring
14	3274-105	4	Screw-HSBH
15	136-7153	2	Spring-Extension
16	87-7270	12	Washer-Thrust
17	139-8348-01	1	Gusset-LH
18	132-9996-01	2	Link-Support
19	237-79	2	O-Ring
20	139-8576	2	Valve-Breather
21	88-7450	1	Spacer-Lever, Control
22	139-8346	1	Roller
23	112-6950	1	Screw-CARR
24	3296-47	1	Nut-Lock,NI

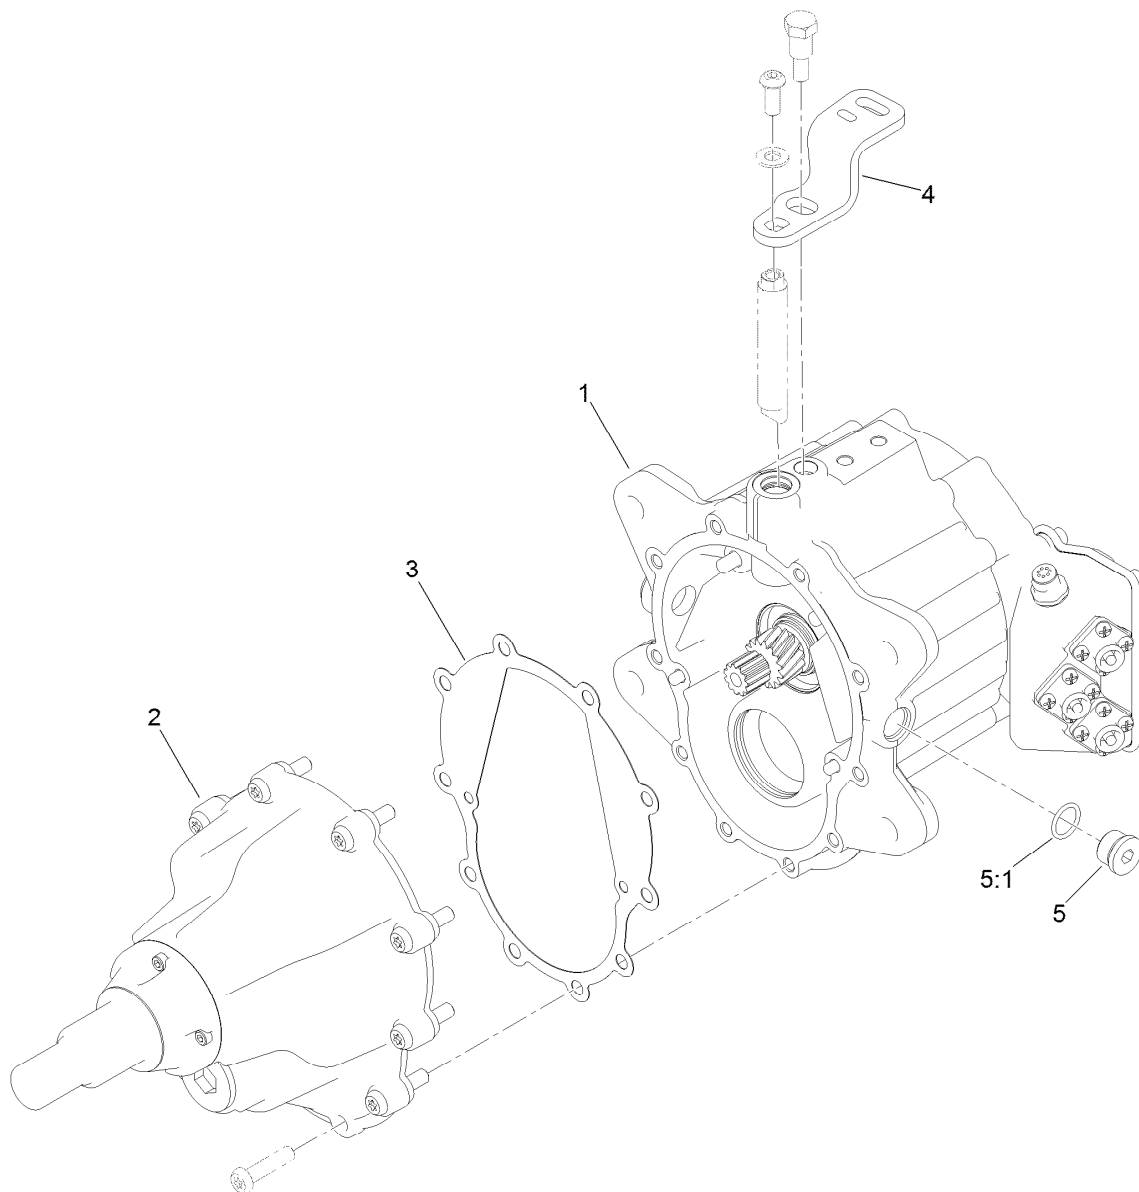 

RH Wheel Motor Assembly No. 139-8565


Ref.	Part Number	Qty.	Description
1	139-8566	1	RH Motor ASM
2	127-1529	1	Gear Box ASM
3	121-9254	1	Gasket-Gearbox
4	132-9873	1	Lever-Brake, RH
5	353-988	2	Plug-Hex
5:1	237-79	1	O-Ring

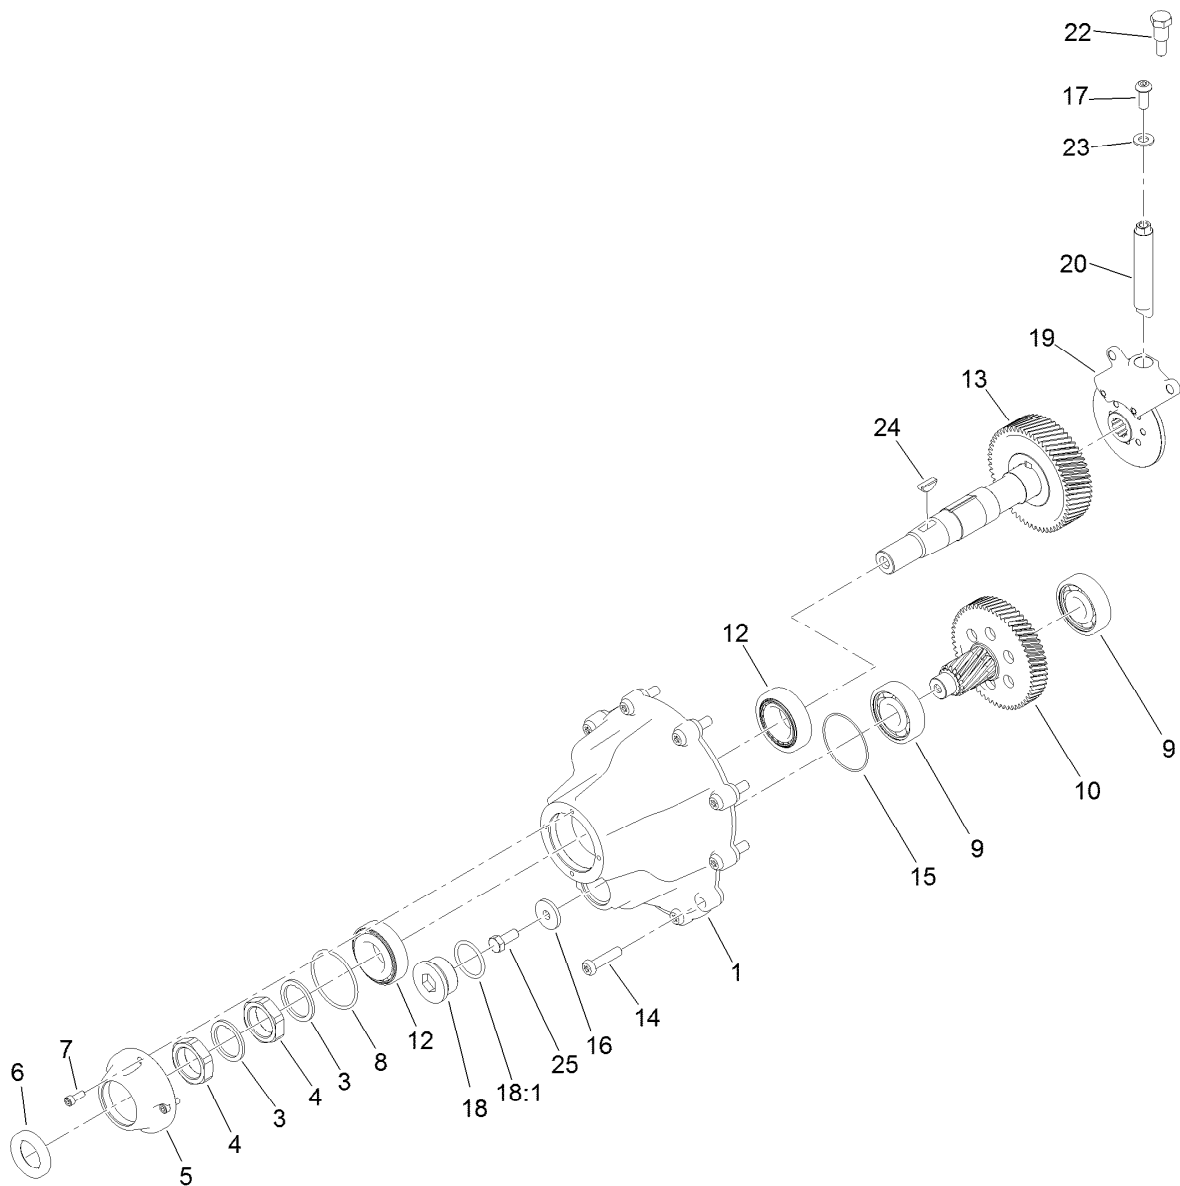 

Gearbox Assembly No. 127-1529


Ref.	Part Number	Qty.	Description
1	127-1559	1	Cover-Motor, Axle
3	121-5235	2	Washer-Special
4	121-9263	2	Nut-Jam
5	127-1561	1	Cover-Nose, Axle
6	137-7857	1	Seal-Shaft
7	112-5181	4	Screw -HSH
8	108-9919	1	O-Ring
9	121-9266	2	Bearing-Ball
10	132-9978	1	Countershaft Gear ASM
12	121-9256	2	Bearing-Taper
13	132-9841	1	Shaft ASM
14	127-1519	10	Screw-BHCS

Ref.	Part Number	Qty.	Description
15	121-9273	1	O-Ring
16	132-9927	1	Washer-Flat
17	3274-96	1	Screw-HSBH
18	105-3921	1	Fitting-Plug
18:1	237-146	1	O-Ring
19	132-9974	1	Brake ASM
20	121-9247	1	Shaft-Brake
22	121-9250	1	Pin-Lever, Stop
23	120-9683	1	Washer-Plain
24	132-9904	1	Key-Woodruff #91
25	137-7767	1	Screw-HH

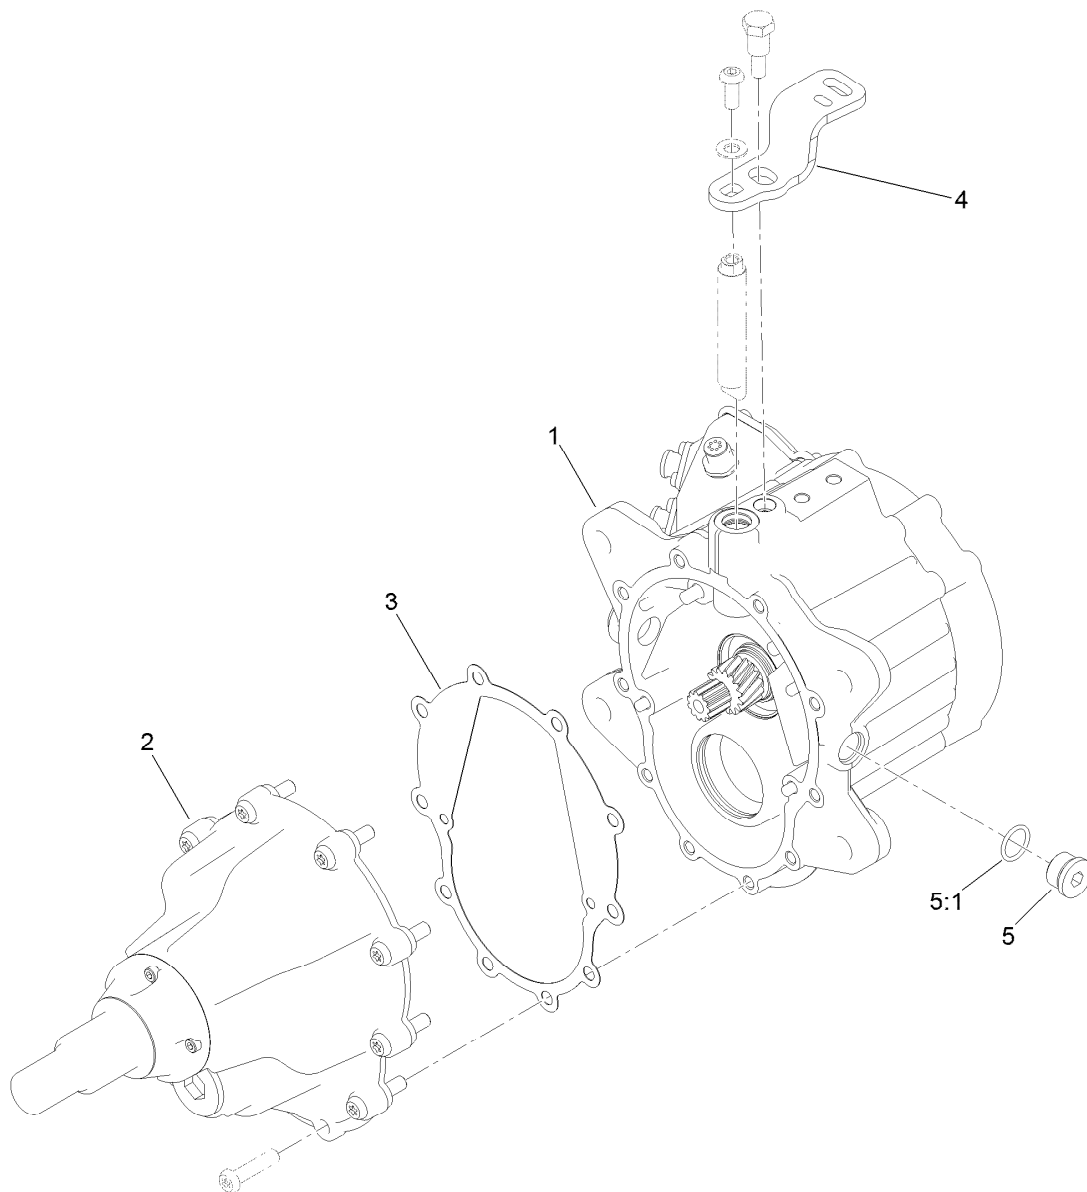 


LH Wheel Motor Assembly No. 139-8567

Ref.	Part Number	Qty.	Description
1	139-8568	1	LH Motor ASM
2	127-1529	1	Gear Box ASM
3	121-9254	1	Gasket-Gearbox
4	132-9874	1	Lever-Brake, LH
5	353-988	2	Plug-Hex
5:1	237-79	1	O-Ring

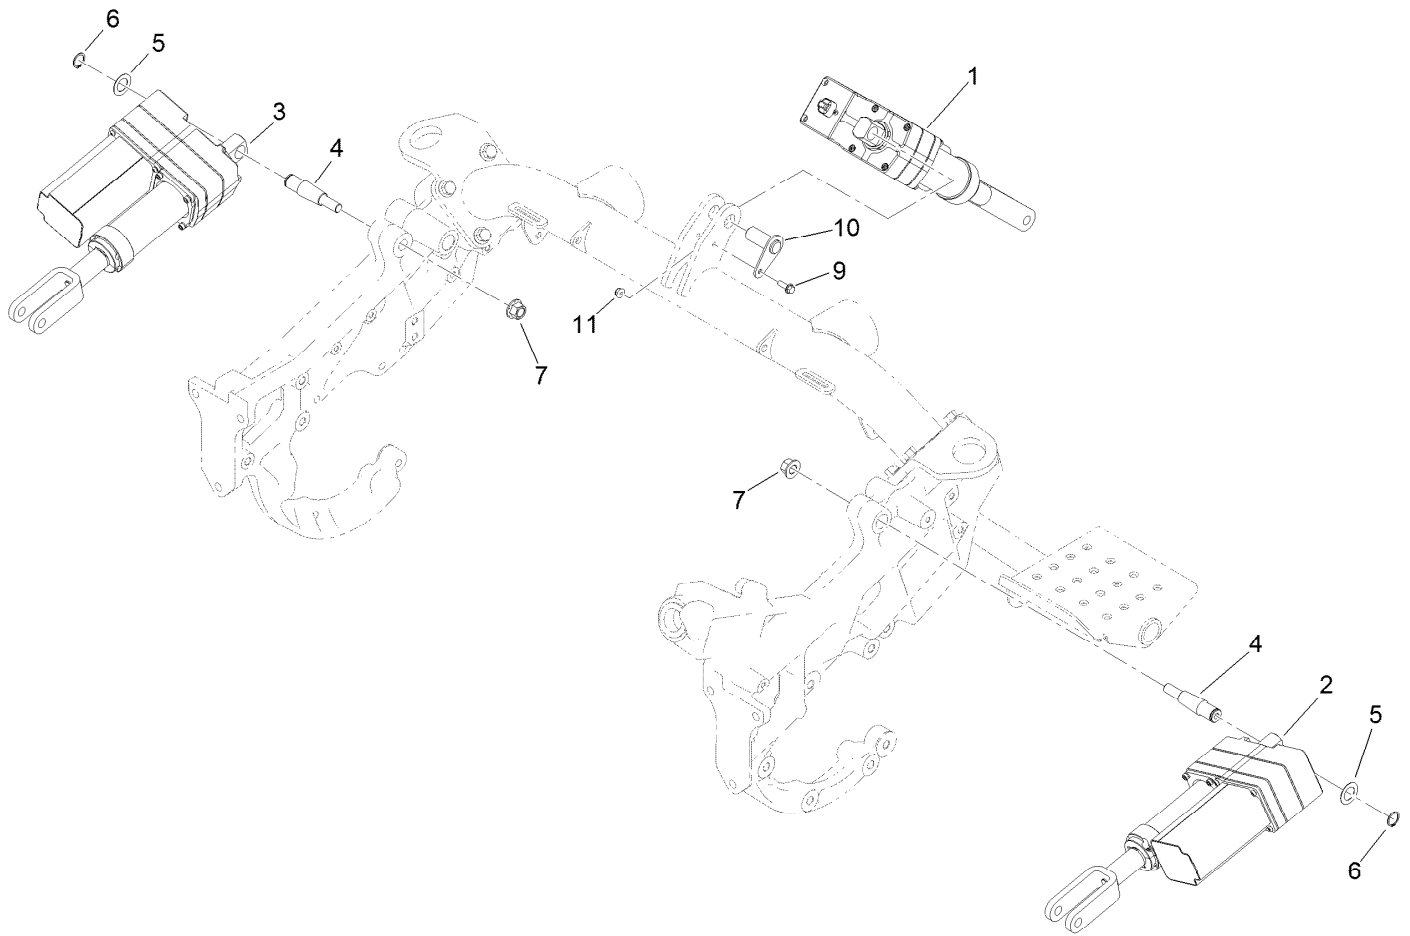 

Lift Assembly

Ref.	Part Number	Qty.	Description
1	137-7933	1	Actuator-1 Crown
2	137-7934	1	Actuator-2 Crown
3	137-7935	1	Actuator-3 Crown
4	136-2691	2	Pin-Tapered
5	9202574	2	Washer-Flat
6	32120-72	2	Ring-Snap
7	99-5107	2	Nut-Lock
9	115-5103	1	Screw-HHF
10	137-7766	1	Pin ASM
11	104-7201	1	Nut-HF, NI

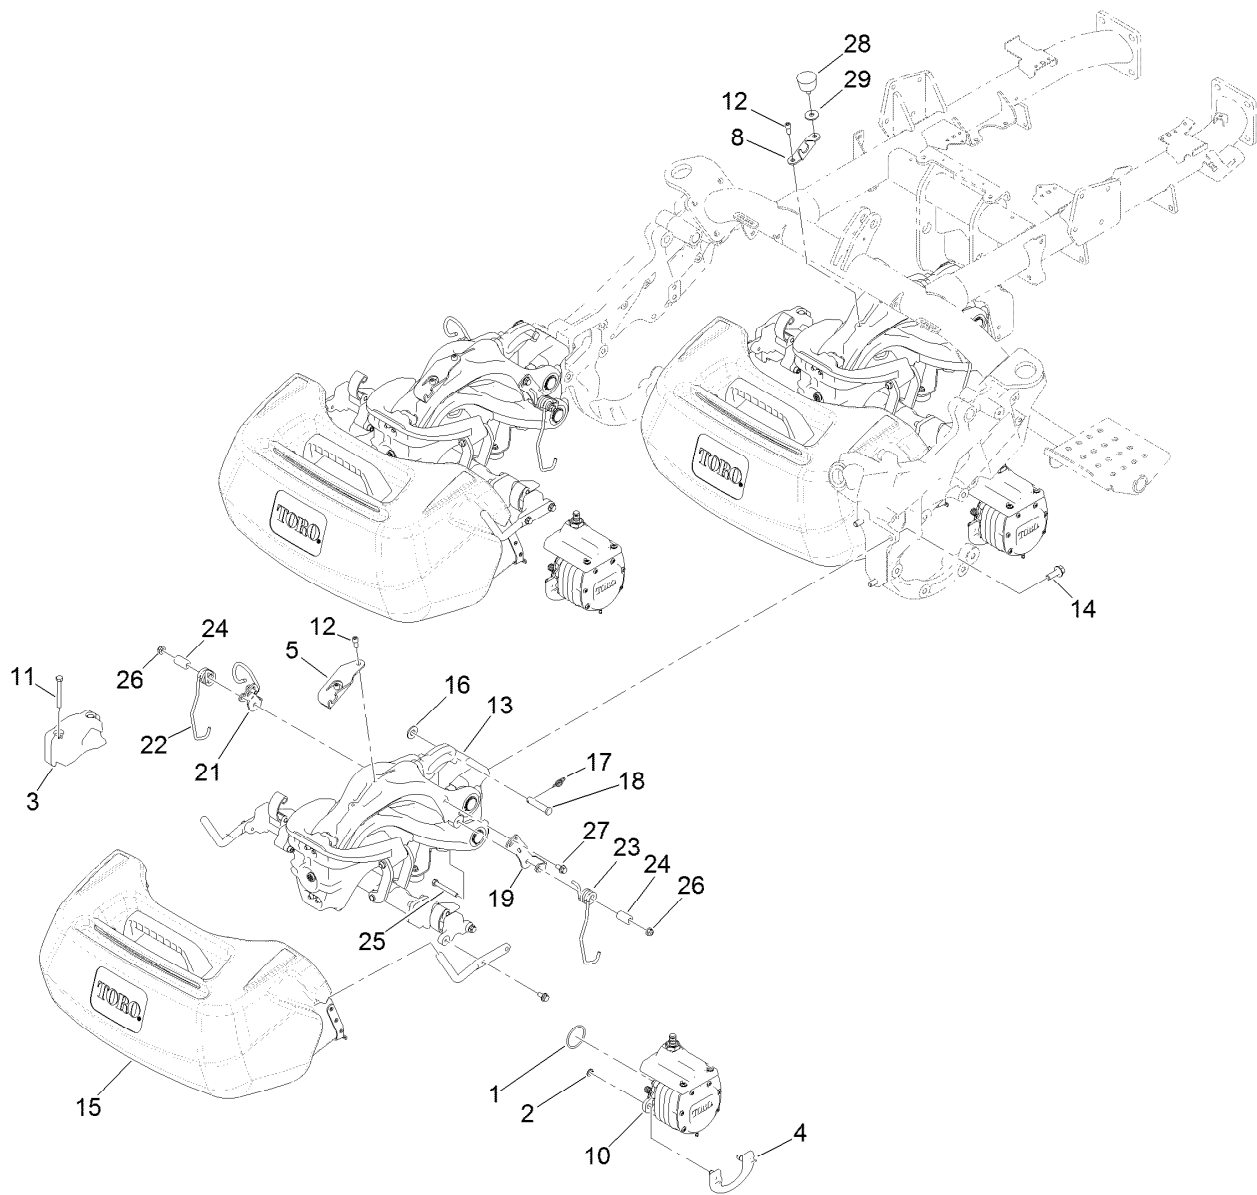 


Suspension, Reel Motor and Basket Assembly

Ref.	Part Number	Qty.	Description
1	115-3298	3	O-Ring
2	133-8926	6	Ring-Retaining (Metric)
3	117-6774-03	3	Weight-Electric
4	115-5389	3	Cam-Mount, Motor
5	119-7487	2	Bracket-Clamp, Hose
8	119-7540	1	Bracket-Hose, Rear
10	138-8905	3	Electric Motor ASM
11	322-13	6	Screw-HH
12	100-2401	5	Screw-HSH
13		3	Suspension ASM ●
14	117-9035	9	Screw-HHF
15	132-9599	3	Basket ASM
16	29-8910	3	Washer

Ref.	Part Number	Qty.	Description
17	112-1491	3	Pin-Cotter
18	92-2739	3	Pin-Clevis
19	133-8998	3	Retainer-Spring, LH
21	133-9025	3	Bracket ASM
22	117-6826	3	Spring-Stabilizer, RH
23	117-6827	3	Spring-Stabilizer, LH
24	117-6825	6	Spacer
25	322-12	6	Screw-HH
26	104-8300	6	Nut-HF, NI
27	114-7728	6	Screw-HF
28	68-3270	1	Bumper-Rubber
29	52-2861	1	Washer

 ● Not serviced separately

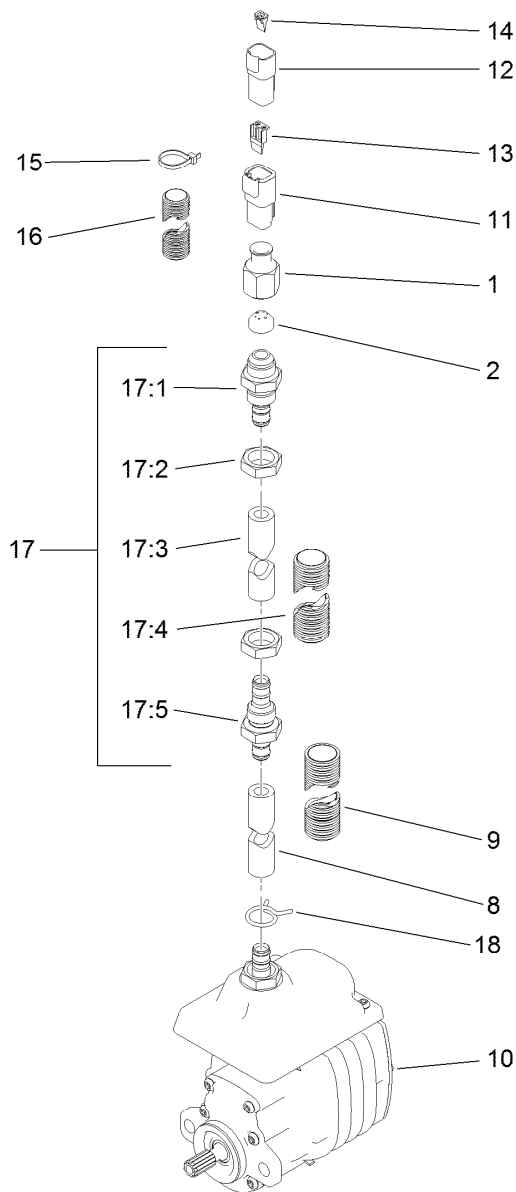


Electric Reel Motor Assembly No. 138-8905

Ref.	Part Number	Qty.	Description
1	119-7481	1	Nut-Ferrule
2	119-7480	1	Ferrule
8	119-7476	1	Hose
9	119-7558	1	Tubing-Convolute, Slit
10		1	Motor-Electric ●
11	32160-245	1	Connector
12	32160-315	1	Connector
13	32180-083	1	Wedge
14	32180-084	1	Wedge

Ref.	Part Number	Qty.	Description
15	3290-378	4	Tie-Cable
16	120-3223	1	Tubing-Convolute, Slit
17	120-4532	1	Hose ASM
17:1	119-7545	1	Fitting-Bulkhead
17:2	119-7457	2	Nut
17:3	119-7524	1	Hose
17:4	119-7559	1	Tubing-Convolute, Slit
17:5	119-7544	1	Fitting-Bulkhead
18	138-8924	1	Clamp-Hose

 
● Not serviced separately

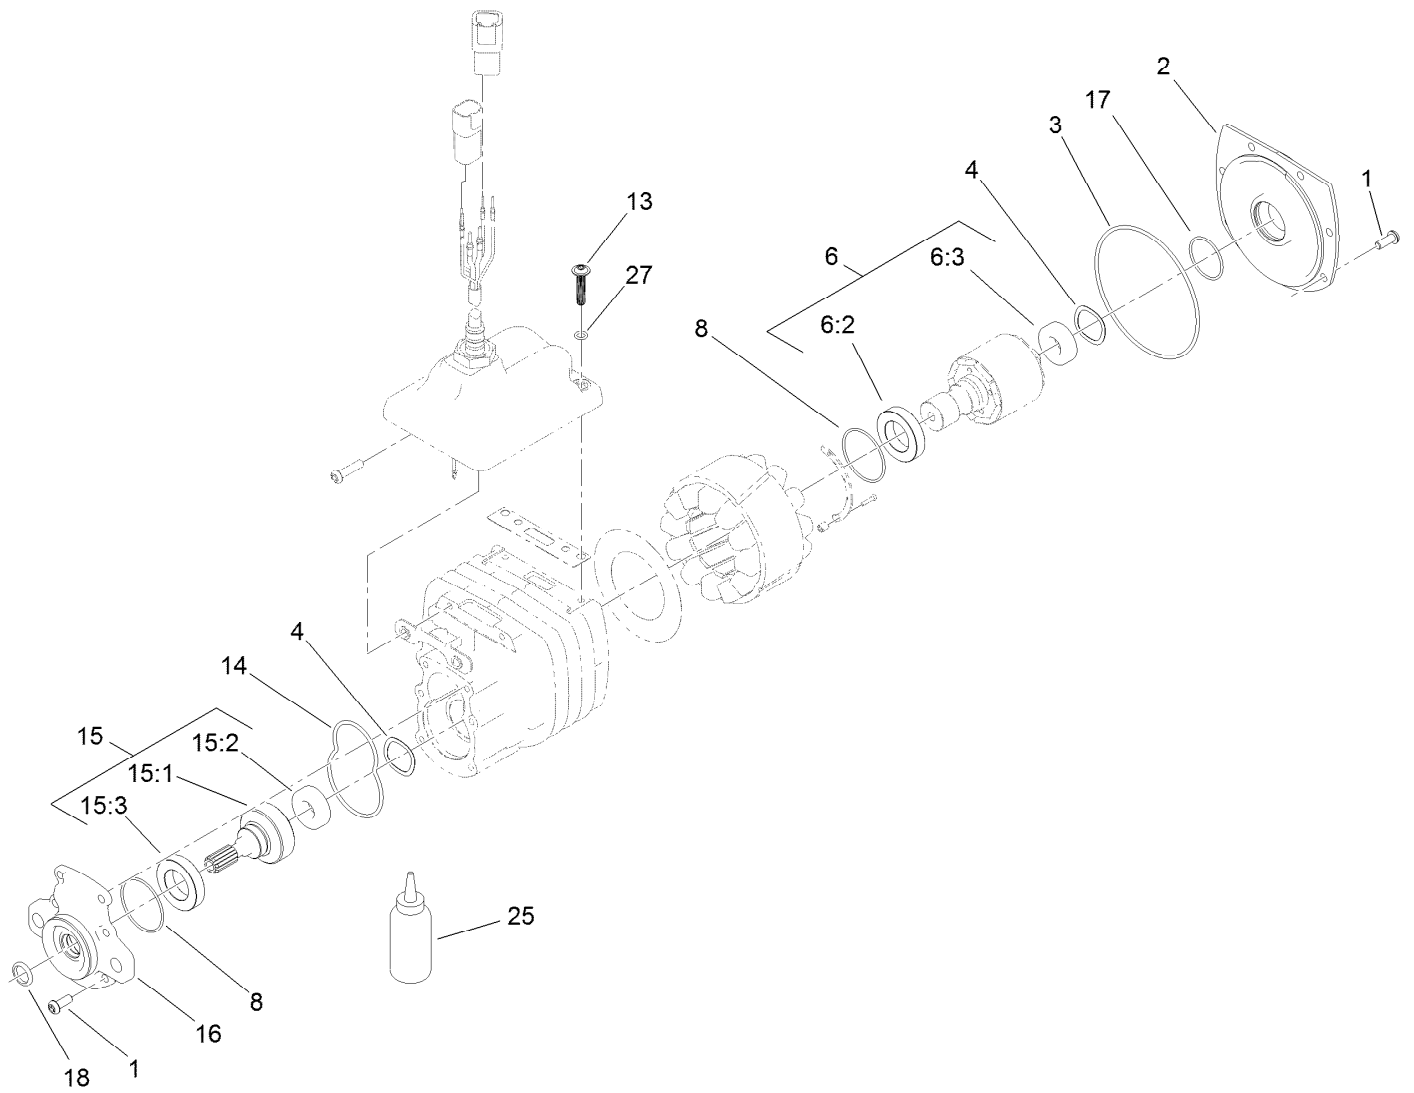

Electric Motor Assembly


Ref.	Part Number	Qty.	Description
1	120-4559	12	Screw-BHCS
2	115-4779	1	Cover-Motor
3	112-9609	1	O-Ring
4	112-5163	2	Washer-Wave
6	119-7450	1	Rotor ASM
6:2	112-5158	1	Bearing-Ball
6:3	120-4557	1	Bearing
8	112-9616	2	O-Ring
13	138-8918	2	Screw-Fbhcs
14	112-9611	1	O-Ring

Ref.	Part Number	Qty.	Description
15	115-4782	1	Output Gear ASM
15:1	112-5153	1	Gear-Output
15:2	120-4557	1	Bearing
15:3	112-5158	1	Bearing-Ball
16	115-4777	1	Cover-Gearbox
17	119-1156	1	O-Ring
18	119-7451	1	Seal-Oil
25	136-8595	1	Grease-Synthetic
27	138-8916	2	O-Ring

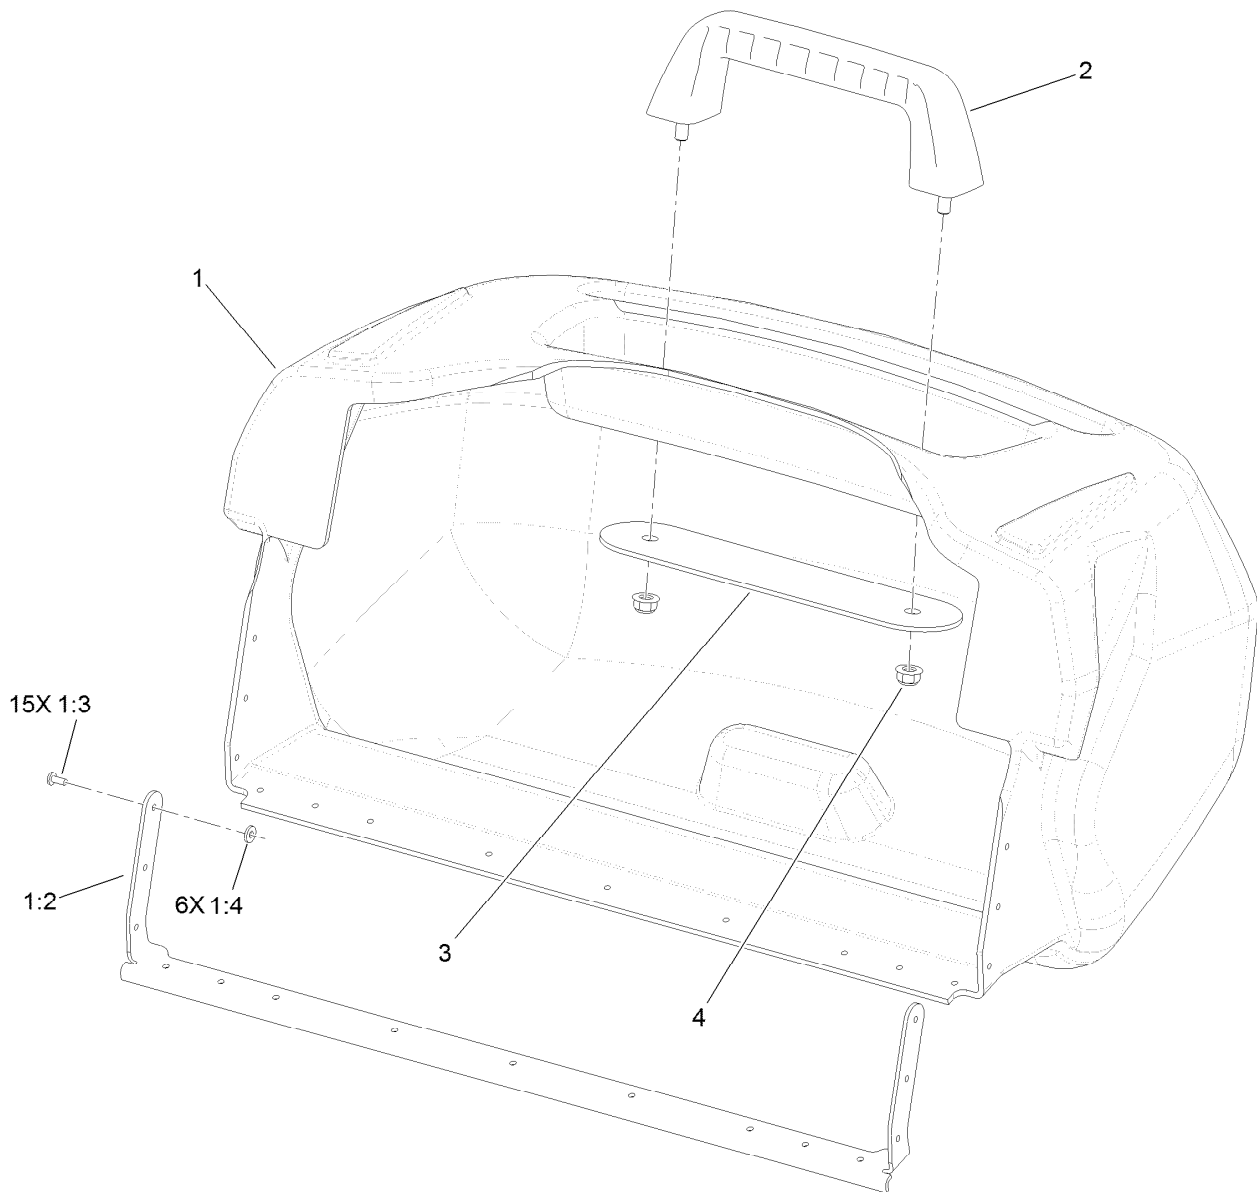 


Basket Assembly No. 132-9599

Ref.	Part Number	Qty.	Description
1	132-9510	1	Basket Assembly
1:2	132-3806	1	Support-Basket
1:3	3269-25	15	Rivet-Pop
1:4	3256-75	6	Washer-Flat
2	117-8088	1	Handle-Grab
3	117-8092-03	1	Plate-Mounting
4	104-8300	2	Nut-HF, NI

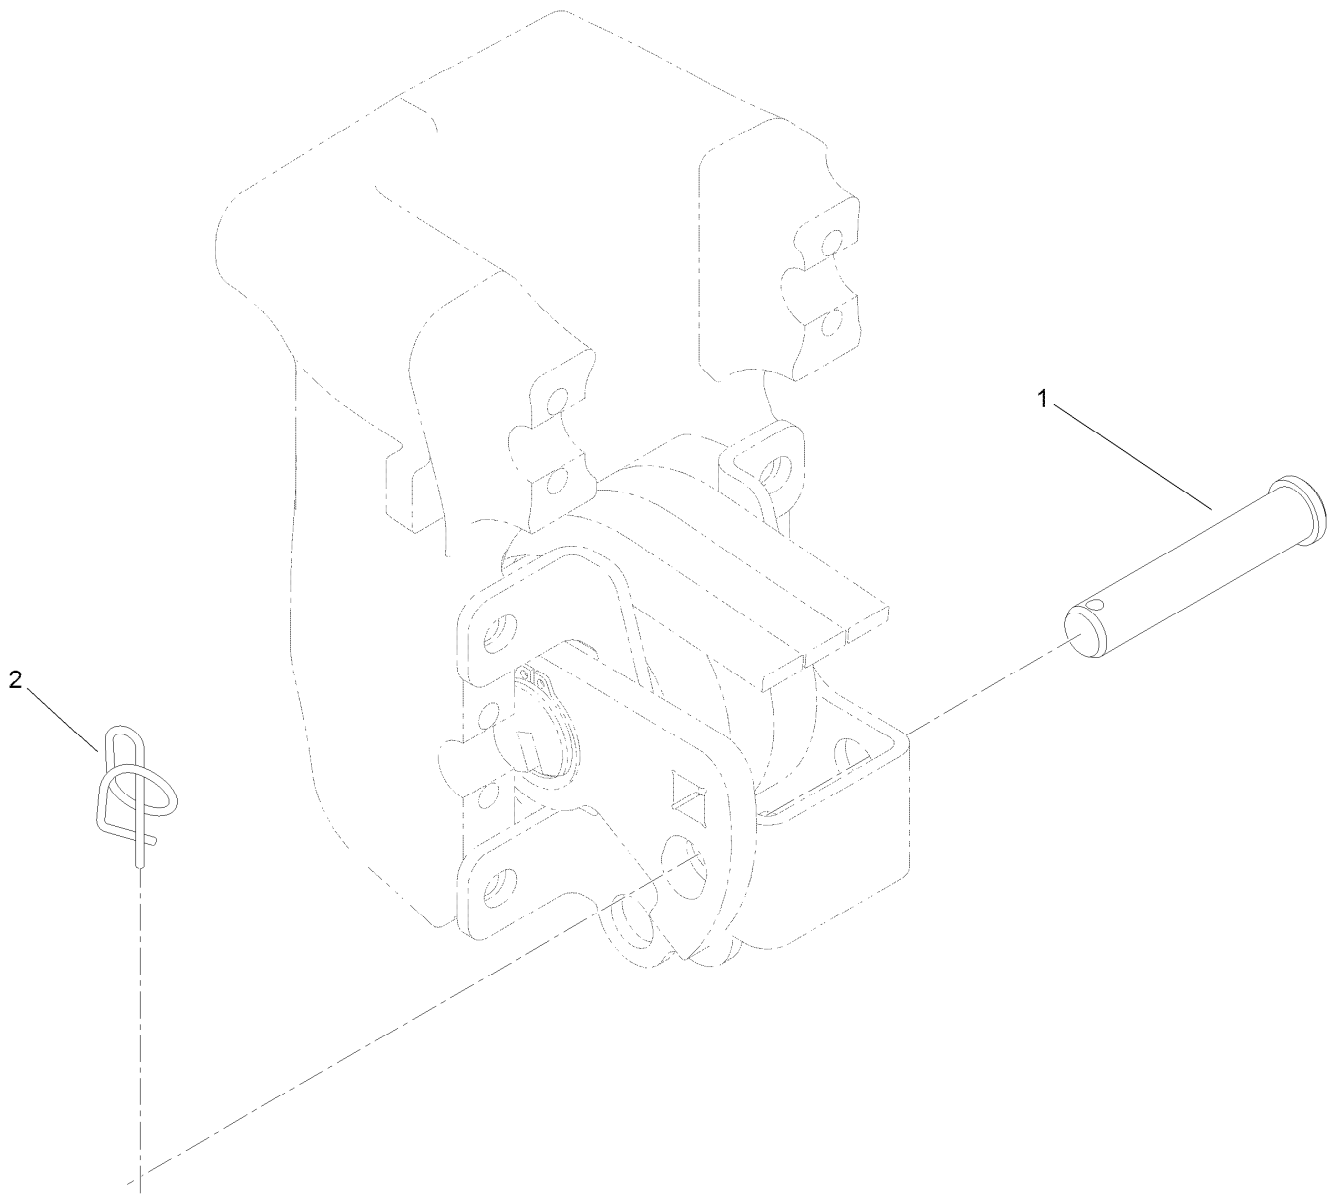 

Suspension Pin Position Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	100-6541	3	Pin-Clevis
2	112-1491	3	Pin-Cotter

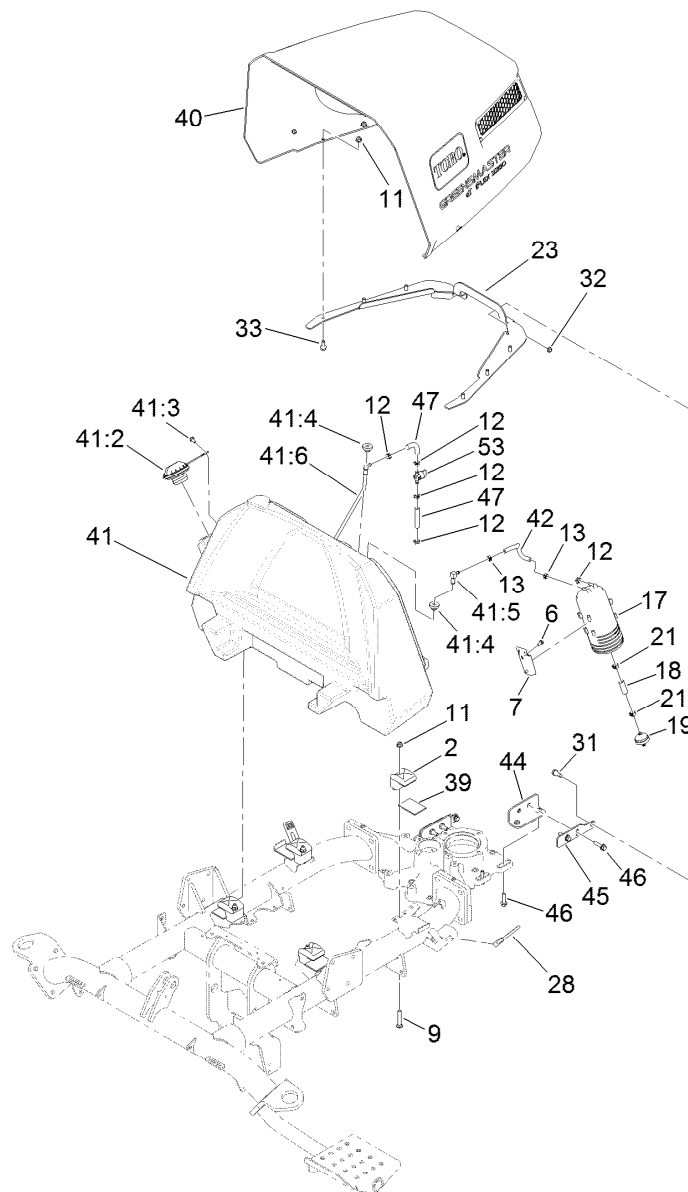 

Fuel Tank and Hood Assembly


Ref.	Part Number	Qty.	Description
2	107-4543	4	Clamp
6	32144-4	2	Screw-HWH
7	114-0292	1	Bracket-Canister, Carbon
9	3230-6	4	Bolt-CARR
11	104-8300	10	Nut-HF, NI
12	2412-98	5	Clamp-Hose
13	2412-146	2	Clamp-Hose
17	117-1221	1	Canister-Carbon, 800Cc
18	106-5317	1	Hose-Fuel
19	115-7854	1	Filter-Fuel, Inline
21	92-2379	2	Clamp-Hose
23	137-2193-03	1	Bracket-Hinge, Shroud
28	131-8402	2	Strap-Down, Hold
31	115-1958	2	Bolt-Shoulder
32	99-6007	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
33	3234-47	6	Screw-HHF
39	136-4259	4	Foam-Strip, Tank
40	139-8316	1	Engine Hood ASM
41	137-8108	1	Fuel Tank ASM
41:2	117-1722	1	Cap-Fuel
41:3	32144-4	1	Screw-HWH
41:4	46-6560	2	Bushing
41:5	116-2288	1	Fitting-Elbow, 90 DEG
41:6	132-9905	1	Pipe-Stand
42	51-3210	1	Hose-Fuel
44	137-2242-03	2	Bracket-Hood
45	137-7914	2	Bracket-Hood
46	119-4036	8	Screw-HHF
47	109-0304	2	Hose-Fuel
53	1-603770	1	Valve-Fuel

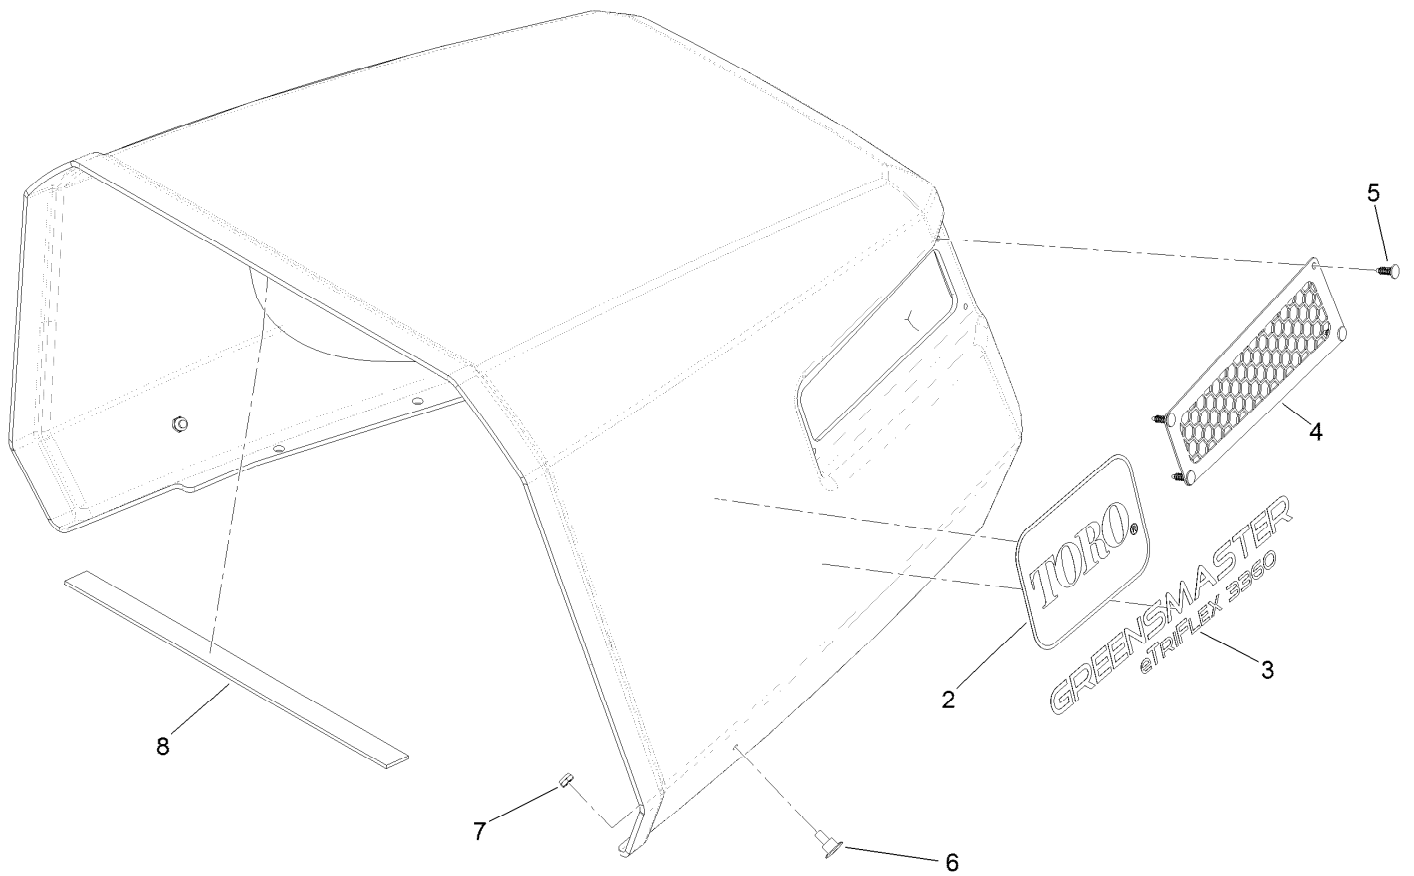 

Hood Assembly No. 139-8316


Ref.	Part Number	Qty.	Description
2	62-5550	2	Decal
3	137-7827	2	Decal
4	137-7911-03	2	Screen
5	120-6737	8	Plug-Plastic
6	125-1122	2	Screw
7	3296-56	2	Nut-Lock, NI
8	137-8082	1	Strip-Foam

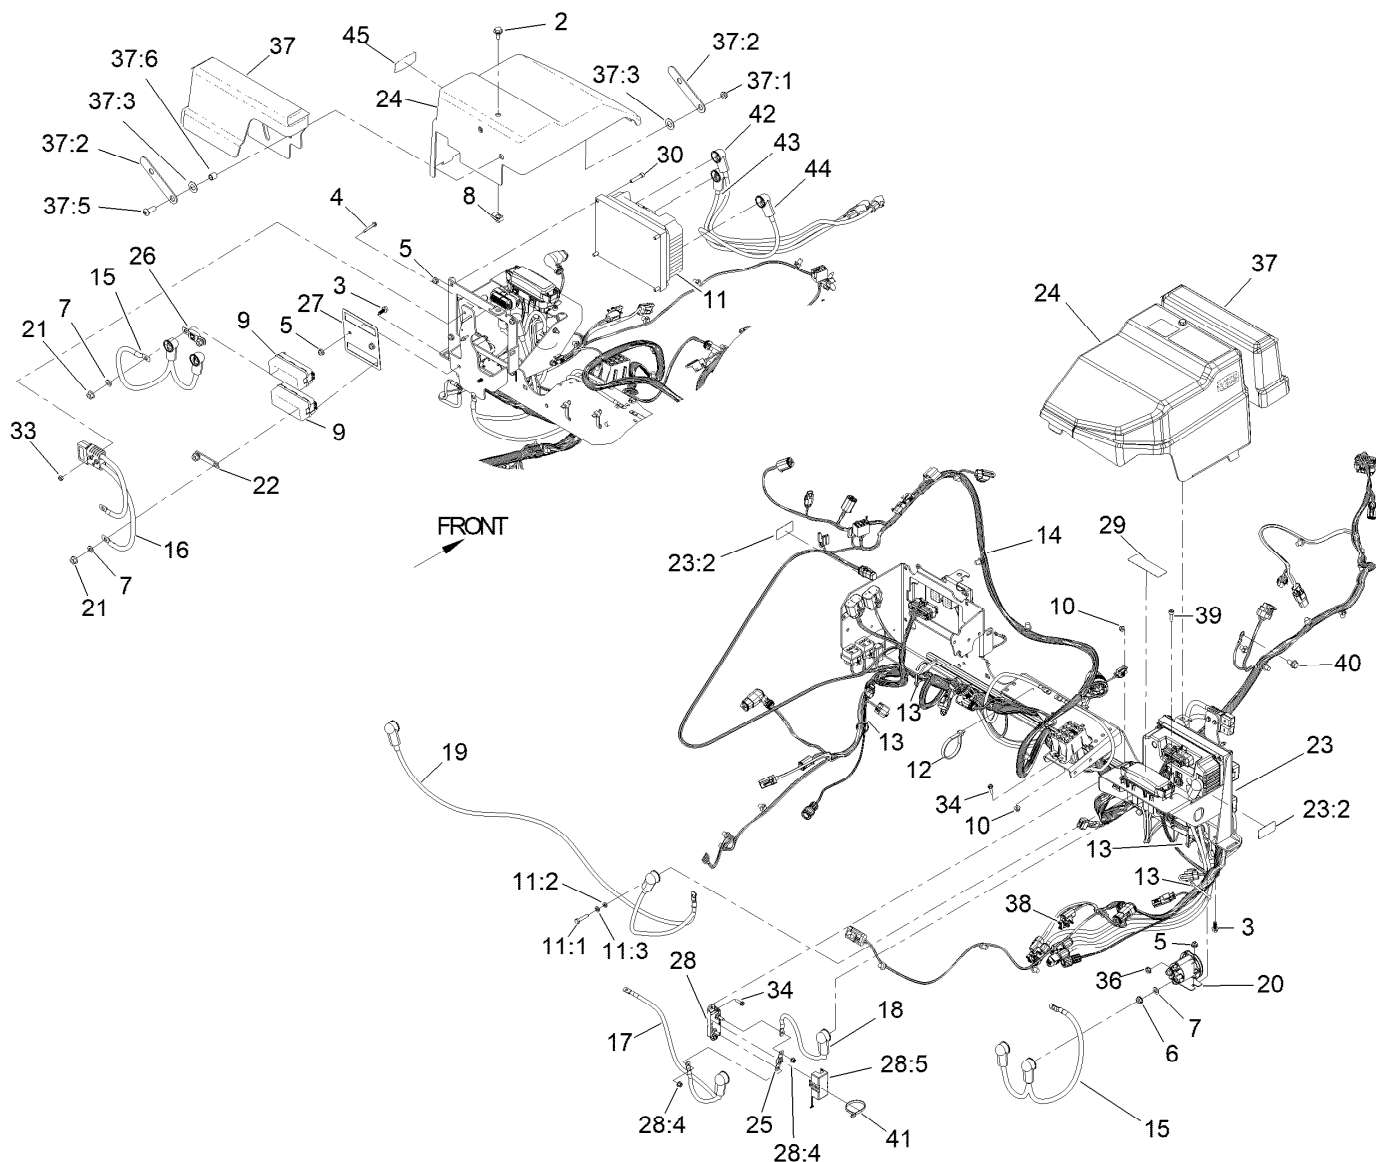 

Electrical Assembly

Ref.	Part Number	Qty.	Description
2	19-1470	1	Screw-Shoulder
3	99-6810	6	Screw-HHF
4	100-4352	2	Screw-HWH
5	104-7201	10	Nut-HF, NI
6	107-0380	4	Nut-HF
7	107-0394	8	Washer-Flat
8	112-3306	1	Nut
9	114-3318	2	Holder-Fuse, Mega
10	120-4578	6	Nut-HF
11	120-4780	1	Controller-Motor, Traction
11:1	33113-030	5	Screw-HH
11:2	33093-00	5	Washer-Flat
11:3	43-5930	5	Washer-Lock, Spring
12	3334-945	3	Tie-Cable
13	3290-379	4	Tie-Cable
14	122-1921	1	Harness-Wire, E-Tri-Flex
15	122-1695	1	Cable-Battery, Positive
16	122-1698	1	Cable-Battery, Pos And Neg
17	122-1108	1	Cable-Battery, Positive
18	122-1112	1	Cable-Battery, Positive
19	122-1115	1	Cable-Battery, Negative


Ref.	Part Number	Qty.	Description
20	122-1274	2	Contactor-DC, 48V
21	127-2371	4	Nut-HF
22	132-9815	1	Strap-Jumper
23	137-8196	1	Bracket-Components
23:2	137-8127	2	Decal-No Spray
24	147-3084	1	Cover-LH
25	137-7707	1	Fuse-60 Amp
26	137-7722	1	Fuse-150 Amp
27	137-7835	1	Bracket-Fuses
28	137-7861	1	Fuse Block ASM
28:4	120-4580	2	Nut-HF
28:5	137-7863	1	Cover-Fuse
29	137-8037	1	Decal-Fuses, Cutting Unit
30	3274-51	4	Screw-HSH
33	3296-2	2	Nut-Lock, NI
34	32105-13	6	Screw-HWH
36	32149-8	4	Nut-Keps
37	145-4587	1	Charge Port Cover Kit
37:1	121-4600	2	Nut-Hex
37:2	145-4563	2	Bar-Pivot
37:3	110-4068	4	Washer-Plastic

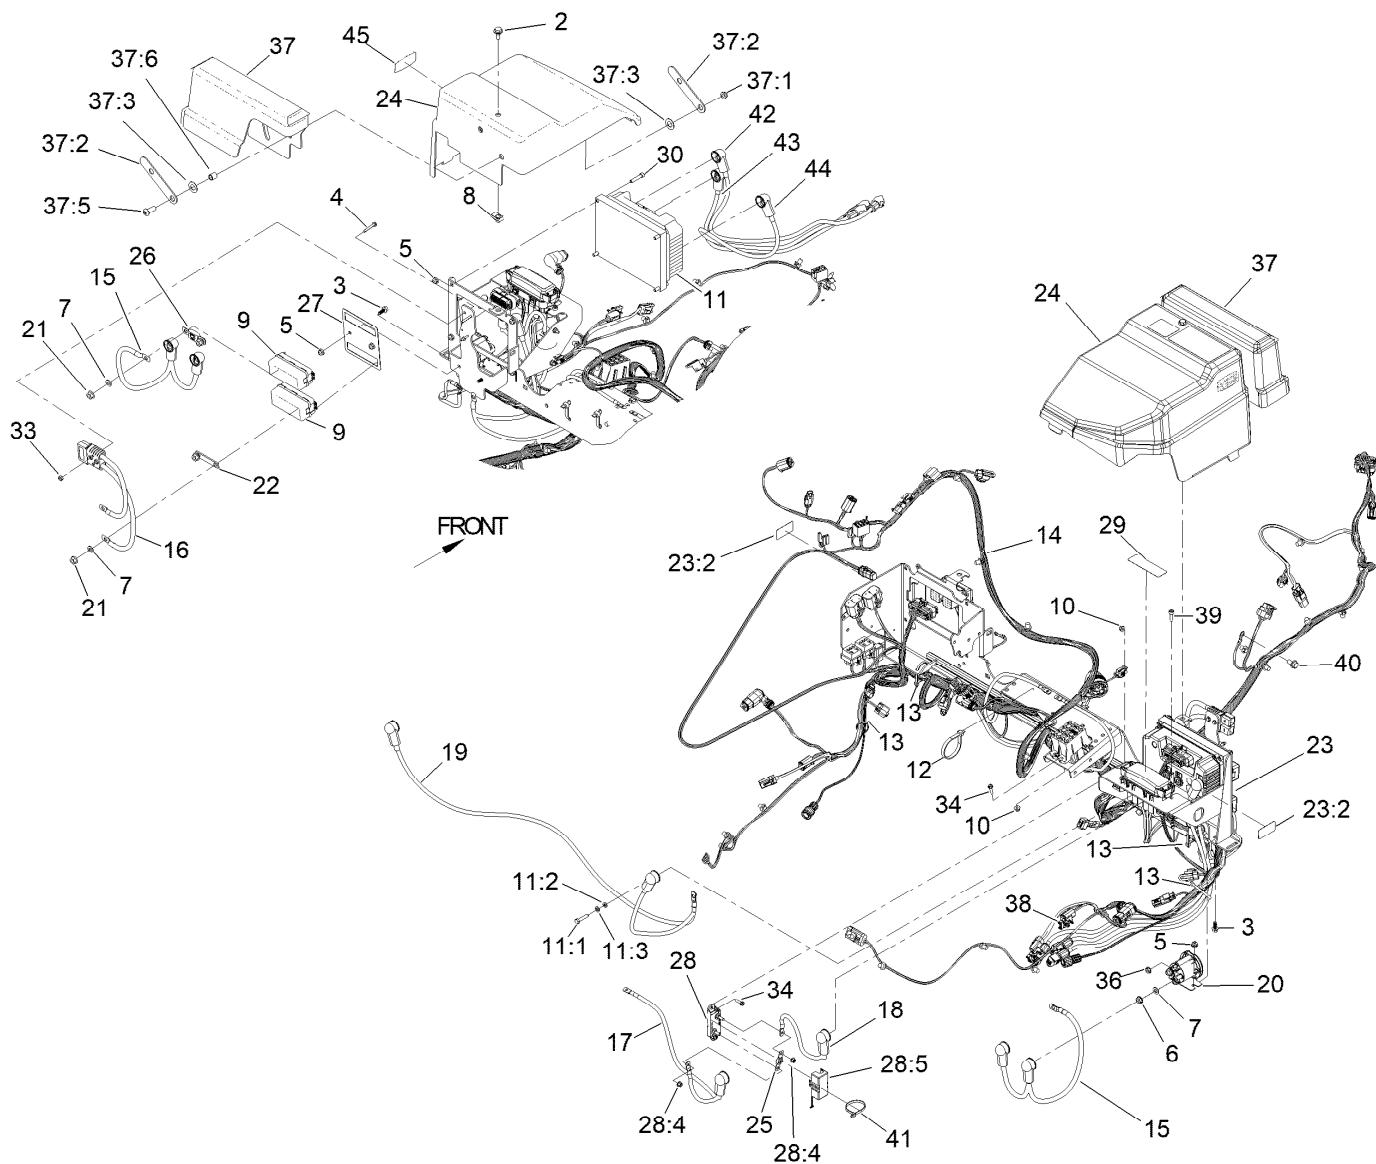 

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
37:5	3274-94	2	Screw-HSBH
37:6	103-1166	2	Spacer-Tube, Pump Link
38	32180-103	2	Clip-Connector
39	52-6290	2	Screw-HSH
40	33104-016	1	Screw-HHF


Ref.	Part Number	Qty.	Description
41	3290-378	1	Tie-Cable
42	122-1611	1	Cable-Battery, Positive
43	122-1612	1	Cable-Battery, Positive
44	122-1613	1	Cable-Battery, Positive
45	119-7580	1	Decal-Smart, Energy

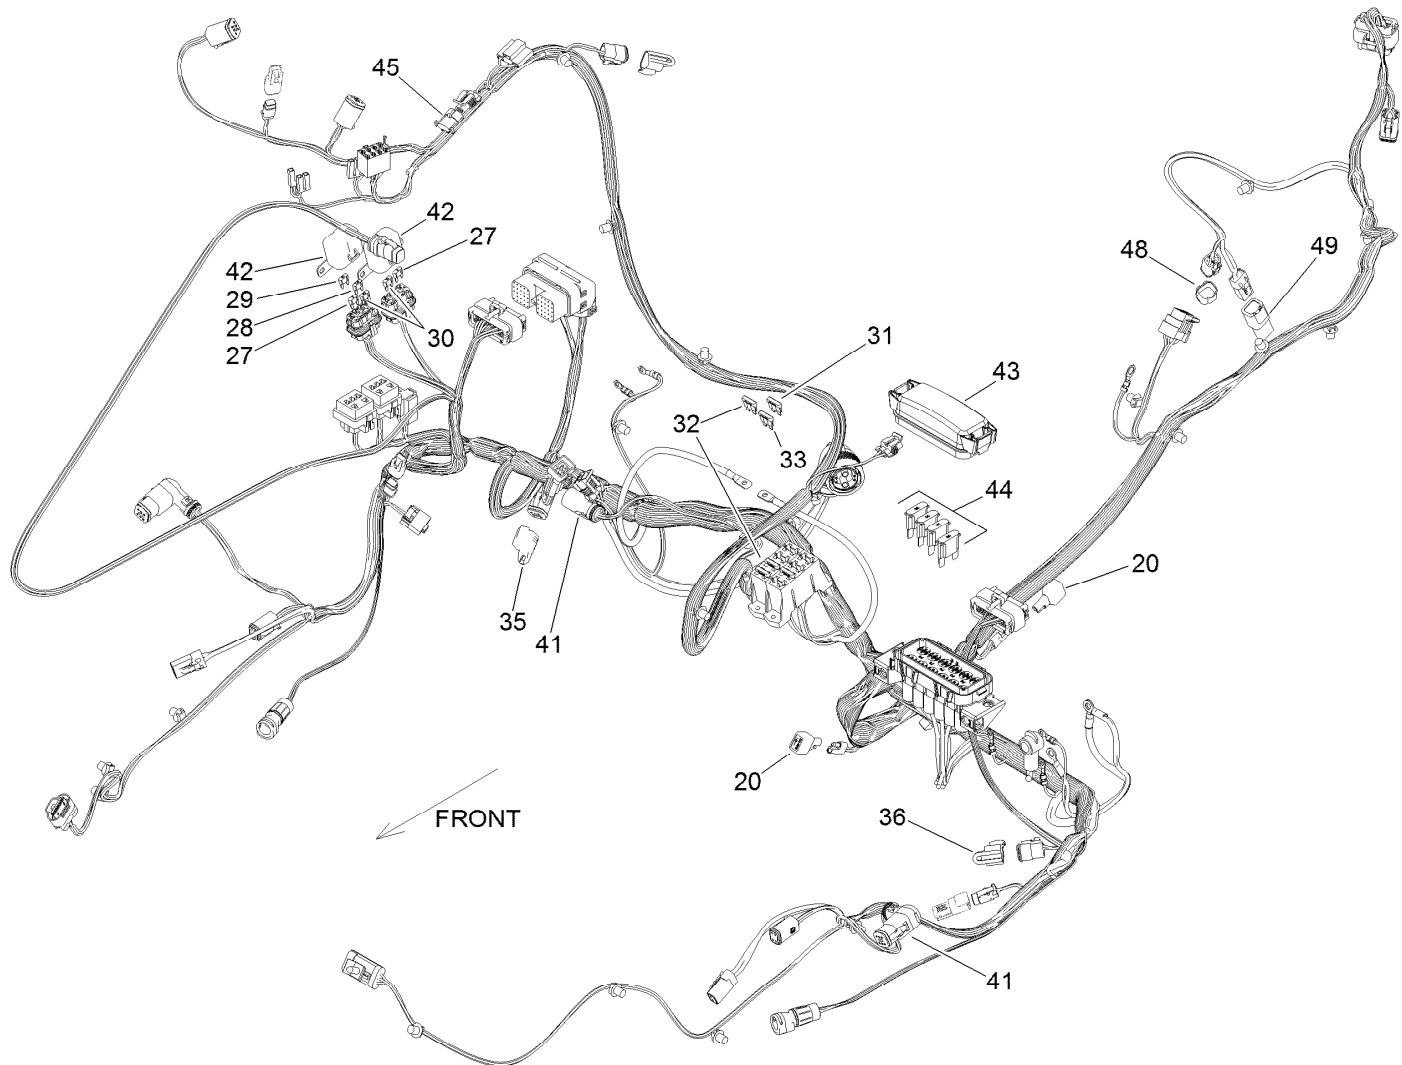 

Wire Harness Assembly No. 122-1921

Ref.	Part Number	Qty.	Description
20	100-4918	2	Diode
27	121-8861	2	Fuse-Mini Blade, 2 Amp
28	121-8865	1	Fuse-Mini Blade, 7.5 Amp
29	121-8866	1	Fuse-Mini Blade, 10 Amp
30	121-8867	2	Fuse-Mini Blade, 15 Amp
31	117-4722	1	Fuse-Blade, 5A
32	117-4724	4	Fuse-Blade, 10A
33	117-4728	1	Fuse-Blade, 30A
35	32180-156	1	Cap-Plug, 6 Way


Ref.	Part Number	Qty.	Description
36	32180-089	2	Cap-Plug, 3 Way
41	32180-090	3	Backshell-Deutsch, Dt06-06S 90 DEG
42	32180-179	2	Cover-Bussman
43	32180-146	1	Cover-Fuse
44	122-0255	3	Fuse-Maxi, 35 Amp-58V
45	32180-056	1	Cap
48	32180-260	1	Cap-Deutsch, Dust, 4 Way
49	32160-245	1	Connector

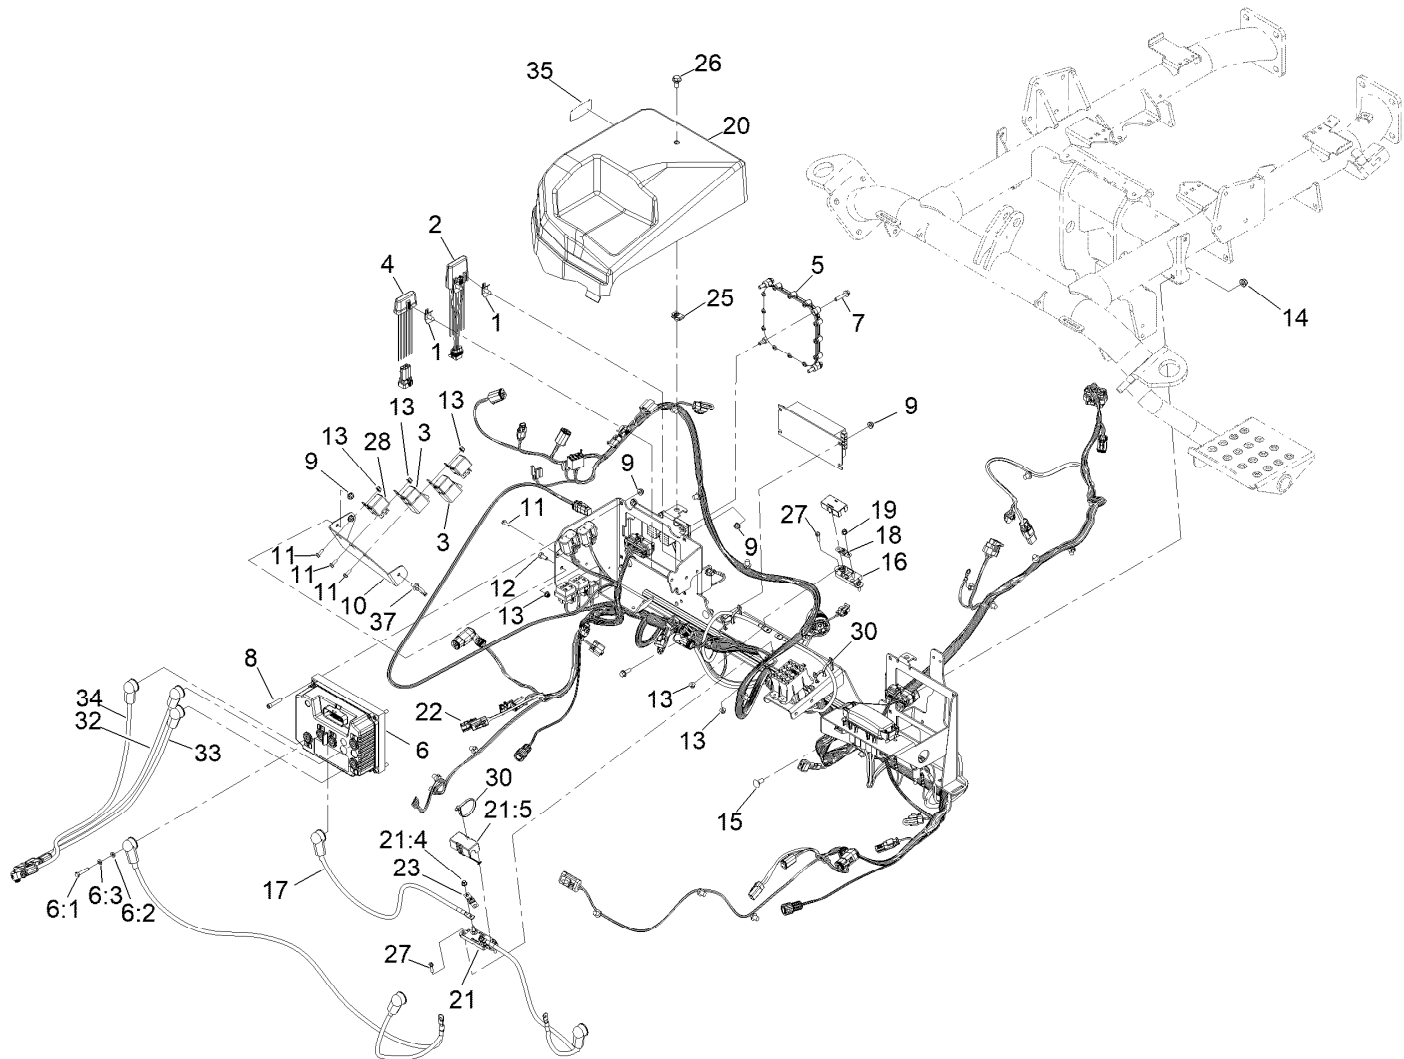 

Controller Assembly

Ref.	Part Number	Qty.	Description
1	32180-011	3	Clip-Connector
2	119-4330	1	Isolated Can Module ASM
3	99-7430	2	Relay-Mini
4	112-9630	1	Module-Reel, I.D.
5	127-2770	1	Controller
6	120-4780	1	Controller-Motor, Traction
6:1	33113-030	5	Screw-HH
6:2	33093-00	5	Washer-Flat
6:3	43-5930	5	Washer-Lock, Spring
7	127-8639	4	Screw-HHF
8	3274-51	4	Screw-HSH
9	104-7201	10	Nut-HF, NI
10	147-3088-0P	1	Bracket-Component
11	32105-23	7	Screw
12	321-3	2	Screw-HH
13	120-4578	11	Nut-HF
14	104-8300	4	Nut-HF, NI
15	3230-1	4	Bolt-CARR
16	132-9796	1	Fuse-Holder, Midi Fuse


Ref.	Part Number	Qty.	Description
17	122-1110	1	Cable-Battery, Positive
18	137-7708	1	Fuse-100 Amp
19	120-4580	2	Nut-HF
20	133-0095	1	Cover-RH
21	137-7861	1	Fuse Block ASM
21:4	120-4580	2	Nut-HF
21:5	137-7863	1	Cover-Fuse
22	32180-103	2	Clip-Connector
23	137-7707	1	Fuse-60 Amp
25	112-3306	1	Nut
26	19-1470	1	Screw-Shoulder
27	32105-13	4	Screw-HWH
28	122-2400	1	Relay, 12V Coil, 50A At 48V
30	3290-378	5	Tie-Cable
32	122-1614	1	Cable-Battery, Positive ASM
33	122-1615	1	Cable-Battery, Positive ASM
34	122-1616	1	Cable-Battery, Positive ASM
35	119-7580	1	Decal-Smart, Energy
37	32180-030	1	Clip-Tie

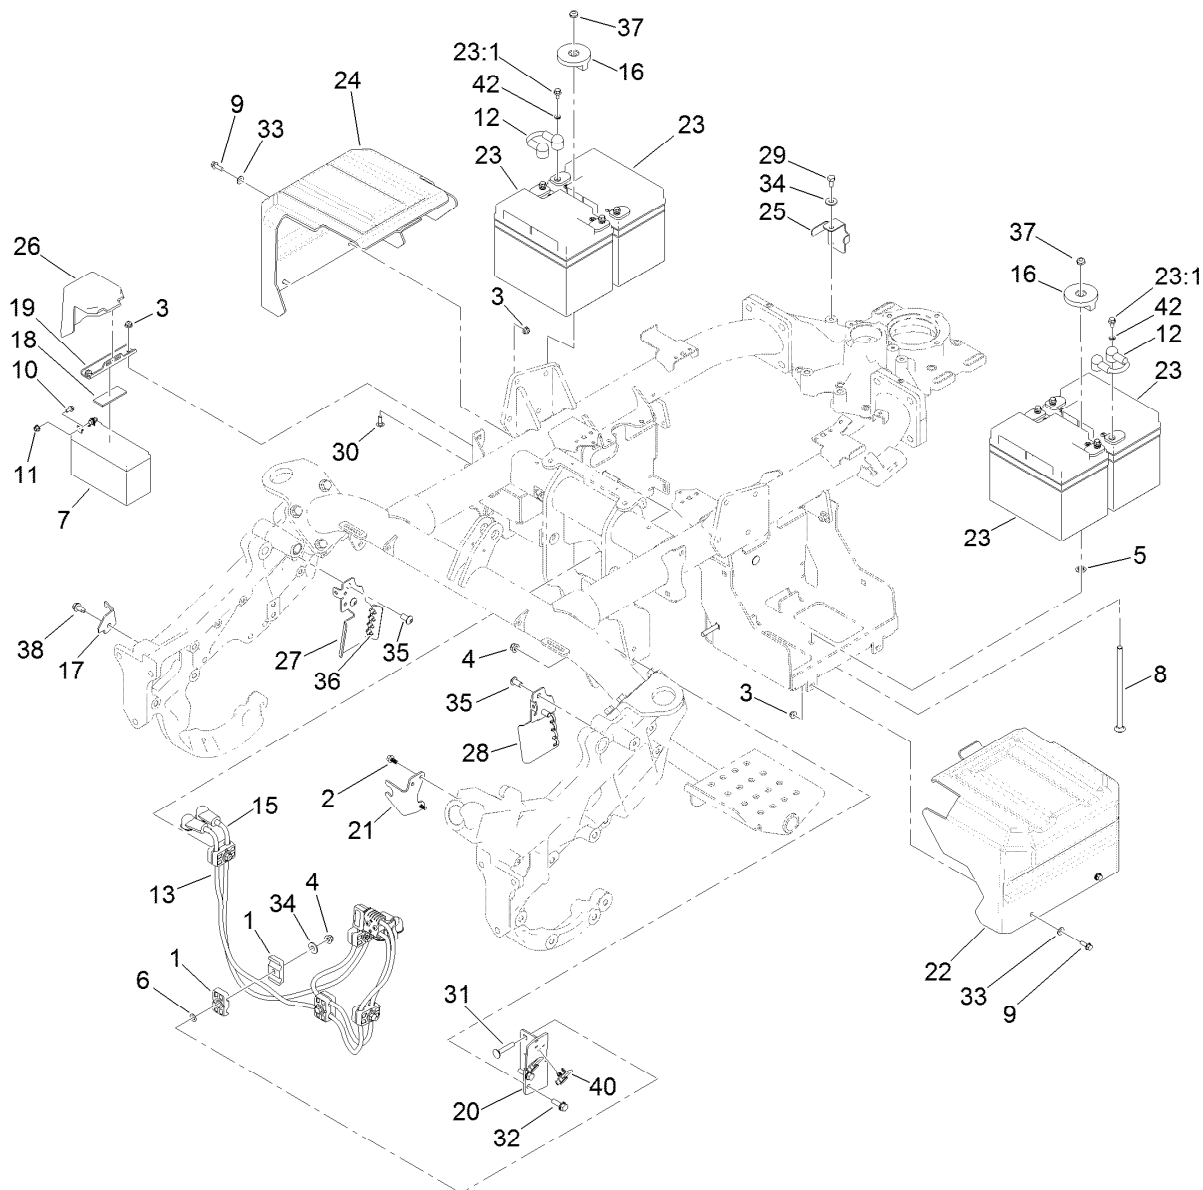 

Battery Assembly

Ref.	Part Number	Qty.	Description
1	56-7976	10	Clamp-Tube
2	99-6810	2	Screw-HHF
3	104-7201	6	Nut-HF, NI
4	104-8300	7	Nut-HF, NI
5	107-3154	2	Nut-Push
6	109-5667	5	Nut-Push
7	112-9621	1	Battery-Nonspillable
8	117-1399	2	Bolt-Carriage
9	32105-15	4	Screw-HWH
10	120-4579	2	Screw-HHF
11	120-4580	2	Nut-HF
12	122-1105	2	Positive Battery Cable ASM
13	122-1113	1	Positive And Negative Battery Cable ASM
15	122-1381	1	Positive Battery Cable ASM
16	127-2393	2	Hold Down-Battery
17	139-8409	1	Brkt-Hose
18	133-0081	1	Strip-Foam
19	133-0082	1	Channel-Clamp, Battery
20	133-0083-03	1	Bracket-Hose, Rear
21	136-2697	1	Bracket-Hose


Ref.	Part Number	Qty.	Description
22	137-7711	1	Cover-Battery
23	137-7734	4	Battery-12V (33 Ah)
23:1	33113-012	2	Screw-HH
24	137-7849	1	Cover-Battery, RH
25	137-7859	1	Bracket-Harness
26	137-7867	1	Cover-Battery
27	137-7905-01	1	Bracket-Harness, RH
28	137-7906-01	1	Bracket-Harness, LH
29	3210-2	1	Screw-HH
30	3229-1	2	Screw-CARR
31	3230-5	5	Bolt-CARR
32	3234-29	2	Screw-HHF
33	3256-1	4	Washer-Flat
34	3256-3	6	Washer-Flat
35	3274-80	4	Screw-HH
36	3290-378	8	Tie-Cable
37	3296-59	2	Nut-Lock, NI
38	32104-32	1	Screw-HWH
40	32180-103	2	Clip-Connector
42	43-5930	8	Washer-Lock, Spring

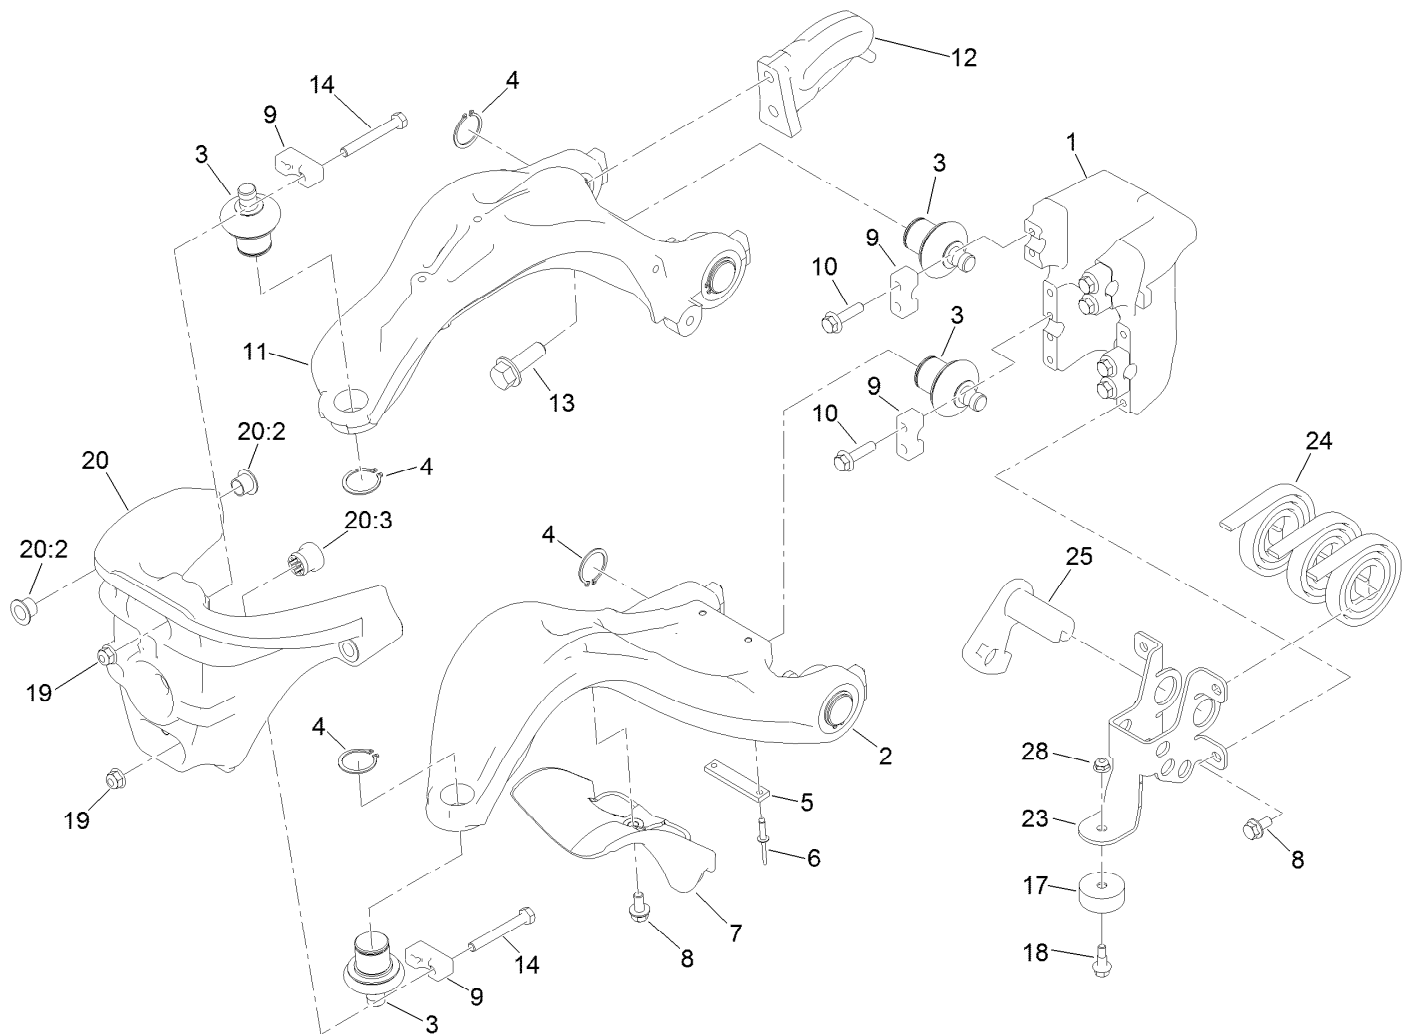 

Suspension A-Arm Assembly

Ref.	Part Number	Qty.	Description
1	117-9480	1	Mount-Pivot, A-Arms
2	117-6656	1	A-Arm, Lower
3	132-6959	6	Balljoint
4	120-3225	6	Ring-Retaining, EXT
5	117-6674	1	Plate-Striker
6	3269-28	2	Rivet-Pop
7	117-6755	1	Stop-Steering
8	114-7728	5	Screw-HF
9	112-5647	6	Clamp
10	132-3837	8	Screw-HHF
11	139-6452	1	A-Arm, Upper
12	139-8407	1	Plate-Lift

Ref.	Part Number	Qty.	Description
13	100-6116	2	Screw-HHF
14	132-3838	4	Screw-HH
17	133-0308	1	Bumper-Rubber
18	133-0315	1	Screw-Shoulder, HF
19	104-8300	4	Nut-HF, NI
20	120-3216	1	Steering Head ASM
20:2	125-5239	4	Bushing-Flange
20:3	131-1836	1	Grommet
23	140-5232	1	C-Balance Mount
24	114-9306	3	Spring
25	140-5234	1	Tensioner
28	104-7201	1	Nut-HF, NI

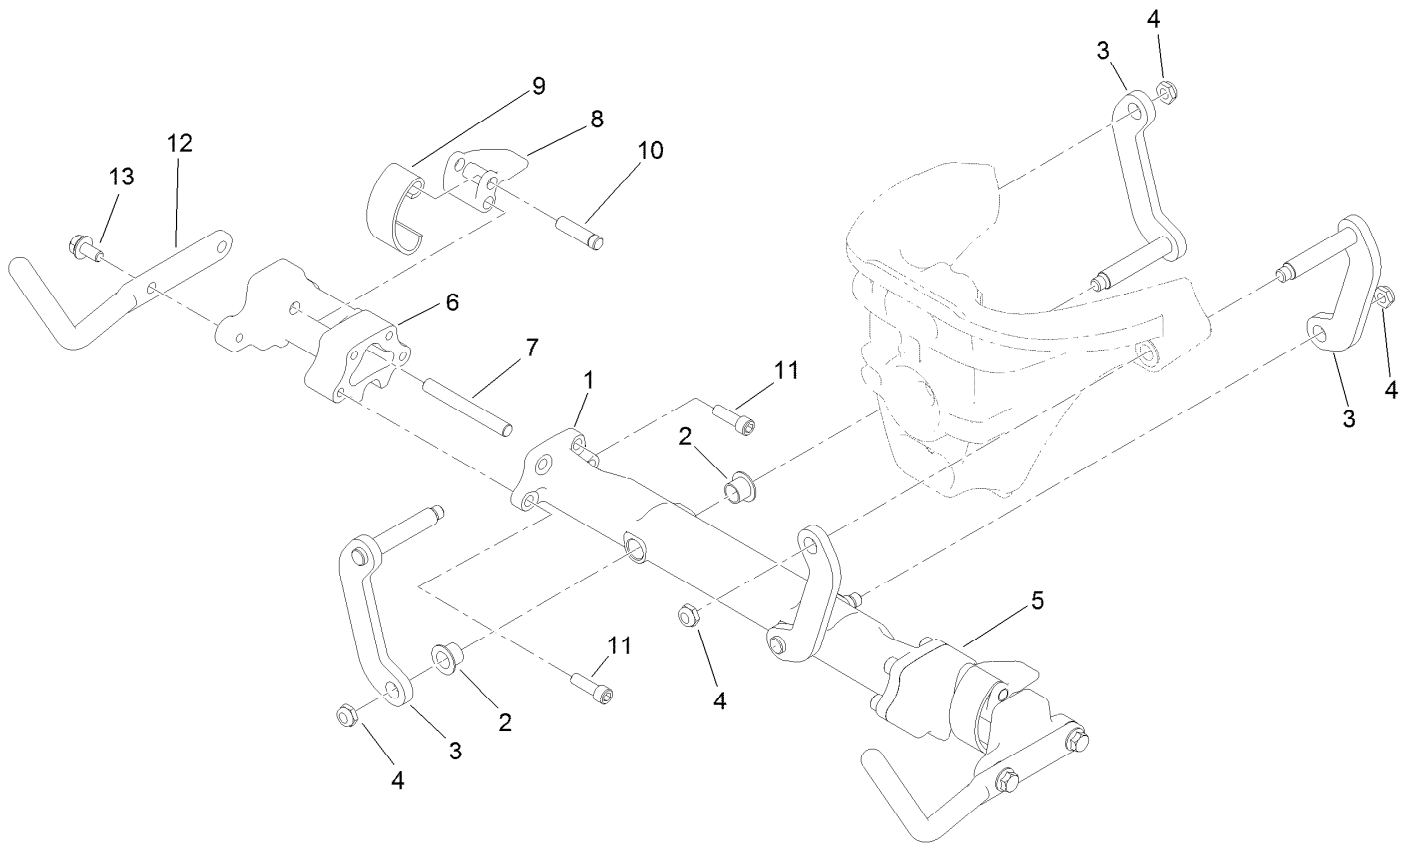 

Suspension Crossarm Assembly

Ref.	Part Number	Qty.	Description
1	120-3217	1	Crossarm
2	125-5239	4	Bushing-Flange
3	117-6654	4	Link
4	3296-59	4	Nut-Lock, NI
5	117-9482	1	Mount-Cross Arm, LH
6	117-9492	1	Mount-Cross Arm, RH
7	114-8051	2	Pin-Pivot
8	114-8047	2	Lever
9	114-8048	2	Spring
10	114-8049	2	Pin-Pivot
11	120-3227	8	Screw-HSH
12	120-2784-01	2	Horn-Basket
13	114-7728	4	Screw-HF

Attachments and Accessories

For 04580 Greensmaster eTriFlex 3360 Traction Unit

Product Name	Model/Part
Turf Evaluator	04399
Light Kit.....	04500
3WD Kit, Electric Triflex	04503
Standard Greensmower Seat Kit	04508
8-Blade DPA Reel Mower	04651
11-Blade DPA Reel Mower	04653
14-Blade DPA Reel Mower	04655
Anti-Bobbing Kit.....	04716
Dethatching Unit.....	04720
Tri-Roller	04722
Spiker	04723
Premium Seat.....	04729
Wireless Hourmeter	115-4754
Oil Filter	119-5852
Premium Armrest Kit.....	119-7105
Weight Kit	119-7129
Air Filter Element	120-7447
Filter-Air, Paper.....	120-7448
Armrest Kit.....	121-3660
Fuel Filter.....	121-4570
Rear Light Kit.....	137-7945
Spark Arrestor, 1.25 I.D.	137-8098
Bag Kit.....	137-8130
Bimini Shade Kit	138-8579
Kit-Fuses	139-8482
Tire - 20 X 10.00-8, 4ply.....	144-3665
400 Hour MVP Kit	44971
Spark Plug	92-2153
Height-of-Cut Bar.....	94-9010

Notes:

Notes:



Count on it.