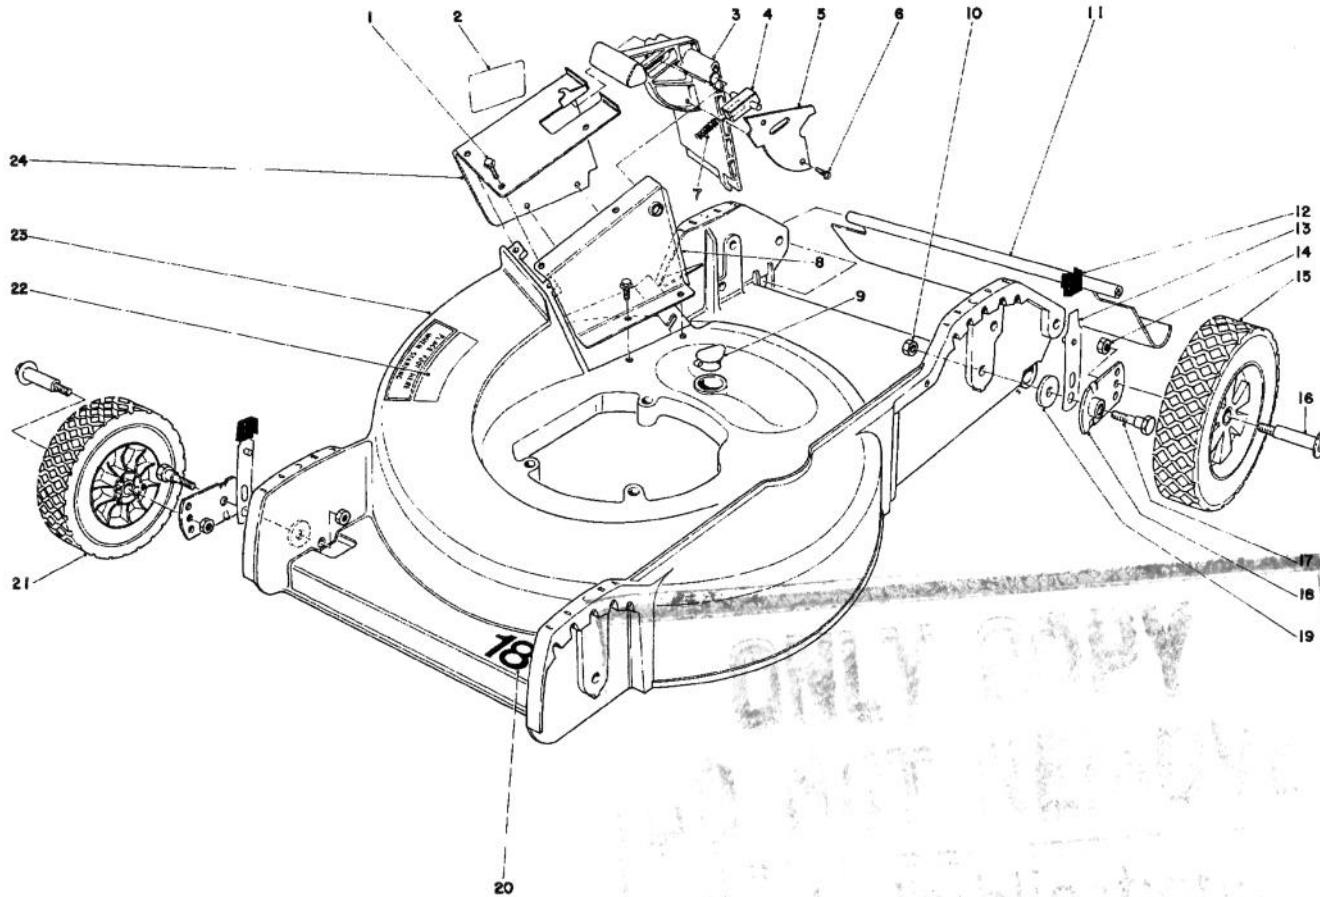


TORO


MODEL NO. 20762-0000001 & UP

**PARTS
CATALOG****18" H.P. REAR BAGGER****HOUSING ASSEMBLY**

Ref. No.	Part No.	Description	No. Used
1	12-3270	Screw Special	7
2	40-2980	Decal – Danger	1
3	33-0410	Door Mulching	1
4	33-0470	Door Latch	1
5	33-0440	Door Cover	1
6	32144-32	Screw	2
7	33-0450	Latch Spring	1
8	33-0430	Inner Tunnel	1
9	6-4500	Washout Plug	1
10	32146-5	Nut	4
11	33-2380	Rear Safety Shield	1
12	25-7740	Arm Knob	4
13	25-7890	Spring Arm	4

*Not illustrated


Ref. No.	Part No.	Description	No. Used
14	32146-6	Nut	4
15	27-6200	Wheel & Tire Assembly	2
16	27-6230	Wheel Bolt	4
17	25-3440	Pivot Screw	4
18	33-0400	Pivot Arm	4
19	33-0390	Pivot Washer	4
20	33-0500	Decal 18"	1
21	27-6210	Wheel & Tire Assembly	2
22	40-2720	Decal – Place Foot Here	1
23	8-3539	Housing	1
24	33-0420	Tunnel Outer	1
*	8-7999	Loose Parts	1

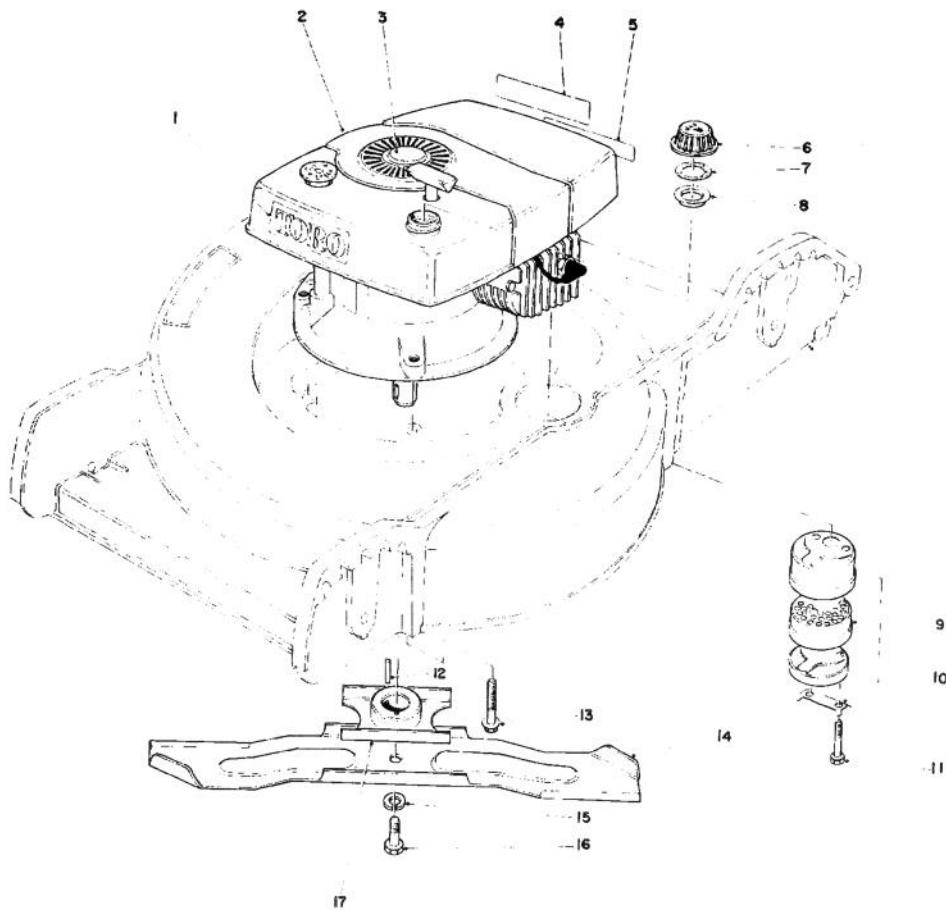

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	40-5470	Decal - Toro	1
2	221-657	Engine	1
3	38-1482	Plug Button	1
4	40-2950	Decal - Maintenance	1
5	40-2960	Decal - Primer Bulb	1
6	27-7872	Gas Cap (Incl. Ref. #7 & 8)	1
7	2210-144	Gasket	1
8	2210-143	Baffle	1
9	5-4769	Muffer Assy. (Incl. Ref. #10 & 11)	1


Ref. No.	Part No.	Description	No. Used
10	3-5094	Locking Clip	1
11	321-20	Capscrew	2
12	27-8590	Square Key	1
13	11-0581	Screw	3
14	33-0490	Blade	1
15	3253-22	Lockwasher	1
16	3-5246	Screw Special	1
17	20-2750	Blade Retainer	1

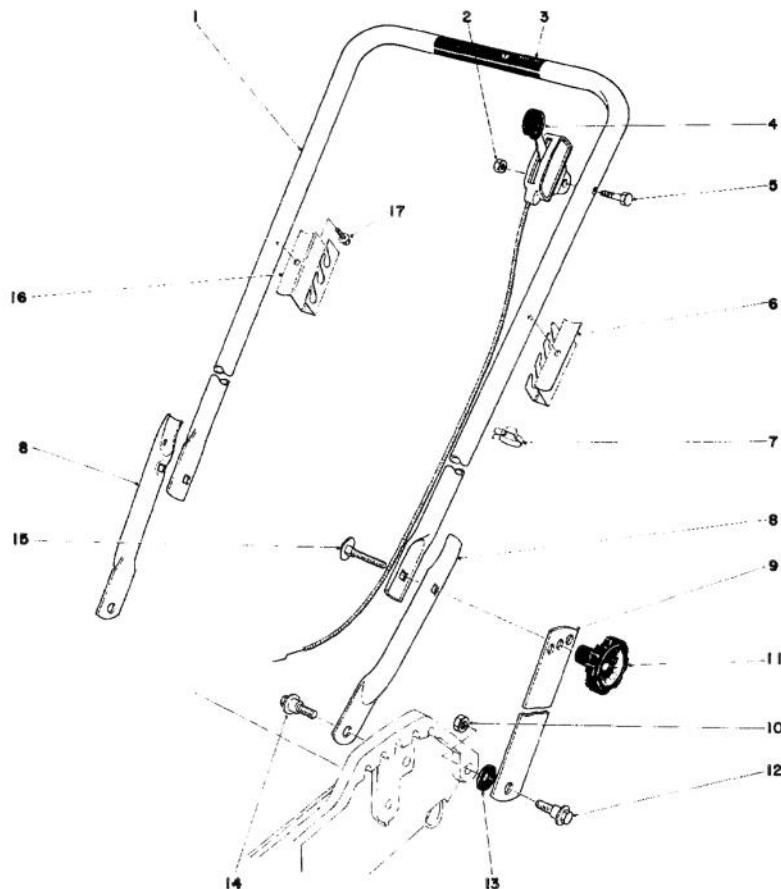

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33-0510	Upper Handle	1
2	32146-17	Locknut	1
3	40-2940	Decal Danger	1
4	40-5521	Throttle Control	1
5	321-10	Capscrew	1
6	36-0730	Bag Support L.H.	1
7	218-465	Clip	1
8	33-0520	Lower Handle	2
9	33-0530	Handle Latch	2


Ref. No.	Part No.	Description	No. Used
10	32146-5	Nut	2
11	19-4050	Handle Knob	2
12	27-7210	Shoulder Screw	2
13	3-3287	Handle Latch Spacer	2
14	5-2490	Shoulder Screw	2
15	17-9420	Handle Screw	2
16	36-0740	Bag Support R.H.	1
17	32104-76	Screw	2

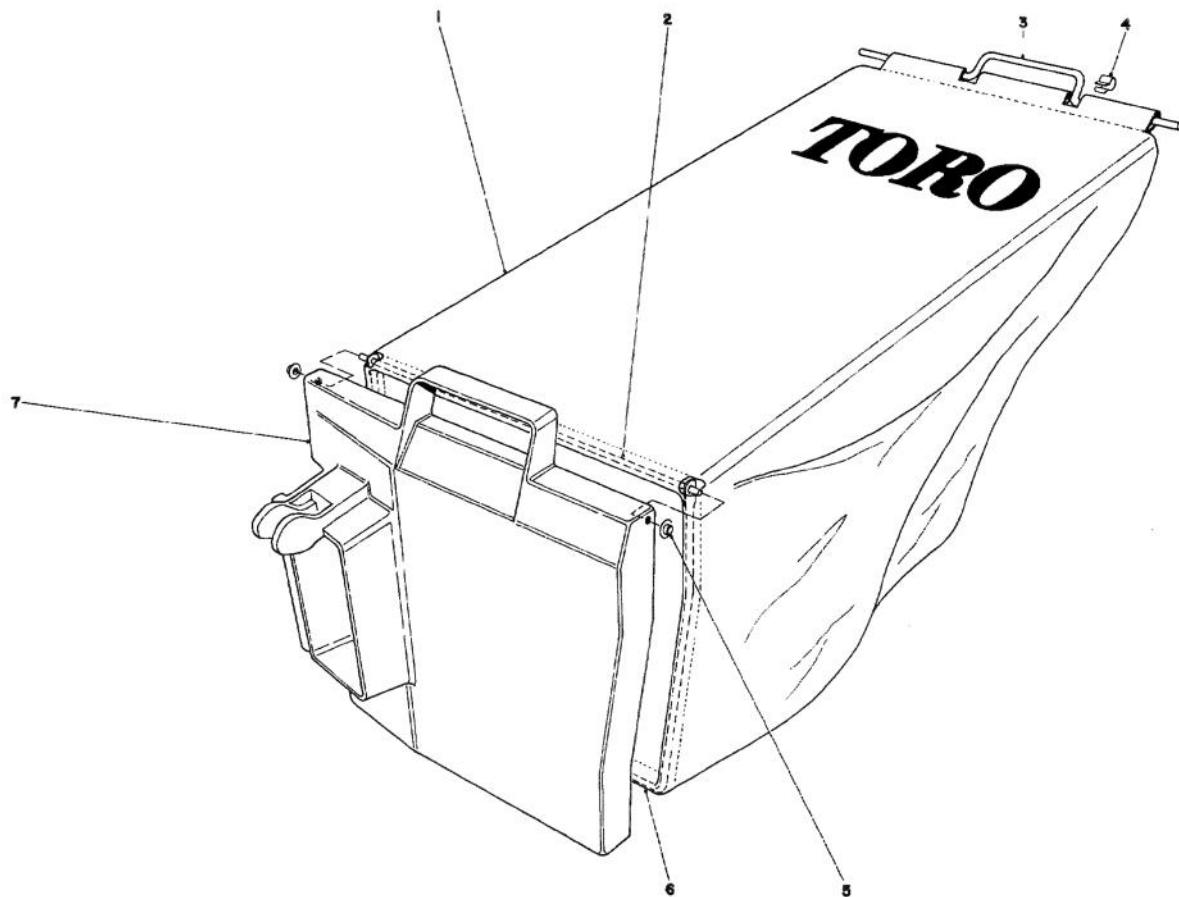

GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	33-4551	Bag	1
2	33-2970	Hinge	1
3	33-2390	Handle Bag	1
4	3290-421	Clip Bag Handle	2

Ref. No.	Part No.	Description	No. Used
5	3290-422	Push Nut Washer Cap	2
6	33-2240	Frame Bag	1
7	33-2980	Door-Bag	1

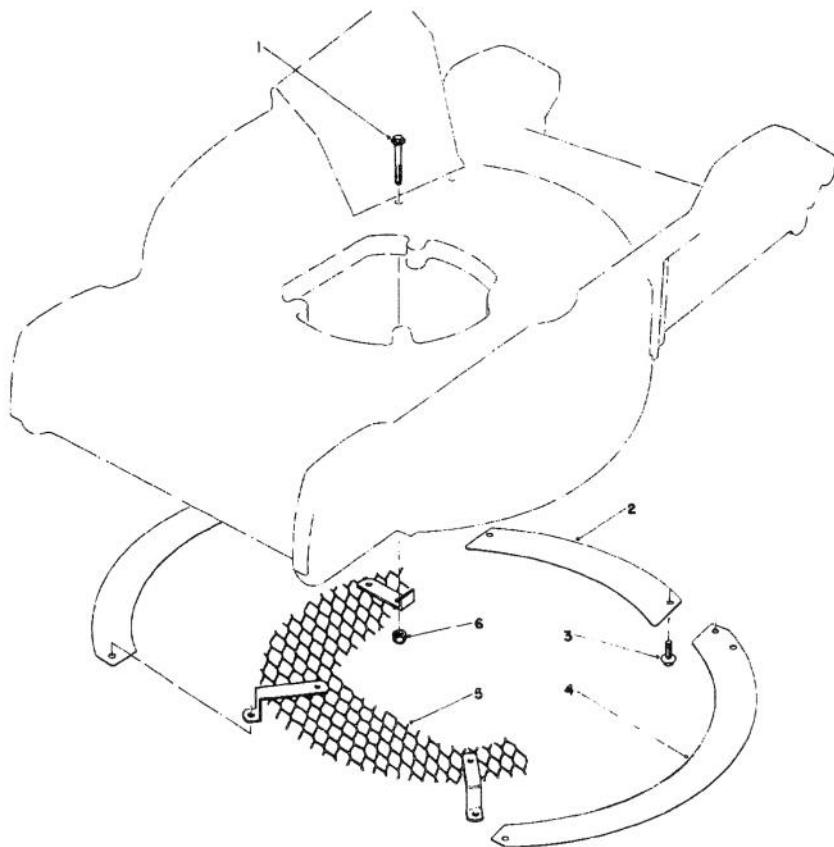


LEAF SHREDDER KIT NO. 59100 (Optional)

Ref. No.	Part No.	Description	No. Used
1	37-7470	Screw	1
2	37-7410	Rear Baffle	1
3	12-3270	Screw	4

Ref. No.	Part No.	Description	No. Used
4	37-7400	Outer Baffle	2
5	37-7450	Screen	1
6	32146-17	Locknut	1


ENGINE TECUMSEH MODEL NO. TNT 100-10066C

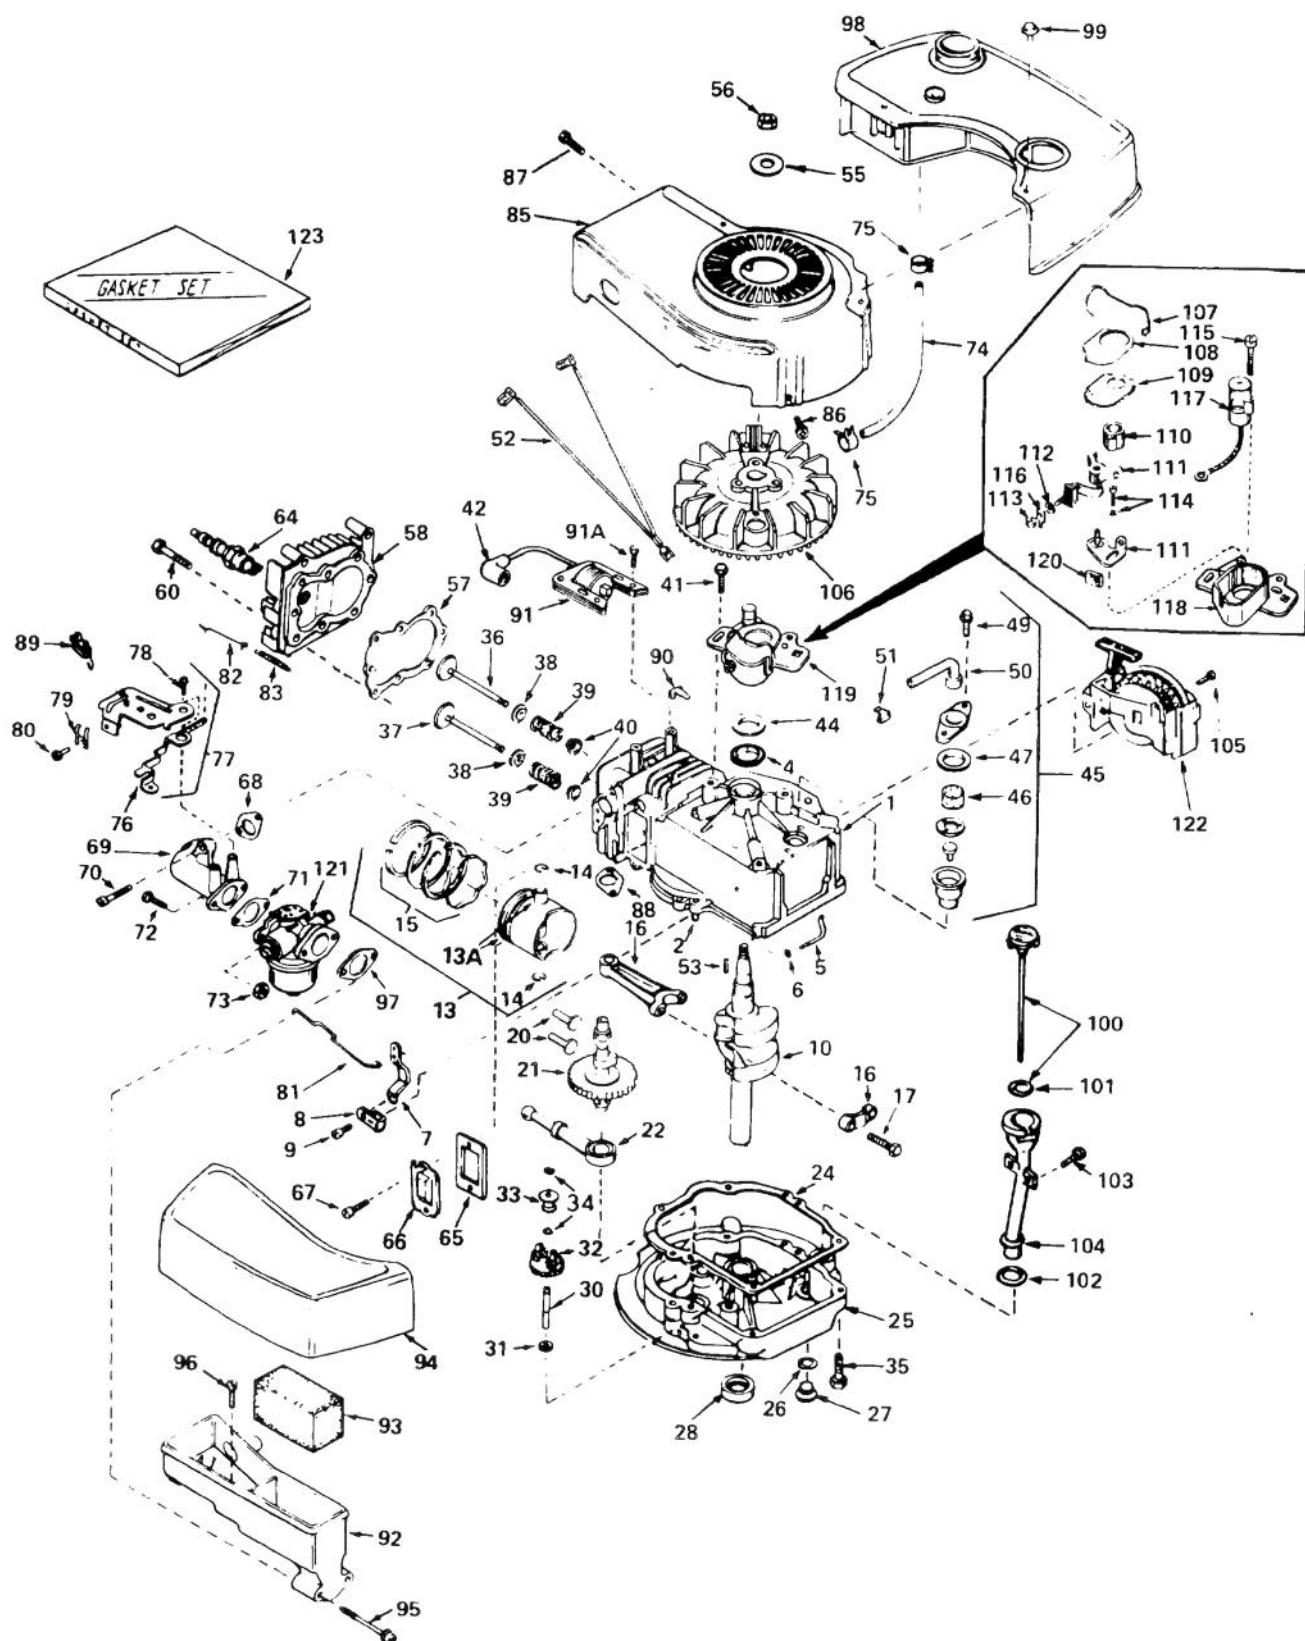

ENGINE TECUMSEH MODEL NO. TNT 100-10066C

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	34429	Cylinder Assy. (Incl. Ref. #2, 4 & 105)	1	57	*33015	Gasket, Cylinder Head	1
2	26727	Pin, Dowel	2	58	34342	Head, Cylinder	1
4	32600	Seal, Oil	1	60	6021A	Screw, Hex Flange Hd.	8
5	30589	Rod, Governor (Incl. Ref. #6)	1	64	33636	Plug, Spark (Champion J-8 or Equivalent)	1
6	28277	Washer, Flat	1			<u>Except for Canada</u>	
7	32651	Lever, Governor	1	64	34251	Resistor Spark Plug (Canadian Canada	1
8	31335	Clamp, Governor Lever	1			Regulations Require RJ-17LM	
9	650548	Screw, Hex Washer Hd.	1	65	*27234	Resistor Spark Plug)	1
10	34440	Crankshaft	1	66	32755	Gasket, Valve Spring Cover	1
13	34520	Piston, Pin & Ring Assy. (Std.) (Incl. Ref. #13A, 14 & 15)	1	67	650128	Cover, Valve Spring Box	1
13	34521	Piston, Pin & Ring Assy. (.010 oversize) (Incl. Ref. #13A, 14 & 15)	1	68	*32649	Screw, Fil. Hd.	2
13	34522	Piston, Pin & Ring Assy. (.020 oversize) (Incl. Ref. #13A, 14 & 15)	1	69	33004	Gasket, Intake Pipe	1
13A	32603B	Piston & Pin Assy. (Std.) (Incl. Ref. #14)	1	70	650451	Pipe, Intake	1
13A	32604B	Piston & Pin Assy. (.010 oversize) (Incl. Ref. #14)	1	71	*31688	Screw, Hex Hd.	2
13A	32605B	Piston & Pin Assy. (.020 oversize) (Incl. Ref. #14)	1	72	6201	Gasket, Carburetor	1
14	20381	Ring, Piston Pin Retaining	2	73	29752	Screw, Hex Hd.	2
15	32606	Ring Set, Piston (Std.)	1	74	30705	Nut & Lockwasher Assy.	2
15	32607	Ring Set, Piston (.010 oversize)	1	75	26460	Line, Fuel	1
15	32608	Ring Set, Piston (.020 oversize)	1	76	34310	Clamp, Fuel Line	2
16	30963B	Rod Assy., Connecting (Incl. Ref. #17)	1	77	33889A	Lever, Control	1
17	32610A	Bolt, Connecting Rod	2	78	650804	Control Assy., Speed (Incl. Ref. #76, 78 & 89)	1
20	27241	Lifter, Valve	2			Screw, Hex Washer Hd.	1
21	33553	Camshaft (Mech. Comp. Release)	1			Shoulder Self-tap	1
22	29914	Pump Assy., Oil	1	79	27793	Clip, Conduit	1
24	*26750A	Gasket, Mounting Flange	1	80	28942	Screw, Hex Washer Hd.	1
25	30594B	Flange Assy., Mounting (Incl. Ref. #26 thru 30)	1	81	34336	Link, Governor-to-throttle	1
26	*28833	Gasket, Oil Drain Plug	1	82	33151	Link, Governor Spring	1
27	27244	Plug, Oil Drain	1	83	33890	Spring, Governor	1
28	26208	Seal, Oil	1	85	33891A	Housing, Blower	1
30	30574	Shaft, Mechanical Governor	1	86	650497	Screw, Flex Pan Hd.	2
31	30590A	Washer, Flat	1	87	30200	Screw, Hex Washer Hd. Self-tap	2
32	30591	Gear Assy., Governor (Incl. Ref. #31)	1	88	*30081	Gasket, Exhaust	1
33	30588A	Spool, Governor	1	89	610973	Terminal Assy.	1
34	29193	Ring, Retaining	2	90	29443	Clip, Fuel Line	1
35	650488	Screw, Hex Hd.	6	91	34431	Lamination & Coil Assy.	1
36	29314A	Valve, Intake (Std.) (Incl. Ref. #38, 39 & 40)	1	91A	650814	Screw, Hex Hd. Sems	2
36	29315B	Valve, Intake (1/32" oversize) (Incl. Ref. #38, 39 & 40)	1	92	33895	Body, Air Cleaner	1
37	29313B	Valve, Exhaust (Std.) (Incl. Ref. #38, 39 & 40)	1	93	33896	Filter, Air Cleaner	1
37	29315B	Valve, Exhaust (1/32" oversize) (Incl. Ref. #38, 39 & 40)	1	94	33897	Cover, Air Cleaner	1
38	31671	Cap, Upper Valve Spring	2	95	650762	Screw, Fil. Hd.	2
39	31672	Spring, Valve	2	96	650784	Screw, Hex Hd. w/Flatwasher	1
40	31673	Cap, Lower Valve Spring	2	97	*33051	Gasket, Air Cleaner	1
41	650489	Screw, Hex Hd.	2	98	33904A	Tank, Fuel	1
42	610118	Cover, Spark Plug	1	99	28763	Screw, Hex Washer Hd.	2
44	33876	Gasket, Stator	1	100	33894A	Dipstick, Oil (Incl. Ref. #101) (Twist Lock)	1
45	34214	Breather Assy. (Incl. Ref. #46 thru 51)	1	101	33590	"O" Ring	1
46	33734	Element, Breather	1	102	34265	Gasket	1
47	*33735	Gasket, Breather	1	103	650562	Screw, Hex Washer Hd.	2
49	30200	Screw, Hex Washer Hd. Self-tap	2	104	34380	Tube, Oil Filler (Plastic)	1
50	33886	Tube, Breather	1	105	650737	Screw, Hex Washer Hd.	3
51	33887	Clip, Breather Tube	1	106	611007	Flywheel	1
52	34432	Wire, Ground	1	107	30551	Spring, Breaker Box Dust Cover	1
53	610995	Key, Flywheel	1	108	610947	Cover, Breaker Box Dust	1
55	650815	Washer, Belleville	1	109	610955	Gasket, Dust Cover	1
56	650816	Nut, Flywheel	1	110	30992	Cam, Breaker	1
				111	30547B	Breaker Assy.	1
				112	610385	Washer, Terminal	1
				113	610408	Nut, Terminal	1
				114	29181	Screw & Washer Assy., Breaker	1
				115	610593	Screw, Condenser Fastening	1
				116	33356	Tab, Ground Terminal	1
				117	30548B	Condenser	1
				118	611008	Core & Plate Group	1
				119	611006	Stator Assy. (Incl. Ref. #107, 111 thru 118 & 120)	1
				120	30549	Felt, Cam Wiper	1
				121	632050	Carburetor (Incl. Ref. #71)	1
				122	590450A	Starter, Side Mount	1
				123	33906	Gasket Set (Incl. Items Marked *)	1


*Not Illustrated

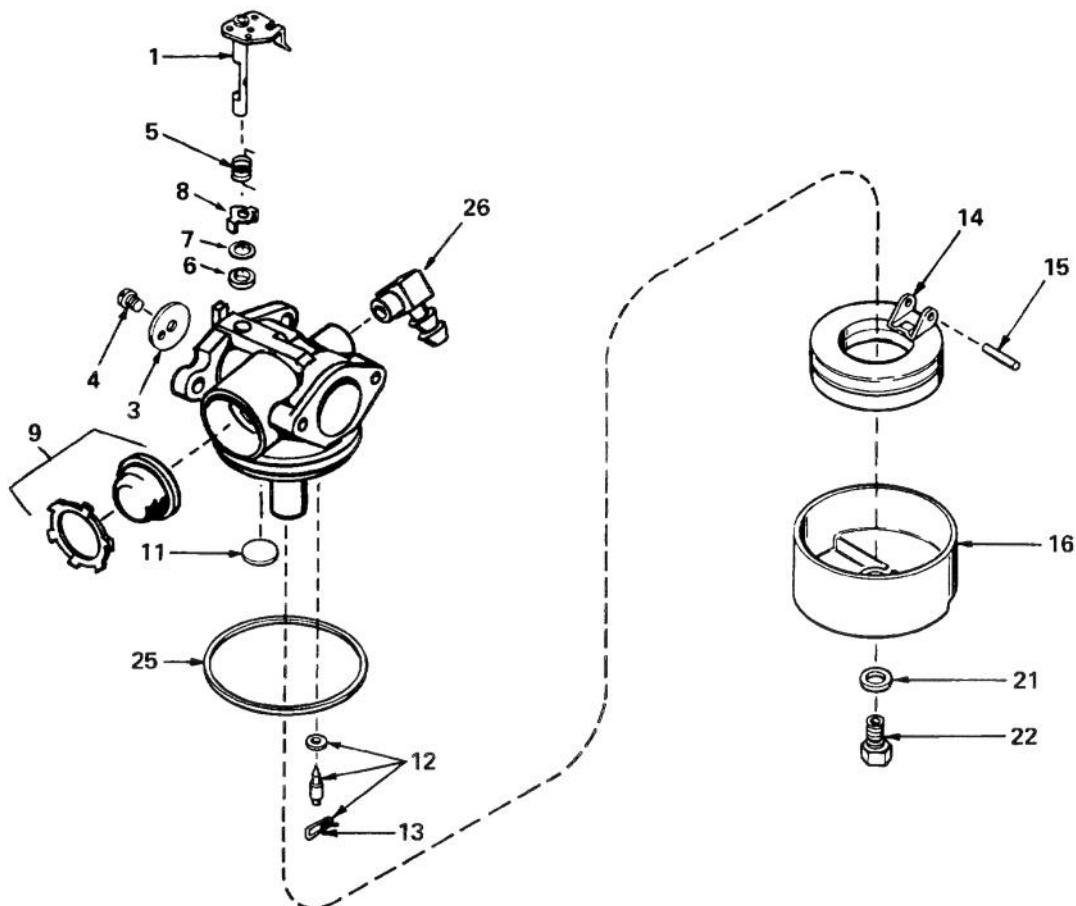

CARBURETOR NO. 632050

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter, Throttle	1
4	650506	Screw, Throttle Shutter	1
5	632016	Spring, Return	1
6	631971	Seal, Dust	1
7	631184	Washer	1
8	631972	Retainer, Dust Seal	1
9	632047	Bulb & Retainer, Primer	1
11	631027	Plug, Welch	1
12	631021	Inlet Needle, Seat & Clip Assy. (Incl. Ref. #13)	1

Ref. No.	Part No.	Description	No. Used
13	631022	Clip, Inlet Needle	1
14	632019	Float, Carburetor	1
15	631024	Shaft, Float	1
16	631700	Bowl, Float	1
21	631334	Gasket, Bowl-To-Body	1
22	631935	Nut, Float Bowl	1
25	631028	Gasket, Bowl-To-Body	1
26	631807	Fitting, Fuel Inlet	1

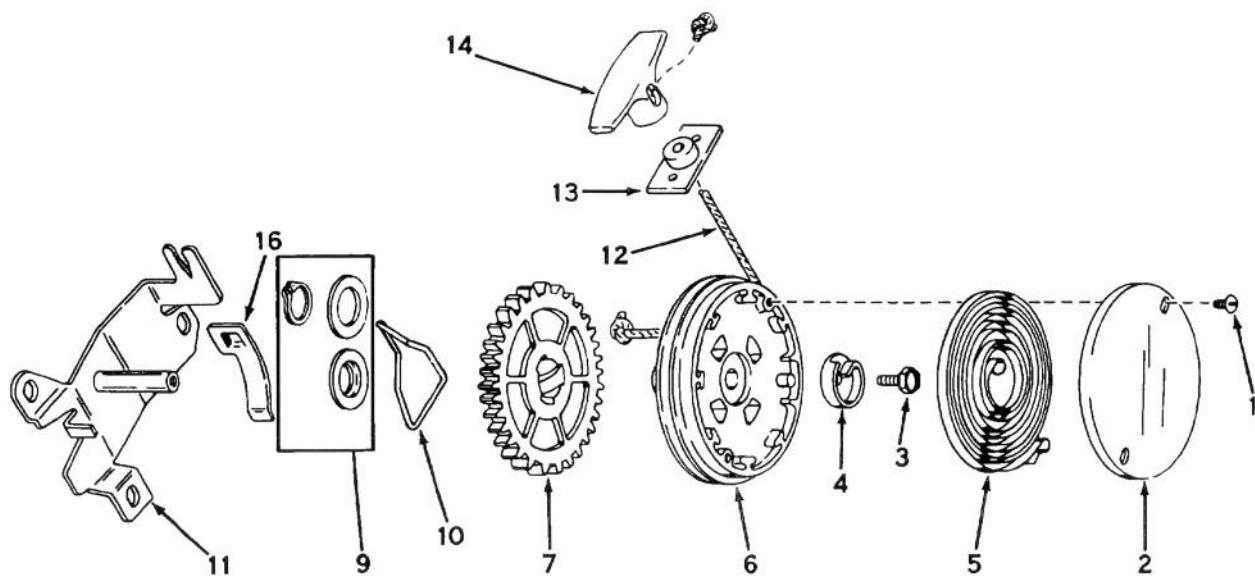

STARTER NO. 590450A

Ref. No.	Part No.	Description	No. Used
1	590477	Screw, Cover	2
2	590431	Cover, Spring	1
3	590472	Screw, Hex Washer Hd. Left Hand Thread	1
4	590432	Hub, Spring	1
5	590433	Spring, Rewind	1
6	590434A	Pulley Assy. (Incl. Ref. #9)	1
7	590435B	Gear	1
9	590470	Kit, Thrust Washer & Snap Ring	1

Ref. No.	Part No.	Description	No. Used
10	590438	Brake	1
11	590439A	Bracket Assy., Mounting	1
12	590451A	Rope, Starter (Length 69" and 5/32" diameter)	1
13	590441	Bracket Assy. (Can be removed if not required)	1
14	590452	Handle, Starter	1
16	590446	Clip, Rope	1

The Toro Promise

A ONE YEAR LIMITED WARRANTY

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product	1 Year
Residential Products Used Commercially . . .	45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact

the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

International Group
Service Department
One Corporate Center
7401 Metro Boulevard
Minneapolis, Minnesota 55435 U.S.A.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the mower housing between the rear wheels. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the mower.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

MAINTENANCE RECORD