



Boot and Tube Kit

Z Master[®] 100 Series with 44in Mower

Model No. 78492

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

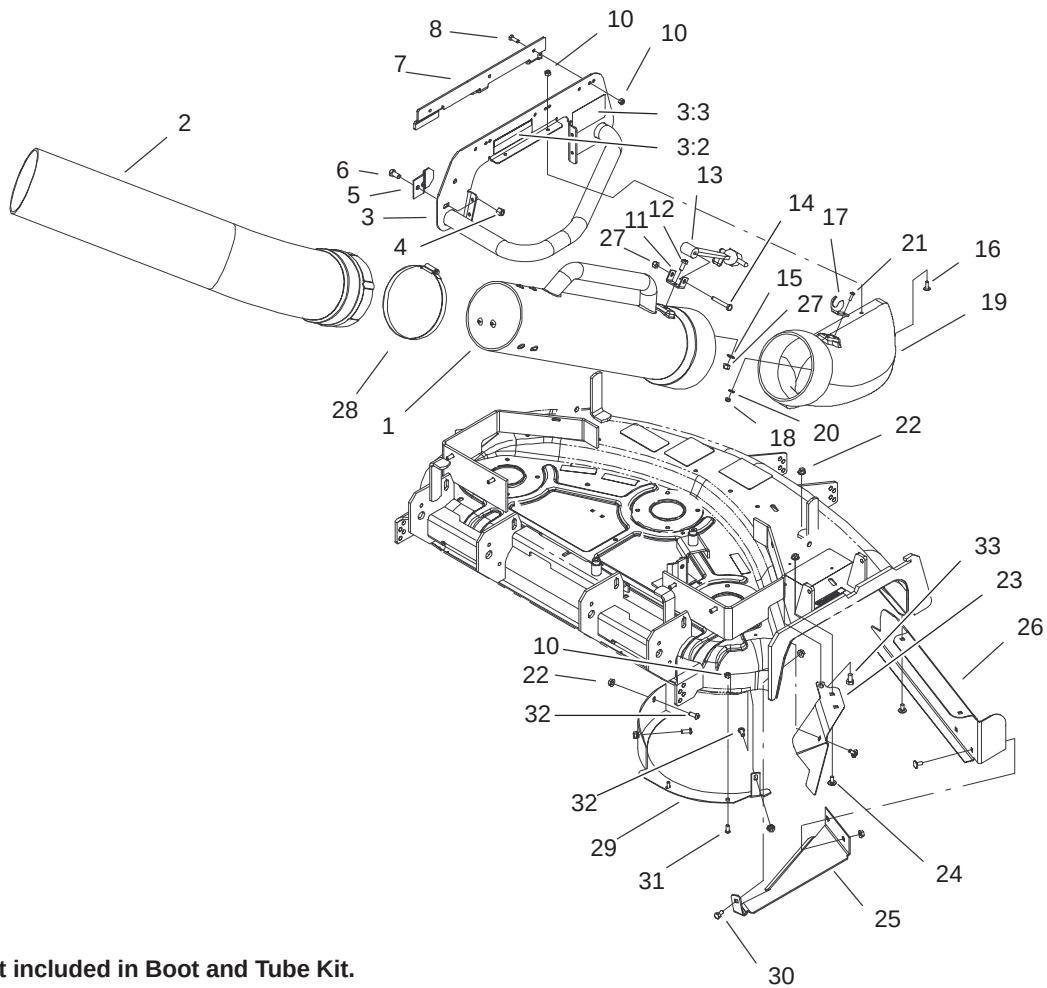

Sheet No.: 2

Item 34 is not included in Boot and Tube Kit.

Boot and Tube Assembly

Ref. No.	Part No.	Qty.	Description
1	105-5553	1	Tube—Straight
2	105-5554	1	Tube—Elbow
3	106-5859	1	Mounting Plate ASM
3:2	106-5856	1	Decal—Caution
3:3	106-5855	1	Decal—Hazard
4	3296-39	1	Nut—Lock, NI
5	104-8575	1	Bracket—Clamp
6	323-4	1	Screw—HH
7	104-8573-03	1	Bracket—Mounting
8	321-4	3	Screw—HH
10	3296-42	11	Nut—Lock, NI
11	105-9707	1	Bracket—Anchor
12	322-3	1	Screw—HH
13	105-8155	1	Holddown—Hood
14	322-10	1	Screw—HH
15	3256-23	1	Washer—Flat
16	9114604	6	Screw—Head, Truss
17	105-9709	1	Bracket—Hood
18	3296-2	2	Nut—Lock
19	105-5531	1	Boot
20	3256-14	2	Washer—Flat
21	3290-500	2	Screw—PPH
22	32128-25	11	Nut—Flange
23	105-5550-01	1	Baffle—Rear
24	3230-18	7	Screw—CARR
25	106-3303-01	1	Baffle—Cross

Ref. No.	Part No.	Qty.	Description
26	105-5533-01	1	Baffle—Front
27	3296-29	2	Nut—Lock, NI
28	106-3318	1	Clamp—Hose
29	106-3347-01	1	RH Bottom Baffle ASM
30	322-2	1	Screw—HH
31	3274-69	2	Screw—HSBH
32	3274-55	3	Screw—HSBH
33	32144-69	1	Screw—HH
*34	55-4940-03	3	Blade—Bagging

* Not illustrated