



# Tru Trak™ Sulky

## ProLine Mid Size Mower Attachment

Model No. 30110—220000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

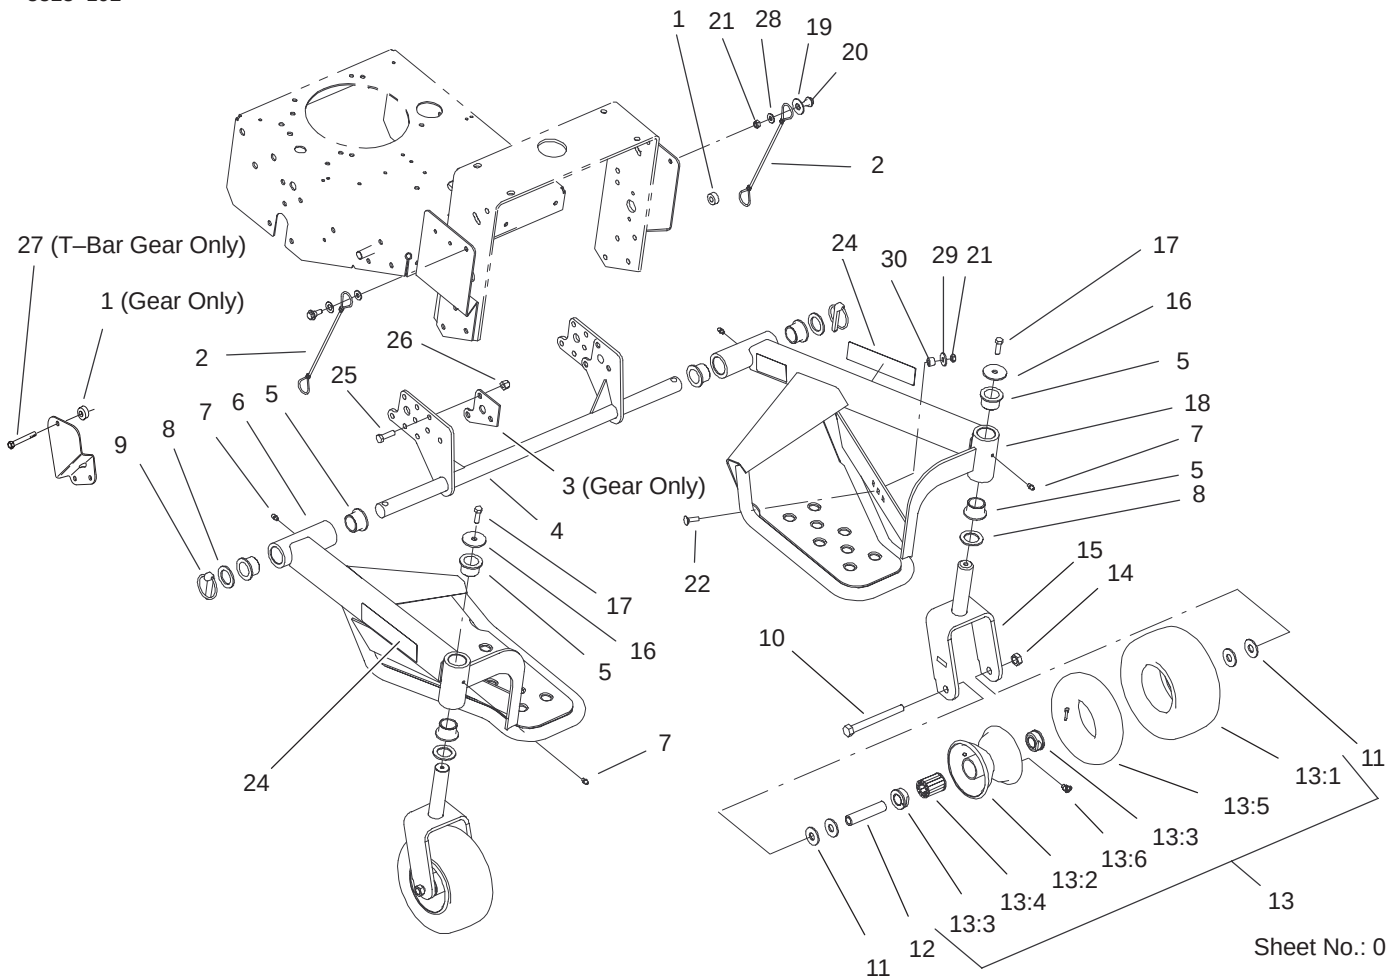

## Sulky Assembly

| Ref. No. | Part No.    | Qty. | Description        |
|----------|-------------|------|--------------------|
| 1        | 104-8426    | 2    | Spacer             |
| 2        | 93-9595     | 2    | Lanyard            |
| 3        | 104-8425-01 | 2    | Plate-Spacer       |
| 4        | 104-8405-01 | 1    | Axle ASM           |
| 5        | 94-1291     | 8    | Bushing-Special    |
| 6        | 104-8407-01 | 1    | LH Floor Plate ASM |
| 7        | 302-5       | 4    | Fitting-Grease     |
| 8        | 3-6781      | 4    | Washer-Thrust      |
| 9        | 283-71      | 2    | Pin-Lynch          |
| 10       | 325-19      | 2    | Screw-HH           |
| 11       | 3256-6      | 8    | Washer-Flat        |
| 12       | 68-8980     | 2    | Spanner-Tire       |
| 13       | 99-1268     | 2    | Castor Wheel ASM   |
| 13:1     | 93-9939     | 1    | Tire               |
| 13:2     | 100-2348    | 1    | Rim ASM            |
| 13:3     | 62-5580     | 2    | Bearing-Outside    |
| 13:4     | 62-5570     | 1    | Bearing-Roller     |
| 13:5     | 100-5832    | 1    | Tube W/ Valve      |
| 13:6     | 302-11      | 1    | Fitting-Lube, 45°  |
| 14       | 32153-5     | 2    | Nut-Lock           |
| 15       | 104-8402-01 | 2    | Castor ASM         |
| 16       | 63-7400     | 2    | Washer-Rebound     |
| 17       | 322-16      | 2    | Screw-HH           |
| 18       | 104-2743-01 | 1    | RH Floor Plate ASM |
| 19       | 3256-5      | 2    | Washer-Flat        |
| 20       | 94-7817     | 2    | Bolt-Shoulder      |

| Ref. No. | Part No. | Qty. | Description     |
|----------|----------|------|-----------------|
| 21       | 3296-47  | 4    | Nut-Lock, NI    |
| 22       | 3230-2   | 2    | Screw-CARR      |
| 24       | 104-8477 | 2    | Decal           |
| 25       | 323-29   | 6    | Screw-HH        |
| 26       | 3296-39  | 6    | Nut-Lock, NI    |
| 27       | 323-23   | 2    | Screw-HH        |
| 28       | 3256-3   | 2    | Washer-Flat     |
| 29       | 1-603716 | 2    | Washer-Friction |
| 30       | 98-4695  | 2    | Spacer          |