# 48in Recycler® Retrofit Kit

Wheel Horse <sup>®</sup> 260 Series Yard Tractors and 300 Series/5xi Garden Tractors Model No. 79190

### **Parts Catalog**

#### **Ordering Replacement Parts**

TORO

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

#### **Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

#### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b.** The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in illustrations and in part lists.

#### **Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

© The TORO Company — 2002 All Rights Reserved

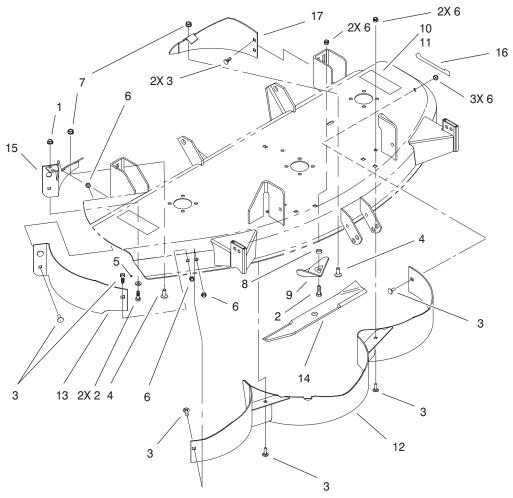

Sheet No.:0

## Baffle & Kicker Assembly

Ref. No.	Part No.	Qty.	Description	Ref	No.	Part No.	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17	32128–20 322–5 3230–23 3231–22 3256–23 3296–29 3296–39 59–4310 84–5760 92–7108 93–7317 94–9708–03 94–9710–03 94–9719 94–9759–03	2 4 8 2 2 10 2 2 2 1 1 1 3 1 1 1 1 3 1 1 1	Nut-HF Screw-CARR Screw-CARR Washer-Flat Nut-Lock, NI Nut-Lock, NI Spacer Plate-Kicker Decal-Danger Decal-Danger Baffle-Discharge Baffle-Front Blade RH Rear Baffle ASM Decal-Recycler LH Rear Baffle ASM			r alt INU.		