



Groundsmaster[®] 328–D

2WD and 4WD Traction Unit

Model No. 30626–230000001 and Up

Model No. 30627–230000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

 
Description	Page	Description	Page
Frame Assembly	4	4 Wheel Drive Rear Axle Assembly No. 95–7501	
Frame Assembly No. 98–3879	5	(Continued) Bevel Gear Shaft Assembly	
Control Panel Assembly	6	(only on: 30631)	44
Brake Pedal Assembly	8	4 Wheel Drive Rear Axle Assembly No. 95–7501	
Traction Pedal Assembly	9	(Continued) Axle Case Assembly	
Power Steering Assembly	10	(only on: 30631)	45
Power Steering Unit Assembly No. 92–7308	11	4 Wheel Drive Rear Axle Assembly No. 95–7501	
Engine Installation Assembly	12	(Continued) Axle Assembly	
PTO and Shaft Assembly	13	(only on: 30631)	46
PTO Assembly	14	Front Axle Assembly No. 86–9600–03	
Valve and Cylinder Assembly	15	(Only on: 30630)	47
Hydraulic Cylinder		Front Axle Assembly No. 86–9600–03 (Continued)	
Assembly No. 100–6586 (2–1/2in Bore)	16	(Only on: 30630)	48
Hydraulic Cylinder Assembly No. 100–6591		Front Axle Assembly No. 86–9630–03	
(Optional) (3in Bore)	17	(Only on: 30631)	49
Valve Assembly No. 105–7821–01	18	Front Axle Assembly No. 86–9630–03 (Continued)	
Radiator and Hood Assembly	19	(Only on: 30631)	50
Hydrostatic Transmission Assembly	21	Brake Assembly	51
Hydrostatic Transmission		Electrical Schematic	52
Assembly No. 92–8947	23	Hydraulic Schematic	53
Neutral Centering Device Assembly	25	Engine and Mounting Components Assembly	54
4 Wheel Drive Rear Axle Assembly		Engine and Mounting Components Assembly	
(only on: 30627)	26	(Continued)	55
Driveshaft Assembly No. 98–5009		Engine and Mounting Components Assembly	
(only on: 30627)	28	(Continued)	56
Bi-Directional Clutch Assembly No. 95–6296		Crankcase Assembly	57
(only on: 30627)	29	Oil Pan Assembly	58
Cylinder Assembly No. 99–2415		Cylinder Head Assembly	59
(only on: 30627)	30	Gear Case, Oil Filter and Cover Assembly	60
Tie Rod Assembly No. 98–3871–03		Head Cover Assembly	61
(only on: 30627)	31	Dipstick and Guide Assembly	62
Push Arm and ROPS Assembly	32	Main Bearing Case Assembly	63
Water and Fuel Filter Assembly	34	Camshaft and Idler Gear Shaft Assembly	64
Water and Fuel Filter No. 98–9305	35	Piston and Crankshaft Assembly	65
Fuel Tank and Front Axle Assembly	36	Flywheel Assembly	66
2 Wheel Drive Rear Axle Assembly		Fuel, Camshaft and Governor Shaft Assembly	67
(only on: 30626)	37	Idle Apparatus and Stop Solenoid Assembly	68
Hydraulic Cylinder Assembly No. 92–7828		Injection Pump Assembly	69
(only on: 30626)	39	Injection Pump Assembly No. 98–9643	70
4 Wheel Drive Rear Axle Assembly No. 95–7501		Governor Assembly	71
Bevel Pinion Shaft Assembly (only on: 30631)	40	Speed Control Plate Assembly	72
4 Wheel Drive Rear Axle Assembly No. 95–7501		Nozzle Holder Glow Plug Assembly	73
(Continued) Differential Assembly		Nozzle Holder Assembly No. 98–9468	74
(only on: 30631)	41	Alternator and Pulley Assembly	75
4 Wheel Drive Rear Axle Assembly No. 95–7501		Alternator Assembly No. 98–9474	76
(Continued) Axle Support Assembly		Starter Mount Assembly	77
(only on: 30631)	42	Starter Assembly No. 98–9705	78
4 Wheel Drive Rear Axle Assembly No. 95–7501		Water Flange and Thermostat Assembly	79
(Continued) Bevel Gear Case Assembly		Water pump and Water Pipe Assembly	80
(only on: 30631)	43	Valve and Rocker Arm Assembly	81
		Inlet and Exhaust Manifold Assembly	82

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming

Abbreviation	Meaning
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

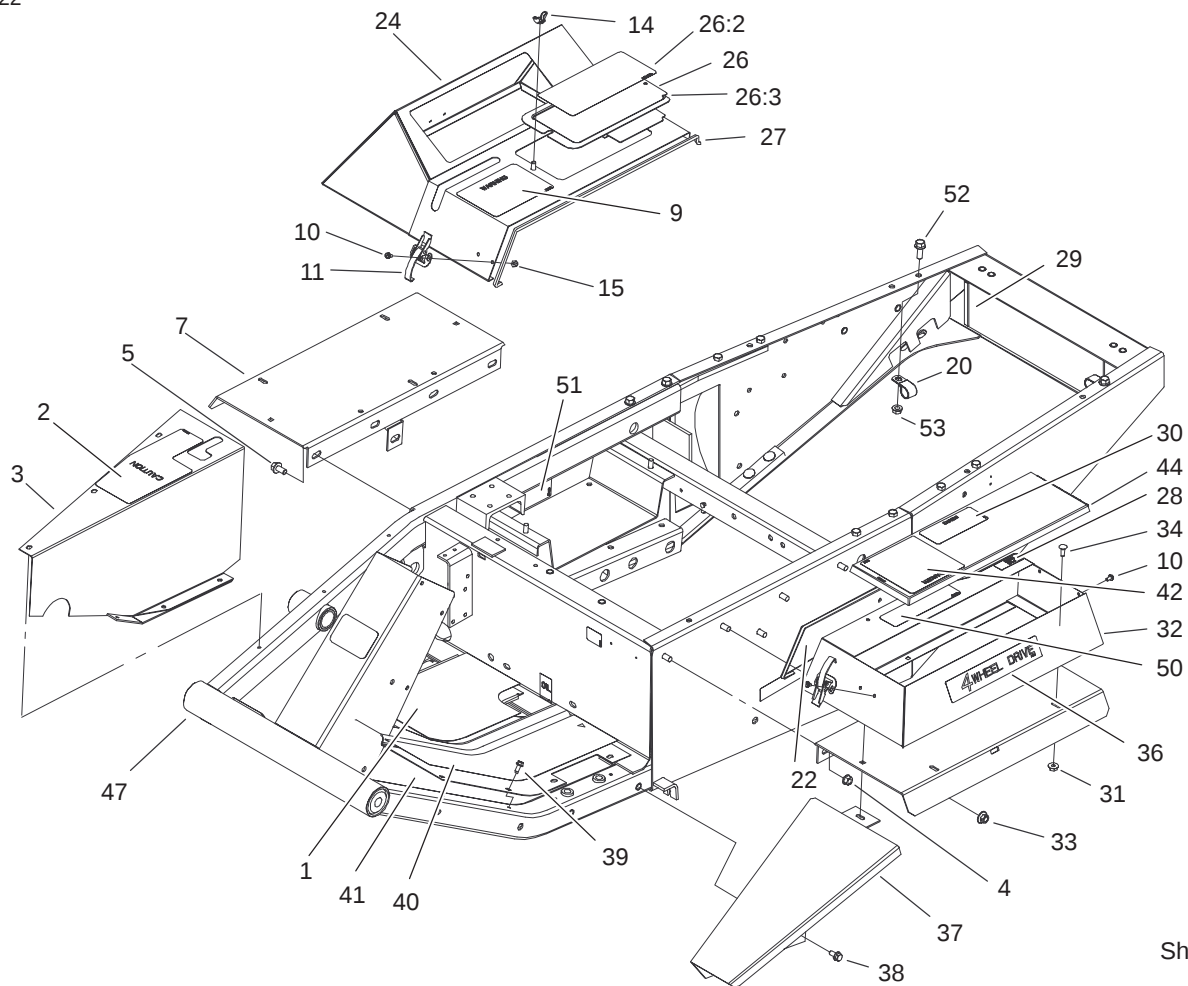


Sheet No.:2

Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	21-2770	1	Pad-Floor Plate, RH
2	105-7822	1	Decal-Caution
3	21-2660-01	1	Plate-Side, Foot Rest
4	32128-21	2	Nut-HF
5	3234-12	4	Screw-HHF
7	105-2596-01	2	Fender ASM
9	27-7290	1	Decal-PTO
10	3290-144	9	Screw-SHWH
11	249-21	3	Clamp-Slotted
14	32103-2	1	Nut-Wing
15	3296-2	9	Nut-Lock
20	2412-4	2	Clamp
22	37-9650	1	Trim-Box, Tool
24	38-4550-03	1	Cover-Instruments
26	105-2564	1	Batter Cover ASM
26:2	105-2531	1	Decal-Starting Instructions
26:3	92-7801	1	Shield-Cover, Battery
27	39-8020	1	Trim-Cover, Instrument
28	52-1321	1	Decal-Fuel, Diesel
29	43-4300	2	Trim-Frame, Rear
30	27-7310	1	Decal-Refueling
31	32128-33	5	Nut-HF
32	93-3182-03	1	Box-Tool
33	32128-19	6	Nut-HF

Ref. No.	Part No.	Qty.	Description
34	3229-1	5	Screw-CARR
36	72-3560	2	Decal-4wd (only on: 30627)
37	68-8610-01	1	Extension-Fender
38	3234-14	2	Screw-HHF
39	32144-10	11	Screw-HWH
40	21-2760	1	Pad-Floor Plate, LH
41	88-0070-01	1	Plate-Floor
42	72-3700	1	Decal
44	93-3177-03	1	Cover-Tool Box
47	98-3879	1	Frame ASM
50	67-1710	1	Decal-Warning
52	3234-11	2	Screw-HHF
53	3290-357	2	Nut-HHF

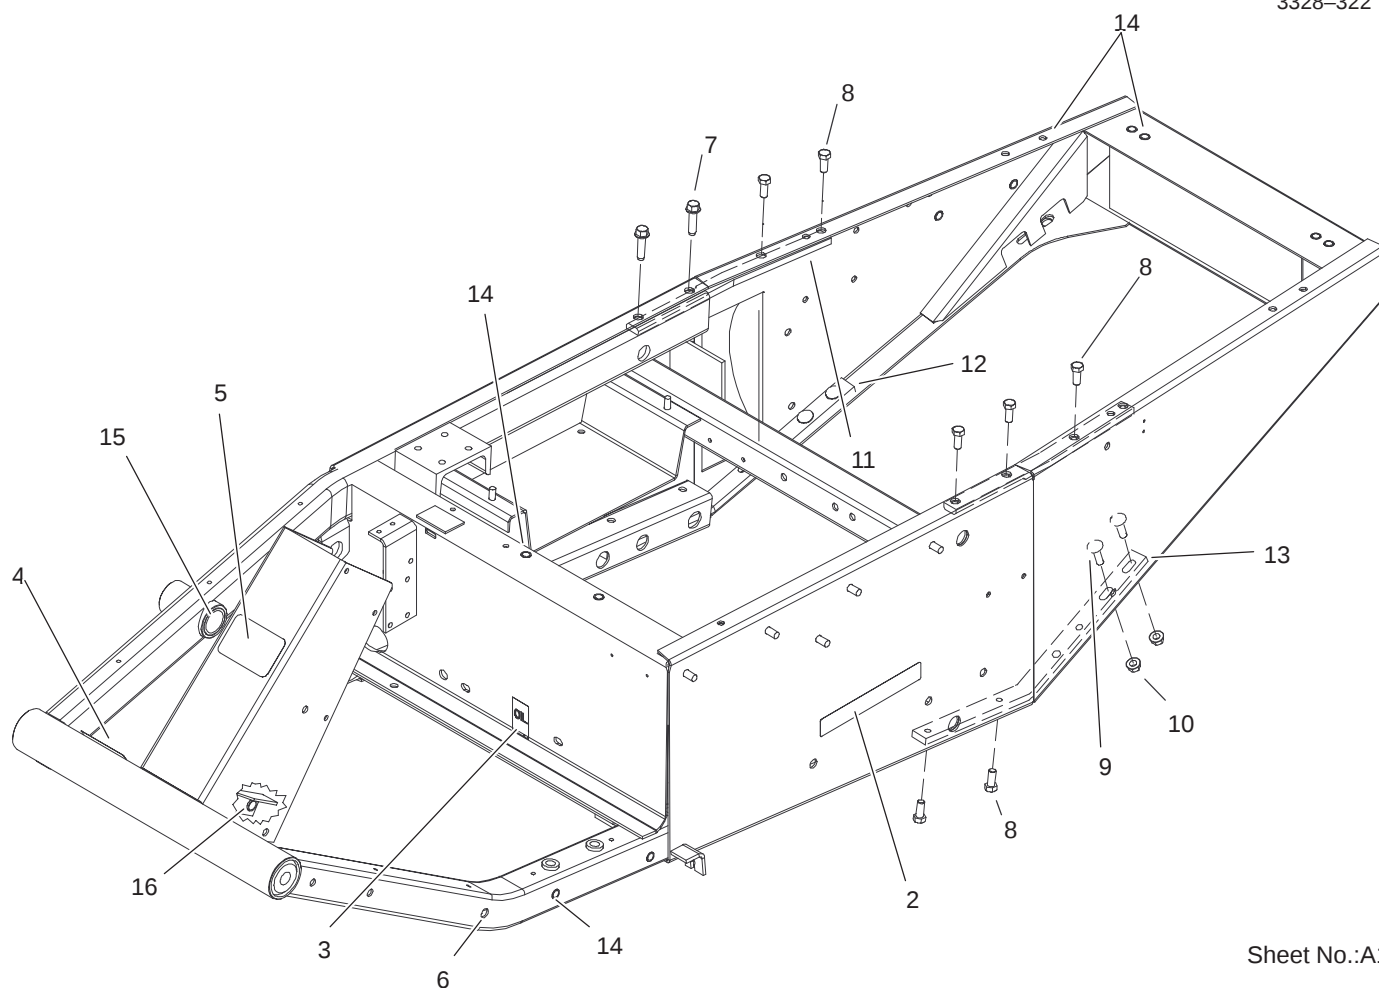 


Sheet No.:A1

Frame Assembly No. 98-3879

Ref. No.	Part No.	Qty.	Description
2	67-1720	2	Decal-Caution
3	85-4730	1	Decal-Oil Only, Hydraulic
4	27-7320	1	Decal-Pedal, Traction
5	70-2200	1	Decal-Toro Logo
6	32148-9	1	Insert-Nut
7	11-0590	2	Screw-HWHTF
8	3234-25	9	Bolt-HF
9	3231-25	4	Screw-CARR
10	32128-21	4	Nut-HF
11	98-3866-01	2	Brace-Upper
12	98-3865-01	1	Brace-Right, Lower
13	98-3864-01	1	Brace-Left, Lower
14	3290-472	10	Insert-Threaded
15	256-126	2	Bushing
16	256-156	1	Bushing-Flange

Ref. No.	Part No.	Qty.	Description

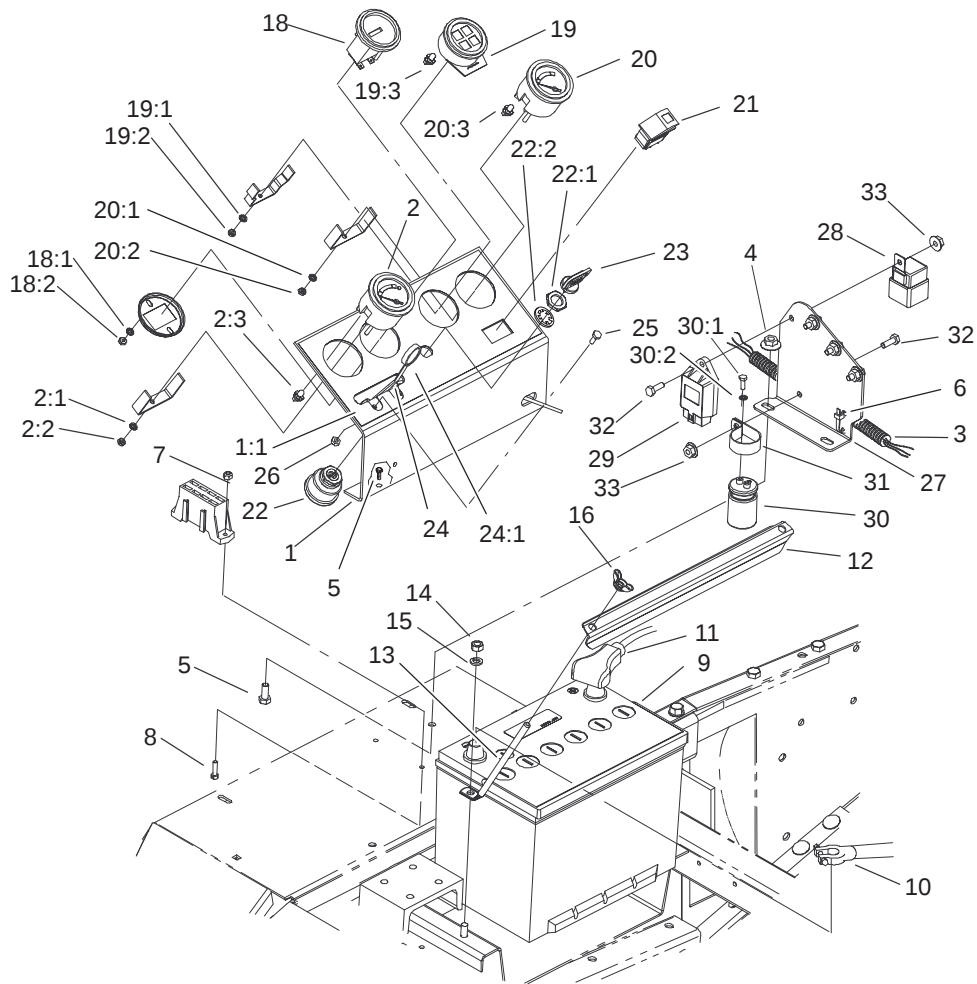 


Sheet No.:3

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	105-2917	1	Instrument Panel ASM
1:1	105-0056	1	Decal-Panel, Instrument
2	98-9339	1	Gauge-Fuel
2:1	3254-1	3	Washer-Lock, Internal
2:2	3217-27	3	Nut-Hex
2:3	105-9265	1	Bulb And Lamp ASM
3	104-4065	1	Wire Harness-Main
4	32128-30	4	Nut
5	322-3	4	Screw-HH
6	3290-379	2	Tie-Cable
7	3296-2	2	Nut-Lock
8	32105-13	2	Screw-SHH
9	63-9230	1	Battery-Dry
10	104-9497	1	Cable-Battery, Negative
11	95-8853	1	Cable-Battery, Positive
12	24-6420-03	1	Holddown-Battery
13	24-6390	2	Stud-Holddown, Battery
14	3217-6	2	Nut-Hex
15	3253-4	2	Washer-Lock
16	32103-2	2	Nut-Wing
18	66-2950	1	Gauge-Hourmeter
18:1	3255-20	2	Washer-Lock

Ref. No.	Part No.	Qty.	Description
18:2	3217-25	2	Nut-Hex
19	98-9306	1	Light-Warning
19:1	3254-1	1	Washer-Lock, Internal
19:2	3217-27	1	Nut-Hex
19:3	105-9264	4	Bulb And Lamp ASM
20	98-9308	1	Gauge-Temperature
20:1	3254-1	3	Washer-Lock, Internal
20:2	3217-27	3	Nut-Hex
20:3	105-9265	1	Bulb And Lamp ASM
21	100-8072	1	Switch
22	104-2541	1	Switch-Key
22:1	218-461	1	Nut-HH
22:2	3254-5	1	Washer-Tooth
23	63-8360	1	Key-Ignition
24	43-3990	1	Control-Throttle
24:1	233-35	1	Knob
25	3290-134	2	Screw
26	3296-12	2	Nut-Lock
27	105-0002-01	1	Bracket-Relay
28	70-1480	4	Relay
29	98-7611	1	Controller-Glow
30	37-2690	1	Capacitor
30:1	3252-18	2	Screw
30:2	3254-1	2	Washer-Lock, Internal
31	2412-74	1	R-Clamp
32	321-4	5	Screw-HH

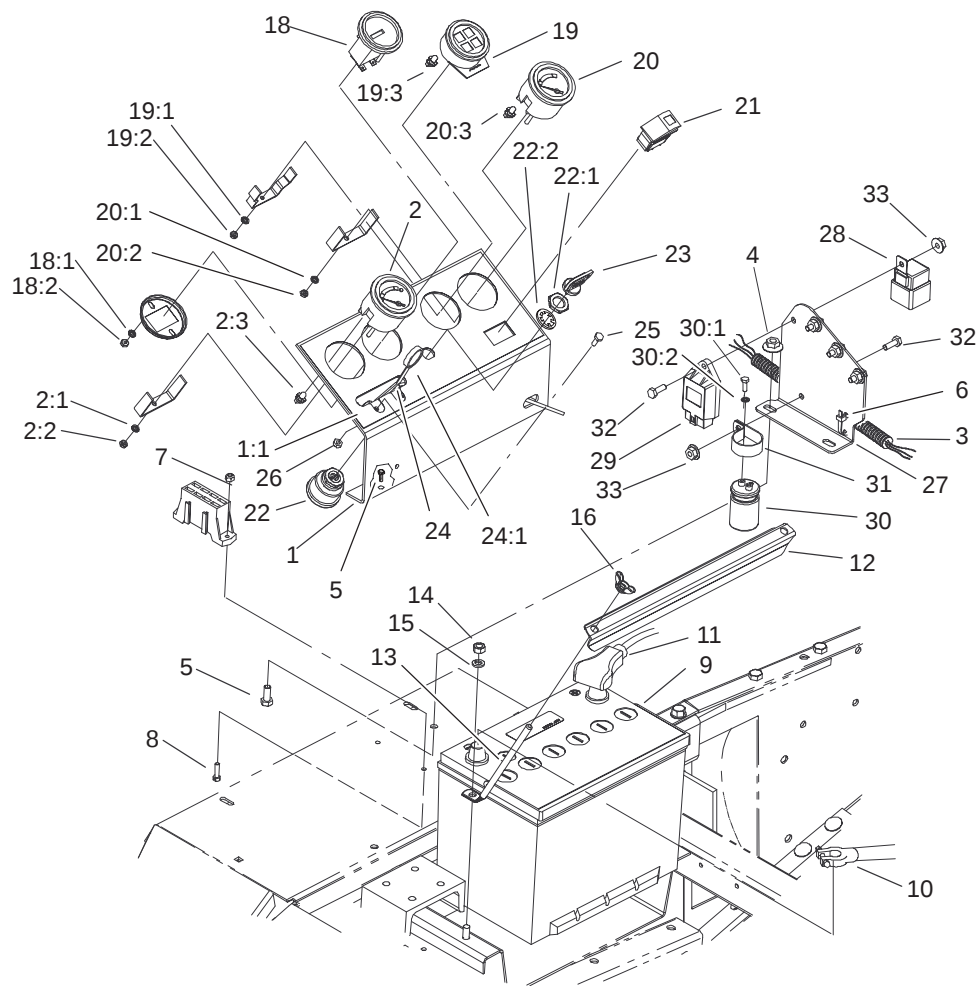 


Sheet No.:3

Control Panel Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
33	32128-33	5	Nut-HF

Ref. No.	Part No.	Qty.	Description

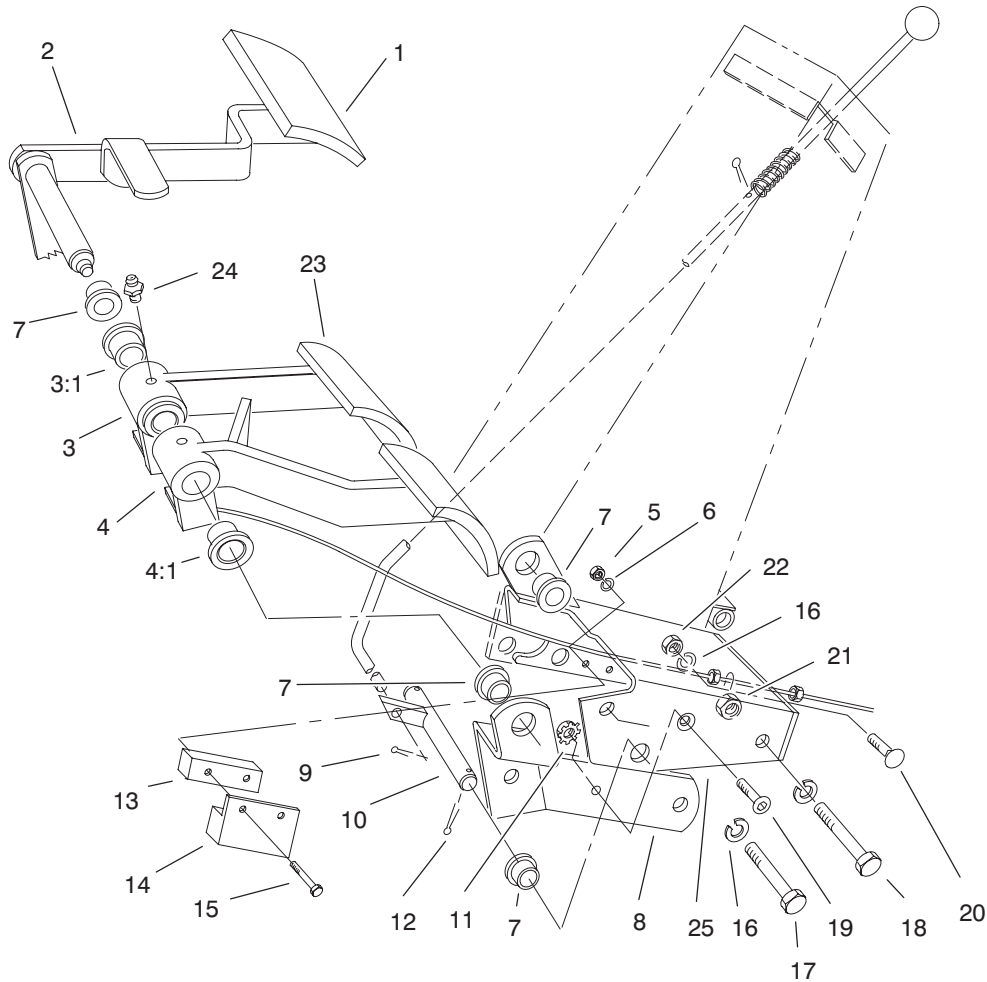 


Sheet No.:4

Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	93-8742	1	Footpad-Brake
2	27-8550-01	1	Parking Brake Pedal ASM
3	27-7510	1	Brake Pedal ASM, RH
3:1	256-10	2	Bushing-Flange
4	27-7490	1	Brake Pedal ASM, LH
4:1	256-10	2	Bushing-Flange
5	3296-2	2	Nut-Lock
6	3256-51	4	Washer-Flat
7	256-156	4	Bushing-Flange
8	27-9270-01	1	Mount-Brake, Pivot Shaft
9	3272-5	2	Pin-Cotter
10	105-0065	1	Parking Brake Shaft ASM
11	32149-2	1	Nut
12	3272-6	2	Pin-Cotter
13	105-0064	1	Spacer-Switch
14	100-1270	1	Switch-Proximity
15	3290-360	2	Screw-HH
16	3253-21	4	Washer-Lock
17	323-13	1	Screw-HH
18	323-14	1	Screw-HH
19	3274-47	1	Screw-HSFH
20	3231-21	2	Screw-CARR
21	32153-2	2	Nut-Lock

Ref. No.	Part No.	Qty.	Description
22	3217-7	2	Nut-Hex
23	93-8743	2	Footpad-Turn
24	302-5	2	Fitting-Grease
25	105-0066-01	1	Brake Pedal Mount ASM

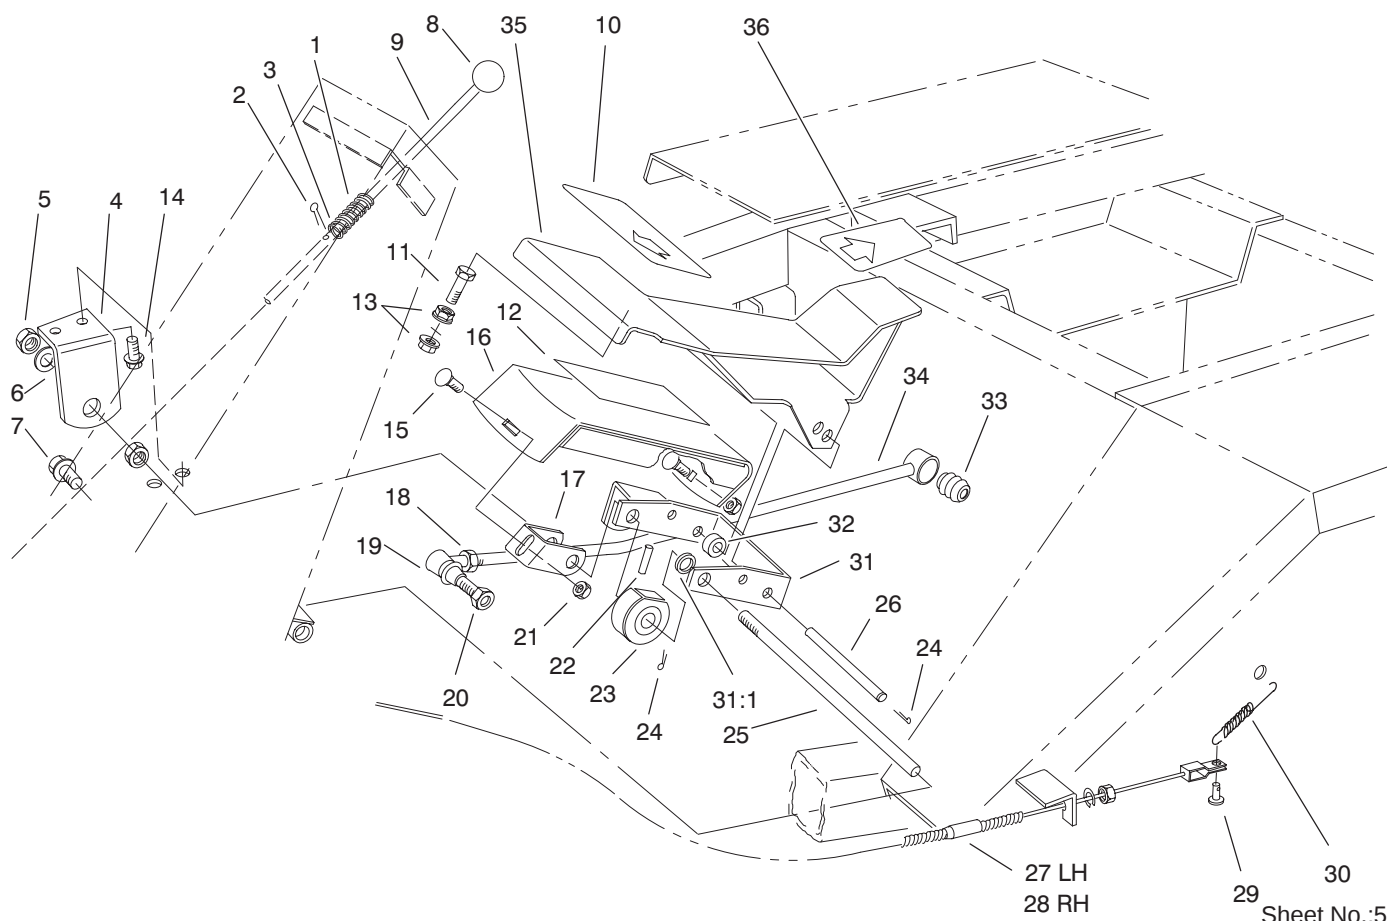 


Sheet No.:5

Traction Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	95-1821-03	1	Spring-Compression
2	3272-5	1	Pin-Cotter
3	3256-22	1	Washer-Flat
4	21-2850-01	1	Mount-Pedal, RH
5	3218-5	2	Nut-Jam
6	3256-26	1	Washer-Flat
7	3234-11	3	Screw-HHF
8	233-17	1	Knob
9	82-8670	1	Rod-Latch, Brake
10	94-3307	1	Pad-Pedal, Traction
11	323-15	1	Screw-HH
12	88-1720	1	Pad-Footrest
13	32128-43	2	Nut-Flange
14	11-0590	2	Screw-HWHTF
15	3230-1	2	Bolt-CARR
16	88-1710-01	1	Footrest
17	88-1680-01	1	Bracket-Footrest
18	3220-5	1	Nut-Jam
19	21-0141	1	RH Ball Joint ASM
20	3220-3	2	Nut-Jam
21	32128-25	2	Nut-Flange
22	32121-6	1	Pin-Roll
23	28-5220	1	Friction Wheel ASM
24	3272-6	4	Pin-Cotter
25	88-1650	1	Shaft-Pedal, Traction
26	88-1640	1	Pin-Pedal, Traction

Ref. No.	Part No.	Qty.	Description
27	21-3380	1	Brake Cable ASM, LH
28	21-3370	1	Brake Cable ASM, RH
29	283-58	2	Pin-Clevis
30	3-7243	2	Spring-Extension
31	88-1670	1	Pivot Bracket ASM
31:1	256-156	2	Bushing-Flange
32	88-0470	1	Tube-Spacer, Pedal
33	23-2270	1	Bushing-Rubber
34	23-2240-03	1	Pump Control Tube ASM
35	94-3304-01	1	Support-Pedal
36	94-3308	1	Pad-Pedal, Traction

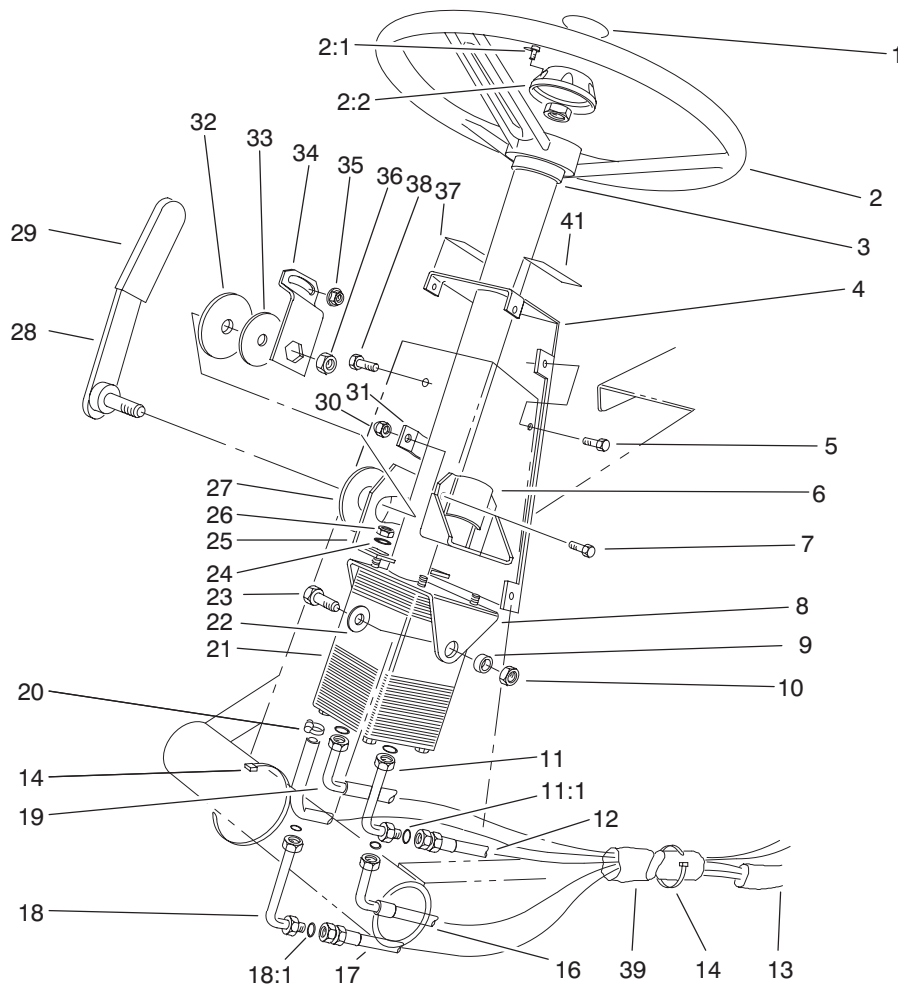 


Sheet No.:6

Power Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	68-5370	1	Decal-Toro
2	75-0560	1	Wheel-Steering
2:1	32144-21	1	Screw
2:2	68-5140	1	Cap-Wheel, Steering
3	21-9260	1	Cover-Dust
4	82-8660-01	1	Cover-Tower
5	32144-10	6	Screw-HWH
6	67-8690-03	1	Support-Column
7	322-5	2	Screw-HH
8	77-3120-01	1	Bracket-Mounting, Column
9	80-2960	2	Spacer-Tower
10	32153-2	2	Nut-Lock
11	82-8760	1	Elbow-HYD
11:1	237-30	1	O-Ring
12	63-8970	1	Hose-HYD
13	70-1390	1	Sleeve-Protective
14	3290-379	4	Tie-Cable
16	68-9730	1	Hose-HYD, Steering
17	68-9720	1	Hose-HYD, Steering
18	82-8770	1	Elbow-HYD
18:1	237-22	1	O-Ring
19	63-8980	1	Hose-HYD
20	2412-36	1	Clamp-Hose
21	92-7308	1	Power Steering Unit ASM

Ref. No.	Part No.	Qty.	Description
22	3256-46	2	Washer-Flat
23	323-6	2	Screw-HH
24	3256-3	4	Washer-Flat
25	80-2940-03	1	Plate-Pivot
26	3296-20	4	Nut-Lock, NI
27	31-0390	1	Disc-Friction
28	93-1353-03	1	Lever-Steering, Tilt
29	21-1880	2	Grip-Handle
30	3296-29	2	Nut-Lock, NI
31	82-8650	1	Clamp-Column
32	82-9010	1	Disc-Friction
33	80-2930	1	Washer-Flat
34	80-2880	1	Bracket-Tilt
35	32128-20	1	Nut-HF
36	3218-7	1	Nut-Jam
37	82-8940	1	Decal-Steering, Tilt
38	322-4	1	Screw-HH
39	70-1380	1	Sleeve-Protective
41	82-8930	1	Decal-Brake, Parking

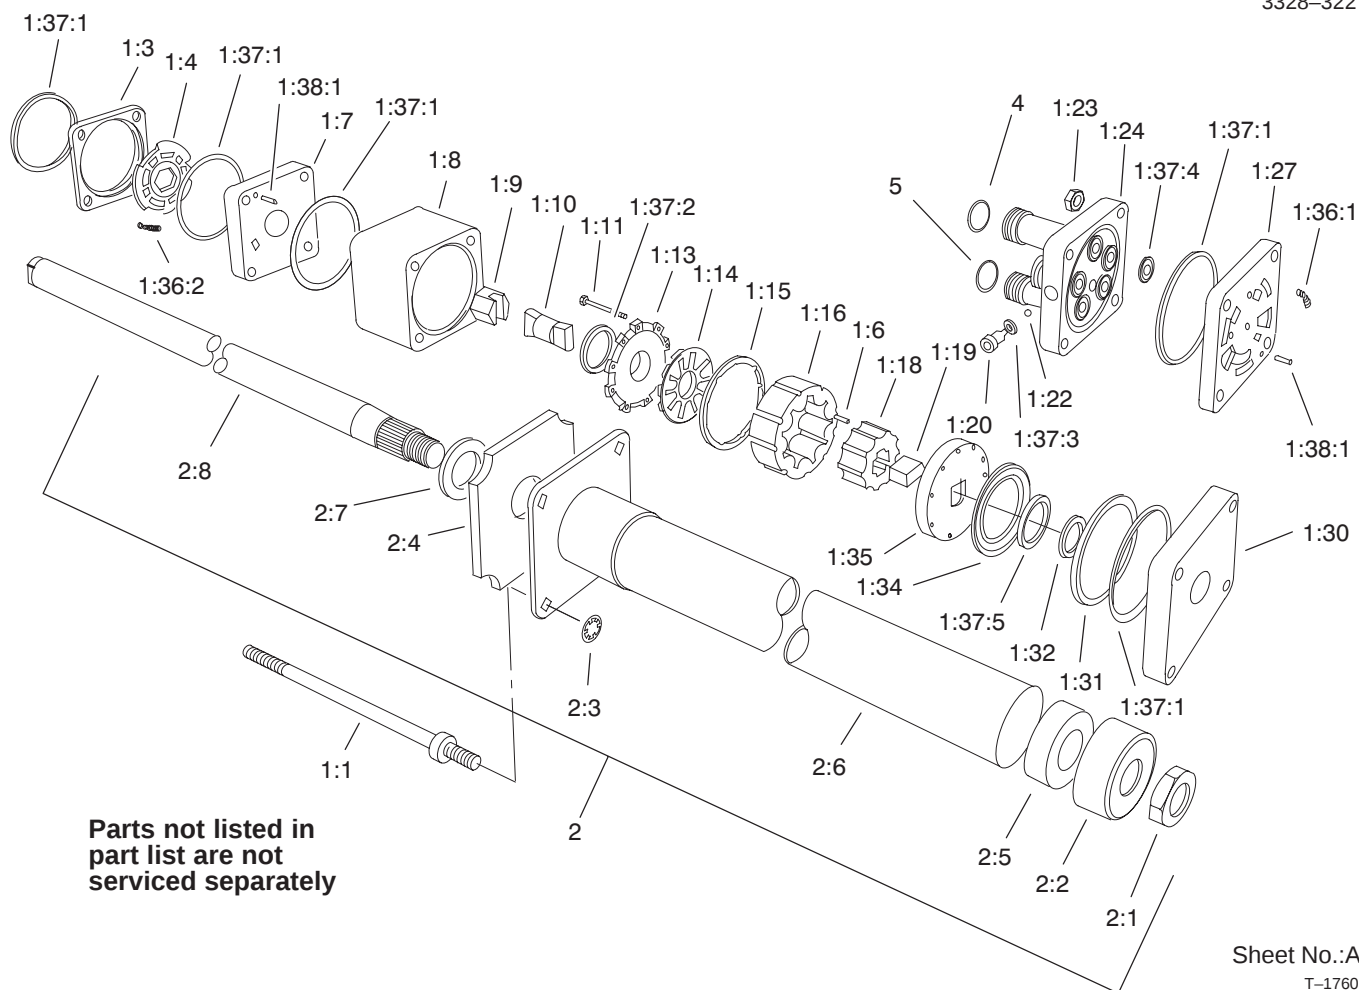 


Power Steering Unit Assembly No. 92-7308

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1	92-7310	1	Power Steering Unit	☆1:35	66-9970	1	Plate-Drive
1:1		4	Bolt-Special	*1:36		1	Spring Kit
☆1:3		1	Ring-Valve	☆1:36:1	66-9980	3	Spring
☆1:4		1	Plate-Valve	☆1:36:2		3	Spring
☆1:6		9	Pin-Alignment	*1:37	66-9990	1	Seal Kit
☆1:7		1	Manifold-Isolation	☆1:37:1		5	Ring-Seal
☆1:8		1	Ring-Metering	☆1:37:2	66-9990	1	Seal-Commutator
☆1:9		1	Hex Drive ASM	☆1:37:3		1	O-Ring
☆1:10		1	Link-Drive	☆1:37:4	66-9780	5	O-Ring
☆1:11		11	Screw-HSH	☆1:37:5		1	Seal-Face
☆1:13		1	Cover-Commutator	*1:38	92-7314	1	Needle Roller Kit
☆1:14		1	Commutator	☆1:38:1		9	Pin-Alignment
☆1:15		1	Ring-Commutator	2	3220-6	1	Column ASM
☆1:16		1	Stator	2:1		1	Nut-Jam
☆1:18		1	Rotor	2:2	92-7315	1	Seal-Upper
☆1:19		1	Spacer-Link, Drive	2:3		4	Nut-Push On
☆1:20		1	Plug	2:4	92-7317	1	Seal-Foam, Upper Cover
☆1:22		1	Ball	2:5		1	Bushing
☆1:23		4	Nut-Hex	☆2:6	66-9780	1	Cover-Upper
☆1:24		1	Cover-Port	☆2:7		1	Washer-Retaining
☆1:27		1	Manifold-Port	☆2:8	237-30	1	Shaft-Input
☆1:30		1	Plate-Cover, Upper	4		2	O-Ring
☆1:31		1	Spacer-Bearing, Thrust	5	237-22	2	O-Ring
☆1:32		1	Spacer-Seal				
☆1:34		1	Bearing-Thrust				

☆ Not serviced separately

 * Not illustrated

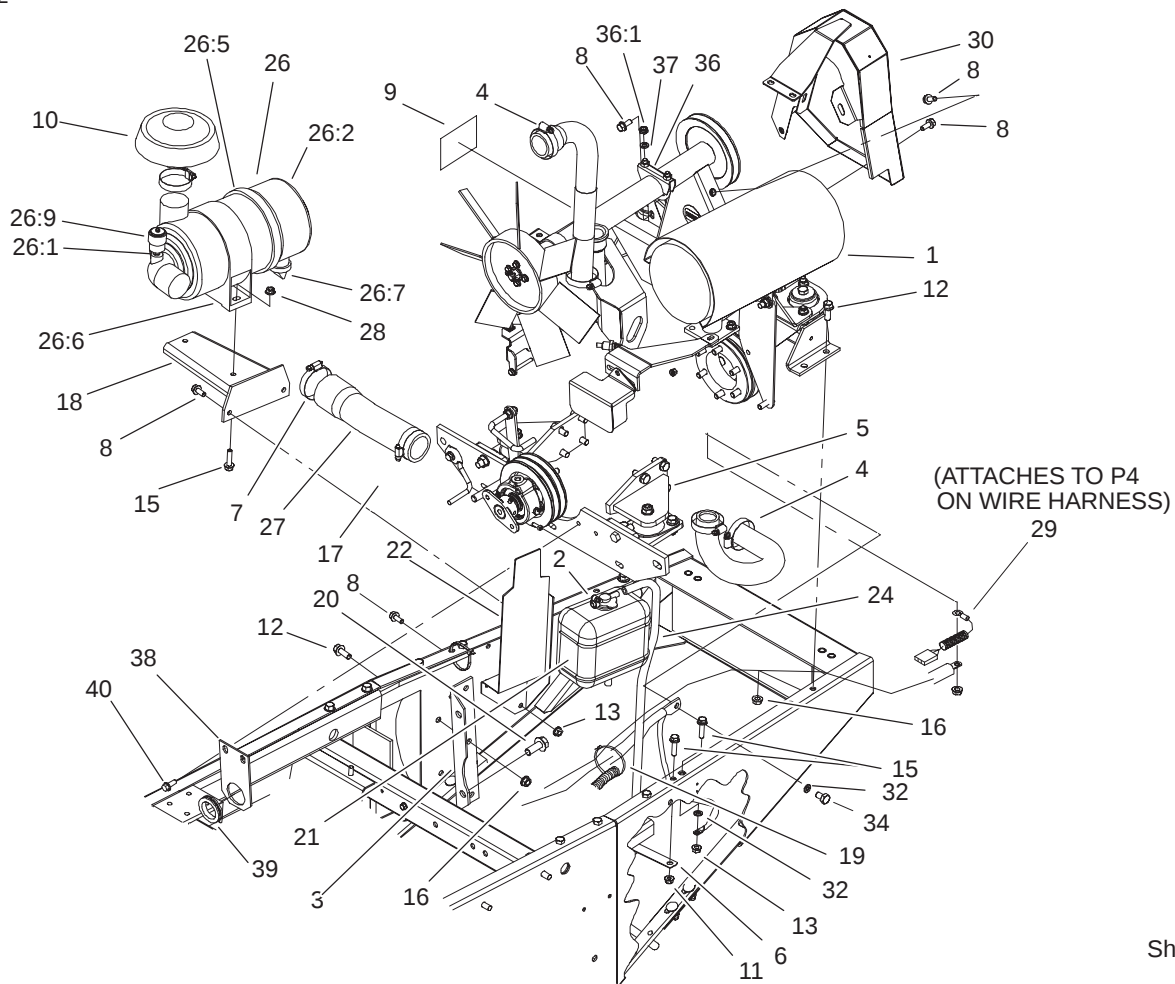

Sheet No.:7


Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
☆1		1	Engine ASM
2	2412-108	2	Clamp-Worm
3	67-8190-01	2	Bracket-Support, Engine
4	2412-3	4	Clamp-Hose
5	23-9740	1	Filter-Oil
6	98-3883	1	Clamp-Wire
7	2412-130	2	Clamp-Hose
8	3234-5	9	Screw
9	83-9150	1	Decal-Fluid, Starting
10	105-2539	1	Cap ASM
11	104-8300	1	Nut-Flange, NI
12	3234-11	10	Screw-HHF
13	32128-20	4	Nut-HF
15	3234-36	4	Screw-HHF
16	3290-357	10	Nut-HHF
17	32128-23	2	Nut-HF
18	98-4518-03	1	Bracket-Cleaner, Air
19	3290-378	1	Tie-Cable
20	3234-32	2	Screw-HHF
21	104-9318	1	Bottle-Overflow
22	105-0050-03	1	Reservoir Bracket ASM
24	63-7630	1	Hose-Fuel
26	104-3428	1	Air Cleaner ASM
26:1	105-4292	1	Nipple-Pipe

Ref. No.	Part No.	Qty.	Description
26:2	104-0497	1	Cover ASM
26:5	104-4897	1	Gasket
26:6	98-4525	1	Bracket-Cleaner, Air
26:7	104-0498	1	Valve-Vacuator
*26:8	98-9763	1	Element ASM
26:9	93-9164	1	Indicator-Mini
27	104-3434	1	Hose-Inlet, Air
28	32128-20	2	Nut-HF
29	99-3441	1	Harness-Wire, Fusible Link
30	105-7807-03	1	Guard-Fan Belt
32	3254-6	2	Washer-Lock, Internal
34	70-8470	1	Screw-HH
36	2112-6	1	Clamp-Muffler
36:1	3218-2	2	Nut-Jam
37	3253-4	2	Washer-Lock
38	104-3774	1	Bracket-Bulkhead
39	240-7	1	Grommet-Rubber
40	32144-11	2	Screw-TAP

☆ Not serviced separately

 * Not illustrated

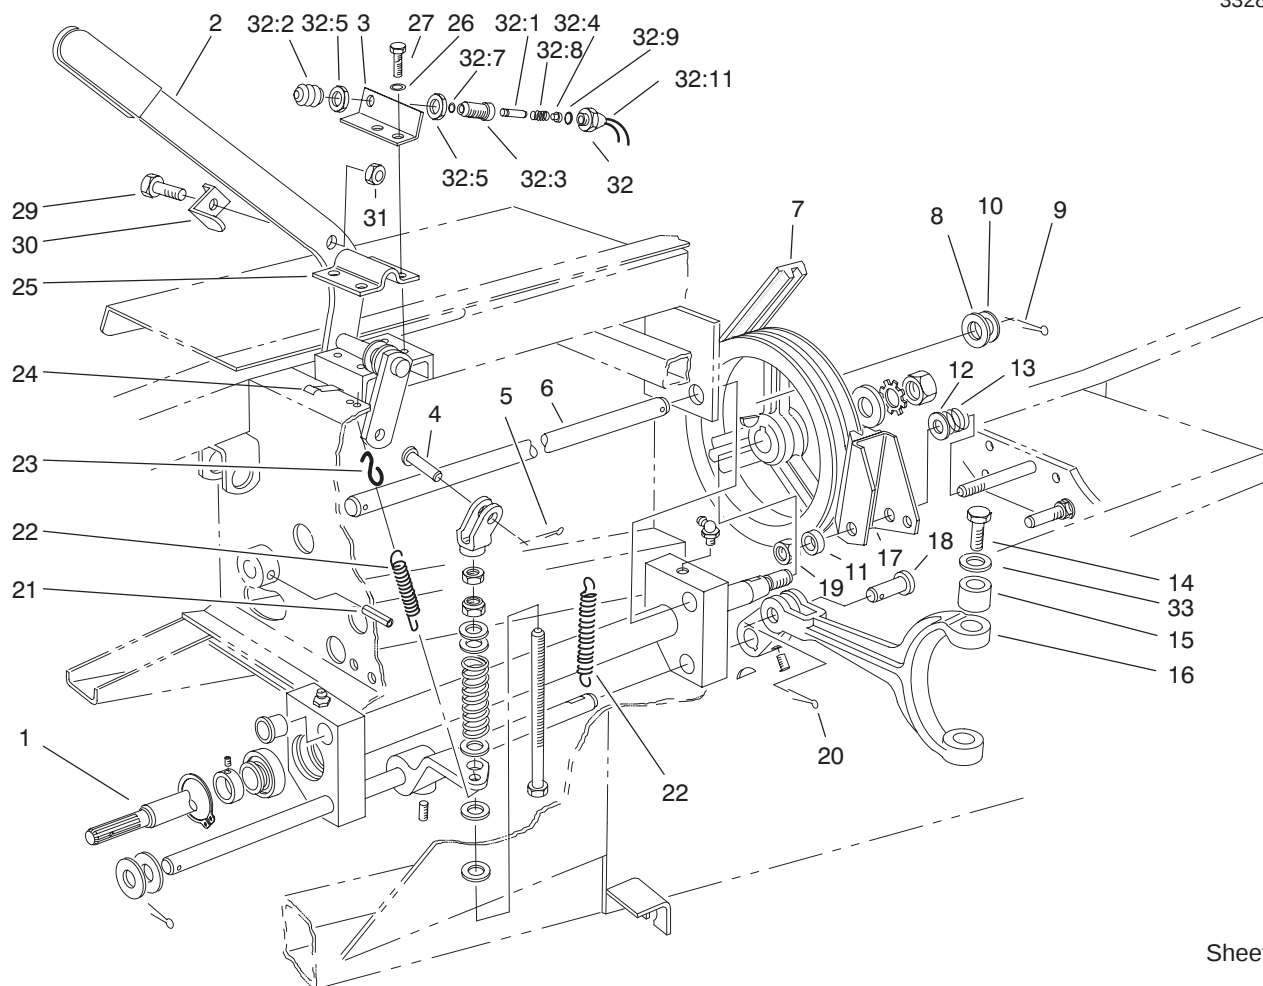


Sheet No.:8

PTO and Shaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		1	PTO ASM	27	32104-6	4	Screw-HH
2	84-8500-01	1	Lever-PTO	29	321-4	1	Screw-HH
3	84-8520-01	1	Bracket-Switch, PTO	30	86-7050	1	Bracket-Switch, Actuator
4	283-42	1	Pin-Clevis	31	3296-16	1	Nut-Lock, NI
5	3272-6	1	Pin-Cotter	32	43-9071	1	Limit Switch ASM
6	43-3860	1	Shaft-Pivot, PTO	32:1	43-8860	1	Plunger-Switch
7	106-4383	1	V-Belt	32:2	43-8870	1	Boot-Switch
8	3256-28	1	Washer-Flat	32:3	43-8620	1	Pin-Guide, Switch
9	3272-22	1	Pin-Cotter	32:4	43-8610	1	Guide
10	3-6498	3	Washer-Thrust	32:5	218-461	2	Nut-HH
11	3-8812	1	Spacer-Spring Anchor	32:7	237-7	1	O-Ring
12	3256-6	1	Washer-Flat	32:8	43-8600	1	Spring-Compression
13	5-1747	1	Spring-Adjustment	32:9	237-30	1	O-Ring
14	92-5727	2	Screw-Patch Lock	32:11	72-4320	1	Switch
15	92-5723	2	Bushing-PTO Fork	33	75-9890	2	Washer-Shim
16	92-4060-03	1	Fork-PTO				
17	27-7370	1	PTO Brake ASM				
18	93-3769	1	Pin-Clevis				
19	3296-28	1	Nut-Lock, NI				
20	3272-11	1	Pin-Cotter				
21	32121-9	1	Pin-Spring				
22	21-1830	2	Spring-PTO, Tension				
23	5-0701	1	Anchor				
24	212-93	3	Clamp-Casing				
25	21-1600	1	Clamp-Lever, PTO				
26	3253-21	4	Washer-Lock				

 ☆ Not serviced separately

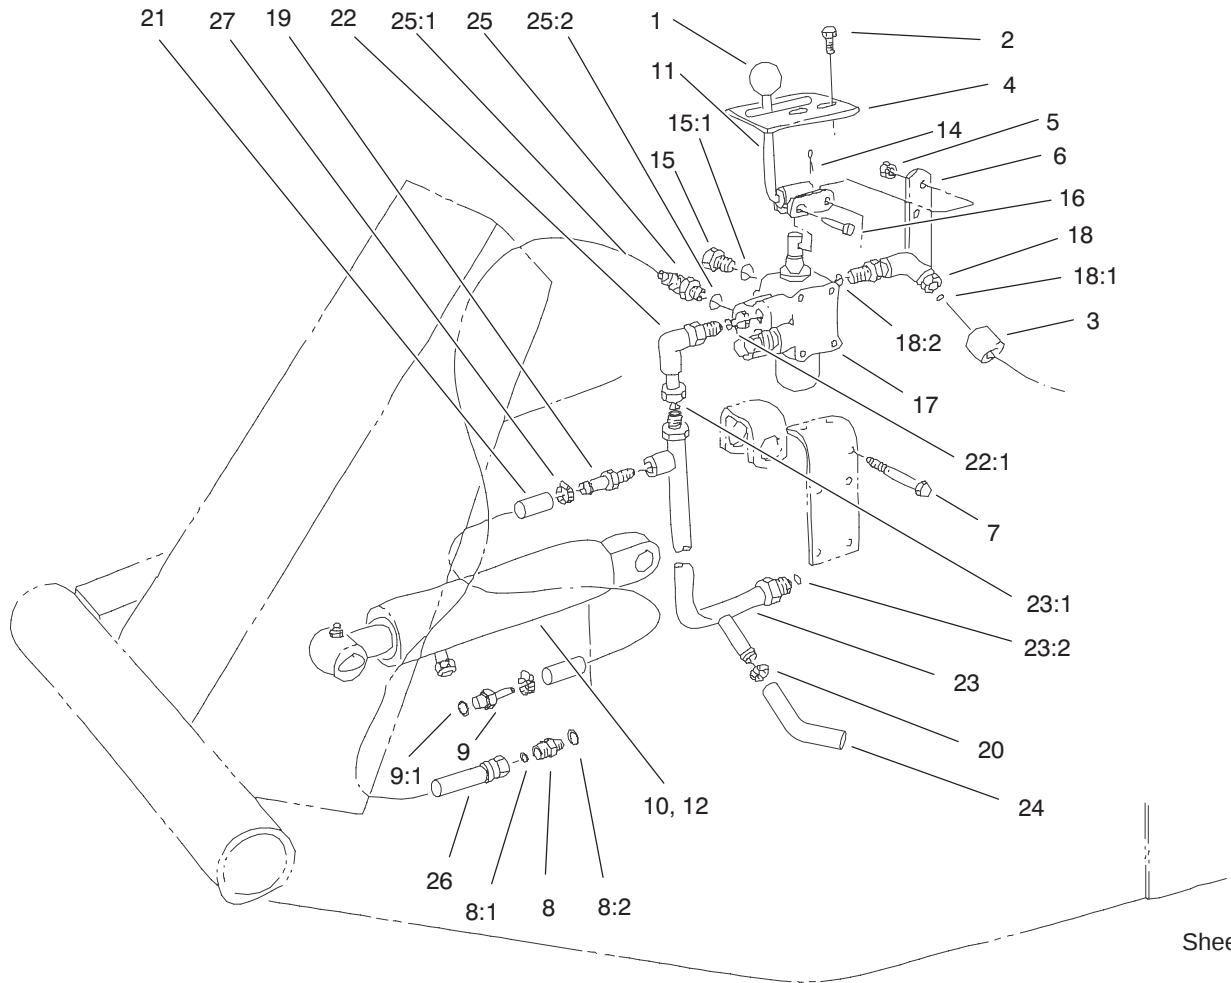


Sheet No.:9

Valve and Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	233-21	1	Knob
2	32144-10	2	Screw-HWH
3	38-3400	1	Guard-Rubber
4	105-7806	1	Latch-Lever, Valve
5	3296-42	5	Nut-Lock, NI
6	21-9010	1	Lever-Valve, Pivot Mount
7	321-23	5	Screw-HH
8	340-2	1	Fitting-Straight, HYD
8:1	237-22	1	O-Ring
8:2	237-42	1	O-Ring
9	95-8849	1	Fitting-HYD, Straight
9:1	237-78	1	O-Ring
10	100-6586	1	Cylinder-Hydraulic
11	105-7839-03	1	Valve Lever ASM
12	100-6591	1	Cylinder-Hydraulic
14	3272-6	1	Pin-Cotter
15	353-512	1	Plug
15:1	237-78	1	O-Ring
16	283-17	1	Pin-Clevis
17	105-7821-01	1	Valve ASM
18	340-99	1	Fitting-HYD, 90°
18:1	237-30	1	O-Ring
18:2	237-42	1	O-Ring
19	304-73	1	Connector-Hose
20	2412-36	1	Clamp-Hose

Ref. No.	Part No.	Qty.	Description
21	92-7834	1	Hose
22	340-110	1	Fitting-90°, Swivel
22:1	237-42	1	O-Ring
23	63-9260	1	Manifold-Valve
23:1	237-22	1	O-Ring
23:2	237-30	1	O-Ring
24	63-8990	1	Hose-Out/Cool
25	340-97	1	Fitting-HYD, 90°
25:1	237-22	1	O-Ring
25:2	237-78	1	O-Ring
26	92-7833	1	Hose ASM
27	2412-108	1	Clamp-Worm

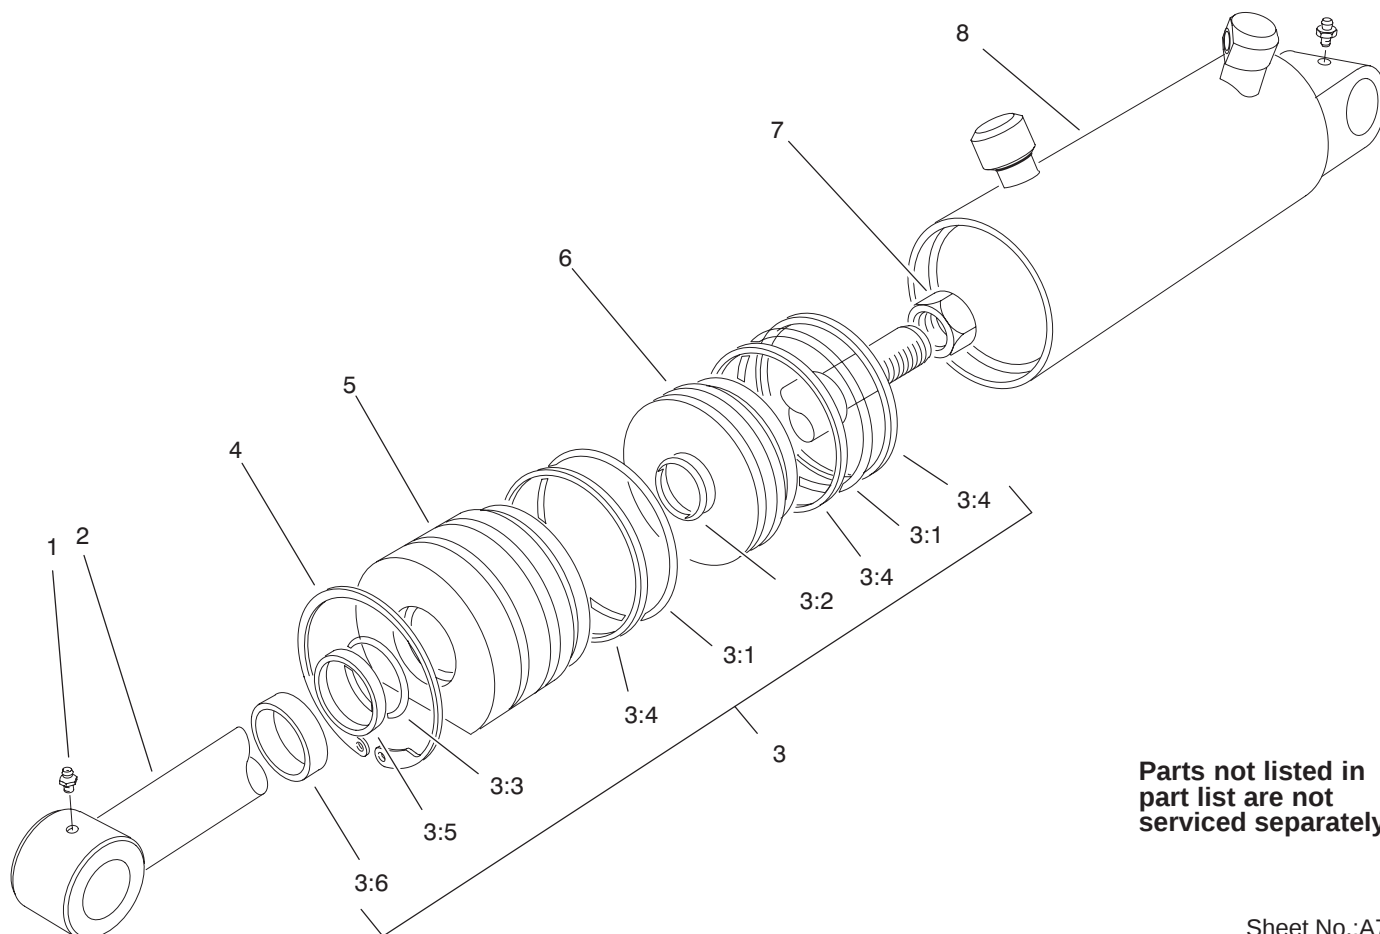 

**Parts not listed in
part list are not
serviced separately**

Sheet No.:A7
T-3789

Hydraulic Cylinder Assembly No. 100-6586 (2-1/2in Bore)

Ref. No.	Part No.	Qty.	Description
1	302-55	2	Zerk
☆2		1	Shaft
3	61-4960	1	Seal Repair Kit
☆3:1		2	O-Ring
☆3:2		1	O-Ring
☆3:3		1	O-Ring
☆3:4		3	Backup
☆3:5		1	Backup
☆3:6		1	Seal-Dust
4	61-4990	1	Ring-Retaining
☆5		1	Head
☆6		1	Piston
☆7		1	Nut
☆8		1	Barrel


Ref. No.	Part No.	Qty.	Description

☆ Not serviced separately

Sheet No.:A8
T-3790

Ref. No.	Part No.	Qty.	Description
1	302-55	2	Zerk
☆2		1	Shaft
3	67-5500	1	Repair Kit
☆3:1		2	O-Ring
☆3:2		1	O-Ring
☆3:3		1	O-Ring
☆3:4		3	Backup
☆3:5		1	Backup
☆3:6		1	Seal-Dust
4	67-5470	1	Ring-Snap
☆5		1	Head
☆6		1	Piston
☆7		1	Nut
☆8		1	Barrel

 17

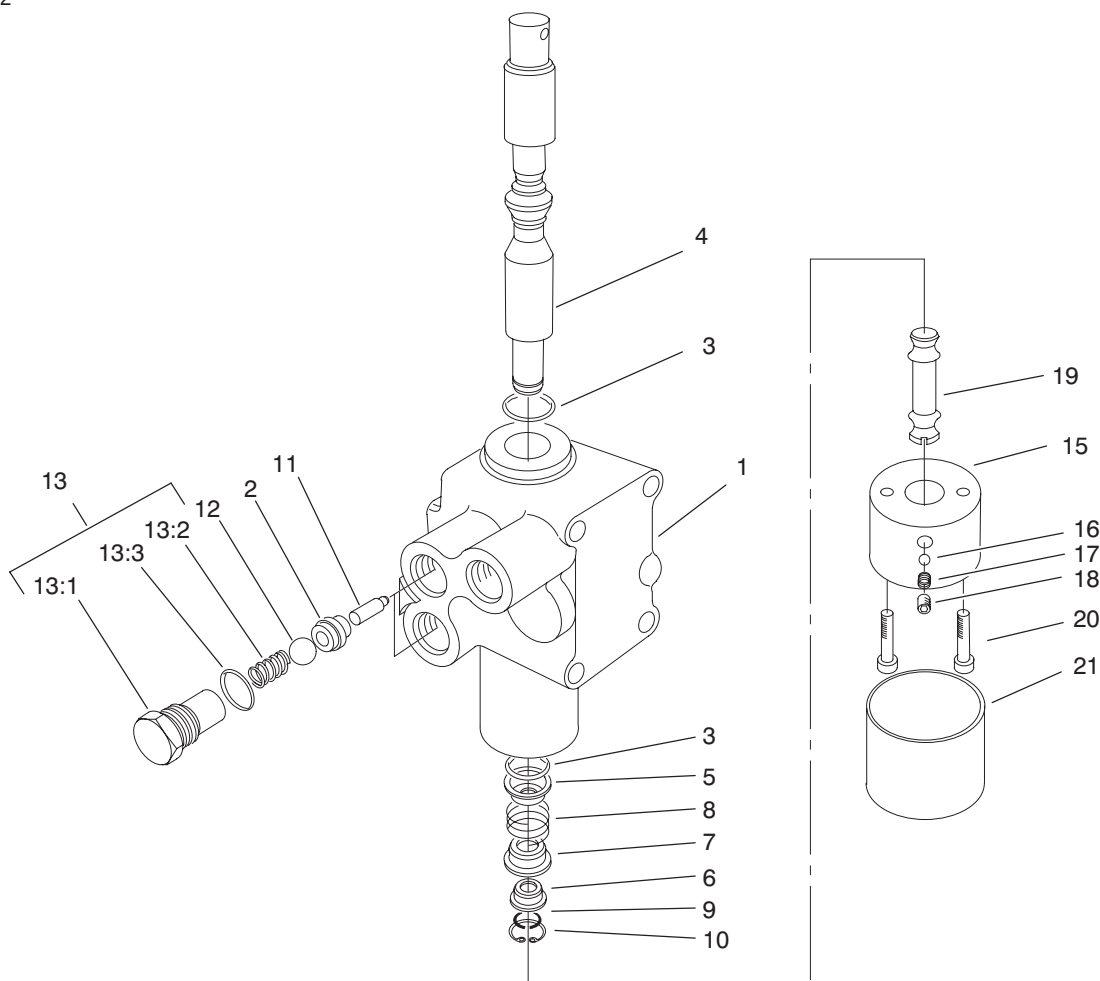

Sheet No.:A9


T-3834

Valve Assembly No. 105-7821-01

Ref. No.	Part No.	Qty.	Description
☆1		1	Body
2	22-8370	2	Seat-Valve
3	22-8500	2	O-Ring
4	105-7826	1	Spool
5	22-8380	1	Retainer
6	22-8400	1	Spacer
7	22-8390	1	Retainer
8	22-8410	1	Spring
9	22-8480	1	Ring-Snap
10	22-8490	1	Ring-Snap
11	22-8360	2	Pin
12	22-8350	2	Ball
☆13		2	Plug ASM
13:1	22-8330	1	Plug
13:2	22-8340	1	Spring
13:3	237-42	1	O-Ring
15	105-7828	1	Barrel-Detent
16	105-7829	2	Ball-Steel
17	105-7830	2	Spring
18	105-7831	2	Screw-Set
19	105-7832	1	Stud-Detent
20	105-7833	2	Screw-HS
21	105-7834	1	Cap-Dust, Round

Ref. No.	Part No.	Qty.	Description

 
☆ Not serviced separately

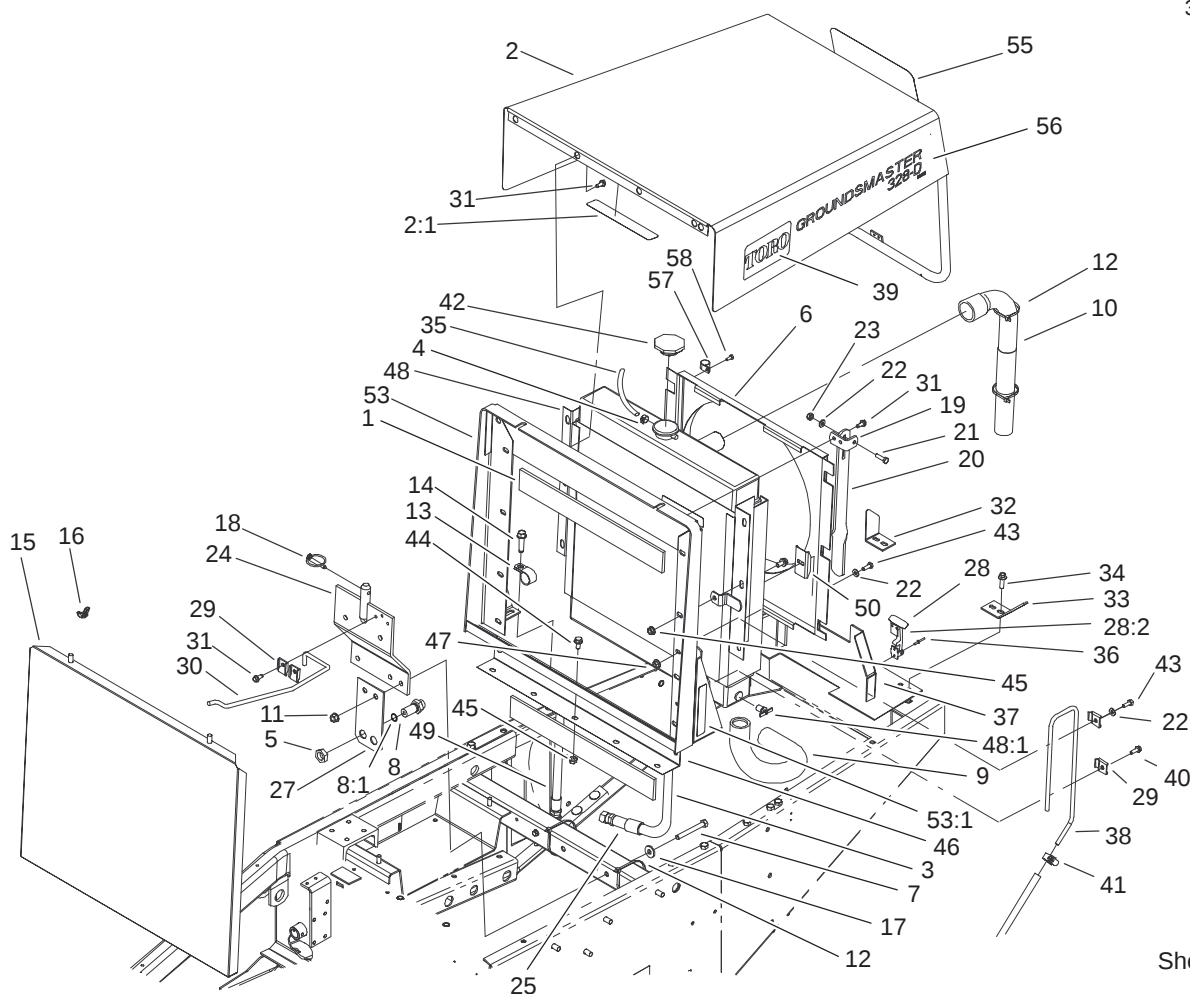

Sheet No.:10

Radiator and Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	43-3320	2	Foam-Radiator	22	3256-22	8	Washer-Flat
2	105-2919	1	Hood ASM	23	3296-16	1	Nut-Lock, NI
2:1	82-8970	1	Decal-Coolant, Engine	24	105-2542-01	1	Bracket-Support, Seat
3	63-9010	1	Hose-Transmission, Coolant	25	38-3400	1	Guard-Rubber
4	92-2379	1	Clamp-Hose	27	68-9160	1	Bracket
5	340-70	2	Nut-Lock	28	59-9740	1	Flex Draw Latch ASM
6	105-0007-03	1	Fan Shroud ASM	28:2	249-40	1	Keeper
7	323-14	3	Screw-HH	29	3-6657	4	Clip-Skid
8	340-71	2	Fitting-Straight, Bulkhead	30	86-7040	1	Rod-Prop, Seat
8:1	237-22	2	O-Ring	31	32144-10	7	Screw-HWH
9	104-3432	1	Hose-Radiator, Bottom	32	62-3010-01	1	Bracket-RH
10	104-3433	1	Hose-Radiator, Top	33	62-3020-01	1	Bracket-LH
11	32128-21	3	Nut-HF	34	3234-17	4	Screw-HHF
12	3290-379	6	Tie-Cable	35	104-0076	1	Hose-Fuel
13	2412-4	1	Clamp	36	3290-55	4	Rivet-Pop
14	11-0590	1	Screw-HWHTF	37	105-4255-01	1	Pulley Guard ASM
15	67-9030-03	1	Grille	38	105-4265	1	Tube-Vent
16	32103-2	2	Nut-Wing	39	62-7400	2	Decal-Logo, Toro
17	5-0838	3	Washer	40	32104-109	1	Screw-HWH
18	283-76	1	Pin-Lynch	41	2412-108	1	Clamp-Worm
19	84-5330	1	Bracket-Prop, Hood	42	66-3240	1	Cap-Radiator
20	84-5380	1	Strap-Prop, Hood	43	321-4	7	Screw-HH
21	321-6	1	Screw-HH	44	3234-14	13	Screw-HHF
				45	32128-20	13	Nut-HF
				46	105-4264-03	1	Grill-Plate, Sealing
				47	32128-33	1	Nut-HF

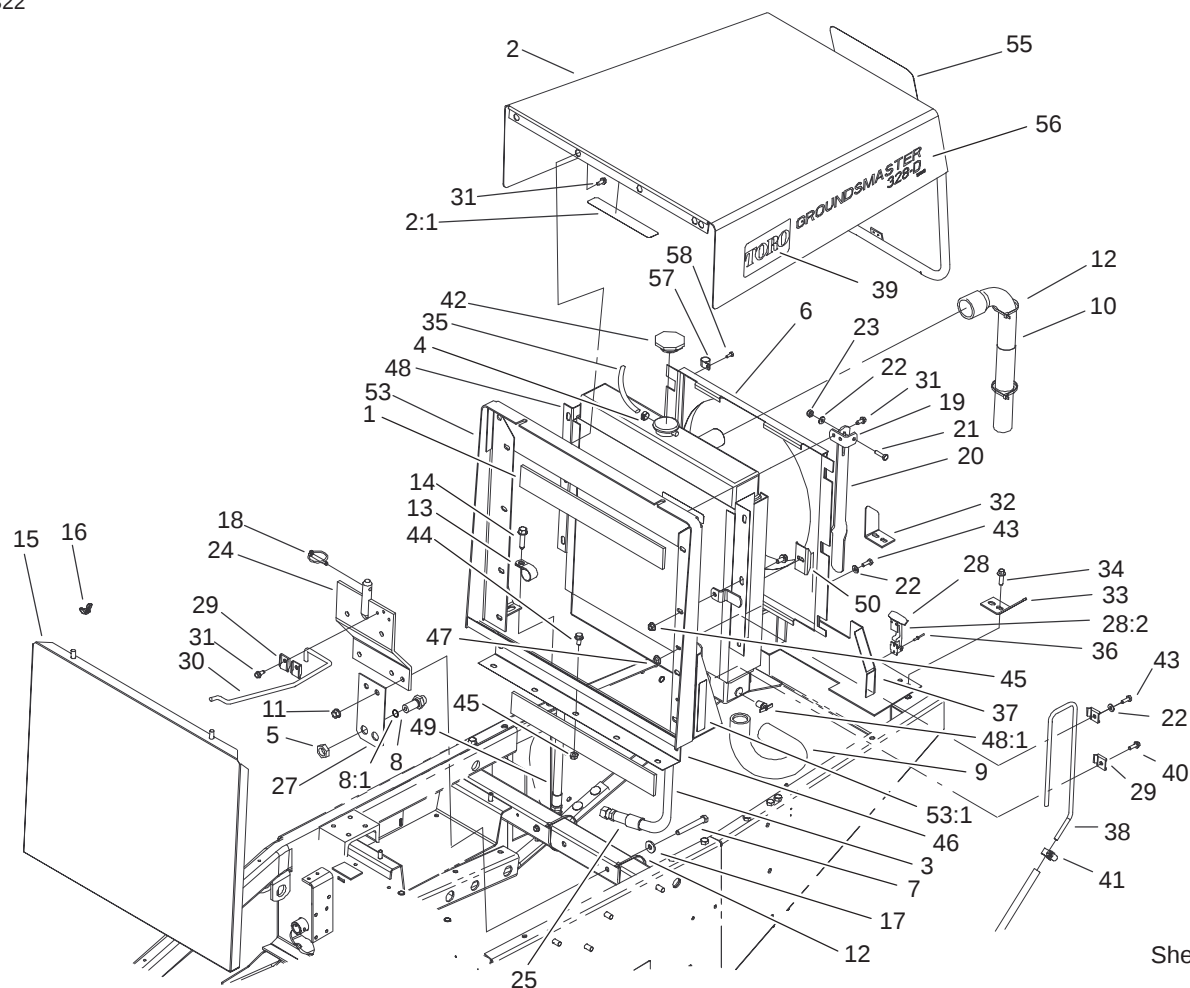 


Sheet No.:10

Radiator and Hood Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
48	104-3483	1	Radiator ASM
48:1	304-46	1	Draincock
49	63-8960	1	Hose
50	105-0012-03	6	Clip-Mounting, Fan Shroud
53	105-2918	1	Radiator Support ASM
53:1	77-3100	3	Decal-Warning
55	66-6140	1	Decal
56	106-4396	2	Decal-Gm328d
57	2412-83	1	Clamp-Cable
58	32144-1	1	Screw-Taprite


Ref. No.	Part No.	Qty.	Description

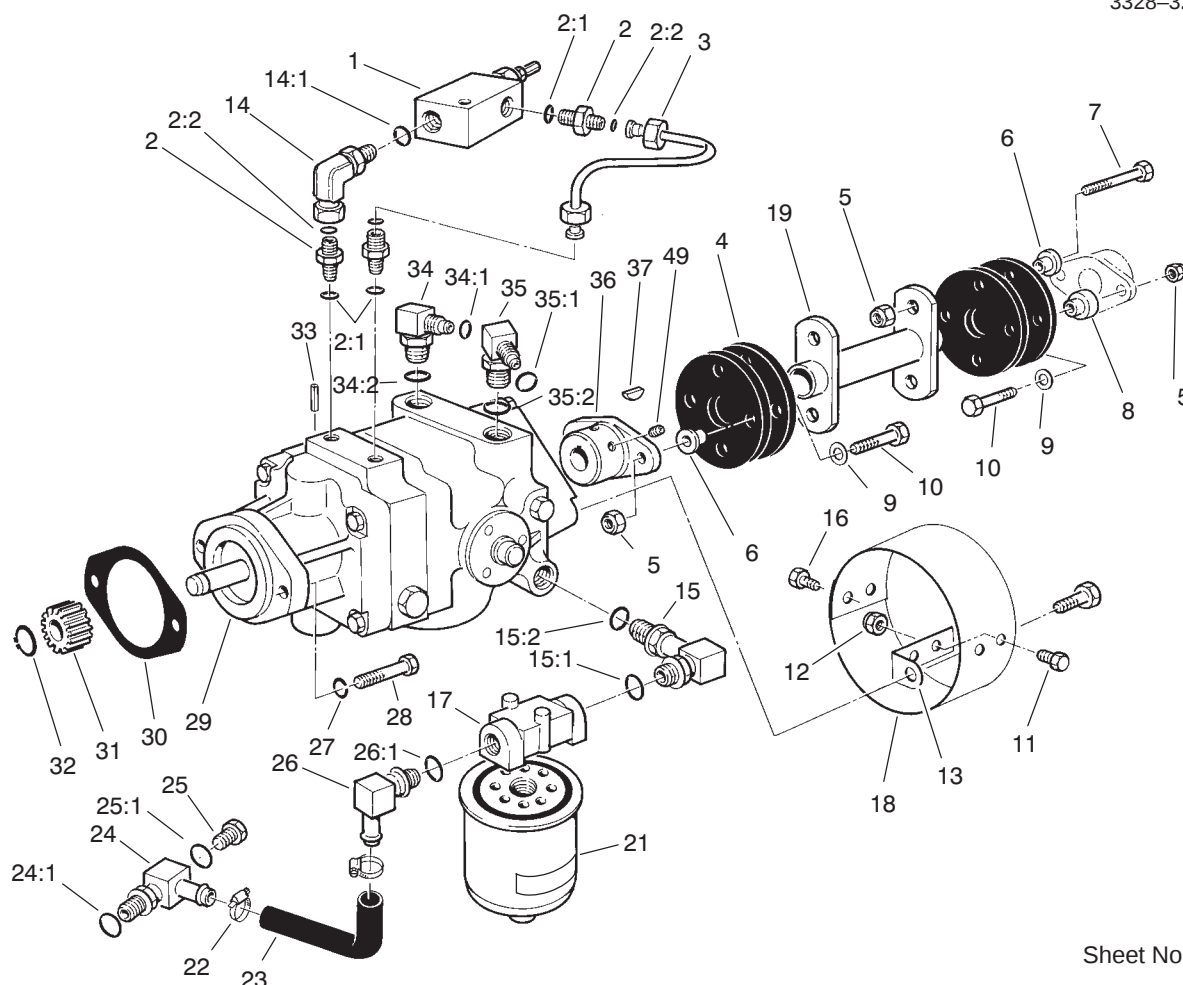 

Sheet No.:12

Hydrostatic Transmission Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	72-3540	1	Valve-Relief (only on: 30627)	15:2	237-81	1	O-Ring
2	340-92	3	Fitting-HYD, Straight (only on: 30627)	16	321-4	2	Screw-HH
2:1	237-78	1	O-Ring (only on: 30627)	17	68-8990	1	Filter Head ASM
2:2	237-21	1	O-Ring (only on: 30627)	18	54-9300-03	1	Cover-Shaft, Pump
3	72-3550	1	Tube (only on: 30627)	19	105-0033-03	1	Drive Shaft ASM
4	44-2230	4	Coupling-Rubber	21	23-9740	1	Filter-Oil
5	32152-1	8	Nut-Lock, NI	22	2412-34	2	Clamp-Hose
6	71-4411	4	Spacer	23	68-9650	1	Hose-Axle
7	322-8	4	Screw-HH	24	70-2620	1	Fitting-HYD, 90°
8	71-4410	4	Spacer	24:1	237-81	1	O-Ring
9	3256-3	4	Washer-Flat	25	353-508	1	Plug
10	322-10	4	Screw-HH	25:1	237-42	1	O-Ring
11	321-2	2	Screw-HH	26	353-987	1	Fitting-HYD, 90°
12	3296-42	4	Nut-Lock, NI	26:1	237-81	1	O-Ring
13	54-9290	2	Bracket-Mounting	27	3253-21	2	Washer-Lock
14	340-143	1	Elbow-90°, Swivel (only on: 30627)	28	323-7	2	Screw-HH
14:1	237-78	1	O-Ring (only on: 30627)	29	92-8947	1	Transmission ASM
15	68-8660	1	Fitting-HYD, 90°	30	41-8760	1	Gasket
15:1	237-80	1	O-Ring	31	86-7220	1	Gear-Pinion
				32	32120-72	1	Ring-Snap
				33	32121-6	1	Pin-Roll
				34	340-77	1	Fitting-HYD, 90°
				34:1	237-22	1	O-Ring
				34:2	237-42	1	O-Ring
				35	340-99	1	Fitting-HYD, 90°
				35:1	237-30	1	O-Ring

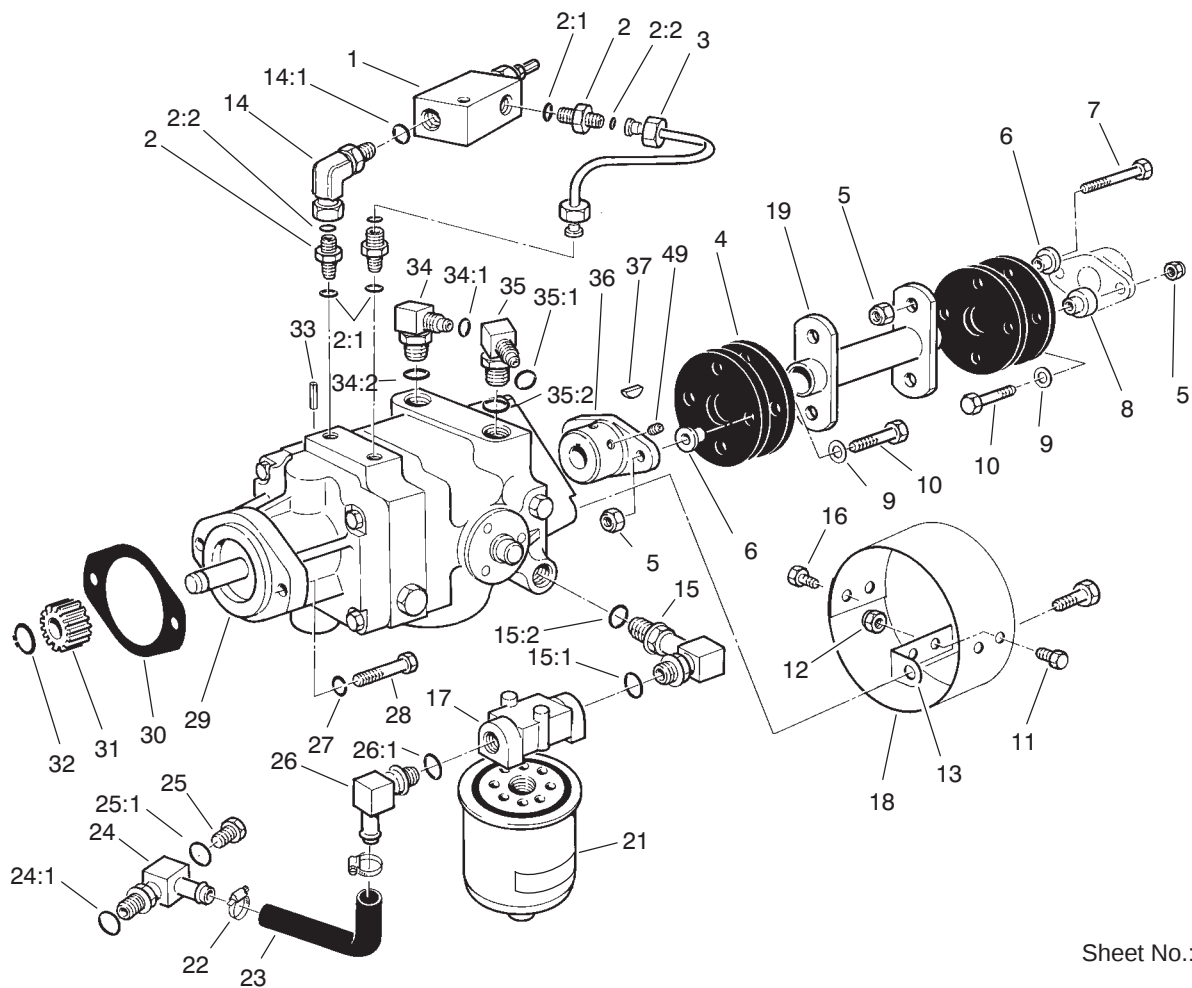 


Sheet No.:12

Hydrostatic Transmission Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
35:2	237-42	1	O-Ring
36	33-4380	1	Hub-Pump
37	3257-32	1	Key-Woodruff
49	3241-5	2	Screw-Set

Ref. No.	Part No.	Qty.	Description

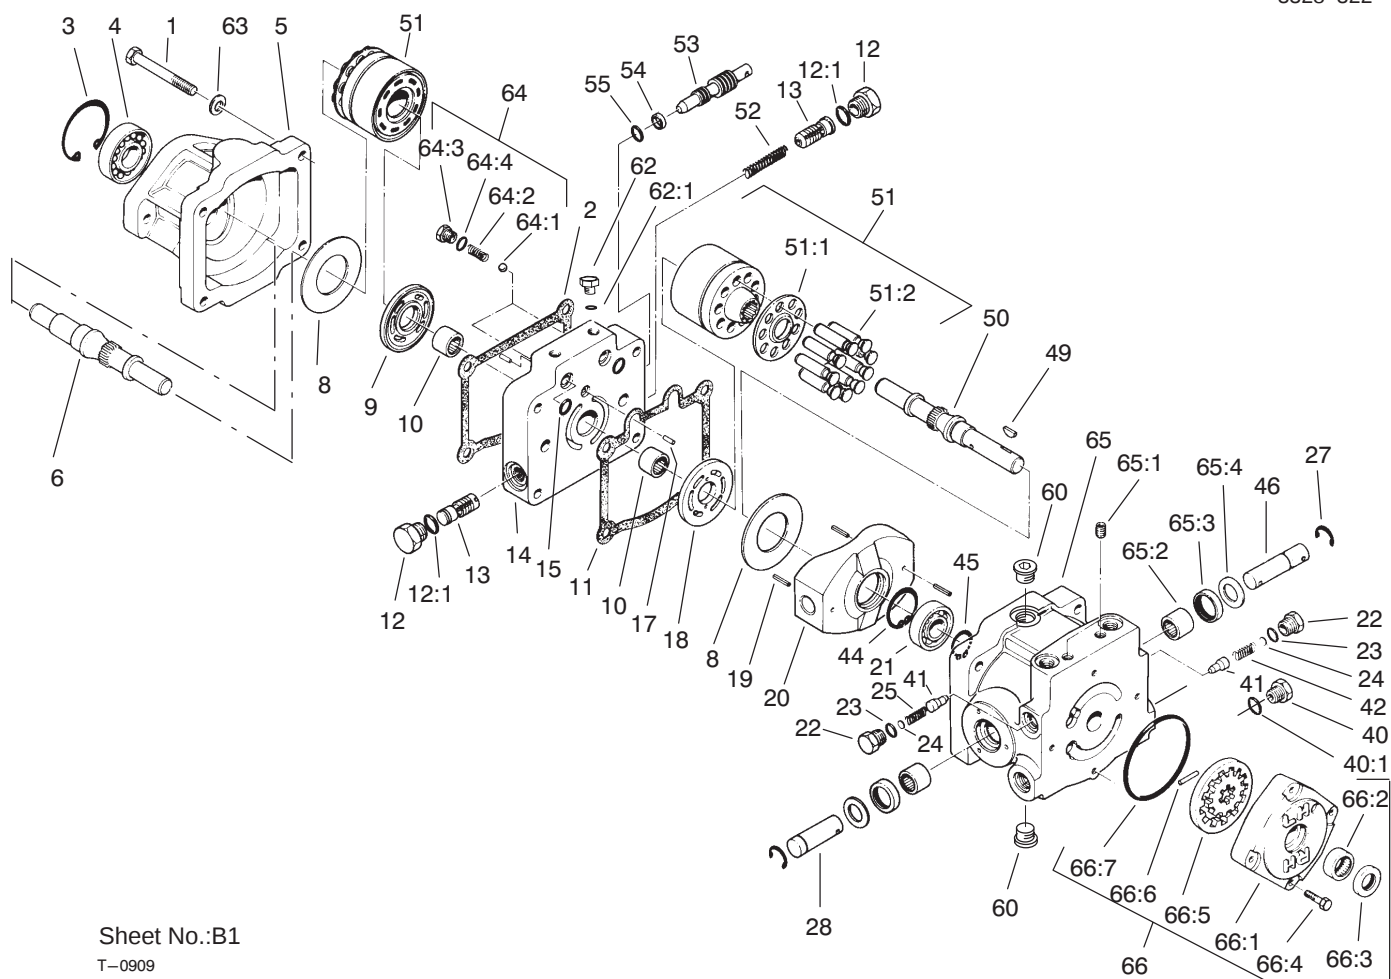 

Sheet No.:B1


T-0909

Hydrostatic Transmission Assembly No. 92-8947

Ref. No.	Part No.	Qty.	Description
1	323-56	4	Screw-HH
2	67-9100	1	Gasket
3	32120-8	1	Ring-Snap
4	72-3750	1	Bearing-Roller
5	67-9080	1	Housing-Motor
6	46-8410	1	Shaft-Motor
8	25-2380	2	Plate-Thrust
9	25-2390	1	Plate-Valve, Motor
10	46-8400	2	Bearing-Shaft
11	25-2400	1	Gasket
12	353-550	2	Plug-HYD
12:1	237-79	1	O-Ring
13	25-2410	2	Valve ASM
14	92-8918	1	Section-Center
15	93-4132	2	O-Ring
17	25-2430	2	Pin-Dowel
18	25-2440	1	Plate-Valve, Pump
19	32121-91	3	Pin-Spring, Coil
20	25-2450	1	Plate-Swash, Variable
21	251-8	1	Bearing-Ball
22	25-2460	2	Plug-HH
23	237-86	4	O-Ring
24	25-2470	2	Pack-Shim
25	25-2480	1	Spring-Valve
27	32151-46	2	Ring-Retaining
28	25-2500	1	Shaft-Trunnion

Ref. No.	Part No.	Qty.	Description
40	353-551	1	Plug-HH
40:1	237-80	1	O-Ring
41	83-7260	2	Cone-Relief, Charge
42	25-2570	1	Spring-Valve
44	32120-11	1	Ring-Retaining
45	32120-15	1	Ring-Snap, Ext
46	25-2580	1	Shaft-Trunnion
49	3257-32	1	Key-Woodruff
50	67-8020	1	Shaft-Pump
51	48-1800	2	Cylinder Block Kit
☆51:1		1	Retainer-Slipper
☆51:2		9	Piston ASM
52	25-2610	1	Spring-Valve
53	88-8220	1	Valve-By-Pass
54	25-2630	1	Ring-Back-Up
55	237-22	1	O-Ring
60	67-9090	1	Plug
62	92-8776	4	Plug
62:1	92-8777	1	O-Ring
63	93-0312	4	Washer-Hardened
64	99-5689	1	Check Valve ASM
64:1	25-2490	1	Ball
64:2	25-2640	1	Spring-Valve
64:3	25-2650	1	Plug-Valve, Check
64:4	237-86	1	O-Ring
65	54-7890	1	Housing Kit

 
☆ Not serviced separately

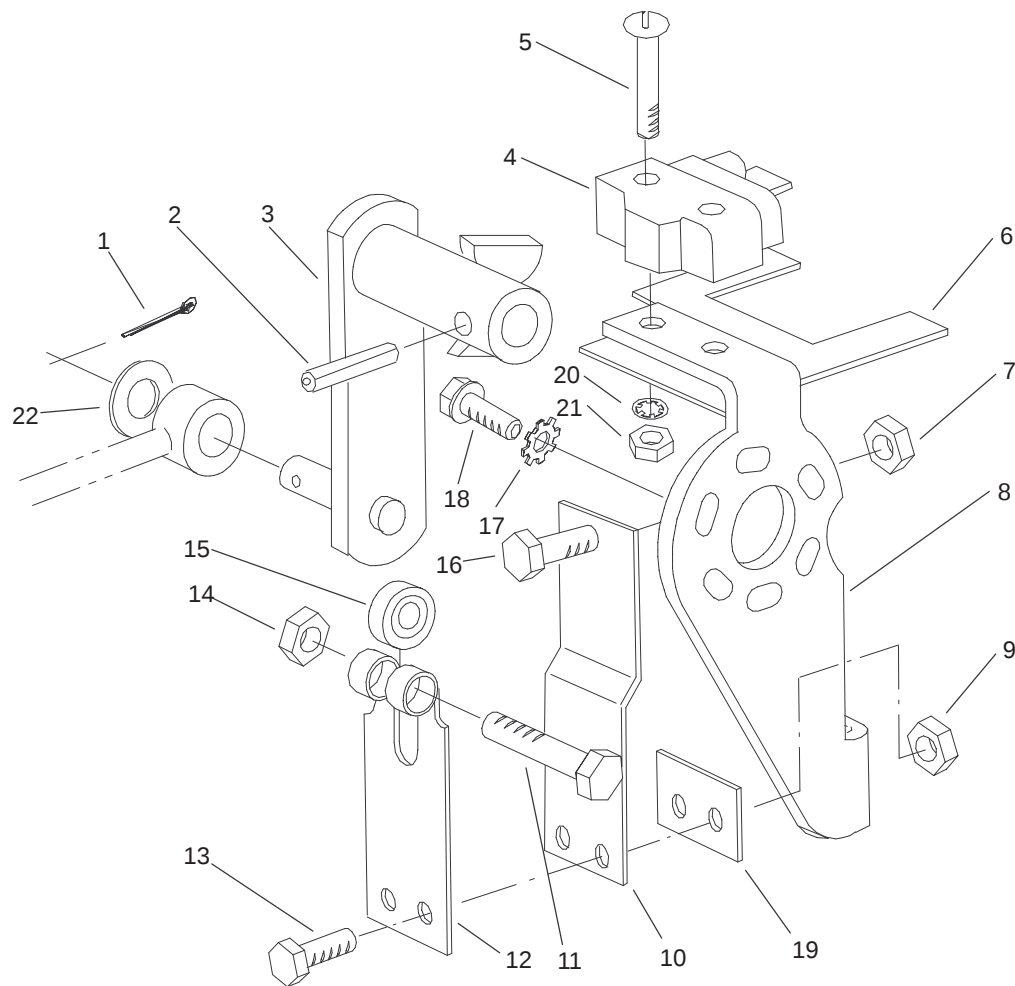

Sheet No.:13

Neutral Centering Device Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter				
2	32121-24	1	Pin-Spring				
3	28-9570-03	1	Lever-Pump				
4	29-6163	1	Switch-Micro				
5	3249-11	2	Screw				
6	46-8810	1	Stop-Spring, Leaf				
7	3219-2	1	Nut-Hex				
8	29-6120-03	1	Plate-Pump				
9	3296-42	2	Nut-Lock, NI				
10	29-6170	1	Leaf Spring ASM				
11	322-17	1	Screw-HH				
12	29-6150	1	Spring-Leaf				
13	321-6	2	Screw-HH				
14	3296-29	1	Nut-Lock, NI				
15	251-259	1	Bearing				
16	3210-7	1	Screw-HH				
17	3255-7	3	Washer-Lock/Ext				
18	49-2040	3	Screw-Tapping				
19	51-3150	1	Shim				
20	3254-9	2	Washer-Lock/Int				
21	3217-16	2	Nut-Hex				
22	3256-6	1	Washer-Flat				

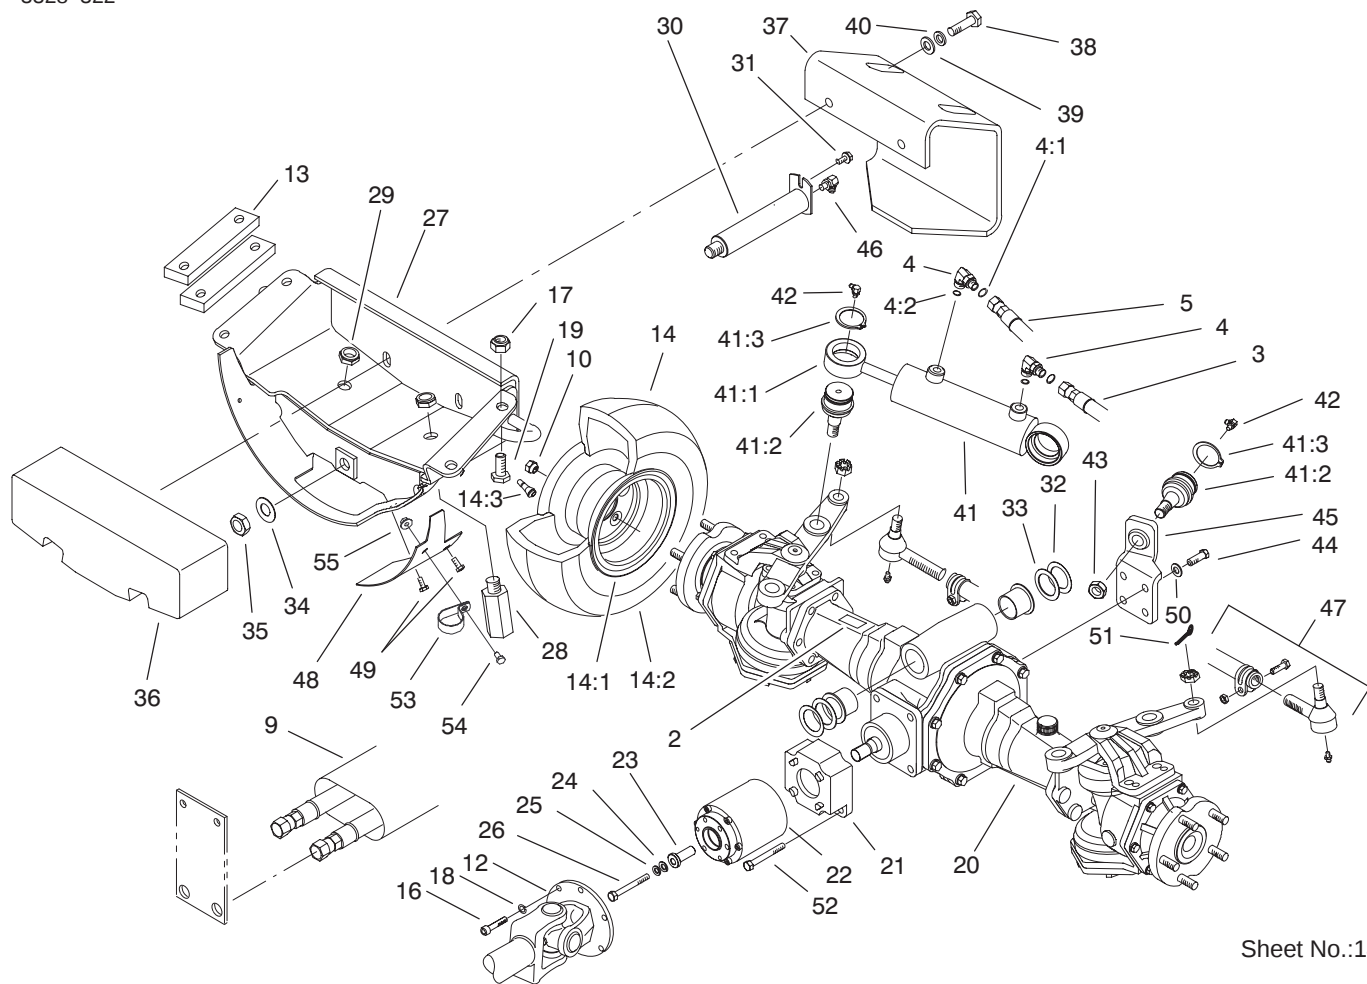 


Sheet No.:14

4 Wheel Drive Rear Axle Assembly (only on: 30627)

Ref. No.	Part No.	Qty.	Description
2	70-2560	1	Decal-Oil
3	99-2407	1	Hose ASM
4	340-97	2	Fitting-HYD, 90°
4:1	237-22	1	O-Ring
4:2	237-78	1	O-Ring
5	99-2408	1	Hose ASM
9	56-7985	1	Sleeve-Protective
10	93-5268	10	Nut-Lug
12	98-5009	1	Driveshaft ASM
13	105-0073-01	4	Spacer-Frame
★14		2	Tire And Wheel ASM
14:1	105-7846	1	Wheel
14:2	231-122	1	Tire
14:3	232-27	1	Stem-Valve
16	3274-8	12	Screw-HSH
17	32128-23	4	Nut-HF
18	3253-3	12	Washer-Lock
19	3234-46	4	Screw-HHF
20	95-7501	1	Rear Axle ASM
21	98-3860-03	1	Adaptor-Locator, Clutch
22	95-6296	1	Clutch-Bidirectional
23	99-8436	1	Spacer-Clutch
24	33094-00	1	Washer-Flat
25	3253-4	1	Washer-Lock
26	33114-070	1	Screw-HH

Ref. No.	Part No.	Qty.	Description
27	100-6570-01	1	Axle Support ASM
28	98-3863	2	Stop-Oscillation
29	3296-15	2	Nut-Lock NI
30	99-8434-03	1	Rear Axle Pin ASM
31	32144-14	1	Screw-HWH
32	99-8431	1	Washer-Thrust
33	99-8432	1	Washer-Thrust
34	71-4540	1	Washer-Thrust
35	32146-20	1	Nut-Jam
36	98-3869-01	1	Weight-Rear
37	98-3880-03	1	Bumper
38	325-7	2	Screw-HH
39	3256-26	2	Washer-Flat
40	3253-7	2	Washer-Lock
★41		1	Steering Cylinder ASM
41:1	99-2415	1	Cylinder-Hydraulic
41:2	92-5838-01	2	Joint-Ball
41:3	32151-104	2	Ring-Retaining, Ext
42	302-11	2	Fitting-Lube, 45°
43	3220-6	4	Nut-Jam
44	95-8812	4	Screw-HH
45	98-3862-03	1	Bracket-Support, Cylinder
46	302-33	1	Fitting-Grease
47	98-3871-03	1	Tie Rod ASM

 
★ Not serviced separately

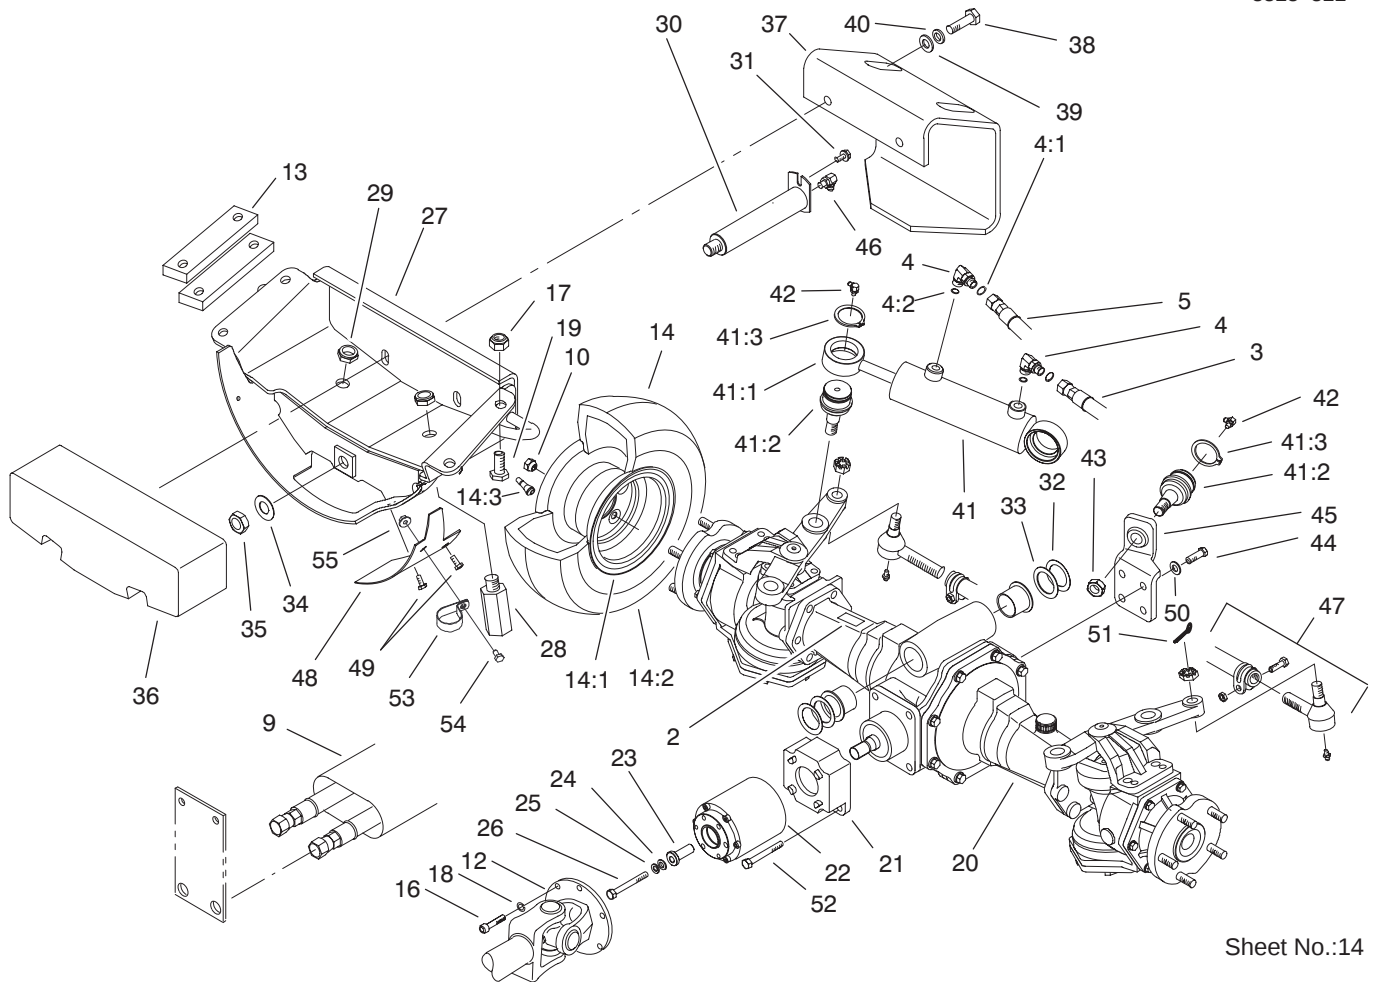

Sheet No.:14

4 Wheel Drive Rear Axle Assembly(only on: 30627) (Continued)

Ref. No.	Part No.	Qty.	Description
48	99-2413-01	1	Cover-, Guard, Flywheel
49	32144-10	2	Screw-HWH
50	48-9220	4	Washer
51	3272-12	2	Pin-Cotter
52	87-3700	2	Screw-HH
53	2412-74	1	R-Clamp
54	321-2	1	Screw-HH
55	32128-14	1	Nut-HF

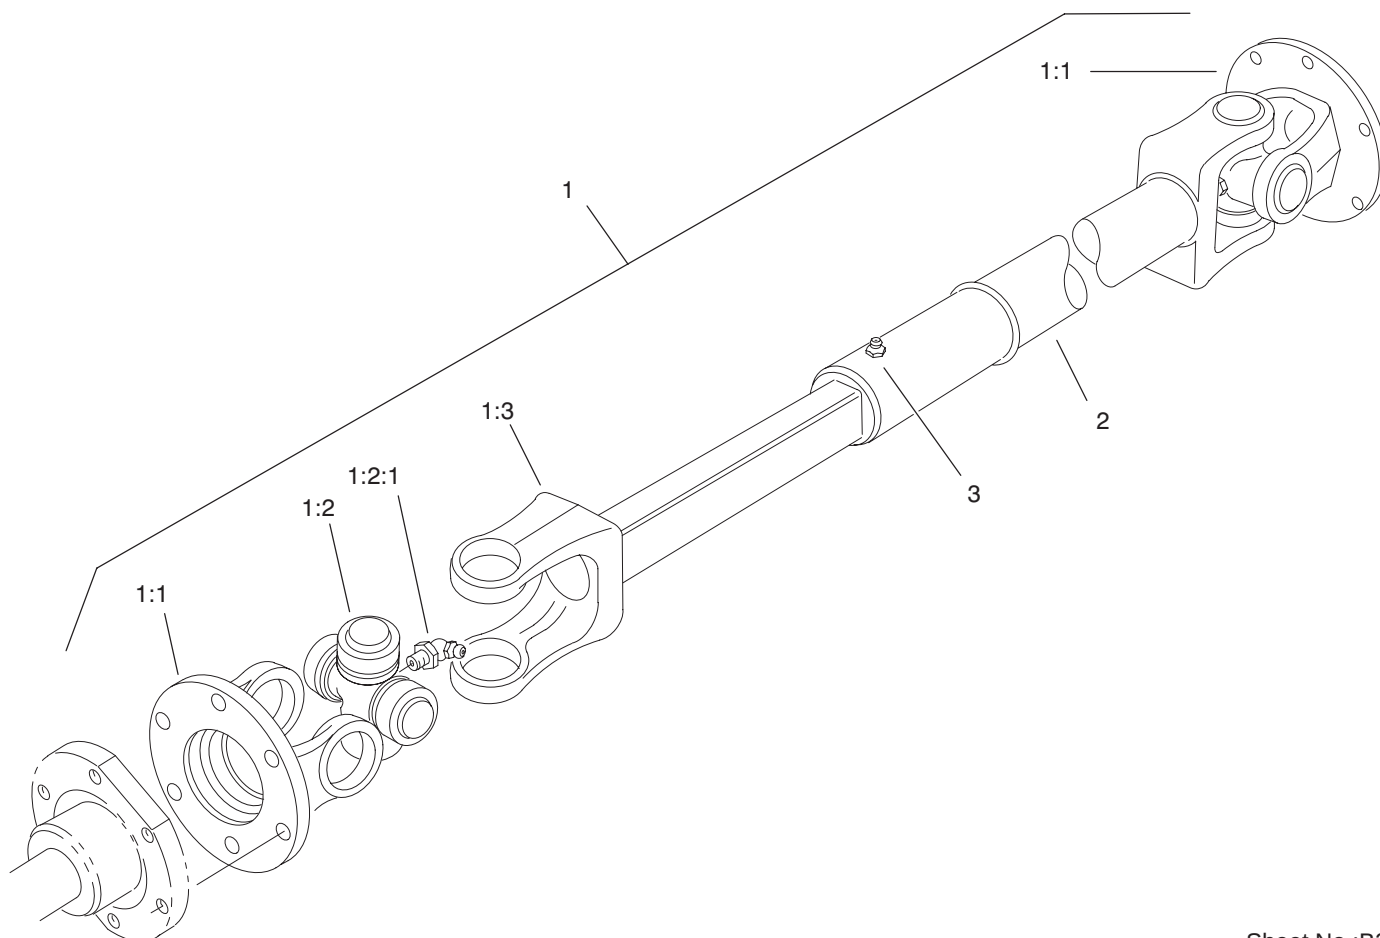 


Sheet No.:B2

T-3804

Driveshaft Assembly No. 98-5009 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	92-5096	1	Joint And Shaft ASM
1:1	72-3410	1	Yoke-Flange
1:2	54-9180	1	U-Joint Kit
1:2:1	62-3820	1	Fitting-Grease
1:3	72-3420	1	Shaft-Slip, Yoke
2	72-3431	1	Tube-Slip, Yoke
3	302-58	1	Fitting-Grease

Ref. No.	Part No.	Qty.	Description

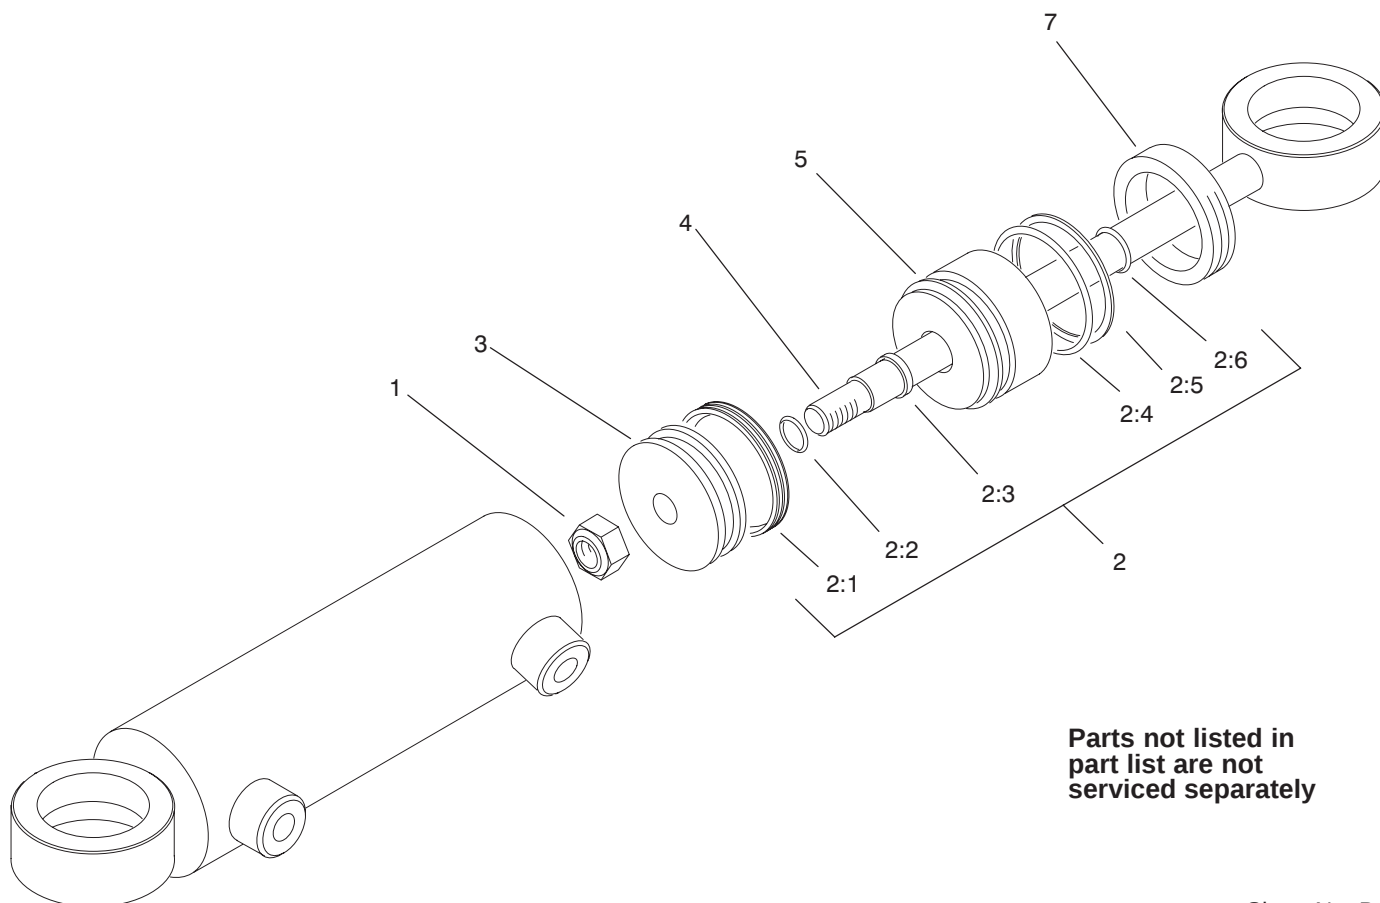 

**Parts not listed in
part list are not
serviced separately**


Sheet No.:B4
T-3111

Cylinder Assembly No. 99-2415 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
1	32152-10	1	Locknut
2	86-5390	1	Seal Repair Kit
☆2:1		1	Uniring
☆2:2		1	O-Ring
☆2:3		1	Seal-Rod
☆2:4		1	O-Ring
☆2:5		1	Ring-Backup
☆2:6		1	O-Ring
☆3		1	Piston
☆4		1	Rod
☆5		1	Head
☆7		1	Collar-Internal

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

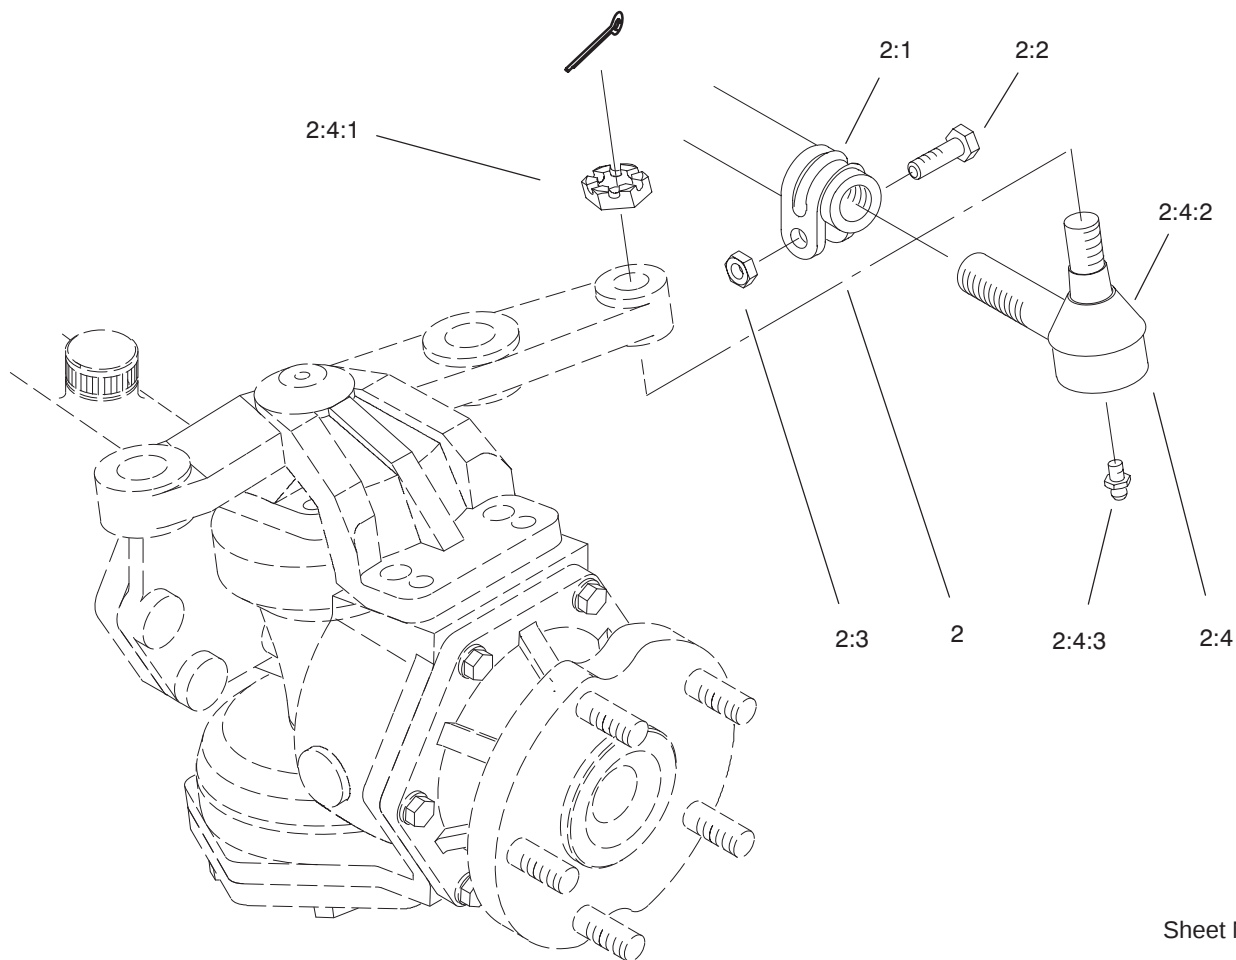


Sheet No.:B5

Tie Rod Assembly No. 98-3871-03 (only on: 30627)

Ref. No.	Part No.	Qty.	Description
☆2		1	Tie Rod ASM
2:1	99-2412-03	1	Rod And Clamp ASM
2:2	323-9	2	Screw-HH
2:3	3296-39	2	Nut-Lock, NI
2:4	71-4740	2	End-Rod, Tie
2:4:1	105-7941	1	Nut-Hex, Slotted
2:4:2	105-7835	1	Seal
2:4:3	302-5	1	Fitting-Grease

Ref. No.	Part No.	Qty.	Description

 ☆ Not serviced separately

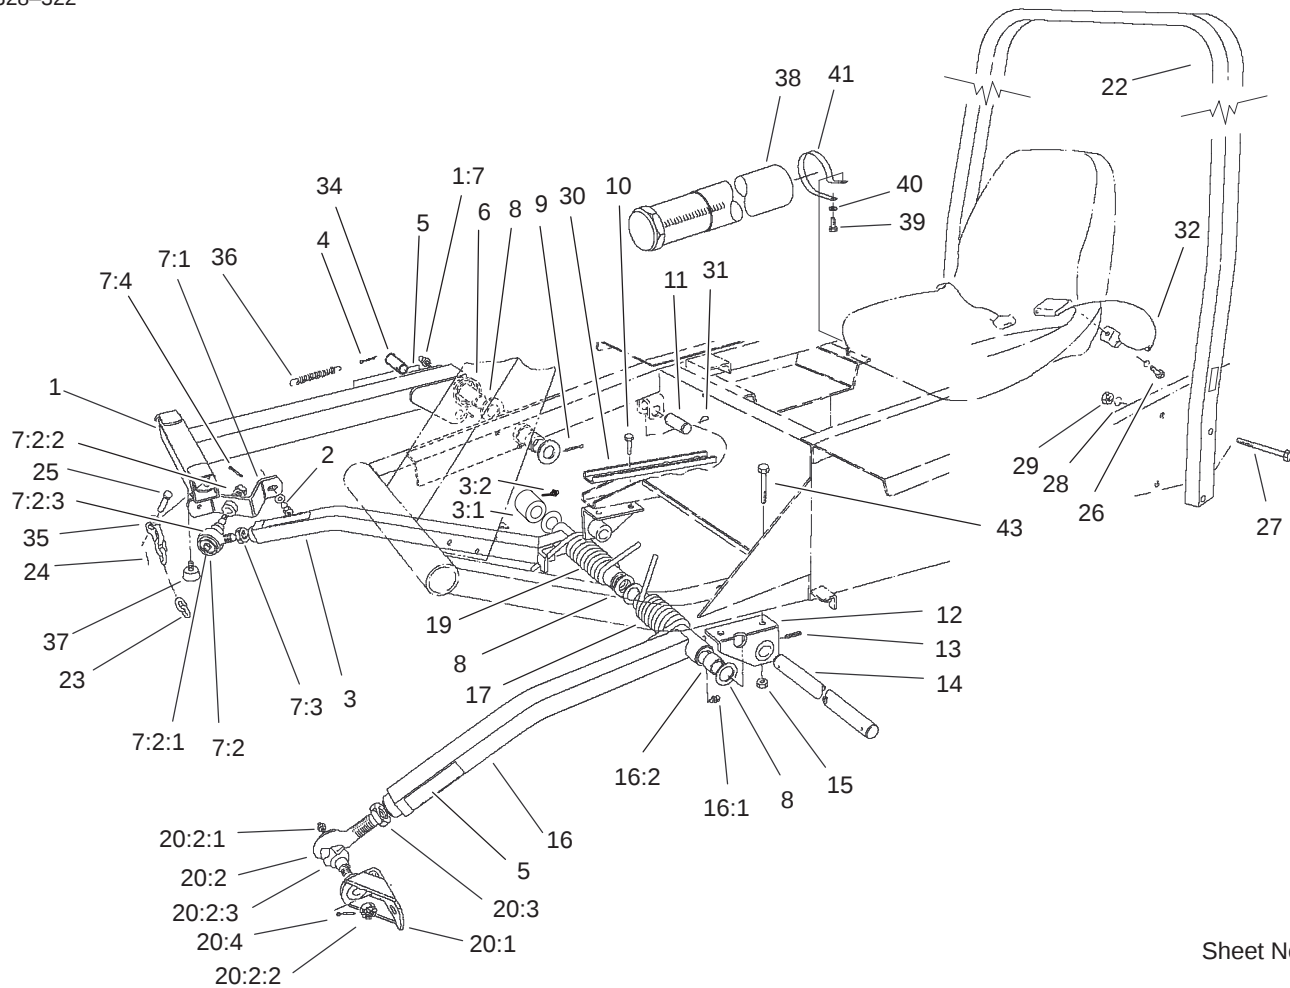

Sheet No.:15


Push Arm and ROPS Assembly

Ref. No.	Part No.	Qty.	Description
1	66-6370	1	Arm-Lift
1:7	302-5	1	Fitting-Grease
*1:8	3290-472	1	Insert-Threaded
2	3253-6	2	Washer-Lock
3	66-7150	1	Arm-Push, RH
3:1	302-33	1	Fitting-Grease
3:2	256-126	2	Bushing
4	3272-24	1	Pin-Cotter
5	55-4300	3	Decal-Warning
6	46-8840-01	1	Spring-Arm, Lift
☆7		1	RH Ball Joint ASM
7:1	21-3020-01	1	Mount-Balljoint, RH
7:2	86-8100-01	1	Joint-Ball
7:2:1	302-5	1	Fitting-Grease
7:2:2	32136-2	1	Nut-SHH
7:2:3	105-7835	1	Seal
7:3	21-3000	1	Nut-HJ, Push Arm
7:4	3272-11	1	Pin-Cotter
8	5-1754	6	Washer-Pulley, Countershaft
9	3272-33	1	Pin-Cotter
10	324-4	2	Screw-HH
11	3-7292	1	Pin
12	21-2860-01	2	Bracket-Arm, Push
13	32121-84	2	Pin-Coil
14	21-2990	1	Shaft-Pivot

Ref. No.	Part No.	Qty.	Description
15	32128-42	4	Nut-HF
16	21-2960	1	Arm-Push, LH
16:1	302-33	1	Fitting-Grease
16:2	256-126	2	Bushing
17	105-9550-01	1	Spring-LH, Light
17	21-2900-01	1	Spring-LH
19	21-2890-01	1	Spring-RH
☆20		1	LH Ball Joint ASM
20:1	21-3050-01	1	Mount-Ball Joint, LH
20:2	86-8100-01	1	Joint-Ball
20:2:1	302-5	1	Fitting-Grease
20:2:2	32136-2	1	Nut-SHH
20:2:3	105-7835	1	Seal
20:3	21-3000	1	Nut-HJ, Push Arm
20:4	3272-11	1	Pin-Cotter
22	99-1299-03	1	Rops-2 Post (only on: 30627)
23	3-1365	3	Chain
24	3272-10	6	Pin-Cotter
25	283-10	6	Clevis
26	3212-4	2	Screw-HH (only on: 30627)
27	328-12	4	Screw-HH (only on: 30627)
28	3253-9	4	Washer-Lock/Sp (only on: 30627)

* Not illustrated

 
☆ Not serviced separately

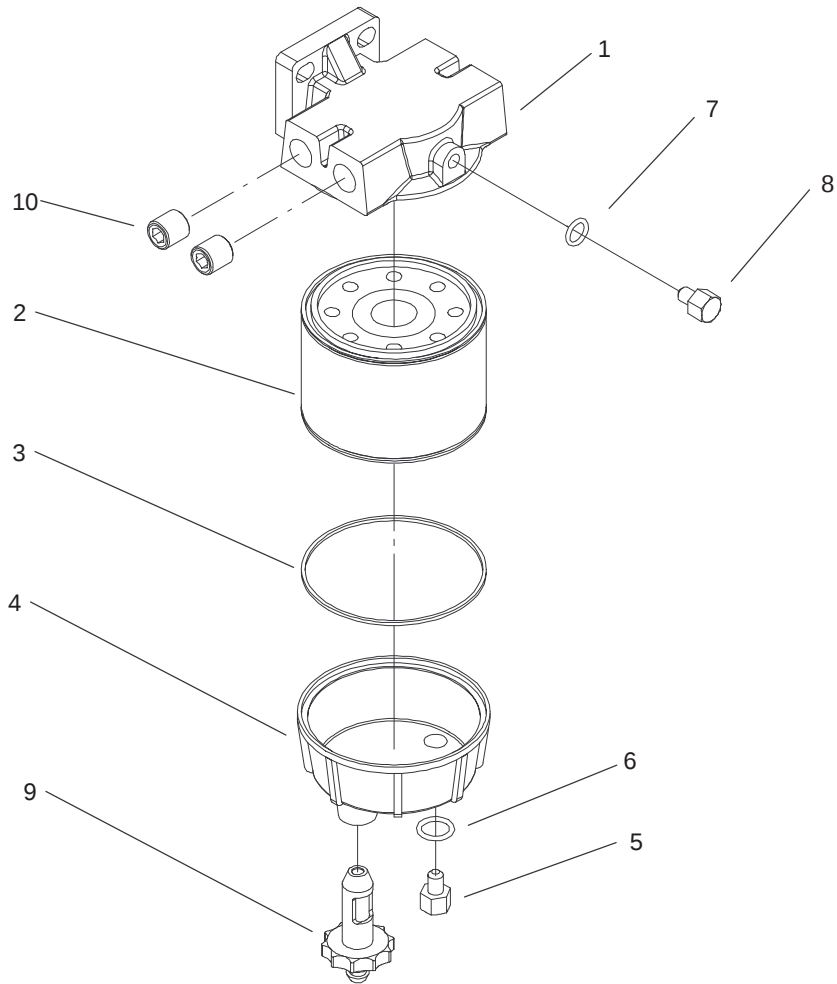

Sheet No.:B6
T-3330

Water and Fuel Filter No. 98-9305

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9772	1	Head-Filter				
2	98-9764	1	Element				
3	98-9774	1	O-Ring-Base, Filter				
4	98-9775	1	Base-Filter				
5	98-9773	1	Plug-Base, Filter				
6	237-42	1	O-Ring				
7	237-78	1	O-Ring				
8	98-9776	1	Plug-Head, Filter				
9	98-9777	1	Drain Valve ASM				
10	285-22	2	Plug-Pipe				

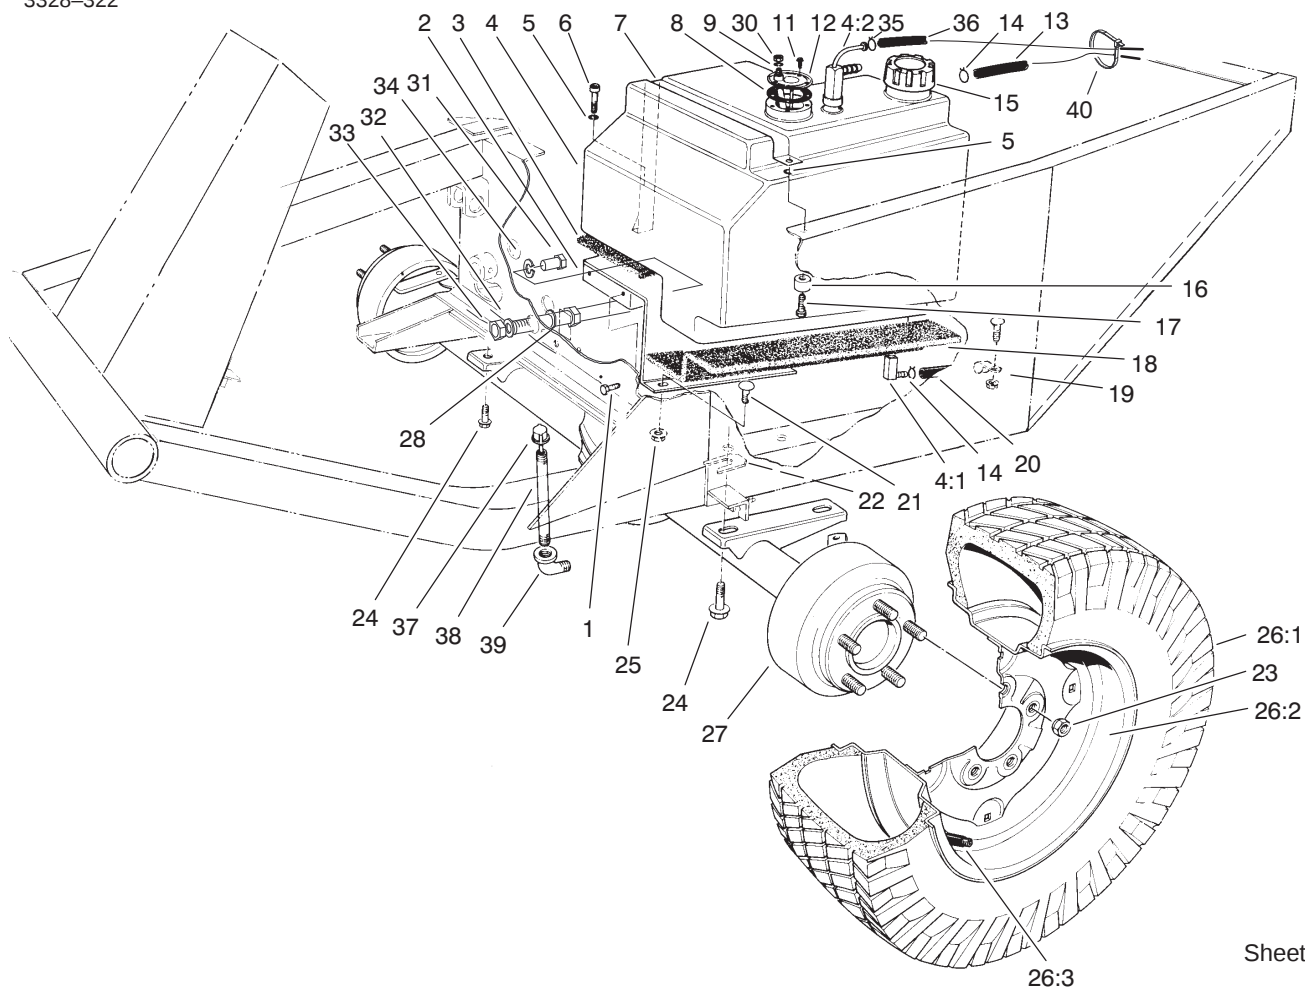 


Sheet No.:17

Fuel Tank and Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3234-11	2	Screw-HHF
2	68-9760	1	Base-Tank, Fuel
3	21-3600	1	Foam-Support, Tank
4	43-4150	1	Fuel Tank ASM
4:1	43-4190	1	Fitting ASM
4:2	43-4160	1	Fitting-Return And Vent
5	3253-3	2	Washer-Lock
6	32104-96	1	Screw-HH
7	37-9550	1	Strap-Tank, Gas
8	62-7650	1	Gasket
9	3253-17	1	Washer-Lock/Sp
11	32144-53	5	Screw-SHWH
12	105-2563	1	Sender-Fuel
13	104-0076	1	Hose-Fuel
14	2412-6	2	Clamp-Hose
15	55-3572	1	Gas Cap ASM
16	22-7810	1	Spacer
17	321-6	1	Screw-HH
18	21-3610	1	Foam-Support, Tank
19	2412-4	1	Clamp
20	27-5360	1	Hose-Fuel
21	3230-2	3	Bolt-CARR
22	42-6080	1	Shim-Axle
23	23-7270	10	Nut-Wheel
24	32144-67	4	Screw

Ref. No.	Part No.	Qty.	Description
25	32128-20	2	Nut-HF
☆26		2	Tire ASM
26:1	95-3348	1	Tire
26:2	217-117	1	Wheel ASM
26:3	232-27	1	Stem-Valve
27	86-9630-03	1	Axle ASM (only on: 30627)
27	86-9600-03	1	Axle ASM (only on: 30626)
28	24-9830-01	1	Support-Axle
30	3219-14	1	Nut-Hex
31	323-6	1	Screw-HH
32	3256-6	2	Washer-Flat
33	3217-9	2	Nut-HH
34	3253-21	1	Washer-Lock
35	2412-79	2	Clamp-Hose
36	43-4230	1	Hose-Return
37	23-5180	1	Dipstick-Axle
38	289-37	1	Nipple-Pipe
39	2811-9	1	Fitting-Elbow, Street
40	3290-379	1	Tie-Cable

 ☆ Not serviced separately

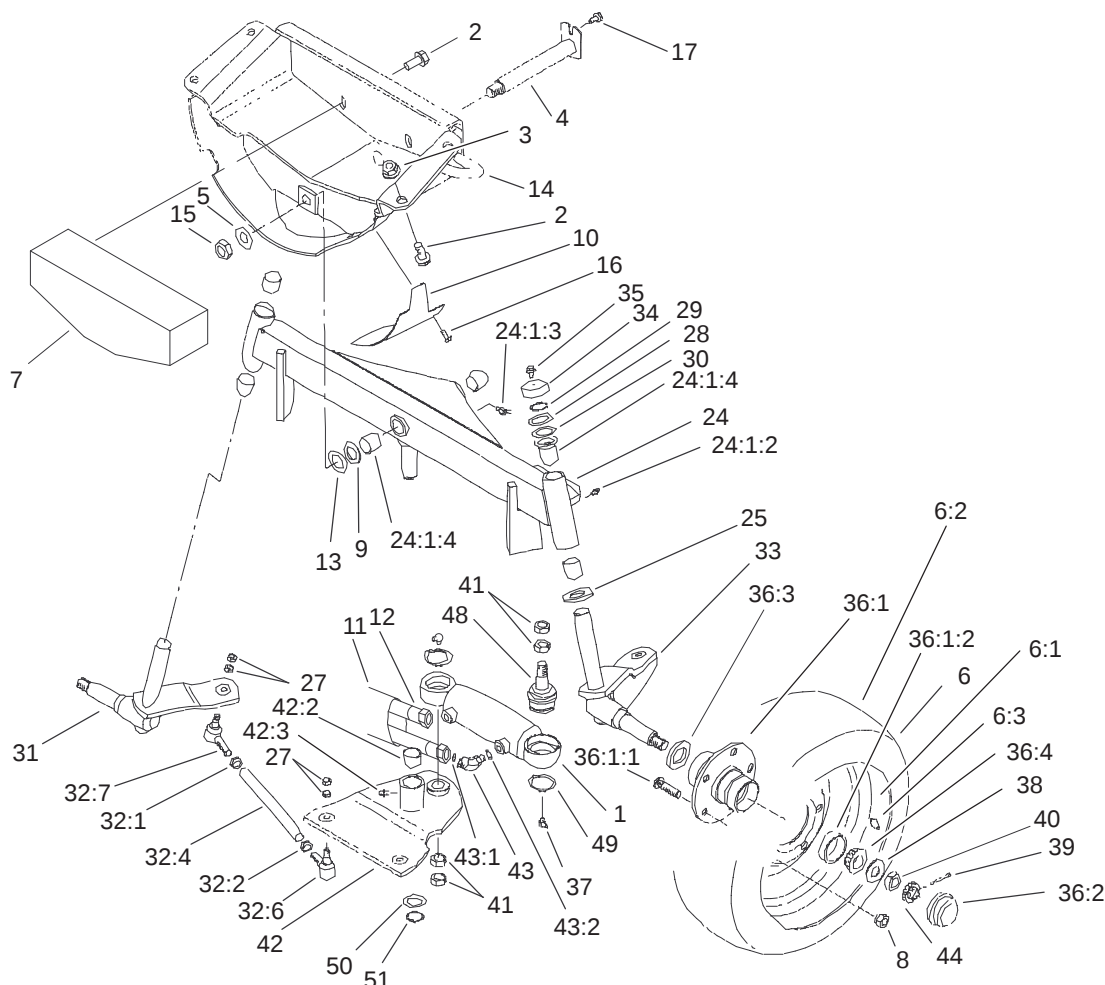


Sheet No.:18

2 Wheel Drive Rear Axle Assembly (only on: 30626)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-7828	1	Cylinder-Hydraulic	25	256-121	2	Washer-Thrust
2	3234-32	6	Screw-HHF	27	3220-3	8	Nut-Jam
3	32128-23	4	Nut-HF	28	5-1226	4	Washer
4	92-7807-01	1	Rear Axle Pin ASM	29	32151-36	2	Ring-Retaining
5	71-4540	1	Washer-Thrust	30	10-8110	2	Washer-Thrust
☆6	217-106	2	Tire And Wheel ASM	31	93-3199-03	1	RH Spindle ASM
6:1	231-105	1	Wheel ASM	32		2	Tie Rod ASM
6:2	232-31	1	Tire	32:1	3220-12	1	Nut-HJ, LH Thread
6:3	98-3869-01	1	Stem-Valve	32:2	3220-5-01	1	Nut-HJ
7	242-50	1	Weight-Rear	32:4	21-2000	1	Tie Rod-Steering
8	92-7845	10	Nut-Lug	32:6	21-0151	1	LH Ball Joint ASM
9	99-2413-01	1	Spacer-Hardened	32:7	21-0141-03	1	RH Ball Joint ASM
10		1	Cover-Guard, Flywheel	33	99-1292-03	1	LH Spindle ASM
11	56-7980	1	Sleeve-Protective	34	66-2990	2	Cap-Spindle
12	68-9710	2	Hose-Steering, Rear	35	3234-13	2	Screw-HHF
13	56-2460	1	Washer-Flat	☆36	21-0180	2	Hub ASM
14	92-7803-01	1	Axle Support ASM	36:1	21-2820	1	Hub ASM
15	32146-20	1	Nut-Jam	36:1:1	10-6830	5	Stud-Type, Drive
16	32144-10	2	Screw-HWH	36:1:2	254-72	2	Bearing-Cup, Tapered
17	32144-14	1	Screw-HWH	36:2	241-119	1	Cap-Dust
24	106-8050-03	1	Rear Axle ASM	36:3	253-129	1	Seal
☆24:1		1	Rear Axle ASM	36:4	254-94	2	Bearing-Cone, Taper
24:1:2	302-5	2	Fitting-Grease	37	302-11	2	Fitting-Lube, 45°
24:1:3	302-11	1	Fitting-Lube, 45°	38	93-0309	2	Washer-Tab
24:1:4	67-1750	6	Bushing	39	3272-13	2	Pin-Cotter
				40	3220-7	2	Nut-Jam

 
☆ Not serviced separately

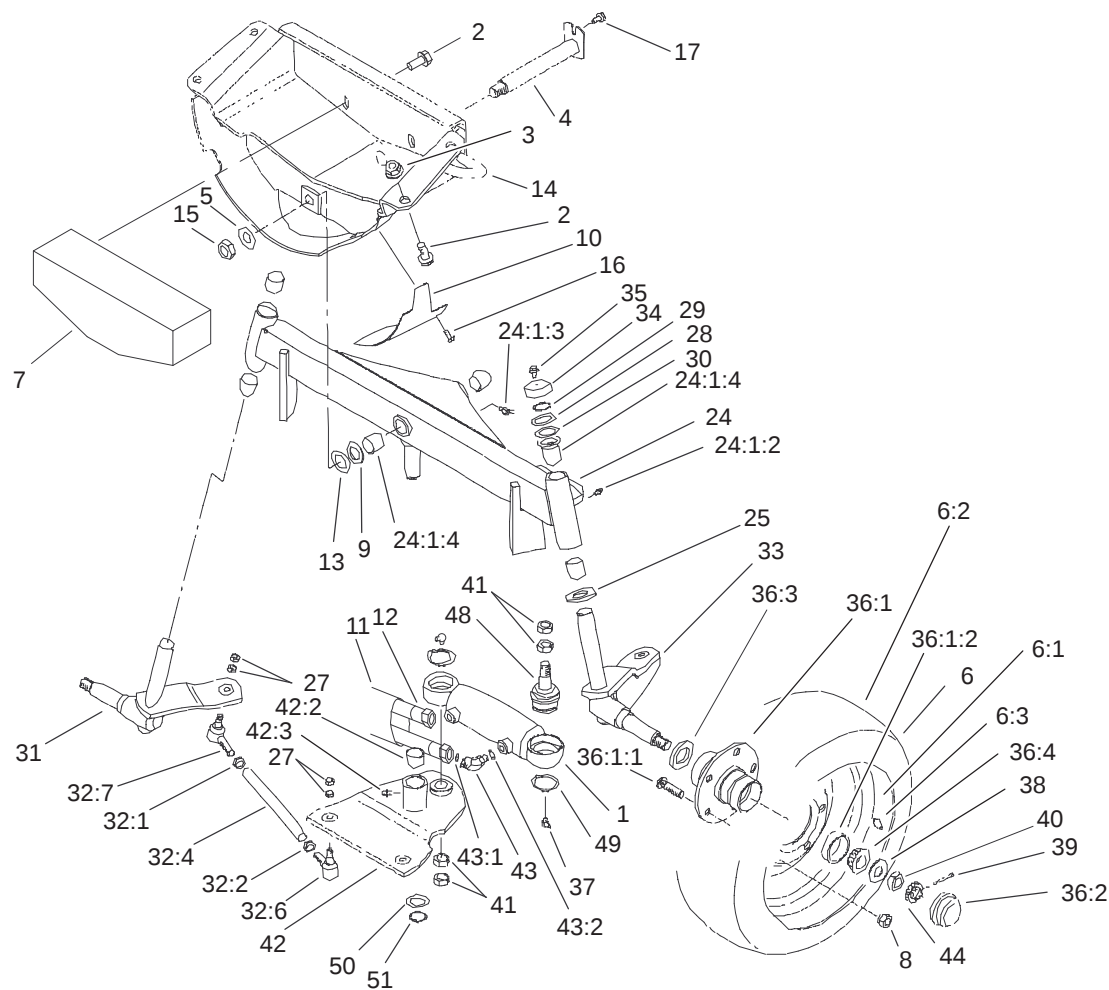

Sheet No.:18


2 Wheel Drive Rear Axle Assembly (only on: 30626) (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
41	3220-6	4	Nut-Jam				
42	106-8052	1	Steering Pivot ASM				
42:2	76-2970	2	Bushing-Straight				
42:3	302-5	1	Fitting-Grease				
43	340-54	2	Elbow-45°				
43:1	237-22	1	O-Ring				
43:2	237-78	1	O-Ring				
44	93-0307	2	Nut-Lock, Retainer				
48	92-5838-01	2	Joint-Ball				
49	32151-104	2	Ring-Retaining, Ext				
50	76-2980	1	Washer-Thrust				
51	32151-77	1	Ring-Retaining, Ext				

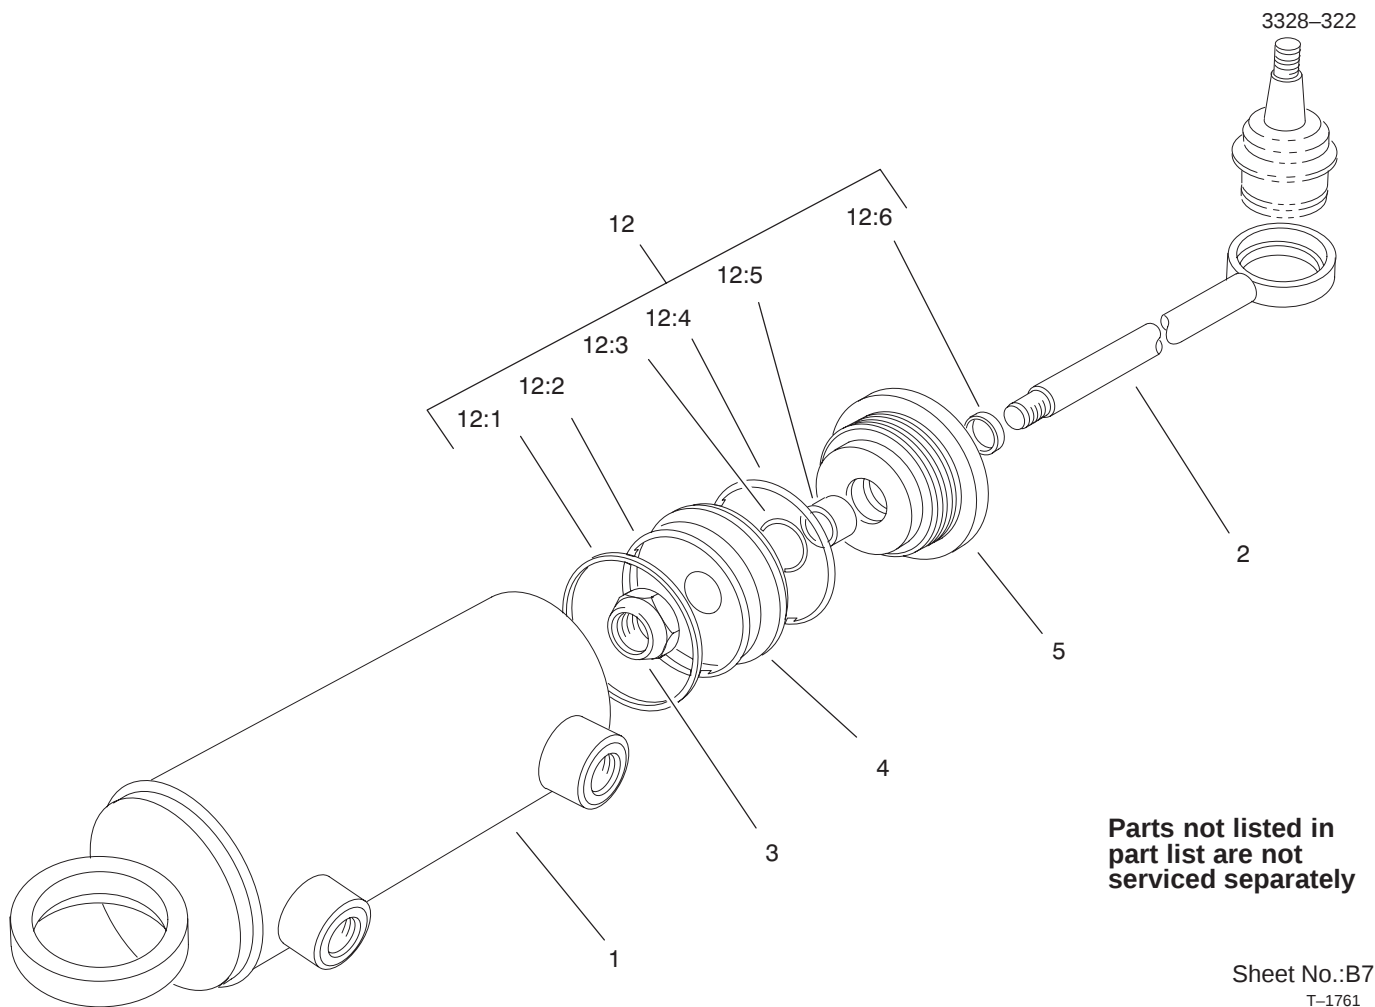 

Ref. No.	Part No.	Qty.	Description
☆1		1	Tube ASM
☆2		1	Piston Rod ASM
3	66-1930	1	Locknut
4	66-1940	1	Piston
5	92-6588	1	Gland
12	92-6593	1	Seal Kit
☆12:1		1	Seal
☆12:2		1	O-Ring
☆12:3		1	O-Ring
☆12:4		1	O-Ring
☆12:5		1	U-Cup
☆12:6		1	Wiper

 ☆ Not serviced separately

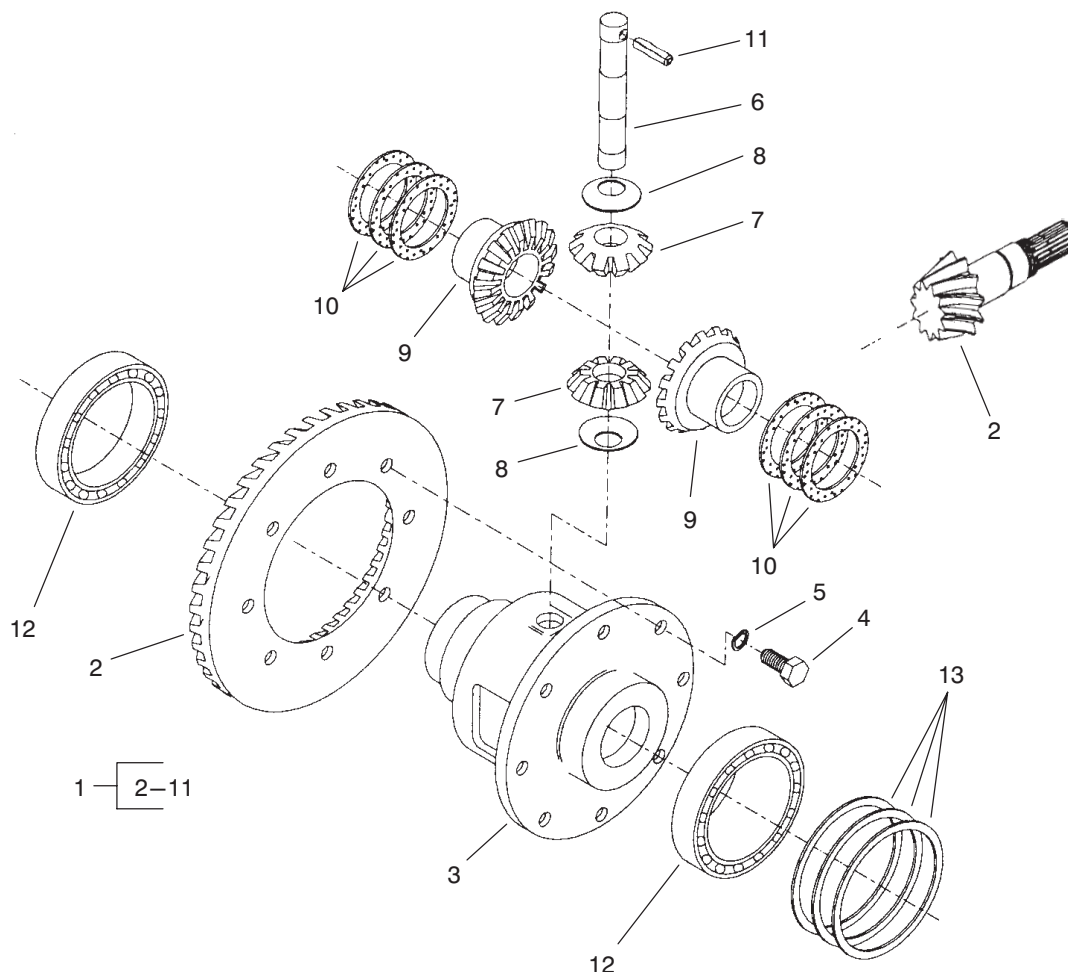


Sheet No.:84
T-3103

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Differential Assembly (only on: 30631)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7503	1	Differential ASM				
2	100-2555	1	Ring And Pinion Matched Set				
3	95-7502	1	Case-Differential				
4	99-7576	8	Bolt				
5	99-7577	8	Washer-Spring				
6	99-7578	1	Shaft-Differential				
7	99-7579	2	Pinion-Differential				
8	99-7580	2	Washer-Differential				
9	99-7581	2	Gear-Differential				
10	99-7582	2	Washer-Differential				
*10	99-7583	2	Washer-Differential				
*10	99-7584	2	Washer-Differential				
11	99-7588	1	Pin-Spring				
12	99-7562	2	Bearing-Ball				
13	99-7585	2	Shim 0.1				
*13	99-7586	2	Shim 0.2				
*13	99-7587	2	Shim 0.4				

 
* Not illustrated

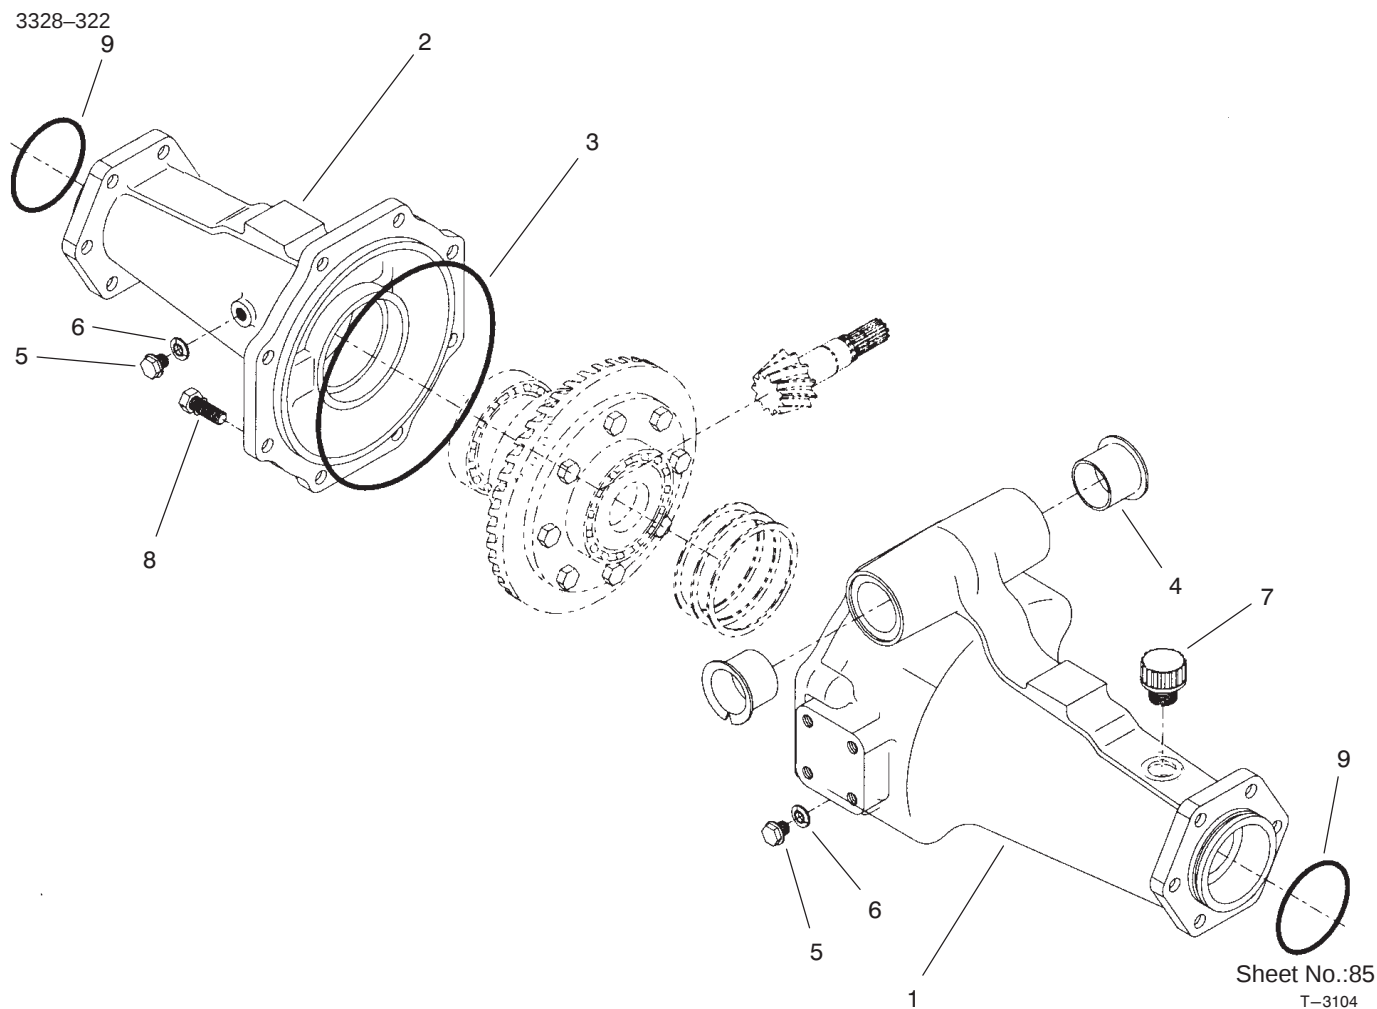

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Axle Support Assembly (only on: 30631)

Ref. No.	Part No.	Qty.	Description
1	95-7508	1	Support-Axle
2	95-7506	1	Support-Axle
3	95-7507	1	O-Ring
4	95-7537	2	Bushing-Flanged
5	99-7589	2	Plug
6	99-7590	2	Washer-Seal
7	99-7591	1	Oil Plug ASM
8	99-7592	8	Bolt
9	99-7593	2	O-Ring

Ref. No.	Part No.	Qty.	Description

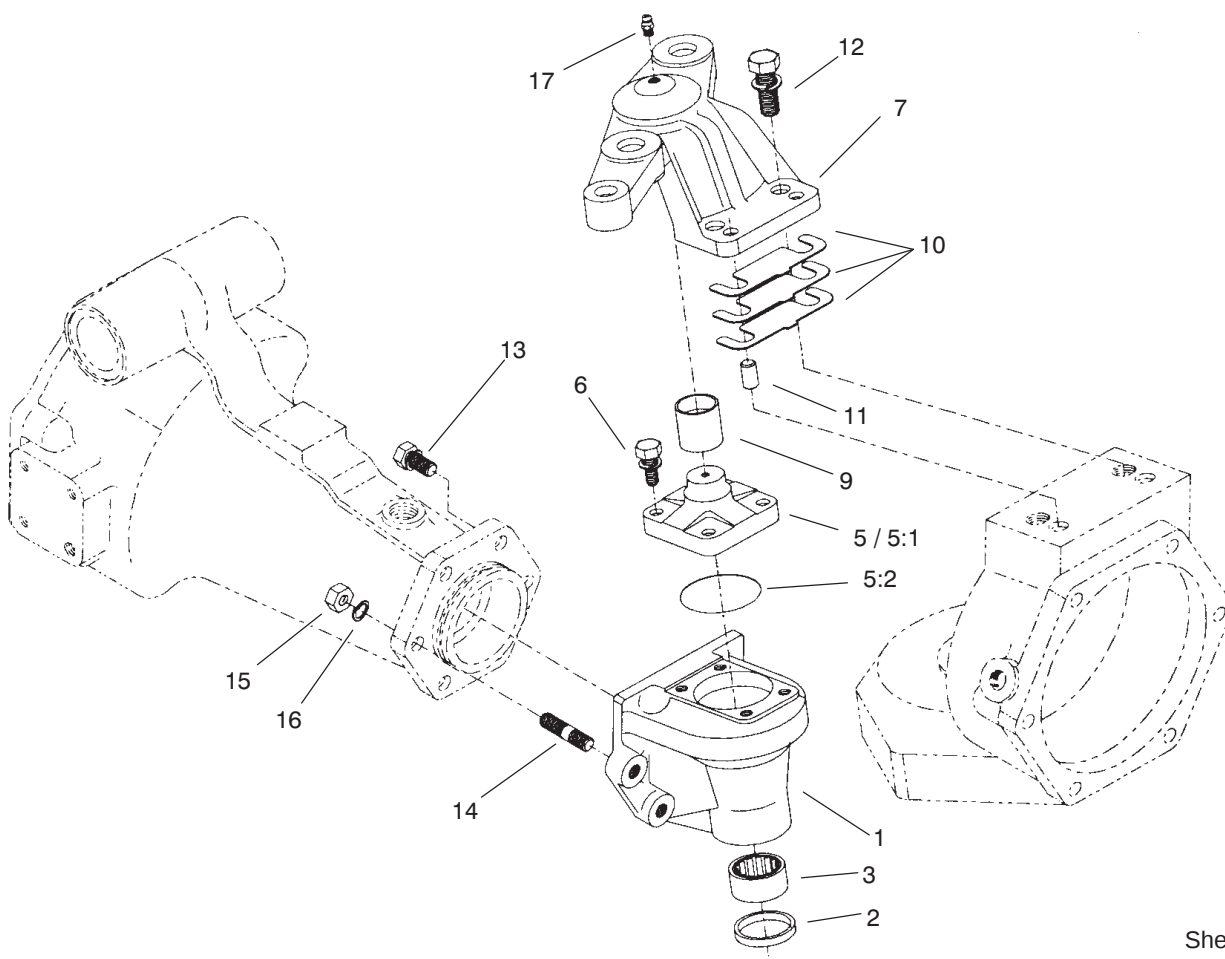 

Sheet No.:86

T-3105

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Bevel Gear Case Assembly (only on: 30631)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7539	2	Case-Bevel Gear				
2	99-7594	2	Seal-Oil				
3	99-7595	2	Bearing-Needle				
5	104-2376	2	Pin-Knuckle				
5:1	104-2373	1	Knuckle				
5:2	104-2372	1	O-Ring				
6	104-2374	8	Bolt				
7	95-7514	1	Support-Axle Case, LH				
*8	95-7516	1	Support-Axle Case, RH				
9	99-7529	2	Bushing				
10	95-7547	2	Shim 0.1				
*10	95-7548	2	Shim 0.2				
*10	95-7549	2	Shim 0.4				
11	99-7597	4	Pin-Dowel				
12	99-7598	4	Bolt				
13	99-7599	8	Bolt				
14	99-7525	4	Stud				
15	99-7526	4	Nut				
16	99-7527	4	Washer-Spring				
17	99-7528	2	Nipple-Grease				


* Not illustrated

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Bevel Gear Shaft Assembly (only on: 30631)

Ref. No.	Part No.	Qty.	Description
1	95-7509	1	Shaft-Gear, Differential
2	95-7512	1	Shaft-Gear, Differential
3	95-7518	4	Gear-18 Bevel
4	99-7530	4	Bearing-Ball
5	99-7552	2	Shim 0.1
*5	99-7553	2	Shim 0.2
*5	99-7554	2	Shim 0.5
6	99-7531	2	Clip
7	95-7530	2	Shaft-Bevel Gear
8	99-7532	2	Bearing-Taper Roller
9	95-7543	2	Spacer
10	99-7533	2	Collar-Thrust
11	99-7558	2	Collar

Ref. No.	Part No.	Qty.	Description

 * Not illustrated

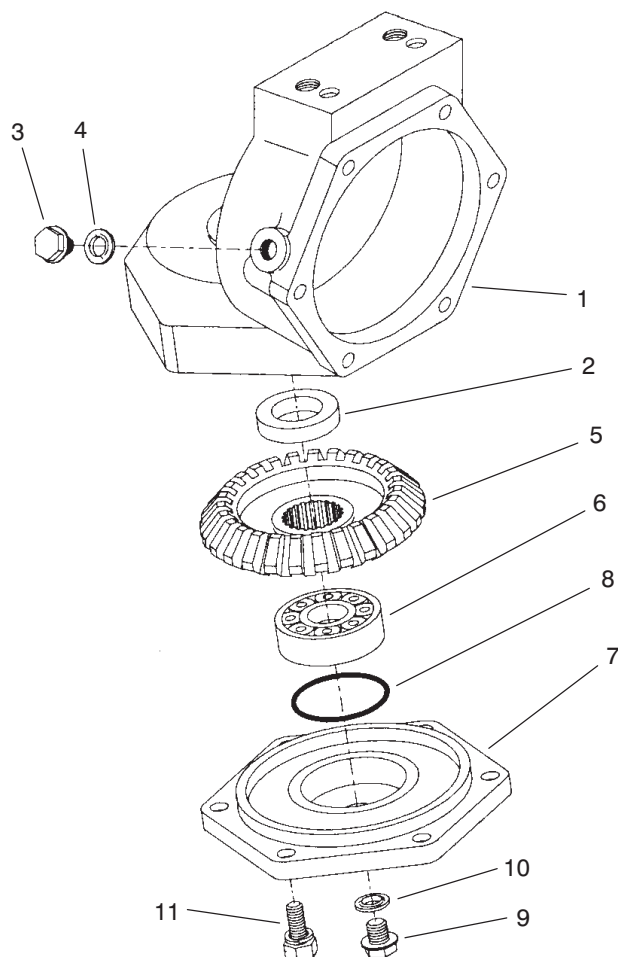

Sheet No.:88
T-3107


**4 Wheel Drive Rear Axle Assembly No. 95-7501
(Continued)
Axle Case Assembly (only on: 30631)**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7532	2	Case-Axle				
2	99-7594	2	Seal-Oil				
3	99-7535	2	Plug				
4	99-7536	2	Washer-Seal				
5	95-7528	2	Gear-27 Bevel				
6	99-7532	2	Bearing-Taper Roller				
7	95-7526	2	Cover-Axle				
8	99-7537	2	O-Ring				
9	99-7589	2	Plug				
10	99-7590	2	Washer-Seal				
11	99-7596	12	Bolt				

4 Wheel Drive Rear Axle Assembly No. 95-7501 (Continued) Axle Assembly (only on: 30631)

Ref. No.	Part No.	Qty.	Description

 46

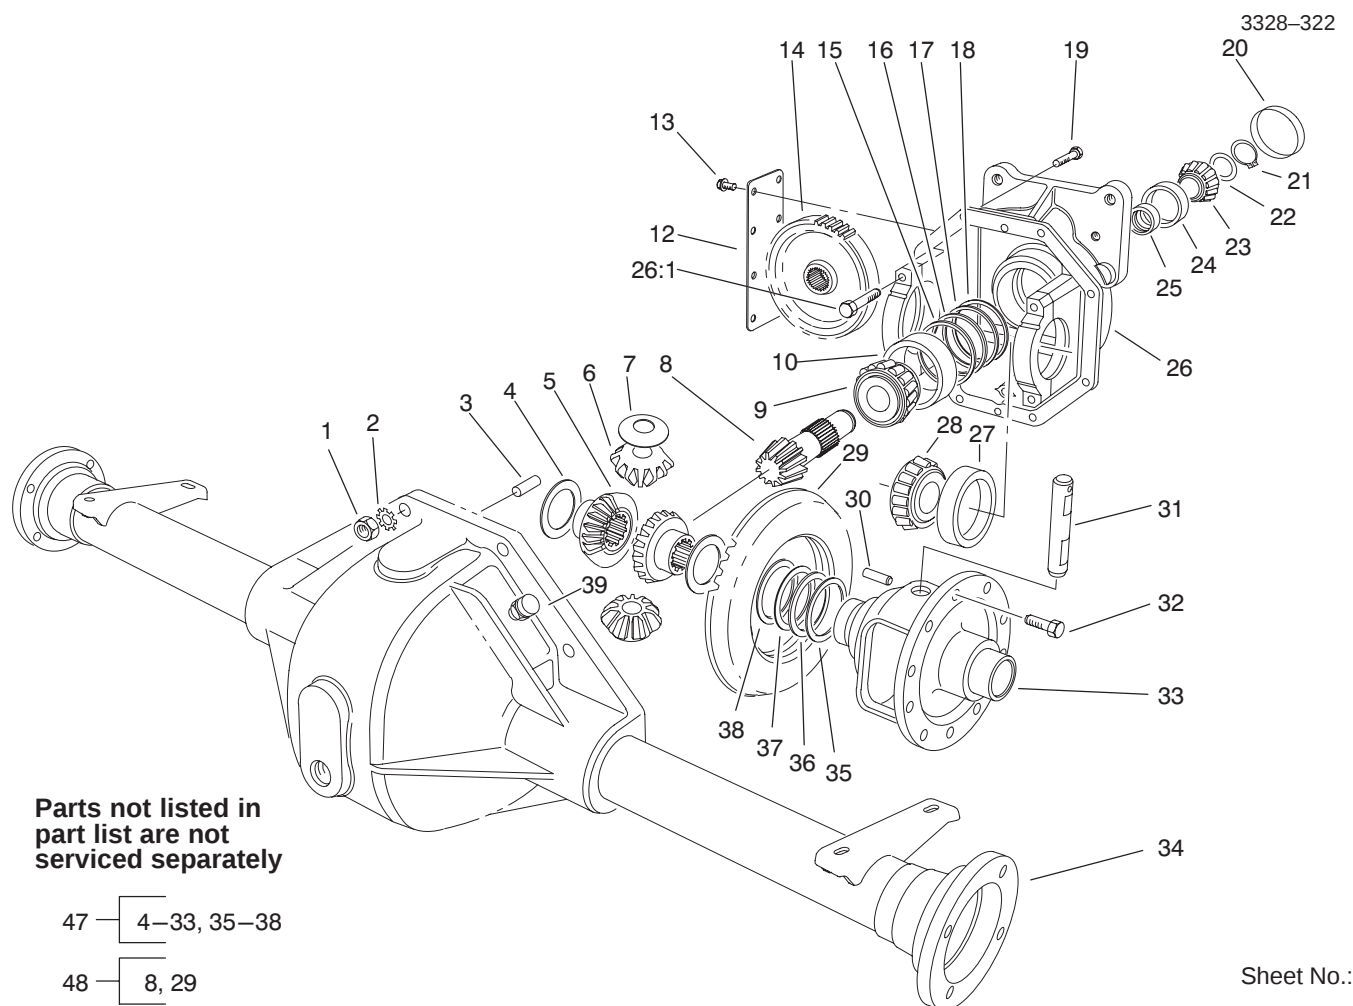


Front Axle Assembly No. 86-9600-03 (Only on: 30630)

Ref. No.	Part No.	Qty.	Description
1	3219-2	8	Nut
2	3255-8	8	Washer-Lock
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Bevel, Differential Side
6	21-7690	2	Gear-Pinion
7	21-7730	2	Washer-Thrust
★8		1	Pinion-Drive
9	43-6760	1	Cone-Bearing, Roller
10	43-6750	1	Cup-Bearing, Roller
12	21-7830	1	Cover-Gear
13	12-5450	8	Screw-TAP
14	86-7230	1	Spur-Gear
15	43-6710	AR	Adjustment Shim .003
16	43-6711	AR	Adjustment Shim .005
17	43-6712	AR	Adjustment Shim .010
18	43-6713	AR	Adjustment Shim .030
19	3210-7	8	Screw-HH
20	21-7850	1	Cup-Plug
21	43-6550	1	Ring-Snap
22	46-2210	AR	Shim-Front Pinion Bearing (.031)
*	46-2211	AR	Shim-Front Pinion Bearing (.033)
*22	46-2212	AR	Shim-Front Pinion

Ref. No.	Part No.	Qty.	Description
*	46-2213	AR	Bearing (.035)
*	46-2214	AR	Shim-Front Pinion Bearing (.037)
*	46-2215	AR	Shim-Front Pinion Bearing (.039)
*	46-2216	AR	Shim-Front Pinion Bearing (.041)
*	46-2220	AR	Shim-Front Pinion Bearing (.043)
*	46-2221	AR	Shim-Front Pinion Bearing (.045)
*	46-2222	AR	Shim-Front Pinion Bearing (.047)
*	46-2223	AR	Shim-Front Pinion Bearing (.049)
*	46-2224	AR	Shim-Front Pinion Bearing (.051)
*	46-2225	AR	Shim-Front Pinion Bearing (.053)
*	46-2226	AR	Shim-Front Pinion Bearing (.055)
*	46-2410	AR	Shim-Front Pinion Bearing (.057)
			Bearing (.062)

 *Not Illustrated

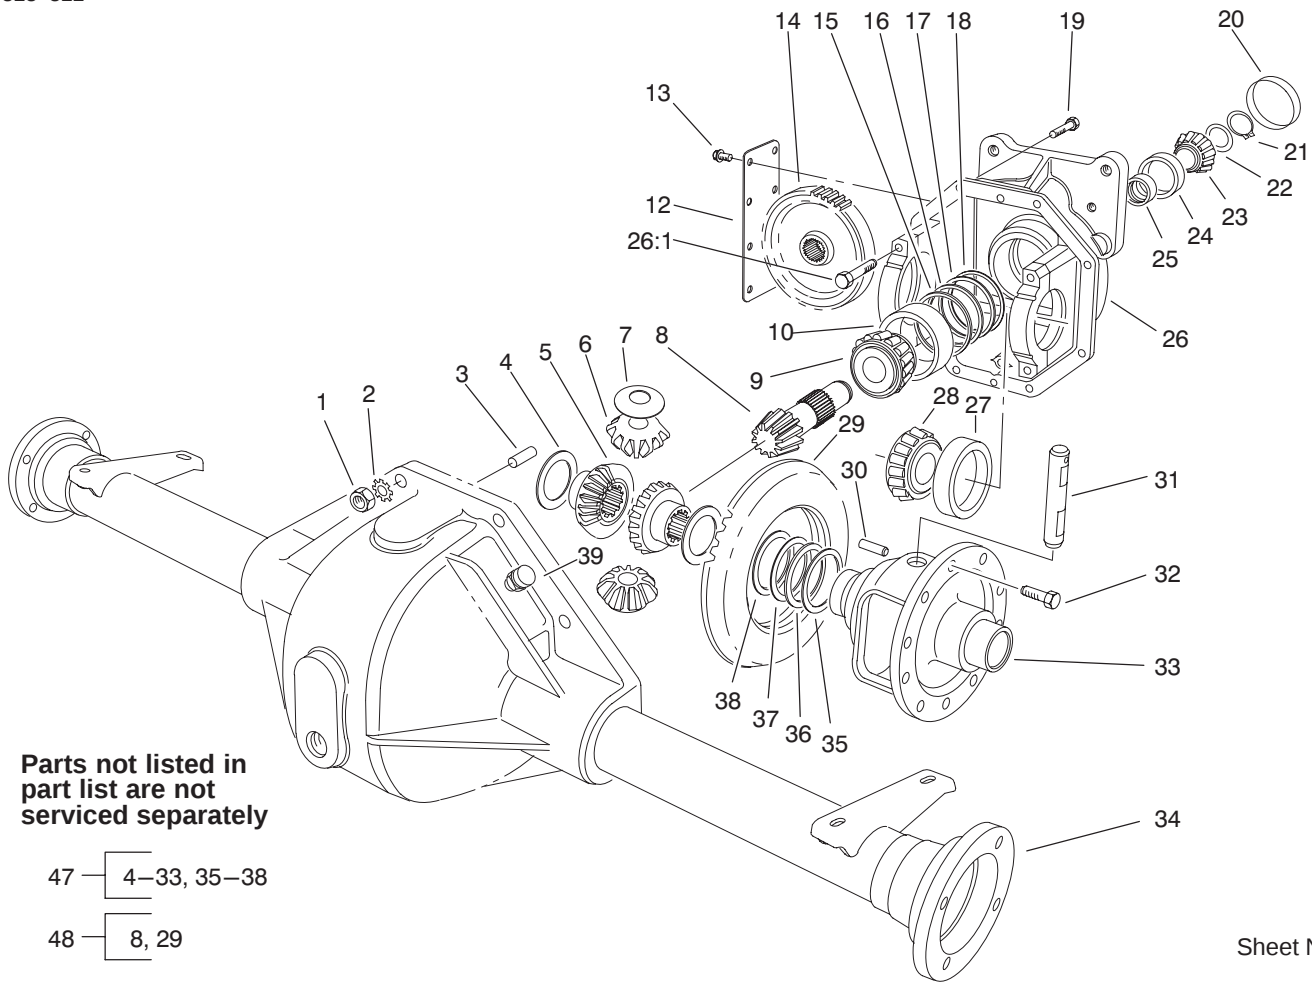


Sheet No.:

Front Axle Assembly No. 86-9600-03 (Continued) (Only on: 30630)

Ref. No.	Part No.	Qty.	Description
*22	46-2411	AR	Shim-Front Pinion Bearing (.064)
*	46-2412	AR	Shim-Front Pinion Bearing (.066)
*	46-2413	AR	Shim-Front Pinion Bearing (.068)
*	46-2414	AR	Shim-Front Pinion Bearing (.070)
*	46-2415	AR	Shim-Front Pinion Bearing (.072)
*	46-2416	AR	Shim-Front Pinion Bearing (.074)
*	46-2420	AR	Shim-Front Pinion Bearing (.076)
*	46-2421	AR	Shim-Front Pinion Bearing (.078)
*	46-2422	AR	Shim-Front Pinion Bearing (.080)
*	46-2423	AR	Shim-Front Pinion Bearing (.082)
*	46-2424	AR	Shim-Front Pinion Bearing (.084)
*22	46-2425	AR	Shim-Front Pinion Bearing (.086)

Ref. No.	Part No.	Qty.	Description
*	46-2426	AR	Shim-Front Pinion Bearing (.088)
23	254-91	1	Cone-Bearing
24	254-90	1	Cup-Bearing
25	21-8020	1	Spacer-Pinion Bearing
26	86-9580	1	Upper Housing ASM
26:1	92-1773	4	Screw-HH
27	254-66	2	Cup-Bearing, Tapered
28	254-65	2	Cone-Bearing, Tapered
☆29		1	Gear-Ring
30	32121-15	1	Pin-Roll
31	21-7700	1	Shaft-Pinion Mate
32	21-7770	5	Screw-Drive Gear
33	21-7670	1	Differential Case ASM
34	43-6840	1	Lower Housing ASM
35	21-8120	AR	Adjustment Shim .030
36	21-8110	AR	Adjustment Shim .010
37	21-8100	AR	Adjustment Shim .005
38	21-8090	AR	Adjustment Shim .003
39	72-9420	1	Vent Tube ASM
47	92-4903	1	Upper Housing ASM
48	92-4848	1	Gear and Pinion ASM

 *Not Illustrated

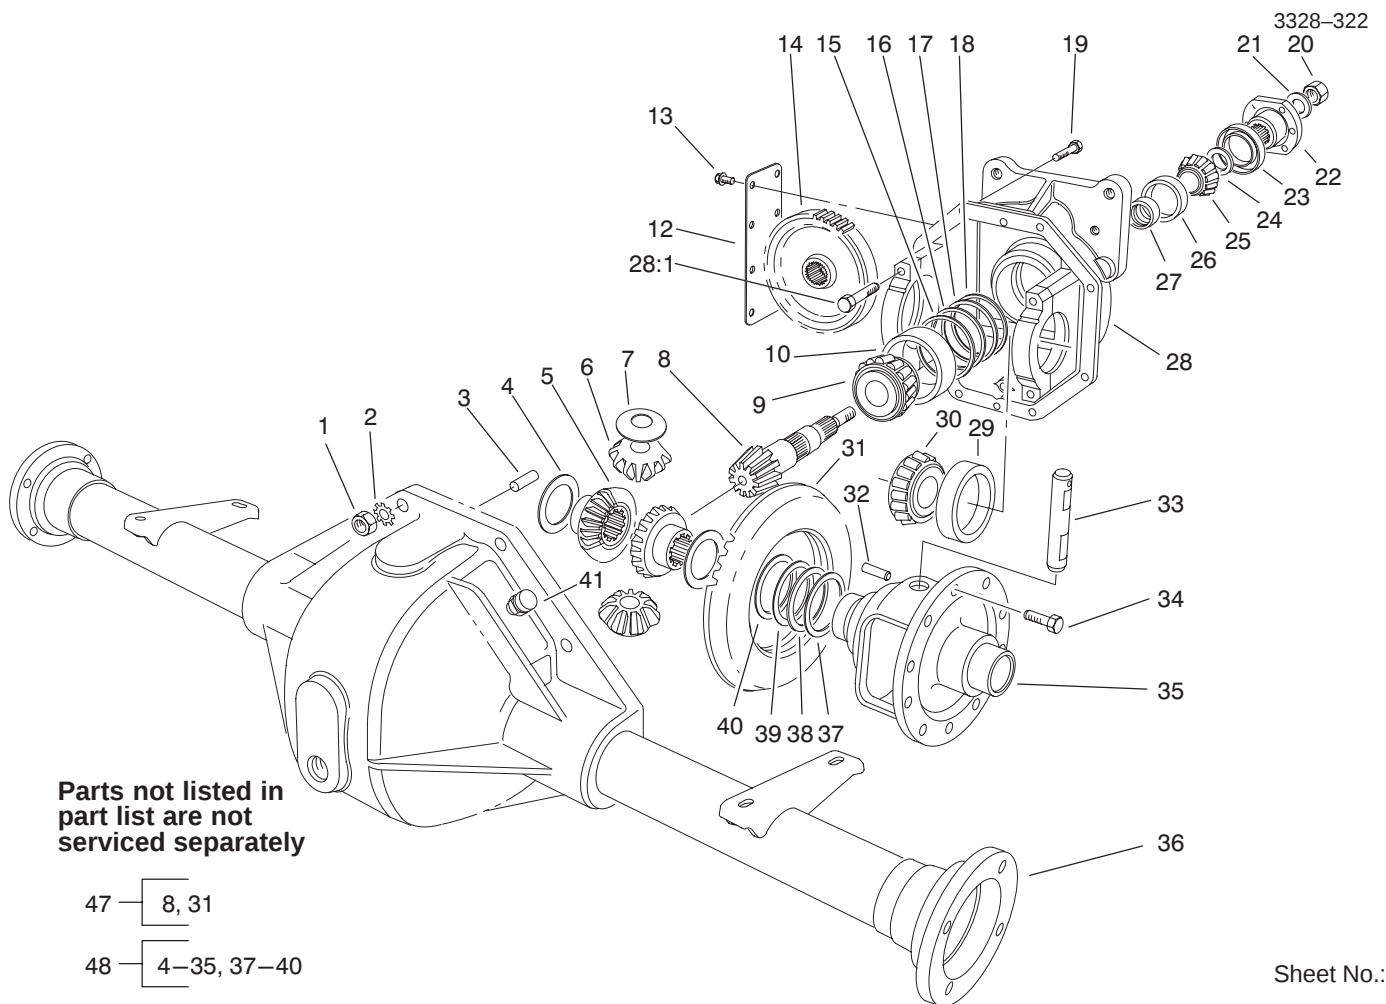


Front Axle Assembly No. 86-9630-03 (Only on: 30631)

Ref. No.	Part No.	Qty.	Description
1	3219-2	8	Nut
2	3255-8	8	Washer-Lock
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Gear-Bevel, Diff. Side
6	21-7690	2	Gear-Pinion
7	21-7730	2	Washer-Thrust
☆8		1	Pinion-Drive
9	43-6760	1	Cone-Bearing, Tapered
10	43-6750	1	Cup-Bearing, Tapered
12	21-7830	1	Cover-Gear
13	12-5450	8	Screw-TAP
14	86-7230	1	Gear-Spur
15	43-6710	A/R	Shim .003-Diff. Adjust.
16	43-6711	A/R	Shim .005-Diff. Adjust.
17	43-6712	A/R	Shim .010-Diff. Adjust.
18	43-6713	A/R	Shim .030-Diff. Adjust.
19	3210-7	8	Screw-HH
20	71-4350	1	Nut
21	71-4340	1	Washer
22	68-7010	1	Flange
23	71-4330	1	Seal
24	72-3570	A/R	Shim .094-Diff. Adjust.
*	72-3571	A/R	Shim .096-Diff. Adjust.
*	72-3572	A/R	Shim .098-Diff. Adjust.

Ref. No.	Part No.	Qty.	Description
24	72-3573	A/R	Shim .100-Diff. Adjust.
*	72-3574	A/R	Shim .102-Diff. Adjust.
*	72-3575	A/R	Shim .104-Diff. Adjust.
*	72-3576	A/R	Shim .106-Diff. Adjust.
*	72-3577	A/R	Shim .108-Diff. Adjust.
*	72-3578	A/R	Shim .110-Diff. Adjust.
*	72-3580	A/R	Shim .112-Diff. Adjust.
*	72-3581	A/R	Shim .114-Diff. Adjust.
*	72-3582	A/R	Shim .116-Diff. Adjust.
*	72-3583	A/R	Shim .118-Diff. Adjust.
*	72-3584	A/R	Shim .120-Diff. Adjust.
*	72-3585	A/R	Shim .125-Diff. Adjust.
*	72-3586	A/R	Shim .127-Diff. Adjust.
*	72-3587	A/R	Shim .129-Diff. Adjust.
*	72-3588	A/R	Shim .131-Diff. Adjust.
*	72-3590	A/R	Shim .133-Diff. Adjust.
*	72-3591	A/R	Shim .135-Diff. Adjust.
*	72-3592	A/R	Shim .137-Diff. Adjust.
*	72-3593	A/R	Shim .139-Diff. Adjust.
*	72-3594	A/R	Shim .141-Diff. Adjust.
*	72-3595	A/R	Shim .143-Diff. Adjust.
*	72-3596	A/R	Shim .145-Diff. Adjust.
*	72-3597	A/R	Shim .147-Diff. Adjust.
*	72-3598	A/R	Shim .149-Diff. Adjust.

 *Not Illustrated

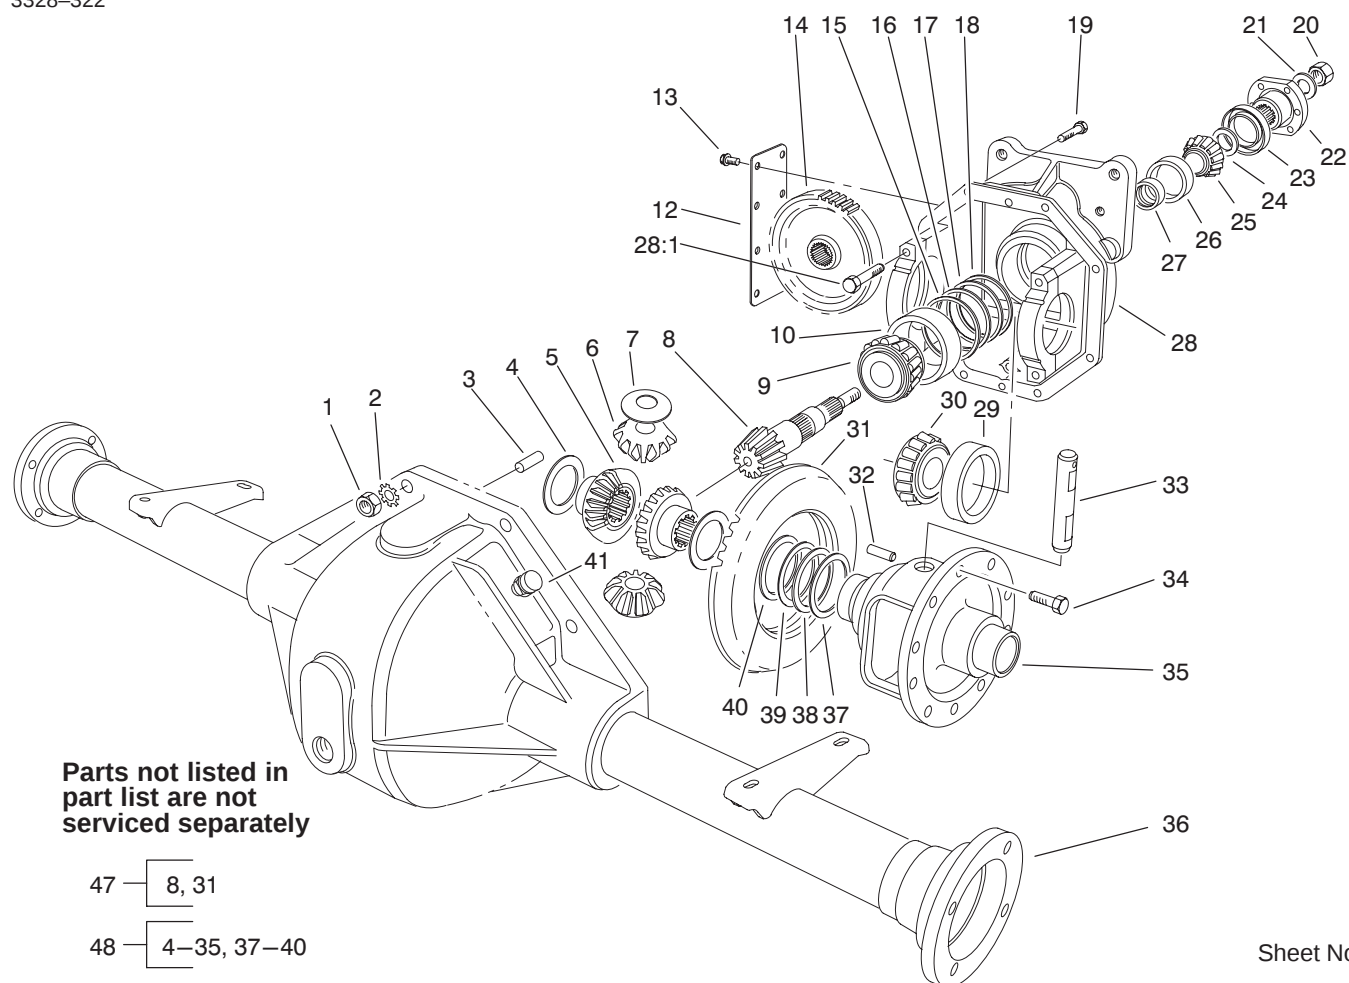


Sheet No.:

Front Axle Assembly No. 86-9630-03 (Continued)

Ref. No.	Part No.	Qty.	Description
* 25	72-3600	A/R	Shim .151-Diff. Adjust.
26	254-91	1	Cone-Bearing
27	254-90	1	Cup-Bearing
28	21-8020	1	Spacer-Bearing, Pinion
28:1	86-9610	1	Carrier ASM
29	92-1773	4	Screw-HH
30	254-66	2	Cup-Bearing, Tapered
☆31	254-65	2	Cone-Bearing, Tapered
32		1	Gear-Ring
33	32121-15	1	Pin-Roll
34	21-7700	1	Shaft-Pinion, Mate
35	21-7770	5	Screw-Gear, Drive
36	21-7670	1	Case-Differential
37	43-6840	1	Lower Housing ASM
38	21-8120	A/R	Shim .030-Diff. Adjust.
39	21-8110	A/R	Shim .010-Diff. Adjust.
40	21-8100	A/R	Shim .005-Diff. Adjust.
41	21-8090	A/R	Shim .003-Diff. Adjust.
* 41	72-9420	1	Vent ASM
* 41	92-1676	1	Gear and Pinion ASM
	92-4902	1	Upper Housing ASM

Ref. No.	Part No.	Qty.	Description

 *Not Illustrated

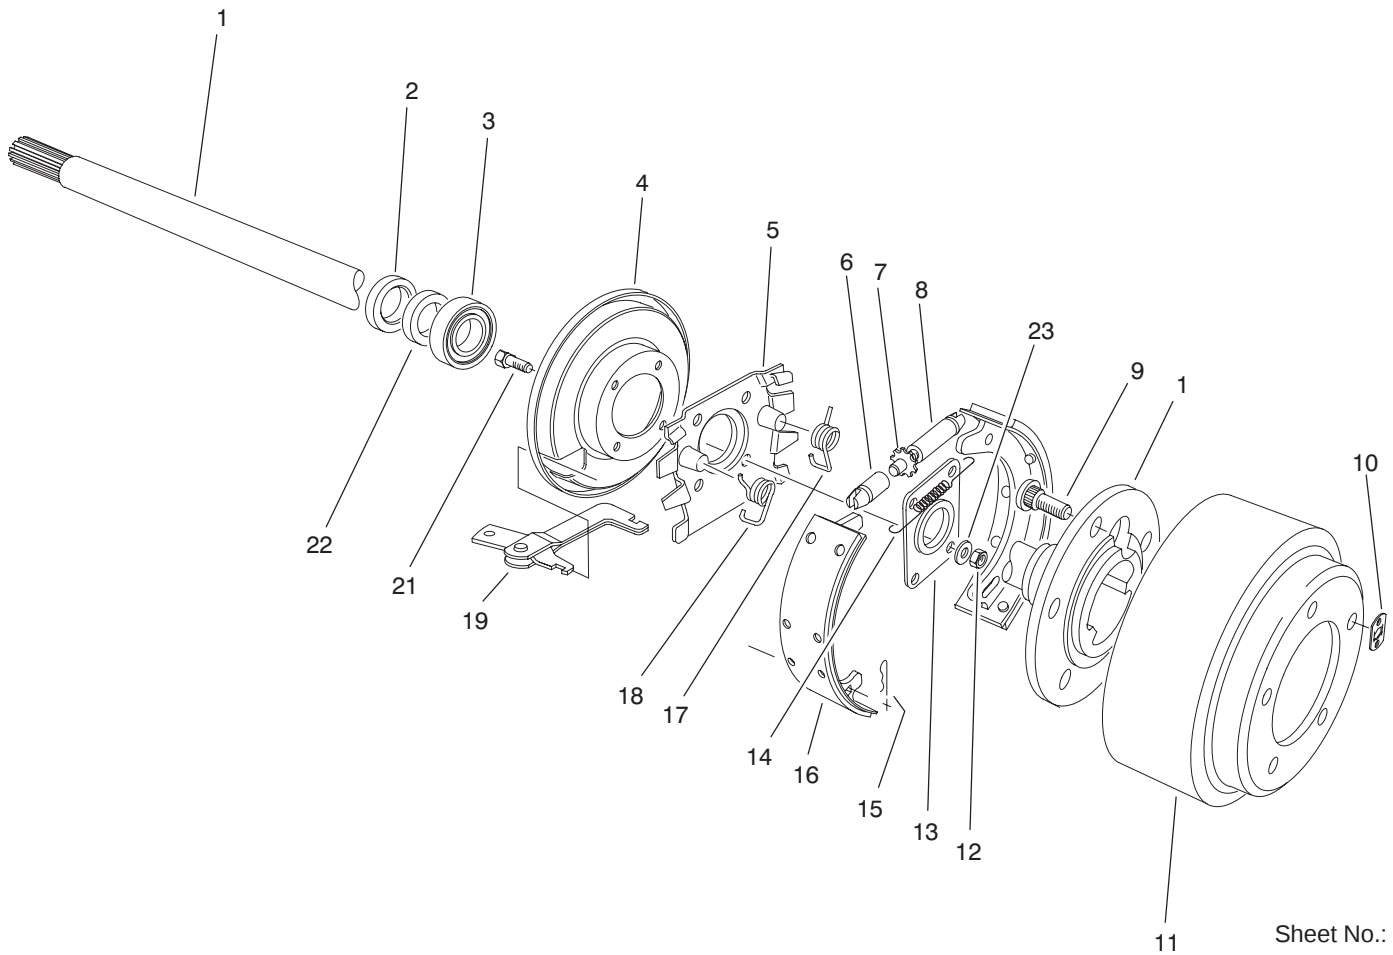

Sheet No.:

T-2664

Brake Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	28-0650	2	Shaft-Flanged, Axle	22	24-8840	2	Ring-Wheel Bearing
2	92-1774	2	Seal-Oil	23	94-6936	8	Washer
3	21-8180	2	Bearing	*	92-8775	1	Kit-Gasket, Liquid
4	21-9450	2	Shield-Dust				
5	43-6810	2	Torque-Spider				
6	21-9390	2	Socket-Adjusting Screw				
7	21-9370	2	Screw-Adjusting				
8	21-9380	2	Nut-Pivot				
9	242-34	10	Stud-Flanged, Axle				
10	21-8360	2	Clip-Retaining				
11	28-0680	2	Drum-Brake				
12	94-6935	8	Nut-Lock				
13	28-0670	2	Seal-Oil				
14	21-9440	2	Spring-Adjusting Screw				
15	21-9460	4	Retainer-Brake Lever				
16	84-8600	1	Shoe and Lining ASM (Set of 4)				
17	21-9420	2	Spring-Shoe Return LH				
18	21-9430	2	Spring-Shoe Return RH				
19	24-9180	2	Strut and Lever Parking Brake ASM				
21	94-6934	8	Screw-HH				

*Not Illustrated


Electrical Schematic


KEY TO WIRE COLORS
BK = BLACK
BR = BROWN
BU = BLUE
R = RED
Y = YELLOW
W = WHITE
T = TAN

 OR = ORANGE
GN = GREEN
GY = GRAY
PK = PINK
VO = VIOLET

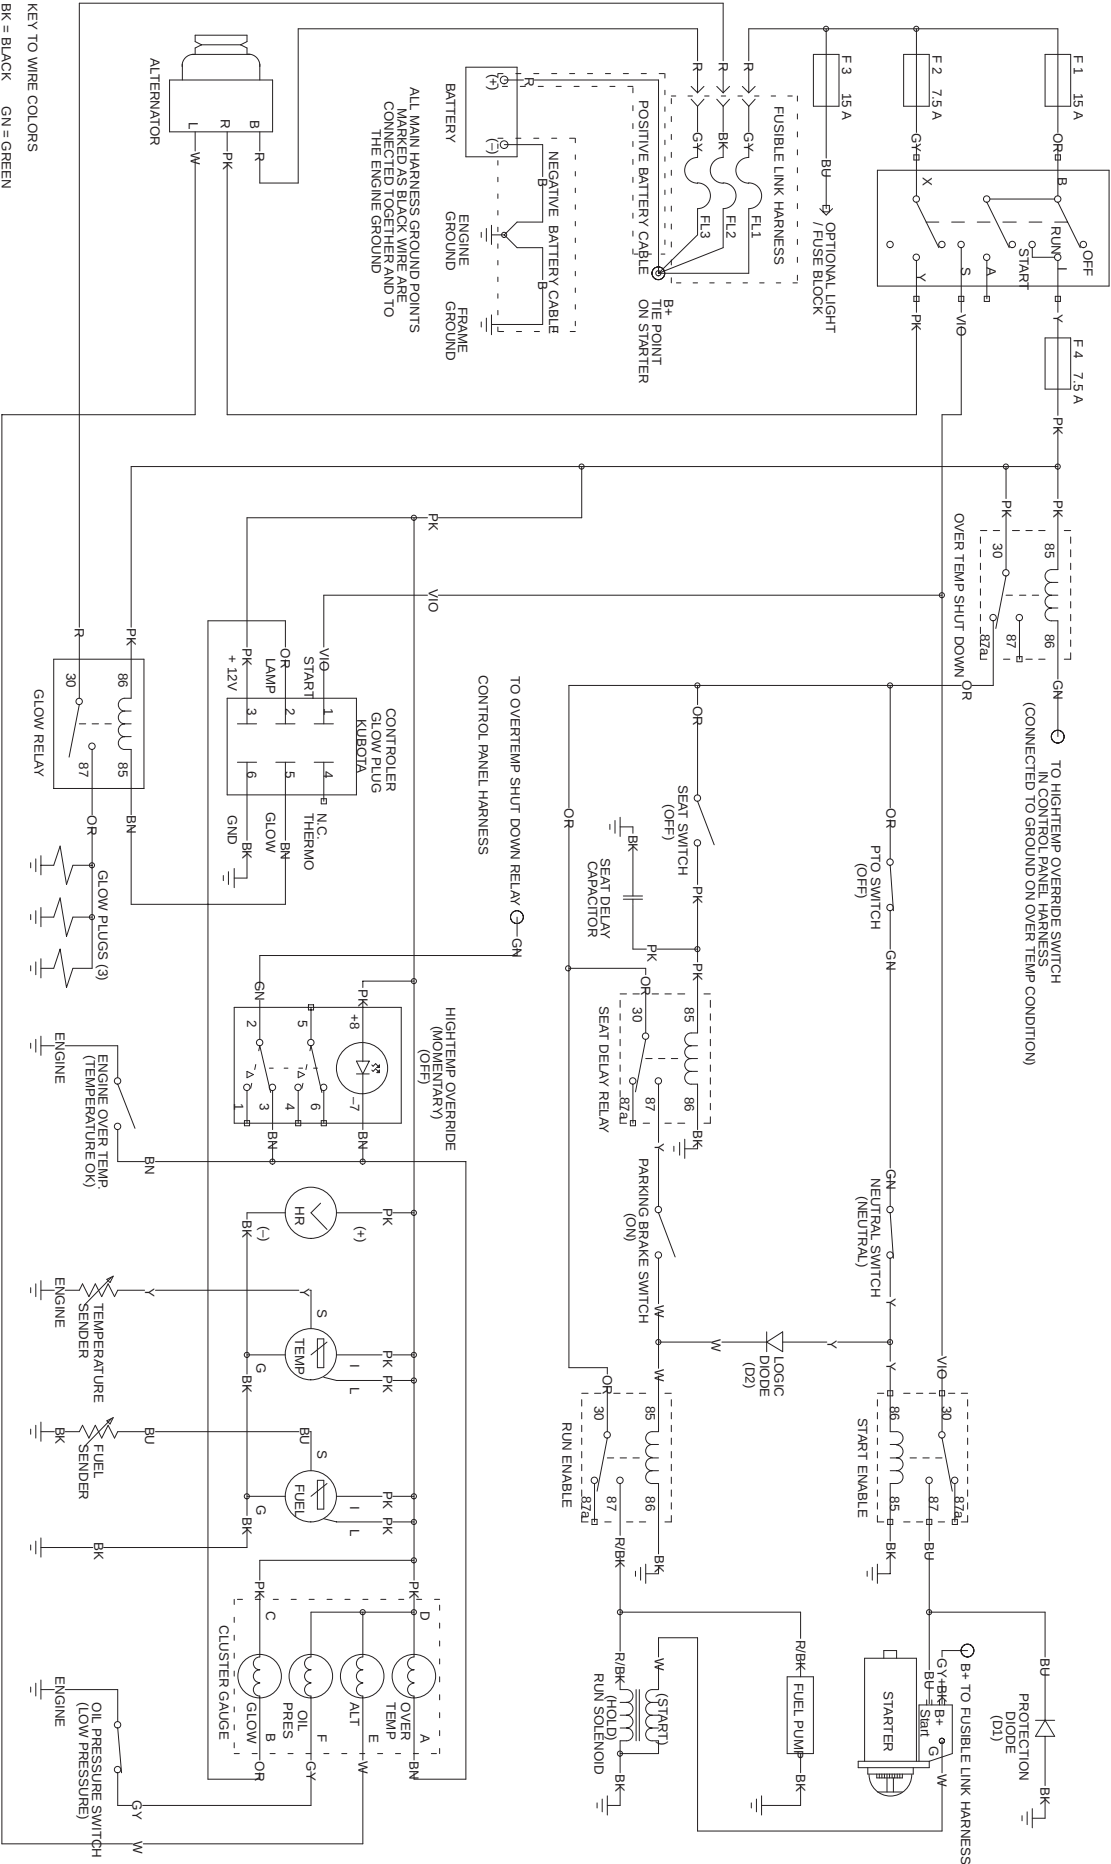

Hydraulic Schematic

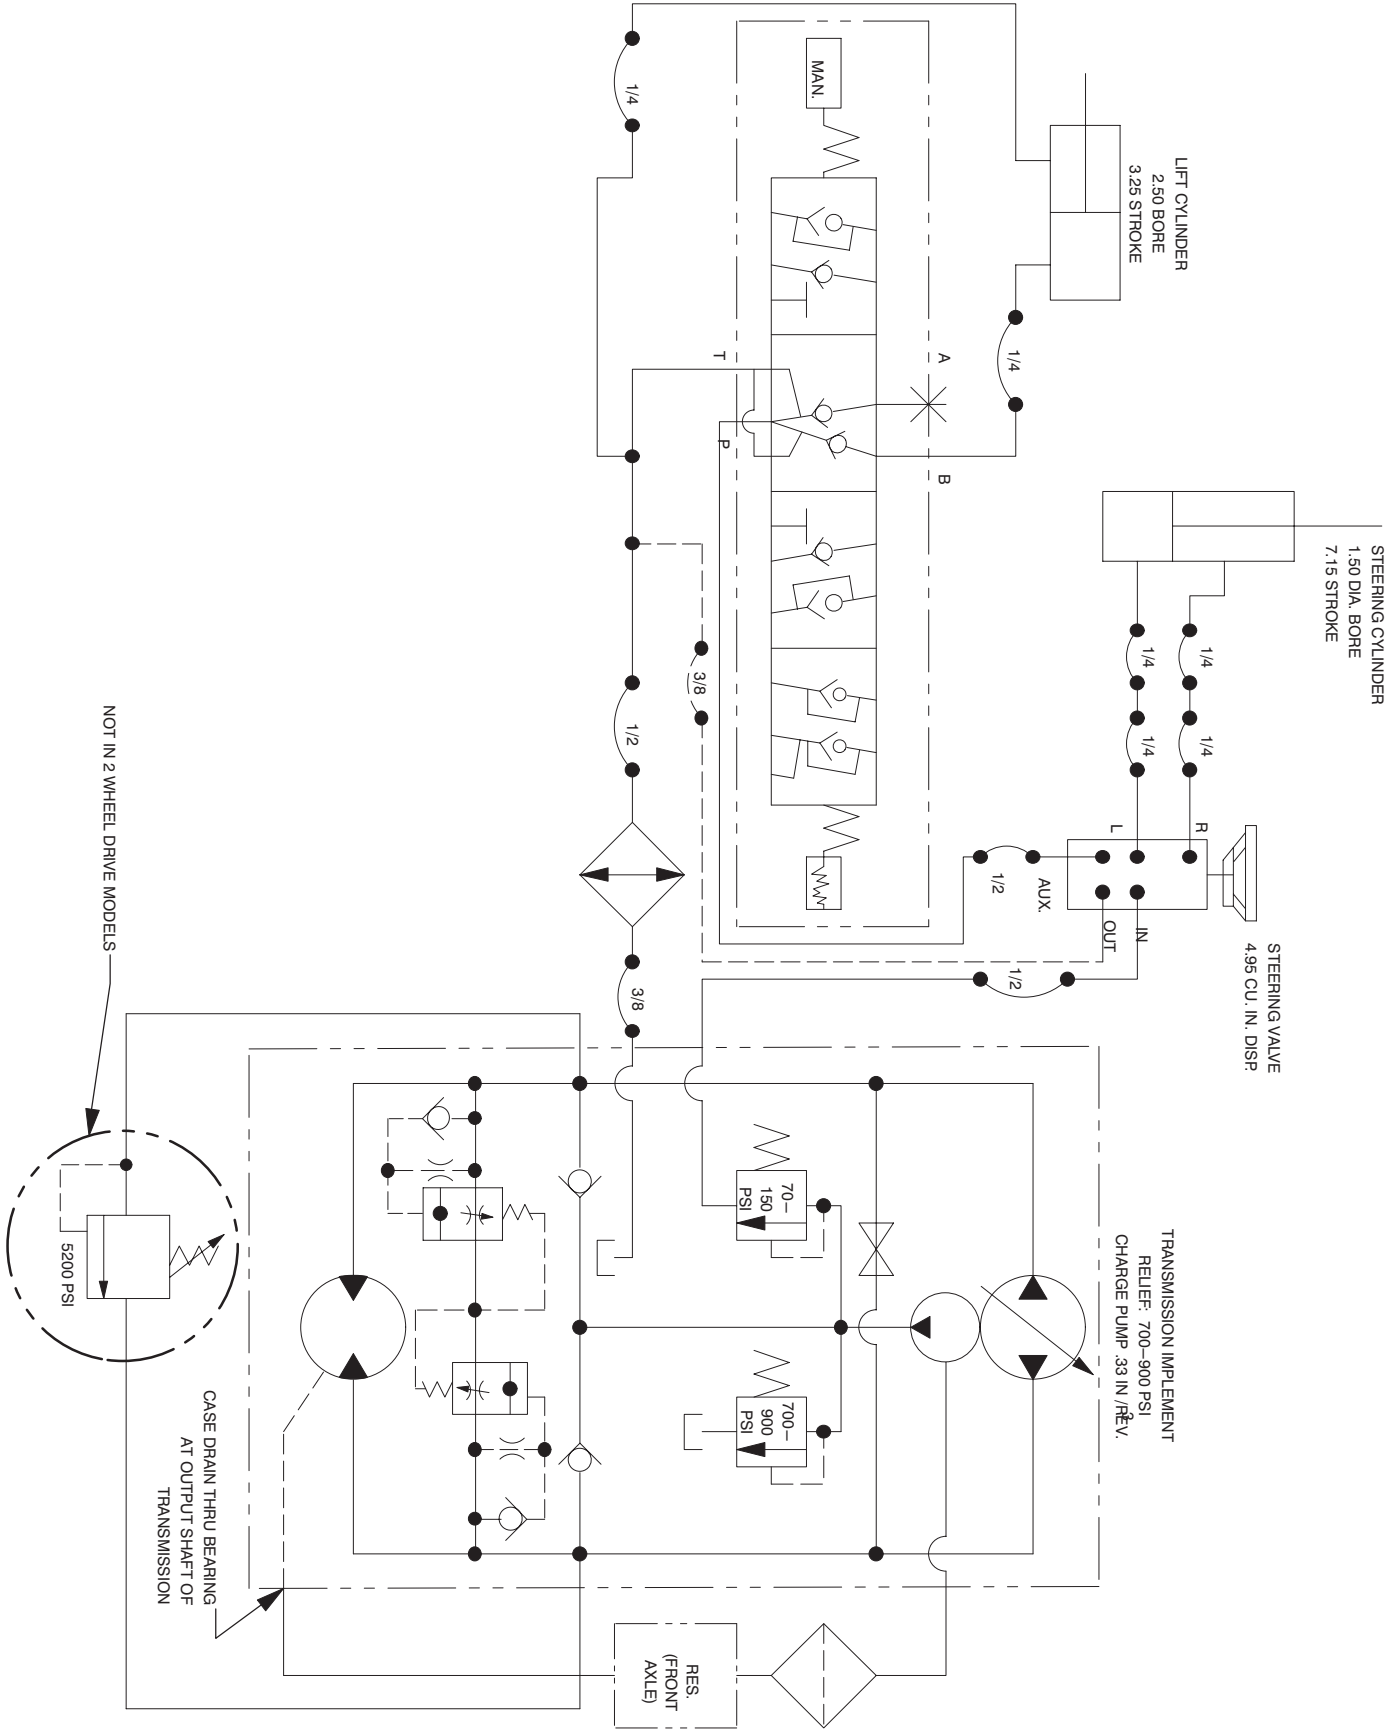 

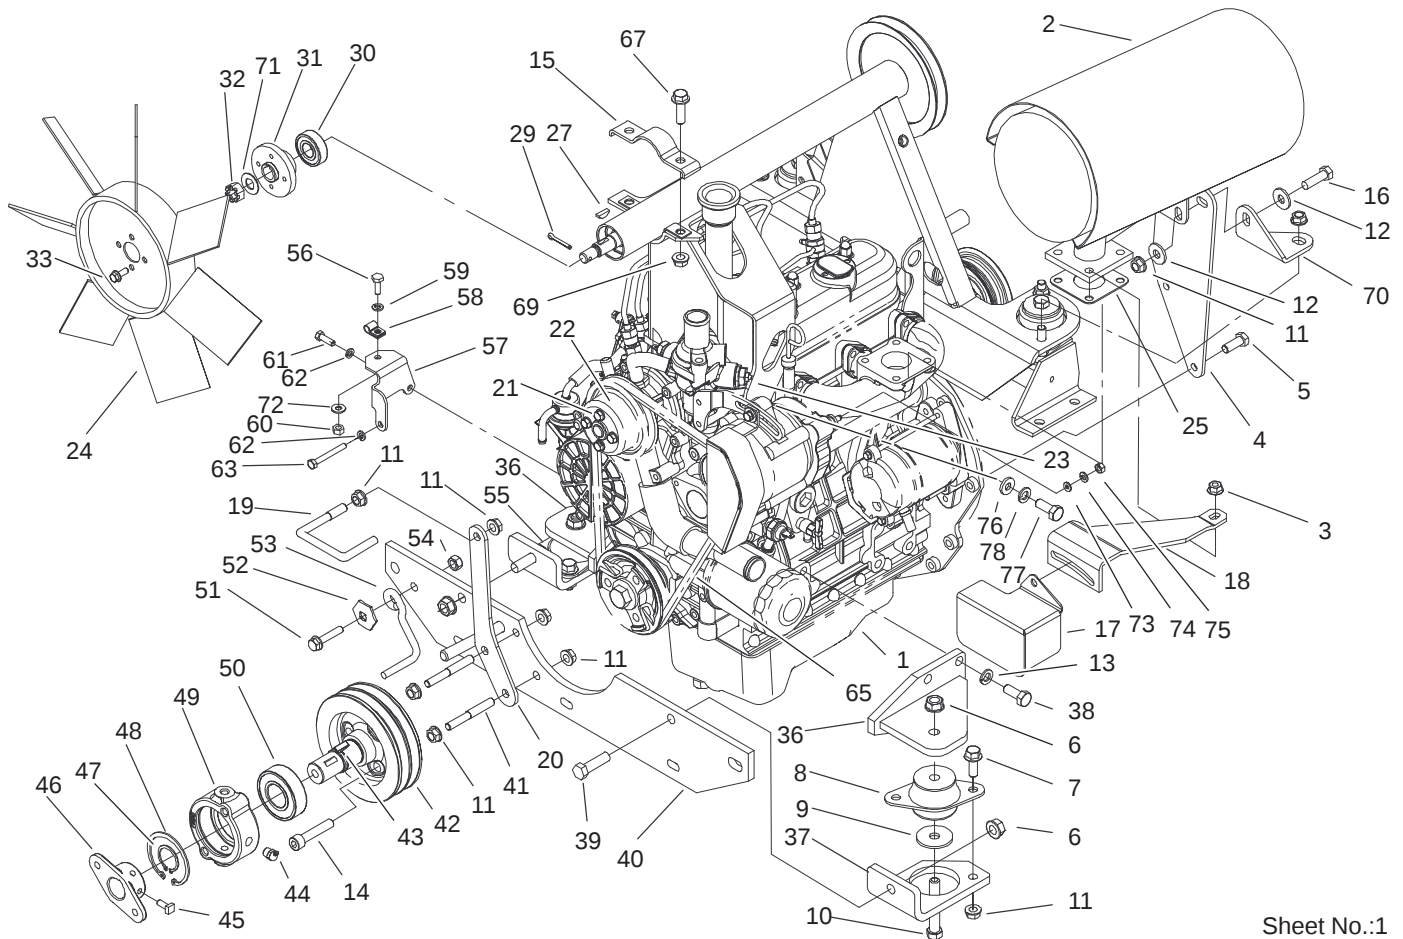 


Sheet No.:1

Engine and Mounting Components Assembly

Ref. No.	Part No.	Qty.	Description
1	106-4385	1	Engine ASM-Kubota
2	104-3426	1	Muffler-Exhaust
3	33004-00	4	Nut-HF
4	105-2523-03	1	Bracket-Muffler
5	33114-016	2	Screw-HH
6	32128-37	4	Nut-HF
7	3234-11	6	Screw-HHF
8	53-9680	2	Mount-Engine
9	53-9480	2	Snubber Washer
10	324-11	2	Screw-HH
11	3290-357	16	Nut-HHF
12	80-6990	4	Washer-Hardened
13	42-9600	8	Lockwasher-Spring
14	3274-106	3	Screw-HSH
15	105-2519-03	1	Clamp-Cradle
16	323-44	2	Screw-HH
17	105-2557-03	1	Guard-Alternator
18	105-2556-03	1	Brace-Alternator, Upper
19	105-4276	1	Guide-Belt, PTO
20	105-0052-03	1	Bracket-Belt Guide
21	81-1280	4	Bolt
22	98-9584	1	Pulley-Fan
23	98-9346	1	Sender-Temperature
24	104-4246	1	Fan-Engine
25	98-9611	1	Gasket

Ref. No.	Part No.	Qty.	Description
27	3257-30	1	Key-Woodruff
29	3272-16	1	Pin-Cotter
30	38-7820	1	Bearing-Ball
31	104-3408-03	1	Hub-Fan
32	32136-3	1	Nut
33	3234-33	4	Screw-HHF
36	104-3463-03	2	Mount-Front ASM
37	104-3464-03	1	Mount-LH Front, Frame
38	43-0090	8	Screw-HH
39	324-6	2	Screw-HH
40	75-9900-01	1	Support-Engine, Front
41	105-0057	2	Stud-Belt Retainer
42	104-3406-03	1	Pulley-Fan
43	3257-33	1	Key-Woodruff
44	302-10	1	Fitting-Grease
45	3241-5	2	Screw-Set
46	27-1960	1	Hub-Engine
47	32120-69	1	Ring-Snap
48	32120-22	1	Ring-Snap, Internal
49	43-3720	1	Collar-Bearing
50	251-252	1	Bearing
51	3234-18	1	Screw-HHF
52	3290-224	1	Lockwasher-Pyramid
53	63-1400	1	Rod-Belt
54	32153-2	1	Nut-Lock

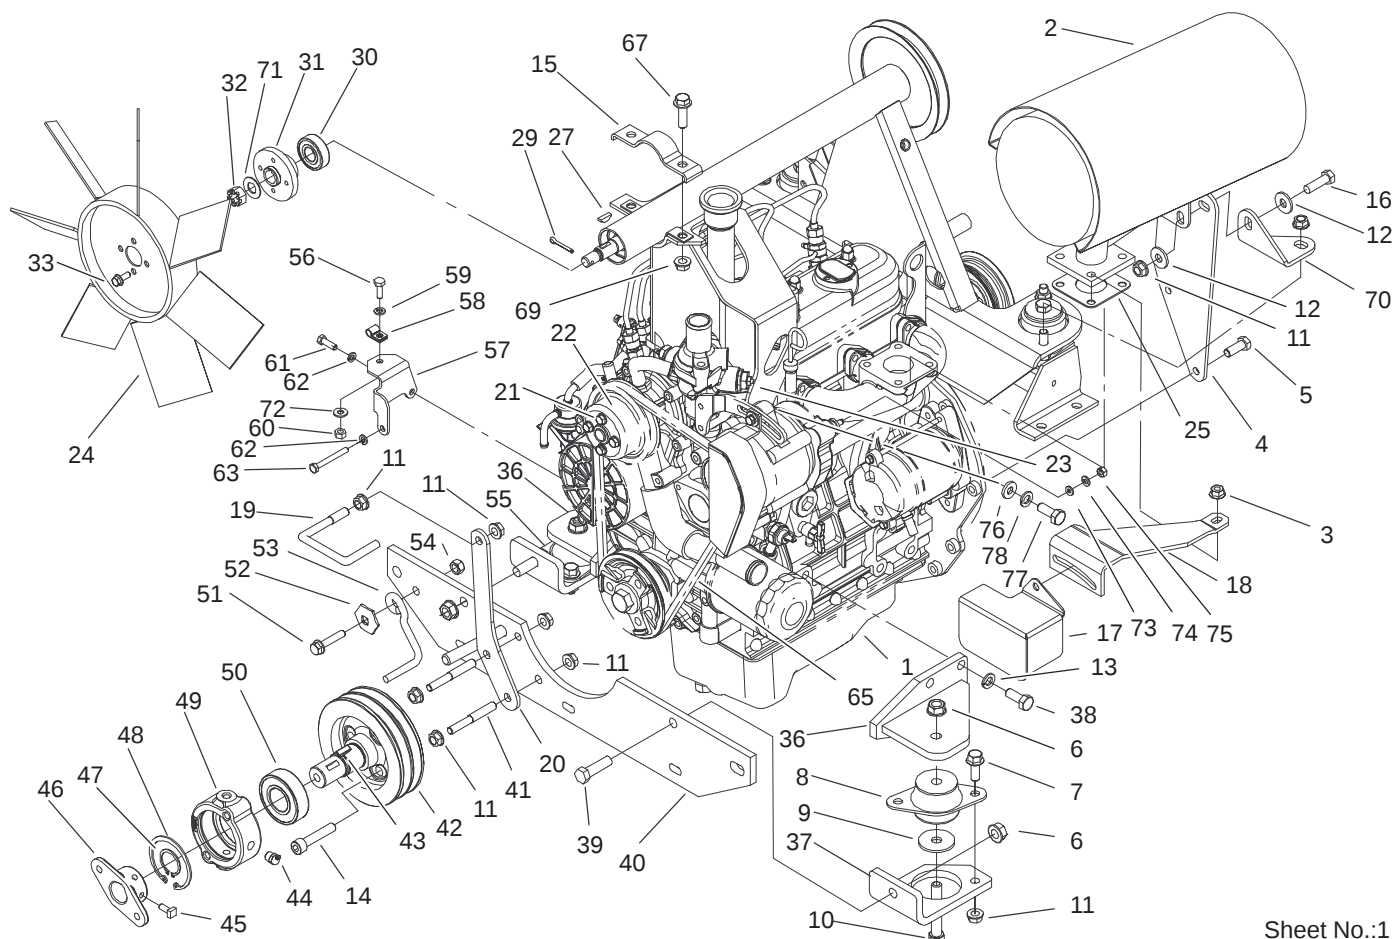 


Sheet No.:1

Engine and Mounting Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
55	104-3465-03	1	Mount-RH Front, Frame
56	321-4	1	Screw-HH
57	104-3421-03	1	Bracket-Throttle
58	2412-31	1	Clamp-Boden
59	3253-3	1	Washer-Lock
60	3217-5	1	Nut-Hex
61	60-6650	1	Screw-HH
62	48-8020	2	Washer-Spring
63	48-7630	1	Screw
65	98-9676	1	V-Belt
67	3234-24	2	Screw-HHF
69	3296-39	2	Nut-Lock, NI
70	105-2598-03	1	Bracket-Muffler
71	3-6803	1	Washer-Adjusting
72	3256-22	1	Washer-Flat
73	3256-78	1	Washer-Flat
74	43-5930	1	Washer-Spring
75	48-7890	1	Nut
76	33094-00	1	Washer-Flat
77	92-1374	1	Screw-HH
78	48-9570	1	Washer-Lock

Ref. No.	Part No.	Qty.	Description

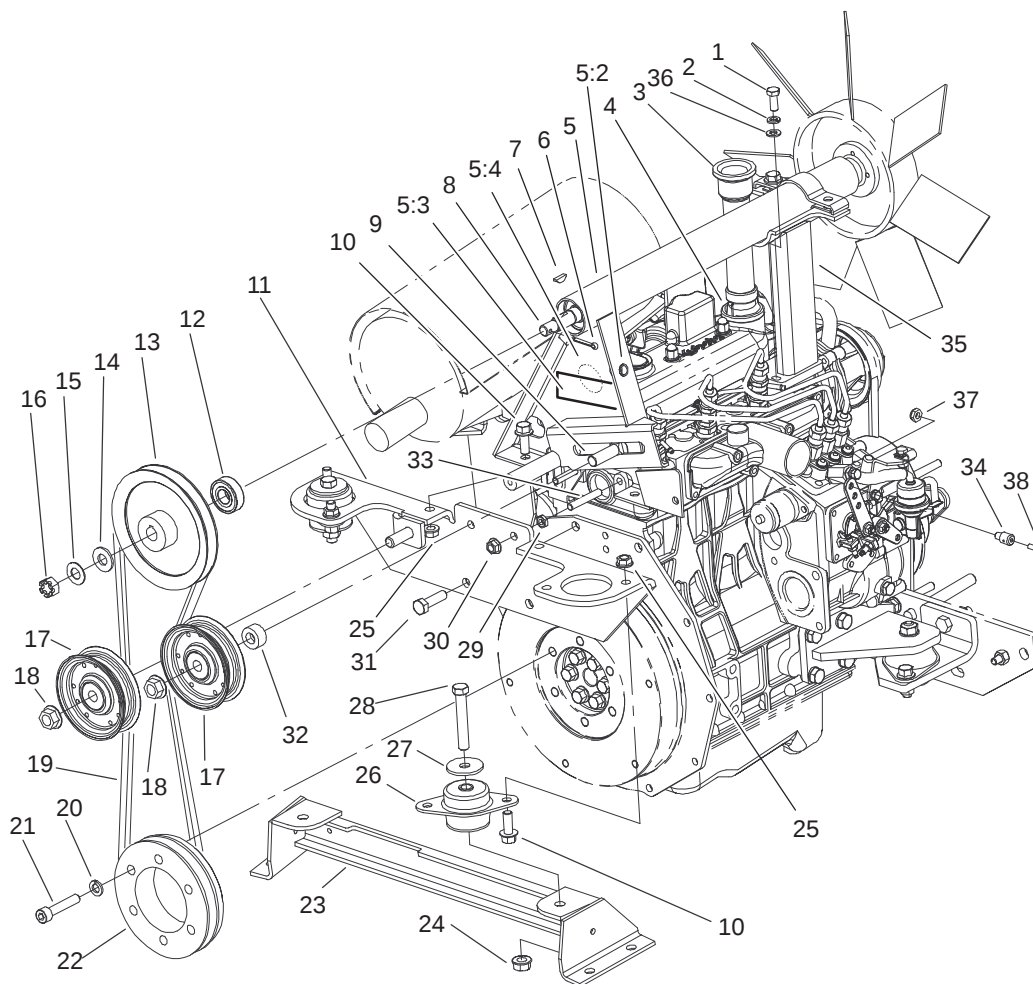 


Sheet No.:2

Engine and Mounting Components Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
1	93-7773	2	Screw
2	48-9570	2	Washer-Lock
3	105-0087	1	Flange-Filler, Oil
4	98-7430	1	O-Ring
5	105-2592	1	Tube Support ASM
5:2	3290-472	2	Insert-Threaded
5:3	67-5360	1	Decal-Danger
5:4	68-5370	1	Decal-Toro
6	3272-16	1	Pin-Cotter
7	3257-30	1	Key-Woodruff
8	43-3690	1	Fan Shaft
9	3233-14	1	Screw-CARR
10	3234-11	6	Screw-HHF
11	105-2501-03	1	Engine Mount ASM
12	38-7820	1	Bearing-Ball
13	105-2524	1	Pulley Hub
14	3-6803	2	Washer-Adjusting
15	29-8910	1	Washer
16	32136-3	1	Nut
17	105-3699	2	Pulley-Idler, Flat
18	32128-23	2	Nut-HF
19	105-3693	1	Belt-Fan
20	42-9600	6	Lockwasher-Spring
21	3274-106	6	Screw-HSH
22	104-3407-03	1	Pulley-Flywheel
23	105-2520-03	1	Engine Mount ASM

Ref. No.	Part No.	Qty.	Description
24	32128-37	2	Nut-HF
25	3290-357	4	Nut-HHF
26	53-9680	2	Mount-Engine
27	53-9480	2	Snubber Washer
28	324-11	2	Screw-HH
29	33014-00	2	Nut-Hex
30	92-6780	2	Nut-HF
31	56-2140	2	Bolt
32	105-0058	1	Spacer-Fan Idler
33	105-2502	2	Stud
34	105-4263	1	Swivel-Throttle Cable
35	105-2507-03	1	Cradle-Tube Support
36	68-0020	2	Idler Pivot Spacer
37	3296-20	1	Nut-Lock, NI
38	25-8640	1	Screw-HH
40	32128-21	2	Nut-HF

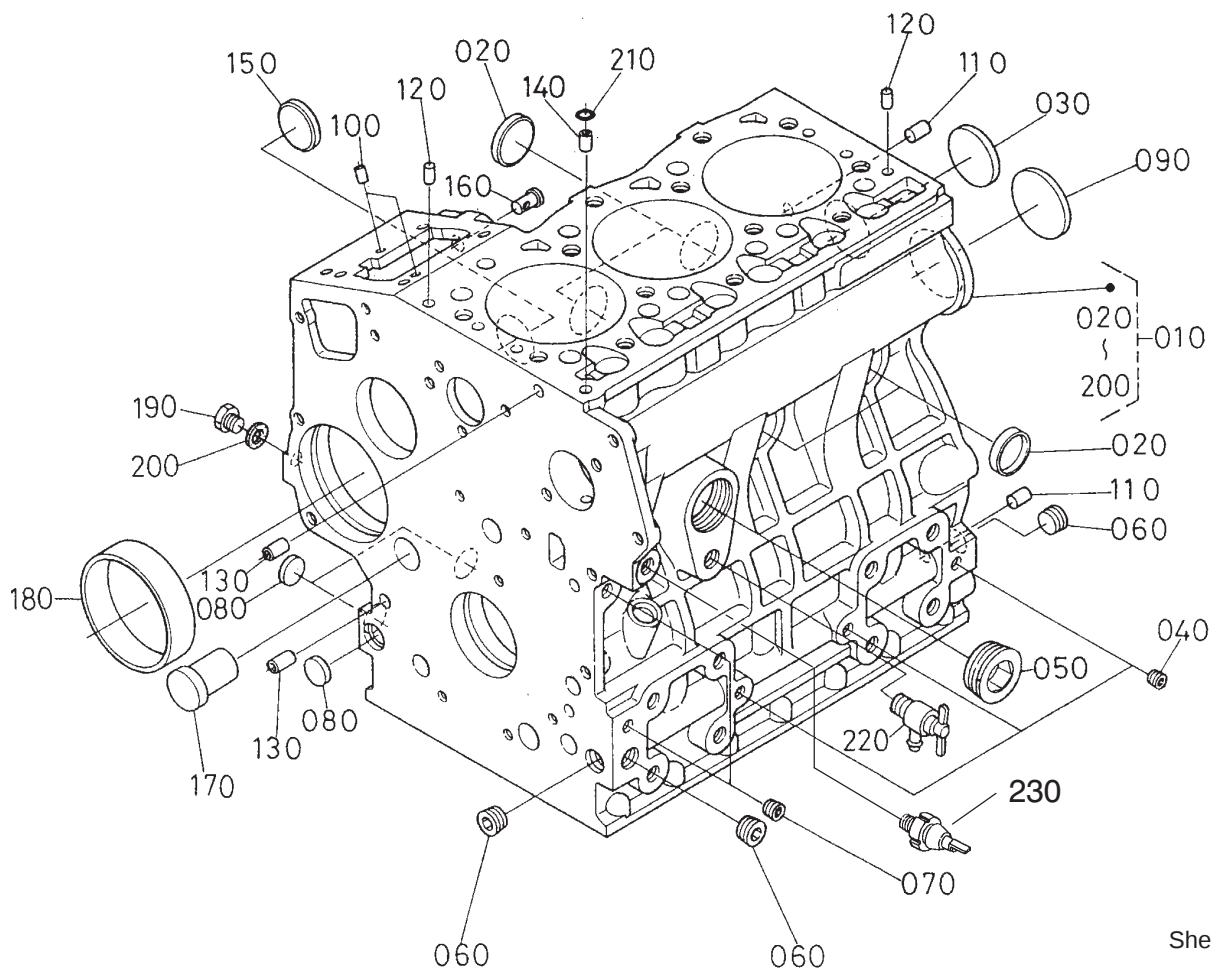 


Sheet No.:53

Crankcase Assembly

Ref. No.	Part No.	Qty.	Description
010	105-3778	1	Crankcase ASM
020	98-9398	4	Cap-Sealing
030	98-7539	1	Cap-Sealing
040	98-7540	3	Cap-Sealing
050	105-3779	1	Plug
060	98-9597	3	Plug
070	98-7487	2	Plug
080	98-7489	3	Plug
090	98-9668	1	Plug
100	105-3793	2	Pin-Straight
110	105-3794	2	Pin-Straight
120	105-3795	2	Pin-Straight
130	98-9387	2	Pin-Pipe
140	98-9539	1	Pin-Pipe
150	98-9599	1	Plug
160	98-9630	1	Pin-Spring, Start
170	98-9675	1	Plug
180	98-9656	1	Bushing-Governor, Gear
190	98-7507	1	Plug
200	98-7428	1	Gasket
210	98-7509	1	O-Ring
220	98-9436	1	Drain Cock ASM
230	98-9416	1	Switch-Oil

Ref. No.	Part No.	Qty.	Description

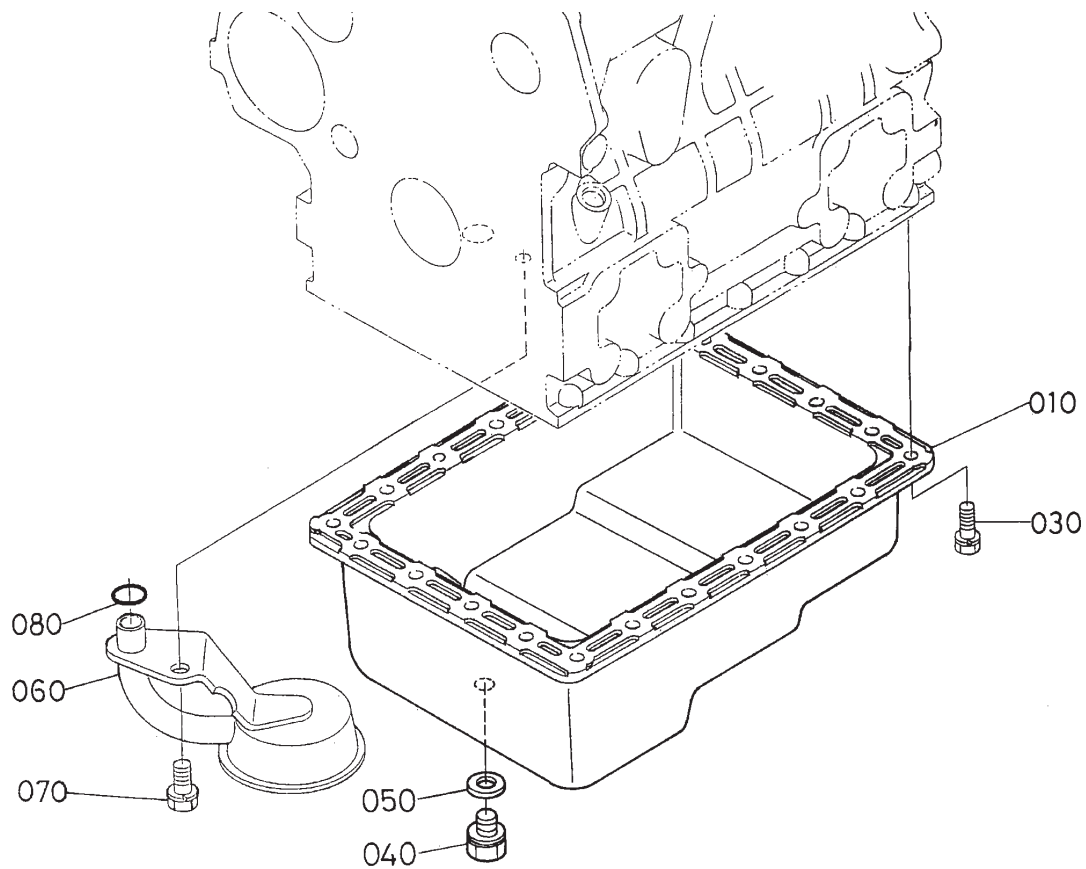 


Sheet No.:54

Oil Pan Assembly

Ref. No.	Part No.	Qty.	Description
010	104-3495	1	Pan-Oil
030	98-9350	2	Bolt
040	98-9386	1	Plug
050	98-7524	1	Gasket
060	104-3496	1	Filter-Oil Pickup
070	98-9358	1	Bolt
080	105-3776	1	O-Ring


Ref. No.	Part No.	Qty.	Description

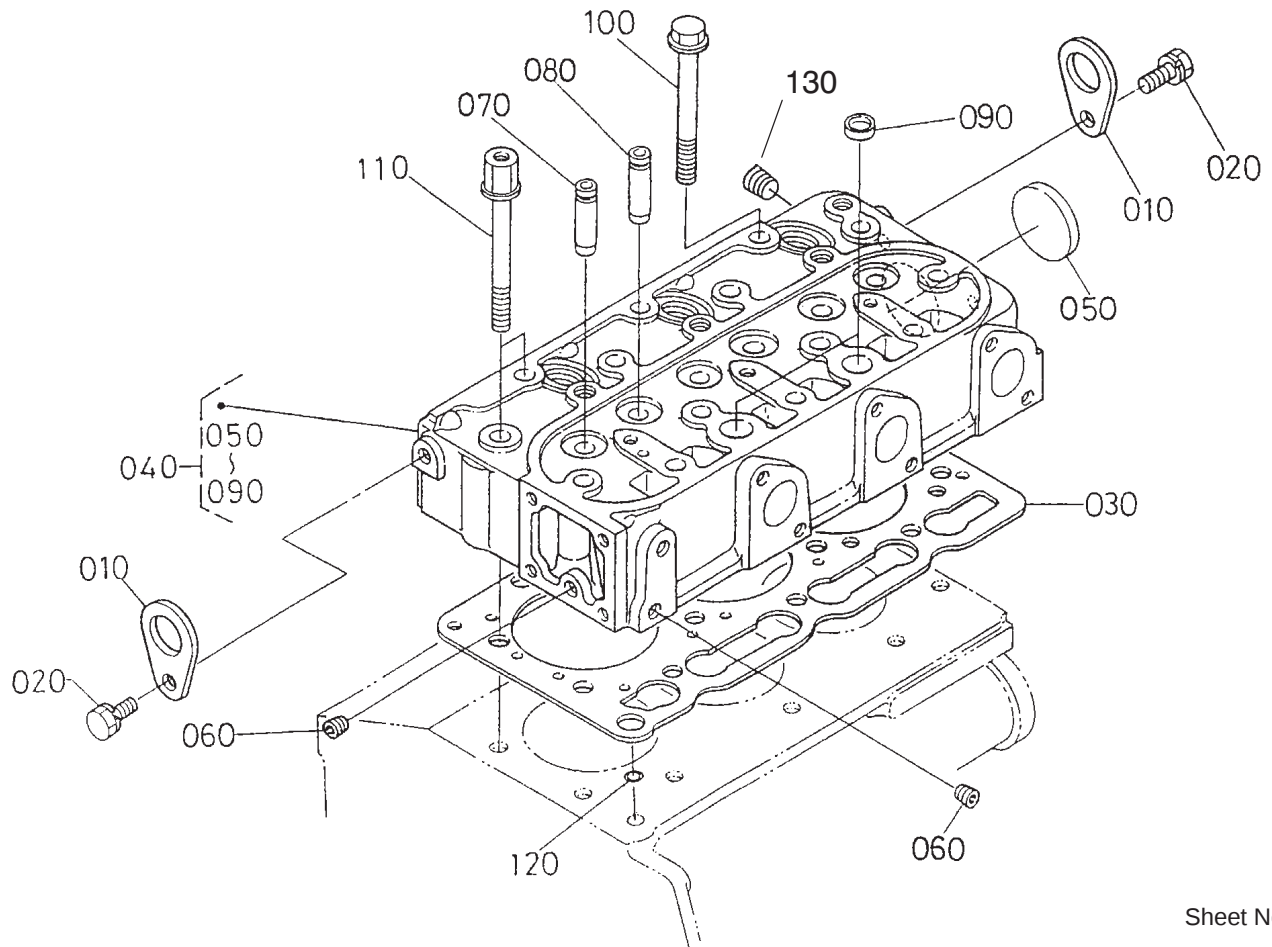 

Sheet No.:55

Cylinder Head Assembly

Ref. No.	Part No.	Qty.	Description
010	98-7531	2	Hook-Engine
020	100-9195	2	Bolt
030	105-3780	1	Gasket-Head, Cylinder
040	98-9460	1	Cylinder Head ASM
050	98-9395	1	Cap-Sealing
060	98-7540	2	Cap-Sealing
070	98-9499	3	Guide-Valve, Inlet
080	98-9500	3	Guide-Valve, Exhaust
090	98-9389	2	Cap-Sealing
100	98-9479	1	Bolt-Head, Cylinder
110	98-9647	2	Bolt-Head, Cylinder
120	98-7509	1	O-Ring
130	98-9444	1	Plug

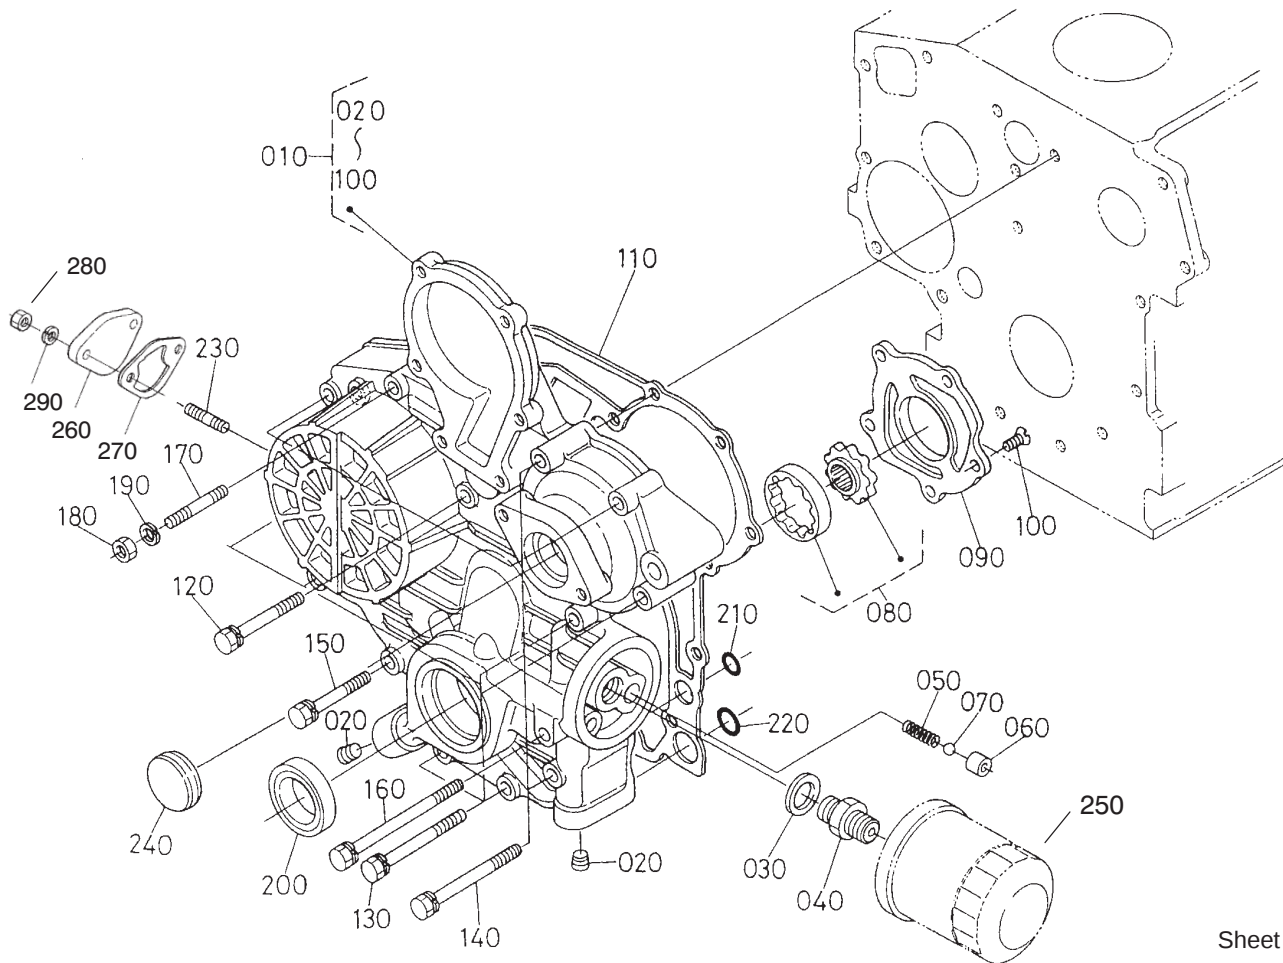 


Sheet No.:56

Gear Case, Oil Filter and Cover Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9481	1	Gear Case ASM
020	98-9598	1	Plug
030	98-7562	1	Washer-Plain
040	98-9388	1	Joint-Pipe
050	98-9544	1	Spring
060	98-9543	1	Seat-Valve
070	98-9380	1	Ball
080	98-9540	1	Oil Pump Rotor ASM
090	98-9541	1	Cover-Pump, Oil
100	98-9592	5	Screw
110	98-9633	1	Gasket-Case, Gear
120	98-7496	3	Bolt
130	105-3797	6	Bolt
140	98-9356	2	Bolt
150	98-9437	1	Bolt
160	98-9586	1	Bolt
170	105-3709	1	Stud
180	98-7572	1	Nut
190	98-7699	1	Washer-Spring
200	98-9482	1	Seal-Oil
210	105-3781	2	O-Ring
220	105-3777	2	O-Ring
230	105-3710	2	Stud
240	98-9641	1	Cover
250	99-8384	1	Filter-Oil
260	99-3514	1	Cover


Ref. No.	Part No.	Qty.	Description
270	98-9636	1	Gasket-Pump, Fuel
280	98-7572	2	Nut
290	98-7699	2	Washer-Spring

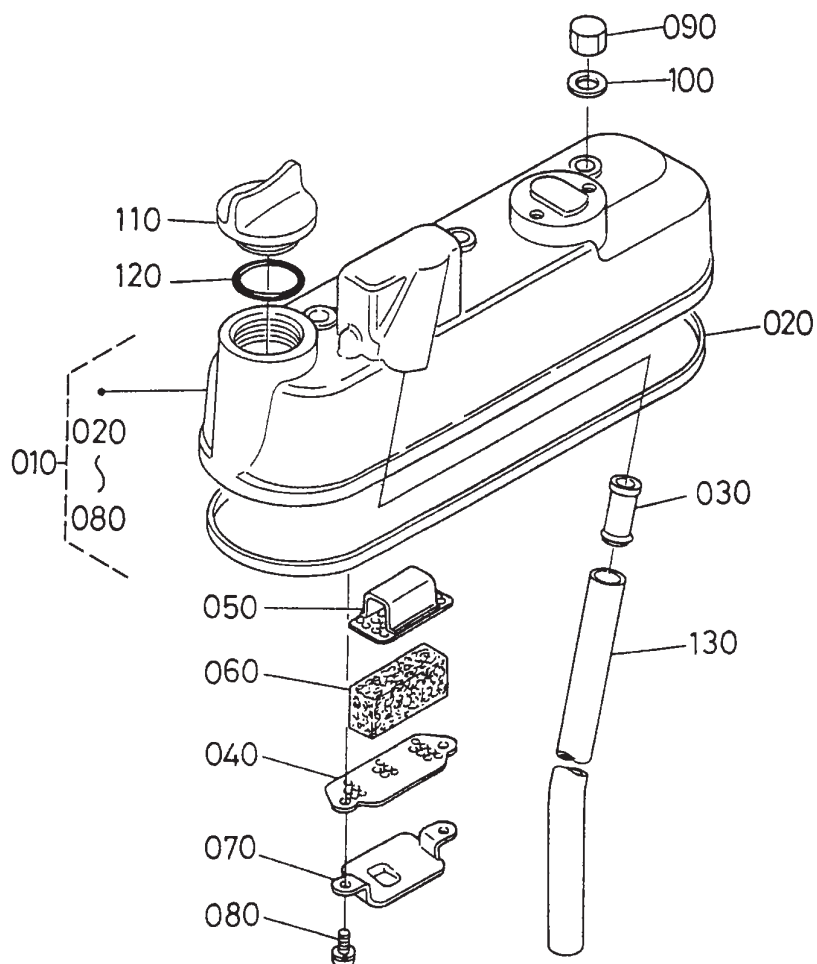 

Sheet No.:57

Head Cover Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9614	1	Cylinder Head Cover ASM
020	98-9615	1	Gasket-Cover, Head
030	98-9492	1	Joint-Pipe, Breather
040	98-9488	1	Plate-Element, Breather
050	98-9489	1	Plate-Element, Breather
060	98-9493	1	Element-Breather
070	98-9490	1	Shield-Oil, Breather
080	105-3782	2	Screw W/Washer
090	98-9455	3	Nut-Cap
100	98-9454	3	Gasket
110	98-9449	1	Plug-Filler, Oil
120	99-3446	1	O-Ring
130	98-9491	1	Pipe-Breather

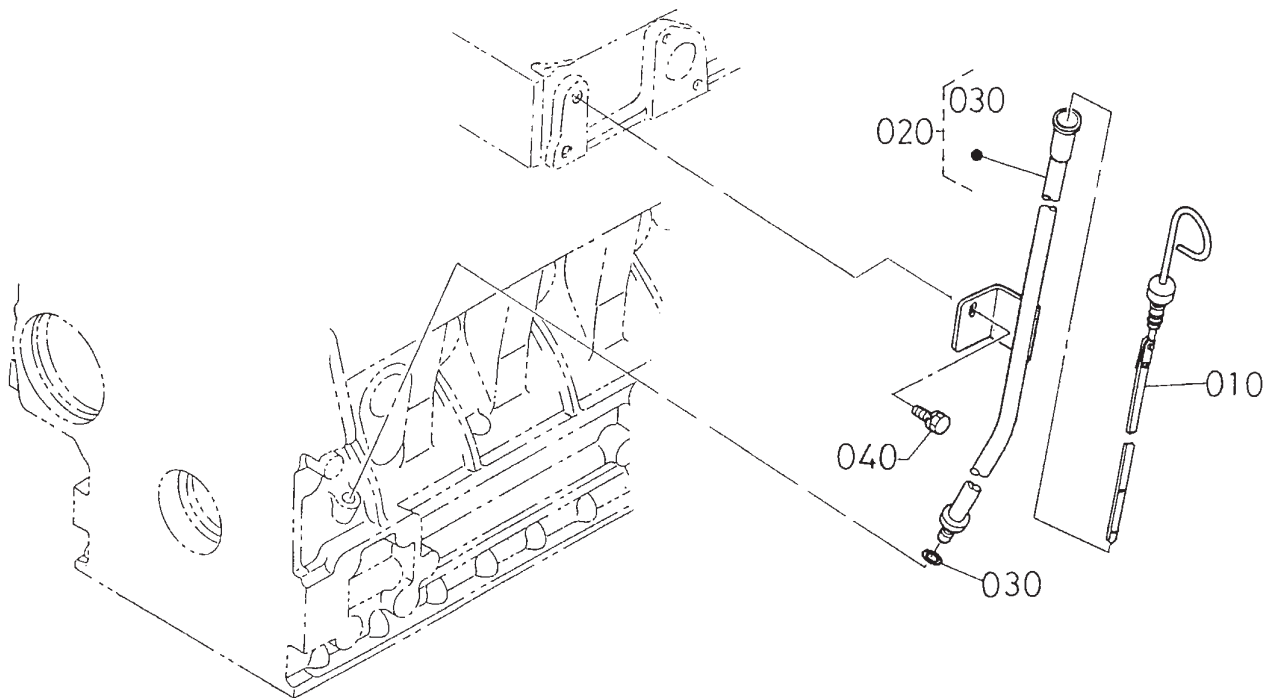 


Sheet No.:58

Dipstick and Guide Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9670	1	Gauge-Oil
020	98-9672	1	Oil Gauge Guide ASM
030	98-9374	1	O-Ring
040	98-7453	1	Bolt

Ref. No.	Part No.	Qty.	Description

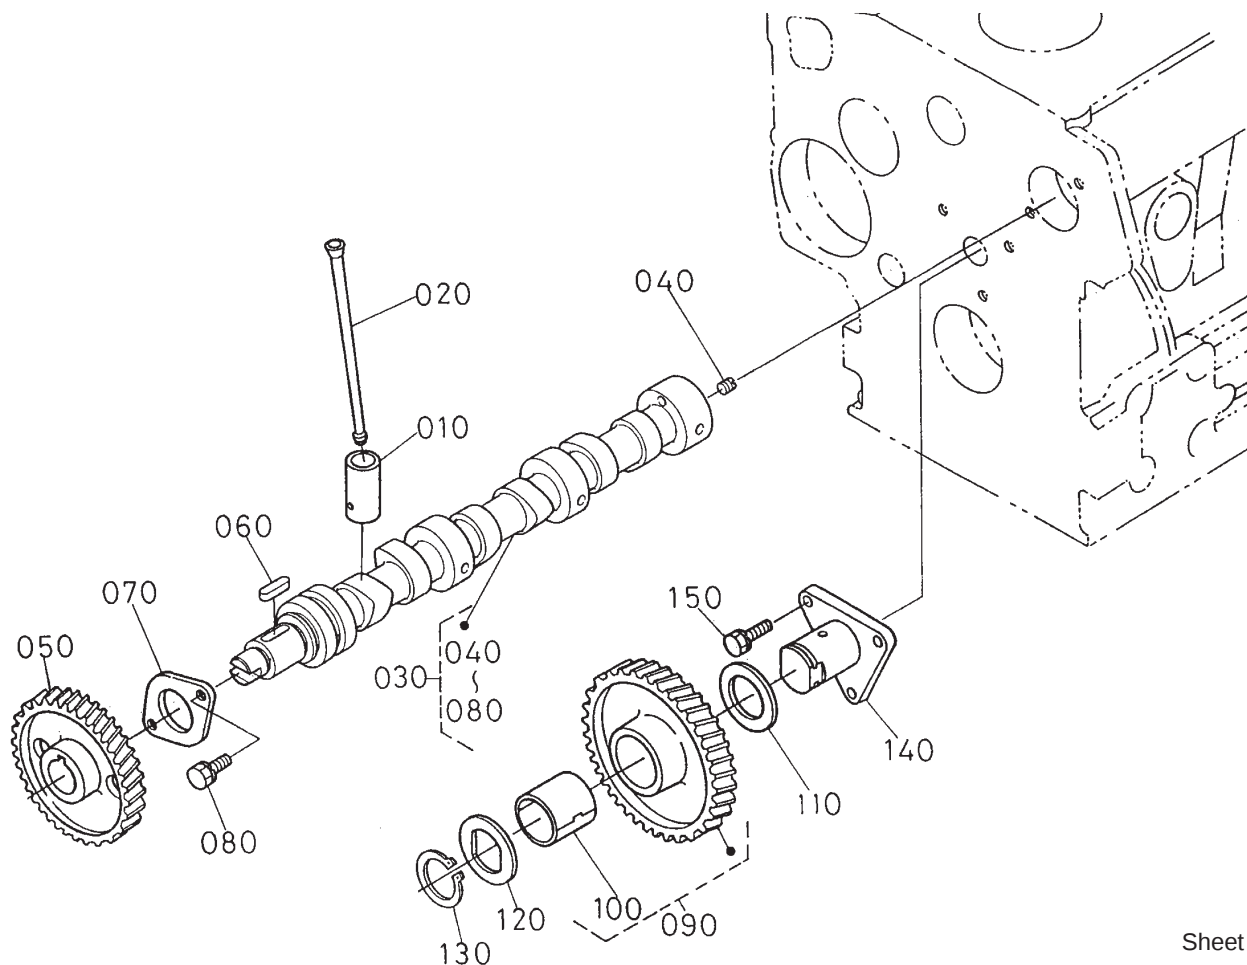 


Sheet No.:60

Camshaft and Idler Gear Shaft Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9616	6	Tappet
020	98-9509	6	Rod-Push
030	98-9617	1	Camshaft ASM
040	98-7449	1	Screw-Set
050	98-9512	1	Gear-Cam
060	98-9378	1	Key-Feather
070	98-9510	1	Stopper-Camshaft
080	98-9351	2	Bolt
090	98-9649	1	Idle Gear ASM
100	98-9650	1	Bushing-Gear, Idle
110	98-9535	1	Collar-Gear, Idle
120	98-9536	1	Collar-Gear, Idle
130	98-9534	1	Clip-Circular, Idle Gear
140	98-9533	1	Shaft-Gear, Idle
150	98-7692	3	Bolt

Ref. No.	Part No.	Qty.	Description

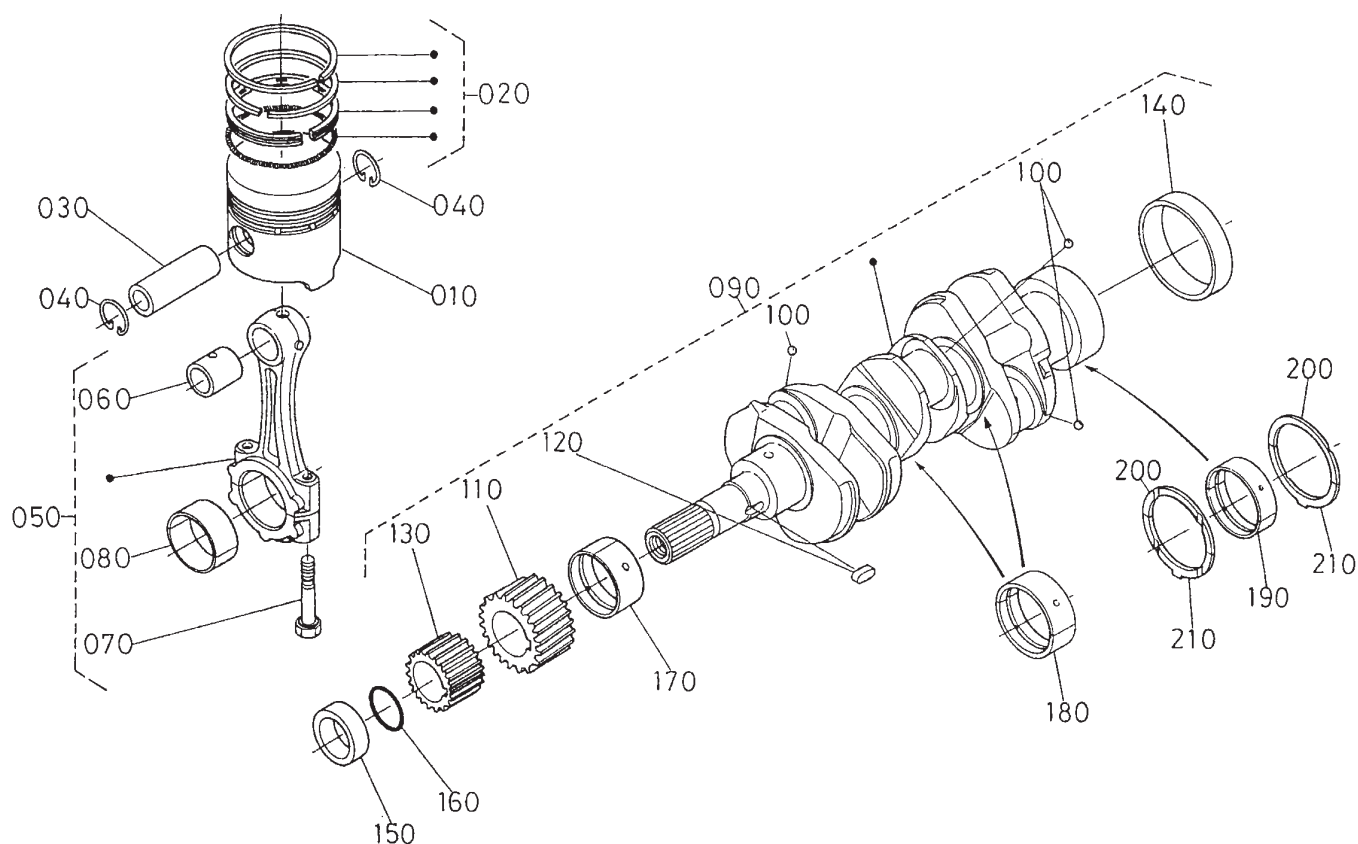 


Sheet No.:61

Piston and Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9469	3	Piston (STD)
010	98-9470	3	Piston (0.5mm)
020	98-9618	3	Piston Ring ASM (STD)
020	98-9619	3	Piston Ring ASM (0.5mm)
030	98-9513	3	Pin-Piston
040	98-9514	6	Clip-Circular, Piston Pin
050	98-9516	3	Connecting Rod ASM
060	98-9515	3	Bushing-Pin, Piston
070	98-9517	6	Bolt-Rod, Connecting
080	98-9518	3	Metal-Crankpin (STD)
080	98-9519	3	Bearing-Rod (0.2mm)
080	98-9520	3	Bearing-Rod (0.4mm)
090	98-9642	1	Crankshaft ASM
100	98-7473	3	Ball
110	98-9532	1	Gear-Crankshaft
120	98-9666	1	Key
130	98-9542	1	Gear-Drive, Oil Pump
140	98-9522	1	Sleeve-Crankshaft
150	98-9521	1	Collar-Crankshaft
160	105-3783	1	O-Ring
170	98-9529	1	Bearing-Main (0.4mm)
170	98-9528	1	Bearing-Main (0.2mm)
170	98-9523	1	Metal Crankshaft(STD)

Ref. No.	Part No.	Qty.	Description
180	98-9531	2	Bearing-Main (0.4mm)
180	98-9530	2	Bearing-Main (0.2mm)
180	98-9524	2	Metal-Crankshaft (STD Set)
190	98-9527	1	Bearing-Main (0.4mm)
190	98-9526	1	Bearing-Main (0.2mm)
190	98-9525	1	Metal Crankshaft(STD Set)
200	98-9415	2	Bearing-Thrust (0.4mm)
200	98-9414	2	Bearing-Thrust (0.2mm)
200	98-9413	2	Bearing-Thrust (STD)
210	98-9690	2	Bearing-Thrust (0.4mm)
210	98-9689	2	Bearing-Thrust (0.2mm)
210	98-9688	2	Bearing-Thrust (STD)

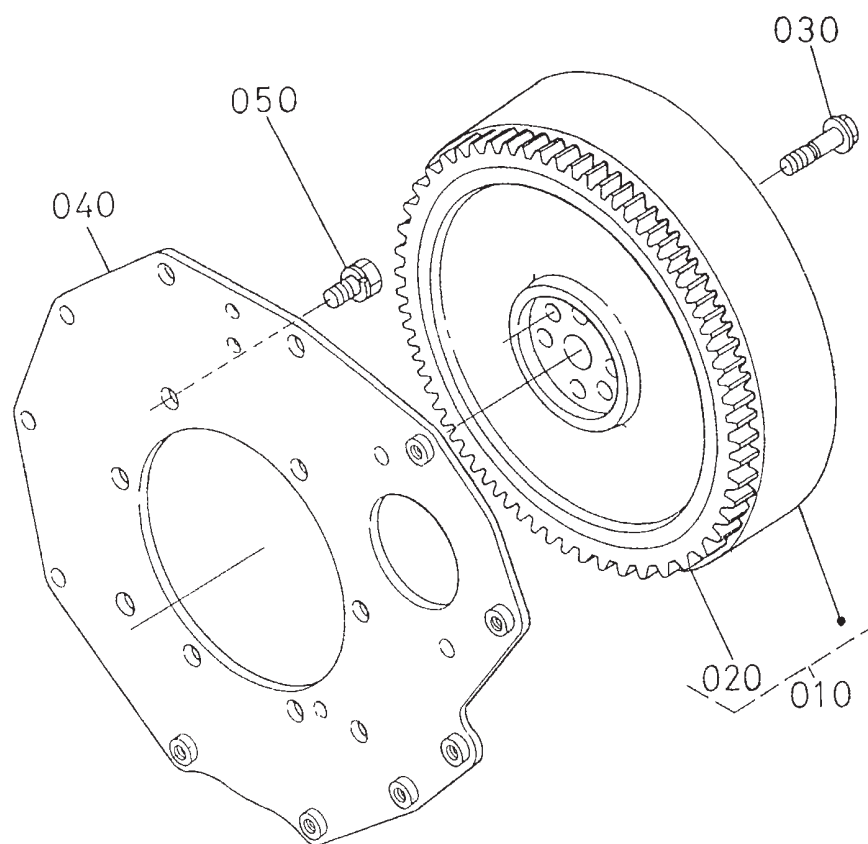 


Sheet No.:62

Flywheel Assembly

Ref. No.	Part No.	Qty.	Description
010	105-3784	1	Flywheel ASM
020	105-3722	1	Gear-Ring
030	98-9537	6	Bolt-Flywheel
040	98-9486	1	Plate-End, Rear
050	98-9392	8	Bolt

Ref. No.	Part No.	Qty.	Description

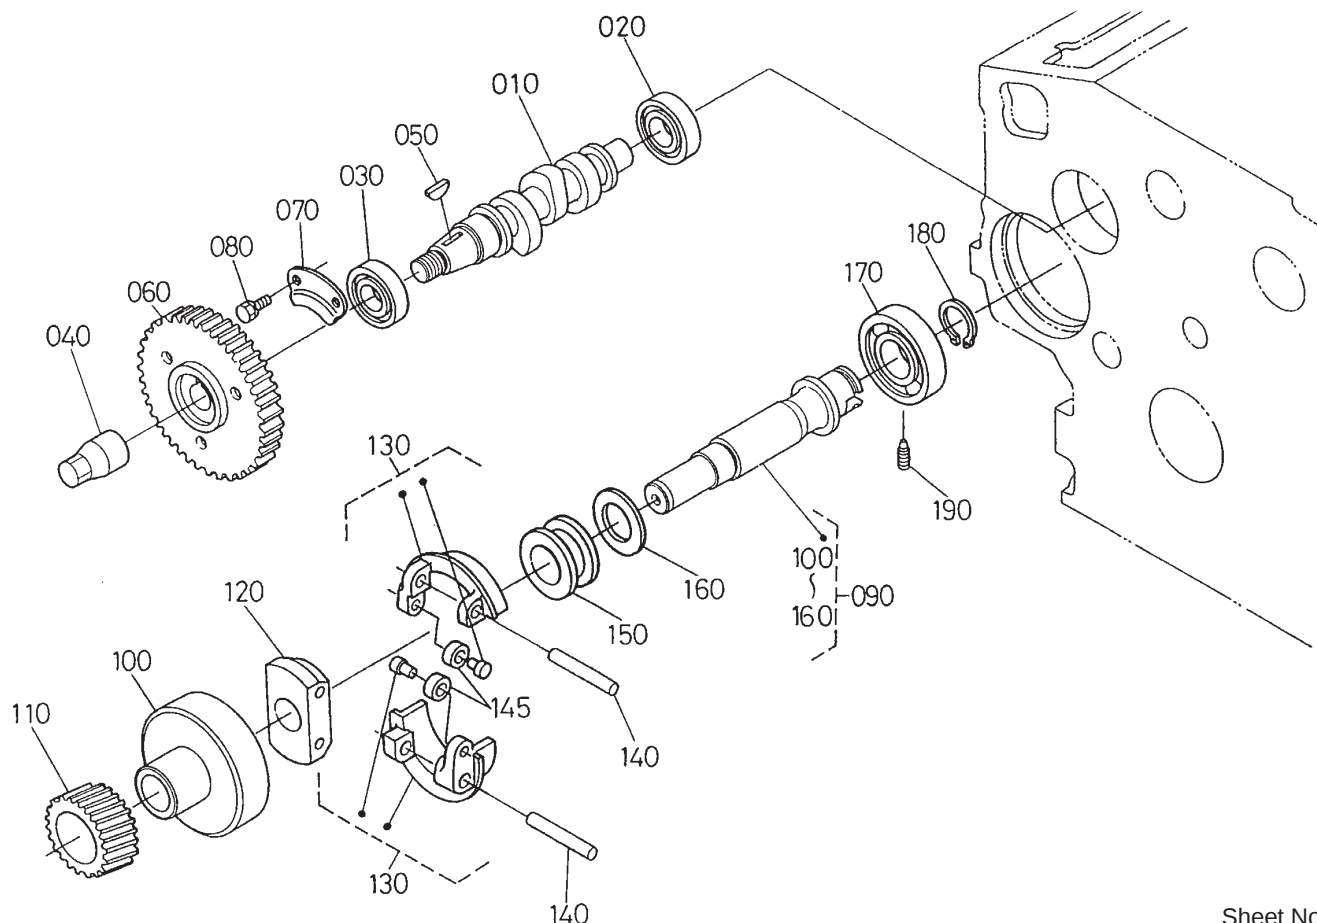 


Sheet No.:63

Fuel, Camshaft and Governor Shaft Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9459	1	Camshaft-Fuel
020	98-9382	1	Bearing-Ball
030	98-9383	1	Bearing-Ball
040	98-9590	1	Nut-Cap
050	98-9595	1	Key-Woodruff
060	98-9669	1	Gear-Pump, Injection
070	98-9511	1	Stopper-Fuel, Camshaft
080	98-9350	2	Bolt
090	98-9644	1	Governor Shaft ASM
100	98-9562	1	Holder-Gear, Governor
110	98-9673	1	Gear-Governor
120	98-9561	1	Holder-Weight, Governor
130	98-9559	2	Governor Weight ASM
140	98-9560	2	Shaft-Weight, Governor
145	98-9692	2	Roller
150	98-9563	1	Sleeve-Governor
160	98-9564	1	Washer-Thrust
170	98-9381	1	Bearing-Ball
180	98-9657	1	Clip-Circular, Governor Shaft
190	98-9565	1	Screw-Set

Ref. No.	Part No.	Qty.	Description

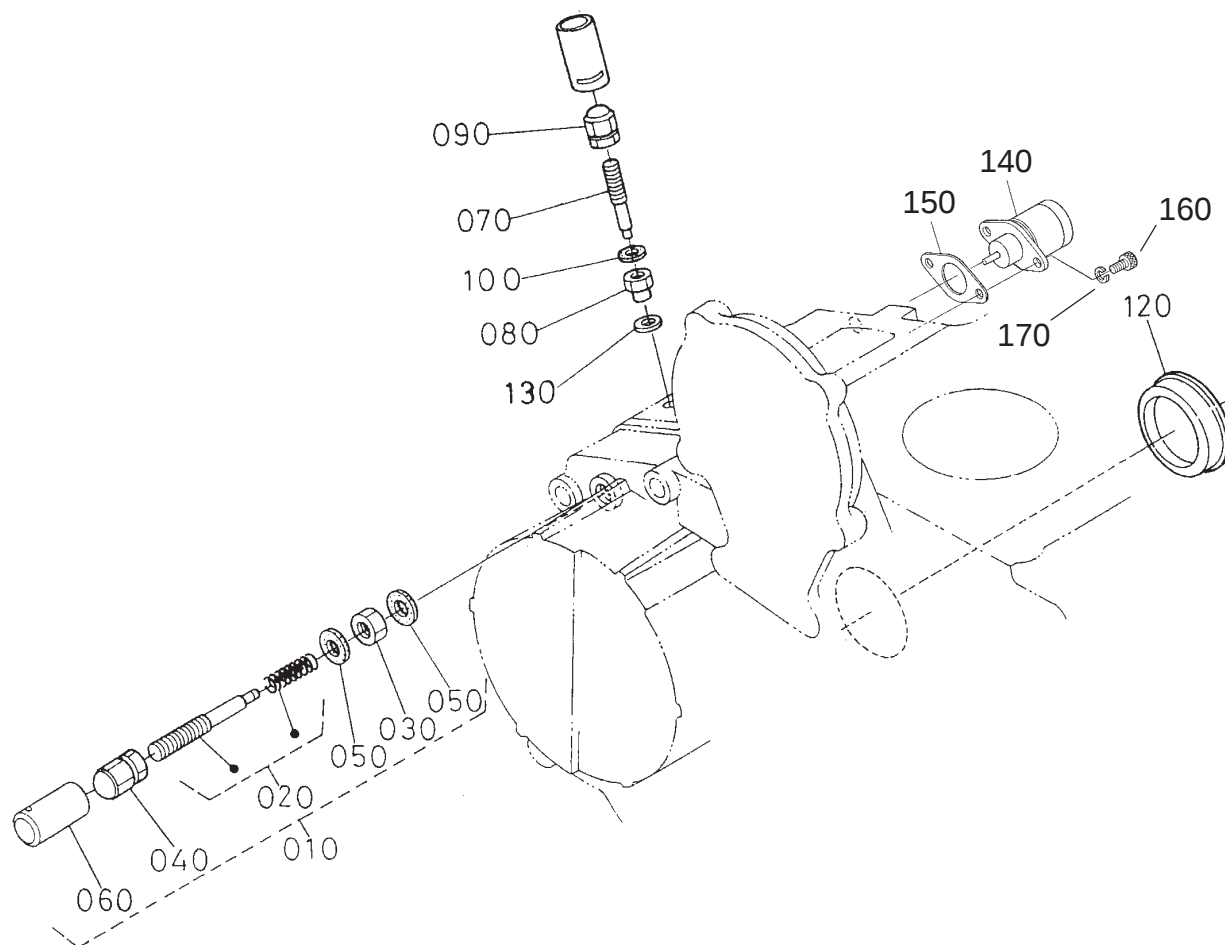 


Sheet No.:64

Idle Apparatus and Stop Solenoid Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9678	1	Idle Apparatus ASM
020	98-9679	1	Adjusting Bolt ASM
030	98-9439	1	Nut
040	105-3785	1	Plug
050	98-7654	2	Gasket
060	98-7656	1	Cap
070	98-9557	1	Bolt-Adjusting
080	99-3512	1	Nut
090	105-3785	1	Plug
100	98-7654	1	Gasket
120	98-9640	1	Cover-Pump
130	99-8389	1	Gasket
140	104-5155	1	Solenoid-Stop
150	98-9683	1	Gasket-Cover, Solenoid
160	105-3799	2	Bolt-HSH
170	98-7699	2	Washer-Spring


Ref. No.	Part No.	Qty.	Description

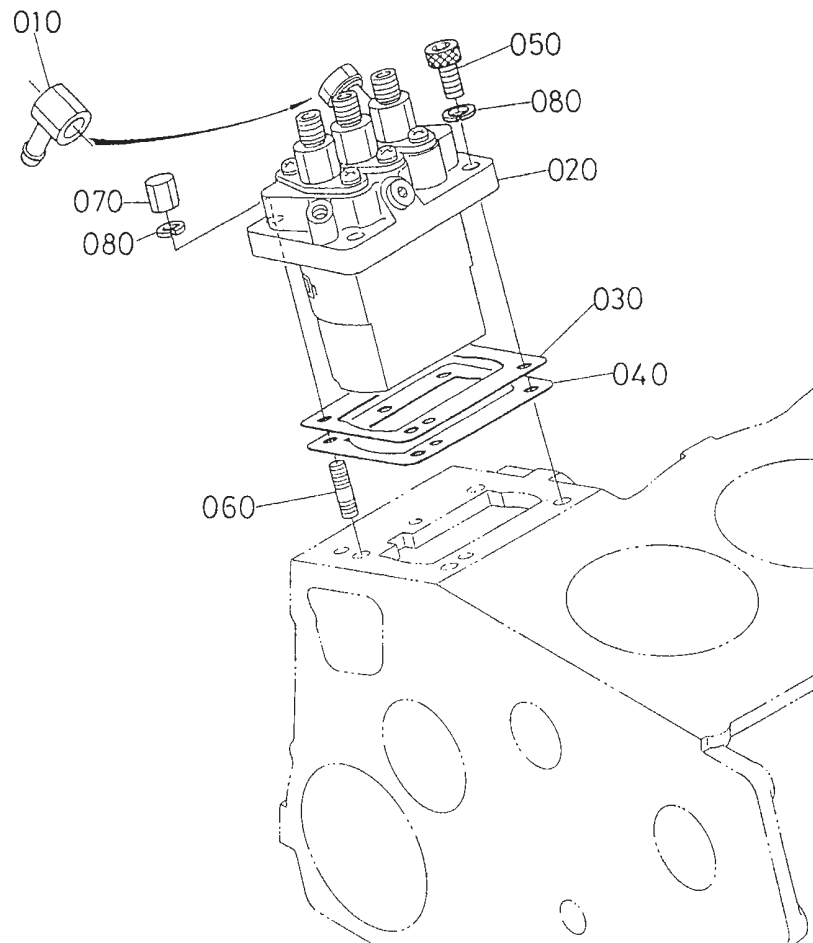 

Sheet No.:65

Injection Pump Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9596	1	Joint-Eye
020	98-9643	1	Injection Pump ASM
030	98-9456	1	Shim (0.2mm)
030	98-9457	1	Shim-Injection (0.25mm)
040	98-9458	1	Shim-Injection (0.30mm)
050	98-9361	2	Bolt-HSH
060	98-9438	2	Stud
070	98-9440	2	Nut-Cap
080	98-7699	4	Washer-Spring

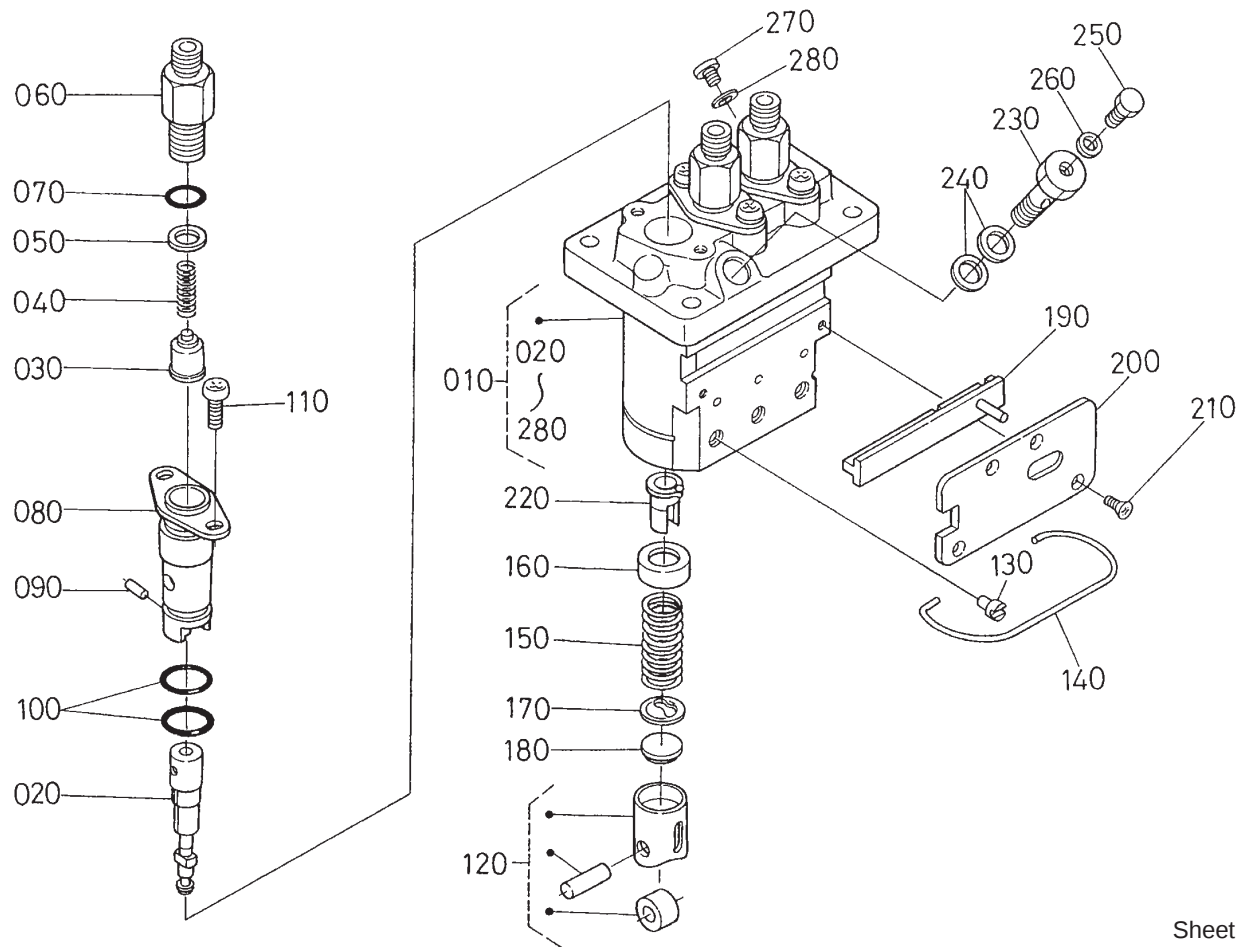 


Sheet No.:66

Injection Pump Assembly No. 98-9643

Ref. No.	Part No.	Qty.	Description
010	98-9643	1	Injection Pump ASM
020	98-9462	3	Element-Pump
030	98-9421	3	Valve-Delivery
040	98-9424	3	Spring-Valve, Delivery
050	98-9425	3	Gasket-Valve, Delivery
060	98-9652	3	Holder-Valve, Delivery
070	98-9447	3	O-Ring
080	98-9434	3	Flange-Sleeve
090	98-9443	3	Pin-Joint
100	98-9423	6	O-Ring
110	105-2892	6	Screw
120	98-9422	3	Tappet ASM
130	98-9426	3	Pin-Guide, Tappet
140	98-9450	1	Pin-Clamp
150	98-9428	3	Spring-Plunger
160	98-9427	3	Seat-Spring, Upper
170	98-9429	3	Seat-Spring, Lower
180	98-9433	3	Shim
190	98-9463	1	Control-Rack
200	98-9465	1	Plate
210	98-9442	4	Screw
220	98-9432	3	Sleeve-Control
230	98-9464	1	Bolt-Joint
240	98-9445	2	Gasket
250	98-9430	1	Screw

Ref. No.	Part No.	Qty.	Description
260	98-9446	1	Gasket
270	98-9466	1	Plug
280	98-9451	1	Gasket

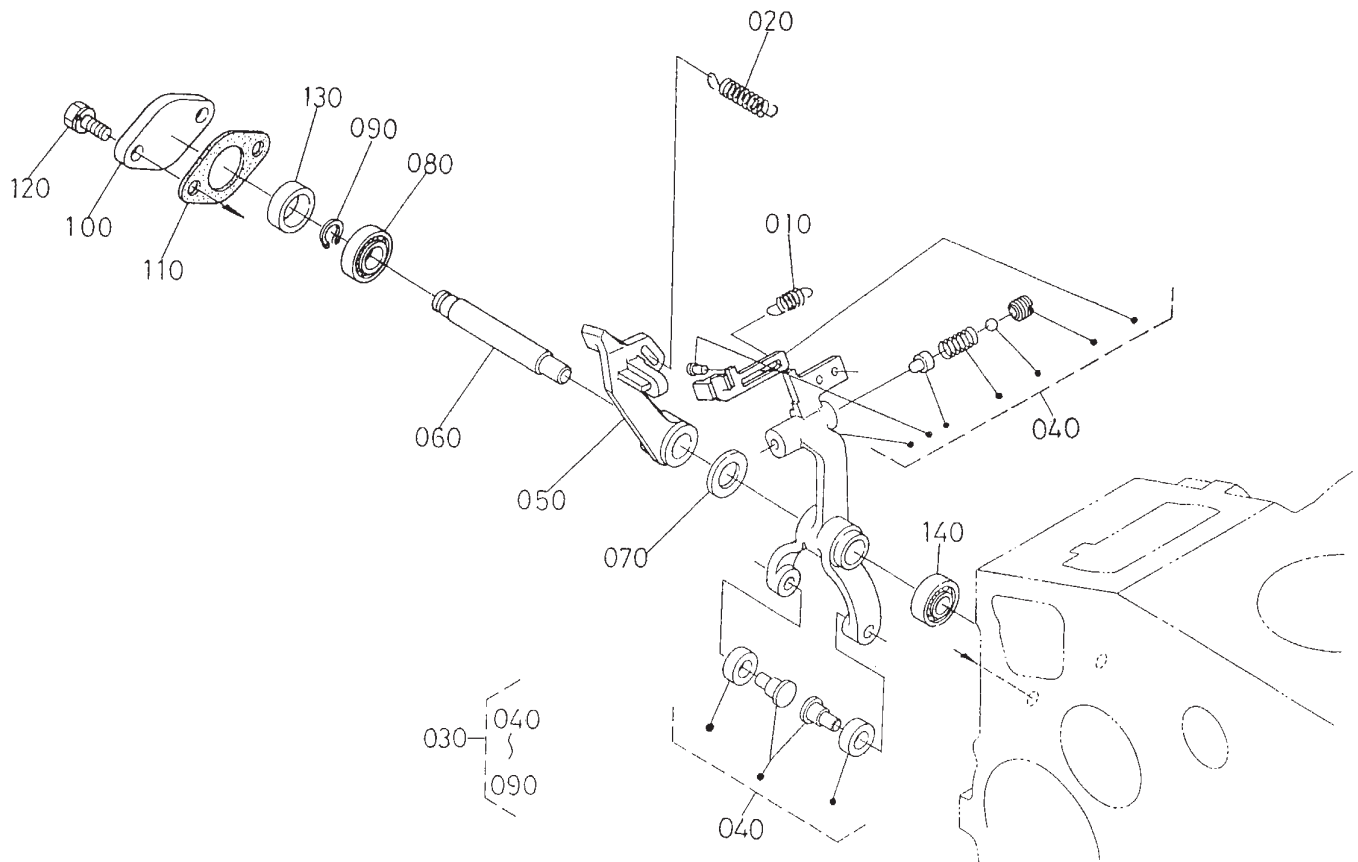 


Sheet No.:67

Governor Assembly

Ref. No.	Part No.	Qty.	Description
010	105-3786	1	Spring-Start
020	98-9681	1	Spring-Governor
030	105-3787	1	Fork Lever ASM
040	99-8380	1	Fork Lever ASM
050	105-3743	1	Lever-Fork
060	98-9566	1	Shaft-Lever, Fork
070	98-9593	1	Washer-Plain
080	98-9570	1	Bearing-Miniaturize
090	98-9369	1	Clip-Circular, External
100	98-9569	1	Cover-Shaft, Fork Lever
110	98-9682	1	Gasket
120	98-9351	2	Bolt
130	98-9567	1	Collar
140	98-9571	1	Bearing-Miniaturize

Ref. No.	Part No.	Qty.	Description

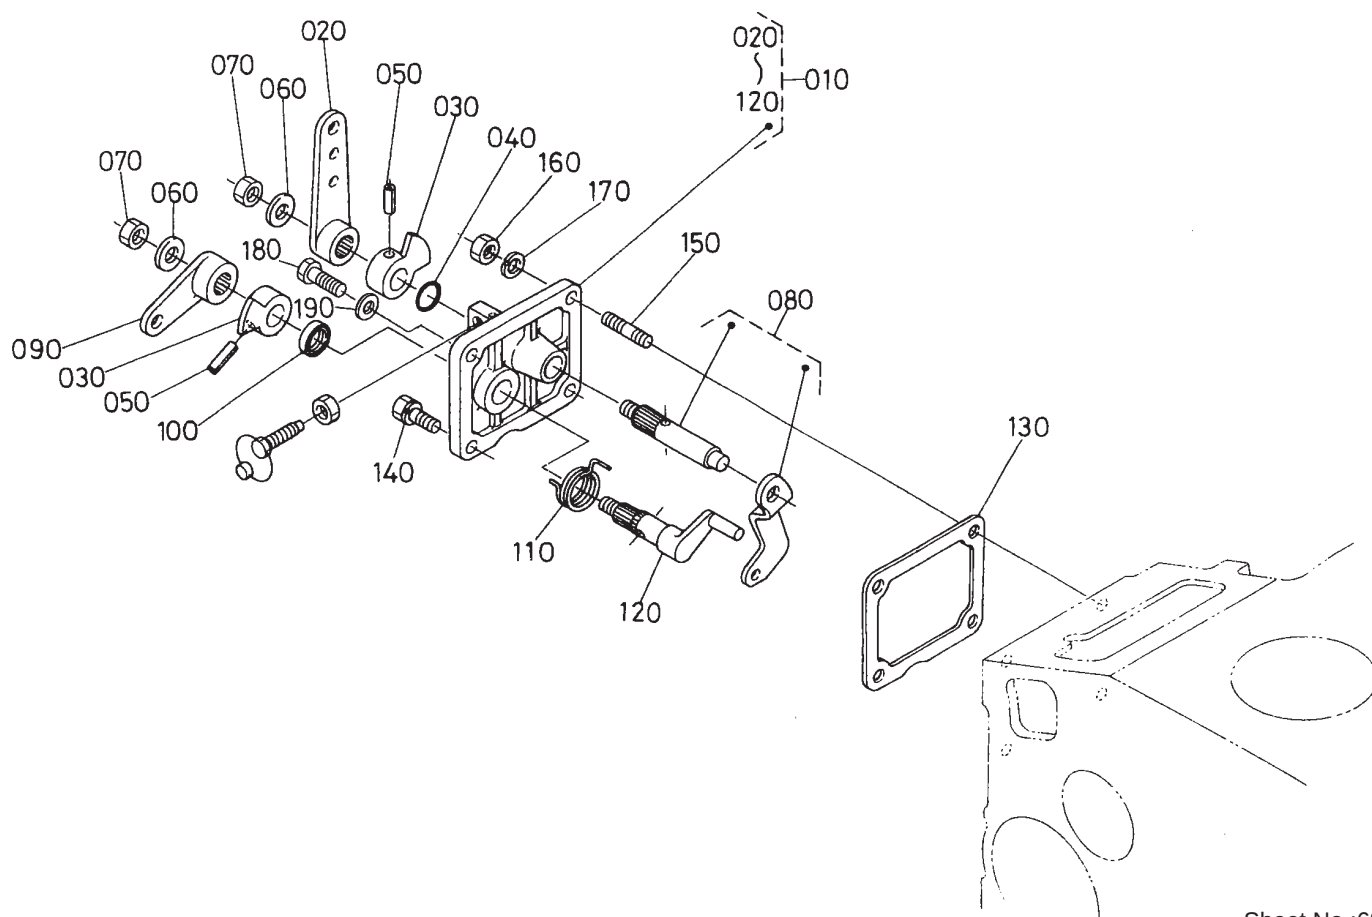 


Sheet No.:68

Speed Control Plate Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9661	1	Control Plate ASM
020	98-9662	1	Lever-Control, Speed
030	98-9572	2	Lever-Control, Speed
040	105-3788	1	O-Ring
050	98-7602	2	Pin-Spring
060	98-9594	2	Washer-Plain
070	98-9589	2	Nut
080	98-9658	1	Governor Lever ASM
090	98-9663	1	Lever-Stop, Engine
100	98-7601	1	Seal-Oil
110	98-9472	1	Spring-Return
120	98-9664	1	Shaft-Lever, Stop
130	98-9637	1	Gasket
140	98-7692	1	Bolt
150	105-3710	2	Stud
160	98-7572	2	Nut
170	98-7699	2	Washer-Spring
180	99-8348	1	Bolt
190	98-7654	1	Gasket

Ref. No.	Part No.	Qty.	Description

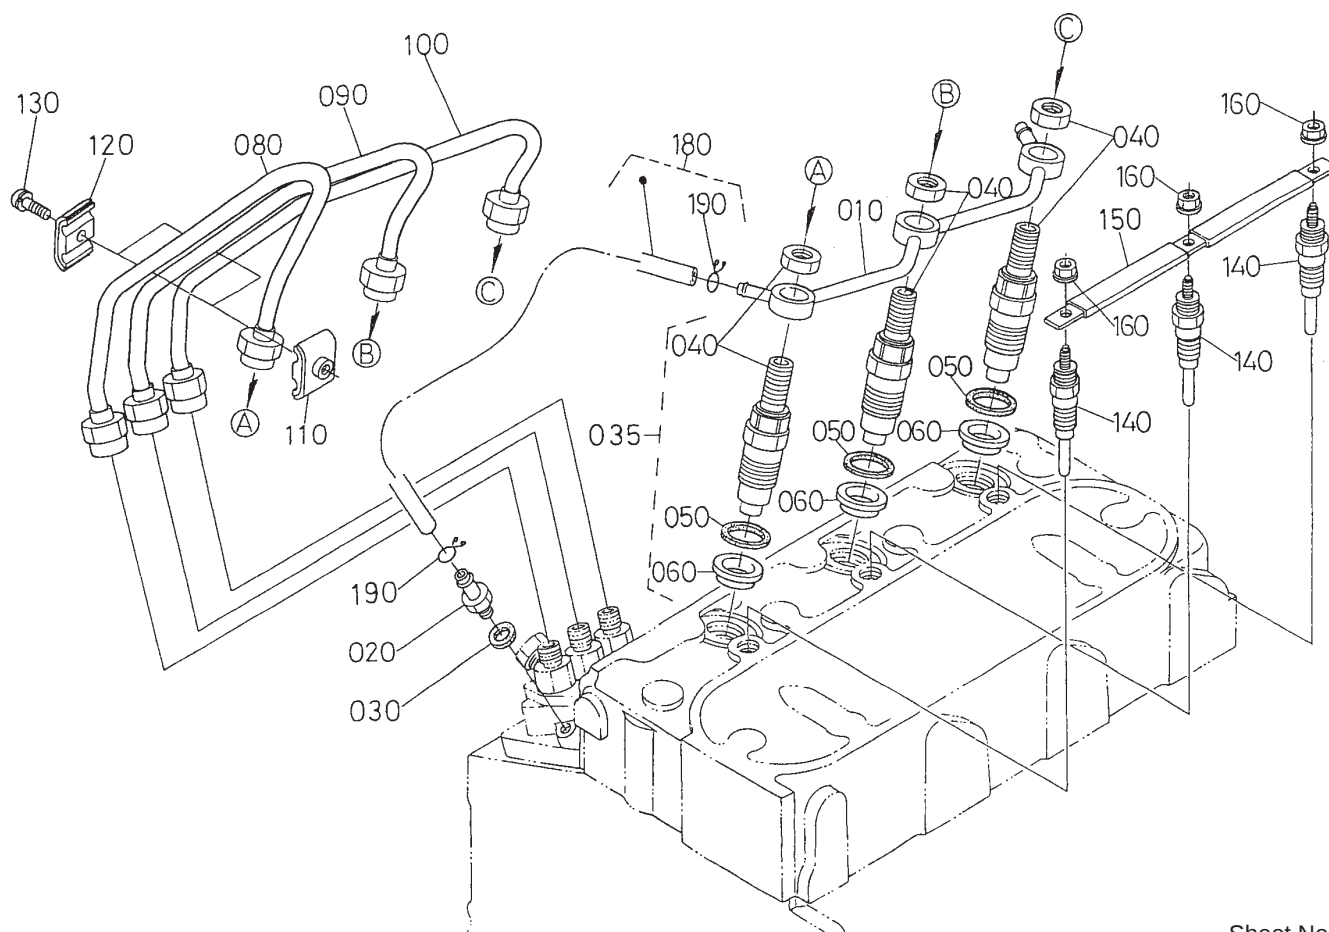 


Sheet No.:69

Nozzle Holder Glow Plug Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9620	1	Over Flow Pipe ASM
020	98-9431	1	Screw-Bleeder
030	98-7654	1	Gasket
035	105-3740	3	Kit-Holder, Nozzle
040	98-9468	3	Nozzle Holder ASM
050	98-7676	3	Gasket
060	98-7677	3	Seal
080	98-9653	1	Pipe-Injection
090	98-9654	1	Pipe-Injection
100	98-9655	1	Pipe-Injection
110	98-7682	2	Clamp-Pipe
120	98-7683	2	Clamp-Pipe
130	98-7684	2	Screw W/Washer
140	98-9695	3	Plug-Glow
150	98-9631	3	Cord-Plug, Glow
160	99-8377	3	Nut-Flange
180	98-9420	1	Over Flow Pipe ASM
190	98-7671	2	Clip-Pipe

Ref. No.	Part No.	Qty.	Description

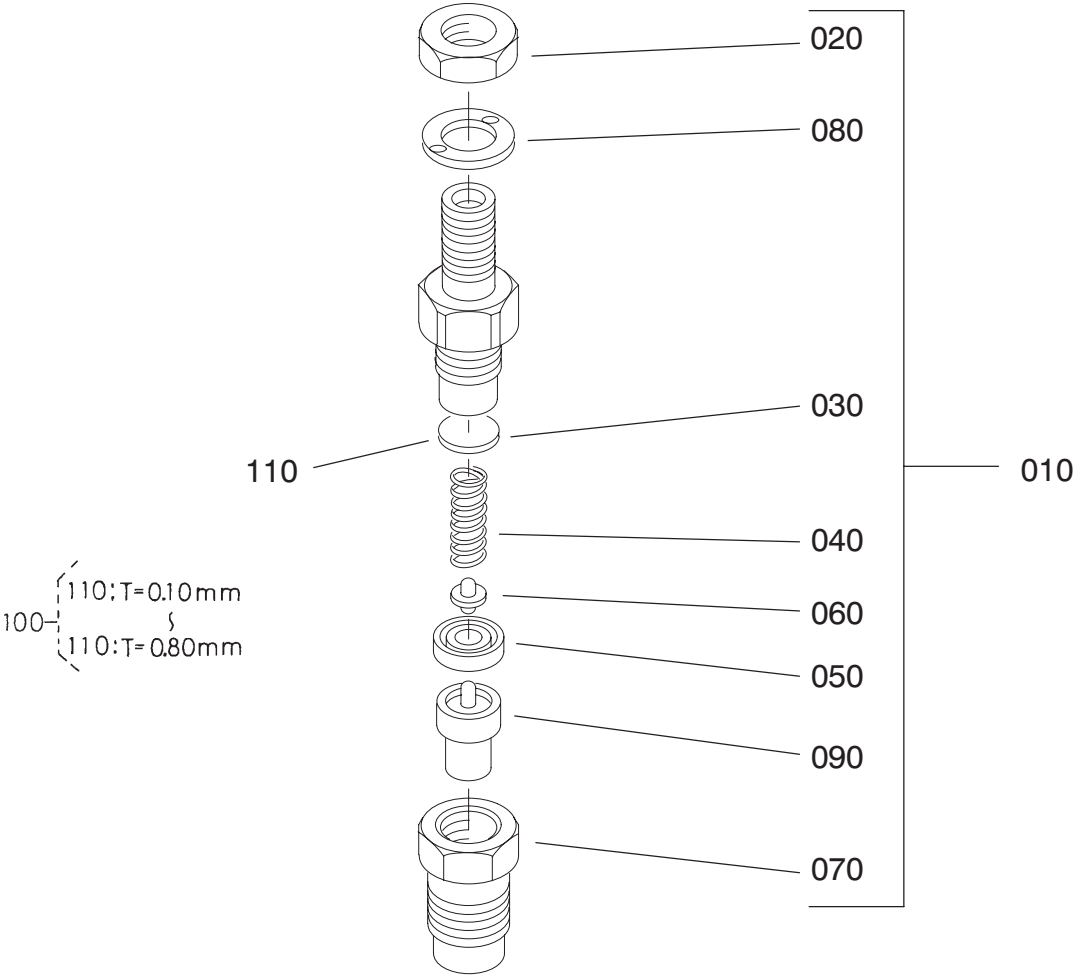 


Sheet No.:70

Nozzle Holder Assembly No. 98-9468

Ref. No.	Part No.	Qty.	Description
010	98-9468	3	Nozzle Holder ASM
020	99-8301	3	Nut
030	99-8302	3	Washer-Adjusting
040	99-8303	3	Spring-Nozzle
050	99-8304	3	Spacer-Distance
060	99-8305	3	Rod-Push
070	99-8306	3	Nut-Nozzle
080	99-8307	3	Washer-Plain
090	99-8308	3	Piece-Nozzle
100	99-8309	3	Adjusting Washer ASM
110	99-8315	3	Washer-Adjust (0.52mm)
110	99-8316	3	Washer-Adjust (0.54mm)
110	99-8317	3	Washer-Adjust (0.56mm)
110	99-8318	3	Washer-Adjust (0.58mm)
110	99-8319	3	Washer-Adjust (0.80mm)
110	99-8310	3	Washer-Adjust (0.10mm)
110	99-8311	3	Washer-Adjust (0.20mm)
110	99-8312	3	Washer-Adjust (0.30mm)


Ref. No.	Part No.	Qty.	Description
110	99-8313	3	Washer-Adjust (0.40mm)
110	99-8314	3	Washer-Adjust (0.50mm)

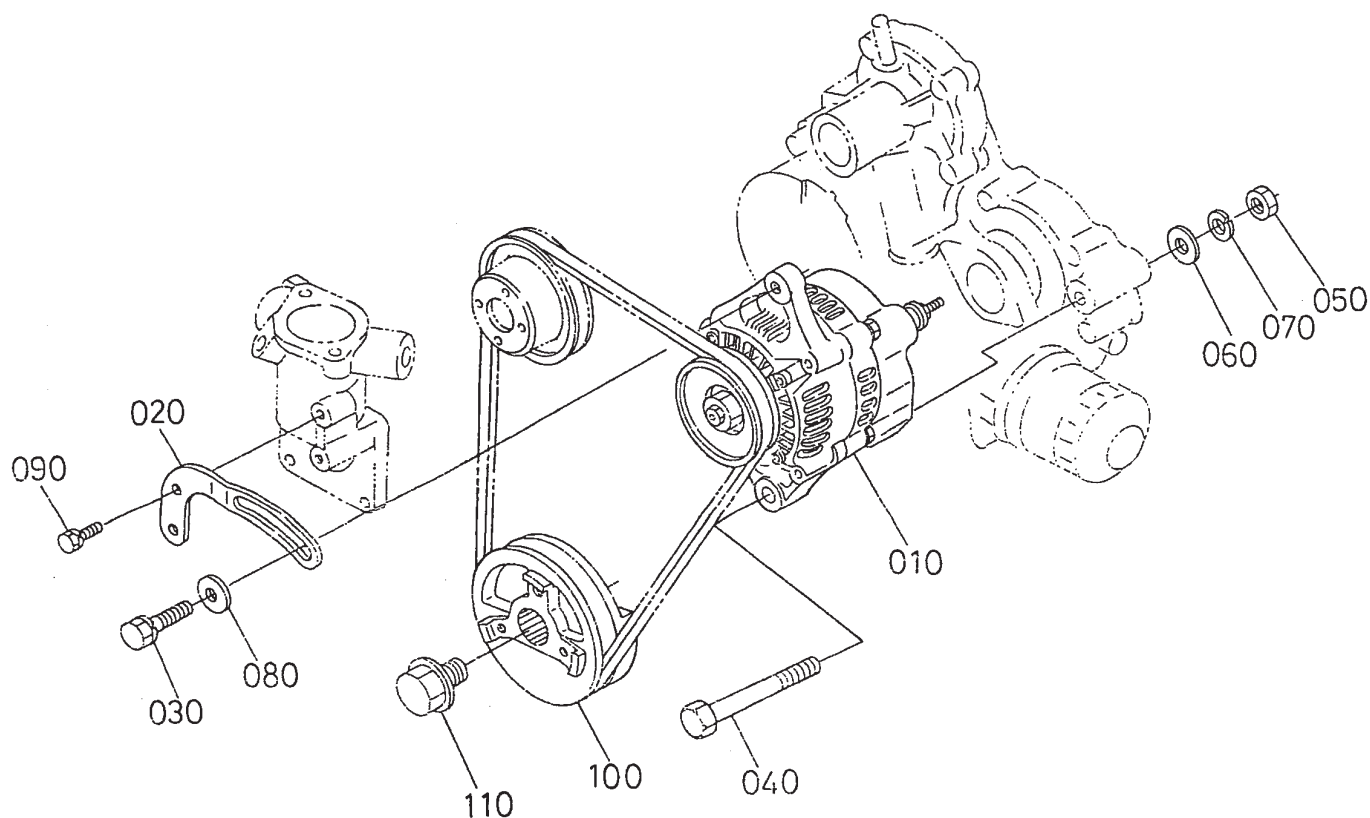 

Sheet No.:71

Alternator and Pulley Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9474	1	Alternator ASM
020	98-9573	1	Stay-Dynamo
030	98-7697	1	Bolt
040	98-9360	1	Bolt
050	98-7737	1	Nut
060	3256-24	1	Washer-Flat
070	98-7738	1	Washer-Spring
080	100-9233	1	Washer-Plain
090	98-7692	1	Bolt
100	98-9473	1	Pulley-Drive, Fan
110	98-9585	1	Bolt

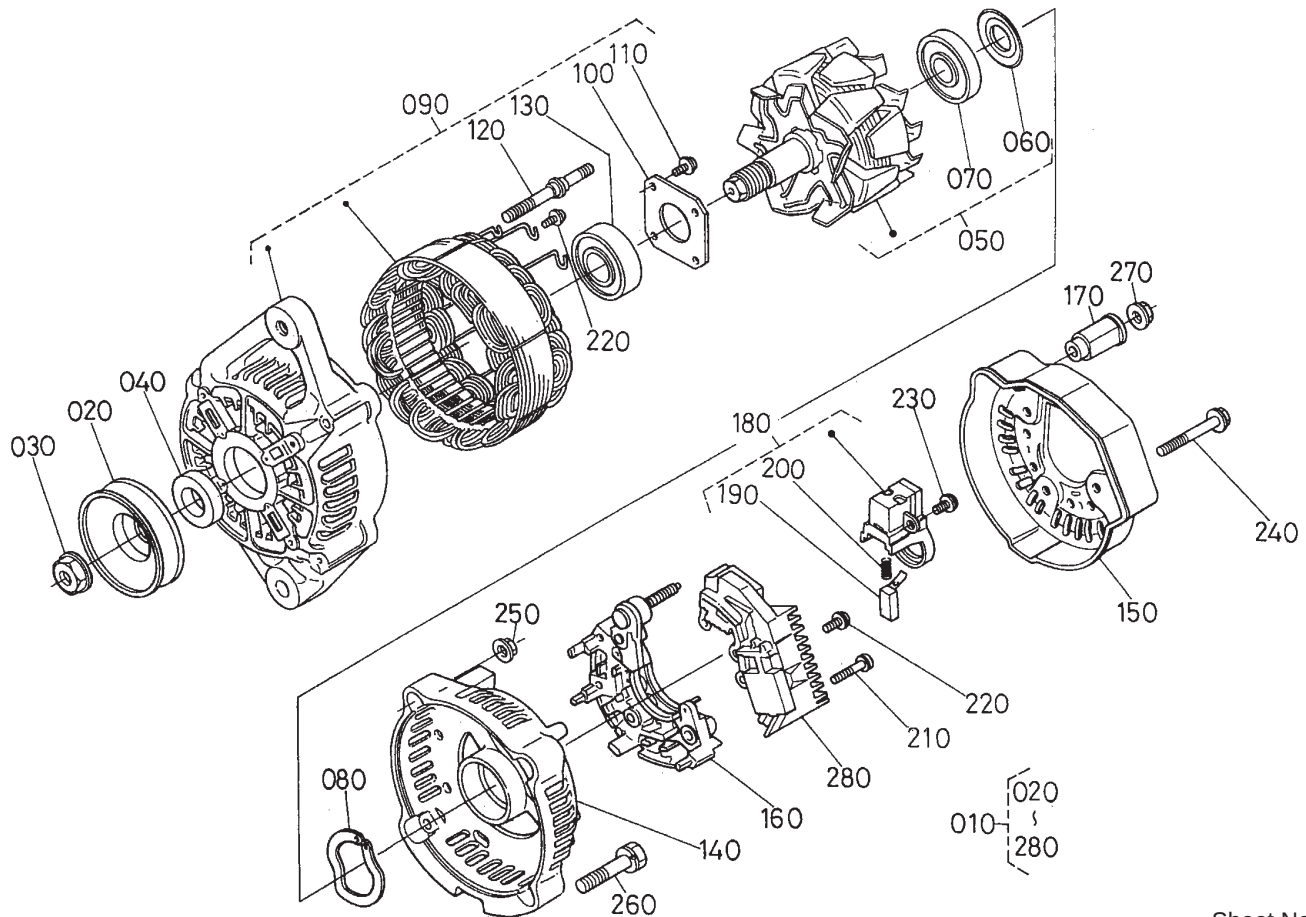 


Sheet No.:72

Alternator Assembly No. 98-9474

Ref. No.	Part No.	Qty.	Description
010	98-9474	1	Alternator ASM
020	98-9453	1	Pulley-Dynamo
030	98-7708	1	Nut
040	98-7709	1	Collar
050	98-7710	1	Rotor
060	98-7711	1	Cover-Bearing
070	98-7712	1	Bearing-Ball
080	98-7713	1	Washer-Thrust
090	98-7714	1	Frame-End, Drive
100	98-7715	1	Plate-Retainer
110	98-7716	4	Screw-Head, Round
120	98-7717	2	Bolt-Through
130	98-7718	1	Bearing-Ball
140	98-7719	1	Frame-End
150	98-7720	1	Cover-End
160	98-7721	1	Rectifier ASM
170	98-7722	1	Bushing-Insulation
180	98-7723	1	Holder-Brush
190	98-7724	2	Brush
200	98-7725	2	Spring-Brush
210	98-7726	2	Screw-Head, Round
220	98-7727	6	Screw-Head, Round
230	98-7728	1	Screw-Head, Round
240	98-7729	3	Bolt
250	98-7730	2	Nut
260	98-7731	2	Bolt


Ref. No.	Part No.	Qty.	Description
270	98-7732	1	Nut
280	98-7733	1	Regulator ASM

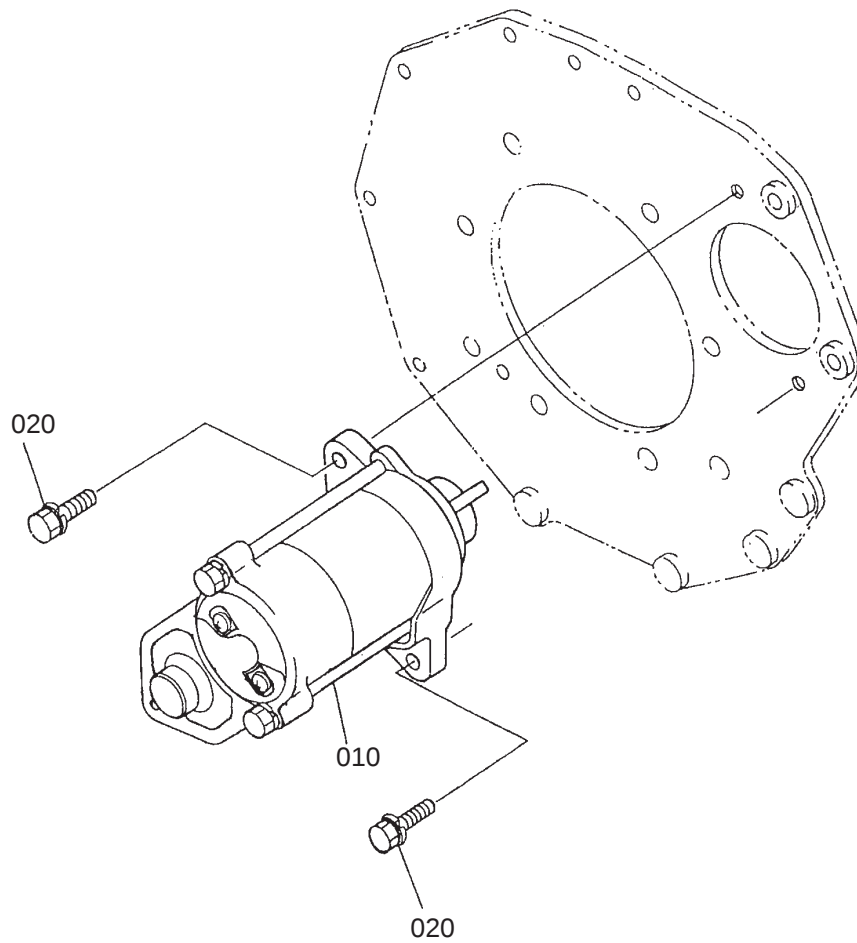 

Sheet No.:73

Starter Mount Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9705	1	Starter ASM
020	98-7697	2	Bolt

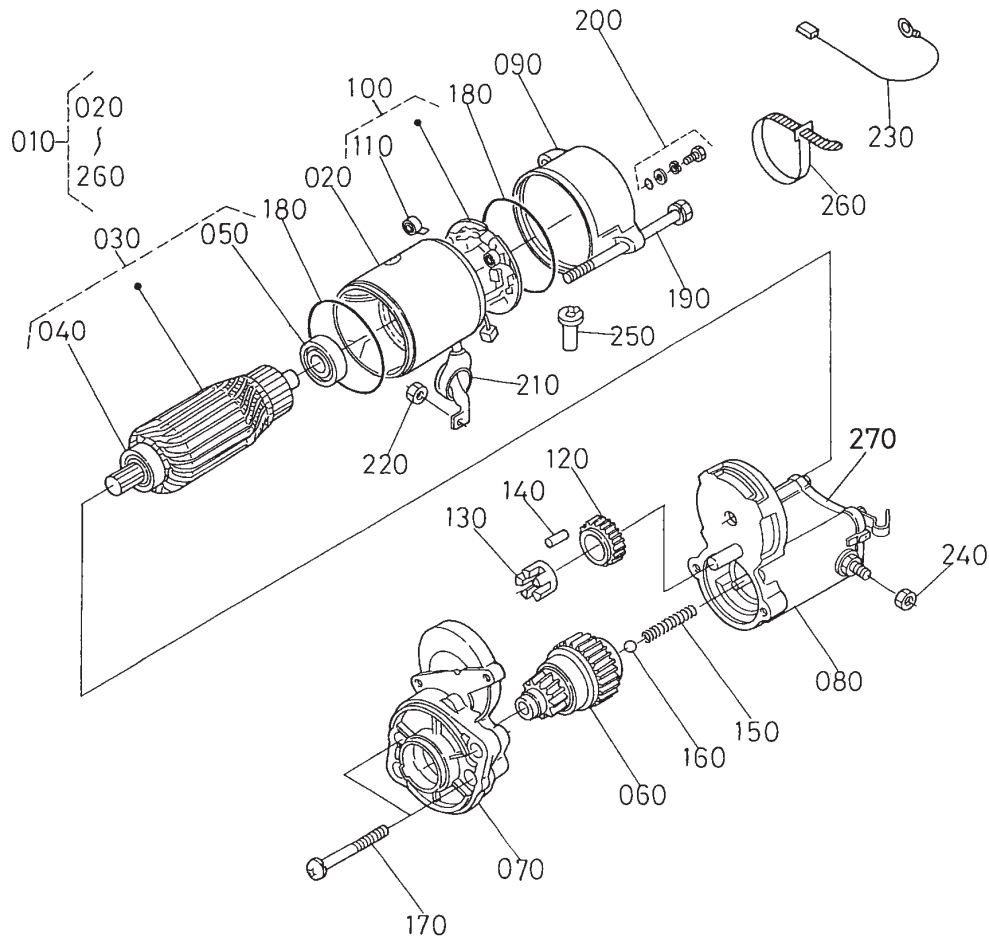 


Sheet No.:74

Starter Assembly No. 98-9705

Ref. No.	Part No.	Qty.	Description
010	98-9705	1	Starter ASM
020	104-8608	1	Yoke ASM
030	98-7742	1	Armature ASM
040	98-7744	1	Bearing
050	98-7743	1	Bearing
060	99-8373	1	Clutch-Running, Over
070	99-8374	1	Frame-End, Drive
080	105-3746	1	Magnetic Switch ASM
090	98-7748	1	Frame-End
100	98-7749	1	Brush Holder ASM
110	98-7750	4	Spring-Brush
120	98-7751	1	Gear
130	98-7752	1	Retainer
140	98-7753	5	Roller
150	98-7754	1	Spring
160	98-7755	1	Ball
170	98-7756	2	Bolt
180	98-7757	2	O-Ring
190	100-9240	2	Bolt
200	98-7758	2	Bolt ASM
210	99-8375	1	Cover
220	99-8371	1	Nut-Hex
230	98-9711	1	Cord-Solenoid, Stop
240	99-8376	1	Nut-Hex
250	98-7759	1	Pipe-Drain

Ref. No.	Part No.	Qty.	Description
260	98-9712	1	Band-Cover
270	105-2886	1	Cover ASM

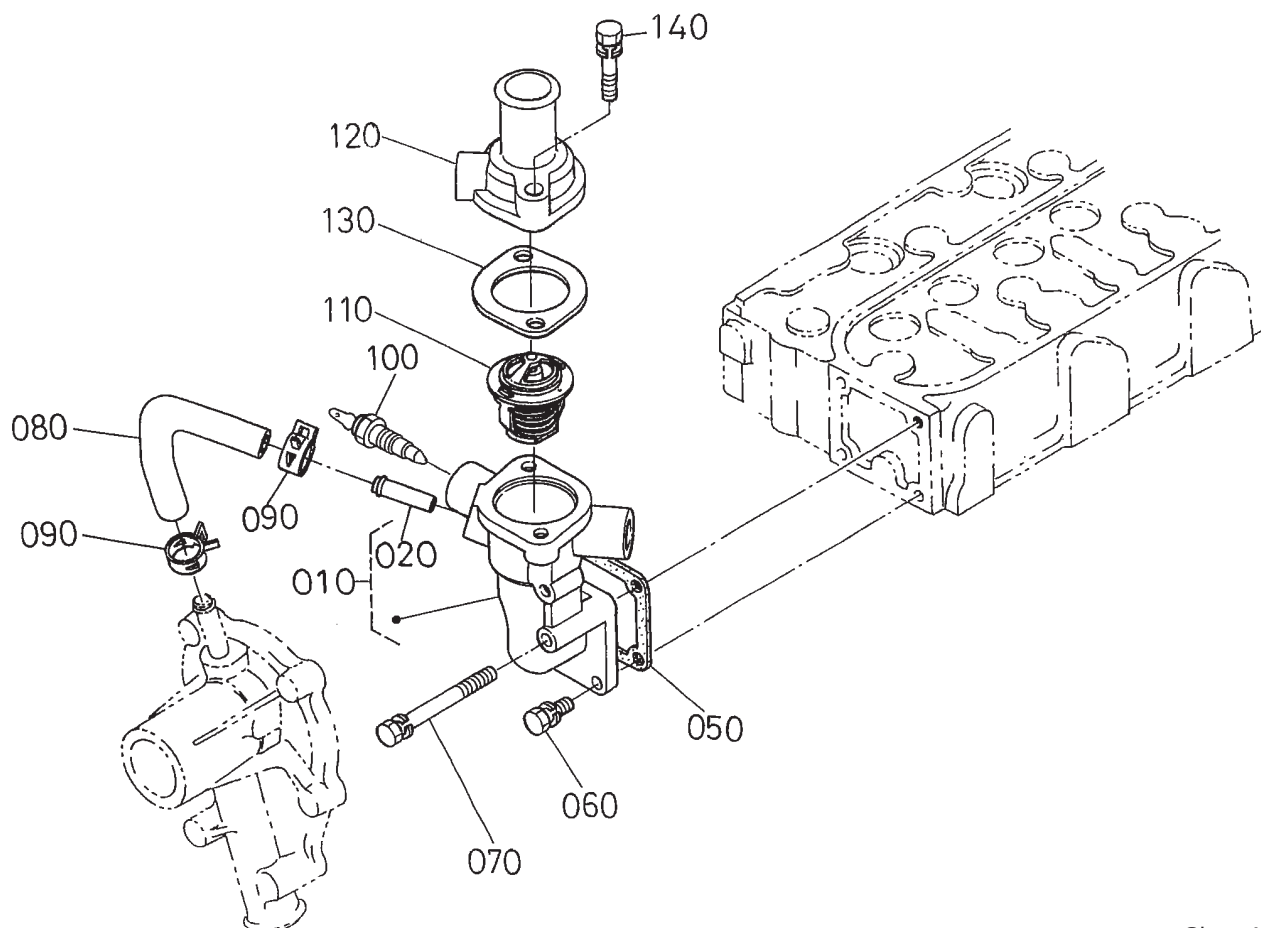 


Sheet No.:75

Water Flange and Thermostat Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9713	1	Water Flange ASM
020	98-9580	1	Pipe-Return, Water
050	98-9638	1	Gasket-Flange, Water
060	98-7692	3	Bolt
070	98-9356	1	Bolt
080	98-9578	1	Pipe-Return, Water
090	98-9579	2	Band-Pipe
100	98-9719	1	Thermoswitch
110	98-7778	1	Thermostat ASM
120	98-9471	1	Cover-Thermostat
130	105-3748	1	Gasket-Thermostat
140	98-7777	2	Bolt

Ref. No.	Part No.	Qty.	Description

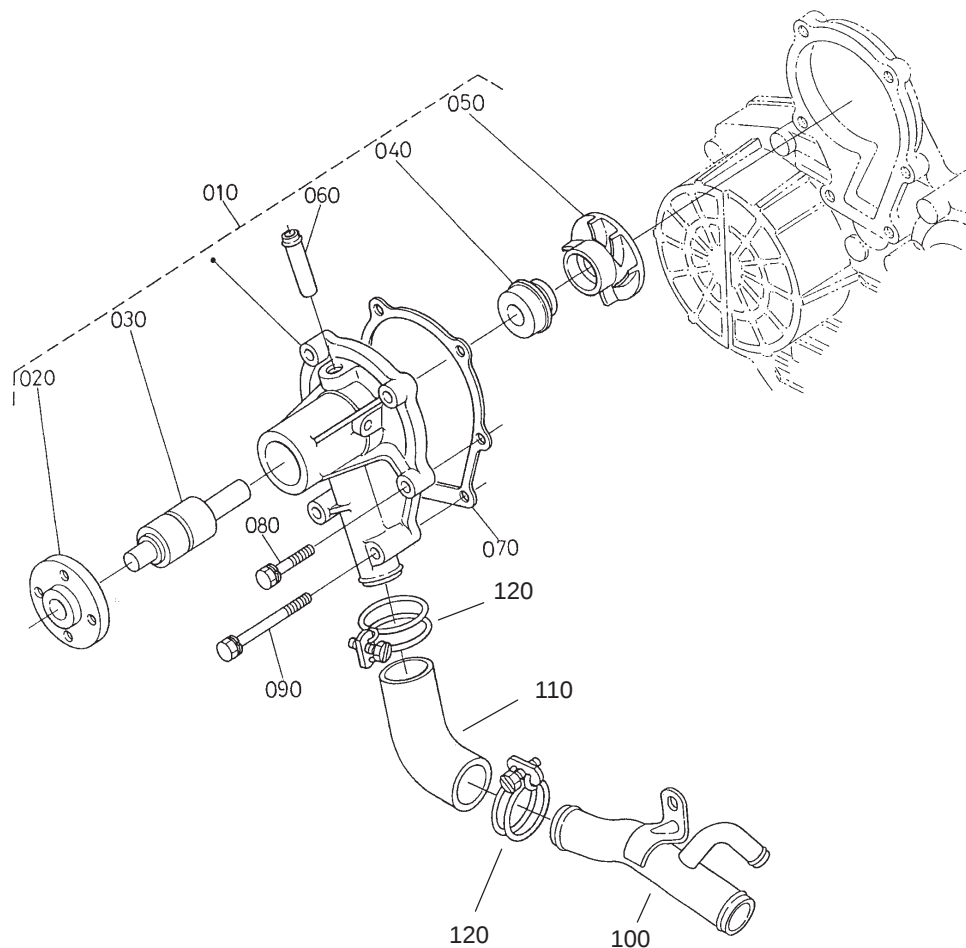 


Sheet No.:76

Water pump and Water Pipe Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9575	1	Water Pump ASM
020	98-9582	1	Flange-Pump, Water
030	98-9583	1	Bearing
040	98-9576	1	Mechanical Seal ASM
050	98-9581	1	Impeller-Pump, Water
060	98-9577	1	Pipe-Return, Water
070	98-9632	1	Gasket-Water Pump
080	105-3789	1	Bolt
090	98-9357	4	Bolt
100	98-9716	1	Pipe-Water
110	98-9574	1	Pipe-Water
120	98-9717	2	Clamp

Ref. No.	Part No.	Qty.	Description

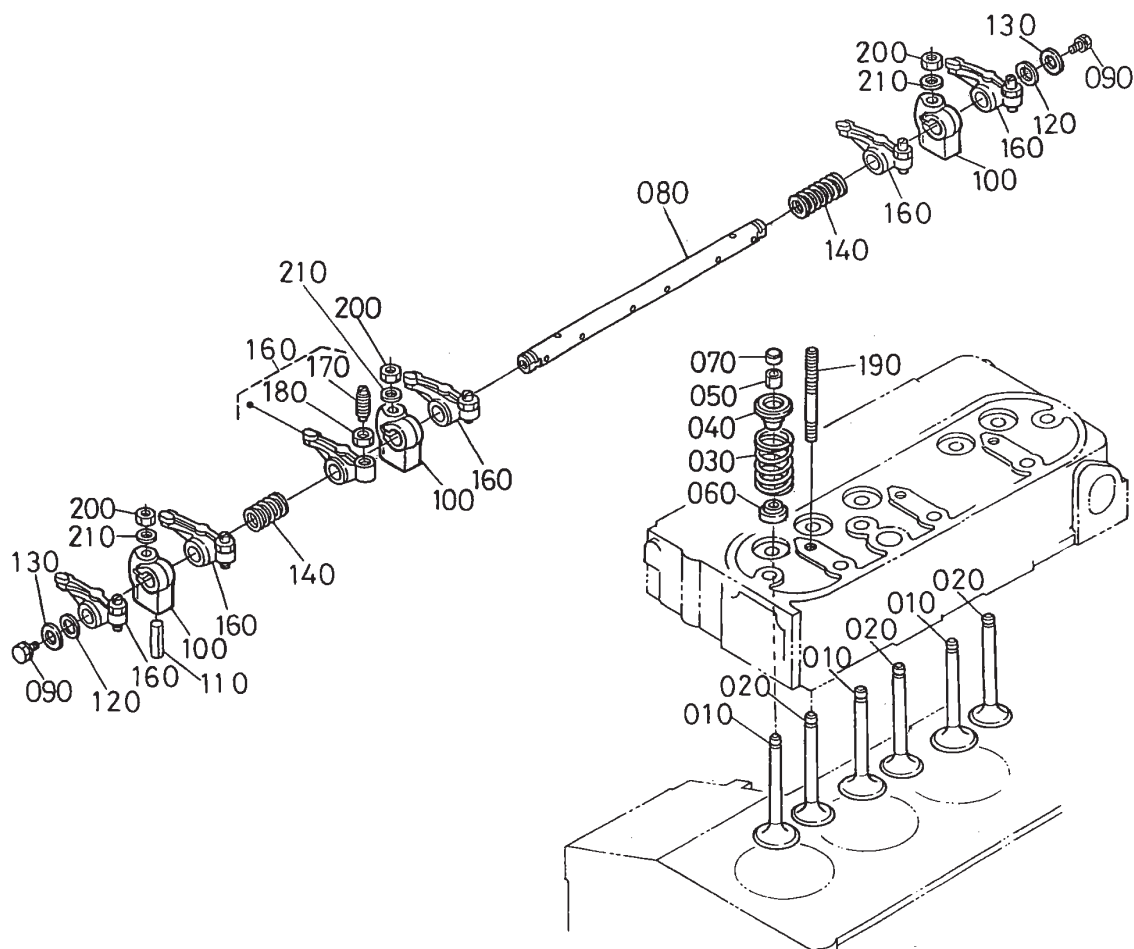 


Sheet No.:77

Valve and Rocker Arm Assembly

Ref. No.	Part No.	Qty.	Description
010	98-9494	3	Valve-Inlet
020	98-9495	3	Valve-Exhaust
030	98-9648	6	Spring, Valve
040	98-9498	6	Retainer-Valve
050	98-9390	6	Collet-Set, Valve Spring
060	99-8385	6	Seat-Stem, Valve
070	98-9497	6	Cap-Valve
080	105-3790	1	R-Arm Shaft ASM
090	100-9265	2	Bolt
100	98-9505	3	Bracket-Arm, Rocker
110	98-7602	1	Pin-Spring
120	98-9507	2	Washer-Shaft, R-Arm
130	3256-1	2	Washer-Flat
140	98-9504	2	Spring-Arm, Rocker
160	98-9501	6	Rocker Arm ASM
170	98-9502	6	Screw-Adjusting
180	98-9503	6	Nut
190	98-9506	3	Stud
200	98-9393	3	Nut
210	98-9385	3	Washer-Flat

Ref. No.	Part No.	Qty.	Description

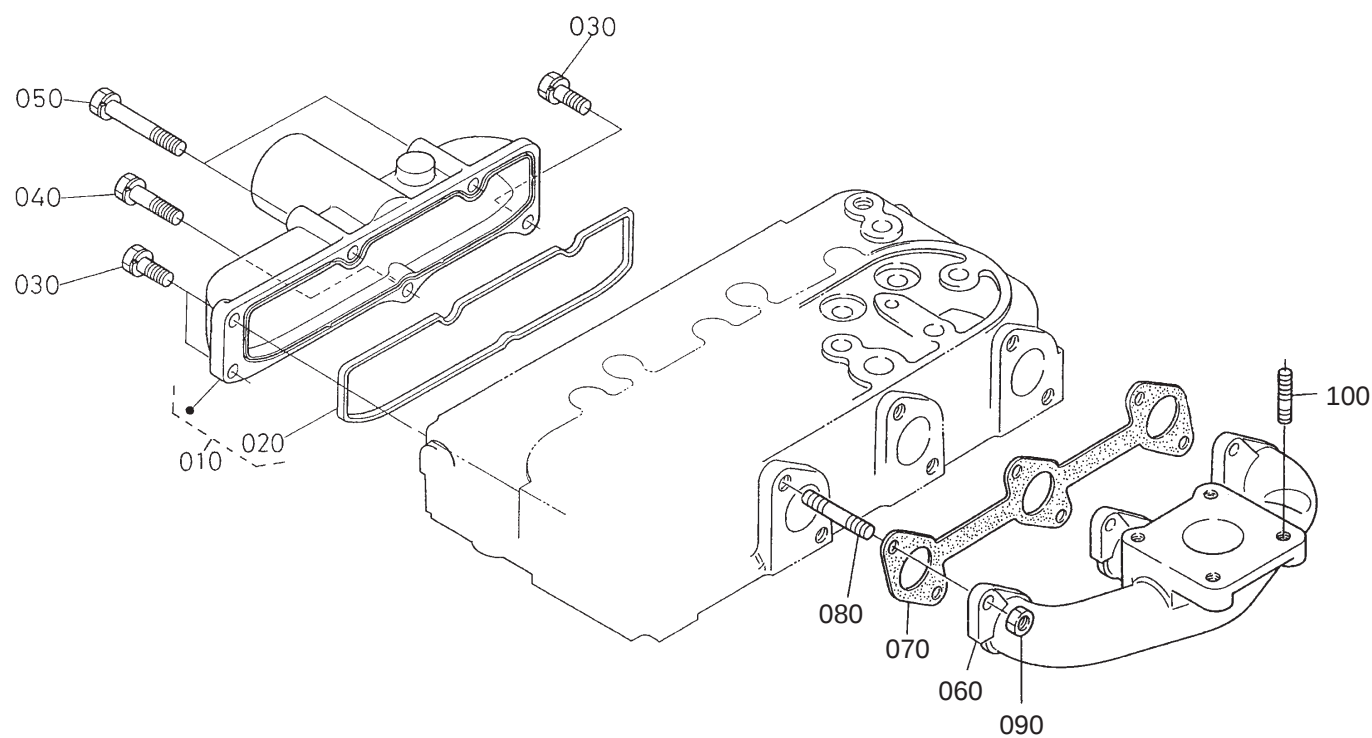 

Sheet No.:78

Inlet and Exhaust Manifold Assembly

Ref. No.	Part No.	Qty.	Description
010	105-3791	1	Inlet Manifold ASM
020	98-9609	1	Gasket
030	98-7605	3	Bolt
040	98-9353	1	Bolt
050	105-3797	2	Bolt
060	98-9718	1	Manifold-Exhaust
070	98-9610	1	Gasket
080	98-9588	6	Stud
090	98-9665	6	Nut
100	98-7769	4	Stud

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

