



Form No. 3463-414 Rev A

Count on it.

Parts Catalog

Mid Mount Tool Carrier Field Pro 6040

Model No. 08854—Serial No. 414864127 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Lift and Deck Components Assembly 4

Push Arm Assembly No. 145-7415 6

Lift Link Assembly No. 145-7362 8

Grader Box Assembly No. 144-4534 10

Rake Components Assembly 12

Rake Tools Assembly No. 144-7590 14


Panhard Rod Assembly No. 109-5013 16

Spring Tine Bar Assembly No. 145-4210 18

Scarifier Tine Assembly No. 145-4212 20

Hydraulic Cylinder Assembly No. 138-6941 22


Lift and Deck Components Assembly

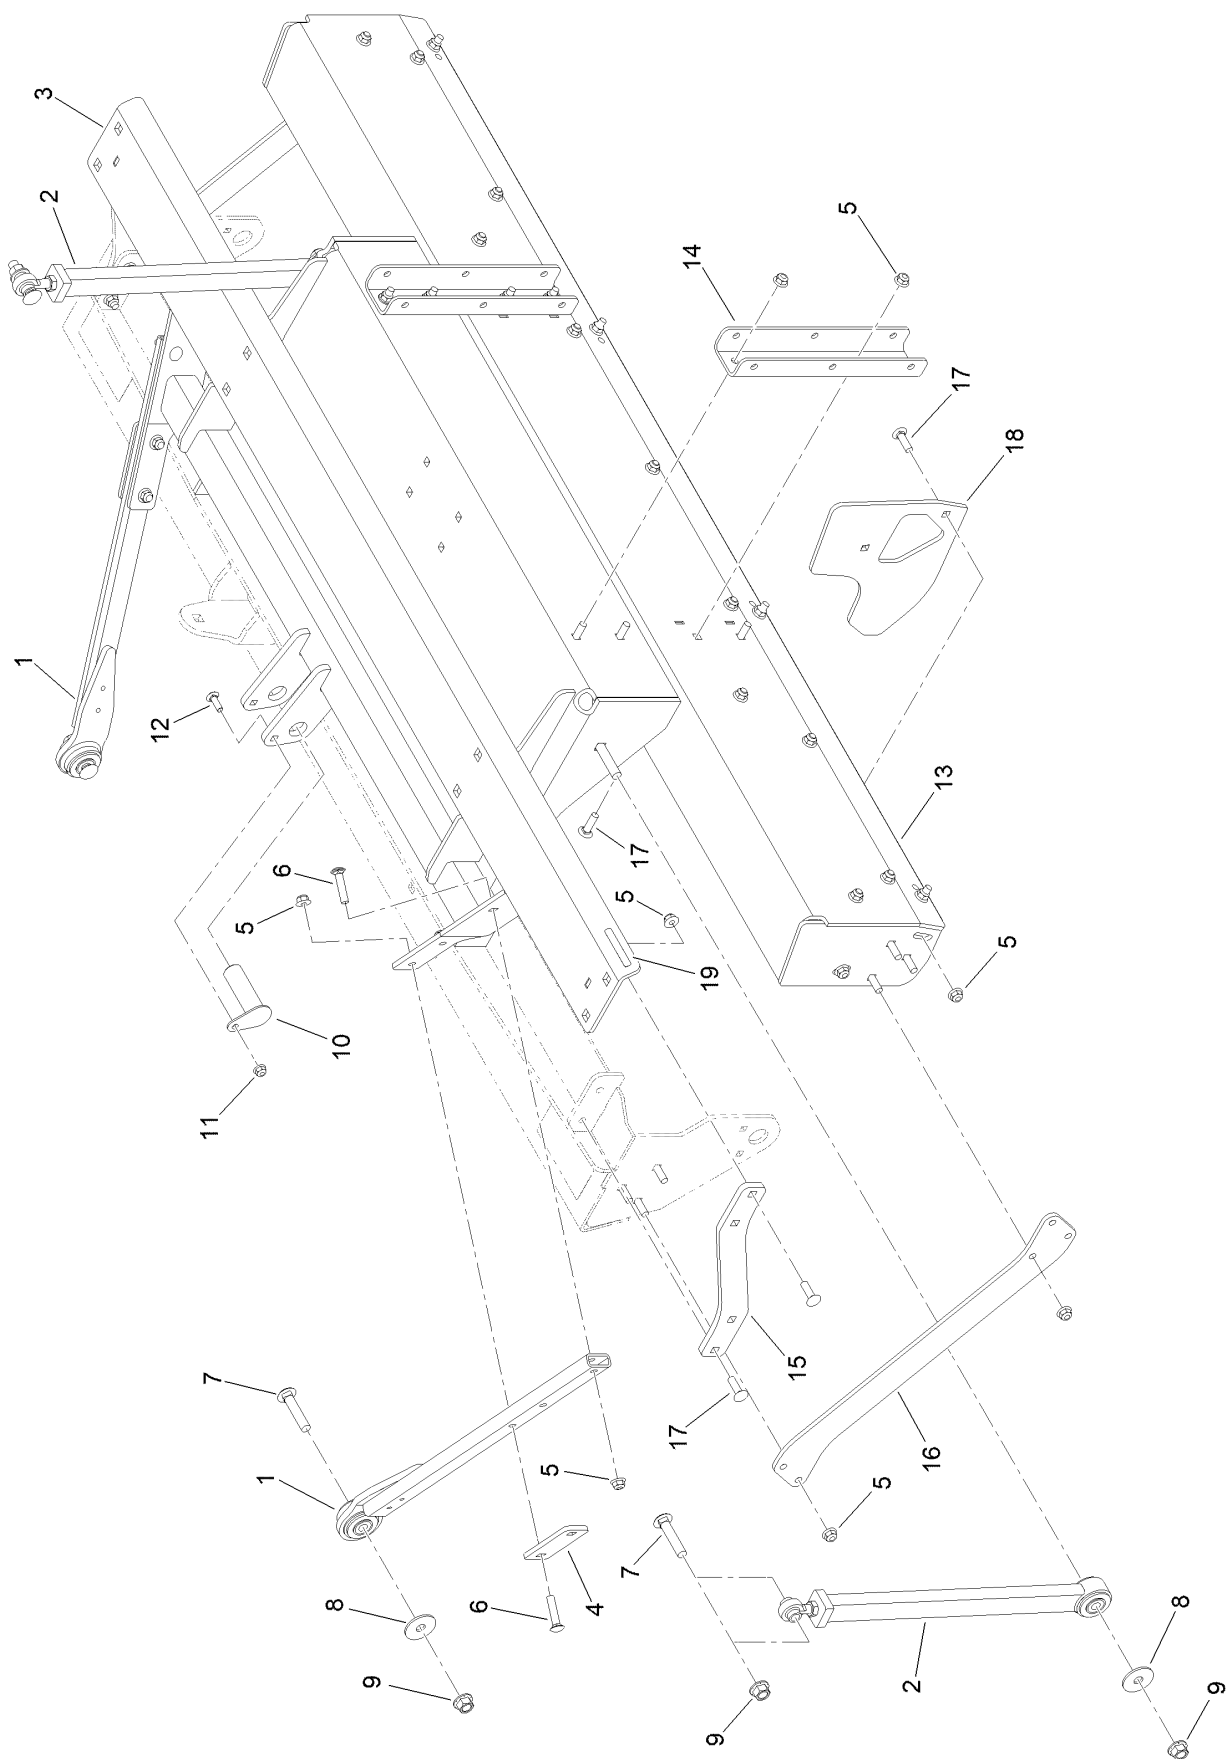

Lift and Deck Components Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7415	2	Push Arm ASM W/Bushing	11	104-8300	1	Nut-HF, NI
2	145-7362	2	Lift Link ASM	12	3230-22	1	Screw-CARR
3	144-7571-03	1	Deck-Mount, Tool	13	144-4534	1	Grader Box ASM
4	144-7580	2	Plate-Clamp	14	145-4241-03	2	Gusset-Inner
5	104-8301	38	Nut-HF, NI	15	145-4242-03	2	Gusset-Inner
6	3231-29	6	Screw-CARR	16	145-4236-03	2	Gusset-Outer
7	3233-34	6	Screw-CARR	17	3231-28	32	Screw-CARR
8	86-1990	4	Washer-Thrust	18	145-7358-03	2	Plate-End
9	99-5107	6	Nut-Lock	19	133-8061	1	Decal-Warning
10	140-6326	1	Pin-Pivot				


Push Arm Assembly No. 145-7415

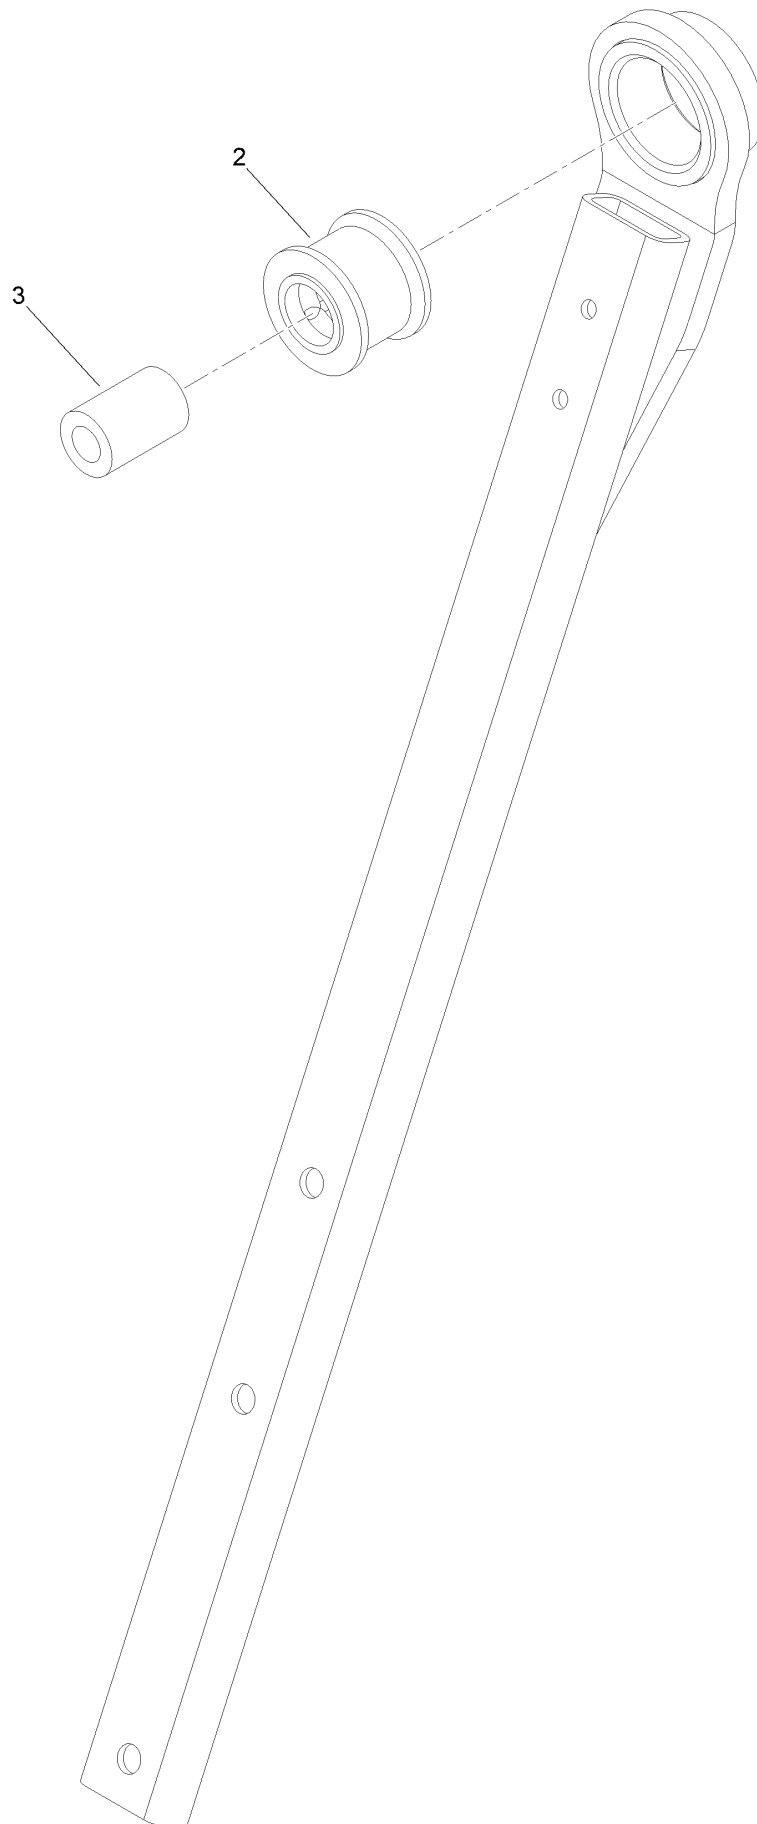

Push Arm Assembly No. 145-7415 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	109-5009	1	Bushing-Suspension, Rubber
3	109-5010	1	Spacer

Lift Link Assembly No. 145-7362

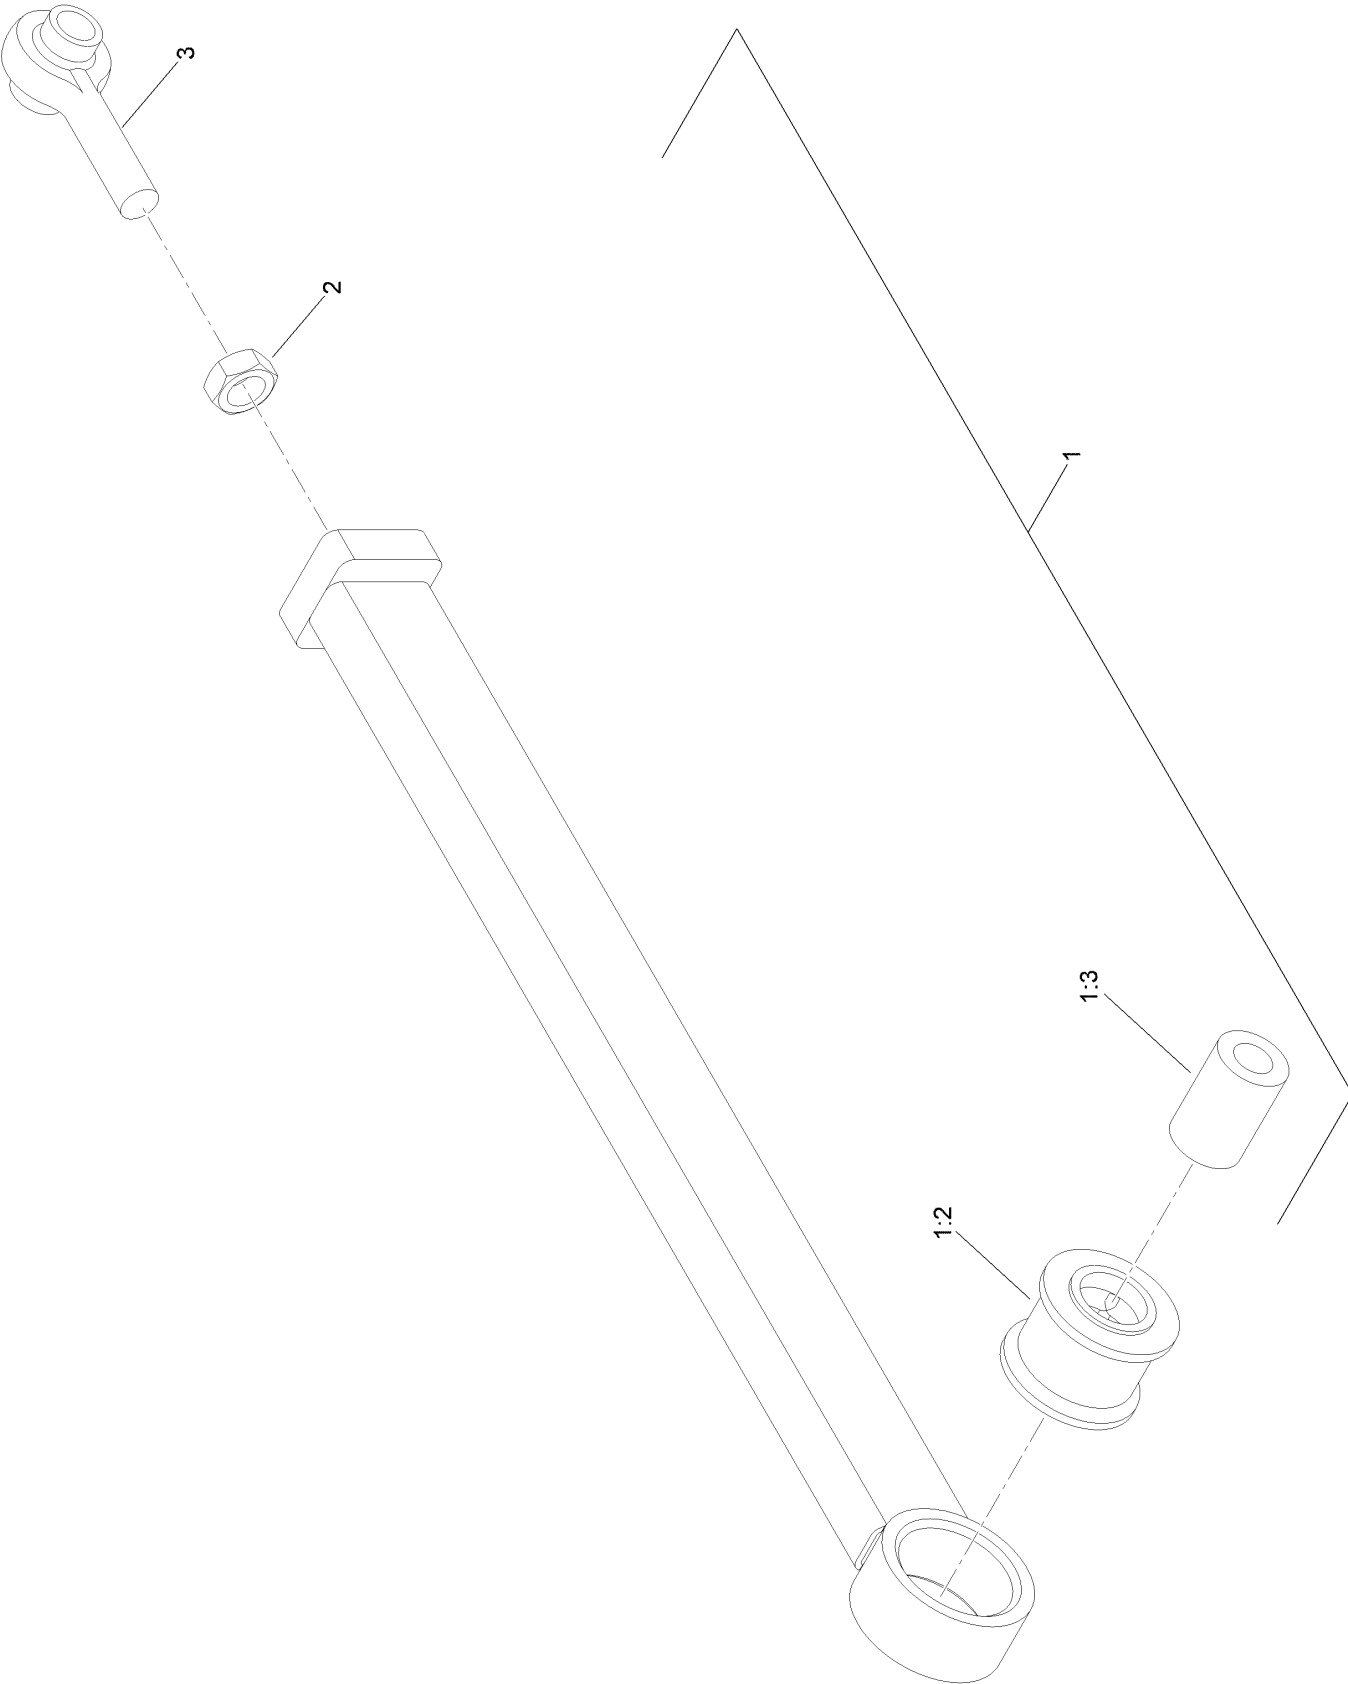


Lift Link Assembly No. 145-7362 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-4230	1	Lift Link ASM
1:2	109-5009	1	Bushing-Suspension, Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:3	109-5010	1	Spacer
2	3220-5	1	Nut-Jam
3	105-2808	1	End-Rod


Grader Box Assembly No. 144-4534

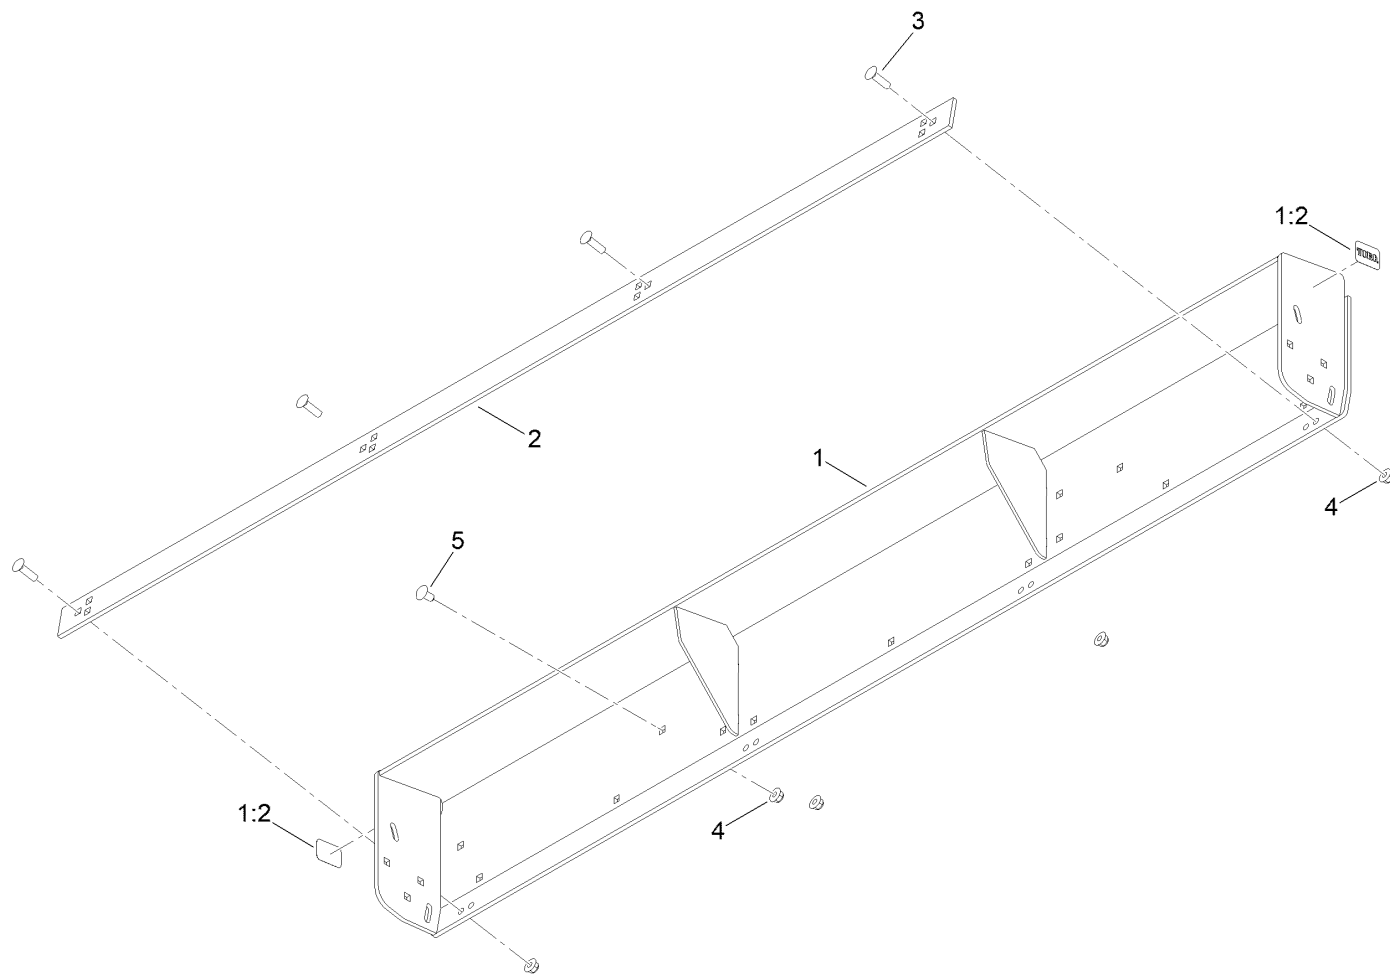

Grader Box Assembly No. 144-4534 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	147-3794	1	Grader Box ASM W/Decals	3	3231-28	4	Screw-CARR
1:2	95-7896	2	Decal	4	104-8301	15	Nut-HF, NI
2	145-4247-01	1	Blade-Scraper	5	3231-21	11	Screw-CARR


Rake Components Assembly

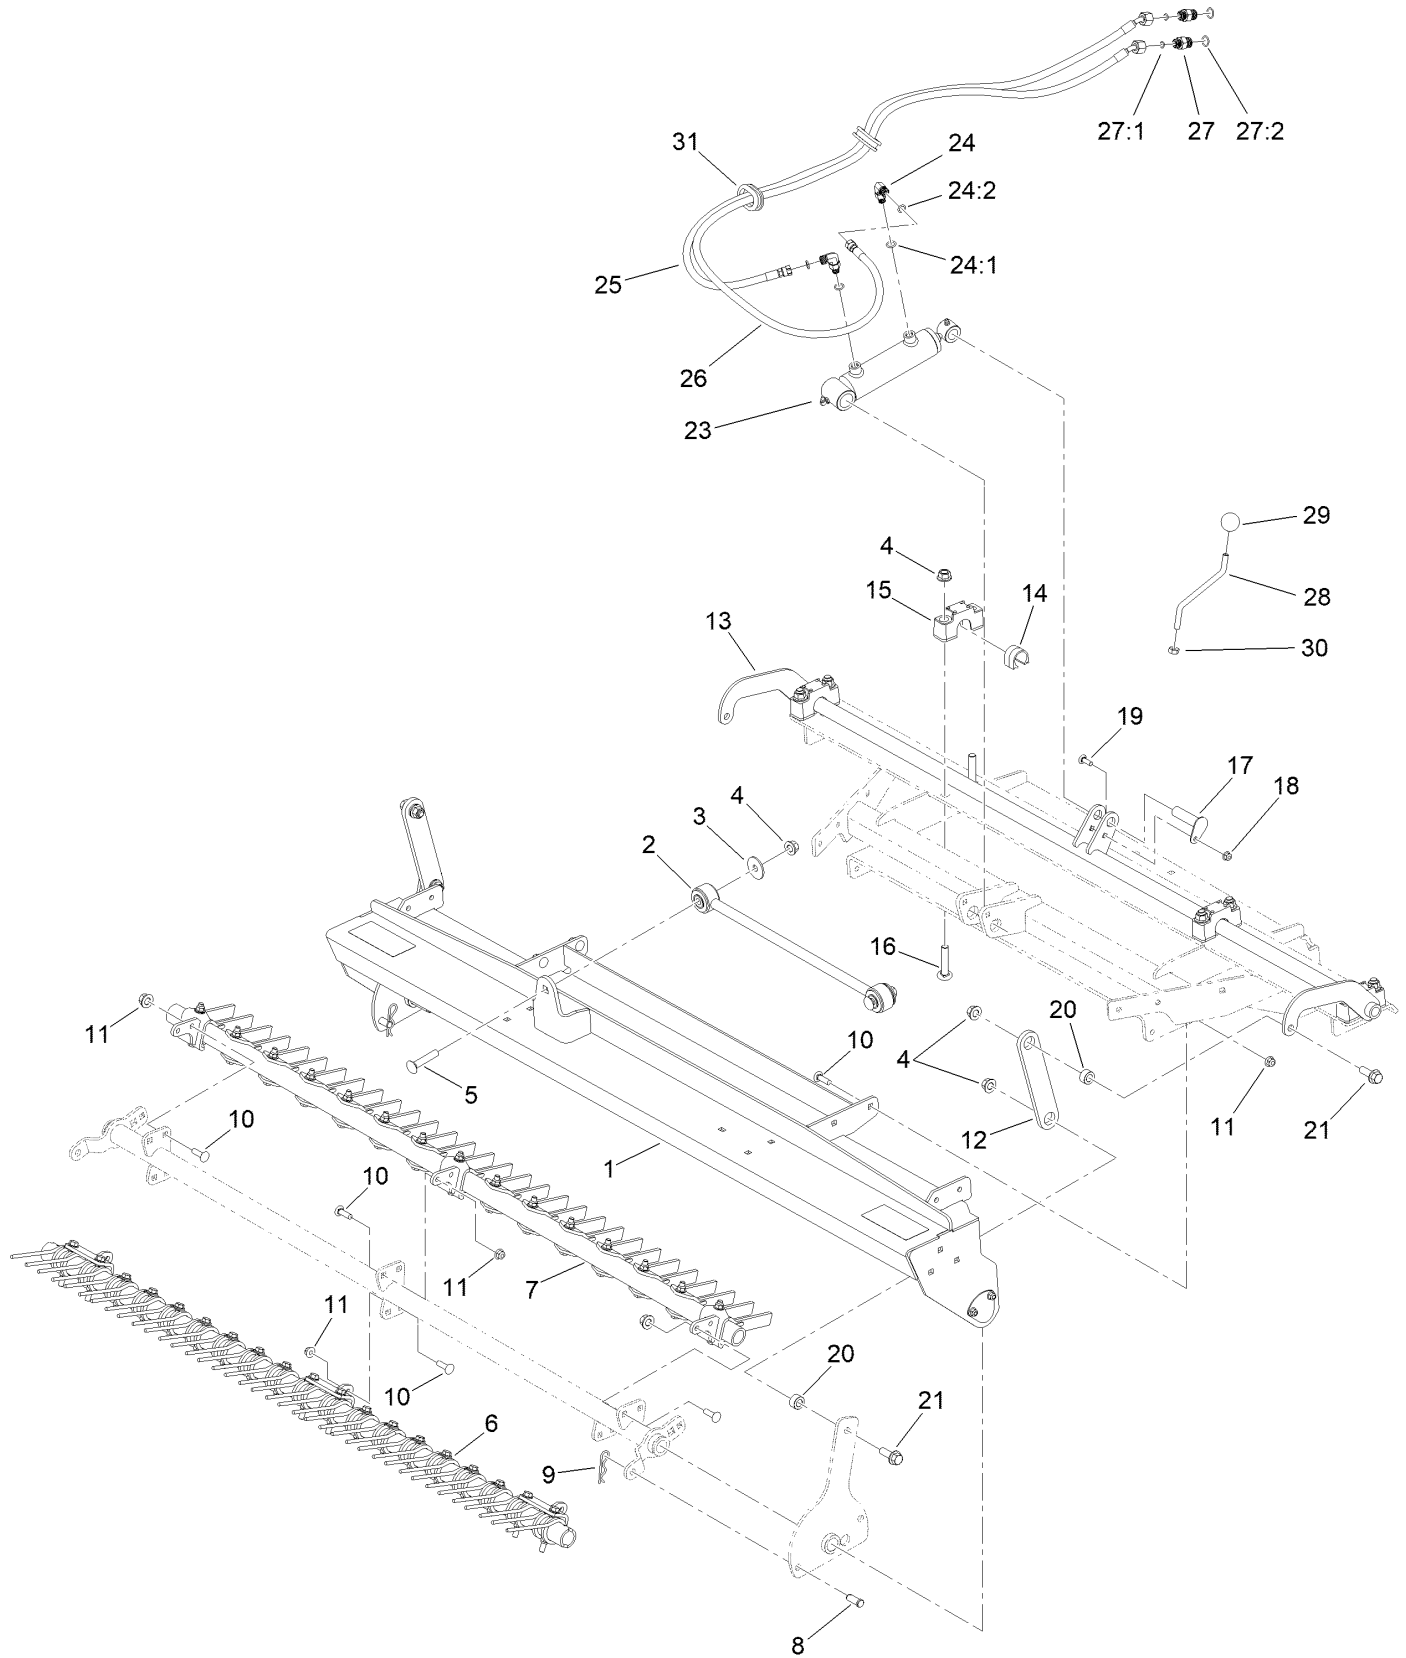

Rake Components Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7590	1	Rake Tools ASM	18	104-8300	1	Nut-HF, NI
2	109-5013	1	Panhard Rod ASM	19	3230-22	1	Screw-CARR
3	86-1990	2	Washer-Thrust	20	116-2959	4	Spacer
4	99-5107	14	Nut-Lock	21	100-6116	4	Screw-HHF
5	3233-34	2	Screw-CARR	23	138-6941	1	HYD CYL ASM
6	145-4210	1	Spring Tine Bar ASM	24	340-132	2	Fitting-Elbow, 90 DEG
7	145-4212	1	Scarifier Tine ASM	24:1	237-78	1	O-Ring
8	147-3765	2	Pin-Clevis	24:2	237-21	1	O-Ring
9	119-1416	2	Pin-Cotter, Locking	25	144-7642	1	Hydraulic Hose ASM
10	3231-28	16	Screw-CARR	26	144-7643	1	Hydraulic Hose ASM
11	104-8301	16	Nut-HF, NI	27	147-3321	2	Fitting-Straight
12	144-7557	2	Plate-Link	27:1	237-22	1	O-Ring
13	144-7586-03	1	Rake-Turn	27:2	237-79	1	O-Ring
14	109-9410	4	Bearing-Cross Shaft, Front	28	144-7311	1	Handle-Valve, Control
15	109-9409	4	Support-Bearing, Cross Shaft (Front)	29	144-7313	1	Knob-Ball
16	116-1700	8	Bolt-CARR	30	33015-00	1	Nut-Hex
17	140-6323	1	Pin	31	137-1812	2	Grommet


Rake Tools Assembly No. 144-7590

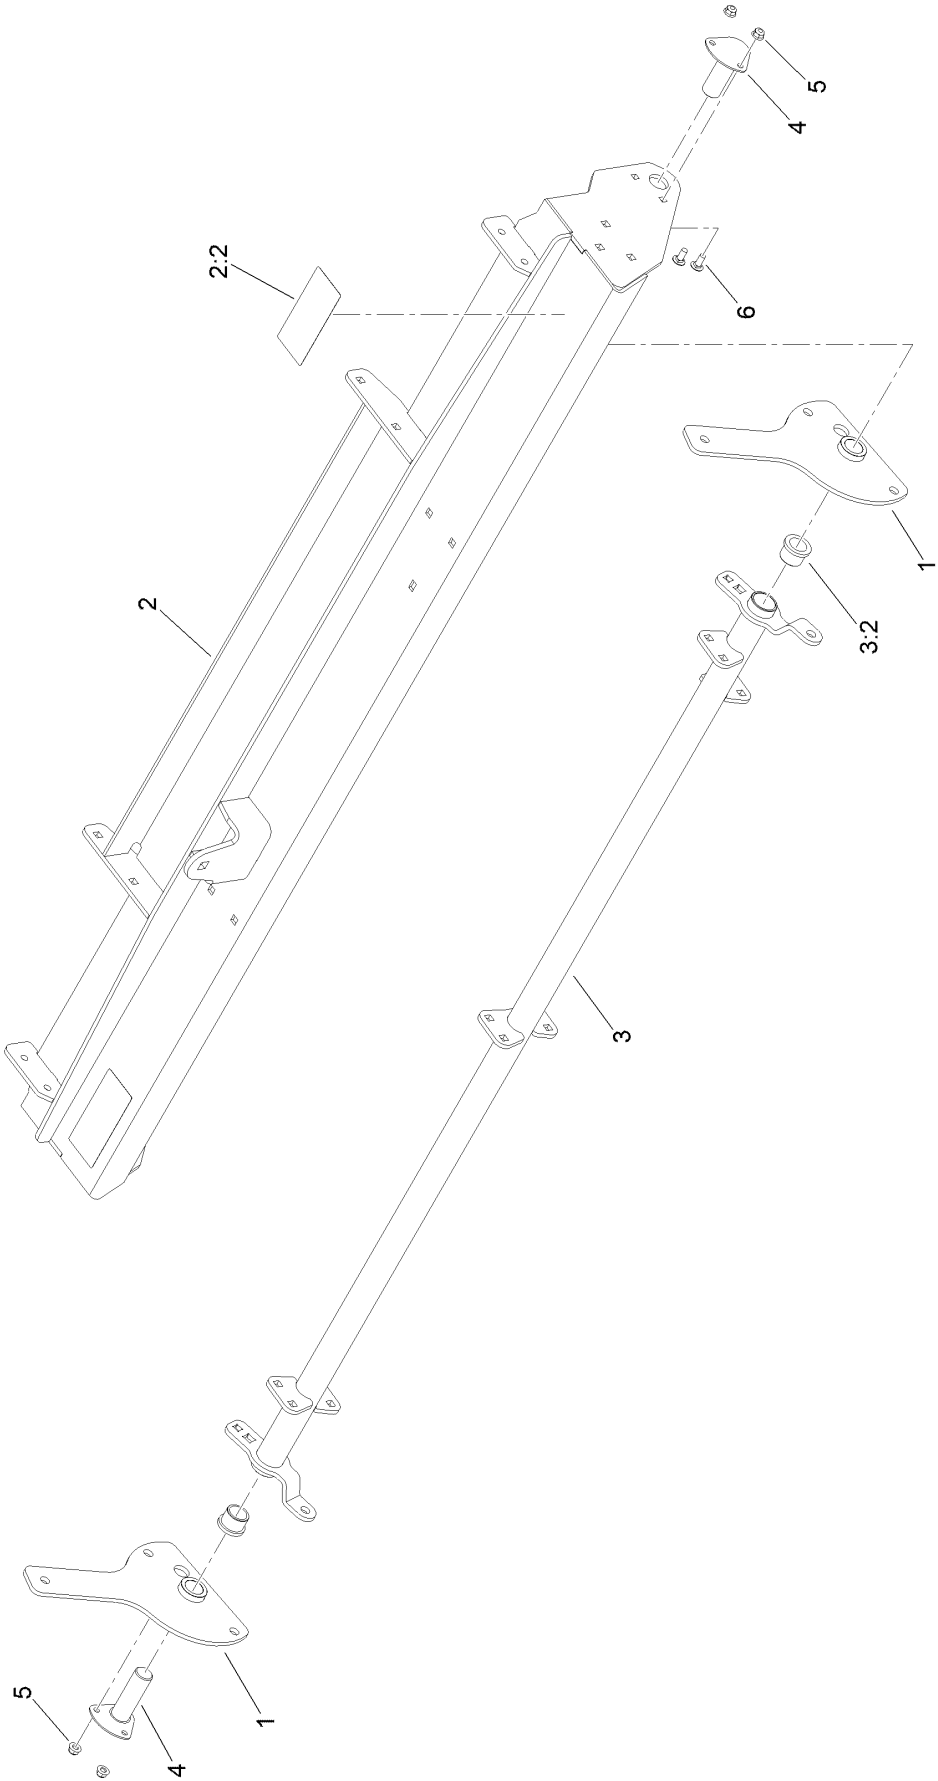

Rake Tools Assembly No. 144-7590 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	144-7591-03	2	Plate-Angle Setting, Rake	3:2	132-1305	2	Bushing-Flanged
2	147-3716	1	Tines Housing ASM W/Decals	4	140-6329	2	Pin-Pivot
2:2	145-1777	2	Decal-Danger, Bystanders	5	104-8300	4	Nut-HF, NI
3	145-4214	1	Tool Shaft ASM W/Bushings	6	3230-23	4	Bolt-CARR


Panhard Rod Assembly No. 109-5013

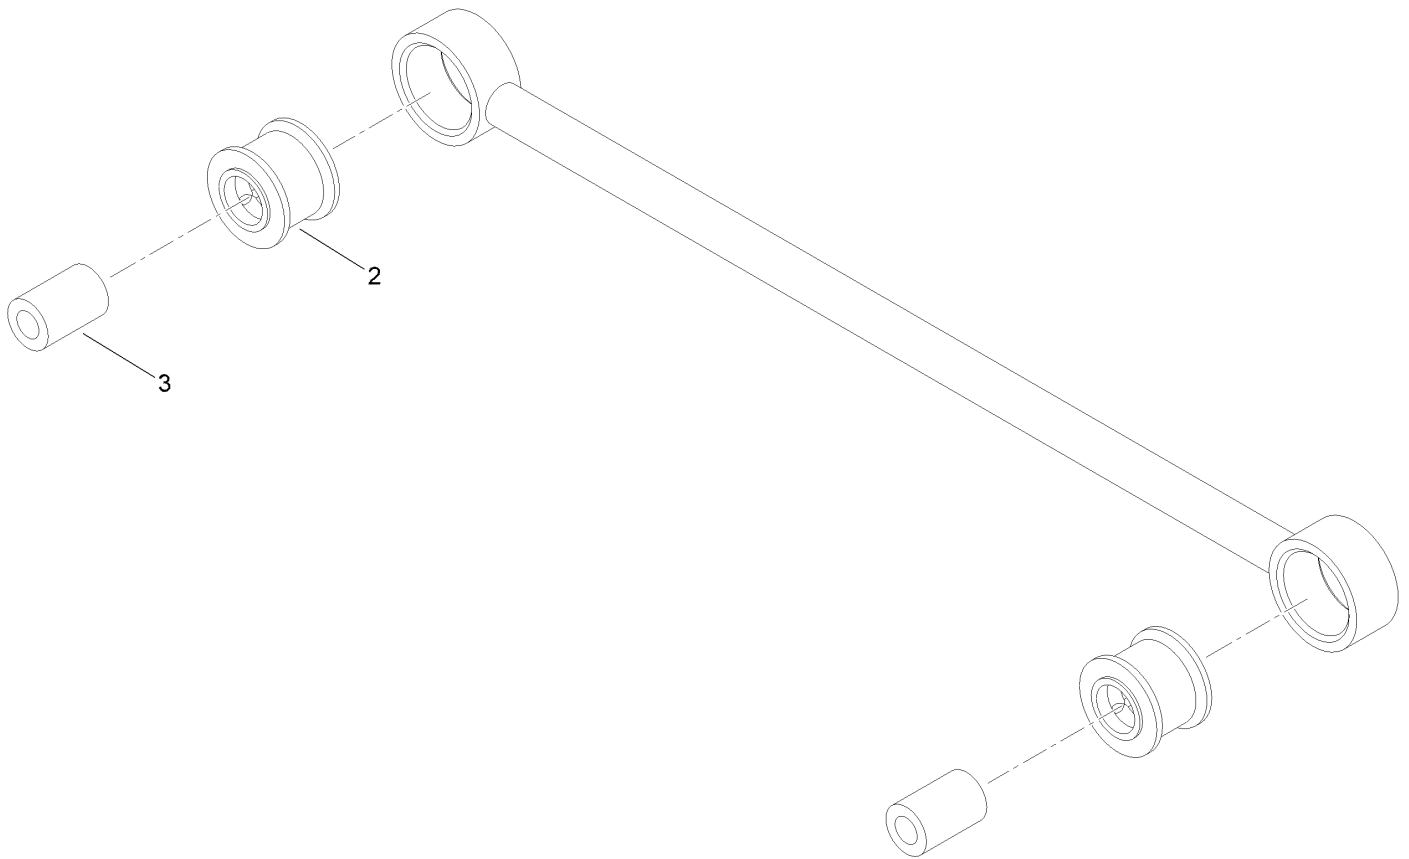

Panhard Rod Assembly No. 109-5013 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	109-5009	2	Bushing-Suspension, Rubber
3	109-5010	2	Spacer


Spring Tine Bar Assembly No. 145-4210

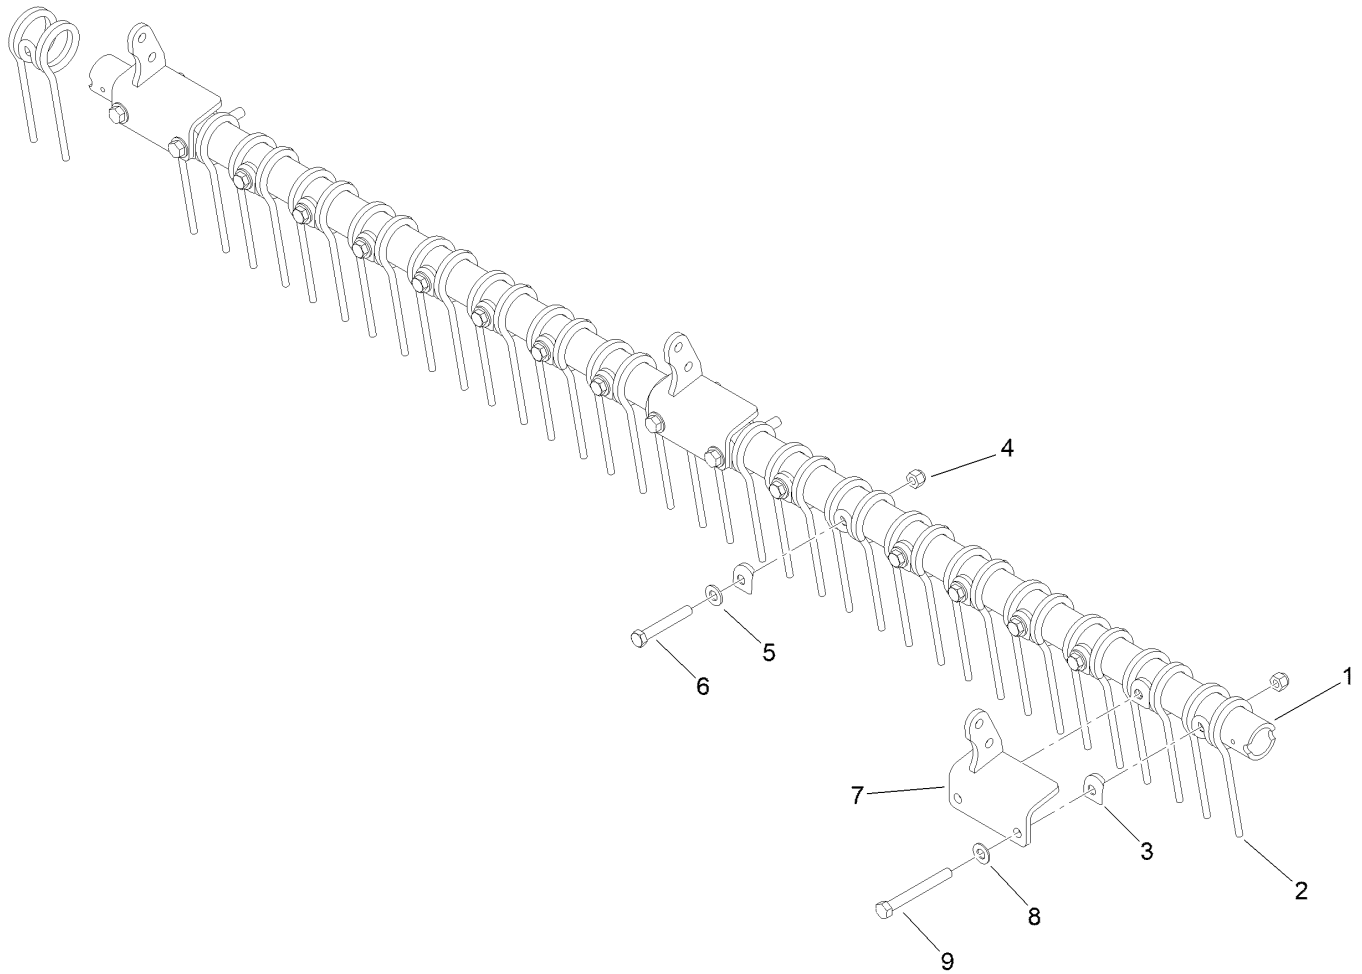

Spring Tine Bar Assembly No. 145-4210 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	145-7364-03	1	Tube-Tool, Spring Tines	6	323-12	13	Screw-HH
2	112-7642	19	Spring-Torsion, STD (Black)	7	145-4200-03	3	Bracket-Mount, Tool
3	110-6304	19	Clip-Retainer	8	48-9220	6	Washer-Flat
4	3296-39	19	Nut-Lock, NI	9	112-7161	6	Screw-HH
5	3256-24	13	Washer-Flat				

Scarifier Tine Assembly No. 145-4212

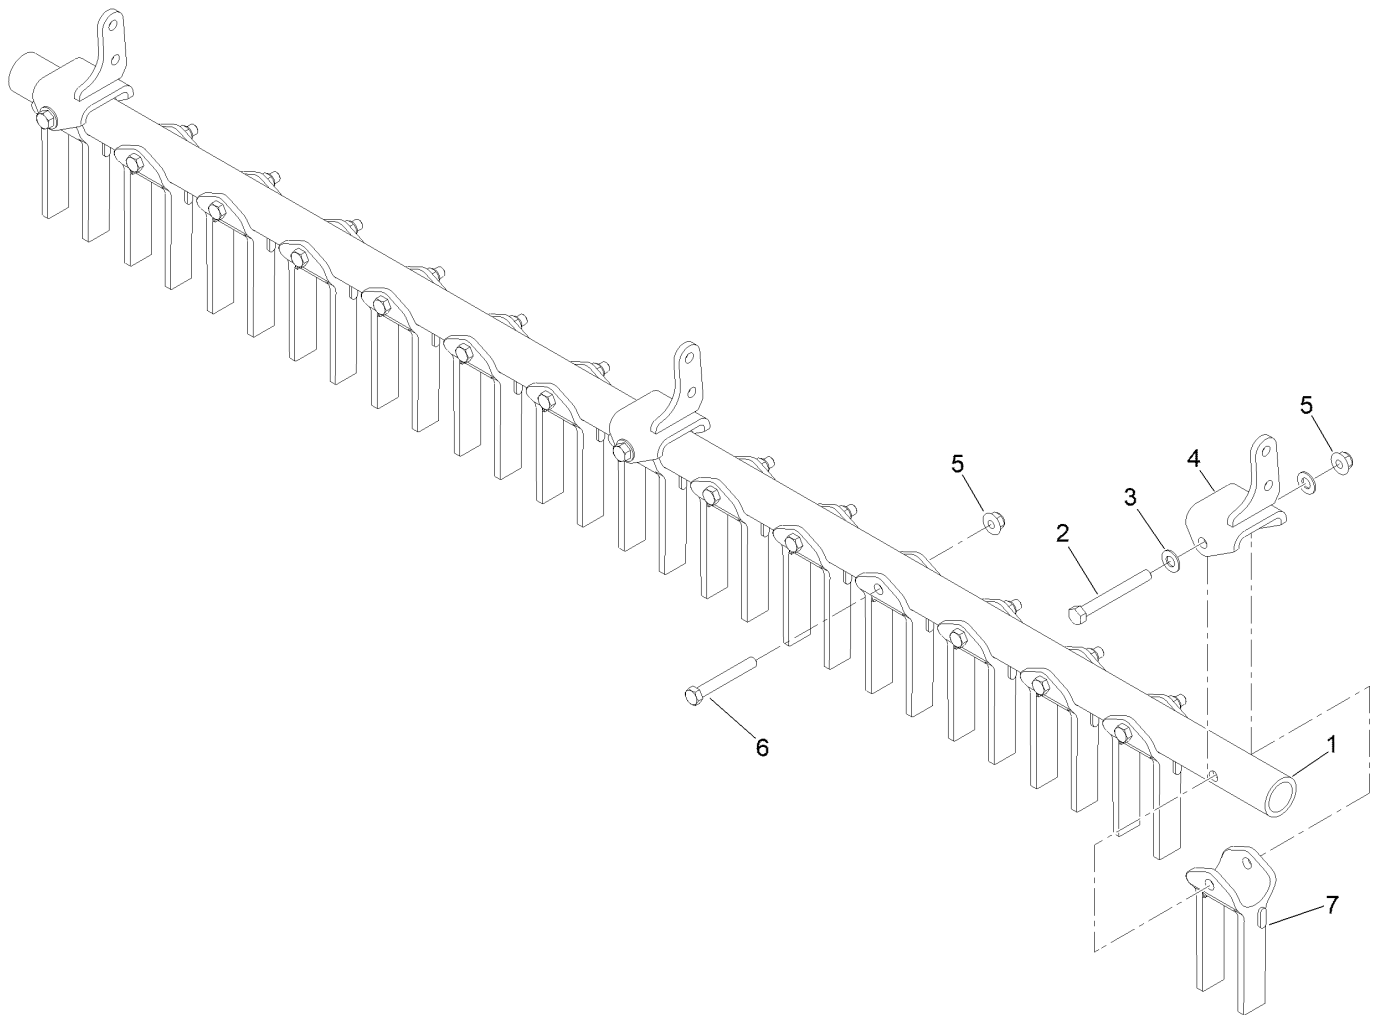


Scarifier Tine Assembly No. 145-4212 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-4513-03	1	Tube-Bar, Tool
2	112-7161	3	Screw-HH
3	48-9220	6	Washer-Flat
4	145-4199-03	3	Bracket-Mount, Tool

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	104-8301	15	Nut-HF, NI
6	323-13	12	Screw-HH
7	144-7097	15	Tine-Scarifier

Hydraulic Cylinder Assembly No. 138-6941

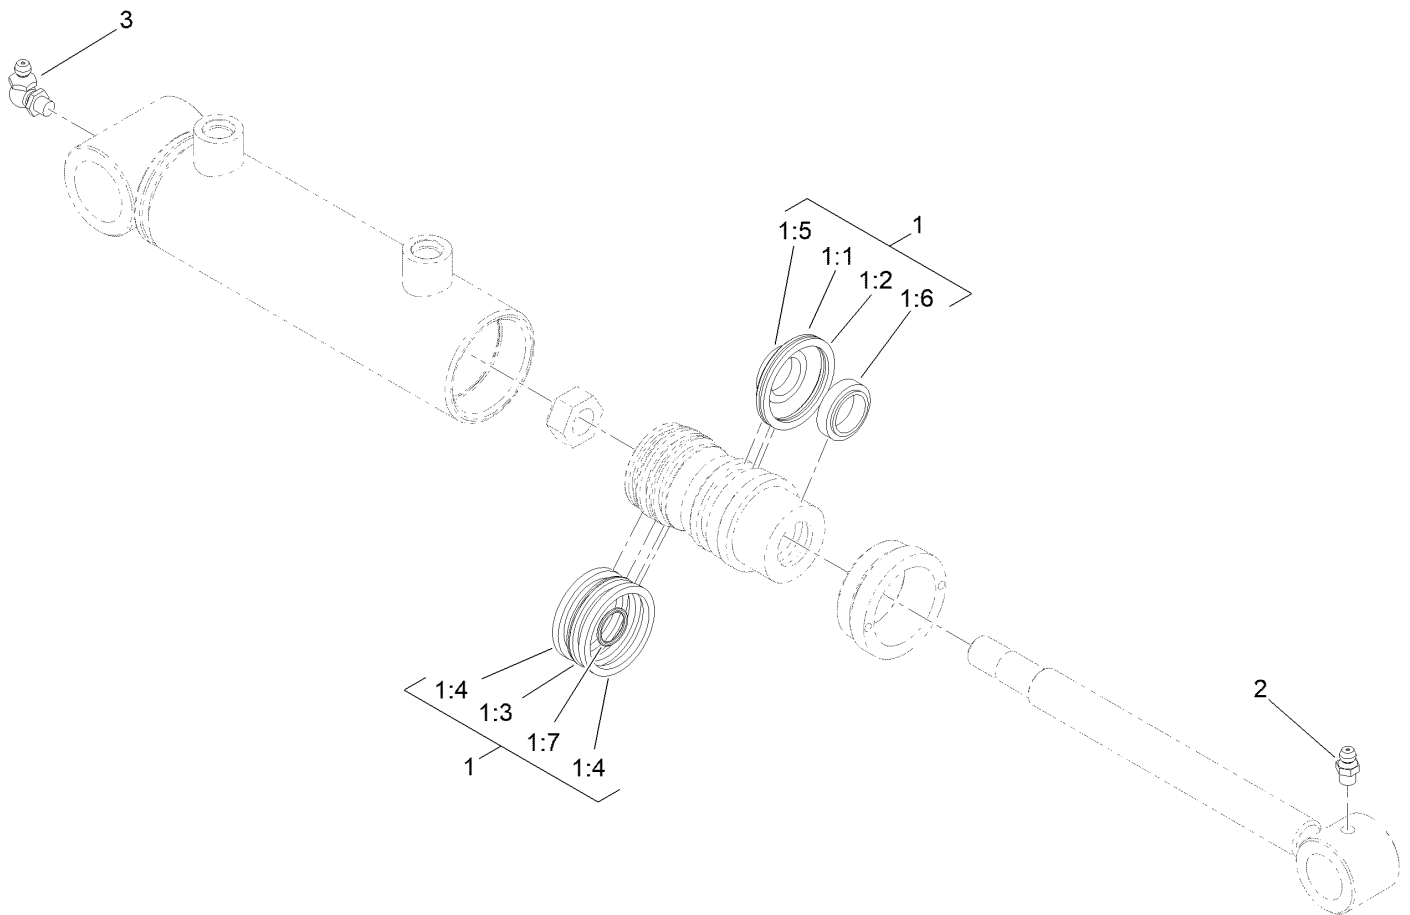

Hydraulic Cylinder Assembly No. 138-6941 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-8587	1	Seal Kit
1:1		1	O-Ring ●
1:2		1	Backup ●
1:3		1	Bp Seal ●
1:4		1	Wear Ring-Ht ●

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:5		1	Bt Seal ●
1:6		1	Dust Seal-Dt ●
1:7		1	O-Ring ●
2	302-5	1	Fitting-Grease
3	302-60	1	Fitting-Grease

● Not serviced separately



Count on it.